


## 12. GPS Antenna

### A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the center panel. <Ref. to EI-52, CENTER PANEL, REMOVAL, Center Console.>
- 3) Remove the navigation unit. <Ref. to ET-14, PROCEDURE, Navigation Body.>
- 4) Disconnect the connector (green) of GPS antenna.

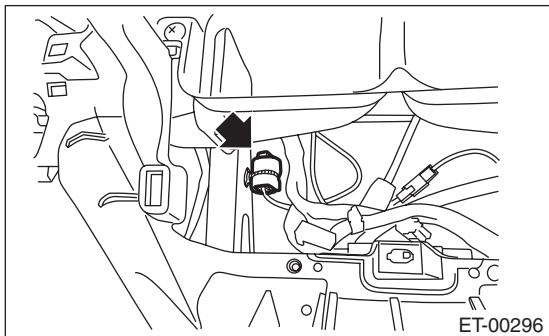

#### NOTE:

Attach a string of about 50 cm in length, etc. to the GPS antenna for easy installation work.

- 5) Remove the combination meter assembly. <Ref. to IDI-16, REMOVAL, Combination Meter.>
- 6) Remove the screw and harness clamp to remove the GPS antenna.

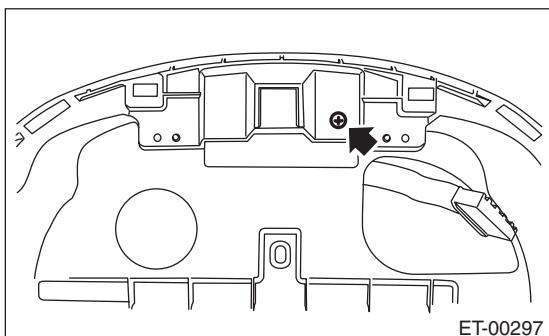

#### NOTE:

When the GPS antenna harness connector is pulled out, remove the string attached to the connector in step 4).

### B: INSTALLATION

Install each part in the reverse order of removal.