

56.Instrument Panel Wiring Harness


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i1	28	★	B-4	B36	Bulkhead wiring harness
i3	28	★	B-1	B38	
i5	20	★	C-1		Fuse & relay box (F/B)
i6	10	★	C-2		Remote control mirror switch
i8	2	★	C-5		Foot light RH
i10	40	★	B-2		Combination meter
i15	6	★	B-4		Blower fan switch (manual A/C)
i16	12	★	B-4		A/C control panel (manual A/C)
i22	4	★	B-3		Hazard switch
i23	2	★	B-4		Glove box light
i24	4	★	C-4	AD1	Adapter cord (front accessory power supply socket, pocket light)
i29	1	Black	B-3		Audio bracket ground
i39	8	★	C-2		Headlight beam leveler switch
i50	10	★	B-4		Navigation unit
i51	2	★	B-3		Sunload sensor
i53	16	★	C-5	R98	Rear wiring harness RH
i54	10	★	C-5	R99	Rear wiring harness RH
i55	2	★	B-3		In-vehicle sensor
i59	10	★	B-3		Clock
i76	28	★	C-1	D83	Front door cord LH
i77	10	Green	B-3		CAN joint connector
i79	6	Gray	B-2		Illumination control switch
i84	35	Gray	B-2		Body integrated unit
i85	20	★	B-4		Audio
i86	8	Black	B-4		Audio (without handsfree microphone)
	16	★	B-4		Audio (with handsfree microphone)
i87	28	★	B-3		Navigation unit
i88	40	★	B-3		A/C control panel (auto A/C)
i97	8	Black	B-2		Joint ground connector
i98	8	Black	B-1		
i99	8	Black	B-5		
i100	8	Black	B-5		
i101	25	★	C-5	D84	Front door cord RH
i102	16	★	C-1	R167	Rear wiring harness LH
i131	16	★	B-4		Navigation unit
i147	6	★	B-3		

★ White or natural color

Instrument Panel Wiring Harness

WIRING SYSTEM

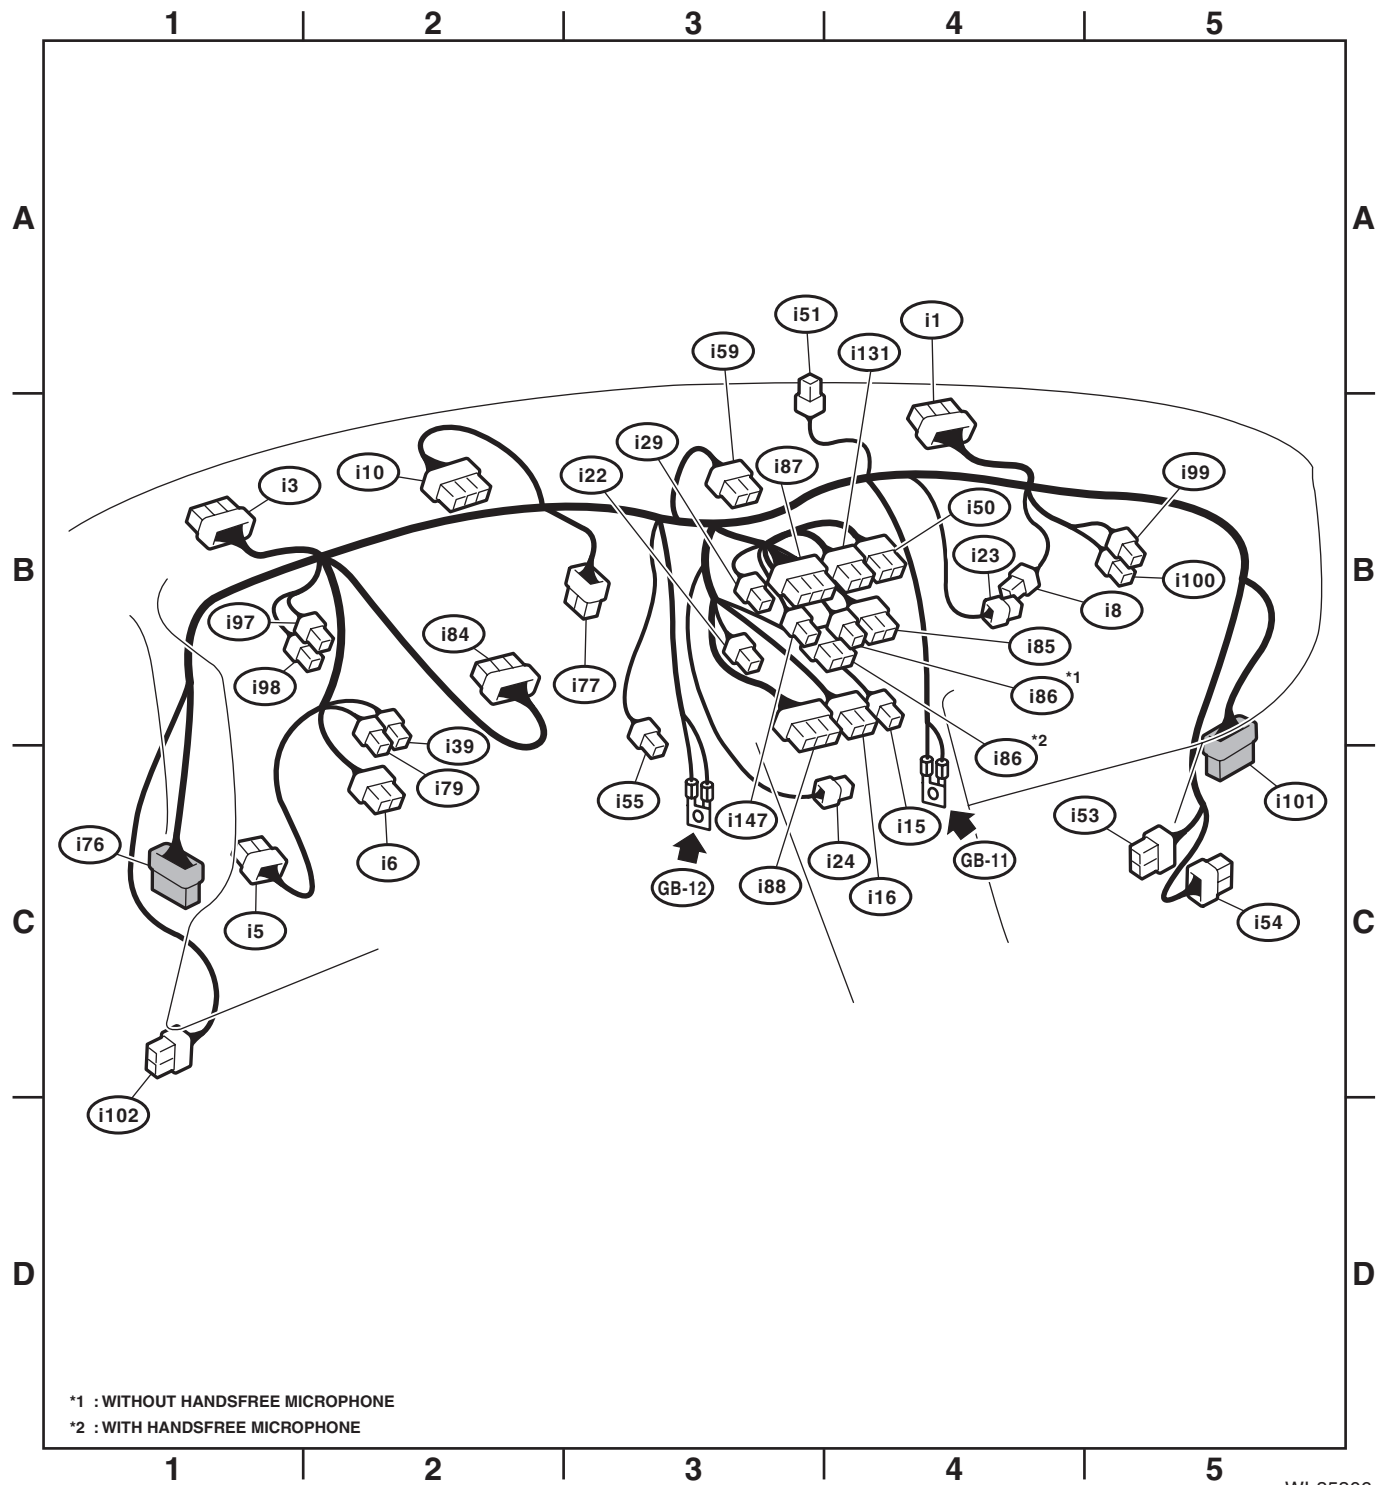

WI-35306