

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

59.Rear Wiring Harness and Trunk Lid Cord


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R19	2	Blue	B-3		High-mounted stop light
R20	2	Black	B-4		Trunk room light
R22	3	★	B-1		Rear door switch LH
R24	8	★	B-4	R60	Trunk lid cord
R26	6	★	B-5		Rear combination light RH
R28	6	★	C-3		Rear combination light LH
R60	8	★	B-4	R24	Rear wiring harness RH
R65	1	★	B-2		Rear defogger (–)
R66	2	★	B-4		High-mounted stop light (rear spoiler)
R76	2	★	B-4		License plate light
R80	8	★	B-2		Keyless entry CM (without TPMS)
R97	1	★	B-2		Antenna feeder cord
R122	10	★	B-5		Fuel pump CM
R148	1	★	C-3		Rear differential oil temperature switch
R159	1	★	C-3		
R174	1	★	B-4		Rear defogger (+)
R186	3	★	C-3		Trunk lid lock actuator & switch
R221	12	★	B-3		TPMS & keyless entry CM (with TPMS)
R400	8	Gray	C-2		ELCM
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Black	B-2		Curtain airbag module LH
AB32	4	Yellow	B-1		Curtain airbag sensor LH
AB33	2	Black	B-4		Curtain airbag module RH

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

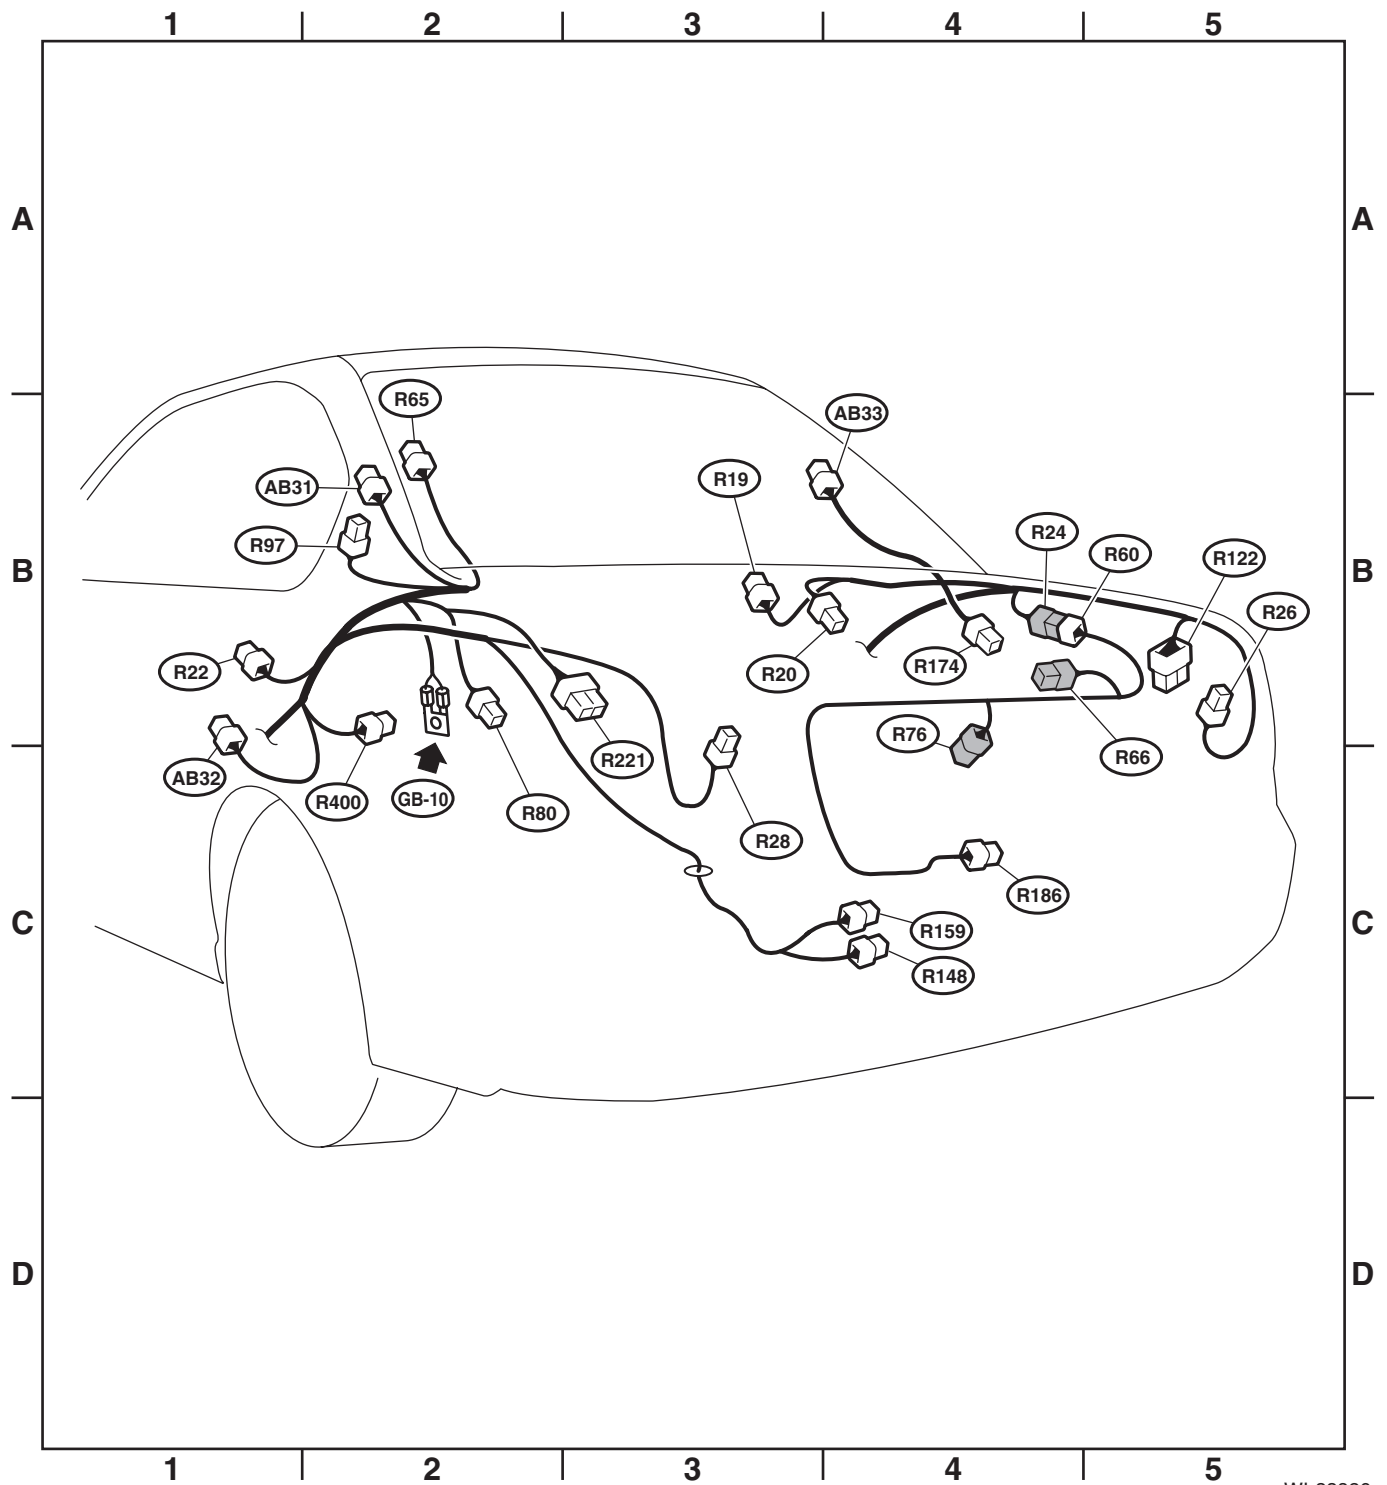

WI-33826