


19. SI-DRIVE Selector


A: REMOVAL

1) Disconnect the ground cable from battery.

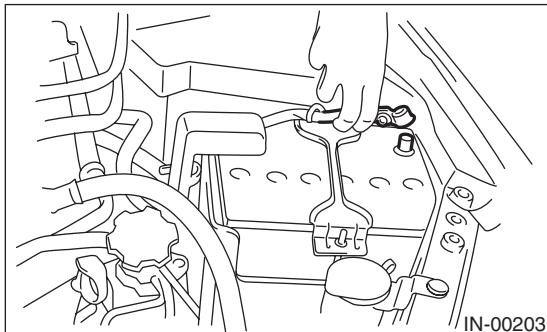


2) Remove the console box. <Ref. to EI-50, REMOVAL, Glove Box.>

3) Disconnect the connectors from the SI-DRIVE selector.

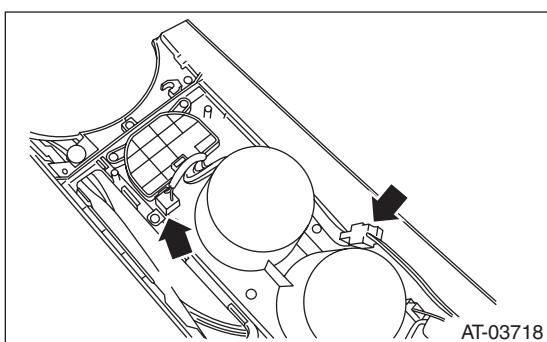

4) Remove the screws securing the upper side of the SI-DRIVE selector to the console box.

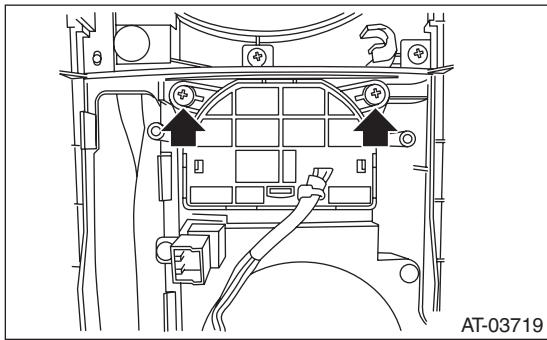


5) Remove the screws which secure the cup holder to the console box, then remove the SI-DRIVE selector.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between SI-DRIVE selector terminals.

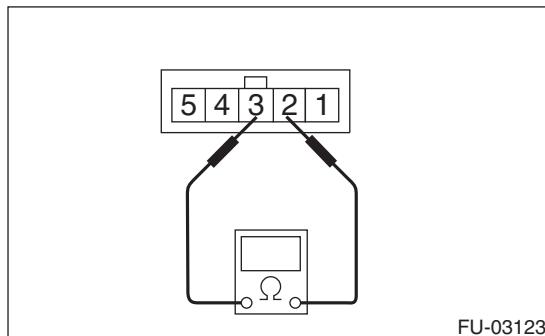

Switch position	Terminal No.	Standard
Sport (when turning the SI-DRIVE selector to the left)	2 and 3	Less than 1 Ω
Intelligent (when pushing the SI-DRIVE selector)		0.95 — 1.05 k Ω
Sport Sharp (when turning the SI-DRIVE selector to the right)		3.48 — 3.85 k Ω