

# Rear Wiring Harness

WIRING SYSTEM

## 62.Rear Wiring Harness

### A: LOCATION

#### 1. PASSENGER'S SIDE

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	24	Black	C-1	B98	Bulkhead wiring harness
R10	10	★	B-3	D22	Rear door cord (Passenger's side)
R12	3	★	B-2		Front door switch RH
R15	14	★	C-3	R60	Fuel cord 1
R16	3	★	B-3		Rear door switch RH
R44	6	★	C-3		Seat heater RH & second-row seat foot light RH
R47	3	Black	C-5		Fuel tank pressure sensor
R50	12	★	C-1	B90	Bulkhead wiring harness
R51	2	★	B-2		Vanity mirror illumination light RH
R52	3	★	B-3		Room light (without DVD)
R55	10	Gray	B-4		Sunroof control unit and motor
R56	6	Gray	B-3		Spot map light
R57	3	★	B-3		Shade mirror
R58	6	Gray	C-4		Fuel gauge main unit
R59	2	★	C-4		Fuel gauge sub unit
R60	14	★	C-3	R15	Rear wiring harness
R98	22	Blue	C-1	i53	Instrument panel wiring harness
R109	2	Black	C-3		Power seat RH
R117	2	★	A-4		Super woofer
R122	10	Black	B-4		Fuel pump control unit
R128	5	★	B-3		Open/Close switch
R143	2	Gray	C-5		Drain valve
R187	5	Black	B-3		Tilt switch
R233	4	★	C-3		Joint connector
R234	1	Black	C-5		Thermo switch
R235	10	★	A-5	R248	Tail harness
R236	24	★	B-4		Rear entertainment unit (Roof)
R237	4	★	B-3		Joint connector
R238	4	★	B-3		
R239	4	★	B-4		
R240	4	★	B-4		
R241	4	★	A-2		
R243	22	★	C-1	i132	Instrument panel wiring harness
R249	2	Gray	C-3		Rear ABS wheel speed sensor LH
R250	3	★	B-4		Room light (with DVD)
R251	4	★	B-2		Joint connector
R252	12	Gray	C-2		
R253	12	Gray	C-2		
R255	4	★	C-2		
R256	4	★	C-2		
R257	2	★	B-3		Rear tweeter RH
R270	2	★	B-4		Home link
R277	1	Black	C-4		Bracket earth (Rear differential gear oil temperature switch)

★ : White or natural color


# Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB18	20	Yellow	D-3		Airbag control module
AB24	2	Yellow	C-3		Inflator (Side) RH
AB26	2	Black	B-2		Pretensioner RH
AB28	4	Yellow	B-2		Side airbag sensor RH
AB33	2	Black	A-4		Inflator (Curtain) RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH
AB56	3	Brown	C-2		Belt tension sensor (Occupant detection control module)
AB57	2	Yellow	C-1	AB55	Bulkhead harness
AB61	6	Gray	C-2	AB59	Occupant detection control module

# Rear Wiring Harness

WIRING SYSTEM

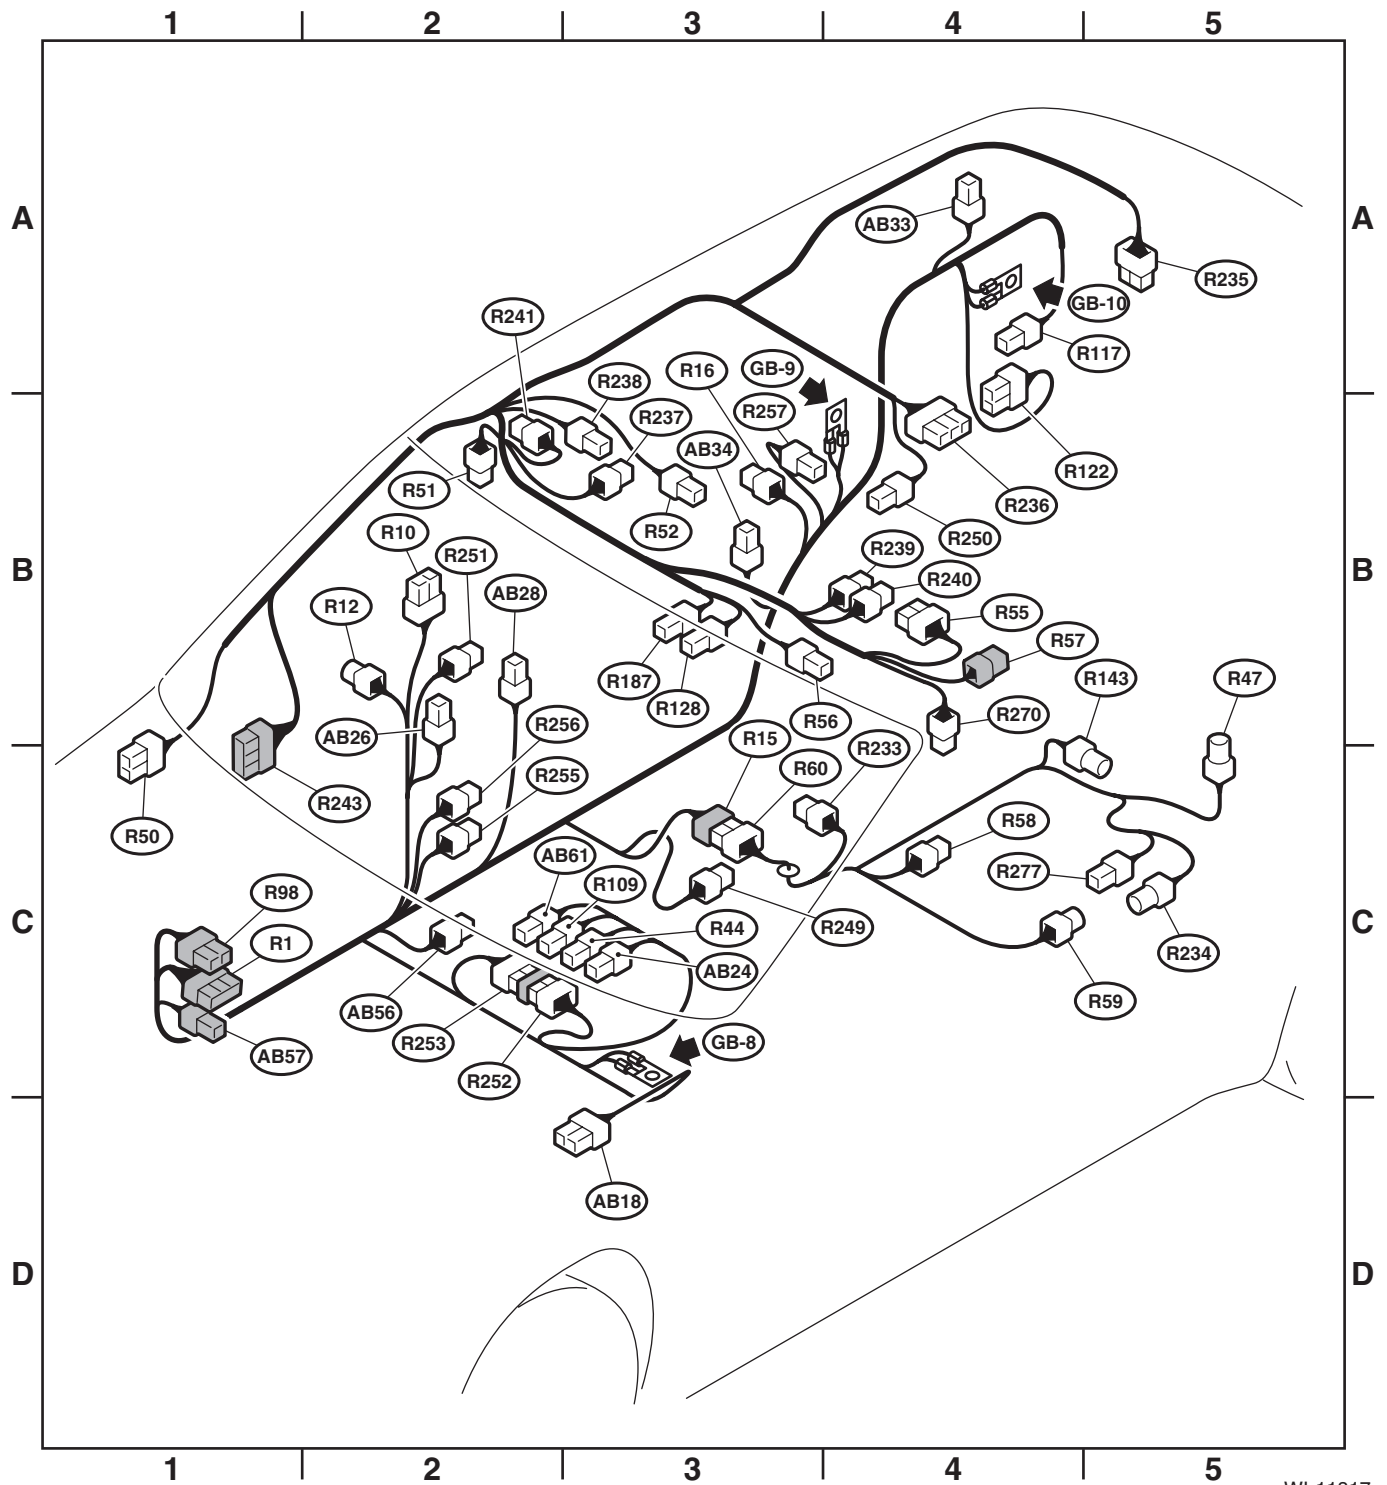

WI-11817

# Rear Wiring Harness

WIRING SYSTEM

## 2. DRIVER'S SIDE

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R2	20	Black	D-2	B97	Bulkhead wiring harness
R8	4	★	C-2		Front seat belt switch LH
R9	3	★	C-3		Front door switch LH
R13	10	★	C-3	D28	Rear door cord LH
R22	3	★	C-4		Rear door switch LH
R28	4	★	B-5		Rear combination light LH
R41	6	★	C-2		Seat heater LH & second-row seat foot light LH
R167	20	Blue	D-2	i102	Instrument panel wiring harness
R168	20	★	D-1		Fuse & relay box (F/B)
R185	24	Gray	C-4		Rear view camera module
R188	4	Black	C-2		Power seat LH
R211	12	★	D-2		TPM control module
R215	14	★	B-5	R247	Tail harness
R216	12	Black	B-5	R246	Tail harness (Joint connector)
R217	10	★	B-5	R245	Tail harness (Rear entertainment)
R218	4	★	B-5		Rear A/C relay
R219	4	★	B-5		Blower fan resistor
R220	2	★	B-5		Blower fan motor
R221	4	★	C-3		Joint connector
R222	4	★	C-3		
R224	12	★	D-2		
R225	12	★	D-2		
R226	10	★	C-2		Navigation module
R227	12	Black	D-2		Joint connector
R228	12	Black	D-2		
R229	11	★	C-1	R272	Console pocket
R230	22	★	C-1	i130	Instrument panel wiring harness (Center)
R232	2	Gray	C-4		Rear ABS wheel speed sensor LH
R254	14	★	B-4	R260	Adapter code
R272	11	★	C-1	R229	Rear harness
R273	2	★	B-1		Cup holder illumination
R274	2	★	B-2		Front accessory power supply socket
R275	2	★	B-2		
R276	10	★	B-2		Blower fan switch
R280	6	Gray	C-2	R282	Console pocket
R281	4	★	D-2		Joint connector
R282	6	Gray	C-2	R280	Rear harness
R283	6	★	B-2		Front AUX terminal box
R287	6	Gray	B-4		Joint connector
R288	1	★	C-5		Rear view camera ground

★ : White or natural color


# Rear Wiring Harness

## WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	20	Yellow	C-1		Airbag control module
AB19	2	Yellow	C-2		Inflator (Side) LH
AB21	2	Black	C-3		Pretensioner LH
AB23	4	Yellow	C-3		Side airbag sensor LH
AB31	2	Black	B-4		Inflator (Curtain) LH
AB32	4	Yellow	C-4		Curtain airbag sensor LH
AB51	2	Yellow	C-2		Buckle switch LH
AB52	2	Yellow	C-2		Seat position LH

# Rear Wiring Harness

WIRING SYSTEM

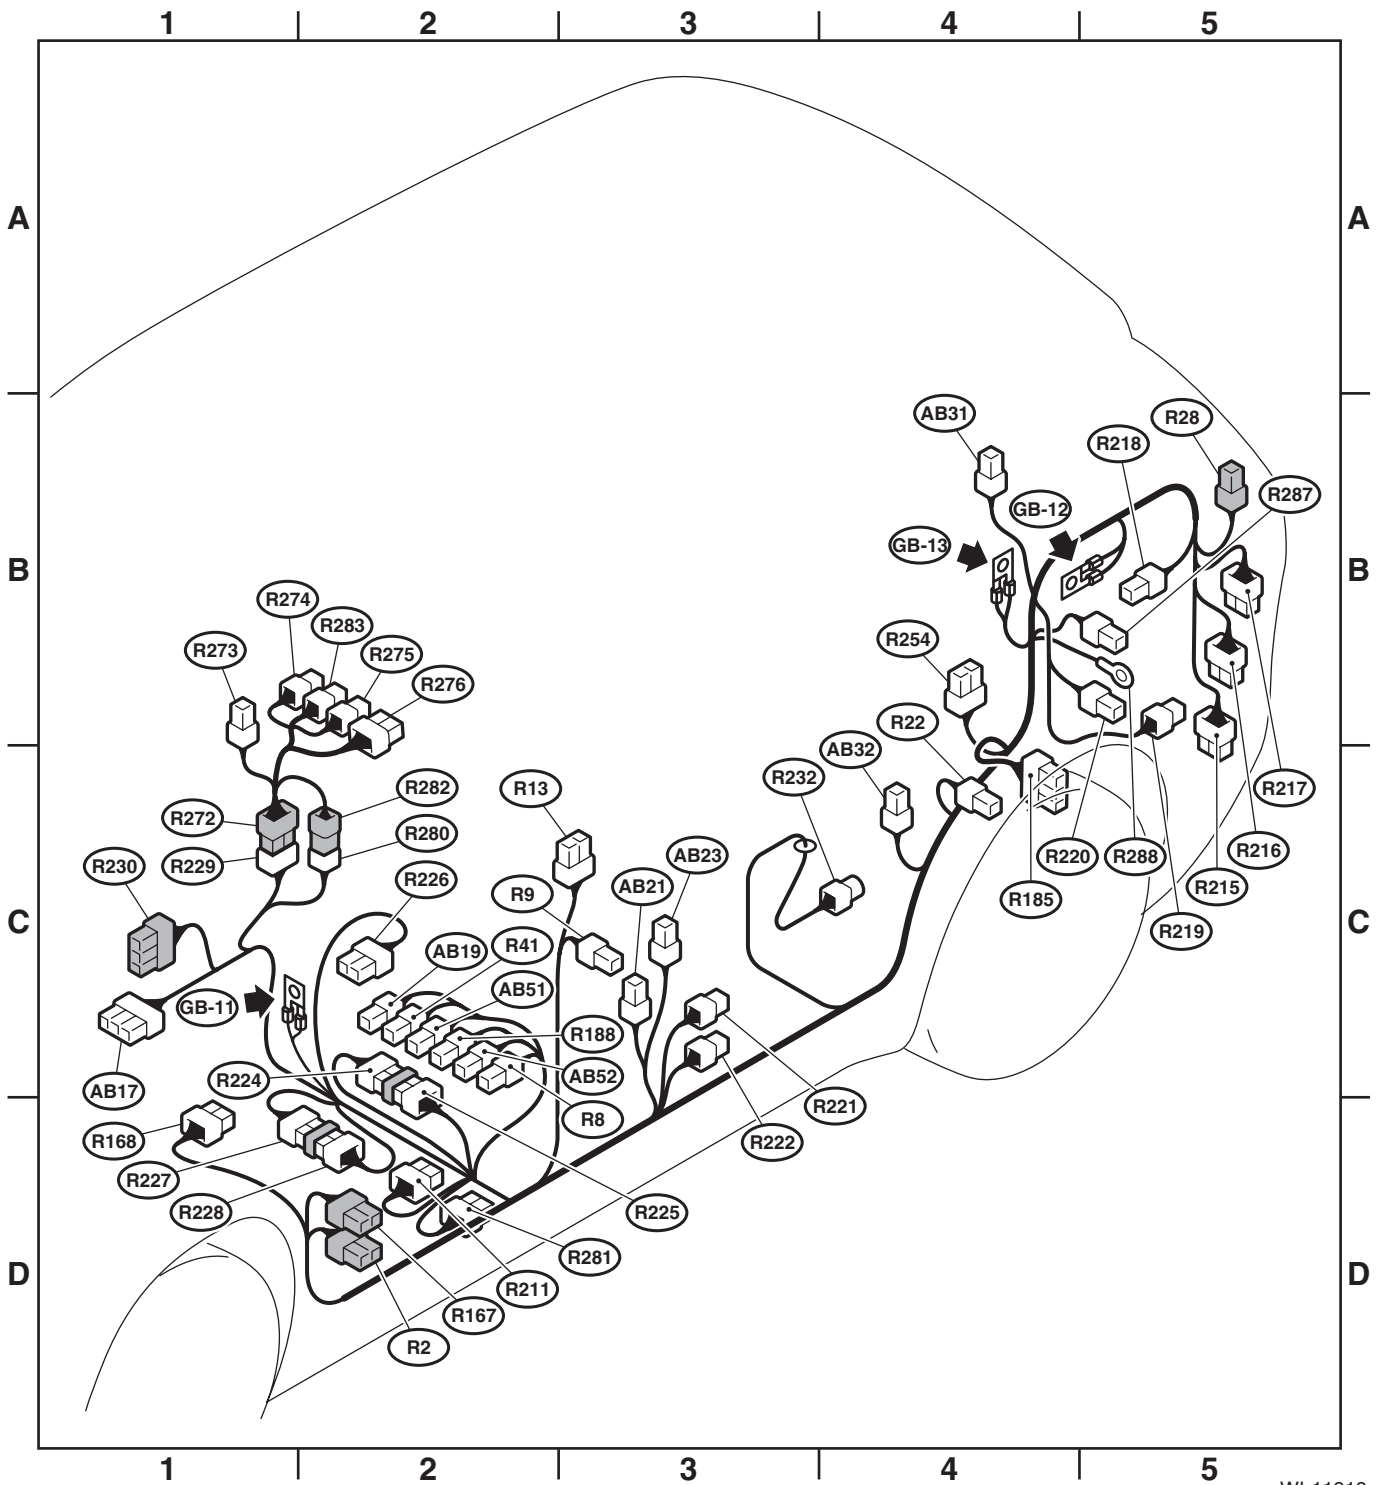

WI-11818