


12.Rear Washer

A: REMOVAL

- 1) Remove the rear gate upper trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
- 2) Remove the washer hose from washer nozzle.
- 3) Push the claw of the nozzle from the backside of rear gate panel with a flat tip screwdriver or equivalent, and remove the washer nozzle.

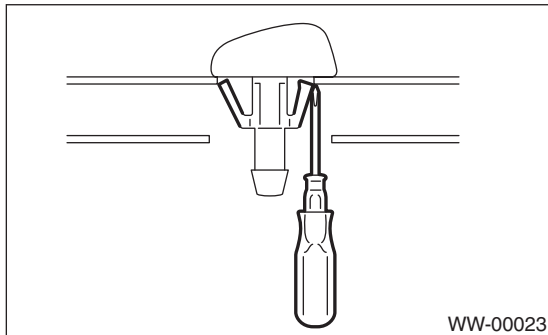

B: INSTALLATION


Install in the reverse order of removal.

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.
- While the vehicle is at a standstill, make sure that the washer injection position is as shown in the figure.

NOTE:

Washer injection position can not be adjusted.

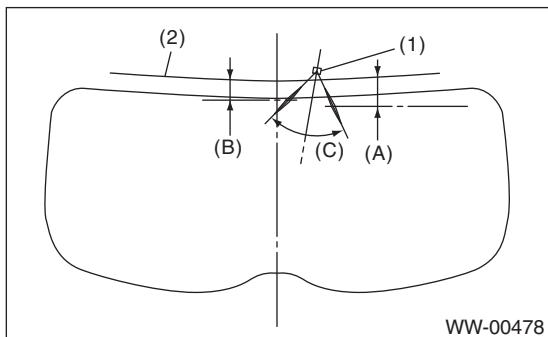

- (1) Nozzle
- (2) Upper edge of the rear gate glass
- (A) From rear gate glass upper end to center of washer fluid spraying: 71 mm (2.8 in)
- (B) From rear gate glass upper end to center of washer fluid spraying: 56 mm (2.2 in)
- (C) 72°

Rear Washer

WIPER AND WASHER SYSTEMS

ENTERTAINMENT

ET

	Page
1. General Description	2
2. Audio System	3
3. Navigation System	4
4. Rearview Camera System	6
5. Multi-function Display (MFD) System	7
6. Rear Entertainment System	8
7. Control Panel	9
8. Audio	13
9. Front Speaker	14
10. Tweeter	15
11. Rear Speaker	16
12. Woofer	17
13. Antenna	18
14. Antenna Amplifier	22
15. Noise Suppressor	23
16. Navigation Display	24
17. Navigation Body	25
18. Navigation Switch	26
19. GPS Antenna	27
20. Rearview Camera	28
21. Rearview Camera Control Unit	29
22. Multi-function Display (MFD)	30
23. Multi-function Switch	31
24. Rear Entertainment	32
25. AUX Input Terminal	33
26. Front Accessory Power Supply Socket	34
27. Rear Accessory Power Supply Socket	35
28. Steering Satellite Switch	36