

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

62.Engine Wiring Harness and Transmission Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
E2	54	Black	A-3	B21	Bulkhead wiring harness
E3	16	Brown	D-3	B22	
E4	2	Blue	A-2		Purge control solenoid valve
E5	2	Dark gray	A-2		Fuel injector No. 1
E6	2	Dark gray	A-2		Fuel injector No. 3
E8	2	Brown	B-4		Engine coolant temperature sensor
E10	2	Light gray	B-4		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E14	2	Blue	A-3		Knock sensor 1
E16	2	Dark gray	B-4		Fuel injector No. 2
E17	2	Dark gray	B-4		Fuel injector No. 4
E18	6	Dark gray	B-3		EGR valve
E19	1	★	B-3		Power steering oil pressure switch
E24	4	Light gray	D-3		Front oxygen (A/F) sensor LH
E25	4	Dark gray	D-3		Rear oxygen sensor LH
E28	3	Black	A-3		Intake manifold pressure sensor
E31	3	Gray	B-1		Ignition coil No. 1
E32	3	Gray	C-4		Ignition coil No. 2
E33	3	Gray	B-2		Ignition coil No. 3
E34	3	Gray	B-4		Ignition coil No. 4
E43	2	Dark gray	A-2		Fuel injector No. 5
E44	2	Dark gray	B-5		Fuel injector No. 6
E45	3	Gray	B-2		Ignition coil No. 5
E46	3	Gray	B-5		Ignition coil No. 6
E47	4	Light gray	D-2		Front oxygen (A/F) sensor RH
E48	2	Blue	A-4		Knock sensor 2
E57	6	Black	A-3		Electronic throttle control
E61	4	Dark gray	C-2		Rear oxygen sensor RH
E62	3	Gray	B-1		Exhaust camshaft position sensor RH
E65	3	Gray	C-4		Exhaust camshaft position sensor LH
E67	2	Black	B-1		Intake oil flow control solenoid valve RH
E68	2	Black	B-4		Intake oil flow control solenoid valve LH
E73	3	Black	A-2		Intake camshaft position sensor RH
E74	3	Black	B-5		Intake camshaft position sensor LH
E75	2	Black	B-4		Oil temperature sensor
E76	10	Dark gray	A-3	E77	Engine wiring harness
E77	10	Gray	A-3	E76	
E80	2	Blue	B-2		Exhaust oil flow control solenoid valve RH
E81	2	Blue	B-4		Exhaust oil flow control solenoid valve LH


★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AT1	3	Black	D-3		Turbine speed sensor 1
AT4	3	Black	C-4		Rear vehicle speed sensor

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
T3	8	Gray	D-2	B12	Bulkhead wiring harness
T4	20	Gray	D-3	B11	

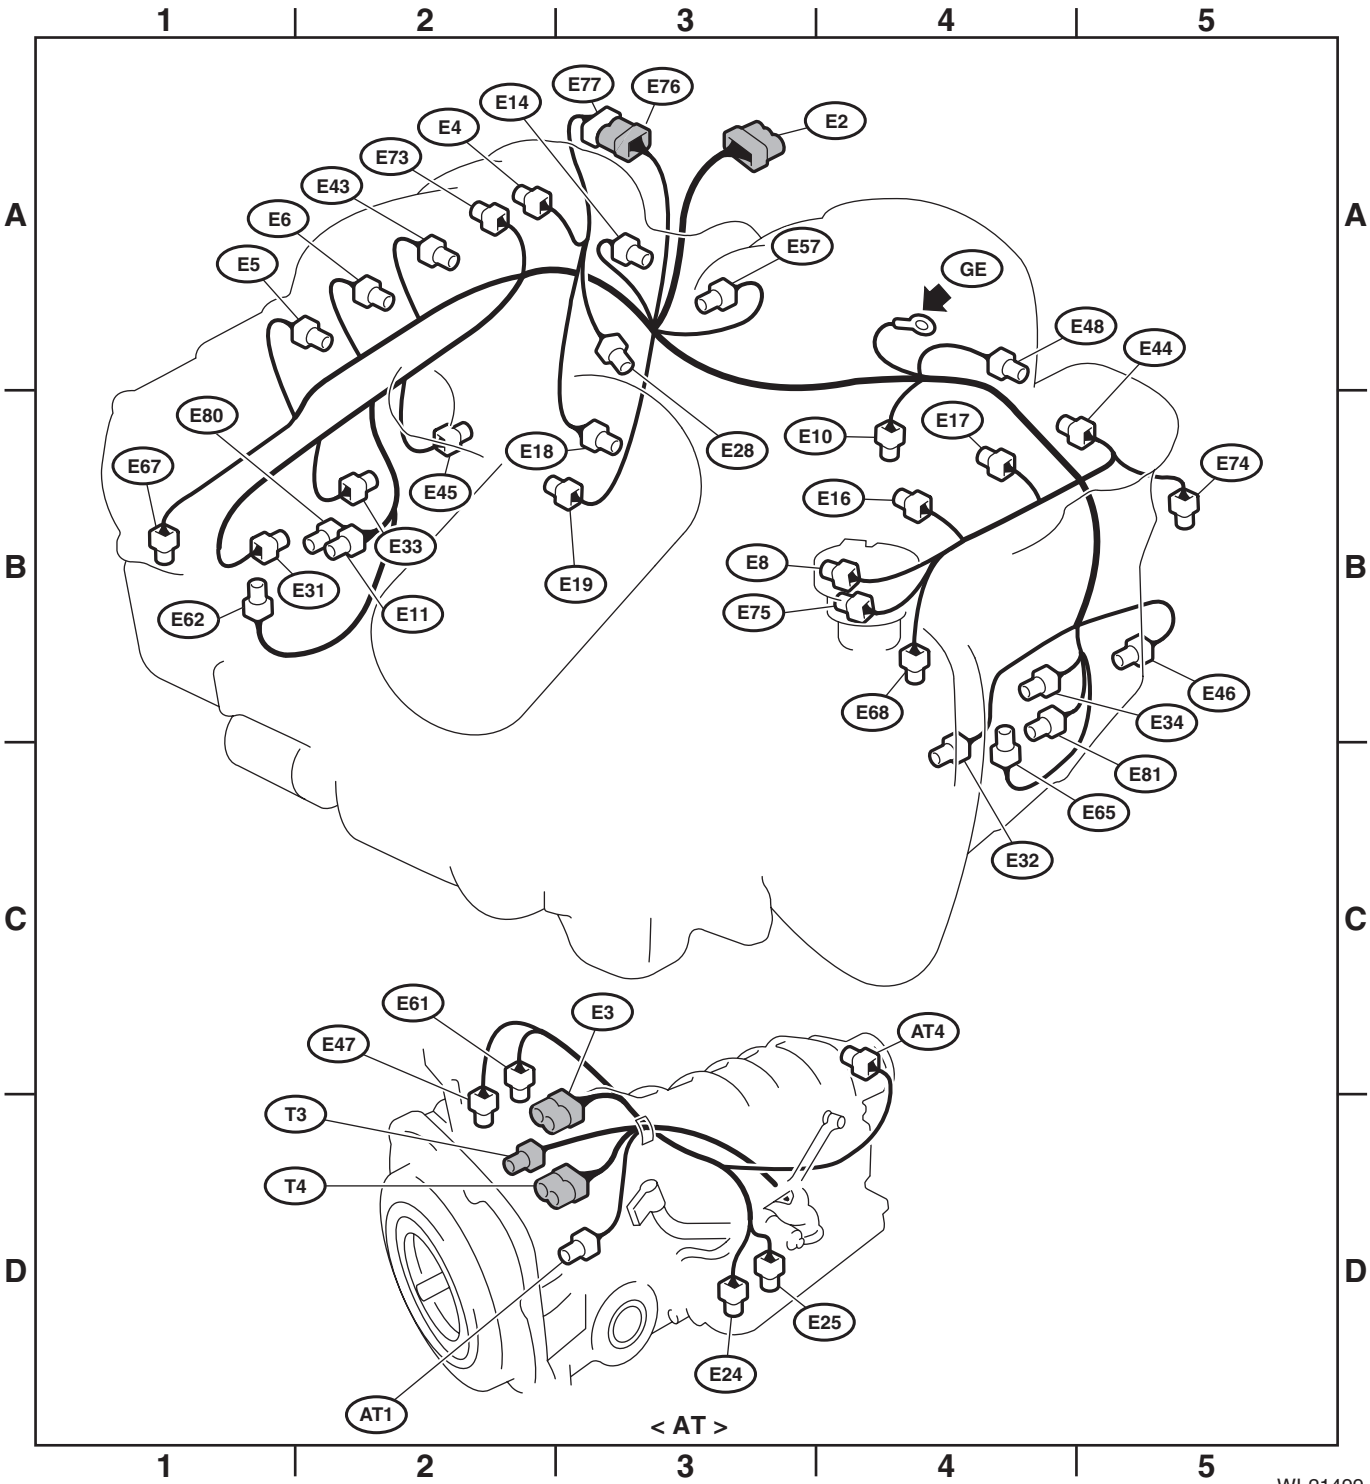

WI-21499