

64.Rear Wiring Harness

A: LOCATION

1. PASSENGER'S SIDE

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	24	Black	C-1	B98	Bulkhead wiring harness
R10	10	★	B-2	D22	Rear door cord RH
R12	3	★	B-2		Front door switch RH
R15	14	★	C-3	R60	Fuel cord
R16	3	★	B-3		Rear door switch RH
R44	6	★	C-3		Seat heater RH & second-row seat foot light RH
R47	3	Black	C-5		Fuel tank pressure sensor
R50	16	★	C-1	B90	Bulkhead wiring harness
R51	2	Black	B-2		Vanity mirror light RH
R52	3	★	A-5		Room light (without rear entertainment)
R55	10	Gray	B-4		Sunroof control module & motor
R56	4	★	B-3		Spot map light (without sunroof)
	6	Gray	B-3		Spot map light (with sunroof)
R57	3	★	B-3		Rearview mirror (without rearview display)
R58	6	Gray	C-4		Fuel pump ASSY
R59	2	★	C-4		Fuel sub level sensor
R60	14	★	C-3	R15	Rear wiring harness
R90	12	Black	B-3		Rearview mirror (with rearview display)
R91	4	★	B-3		Joint connector
R98	22	Blue	C-1	i53	Instrument panel wiring harness
R100	18	★	C-1	i108	
R105	6	★	C-2		Joint connector
R109	2	Black	C-2		Power seat RH
R117	2	★	A-4		Super woofer (model with normal audio)
R122	10	Black	B-4		Fuel pump control unit
R128	5	★	B-3		Open/Close switch
R143	2	Light gray	C-5		Drain valve
R187	5	Black	B-3		Tilt switch
R233	4	★	C-3		Joint connector
R234	1	Black	C-5		Rear differential oil temperature switch
R235	10	★	A-5	R248	Rear gate cord
R236	24	★	B-4		Rear entertainment (Roof)
R237	4	★	B-3		Joint connector
R238	6	Gray	B-3		
R239	4	★	B-3		
R240	4	★	B-3		
R241	6	Gray	B-3		
R243	22	★	C-1	i132	Instrument panel wiring harness
R244	4	★	B-3		Joint connector
R249	2	Gray	C-3		Rear ABS wheel speed sensor RH
R250	3	★	B-4		Room light (with rear entertainment)

Rear Wiring Harness

WIRING SYSTEM


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R251	4	★	B-2		Joint connector
R252	12	Gray	C-2		
R253	12	Gray	C-2		
R258	4	★	B-3		
R259	2	Black	A-4		Rear tweeter RH
R262	2	Black	B-5		Rear tweeter LH
R265	4	★	B-3		Joint connector
R270	2	★	B-4		Vanity mirror light LH & home link
R277	1	Black	C-5		Bracket ground (rear differential gear oil temperature switch)
R312	4	★	A-4		Sub woofer (model with premium audio)
R315	12	★	C-3		Audio amplifier (model with premium audio)
R316	24	★	C-3		
R317	10	Blue	C-3		
R318	4	★	C-3		Joint connector
R353	5	★	B-4		Handsfree kit

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB18	24	Yellow	D-3		Airbag control module
AB24	2	Yellow	C-3		Side airbag module RH
AB26	2	Black	B-2		Pretensioner RH
AB28	4	Yellow	B-2		Side airbag sensor RH
AB33	2	Black	A-4		Curtain airbag module RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH
AB56	3	Brown	C-2		Belt tension sensor (Occupant detection control module)
AB61	6	Gray	C-2	AB59	Occupant detection control module

Rear Wiring Harness

WIRING SYSTEM

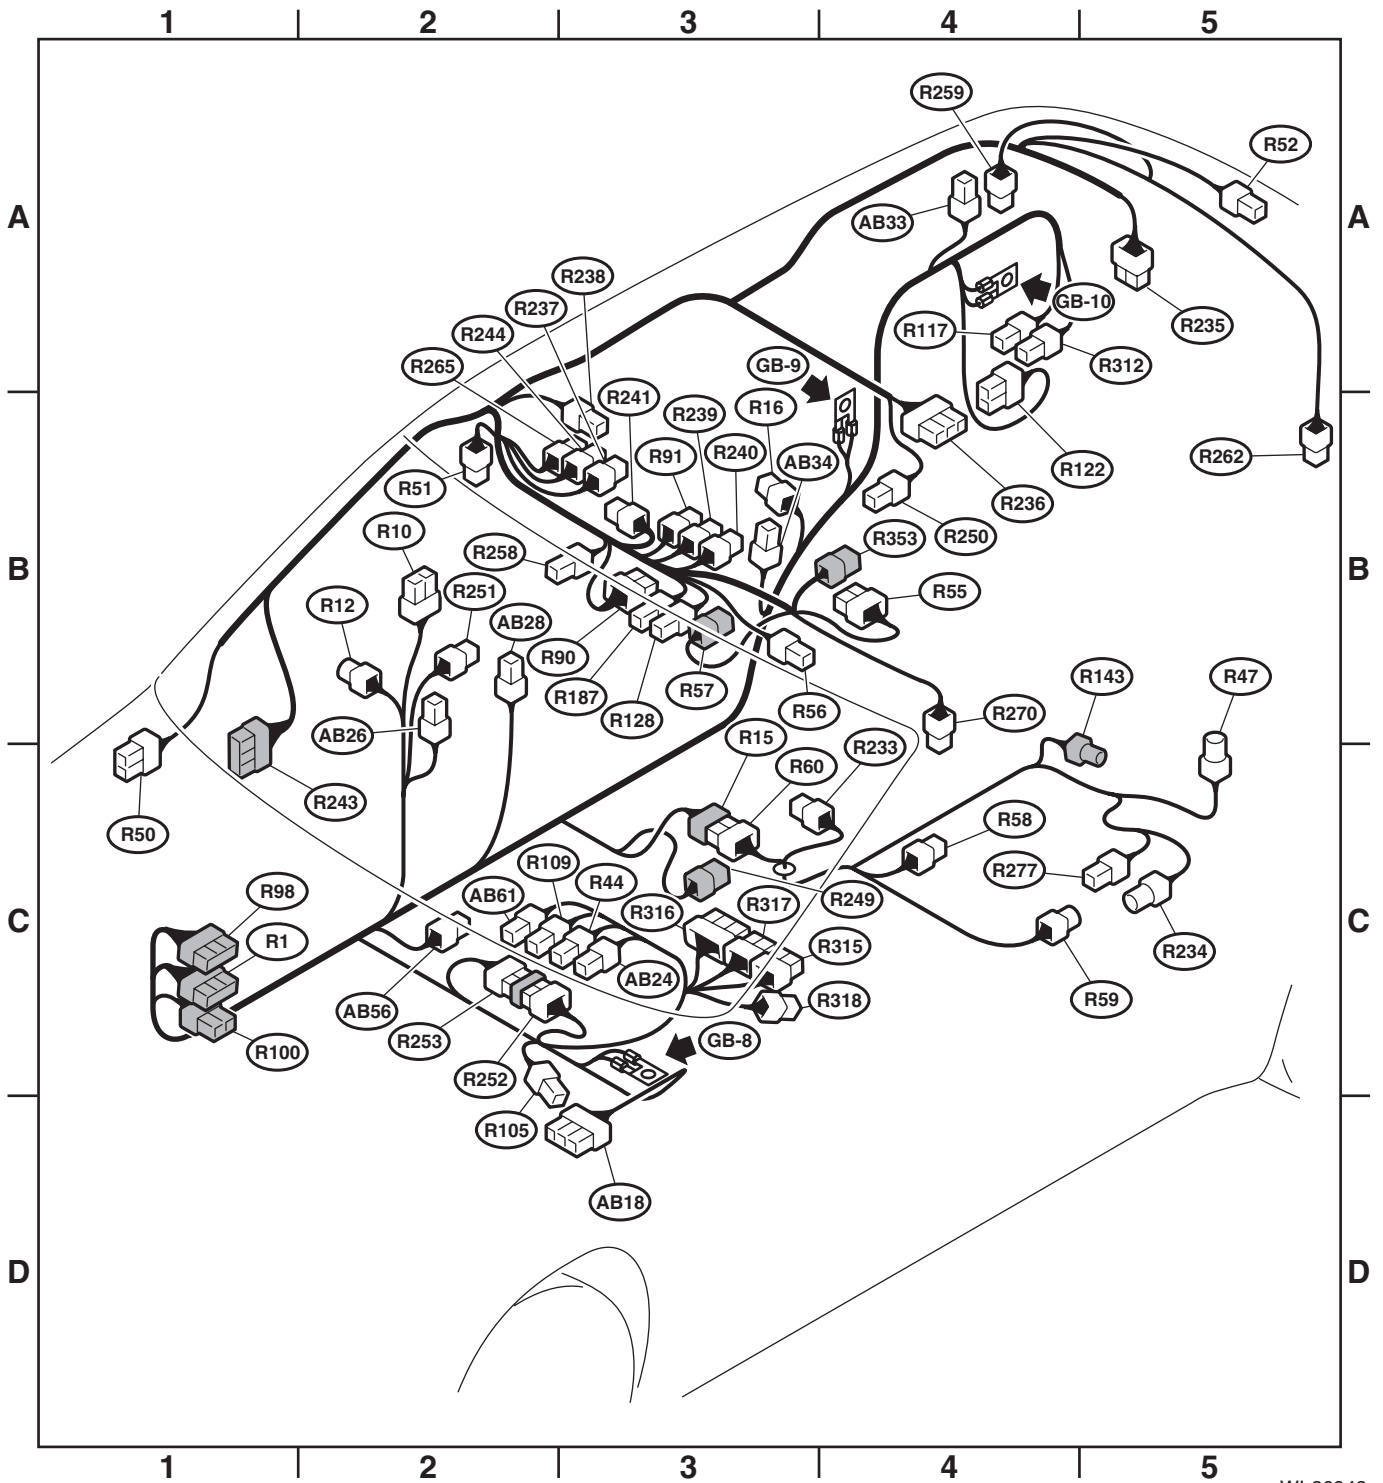

WI-26942

Rear Wiring Harness

WIRING SYSTEM

2. DRIVER'S SIDE

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R2	20	Black	D-2	B97	Bulkhead wiring harness
R8	4	★	C-2		Front seat belt switch LH
R9	3	★	C-3		Front door switch LH
R13	10	★	C-3	D28	Rear door cord LH
R22	3	★	C-4		Rear door switch LH
R28	4	★	B-5		Rear combination light LH
R41	6	★	C-2		Seat heater LH & second-row seat foot light LH
R167	20	Blue	D-2	i102	Instrument panel wiring harness
R168	20	★	D-1		Fuse & relay box (F/B)
R185	24	Gray	C-4		rearview camera module
R188	6	★	C-2		Power seat LH
R211	12	★	D-2		TPMS control module
R215	14	★	B-5	R247	Rear gate cord
R216	12	Black	B-5	R246	Through joint connector
R217	10	★	B-5	R245	Room gate cord (with rear entertainment)
R218	4	★	B-5		Rear A/C relay
R219	4	★	B-5		Blower resistor
R220	2	★	B-5		Blower motor
R224	12	★	C-2		Joint connector
R225	12	★	C-2		
R226	10	Black	C-2		Navigation unit
R227	12	Black	D-2		Joint connector
R228	12	Black	D-2		
R229	11	★	C-1	R272	Console socket
R230	22	★	C-1	i130	Instrument panel wiring harness (center)
R232	2	Gray	C-4		Rear ABS wheel speed sensor LH
R254	14	★	B-4	R260	Adapter cord
R272	11	★	C-1	R229	Rear wiring harness
R273	2	★	B-1		Cup holder illumination
R274	2	★	B-2		Front accessory power supply socket
R275	2	★	B-2		
R276	10	★	B-2		Blower switch
R280	6	Gray	C-2	R282	Console socket
R281	4	★	D-2		Joint connector
R282	6	Gray	C-2	R280	Rear wiring harness
R283	6	★	B-2		Front AUX terminal
R285	6	★	B-5	D36	Feeder cord
R287	6	Gray	B-5		Joint connector

★ : White or natural color

Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	24	Yellow	C-1		Airbag control module
AB19	2	Yellow	C-2		Side airbag module LH
AB21	2	Black	C-3		Pretensioner LH
AB23	4	Yellow	C-3		Side airbag sensor LH
AB31	2	Black	B-4		Curtain airbag module LH
AB32	4	Yellow	C-4		Curtain airbag sensor LH
AB41	2	Yellow	C-3		Satellite safing sensor
AB51	2	Yellow	C-2		Buckle switch LH
AB52	2	Yellow	C-2		Seat position LH

WIRING SYSTEM

