


BODY DIMENSION DRAWINGS

ENGINE COMPARTMENT

(Three-Dimensional Distance)

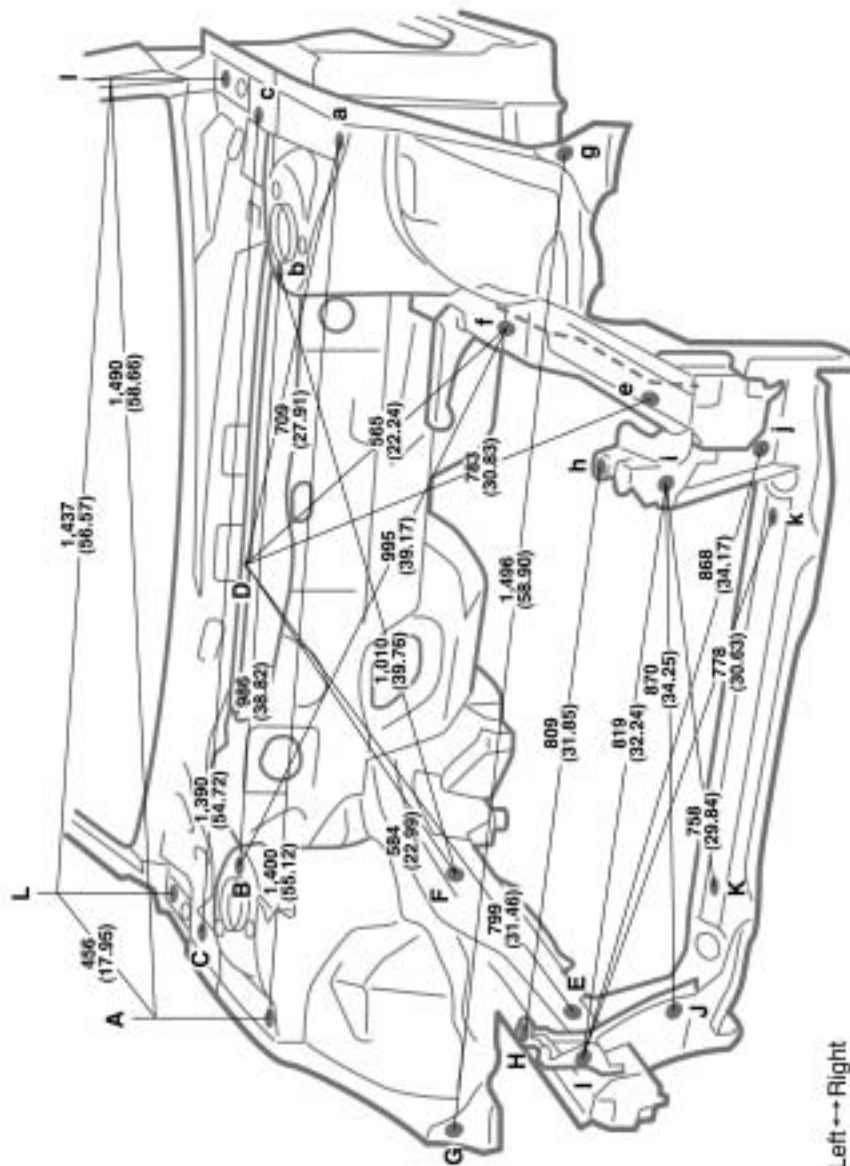

Vehicle Dimensions Left ↔ Right

J ₁	A-C or a-c	A-c or a-c	B-D or b-d	B-I or b-I	B-L or b-l	C-L or c-l
846 (33.31)	275 (10.83)	1,422 (55.98)	496 (19.53)	1,251 (49.25)	387 (15.24)	184 (7.24)


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front fender installation nut - front	6 (0.24) nut	G, g	Front fender apron extension standard hole	10 (0.39)
B, b	Front spring support hole - inner	11 (0.43)	H, h	Radiator upper support installation nut	6 (0.24) nut
C, c	Front fender installation nut - rear	6 (0.24) nut	I, i	Radiator support standard hole	10 (0.39)
D	Cowl top inner panel center mark	—	J, j	Front crossmember side gusset standard hole	8 (0.31)
E, e	Front side member standard hole	18 (0.71)	K, k	Front upper crossmember standard hole	10 (0.39)
F	Front side member standard hole	10 (0.39)	L, l	Hood hinge installation nut - rear	8 (0.31) nut
I	Engine mounting installation nut	10 (0.39) nut	—	—	—

BODY OPENING AREAS (Side View)

(Three-Dimensional Distance)

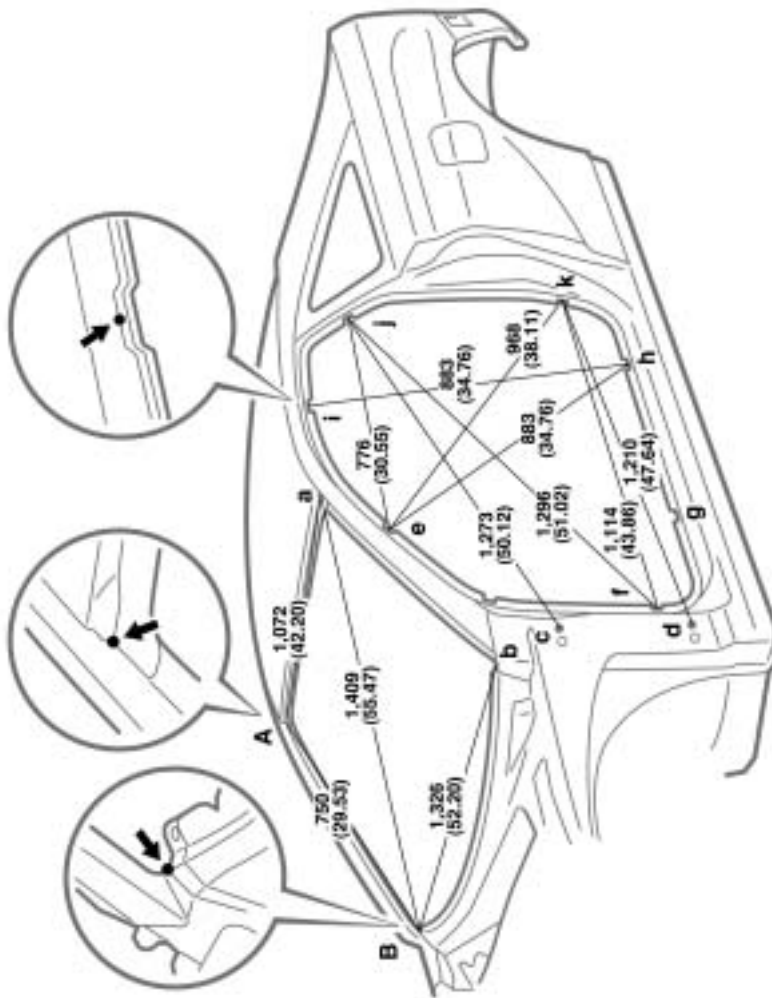

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle/(Seen from rear).


Vehicle Dimensions Left $\leftrightarrow$ Right

	E-e	F-f	G-g	H-h	I-i	J-j	K-k
	1,240 (48.82)	1,441 (56.73)	1,444 (56.85)	1,444 (56.85)	1,071 (42.17)	1,249 (49.17)	1,439 (56.65)

	E-f or e-F	E-h or e-H	E-j or e-J	F-k or f-K	G-h or g-H	H-j or h-J	J-k or j-K
	1,518 (59.76)	1,603 (63.11)	1,467 (57.76)	1,865 (73.43)	1,821 (71.69)	1,545 (60.83)	1,473 (57.99)


mm (in)

BODY OPENING AREAS (Rear View)

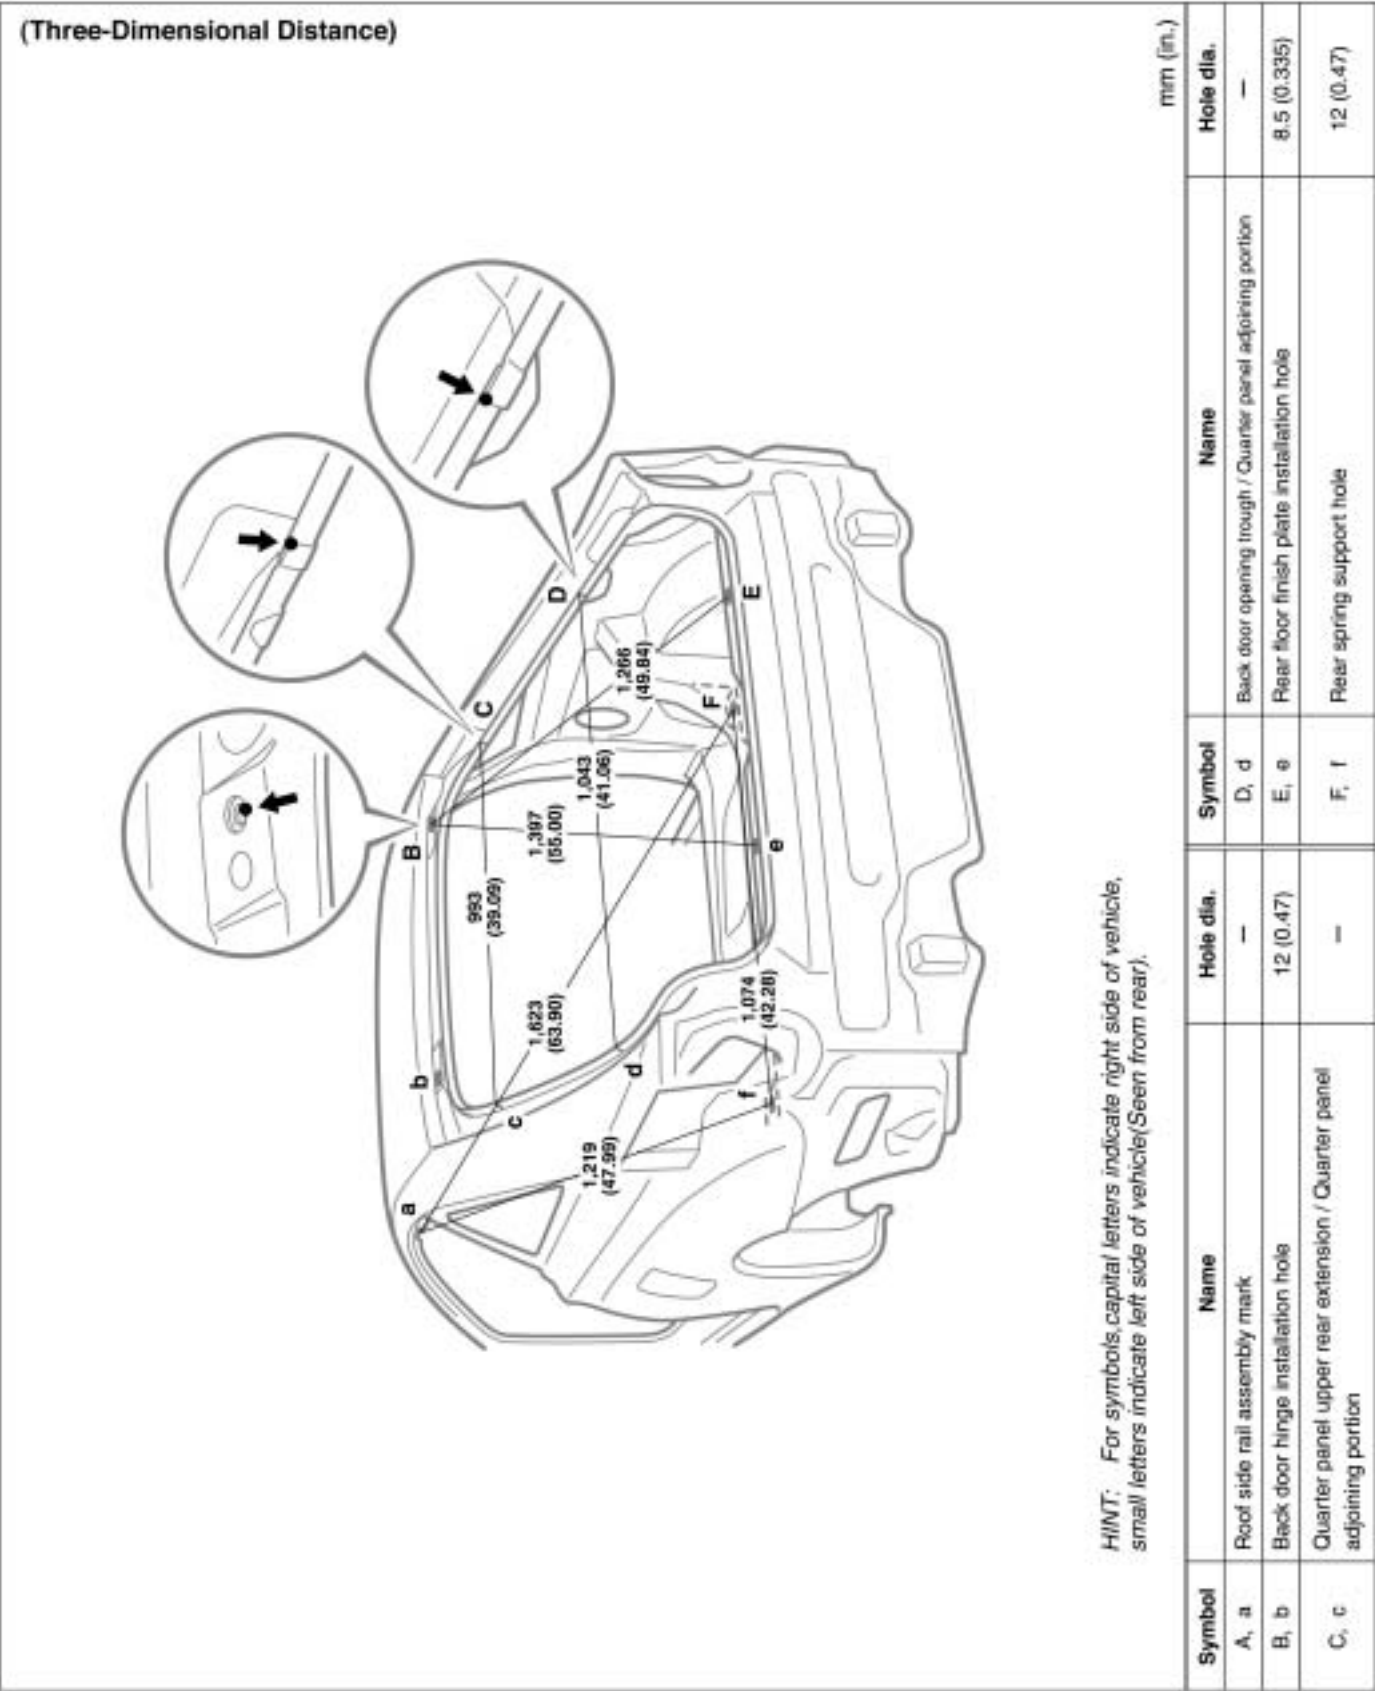

UNDER BODY

(Three-Dimensional Distance)

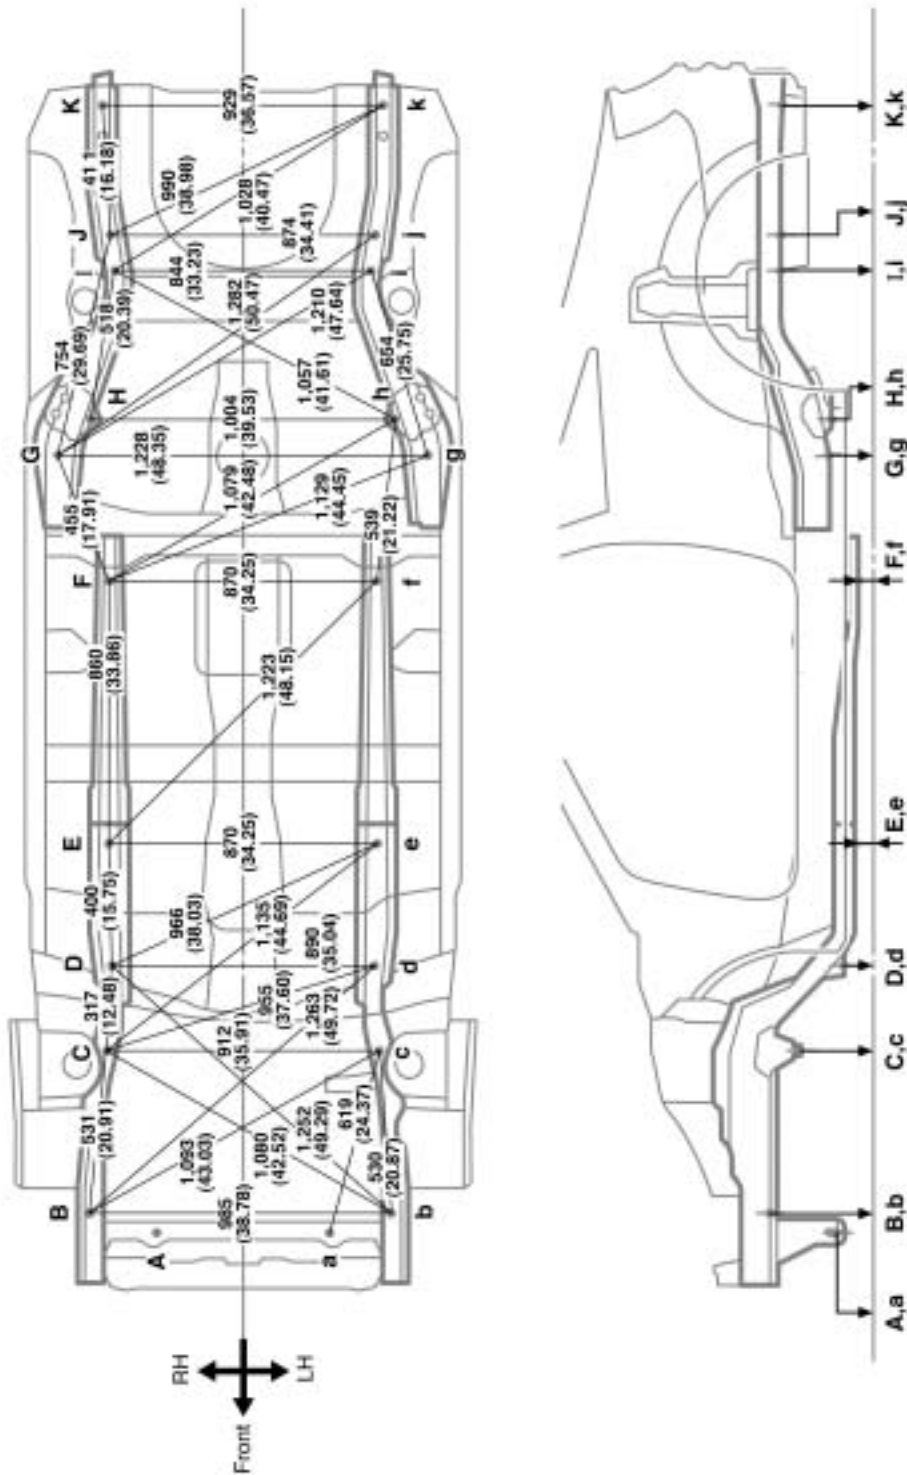

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front lower crossmember standard hole	15 (0.59)	G, g	Rear floor side member standard hole	25 (0.98)
B, b	Front side member standard hole	18 (0.71)	H, h	Lower arm installation nut	12 (0.47) nut
C, c	Front suspension member installation hole - front	18 (0.71)	I, i	Rear suspension member installation nut	10 (0.39) nut
D, d	Front suspension member installation nut - rear	14 (0.55) nut	J, j	Rear suspension member installation nut	14 (0.55) nut
E, e	Front side member standard hole	18 (0.71)	K, k	Transport hook installation nut	10 (0.39) nut
F, f	Front floor under reinforcement standard hole	10 (0.39)	—	—	—

UNDER BODY (Cont'd)

