


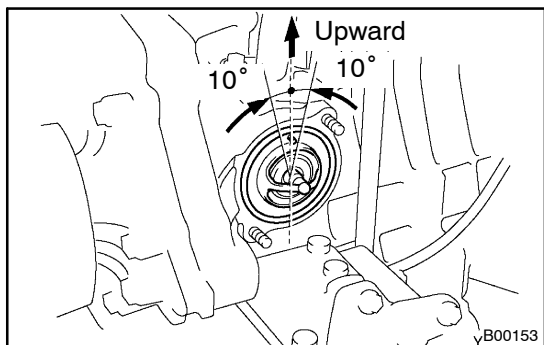

INSTALLATION

1. PLACE THERMOSTAT IN CYLINDER BLOCK

- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve upward.

HINT:

The jiggle valve may be set within 10° of either side of the prescribed position.

2. INSTALL WATER INLET

Install the water inlet with the 2 nuts.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

3. INSTALL ALTERNATOR AND DRIVE BELT

4. FILL WITH ENGINE COOLANT

5. START ENGINE, AND CHECK FOR COOLANT LEAKS.