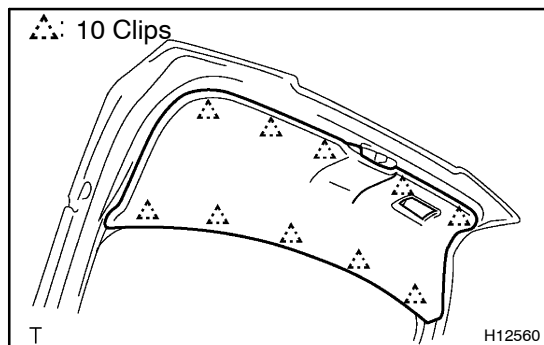


DISASSEMBLY

1. w/ Rear spoiler:
REMOVE REAR SPOILER
2. **REMOVE DOOR PULL HANDLE**



3. REMOVE BACK DOOR TRIM BOARD

Using a screwdriver, remove the back door trim board.

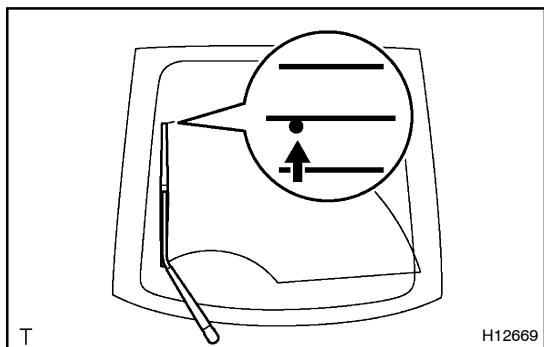
HINT:

Tape the screwdriver tip before use.

4. REMOVE REAR WIPER ARM

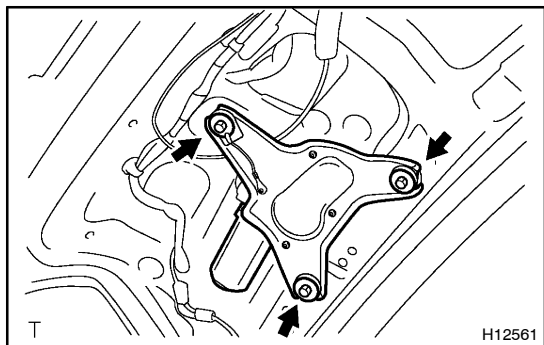
HINT:

- At the time of reassembly, please refer to the following items
- Operate the wiper motor once and turn the wiper switch OFF.
- Install the rear wiper arm and tighten the nut by hand.



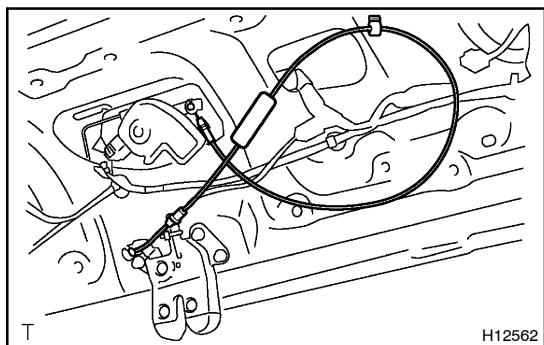
- Adjust the installation position of the wiper arm at a point in defogger pattern.
- Tighten the nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)



5. REMOVE REAR WIPER MOTOR

- (a) Disconnect the connector.
- (b) Unfasten the 3 bolts and remove the rear wiper motor.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (c) Remove the packing.
- (d) Europe (RHD):
Remove the grommet from the rear wiper motor.

**6. REMOVE CONTROL CABLE**

- (a) Disconnect the cable from the back door lock.
- (b) Disconnect the cable from the outside back door handle.
- (c) Remove the clamp and control cable.

7. REMOVE BACK DOOR LOCK

- (a) Remove the wire harness clamp from the door lock.
- (b) Remove the 3 bolts and back door lock.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

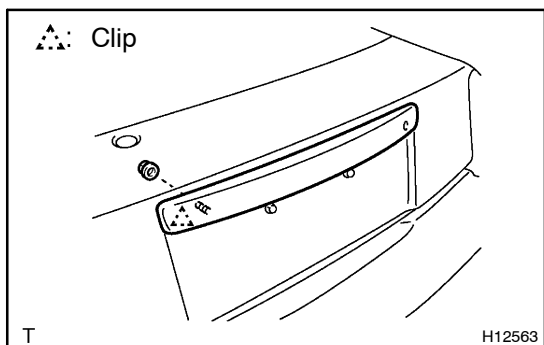
- (c) Disconnect the connector.

8. REMOVE KEY CYLINDER

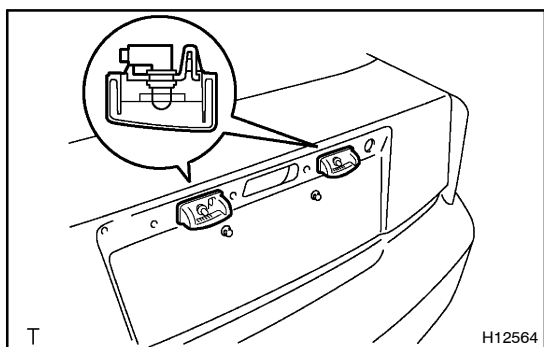
- (a) Disconnect the control link.
- (b) Remove the 2 nuts and key cylinder.

9. REMOVE OUTSIDE BACK DOOR HANDLE

- (a) w/ Power door lock:
Disconnect the connector.
- (b) Remove the 2 nuts and outside back door handle.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
- (c) Remove the control link from the outside back door handle.

**10. REMOVE OUTSIDE BACK DOOR GARNISH**

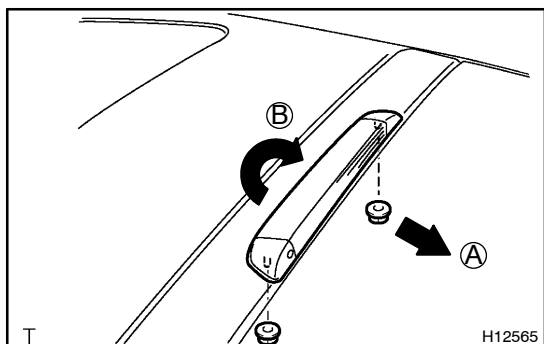
- (a) Remove the nut.
- (b) Remove the outside back door garnish by compressing clip from the inside to disengage them.

**11. REMOVE LICENSE PLATE LIGHTS**

- (a) Disconnect the connectors.
- (b) Using a screwdriver, remove the license plate lights.

HINT:

Tape the screwdriver tip before use.

**12. REMOVE CENTER STOP LIGHT**

- (a) Remove the 2 nuts.
- (b) Disconnect the connector and washer hose, then remove the center stop light in order A, B as shown in the illustration..

13. REMOVE BACK DOOR WEATHERSTRIP