



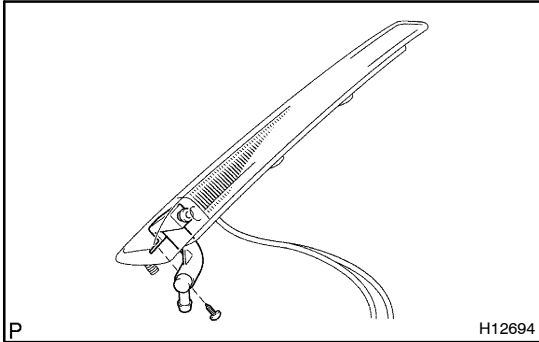


INSTALLATION

1. INSTALL REAR WASHER NOZZLE


- (a) Install the rear wiper nozzle to the center step light with the screw.

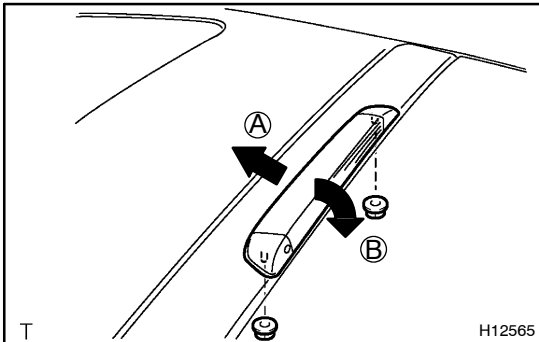

- (b) Connect the connector and washer hose, then install the center stop light with the 2 nuts in order A, B as shown in the illustration.

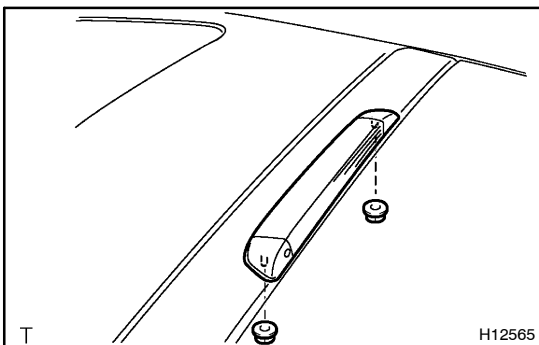

- (c) Connect the connector and washer hose, then install the center stop light with the 2 nuts.

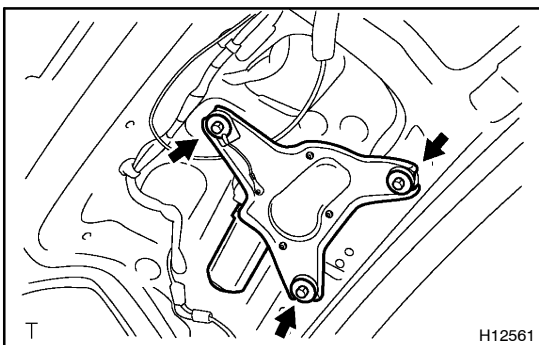

2. INSTALL REAR WIPER MOTOR


- (a) Europe (RHD):
Install the grommet to the rear wiper motor.
- (b) Install the packing.
- (c) Install the rear wiper motor and fasten the 3 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (d) Connect the connector.

3. INSTALL BACK DOOR TRIM BOARD

4. INSTALL DOOR PULL HANDLE

5. INSTALL REAR WIPER ARM

- (a) Operate the wiper motor once and turn the wiper switch OFF.
- (b) Install the rear wiper arm and tighten the nut by hand.

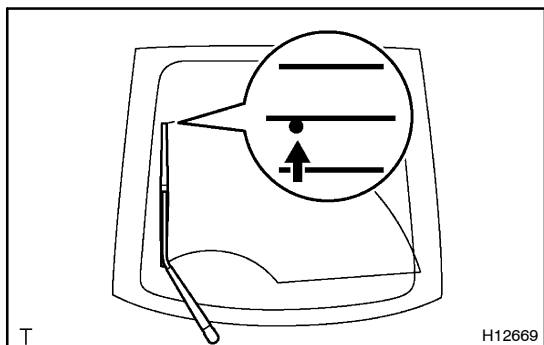

(c) Adjust the installation position of the wiper arm at a point in defogger pattern.

(d) Tighten the nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

6. w/ Rear spoiler:

REMOVE REAR SPOILER