


PROPORTIONING VALVE (P VALVE) ON-VEHICLE INSPECTION

BR16D-01

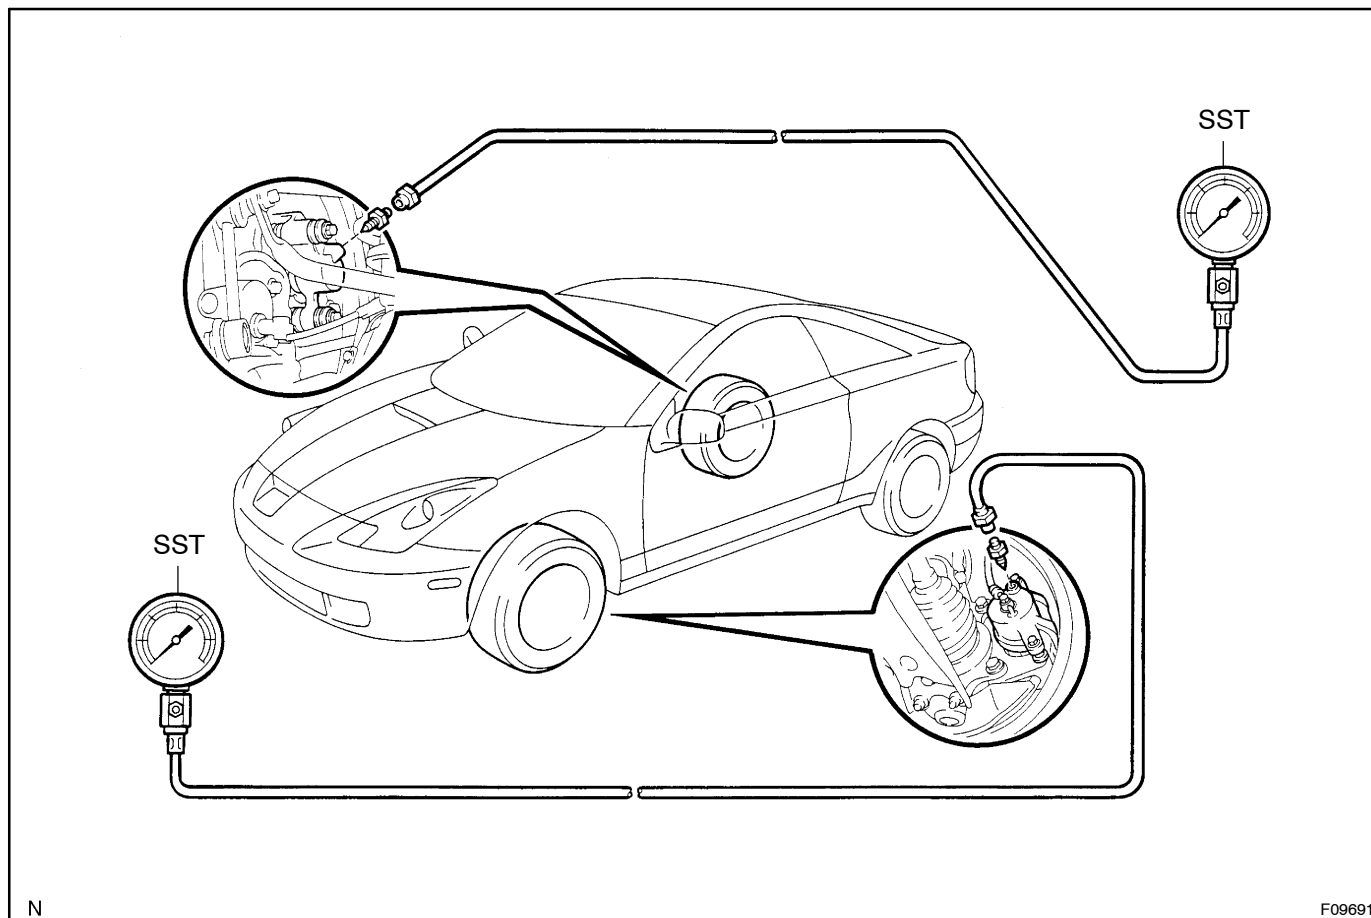

1. INSTALL LSPV GAUGE (SST) AND BLEED AIR

SST 09709-29018

2. BLEED AIR FROM FLUID PRESSURE GAUGE

3. RAISE MASTER CYLINDER PRESSURE AND CHECK REAR BRAKE CALIPER PRESSURE

Master cylinder fluid pressure	Rear brake caliper fluid pressure
1.96 kPa (20 kgf/cm ² , 284 psi)	1.96 kPa (20 kgf/cm ² , 284 psi)
7.85 kPa (80 kgf/cm ² , 1,138 psi)	5.61 kPa (57.2 kgf/cm ² , 813 psi)

When inspecting the fluid pressure, inspect the left front and right rear together, and the right front and left rear together.

If the rear fluid pressure is incorrect, replace the P valve assembly.

4. BLEED BRAKE SYSTEM (See page BR-4)

5. CHECK FOR LEAKS