


TERMINALS OF ECU

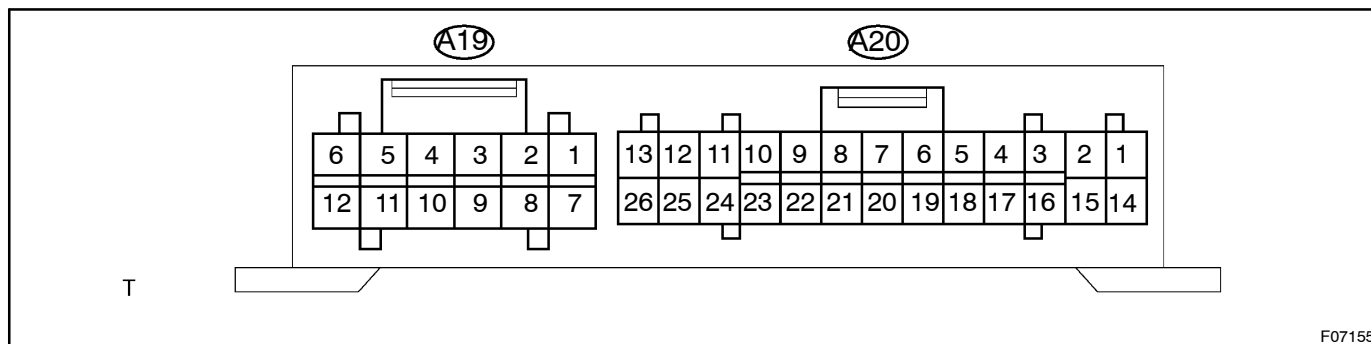

F07155

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
IG1 (A20 - 13) - GND (A20 - 12, 25)	B-Y ↔ W-B	IG switch ON	10 - 14
R+ (A20 - 26) - SR (A19 - 7)	GR-R ↔ GR	IG switch ON, ABS warning light OFF	9 - 14
R+ (A20 - 26) - MR (A19 - 1)	GR-R ↔ R-Y	IG switch ON	Below 1.0
SFRR (A20 - 1) - GND (A20 - 12, 25)	LG-B ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SFRH (A20 - 2) - GND (A20 - 12, 25)	LG ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SFLR (A19 - 6) - GND (A20 - 12, 25)	R-W ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SFLH (A19 - 5) - GND (A20 - 12, 25)	LG-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRRR (A19 - 12) - GND (A20 - 12, 25)	Y-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRRH (A19 - 11) - GND (A20 - 12, 25)	Y-G ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRLR (A20 - 14) - GND (A20 - 12, 25)	B-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRLH (A20 - 15) - GND (A20 - 12, 25)	GR-L ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
WA (A20 - 11) - GND (A20 - 12, 25)	V ↔ W-B	IG switch ON, ABS warning light ON	10 - 14
		IG switch ON, ABS warning light OFF	Below 2.0
STP (A20 - 5) - GND (A20 - 12, 25)	G-W ↔ W-B	Stop light switch OFF	Below 1.5
		Stop light switch ON	8 - 14
D/G (A20 - 24) - GND (A20 - 12, 25)	W ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
Tc (A20 - 8) - GND (A20 - 12, 25)	P-B ↔ W-B	IG switch ON	8 - 14
Ts (A20 - 21) - GND (A20 - 12, 25)	W-R ↔ W-B	IG switch ON	8 - 14
FR+ (A19 - 3) - FR- (A19 - 9)	P ↔ L	IG switch ON, slowly turn right front wheel	AC generation
FL+ (A19 - 8) - FL- (A19 - 2)	Y ↔ BR	IG switch ON, slowly turn left front wheel	AC generation
RR+ (A20 - 10) - RR- (A20 - 23)	W ↔ B	IG switch ON, slowly turn right rear wheel	AC generation
RL+ (A20 - 22) - RL- (A20 - 9)	R ↔ G	IG switch ON, slowly turn left rear wheel	AC generation

MT (A19 – 10) – GND (A20 – 12, 25)	LG-B ↔ W-B	IG switch ON	Below 1.5
PN*1 (A20 – 3) – GND (A20 – 12, 25)	P-L ↔ W-B	IG switch ON, shift lever is in P or N range	8 – 14
		IG switch ON, shift lever is in other P or N range	Below 1.5
SP1*2 (A20 – 16) – GND (A20 – 12, 25)	LG ↔ W-B	Vehicle driving at about 20 km/h (12 mph)	Pulse generation
PKB (A20 – 6) – GND (A20 – 21, 25)	R-B ↔ W-B	IG switch ON, parking brake switch ON	Below 2.0
		IG switch ON, parking brake switch OFF	10 – 14
BRL (A20 – 18) – GND (A20 – 21, 25)	GR ↔ W-B	IG switch ON, BRAKE warning light ON	10 – 14
		IG switch ON, BRAKE warning light OFF	Below 2.0

*1: Europe, A/T

*2: Europe