


REMOVAL

1. REMOVE REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. REMOVE PACKAGE TRAY TRIM
3. REMOVE LUGGAGE COMPARTMENT MAT
4. REMOVE REAR DECK TRIM COVER
5. REMOVE DECK TRIM SIDE PANEL
6. REMOVE REAR LOWER SUSPENSION ARM
(See page SA-68)

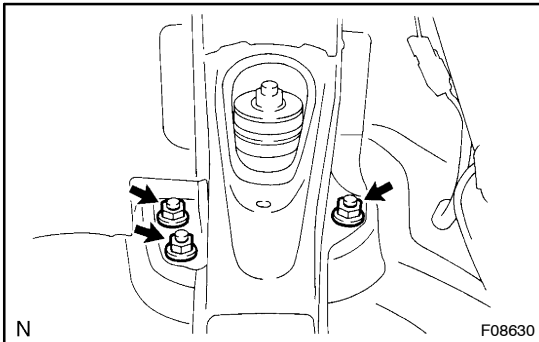

7. REMOVE REAR SHOCK ABSORBER

Remove the 3 nuts and rear shock absorber.

Torque: 80 N·m (816 kgf·cm, 59 ft·lbf)