

## INSPECTION


### 1. VEHICLES NOT INVOLVED IN A COLLISION

- (a) Perform a diagnostic system check (see page [DI-1851](#)).
- (b) With the front passenger airbag assembly installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front passenger airbag assembly with a new one:

Cuts, minute cracks or marked discoloration on the instrument panel around the front passenger airbag assembly.

### 2. VEHICLE INVOLVED IN A COLLISION AND AIRBAG IS NOT DEPLOYED

- (a) Perform a diagnostic system check (see page [DI-1851](#)).

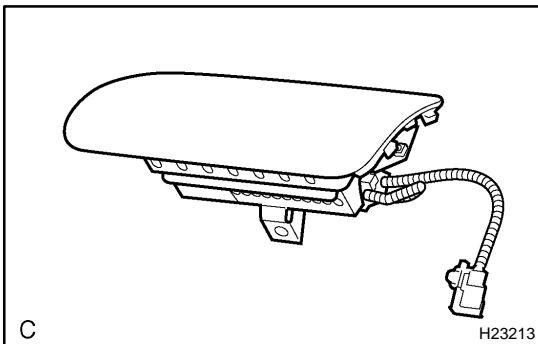

- (b) With the front passenger airbag assembly removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front passenger airbag assembly, instrument panel or instrument panel reinforcement with a new one:

- Cuts, minute cracks or marked discoloration on the front passenger airbag assembly.
- Cracks or other damage to the connectors.

- Deformation or cracks on the instrument panel or instrument panel reinforcement.

### CAUTION:

For removal and installation procedures of the front passenger airbag assembly, see page [RS-36](#) and [RS-46](#). Be sure to follow the correct procedure.

