


FRONT LOWER BALL JOINT ON-VEHICLE INSPECTION

SA0AW-05

INSPECT LOWER BALL JOINT EXCESSIVE PLAY ON-VEHICLE

- (a) Remove the front wheel and install the hub nuts to the disc.

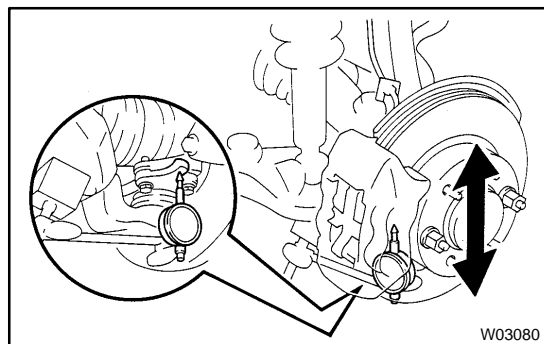

- (b) Using a dial indicator, check the lower ball joint for excessive play when you push the hub nuts up and down with a force of 294 N (30 kgf, 66 lbf).

Maximum: 0.5 mm (0.020 in.)