



## J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

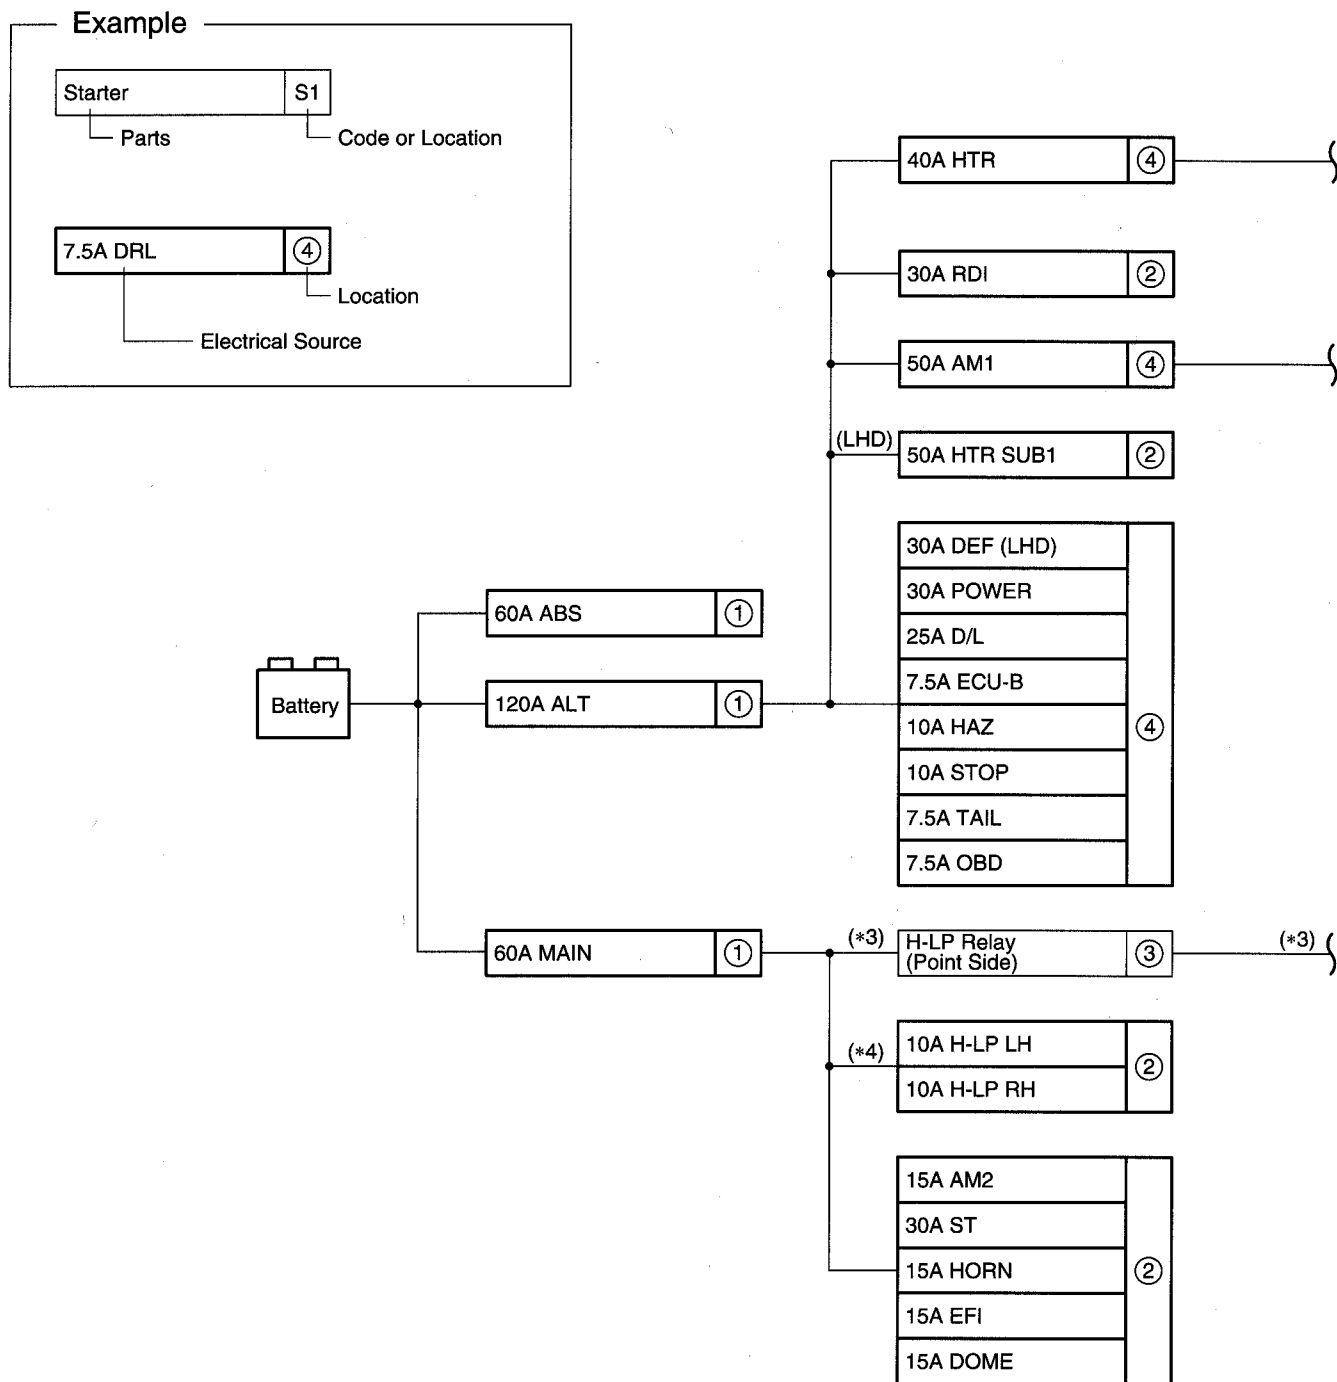

- \*1 : Cold Area Spec.  
 \*2 : Except Cold Area Spec.  
 \*3 : w/ Daytime Running Light  
 \*4 : w/o Daytime Running Light

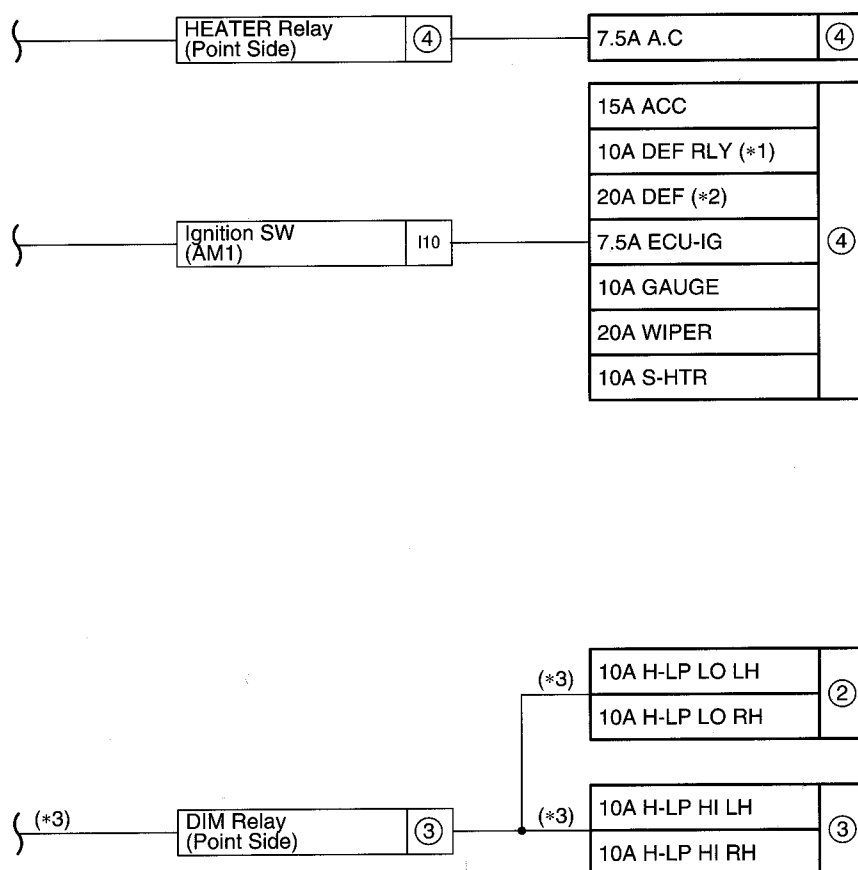

- [LOCATION] ① : Fusible Link Block (F12,F13 on See page 84(LHD),90(RHD))  
 ② : Engine Room R/B No.1 (See page 76)  
 ③ : Engine Room R/B No.2 (See page 76)  
 ④ : Instrument Panel J/B (See page 77)

## J POWER SOURCE (Current Flow Chart)

### Engine Room R/B No.1 (See Page 78)

Fuse		System	Page
10A	H-LP LH	Headlight (w/o Daytime Running Light)	148
10A	H-LP LO LH	Headlight (w/ Daytime Running Light)	144
10A	H-LP LO RH	Headlight (w/ Daytime Running Light)	144
		Headlight Beam Level Control (w/ Daytime Running Light)	150
10A	H-LP RH	Headlight (w/o Daytime Running Light)	148
15A	AM2	Charging	132
		Combination Meter (Analog Type)	246
		Combination Meter (Digital Type)	250
		ECT	230
		Engine Control	134
		Multi Display	222
		SRS	237
		Starting and Ignition	128
15A	DOME	Clock (w/o Multi Display)	226
		Combination Meter (Analog Type)	246
		Combination Meter (Digital Type)	250
		Double Locking	202
		Headlight (w/o Daytime Running Light)	148
		Interior Light	176
		Light Reminder Buzzer	180
		Multi Display	222
		Radio and Player	224
		Wireless Door Lock Control	196
15A	EFI	ECT	230
		Engine Control	134
		Engine Immobiliser System	142
15A	HORN	Horn	188
15A	P/POINT	Power Outlet	228
30A	RDI	Radiator Fan and Condenser Fan	266
30A	ST	Starting and Ignition	128
50A	HTR SUB1	PTC Heater	264

### Engine Room R/B No.2 (See Page 79)

Fuse		System	Page
10A	H-LP HI LH	Headlight (w/ Daytime Running Light)	144
10A	H-LP HI RH	Combination Meter (Analog Type)	246
		Combination Meter (Digital Type)	250
		Headlight (w/ Daytime Running Light)	144

\* These are the page numbers of the first page on which the related system is shown.

## Instrument Panel J/B (See Page 80)

Fuse		System	Page
7.5A	A.C	Air Conditioner	268
		Two Way Flow Heater	260
7.5A	ECU-B	Headlight (w/ Daytime Running Light)	144
		Rear Fog Light (w/ Daytime Running Light)	156
		Rear Fog Light (w/o Daytime Running Light)	158
7.5A	ECU-IG	ABS	242
		Interior Light	176
		Multi Display	222
		PTC Heater	264
		Radiator Fan and Condenser Fan	266
		SRS	237
		Two Way Flow Heater	260
7.5A	OBD	ECT	230
7.5A	TAIL	Front Fog Light	154
		Headlight (w/ Daytime Running Light)	144
		Headlight (w/o Daytime Running Light)	148
		Headlight Beam Level Control (w/o Daytime Running Light)	152
		Light Reminder Buzzer	180
		Rear Fog Light (w/ Daytime Running Light)	156
		Rear Fog Light (w/o Daytime Running Light)	158
		Taillight and Illumination (w/ Daytime Running Light)	160
		Taillight and Illumination (w/o Daytime Running Light)	164
10A	DEF RLY	Rear Window Defogger and Mirror Heater	258
10A	GAUGE	ABS	242
		Air Conditioner	268
		Back-Up Light	174
		Charging	132
		Combination Meter (Analog Type)	246
		Combination Meter (Digital Type)	250
		Door Lock Control	190
		Double Locking	202
		ECT	230
		Engine Control	134
		Headlight (w/ Daytime Running Light)	144
		Light Reminder Buzzer	180
		Moon Roof	214
		Power Window (LHD)	206
		Power Window (RHD)	210
		Shift Lock	220
		Turn Signal and Hazard Warning Light	168
		Two Way Flow Heater	260
		Wireless Door Lock Control	196

\* These are the page numbers of the first page on which the related system is shown.

## J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
10A	HAZ	Turn Signal and Hazard Warning Light	168
10A	S-HTR	Seat Heater (LHD)	256
10A	STOP	ECT	230
		Engine Control	134
		Shift Lock	220
		Stop Light	172
15A	ACC	Cigarette Lighter	178
		Clock (w/o Multi Display)	226
		Combination Meter (Digital Type)	250
		Light Reminder Buzzer	180
		Multi Display	222
		Power Outlet	228
		Radio and Player	224
		Remote Control Mirror	218
15A	FOG	Front Fog Light	154
15A	STOP	ABS	242
20A	DEF	Rear Window Defogger and Mirror Heater	258
20A	WIPER	Front Wiper and Washer	182
		Rear Wiper and Washer	186
25A	D/L	Door Lock Control	190
		Double Locking	202
		Wireless Door Lock Control	196
30A	DEF	Rear Window Defogger and Mirror Heater	258
30A	POWER	Moon Roof	214
		Power Window (LHD)	206
		Power Window (RHD)	210
40A	HTR	Air Conditioner	268
		Two Way Flow Heater	260

### Fusible Link Block (See Page 79)

Fuse		System	Page
60A	ABS	ABS	242
60A	MAIN	Charging	132
		Combination Meter (Analog Type)	246
		Combination Meter (Digital Type)	250
		ECT	230
		Engine Control	134
		Headlight (w/ Daytime Running Light)	144
		Headlight (w/o Daytime Running Light)	148
		Interior Light	176
		Multi Display	222
		Rear Fog Light (w/ Daytime Running Light)	156
		SRS	237
		Starting and Ignition	128

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
120A	ALT	Charging	132
		Headlight (w/o Daytime Running Light)	148
		Headlight Beam Level Control (w/o Daytime Running Light)	152
		Interior Light	176
		Power Outlet	228
		Rear Fog Light (w/ Daytime Running Light)	156
		Rear Fog Light (w/o Daytime Running Light)	158
		Taillight and Illumination (w/ Daytime Running Light)	160
		Taillight and Illumination (w/o Daytime Running Light)	164

\* These are the page numbers of the first page on which the related system is shown.