



6. Thermostat

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the under cover. <Ref. to EI-23, REMOVAL, Front Under Cover.>
- 4) Drain engine coolant. <Ref. to CO(H4DOTC)-13, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 5) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-30, REMOVAL, Center Exhaust Pipe.>
- 6) Disconnect the radiator outlet hose from thermostat cover.

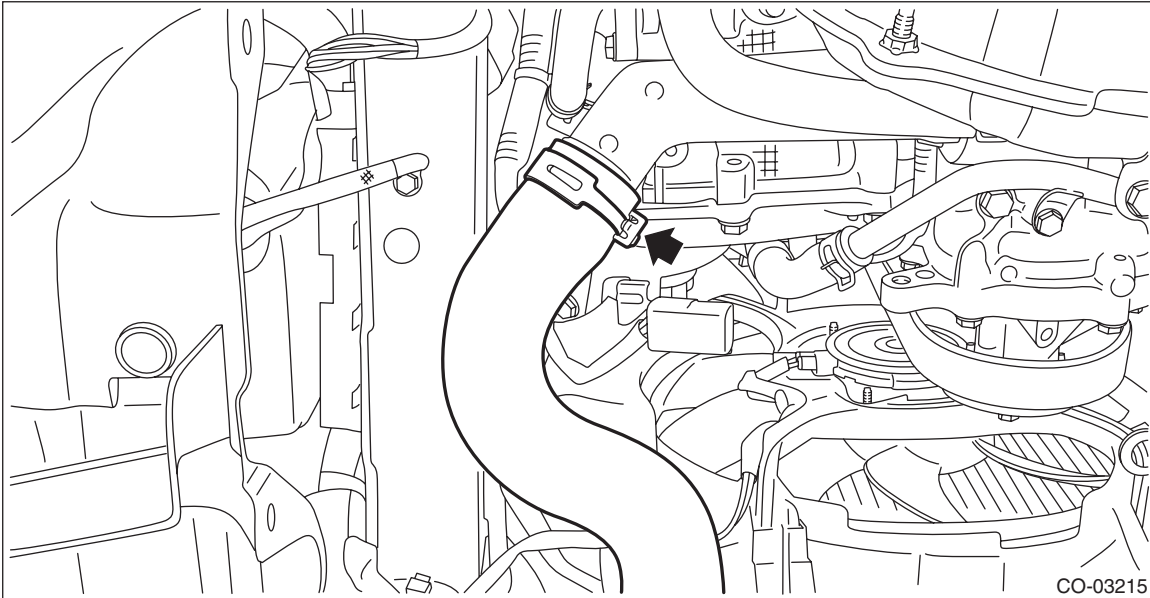

- 7) Remove the thermostat cover, and then remove the thermostat.

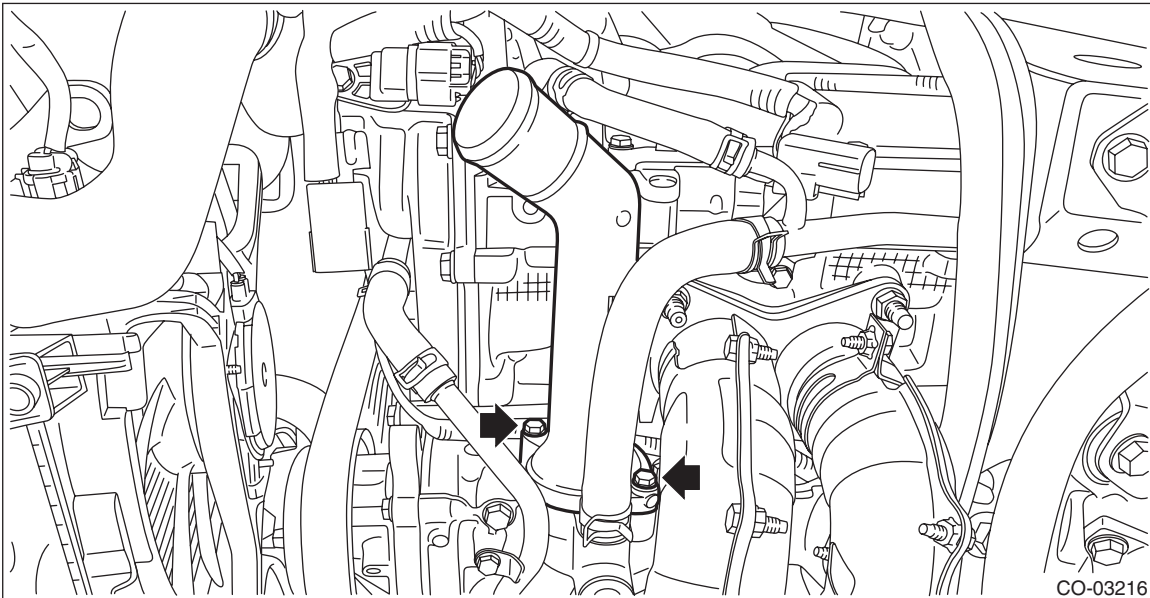

- 8) Remove the gasket from thermostat.

Thermostat


COOLING

B: INSTALLATION

1) Install a gasket to thermostat.

NOTE:


- Use a new gasket.
- Align the positions of the jig pin (a) and gasket ribs (b).

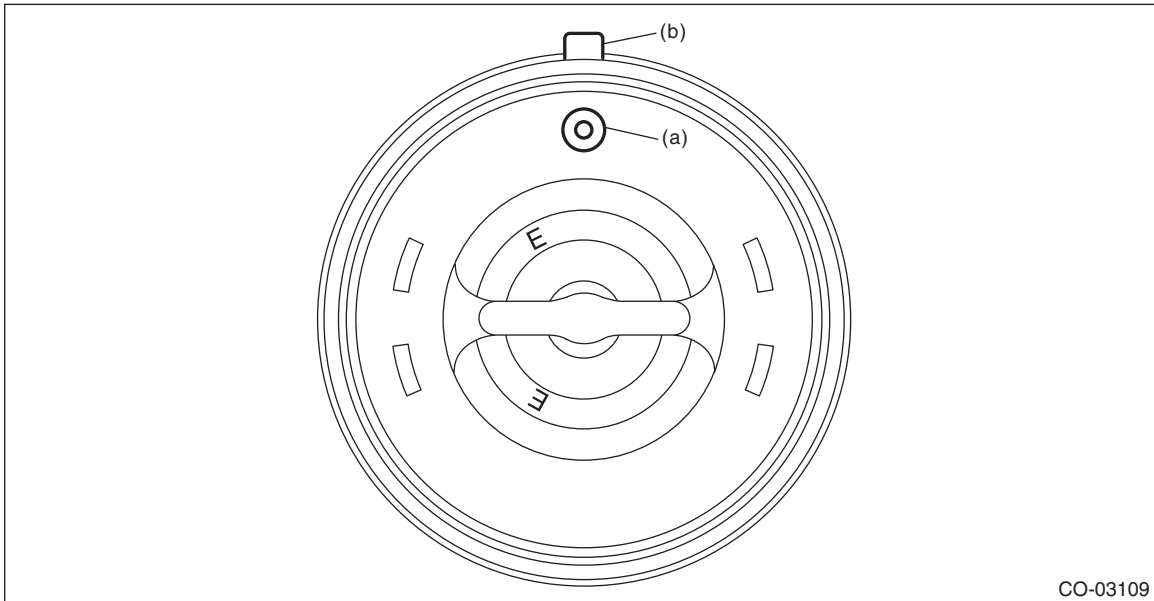


2) Install the thermostat and thermostat cover.

NOTE:


Align the oil pan upper cutout (a) with the position of the thermostat rib (b).

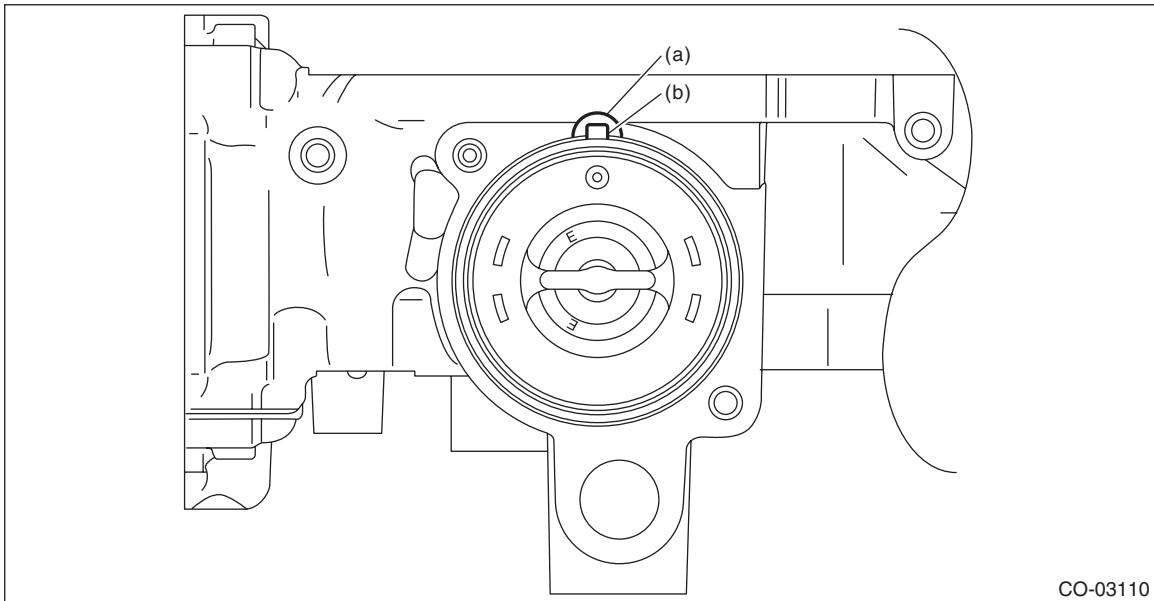

Tightening torque:
6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

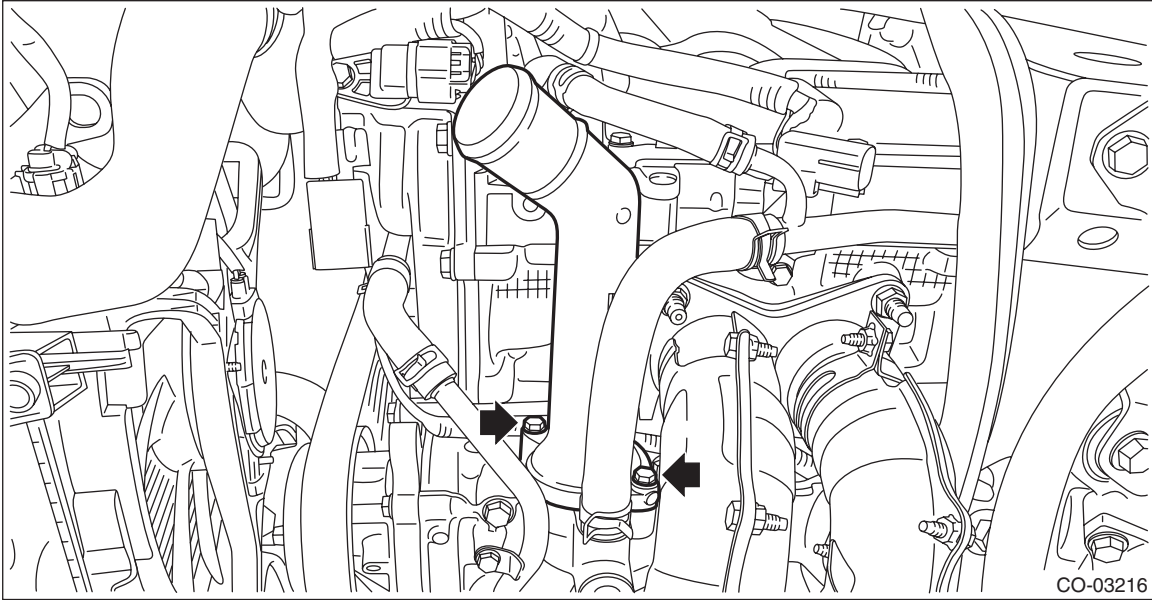

3) Connect the radiator outlet hose to thermostat cover.

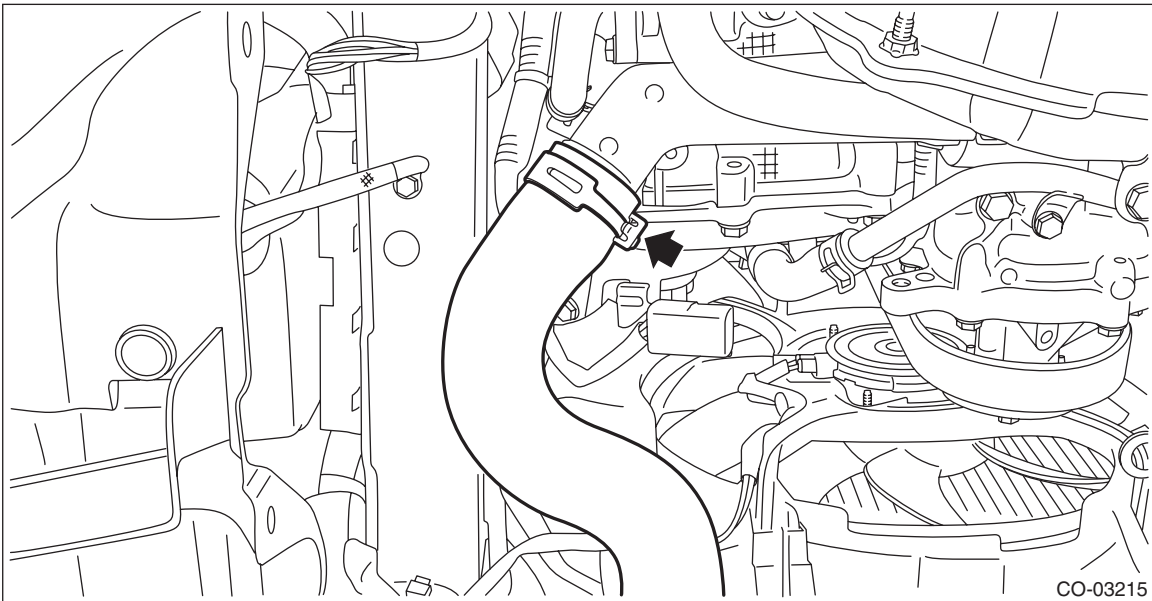

- 4) Install the center exhaust pipe. <Ref. to EX(H4DOTC)-35, INSTALLATION, Center Exhaust Pipe.>
- 5) Install the under cover. <Ref. to EI-23, INSTALLATION, Front Under Cover.>
- 6) Lower the vehicle.
- 7) Connect the battery ground terminal.
- 8) Fill engine coolant. <Ref. to CO(H4DOTC)-14, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

Thermostat

COOLING

C: INSPECTION

- 1) Check that the thermostat does not have deformation, cracks or damage.
- 2) Check that the thermostat valve closes completely at an ambient temperature.
- 3) Immerse the thermostat and a thermometer in water. Raise water temperature gradually, and check the temperature and valve lift when the valve begins to open and when the valve is fully opened. Replace the thermostat if faulty.

NOTE:

- During the test, agitate the water for even temperature distribution.
- Leave the thermostat in the boiling water for five minutes or more before measuring the valve lift.
- Hold the thermostat with a wire or the like to avoid contacting with container bottom.

Starting temperature to open:


86 — 90°C (187 — 194°F)

Full open temperature:

95°C (203°F)

Total valve lift:

8.0 mm (0.315 in) or more

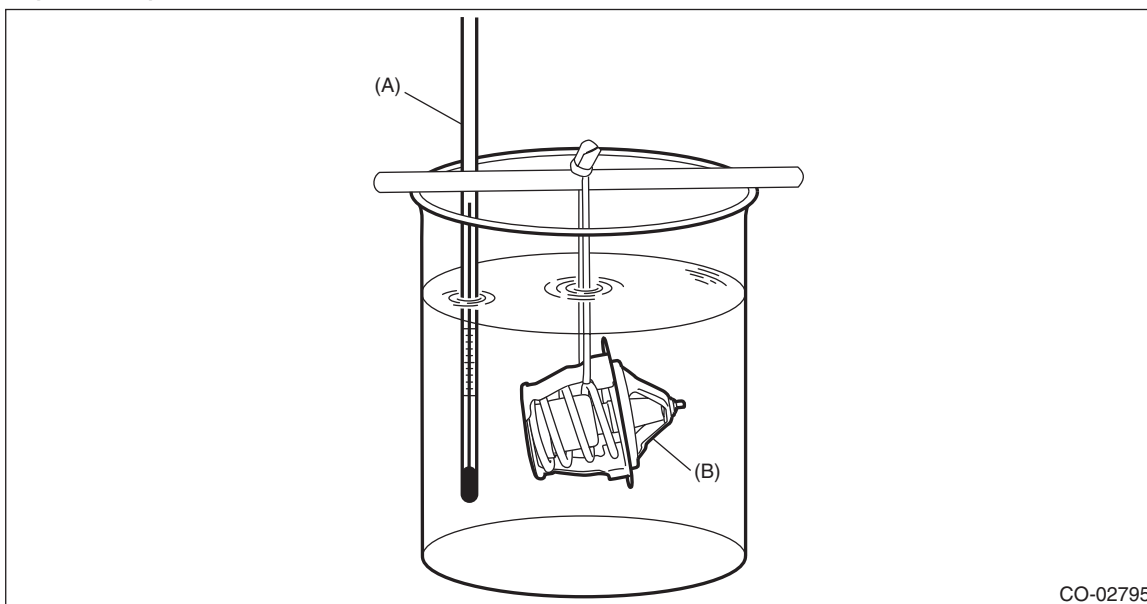

CO-02795

(A) Thermometer

(B) Thermostat