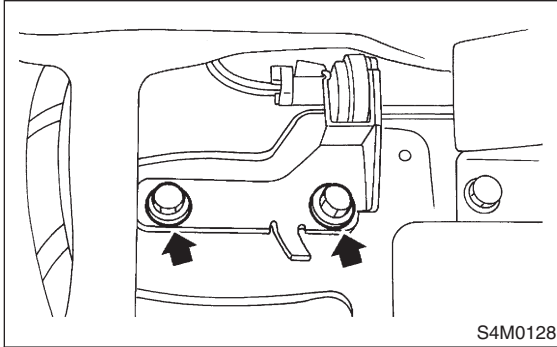


6. G Sensor S401183**A: REMOVAL** S401183A18

- 1) Turn ignition switch to OFF.
- 2) Remove console cover. <Ref. to EI-24 REMOVAL, Console Box.>
- 3) Disconnect connector from G sensor.
- 4) Remove G sensor from body.

**B: INSTALLATION** S401183A11

Install in the reverse order of removal.

CAUTION:
Do not drop or bump G sensor.

C: INSPECTION

S401183A10

No.	Step	Check	Yes	No
1	CHECK SUBARU SELECT MONITOR.	Do you have SUBARU SELECT MONITOR?	Go to step 5.	Go to step 2.
2	CHECK G SENSOR. 1) Turn ignition switch to OFF. 2) Remove G sensor from vehicle. 3) Connect connector to G sensor. 4) Turn ignition switch to ON. 5) Measure voltage between G sensor connector terminals. Connector & terminal: (R70) No. 2 (+) — No. 3 (-)	Is the voltage 2.3 ± 0.2 V when G sensor is horizontal?	Go to step 3.	Replace G sensor.
3	CHECK G SENSOR. Measure voltage between G sensor connector terminals. Connector & terminal: (R70) No. 2 (+) — No. 3 (-)	Is the voltage 3.9 ± 0.2 V when G sensor is inclined forwards to 90° ?	Go to step 4.	Replace G sensor.
4	CHECK G SENSOR. Measure voltage between G sensor connector terminals. Connector & terminal: (R70) No. 2 (+) — No. 3 (-)	Is the voltage 0.7 ± 0.2 V when G sensor is inclined backwards to 90° ?	G sensor is normal.	Replace G sensor.
5	CHECK G SENSOR. 1) Turn ignition switch to OFF. 2) Connect select monitor connector to data link connector. 3) Turn select monitor into {BRAKE CONTROL} mode. 4) Set the display in the {Current Data Display & Save} mode. 5) Read the G sensor output voltage.	Is the indicated reading 2.3 ± 0.2 V when the vehicle is in horizontal position?	Go to step 6.	Replace G sensor.
6	CHECK G SENSOR. 1) Remove console box. 2) Remove G sensor from vehicle. (Do not disconnect connector.) 3) Read the select monitor display.	Is the indicated reading 3.9 ± 0.2 V when G sensor is inclined forwards to 90° ?	Go to step 7.	Replace G sensor.
7	CHECK G SENSOR. Read the select monitor display.	Is the indicated reading 0.7 ± 0.2 V when G sensor is inclined backwards to 90° ?	G sensor is normal.	Replace G sensor.

G SENSOR

ABS

MEMO: