


13. Front Accessory Power Supply Socket

A: WIRING DIAGRAM

Refer to "Front Accessory Power Supply Socket System" in the wiring diagram. <Ref. to WI-121, WIRING DIAGRAM, Front Accessory Power Supply Socket System.>

B: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower. <Ref. to EI-54, INSTRUMENT PANEL LOWER, REMOVAL, Center Console.>
- 3) Disconnect the harness connectors and remove the front accessory power supply socket.

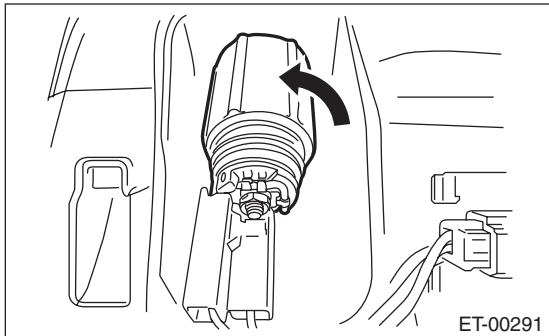

C: INSTALLATION

Install each part in the reverse order of removal.