


4. Steering Column


A: REMOVAL

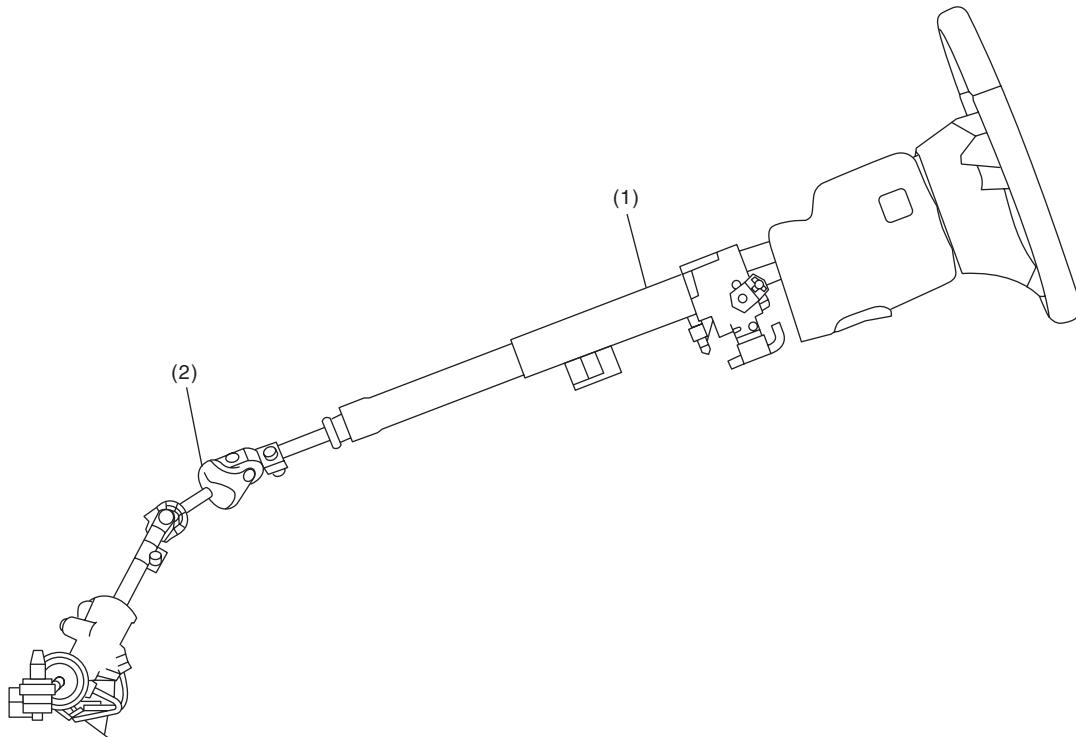

PS-00876

(1) Tilt and telescopic steering column (2) Universal joint

- 1) Adjust the tilt position of the steering column to the highest position and lock the tilt lever.
- 2) Remove the steering wheel. <Ref. to PS-13, REMOVAL, Steering Wheel.>
- 3) Remove the universal joint. <Ref. to PS-14, REMOVAL, Universal Joint.>
- 4) Remove the instrument panel lower cover under.
- 5) Remove the instrument panel lower cover upper.
- 6) Remove the one screw which secures the column cover lower, and then remove the column cover lower.
- 7) Remove all connectors from the steering column.
- 8) Remove the two bolts under instrument panel securing the steering column.

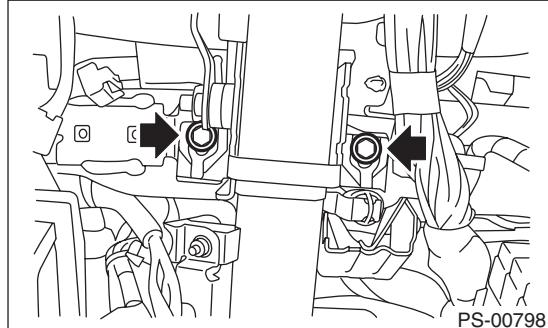

PS-00798


9) Pull out the steering shaft assembly from the hole on toe board.

CAUTION:

- Always remove the universal joint before removing the steering column installation bolt to avoid damage to the universal joint.
- Be sure to remove the universal joint before removing the parts, if the relative position between steering shaft and gearbox changes when removing steering shaft assembly or when lowering it and gearbox for servicing other parts.
- Do not loosen the tilt lever when the steering column is not secured to the vehicle.

B: INSTALLATION

1) Install the grommet to the toe board.

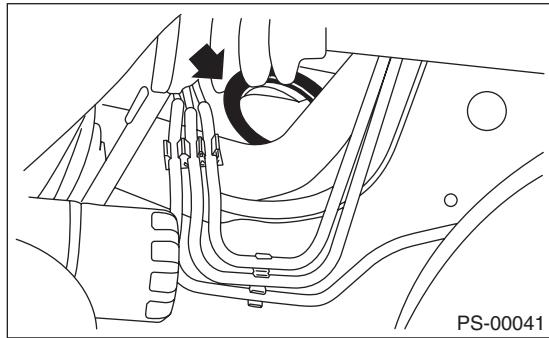

2) Insert the end of the steering shaft into the toe board grommet.

3) With the tilt lever secured, tighten the steering shaft mounting bolts under instrument panel.

Tightening torque:

20 N·m (2.0 kgf-m, 14.8 ft-lb)

4) Connect all the connectors under the instrument panel.

5) Connect the airbag system connector at the harness spool.

NOTE:

Make sure to apply double lock.

6) Install the instrument panel lower cover with tilt lever held in the lowered position.

7) Install the universal joint. <Ref. to PS-14, INSTALLATION, Universal Joint.>

8) Align the center position of the roll connector. <Ref. to AB-27, ADJUSTMENT, Roll Connector.>

9) Install the steering wheel. <Ref. to PS-13, INSTALLATION, Steering Wheel.>

CAUTION:

Insert the roll connector guide pin into the guide hole on lower end of steering wheel surface to prevent damage.

C: DISASSEMBLY

Remove the three screws securing the upper steering column covers, and the two screws securing the combination switch, and then remove related parts.

D: ASSEMBLY

Insert the combination switch to the upper column shaft, and install the upper column cover. Then route the ignition key harness and combination switch harness between the column cover mounting bosses.

CAUTION:

Do not overtorque the screw.

Tightening torque:

1.2 N·m (0.12 kgf-m, 0.9 ft-lb)

E: INSPECTION


1. BASIC INSPECTION

Measure the overall length of steering column. If not within specification, replace it.

Standard: Overall length L

Tilt and telescopic column (measure while minimized)

818.6^{+1.5}_{-1.5} mm (32.23^{+0.059}_{-0.059} in)

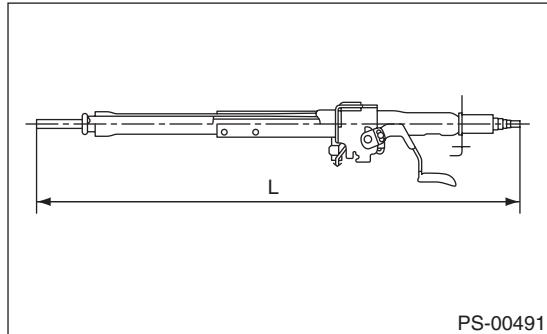

2. INSPECTION OF AIRBAG SYSTEM

Refer to "Airbag System" for airbag inspection procedure. <Ref. to AB-15, INSPECTION, Driver's Airbag Module.>