
GROUP 31

WHEEL AND TYRE

CONTENTS

GENERAL INFORMATION	31-2	TYRE INFLATION PRESSURE CHECK...	31-8
TYRE WEAR CHECK		TYRE WEAR CHECK	31-8
SERVICE SPECIFICATIONS.....	31-2	WHEEL RUNOUT CHECK	31-8
TROUBLESHOOTING	31-3	WHEEL AND TYRE	31-8
DIAGNOSIS	31-3	INSTALLATION SERVICE POINT	31-8
WHEEL BALANCE ACCURACY	31-4	SPARE TYRE CARRIER	31-9
ON-VEHICLE SERVICE.....	31-8	REMOVAL AND INSTALLATION	31-9

GENERAL INFORMATION

The wheels and tyres of the following specifications have been established.

SPECIFICATIONS

M1311000100167

ROAD WHEEL AND TYRE

Item	Specification	
Wheel	Type	Steel type or Aluminium type*
	Size	16 × 6 1/2JJ or 17 × 7JJ*
	Amount of wheel offset mm	46
	PCD mm	114.3
Tyre	Size	215/60R16 95H or 215/55 R17 94V*

SPARE WHEEL AND TYRE

Item	Specification	
Wheel	Type	Steel type
	Size	16 × 4T
	Amount of wheel offset mm	40
	PCD mm	114.3
Tyre	Size	T135/90D16 102M

NOTE:

- The * mark indicates optional item.
- PCD (Pitch Circle Diameter) indicates the pitch circle diameter of the wheel installation holes.

SERVICE SPECIFICATIONS

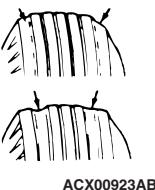
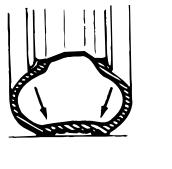
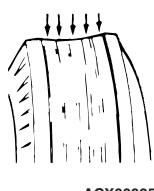
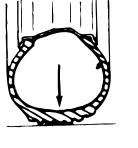
M1311000300484

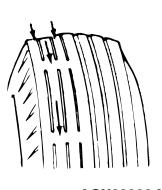
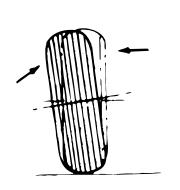
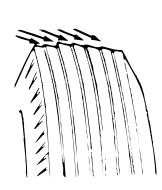
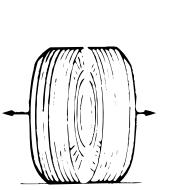
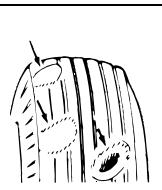
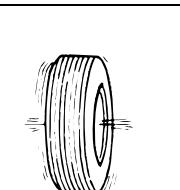
ITEM	LIMIT	
Tread depth of tyre mm	Minimum 1.6	
Wheel runout <Aluminium wheel>	Radial runout mm	1.0 or less
	Lateral runout mm	1.0 or less
Wheel runout <Steel wheel>	Radial runout mm	1.2 or less
	Lateral runout mm	1.2 or less

TROUBLESHOOTING

DIAGNOSIS

M1311000700534

Symptom		Probable cause		Remedy	Reference page
Rapid wear at shoulders		Under-inflation or lack of rotation		Adjust the tyre pressure.	For tyre inflation pressure, refer to the label on the driver's side centre pillar.
Rapid wear at centre		Over-inflation or lack of rotation			
Cracked treads		Under-inflation		Adjust the tyre pressure.	For tyre inflation pressure, refer to the label on the driver's side centre pillar.

Symptom		Probable cause		Remedy	Reference page
Wear on one side		Excessive camber		Check the camber.	<Front> Refer to GROUP 33, On-vehicle service – Front wheel alignment check and adjustment P.33-4 . <Rear>
Feathered edge		Incorrect toe-in		Adjust the toe-in.	Refer to GROUP 34, On-vehicle service – Rear wheel alignment check and adjustment P.34-3 .
Bald spots		Unbalanced wheel		Balance the wheels.	P.31-4
Scalloped wear		Lack of rotation of tyres or worn or out-of-alignment suspension		Rotate the tyres, and check the front or rear suspension alignments.	<Front> Refer to GROUP 33, On-vehicle service – Front wheel alignment check and adjustment P.33-4 . <Rear> Refer to GROUP 34, On-vehicle service – Rear wheel alignment check and adjustment P.34-3 .

WHEEL BALANCE ACCURACY

PURPOSE

This section contains tips and procedures for achieving accurate wheel balance. Steering wheel vibration and/or body shake can result if any of these procedures are not carefully observed.

1. Wheels and tyres must be properly mounted on a balancer in order to achieve correct balance. Centring the wheel on the shaft of the balancer is essential for proper mounting.

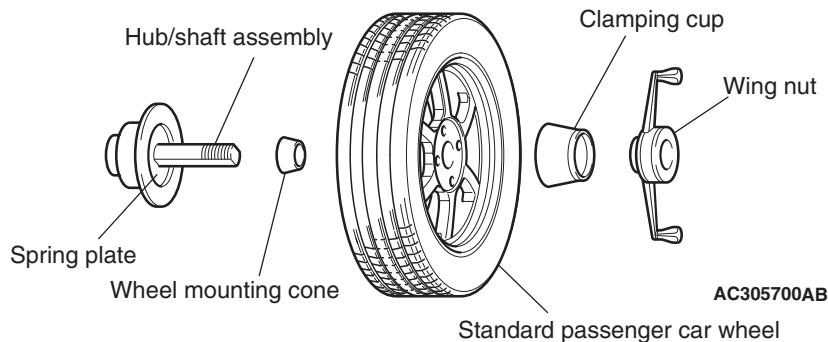
M1311001700377

2. Off-the-car wheel balancers must be calibrated periodically to ensure good balancing results. An inaccurately calibrated balancer could cause unnecessary replacement of tyres, shocks, suspension components, or steering components. Check your balancer's calibration approximately every 100 balances. Your wheel balancer's instruction manual should include calibration procedures. If the calibration procedures specifically for your balancer are missing, use the generic steps in this section for zero calibration, static balance, and dynamic balance checks. The wheel balancer calibration checks are also described in the flowchart. (Refer to).

PROCEDURE <BALANCING TIPS>

1. Confirm that the balancer's cone and the wheel mounting cone are undamaged and free of dirt and rust.
2. On this vehicle, the wheel's centre hole on the hub side has a chamfered edge. Use a back-mounting cone on your wheel balancer to centre the wheel on the balancer shaft.

3. Install a wheel mounting cone. The appropriate size cone for this vehicle is 67.0 mm.
4. Before balancing the wheel, remove any wheel weights from both sides. Also check both sides for any damage.
5. When installing wheel weights, hammer them at a straight (not diagonal) angle.

**<CONFIRMING PROPER BALANCE>**

1. After balancing the wheel, loosen the wing nut and turn the wheel 180° against the balancer's hub. Then re-tighten the wing nut and check the balance again. Repeat wheel balance if necessary.
2. Turn the wheel again 180° against the balancer's hub. If the wheel becomes out-of-balance each time it is turned against the balancer's hub, the wheel balancer may require calibration.

- If the imbalance is 5g or less, the wheel may not be centred on the balancer, or the balancing cones, the cup, and/or wing nut are damaged, dirty, or inappropriate for the wheel. You may need to refer to the balancer manufacturer's instructions to verify the correct attachments. After making the necessary corrections, recheck the wheel balance. If OK, then go to Step 4.
- If the imbalance is more than 5g, the balancer requires calibration. Contact the balancer manufacturer for calibration by their repair representative.

<WHEEL BALANCER CALIBRATION CHECKS>

1. Mount an undamaged original-equipment alloy rim and tyre assembly (wheel) onto your off-the-car wheel balancer. Balance the wheel.
2. <<Zero Calibration Check>>

Loosen the balancer wing nut, rotate the wheel a half-turn (180°), and retighten the nut. Recheck the balance.

- If the imbalance is 5g or less, the zero calibration is OK. Rebalance the wheel, then go to Step 4 to check static balance.
- If the imbalance is more than 5g, go to Step 3.

3. Loosen the balancer wing nut, rotate the wheel 1/4 turn (90°), and retighten the nut. Recheck the wheel balance.

4. <<Static Balance Check>>

Attach a 5g weight to the outer rim. Recheck the balancer. The balancer should detect 5 ± 2 g of imbalance 170 to 190° away from the 5g weight.

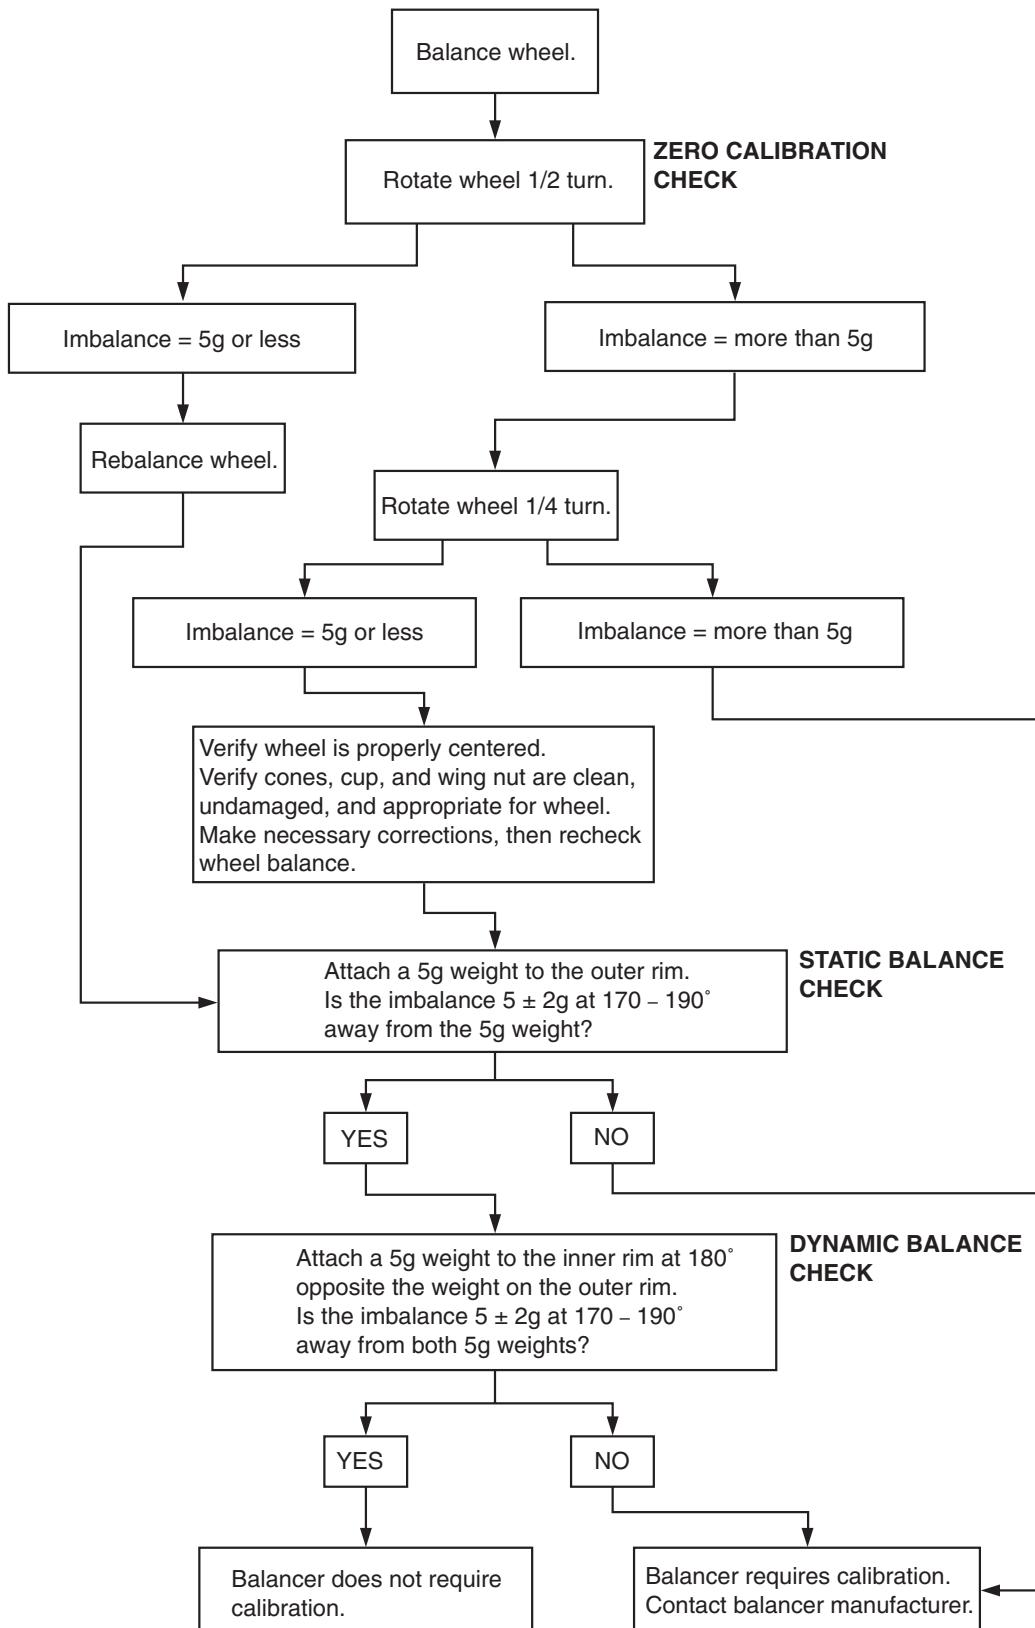
- If the imbalance is within specification, the static balance calibration is correct. Go to Step 5 to check the dynamic balance.
- If the imbalance is out of specification, the balancer requires calibration. Contact the balancer manufacturer for calibration by their repair representative.

5. <<Dynamic Balance Check>>

Attach a 5g weight to the inner rim at 180° opposite the 5g weight that was added in Step 4. Recheck the balance. The balancer should detect 5 ± 2 g of imbalance 170 to 190° away from both the inner and outer 5g weights.

- If the imbalance is within specification, the dynamic balance calibration is correct. The balancer calibration checks are complete.
- If the imbalance is out of specification, the balancer requires calibration. Contact the balancer manufacturer for calibration by their repair representative.

**WHEEL BALANCER CALIBRATION
CHECKING FLOW CHART**



ON-VEHICLE SERVICE

TYRE INFLATION PRESSURE CHECK

M1311000900420

NOTE: For information on tyre inflation pressure, refer to the label attached to the centre pillar on the driver's side.

TYRE WEAR CHECK

M1311001000453

Measure the tread depth of the tyres.

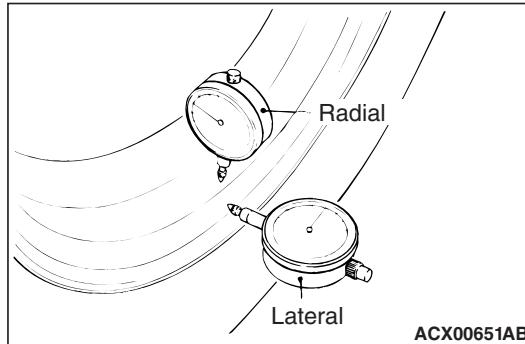
Minimum limit: 1.6 mm

If the remaining tread depth is less than the minimum limit, replace the tyre.

NOTE: When the tread depth of the tyres is reduced to 1.6 mm or less, wear indicators will appear.

WHEEL RUNOUT CHECK

M1311001100472



Jack up the vehicle so that the wheels are clear of the floor. While slowly turning the wheel, measure wheel runout with a dial indicator.

LIMIT:

Item	Steel wheel	Aluminium wheel
Radial runout mm	1.2	1.0
Lateral runout mm	1.2	1.0

If wheel runout exceeds the limit, replace the wheel.

WHEEL AND TYRE

INSTALLATION SERVICE POINT

M1311001300380

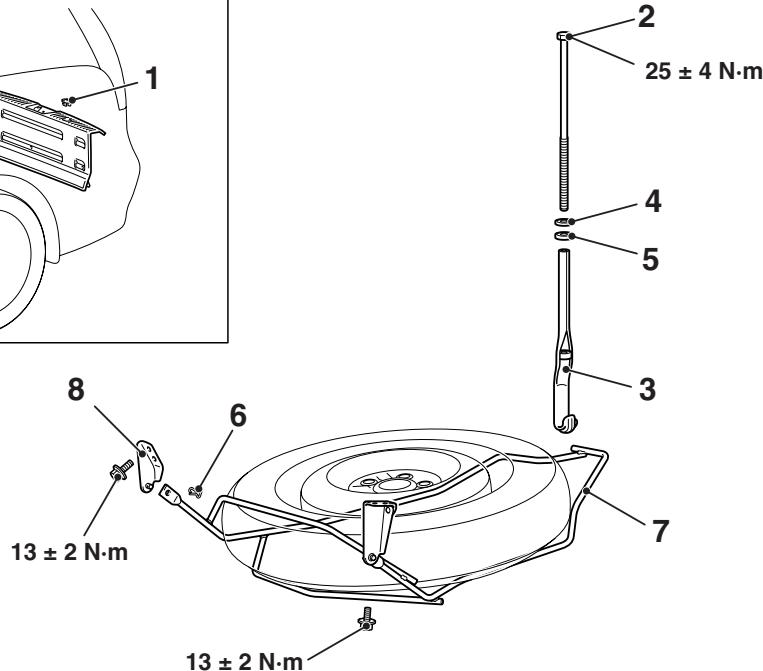
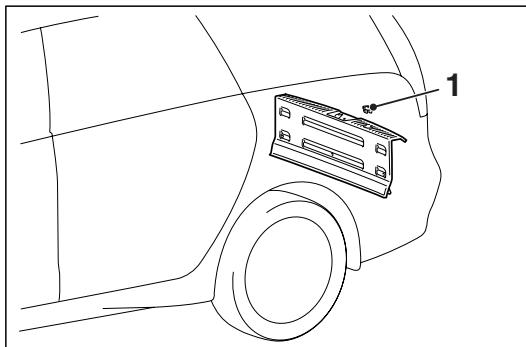
Tighten the wheel nuts to the specified torque.

Tightening torque: $98 \pm 10 \text{ N}\cdot\text{m}$

SPARE TYRE CARRIER

REMOVAL AND INSTALLATION

M1311006700037



AC300965AC

Removal steps

1. Cover (Rear end trim)
2. Spare tyre carrier bolt
3. Spare tyre carrier holder
4. Spare tyre carrier washer

Removal steps (Continued)

5. Spare tyre carrier washer (made of nylon)
6. Spare tyre carrier pin
7. Spare tyre carrier
8. Spare tyre carrier hanger