

SECTION **INL**

INTERIOR LIGHTING SYSTEM

CONTENTS

BASIC INSPECTION	3	Diagnosis Procedure	17
DIAGNOSIS AND REPAIR WORKFLOW	3	INTERIOR ROOM LAMP CONTROL CIRCUIT	
Work Flow	3	...19	
FUNCTION DIAGNOSIS	6	Description	19
INTERIOR ROOM LAMP CONTROL SYSTEM	6	Component Function Check	19
System Diagram	6	Diagnosis Procedure	19
System Description	6	STEP LAMP CIRCUIT	22
Component Parts Location	8	Description	22
Component Description	9	Component Function Check	22
ILLUMINATION CONTROL SYSTEM	10	Diagnosis Procedure	22
System Diagram	10	CARGO LAMP CONTROL CIRCUIT	24
System Description	10	Description	24
Component Parts Location	10	Diagnosis Procedure	24
Component Description	11	Component Inspection	26
DIAGNOSIS SYSTEM (BCM)	12	IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT	28
COMMON ITEM	12	Description	28
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	12	Component Function Check	28
INT LAMP	12	Diagnosis Procedure	28
INT LAMP : CONSULT-III Function (BCM - INT LAMP)	13	INTERIOR ROOM LAMP CONTROL SYSTEM	30
BATTERY SAVER	14	Wiring Diagram	30
BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)	14	ILLUMINATION	44
COMPONENT DIAGNOSIS	16	Wiring Diagram	44
POWER SUPPLY AND GROUND CIRCUIT	16	ECU DIAGNOSIS	59
Diagnosis Procedure	16	BCM (BODY CONTROL MODULE)	59
BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT	17	Reference Value	59
Description	17	Terminal Layout	61
Component Function Check	17	Physical Values	61
		Wiring Diagram	67
		Fail Safe	71
		DTC Inspection Priority Chart	72
		DTC Index	72

A
B
C
D
EF
G
H
I
J
K

INL

M
N
O
P

SYMPTOM DIAGNOSIS	74	ON-VEHICLE REPAIR	76
INTERIOR LIGHTING SYSTEM SYMPTOMS ...	74	INTERIOR ROOM LAMP	76
Symptom Table	74	Removal and Installation	76
PRECAUTION	75	ILLUMINATION	80
PRECAUTIONS	75	Removal and Installation	80
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	75	SERVICE DATA AND SPECIFICATIONS (SDS)	83
General precautions for service operations	75	BULB SPECIFICATIONS	83
		Interior Lamp/Illumination	83

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005387193

OVERALL SEQUENCE

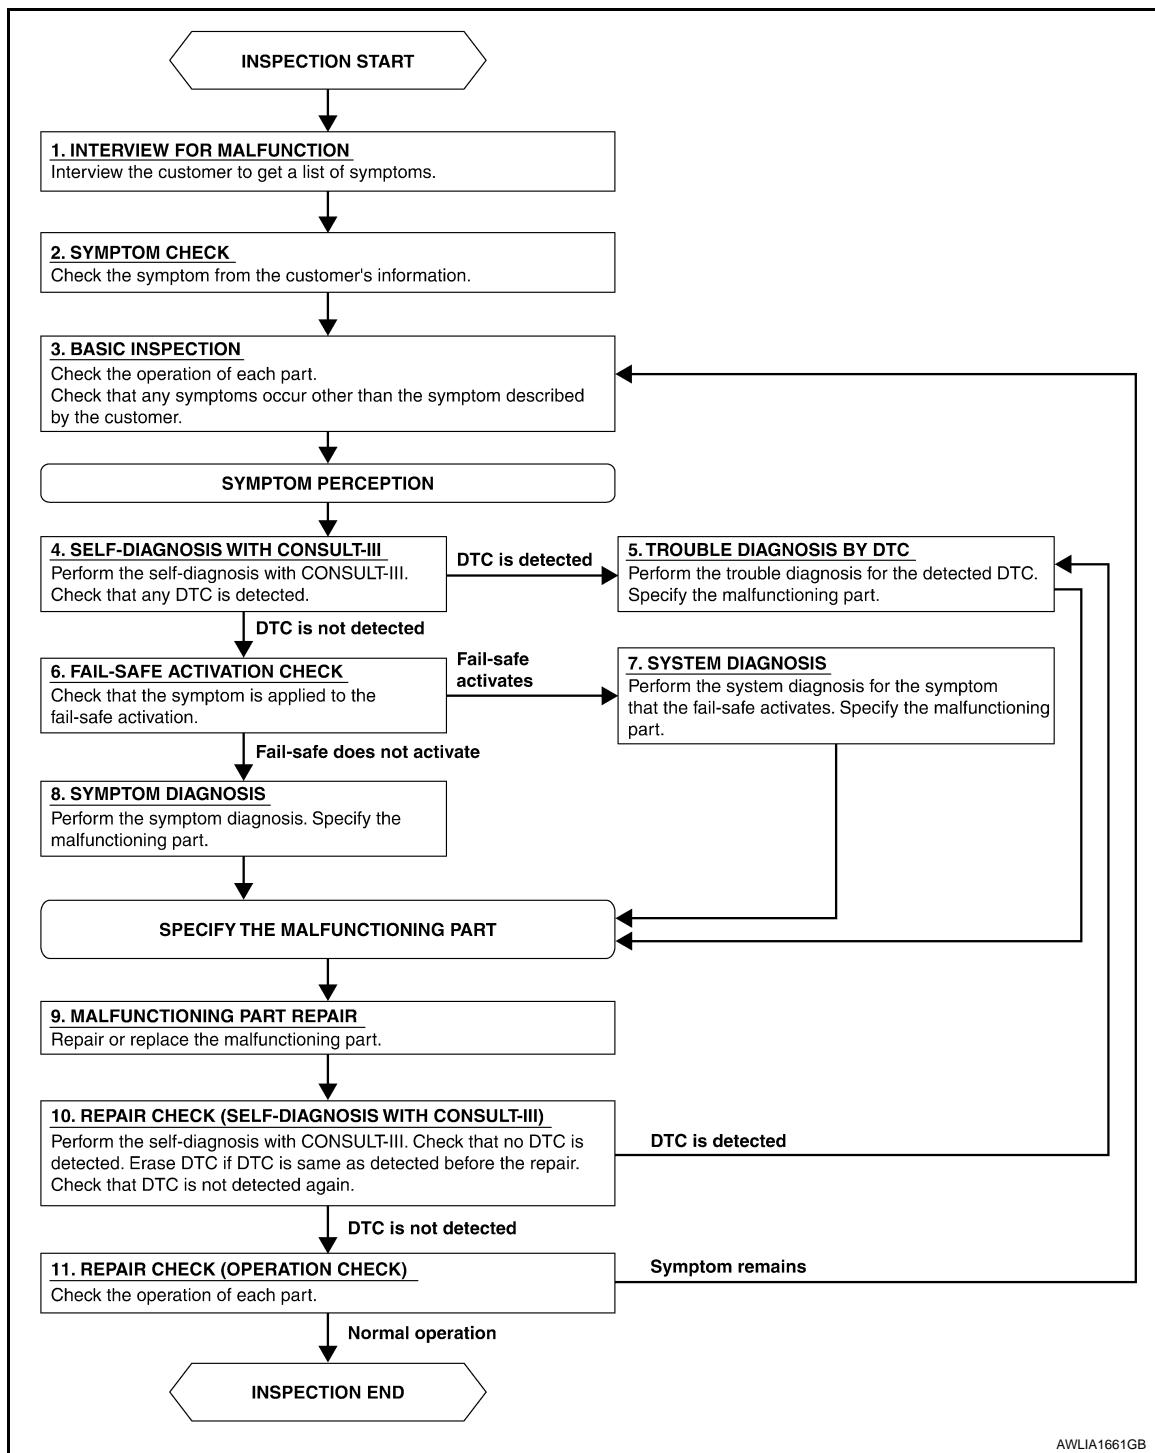
 A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Find out what the customer's concerns are.

>> GO TO 2

2. SYMPTOM CHECK

Verify the symptom from the customer's information.

>> GO TO 3

3. BASIC INSPECTION

Check the operation of each part. Check that any concerns occur other than those mentioned in the customer interview.

>> GO TO 4

4. SELF-DIAGNOSIS WITH CONSULT-III

Perform the self-diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5

NO >> GO TO 6

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9

6. FAIL-SAFE ACTIVATION CHECK

Determine if the customer's concern is related to fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7

NO >> GO TO 8

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system in which the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 10

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

Perform the self-diagnosis with CONSULT-III. Verified that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NO >> GO TO 11

11. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> Inspection End

NO >> GO TO 3

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

INTERIOR ROOM LAMP CONTROL SYSTEM


< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

INTERIOR ROOM LAMP CONTROL SYSTEM

System Diagram

INFOID:0000000005387194

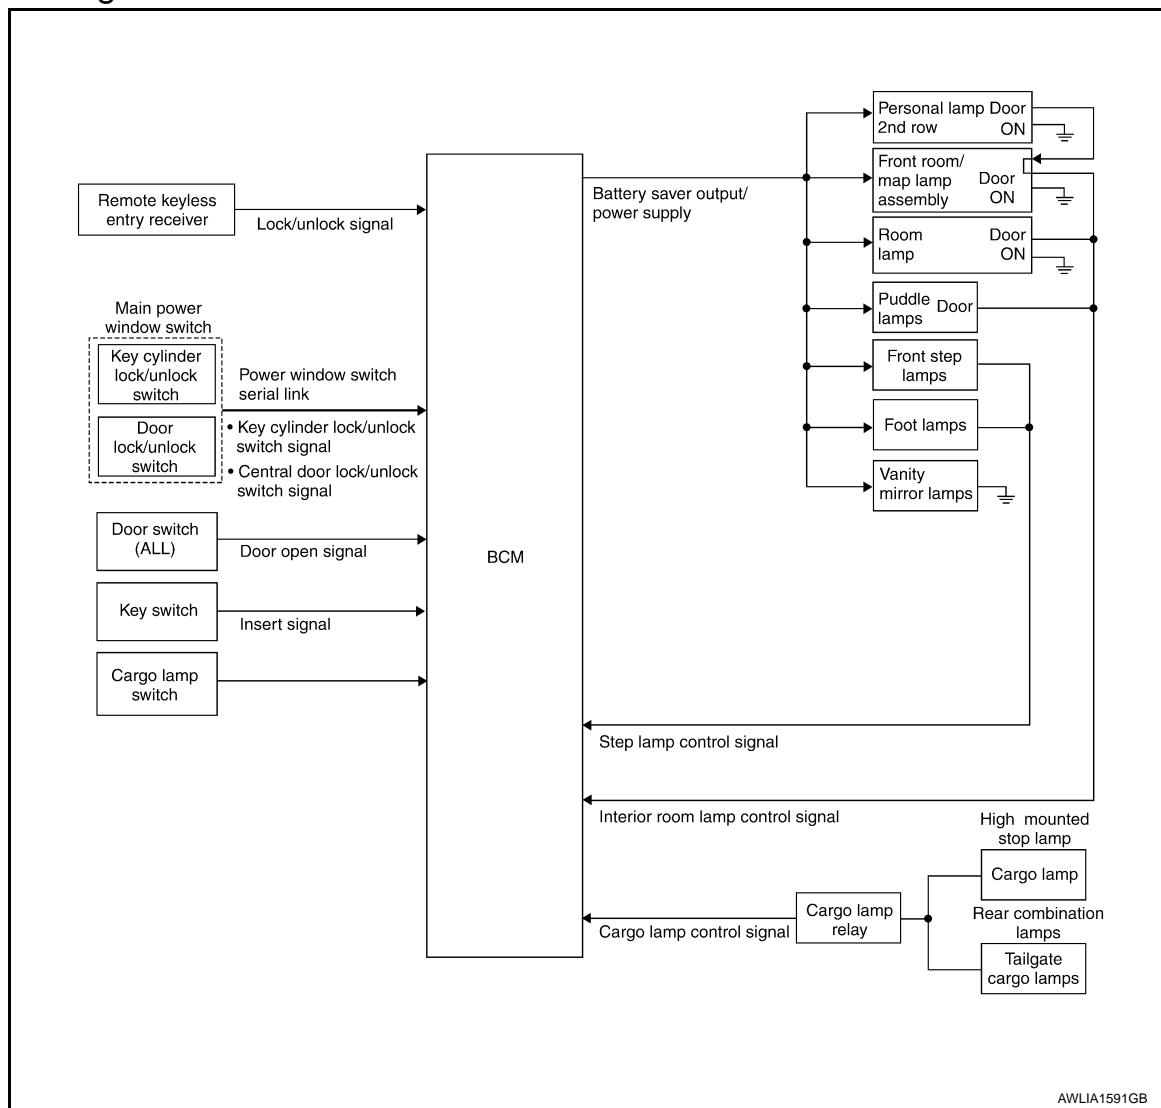

System Description

INFOID:0000000005387195

OUTLINE

- Interior room lamps* are controlled by the interior room lamp timer control function of the BCM.
*Room lamp (if equipped), Front room/map lamp assembly (if equipped), personal lamp 2nd row (if equipped) and puddle lamps (if equipped).
- Cargo lamp and tailgate cargo lamps (if equipped) are controlled by the cargo lamp control function of the BCM.
- Step lamps* are controlled by the step lamp control function of the BCM.
*Front step lamps and foot lamps (if equipped).

The timer control functions of the BCM activate based on inputs from the remote keyless entry receiver, the door switches, the key switch (column shift), the key switch and key lock solenoid (key switch) (floor shift) or the cargo lamp switch (if equipped).

ROOM LAMP TIMER OPERATION

When the interior room lamp switch is in the DOOR position and when all conditions below are met, the BCM begins timer control (maximum 30 seconds) for interior room lamp ON/OFF.

INTERIOR ROOM LAMP CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

- When the front door LH is unlocked [with the main power window and door lock/unlock switch, front door lock assembly (key cylinder switch)].
- When the front door LH is unlocked with the remote keyless entry system (if equipped).
- When a door opens → closes and the key is not inserted in the ignition slot.

Timer control is cancelled under the following conditions.

- When the front door LH is locked [with the main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch)]
- When the front door LH is locked with the remote keyless entry system (if equipped).
- A door is opened (door switch turns ON).
- The ignition switch is turned ON.

Interior lamp operational settings can be changed with the function setting of CONSULT-III.

INTERIOR LAMP BATTERY SAVER CONTROL

If an interior lamp is left ON and does not turn OFF even when the doors are closed, the BCM turns off power to the interior lamps automatically to save the battery 30 minutes after the ignition switch is turned OFF.

The BCM controls power and ground to all interior lamps.

After the battery saver system turns the lamps OFF, the lamps will illuminate again when

- a signal is received from the keyless entry system
- a door is opened or closed
- the key is removed from or inserted into the key slot.

The Interior lamp battery saver control time period can be changed with the function setting of CONSULT-III.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O


P

INTERIOR ROOM LAMP CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000005387196

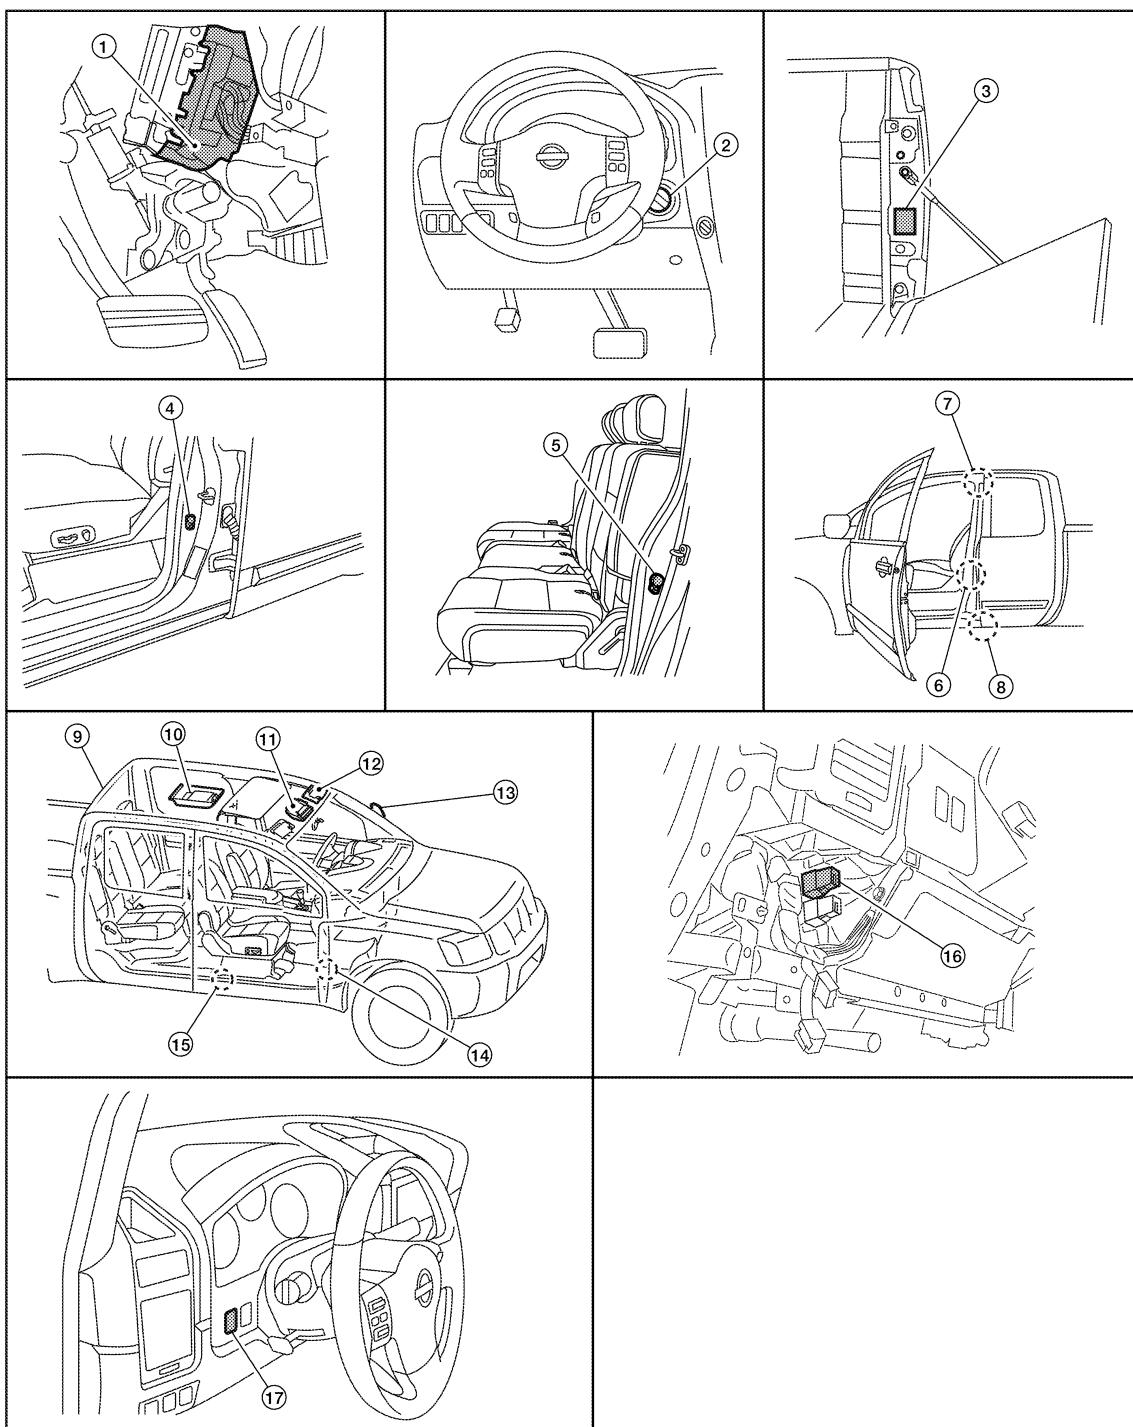

AWLIA1592ZZ

1. BCM M18, M19, M20 (view with instrument panel removed)
2. Ignition keyhole illumination M152
Key switch M80 (column shift)
Key switch and key lock solenoid (key switch) M27 (floor shift)
3. Tailgate cargo lamp LH C13
Tailgate cargo lamp RH C14
4. Front door switch LH B8 (crew cab)
Front door switch RH B108 (crew cab)
5. Rear door switch LH B18 (crew cab)
Rear door switch RH B116 (crew cab)
6. Front door switch LH B8 (king cab)
Front door switch RH B108 (king cab)
7. Rear door switch upper LH B73 (king cab)
Rear door switch upper RH B156 (king cab)
8. Rear door switch lower LH B74 (king cab)
Rear door switch lower RH B157 (king cab)
9. Cargo lamp B158

INTERIOR ROOM LAMP CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

10. Room lamp (without front roof console) R10	11. Front room/map lamp assembly (with front roof console) R102	12. Vanity lamp LH R3 Vanity lamp RH R8
Personal lamp 2nd row (crew cab with rear overhead console) R203		
13. Puddle lamp LH D4 (Door mirror) Puddle lamp RH D107 (Door mirror)	14. Foot lamp LH M99 Foot lamp RH M100	15. Front step lamp LH D11 Front step lamp LH D109
16. Cargo lamp relay M150 (view with lower instrument panel LH removed)	17. Cargo lamp switch (if equipped) M149	

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

INFOID:000000005387197

Component Description

Part name	Description
BCM	Provides power and ground and controls timer functions for the interior room lamps, foot lamps, puddle lamps, step lamps and cargo lamp.
Key switch (column shift)	Provides key in ignition status to the BCM.
Key switch and key lock solenoid (key switch) (floor shift)	
Door switches	Provides door OPEN/CLOSED status to the BCM.
Cargo lamp switch (if equipped)	Provides cargo lamp ON/OFF request to the BCM.
Power window and door lock/unlock switch RH	Provides door lock/unlock position switch RH status to the BCM.
Main power window and door lock/unlock switch [front door lock assembly LH (key cylinder switch)].	Provides door lock/unlock position switch LH status to the BCM.


ILLUMINATION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

ILLUMINATION CONTROL SYSTEM

System Diagram

INFOID:0000000005387198

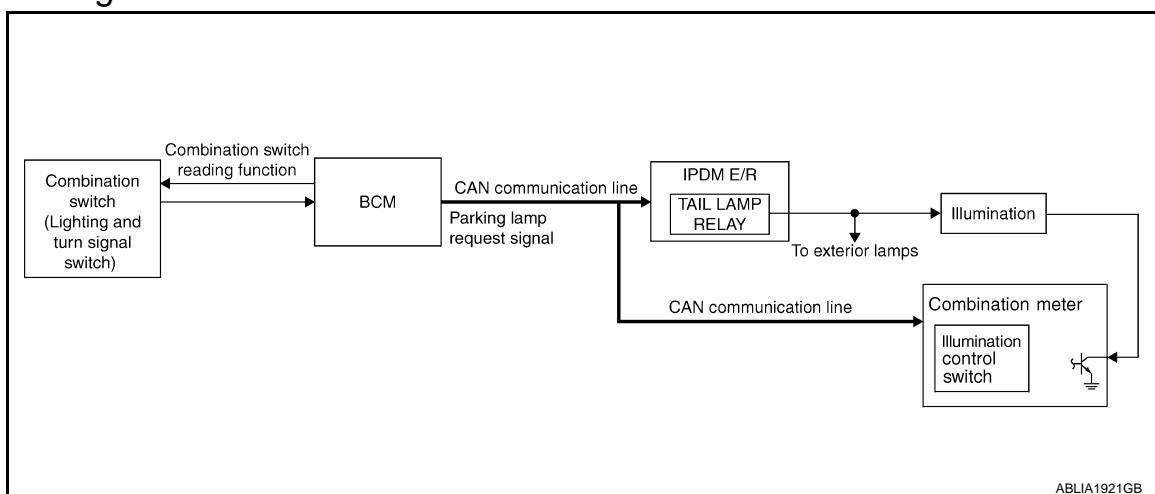

System Description

INFOID:0000000005683102


The illumination lamps operation is dependent upon the position of the combination switch (lighting and turn signal switch). When the combination switch (lighting and turn signal switch) is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input requesting the parking lamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) via the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. When energized, this relay directs power to the parking and illumination lamps, which then illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting and turn signal switch) is in the 1ST or 2ND position and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated. Under this condition, the illumination lamps remain illuminated for 30 minutes unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the illumination lamps are turned off after a 30 second delay. When the combination switch (lighting and turn signal switch) is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps have been turned off by the battery saver control, the illumination lamps illuminate again.

Component Parts Location

INFOID:0000000005387200

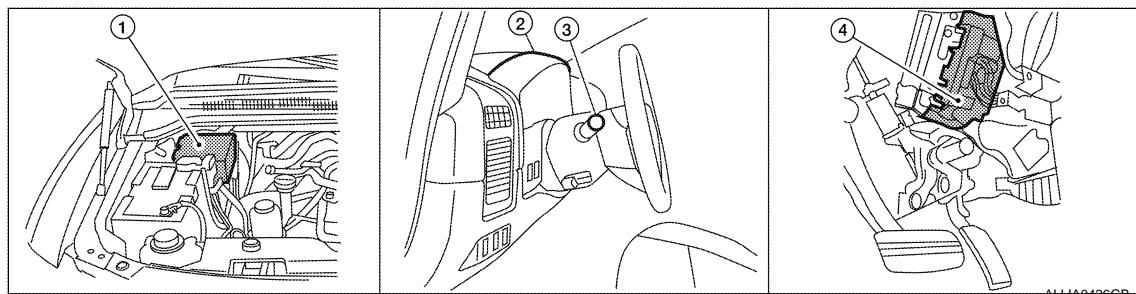

1. IPDM E/R E122, E123, E124
2. Combination meter (illumination control switch) M24, M25
3. Combination switch (lighting and turn signal switch) M28
4. BCM M18, M20 (view with instrument panel removed)

ILLUMINATION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

Component Description

INFOID:000000005387201

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

Part name	Description
BCM	The BCM monitors the combination switch (lighting and turn signal switch) position with the combination switch reading function. The BCM requests, via CAN communication, that the IPDM E/R activate the tail lamp relay.
IPDM E/R	The IPDM E/R activates the tail lamp relay based on inputs received from the BCM via the CAN communication network.
Combination meter (illumination control switch)	The illumination control switch is a part of the combination meter. The combination meter controls illumination intensity by varying ground to the illumination lamps based on the illumination control switch position.
Combination switch (lighting and turn signal switch)	The combination switch (lighting and turn signal switch) provides input to the BCM about the lighting switch position.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005683048

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF DIAGNOSTIC RESULT	Displays the diagnosis results judged by BCM. Refer to BCS-49, "DTC Index" .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none">Enables to read and save the vehicle specification.Enables to write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITIONER		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	THEFT ALM	×	×	×

INT LAMP


DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

INT LAMP : CONSULT-III Function (BCM - INT LAMP)

INFOID:000000005683049

WORK SUPPORT

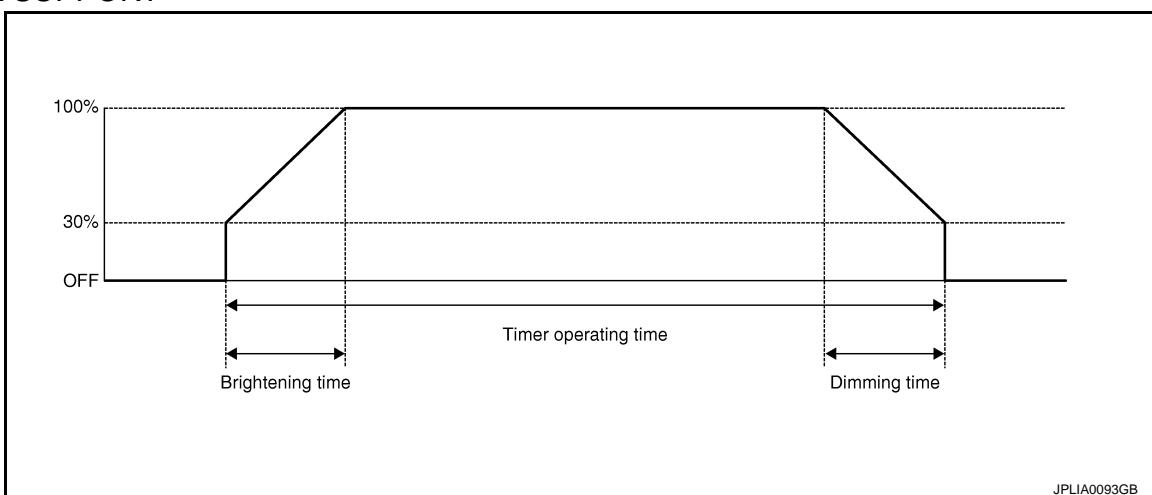

Work Item	Setting item	Setting
SET I/L D-UNLCK INTCON	ON*	With the interior room lamp timer function
	OFF	Without the interior room lamp timer function
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.
	MODE 2*	1 sec.
	MODE 3	2 sec.
	MODE 4	3 sec.
	MODE 5	4 sec.
	MODE 6	5 sec.
	MODE 7	0 sec.
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.
	MODE 2	1 sec.
	MODE 3	2 sec.
	MODE 4*	3 sec.
	MODE 5	4 sec.
	MODE 6	5 sec.
	MODE 7	0 sec.

* : Initial setting

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Ignition switch (ON) status judges from IGN signal (ignition power supply)
KEY ON SW [ON/OFF]	The switch status input from key switch
DOOR SW-DR [ON/OFF]	The switch status input from front door switch LH
DOOR SW-AS [ON/OFF]	The switch status input from front door switch RH
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW- RL [ON/OFF]	The switch status input from rear door switch LH
KEY CYL LK-SW [ON/OFF]	Lock switch status input from door lock and unlock switch
KEY CYL UN-SW [ON/OFF]	Lock switch status input from door lock and unlock switch
CDL LOCK SW [ON/OFF]	Lock switch status input from door lock and unlock switch

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor Item [Unit]	Description
CDL UNLOCK SW [ON/OFF]	Unlock switch status input from door lock and unlock switch
KEYLESS LOCK [ON/OFF]	Lock signal status received from remote keyless entry receiver (integrated in the BCM)
KEYLESS UNLOCK [ON/OFF]	Unlock signal status received from remote keyless entry receiver (integrated in the BCM)

ACTIVE TEST

Test Item	Operation	Description
INT LAMP	ON	Outputs the interior room lamp control signal to turn the interior room lamps ON.
	OFF	Stops the interior room lamp control signal to turn the interior room lamps OFF.
IGN ILLUM	ON	Outputs the ignition keyhole illumination control signal to turn the ignition keyhole illumination lamp ON.
	OFF	Stops the ignition keyhole illumination control signal to turn the ignition keyhole illumination lamp OFF.
STEP LAMP TEST	ON	Outputs the step lamp control signal to turn the step lamps ON.
	OFF	Stops the step lamp control signal to turn the step lamps OFF.
LUGGAGE LAMP TEST	ON	Outputs the cargo lamp control signal to turn the cargo lamp ON.
	OFF	Stops the cargo lamp control signal to turn the cargo lamp OFF.

BATTERY SAVER

BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)

INFOID:0000000005683050

WORK SUPPORT

Work Item	Setting Item	Setting	
ROOM LAMP TIMER SET	MODE 1*	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	
	MODE 3	10 min.	

*: Initial setting

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Ignition switch (ON) status judges from IGN signal (ignition power supply)
KEY ON SW [ON/OFF]	The switch status input from key switch
DOOR SW-DR [ON/OFF]	The switch status input from front door switch (driver side)
DOOR SW-AS [ON/OFF]	The switch status input from front door switch (passenger side)
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW- RL [ON/OFF]	The switch status input from rear door switch LH
KEY CYL LK SW [ON/OFF]	Lock switch status input from door key cylinder switch
KEY CYL UN SW [ON/OFF]	Unlock switch status input from door key cylinder switch
CDL LOCK SW [ON/OFF]	Lock switch status input from door lock and unlock switch
CDL UNLOCK SW [ON/OFF]	Unlock switch status input from door lock and unlock switch
KEYLESS LOCK [ON/OFF]	Lock signal status received from remote keyless entry receiver (integrated in the BCM)
KEYLESS UNLOCK [ON/OFF]	Unlock signal status received from remote keyless entry receiver (integrated in the BCM)

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

ACTIVE TEST

Test Item	Operation	Description
BATTERY SAVER	OFF	Cuts the interior room lamp power supply to turn interior room lamps OFF.
	ON	Outputs the interior room lamp power supply to turn interior room lamps ON.*

*: Each lamp switch is in ON position.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000005683051

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	22 (15A)
70		F (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	59 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Ap- prox.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

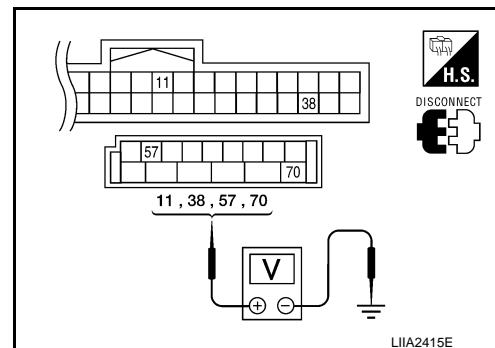

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

YES >> Inspection End.

NO >> Repair or replace harness.

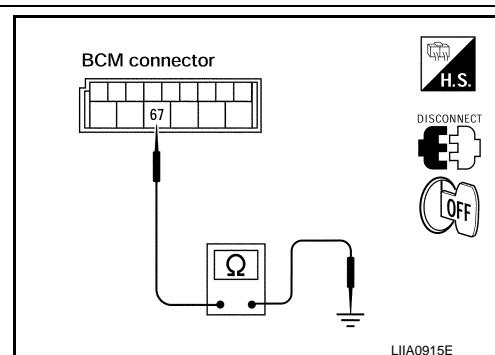

BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT

< COMPONENT DIAGNOSIS >

BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT

Description

INFOID:0000000005387206

Provides the battery saver output/power supply. Cuts the power supply when the interior room lamp battery saver is activating.

Component Function Check

INFOID:0000000005387207

1. CHECK BATTERY SAVER OUTPUT/POWER SUPPLY FUNCTION

CONSULT-III

1. Turn ignition switch ON.
2. Turn interior room lamp ON.
 - Room lamp (if equipped)
 - Front room/map lamp assembly (if equipped)
3. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
4. While operating the test item, check that interior room lamp turns ON/OFF.

OFF : Interior room lamp OFF

ON : Interior room lamp ON

Is the inspection result normal?

YES >> Battery saver output/power supply circuit is normal.

NO >> Refer to [INL-17, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000005387208


Regarding Wiring Diagram information, refer to [INL-30, "Wiring Diagram"](#).

1. CHECK BATTERY SAVER OUTPUT/POWER SUPPLY OUTPUT

CONSULT-III

1. Turn ignition switch ON.
2. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
3. While operating the test item, check voltage between BCM connector M20 terminal 56 and ground.

Connector	Terminal	(-)	Test item	Voltage
			BATTERY SAVER	
M20	56	Ground	OFF	0V
			ON	Battery voltage

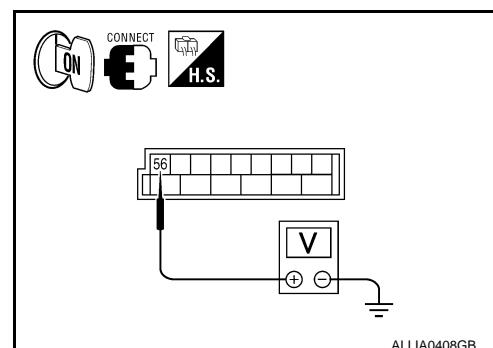

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

2. CHECK BATTERY SAVER OUTPUT/POWER SUPPLY OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the following connectors.
 - BCM M20
 - Front step lamp LH (if equipped)
 - Front step lamp RH (if equipped)
 - Door mirror LH (with puddle lamps)
 - Door mirror RH (with puddle lamps)
 - Foot lamp LH (if equipped)
 - Foot lamp RH (if equipped)

BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT

< COMPONENT DIAGNOSIS >

- Room lamp (if equipped)
- Front room/map lamp assembly (if equipped)
- Vanity lamp LH (if equipped)
- Vanity lamp RH (if equipped)
- Personal lamp 2nd row (if equipped)
- Ignition keyhole illumination

3. Check continuity between BCM connector and each interior room lamp connector.

BCM		Each interior room lamp			Continuity
Connector	Terminal	Connector	Terminal		
M20	56	Front step lamp LH (if equipped)	D11	1	Yes
		Front step lamp RH (if equipped)	D109	1	
		Door mirror LH (with puddle lamps)	D4	12	
		Door mirror RH (with puddle lamps)	D107	12	
		Foot lamp LH (if equipped)	M99	1	
		Foot lamp RH (if equipped)	M100	1	
		Room lamp (if equipped)	R10	2	
		Front room/map lamp assembly (if equipped)	R102	6	
		Vanity lamp LH (if equipped)	R3	1	
		Vanity lamp RH (if equipped)	R8	1	
		Personal lamp 2nd row (if equipped)	R203	3	
		Ignition keyhole illumination	M152	1	

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair the harness or connectors.

3. CHECK BATTERY SAVER OUTPUT/POWER SUPPLY SHORT CIRCUIT


Check continuity between BCM connector M20 terminal 56 and ground.

Connector	Terminal	—	Continuity
M20	56	Ground	No

Is the inspection result normal?

YES >> Check that each interior room lamp has no internal short circuit.

NO >> Repair the harness or connectors.

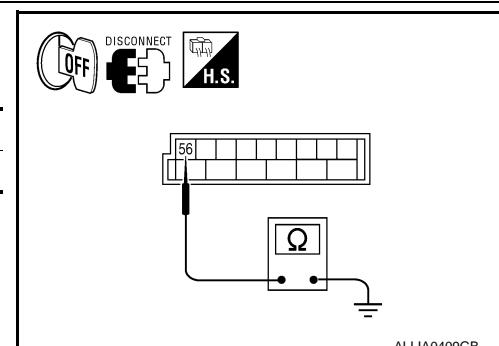

ALLIA0409GB

INTERIOR ROOM LAMP CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

INTERIOR ROOM LAMP CONTROL CIRCUIT

Description

INFOID:0000000005387209

Controls the following interior room lamps (ground side) by pulse width modulated signal

- Puddle lamps (with puddle lamps)
- Room lamp (if equipped)
- Front room/map lamp assembly (if equipped)
- Personal lamp 2nd row (if equipped)

NOTE:

PWM signal control period is approximately 250 Hz (in the gradual brightening/dimming).

Component Function Check

INFOID:0000000005387210

CAUTION:

Before performing the diagnosis, check that the following is normal.

- Battery saver output/power supply
- Room lamp bulb (if equipped)
- Puddle lamp bulbs (if equipped)
- Front room/map lamp assembly bulbs (if equipped)
- Personal lamp 2nd row bulbs (if equipped)

1. CHECK INTERIOR ROOM LAMP CONTROL FUNCTION

① CONSULT-III

1. Switch the room lamp (if equipped), or front room/map lamp assembly (if equipped) switch to DOOR.
2. Turn ignition switch ON.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. While operating the test item, check that each interior room lamp turns ON/OFF (gradual brightening/dimming).

ON : Interior room lamp gradual brightening

OFF : Interior room lamp gradual dimming

Is the inspection result normal?

YES >> Interior room lamp control circuit is normal.

NO >> Refer to [INL-19, "Diagnosis Procedure"](#).

Diagnosis Procedure


INFOID:0000000005387211

Regarding Wiring Diagram information, refer to [INL-30, "Wiring Diagram"](#).

1. CHECK INTERIOR ROOM LAMP CONTROL OUTPUT

① CONSULT-III

1. Switch the room lamp (if equipped), or front room/map lamp assembly (if equipped) switch to DOOR.
2. Turn ignition switch ON.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. While operating the test item, check voltage between BCM connector M20 terminal 63 and ground.

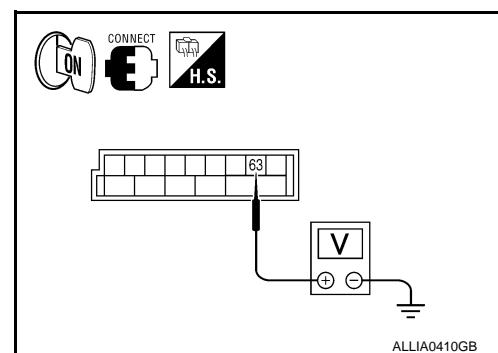

(+)		(-)	INT LAMP	Voltage	
Connector	Terminal				
M20	63		ON	0V	
			OFF	Battery voltage	

Is the inspection result normal?

YES >> Interior room lamp control circuit is operating normally.

INTERIOR ROOM LAMP CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >


Fixed ON>>GO TO 3

Fixed OFF>> GO TO 2.

2.CHECK INTERIOR ROOM LAMP CONTROL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector M20, door mirror connectors (with puddle lamps), room lamp connector (if equipped) or front room/ map lamp assembly connector (if equipped).
3. Check continuity between BCM connector M20 (A) terminal 63 and door mirror connectors (B) terminal 13 (with puddle lamps), room lamp connector (C) terminal 1 (if equipped) or front room/ map lamp assembly connector (D) terminal 1 (if equipped).

Connector	Terminal	Component	Connector	Terminal	Continuity
M20 (A)	63	Door mirror LH (with puddle lamps)	D4 (B)	13	Yes
		Door mirror RH (with puddle lamps)	D107 (B)	13	
		Room lamp (if equipped)	R10 (C)	1	
		Front room/map lamp assembly (if equipped)	R102 (D)	1	

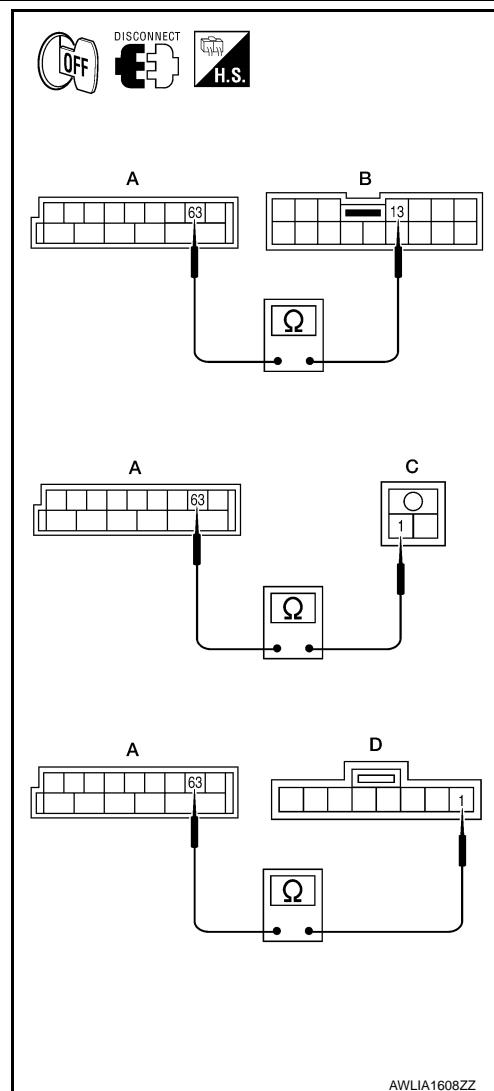

AWLIA1608ZZ

4. If equipped with personal lamp 2nd row, reconnect front room/ map lamp assembly connector.
5. Disconnect personal lamp 2nd row connector.
6. Check continuity between BCM connector M20 (A) terminal 63 and personal lamp 2nd row connector R203 (B) terminal 1.


BCM		Personal lamp 2nd row		Continuity
Connector	Terminal	Connector	Terminal	
M20 (A)	63	R203 (B)	1	Yes

Is the inspection result normal?

YES >> Check interior room lamps for an open. If OK, replace BCM. Refer to [BCS-53, "Removal and Installation"](#). If NG, replace interior room lamp. Refer to [INL-76, "Removal and Installation"](#).

NO >> Repair the harness or connectors.

3.CHECK INTERIOR ROOM LAMP CONTROL SHORT CIRCUIT

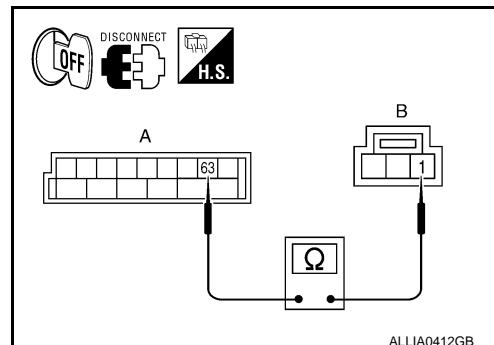


ALLIA0412GB

INTERIOR ROOM LAMP CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >


1. Turn ignition switch OFF.
2. **On Crew Cab models with rear roof console**, disconnect BCM connector M20, door mirror connectors (with puddle lamps) and personal lamp 2nd row connector.
3. Switch the front room/map lamp assembly switch to ON position.
4. Check continuity between BCM connector and ground.

Connector	Terminal	—	Continuity
M20	63	Ground	No

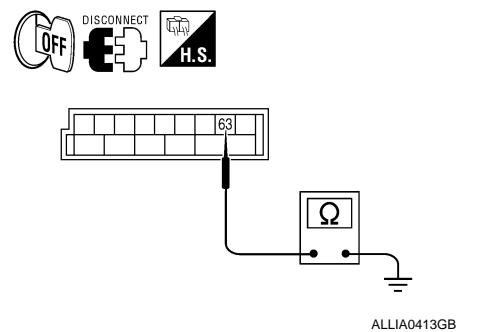

5. **On models except Crew Cab with rear roof console**, disconnect BCM connector M20, door mirror connectors (with puddle lamps), room lamp connector (if equipped) or front room/map lamp assembly connector (if equipped).
6. Check continuity between BCM connector and ground.

Connector	Terminal	—	Continuity
M20	63	Ground	No

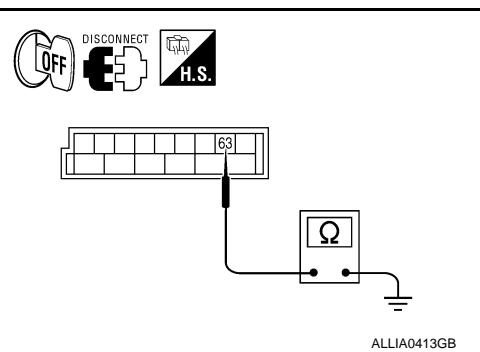

Is the inspection result normal?

YES >> Check interior room lamps for a short circuit. If OK, replace BCM. Refer to [BCS-53, "Removal and Installation"](#). If NG, replace interior room lamp. Refer to [INL-76, "Removal and Installation"](#).

NO >> Repair the harness or connectors.

A
B
C
D
E
F
G
H
I
J
K
L
INL
M
N
O
P

STEP LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

STEP LAMP CIRCUIT

Description

INFOID:0000000005387212

Controls the front and rear step lamps and the foot lamps (ground side) to turn the lamps ON and OFF.

Component Function Check

INFOID:0000000005387213

CAUTION:

Before performing the diagnosis, check that the following is normal.

- **Battery saver output/power supply**
- **Front step lamp bulbs**
- **Foot lamp bulbs (if equipped)**

1. CHECK STEP LAMP OPERATION

④ CONSULT-III

1. Turn ignition switch ON.
2. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
3. While operating the test item, check that the front step lamps, rear step lamps (early production crew cab) and foot lamps (if equipped) turn ON/OFF.

ON : Step lamp ON

OFF : Step lamp OFF

Is the inspection result normal?

YES >> Step lamp circuit is normal.

NO >> Refer to [INL-22, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000005387214

Regarding Wiring Diagram information, refer to [INL-30, "Wiring Diagram"](#).

1. CHECK STEP LAMP OUTPUT

④ CONSULT-III

1. Turn ignition switch ON.
2. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
3. While operating the test item, check voltage between BCM harness connector and ground.

Connector	Terminal	—	STEP LAMP TEST	Voltage
M20	62	Ground	ON	0V
			OFF	Battery voltage


Is the inspection result normal?

YES >> Step lamp control circuit is operating normally.

Fixed ON>>GO TO 3

Fixed OFF>> GO TO 2.

2. CHECK STEP LAMP OPEN CIRCUIT

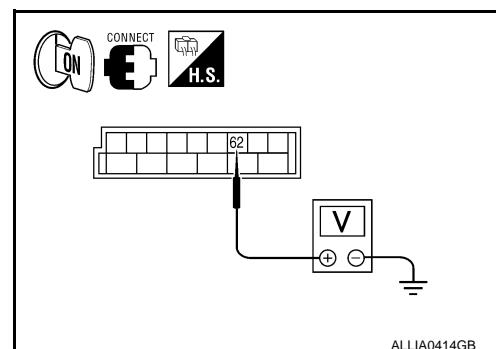

STEP LAMP CIRCUIT

< COMPONENT DIAGNOSIS >


1. Turn ignition switch OFF.
2. Disconnect BCM connector M20 and front step lamp and foot lamp connectors (if equipped).
3. Check continuity between BCM harness connector M20 terminal 62 and step lamp connectors and foot lamp connectors (if equipped).

Connector	Terminal	Connector	Terminal	Continuity
M20 (A)	62	Front step lamp LH	D11 (B)	Yes
		Front step lamp RH	D109 (B)	
		Foot lamp LH (if equipped)	M99 (C)	
		Foot lamp RH (if equipped)	M100 (C)	

Is the inspection result normal?

YES >> Check step lamp or foot lamp for an open. If OK, Replace BCM. Refer to [BCS-53, "Removal and Installation"](#). If NG, Replace step lamp or foot lamp. Refer to [INL-76, "Removal and Installation"](#).

NO >> Repair harness or connectors.

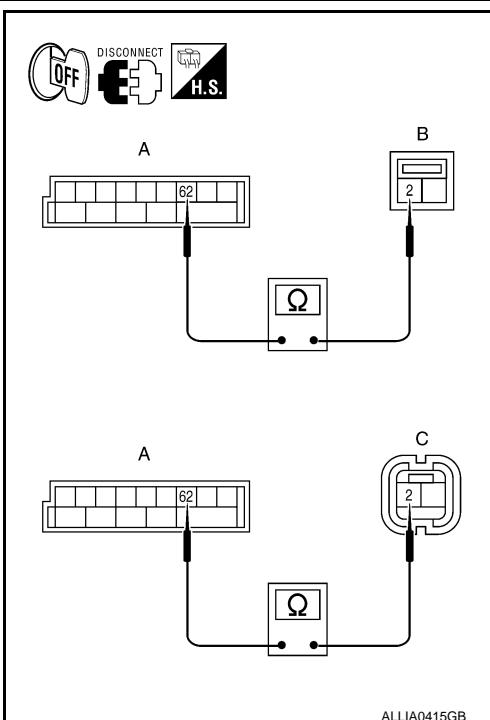

ALLIA0415GB

3. CHECK STEP LAMP SHORT CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector and front step lamp and foot lamp connectors (if equipped).
3. Check continuity between BCM connector M20 terminal 62 and ground.

Connector	Terminal	—	Continuity
M20	62	Ground	No

Is the inspection result normal?

YES >> Check step lamp or foot lamp for a short circuit. If OK, Replace BCM. Refer to [BCS-53, "Removal and Installation"](#). If NG, replace step lamp or foot lamp. Refer to [INL-76, "Removal and Installation"](#).

NO >> Repair the harness or connectors.

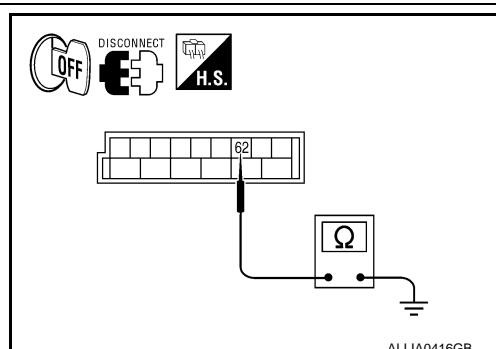

ALLIA0416GB

INL

CARGO LAMP CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

CARGO LAMP CONTROL CIRCUIT

Description

INFOID:0000000005387215

The BCM controls ground to the cargo lamp relay to turn the cargo lamp and tailgate cargo lamps (if equipped) ON and OFF.

Diagnosis Procedure

INFOID:0000000005387216

Regarding Wiring Diagram information, refer to [INL-30, "Wiring Diagram"](#).

CAUTION:

Before performing the diagnosis, check that the following is normal.

- **Fuse**
- **Cargo lamp bulbs**
- **Tailgate cargo lamp bulbs**

1. CHECK CARGO LAMP OPERATION

Check the cargo lamp and tailgate cargo lamps (if equipped) operation from the cargo lamp switch, the door switches, and a keyfob (if equipped).

Is the cargo lamp and tailgate cargo lamps (if equipped) inoperative from all of the above switches and the keyfob (if equipped)?

YES >> GO TO 4

NO >> • Inoperative from cargo lamp switch only, GO TO 2

• Inoperative from door switches only, refer to [DLK-26, "KING CAB : Description"](#) (king cab) or [DLK-27, "CREW CAB : Description"](#) (crew cab).

• Inoperative from keyfob only, refer to [DLK-50, "Description"](#).

2. CHECK CARGO LAMP SWITCH

Check the cargo lamp switch. Refer to [INL-26, "Component Inspection"](#).

Is the inspection result normal?


YES >> GO TO 3

NO >> Replace the cargo lamp switch.

3. CHECK CARGO LAMP SWITCH CIRCUIT

1. Disconnect BCM connector M18 and cargo lamp switch connector.
2. Check continuity between BCM connector M18 (A) terminal 31 and cargo lamp switch connector M149 (B) terminal 1.

BCM		Cargo lamp switch		Continuity
Connector	Terminal	Connector	Terminal	
M18 (A)	31	M149 (B)	1	Yes

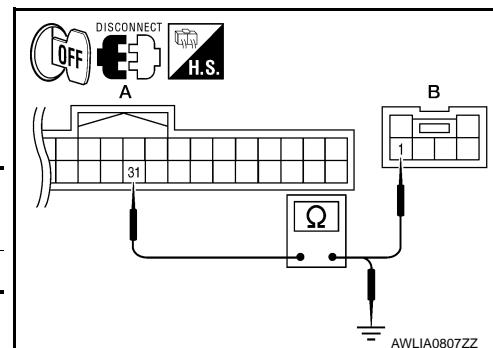

3. Check continuity between BCM connector M18 (A) terminal 31 and ground.

Connector	Terminal	—	Continuity
M18 (A)	31	Ground	No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

NO >> Repair harness or connectors.

4. CHECK CARGO LAMP RELAY

CARGO LAMP CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

Check the cargo lamp relay. Refer to [INL-26, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5

NO >> Replace the cargo lamp relay.

5.CHECK CARGO LAMP RELAY CONTROL


While operating the cargo lamp switch, check voltage between BCM connector M19 terminal 50 and ground.

Connector	Terminal	—	Cargo lamp switch	Voltage
M19	50	Ground	ON	0V
			OFF	Battery voltage

Is the inspection result normal?

YES >> GO TO 6


NO >> GO TO 8

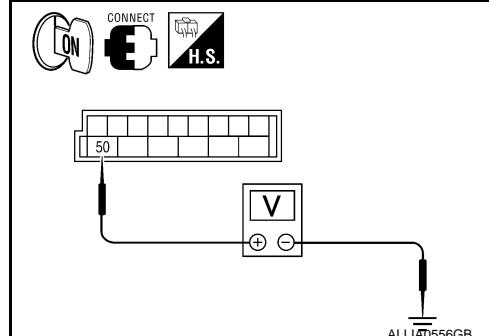

6.CHECK CARGO LAMP AND TAILGATE CARGO LAMPS (IF EQUIPPED) VOLTAGE

1. Disconnect the cargo lamp connector and the tailgate cargo lamp connectors (if equipped).
2. While operating the cargo lamp switch, check voltage between cargo lamp connector B158 (A) terminal 3 and ground and the tailgate cargo lamp connectors C13 (B) and C14 (B) terminal 3 and ground (if equipped).

Connector	Terminal	—	Cargo lamp switch	Voltage
B158 (A)	3	Ground	ON	Battery voltage
	3			
	3			

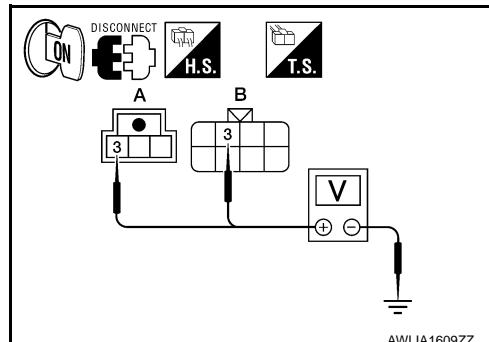

Is the inspection result normal?

YES >> Replace cargo lamp or tailgate cargo lamp (if equipped). Refer to [EXL-148, "Removal and Installation"](#) or [EXL-149, "Removal and Installation"](#) (if equipped).

NO >> GO TO 7

7.CHECK CARGO LAMP RELAY VOLTAGE PART 1


Check voltage between cargo lamp relay connector M150 terminal 5 and ground.

Cargo lamp relay		Ground	Voltage
Connector	Terminal		
M150	5		Battery voltage

Is the inspection result normal?

YES >> Repair harness or connectors between cargo lamp relay and cargo lamp.

NO >> Repair harness or connector between splice and cargo lamp relay.

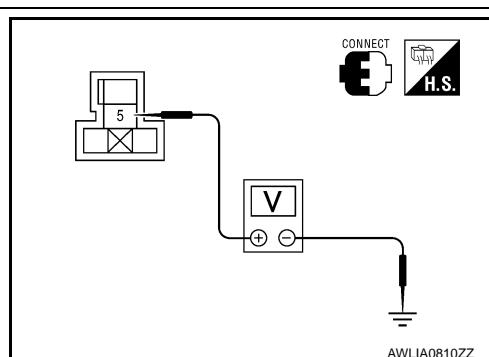

8.CHECK CARGO LAMP RELAY VOLTAGE PART 2

CARGO LAMP CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >


Check voltage between cargo lamp relay connector M150 terminal 2 and ground.

Cargo lamp relay		Ground	Voltage
Connector	Terminal		
M150	2		Battery voltage

Is the inspection result normal?

YES >> GO TO 9


NO >> Repair harness or connectors.

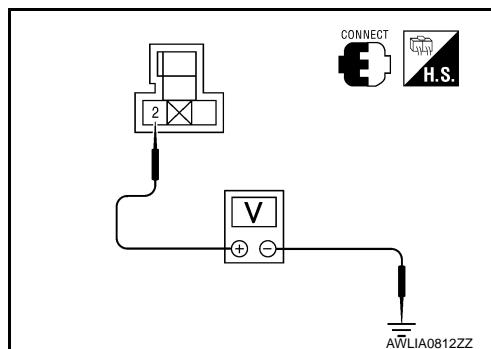

9. CHECK CARGO LAMP RELAY CONTROL CIRCUIT

1. Disconnect BCM connector M19 and cargo lamp relay connector.
2. Check continuity between BCM connector M19 (A) terminal 50 and cargo lamp relay connector B150 (B) terminal 1.

BCM		Cargo lamp relay		Continuity
Connector	Terminal	Connector	Terminal	
M19 (A)	50	B150 (B)	1	Yes

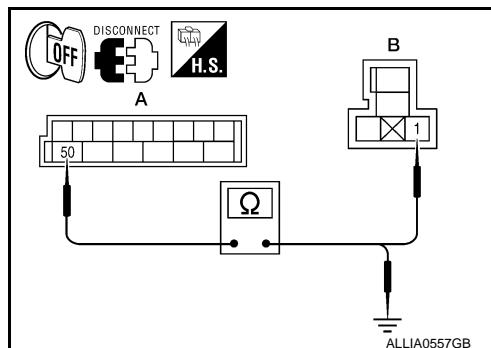

3. Check continuity between BCM connector M19 (A) terminal 50 and ground.

Connector	Terminal	—	Continuity
M19 (A)	50	Ground	No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

NO >> Repair harness or connectors.

Component Inspection

INFOID:0000000005387217

CARGO LAMP SWITCH

INSPECTION PROCEDURE

1. CHECK CARGO LAMP SWITCH


1. Turn ignition switch OFF.
2. Disconnect cargo lamp switch harness connector.
3. Check continuity between cargo lamp switch terminals.

Cargo lamp switch	Condition	Continuity
Terminal		
1 – 3	ON	Yes
	OFF	No

Is the inspection result normal?

YES >> Inspection End

NO >> Replace cargo lamp switch.

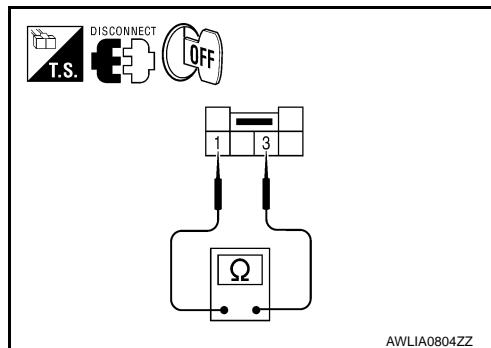

CARGO LAMP RELAY

INSPECTION PROCEDURE

1. CHECK CARGO LAMP RELAY

CARGO LAMP CONTROL CIRCUIT


< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect cargo lamp relay harness connector.
3. Supply power to terminal 2 and ground to terminal 1 of the cargo lamp relay.
4. Check continuity between cargo lamp relay terminals 3 and 5.

Terminal	Condition	Continuity
3 5	Power and ground supplied to terminals 1 and 2	Yes
	No power and ground supplied	No

Is the inspection result normal?

YES >> Inspection End
NO >> Replace cargo lamp relay.

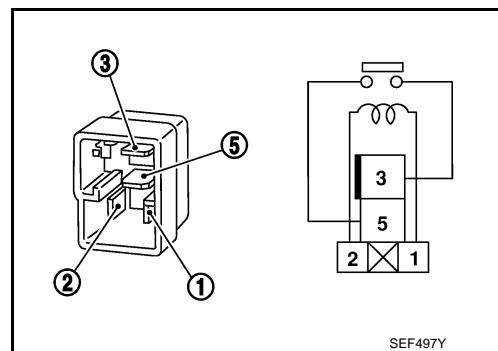

IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

Description

INFOID:0000000005387218

Controls the ignition keyhole illumination (ground side) to turn the ignition keyhole illumination ON and OFF.

Component Function Check

INFOID:0000000005387219

CAUTION:

Before performing the diagnosis, check that the following is normal.

- Battery saver output/power supply
- Ignition keyhole illumination bulb

1. CHECK IGNITION KEYHOLE ILLUMINATION OPERATION

① CONSULT-III

1. Turn the ignition switch ON.
2. Select "IGN ILLUM" of BCM (INT LAMP) active test item.
3. While operating the test item, check that the ignition keyhole illumination turns ON/OFF

ON : Ignition keyhole illumination ON

OFF : Ignition keyhole illumination OFF

Is the inspection result normal?

YES >> Ignition keyhole illumination circuit is normal.

NO >> Refer to [INL-28, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000005387220

Regarding Wiring Diagram information, refer to [INL-30, "Wiring Diagram"](#).

1. CHECK IGNITION KEYHOLE OUTPUT

① CONSULT-III

1. Turn ignition switch ON.
2. Select "IGN ILLUM" of BCM (INT LAMP) active test item.
3. While operating the test item, check voltage between BCM connector M18 terminal 1 and ground.

Connector	Terminal	—	IGN ILLUM	Voltage
M18	1	Ground	ON	0V
			OFF	Battery voltage


Is the inspection result normal?

YES >> Ignition keyhole illumination circuit is operating normally.

Fixed ON>>GO TO 3

Fixed OFF>>GO TO 2

2. CHECK IGNITION KEYHOLE ILLUMINATION OPEN CIRCUIT

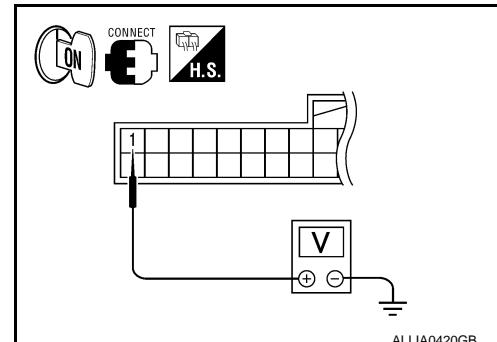


IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM connector M18 and ignition keyhole illumination connector.
3. Check continuity between BCM connector M18 (A) terminal 1 and ignition keyhole illumination connector M152 (B) terminal 2.

BCM		Ignition keyhole illumination		Continuity
Connector	Terminal	Connector	Terminal	
M18 (A)	1	M152 (B)	2	Yes

Is the inspection result normal?

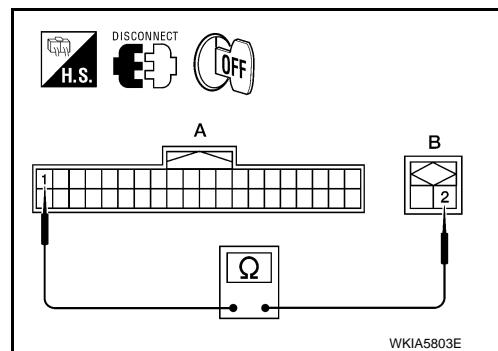

YES >> Check ignition keyhole illumination for an open. If OK, replace BCM. Refer to [BCS-53, "Removal and Installation"](#). If NG, replace ignition keyhole illumination.


NO >> Repair harness or connectors.

3. CHECK IGNITION KEYHOLE ILLUMINATION SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector M18 and ignition keyhole illumination connector.
3. Check continuity between BCM connector M18 terminal 1 and ground.

Connector	Terminal	—	Continuity
M18	1	Ground	No

Is the inspection result normal?

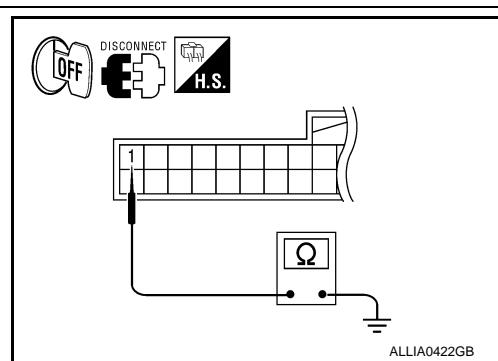

YES >> Check ignition keyhole illumination for a short circuit. If OK, replace BCM. Refer to [BCS-53, "Removal and Installation"](#). If NG, replace ignition keyhole illumination.

NO >> Repair harness or connectors.

A
B
C
D
E
F
G
H
I
J
K
L
INL
M
N
O
P


INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

INTERIOR ROOM LAMP CONTROL SYSTEM


Wiring Diagram

INFOID:0000000005387221

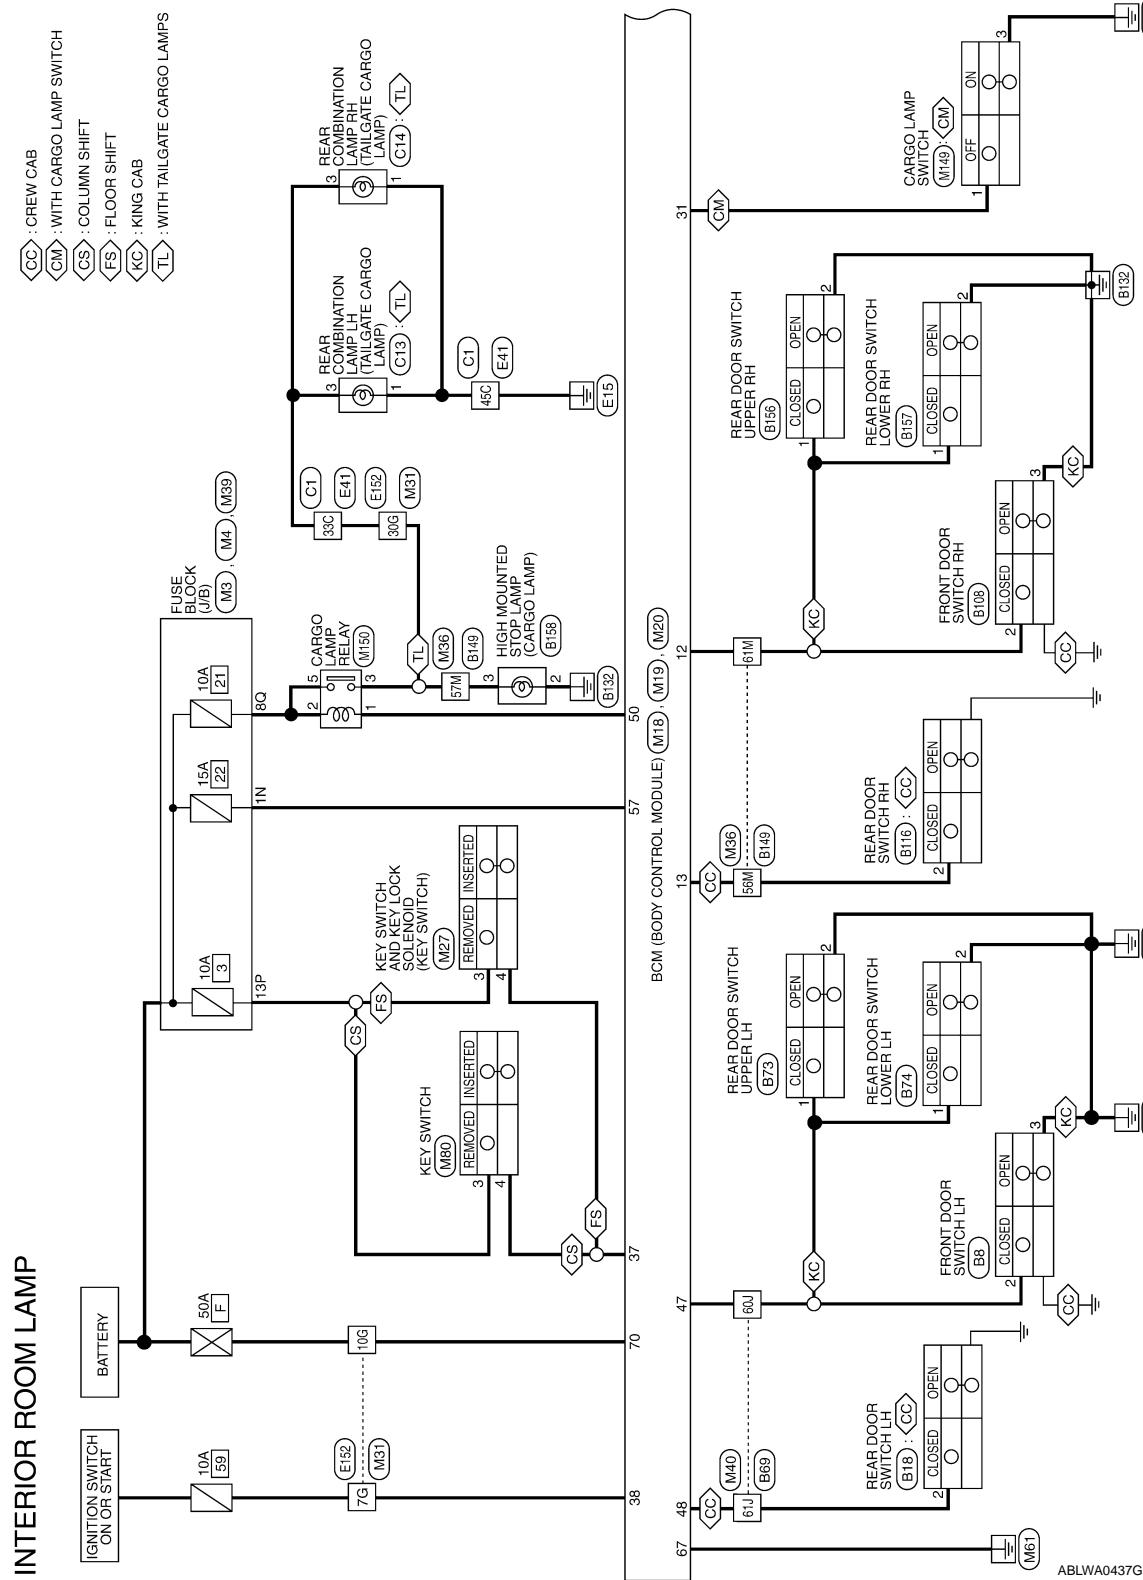

INTERIOR ROOM LAMP CONTROL SYSTEM


< COMPONENT DIAGNOSIS >

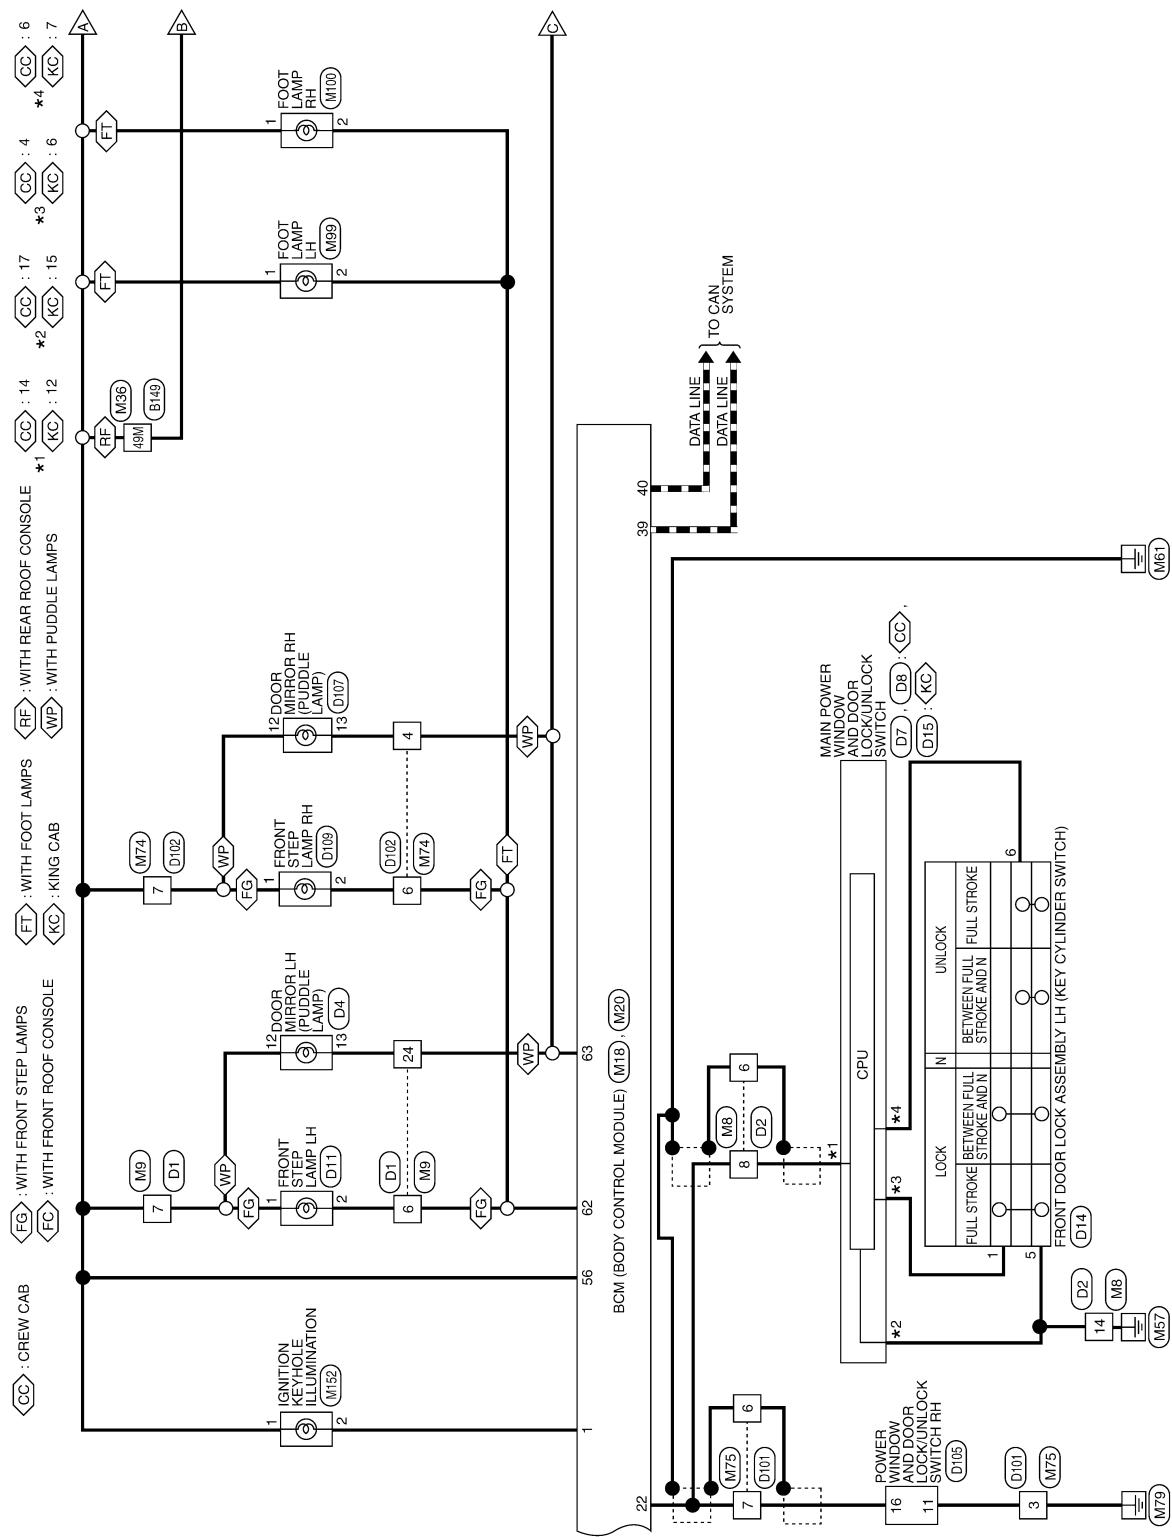

ABLWA0438GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

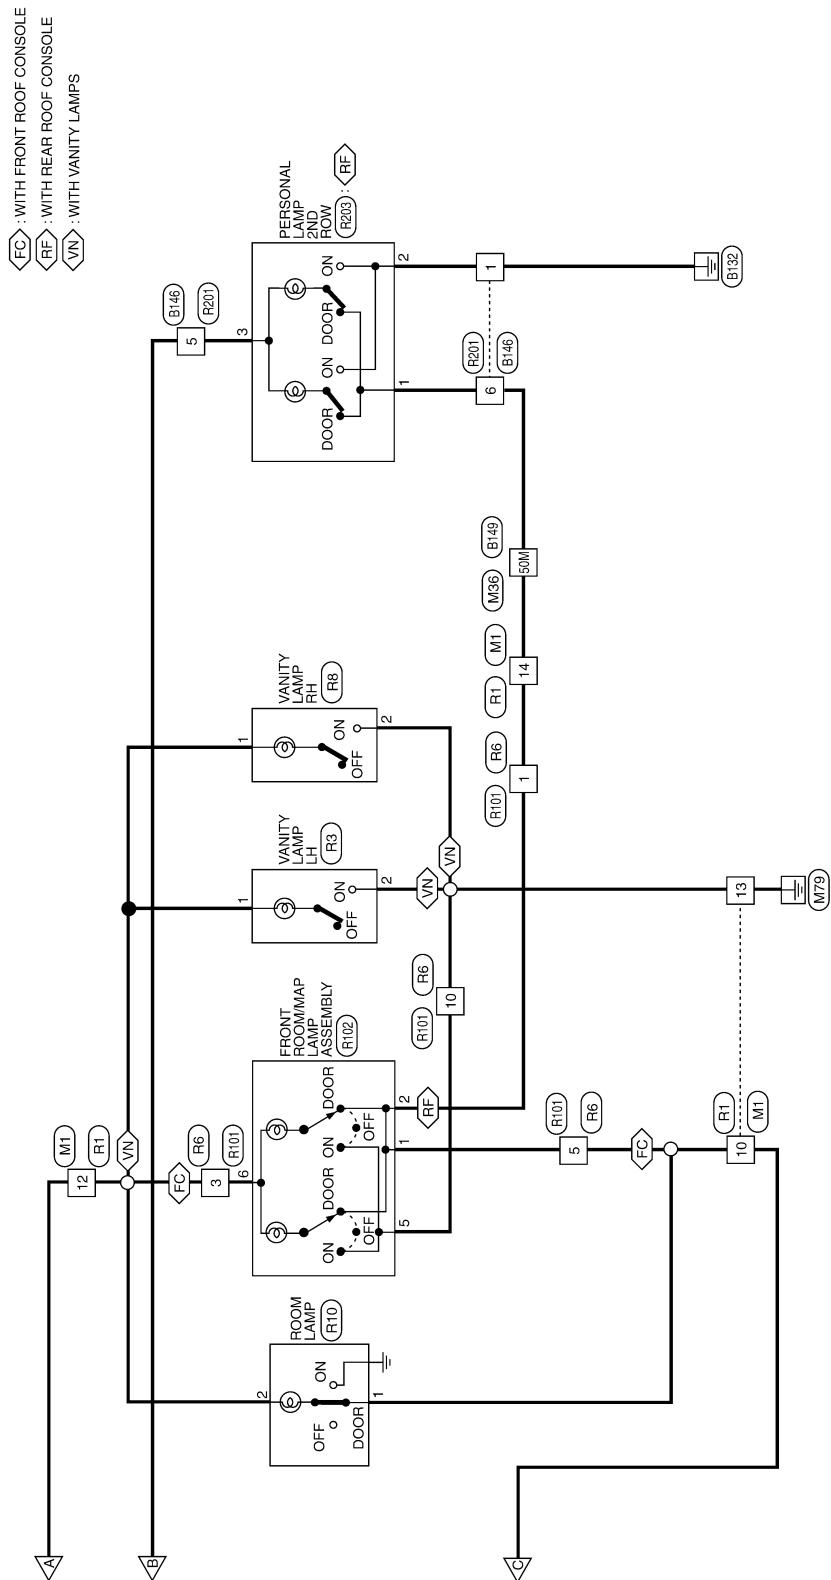

ABLWA0439GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

INTERIOR ROOM LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE
Terminal No.	
10	L
12	R/G
13	B
14	R

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE
Terminal No.	
7	6
15	14
13	12
11	10
9	8

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE
Terminal No.	
7	6
15	14
13	12
11	10
9	8

Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	WHITE
Terminal No.	
11	10
9	8
7	6
24	23
22	21
20	19
18	17
16	15
14	13
12	11
10	9
8	7

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE
Terminal No.	
7P	6P
4P	3P
1P	3P
1P	2P
1P	1P
1P	3P
1P	1P
1P	3P
1P	1P
1P	3P
1P	1P

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE
Terminal No.	
13P	P

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE
Terminal No.	
13P	P

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE
Terminal No.	
13P	P

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL


INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >


Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

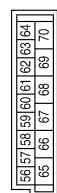

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

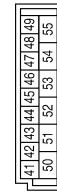

Terminal No.	Color of Wire	Signal Name
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)
50	R/Y	CARGO LAMP OUTPUT
56	R/G	BATTERY SAVER OUTPUT
57	Y/R	BAT (FUSE)
62	R/W	STEP LAMP OUTPUT
63	L	ROOM LAMP OUTPUT
67	B	GND (POWER)
70	W/B	BAT (F/L)


Terminal No.	Color of Wire	Signal Name
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)
50	R/Y	CARGO LAMP OUTPUT
56	R/G	BATTERY SAVER OUTPUT
57	Y/R	BAT (FUSE)
62	R/W	STEP LAMP OUTPUT
63	L	ROOM LAMP OUTPUT
67	B	GND (POWER)
70	W/B	BAT (F/L)

Terminal No.	Color of Wire	Signal Name
3	P	-
4	B/R	-

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
30G	LG	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
30G	LG	-

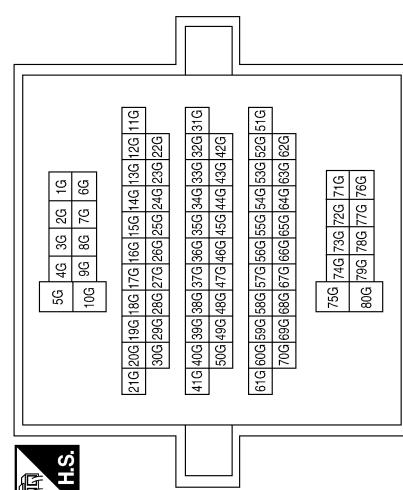


ABLIA1418GB

INTERIOR ROOM LAMP CONTROL SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

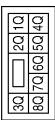

Terminal No.	Color of Wire	Signal Name
49M	R/G	—
50M	R	—
56M	GR	—
57M	LG	—
61M	R/L	—


Terminal No.	Color of Wire	Signal Name
8Q	W/L	—

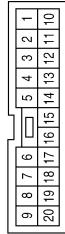


Terminal No.	Color of Wire	Signal Name
8Q	W/L	—

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

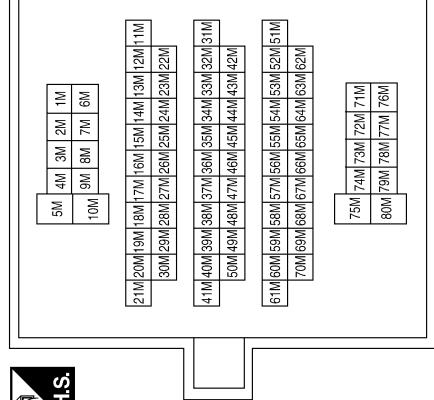

60J	SB	—
61J	R/Y	—

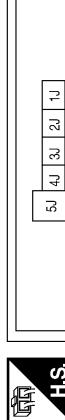

5J	4J 3J 2J 1J	—
10J	9J 8J 7J 6J	—
2J	1J 20J 19J 18J	—
30J	28J 27J 26J 25J	—

4J	40J	39J	38J	37J	36J	35J	34J	33J	32J	31J
50J	49J	48J	47J	46J	45J	44J	43J	42J	41J	40J


6J	60J	59J	58J	57J	56J	55J	54J	53J	52J	51J
70J	69J	68J	67J	66J	65J	64J	63J	62J	71J	70J

ABLIA1456GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE

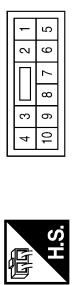

Connector No.	M80
Connector Name	KEY SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	B	-
6	SHIELD	-
7	G	-

Terminal No.	Color of Wire	Signal Name
3	P	-
4	B/R	-


Terminal No.	Color of Wire	Signal Name
1	R/G	-
2	R/W	-

Terminal No.	Color of Wire	Signal Name
1	R/G	-
2	R/W	-



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	G	-
3	LG	-
5	G	-

Connector No.	M149
Connector Name	CARGO LAMP SWITCH
Connector Color	WHITE

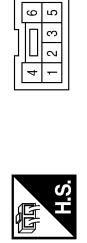

Terminal No.	Color of Wire	Signal Name
1	P/L	-
3	B	-



ABLIA0186GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	M152	Connector No.	E152
Connector Name	IGNITION KEYHOLE	Connector Name	WIRE TO WIRE
Connector Color	ILLUMINATION	Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
1	R/G	—
2	BR/W	—


Connector No.	C1	Terminal No.	Color of Wire	Signal Name
Connector Name	WIRE TO WIRE	38C	LG	—
Connector Color	GRAY	45C	B	—

ABLIA1458GB


INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >


Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE

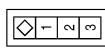

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE

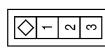

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY

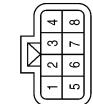

Terminal No.	Color of Wire	Signal Name
1	B	—
3	LG	—

Terminal No.	Color of Wire	Signal Name
2	SB	—
3	B	—

Terminal No.	Color of Wire	Signal Name
2	R/Y	—

Connector No.	B73
Connector Name	REAR DOOR SWITCH UPPER LH
Connector Color	BLACK




Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/Y	—

Terminal No.	Color of Wire	Signal Name
1	SB	—
2	B	—

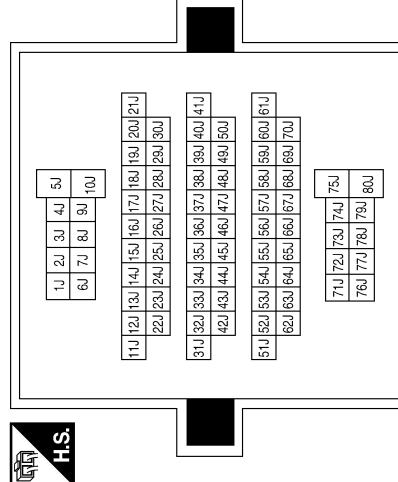



Terminal No.	Color of Wire	Signal Name
60J	SB	—
61J	R/Y	—

ABLIA1419GB


INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >


Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE

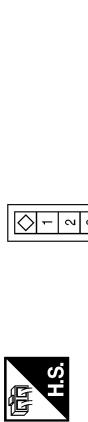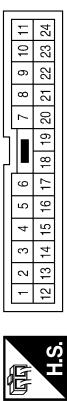



Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE

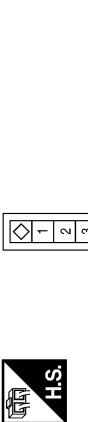


Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE

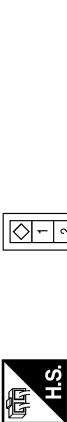

Connector No.	B146
Connector Name	WIRE TO WIRE
Connector Color	BROWN

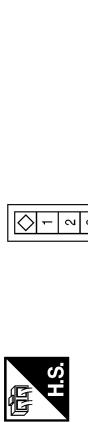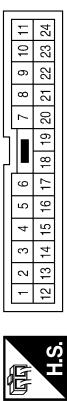

Connector No.	B146
Connector Name	WIRE TO WIRE
Connector Color	BROWN

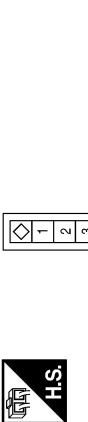

Terminal No.	Color of Wire	Signal Name
1	B	-
5	R/G	-
6	R	-



Terminal No.	Color of Wire	Signal Name
49M	R/G	-
50M	R	-
56M	GR	-
57M	LG	-
61M	R/L	-




Terminal No.	Color of Wire	Signal Name
1	B	-
5	R/G	-
6	R	-

Terminal No.	Color of Wire	Signal Name
49M	R/G	-
50M	R	-
56M	GR	-
57M	LG	-
61M	R/L	-


Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

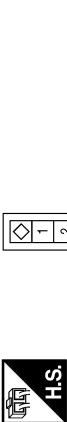

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

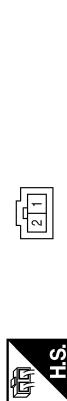

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Connector No.	B156
Connector Name	REAR DOOR SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
5	R/G	-
6	R	-


Connector No.	B156
Connector Name	REAR DOOR SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-


Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Connector No.	B170
Connector Name	FRONT DOOR SWITCH
Connector Color	BLACK

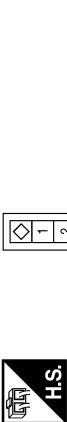

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-
3	R/G	-
4	R	-

Connector No.	B170
Connector Name	FRONT DOOR SWITCH
Connector Color	BLACK

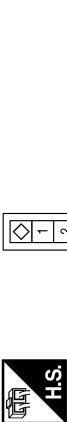

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-


Connector No.	B170
Connector Name	FRONT DOOR SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-


Connector No.	B170
Connector Name	FRONT DOOR SWITCH
Connector Color	BLACK

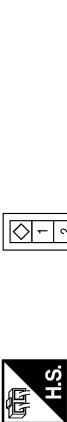

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-


Connector No.	B170
Connector Name	FRONT DOOR SWITCH
Connector Color	BLACK

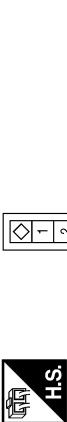

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-


Connector No.	B170
Connector Name	FRONT DOOR SWITCH
Connector Color	BLACK

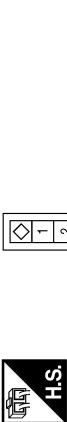

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-


Connector No.	B170
Connector Name	FRONT DOOR SWITCH
Connector Color	BLACK

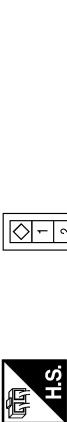

INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	B158
Connector Name	HIGH MOUNTED STOP LAMP
Connector Color	WHITE

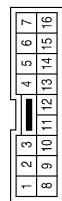

Connector No.	B157
Connector Name	REAR DOOR SWITCH LOWER RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
2	B	-
3	LG	-

Terminal No.	Color of Wire	Signal Name
10	L	-
12	R/G	-
13	B	-
14	R	-

Terminal No.	Color of Wire	Signal Name
7	6	-
8	9	-
9	10	-
10	11	-
11	12	-
12	13	-
13	14	-
14	15	-
15	16	-



Connector No.	R6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

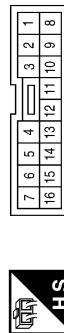

Connector No.	R3
Connector Name	VANITY LAMP LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
1	R	-
3	R/G	-
5	L	-
10	B	-




Terminal No.	Color of Wire	Signal Name
1	R/G	-
2	B	-

Terminal No.	Color of Wire	Signal Name
7	6	-
8	9	-
9	10	-
10	11	-
11	12	-
12	13	-
13	14	-
14	15	-
15	16	-

INTERIOR ROOM LAMP CONTROL SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	R101
Connector Name	ROOM LAMP
Connector Color	WHITE

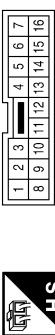


Terminal No.	Color of Wire	Signal Name
1	L	-
2	R/G	-
5	L	-
10	B	-

Connector No.	R102
Connector Name	WIRE TO WIRE
Connector Color	GRAY

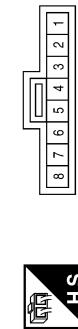

Terminal No.	Color of Wire	Signal Name
1	R	-
3	R/G	-
5	L	-
6	R/G	-

Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-
5	B	-
6	R/G	-

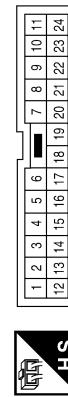

Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-
5	B	-
6	R/G	-




Connector No.	R201
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	B	-
5	R/G	-


Connector No.	R203
Connector Name	PERSONAL LAMP 2ND ROW
Connector Color	WHITE

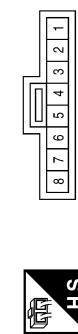

Terminal No.	Color of Wire	Signal Name
1	2	1
2	3	2
3	4	3
4	5	4
5	6	5
6	7	6
7	8	7
8	9	8
9	10	9
10	11	10
11	12	11
12	13	12
13	14	13
14	15	14
15	16	15
16	17	16
17	18	17
18	19	18
19	20	19
20	21	20
21	22	21
22	23	22
23	24	23
24	25	24

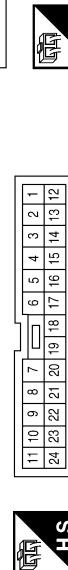

Terminal No.	Color of Wire	Signal Name
6	R/W	-
7	R/G	-
24	L	-

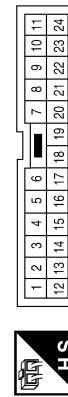


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL

INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >


Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

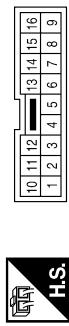


Connector No.	D4
Connector Name	DOOR MIRROR LH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE



Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (CREW CAB)
Connector Color	WHITE

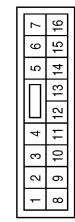

Connector No.	D4
Connector Name	DOOR MIRROR LH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE

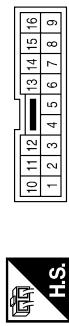


Terminal No.	Color of Wire	Signal Name
12	R/G	—
13	L	—
14	B	—

Terminal No.	Color of Wire	Signal Name
6	SHIELD	—
8	LG/W	—
14	B	—

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	BLACK

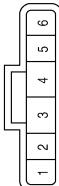


Connector No.	D11
Connector Name	FRONT STEP LAMP LH
Connector Color	WHITE



Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (CREW CAB)
Connector Color	WHITE

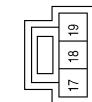

Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (CREW CAB)
Connector Color	WHITE

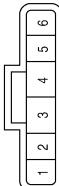


Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	BLACK



Connector No.	D11
Connector Name	FRONT STEP LAMP LH
Connector Color	WHITE



Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (CREW CAB)
Connector Color	WHITE

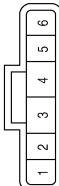

Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	BLACK




Connector No.	D11
Connector Name	FRONT STEP LAMP LH
Connector Color	WHITE




INTERIOR ROOM LAMP CONTROL SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	BROWN

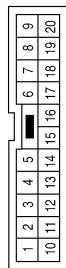


Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

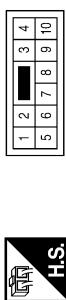



Connector No.	D15
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH (KING CAB)
Connector Color	WHITE





Terminal No.	Color of Wire	Signal Name
4	L	-
6	R/W	-
7	R/G	-

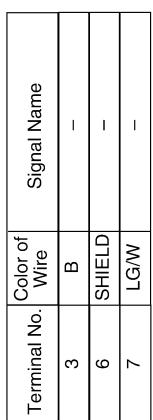

Connector No.	D109
Connector Name	FRONT STEP LAMP RH
Connector Color	WHITE

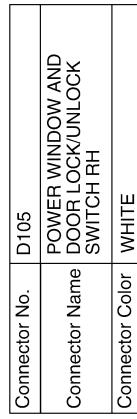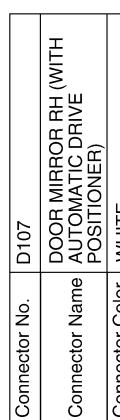

Terminal No.	Color of Wire	Signal Name
1	R/G	—
2	R/W	—

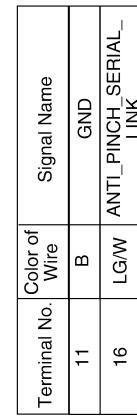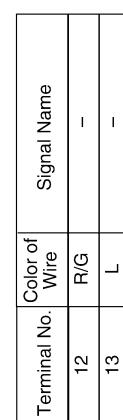

ABLIA1422GB


ILLUMINATION

< COMPONENT DIAGNOSIS >

ILLUMINATION

Wiring Diagram


INFOID:0000000005387222

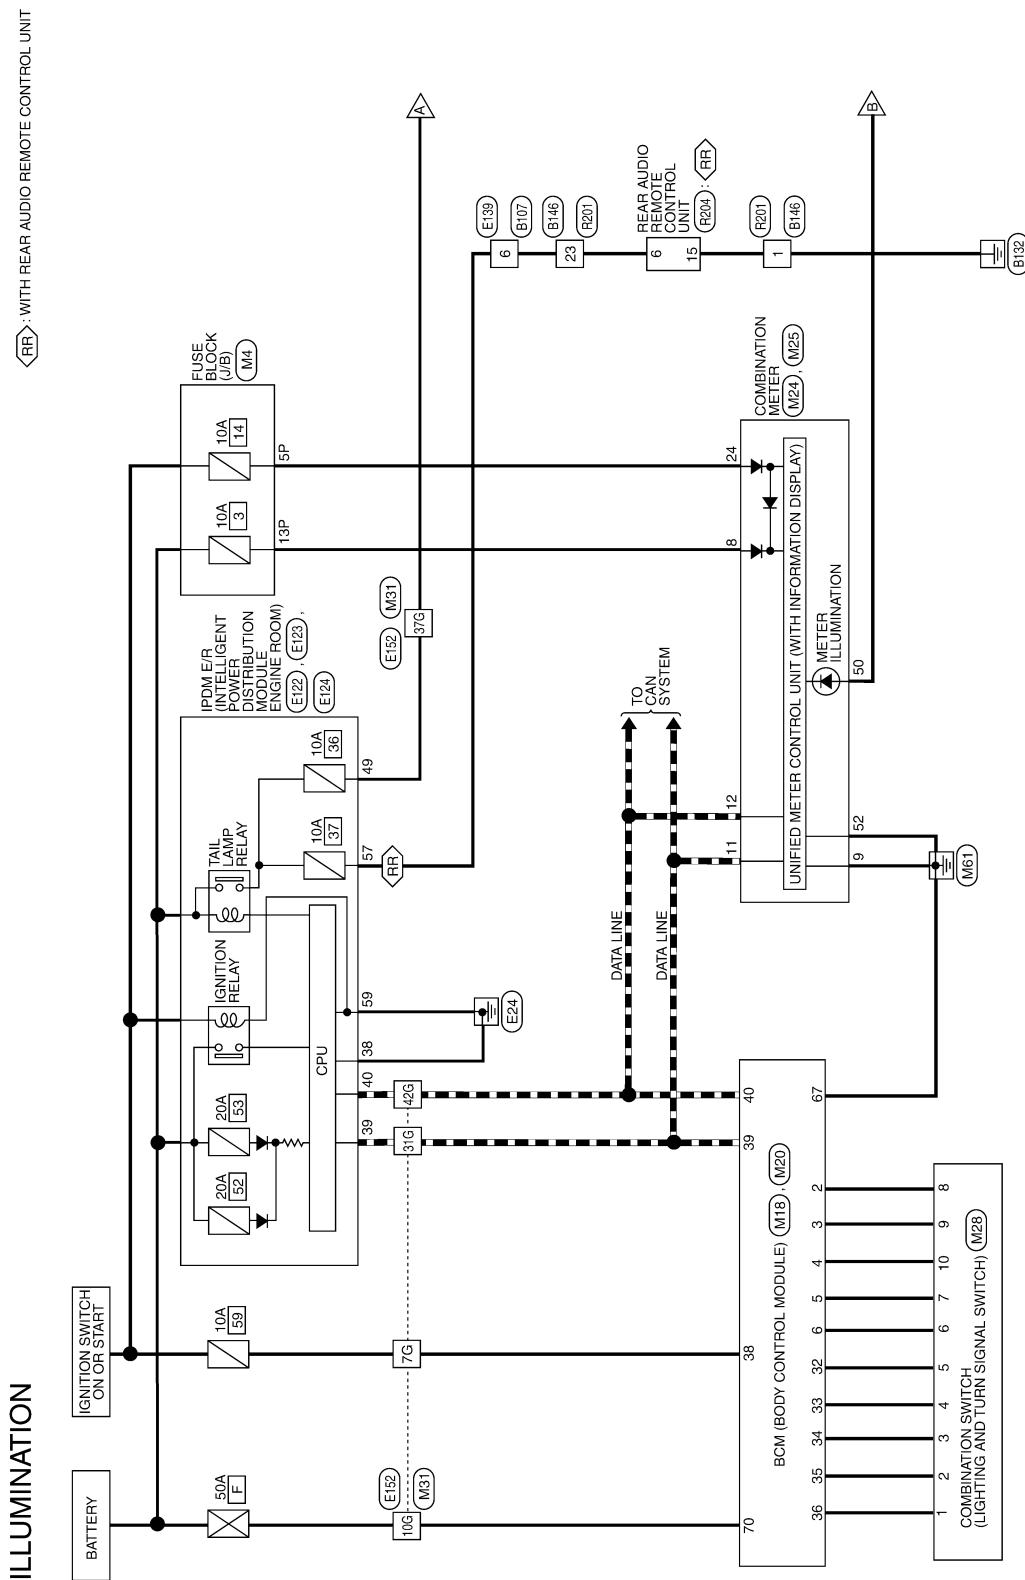

ABLWA0440GB

ILLUMINATION


< COMPONENT DIAGNOSIS >

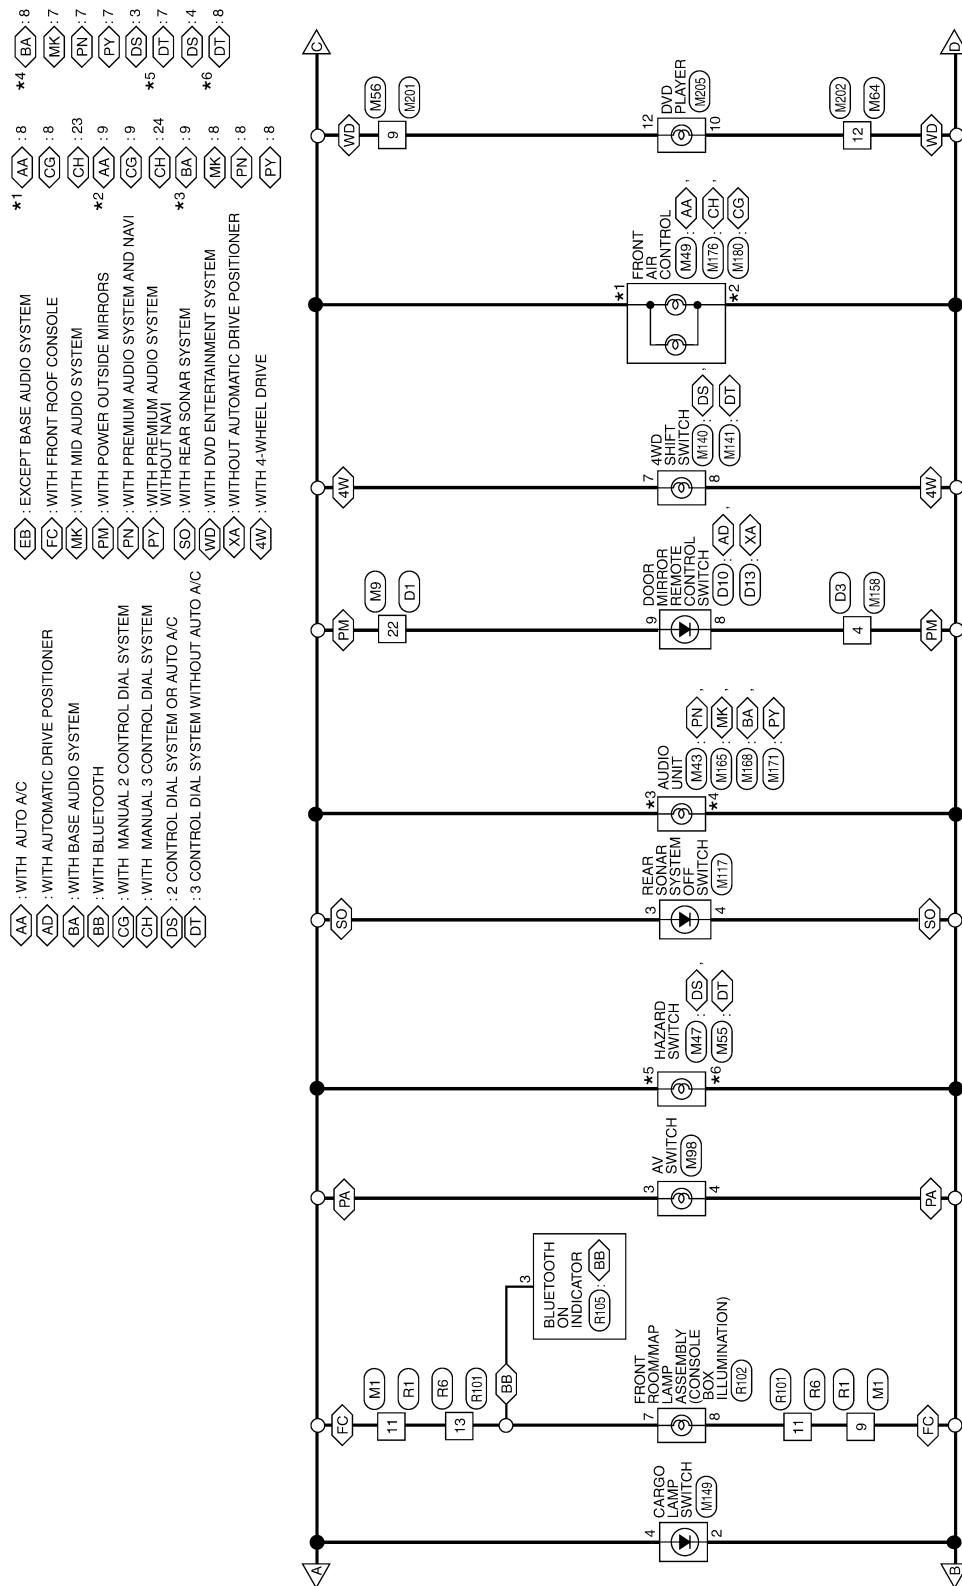

ABLWA0441GB

ILLUMINATION

< COMPONENT DIAGNOSIS >

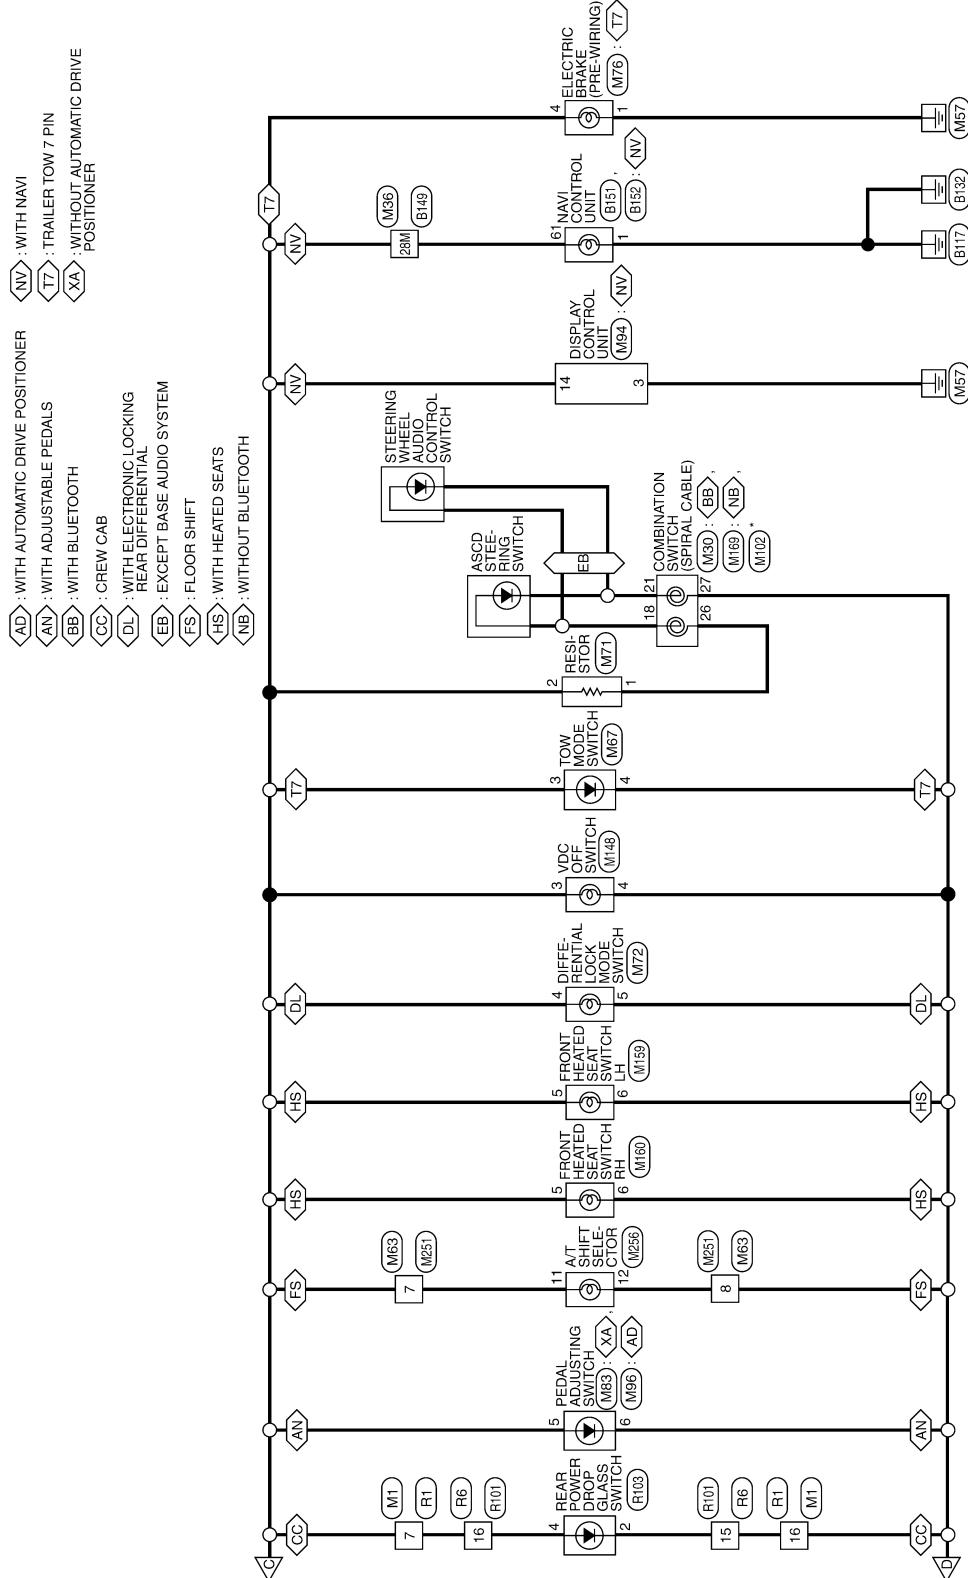


ILLUMINATION

< COMPONENT DIAGNOSIS >

ILLUMINATION CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

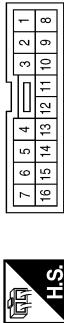


Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	R/L	—
9	BR	—
11	R/L	—
16	BR	—

Terminal No.	Color of Wire	Signal Name
5P	O/L	—
13P	P	—


Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	BROWN

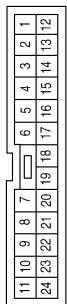

Terminal No.	Color of Wire	Signal Name
22	R/L	—


Terminal No.	Color of Wire	Signal Name
22	R/L	—

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

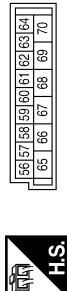

Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	Gr/Y	INPUT 4
4	Y	INPUT 3
5	Gr/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	Gr/Y	OUTPUT 4

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

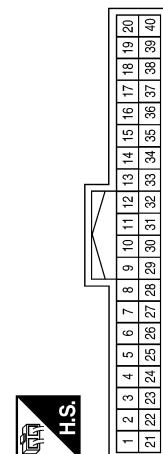

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)


ABLIA1423GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL



ILLUMINATION

< COMPONENT DIAGNOSIS >

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



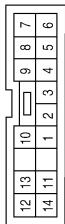


Connector No.	M25
Connector Name	COMBINATION METER
Connector Color	WHITE

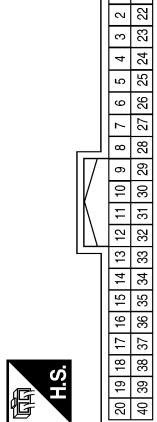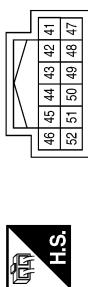

Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

Terminal No.	Color of Wire	Signal Name
50	BR	ILL LED CON OUTPUT
52	B	ILL GND

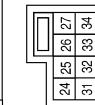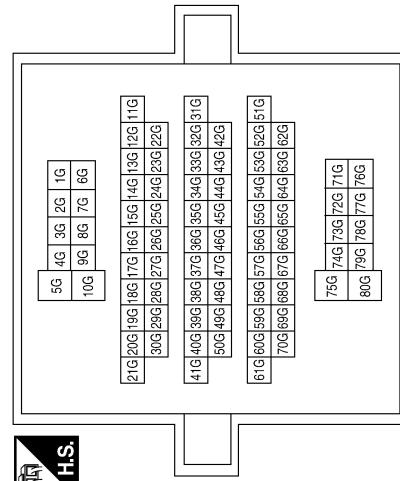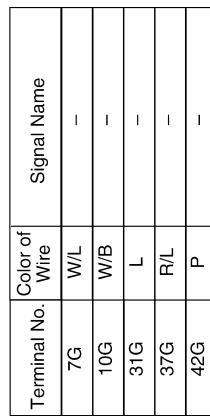

Connector No.	M30
Connector Name	COMBINATION SWITCH (WITH BLUETOOTH)
Connector Color	GRAY

24	25	26	27
31	32	33	34




ABLIA1424GB

ILLUMINATION

< COMPONENT DIAGNOSIS >

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
28M	R/L	-

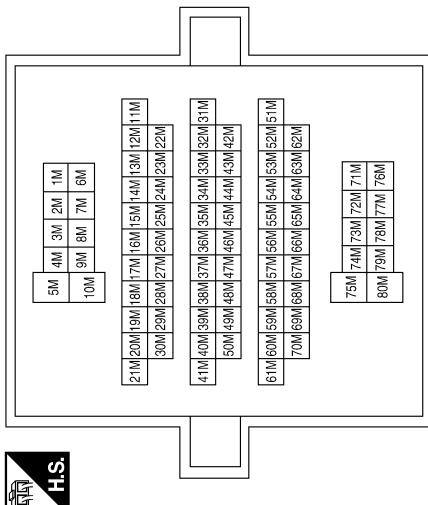

Connector No.	M47
Connector Name	HAZARD SWITCH (2 CONTROL DIAL SYSTEM OR AUTO A/C)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW

Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW

Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW



Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW

Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW

Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW

Terminal No.	Color of Wire	Signal Name
3	R/L	-
4	BR	-

Terminal No.	Color of Wire	Signal Name
3	R/L	-
4	BR	-

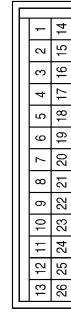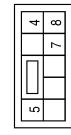

Terminal No.	Color of Wire	Signal Name
7	R/L	-
8	BR	-

Terminal No.	Color of Wire	Signal Name
7	R/L	-
8	BR	-

Terminal No.	Color of Wire	Signal Name
3	R/L	-
4	BR	-


Terminal No.	Color of Wire	Signal Name
3	R/L	-
4	BR	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL

ILLUMINATION


< COMPONENT DIAGNOSIS >

Connector No.	M63
Connector Name	WIRE TO WIRE
Connector Color	BROWN

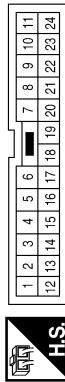

 H.S.


Connector No.	M56
Connector Name	WIRE TO WIRE
Connector Color	WHITE

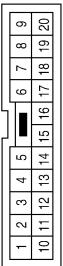

 H.S.

Terminal No.	Color of Wire	Signal Name
7	R/L	—
8	BR	—

Terminal No.	Color of Wire	Signal Name
12	BR	—
1	—	—

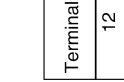 H.S.

Connector No.	M72
Connector Name	DIFFERENTIAL LOCK MODE SWITCH
Connector Color	WHITE



 H.S.

Terminal No.	Color of Wire	Signal Name
4	R/L	—
5	BR	—


Terminal No.	Color of Wire	Signal Name
1	Y	—
2	R/L	—

Connector No.	M71
Connector Name	RESISTOR
Connector Color	BLACK



 H.S.

Connector No.	M67
Connector Name	TOW MODE SWITCH
Connector Color	GRAY

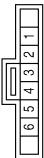

 H.S.

Terminal No.	Color of Wire	Signal Name
3	R/L	—
4	BR	—

ABLIA1426GB

ILLUMINATION


< COMPONENT DIAGNOSIS >

Connector No.	M76
Connector Name	ELECTRIC BRAKE (PRE-WIRING)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	GND
4	R/L	ILL (TAIL)

Connector No.	M94
Connector Name	PEDAL ADJUSTING SWITCH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	BROWN

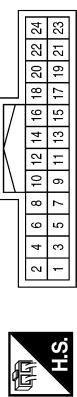


Terminal No.	Color of Wire	Signal Name
5	R/L	-
6	BR	-


Terminal No.	Color of Wire	Signal Name
3	B	GND
14	R/L	ILL

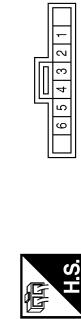

Connector No.	M98
Connector Name	AV SWITCH
Connector Color	WHITE

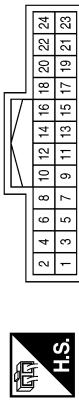


Connector No.	M96
Connector Name	PEDAL ADJUSTING SWITCH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	BROWN

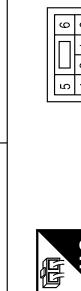

Terminal No.	Color of Wire	Signal Name
2	4	6
1	3	5



Connector No.	M117
Connector Name	REAR SONAR SYSTEM OFF SWITCH
Connector Color	GRAY

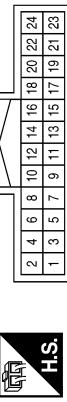

Terminal No.	Color of Wire	Signal Name
3	B	GND
14	R/L	ILL

Terminal No.	Color of Wire	Signal Name
3	R/L	-
4	BR	-

Connector No.	INL
Connector Name	-
Connector Color	-


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

INL

ILLUMINATION

< COMPONENT DIAGNOSIS >


Connector No.	M140
Connector Name	4WD SHIFT SWITCH (2 CONTROL DIAL SYSTEM OR AUTO A/C)
Connector Color	GRAY

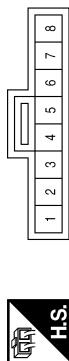

Terminal No.	Color of Wire	Signal Name
7	R/L	—
8	BR	—

Terminal No.	Color of Wire	Signal Name
7	R/L	—
8	BR	—


Connector No.	M148
Connector Name	VDC OFF SWITCH
Connector Color	GRAY

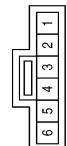


Terminal No.	Color of Wire	Signal Name
3	R/L	—
4	BR	—

Terminal No.	Color of Wire	Signal Name
3	R/L	—
4	BR	—


Connector No.	M159
Connector Name	FRONT HEATED SEAT SWITCH LH
Connector Color	WHITE

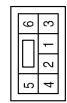


Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE

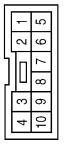

Connector No.	M159
Connector Name	FRONT HEATED SEAT SWITCH LH
Connector Color	WHITE

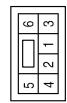

Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE

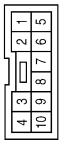


Terminal No.	Color of Wire	Signal Name
5	R/L	—
6	BR	—

Terminal No.	Color of Wire	Signal Name
5	R/L	—
6	BR	—


ILLUMINATION

< COMPONENT DIAGNOSIS >

Connector No.	M160
Connector Name	FRONT HEATED SEAT SWITCH RH
Connector Color	BROWN

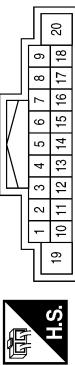


Connector No.	M165
Connector Name	AUDIO UNIT (WITH MID AUDIO SYSTEM)
Connector Color	WHITE

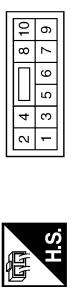

Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW

Terminal No.	Color of Wire	Signal Name
8	BR	ILLUMINATOR
9	R/L	ILLUMINATOR

Terminal No.	Color of Wire	Signal Name
8	BR	ILLUMINATOR
9	R/L	ILLUMINATOR

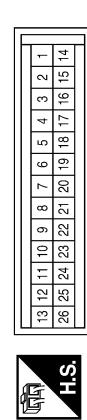


Terminal No.	Color of Wire	Signal Name
23	R/L	ILLUM+
24	BR	ILLUM-

Connector No.	M169
Connector Name	COMBINATION SWITCH (WITHOUT BLUETOOTH)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
7	BR	ILL CONT
8	R/L	LIGHT SW

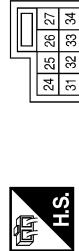

Terminal No.	Color of Wire	Signal Name
23	R/L	ILLUM+
24	BR	ILLUM-

A B C D E F G H I J K L M N O P Z INL

ILLUMINATION

< COMPONENT DIAGNOSIS >

Connector No.	M180
Connector Name	FRONT AIR CONTROL (WITH MANUAL 2 CONTROL DIAL SYSTEM)
Connector Color	BLACK
	

Terminal No.	Color of Wire	Signal Name
8	R/L	ILLUM+
9	BR	ILLUM-

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Connector No.	M202
Connector Name	WIRE TO WIRE
Connector Color	BROWN

11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3
16	15	14	13	12	11	10	9	8	7	6
26	25	24	23	22	21	20	19	18	17	16
25	24	23	22	21	20	19	18	17	16	15
26	25	24	23	22	21	20	19	18	17	16

Terminal No.	Color of Wire	Signal Name
12	BR	—

11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3
16	15	14	13	12	11	10	9	8	7	6
26	25	24	23	22	21	20	19	18	17	16
25	24	23	22	21	20	19	18	17	16	15
26	25	24	23	22	21	20	19	18	17	16

Terminal No.	Color of Wire	Signal Name
12	BR	—

11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3
16	15	14	13	12	11	10	9	8	7	6
26	25	24	23	22	21	20	19	18	17	16
25	24	23	22	21	20	19	18	17	16	15
26	25	24	23	22	21	20	19	18	17	16

Terminal No.	Color of Wire	Signal Name
12	BR	—

11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3
16	15	14	13	12	11	10	9	8	7	6
26	25	24	23	22	21	20	19	18	17	16
25	24	23	22	21	20	19	18	17	16	15
26	25	24	23	22	21	20	19	18	17	16

Connector No.	M205
Connector Name	DVD PLAYER
Connector Color	GRAY

Terminal No.	Color of Wire	Signal Name
8	R/L	ILLUM+
9	BR	ILLUM-

11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3
16	15	14	13	12	11	10	9	8	7	6
26	25	24	23	22	21	20	19	18	17	16
25	24	23	22	21	20	19	18	17	16	15
26	25	24	23	22	21	20	19	18	17	16

Connector No.	M251
Connector Name	WIRE TO WIRE
Connector Color	BROWN

Terminal No.	Color of Wire	Signal Name
9	R/L	—
12	BR	—

11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3
16	15	14	13	12	11	10	9	8	7	6
26	25	24	23	22	21	20	19	18	17	16
25	24	23	22	21	20	19	18	17	16	15
26	25	24	23	22	21	20	19	18	17	16

Terminal No.	Color of Wire	Signal Name
11	R/L	—
12	BR	—

11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14
13	12	11	10	9	8	7	6	5	4	3
16	15	14	13	12	11	10	9	8	7	6
26	25	24	23	22	21	20	19	18	17	16
25	24	23	22	21	20	19	18	17	16	15
26	25	24	23	22	21	20	19	18	17	16

ILLUMINATION


< COMPONENT DIAGNOSIS >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
57	R/L	TAILAMP
59	B	GND (POWER)

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Color	BROWN

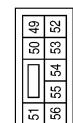


Terminal No.	Color of Wire	Signal Name
49	R/L	ILLUMINATION

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Color	WHITE

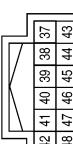


Terminal No.	Color of Wire	Signal Name
7G	L/W	—
10G	W/B	—
31G	L	—
37G	R/L	—
42G	P	—

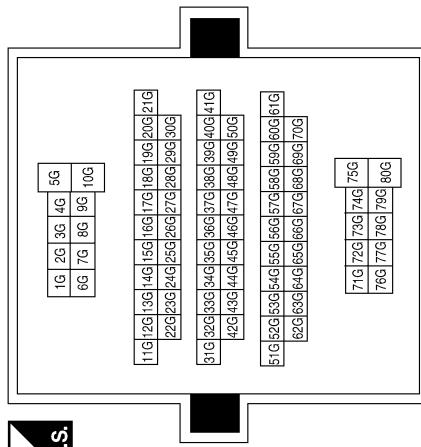

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	E139
Connector Name	WIRE TO WIRE
Connector Color	WHITE

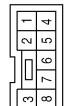


ABLI A1431GB

ILLUMINATION

< COMPONENT DIAGNOSIS >




Connector No.	B107
Connector Name	WIRE TO WIRE
Connector Color	WHITE

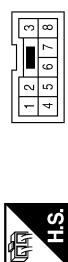

Terminal No.	Color of Wire	Signal Name
6	R/L	—


Terminal No.	Color of Wire	Signal Name
1	B	—
23	R/L	—

Connector No.	B146
Connector Name	WIRE TO WIRE
Connector Color	BROWN

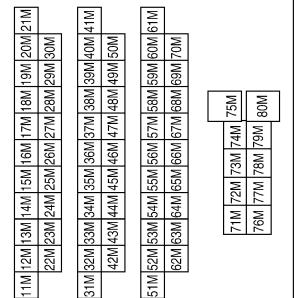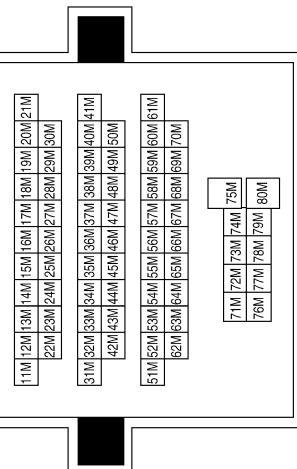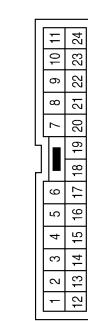

Terminal No.	Color of Wire	Signal Name
28M	R/L	—

Terminal No.	Color of Wire	Signal Name
28M	R/L	—

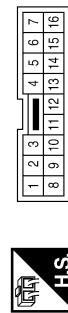

Terminal No.	Color of Wire	Signal Name
7	R/L	—

Terminal No.	Color of Wire	Signal Name
7	R/L	—

Terminal No.	Color of Wire	Signal Name
61	R/L	ILL


Terminal No.	Color of Wire	Signal Name
61	R/L	ILL

ABLIA1432GB


ILLUMINATION

< COMPONENT DIAGNOSIS >


Connector No.	R6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

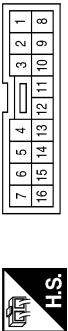

Terminal No.	Color of Wire	Signal Name
11	BR	-
13	R/L	-
15	BR	-
16	R/L	-

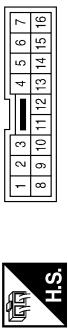


Connector No.	R101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

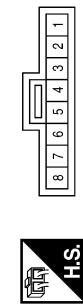

Terminal No.	Color of Wire	Signal Name
1	BR	-
3	R/L	-
5	BR	-
6	R/L	-


Terminal No.	Color of Wire	Signal Name
11	BR	-
13	R/L	-
15	BR	-
16	R/L	-

Connector No.	R105
Connector Name	BLUETOOTH ON INDICATOR
Connector Color	WHITE

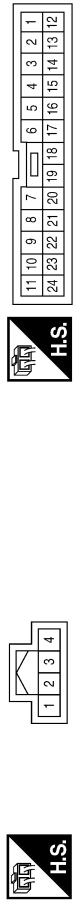

Terminal No.	Color of Wire	Signal Name
3	R/L	DAY/NIGHT ILL SIG
2	BR	-
4	R/L	-

Connector No.	R102
Connector Name	FRONT ROOM/MAP LAMP ASSEMBLY
Connector Color	GRAY

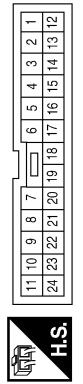

Terminal No.	Color of Wire	Signal Name
7	R/L	ILL+
8	BR	ILL-


Terminal No.	Color of Wire	Signal Name
11	BR	-
13	R/L	-
15	BR	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL


ILLUMINATION

< COMPONENT DIAGNOSIS >


Connector No.	D1
Connector Name	REAR AUDIO REMOTE CONTROL UNIT
Connector Color	WHITE

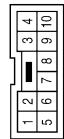

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	BROWN

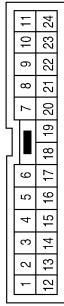


Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE

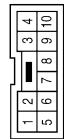


Terminal No.	Color of Wire	Signal Name
22	R/L	ILL
15	B	GND

Connector No.	R204
Connector Name	REAR AUDIO REMOTE CONTROL UNIT
Connector Color	WHITE

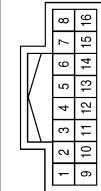


Terminal No.	Color of Wire	Signal Name
6	R/L	ILL
15	B	GND


Connector No.	D13
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE

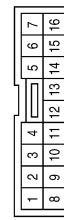

Connector No.	D10
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	BROWN

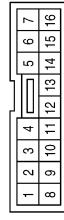

Connector No.	D13
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE

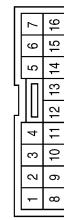

Terminal No.	Color of Wire	Signal Name
8	BR	—
9	R/L	—

ABLIA1434GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000005683066

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	OFF
	A/C switch ON	ON
AUT LIGHT SYS	Outside of the room is dark	OFF
	Outside of the room is bright	ON
AUTO LIGHT SW	Lighting switch OFF	OFF
	Lighting switch AUTO	ON
CDL LOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the LOCK side	ON
CDL UNLOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the UNLOCK side	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
ENGINE RUN	Engine stopped	OFF
	Engine running	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER LOW	Front wiper switch OFF	OFF
	Front wiper switch LO	ON
FR WIPER HI	Front wiper switch OFF	OFF
	Front wiper switch HI	ON
FR WIPER INT	Front wiper switch OFF	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Any position other than front wiper stop position	OFF
	Front wiper stop position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
LIGHT SW 1ST	Lighting switch OFF	OFF
	Lighting switch 1st	ON
HEAD LAMP SW 1	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
HEAD LAMP SW 2	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HI BEAM SW	High beam switch OFF	OFF
	High beam switch HI	ON
IGN ON SW	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
IGN SW CAN	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
KEY ON SW	Key is removed from key cylinder	OFF
	Key is inserted to key cylinder	ON
KEYLESS LOCK	LOCK button of key fob is not pressed	OFF
	LOCK button of key fob is pressed	ON
KEYLESS UNLOCK	UNLOCK button of key fob is not pressed	OFF
	UNLOCK button of key fob is pressed	ON
OIL PRESS SW	• Ignition switch OFF or ACC • Engine running	OFF
	Ignition switch ON	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
REAR DEF SW	Rear window defogger switch OFF	OFF
	Rear window defogger switch ON	ON
TAIL LAMP SW	Lighting switch OFF	OFF
	Lighting switch 1ST	ON
TURN SIGNAL L	Turn signal switch OFF	OFF
	Turn signal switch LH	ON
TURN SIGNAL R	Turn signal switch OFF	OFF
	Turn signal switch RH	ON
VEHICLE SPEED	While driving	Equivalent to speedometer reading

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000005683067

A

B

C

D

E

F

G

H

I

J

K


INL

M

N

O

P

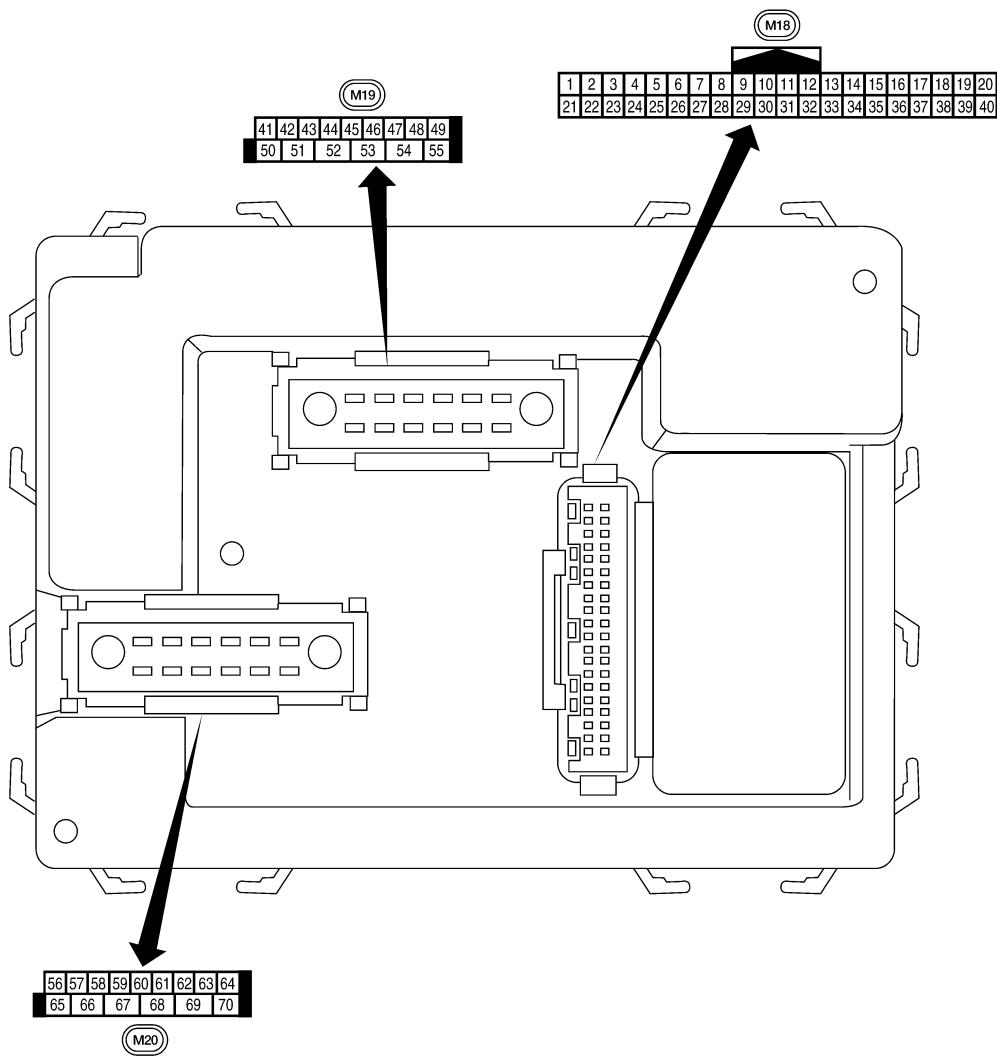





LIIA2443E

Physical Values

INFOID:000000005683068




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

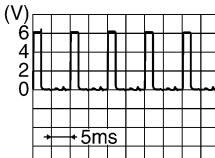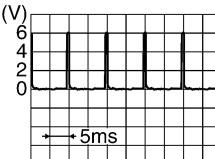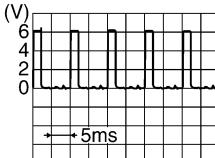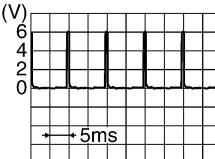Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW OFF)	0V
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	V	Combination switch input 1				
9	Y/B	Rear window defogger switch (Crew Cab)	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	R/L	Front door switch RH (All)	Input	OFF	ON (open)	0V
		Rear door switch lower RH (King Cab)			OFF (closed)	Battery voltage
		Rear door switch upper RH (King Cab)			ON (open)	0V
13	GR	Rear door switch RH (Crew Cab)	Input	OFF	OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

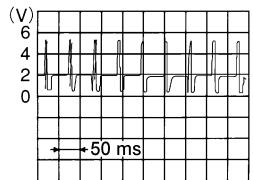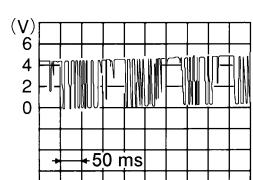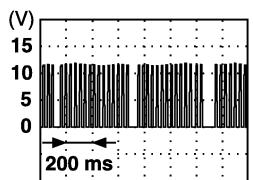Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LIA1893E
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 LIA1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LIA1895E
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	G	BUS	—	—	Ignition switch ON or power window timer operates	 PIIA2344E
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
31	P/L	Cargo lamp switch	Input	OFF	Cargo lamp switch ON	0
					Cargo lamp switch OFF	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1				
37	B/R	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key inserted	0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
47	SB	Front door switch LH (All)	Input	OFF	ON (open)	0V
		Rear door switch lower LH (King Cab)				
		Rear door switch upper LH (King Cab)			OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
50	R/Y	Cargo bed lamp control	Output	OFF	Cargo lamp switch (ON)	0V
					Cargo lamp switch (OFF)	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

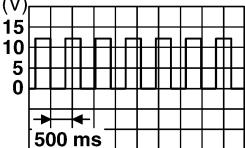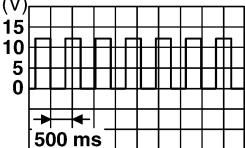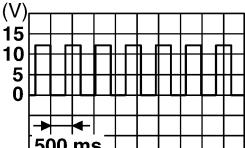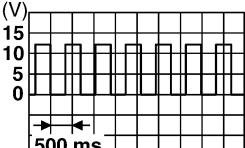Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
51	G/Y	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
56	R/G	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
62	R/W	Step lamp LH and RH	Output	OFF	ON (any door open)	0V
					OFF (all doors closed)	Battery voltage
63	L	Interior room/map lamp	Output	OFF	Any door switch	ON (open) OFF (closed)
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	G/Y	Front door lock actuator RH and rear door lock actuators LH/RH (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
67	B	Ground	Input	ON	—	0V
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	W/R	Power window power supply	Output	—	—	Battery voltage
70	W/B	Battery power supply	Input	OFF	—	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram


INFOID:000000005683069

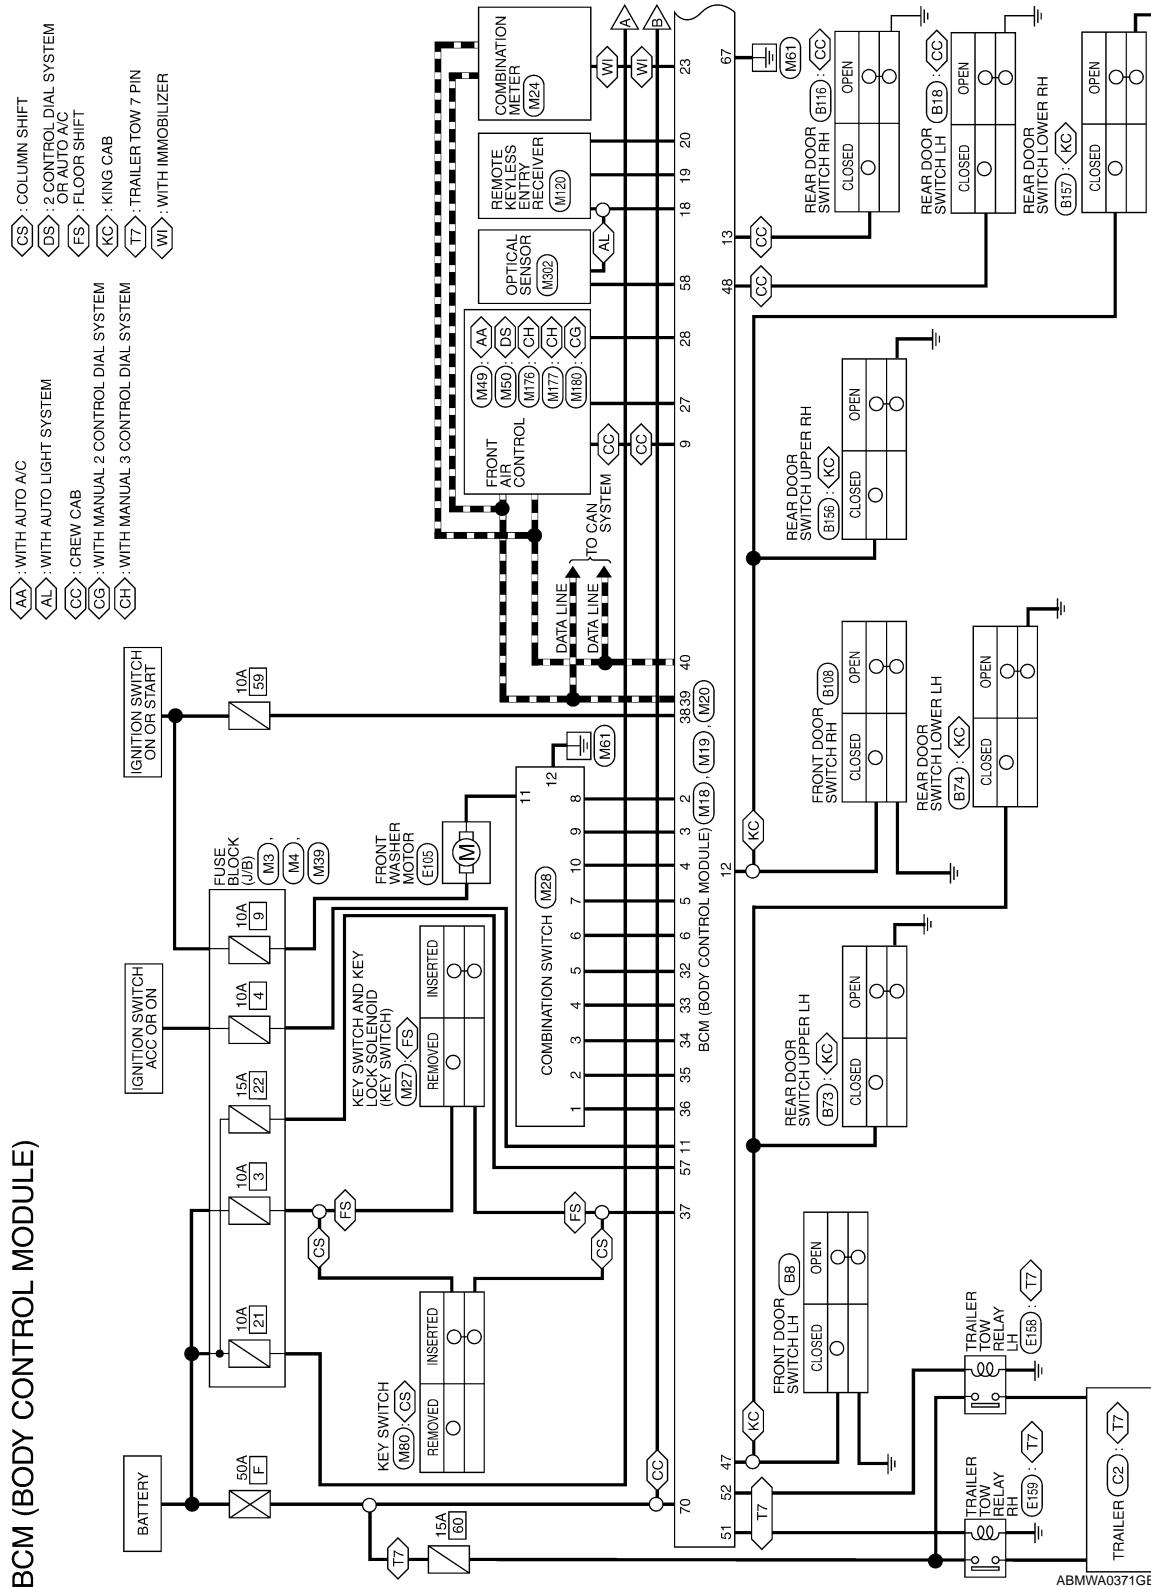

Revision: August 2009

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

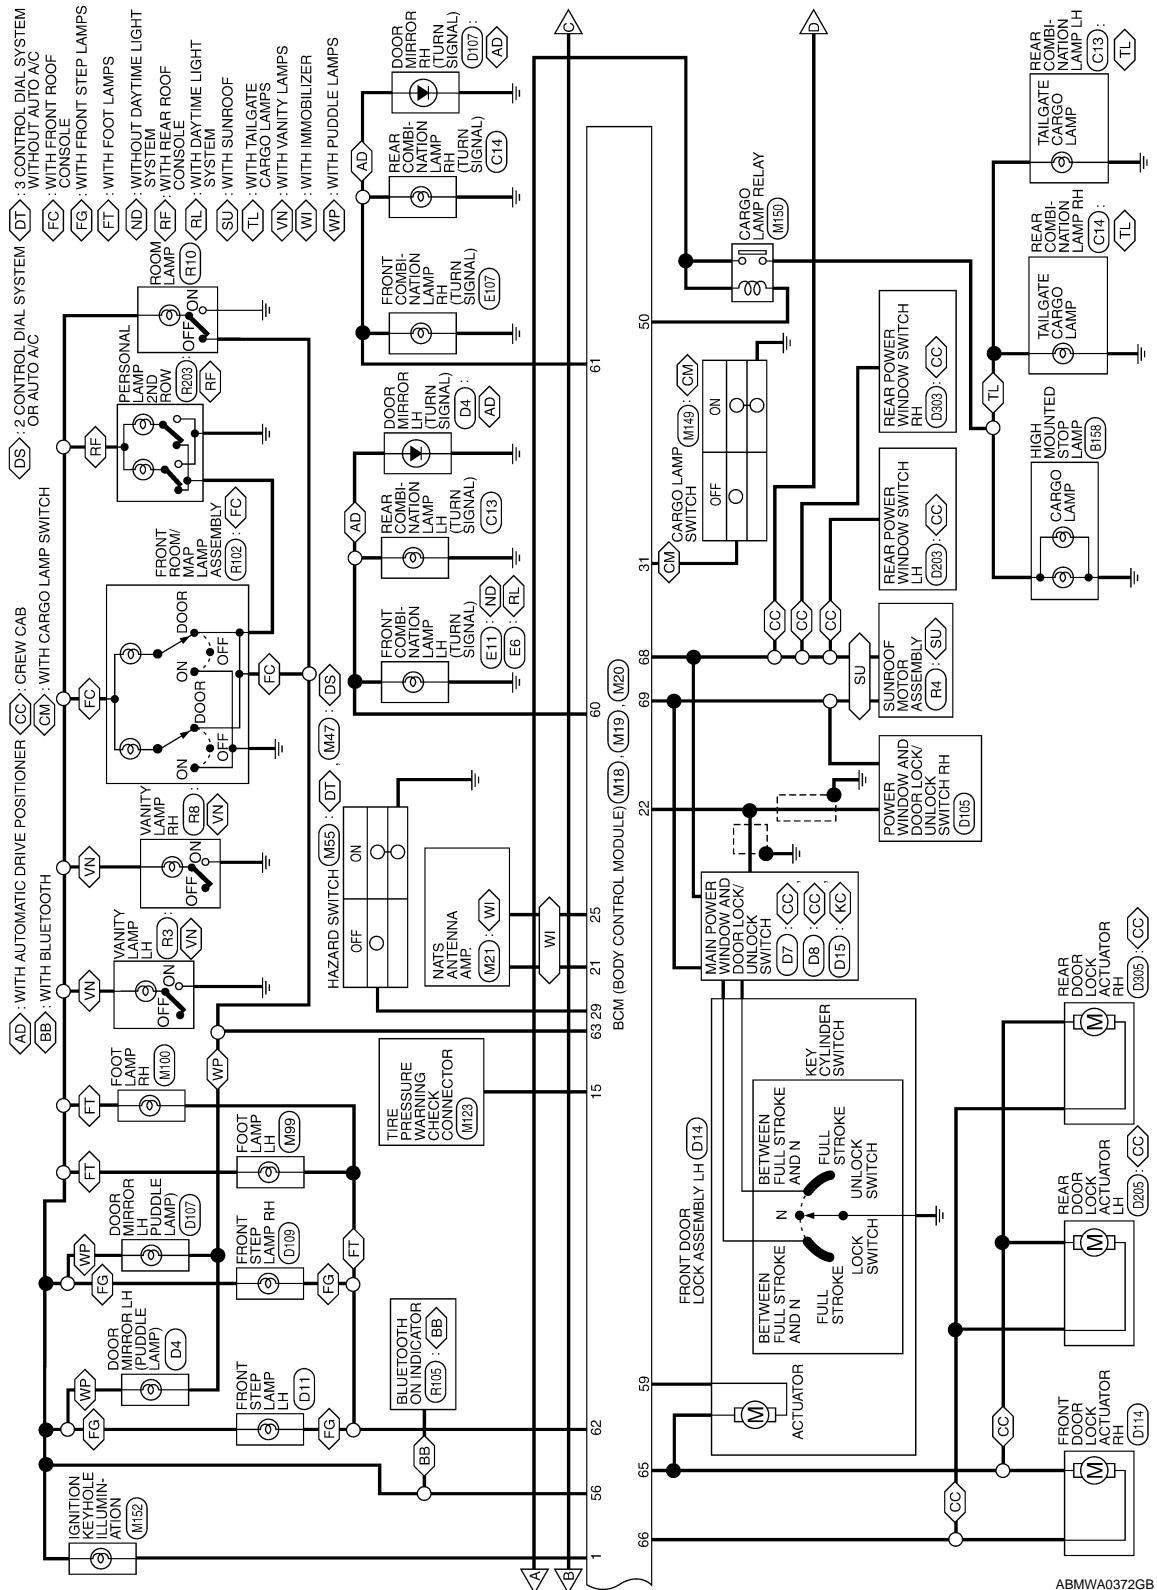


ABMWA0372GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CC : CREW CAB
PS : WITH POWER SEAT
XP : WITHOUT POWER SEAT

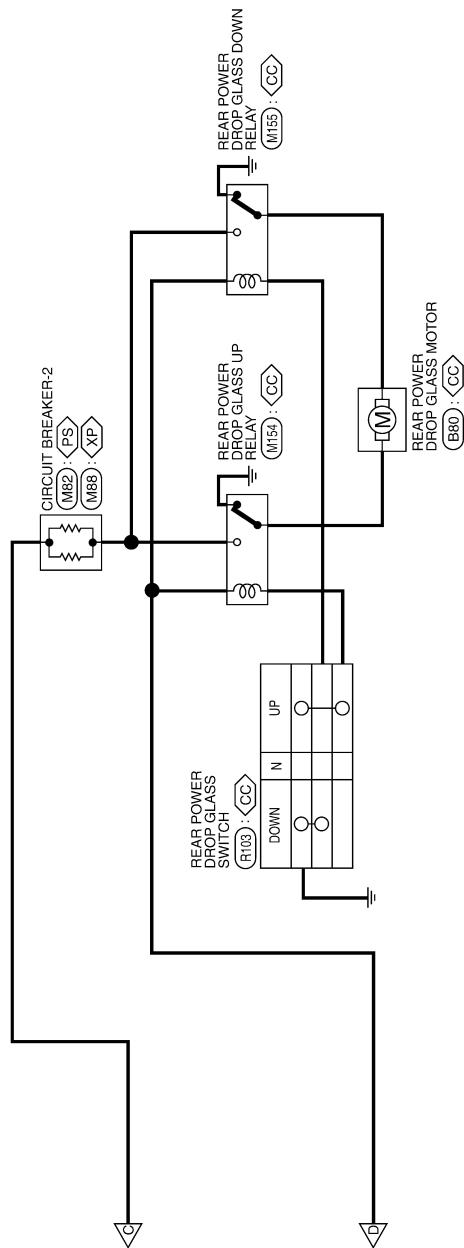

ABMWVA0373GB

A
B
C
D
E
F
G
H
I
J
K
L
INL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE) CONNECTORS


Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
16	—	—	41	—	—
17	—	—	42	—	—
18	P	KEYLESS AND AUTO LIGHT SENSOR GND	43	—	—
19	V/W	KEYLESS TUNER POWER SUPPLY OUTPUT	44	—	—
20	G/W	KEYLESS TUNER SIGNAL	45	—	—
			46	—	—
			47	SB	DOOR SW (DR)
			48	RY	DOOR SW (RL)
			49	—	—
			50	RY	CARGO LAMP OUTPUT
			51	GY	TRAILER FLASHER OUTPUT (RIGHT)
			52	GB	TRAILER FLASHER OUTPUT (LEFT)
			53	—	—
			54	—	—
			55	—	—

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

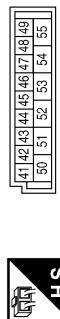



[41] [42]	[3] [44]	[45] [46]	[47] [48]	[49]
50	51	52	53	54

ABMIA1057GB

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

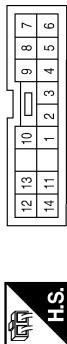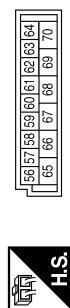

Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
56	R/G	BATTERY SAVER OUTPUT	1	R/W	INPUT 1
57	Y/R	BAT (FUSE)	2	O/B	INPUT 2
58	W/R	AUTO LIGHT SENSOR INPUT 2	3	L	INPUT 3
59	G	DOOR UNLOCK OUTPUT (DR)	4	R/Y	INPUT 4
60	G/B	FLASHER OUTPUT (LEFT)	5	R/G	INPUT 5
61	G/Y	FLASHER OUTPUT (RIGHT)	6	V	OUTPUT 1
62	R/W	STEP LAMP OUTPUT	7	G/B	OUTPUT 2
63	L	ROOM LAMP OUTPUT	8	SB	OUTPUT 5
64	-	-	9	G/Y	OUTPUT 4
65	V	DOOR LOCK OUTPUT (ALL)	10	Y	OUTPUT 3
66	G/Y	DOOR UNLOCK OUTPUT (OTHER)	11	V/W	WASHER MOTOR
67	B	GND (POWER)	12	B	GND
68	W/L	POWER WINDOW POWER SUPPLY (LINKED TO FAP)	13	-	-
69	W/R	POWER WINDOW POWER SUPPLY (BAT)	14	-	-
70	W/B	BAT (F/L)			

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

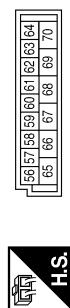

Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1	2	O/B	INPUT 2
3	L	INPUT 3	4	R/Y	INPUT 4
5	R/G	INPUT 5	6	V	OUTPUT 1
7	G/B	OUTPUT 2	8	SB	OUTPUT 5
9	G/Y	OUTPUT 4	10	Y	OUTPUT 3
11	V/W	WASHER MOTOR	12	B	GND
13	-	-	14	-	-

ABMIA1058GB

INFOID:0000000005683070

Fail Safe

Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

DTC Inspection Priority Chart

INFOID:000000005683071

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> U1000: CAN COMM CIRCUIT
2	<ul style="list-style-type: none"> B2190: NATS ANTENNA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM
3	<ul style="list-style-type: none"> C1729: VHCL SPEED SIG ERR C1735: IGNITION SIGNAL
4	<ul style="list-style-type: none"> C1704: LOW PRESSURE FL C1705: LOW PRESSURE FR C1706: LOW PRESSURE RR C1707: LOW PRESSURE RL C1708: [NO DATA] FL C1709: [NO DATA] FR C1710: [NO DATA] RR C1711: [NO DATA] RL C1712: [CHECKSUM ERR] FL C1713: [CHECKSUM ERR] FR C1714: [CHECKSUM ERR] RR C1715: [CHECKSUM ERR] RL C1716: [PRESSDATA ERR] FL C1717: [PRESSDATA ERR] FR C1718: [PRESSDATA ERR] RR C1719: [PRESSDATA ERR] RL C1720: [CODE ERR] FL C1721: [CODE ERR] FR C1722: [CODE ERR] RR C1723: [CODE ERR] RL C1724: [BATT VOLT LOW] FL C1725: [BATT VOLT LOW] FR C1726: [BATT VOLT LOW] RR C1727: [BATT VOLT LOW] RL

DTC Index

INFOID:000000005683072

NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	—	—	BCS-29

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
B2190: NATS ANTENNA AMP	—	—	SEC-18
B2191: DIFFERENCE OF KEY	—	—	SEC-21
B2192: ID DISCORD BCM-ECM	—	—	SEC-22
B2193: CHAIN OF BCM-ECM	—	—	SEC-24
C1708: [NO DATA] FL	—	—	WT-14
C1709: [NO DATA] FR	—	—	WT-14
C1710: [NO DATA] RR	—	—	WT-14
C1711: [NO DATA] RL	—	—	WT-14
C1712: [CHECKSUM ERR] FL	—	—	WT-16
C1713: [CHECKSUM ERR] FR	—	—	WT-16
C1714: [CHECKSUM ERR] RR	—	—	WT-16
C1715: [CHECKSUM ERR] RL	—	—	WT-16
C1716: [PRESSDATA ERR] FL	—	—	WT-18
C1717: [PRESSDATA ERR] FR	—	—	WT-18
C1718: [PRESSDATA ERR] RR	—	—	WT-18
C1719: [PRESSDATA ERR] RL	—	—	WT-18
C1720: [CODE ERR] FL	—	—	WT-16
C1721: [CODE ERR] FR	—	—	WT-16
C1722: [CODE ERR] RR	—	—	WT-16
C1723: [CODE ERR] RL	—	—	WT-16
C1724: [BATT VOLT LOW] FL	—	—	WT-16
C1725: [BATT VOLT LOW] FR	—	—	WT-16
C1726: [BATT VOLT LOW] RR	—	—	WT-16
C1727: [BATT VOLT LOW] RL	—	—	WT-16
C1729: VHCL SPEED SIG ERR	—	—	WT-19
C1735: IGNITION SIGNAL	—	—	WT-20

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

INTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

INTERIOR LIGHTING SYSTEM SYMPTOMS

Symptom Table

INFOID:000000005387230

CAUTION:

Perform the self-diagnosis with CONSULT-III before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
All of the following lamps do not turn ON <ul style="list-style-type: none">• Room lamp (if equipped)• Front room/map lamp assembly (if equipped)• Personal lamp 2nd (if equipped)• Vanity lamps (if equipped)• Front step lamps (if equipped)• Puddle lamps (if equipped)• Foot lamps (if equipped)	<ul style="list-style-type: none">• Harness between BCM and each interior room lamp• BCM	<p>Battery saver output/power supply circuit. Refer to INL-17, "Description".</p>
Some or all of the following interior room lamps do not turn ON/OFF <ul style="list-style-type: none">• Room lamp (if equipped)• Puddle lamps (if equipped)• Front room/map lamp assembly (if equipped)• Personal lamp 2nd row (if equipped)	<ul style="list-style-type: none">• Harness between BCM and each door switch• Harness between BCM and each interior room lamp• BCM	<p>Door switch circuit Refer to DLK-26, "KING CAB : Diagnosis Procedure" (king cab) or DLK-28, "CREW CAB : Diagnosis Procedure" (crew cab).</p> <p>Interior room lamp control circuit. Refer to INL-19, "Description".</p>
Some or all of the following lamps do not turn ON/OFF <ul style="list-style-type: none">• Front step lamps• Foot lamps (if equipped)	<ul style="list-style-type: none">• Harness between BCM and step lamps and foot lamps• BCM	<p>Step lamp circuit. Refer to INL-22, "Description".</p>
Cargo lamp and tailgate cargo lamps (if equipped) do not turn ON/OFF	<ul style="list-style-type: none">• Harness between BCM and cargo lamp relay• Harness between cargo lamp relay and cargo lamps• BCM• Cargo lamp relay	<p>Cargo lamp control circuit. Refer to INL-24, "Description".</p>
Ignition keyhole illumination does not turn ON/OFF	<ul style="list-style-type: none">• Harness between BCM and ignition keyhole illumination• BCM	<p>Ignition keyhole illumination control circuit. Refer to INL-28, "Description".</p>
Interior room lamp timer does not activate. (It turns ON/ OFF when the door opens/closes.)	—	<p>Check the interior room lamp setting. Refer to INL-13, "INT LAMP : CONSULT-III Function (BCM - INT LAMP)".</p>
Interior room lamp battery saver does not activate.	—	<p>Check the interior room lamp battery saver setting. Refer to INL-14, "BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)".</p>

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000005713916

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

General precautions for service operations

INFOID:0000000005387232

- When removing or disassembling any part, be careful not to damage or deform it. Protect parts which may get in the way with cloth.
- When removing parts with a screw driver or other tool, protect parts by wrapping them with vinyl or tape.
- Keep removed parts protected with cloth.
- If an non-reuseable part is removed, replace it with a new one.
- After re-assembly has been completed, make sure each part functions correctly.
- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps or remove sealant residue.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P


< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR**INTERIOR ROOM LAMP****Removal and Installation**

INFOID:0000000005387233

ROOM/MAP LAMP**Removal**


1. Remove overhead console (3). Refer to [INT-21, "Removal and Installation"](#).
2. Disconnect connectors (4) and remove the room/map lamp screws (1), then remove room/map lamp (2) from overhead console (3).

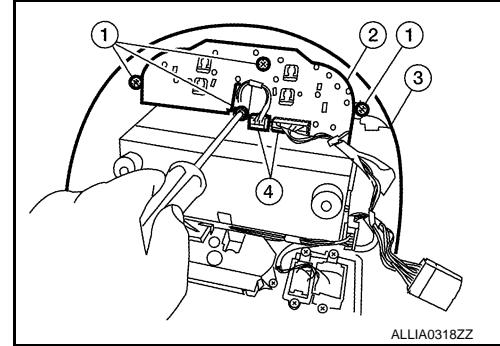**Installation**

Installation is in the reverse order of removal.

Bulb Replacement

1. Using a suitable tool (A), remove room/map lamp lens (1).
(○): Pawl
CAUTION:
Wrap a cloth around suitable tool (A) to protect the housing and lens (1).
2. Release one side of the bulb (2) from the tab, then pull straight downward to remove.

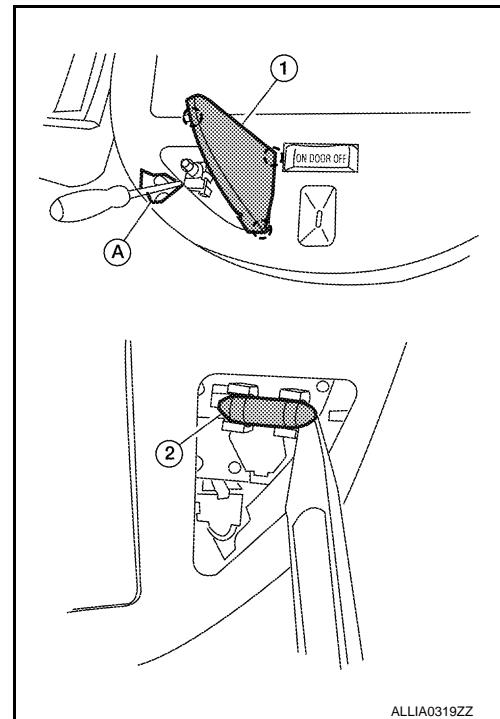Room/map lamp bulb : 12V - 6W**VANITY MIRROR LAMP****Removal**The vanity mirror lamp is replaced as part of the sunvisor assembly. Refer to [INT-21, "Removal and Installation"](#).**Installation**

Installation is in the reverse order of removal.

Bulb Replacement

1. Disconnect the negative battery terminal.

INTERIOR ROOM LAMP

< ON-VEHICLE REPAIR >

2. Using a suitable tool (A), release the tabs and remove the vanity mirror lamp lens (1).


Ⓐ: Pawl

CAUTION:

Wrap a cloth around suitable tool (A) to protect the housing and lens.

3. Release one side of the bulb (2) from the tab, then pull straight out to remove.

Vanity mirror lamp bulb : 12V - 1.8W

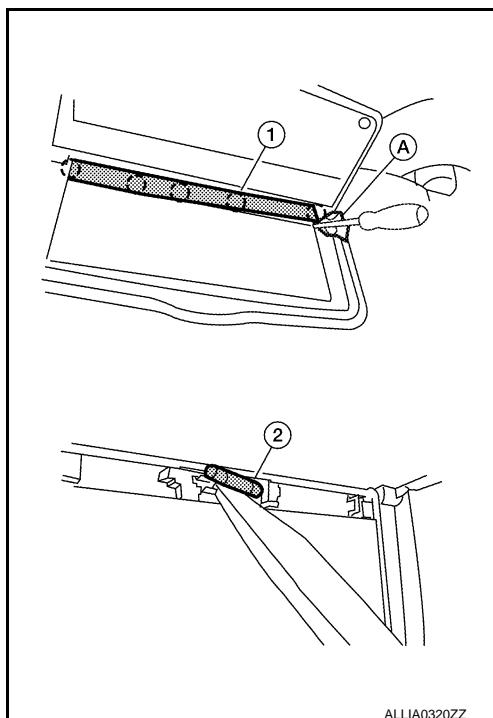

ALLIA0320ZZ


A
B
C
D
E
F
G
H

I
J
K

INL

M
N

O
P

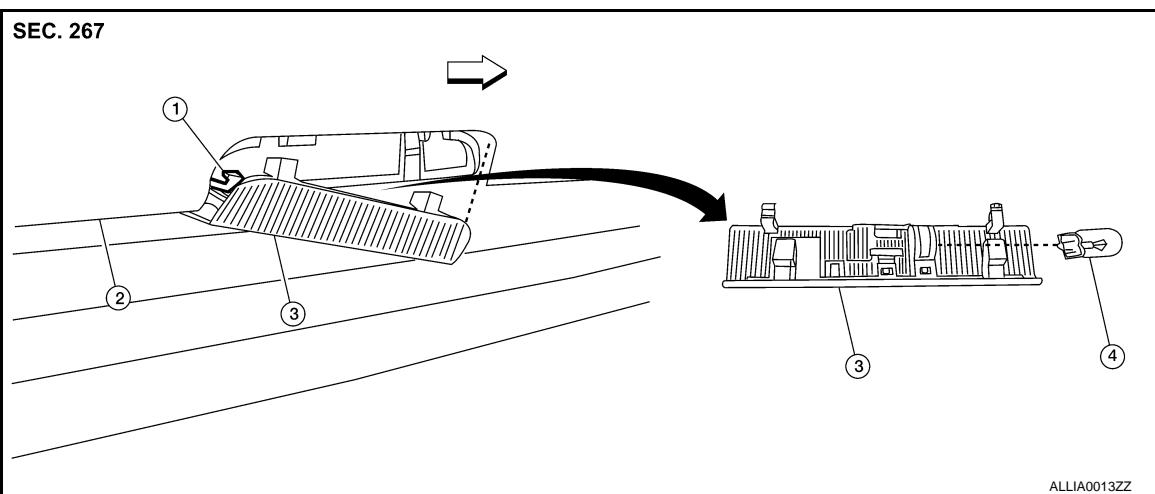

ALLIA0013ZZ

1. Step lamp connector
2. Door finisher
3. Step lamp lens/socket
4. Step lamp bulb

← Vehicle front

1. Insert a suitable tool between door finisher and step lamp lens/socket to release the pawls.

CAUTION:

Wrap a cloth around the suitable tool to protect door finisher and lens.

2. Disconnect the step lamp connector, then remove step lamp.

Installation

Installation is in the reverse order of removal.

Bulb Replacement

1. Remove the step lamp lens/socket.
2. Pull the bulb straight out to remove.

INTERIOR ROOM LAMP


< ON-VEHICLE REPAIR >

Step lamp bulb : 12V - 3.8W

PERSONAL LAMP - TYPE A (if equipped)

Removal

1. Remove overhead console. Refer to [INT-21, "Removal and Installation"](#).
2. Remove personal lamp screws (3).
3. Disconnect personal lamp electrical connectors (1), then remove personal lamp (2) from overhead console.

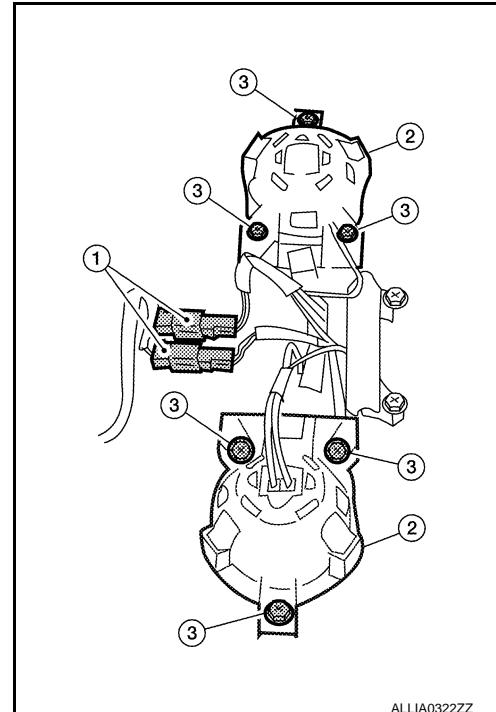

ALLIA0322ZZ


Installation

Installation is in the reverse order of removal.

Bulb Replacement

1. Disconnect the negative battery terminal.
2. Using a suitable tool (A), release the pawls and remove personal lamp lens (1).
○: Pawl
CAUTION:
Wrap a cloth around suitable tool (A) to protect the housing and lens (1).
3. Pull bulb (2) straight out to remove.

Personal lamp bulb (type A) : 12V - 8W

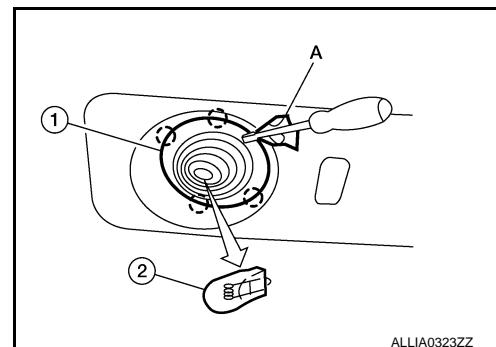


ALLIA0323ZZ

FOOTWELL LAMP

Removal

Rotate footwell lamp socket (3) counterclockwise from bracket.

- Bulb shield (1)
- Bulb (2)

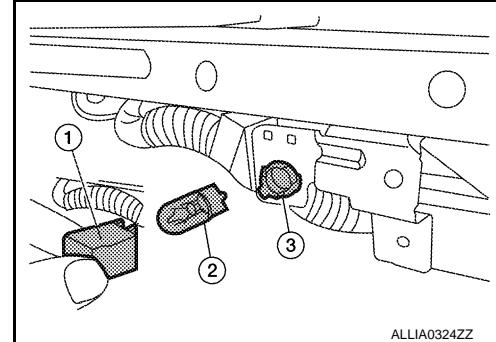

ALLIA0324ZZ

INTERIOR ROOM LAMP

< ON-VEHICLE REPAIR >

Installation

Installation is in the reverse order of removal.

A

Bulb Replacement

1. Release the pawls and remove bulb shield (1) from bracket.
2. Pull bulb (2) straight out from footwell lamp socket (3) to remove.

B

Footwell lamp bulb : 12V - 3.4W

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

ILLUMINATION


Removal and Installation

INFOID:0000000005387234

ILLUMINATION CONTROL SWITCH

Removal

The illumination control switch (1) is replaced as a part of the combination meter assembly. Refer to [MWI-101, "Removal and Installation"](#).

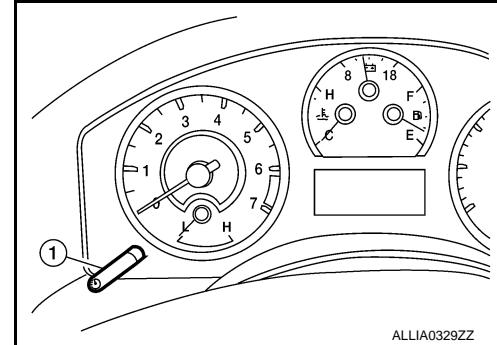


Installation

Installation is in the reverse order of removal.

PERSONAL LAMP - TYPE B (if equipped)

Removal

1. Using a suitable tool (A), release the pawls and remove the personal lamp lens (1).
2. Remove personal lamp screws (2).
3. Disconnect the connector, then remove personal lamp.

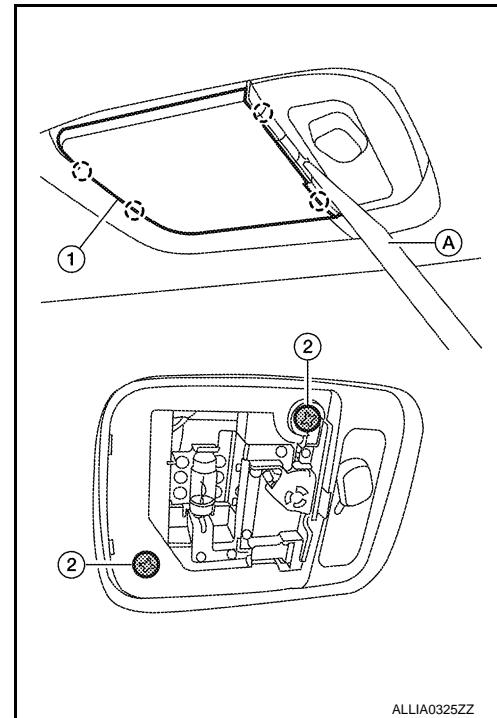

Installation

Installation is in the reverse order of removal.

Bulb Replacement


ILLUMINATION

< ON-VEHICLE REPAIR >

1. Using a suitable tool, release the pawls and remove the personal lamp lens.
2. Release the personal lamp bulb retainers (1), then pull bulb (2) straight out to remove.

Personal lamp bulb (type B)

: 12V - 6W

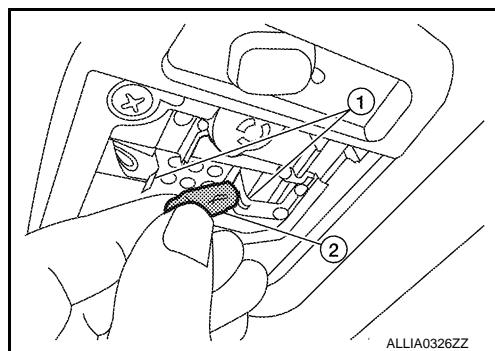


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSOLE ILLUMINATION LAMP (if equipped)

Removal

The console illumination lamp (1) is replaced as part of the room/map lamp assembly (2). Refer to [INL-76, "Removal and Installation"](#).

⇦: Vehicle front

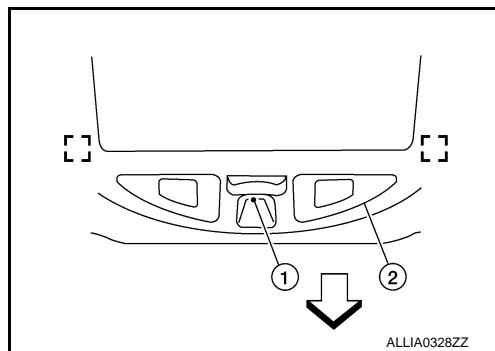


E
F
G
H
I
J
K
L
M
N
O
P

Installation

Installation is in the reverse order of removal.

Bulb Replacement

1. Remove overhead console. Refer to [INT-21, "Removal and Installation"](#).
2. Rotate console illumination lamp bulb (1) counterclockwise, then pull straight out away from room/map lamp assembly (2) to remove.

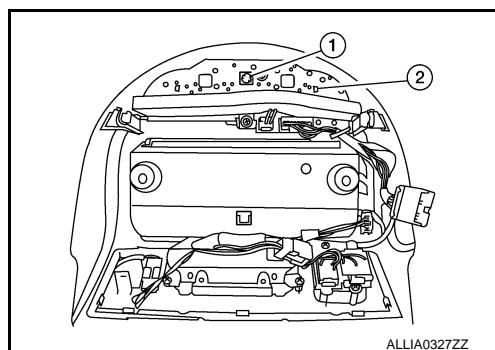

INL

GLOVE BOX LAMP

Removal

1. Remove instrument lower panel RH and glove box. Refer to [IP-15, "Removal and Installation"](#).
2. Rotate glove box lamp socket and rotate counterclockwise to release from steering member.

Installation

Installation is in the reverse order of removal.

Bulb Replacement


1. Remove instrument lower panel RH and glove box. Refer to [IP-15, "Removal and Installation"](#).

ILLUMINATION

< ON-VEHICLE REPAIR >

2. Pull bulb (2) straight out from glove box lamp socket (1) to remove.

Glove box lamp bulb : 12V - 3.4W

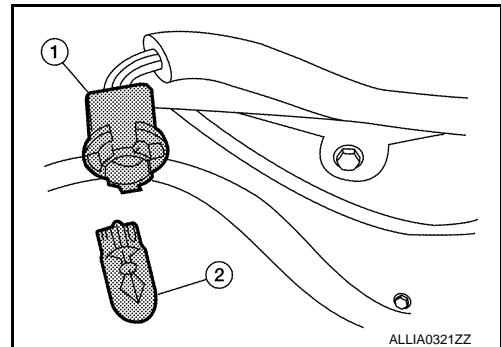

BULB SPECIFICATIONS

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

BULB SPECIFICATIONS

Interior Lamp/Illumination

INFOID:000000005387235

Item	Wattage (W)*
Room/map lamp	6
Vanity mirror lamp	1.8
Step lamp	3.8
Personal lamp	8
Footwell lamp	3.4
Console illumination lamp	*

*: Always check with the Parts Department for the latest parts information.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P