

ATC

SECTION ATC

AUTOMATIC AIR CONDITIONER

CONTENTS

PRECAUTIONS	4	GASOLINE ENGINE: CWV-615M COMPRESSOR)	18
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	4	DUAL-PRESSURE SWITCH (WITH DIESEL ENGINE: DVK-11G COMPRESSOR)	18
Precautions for Working with HFC-134a (R-134a)....	4	PRESSURE RELIEF VALVE (WITH GASOLINE ENGINE: CWV-615M COMPRESSOR)	18
General Refrigerant Precautions	5	V-6 Variable Displacement Compressor (With Gasoline Engine: CWV-615M Compressor)	19
Lubricant Precautions	5	GENERAL INFORMATION	19
Precautions for Refrigerant Connection	5	DESCRIPTION	20
FEATURES OF NEW TYPE REFRIGERANT CONNECTION	6	Component Layout	23
O-RING AND REFRIGERANT CONNECTION....	7	LUBRICANT	24
Precautions for Servicing Compressor	10	Maintenance of Lubricant Quantity in Compressor..	24
Precautions for Service Equipment	10	LUBRICANT	24
RECOVERY/RECYCLING EQUIPMENT	10	LUBRICANT RETURN OPERATION	24
ELECTRONIC LEAK DETECTOR	10	LUBRICANT ADJUSTING PROCEDURE FOR	
VACUUM PUMP	10	COMPONENTS REPLACEMENT EXCEPT	
MANIFOLD GAUGE SET	10	COMPRESSOR	25
SERVICE HOSES	11	LUBRICANT ADJUSTING PROCEDURE FOR	
SERVICE COUPLERS	11	COMPRESSOR REPLACEMENT	25
REFRIGERANT WEIGHT SCALE	11	AIR CONDITIONER CONTROL	27
CALIBRATING ACR4 WEIGHT SCALE	11	Description of Air Conditioner LAN Control System..	27
CHARGING CYLINDER	12	System Construction	27
Precautions for Leak Detection Dye	12	OPERATION	27
IDENTIFICATION	13	TRANSMISSION DATA AND TRANSMISSION	
IDENTIFICATION LABEL FOR VEHICLE	13	ORDER	28
Wiring Diagrams and Trouble Diagnosis	13	AIR MIX DOOR CONTROL (AUTOMATIC TEMPERATURE CONTROL)	29
PREPARATION	14	FAN SPEED CONTROL	29
Special Service Tools	14	INTAKE DOOR CONTROL	29
WITH GASOLINE ENGINE (CWV-615M COMPRESSOR)	14	OUTLET DOOR CONTROL	29
WITH DIESEL ENGINE (DVK-11G COMPRESSOR)	14	MAGNET CLUTCH CONTROL	29
HFC-134a (R-134a) Service Tools and Equipment..	15	SELF-DIAGNOSTIC SYSTEM	29
REFRIGERATION SYSTEM	18	Description of Control System	30
Refrigerant Cycle	18	Control Operation	31
REFRIGERANT FLOW	18	MODE CONTROL DIAL	31
FREEZE PROTECTION (WITH GASOLINE ENGINE: CWV-615M COMPRESSOR)	18	TEMPERATURE CONTROL DIAL (POTENTIO	
Refrigerant System Protection	18	TEMPERATURE CONTROL)	31
REFRIGERANT PRESSURE SENSOR (WITH		FAN CONTROL DIAL	31

INTAKE SWITCH	31	DOOR MOTOR	78
A/C SWITCH	31	Intake Door Motor Circuit	79
Discharge Air Flow	32	INSPECTION FLOW	79
System Description	33	SYSTEM DESCRIPTION	80
SWITCHES AND THEIR CONTROL FUNCTION..	33	COMPONENT DESCRIPTION	81
TROUBLE DIAGNOSIS	34	DIAGNOSTIC PROCEDURE FOR INTAKE DOOR MOTOR	81
How to Perform Trouble Diagnoses for Quick and Accurate Repair	34	Blower Motor Circuit	82
WORK FLOW	34	INSPECTION FLOW	82
SYMPTOM TABLE	34	SYSTEM DESCRIPTION	83
Component Parts and Harness Connector Location..	35	COMPONENT DESCRIPTION	84
ENGINE COMPARTMENT	35	DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR	84
PASSENGER COMPARTMENT	36	COMPONENT INSPECTION	87
Schematic	37	Magnet Clutch Circuit	88
WITH GASOLINE ENGINE	37	INSPECTION FLOW	88
WITH DIESEL ENGINE	38	SYSTEM DESCRIPTION	89
Wiring Diagram —A/C—	39	DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH	89
WITH GASOLINE ENGINE / LHD MODELS	39	COMPONENT INSPECTION	94
WITH GASOLINE ENGINE / RHD MODELS	43	Insufficient Cooling	96
WITH DIESEL ENGINE / LHD MODELS	47	INSPECTION FLOW	96
WITH DIESEL ENGINE / RHD MODELS	51	PERFORMANCE TEST DIAGNOSIS	98
Auto Amp. Terminals and Reference Value	55	PERFORMANCE CHART	100
PIN CONNECTOR TERMINAL LAYOUT	55	TROUBLE DIAGNOSIS FOR UNUSUAL PRESSED	102
TERMINALS AND REFERENCE VALUE FOR AUTO AMP.	55	Insufficient Heating	105
Self-diagnosis Function	57	INSPECTION FLOW	105
DESCRIPTION	57	Noise	107
FUNCTION CONFIRMATION PROCEDURE	59	INSPECTION FLOW	107
AUXILIARY MECHANISM: TEMPERATURE SETTING TRIMMER	63	Self-diagnosis	108
AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER	63	INSPECTION FLOW	108
AUXILIARY MECHANISM: INLET PORT MEMORY FUNCTION	64	Ambient Sensor Circuit	109
Operational Check	65	COMPONENT DESCRIPTION	109
CHECKING BLOWER	65	AMBIENT TEMPERATURE INPUT PROCESS	109
CHECKING DISCHARGE AIR	65	DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR	109
CHECKING INTAKE DOOR	65	COMPONENT INSPECTION	111
CHECKING TEMPERATURE DECREASE	66	In-vehicle Sensor Circuit	111
CHECKING TEMPERATURE INCREASE	66	COMPONENT DESCRIPTION	111
CHECKING A/C SWITCH	66	DIAGNOSTIC PROCEDURE FOR IN-VEHICLE SENSOR	112
Power Supply and Ground Circuit for Auto Amp.	67	COMPONENT INSPECTION	113
INSPECTION FLOW	67	Sunload Sensor Circuit	114
COMPONENT DESCRIPTION	67	COMPONENT DESCRIPTION	114
DIAGNOSTIC PROCEDURE FOR A/C SYSTEM..	68	SUNLOAD INPUT PROCESS	114
LAN System Circuit	69	DIAGNOSTIC PROCEDURE FOR SUNLOAD SENSOR	114
DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT	69	COMPONENT INSPECTION	116
Mode Door Motor Circuit	73	Intake Sensor Circuit	117
INSPECTION FLOW	73	COMPONENT DESCRIPTION	117
SYSTEM DESCRIPTION	74	DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR	117
COMPONENT DESCRIPTION	75	COMPONENT INSPECTION	119
DIAGNOSTIC PROCEDURE FOR MODE DOOR MOTOR	75	CONTROLLER	120
Air Mix Door Motor Circuit	76	Removal and Installation	120
INSPECTION FLOW	76	REMOVAL	120
SYSTEM DESCRIPTION	77	INSTALLATION	120
COMPONENT DESCRIPTION	78		
DIAGNOSTIC PROCEDURE FOR AIR MIX			

AMBIENT SENSOR	121	REFRIGERANT LINES	141
Removal and Installation	121	HFC-134a (R-134a) Service Procedure	141
REMOVAL	121	SETTING OF SERVICE TOOLS AND EQUIP-	
INSTALLATION	121	MENT	141
IN-VEHICLE SENSOR	122	Components	143
Removal and Installation	122	WITH GASOLINE ENGINE	143
REMOVAL	122	WITH DIESEL ENGINE	144
INSTALLATION	122	Removal and Installation of Compressor	144
SUNLOAD SENSOR	123	REMOVAL	144
Removal and Installation	123	INSTALLATION	146
REMOVAL	123	Removal and Installation of Compressor Clutch	146
INSTALLATION	123	REMOVAL	146
INTAKE SENSOR	124	INSTALLATION	150
Removal and Installation	124	Removal and Installation of Low-pressure Flexible	
REMOVAL	124	Hose	153
INSTALLATION	124	REMOVAL	153
BLOWER UNIT	125	INSTALLATION	154
Removal and Installation	125	Removal and Installation of High-pressure Flexible	
REMOVAL	125	Hose	154
INSTALLATION	125	REMOVAL	154
Disassembly and Assembly	126	INSTALLATION	155
BLOWER MOTOR	127	Removal and Installation of High-pressure Pipe	155
Removal and Installation	127	REMOVAL	155
REMOVAL	127	INSTALLATION	155
INSTALLATION	127	Removal and Installation of Condenser	155
INTAKE DOOR MOTOR	128	REMOVAL	155
Removal and Installation	128	INSTALLATION	156
REMOVAL	128	Removal and Installation of Liquid Tank	156
INSTALLATION	128	REMOVAL	156
FAN CONTROL AMPLIFIER	129	INSTALLATION	157
Removal and Installation	129	Removal and Installation of Refrigerant Pressure	
REMOVAL	129	Sensor	157
INSTALLATION	129	REMOVAL	157
VENTILATION AIR FILTER	130	INSTALLATION	157
Removal and Installation	130	Removal and Installation of Dual-pressure Switch	158
FUNCTION	130	REMOVAL	158
REPLACEMENT TIMING	130	INSTALLATION	158
REPLACEMENT PROCEDURES	130	Removal and Installation of Evaporator	158
HEATER & COOLING UNIT ASSEMBLY	131	REMOVAL	158
Removal and Installation	131	INSTALLATION	159
REMOVAL	131	Removal and Installation of Expansion Valve	159
INSTALLATION	132	REMOVAL	159
Disassembly and Assembly	132	INSTALLATION	159
MODE DOOR MOTOR	134	Checking for Refrigerant Leaks	160
Removal and Installation	134	Checking System for Leaks Using the Fluorescent	
REMOVAL	134	Leak Detector	160
INSTALLATION	134	Dye Injection	160
AIR MIX DOOR MOTOR	135	Electronic Refrigerant Leak Detector	161
Removal and Installation	135	PRECAUTIONS FOR HANDLING LEAK	
REMOVAL	135	DETECTOR	161
INSTALLATION	135	CHECKING PROCEDURE	161
HEATER CORE	136	SERVICE DATA AND SPECIFICATIONS (SDS)	164
Removal and Installation	136	Compressor	164
REMOVAL	136	Lubricant	164
INSTALLATION	136	Refrigerant	164
DUCTS AND GRILLES	137	Engine Idling Speed	164
Removal and Installation	137	Belt Tension	164
REMOVAL	137		
INSTALLATION	140		

A
B
C
D
E
F
G
H
I
K
L
M

ATC

PRECAUTIONS

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

EJS004YA

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Working with HFC-134a (R-134a)

EJS000T1

WARNING:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. These refrigerants must never be mixed, even in the smallest amount. If the refrigerants are mixed and compressor malfunction is likely to occur.
- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If lubricant other than that specified is used, compressor malfunction is likely to occur.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified lubricant from a sealed container. Immediately reseal containers of lubricant. Without proper sealing, lubricant will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Use only approved recovery/recycling equipment to discharge HFC-134a (R-134a) refrigerant. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
 - Do not allow lubricant (Nissan A/C System Oil Type S or R) to come in contact with styrofoam parts. Damage may result.

PRECAUTIONS

General Refrigerant Precautions

EJS00072

WARNING:

- Do not release refrigerant into the air. Use approved recovery/recycling equipment to capture the refrigerant every time an air conditioning system is discharged.
- Always wear eye and hand protection (goggles and gloves) when working with any refrigerant or air conditioning system.
- Do not store or heat refrigerant containers above 52°C (125°F).
- Do not heat a refrigerant container with an open flame; if container warming is required, place the bottom of the container in a warm pail of water.
- Do not intentionally drop, puncture, or incinerate refrigerant containers.
- Keep refrigerant away from open flames: poisonous gas will be produced if refrigerant burns.
- Refrigerant will displace oxygen, therefore be certain to work in well ventilated areas to prevent suffocation.
- Do not pressure test or leak test HFC-134a (R-134a) service equipment and/or vehicle air conditioning systems with compressed air during repair. Some mixtures of air and HFC-134a (R-134a) have been shown to be combustible at elevated pressures. These mixtures, if ignited, may cause injury or property damage. Additional health and safety information may be obtained from refrigerant manufacturers.

Lubricant Precautions

EJS0027Y

- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If lubricant other than that specified is used, compressor malfunction is likely to occur.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified lubricant from a sealed container. Immediately reseal containers of lubricant. Without proper sealing, lubricant will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Use only approved recovery/recycling equipment to discharge HFC-134a (R-134a) refrigerant. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
 - Do not allow lubricant (Nissan A/C System Oil Type S or R) to come in contact with styrofoam parts. Damage may result.

ATC

Precautions for Refrigerant Connection

EJS00074

A new type refrigerant connection has been introduced to all refrigerant lines except the following location.


- Expansion valve to cooling unit
- Refrigerant pressure sensor to liquid tank

M

PRECAUTIONS

FEATURES OF NEW TYPE REFRIGERANT CONNECTION


- The O-ring has been relocated. It has also been provided with a groove for proper installation. This eliminates the chance of the O-ring being caught in, or damaged by, the mating part. The sealing direction of the O-ring is now set vertically in relation to the contacting surface of the mating part to improve sealing characteristics.
- The reaction force of the O-ring will not occur in the direction that causes the joint to pull out, thereby facilitating piping connections.

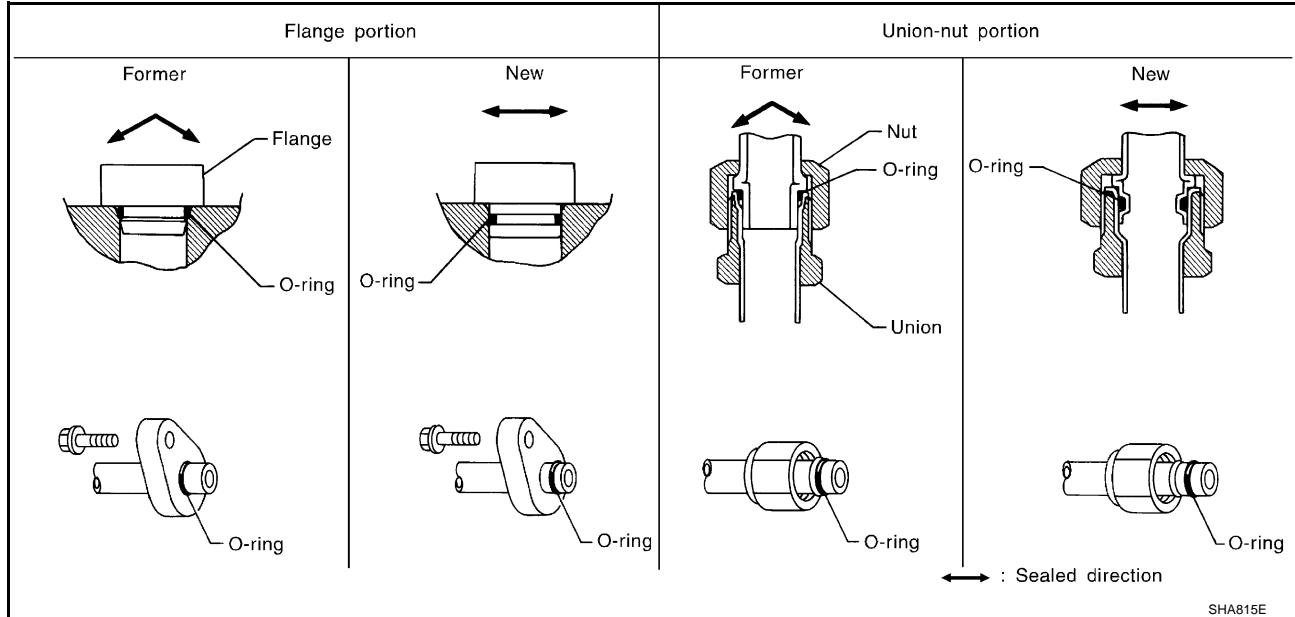

PRECAUTIONS

O-RING AND REFRIGERANT CONNECTION

With Gasoline Engine

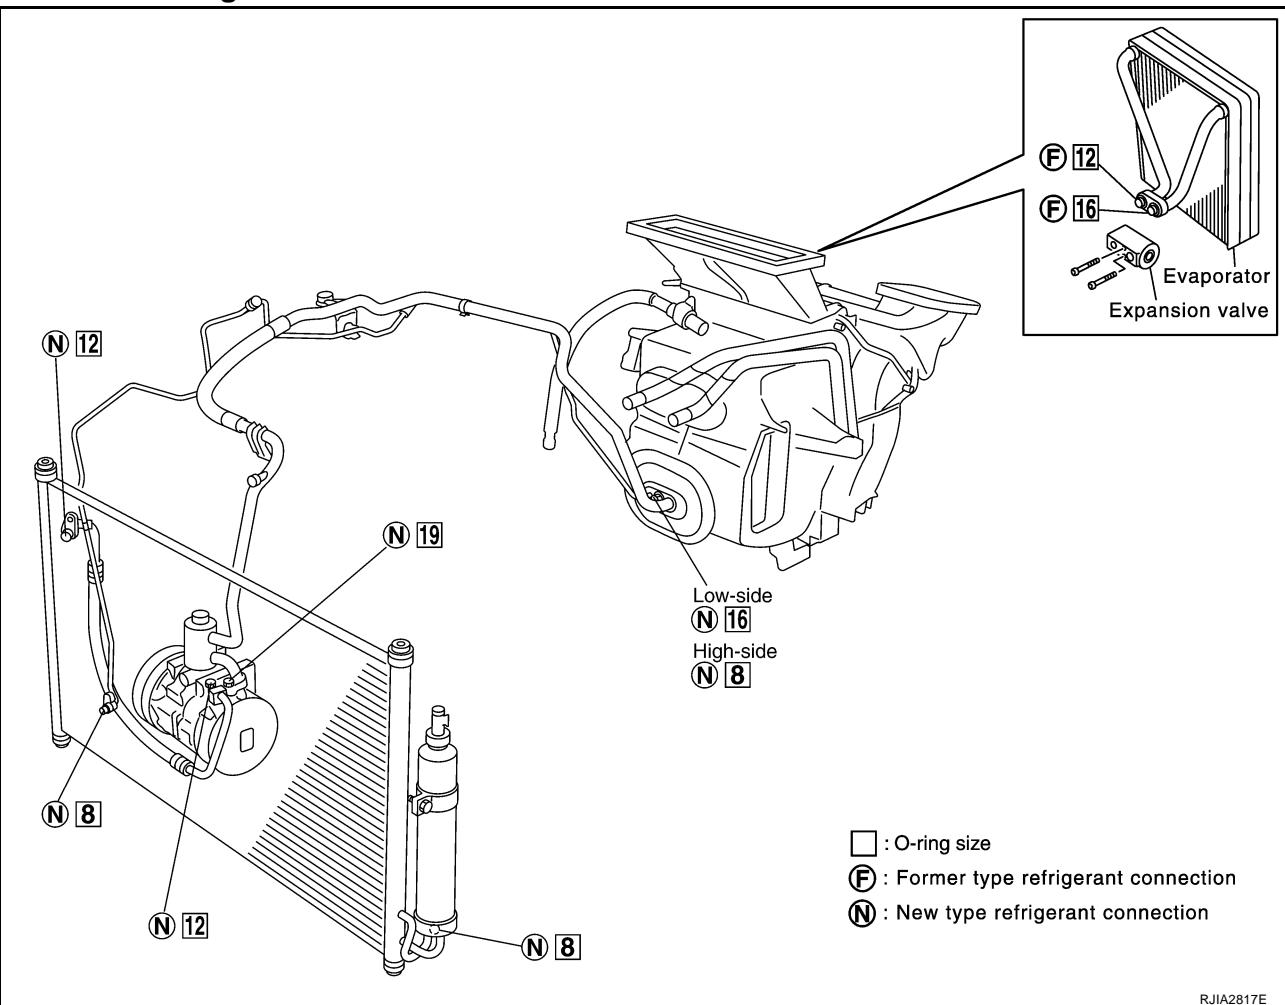

NOTE:

This illustration is for RHD models. The blower and heater & cooling unit layouts for LHD models are symmetrically opposite.

CAUTION:

The new and former refrigerant connections use different O-ring configurations. Do not confuse O-rings since they are not interchangeable. If a wrong O-ring is installed, refrigerant will leak at, or around, the connection.


A
B
C
D
E
F
G
H
I

ATC

K
L
M

PRECAUTIONS

With Diesel Engine

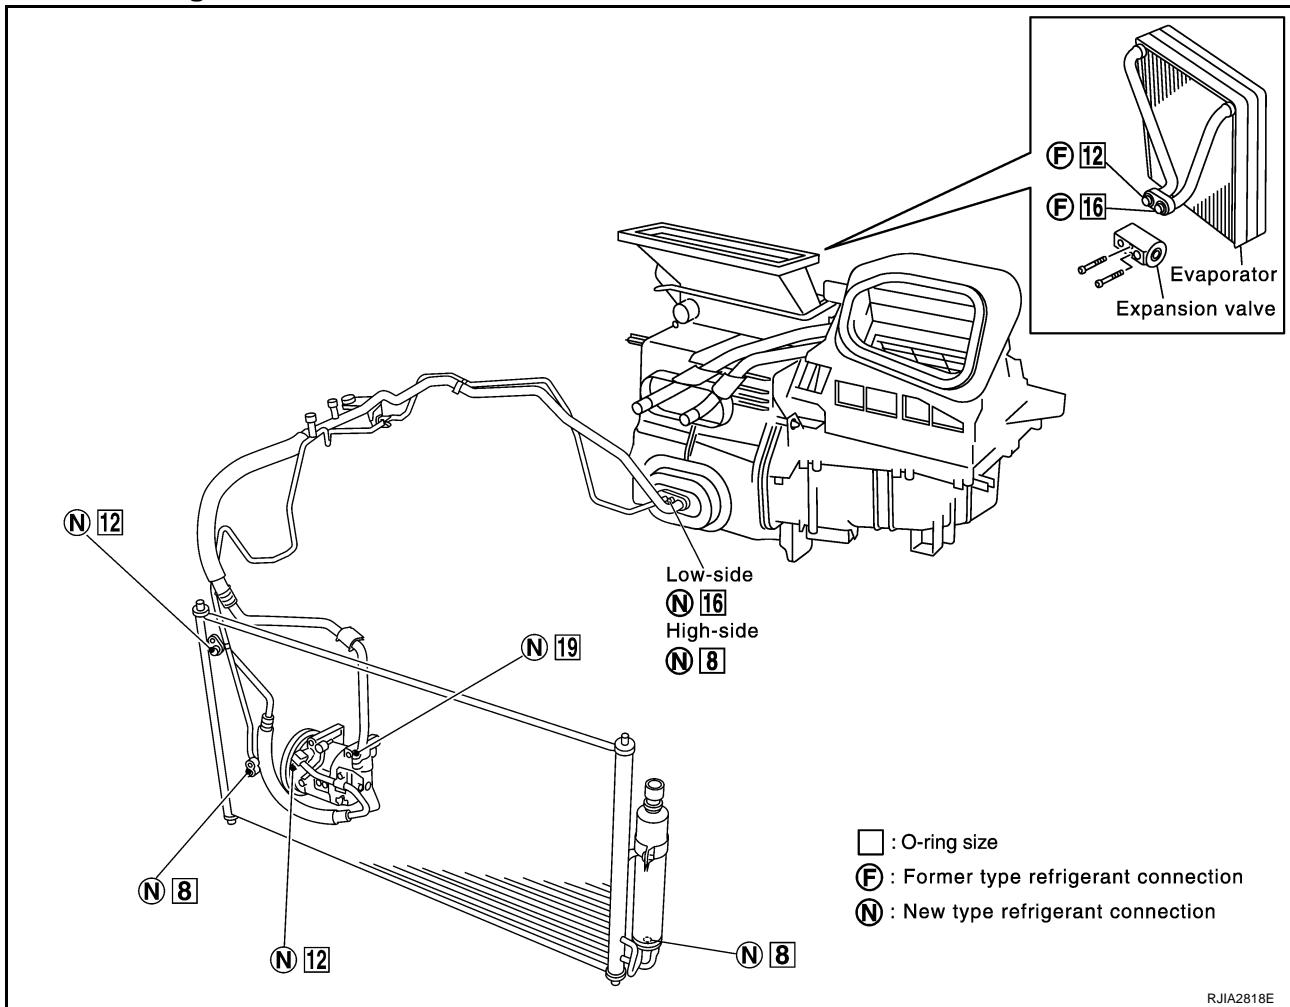


NOTE:

This illustration is for RHD models. The blower and heater & cooling unit layouts for LHD models are symmetrically opposite.

CAUTION:

The new and former refrigerant connections use different O-ring configurations. Do not confuse O-rings since they are not interchangeable. If a wrong O-ring is installed, refrigerant will leak at, or around, the connection.

O-Ring Part Numbers and Specifications

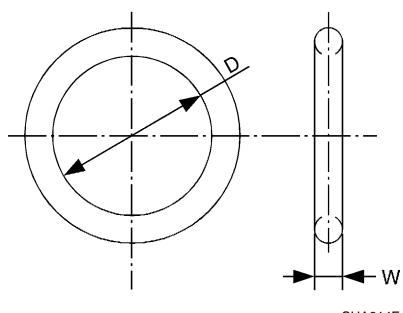

Connec-tion type	O-ring size	Part number	D mm (in)	W mm (in)
New	8	92471 N8210	6.8 (0.268)	1.85 (0.0728)
		92470 N8200	6.07 (0.2390)	1.78 (0.0701)
Former	10	J2476 89956	9.25 (0.3642)	1.78 (0.0701)
		92472 N8210	10.9 (0.429)	2.43 (0.0957)
Former	12	92475 71L00	11.0 (0.433)	2.4 (0.094)
		92473 N8210	13.6 (0.535)	2.43 (0.0957)
New	16	92475 72L00	14.3 (0.563)	2.3 (0.091)
		92474 N8210	16.5 (0.650)	2.43 (0.0957)
Former	19	92477 N8200	17.12 (0.6740)	1.78 (0.0701)

WARNING:

Make sure all refrigerant is discharged into the recycling equipment and the pressure in the system is less than atmospheric pressure. Then gradually loosen the discharge side hose fitting and remove it.

PRECAUTIONS


CAUTION:

When replacing or cleaning refrigerant cycle components, observe the following.

- When the compressor is removed, store it in the same position as it is when mounted on the car. Malfunction to do so will cause lubricant to enter the low-pressure chamber.
- When connecting tubes, always use a torque wrench and a back-up wrench.
- After disconnecting tubes, immediately plug all openings to prevent entry of dirt and moisture.
- When installing an air conditioner in the vehicle, connect the pipes as the final stage of the operation. Do not remove the seal caps of pipes and other components until just before required for connection.
- Allow components stored in cool areas to warm to working area temperature before removing seal caps. This prevents condensation from forming inside A/C components.
- Thoroughly remove moisture from the refrigeration system before charging the refrigerant.
- Always replace used O-rings.
- When connecting tube, apply lubricant to circle of the O-rings shown in illustration. Be careful not to apply lubricant to threaded portion.

	With gasoline engine (CWV-615M compressor)	With diesel engine (DKV-11G compressor)
Lubricant name	: Nissan A/C System Oil Type S	Nissan A/C System Oil Type R
Part number	: KLH00-PAGS0	KLH00-PAGR0

- O-ring must be closely attached to dented portion of tube.
- When replacing the O-ring, be careful not to damage O-ring and tube.
- Connect tube until you hear it click, then tighten the nut or bolt by hand until snug. Make sure that the O-ring is installed to tube correctly.
- After connecting line, conduct leak test and make sure that there is no leakage from connections. When the refrigerant leaking point is found, disconnect that line and replace the O-ring. Then tighten connections of seal seat to the specified torque.

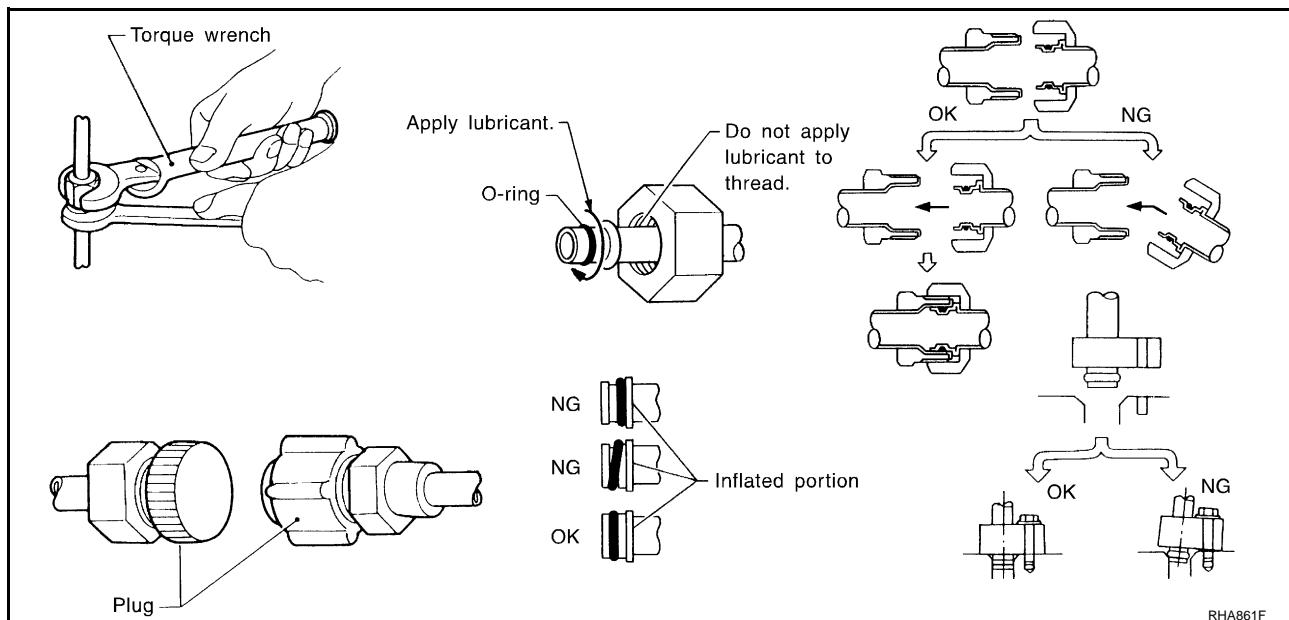

A
B
C
D
E
F
G
H
I
J
K
L
M

ATC

PRECAUTIONS

Precautions for Servicing Compressor

EJS00075

- Plug all openings to prevent moisture and foreign matter from entering.
- When the compressor is removed, store it in the same position as it is when mounted on the car.
- When replacing or repairing compressor, follow "Maintenance of Lubricant Quantity in Compressor" exactly. Refer to [ATC-24, "Maintenance of Lubricant Quantity in Compressor"](#).
- Keep friction surfaces between clutch and pulley clean. If the surface is contaminated, with lubricant, wipe it off by using a clean waste cloth moistened with thinner.
- After compressor service operation, turn the compressor shaft by hand more than five turns in both directions. This will equally distribute lubricant inside the compressor. After the compressor is installed, let the engine idle and operate the compressor for one hour.
- After replacing the compressor magnet clutch, apply voltage to the new one and check for usual operation.

Precautions for Service Equipment

EJS00076

RECOVERY/RECYCLING EQUIPMENT

Be certain to follow the manufacturer's instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

ELECTRONIC LEAK DETECTOR

Be certain to follow the manufacturer's instructions for tester operation and tester maintenance.


VACUUM PUMP

The lubricant contained inside the vacuum pump is not compatible with the specified lubricant for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure. So the vacuum pump lubricant may migrate out of the pump into the service hose. This is possible when the pump is switched off after evacuation (vacuuming) and hose is connected to it.

To prevent this migration, use a manual valve placed near the hose-to-pump connection, as follows.


- Usually vacuum pumps have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- For pumps without an isolator, use a hose equipped with a manual shut-off valve near the pump end. Close the valve to isolate the hose from the pump.
- If the hose has an automatic shut-off valve, disconnect the hose from the pump. As long as the hose is connected, the valve is open and lubricating oil may migrate.

Some one-way valves open when vacuum is applied and close under a no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

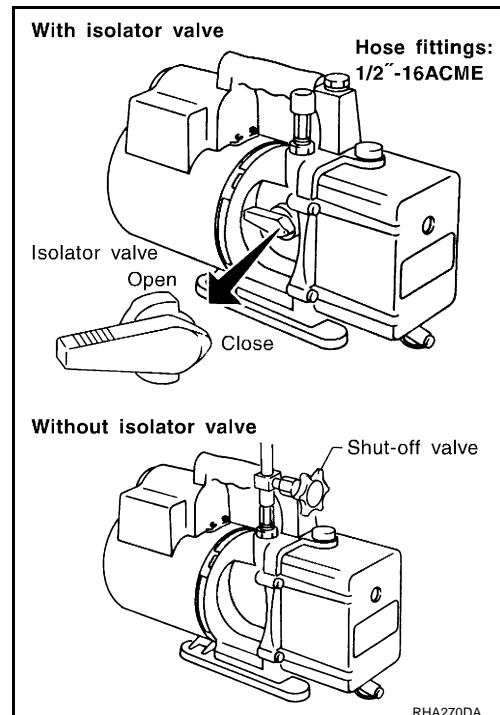

MANIFOLD GAUGE SET


Be certain that the gauge face indicates HFC-134a or R-134a. Be sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) and specified lubricants.

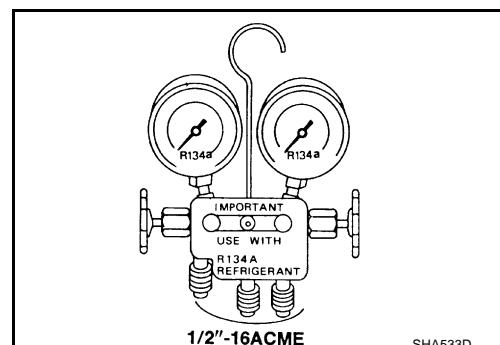

PRECAUTIONS

SERVICE HOSES


Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

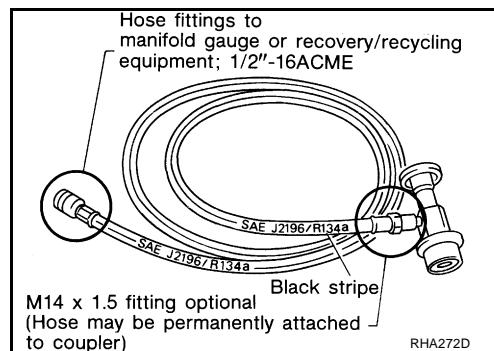

SERVICE COUPLERS


Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

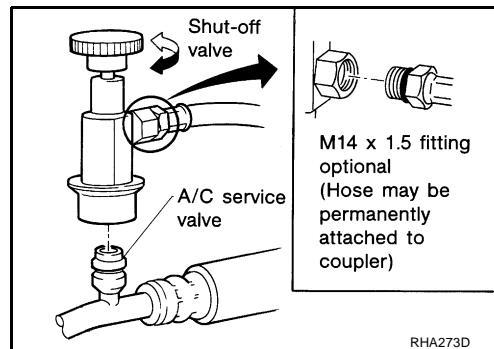

REFRIGERANT WEIGHT SCALE

Verify that no refrigerant other than HFC-134a (R-134a) and specified lubricants have been used with the scale. If the scale controls refrigerant flow electronically, the hose fitting must be 1/2"-16 ACME.

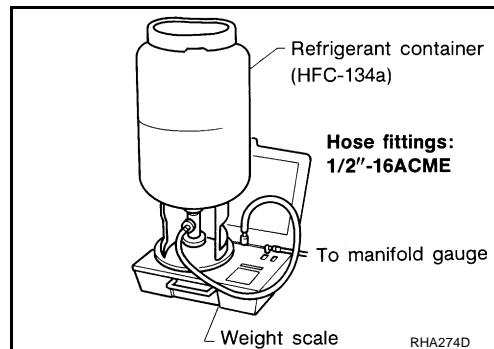

CALIBRATING ACR4 WEIGHT SCALE

Calibrate the scale every three months.

To calibrate the weight scale on the ACR4:

1. Press **Shift/Reset** and **Enter** at the same time.
2. Press **8787** . "A1" will be displayed.
3. Remove all weight from the scale.
4. Press **0** , then press **Enter** . "0.00" will be displayed and change to "A2".
5. Place a known weight (dumbbell or similar weight), between 4.5 and 8.6 kg (10 and 19 lb) on the center of the weight scale.
6. Enter the known weight using four digits. (Example 10 lb = 10.00, 10.5 lb = 10.50)
7. Press **Enter** — the display returns to the vacuum mode.
8. Press **Shift/Reset** and **Enter** at the same time.
9. Press **6** — the known weight on the scale is displayed.
10. Remove the known weight from the scale. "0.00" will be displayed.
11. Press **Shift/Reset** to return the ACR4 to the program mode.

A
B
C
D
E
F
G
H
I
ATC
K
L
M

PRECAUTIONS

CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electronic scale or of quality recycle/recharge equipment.

Precautions for Leak Detection Dye

EJS0027Z

- The A/C system contains a fluorescent leak detection dye used for locating refrigerant leaks. An ultraviolet (UV) lamp is required to illuminate the dye when inspecting for leaks.
- Always wear fluorescence enhancing UV safety goggles to protect your eyes and enhance the visibility of the fluorescent dye.
- The fluorescent dye leak detector is not a replacement for an electronic refrigerant leak detector. The fluorescent dye leak detector should be used in conjunction with an electronic refrigerant leak detector to (J-41995) pin-point refrigerant leaks.
- For your safety and your customer's satisfaction, read and follow all manufacture's operating instructions and precautions prior to performing the work.
- A compressor shaft seal should not be repaired because of dye seepage. The compressor shaft seal should only be repaired after confirming the leak with an electronic refrigerant leak detector.
- Always remove any remaining dye from the leak area after repairs are complete to avoid a misdiagnosis during a future service.
- Do not allow dye to come into contact with painted body panels or interior components. If dye is spilled, clean immediately with the approved dye cleaner. Fluorescent dye left on a surface for an extended period of time cannot be removed.
- Do not spray the fluorescent dye cleaning agent on hot surfaces (engine exhaust manifold, etc.).
- Do not use more than one refrigerant dye bottle (1/4 ounce / 7.4 cc) per A/C system.
- Leak detection dyes for HFC-134a (R-134a) and CFC-12 (R-12) A/C systems are different. Do not use HFC-134a (R-134a) leak detection dye in CFC-12 (R-12) A/C system or CFC-12 (R-12) leak detection dye in HFC-134a (R-134a) A/C system or A/C system damage may result.
- The fluorescent properties of the dye will remain for over three (3) years unless a compressor malfunction occurs.

PRECAUTIONS



IDENTIFICATION

NOTE:

Vehicles with factory installed fluorescent dye have a green label.
Vehicles without factory installed fluorescent dye have a blue label.

IDENTIFICATION LABEL FOR VEHICLE

Vehicles with factory installed fluorescent dye have this identification label on the front side of hood.

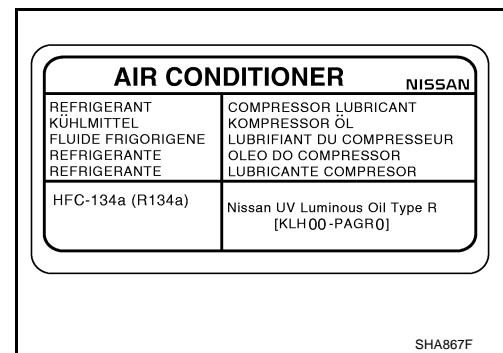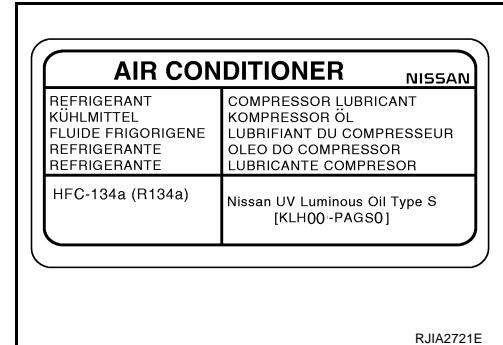

Wiring Diagrams and Trouble Diagnosis

EJS00079

ATC

When you read wiring diagrams, refer to the following:

- [GI-14, "How to Read Wiring Diagrams"](#) in GI section.
- [PG-3, "Wiring Diagram - POWER -"](#) in PG section.

When you perform trouble diagnosis, refer to the following:

- [GI-10, "How to Follow Trouble Diagnoses"](#) in GI section.
- [GI-23, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section.

K

L

M




PREPARATION

PREPARATION



PFP:00002

Special Service Tools WITH GASOLINE ENGINE (CWV-615M COMPRESSOR)


EJS001F1

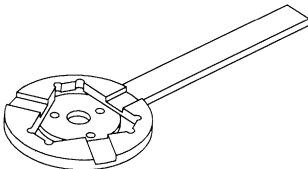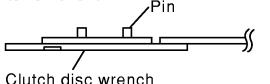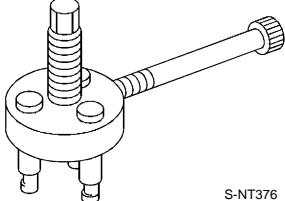Tool number Tool name	Description
KV99106100 Clutch disc wrench	 <p>S-NT232</p> <p>When replacing the magnetic clutch in the above compressor, use a clutch disc wrench with the pin side on the clutch disc to remove it.</p>  <p>Pin</p> <p>Clutch disc wrench</p> <p>RJIA0194E</p>
KV99232340 Clutch disc puller	 <p>S-NT376</p>
KV99106200 Pulley installer	 <p>S-NT235</p>

WITH DIESEL ENGINE (DKV-11G COMPRESSOR)

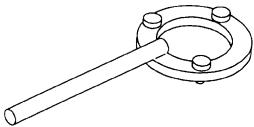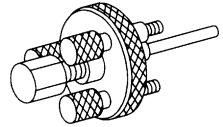Tool number Tool name	Description
KV99231260 Clutch disc wrench	 <p>RJIA0475E</p>
KV992T0001 Clutch disc puller	 <p>RJIA0476E</p>

PREPARATION

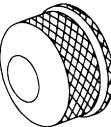Tool number Tool name	Description
KV992T0002 Pulley installer	 RJIA0477E
KV99233130 Pulley puller	 RJIA0478E

HFC-134a (R-134a) Service Tools and Equipment


EJS00286

Never mix HFC-134a (R-134a) refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.

Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.

Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.

Adapters that convert one size fitting to another must never be used: refrigerant/lubricant contamination will occur and compressor malfunction will result.

Tool number Tool name	Description
HFC-134a (R-134a) refrigerant	 S-NT196 <p>Container color: Light blue Container marking: HFC-134a (R-134a) Fitting size: Thread size ● Large container 1/2" -16 ACME</p>
Gasoline engine (CWV-615M): KLH00-PAGS0 Nissan A/C System Oil Type S (DH-PS)	<p>Gasoline engine (CWV-615M): Type: Polyalkylene glycol oil (PAG), type S (DH-PS) Application: HFC-134a (R-134a) wobble (swash) plate compressors (Nissan only)</p>
Diesel engine (DKV-11G): KLH00-PAGR0 Nissan A/C System Oil Type R (DH-PR)	<p>Diesel engine (DKV-11G): Type: Polyalkylene glycol oil (PAG), type R (DH-PR) Application: HFC-134a (R-134a) vane rotary compressors (Nissan only) Lubricity: 40 m ℓ (1.4 Imp fl oz)</p>

A

B

C

D

E

F

G

H

I

ATC

K






L

M

PREPARATION

Tool number Tool name	Description
Recovery/Recycling Recharging equipment	<p>Function: Refrigerant recovery, recycling and recharging</p>
Electrical leak detector	<p>Power supply: DC 12V (Battery terminal)</p>
(J-43926) Refrigerant dye leak detection kit Kit includes: (J-42220) UV lamp and UV safety goggles (J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle (J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles) (J-43872) Refrigerant dye cleaner	<p>Power supply: DC 12V (Battery terminal)</p>
(J-42220) UV lamp and UV safety goggles	<p>Power supply: DC 12V (Battery terminal) For checking refrigerant leak when fluorescent dye is installed in A/C system Includes: UV lamp and UV safety goggles</p>
(J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles)	<p>Application: For HFC-134a (R-134a) PAG oil Container: 1/4 ounce (7.4cc) bottle (Includes self-adhesive dye identification labels for affixing to vehicle after charging system with dye.)</p>

PREPARATION

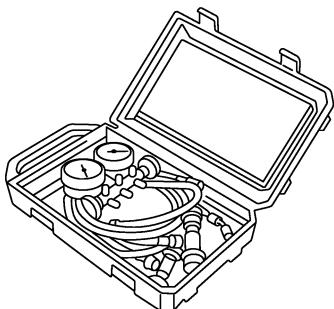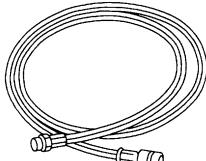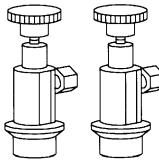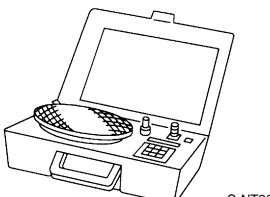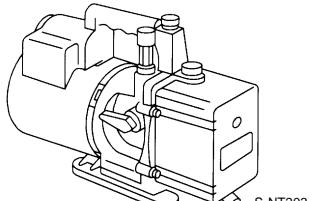Tool number Tool name	Description
(J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle	 <p>SHA440F</p> <p>For injecting 1/4 ounce of fluorescent leak detection dye into A/C system</p>
(J-43872) Refrigerant dye cleaner	 <p>SHA441F</p> <p>For cleaning dye spills</p>
Manifold gauge set (with hoses and couplers)	 <p>RJIA0196E</p> <p>Identification:</p> <ul style="list-style-type: none"> • The gauge face indicates HFC-134a (R-134a). • Fitting size: Thread size • 1/2" -16 ACME
Service hoses <ul style="list-style-type: none"> • High-pressure side hose • Low- pressure side hose • Utility hose 	 <p>S-NT201</p> <p>Hose color:</p> <ul style="list-style-type: none"> • Low hose: Blue with black stripe • High hose: Red with black stripe • Utility hose: Yellow with black stripe or green with black stripe <p>Hose fitting to gauge:</p> <ul style="list-style-type: none"> • 1/2"-16 ACME
Service couplers <ul style="list-style-type: none"> • High-pressure side coupler • Low -pressure side coupler 	 <p>S-NT202</p> <p>Hose fitting to service hose:</p> <ul style="list-style-type: none"> • M14 x 1.5 fitting is optional or permanently attached.
Refrigerant weight scale	 <p>S-NT200</p> <p>For measuring of refrigerant</p> <p>Fitting size: Thread size</p> <ul style="list-style-type: none"> • 1/2" -16 ACME
Vacuum pump (Including the isolator valve)	 <p>S-NT203</p> <p>Capacity:</p> <ul style="list-style-type: none"> • Air displacement: 4 CFM • Micron rating: 20 microns • Oil capacity: 482 g (17 oz.) <p>Fitting size: Thread size</p> <ul style="list-style-type: none"> • 1/2" -16 ACME

REFRIGERATION SYSTEM

REFRIGERATION SYSTEM

PFP:KA990

Refrigerant Cycle REFRIGERANT FLOW

EJS000TD

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser with liquid tank, through the evaporator, and back to the compressor. The refrigerant evaporation through the evaporator coil is controlled by an externally equalized expansion valve, located inside the evaporator case.

FREEZE PROTECTION (WITH GASOLINE ENGINE: CWV-615M COMPRESSOR)

Under usual operating conditions, when the A/C is switched on, the compressor runs continuously, and the evaporator pressure, and therefore, temperature is controlled by the V-6 variable displacement compressor to prevent freeze up.

Refrigerant System Protection

EJS000TE

REFRIGERANT PRESSURE SENSOR (WITH GASOLINE ENGINE: CWV-615M COMPRESSOR)


The refrigerant system is protected against excessively high- or low-pressures by the refrigerant pressure sensor, located on the liquid tank. If the system pressure rises above, or falls below the specifications, the refrigerant pressure sensor detects the pressure inside the refrigerant line and sends the voltage signal to the ECM. ECM makes the A/C relay go OFF and stops the compressor when pressure on the high-pressure side detected by refrigerant pressure sensor is over about 2,746 kPa (27.46 bar, 28 kg/cm², 398 psi), or below about 134 kPa (1.34 bar, 1.4 kg/cm², 20 psi).

DUAL-PRESSURE SWITCH (WITH DIESEL ENGINE: DVK-11G COMPRESSOR)

The refrigerant system is protected against excessively high- or low-pressures by the dual-pressure switch, located on the liquid tank. If the system pressure rises above or falls below the specifications, the dual-pressure switch opens to interrupt the compressor operation.

PRESSURE RELIEF VALVE (WITH GASOLINE ENGINE: CWV-615M COMPRESSOR)

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an unusual level [more than 3,727 kPa (37.27 bar, 38 kg/cm², 540 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

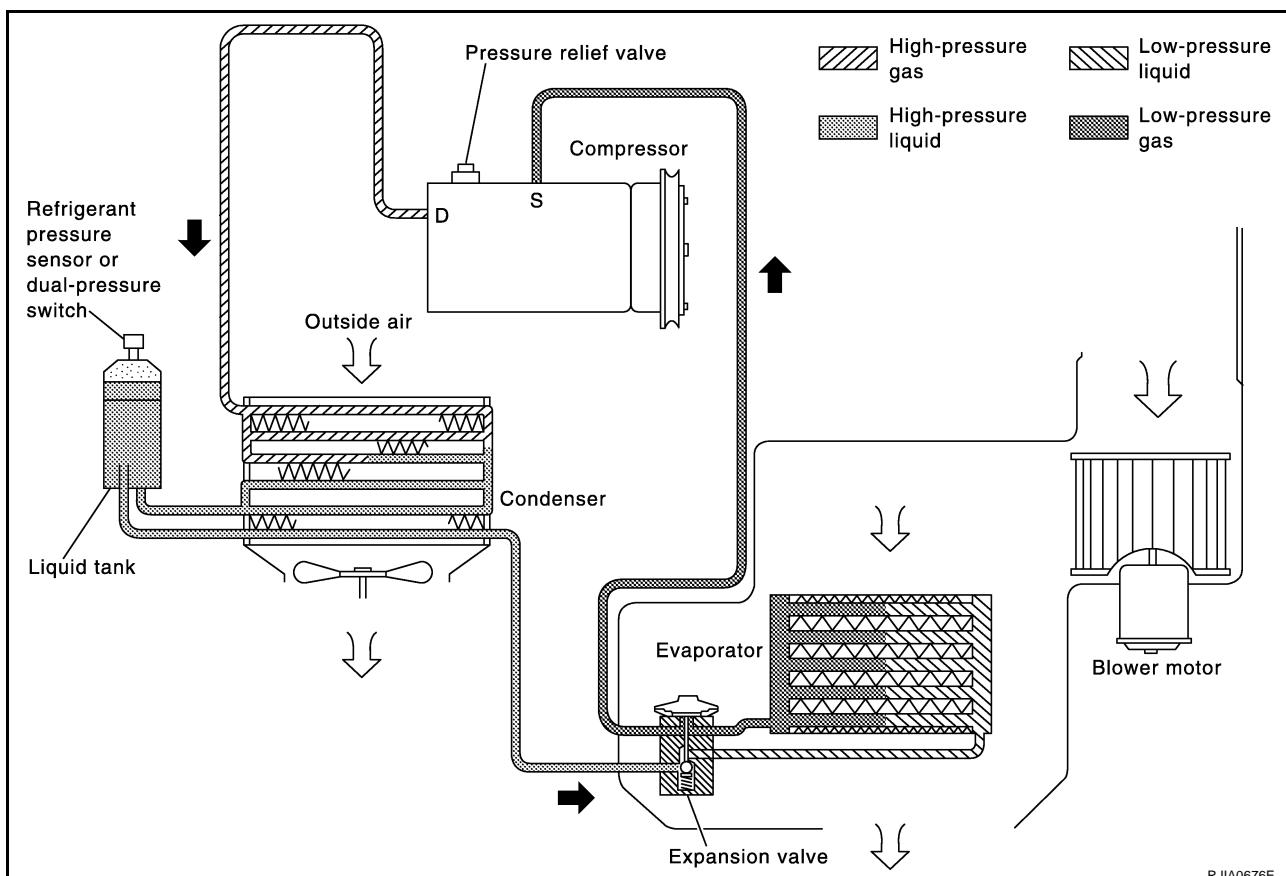

V-6 Variable Displacement Compressor (With Gasoline Engine: CWV-615M Compressor)

EJS000TF

GENERAL INFORMATION

1. The V-6 variable compressor differs from previous units. The vent temperatures of the V-6 variable compressor do not drop too far below 5°C (41°F) when:
Evaporator intake air temperature is less than 20°C (68°F).
Engine is running at speeds less than 1,500 rpm.
This is because the V-6 compressor provides a means of "capacity" control.
2. The V-6 variable compressor provides refrigerant control under varying conditions. During cold winters, it may not produce high refrigerant pressure discharge (compared to previous units) when used with air conditioning systems.
3. A "clanking" sound may occasionally be heard during refrigerant charge. The sound indicates that the tilt angle of the wobble (swash) plate has changed and is not a malfunction.
4. For air conditioning systems with the V-6 compressor, the clutch remains engaged unless: the system main switch, fan switch or ignition switch is turned OFF. When ambient (outside) temperatures are low or when the amount of refrigerant is insufficient, the clutch is disengaged to protect the compressor.
5. A constant range of suction pressure is maintained when engine speed is greater than a certain value. It normally ranges from 147 to 177 kPa (1.47 to 1.77 bar, 1.5 to 1.8 kg/cm², 21 to 26 psi) under varying conditions.
In previous compressors, however, suction pressure was reduced with increases in engine speed.

A

B

C

D

E

F

G

H

I

ATC

K

L

M


REFRIGERATION SYSTEM

DESCRIPTION

General

The variable compressor is basically a swash plate type that changes piston stroke in response to the required cooling capacity.

The tilt of the wobble (swash) plate allows the piston's stroke to change so that refrigerant discharge can be continuously changed from 14.5 to 146 cm³ (0.885 to 8.91 cu in).

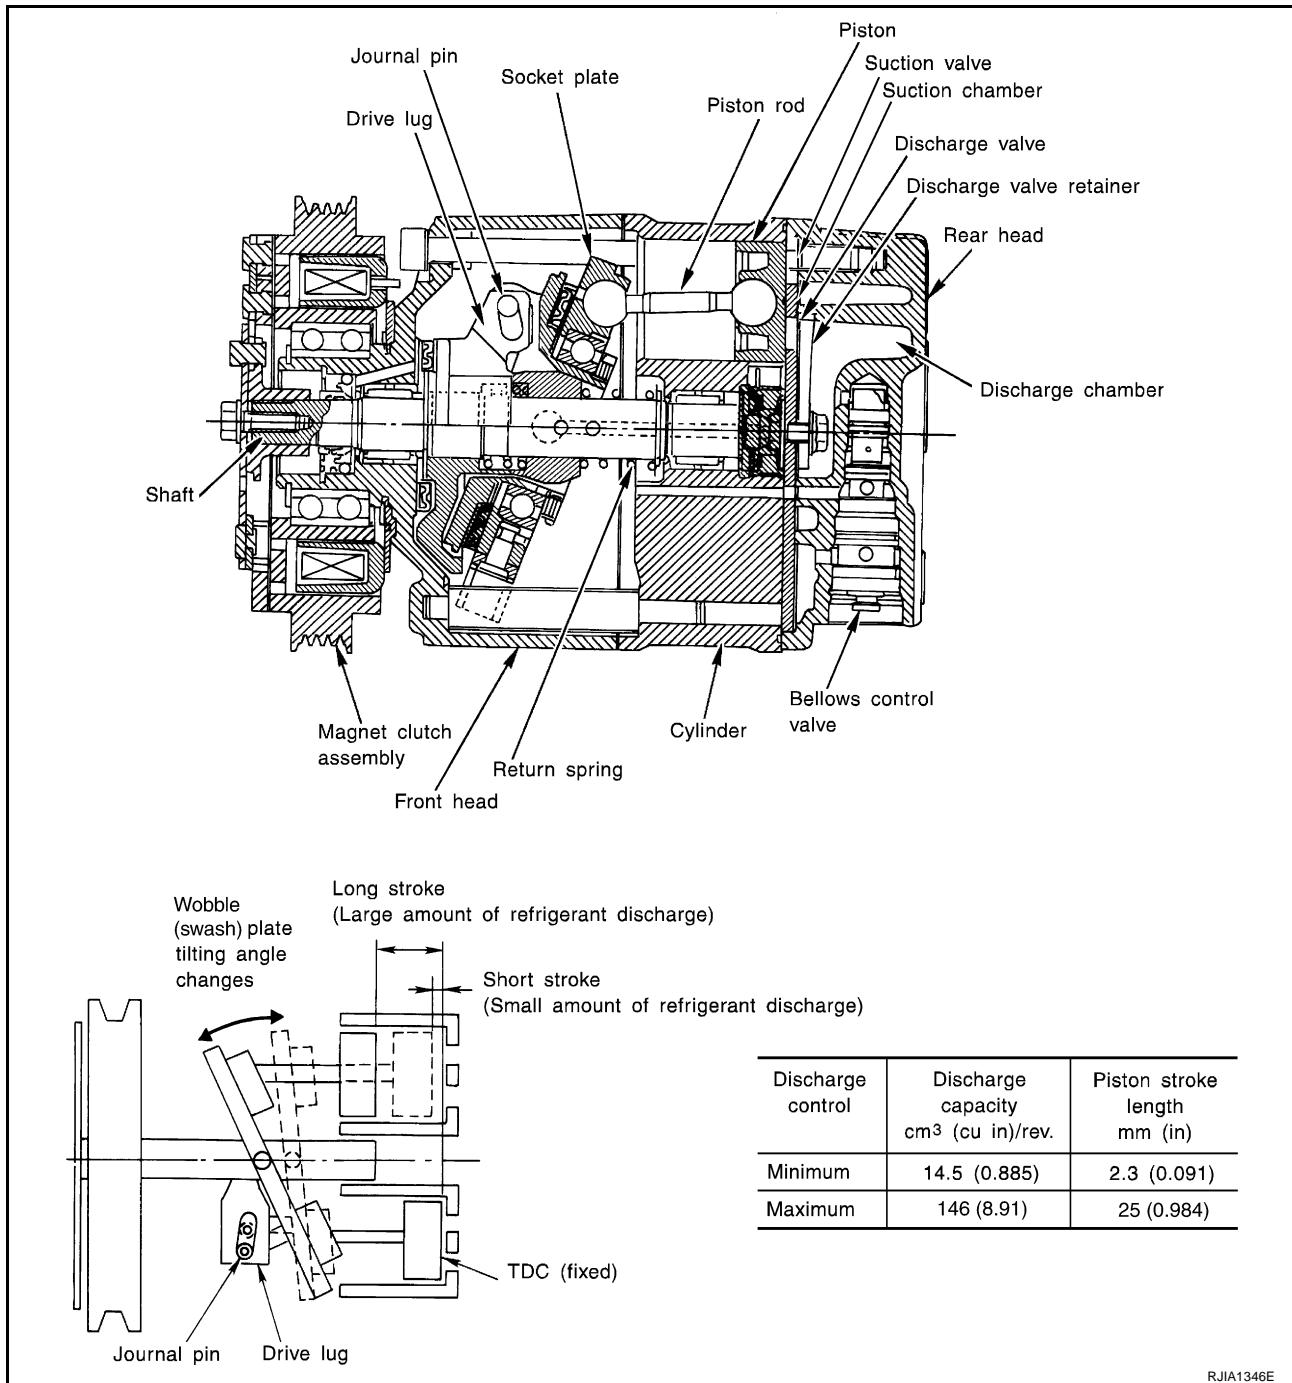

REFRIGERATION SYSTEM

Operation

1. Operation Control Valve

Operation control valve is located in the suction port (low-pressure) side, and opens or closes in response to changes in refrigerant suction pressure.

Operation of the valve controls the internal pressure of the crankcase.

The angle of the wobble (swash) plate is controlled between the crankcase's internal pressure and the piston cylinder pressure.

2. Maximum Cooling


Refrigerant pressure on the low-pressure side increases with an increase in heat loads.

When this occurs, the control valve's bellows compress to open the low-pressure side valve and close the high-pressure side valve.

This causes the following pressure changes:

- The crankcase's internal pressure to equal the pressure on the low-pressure side;
- The cylinder's internal pressure to be greater than the crankcase's internal pressure.

Under this condition, the wobble (swash) plate is set to the maximum stroke position.

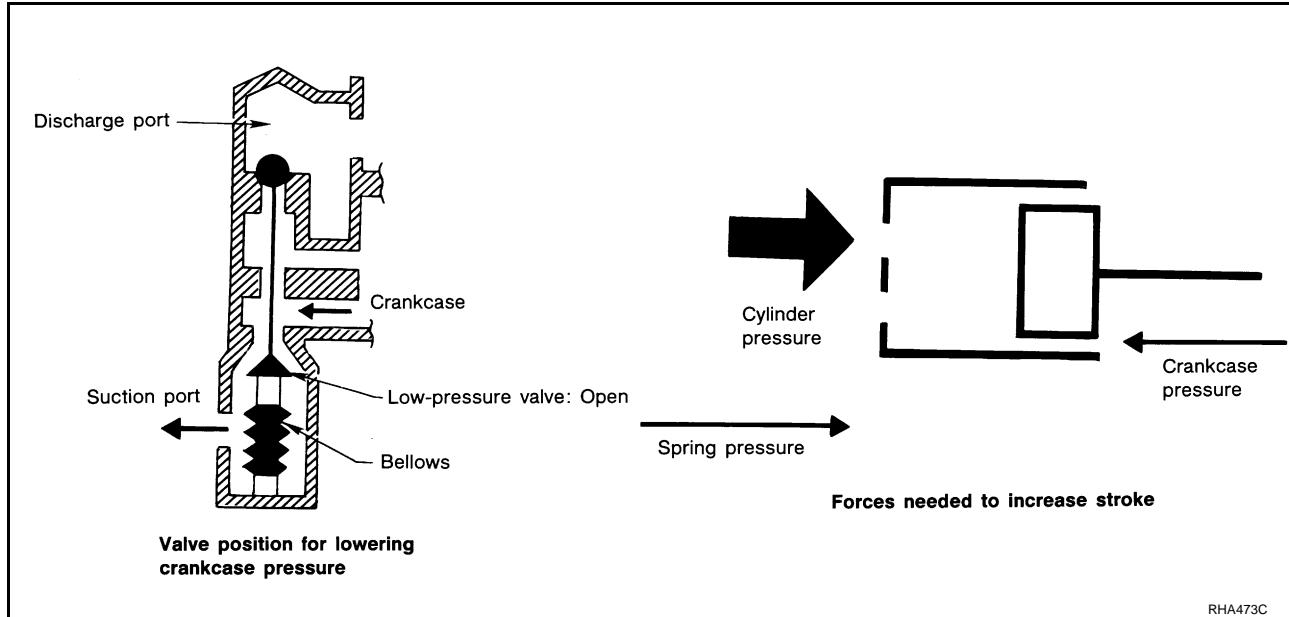

3. Capacity Control

- Refrigerant pressure on suction side is low during high speed driving or when ambient or interior temperature is low.

- The bellows expands when refrigerant pressure on the suction pressure side drops below approximately 177 kPa (1.77 bar, 1.8 kg/cm², 26 psi).


Since suction pressure is low, it makes the suction port close and the discharge port open. Thus, crankcase pressure becomes high as high-pressure enters the crankcase.

- The force acts around the journal pin near the swash (wobble) plate, and is generated by the pressure difference between before and behind the piston.

The drive lug and journal pin are located where the piston generates the highest pressure. Piston pressure is between suction pressure P_s and discharge pressure P_d , which is near suction pressure P_s . If crankcase pressure P_c rises due to capacity control, the force around the journal pin makes the wobble (swash) plate angle decrease and also the piston stroke decrease. In other words, crankcase pressure

REFRIGERATION SYSTEM

increase triggers pressure difference between the piston and the crankcase. The pressure difference changes the angle of the wobble (swash) plate.

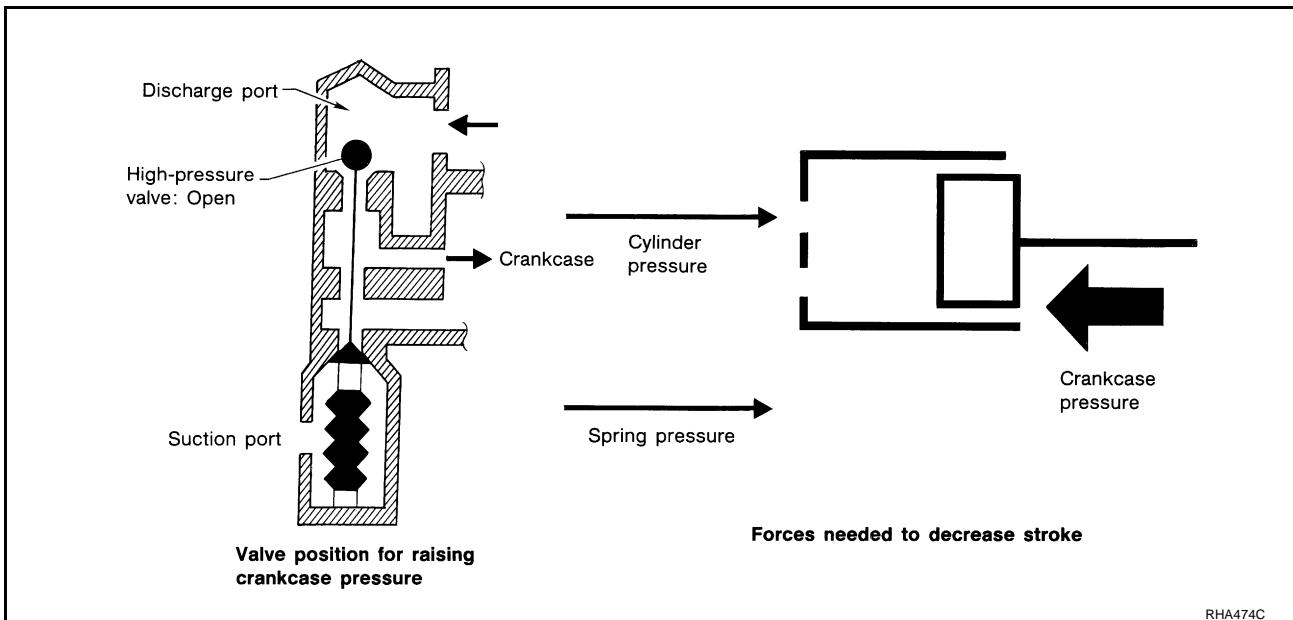


REFRIGERATION SYSTEM

Component Layout

EJS00280

NOTE:

This illustration is for RHD models. The layout for LHD models is symmetrically opposite.

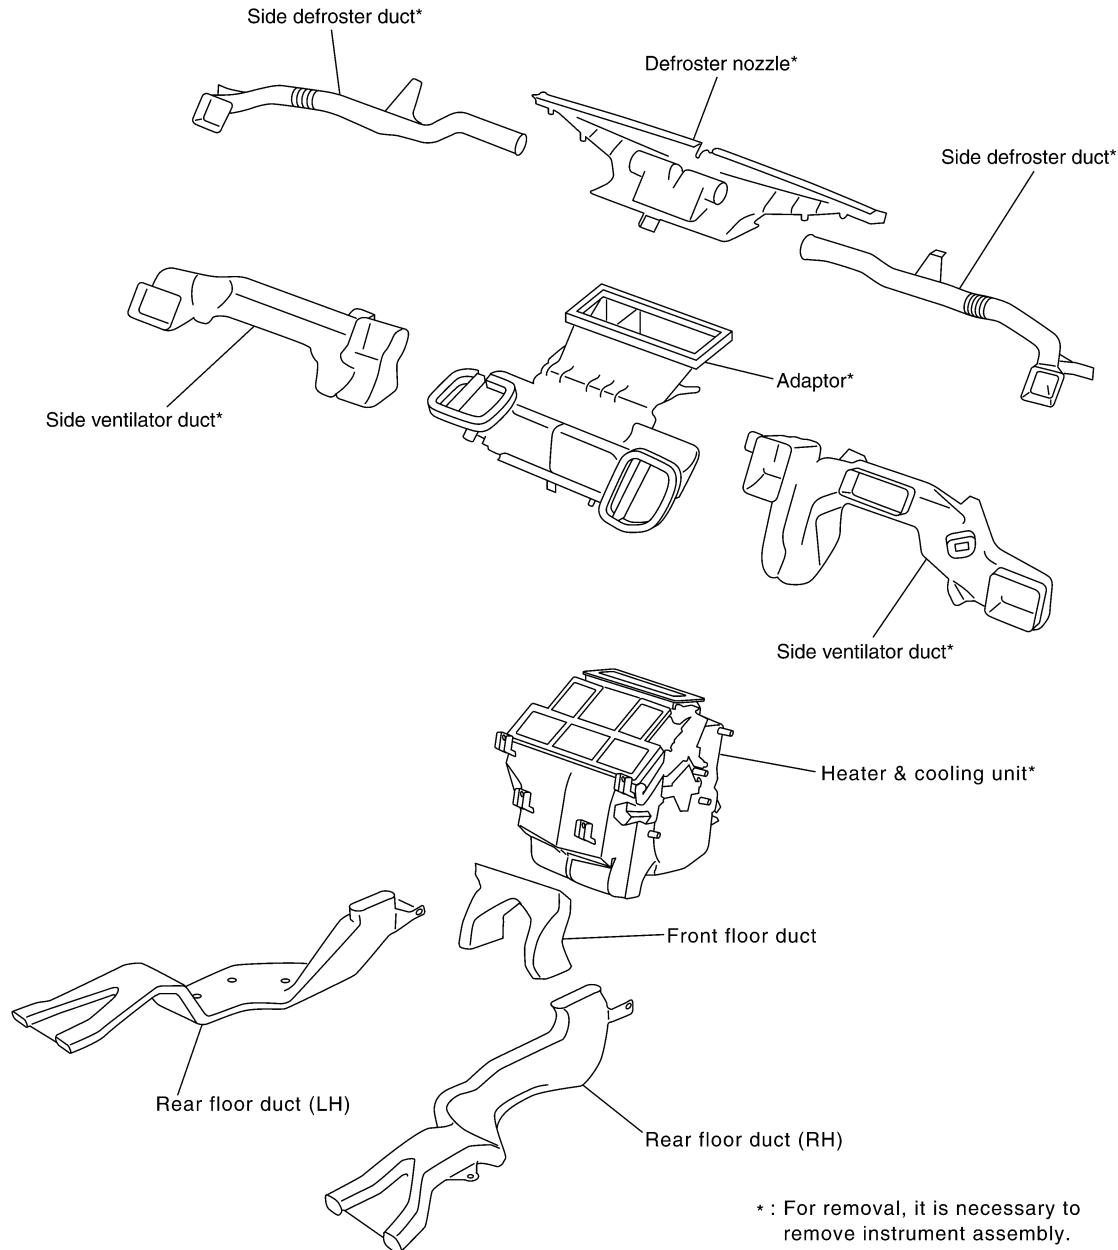

A
B
C
D
E
F
G
H
I

ATC

K
L
M

RJIA2819E

LUBRICANT

PFP:KLG00

Maintenance of Lubricant Quantity in Compressor

EJS000TH

The lubricant in the compressor circulates through the system with the refrigerant. Add lubricant to compressor when replacing any component or after a large refrigerant leakage occurred. It is important to maintain the specified amount.

If lubricant quantity is not maintained properly, the following malfunctions may result:

- Lack of lubricant: May lead to a seized compressor
- Excessive lubricant: Inadequate cooling (thermal exchange interference)

LUBRICANT

	With gasoline engine (CWV-615M Compressor)	With diesel engine (DKV-11G Compressor)
Name	Nissan A/C System Oil Type S	Nissan A/C System Oil Type R
Part number	KLH00-PAGS0	KLH00-PAGR0

LUBRICANT RETURN OPERATION

Adjust the lubricant quantity according to the test group shown below.

1. CHECK LUBRICANT RETURN OPERATION

Can lubricant return operation be performed?

- A/C system works properly.
- There is no evidence of a large amount of lubricant leakage.

CAUTION:

If excessive lubricant leakage is noted, do not perform the lubricant return operation.

OK or NG

OK >> GO TO 2.
NG >> GO TO 3.

2. PERFORM LUBRICANT RETURN OPERATION, PROCEEDING AS FOLLOWS:

1. Start engine, and set the following conditions:

- Test condition

Engine speed: Idling to 1,200 rpm

A/C switch: ON

Blower speed: Max. position

Temp. control: Optional [Set so that intake air temperature is 25 to 30°C (77 to 86°F).]

Intake position: Recirculation (REC)

2. Perform lubricant return operation for about 10 minutes.

3. Stop engine.

>> GO TO 3.

3. CHECK REPLACEMENT PART

Should the compressor be replaced?

YES >> GO TO [ATC-25, "LUBRICANT ADJUSTING PROCEDURE FOR COMPRESSOR REPLACEMENT"](#).

NO >> GO TO [ATC-25, "LUBRICANT ADJUSTING PROCEDURE FOR COMPONENTS REPLACEMENT EXCEPT COMPRESSOR"](#).

LUBRICANT

LUBRICANT ADJUSTING PROCEDURE FOR COMPONENTS REPLACEMENT EXCEPT COMPRESSOR

After replacing any of the following major components, add the correct amount of lubricant to the system.
Amount of lubricant to be added

Part replaced	Lubricant to be added to system	Remarks
	Amount of lubricant $m\ell$ (Imp fl oz)	
Evaporator	75 (2.6)	-
Condenser	35 (1.2)	-
Liquid tank	10 (0.4)	-
In case of refrigerant leak	30 (1.1)	Large leak
	-	Small leak *1

*1: If refrigerant leak is small, no addition of lubricant is needed.

LUBRICANT ADJUSTING PROCEDURE FOR COMPRESSOR REPLACEMENT

1. Before connecting ACR4 to vehicle, check ACR4 gauges. No refrigerant pressure should be displayed. If NG, recover refrigerant from equipment lines.
2. Discharge refrigerant into the refrigerant recovery/recycling equipment. Measure lubricant discharged into the recovery/recycling equipment.
3. Drain the lubricant from the old (removed) compressor into a graduated container and recover the amount of lubricant drained.
4. Drain the lubricant from the new compressor into a separate, clean container.
5. Measure an amount of new lubricant installed equal to amount drained from old compressor. Add this lubricant to new compressor through the suction port opening.
6. Measure an amount of new lubricant equal to the amount recovered during discharging. Add this lubricant to new compressor through the suction port opening.
7. If the liquid tank also needs to be replaced, add another 5 $m\ell$ (0.2 Imp fl oz) of lubricant at this time. Do not add this 5 $m\ell$ (0.2 Imp fl oz) of lubricant only when replaces the compressor.

A

B

C

D

E

F

G

H


ATC

K

L

M

LUBRICANT

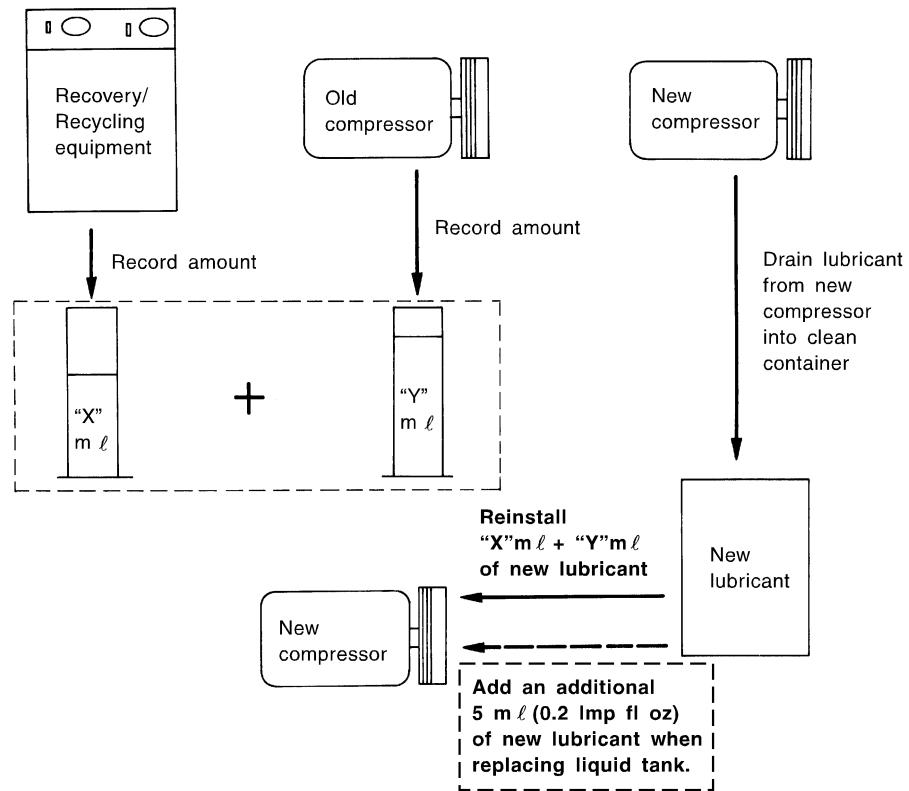

RHA065DI

AIR CONDITIONER CONTROL

AIR CONDITIONER CONTROL


PFP:27500

Description of Air Conditioner LAN Control System

EJS0007I

The LAN (Local Area Network) system consists of auto amp., mode door motor, air mix door motor and intake door motor.

A configuration of these components is shown in the diagram below.

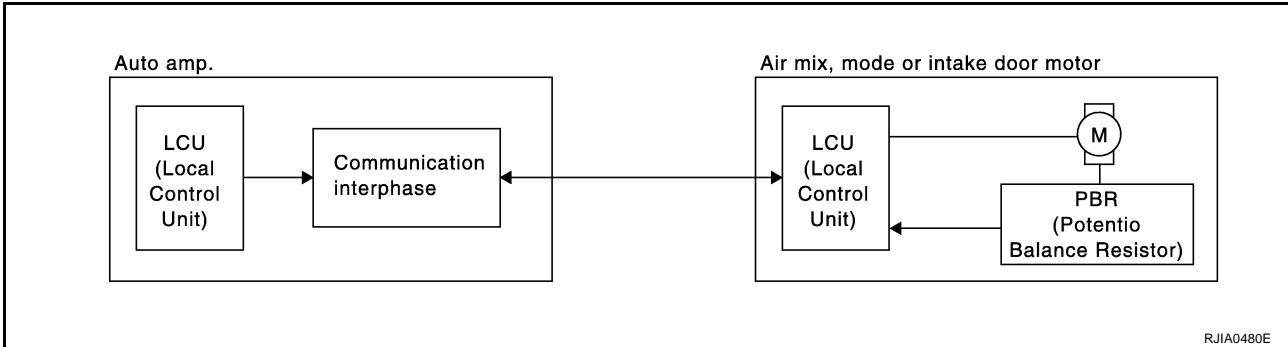

System Construction


EJS0007J

A small network is constructed between the auto amp., air mix door motor, mode door motor and intake door motor. The auto amp. and motors are connected by data transmission lines and motor power supply lines. The LAN network is built through the ground circuits of each door motor.

Addresses, motor opening angle signals, motor stop signals and error checking messages are all transmitted through the data transmission lines connecting the auto amp. and each door motor.

The following functions are contained in LCUs built into air mix door motor, mode door motor and intake door motor.

- Address
- Motor opening angle signal
- Data transmission
- Motor stop and drive decision
- Opening angle sensor (PBR function)
- Comparison
- Decision (Auto amp. indicated value and motor opening angle comparison)

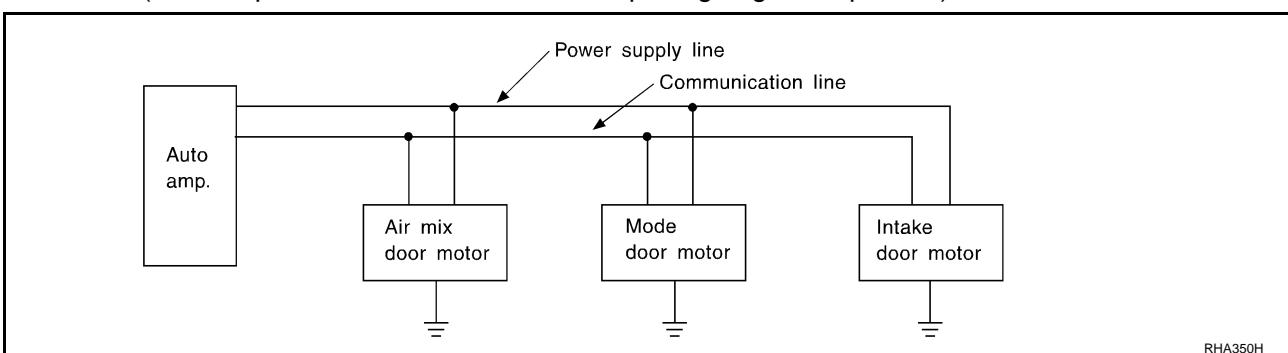


OPERATION

The auto amp. receives data from each of the sensors. The auto amp. sends mode door, air mix door and intake door opening angle data to the mode door motor LCU, air mix door motor LCU and intake door motor LCU.

The mode door motor, air mix door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the auto amp. and each of the motor position sensors is compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD, DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the auto amp.

AIR CONDITIONER CONTROL

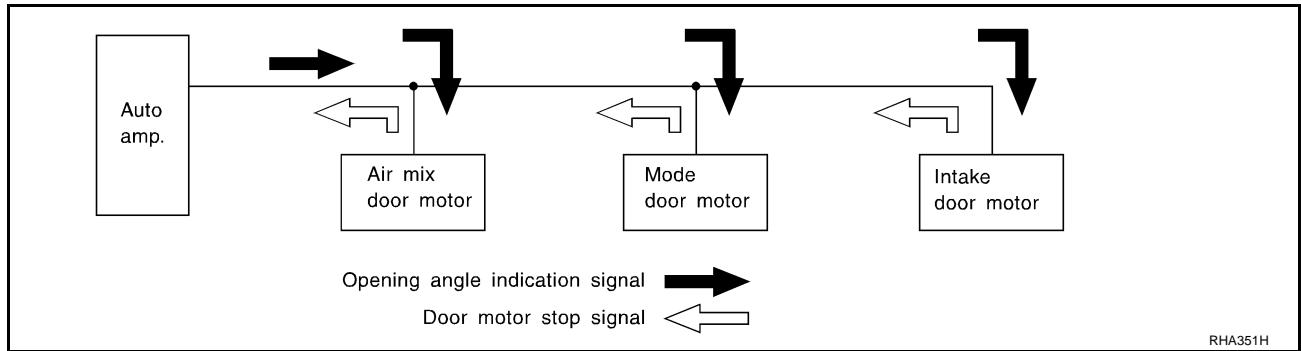

TRANSMISSION DATA AND TRANSMISSION ORDER

Auto amp. data is transmitted consecutively to each of the door motors following the form shown in figure below.

Start:

Initial compulsory signal sent to each of the door motors.

Address:

Data sent from the auto amp. is selected according to data-based decisions made by the air mix door motor, mode door motor and intake door motor.

If the addresses are identical, the opening angle data and error check signals are received by the door motor LCUs. The LCUs then make the appropriate error decision. If the opening angle data is usual, door control begins.

If an error exists, the received data is rejected and corrected data received. Finally, door control is based upon the corrected opening angle data.

Opening Angle:

Data that shows the indicated door opening angle of each door motor.

Error Check:


Procedure by which sent and received data is checked for errors. Error data is then compiled. The error check prevents corrupted data from being used by the air mix door motor, mode door motor and intake door motor. Error data can be related to the following symptoms.

- Malfunction electrical frequency
- Poor electrical connections
- Signal leakage from transmission lines
- Signal level fluctuation

AIR CONDITIONER CONTROL

Stop Signal:

At the end of each transmission, a stop operation, in-operation, or internal malfunction message is delivered to the auto amp. This completes one data transmission and control cycle.

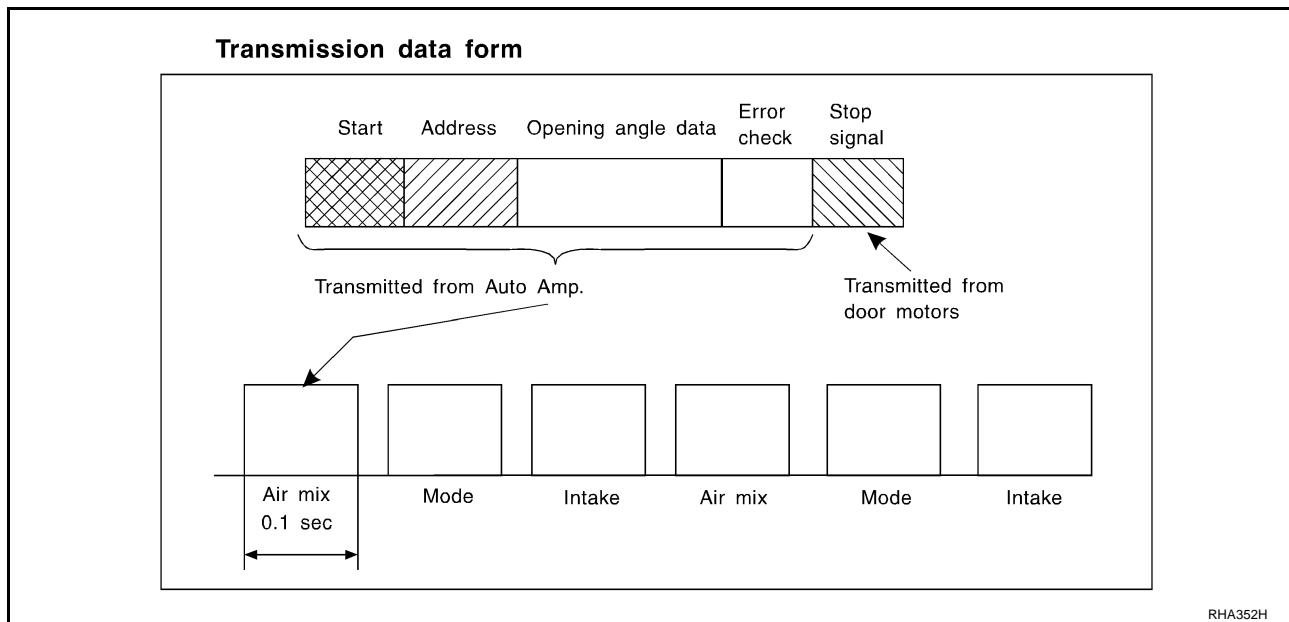

AIR MIX DOOR CONTROL (AUTOMATIC TEMPERATURE CONTROL)

The air mix door is automatically controlled so that in-vehicle temperature is maintained at a predetermined value by the temperature setting, ambient temperature, in-vehicle temperature and amount of sunload.

FAN SPEED CONTROL

Blower speed is automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and air mix door position.

With FAN control dial set to AUTO, the blower motor starts to gradually increase air flow volume.

When engine coolant temperature is low, the blower motor operation is delayed to prevent cool air from flowing.

ATC

INTAKE DOOR CONTROL

The intake doors are automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and ON-OFF operation of the compressor.

OUTLET DOOR CONTROL

The outlet door is automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature and amount of sunload.

MAGNET CLUTCH CONTROL

The ECM controls compressor operation using input signals from the throttle position sensor, refrigerant pressure sensor (or dual-pressure switch) and auto amp.

SELF-DIAGNOSTIC SYSTEM

The self-diagnostic system is built into the auto amp. to quickly locate the cause of symptoms.


A
B
C
D
E
F
G
H
I
K
L
M

AIR CONDITIONER CONTROL

Description of Control System

EJS000TK

The control system consists of input sensors, switches, the auto amp. (microcomputer) and outputs. The relationship of these components is shown in the diagram below:

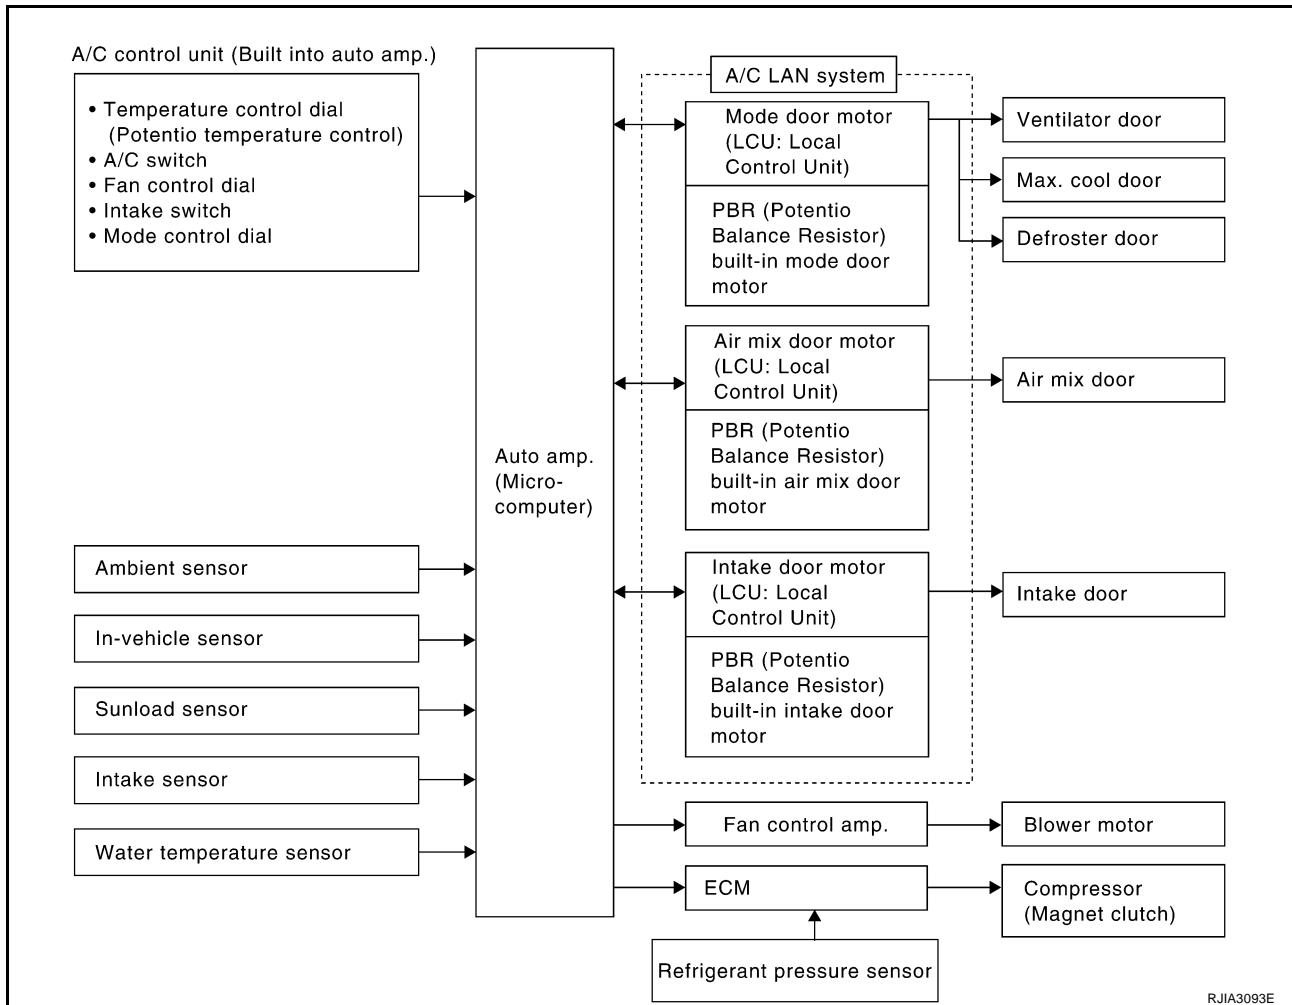


RJIA3093E

AIR CONDITIONER CONTROL

Control Operation

EJS004G9

A
B
C
D
E
F
G
H
I
ATC
K
L
M

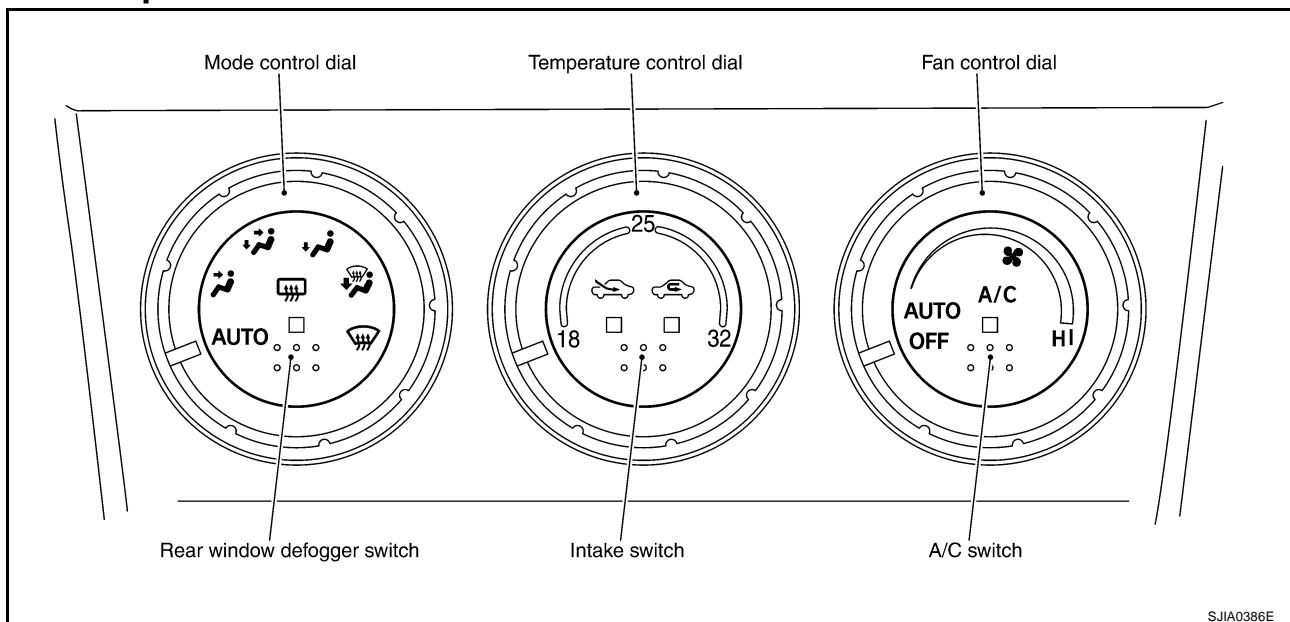

MODE CONTROL DIAL

Controls the air discharge outlets.

Positions the air outlet doors to the defrost position. Also positions the intake doors to the outside air position. When shifting mode control dial to DEF under the following conditions, compressor is turned ON. (A/C LED ON)

- FAN: ON
- A/C: OFF

TEMPERATURE CONTROL DIAL (POTENTIO TEMPERATURE CONTROL)

Increase or decrease the set temperature.

FAN CONTROL DIAL

Automatically or Manually control the blower speed. Twenty-five speeds are available for manual control. Shifting fan control dial to AUTO, compressor is turned ON automatically.

REAR WINDOW DEFOGGER SWITCH

When illumination is ON, rear window is defogged.

INTAKE SWITCH

- When intake switch is ON, REC indicator turns ON, and air inlet is fixed to REC.
- When press intake switch again, FRE indicator turns ON, and air inlet is fixed to FRE.
- When intake switch is pressed for approximately 1.5 seconds or longer, REC and FRE indicators blink twice. Then, automatic control mode is entered. Inlet status is displayed even during automatic control.
- When DEF position or FRE indicator is turned ON, or when compressor is turned from ON to OFF, REC switch is automatically turned OFF (fixed to FRE mode). REC mode can be re-entered by pressing intake switch again. (Except DEF position)

A/C SWITCH

The compressor is ON or OFF.


(Pressing the A/C switch when the fan control dial is ON will turn off the A/C switch and compressor.)

AIR CONDITIONER CONTROL


Discharge Air Flow

EJS000TM


①: Ventilation ②: Foot ③: Defroster

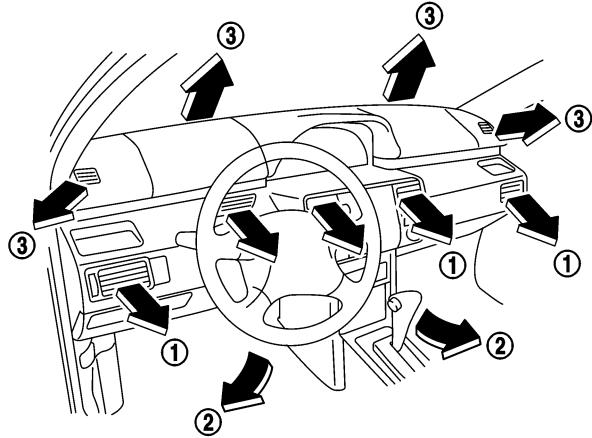


Ventilation

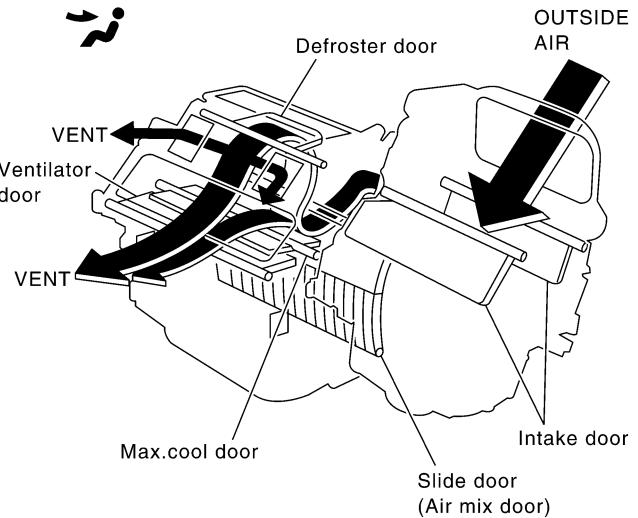


Bi-level

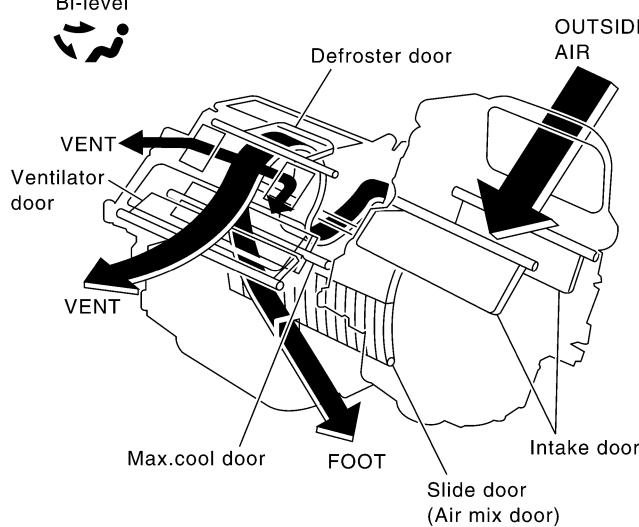


Foot

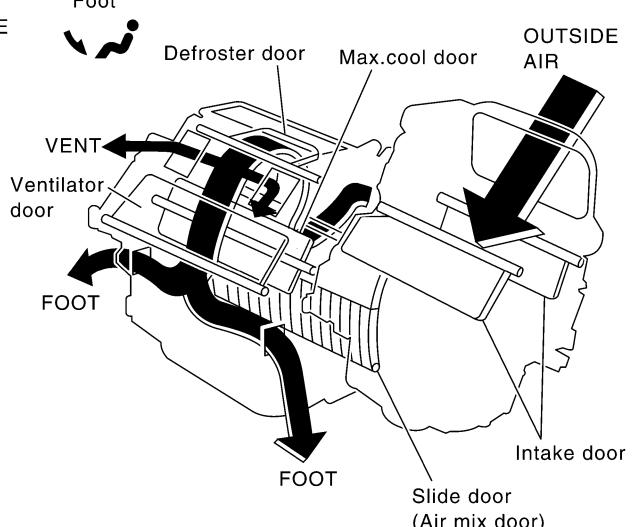

Defroster and foot

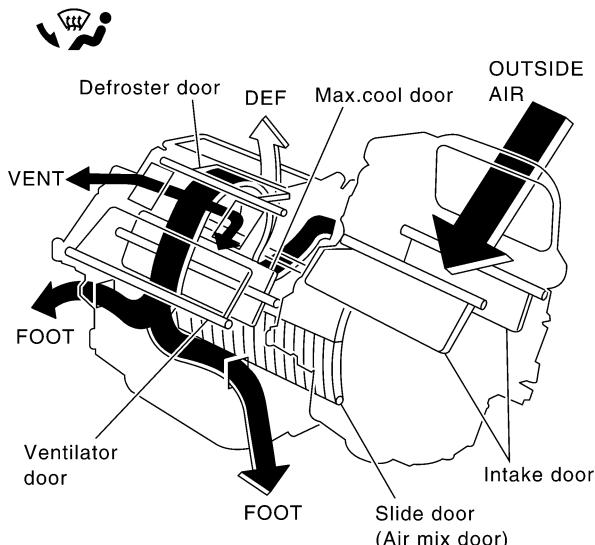

Defroster

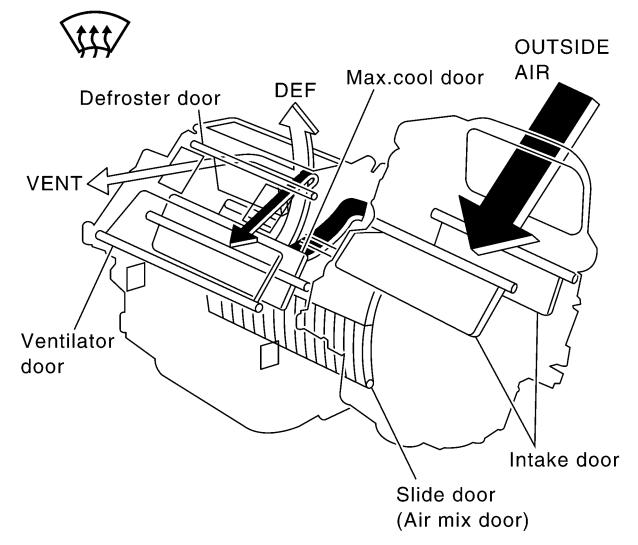


AIR CONDITIONER CONTROL

System Description SWITCHES AND THEIR CONTROL FUNCTION

EJS000TN

A
B
C
D
E
F
G
H
I

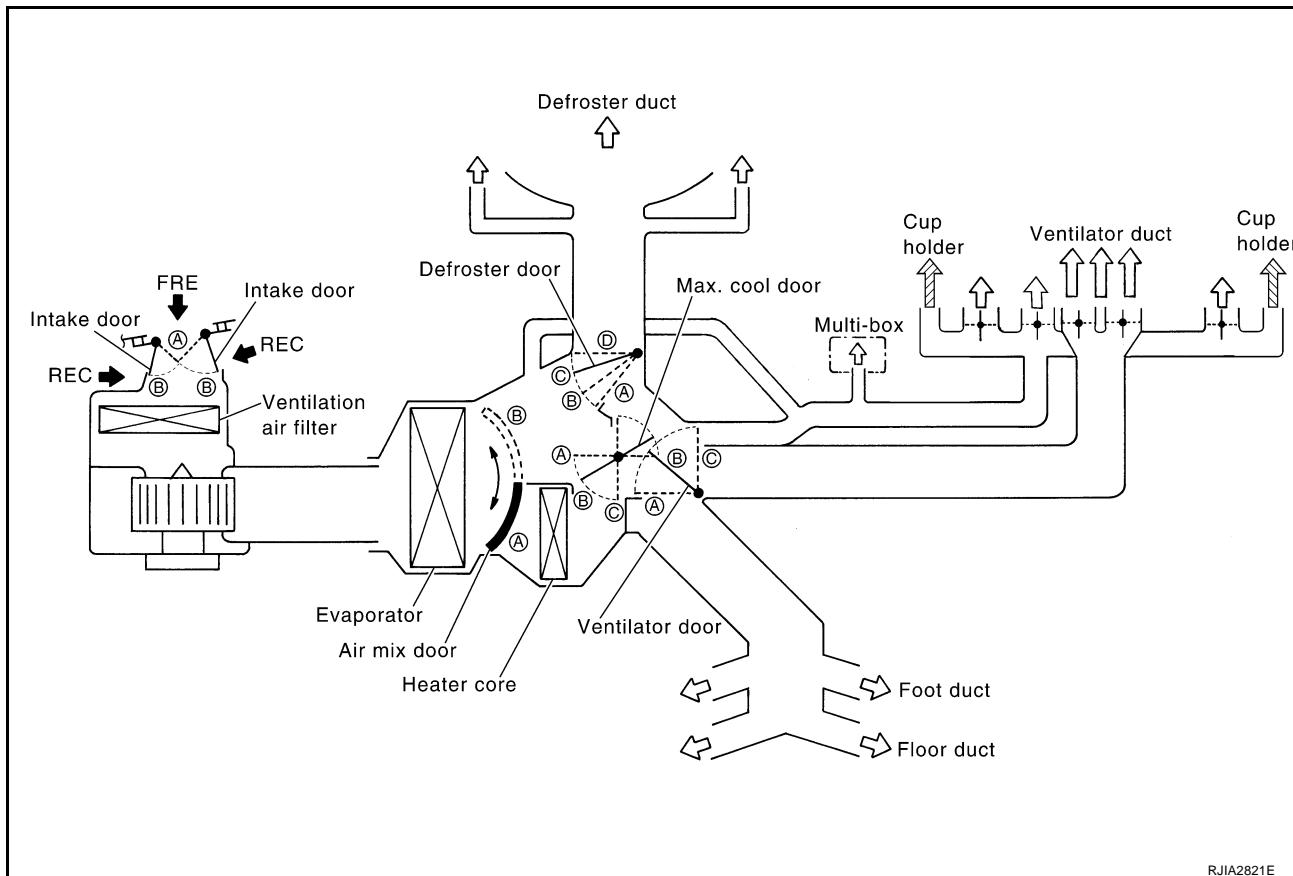

RJIA2821E

ATC

K
L
M

Position or switch	MODE control dial						Intake SW	Temperature control dial			
	VENT	B/L	FOOT	D/F	DEF	AUTO					
Door						—					
Ventilator door						—	—	—	18°C		
Max. cool door						AUTO	—	—	~		
Defroster door						AUTO	—	—	32°C		
Intake door	—	—			—				—		
Air mix door	—	—	—	—	—	—	—	—		AUTO	

*1: This door position is switched by self-diagnosis STEP-6.

*2: Inlet status is displayed even during automatic control.

RJIA2822E


TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS

PFP:00004

How to Perform Trouble Diagnoses for Quick and Accurate Repair WORK FLOW

EJS004GO

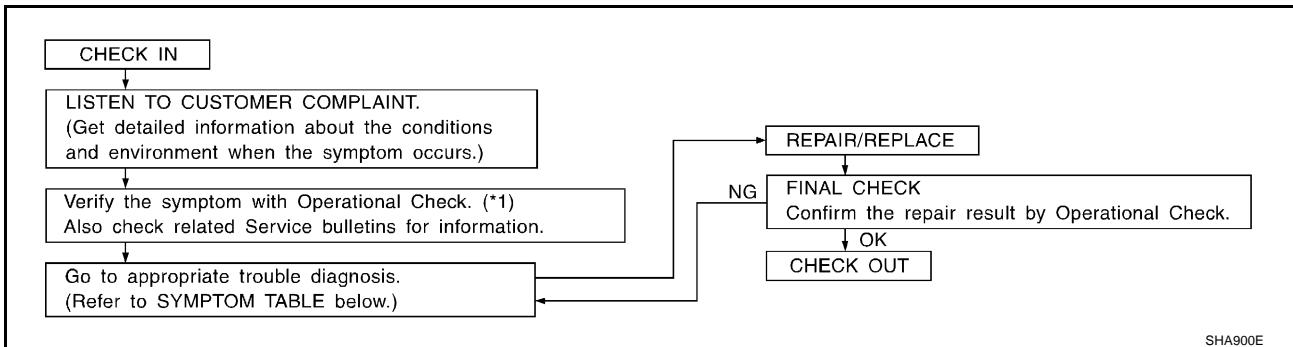

*1 [ATC-65, "Operational Check".](#)

SYMPTOM TABLE

Symptom	Reference Page
A/C system does not come on.	ATC-67, "Power Supply and Ground Circuit for Auto Amp." Go to Trouble Diagnosis Procedure for A/C System.
Air outlet does not change.	ATC-73, "Mode Door Motor Circuit" Go to Trouble Diagnosis Procedure for Mode Door Motor. (LAN)
Mode door motor does not operate normally.	ATC-76, "Air Mix Door Motor Circuit" Go to Trouble Diagnosis Procedure for Air Mix Door Motor. (LAN)
Discharge air temperature does not change.	ATC-79, "Intake Door Motor Circuit" Go to Trouble Diagnosis Procedure for Intake Door Motor. (LAN)
Air mix door motor does not operate normally.	ATC-82, "Blower Motor Circuit" Go to Trouble Diagnosis Procedure for Blower Motor.
Intake door does not change.	ATC-88, "Magnet Clutch Circuit" Go to Trouble Diagnosis Procedure for Magnet Clutch.
Intake door motor does not operate normally.	ATC-96, "Insufficient Cooling" Go to Trouble Diagnosis Procedure for Insufficient Cooling.
Blower motor operation is malfunctioning.	ATC-105, "Insufficient Heating" Go to Trouble Diagnosis Procedure for Insufficient Heating.
Blower motor operation is malfunctioning under out of starting fan speed control.	ATC-107, "Noise" Go to Trouble Diagnosis Procedure for Noise.
Magnet clutch does not engage.	ATC-108, "Self-diagnosis" Go to Trouble Diagnosis Procedure for Self-diagnosis.
Insufficient cooling	
Insufficient heating	
Noise	
Self-diagnosis cannot be performed.	

TROUBLE DIAGNOSIS


Component Parts and Harness Connector Location ENGINE COMPARTMENT

EJS004GP


A
B
C
D
E
F
G
H
I

ATC
K
L
M


A/C relay **E5**

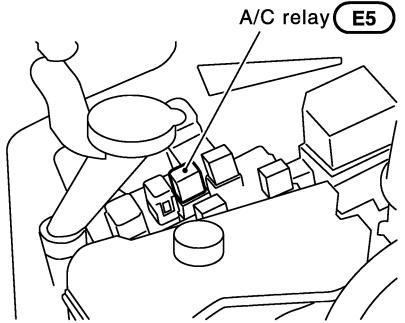


Refrigerant pressure sensor **E39**

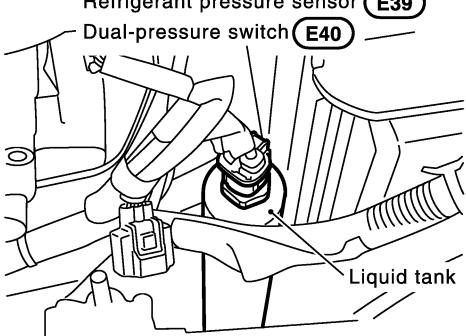


Dual-pressure switch **E40**

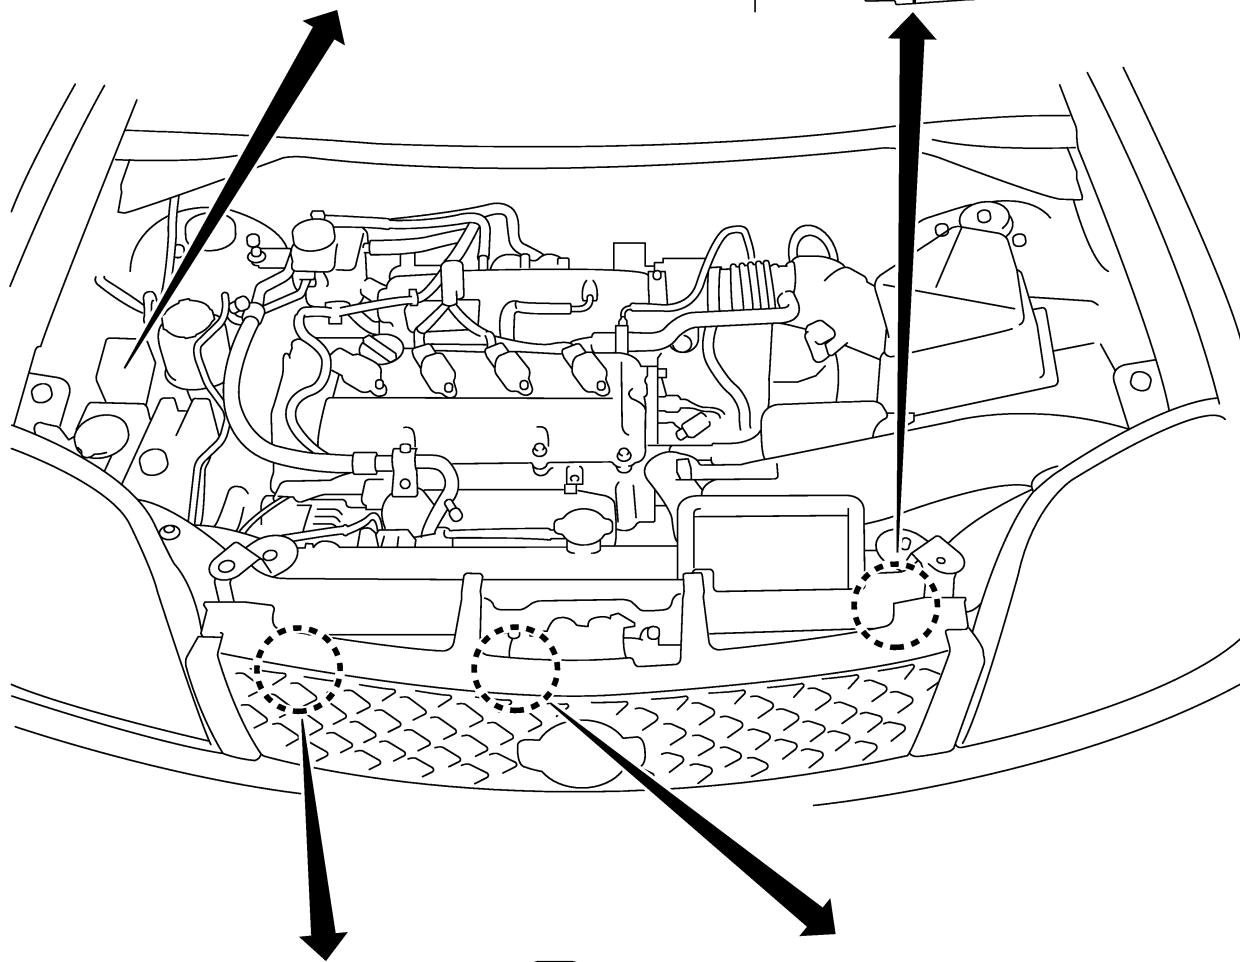

Compressor **E34**

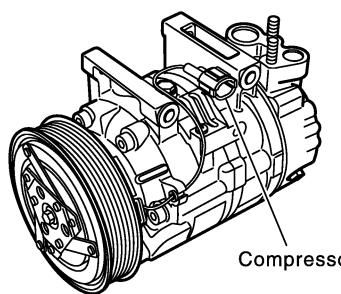


With Gasoline Engine

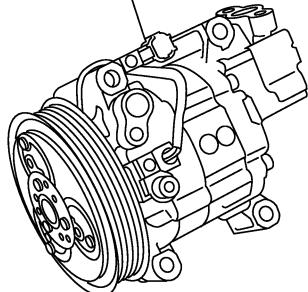

With Diesel Engine


Ambient sensor **E38**

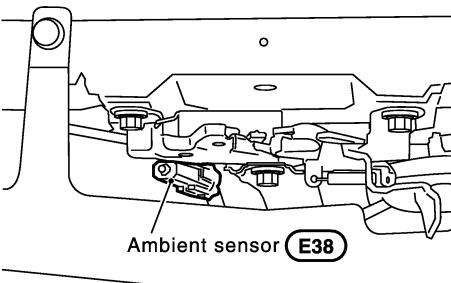

RJIA0677E

TROUBLE DIAGNOSIS


PASSENGER COMPARTMENT

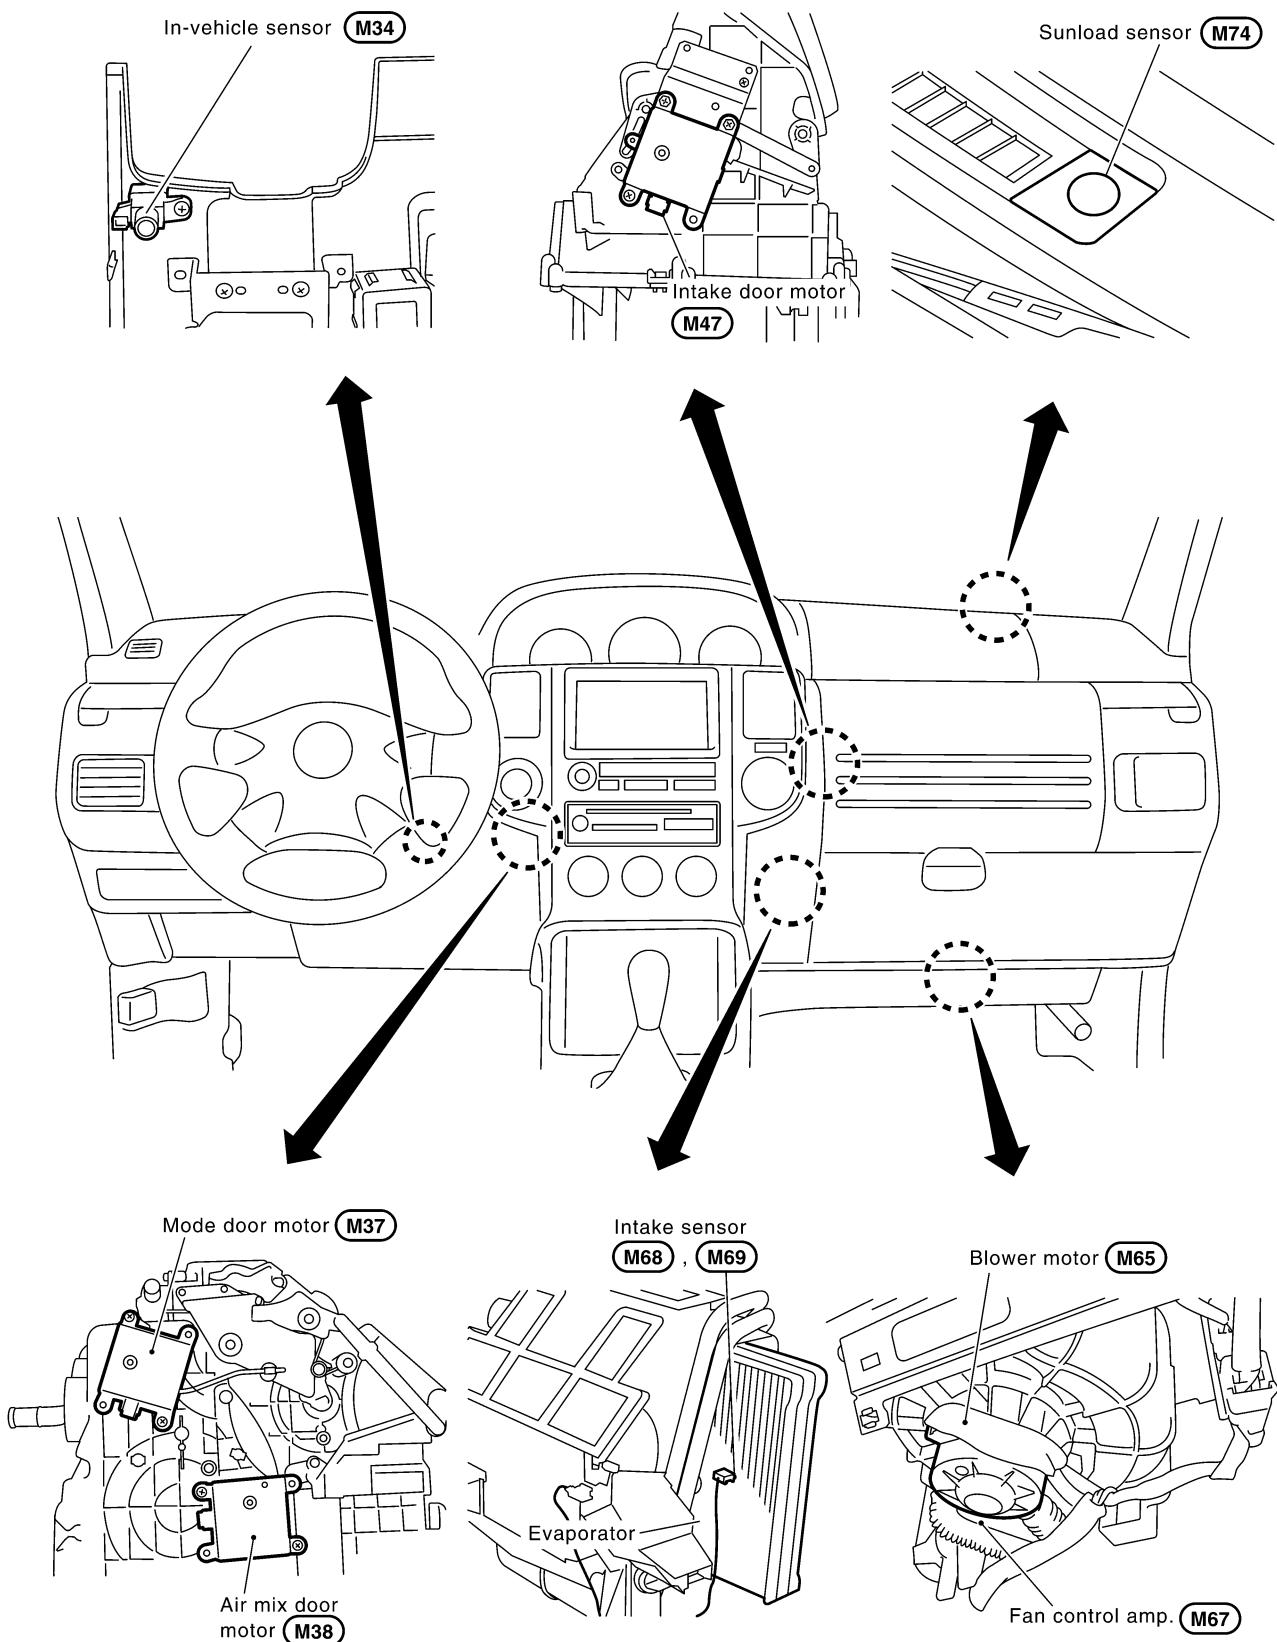

TROUBLE DIAGNOSIS


Schematic WITH GASOLINE ENGINE

EJS004GQ

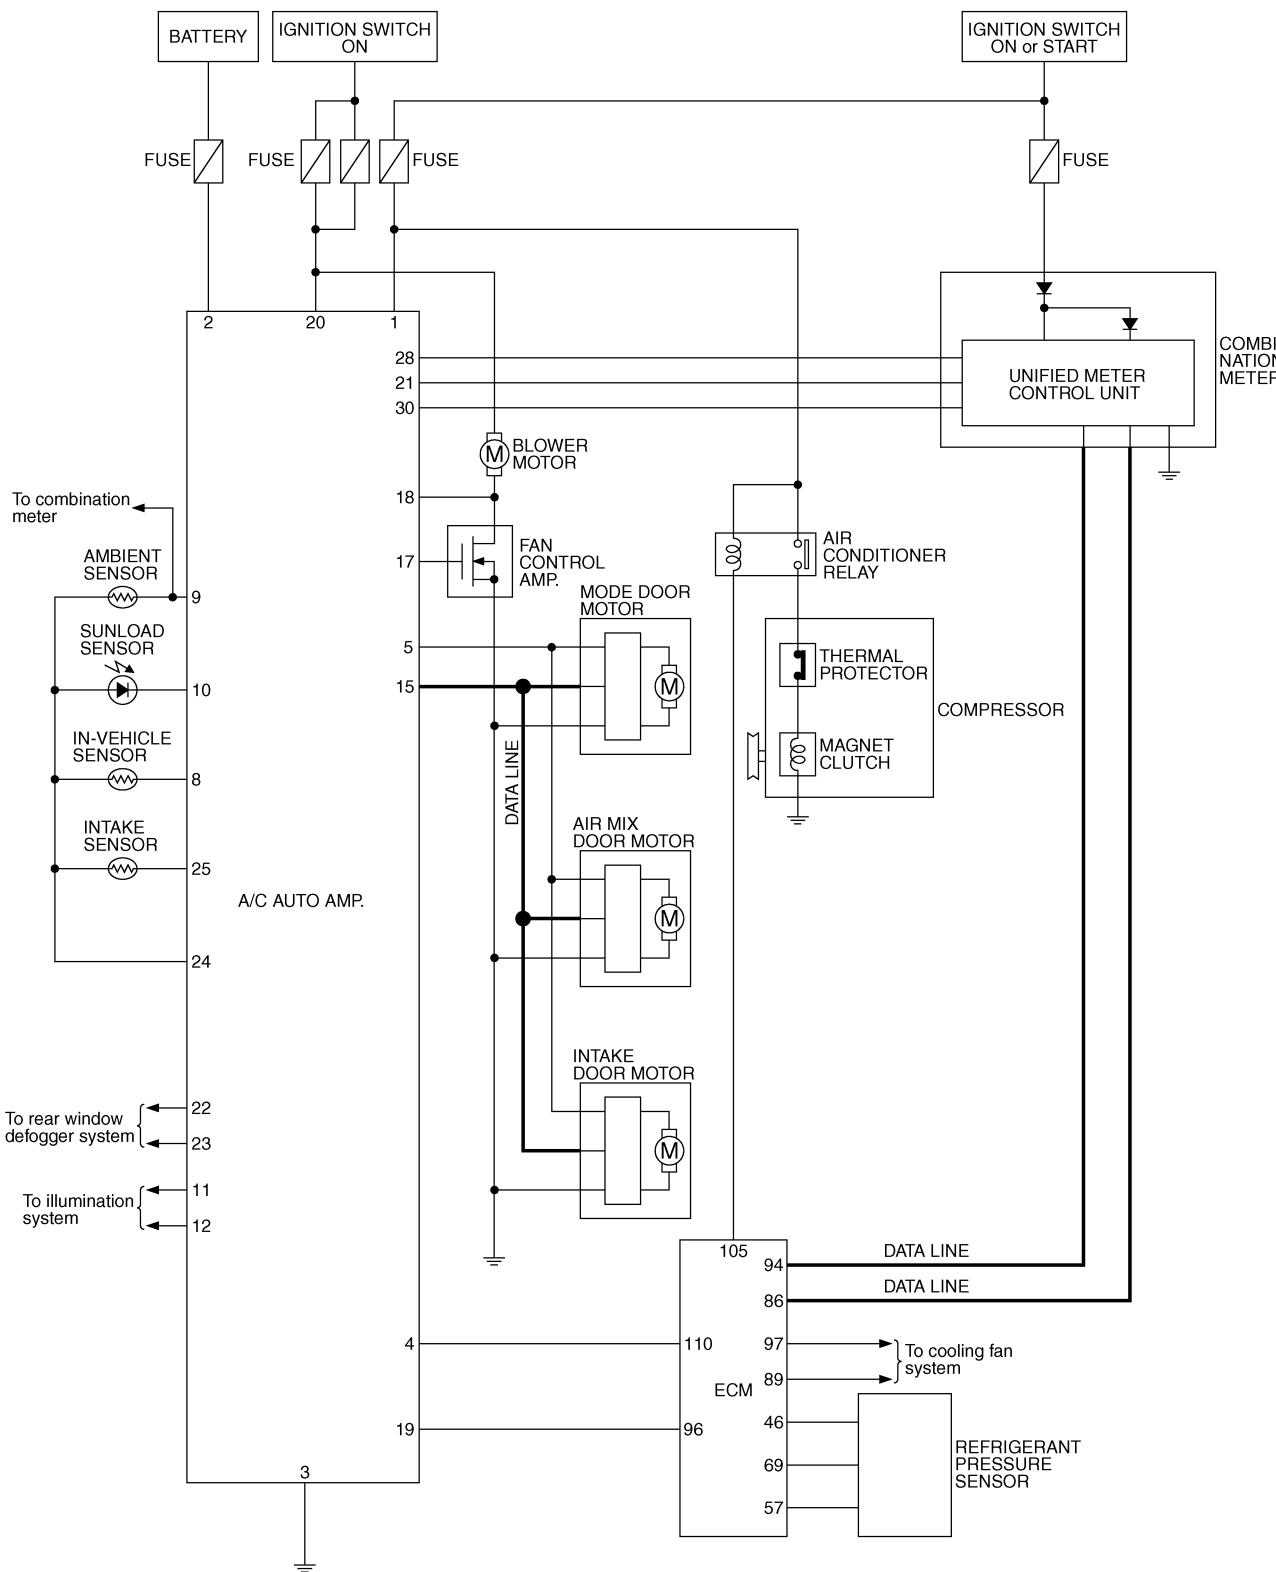

TROUBLE DIAGNOSIS

WITH DIESEL ENGINE

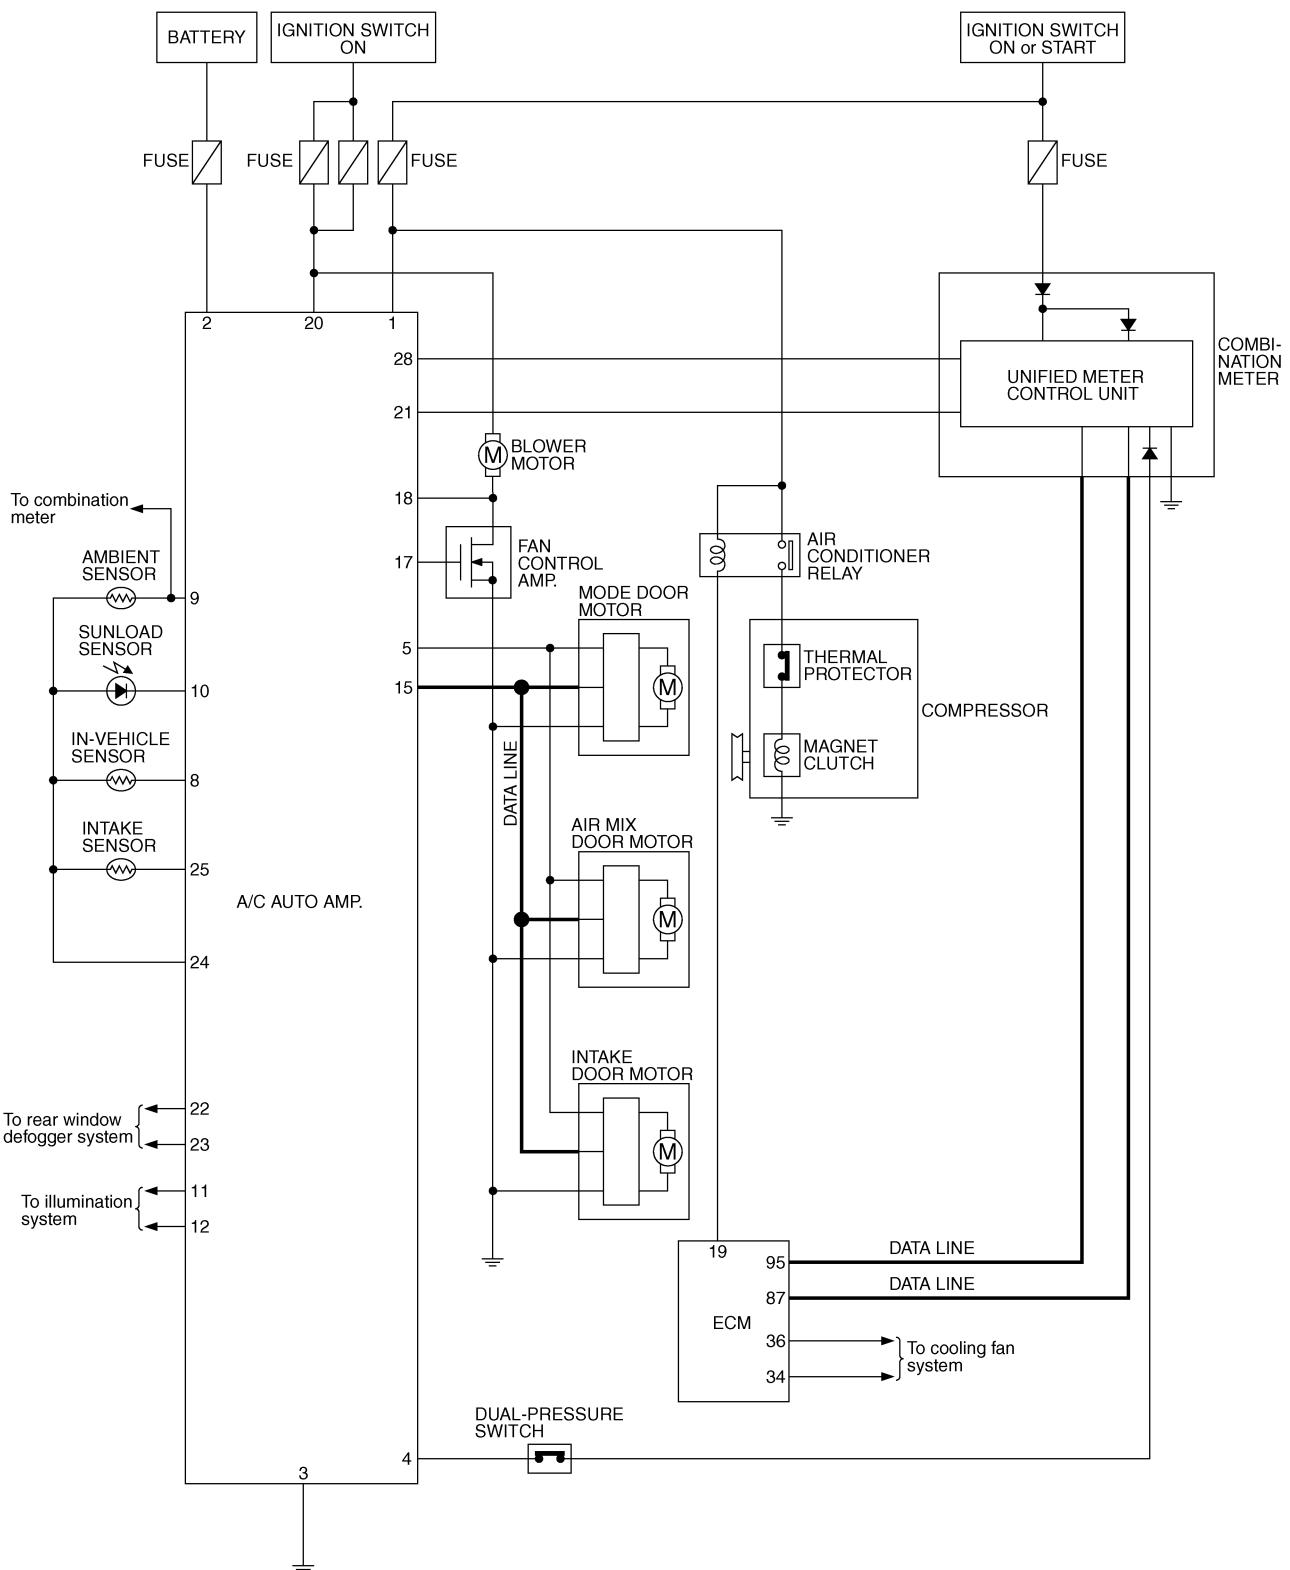

TROUBLE DIAGNOSIS

Wiring Diagram —A/C— WITH GASOLINE ENGINE / LHD MODELS

EJS004GR

ATC-A/C-01

— : DATA LINE

IGNITION SWITCH ON OR START → 10A (15) → 2B → BR/Y → IGN

BATTERY → 10A (28) → 6B → BR/Y → L → BAT

FUSE BLOCK (J/B) (M2, E103) → REFER TO PG-POWER.

BR/Y → TO ATC-A/C-04

L → R/L → TO LT-ILL

L → B → TO LT-ILL

R/L → B → TO GW-DEF

B → LG/B → TO GW-DEF

B → BR → TO GW-DEF

IGN → 1 → VACTR (5) → W → MODE DOOR MOTOR (M37)

IGN → 2 → LAN-SIG (15) → G → MODE DOOR MOTOR (M37)

IGN → 12 → VACTR (5) → W → INTAKE DOOR MOTOR (M47)

IGN → 11 → LAN-SIG (15) → G → INTAKE DOOR MOTOR (M47)

IGN → 22 → VACTR (5) → W → AIR MIX DOOR MOTOR (M38)

IGN → 23 → LAN-SIG (15) → G → AIR MIX DOOR MOTOR (M38)

GND (3) → B → MODE DOOR MOTOR (M37)

GND (3) → B → INTAKE DOOR MOTOR (M47)

GND (3) → B → AIR MIX DOOR MOTOR (M38)

W → B → MODE DOOR MOTOR (M37)

W → B → INTAKE DOOR MOTOR (M47)

W → B → AIR MIX DOOR MOTOR (M38)

G → B → MODE DOOR MOTOR (M37)

G → B → INTAKE DOOR MOTOR (M47)

G → B → AIR MIX DOOR MOTOR (M38)

B → B/R → MODE DOOR MOTOR (M37)

B → B/R → INTAKE DOOR MOTOR (M47)


B → B/R → AIR MIX DOOR MOTOR (M38)

A/C AUTO AMP. (M52, M53) → GND (3) → B → MODE DOOR MOTOR (M37)

A/C AUTO AMP. (M52, M53) → GND (3) → B → INTAKE DOOR MOTOR (M47)



A/C AUTO AMP. (M52, M53) → GND (3) → B → AIR MIX DOOR MOTOR (M38)

REFER TO THE FOLLOWING.
**(M2) , (E103) -FUSE BLOCK-
JUNCTION BOX (J/B)**




TROUBLE DIAGNOSIS

ATC-A/C-02


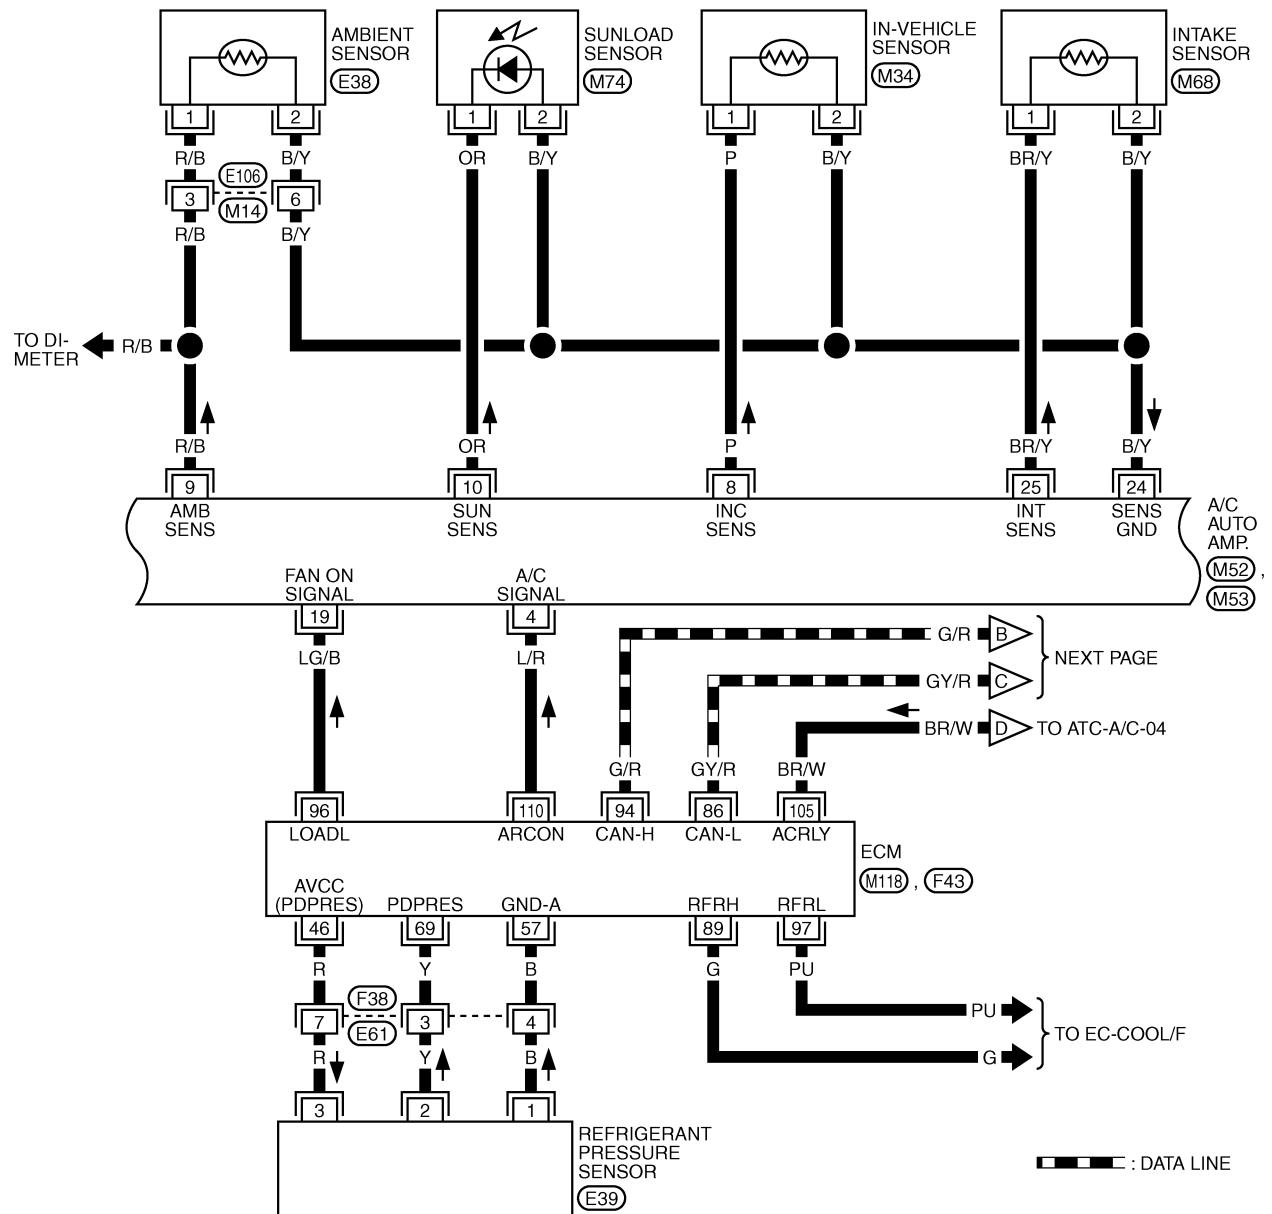


REFER TO THE FOLLOWING.
M118, F43 -ELECTRICAL UNITS

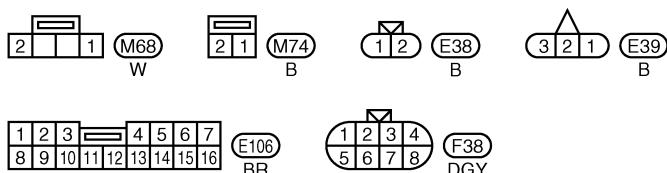


TROUBLE DIAGNOSIS

ATC-A/C-03

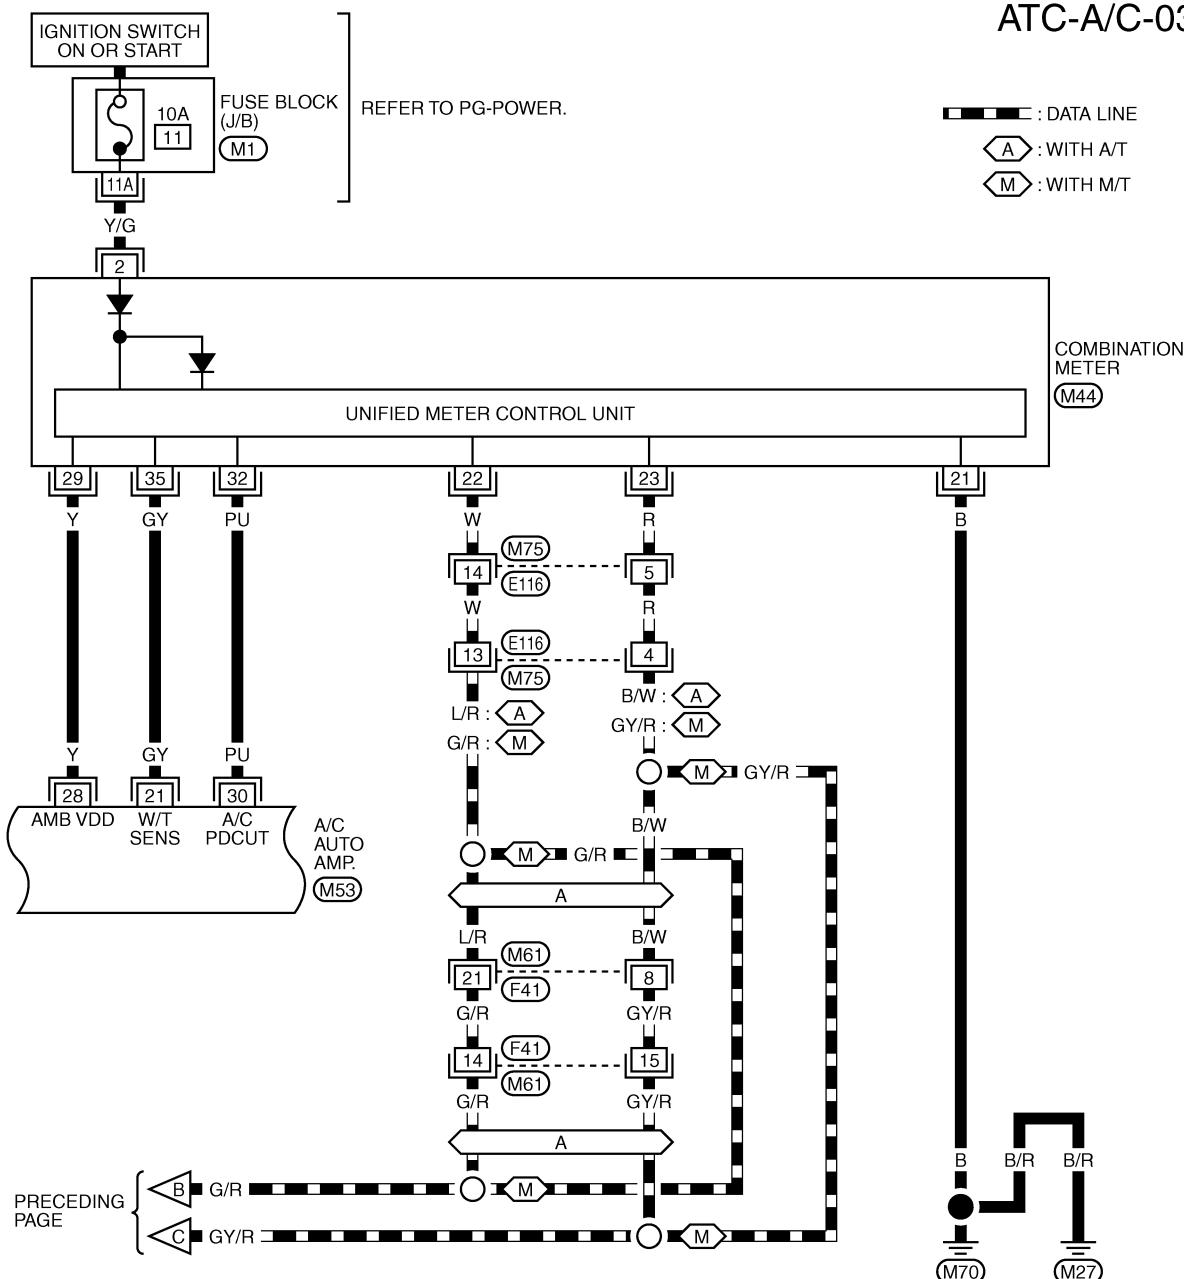

REFER TO THE FOLLOWING.
M1 -FUSE BLOCK-JUNCTION
BOX (J/B)




TJWA0080E

ATC-41


TROUBLE DIAGNOSIS

ATC-A/C-04

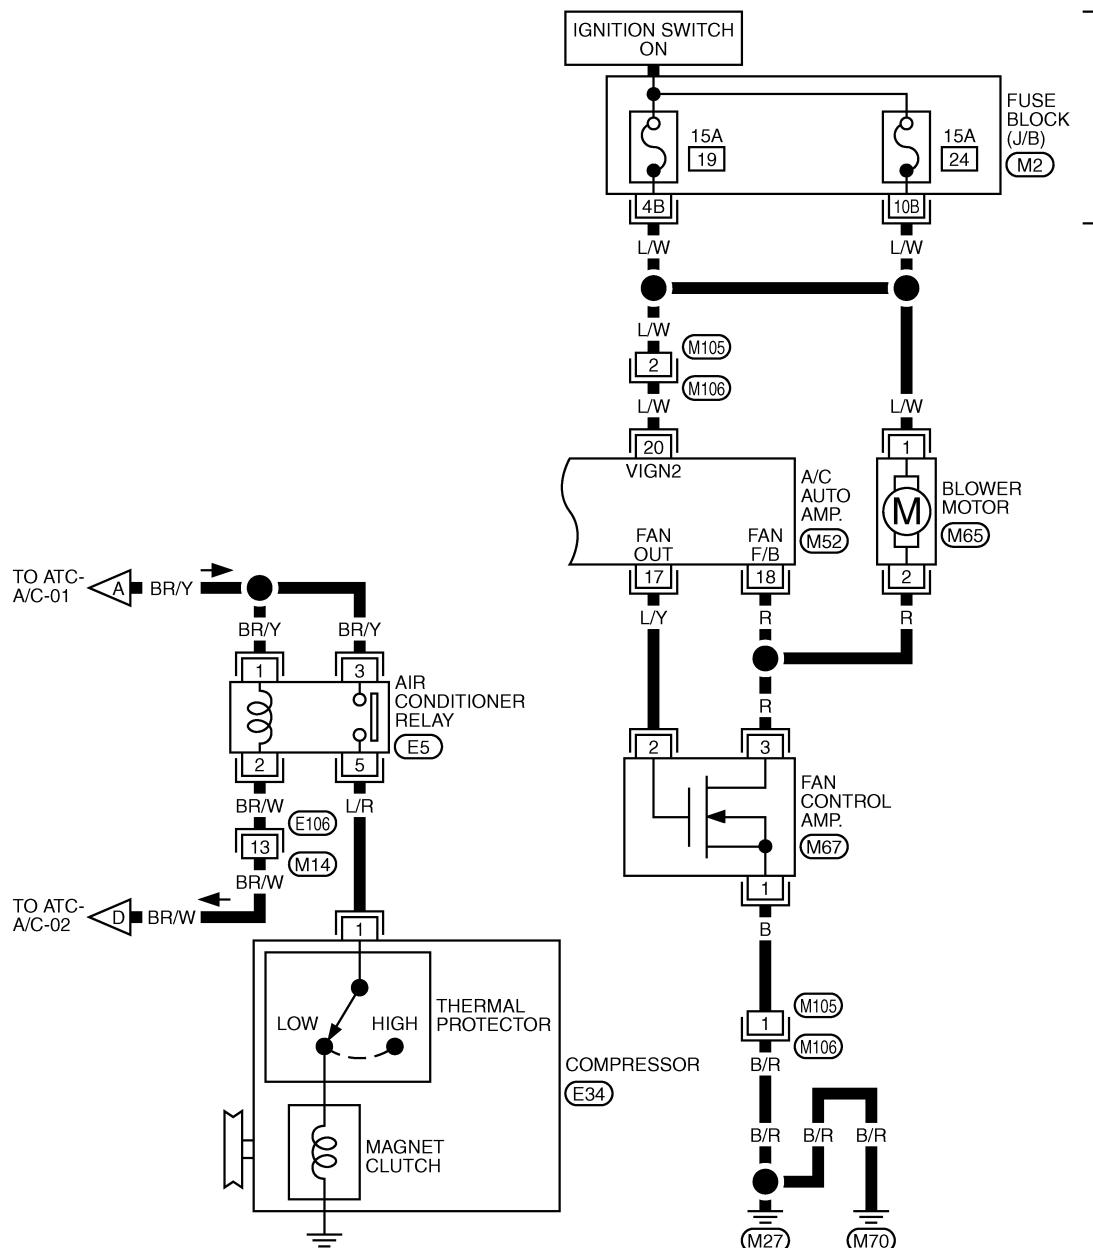



I BEEFB TO THE FOLLOWING

**M2 -FUSE BLOCK-JUNCTION
BOX (I/B)**

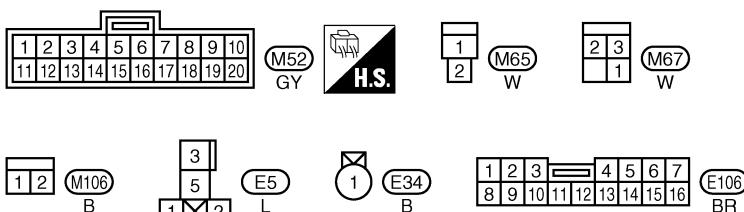

TROUBLE DIAGNOSIS



WITH GASOLINE ENGINE / RHD MODELS

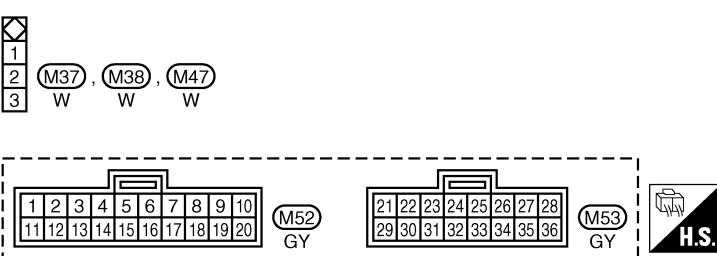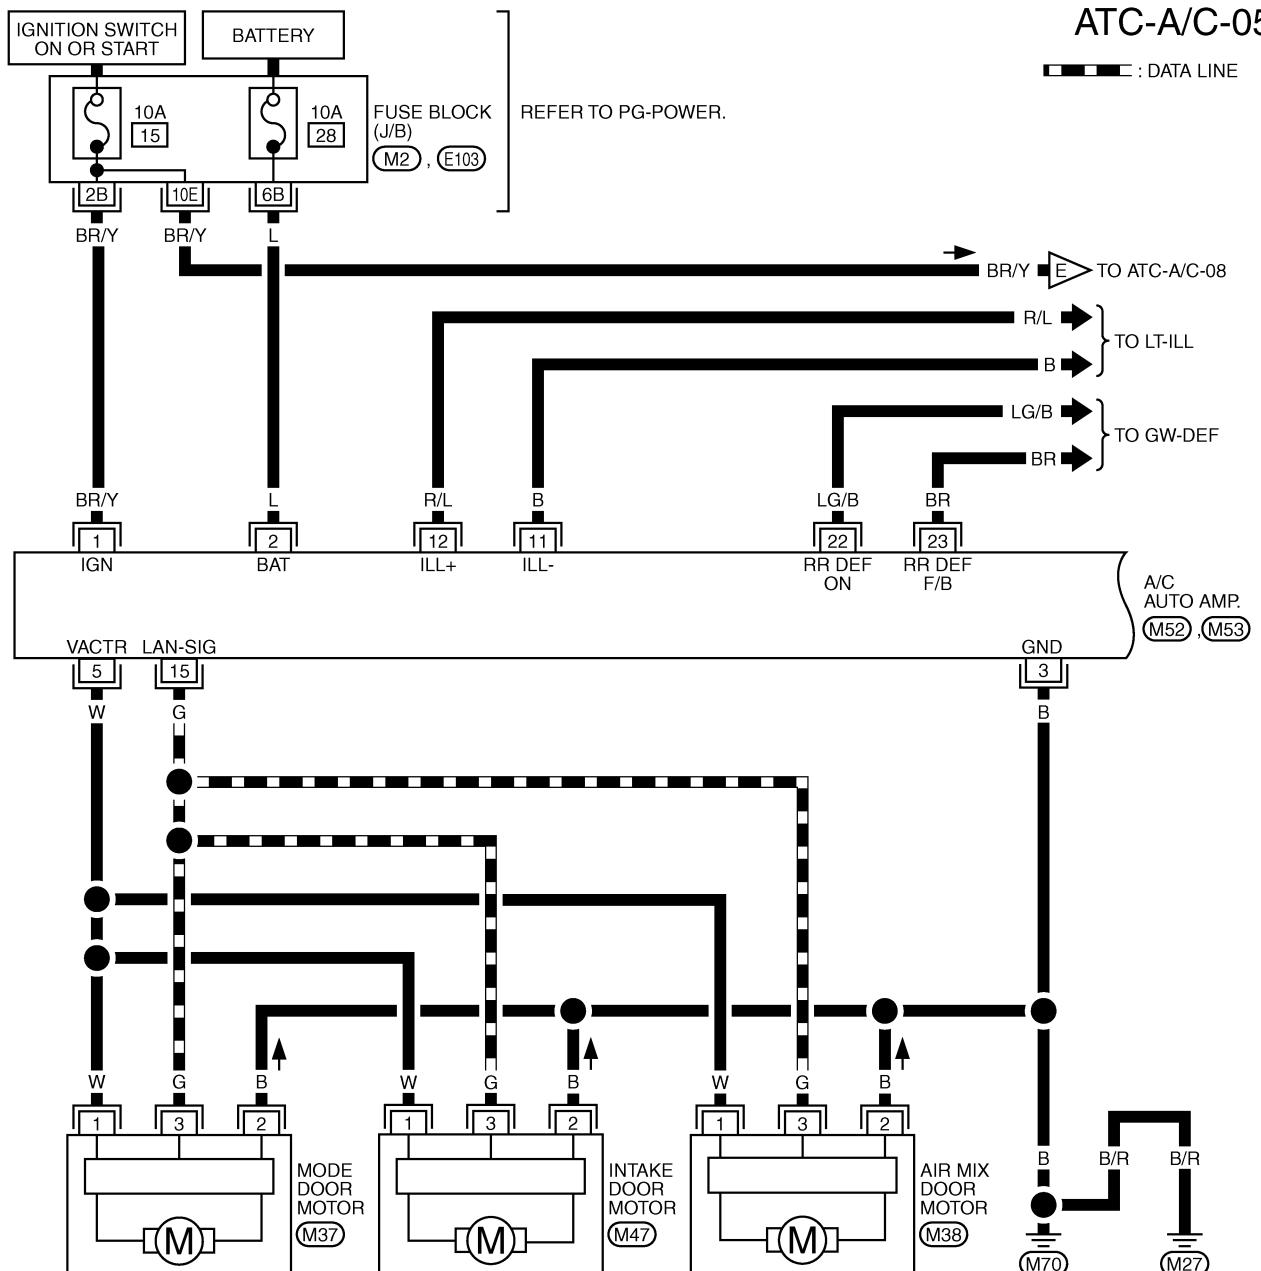

REFER TO THE FOLLOWING.
M2 , **E103** -FUSE BLOCK-
JUNCTION BOX (J/B)

TROUBLE DIAGNOSIS





ATC-A/C-06

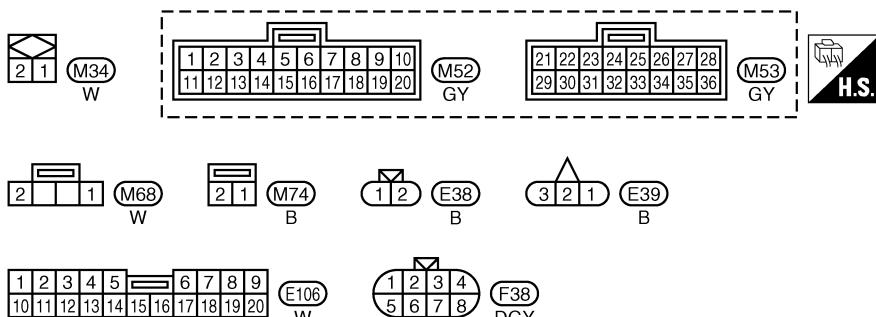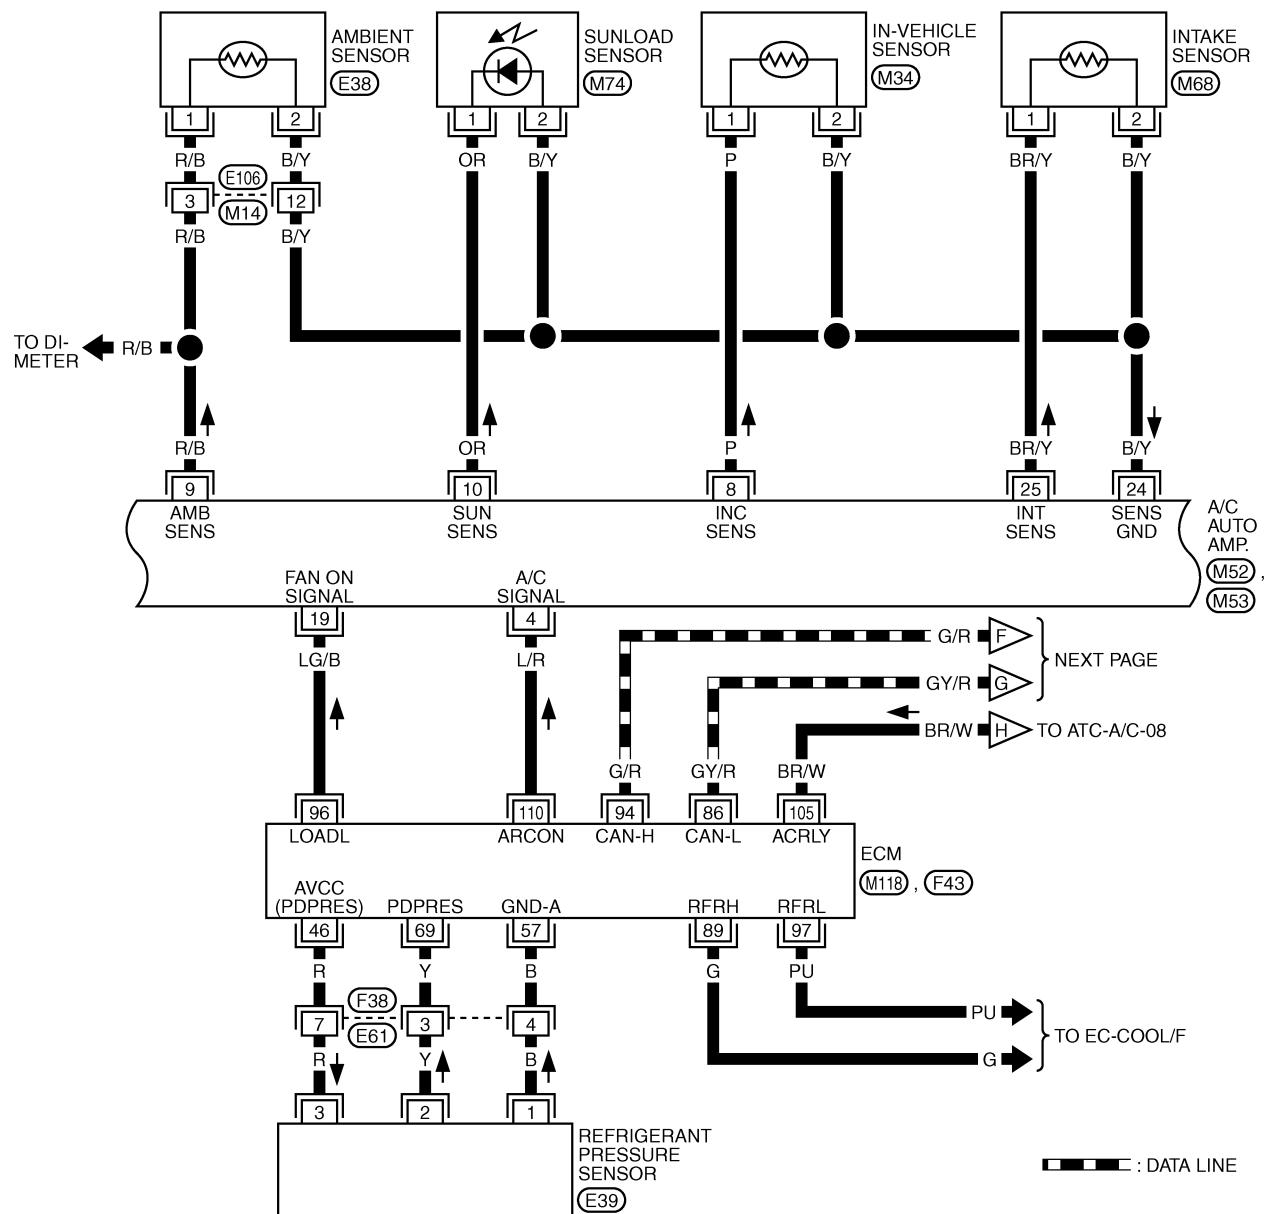

REFER TO THE FOLLOWING.
 (M118, F43) -ELECTRICAL UNITS

TROUBLE DIAGNOSIS

ATC-A/C-07


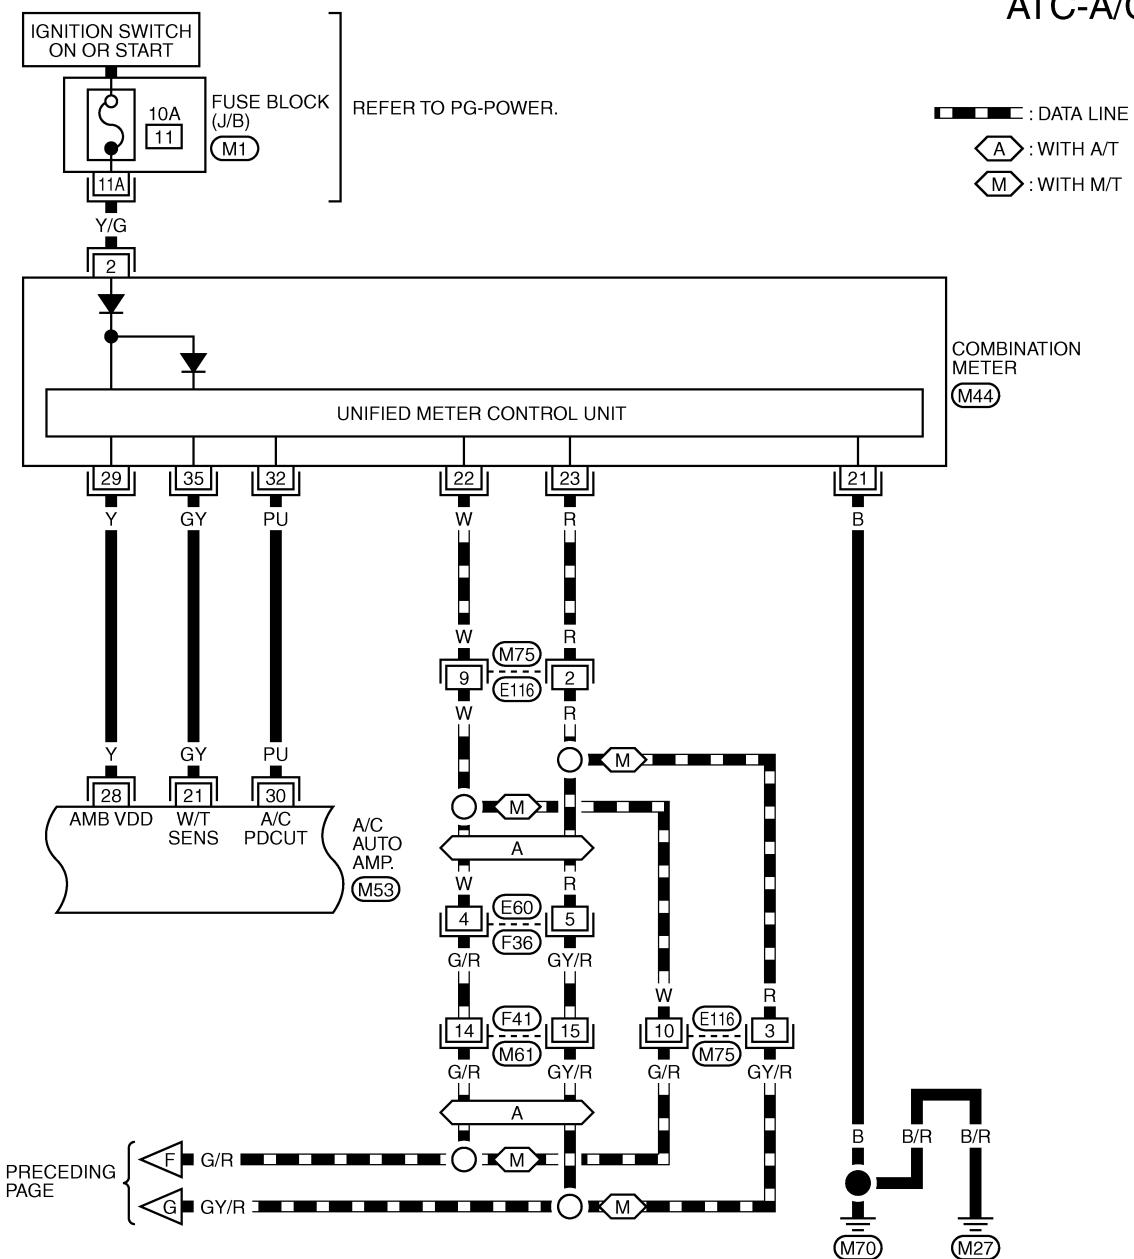


TJWA0084E


ATC-45

TROUBLE DIAGNOSIS

ATC-A/C-08

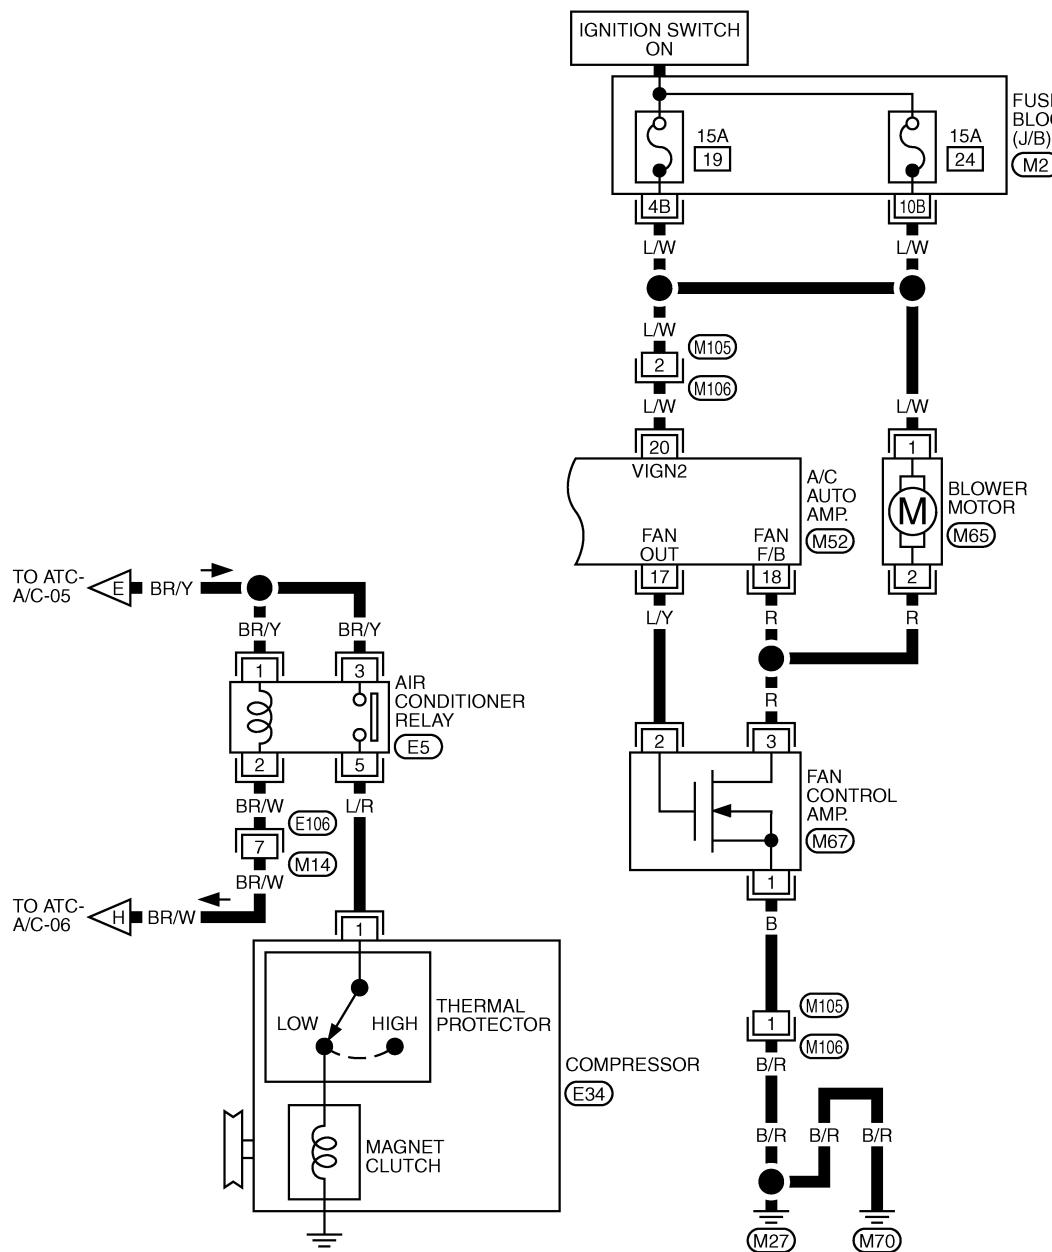

REFER TO THE FOLLOWING.
 (M2) -FUSE BLOCK-JUNCTION BOX (J/B)





TJWA0085E


ATC-46

TROUBLE DIAGNOSIS

WITH DIESEL ENGINE / LHD MODELS



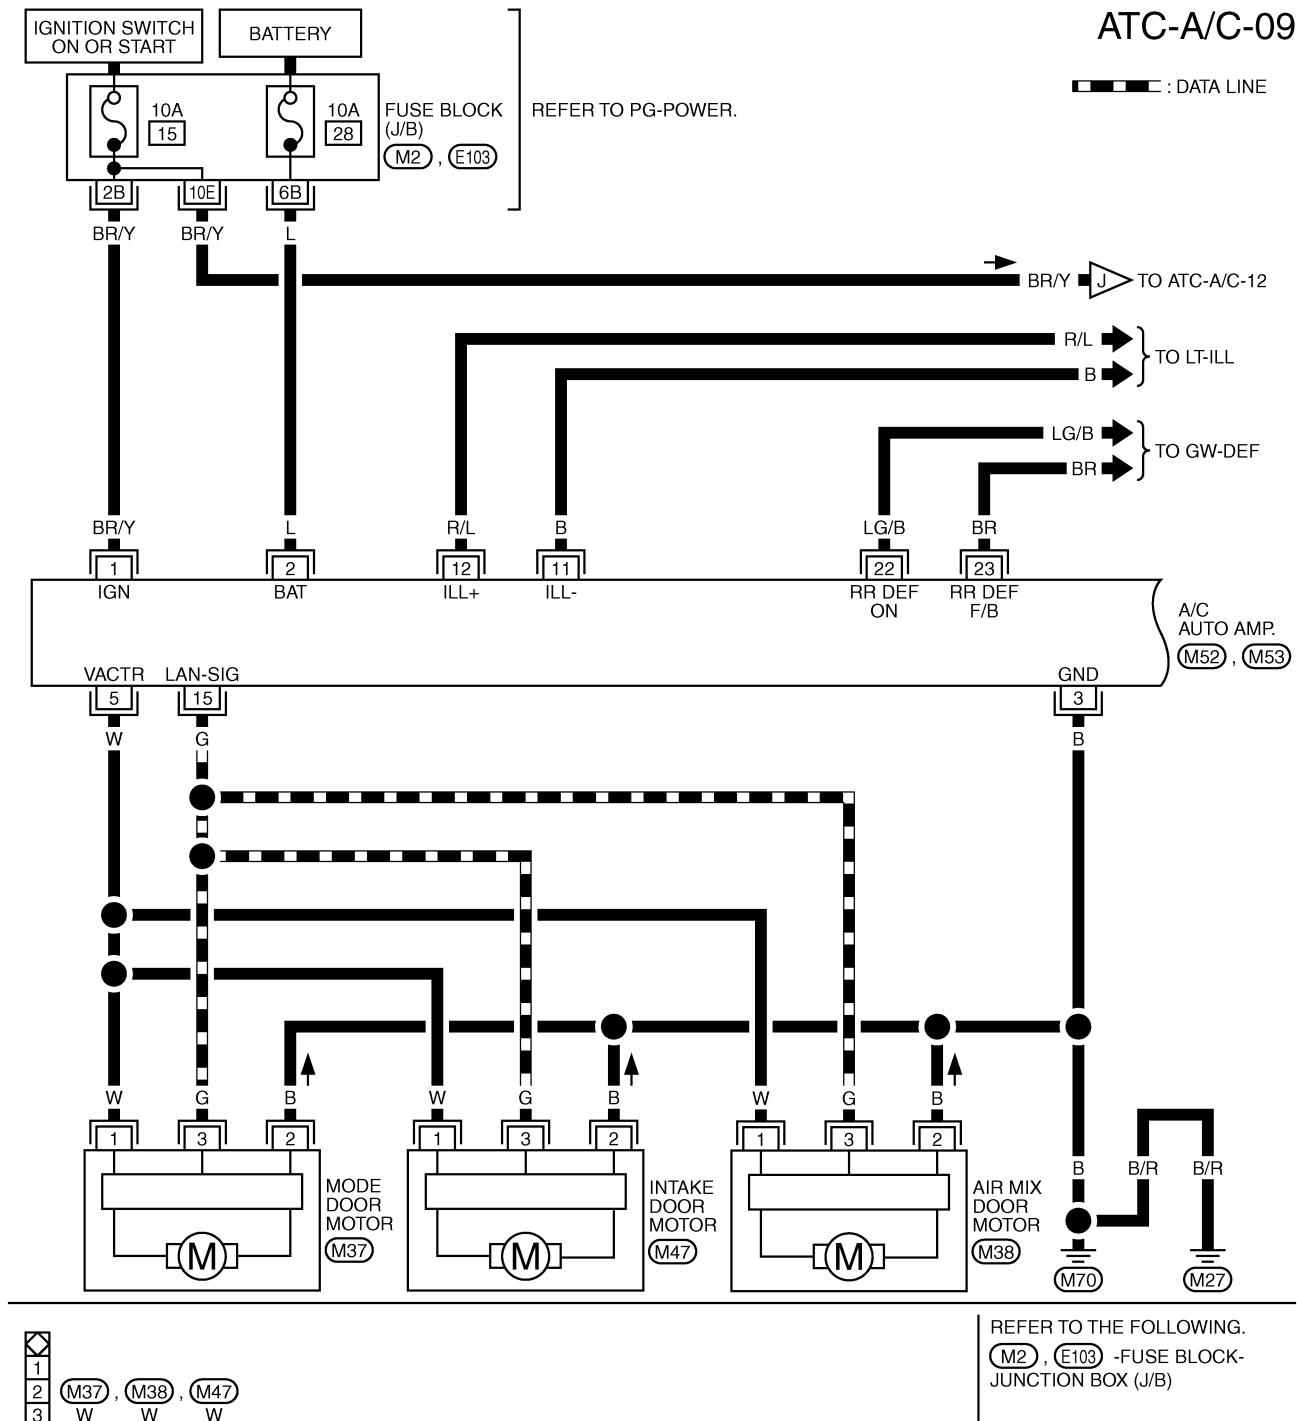


REFER TO THE FOLLOWING.
M2 , **E103** -FUSE BLOCK-
JUNCTION BOX (J/B)



TROUBLE DIAGNOSIS





ATC-A/C-10

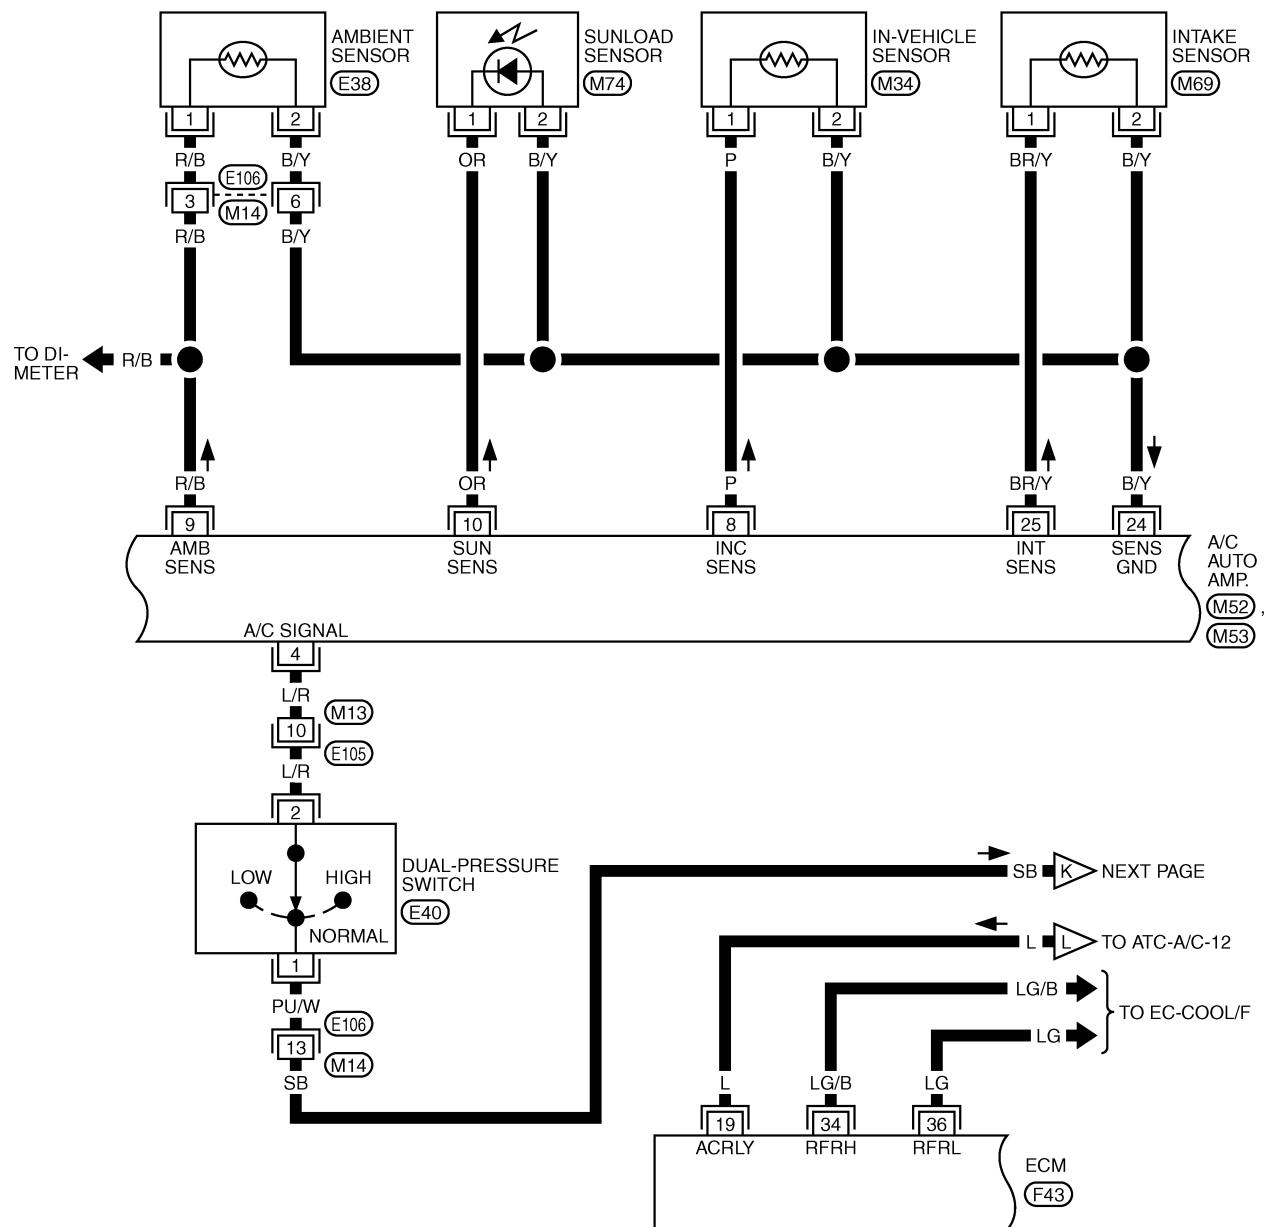

REFER TO THE FOLLOWING.
F43 - ELECTRICAL UNITS

TROUBLE DIAGNOSIS

ATC-A/C-11

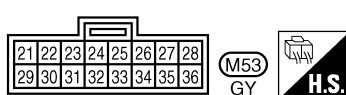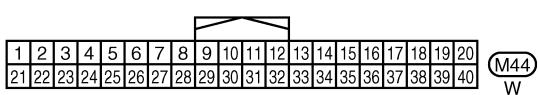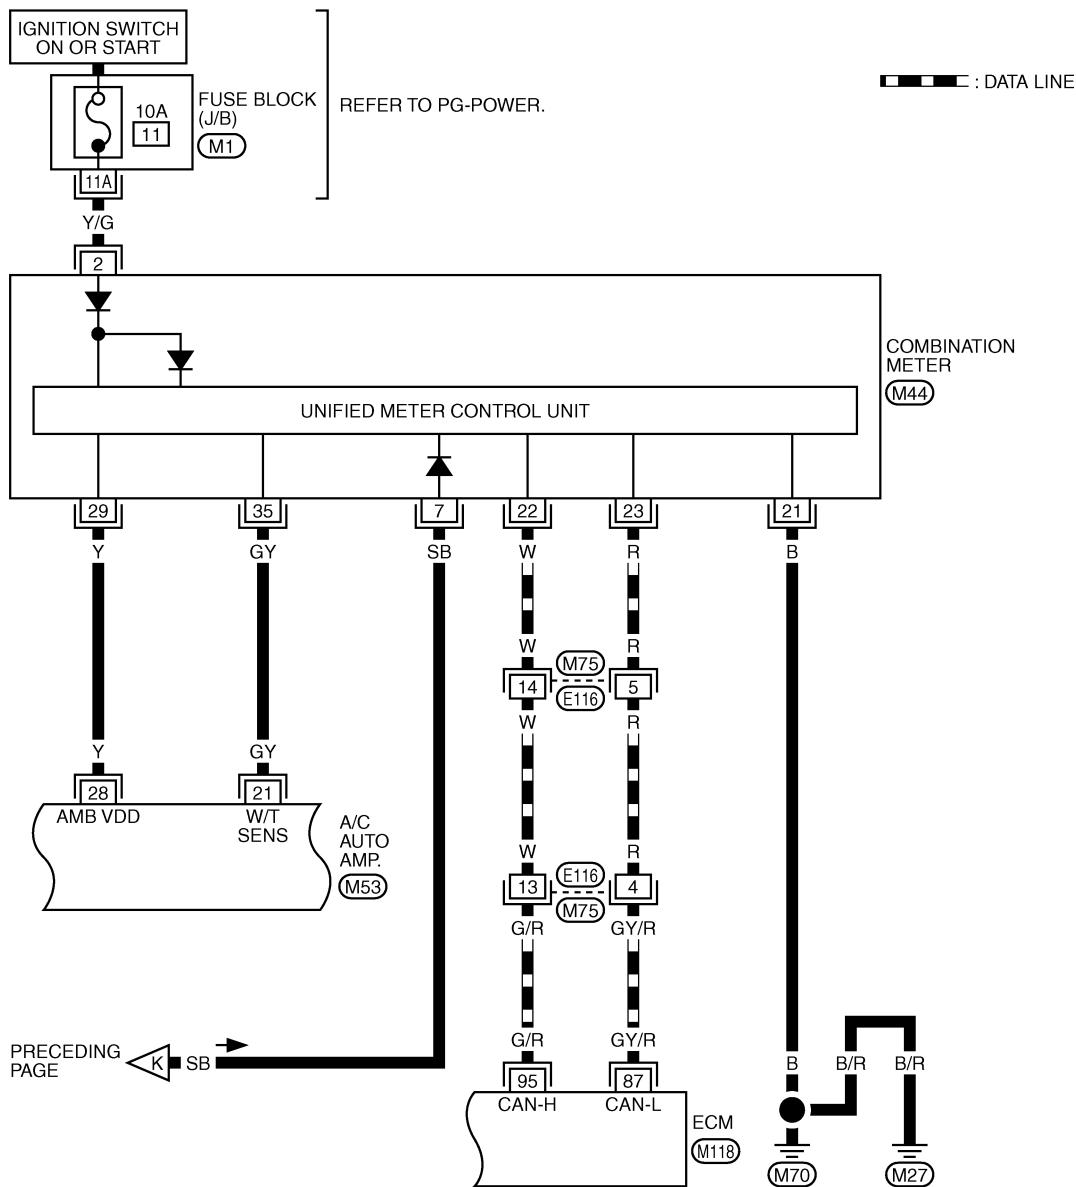

REFER TO THE FOLLOWING.


M1 -FUSE BLOCK-JUNCTION BOX (J/B)

M53 -ELECTRICAL UNITS


M118 -ELECTRICAL UNITS

TROUBLE DIAGNOSIS

ATC-A/C-12

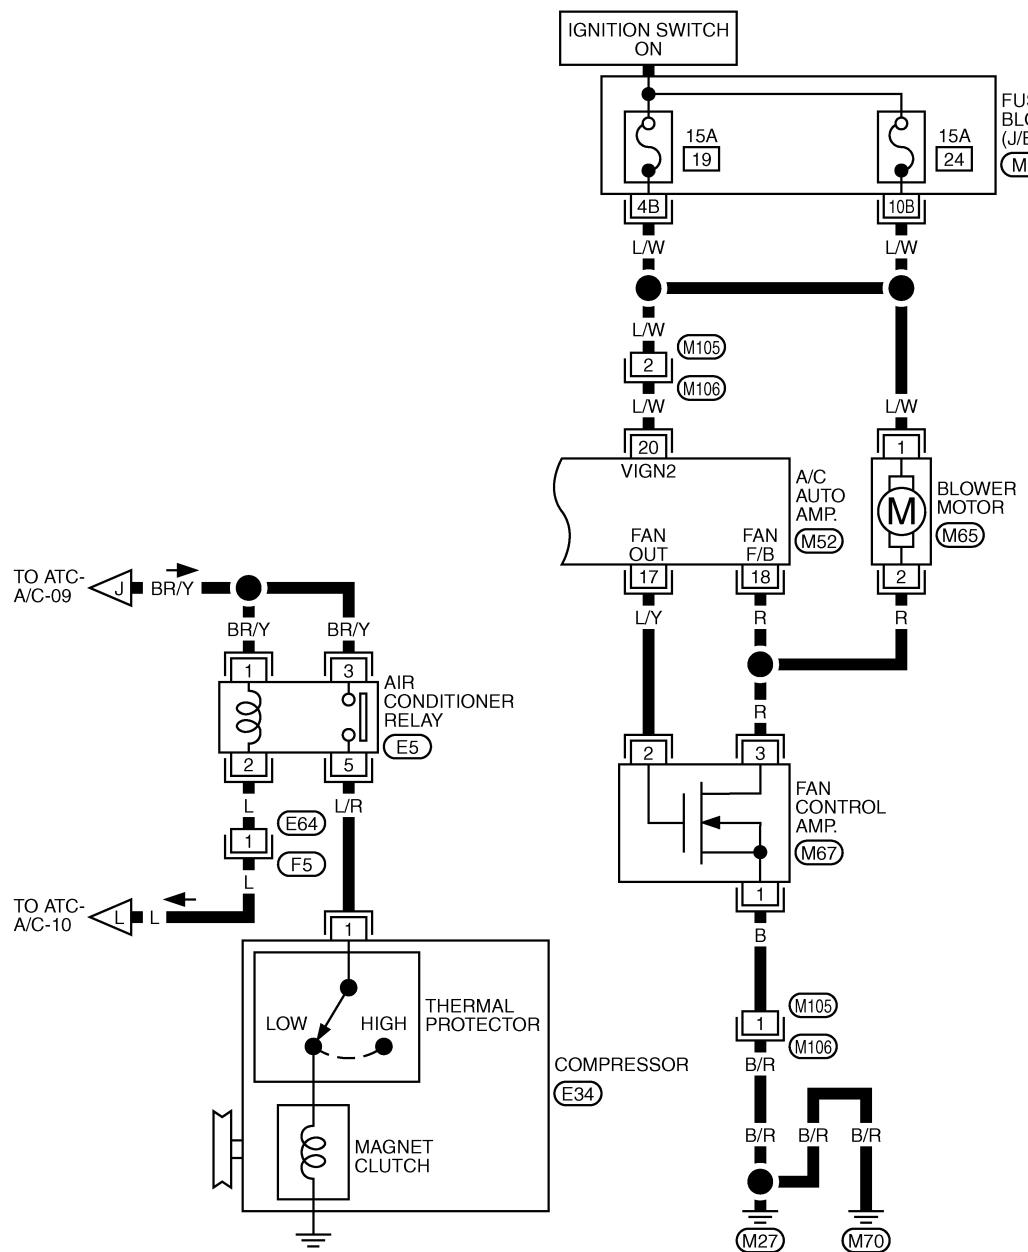

REFER TO THE FOLLOWING.
 M2 - FUSE BLOCK-JUNCTION
 BOX (J/B)





ATC-50


TJWA0090E

TROUBLE DIAGNOSIS

WITH DIESEL ENGINE / RHD MODELS

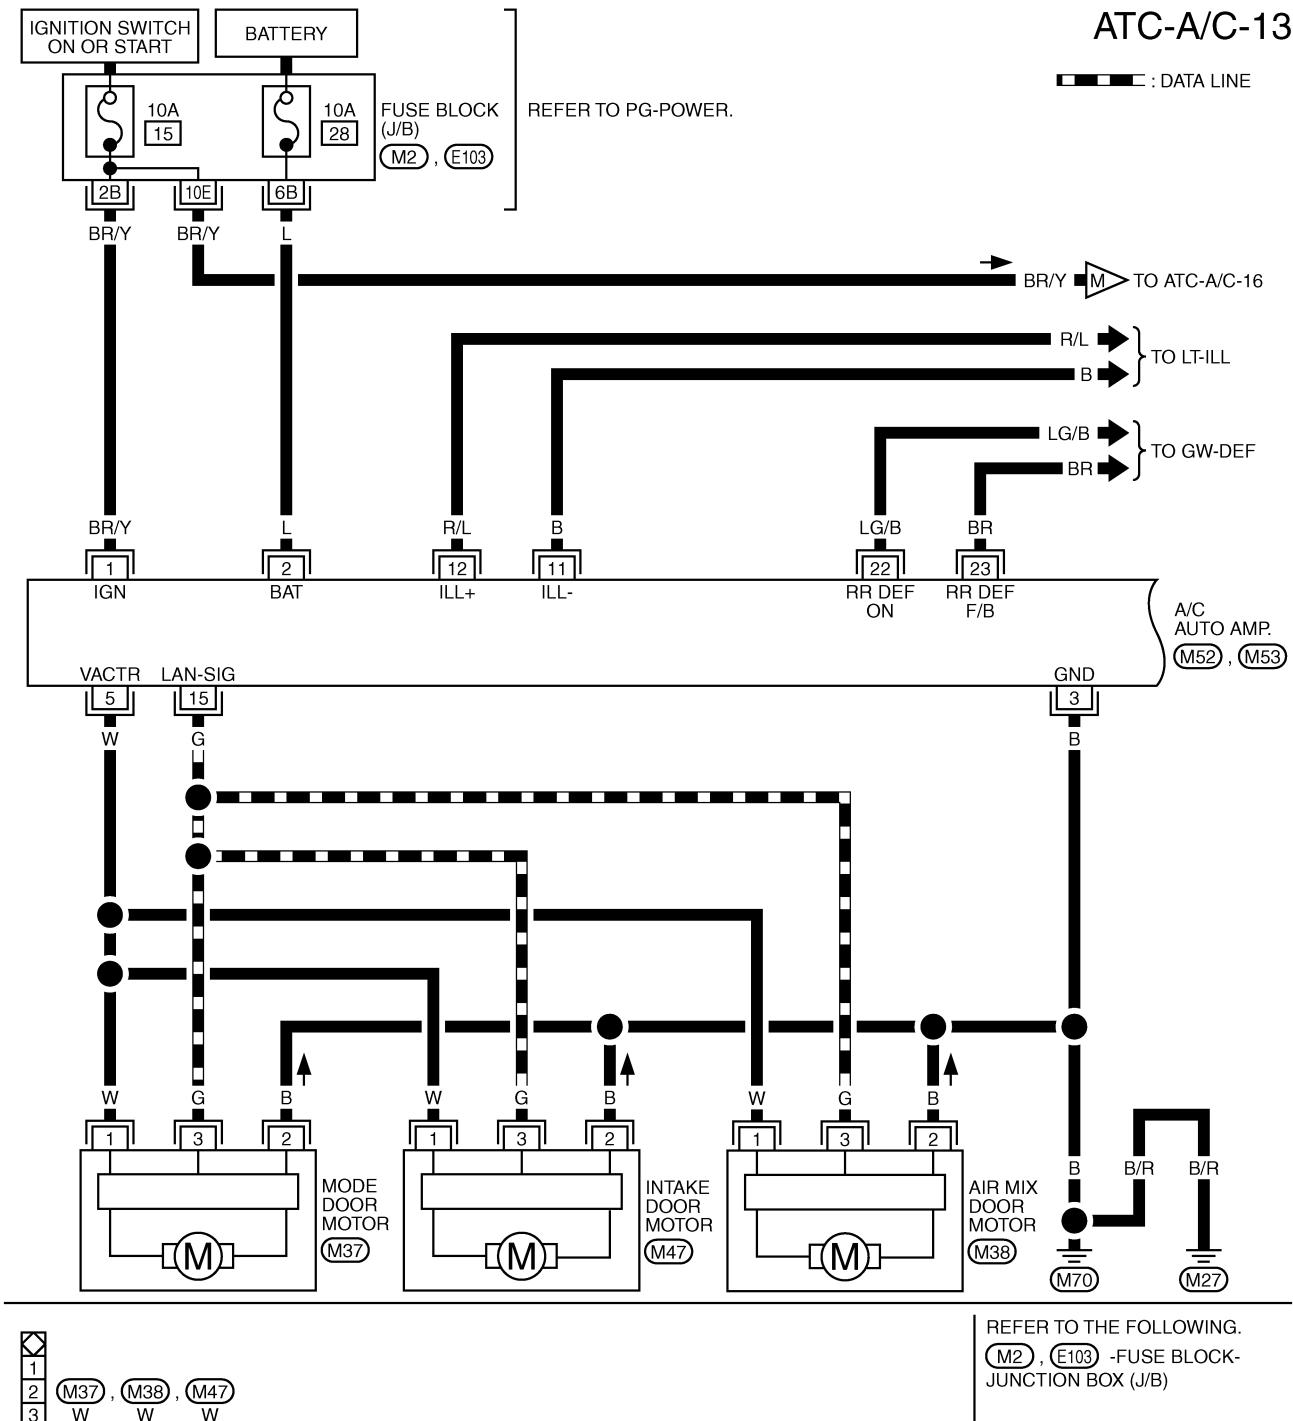


REFER TO THE FOLLOWING.
(M2) , **(E103)** -FUSE BLOCK-
JUNCTION BOX (J/B)




TROUBLE DIAGNOSIS

ATC-A/C-14

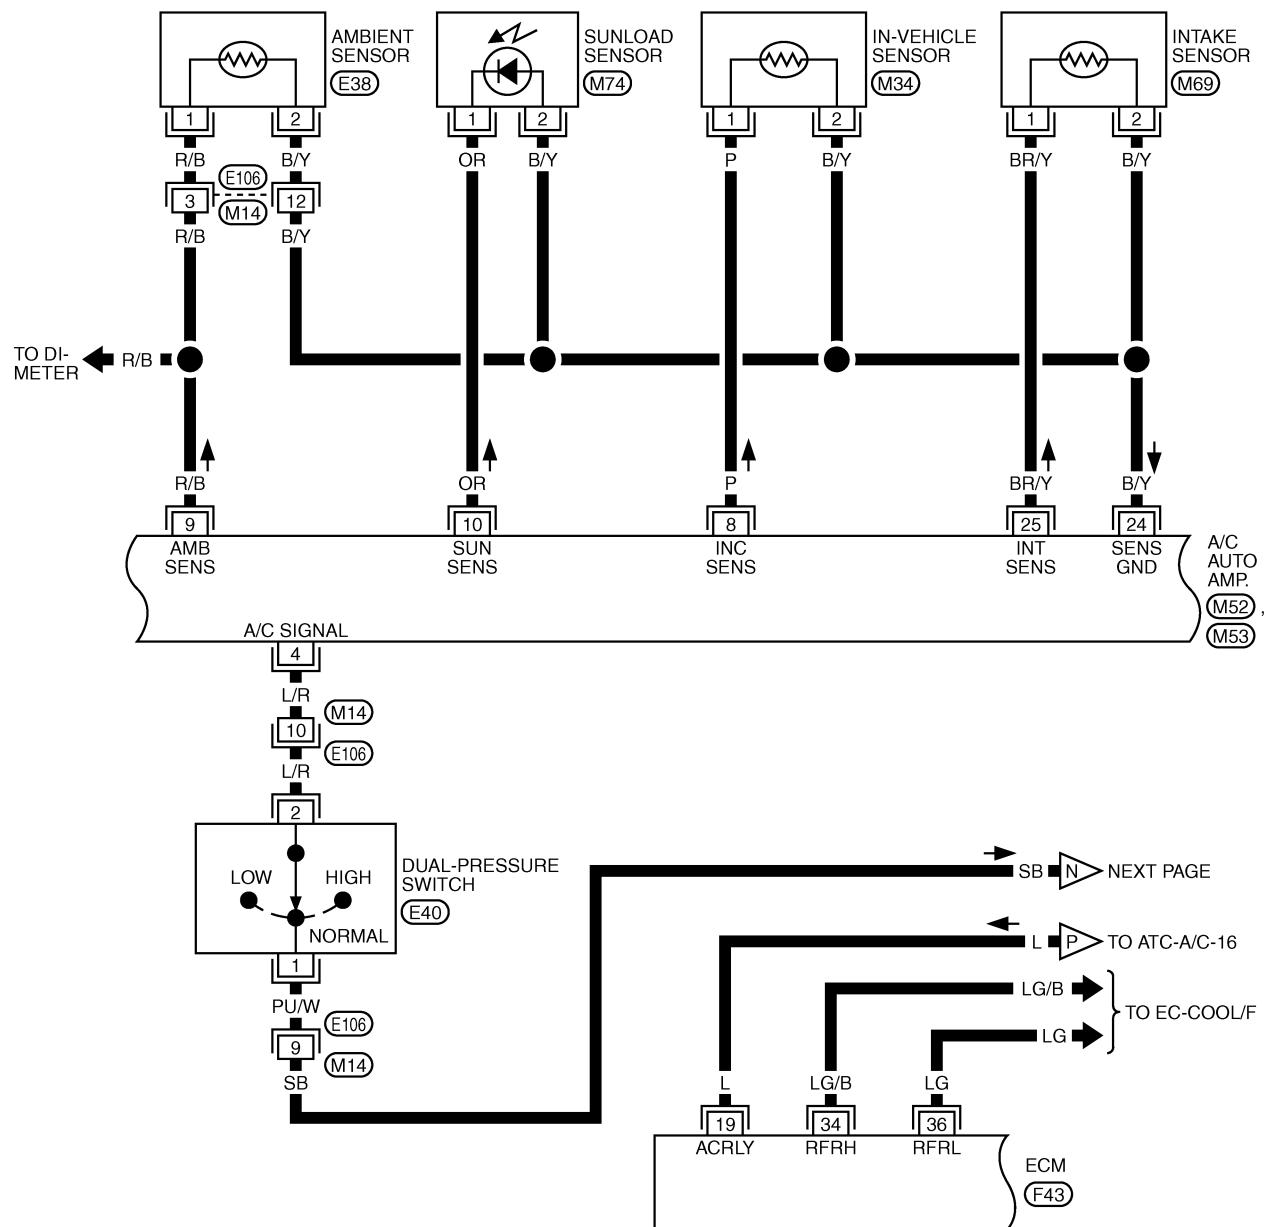





REFER TO THE FOLLOWING.
F43 -ELECTRICAL UNITS

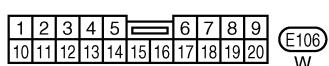

ATC-52

TROUBLE DIAGNOSIS

ATC-A/C-15

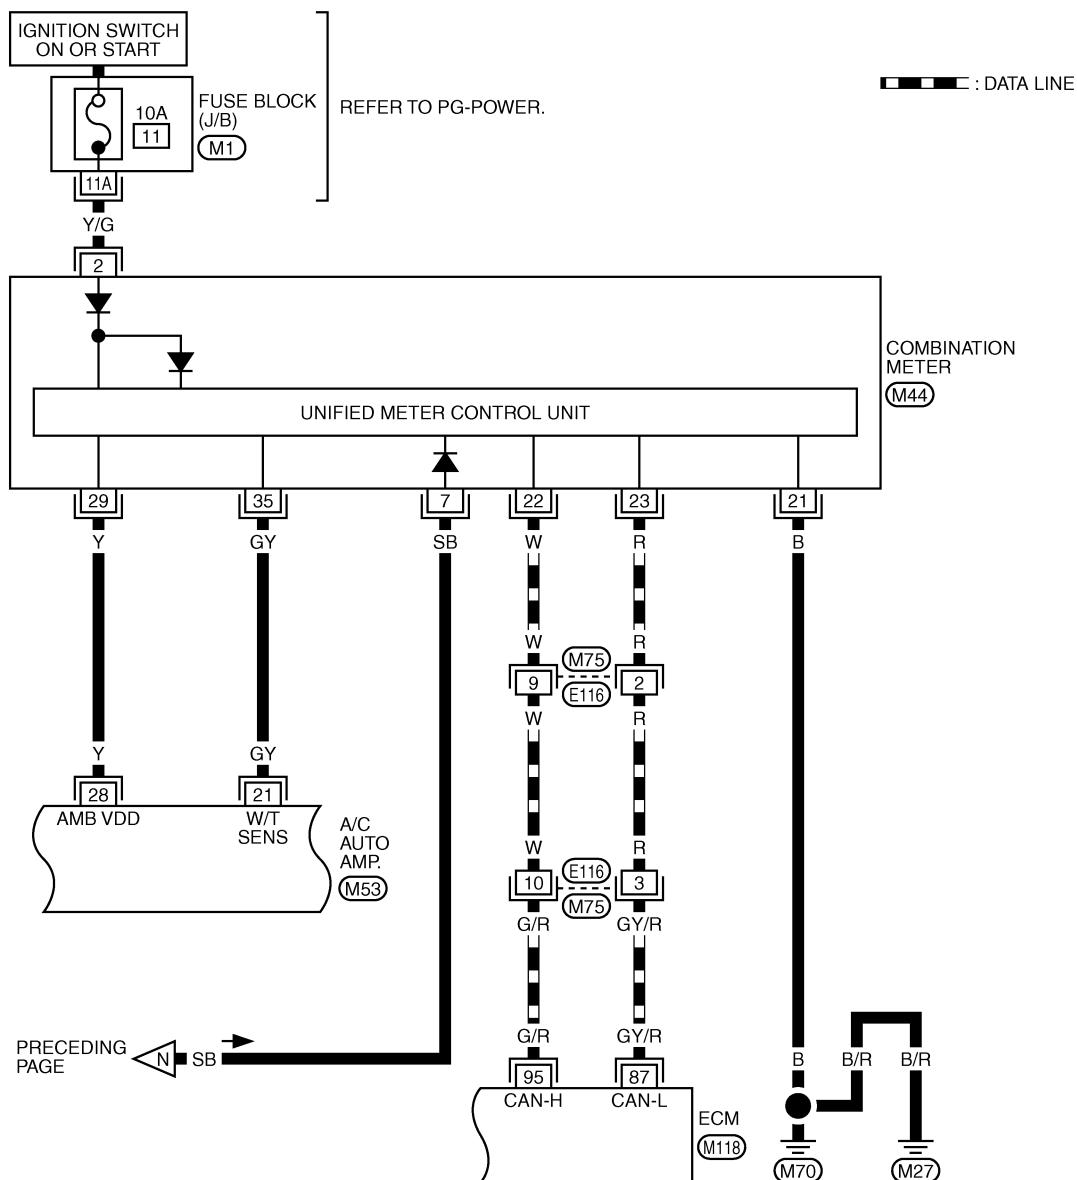


REFER TO THE FOLLOWING.

(M1) -FUSE BLOCK-JUNCTION
BOX (J/B)






(M53) -ELECTRICAL UNITS

TROUBLE DIAGNOSIS

ATC-A/C-16

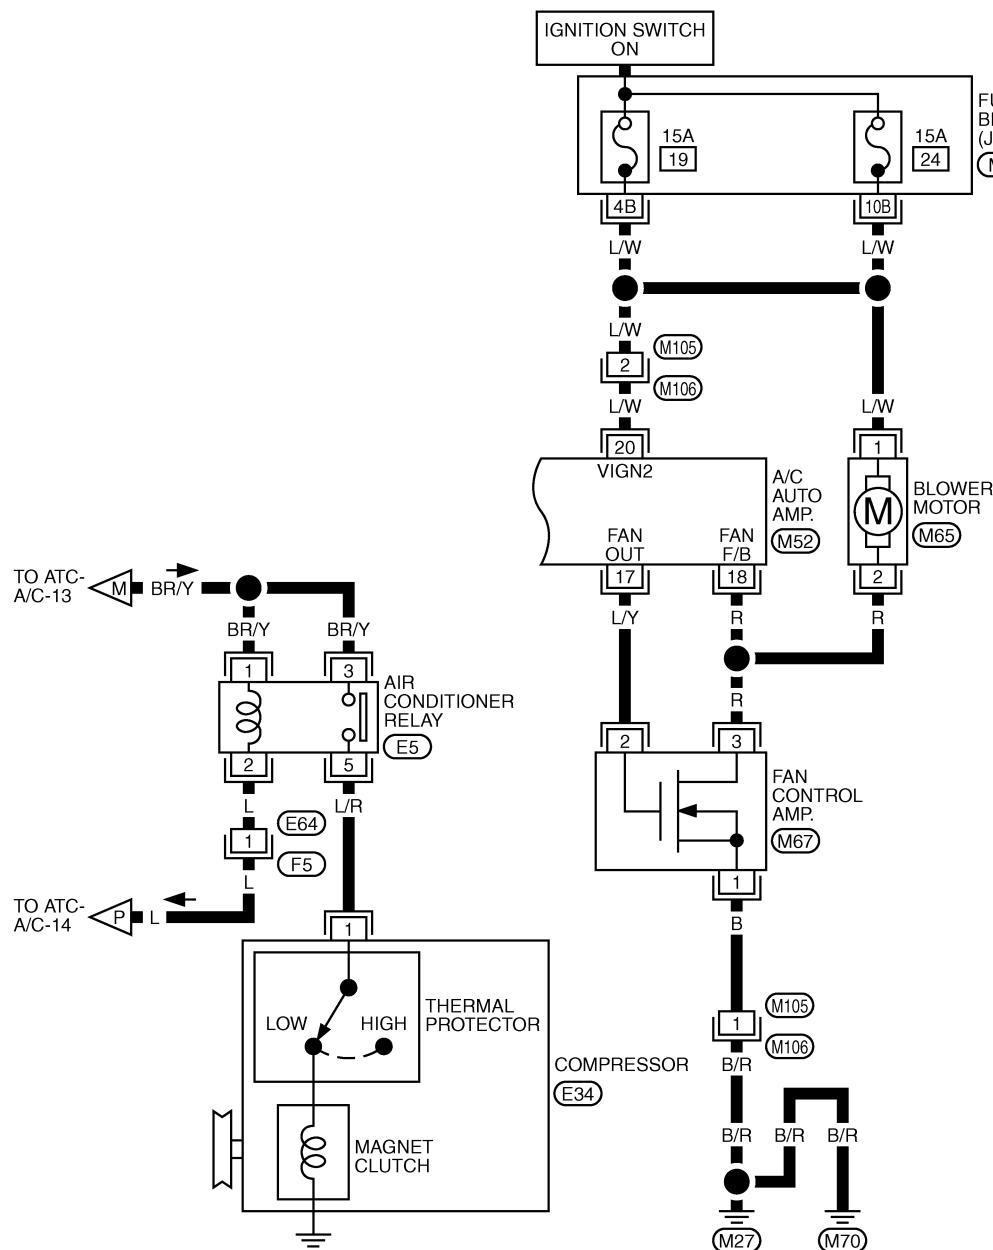

REFER TO THE FOLLOWING.
M2 -FUSE BLOCK-JUNCTION
BOX (1/B)




TROUBLE DIAGNOSIS


Auto Amp. Terminals and Reference Value

EJS004GS


Measure voltage between each terminal and ground by following terminals and reference value for auto amp.

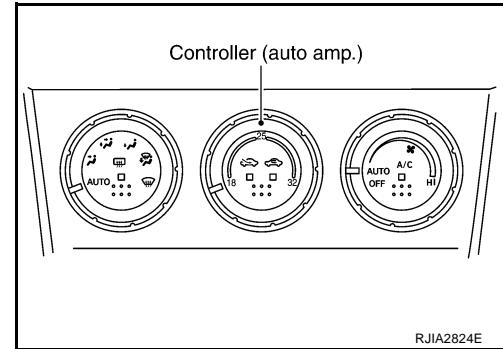

PIN CONNECTOR TERMINAL LAYOUT

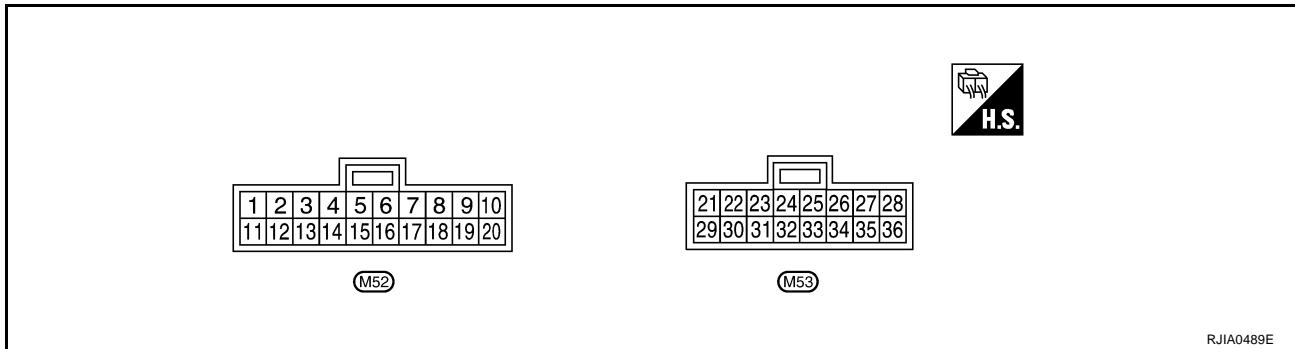


TERMINALS AND REFERENCE VALUE FOR AUTO AMP.

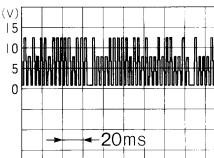Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V)
1	BR/Y	Power supply for IGN	ON	-	Battery voltage
2	L	Power supply for BAT	OFF	-	Battery voltage
3	B	Ground	ON	-	Approx. 0
4	L/R	A/C (Compressor ON) signal	ON	Compressor: ON	Approx. 0
				Compressor: OFF	Approx. 5
5	W	Power supply for each door motor	ON	-	Battery voltage
8	P	In-vehicle sensor	-	-	-
9	R/B	Ambient sensor	-	-	-
10	OR	Sunload sensor	-	-	-
11	B	Illumination ground	ON	Light switch: ON	Approx. 0
12	R/L	Power supply for illumination	ON	Light switch: ON	Approx. 12
15	G	LAN signal	ON	-	Approx. 5.5
					
17	L/Y	Fan control amp. control signal	ON	Fan speed: 1-24th	Approx. 2.5 - 3.5
				Fan speed: 25th	Approx. 9.0
18	R	Blower motor feed back	ON	Fan speed: 1st	Approx. 8.0
19	LG/B	Fan ON signal (With gasoline engine)	ON	Blower fan: ON	Approx. 0
				Blower fan: OFF	Approx. 5

HAK0652D

TROUBLE DIAGNOSIS

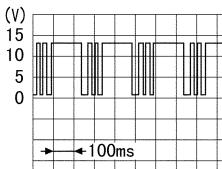Terminal No.	Wire color	Item	Ignition switch	Condition	Voltage (V)
20	L/W	Power supply for IGN2	ON	-	Battery voltage
21	GY	Water temperature sensor	ON	At idle [after warming up, approx. 80°C (176°F)] CAUTION: The waveforms vary depending on coolant temperature	 SKIA0056J
22	LG/B	Rear window defogger ON signal	ON	Rear window defogger: ON Rear window defogger: OFF	Approx. 0 Approx. 12
23	B/W	Rear window defogger feed back signal	ON	Rear window defogger: ON Rear window defogger: OFF	Approx. 12 Approx. 0
24	B/Y	Sensor ground	ON	-	Approx. 0
25	BR/Y	Intake sensor	-	-	-
28	Y	Power supply for ambient temperature display	ON	-	Approx. 5
30	PU	Compressor feed back signal	ON	- When refrigerant pressure sensor connector is disconnected	Approx. 0 Approx. 5

Self-diagnosis Function

DESCRIPTION

EJS004GT

The self-diagnostic system diagnoses sensors, door motors, blower motor, etc. by system line. Self-diagnosis is step-1 to 7. There are two ways of changing method during self-diagnosis.

- Switching to self-diagnosis step-1 to 4.
Shifting from usual control to the self-diagnostic system is accomplished by starting the engine (turning the ignition switch from OFF to ON) and pressing A/C switch for at least 5 seconds. The A/C switch must be pressed within 10 seconds after starting the engine (ignition switch is turned ON). This system will be canceled by either pressing intake switch or turning the ignition switch OFF. Shifting from one step to another is accomplished by means of turning fan control dial, as required.
- Switching to self-diagnosis step-5 to 7 (Auxiliary mechanism).
Shifting from usual control to the self-diagnostic system is accomplished by starting the engine (turning the ignition switch from OFF to ON) and pressing intake switch for at least 5 seconds. The intake switch must be pressed within 10 seconds after starting the engine (ignition switch is turned ON). This system will be canceled by either pressing A/C switch or turning the ignition switch OFF. Shifting from one step to another is accomplished by means of turning fan control dial, as required.

A

B

C

D

E

F

G

H

I

ATC


K

L


M

TROUBLE DIAGNOSIS

STEP - 1 to 4

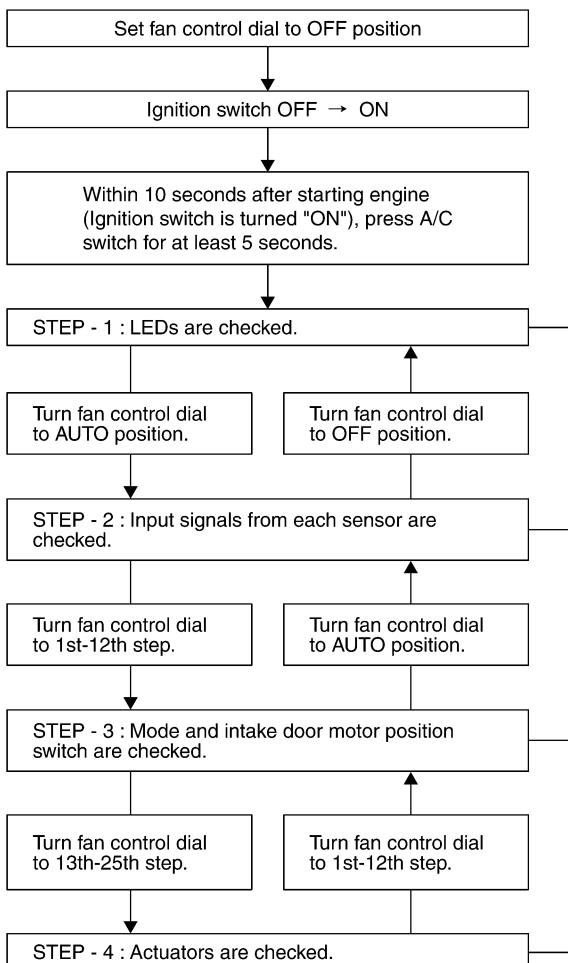

STEP - 5 to 7 (Auxiliary mechanism)

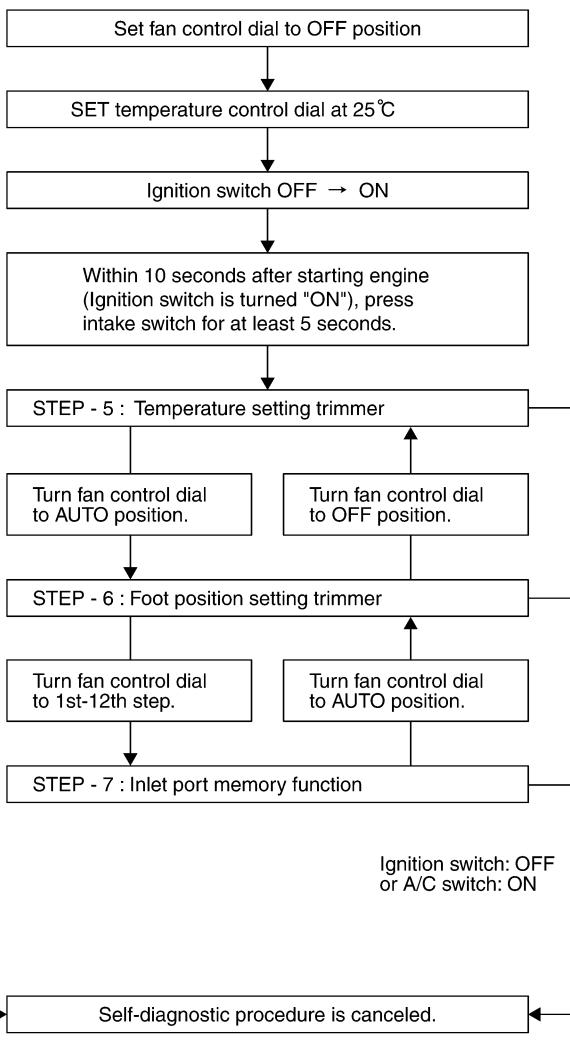

TROUBLE DIAGNOSIS

FUNCTION CONFIRMATION PROCEDURE

1. SET IN SELF-DIAGNOSTIC MODE (STEP-1 TO 4)

1. Set the fan control dial to OFF position.
2. Turn ignition switch ON.
3. Set in self-diagnostic mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press A/C switch for at least 5 seconds.

CAUTION:

If battery voltage drops below 12V during diagnosis step-3, actuator speed becomes slower and as a result, the system may generate an error even when operation is usual. To avoid this, start engine before performing this diagnosis.


>> GO TO 2.

2. STEP-1: LEDs ARE CHECKED

Check intake and A/C switch LEDs illumination.

OK >> GO TO 3.

NG >> Refer to [ATC-108, "Self-diagnosis"](#).

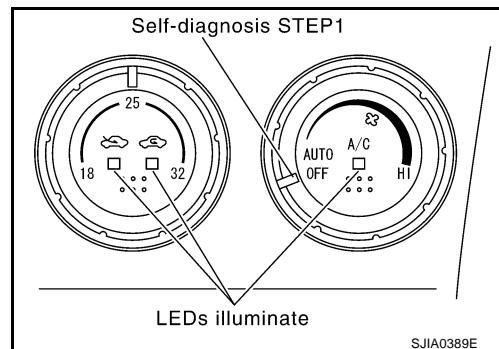

SJIA0389E

3. CHECK TO ADVANCE SELF-DIAGNOSIS STEP-2

1. Turn fan control dial to AUTO position.

CAUTION:


When switched to STEP-2, LED of REC position blinks for approximately 25 seconds.

2. Advance to self-diagnosis STEP-2?

Check A/C switch LED illumination.

YES >> GO TO 4.

NO >> Replace controller.

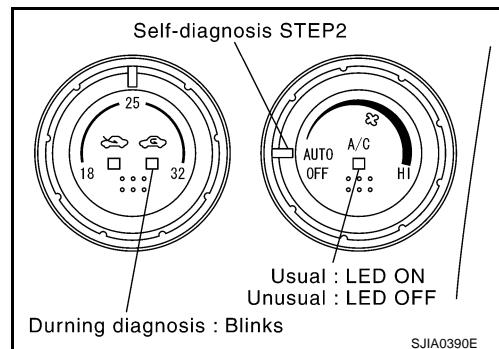

SJIA0390E

4. CHECK TO RETURN SELF-DIAGNOSIS STEP-1

Turn fan control dial to OFF position.

Return to self-diagnosis STEP-1?

YES >> GO TO 5.

NO >> Replace controller.

A

B

C

D

E

F

G

H

ATC

K

L

M

TROUBLE DIAGNOSIS

5. STEP-2: SENSOR CIRCUITS ARE CHECKED FOR OPEN OR SHORT CIRCUIT

1. Turn fan control dial to AUTO position.
2. Turn mode control dial to AUTO position.


CAUTION:

When switched to STEP-2, LED of REC position blinks for approximately 25 seconds.

3. Check A/C switch LED is illuminate.

OK or NG

OK >> GO TO 6.
NG >> GO TO 9.

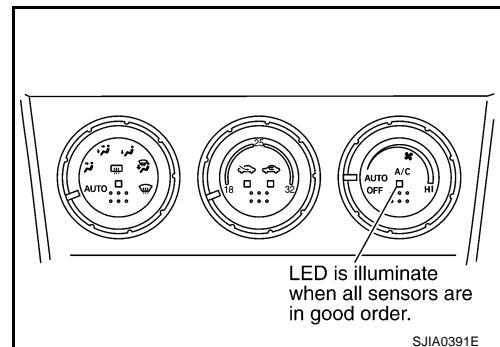

6. STEP-3: MODE DOOR AND INTAKE DOOR POSITIONS ARE CHECKED


1. Turn fan control dial to 1st–12th speed.
2. Check A/C switch LED is illuminate.

CAUTION:

When switched to STEP-3, LED of REC position blinks for approximately 50 seconds.

OK or NG

OK >> GO TO 7.
NG >> GO TO 10.

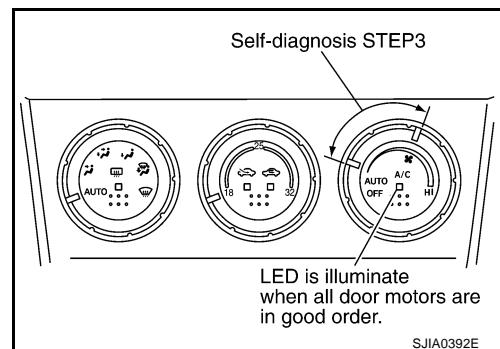

7. STEP-4: OPERATION OF EACH ACTUATOR IS CHECKED

1. Turn fan control dial to 13th–25th speed.
2. Change operation status of air conditioner by changing mode control dial position.

>> GO TO 8.

TROUBLE DIAGNOSIS

8. CHECK ACTUATORS

Refer to the following chart and confirm discharge air flow, air temperature, blower motor voltage and compressor operation.

Mode door position	Discharge air flow		
	Air outlet/distribution	Face	Foot
	100%	—	—
	60%	40%	—
	24%	76%	—
	18%	54%	28%
	20%	—	80%

RJIA0492E

	Mode control dial position					
STEP-No.*1	STEP-41	STEP-42	STEP-43	STEP-44	STEP-45	STEP-46
Mode control dial position	AUTO	VENT	B/L	FOOT or FOOT2	D/F or D/F2	DEF
Mode door position	VENT	VENT	B/L	FOOT*2	D/F	DEF
Intake door position	REC	REC	REC	FRE	FRE	FRE
Air mix door position	FULL COLD	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT
Blower motor voltage	Approx. 4.5V	Approx. 10.5V	Approx. 8.5V	Approx. 8.5V	Approx. 8.5V	Approx. 12V
Compressor	ON	ON	OFF	OFF	ON	ON

Checks must be made visually, by listening to any noise, or by touching air outlets with your hand, etc. for improper operation.

*1: Step No. 41 to 46 are for differentiation and will not be displayed.

*2: FOOT position during automatic control. Refer to [ATC-63, "AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER"](#).

OK or NG

OK >> 1. Turn ignition switch OFF or intake switch ON.
2. INSPECTION END

NG >> ● Air outlet does not change.
Go to Mode Door Motor Circuit. Refer to [ATC-73, "Mode Door Motor Circuit"](#).

● Intake door does not change.
Go to Intake Door Motor Circuit. Refer to [ATC-79, "Intake Door Motor Circuit"](#).

● Blower motor operation is malfunctioning.
Go to Blower Motor Circuit. Refer to [ATC-82, "Blower Motor Circuit"](#).

● Magnet clutch does not engage.
Go to Magnet Clutch Circuit. Refer to [ATC-88, "Magnet Clutch Circuit"](#).

● Discharge air temperature does not change.
Go to Air Mix Door Motor Circuit. Refer to [ATC-76, "Air Mix Door Motor Circuit"](#).

A

B

C

D

E

F

G

H

ATC

K

L

M

TROUBLE DIAGNOSIS

9. CHECK MALFUNCTIONING SENSOR


Refer to the following chart.

*1: Perform self-diagnosis STEP-2 under sunshine.

When performing indoors, aim a light (more than 60W) at sunload sensor, otherwise LED of A/C switch will not indicate despite that sunload sensor is functioning properly.

CAUTION:

When switched to STEP-2, LED of REC position blinks for approximately 25 seconds.

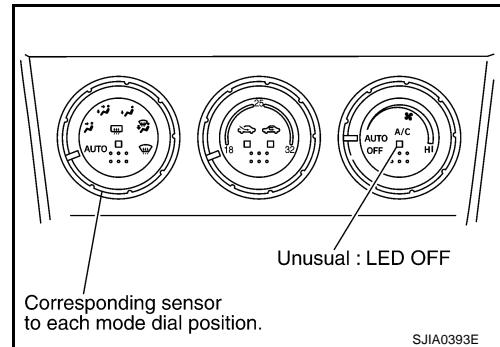

Mode control dial position	Unusual	Malfunctioning sensor (Including circuits)	Reference page
VENT	A/C LED: OFF	Ambient sensor	*2
B/L		In-vehicle sensor	*3
FOOT or FOOT2		Sunload sensor *1	*4
D/F or D/F2		Intake sensor	*5
DEF		Air mix door motor (LCU) PBR	*6

*2: [ATC-109, "DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR"](#) .

*3: [ATC-112, "DIAGNOSTIC PROCEDURE FOR IN-VEHICLE SENSOR"](#) .

*4: [ATC-114, "DIAGNOSTIC PROCEDURE FOR SUNLOAD SENSOR"](#) .

*5: [ATC-117, "DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR"](#) .

*6: [ATC-69, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

>> INSPECTION END

10. CHECK MALFUNCTIONING DOOR MOTOR POSITION SWITCH

Mode and/or intake door motor position switch(es) is/are malfunctioning.


CAUTION:

When switched to STEP-3, LED of REC position blinks for approximately 50 seconds.

Unusual	Mode or intake door position	Reference page
REC LED: ON	Mode door motor	*1
FRE LED: ON	Intake door motor	*2

*1: [ATC-75, "DIAGNOSTIC PROCEDURE FOR MODE DOOR MOTOR"](#) .

*2: [ATC-81, "DIAGNOSTIC PROCEDURE FOR INTAKE DOOR MOTOR"](#) .

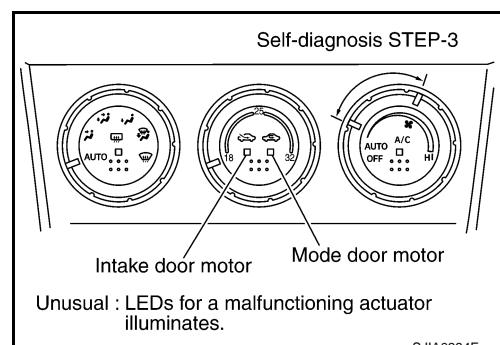

>> INSPECTION END

TROUBLE DIAGNOSIS

AUXILIARY MECHANISM: TEMPERATURE SETTING TRIMMER

The trimmer compensates for differences in range of $\pm 3^{\circ}\text{C}$ between temperature setting (Temperature control dial position) and temperature felt by driver.

Operating procedures for this trimmer are as follows:

1. Set temperature at 25°C .
2. Set fan control dial to OFF.
3. Turn ignition switch ON.
4. Set in self-diagnostic mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press intake switch for at least 5 seconds.
5. Turn temperature control dial as desired. Temperature will change at a rate of 1°C each time a dial is turned.

Setting temperature	LED status of each switch		
	FRE	REC	A/C
-3°C	ON	ON	ON
-2°C	ON	ON	OFF
-1°C	ON	OFF	ON
0°C (Initial setting)	OFF	OFF	OFF
1°C	OFF	OFF	ON
2°C	OFF	ON	OFF
3°C	OFF	ON	ON

When battery cable is disconnected, trimmer operation is canceled. Temperature set becomes that of initial condition, i.e. 0°C .

AUXILIARY MECHANISM: FOOT POSITION SETTING TRIMMER

Wind distribution ratio in FOOT mode can be set.

Operating procedures for this trimmer are as follows:

1. Set temperature at 25°C .
2. Set fan control dial to AUTO.
3. Turn ignition switch ON.
4. Set in self-diagnostic mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press intake switch for at least 5 seconds.
5. Turn temperature control dial as desired.

Type	Discharge air flow					
	Automatically controls the mode door			Manually controls the mode door		
	VENT	FOOT	DEF	VENT	FOOT	DEF
Type-A (initial setting)	24%	61%	15%	24%	76%	—
Type-B	24%	61%	15%	24%	61%	15%
Type-C	24%	76%	—	24%	61%	15%
Type-D	24%	76%	—	24%	76%	—

RJIA2825E

TROUBLE DIAGNOSIS

Type	LED status of each switch		
	FRE	REC	A/C
Type-A (initial setting)	OFF	OFF	ON
Type-B	OFF	ON	OFF
Type-C	OFF	ON	ON
Type-D	ON	OFF	OFF

AUXILIARY MECHANISM: INLET PORT MEMORY FUNCTION

When ignition switch is turned from OFF to ON, inlet port can be set to AUTO or manual.

Operating procedures for this trimmer are as follows:

1. Set fan control dial to 1st-25th speed.
2. Turn ignition switch ON.
3. Set in self-diagnostic mode as follows. Within 10 seconds after starting engine (ignition switch is turned ON.), press intake switch for at least 5 seconds.
4. Press intake switch as desired.

LED status of FRE position	LED status of REC position	Setting status		Setting changeover method
		FRE	REC	
OFF	OFF	AUTO control	AUTO control	Intake SW: ON
OFF	ON	AUTO control (Initial setting)	Manual REC status is memorized. (Initial setting)	
ON	OFF	Manual FRE status is memorized.	AUTO control	
ON	ON	Manual FRE status is memorized.	Manual REC status is memorized.	

TROUBLE DIAGNOSIS

Operational Check

EJS004GU

The purpose of the operational check is to confirm that the system operates properly.


Conditions : Engine running at usual operating temperature

CHECKING BLOWER

1. Turn fan control dial to 1st speed. Blower should operate on low speed.
2. Turn fan control dial to 2nd speed, and continue checking blower speed until all speeds are checked.
3. Leave blower on Max. speed.

If NG, go to trouble diagnosis procedure for [ATC-82, "Blower Motor Circuit"](#).


If OK, continue the check.

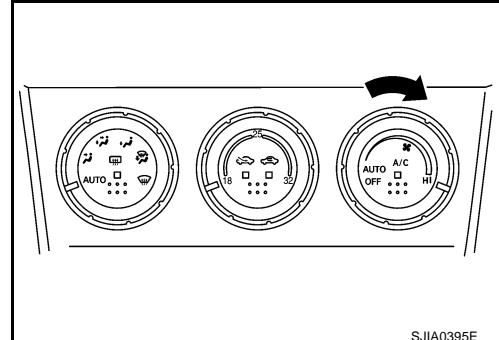

SJIA0395E

CHECKING DISCHARGE AIR

1. Turn mode control dial to each position.

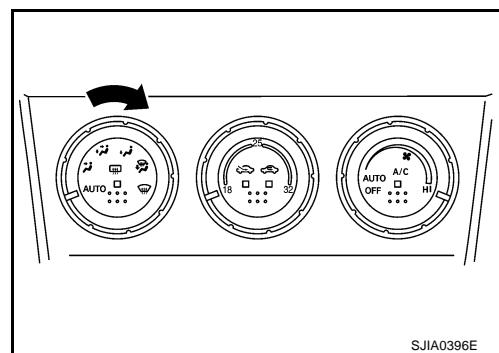

SJIA0396E

2. Confirm that discharge air comes out according to the air distribution table. Refer to [ATC-32, "Discharge Air Flow"](#).

Intake door position is checked in the next step.

If NG, go to trouble diagnosis procedure for [ATC-73, "Mode Door Motor Circuit"](#).

If OK, continue the check.

NOTE:

Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at FRESH when the D/F, D/F2 or DEF position is selected.

Mode door position	Air outlet/distribution		
	Face	Foot	Defroster
	100%	—	—
	60%	40%	—
	24%	76%	—
	18%	54%	28%
	20%	—	80%


RJIA0492E

CHECKING INTAKE DOOR

1. Press intake switch. Recirculation indicator should illuminate.
2. Press intake switch again. Fresh indicator should illuminate.
3. Listen for intake door position change (you should hear blower sound change slightly).

If NG, go to trouble diagnosis procedure for [ATC-79, "Intake Door Motor Circuit"](#).

If OK, continue the check.

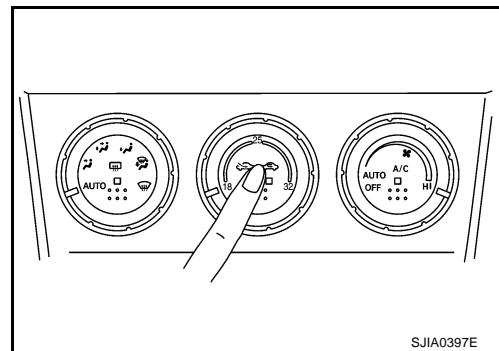

SJIA0397E


TROUBLE DIAGNOSIS

CHECKING TEMPERATURE DECREASE

1. Turn temperature control dial until 18°C.
2. Check for cold air at discharge air outlets.

If NG, go to trouble diagnosis procedure for [ATC-96, "Insufficient Cooling"](#).

If OK, continue the check.

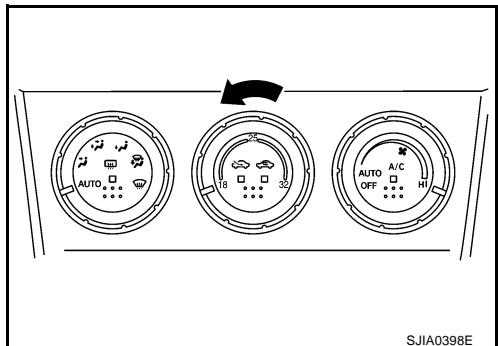


CHECKING TEMPERATURE INCREASE

1. Turn temperature control dial until 32°C.
2. Check for hot air at discharge air outlets.

If NG, go to trouble diagnosis procedure for [ATC-105, "Insufficient Heating"](#).

If OK, continue the check.

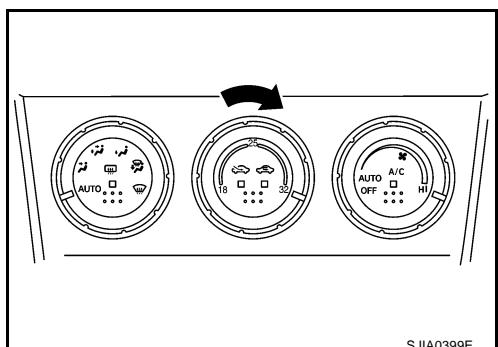


CHECKING A/C SWITCH

1. Turn fan control dial to AUTO position.
2. Press A/C switch.
 - Confirm that the compressor clutch engages (sound or visual inspection). (Discharge air and blower speed will depend on ambient, in-vehicle, and set temperatures.)

If NG, go to [ATC-67, "Power Supply and Ground Circuit for Auto Amp."](#), then if necessary, trouble diagnosis procedure for [ATC-88, "Magnet Clutch Circuit"](#).

If all operational checks are OK (symptom cannot be duplicated), go to Incident Simulation Tests in [GI-23, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) and perform tests as outlined to simulate driving conditions environment. If symptom appears, refer to [ATC-34, "SYMPTOM TABLE"](#) and perform applicable trouble diagnosis procedures.

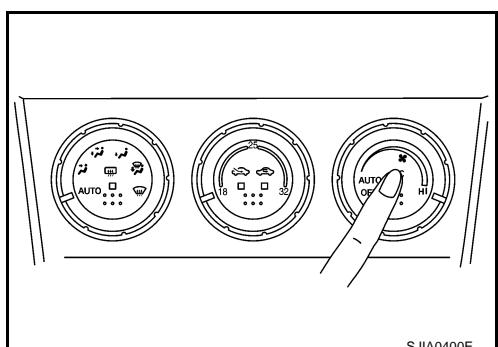


TROUBLE DIAGNOSIS

Power Supply and Ground Circuit for Auto Amp.

EJS004GV

SYMPTOM: A/C system does not come on.

INSPECTION FLOW

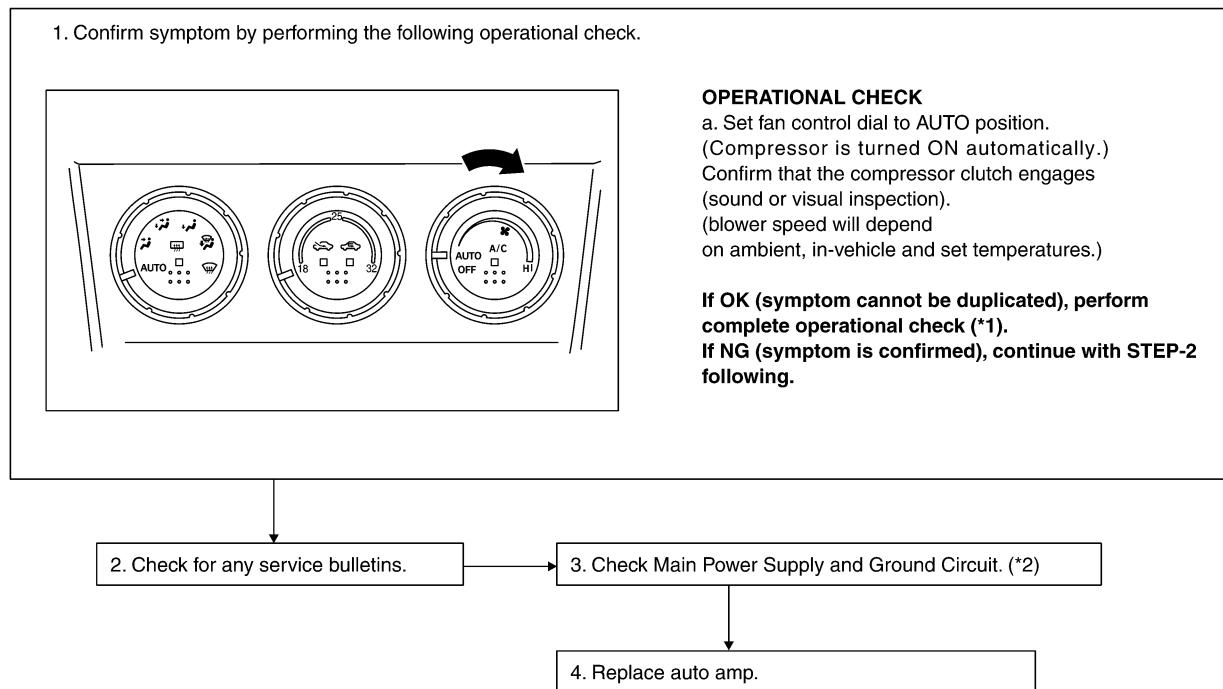

RJIA2826E

ATC

*1 [ATC-65, "Operational Check".](#)

*2 [ATC-68, "DIAGNOSTIC PROCEDURE FOR A/C SYSTEM".](#)


COMPONENT DESCRIPTION

Auto Amp. (Automatic Amplifier)

The auto amp. has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motor, mode door motor, intake door motor, blower motor and compressor are then controlled.

The auto amp. is unitized with control mechanisms. Signals from various switches and Potentio Temperature Control (PTC) are directly entered into auto amp.


Self-diagnostic functions are also built into auto amp. to provide quick check of malfunctions in the auto air conditioner system.

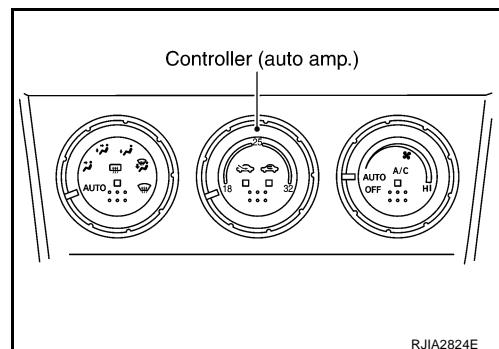

TROUBLE DIAGNOSIS


Potentio Temperature Control (PTC)

The PTC is built into the auto amp. It can be set at an interval of 1°C in the 18°C to 32°C temperature range by turning the temperature control dial.

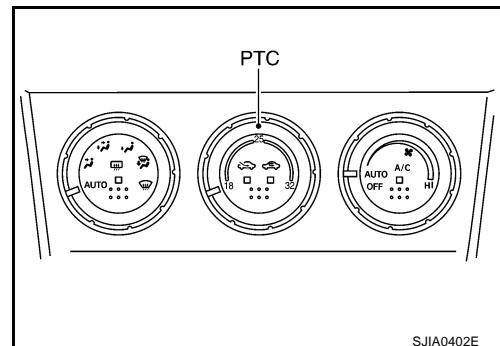

DIAGNOSTIC PROCEDURE FOR A/C SYSTEM

SYMPTOM: A/C system does not come on.

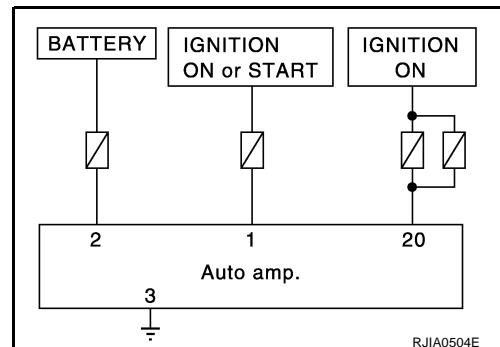

1. CHECK POWER SUPPLY CIRCUIT FOR AUTO AMP.

1. Disconnect auto amp. connector.
2. Check voltage between auto amp. harness connector M52 terminal 1 (BR/Y), 2 (L), 20 (L/W) and ground.


Terminals		Ignition switch position		
(+) (-)		OFF	ACC	ON
Auto amp. connector	Terminal No. (wire color)			
M52	1 (BR/Y)	Ground	Approx. 0V	Approx. 0V
M52	2 (L)		Battery voltage	Battery voltage
M52	20 (L/W)		Approx. 0V	Approx. 0V

OK or NG

OK >> GO TO 2.

NG >> Check 10A fuses (Nos. 15 and 28) and 15A fuses (Nos. 19 and 24), located in the fuse block (J/B). Refer to [PG-75, "FUSE BLOCK - JUNCTION BOX \(J/B\)"](#).

- If fuses are OK, check harness for open circuit. Repair or replace if necessary.
- If fuses are NG, replace fuse and check harness for short circuit. Repair or replace if necessary.

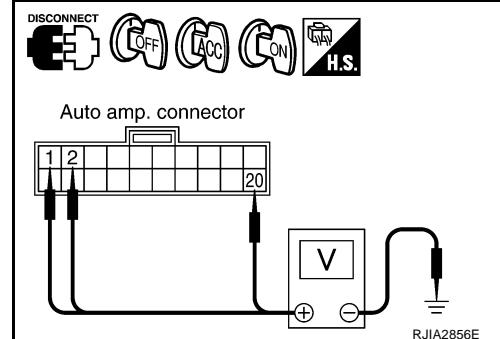

TROUBLE DIAGNOSIS

2. CHECK GROUND CIRCUIT FOR AUTO AMP.


1. Turn ignition switch OFF.
2. Check continuity between auto amp. harness connector M52 terminal 3 (B) and ground.

3 – Ground

: Continuity should exist.

OK or NG


OK >> Replace auto amp.
NG >> Repair or replace harness.

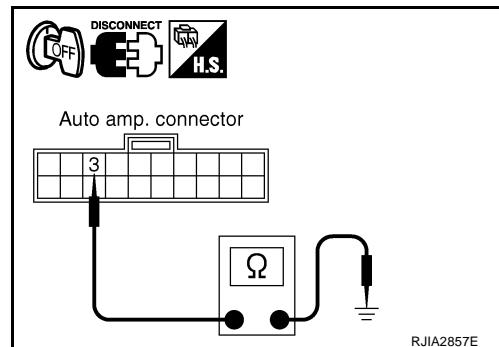

LAN System Circuit

EJS004LO

SYMPTOM: Mode door motor, intake door motor and/or air mix door motor(s) does not operate normally.

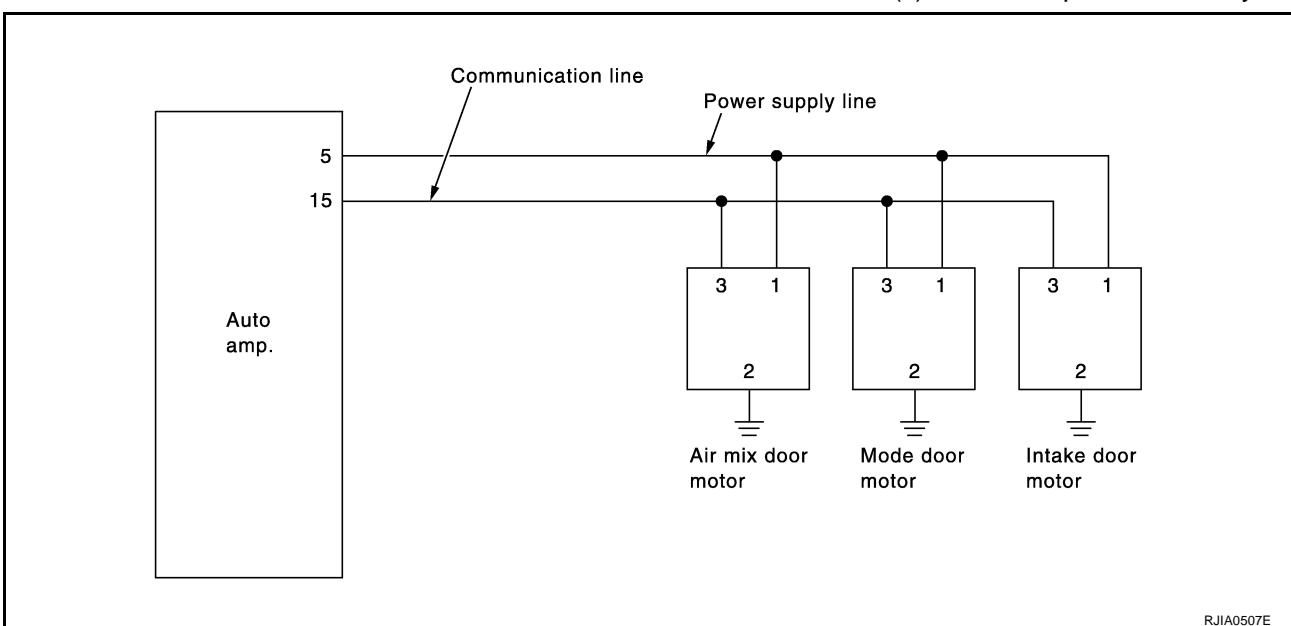

ATC

DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT

1. CHECK POWER SUPPLY FOR AUTO AMP.


1. Turn ignition switch ON.
2. Check voltage between auto amp. harness connector M52 terminal 5 (W) and ground.

5 – Ground

: Battery voltage

OK or NG


OK >> GO TO 2.
NG >> Replace auto amp.

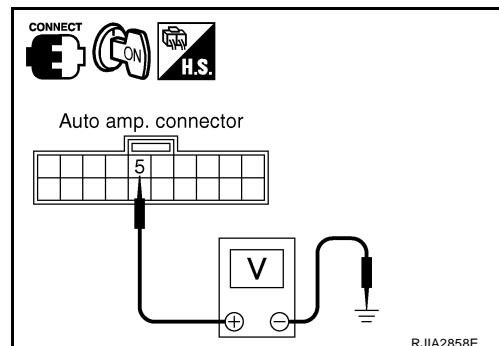


TROUBLE DIAGNOSIS

2. CHECK SIGNAL FOR AUTO AMP.

Confirm A/C LAN signal between auto amp. harness connector M52 terminal 15 (G) and ground using an oscilloscope.

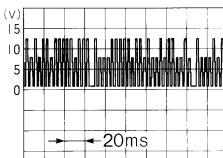Terminals		(-)	Voltage
(+)	Terminal No. (wire color)		
Auto amp. connector			
M52	15 (G)	Ground	 HAK0652D

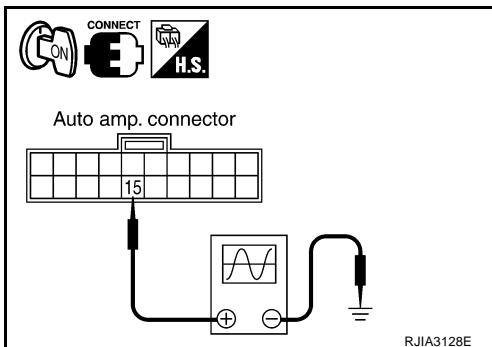

OK or NG

OK >> GO TO 3.

NG >> Replace auto amp.

3. CHECK POWER SUPPLY FOR EACH DOOR MOTOR

Check voltage between mode door motor harness connector M37 terminal 1 (W), air mix door motor harness connector M38 terminal 1 (W) or intake door motor harness connector M47 terminal 1 (W) and ground.


1 – Ground

: Battery voltage

OK or NG


OK >> GO TO 4.


NG >> Replace harness or connector.

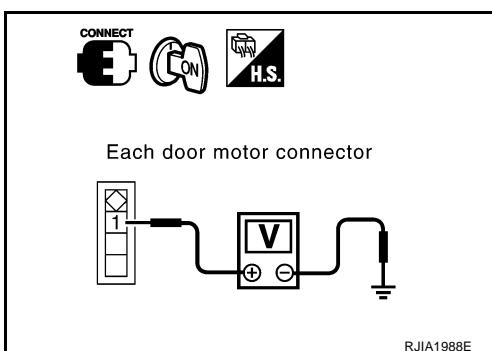

4. CHECK SIGNAL FOR EACH DOOR MOTOR

Confirm A/C LAN signal between mode door motor harness connector M37 terminal 3 (G), air mix door motor harness connector M38 terminal 3 (G) or intake door motor harness connector M47 terminal 3 (G) and ground using an oscilloscope.

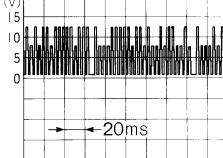Terminals		(-)	Voltage
(+)	Terminal No. (wire color)		
Door motor connector			
Mode door : M37	3 (G)	Ground	 HAK0652D
Air mix door : M38	3 (G)		
Intake door : M47	3 (G)		

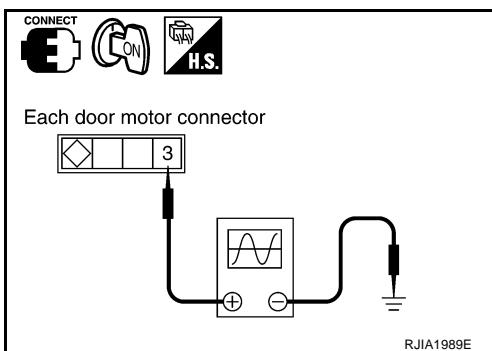

OK or NG

OK >> GO TO 5.

NG >> Replace harness or connector.

TROUBLE DIAGNOSIS

5. CHECK MOTOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect each door motor connector.
3. Check continuity between mode door motor harness connector M37 terminal 2 (B), air mix door motor harness connector M38 terminal 2 (B) or intake door motor harness connector M47 terminal 2 (B) and ground.


2 – Ground

: Continuity should exist.

OK or NG

OK >> GO TO 6.

NG >> Replace harness or connector.

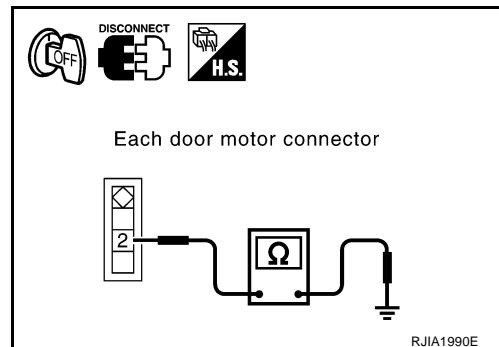

6. CHECK MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect each door motor connector.
3. Reconnect each door motor connector.
4. Turn ignition switch ON.
5. Confirm each door motor operation.

OK or NG

OK >> (Return to operate normally.)

- Poor contact in motor connector.

NG >> (Does not operate normally.)

- GO TO 7.

7. CHECK AIR MIX DOOR MOTOR AND INTAKE DOOR MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect mode, air mix, and intake door motor connectors.
3. Reconnect air mix and intake door motor connectors.
4. Turn ignition switch ON.
5. Confirm air mix door motor and intake door motor operation.

OK or NG

OK >> (Air mix and intake door motors operate normally.)

- Replace mode door motor.

NG >> (Air mix and intake door motors does not operate normally.)

- GO TO 8.

ATC

8. CHECK MODE DOOR MOTOR AND INTAKE DOOR MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect air mix door motor connector.
3. Reconnect mode door motor connector.
4. Turn ignition switch ON.
5. Confirm mode door motor and intake door motor operation.

OK or NG

OK >> (Mode and intake door motors operate normally.)

- Replace air mix door motor.

NG >> (Mode and intake door motors does not operate normally.)

- GO TO 9.

K

L

M

TROUBLE DIAGNOSIS

9. CHECK MODE DOOR MOTOR AND AIR MIX DOOR MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect intake door motor connector.
3. Reconnect air mix door motor connector.
4. Turn ignition switch ON.
5. Confirm mode door motor and air mix door motor operation.

OK or NG

OK >> (Mode and air mix door motors operate normally.)
 ● Replace intake door motor.

NG >> (Mode and air mix door motors does not operate normally.)
 ● Replace auto amp.

TROUBLE DIAGNOSIS

Mode Door Motor Circuit


EJS004GX

SYMPTOM:

- Air outlet does not change.
- Mode door motor does not operate normally.

INSPECTION FLOW

1. Confirm symptom by performing the following operational check.

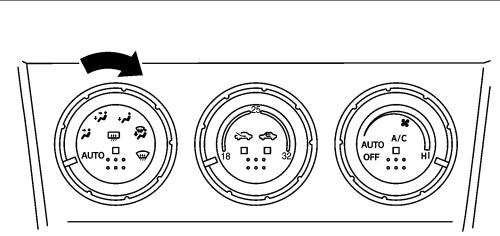

OPERATIONAL CHECK – Discharge air

a. Turn mode control dial to each position.

Discharge air flow


Mode door position	Air outlet/distribution		
	Vent	Foot	Defroster
	100%	–	–
	60%	40%	–
	24%	76%	–
	18%	54%	28%
	20%	–	80%

b. Confirm that discharge air comes out according to the air distribution table at left.

Refer to "Discharge Air Flow" (*1).

NOTE:

- If OK (symptom cannot be duplicated), perform complete operational check (*2).
- If NG (symptom is confirmed), continue with STEP-2 following.
- Confirm that the compressor clutch is engaged (sound or visual inspection) and intake door position is at FRESH when DEF , D/F or D/F2 is selected.
- Intake door position is checked in the next step.

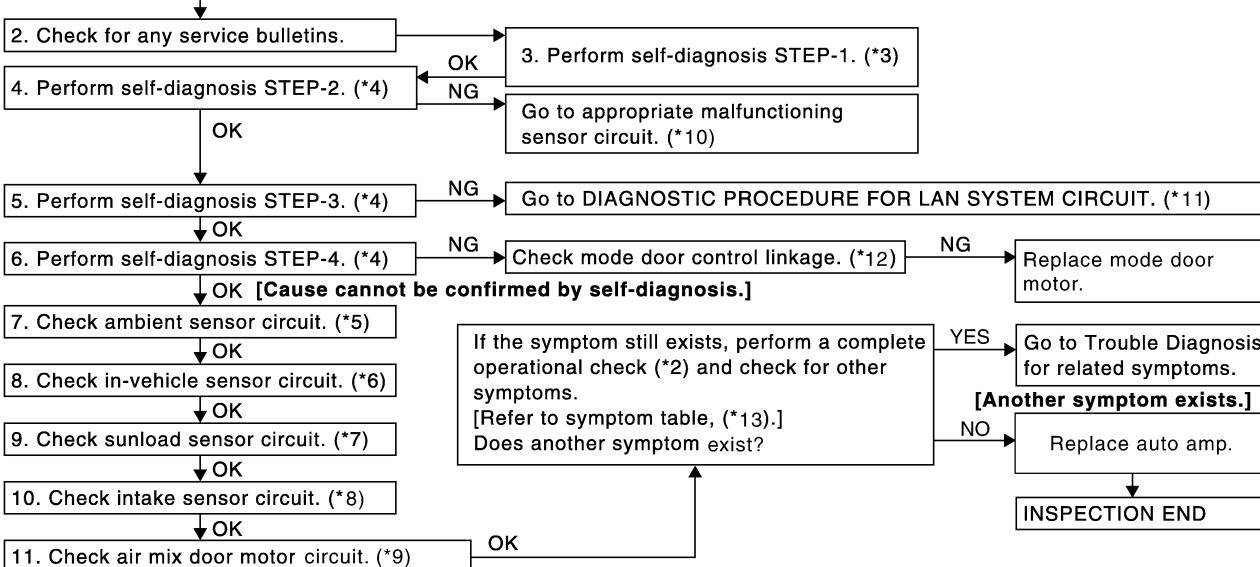

RJIA3095E

*1 [ATC-32, "Discharge Air Flow".](#)

*2 [ATC-65, "Operational Check".](#)

*3 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 1.](#)

*4 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 5 to 7.](#)

*5 [ATC-109, "Ambient Sensor Circuit".](#)

*6 [ATC-111, "In-vehicle Sensor Circuit".](#)

*7 [ATC-114, "Sunload Sensor Circuit".](#)

*8 [ATC-117, "Intake Sensor Circuit".](#)

*9 [ATC-76, "Air Mix Door Motor Circuit".](#)

TROUBLE DIAGNOSIS

*10 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#), see No. 9.

*11 [ATC-69, "LAN System Circuit"](#).

*12 [ATC-134, "MODE DOOR MOTOR"](#).

*13 [ATC-34, "SYMPTOM TABLE"](#).

SYSTEM DESCRIPTION

Component Parts


Mode door control system components are:

- Auto amp.
- Mode door motor (LCU)
- A/C LAN system (PBR built-in air mix door motor, mode door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor


System Operation

The auto amp. receives data from each of the sensors. The auto amp. sends air mix door, mode door and intake door opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the auto amp. and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the auto amp.

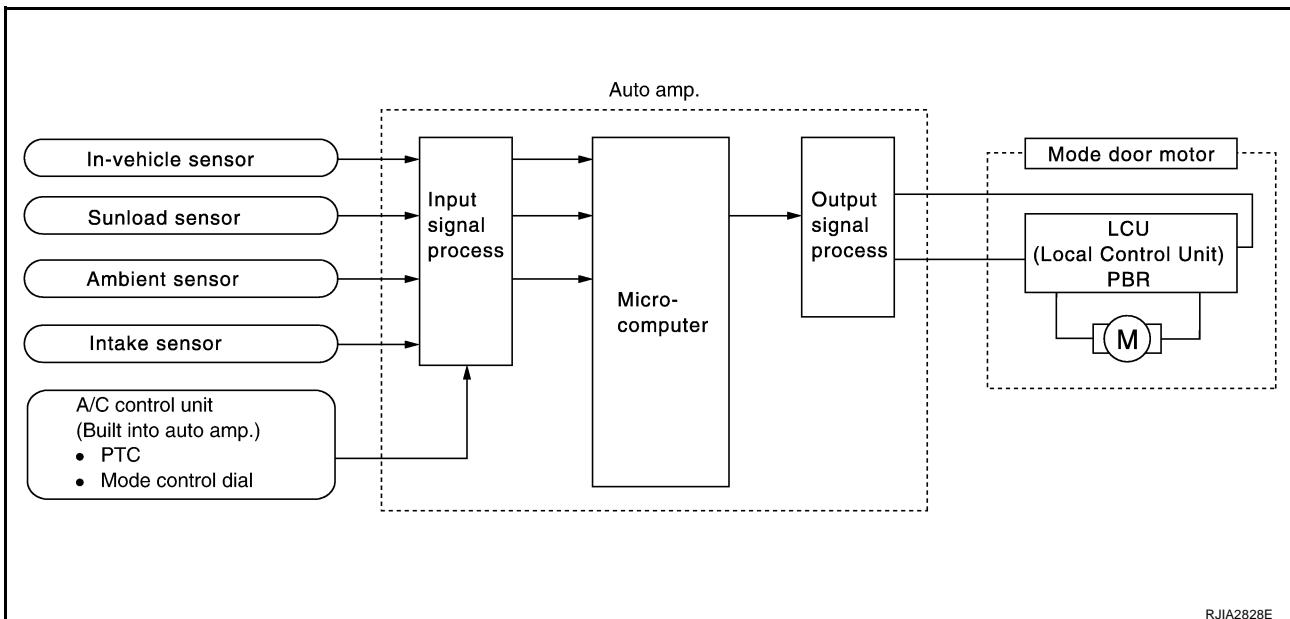

Mode Door Control Specification


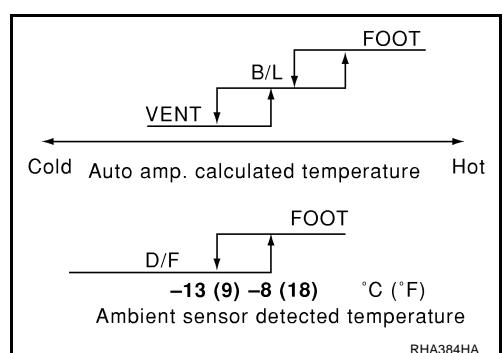


TROUBLE DIAGNOSIS

COMPONENT DESCRIPTION

Mode Door Motor

The mode door motor is attached to the heater & cooling unit. It rotates so that air is discharged from the outlet set by the auto amp. Motor rotation is conveyed to a link which activates the mode door.

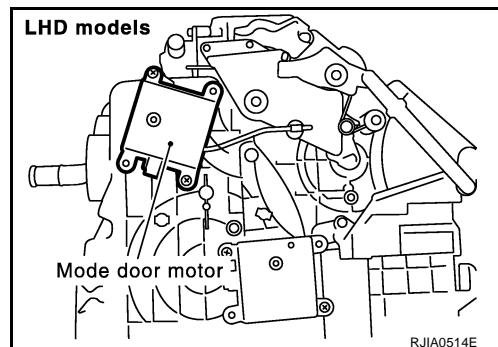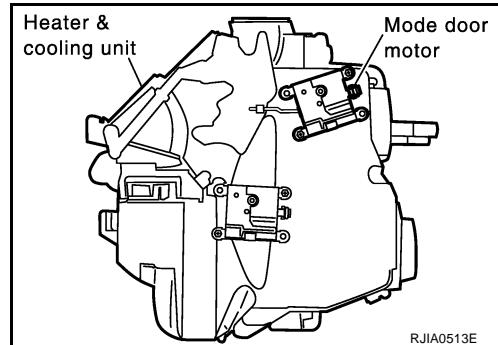

DIAGNOSTIC PROCEDURE FOR MODE DOOR MOTOR

SYMPTOM: Mode door motor does not operate normally.

Perform diagnostic procedure. Refer to [ATC-69, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

A
B
C
D
E
F
G
H
I

ATC
K
L
M

TROUBLE DIAGNOSIS


Air Mix Door Motor Circuit

EJS004GY

SYMPTOM:

- Discharge air temperature does not change.
- Air mix door motor does not operate.

INSPECTION FLOW

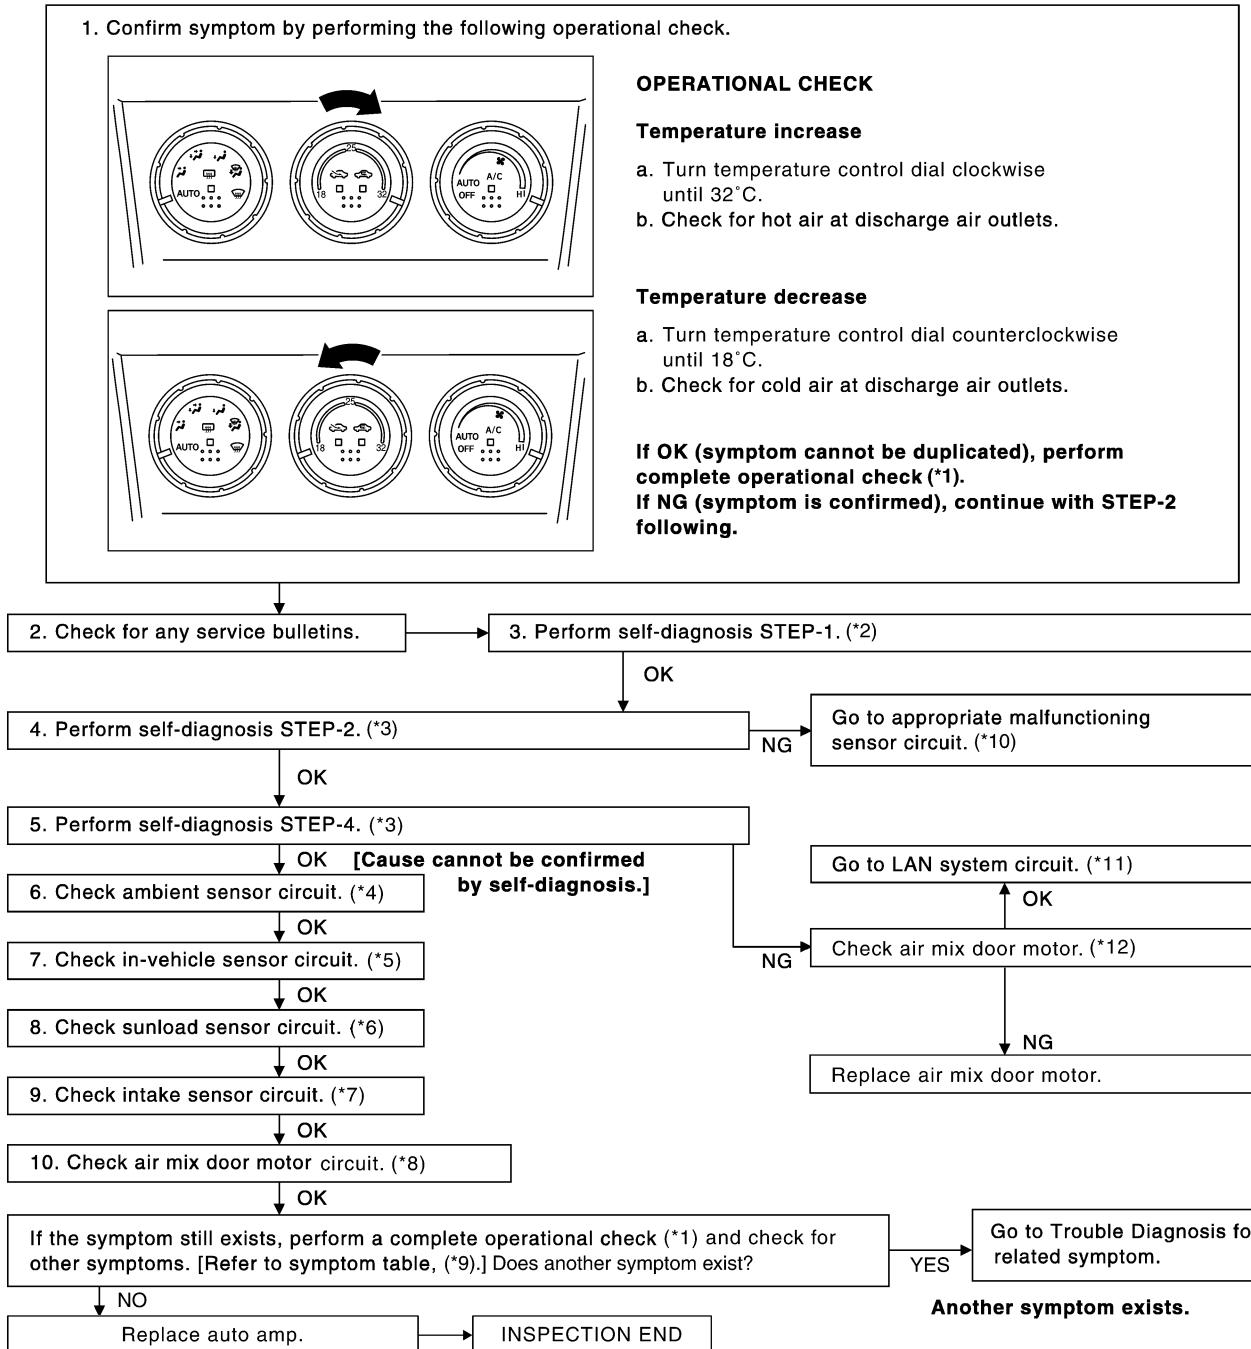

RJIA3097E

*1 [ATC-65, "Operational Check".](#)

*2 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 1.](#)

*3 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 5 to 7.](#)

*4 [ATC-109, "Ambient Sensor Circuit".](#)

*5 [ATC-111, "In-vehicle Sensor Circuit".](#)

*6 [ATC-114, "Sunload Sensor Circuit".](#)

*7 [ATC-117, "Intake Sensor Circuit".](#)

*8 [ATC-78, "DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR".](#)

*9 [ATC-34, "SYMPTOM TABLE".](#)

*10 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 9.](#)

*11 [ATC-69, "LAN System Circuit".](#)

*12 [ATC-135, "AIR MIX DOOR MOTOR".](#)

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION

Component Parts


Air mix door control system components are:

- Auto amp.
- Air mix door motor (LCU)
- A/C LAN system (PBR built-in air mix door motor, mode door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor


System Operation

The auto amp. receives data from each of the sensors. The auto amp sends air mix door, mode door and intake door opening angle data to the air mix door motor LCU, mode door motor LCU and intake door motor LCU.

The air mix door motor, mode door motor and intake door motor read their respective signals according to the address signal. Opening angle indication signals received from the auto amp. and each of the motor position sensors are compared by the LCUs in each motor with the existing decision and opening angles. Subsequently, HOT/COLD or DEFROST/VENT or FRESH/RECIRCULATION operation is selected. The new selection data is returned to the auto amp.

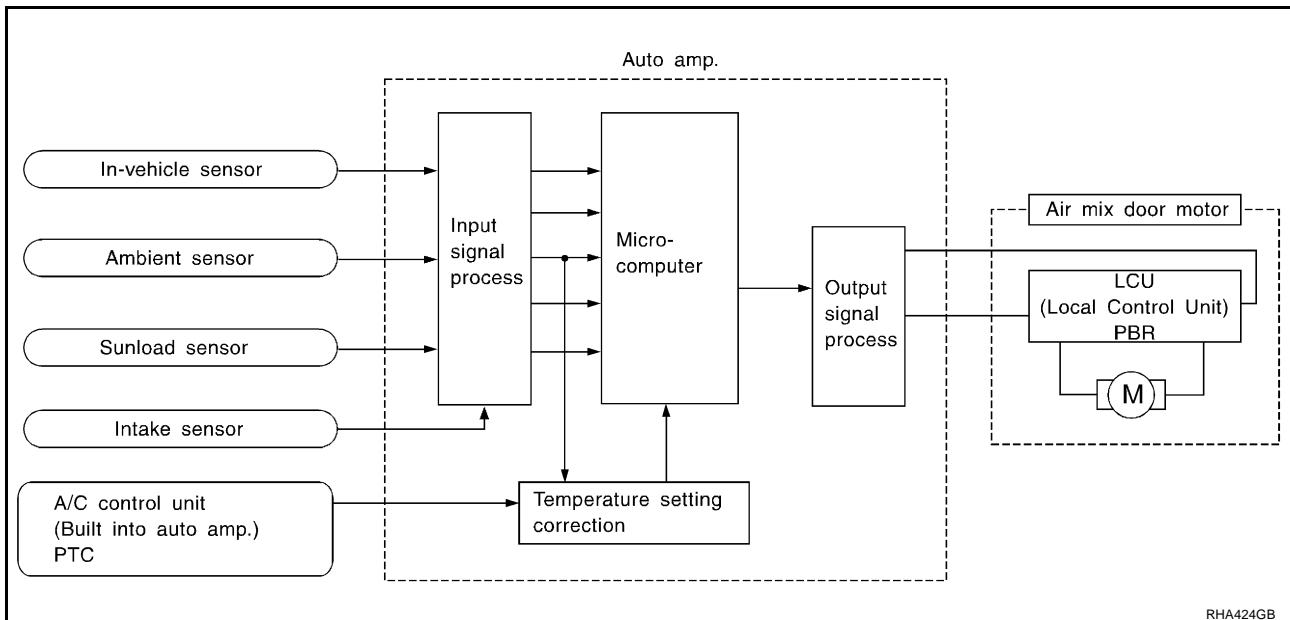

Air Mix Door Control Specification


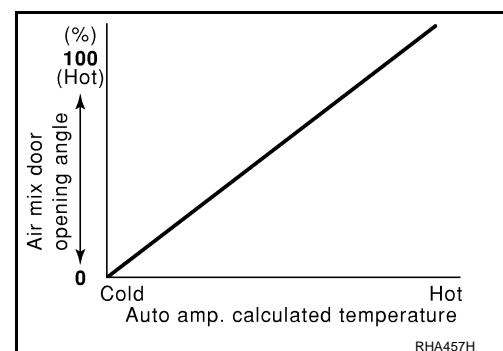


TROUBLE DIAGNOSIS

COMPONENT DESCRIPTION

Air Mix Door Motor

The air mix door motor is attached to the heater & cooling unit. It rotates so that the air mix door is opened or closed to a position set by the auto amp. The air mix door position is fed back to the auto amp. by PBR built-in air mix door motor.

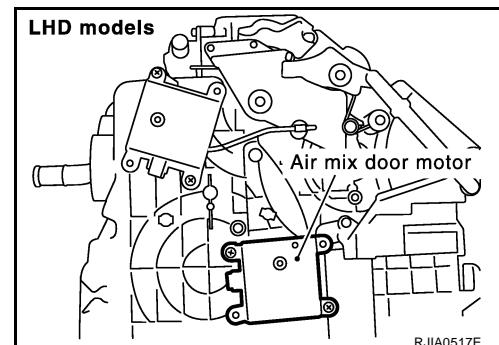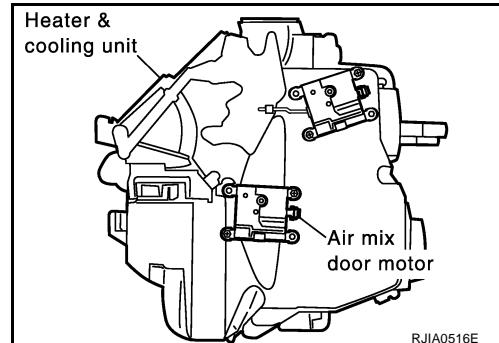

DIAGNOSTIC PROCEDURE FOR AIR MIX DOOR MOTOR

SYMPTOM: Discharge air temperature does not change.

Perform diagnostic procedure. Refer to [ATC-69, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

TROUBLE DIAGNOSIS


Intake Door Motor Circuit

EJS004YM

SYMPTOM:

- Intake door does not change.
- Intake door motor does not operate normally.

INSPECTION FLOW

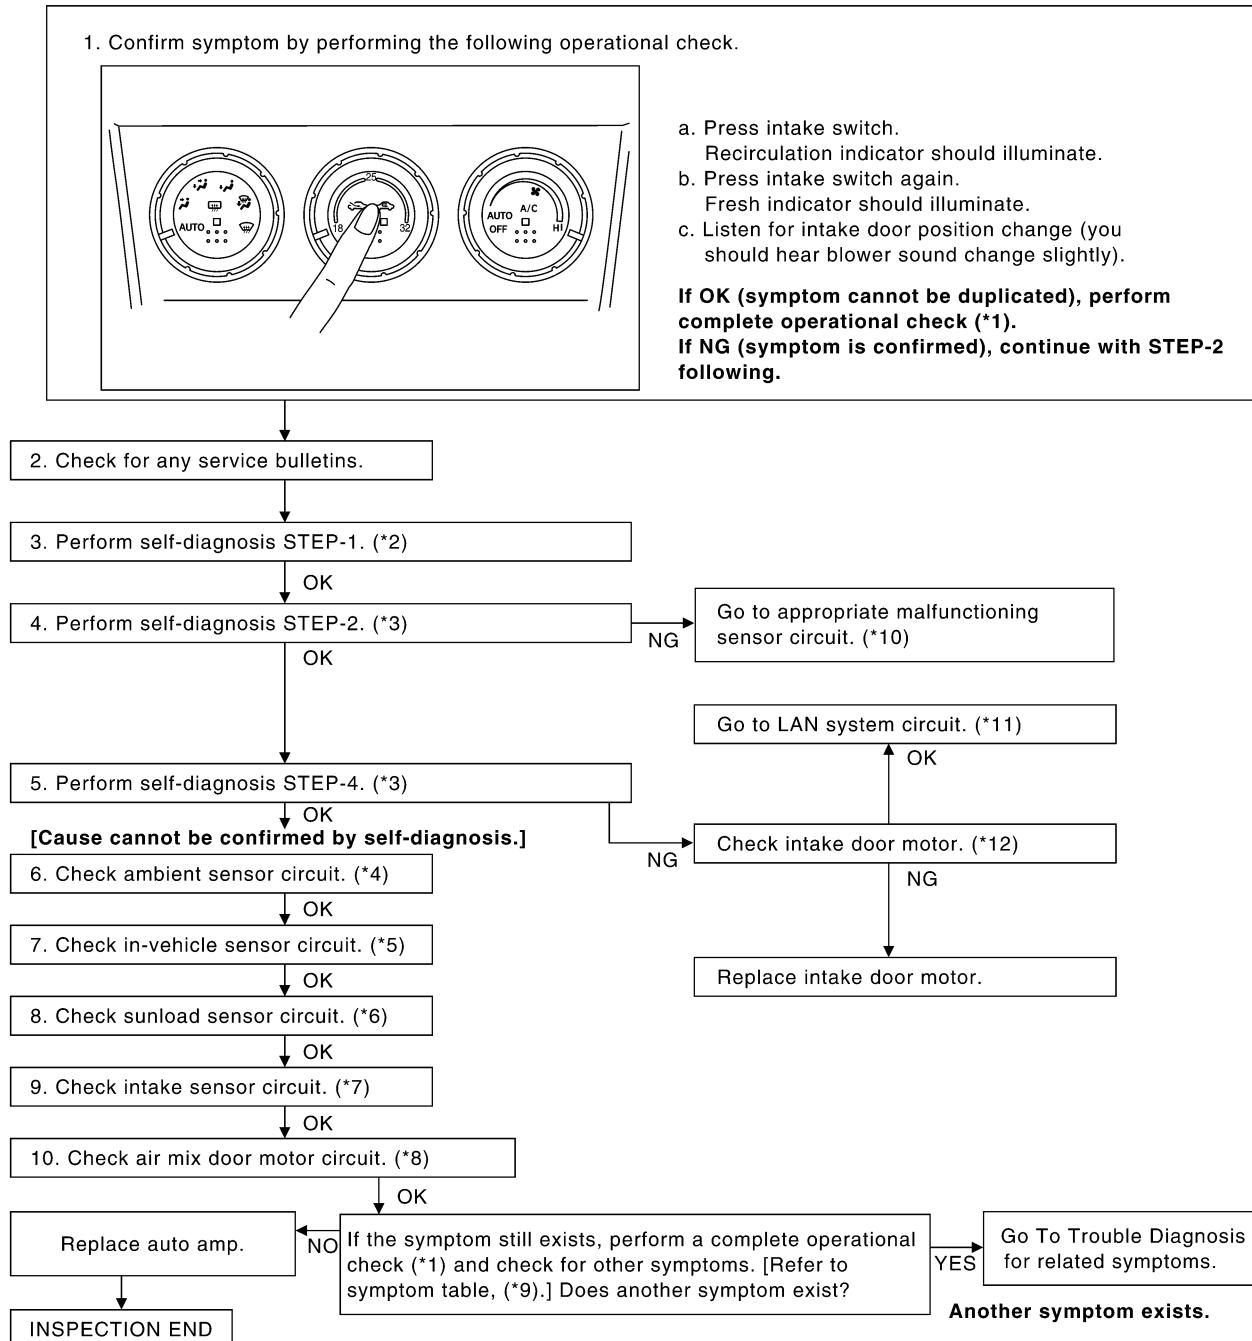

*1 [ATC-65, "Operational Check".](#)

*2 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 1.](#)

*3 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No.5 to 7.](#)

*4 [ATC-109, "Ambient Sensor Circuit".](#)

*5 [ATC-111, "In-vehicle Sensor Circuit".](#)

*6 [ATC-114, "Sunload Sensor Circuit".](#)

*7 [ATC-117, "Intake Sensor Circuit".](#)

*8 [ATC-76, "Air Mix Door Motor Circuit".](#)

*9 [ATC-34, "SYMPTOM TABLE".](#)

*10 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 9.](#)

*11 [ATC-69, "LAN System Circuit".](#)

*12 [ATC-128, "INTAKE DOOR MOTOR".](#)

RJIA3099E

TROUBLE DIAGNOSIS

SYSTEM DESCRIPTION


Component Parts

Intake door control system components are:


- Auto amp.
- Intake door motor (LCU)
- A/C LAN system (PBR built-in air mix door motor, mode door motor and intake door motor)
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

System Operation

The intake door control determines intake door position based on the ambient temperature, the intake air temperature and the in-vehicle temperature. When set mode control dial to D/F, D/F2 or DEF position, or OFF switch is pushed, the auto amp. sets the intake door at the FRESH position.

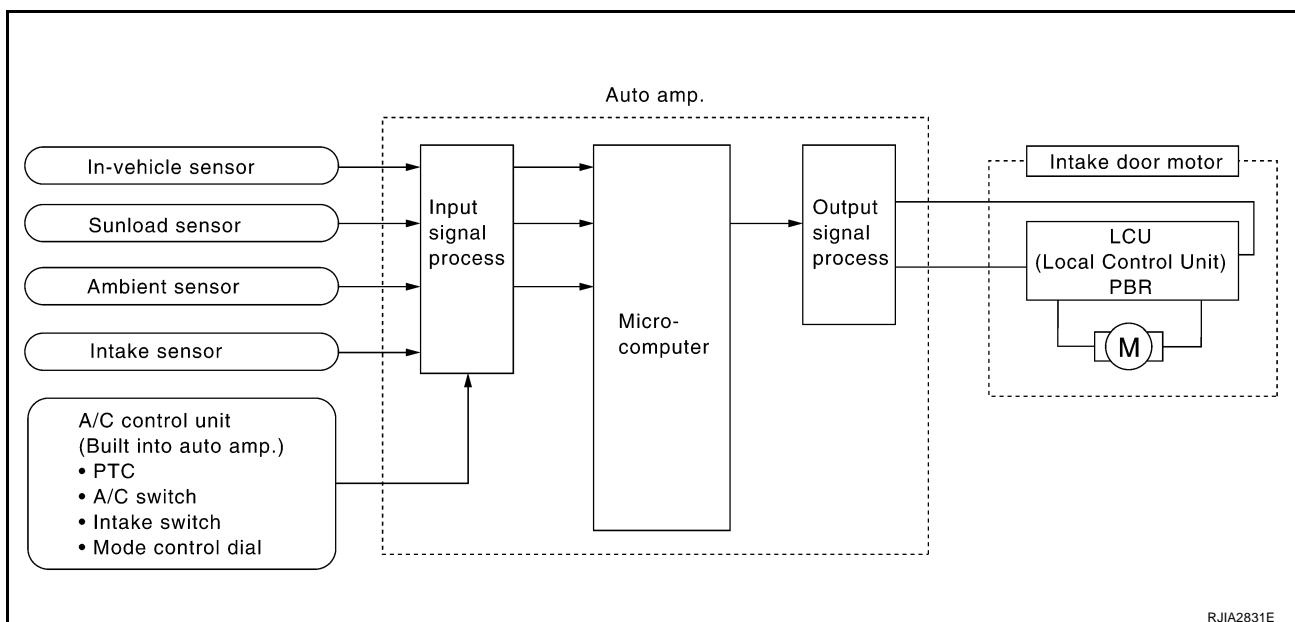

Intake Door Control Specification


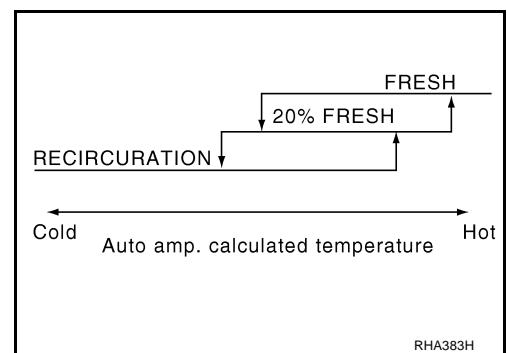


TROUBLE DIAGNOSIS

COMPONENT DESCRIPTION

Intake Door Motor

The intake door motor is attached to the intake unit. It rotates so that air is drawn from inlets set by the auto amp. Motor rotation is conveyed to a lever which activates the intake door.

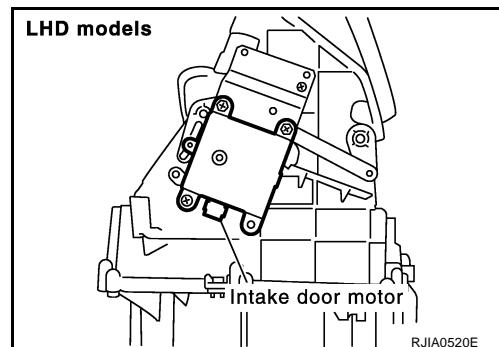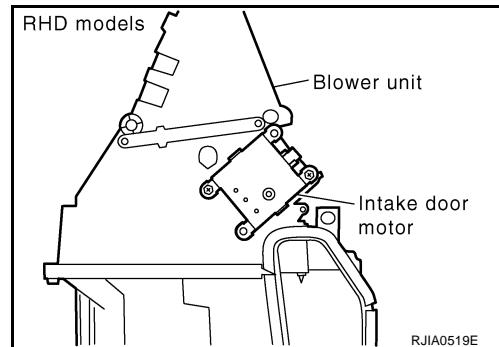

DIAGNOSTIC PROCEDURE FOR INTAKE DOOR MOTOR

SYMPTOM: Intake door motor does not operate normally.

Perform diagnostic procedure. Refer to [ATC-69, "DIAGNOSTIC PROCEDURE FOR LAN CIRCUIT"](#) .

A
B
C
D
E
F
G
H
I

ATC
K
L
M

TROUBLE DIAGNOSIS


Blower Motor Circuit

EJS004YN

SYMPTOM:

- Blower motor operation is malfunctioning.
- Blower motor operation is malfunctioning under out of starting fan speed control.

INSPECTION FLOW

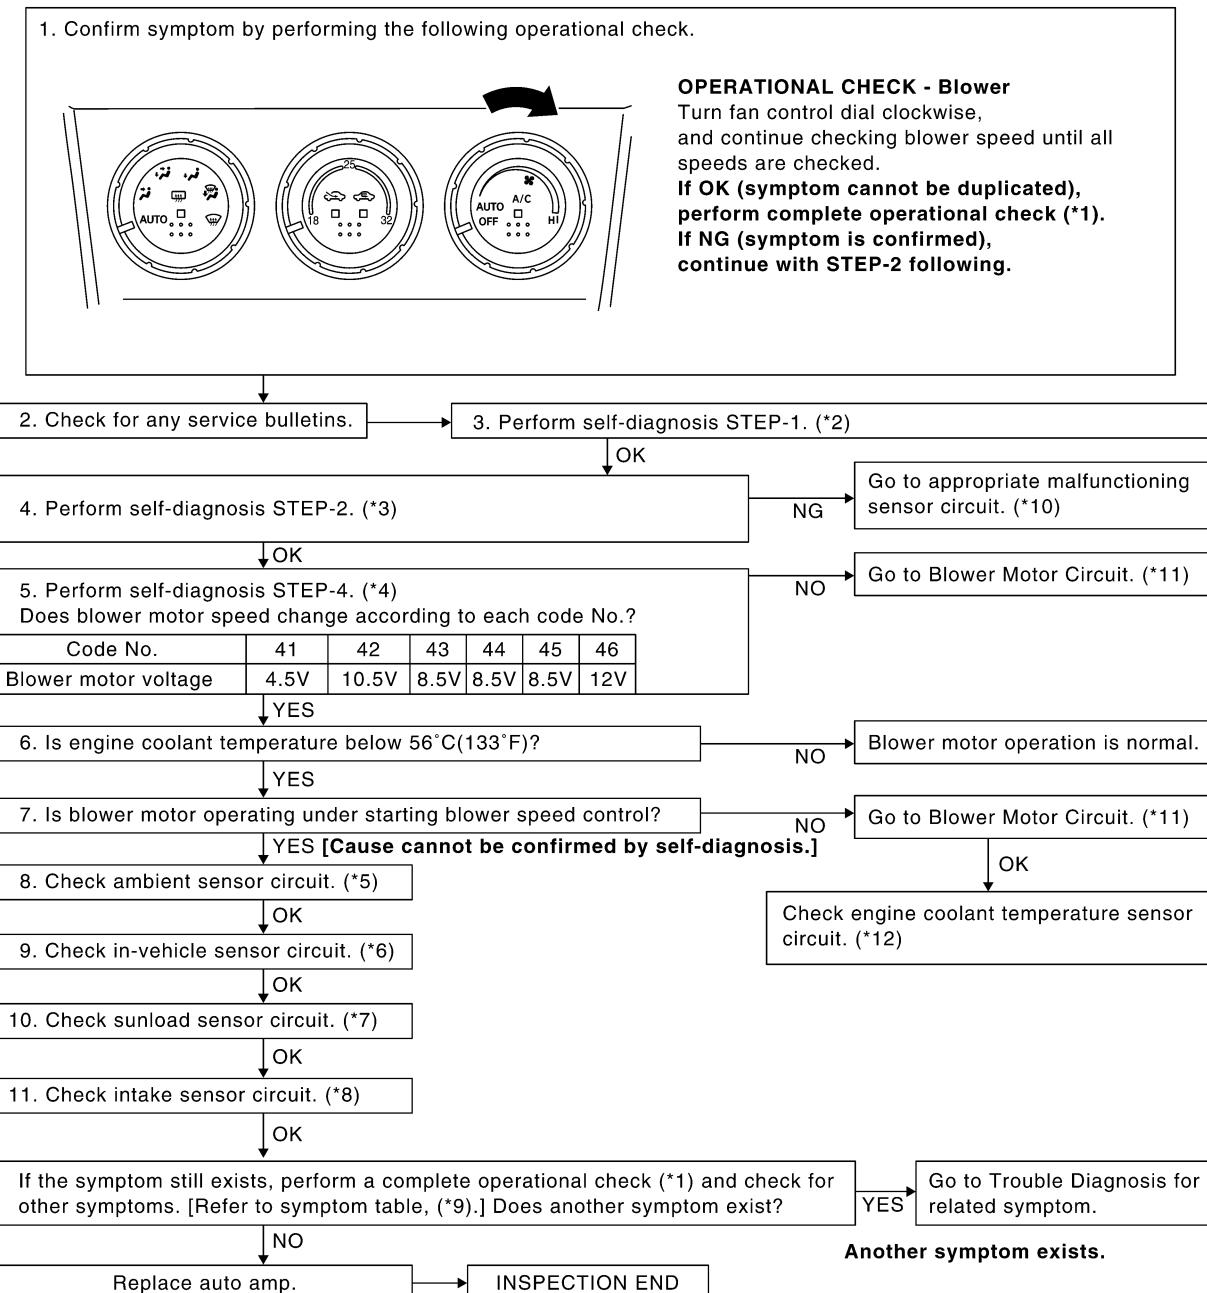

RJIA3101E

*1 ATC-65, "Operational Check".

*2 ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 1.

*3 ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 5.

*4 ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 7.

*5 ATC-109, "Ambient Sensor Circuit".

*6 ATC-111, "In-vehicle Sensor Circuit".

TROUBLE DIAGNOSIS

*7 ATC-114, "Sunload Sensor Circuit".	*8 ATC-117, "Intake Sensor Circuit".	*9 ATC-34, "SYMPTOM TABLE".
*10 ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 9.	*11 ATC-84, "DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR".	*12 QR engine; (WITH EURO-OBD) EC-162, "DTC P0117, P0118 ECT SENSOR". QR engine; (WITHOUT EURO-OBD) EC-597, "DTC P0117, P0118 ECT SENSOR". YD engine; (WITH EURO-OBD) EC-981, "DTC P0117, P0118 ECT SENSOR". YD engine; (WITHOUT EURO-OBD) EC-1291, "DTC P0117, P0118 ECT SENSOR".


SYSTEM DESCRIPTION

Component Parts

Fan speed control system components are:

- Auto amp.
- A/C LAN system (PBR built-in air mix door motor, mode door motor and intake door motor)
- Fan control amp.
- In-vehicle sensor
- Ambient sensor
- Sunload sensor
- Intake sensor

System Operation

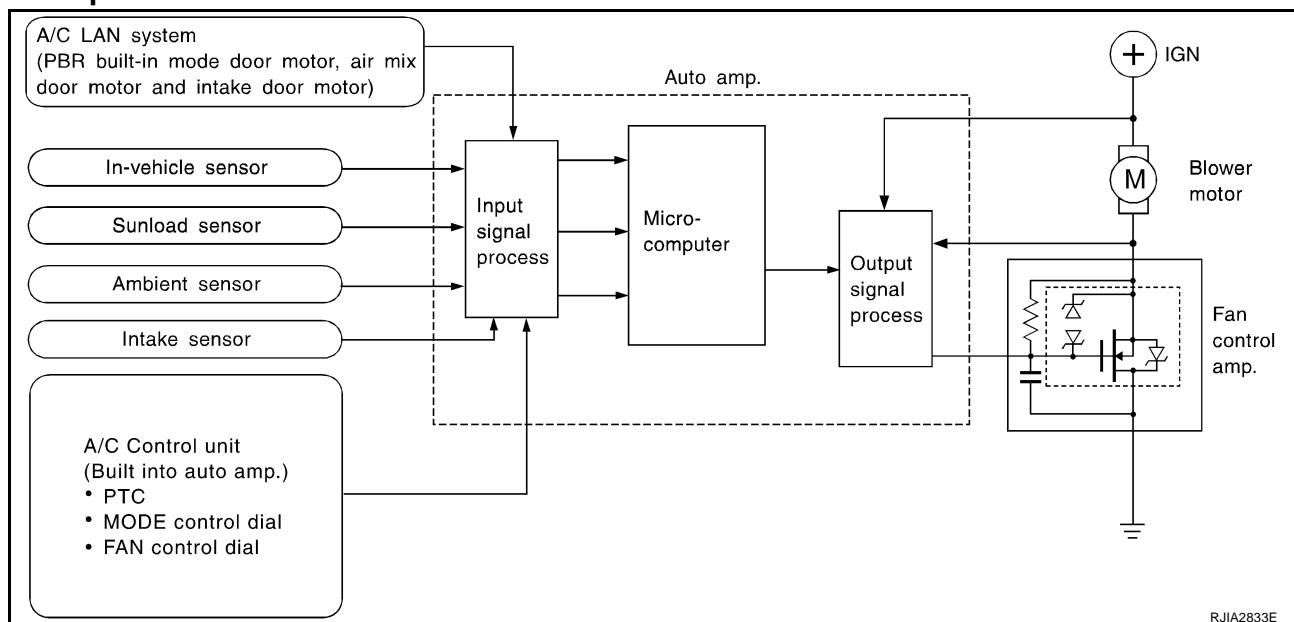

Automatic Mode

In the automatic mode, the blower motor speed is calculated by the auto amp. based on input from the PBR, in-vehicle sensor, sunload sensor, intake sensor and ambient sensor.

The blower motor applied voltage ranges from approximately 4 volts (lowest speed) to 12 volts (highest speed).

The control blower speed (in the range of 4 to 12V), the auto amp. supplies a gate voltage to the fan control amp. Based on this voltage, the fan control amp. controls the voltage supplied to the blower motor.

TROUBLE DIAGNOSIS

Starting Fan Speed Control

Start Up from COLD SOAK Condition (Automatic mode)

In a cold start up condition where the engine coolant temperature is below 56°C (133°F), the blower will not operate for a short period of time (up to 150 seconds). The exact start delay time varies depending on the ambient and engine coolant temperature.

In the most extreme case (very low ambient) the blower starting delay will be 150 seconds as described above. After this delay, the blower will operate at low speed until the engine coolant temperature rises above 56°C (133°F), and then the blower speed will increase to the objective speed.

Start Up from Usual or HOT SOAK Condition (Automatic mode)


The blower will begin operation momentarily after the A/C switch is pushed. The blower speed will gradually rise to the objective speed over a time period of 3 seconds or less (actual time depends on the objective blower speed).

Blower Speed Compensation

Sunload

When the in-vehicle temperature and the set temperature are very close, the blower will be operating at low speed. The low speed will vary depending on the sunload. During conditions of low or no sunload, the blower low speed is usual low speed (approx. 4V). During high sunload conditions, the auto amp. causes the blower fan speed to increase.(Approx. 7V)


Fan Speed Control Specification

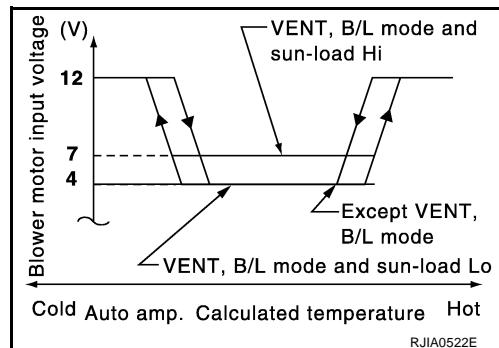

COMPONENT DESCRIPTION


Fan Control Amp.

The fan control amp. is located on the intake unit. The fan control amp. receives a gate voltage from the auto amp. to steplessly maintain the blower fan motor voltage in the 4 to 12 volt range.

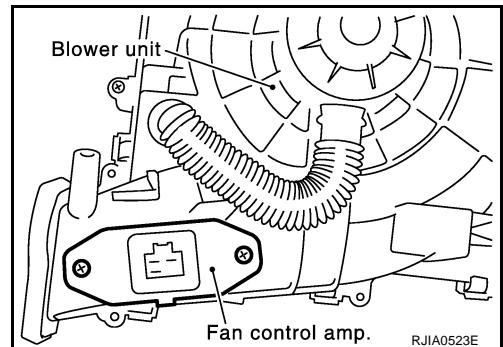

DIAGNOSTIC PROCEDURE FOR BLOWER MOTOR

SYMPTOM: Blower motor operation is malfunctioning.

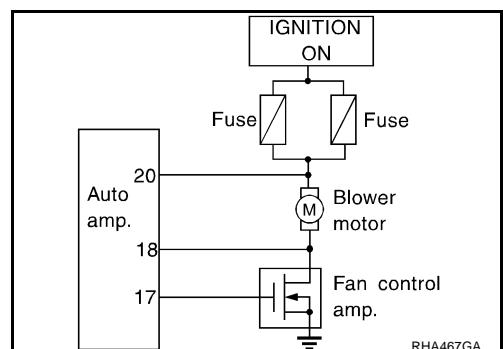

TROUBLE DIAGNOSIS

1. CHECK POWER SUPPLY FOR BLOWER MOTOR

1. Disconnect blower motor connector.
2. Turn ignition switch ON.
3. Check voltage between blower motor harness connector M65 terminal 1 (L/W) and ground.

1 – Ground


: Battery voltage

OK or NG

OK >> GO TO 2.

NG >> Check power supply circuit and 15A fuses [Nos. 19 and 24, located in the fuse block (J/B)]. Refer to [PG-75, "FUSE BLOCK - JUNCTION BOX \(J/B\)"](#).

- If OK, check harness for open circuit. Repair or replace if necessary.
- If NG, replace fuse and check harness for short circuit. Repair or replace if necessary.

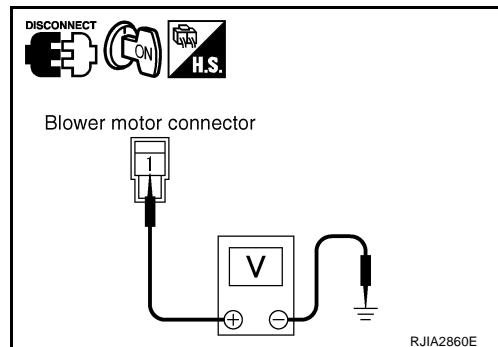

2. CHECK FAN FEED BACK CIRCUIT

1. Reconnect blower motor connector.
2. Check voltage between auto amp. harness connector M52 terminal 18 (R) and ground.


18 – Ground

: Battery voltage

OK or NG

OK >> GO TO 3.

NG >> GO TO 9.

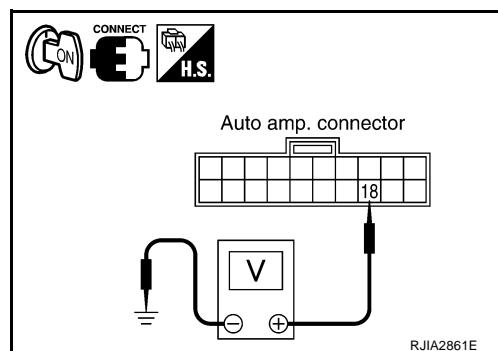

3. CHECK BLOWER MOTOR

Refer to [ATC-87, "Blower Motor"](#) .

OK or NG

OK >> GO TO 4.

NG >> Replace blower motor.

ATC

4. CHECK POWER SUPPLY FOR FAN CONTROL AMP.


1. Turn ignition switch ON.
2. Check voltage between fan control amp. harness connector M67 terminal 3 (R) and ground.

Terminals		Condition	Voltage
(+)	(-)		
Fan control amp. connector	Terminal No. (wire color)		
M67	3 (R)	Ground	Fan speed: 1st Approx. 8V

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

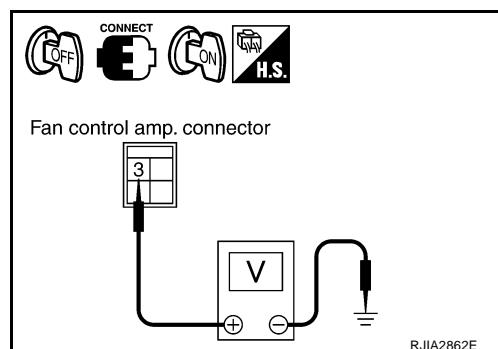

TROUBLE DIAGNOSIS

5. CHECK GROUND CIRCUIT FOR FAN CONTROL AMP.

1. Turn ignition switch OFF.
2. Disconnect fan control amp. connector.
3. Check continuity between fan control amp. harness connector M67 terminal 1 (B) and ground.


1 – Ground

: Continuity should exist.

OK or NG

OK >> GO TO 6.

NG >> Repair harness or connector.

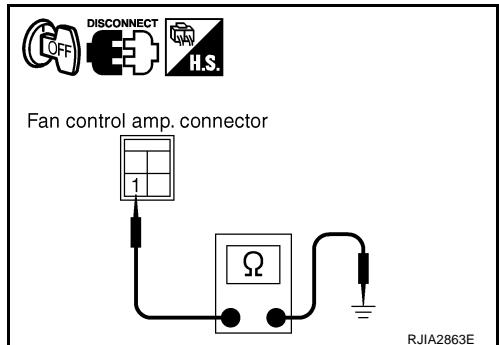

6. CHECK FOR AUTO AMP. OUTPUT SIGNAL

1. Reconnect fan control amp. connector.
2. Turn ignition switch ON.
3. Check voltage between fan control amp. harness connector M67 terminal 2 (L/Y) and ground.


Terminals		Condition	Voltage
(+)	(-)		
Fan control amp. connector	Terminal No. (wire color)		
M67	2 (L/Y)	Ground	Fan speed: 1st - 24th
			Approx. 2.5 - 3.5V
			Fan speed: 25th
			Approx. 9.0V

OK or NG

OK >> GO TO 9.

NG >> ● If the voltage is less than 2.5V: GO TO 7.

● If the voltage is more than 9.0V: GO TO 8.

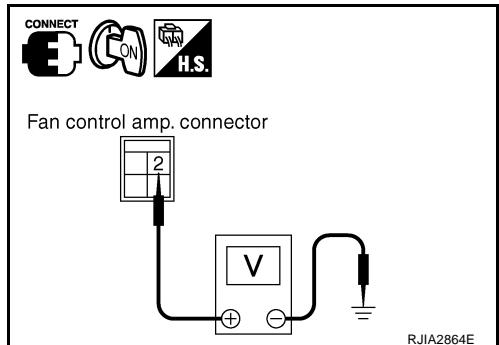

7. CHECK CIRCUIT CONTINUITY BETWEEN AUTO AMP. AND FAN CONTROL AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector and fan control amp. connector.
3. Check continuity between auto amp. harness connector M52 terminal 17 (L/Y) and fan control amp. harness connector M67 terminal 2 (L/Y).


17 – 2

: Continuity should exist.

OK or NG

OK >> Replace fan control amp.

NG >> Repair harness or connector.

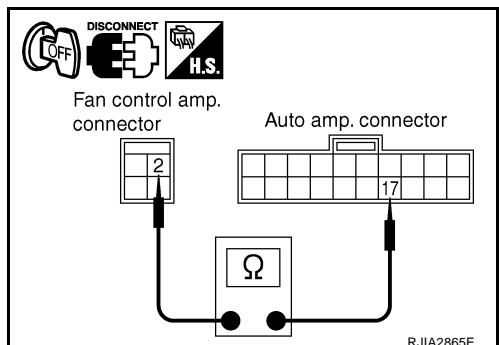

TROUBLE DIAGNOSIS

8. CHECK FAN CONTROL AMP.


1. Turn ignition switch OFF.
2. Disconnect fan control amp. connector.
3. Check continuity between fan control amp. connector M67 terminal 2 and 1.

2 – 1

: Continuity should exist.

OK or NG

OK >> GO TO 9.
NG >> Replace fan control amp.

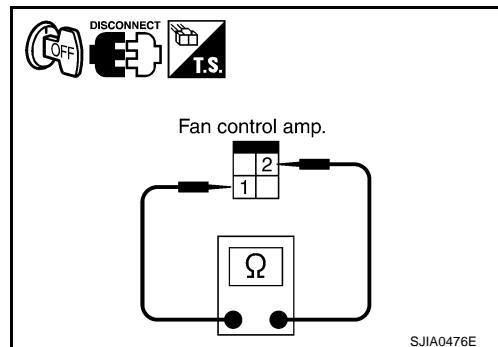

9. CHECK CIRCUIT CONTINUITY BETWEEN AUTO AMP. AND FAN CONTROL AMP.


1. Disconnect auto amp. connector.
2. Check continuity between auto amp. harness connector M52 terminal 18 (R) and fan control amp. harness connector M67 terminal 3 (R).

18 – 3

: Continuity should exist.

OK or NG

OK >> Replace auto amp.
NG >> Repair harness or connector.

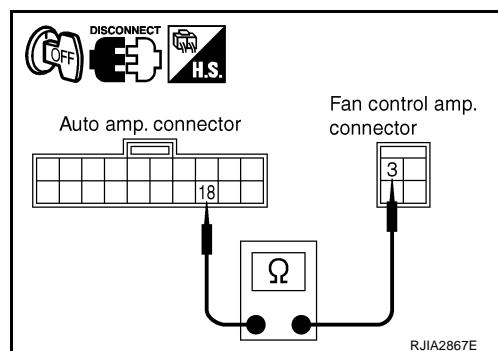


COMPONENT INSPECTION

Blower Motor

Confirm smooth rotation of blower motor.

- Ensure that there are no foreign particles inside intake unit.

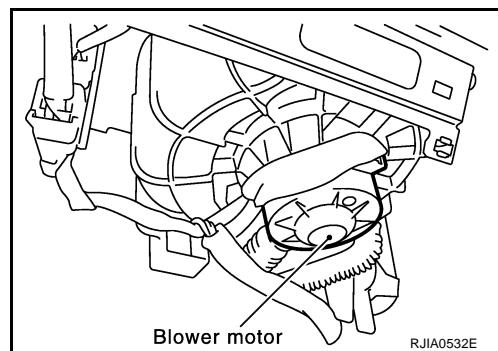

A
B
C
D
E
F
G
H
I

ATC
K
L
M


TROUBLE DIAGNOSIS

Magnet Clutch Circuit

EJS004YO

SYMPTOM: Magnet clutch does not engage.

INSPECTION FLOW

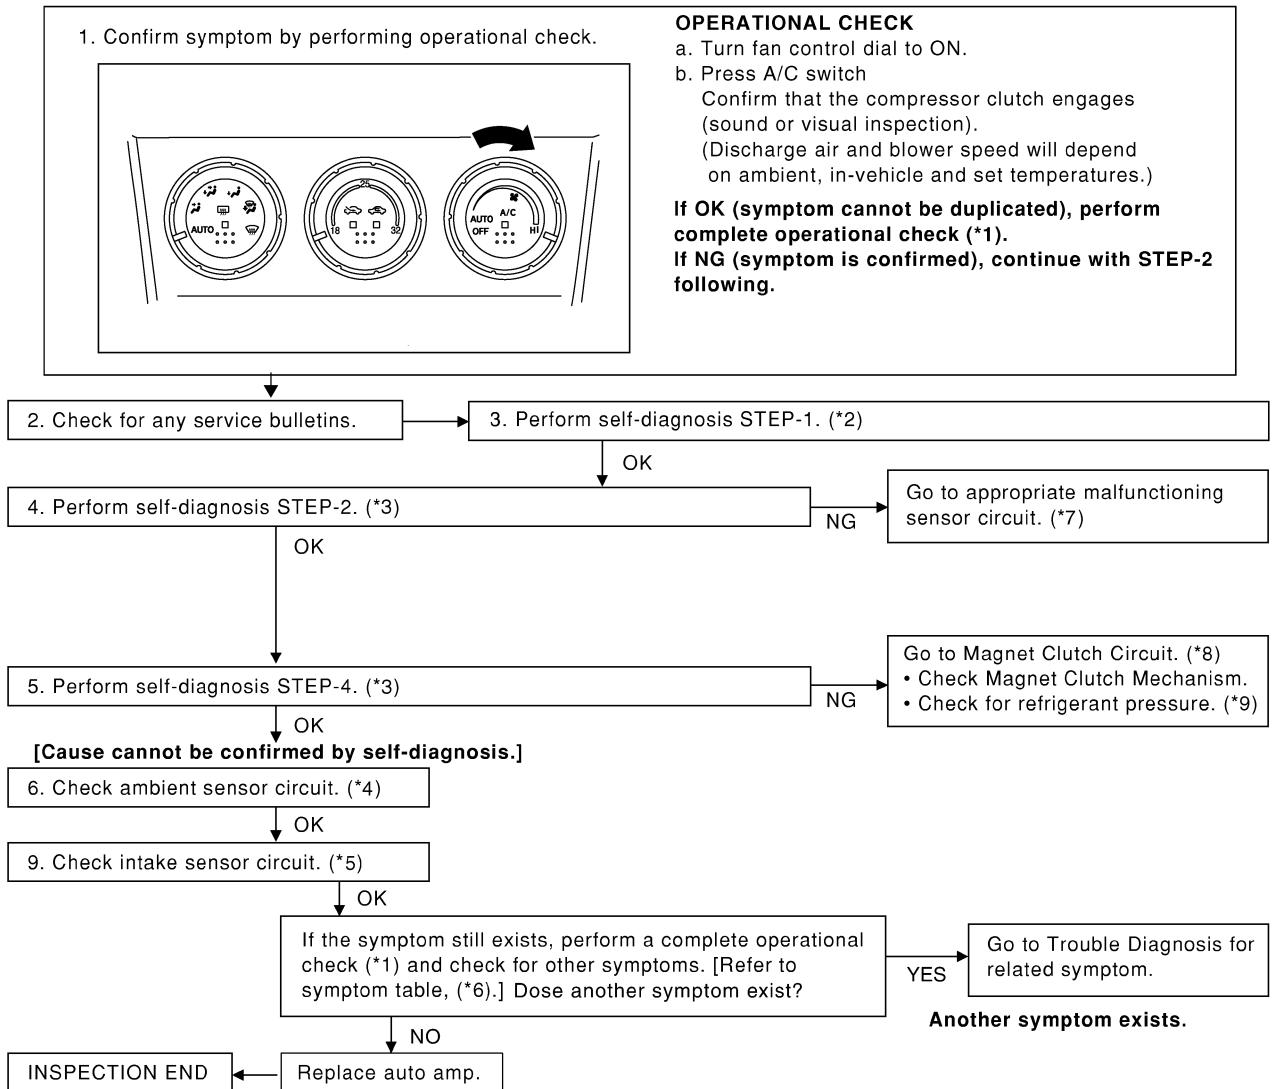

*1 [ATC-65, "Operational Check".](#)

*2 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 1.](#)

*3 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 5 to 7.](#)

RJIA3103E

*4 [ATC-109, "Ambient Sensor Circuit".](#)

*5 [ATC-117, "Intake Sensor Circuit".](#)

*6 [ATC-34, "SYMPTOM TABLE".](#)

*7 [ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 9.](#)

*8 [ATC-89, "DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH".](#)

*9 [ATC-102, "TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE".](#)

TROUBLE DIAGNOSIS


SYSTEM DESCRIPTION

Auto amp. controls compressor operation by ambient temperature, intake air temperature (with diesel engine) and signal from ECM.

Low Temperature Protection Control (With Gasoline Engine)

Auto amp. will turn compressor ON or OFF as determined by a signal detected by ambient sensor.

When ambient temperatures are higher than -2°C (28°F), compressor turns ON. Compressor turns OFF when ambient temperatures are lower than -5°C (23°F).

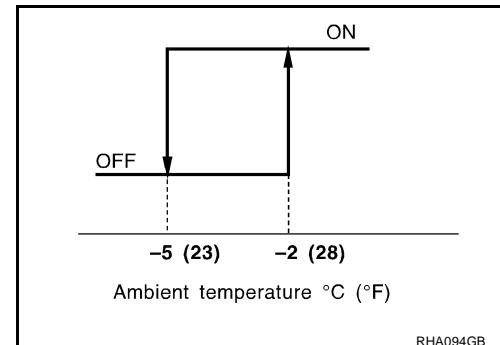


RHA094GB

Evaporator Freeze Protection Control (With Diesel Engine)

Auto amp. will turn compressor ON or OFF as determined by a signal detected by intake sensor.


When intake air temperatures are higher than 4°C (39°F), compressor turns ON. Compressor turns OFF when intake temperatures are lower than 2.5°C (37°F).

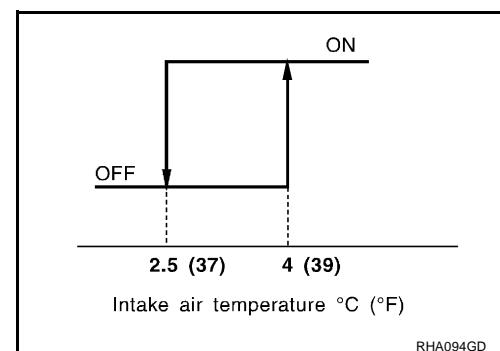

RHA094GD

DIAGNOSTIC PROCEDURE FOR MAGNET CLUTCH

SYMPTOM: Magnet clutch does not engage when A/C switch is ON.

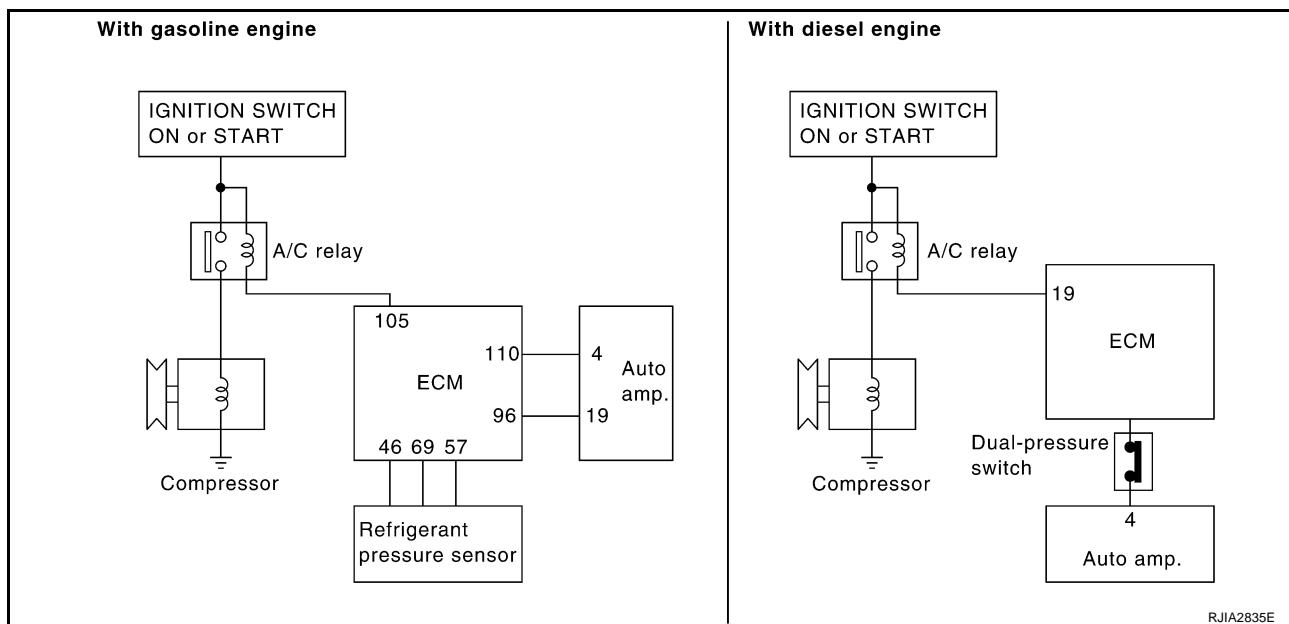

RJIA2835E

TROUBLE DIAGNOSIS

1. CHECK POWER SUPPLY FOR COMPRESSOR


1. Disconnect compressor connector.
2. Start the engine.
3. Turn fan control dial to AUTO position.
4. Press A/C switch.
5. Check voltage between compressor harness connector E34 terminal 1 (L/R) and ground.

1 – Ground

: Battery voltage

OK or NG

OK >> GO TO 2.
NG >> GO TO 3.

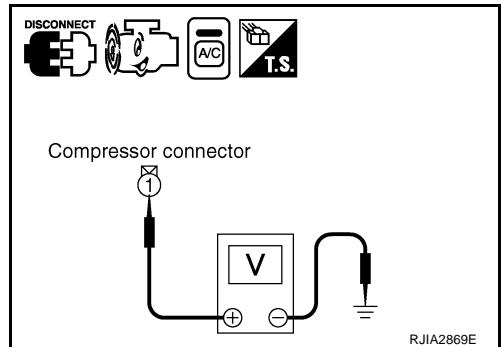


2. CHECK MAGNET CLUTCH CIRCUIT

Check for operation sound when applying battery voltage direct current to terminal.

OK or NG

OK >> 1. Repair harness or connector.
2. Go to self-diagnosis procedure [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-4. Confirm that magnet clutch operation is usual.

NG >> 1. Replace magnet clutch. Refer to [ATC-146, "Removal and Installation of Compressor Clutch"](#).
2. Go to self-diagnosis procedure [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-4. Confirm that magnet clutch operation is usual.

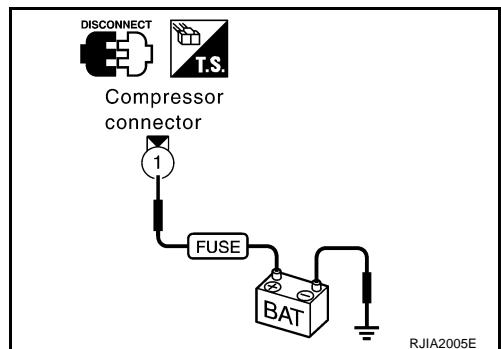

3. CHECK CIRCUIT CONTINUITY BETWEEN A/C RELAY AND COMPRESSOR


1. Turn ignition switch OFF.
2. Disconnect A/C relay connector.
3. Check continuity between A/C relay harness connector E5 terminal 5 (L/R) and compressor harness connector E34 terminal 1 (L/R).

5 – 1

: Continuity should exist.

OK or NG

OK >> GO TO 4.
NG >> Repair harness or connector.

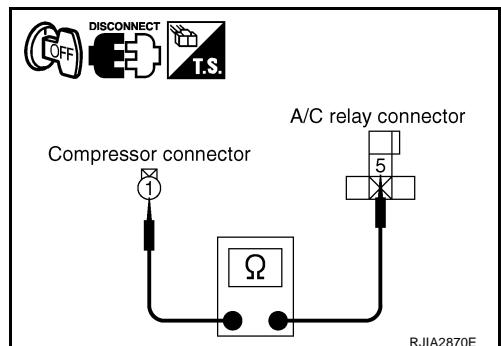

TROUBLE DIAGNOSIS


4. CHECK POWER SUPPLY FOR A/C RELAY

1. Turn ignition switch ON.
2. Check voltage between A/C relay harness connector E5 terminal 1 (BR/Y), 3 (BR/Y) and ground.

1 – Ground : Battery voltage
3 – Ground : Battery voltage

OK or NG

OK >> GO TO 5.
NG >> Check power supply circuit and 10A fuse [No. 15 located in the fuse block (J/B)]. Refer to [PG-75, "FUSE BLOCK - JUNCTION BOX \(J/B\)"](#).

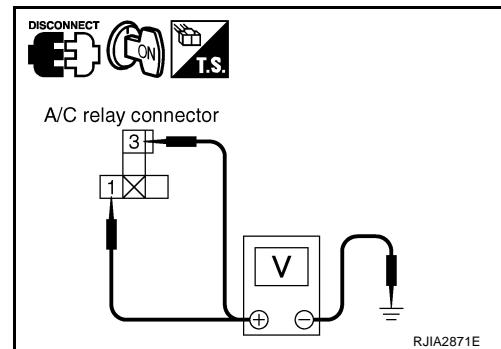

- If OK, check harness for open circuit. Repair or replace if necessary.
- If NG, replace fuse and check harness for short circuit. Repair or replace if necessary.

5. CHECK A/C RELAY AFTER DISCONNECTING IT

Refer to [ATC-94, "A/C Relay"](#).

OK or NG

OK >> GO TO 6.
NG >> 1. Replace A/C relay.
2. Go to self-diagnosis procedure [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-4. Confirm that magnet clutch operation is usual.


6. CHECK COIL SIDE CIRCUIT OF A/C RELAY

1. Turn ignition switch OFF.
2. Reconnect A/C relay connector.
3. Start the engine.
4. Check voltage between ECM harness connector F43 terminal 105 (BR/W) or 19 (L) and ground.

105 – Ground (Gasoline engine) : Battery voltage
19 – Ground (Diesel engine) : Battery voltage

OK or NG

OK >> GO TO 7.
NG >> Repair harness or connector.

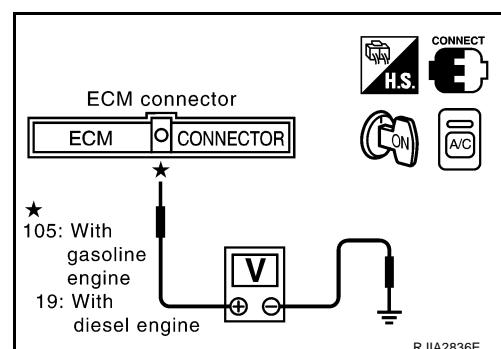

7. CHECK AMBIENT SENSOR

Refer to [ATC-109, "Ambient Sensor Circuit"](#).

OK or NG

OK >> ● With gasoline engine: GO TO 8.
● With diesel engine: GO TO 14.
NG >> Repair or replace the malfunctioning part(s).

8. CHECK REFRIGERANT PRESSURE SENSOR (QR ENGINE)

Refer to [ATC-94, "Refrigerant Pressure Sensor \(With Gasoline Engine\)"](#).

OK or NG

OK >> GO TO 9.
NG >> Repair or replace the malfunctioning part(s).

TROUBLE DIAGNOSIS

9. CHECK VOLTAGE FOR AUTO AMP. (COMPRESSOR ON SIGNAL)

1. Turn ignition switch ON.
2. Check voltage between auto amp. harness connector M52 terminal 4 (L/R) and ground.

Terminals		Condition	Voltage
(+)	(-)		
Auto amp. connector	Terminal No. (wire color)		
M52	4 (L/R)	Ground	A/C SW: ON (Blower motor operates.)
			Approx. 0V
			A/C SW: OFF
			Approx. 5V

OK or NG

OK >> GO TO 10.

NG >> ● If the voltage is approx. 5V when the A/C switch is ON: Replace the auto amp.
● If the voltage is approx. 0V when the A/C switch is OFF: GO TO 12.

10. CHECK VOLTAGE FOR AUTO AMP. (FAN ON SIGNAL)

Check voltage between auto amp. harness connector M52 terminal 19 (LG/B) and ground.

Terminals		Condition	Voltage
(+)	(-)		
Auto amp. connector	Terminal No. (wire color)		
M52	19 (LG/B)	Ground	Blower fan: ON (Blower motor operates.)
			Approx. 0V
			Fan control dial: OFF
			Approx. 5V

OK or NG

OK >> Replace auto amp.

NG >> ● If the voltage is approx. 5V when the blower motor is ON: Replace the auto amp.
● If the voltage is approx. 0V when the blower motor is OFF: GO TO 11.

11. CHECK CIRCUIT CONTINUITY BETWEEN ECM AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect ECM connector and auto amp. connector.
3. Check continuity between ECM harness connector F43 terminal 96 (LG/B) and auto amp. harness connector M52 terminal 19 (LG/B).




96 – 19

: Continuity should exist.

OK or NG

OK >> INSPECTION END

NG >> Repair harness or connector.

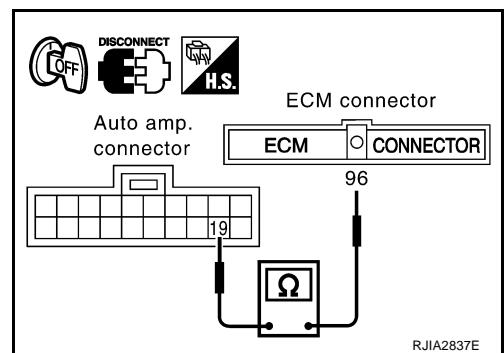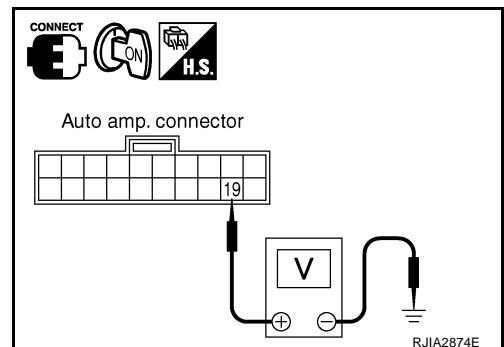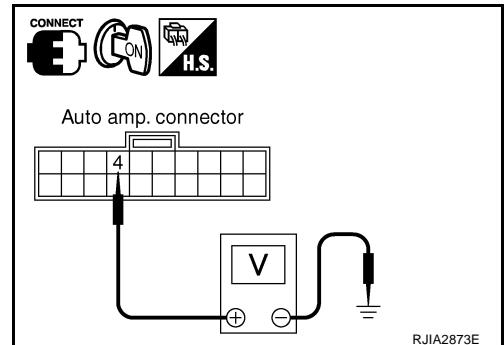

TROUBLE DIAGNOSIS

12. CHECK CIRCUIT CONTINUITY BETWEEN ECM AND AUTO AMP. (QR ENGINE)

1. Turn ignition switch OFF.
2. Disconnect ECM connector and auto amp. connector.
3. Check continuity between ECM harness connector F43 terminal 110 (L/R) and auto amp. harness connector M52 terminal 4 (L/R).


110 – 4

: Continuity should exist.

OK or NG

OK >> GO TO 13.


NG >> Repair harness or connector.

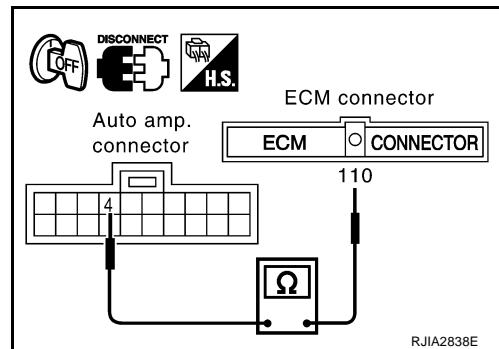

13. CHECK VOLTAGE FOR AUTO AMP. (COMPRESSOR ON SIGNAL)

Check voltage between auto amp. harness connector M52 terminal 4 (L/R) and ground.

Terminals		Condition	Voltage
(+)	(-)		
Auto amp. connector	Terminal No. (wire color)		
M52	4 (L/R)	Ground	A/C SW: ON (Blower motor operates.)
			Approx. 0V
			A/C SW: OFF
			Approx. 5V

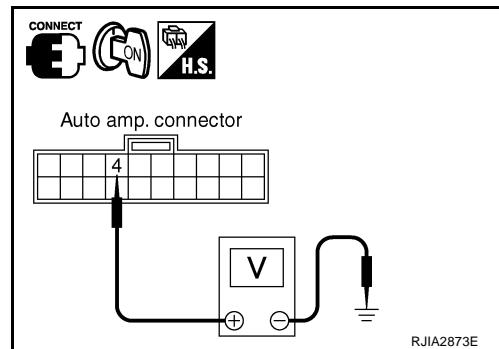

OK or NG

OK >> Replace auto amp.

NG >> GO TO 17.

14. CHECK DUAL-PRESSURE SWITCH (YD ENGINE)

Refer to ATC-95, "Dual-Pressure Switch (With Diesel Engine)" .

OK or NG

OK >> GO TO 15.

NG >> Replace the dual-pressure switch.

15. CHECK CIRCUIT CONTINUITY BETWEEN AUTO AMP. AND DUAL-PRESSURE SWITCH

1. Turn ignition switch OFF.
2. Disconnect the auto amp. connector.
3. Check continuity between auto amp. harness connector M52 terminal 4 (L/R) and dual-pressure switch harness connector E40 terminal 2 (L/R).


4 – 2

: Continuity should exist.

OK or NG

OK >> GO TO 16.

NG >> Repair harness or connector.

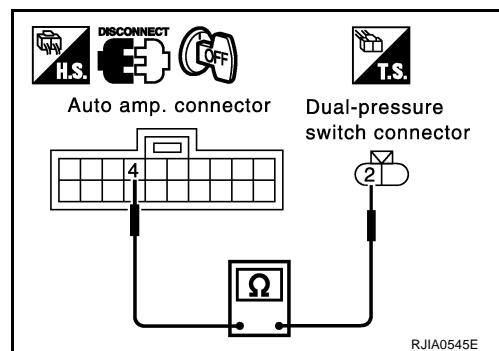

TROUBLE DIAGNOSIS

16. CHECK CIRCUIT CONTINUITY BETWEEN DUAL-PRESSURE SWITCH AND COMBINATION METER

1. Disconnect the combination meter connector.
2. Check continuity between dual-pressure switch harness connector E40 terminal 1 (PU/W) and combination meter harness connector M44 terminal 7 (SB).


1 – 7

: Continuity should exist.

OK or NG

OK >> Check [DI-22, "Trouble Diagnosis Chart for Symptom"](#) in DI.

NG >> Repair harness or connector.

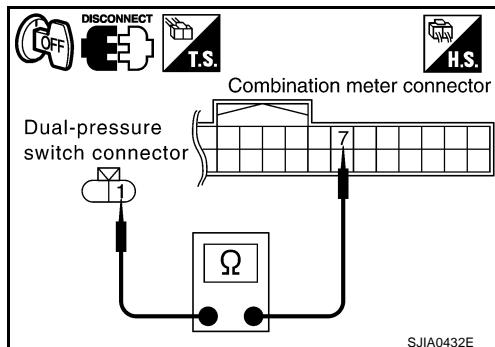

17. CHECK REFRIGERANT PRESSURE SENSOR

Refer to [EC-451, "REFRIGERANT PRESSURE SENSOR" \(WITH EUR-OBD\)](#) or [EC-843, "REFRIGERANT PRESSURE SENSOR" \(WITHOUT EURO-OBD\)](#).

OK or NG

OK >> INSPECTION END.

NG >> Repair or replace the malfunctioning part(s).


COMPONENT INSPECTION

A/C Relay

Check continuity between terminal Nos. 3 and 5.


Conditions	Continuity
12V direct current supply between terminal Nos. 1 and 2	Yes
No current supply	No

If NG, replace relay.

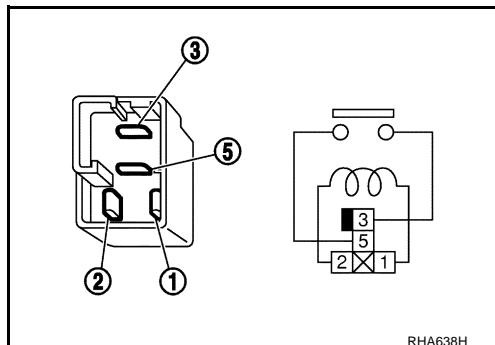


Refrigerant Pressure Sensor (With Gasoline Engine)

The refrigerant pressure sensor is attached to the liquid tank.

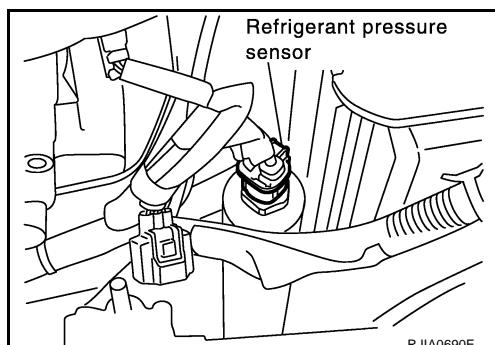


TROUBLE DIAGNOSIS

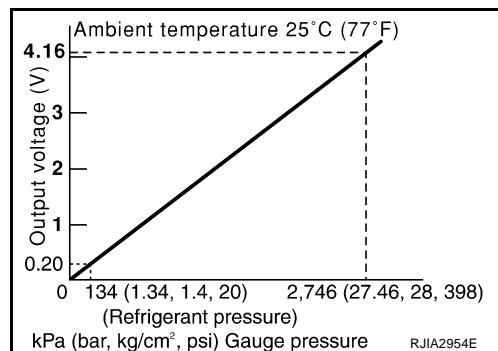


Dual-Pressure Switch (With Diesel Engine)

	Compressor: ON kPa (bar, kg/cm ² , psi)	Compressor: OFF kPa (bar, kg/cm ² , psi)
Low-pressure side	186 (1.86, 1.9, 27)	177 (1.77, 1.8, 26)
High-pressure side	1,569 (15.7, 16, 228)	2,746 (27.5, 28, 398)

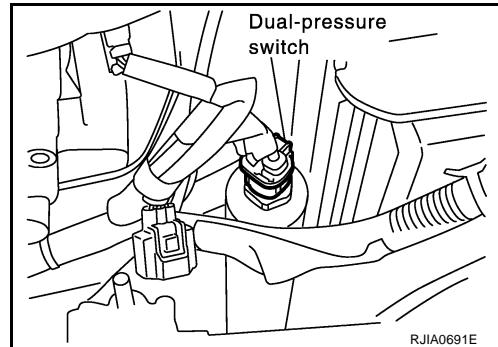

Thermal Protector (With diesel engine)

Check continuity between compressor harness terminal and field coil.

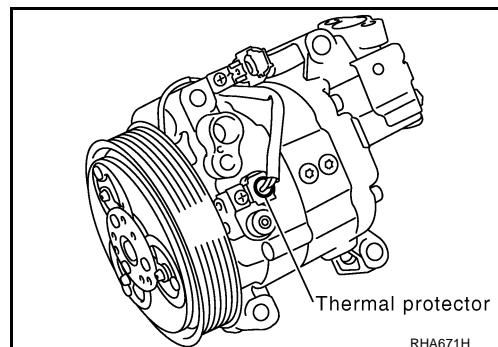


TROUBLE DIAGNOSIS

Insufficient Cooling

EJS004H2

SYMPTOM: Insufficient cooling

INSPECTION FLOW

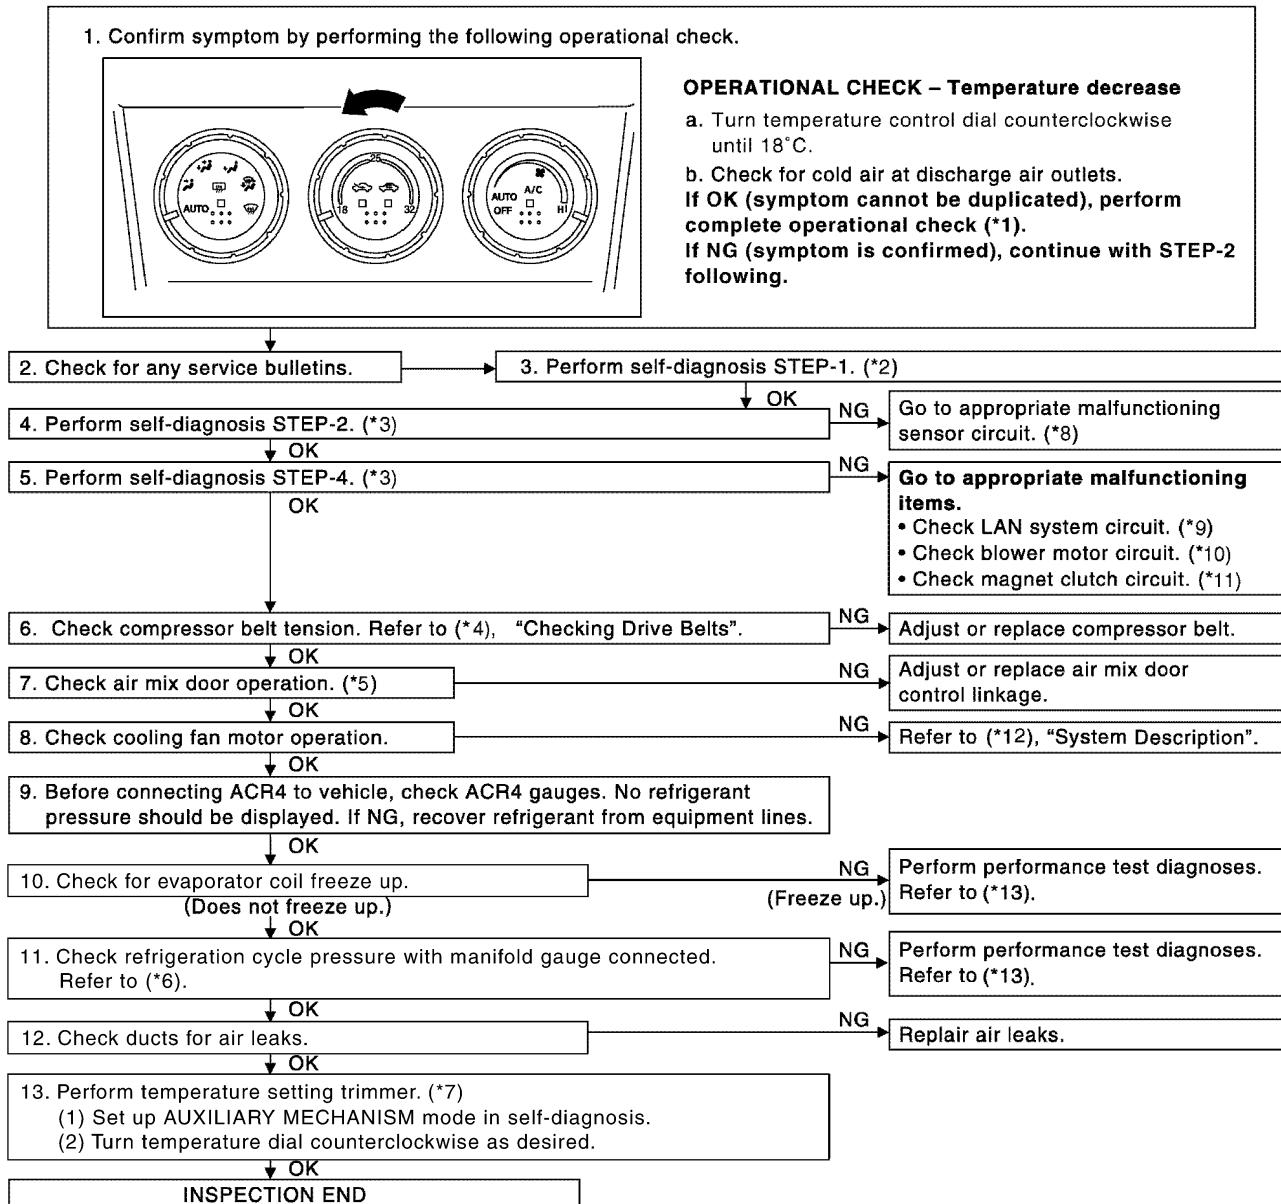

SJIA0408E

*1	<u>ATC-65. "Operational Check".</u>	*2	<u>ATC-59. "FUNCTION CONFIRMATION PROCEDURE",</u> see No. 1.	*3	<u>ATC-59. "FUNCTION CONFIRMATION PROCEDURE",</u> see No. 5 to 7.
*4	QR engine; <u>EM-13. "Checking Drive Belts"</u> or YD engine; <u>EM-131. "Checking Drive Belts"</u> .	*5	<u>ATC-76. "Air Mix Door Motor Circuit".</u>	*6	<u>ATC-100. "Test Reading (QR Engine)"</u> or <u>ATC-101. "Test Reading (YD Engine)"</u> .
*7	<u>ATC-63. "AUXILIARY MECHANISM: TEMPERATURE SETTING TRIMMER".</u>	*8	<u>ATC-59. "FUNCTION CONFIRMATION PROCEDURE",</u> see No. 9.	*9	<u>ATC-69. "LAN System Circuit".</u>

TROUBLE DIAGNOSIS

*10 [ATC-82, "Blower Motor Circuit".](#)

*11 [ATC-88, "Magnet Clutch Circuit".](#)

*12 QR engine; (WITH EURO-OBD) [EC-348, "System Description".](#)

QR engine; (WITHOUT EURO-OBD) [EC-700, "System Description".](#)

YD engine; (WITH EURO-OBD) [EC-1011, "System Description".](#)

YD engine; (WITHOUT EURO-OBD) [EC-1320, "System Description".](#)

*13 [ATC-98, "PERFORMANCE TEST DIAGNOSIS".](#)

A

B

C

D

E

F

G

H

I

ATC


K

L

M

TROUBLE DIAGNOSIS

PERFORMANCE TEST DIAGNOSIS

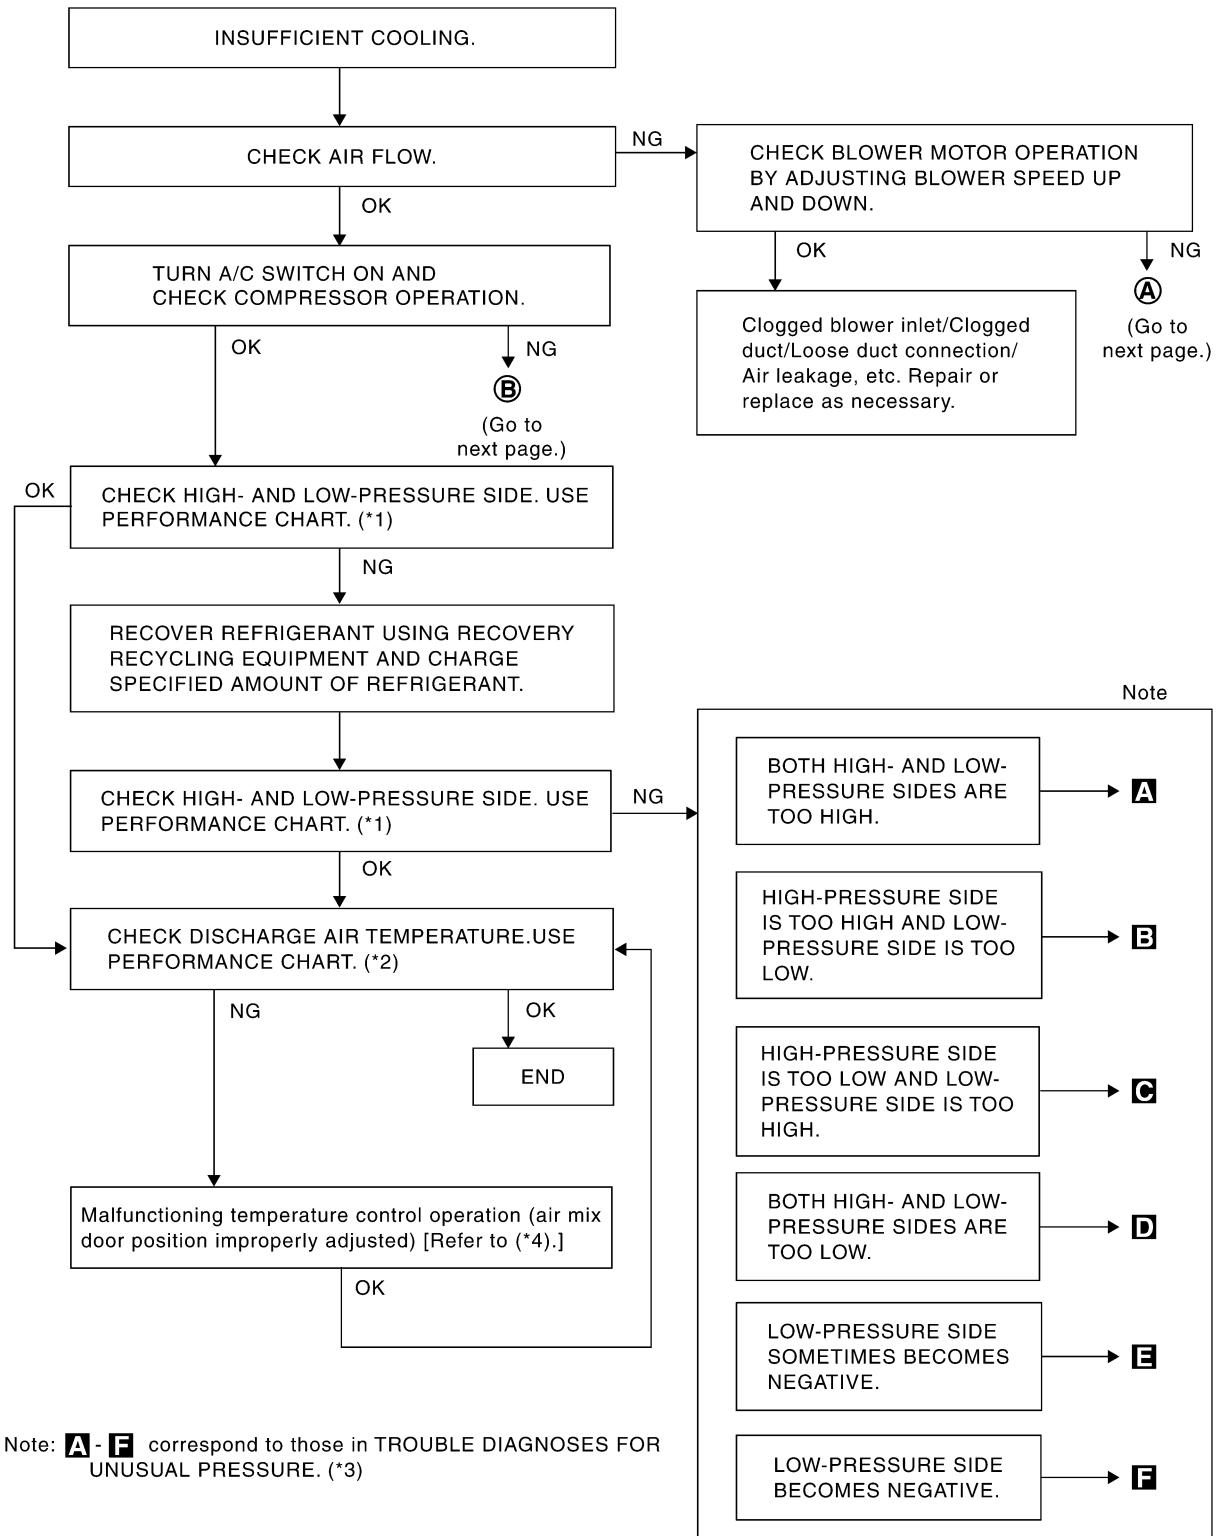

Note: **A - F** correspond to those in TROUBLE DIAGNOSES FOR UNUSUAL PRESSURE. (*3)

RJA1601E


*1 [ATC-100, "PERFORMANCE CHART".](#)

*2 [ATC-100, "PERFORMANCE CHART".](#)

*3 [ATC-102, "TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE".](#)

*4 [ATC-76, "Air Mix Door Motor Circuit".](#)

TROUBLE DIAGNOSIS

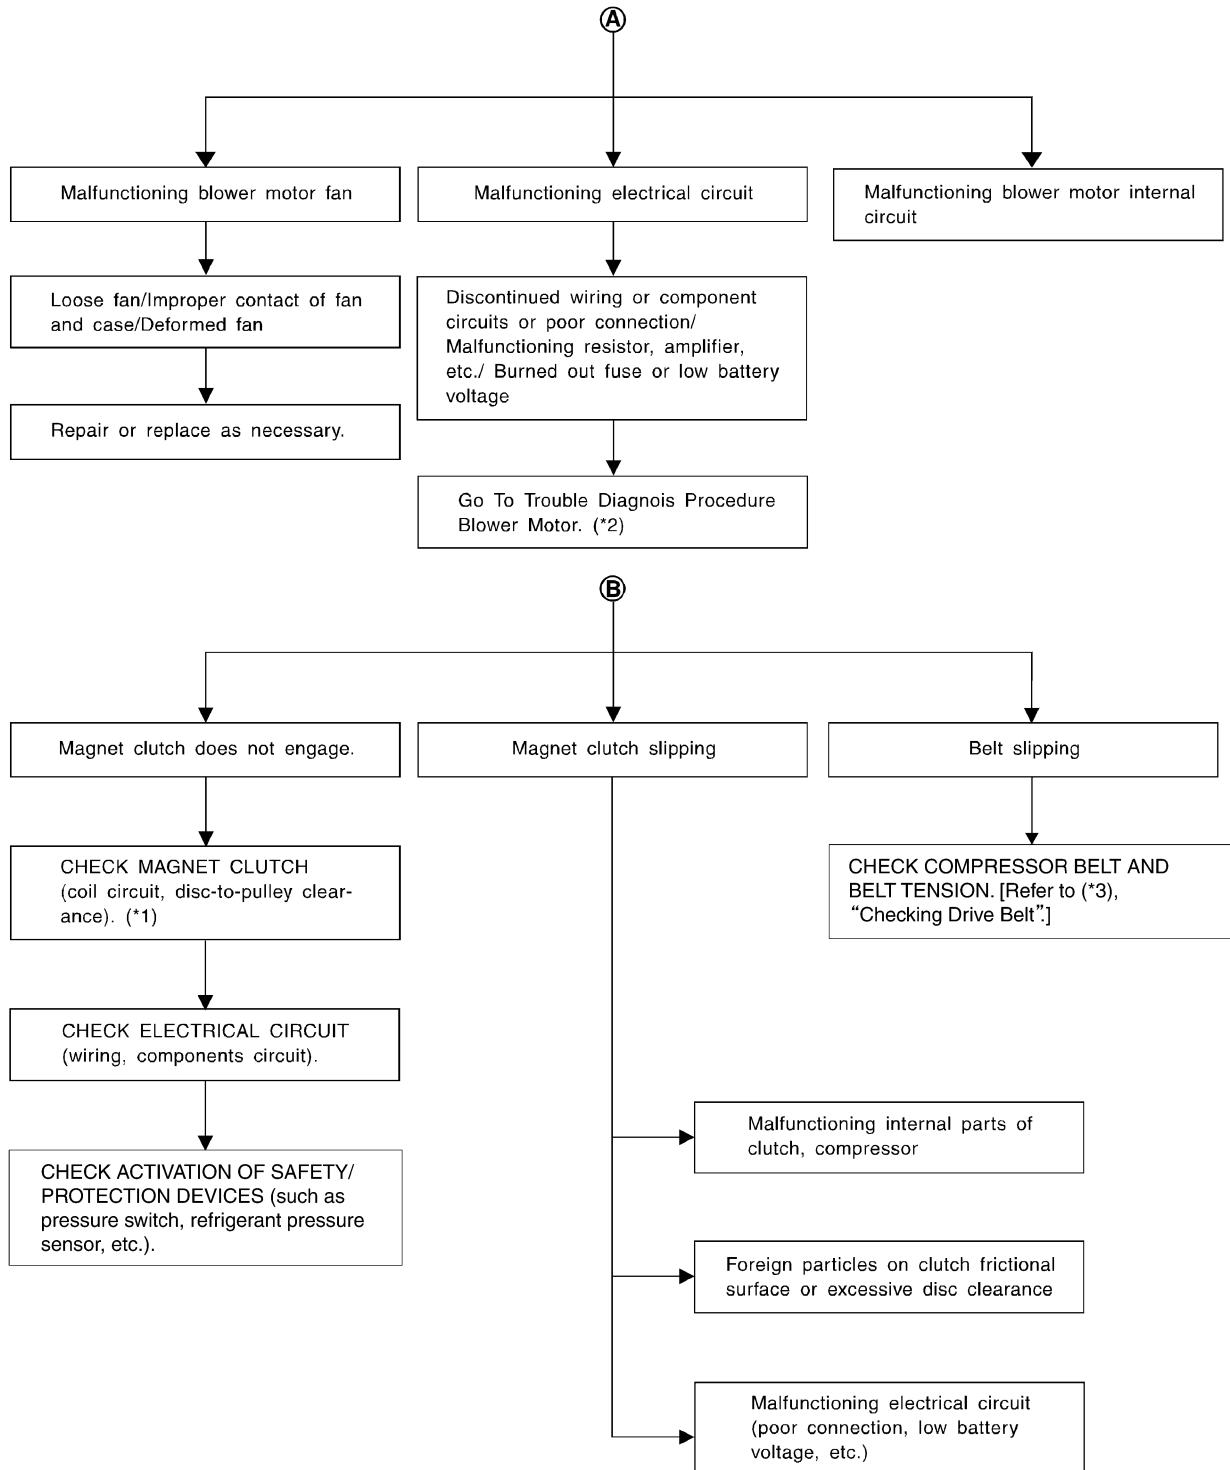

*1 [ATC-146, "Removal and Installation of Compressor Clutch".](#)

*2 [ATC-82, "Blower Motor Circuit".](#)

*3 QR engine; [EM-13, "Checking Drive Belts"](#) or YD engine; [EM-131, "Checking Drive Belts"](#).

RJIA3107E

TROUBLE DIAGNOSIS

PERFORMANCE CHART

Test Condition

Testing must be performed as follows:

Vehicle location	Indoors or in the shade (in a well-ventilated place)
Doors	Closed
Door windows	Open
Hood	Open
TEMP.	Max. COLD
Mode control dial	 (Ventilation) set
Intake switch	 (Recirculation) set
 Fan (blower) speed	Max. speed set
Engine speed	Idle speed

Operate the air conditioning system for 10 minutes before taking measurements.

Test Reading (QR Engine)

Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	25 (77)	10.0 - 11.6 (50 - 53)
	30 (86)	13.9 - 16.2 (57 - 61)
	35 (95)	17.8 - 21.4 (64 - 71)
60 - 70	25 (77)	11.6 - 13.9 (53 - 57)
	30 (86)	16.2 - 18.9 (61 - 66)
	35 (95)	21.4 - 24.5 (71 - 76)

Ambient Air Temperature-to-operating Pressure Table

Ambient air		High-pressure (Discharge side) kPa (bar, kg/cm ² , psi)	Low-pressure (Suction side) kPa (bar, kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	30 (86)	980 - 1,180 (9.8 - 11.8, 9.99 - 12.04, 142 - 171)	230 - 270 (2.3 - 2.7, 2.35 - 2.75, 33 - 39)
	35 (95)	1,180 - 1,390 (11.8 - 13.9, 12.04 - 14.18, 171 - 202)	260 - 310 (2.6 - 3.1, 2.65 - 3.16, 38 - 45)
	40 (104)	1,400 - 1,580 (14.0 - 15.8, 14.28 - 16.12, 203 - 229)	300 - 350 (3.0 - 3.5, 3.06 - 3.57, 44 - 51)

TROUBLE DIAGNOSIS

Test Reading (YD Engine)

Recirculating-to-discharge Air Temperature Table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	6.5 - 9.0 (44 - 48)
	25 (77)	12 - 14 (54 - 57)
	30 (86)	15.5 - 18.8 (60 - 66)
	35 (95)	20.4 - 24.0 (69 - 75)
60 - 70	20 (68)	9.0 - 11.0 (48 - 52)
	25 (77)	14.0 - 16.5 (57 - 62)
	30 (86)	18.8 - 21.5 (66 - 71)
	35 (95)	24 - 27 (75 - 81)

Ambient Air Temperature-to-operating Pressure Table

Ambient air		High-pressure (Discharge side) kPa (bar, kg/cm ² , psi)	Low-pressure (Suction side) kPa (bar, kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	765 - 922 (7.65 - 9.22, 7.8 - 9.4, 111 - 134)	177 - 226 (1.77 - 2.26, 1.8 - 2.3, 26 - 33)
	25 (77)	922 - 1,020 (9.22 - 10.20, 9.4 - 10.4, 134 - 148)	196 - 245 (1.96 - 2.45, 2.0 - 2.5, 28 - 36)
	30 (86)	1,177 - 1,451 (11.77 - 14.51, 12.0 - 14.8, 171 - 210)	235 - 284 (2.35 - 2.84, 2.4 - 2.9, 34 - 41)
	35 (95)	1,373 - 1,667 (13.73 - 16.67, 14.0 - 17.0, 199 - 242)	275 - 333 (2.75 - 3.33, 2.8 - 3.4, 40 - 48)
	40 (104)	1,618 - 1,961 (16.18 - 19.61, 16.5 - 20.0, 235 - 284)	333 - 392 (3.33 - 3.92, 3.4 - 4.0, 48 - 57)

TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE

Whenever system's high and/or low side pressure(s) is/are unusual, diagnose using a manifold gauge. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Since the standard (usual) pressure, however, differs from vehicle to vehicle, refer to above table (Ambient air temperature-to-operating pressure table).

Both High- and Low-pressure Sides are Too High


Gauge indication	Refrigerant cycle	Probable cause	Corrective action
	Pressure is reduced soon after water is splashed on condenser.	Excessive refrigerant charge in refrigeration cycle	Reduce refrigerant until specified pressure is obtained.
	Air suction by cooling fan is insufficient.	Insufficient condenser cooling performance ↓ 1. Condenser fins are clogged. 2. Improper fan rotation of cooling fan	● Clean condenser. ● Check and repair cooling fan as necessary.
Both high- and low-pressure sides are too high.	<ul style="list-style-type: none"> Low-pressure pipe is not cold. When compressor is stopped high-pressure value quickly drops by approximately 196 kPa (1.96 bar, 2 kg/cm², 28 psi). It then decreases gradually thereafter. 	Poor heat exchange in condenser (After compressor operation stops, high-pressure decreases too slowly.) ↓ Air in refrigeration cycle	Evacuate repeatedly and recharge system.
	Engine tends to overheat.	Engine cooling systems malfunction.	Check and repair each engine cooling system.
	<ul style="list-style-type: none"> An area of the low-pressure pipe is colder than areas near the evaporator outlet. Plates are sometimes covered with frost. 	<ul style="list-style-type: none"> Excessive liquid refrigerant on low-pressure side Excessive refrigerant discharge flow Expansion valve is open a little compared with the specification. ↓ Improper expansion valve adjustment 	Replace expansion valve.

High-pressure Side is Too High and Low-pressure Side is Too Low


Gauge indication	Refrigerant cycle	Probable cause	Corrective action
High-pressure side is too high and low-pressure side is too low.	Upper side of condenser and high-pressure side are hot, however, liquid tank is not so hot.	High-pressure tube or parts located between compressor and condenser are clogged or crushed.	<ul style="list-style-type: none"> Check and repair or replace malfunctioning parts. Check lubricant for contamination.

TROUBLE DIAGNOSIS

High-Pressure Side is Too Low and Low-pressure Side is Too High

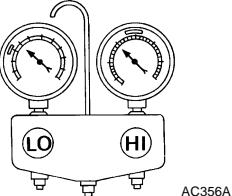Gauge indication	Refrigerant cycle	Probable cause	Corrective action
 High-pressure side is too low and low-pressure side is too high.	High- and low-pressure sides become equal soon after compressor operation stops.	Compressor pressure operation is improper. ↓ Damaged inside compressor packings	Replace compressor.
	No temperature difference between high- and low-pressure sides	Compressor pressure operation is improper. ↓ Damaged inside compressor packings.	Replace compressor.

Both High- and Low-pressure Sides are Too Low

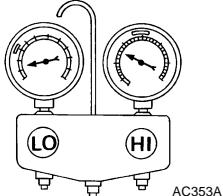Gauge indication	Refrigerant cycle	Probable cause	Corrective action
 Both high- and low-pressure sides are too low.	<ul style="list-style-type: none"> There is a big temperature difference between liquid tank outlet and inlet. Outlet temperature is extremely low. Liquid tank inlet and expansion valve are frosted. 	Liquid tank inside is slightly clogged.	<ul style="list-style-type: none"> Replace liquid tank. Check lubricant for contamination.
	<ul style="list-style-type: none"> Temperature of expansion valve inlet is extremely low as compared with areas near liquid tank. Expansion valve inlet may be frosted. Temperature difference occurs somewhere in high-pressure side 	High-pressure pipe located between liquid tank and expansion valve is clogged.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check lubricant for contamination.
	Expansion valve and liquid tank are warm or only cool when touched.	Low refrigerant charge ↓ Leaking fittings or components	Check refrigerant for leaks. Refer to ATC-160, "Checking for Refrigerant Leaks" .
	There is a big temperature difference between expansion valve inlet and outlet while the valve itself is frosted.	Expansion valve closes a little compared with the specification. ↓ 1. Improper expansion valve adjustment 2. Malfunctioning expansion valve 3. Outlet and inlet may be clogged.	<ul style="list-style-type: none"> Remove foreign particles by using compressed air. Replace expansion valve. Check lubricant for contamination.
	An area of the low-pressure pipe is colder than areas near the evaporator outlet.	Low-pressure pipe is clogged or crushed.	<ul style="list-style-type: none"> Check and repair malfunctioning parts. Check lubricant for contamination.
	Air flow volume is not enough or is too low.	Evaporator is frozen.	<ul style="list-style-type: none"> Check intake sensor circuit. Refer to ATC-117, "Intake Sensor Circuit" (With diesel engine) Replace compressor. Repair evaporator fins. Refer to ATC-82, "Blower Motor Circuit".

A

B

C

D

E

F

G

H

I

ATC


K

L


M

TROUBLE DIAGNOSIS

Low-pressure Side Sometimes Becomes Negative

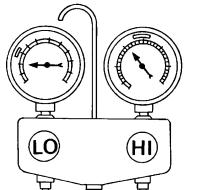Gauge indication	Refrigerant cycle	Probable cause	Corrective action
Low-pressure side sometimes becomes negative. 	<ul style="list-style-type: none"> ● Air conditioning system does not function and does not cyclically cool the compartment air. ● The system constantly functions for a certain period of time after compressor is stopped and restarted. 	Refrigerant does not discharge cyclically. ↓ Moisture is frozen at expansion valve outlet and inlet. ↓ Water is mixed with refrigerant.	<ul style="list-style-type: none"> ● Drain water from refrigerant or replace refrigerant. ● Replace liquid tank.

Low-pressure Side Becomes Negative

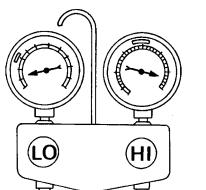Gauge indication	Refrigerant cycle	Probable cause	Corrective action
Low-pressure side becomes negative. 	Liquid tank or front/rear side of expansion valve's pipe is frosted or dewed.	High-pressure side is closed and refrigerant does not flow. ↓ Expansion valve or liquid tank is frosted.	Leave the system at rest until no frost is present. Start it again to check whether or not the malfunction is caused by water or foreign particles. <ul style="list-style-type: none"> ● If water is the cause, initially cooling is okay. Then the water freezes causing a blockage. Drain water from refrigerant or replace refrigerant. ● If due to foreign particles, remove expansion valve and remove the particles with dry and compressed air (not shop air). ● If either of the above methods cannot correct the malfunction, replace expansion valve. ● Replace liquid tank. ● Check lubricant for contamination.


TROUBLE DIAGNOSIS

Insufficient Heating

EJS004H3

SYMPTOM: Insufficient heating

INSPECTION FLOW

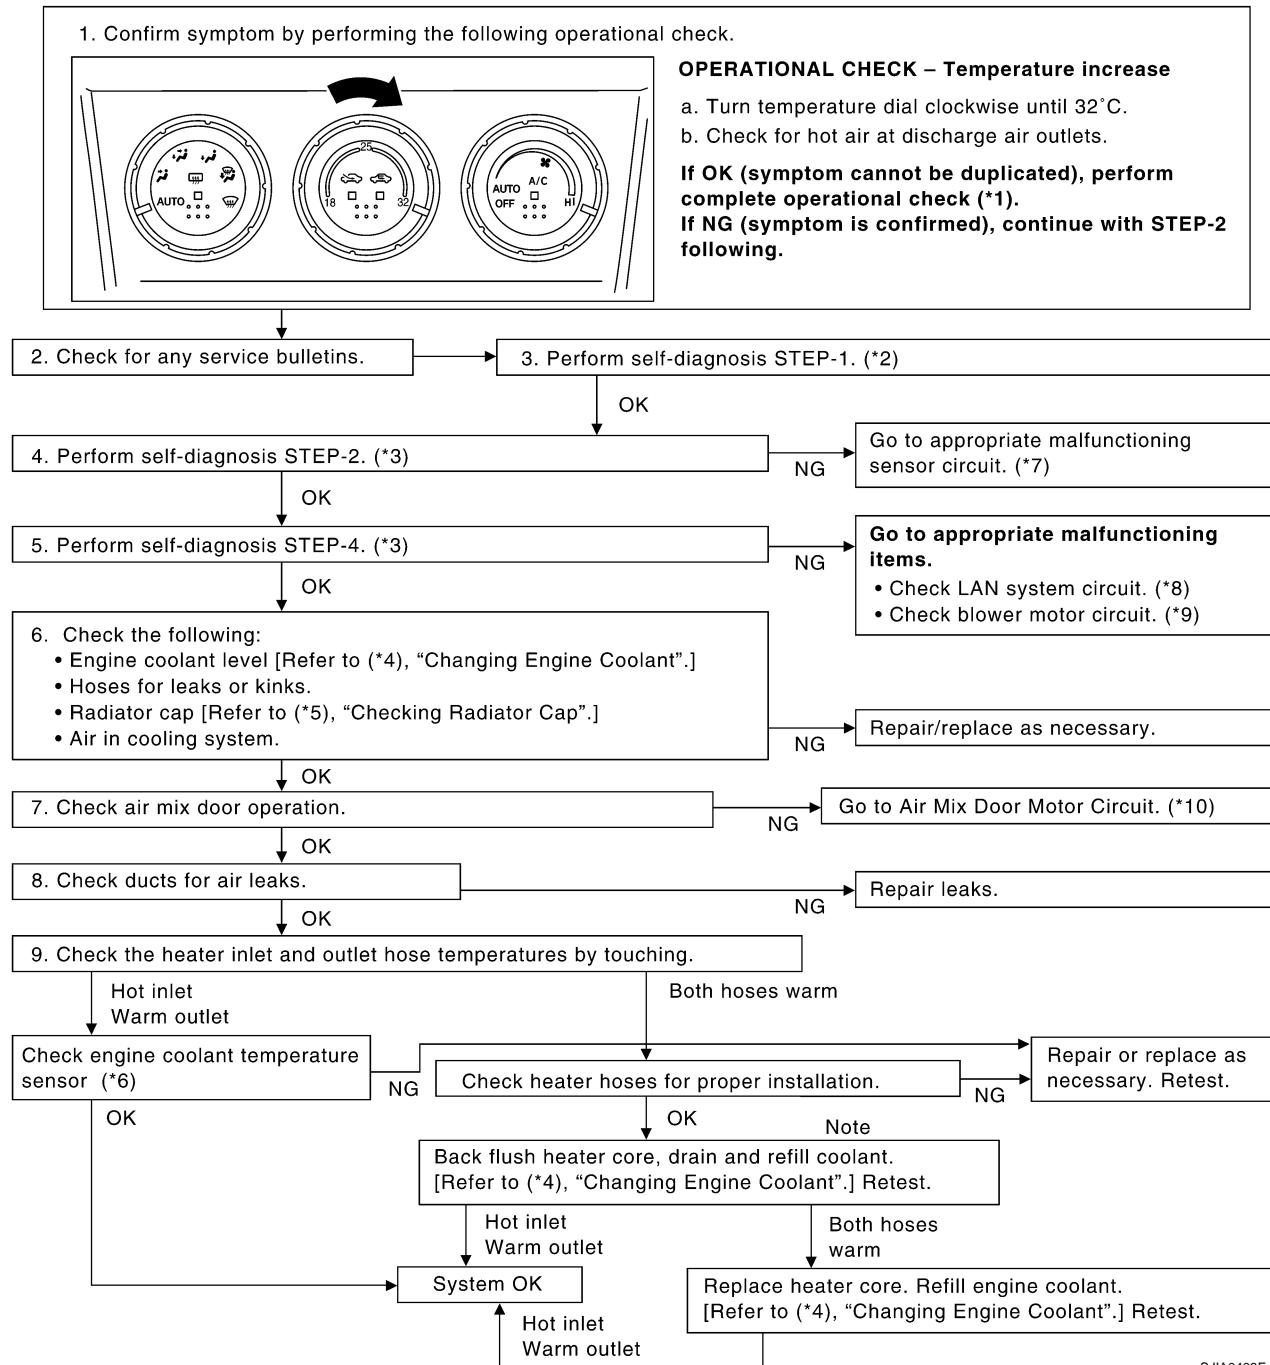

SJIA0409E

TROUBLE DIAGNOSIS

*1 ATC-65, "Operational Check".	*2 ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 1.	*3 ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 5 to 7.
*4 QR engine: CO-9, "Changing Engine Coolant" or YD engine: CO-31, "Changing Engine Coolant" .	*5 QR engine: CO-13, "Checking Radiator Cap" or YD engine: CO-35, "Checking Radiator Cap" .	*6 QR engine; (WITH EURO-OBD) EC-162, "DTC P0117, P0118 ECT SENSOR" . QR engine; (WITHOUT EURO-OBD) EC-597, "DTC P0117, P0118 ECT SENSOR" . YD engine; (WITH EURO-OBD) EC-981, "DTC P0117, P0118 ECT SENSOR" . YD engine; (WITHOUT EURO-OBD) EC-1291, "DTC P0117, P0118 ECT SENSOR" .
*7 ATC-59, "FUNCTION CONFIRMATION PROCEDURE", see No. 9.	*8 ATC-69, "LAN System Circuit".	*9 ATC-82, "Blower Motor Circuit".
*10 ATC-76, "Air Mix Door Motor Circuit".		


TROUBLE DIAGNOSIS

Noise

EJS004H4

SYMPTOM: Noise

INSPECTION FLOW

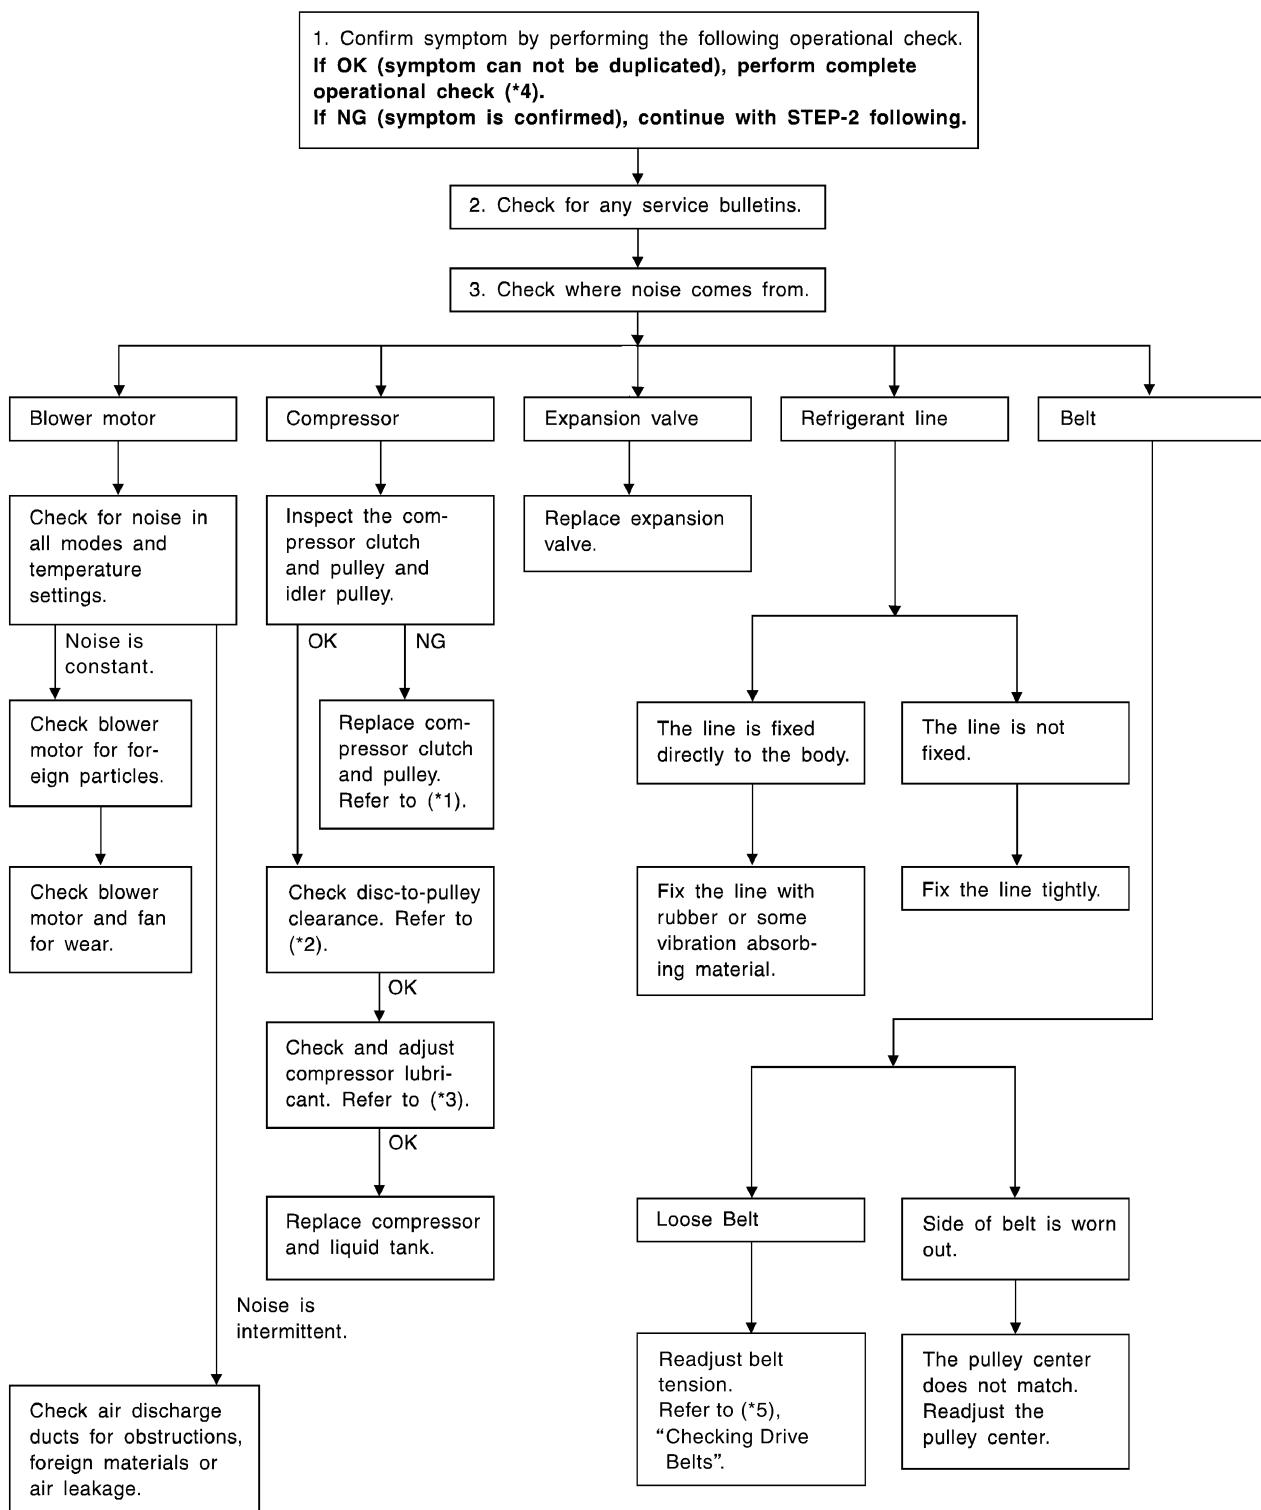

A

B

C

D

E

F

G

H

ATC

K

L

M

TROUBLE DIAGNOSIS


- *1 Compressor clutch [ATC-146, "REMOVAL"](#).
- *2 Compressor clutch [ATC-150, "INSTALLATION"](#).
- *3 [ATC-24, "Maintenance of Lubricant Quantity in Compressor"](#).
- *4 [ATC-65, "Operational Check"](#).
- *5 QR engine; [EM-13, "Checking Drive Belts"](#) or YD engine; [EM-131, "Checking Drive Belts"](#).

Self-diagnosis

EJS004H5

SYMPTOM: Self-diagnosis cannot be performed.

INSPECTION FLOW

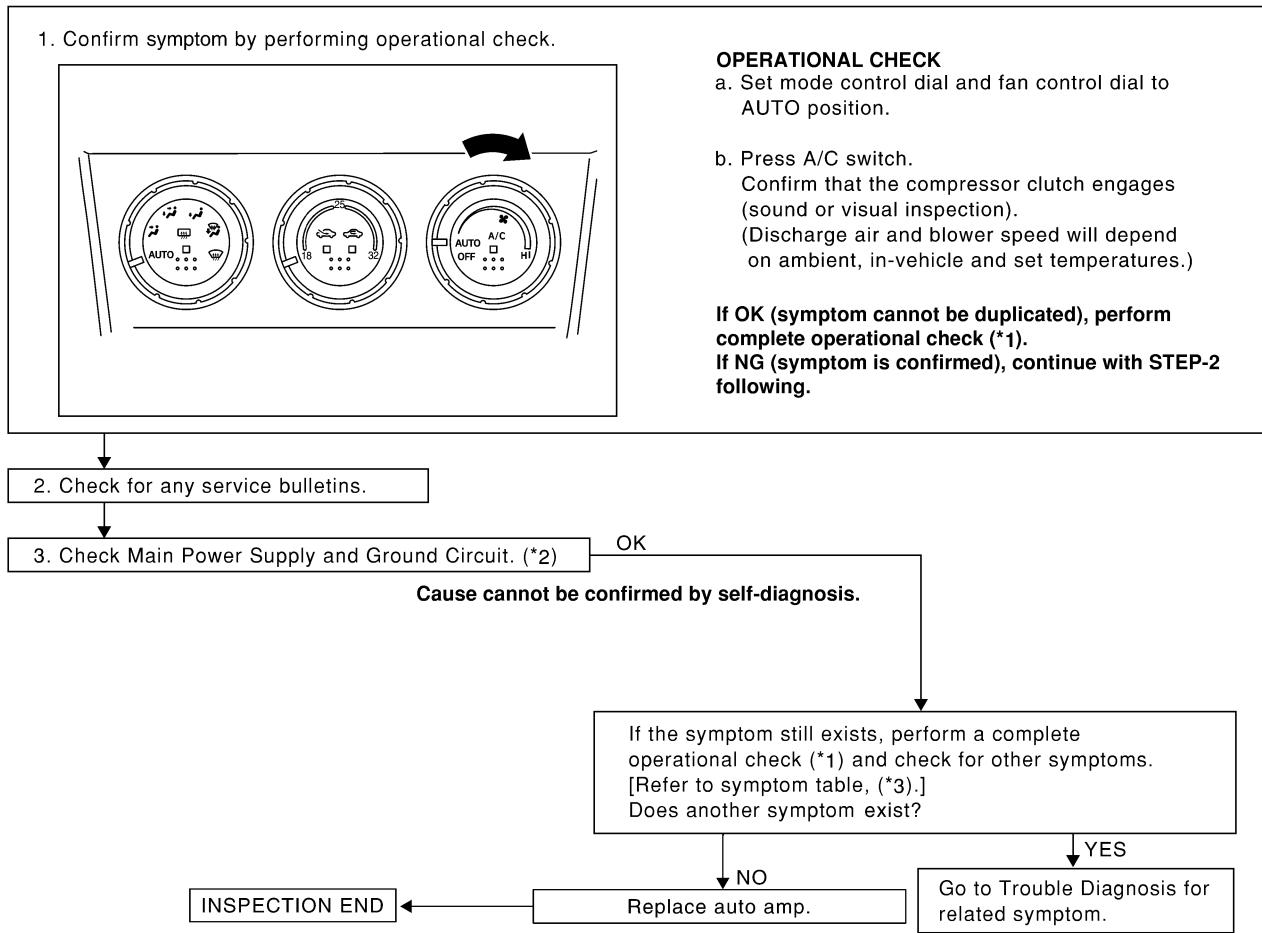

RJIA3109E

- *1 [ATC-65, "Operational Check"](#).
- *2 [ATC-67, "Power Supply and Ground Circuit for Auto Amp."](#)
- *3 [ATC-34, "SYMPOTM TABLE"](#).


TROUBLE DIAGNOSIS

Ambient Sensor Circuit COMPONENT DESCRIPTION

EJS004YP

Ambient Sensor

The ambient sensor is attached on the hood lock stay. It detects ambient temperature and converts it into a resistance value which is then input into the auto amp.

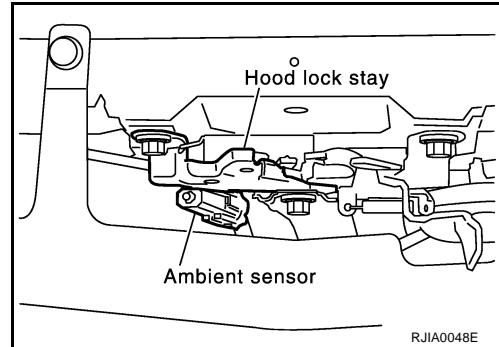

AMBIENT TEMPERATURE INPUT PROCESS


The auto amp. includes a processing circuit for the ambient sensor input. However, when the temperature detected by the ambient sensor increases quickly, the processing circuit retards the auto amp. function. It only allows the auto amp. to recognize an ambient temperature increase of 0.33°C (0.6°F) per 100 seconds.

As an example, consider stopping for a few minutes after high speed driving. Although the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase. This is because the heat from the engine compartment can radiate to the front grille area, location of the ambient sensor.

DIAGNOSTIC PROCEDURE FOR AMBIENT SENSOR

SYMPTOM: Ambient sensor circuit is open or shorted.

LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.

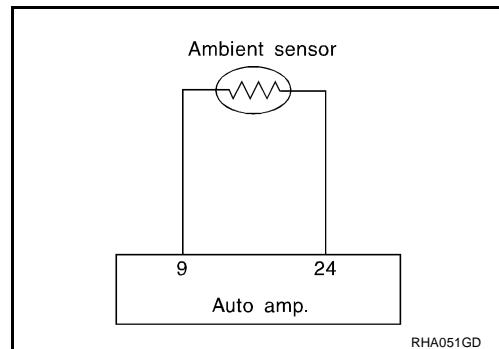

1. CHECK VOLTAGE BETWEEN AMBIENT SENSOR AND GROUND


1. Disconnect ambient sensor connector.
2. Turn ignition switch ON.
3. Check voltage between ambient sensor harness connector E38 terminal 1 (R/B) and ground.

1 – Ground

: Approx. 5V

OK or NG

OK >> GO TO 2.
NG >> GO TO 4.

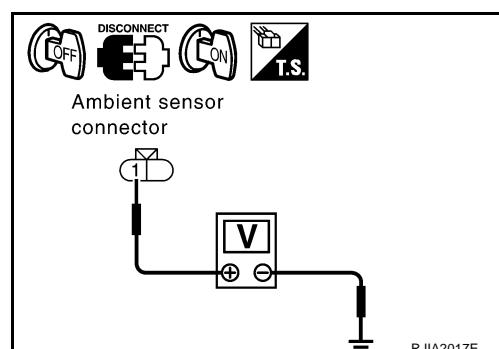

TROUBLE DIAGNOSIS

2. CHECK CIRCUIT BETWEEN CONTINUITY AMBIENT SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between ambient sensor harness connector E38 terminal 2 (B/Y) and auto amp. harness connector M53 terminal 24 (B/Y).


2 – 24

: Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

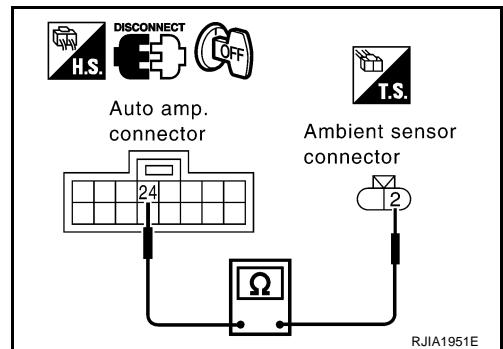

3. CHECK AMBIENT SENSOR

Refer to [ATC-111, "Ambient Sensor"](#).

OK or NG

OK >> 1. Replace auto amp.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

NG >> 1. Replace ambient sensor.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

4. CHECK CIRCUIT CONTINUITY BETWEEN AMBIENT SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between ambient sensor harness connector E38 terminal 1 (R/B) and auto amp. harness connector M52 terminal 9 (R/B).


1 – 9

: Continuity should exist.

4. Check continuity between ambient sensor harness connector E38 terminal 1 (R/B) and auto amp. harness connector M52 terminal 9 (R/B) and ground.

1 – Ground

: Continuity not should exist.

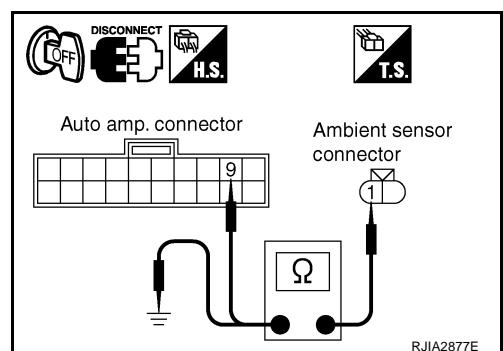

OK or NG

OK >> 1. Replace auto amp.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

NG >> Repair harness or connector.

TROUBLE DIAGNOSIS

COMPONENT INSPECTION

Ambient Sensor

After disconnecting ambient sensor connector E38, measure resistance between terminals 2 and 1 at sensor side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07


If NG, replace ambient sensor.

In-vehicle Sensor Circuit

COMPONENT DESCRIPTION

In-vehicle Sensor


The in-vehicle sensor is located on instrument driver lower panel. It converts variations in temperature of compartment air drawn from the aspirator into a resistance value. It is then input into the auto amp.

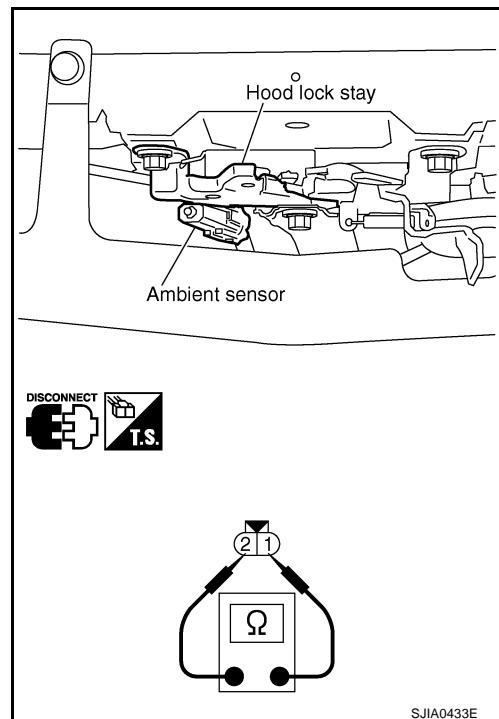


EJS004YQ

Aspirator

The aspirator is located on front side of heater & cooling unit. It produces vacuum pressure due to air discharged from the heater & cooling unit, continuously taking compartment air in the aspirator.

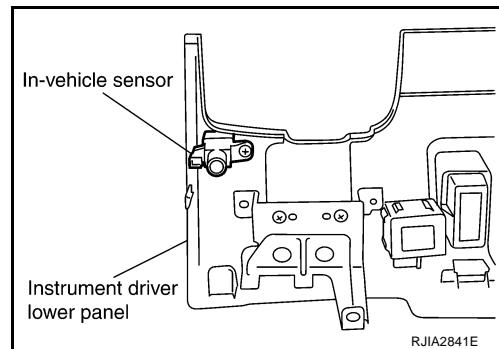


ATC

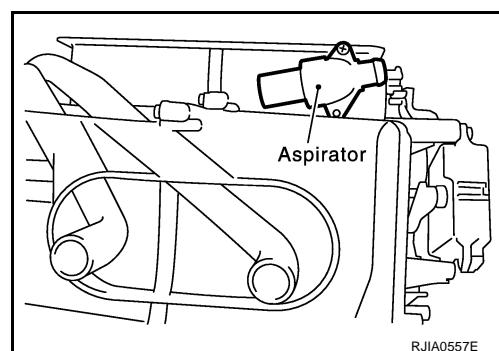

RJIA0557E


TROUBLE DIAGNOSIS

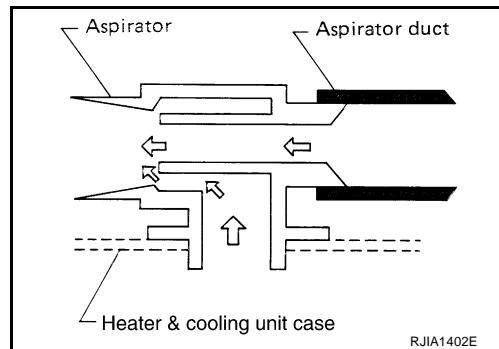

DIAGNOSTIC PROCEDURE FOR IN-VEHICLE SENSOR

SYMPTOM: In-vehicle sensor circuit is open or shorted.

LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.

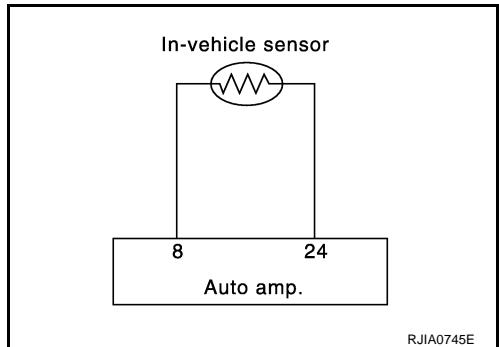


1. CHECK VOLTAGE BETWEEN IN-VEHICLE SENSOR AND GROUND

1. Disconnect in-vehicle sensor connector.
2. Turn ignition switch ON.
3. Check voltage between in-vehicle sensor harness connector M34 terminal 1 (P) and ground.

1 – Ground : Approx. 5V

OK or NG

OK >> GO TO 2.
NG >> GO TO 4.

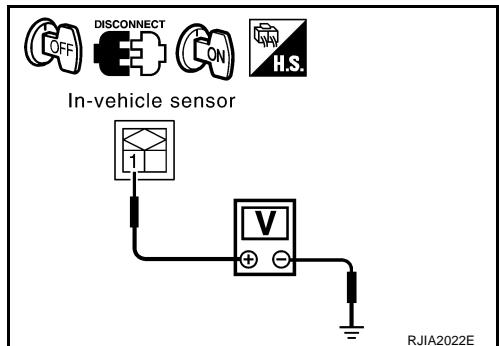


2. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between in-vehicle sensor harness connector M34 terminal 2 (B/Y) and auto amp. harness connector M53 terminal 24 (B/Y).

2 – 24 : Continuity should exist.

OK or NG

OK >> GO TO 3.
NG >> Repair harness or connector.

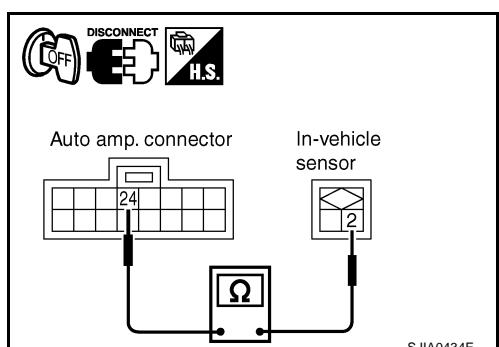

TROUBLE DIAGNOSIS

3. CHECK IN-VEHICLE SENSOR

Refer to [ATC-113, "In-vehicle Sensor"](#) .

OK or NG

OK >> 1. Replace auto amp.
 2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.


NG >> 1. Replace in-vehicle sensor.
 2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

4. CHECK CIRCUIT CONTINUITY BETWEEN IN-VEHICLE SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between in-vehicle sensor harness connector M34 terminal 1 (P) and auto amp. harness connector M52 terminal 8 (P).

1 – 8

: Continuity should exist.

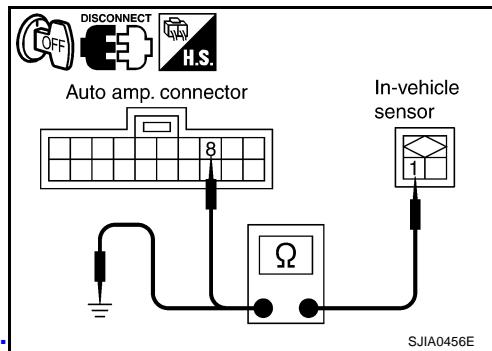

4. Check continuity between in-vehicle sensor harness connector M34 terminal 1 (P) and ground.

1 – Ground

: Continuity not should exist.

OK or NG

OK >> 1. Replace auto amp.
 2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.


NG >> Repair harness or connector.

COMPONENT INSPECTION

In-vehicle Sensor

After disconnecting in-vehicle sensor connector M34, measure resistance between terminals 1 and 2 at sensor side, using the table below.

Temperature °C (°F)	Resistance kΩ
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07

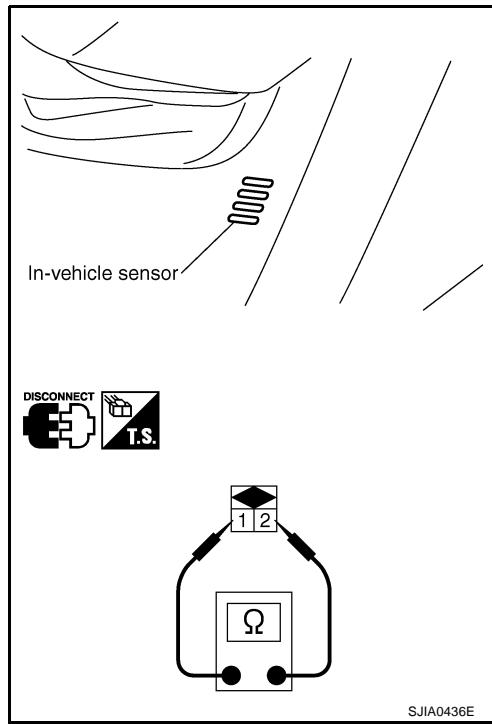


If NG, replace in-vehicle sensor.

TROUBLE DIAGNOSIS

Sunload Sensor Circuit COMPONENT DESCRIPTION

EJS004YR

The sunload sensor is located on the defroster grille (left side). It detects sunload entering through windshield by means of a photo diode. The sensor converts the sunload into a current value which is then input into the auto amp.

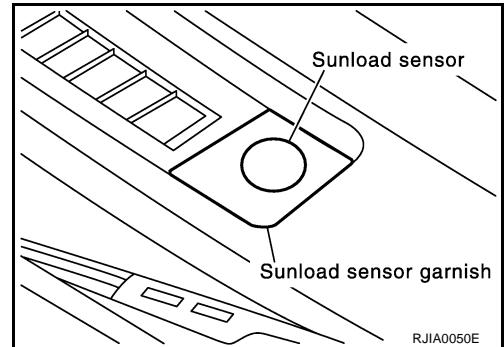

SUNLOAD INPUT PROCESS


The auto amp. also includes a processing circuit which averages the variations in detected sunload over a period of time. This prevents drastic swings in the ATC system operation due to small or quick variations in detected sunload.

For example, consider driving along a road bordered by an occasional group of large trees. The sunload detected by the sunload sensor will vary whenever the trees obstruct the sunlight. The processing circuit averages the detected sunload over a period of time, so that the (insignificant) effect of the trees momentarily obstructing the sunlight does not cause any change in the ATC system operation. On the other hand, shortly after entering a long tunnel, the system will recognize the change in sunload, and the system will react accordingly.

DIAGNOSTIC PROCEDURE FOR SUNLOAD SENSOR

SYMPTOM: Sunload sensor circuit is open or shorted.

LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.

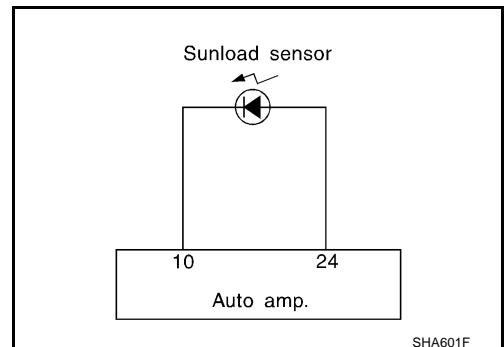

1. CHECK VOLTAGE BETWEEN SUNLOAD SENSOR AND GROUND


1. Disconnect sunload sensor connector.
2. Turn ignition switch ON.
3. Check voltage between sunload sensor harness connector M74 terminal 1 (OR) and ground.

1 – Ground

: Approx. 5V

OK or NG

OK >> GO TO 2.
NG >> GO TO 4.

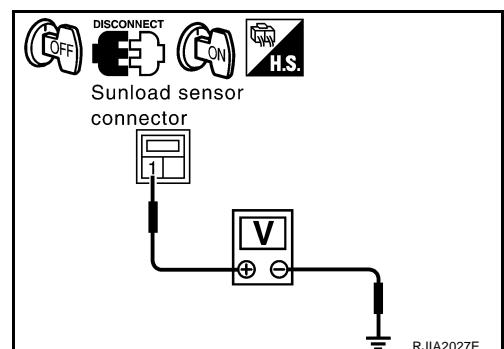

TROUBLE DIAGNOSIS

2. CHECK CIRCUIT CONTINUITY BETWEEN SUNLOAD SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between sunload sensor harness connector M74 terminal 2 (B/Y) and auto amp. harness connector M53 terminal 24 (B/Y).


2 – 24

: Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

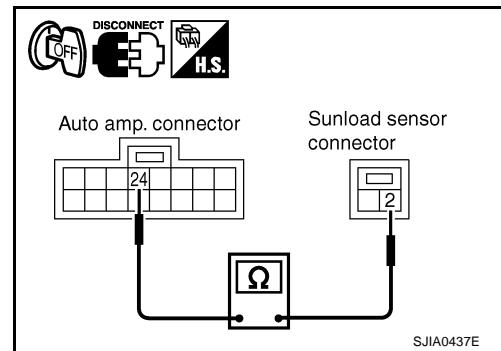

3. CHECK SUNLOAD SENSOR.

1. Reconnect sunload sensor connector and auto amp. connector.
2. Refer to [ATC-116, "Sunload Sensor"](#) .

OK or NG

OK >> 1. Replace auto amp.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

NG >> 1. Replace sunload sensor.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

4. CHECK CIRCUIT CONTINUITY BETWEEN SUNLOAD SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between sunload sensor harness connector M74 terminal 1 (OR) and auto amp. harness connector M52 terminal 10 (OR).


1 – 10

: Continuity should exist.

4. Check continuity between sunload sensor harness connector M74 terminal 1 (OR) and ground.

1 – Ground

: Continuity not should exist.

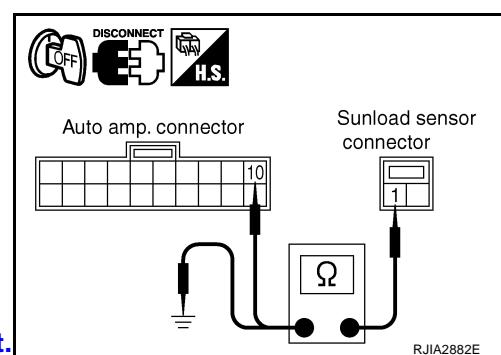

OK or NG

OK >> 1. Replace auto amp.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

NG >> Repair harness or connector.


TROUBLE DIAGNOSIS

COMPONENT INSPECTION


Sunload Sensor

Measure voltage between auto amp. harness connector M52 terminal 10 (OR) and ground.

If NG, replace sunload sensor.

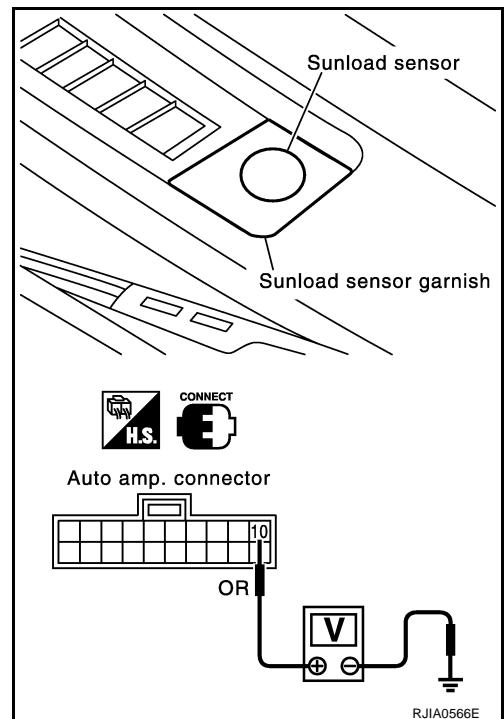

- When checking sunload sensor, select a place where sun shines directly on it.

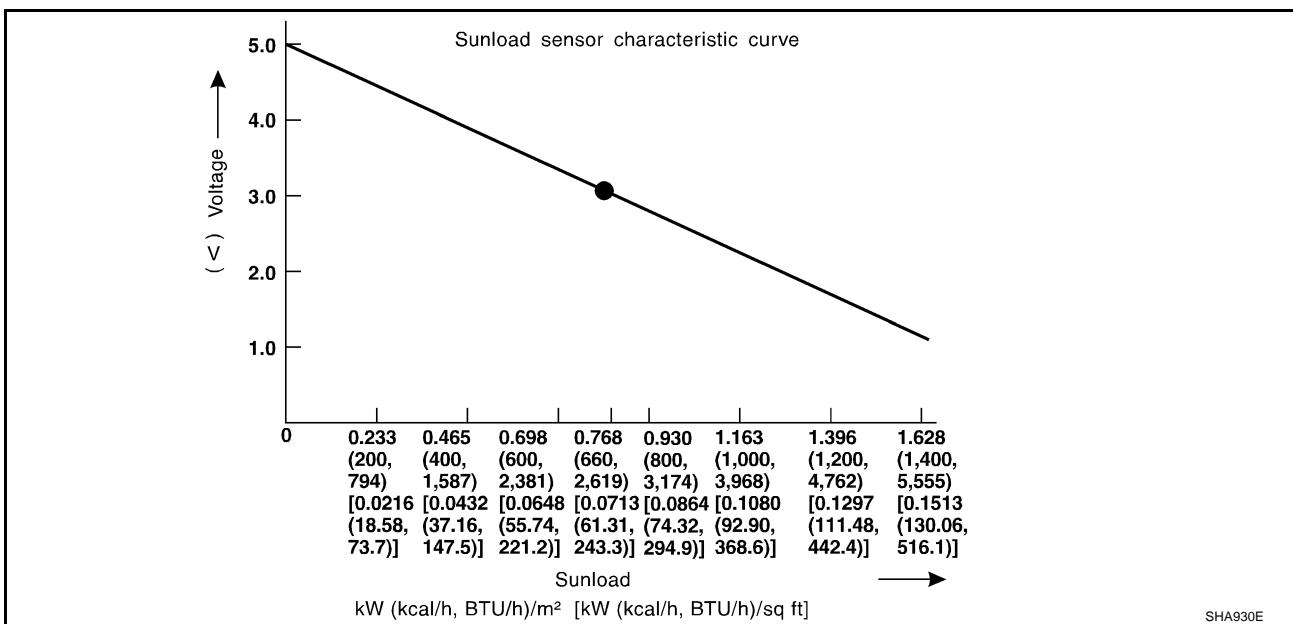


TROUBLE DIAGNOSIS

Intake Sensor Circuit COMPONENT DESCRIPTION

EJS004L6

Intake Sensor


The intake sensor is located on the heater & cooling unit. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the auto amp.

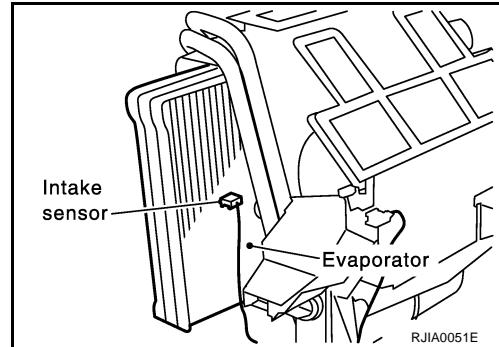

DIAGNOSTIC PROCEDURE FOR INTAKE SENSOR

SYMPTOM: Intake sensor circuit is open or shorted.

LED of A/C switch does not illuminate as a result of performing self-diagnosis STEP-2.

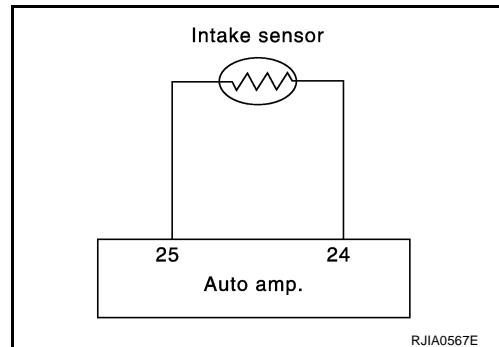

1. CHECK VOLTAGE BETWEEN INTAKE SENSOR AND GROUND


1. Disconnect intake sensor connector.
2. Turn ignition switch ON.
3. Check voltage between intake sensor harness connector M68 (Gasoline engine) or M69 (Diesel engine) terminal 1 (BR/Y) and ground.

ATC

K

L

M

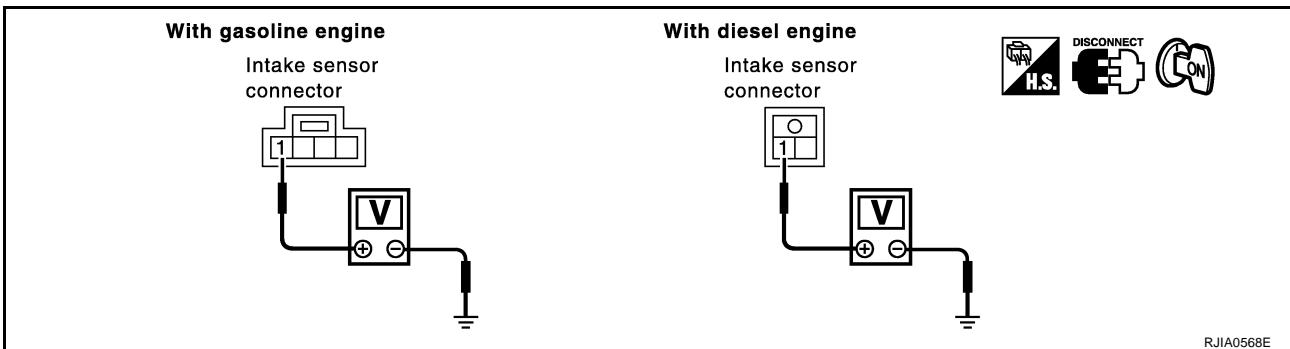

1 – Ground

: Approx. 5V


OK or NG

OK >> GO TO 2.
NG >> GO TO 4.

TROUBLE DIAGNOSIS

2. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between intake sensor harness connector M68 (Gasoline engine) or M69 (Diesel engine) terminal 2 (B/Y) and auto amp. harness connector M53 terminal 24 (B/Y).

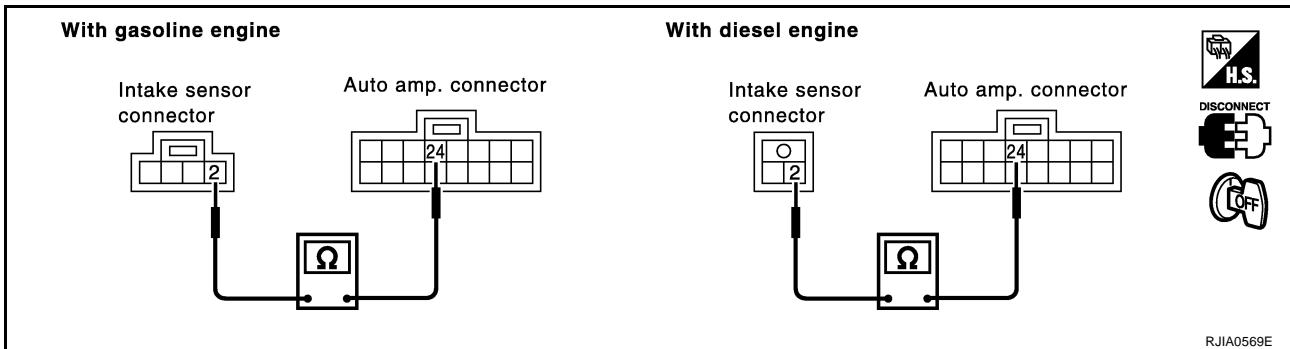

2 – 24

: Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK INTAKE SENSOR

Refer to [ATC-119, "Intake Sensor"](#) .

OK or NG

OK >> 1. Replace auto amp.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.


NG >> 1. Replace intake sensor.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.

TROUBLE DIAGNOSIS

4. CHECK CIRCUIT CONTINUITY BETWEEN INTAKE SENSOR AND AUTO AMP.

1. Turn ignition switch OFF.
2. Disconnect auto amp. connector.
3. Check continuity between intake sensor harness connector M68 (Gasoline engine) or M69 (Diesel engine) terminal 1 (BR/Y) and auto amp. harness connector M53 terminal 25 (BR/Y).

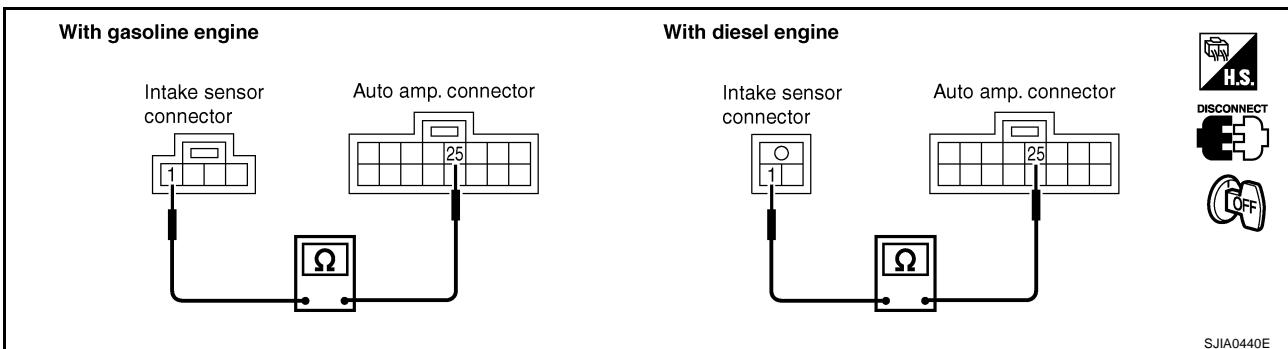

1 – 25

: Continuity should exist.

OK or NG

OK >> 1. Replace auto amp.

2. Go to self-diagnosis [ATC-59, "FUNCTION CONFIRMATION PROCEDURE"](#) and perform self-diagnosis STEP-2.


NG >> Repair harness or connector.

COMPONENT INSPECTION

Intake Sensor

After disconnecting intake sensor connector M68 (Gasoline engine) or M69 (Diesel engine), measure resistance between terminals 1 and 2 at sensor side, using the table below.

Temperature °C (°F)	Resistance kΩ	
	With gasoline engine	With diesel engine
-15 (5)	12.34	18.63
-10 (14)	9.62	14.15
-5 (23)	7.56	10.86
0 (32)	6.00	8.41
5 (41)	4.80	6.58
10 (50)	3.87	5.19
15 (59)	3.15	4.12
20 (68)	2.57	3.30
25 (77)	2.12	2.67
30 (86)	1.76	2.17
35 (95)	1.47	1.78
40 (104)	1.23	1.46
45 (113)	1.04	1.21

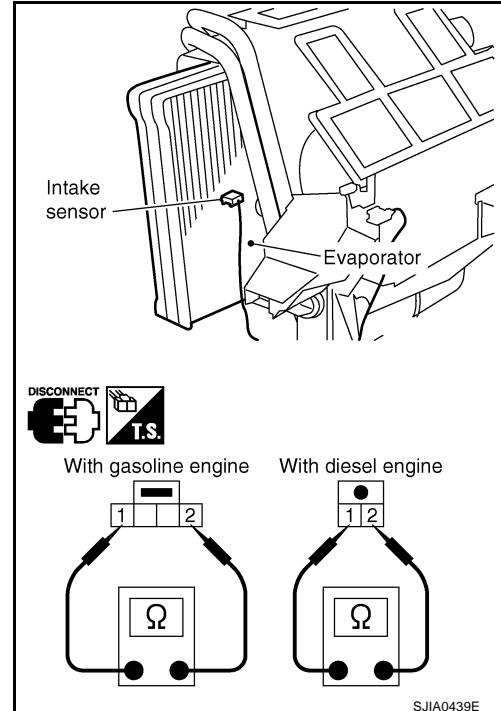

If NG, replace intake sensor.

CONTROLLER


CONTROLLER

PFP:27500

Removal and Installation REMOVAL

EJS004GD

1. Remove cluster lid C. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove fixing screws, and then remove controller.

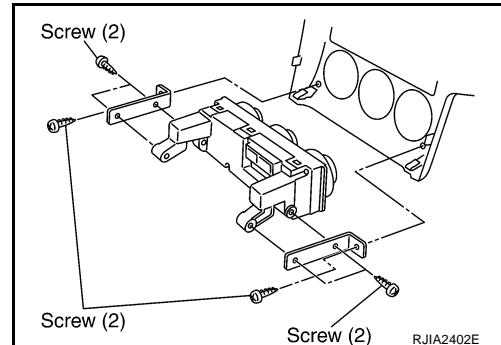

INSTALLATION

Installation is basically the reverse order of removal.

AMBIENT SENSOR


PFP:27722

Removal and Installation

EJS004GA

REMOVAL

1. Remove front grille. Refer to [EI-19, "FRONT GRILLE"](#) .
2. Disconnect ambient sensor connector, and then remove ambient sensor.

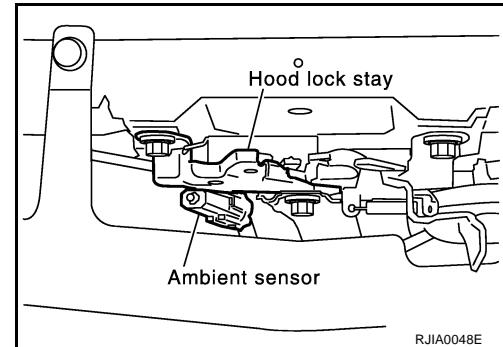

INSTALLATION

Installation is basically the reverse order of removal.

A

B

C

D

E

F

G

H

I

ATC

K

L

M


IN-VEHICLE SENSOR

PFP:27720

Removal and Installation REMOVAL

EJS004GB

1. Remove instrument driver lower panel. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove mounting screw, and then remove in-vehicle sensor.

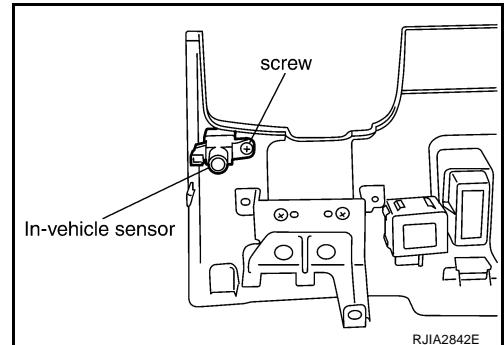

INSTALLATION

Installation is basically the reverse order of removal.

SUNLOAD SENSOR


PFP:27721

Removal and Installation

EJS004GC

REMOVAL

1. Remove sunload sensor garnish.
2. Disconnect sunload sensor connector, and then remove sunload sensor.

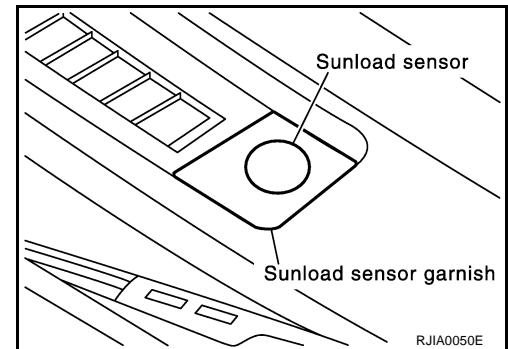

INSTALLATION

Installation is basically the reverse order of removal.

A

B

C

D

E

F

G

H

I

ATC

K

L

M


INTAKE SENSOR

PFP:27723

Removal and Installation REMOVAL

EJS004GI

1. Remove evaporator. Refer to [ATC-158, "Removal and Installation of Evaporator"](#) .
2. Remove intake sensor.

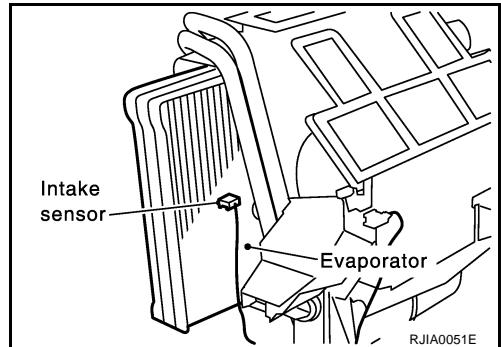

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace O-rings for A/C piping with new ones. Before installing, apply compressor oil to them.
- Make sure mounting position of intake sensor bracket.
- When recharging refrigerant, check for leaks.


BLOWER UNIT

PFP:27200

Removal and Installation


REMOVAL

1. Remove glove box assembly.
2. Remove glove box cover, instrument passenger lower panel and instrument reinforcement. Refer to [IP-11, "Removal and Installation"](#).
3. Remove ECM with ECM bracket attached.
4. Remove instrument panel mounting screw.
5. Remove blower unit mounting bolt and screws.
6. Disconnect blower motor connector and fan control amp. connector.
7. Disconnect intake door motor connector and harness clip.
8. Remove blower unit.

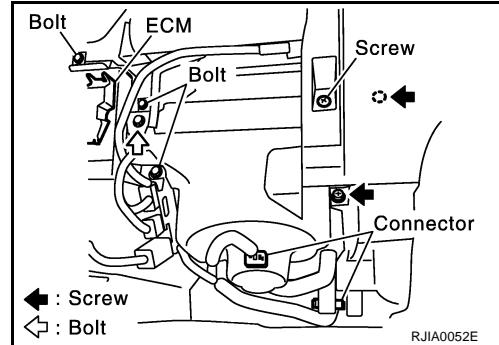

CAUTION:

Slide the blower unit toward the right, remove location pins (2 pieces), and then move it downward.

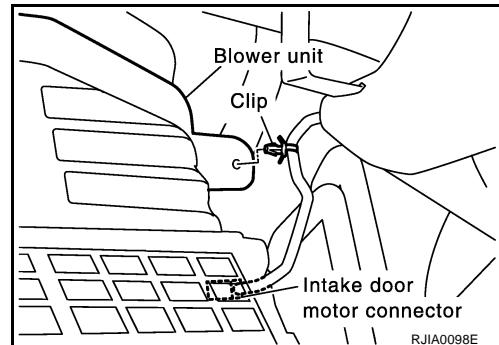

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

Make sure location pins (2 pieces) are securely installed.

A
B
C
D
E
F
G
H
I
K
L
M

ATC


BLOWER UNIT

Disassembly and Assembly

EJS000UM

NOTE:

This illustration is for RHD models. The layout for LHD models is symmetrically opposite.

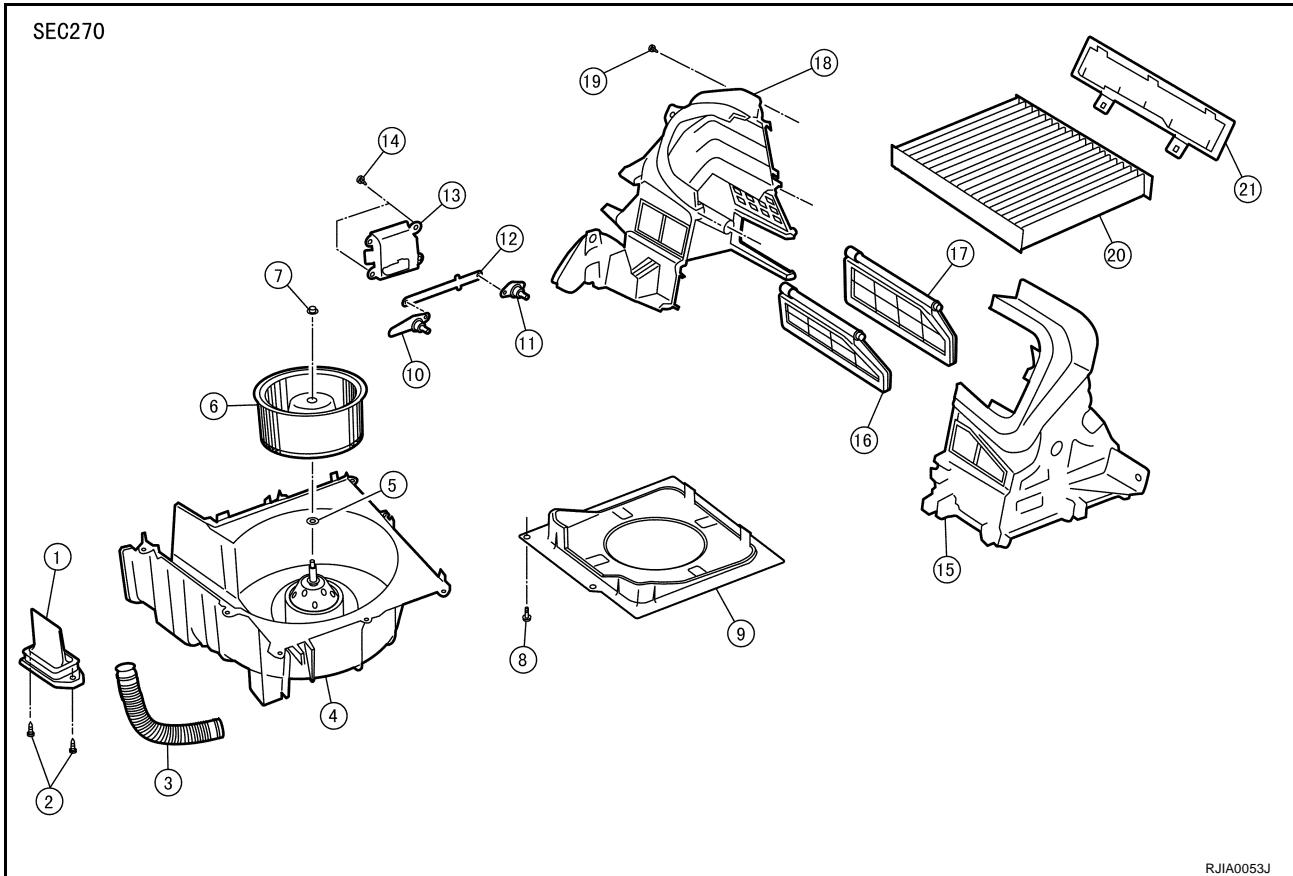


RJIA0053J

1. Fan control amplifier	2. Screw	3. Cooling hose
4. Blower motor assembly	5. Washer	6. Blower fan
7. Nut	8. Screw	9. Bell mouth
10. Intake door lever 2	11. Intake door lever 1	12. Intake door link
13. Intake door motor	14. Screw	15. Upper case 2
16. Intake door 2	17. Intake door 1	18. Upper case 1
19. Screw	20. Ventilation air filter	21. Filter cover

CAUTION:

If retaining tabs are damaged while disassembling blower unit, use 9 screws (27111-2Y000) to assemble blower unit.

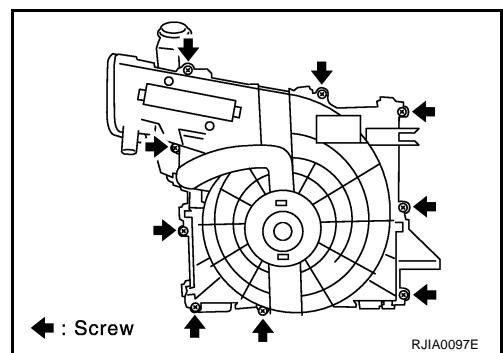


BLOWER MOTOR

PFP:27226


Removal and Installation REMOVAL

EJS004GH

1. Remove blower unit. Refer to [ATC-125, "BLOWER UNIT"](#) .
2. Separate blower unit.

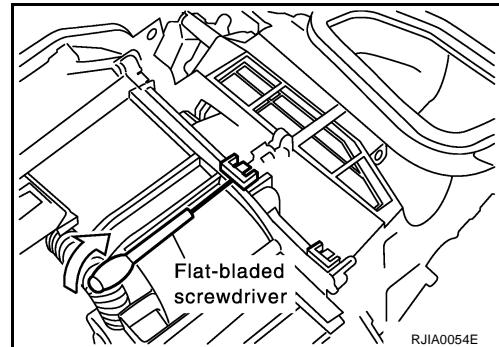

3. Remove cooling hose, fan control amp. and blower fan.

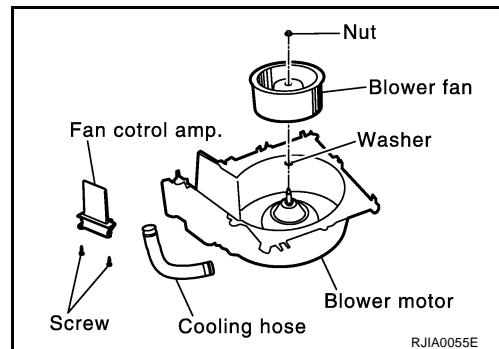


INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

If retaining tabs are damaged while disassembling blower unit, use 9 screws (27111-2Y000) to assemble blower unit.

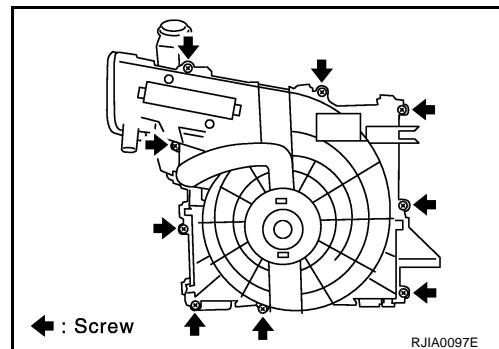

A
B
C
D
E
F
G
H
I

ATC

K
L
M

INTAKE DOOR MOTOR



INTAKE DOOR MOTOR

PFP:27730

Removal and Installation REMOVAL

EJS004GL

1. Remove blower unit. Refer to [ATC-125, "BLOWER UNIT"](#) .
2. Remove mounting screws, and then intake door motor from blower unit.

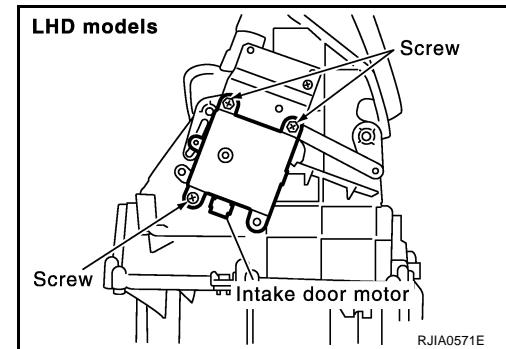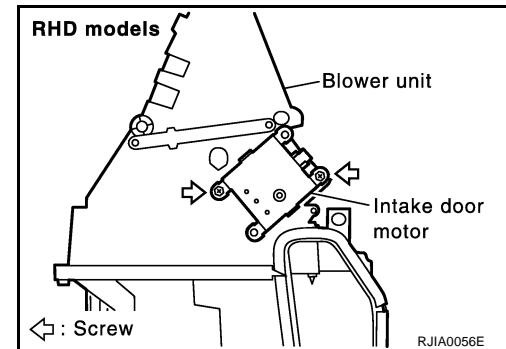

INSTALLATION

Installation is basically the reverse order of removal.

FAN CONTROL AMPLIFIER


FAN CONTROL AMPLIFIER

PFP:27761

Removal and Installation

REMOVAL

1. Remove blower unit. Refer to [ATC-125, "BLOWER UNIT"](#) .
2. Remove mounting screws, and then remove fan control amp.

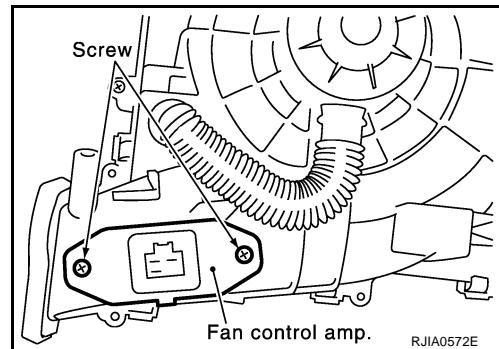

INSTALLATION

Installation is basically the reverse order of removal.

A

B

C

D

E

F

G

H

I

ATC

K

L

M

VENTILATION AIR FILTER


VENTILATION AIR FILTER

PFP:27277

Removal and Installation FUNCTION

EJS000UP

Air inside passenger compartment is kept clean at either recirculation or fresh mode by installing ventilation air filter into blower unit.

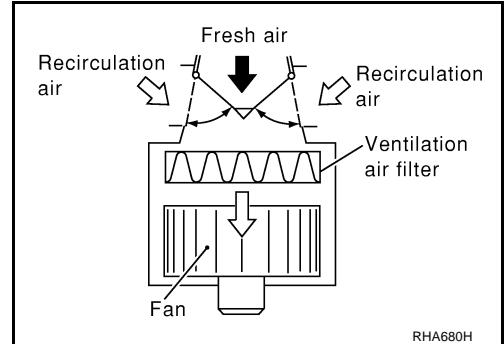


REPLACEMENT TIMING

Refer to [MA-7, "Periodic Maintenance"](#) .

REPLACEMENT PROCEDURES

1. Remove glove box.
2. Remove filter cover.
3. Take out ventilation air filter from blower unit.
4. Replace with new one and reinstall on blower unit.
5. Reinstall the glove box.

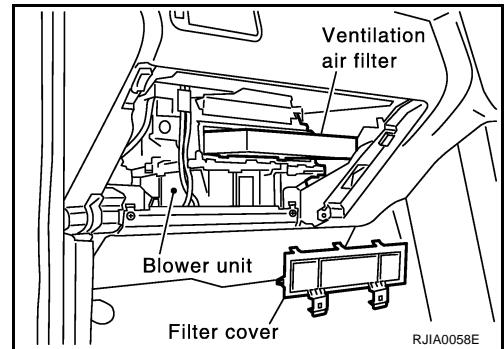

HEATER & COOLING UNIT ASSEMBLY

PFP:27110

Removal and Installation


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge refrigerant.
2. Drain coolant from cooling system. Refer to [CO-9, "Changing Engine Coolant"](#) for QR engine or [CO-31, "Changing Engine Coolant"](#) for YD engine.
3. Disconnect two heater hoses from heater core pipe.
4. Remove mounting bolt from low-pressure flexible hose.


CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.


5. Remove the blower unit. Refer to [ATC-125, "BLOWER UNIT"](#).
6. Remove clips of vehicle harness from steering member.

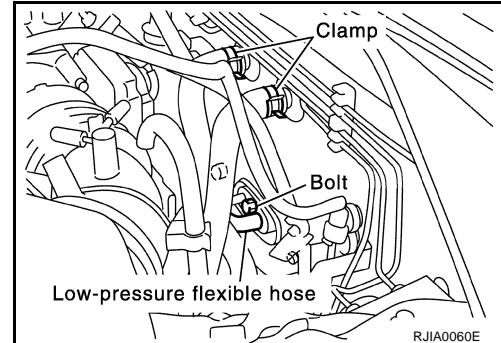

7. Remove mounting nuts, and then remove instrument stay.

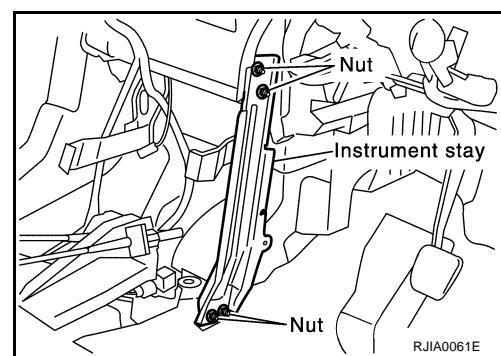

8. Remove mounting bolts from heater & cooling unit.

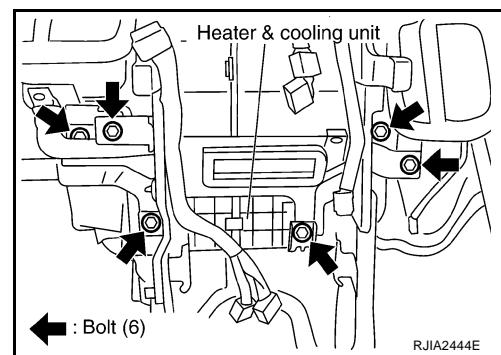


A
B
C
D
E
F
G
H
I
J
K
L
M

ATC

HEATER & COOLING UNIT ASSEMBLY

9. Remove steering member.

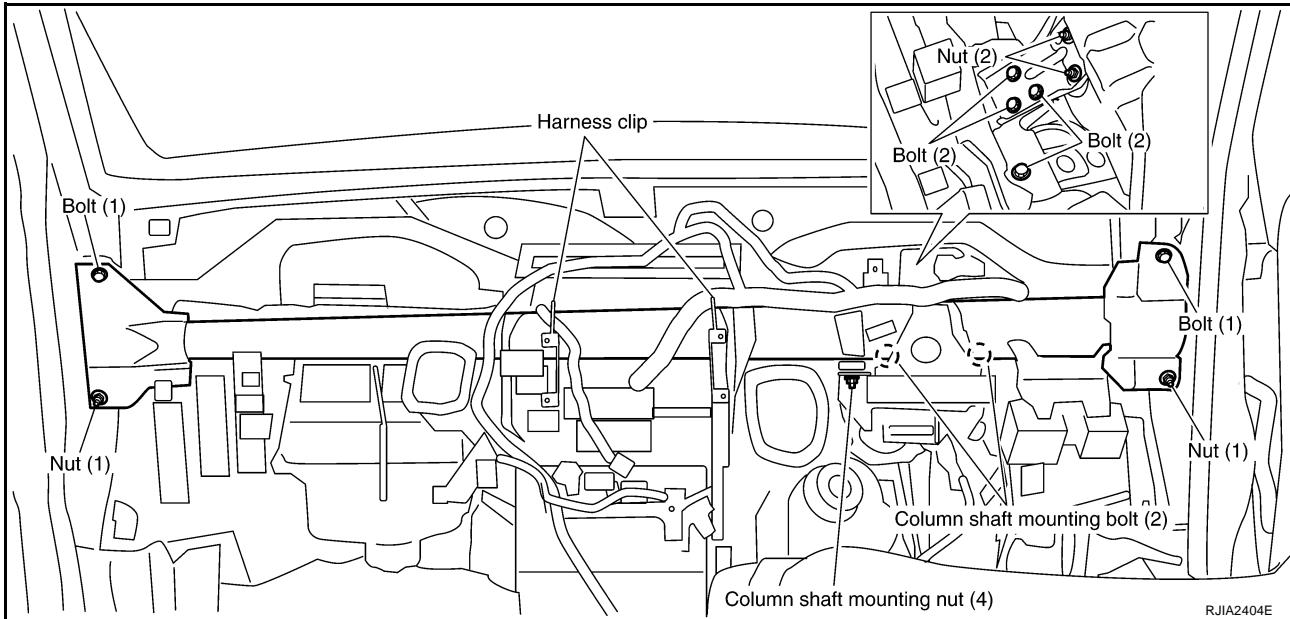

10. Remove heater & cooling unit.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-ring of the low-pressure flexible hose and the high-pressure pipe with a new one, and then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

NOTE:

When filling radiator with coolant, refer to [CO-9, "Changing Engine Coolant"](#) for QR engine or [CO-31, "Changing Engine Coolant"](#) for YD engine.


Disassembly and Assembly

EJS000UU

NOTE:

This illustration is for RHD models. The layout for LHD models is symmetrically opposite.

HEATER & COOLING UNIT ASSEMBLY

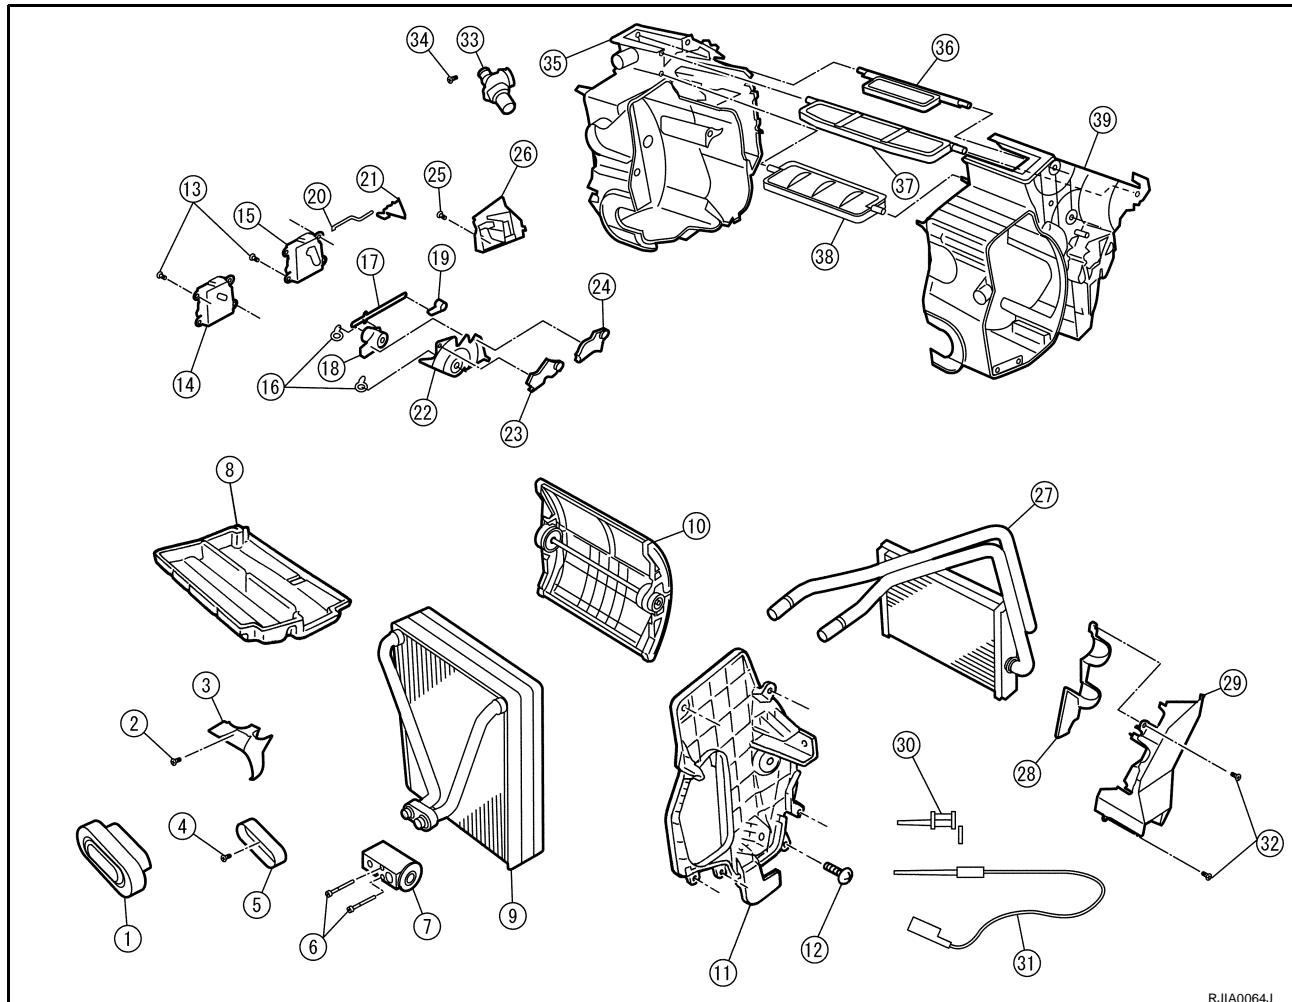

RJIA0064J

ATC

1. Cooler grommet	2. Screw	3. Heater pipe support
4. Screw	5. Expansion valve cover	6. Bolt
7. Expansion valve	8. Insulator	9. Evaporator
10. Slide door unit (Air mix door)	11. Evaporator cover	12. Screw
13. Screw	14. Air mix door motor	15. mode door motor
16. Screw	17. Ventilator door link 1	18. Ventilator door link 2
19. Ventilator door lever	20. Rod	21. Rod holder
22. Main link	23. Max. cool door lever	24. Defroster door lever
25. Screw	26. Foot duct (right)	27. Heater core
28. Heater core cover	29. Foot duct (left)	30. Intake sensor bracket
31. Intake sensor	32. Screw	33. Aspirator
34. Screw	35. Heater & cooling unit case (right)	36. Defroster door
37. Ventilator door	38. Max. cool door	39. Heater & cooling unit case (left)

A
B
C
D
E
F
G
H
I

K
L
M

MODE DOOR MOTOR



MODE DOOR MOTOR

PFP:27731

Removal and Installation REMOVAL

EJS004GN

1. Remove rod from rod holder.
2. Remove mounting screws, and then remove mode door motor.
3. Disconnect mode door motor connector.

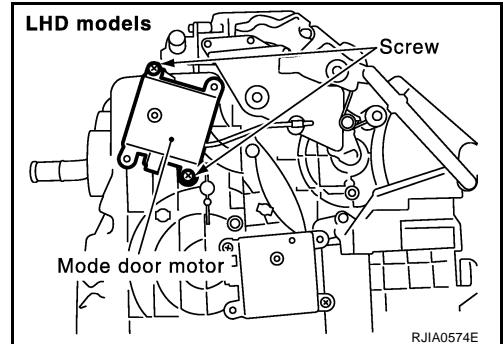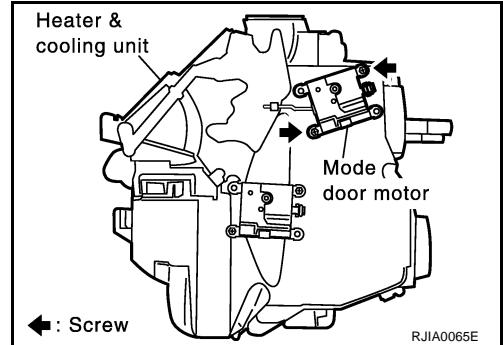

INSTALLATION

1. Install rod to mode door.
2. Reconnect mode door motor connector.
3. Install mode door motor.
4. Turn ignition switch ON.
5. Turn mode control dial to VENT position.
6. Turn side link clockwise, and then install rod to rod holder.



AIR MIX DOOR MOTOR

PFP:27732

Removal and Installation

REMOVAL

1. Set the temperature control dial at 18°C.
2. Disconnect the battery negative cable.
3. Disconnect air mix door motor connector.
4. Remove mounting screws, and then remove air mix door motor.

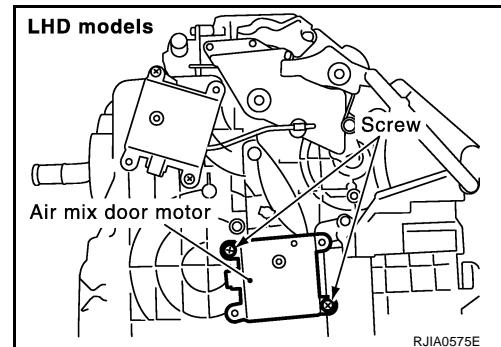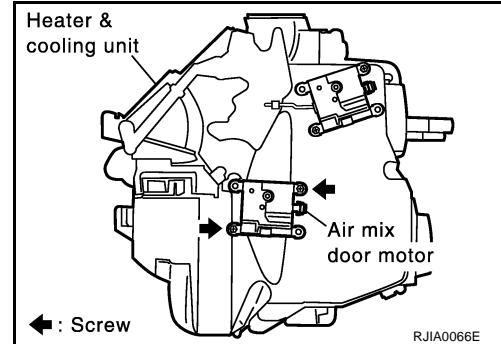

INSTALLATION

Installation is basically the reverse order of removal.

ATC

K

L

M


HEATER CORE

PFP:27140

Removal and Installation REMOVAL

EJS004GJ

1. Remove heater & cooling unit. Refer to [ATC-131, "HEATER & COOLING UNIT ASSEMBLY"](#) .
2. Remove heater pipe support.
3. Remove mounting screws, and then remove foot duct and heater core cover.
4. Remove heater core from heater & cooling unit.

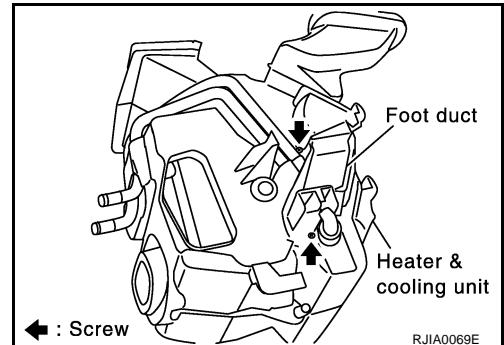

INSTALLATION

Installation is basically the reverse order of removal.

DUCTS AND GRILLES

DUCTS AND GRILLES

PFP:27860


Removal and Installation REMOVAL

EJS004GM

A
B
C
D
E
F
G
H
I
K
L
M

ATC

SEC. 273

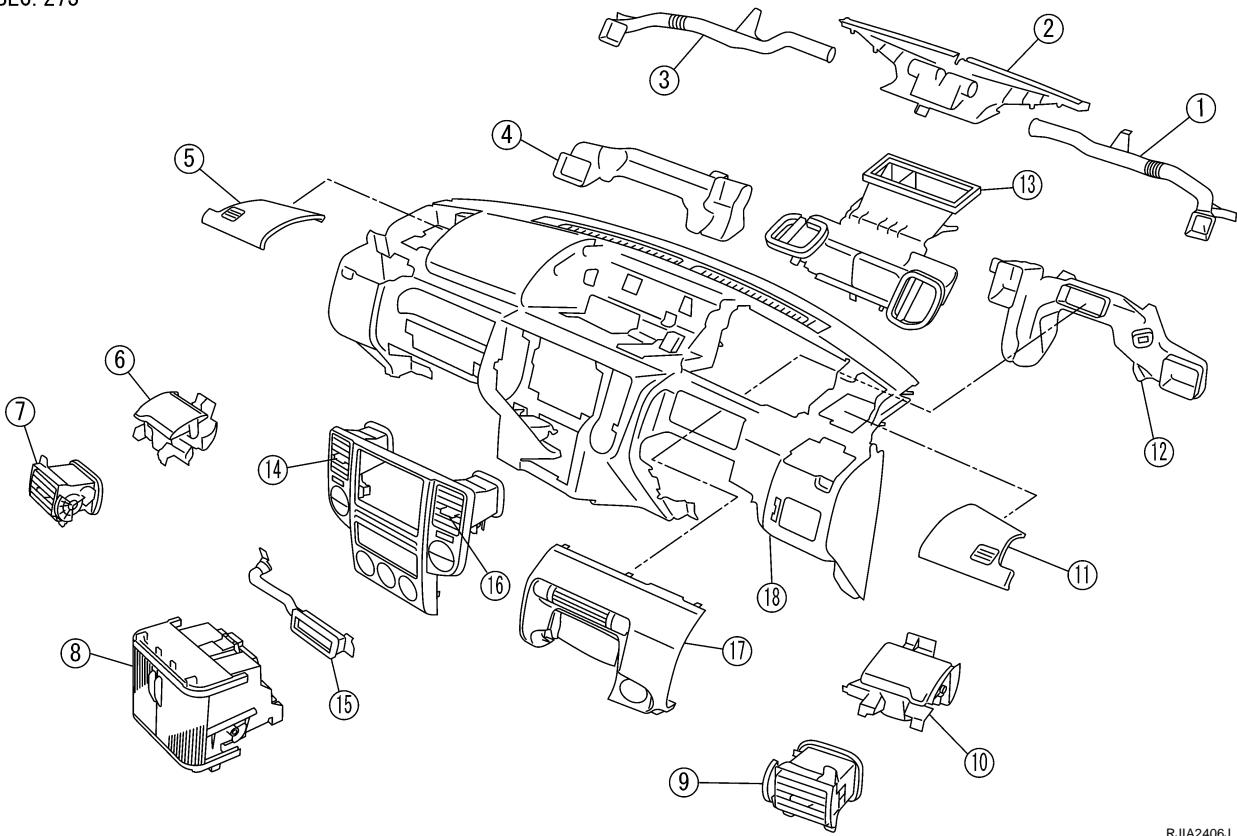

RJIA2406J


1. Side defroster duct (right)	2. Defroster nozzle	3. Side defroster duct (left)
4. Side ventilator duct (left)	5. Front speaker grille (left)	6. Cup holder (left)
7. Side ventilator grille (left)	8. Multi-box (Instrument center lower panel)	9. Side ventilator grille (right)
10. Cup holder (right)	11. Front speaker grille (right)	12. Side ventilator duct (right)
13. Adaptor	14. Center ventilator grille (left)	15. Multi-box duct
16. Center ventilator grille (right)	17. Driver ventilator grille	18. Instrument panel

NOTE:

This illustration is for RHD models. The layout for LHD models is symmetrically opposite.

Removal of Center Ventilator Grille

1. Remove cluster lid C. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove mounting clips, and then remove center ventilator grille.

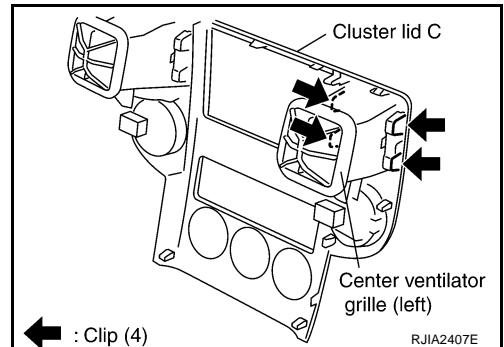


RJIA2407E

DUCTS AND GRILLES


Removal of Side Ventilator Grille

1. Remove instrument panel. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove side ventilator ducts. Refer to [ATC-138, "Removal of Defroster Nozzle, Duct and Side Ventilator Duct"](#) .
3. Remove mounting screws, and then side ventilator grille.

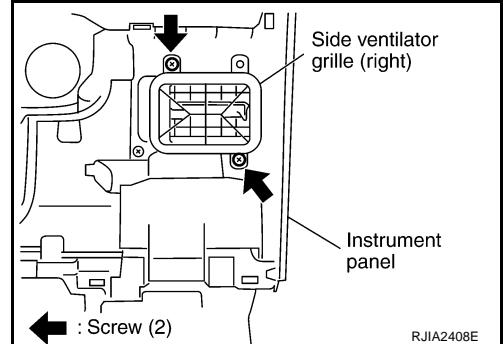


Removal of Driver Ventilator Grille

1. Remove instrument finisher. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove mounting screws, and then remove driver ventilator grille.

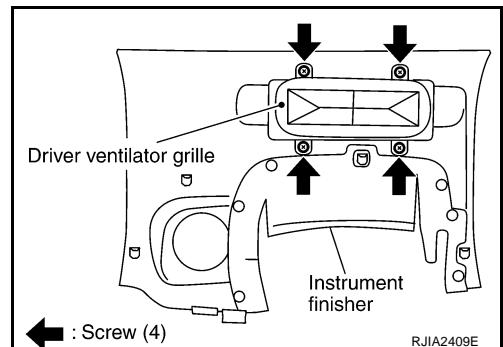

Removal of Defroster Nozzle, Duct and Side Ventilator Duct


1. Remove instrument panel. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove mounting screws, and then remove side defroster ducts with defroster nozzle.

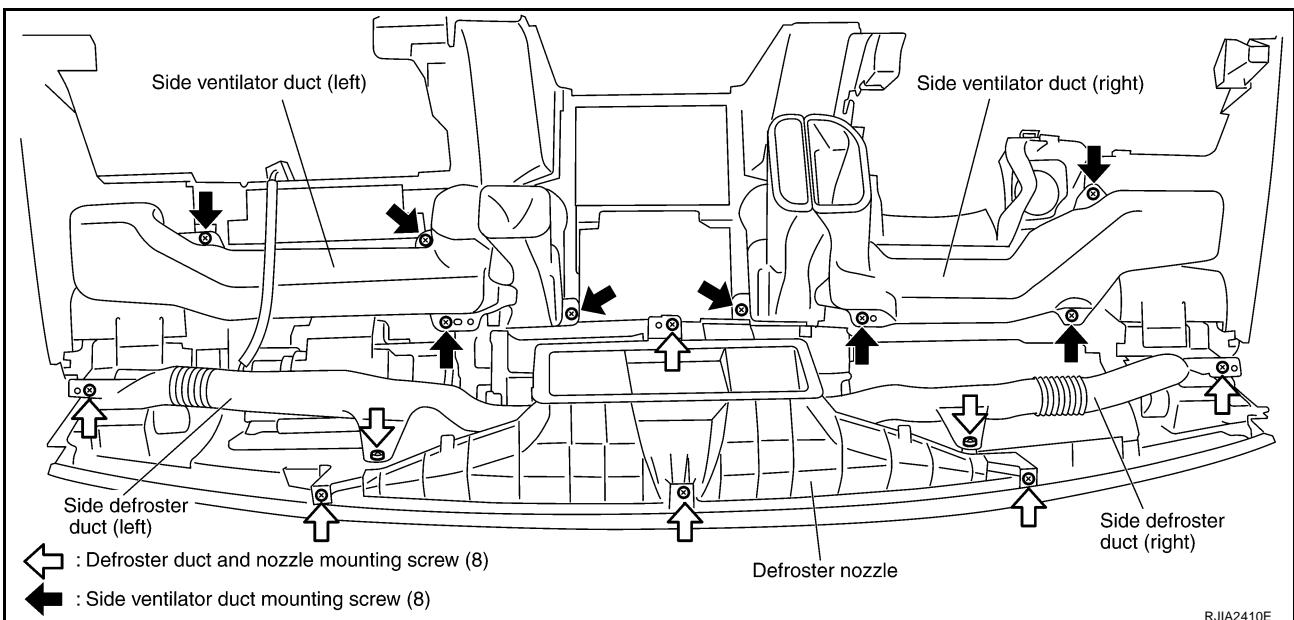

3. Remove mounting screws, and then remove side ventilator ducts.


Removal of Adaptor

1. Remove heater & cooling unit. Refer to [ATC-131, "HEATER & COOLING UNIT ASSEMBLY"](#) .
2. Remove mounting screw and clip.
3. Slide adaptor toward vehicle front, and then remove adaptor.

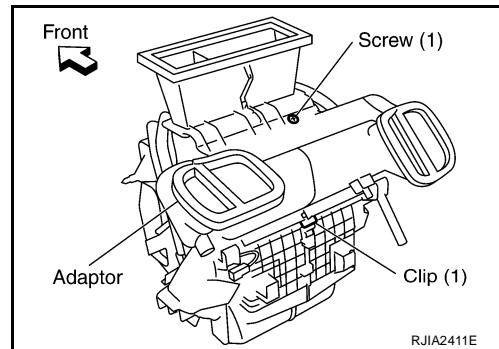


Removal of Multi-box Duct

1. Remove instrument panel. Refer to [IP-11, "Removal and Installation"](#) .
2. Remove mounting screws, and then disconnect multi-box duct from heater & cooling unit.
3. Remove mounting bolts, and then remove heater & cooling unit bracket.
4. Remove multi-box duct from left side.

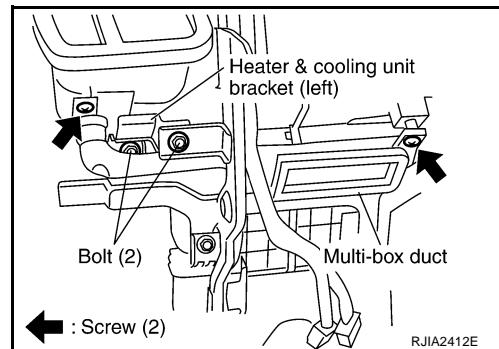

Removal of Foot Duct

1. Remove multi-box duct.
2. Remove mounting screws, and then remove foot duct.

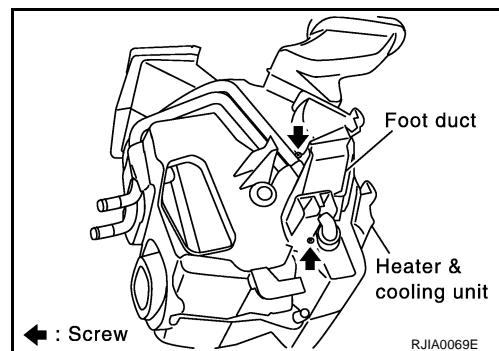

A
B
C
D
E
F
G
H
I

ATC


K
L
M

DUCTS AND GRILLES

Removal of Floor Duct


1. Remove the front seats. Refer to [SE-24, "FRONT SEAT"](#) .
2. Remove multi-box (Instrument center lower panel). Refer to [IP-11, "Removal and Installation"](#) .
3. Peel back the floor trim to a point where the floor duct is visible.
4. Remove mounting bolts and clips, then remove rear floor duct.

SEC. 273

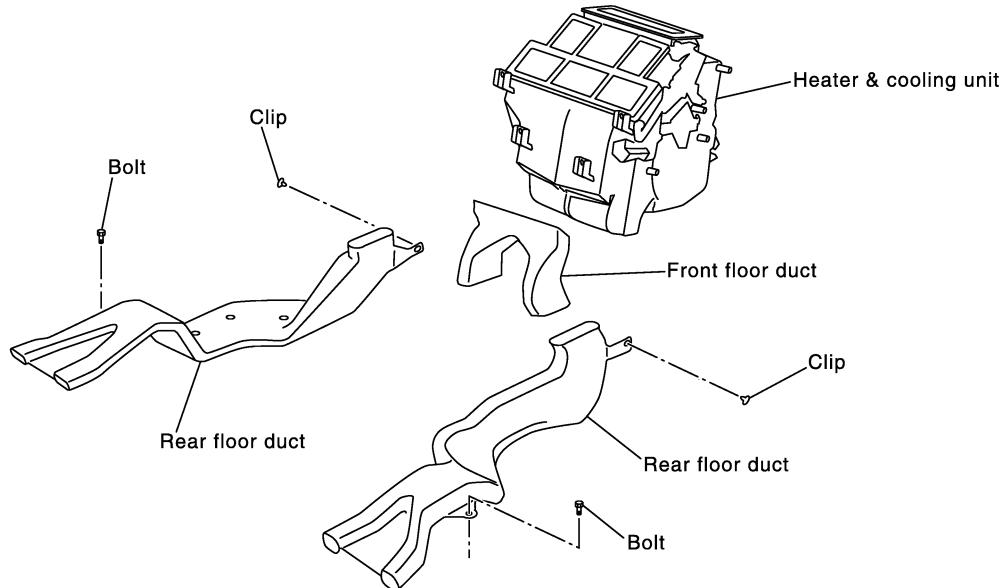

RJIA0071E

5. Remove mounting clips, and then remove front floor duct.

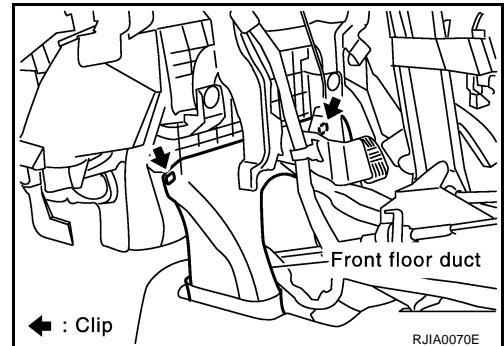

RJIA0070E

INSTALLATION

Installation is basically the reverse order of removal.

REFRIGERANT LINES

PFP:92600

HFC-134a (R-134a) Service Procedure
SETTING OF SERVICE TOOLS AND EQUIPMENT


EUS000V7

Discharging Refrigerant

WARNING:

Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Use only approved recovery/recycling equipment to discharge HFC-134a (R-134a) refrigerant. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.

Example

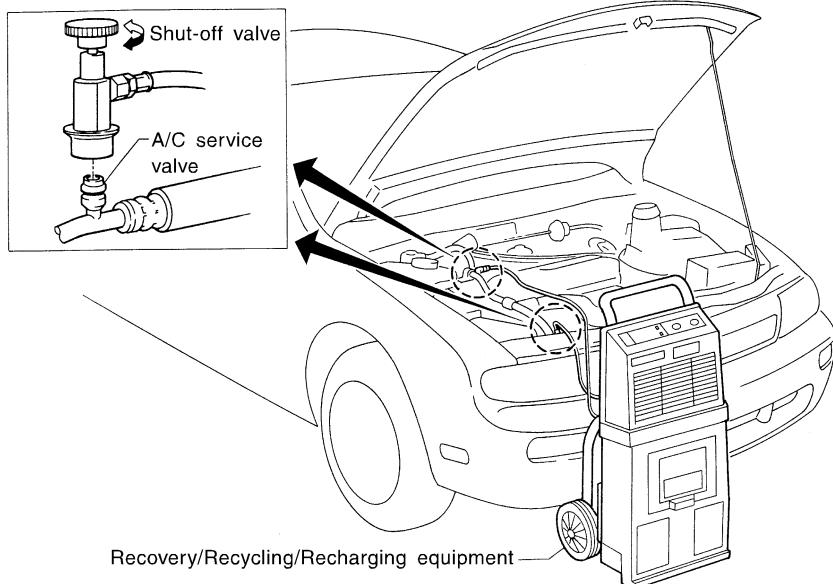


SHA539DE

Evacuating System and Charging Refrigerant


Example

Preferred (Best) method

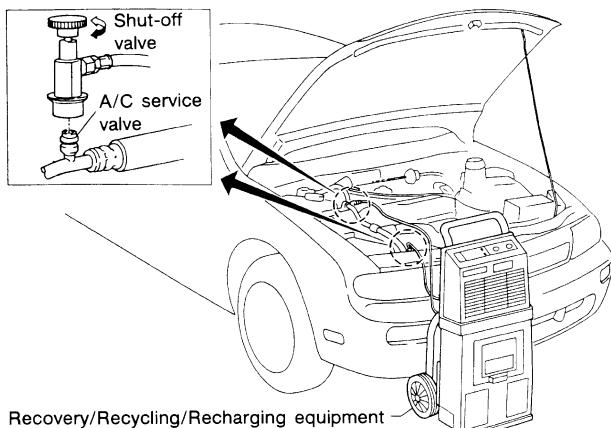

Recovery/Recycling/Recharging equipment

Alternate method

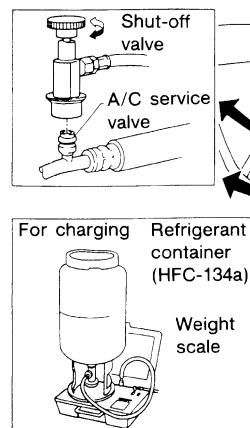

For charging

Refrigerant container (HFC-134a)

Weight scale

Manifold gauge set

For evacuating

vacuum pump

SHA540DC


ATC

K

L

M

REFRIGERANT LINES

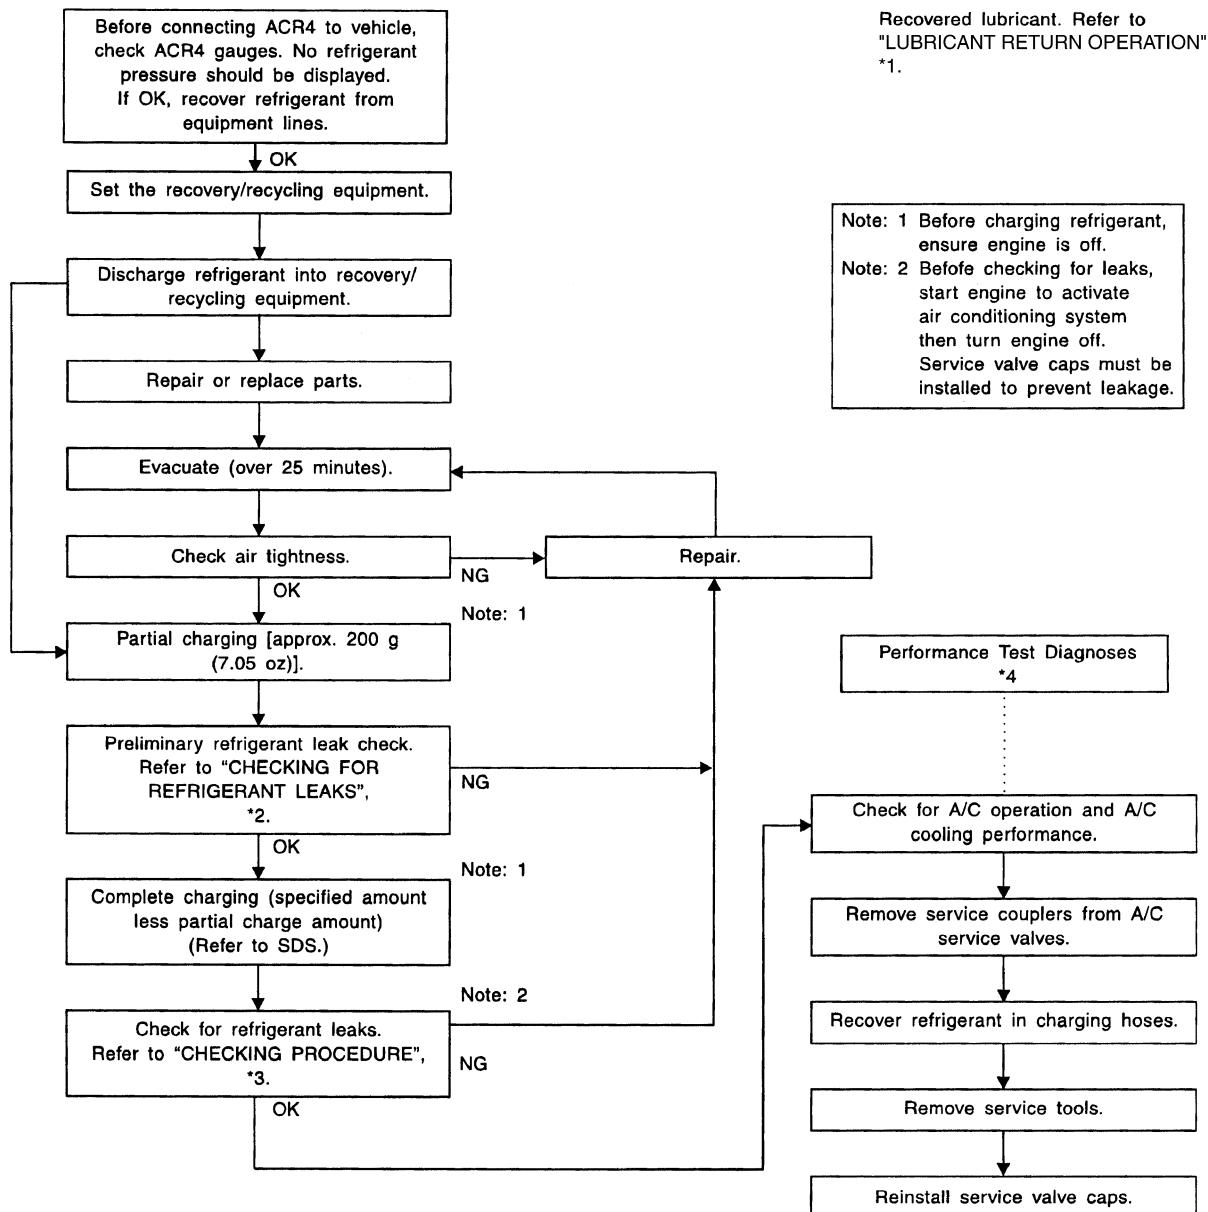

RJIA1940E

*1 ATC-24, "LUBRICANT RETURN OPERATION".

*2 ATC-160, "Checking for Refrigerant Leaks".

*3 ATC-161, "CHECKING PROCEDURE".

*4 ATC-98, "PERFORMANCE TEST DIAGNOSIS".


REFRIGERANT LINES

Components

EJS00287

Refer to page [ATC-5, "Precautions for Refrigerant Connection"](#) .

WITH GASOLINE ENGINE

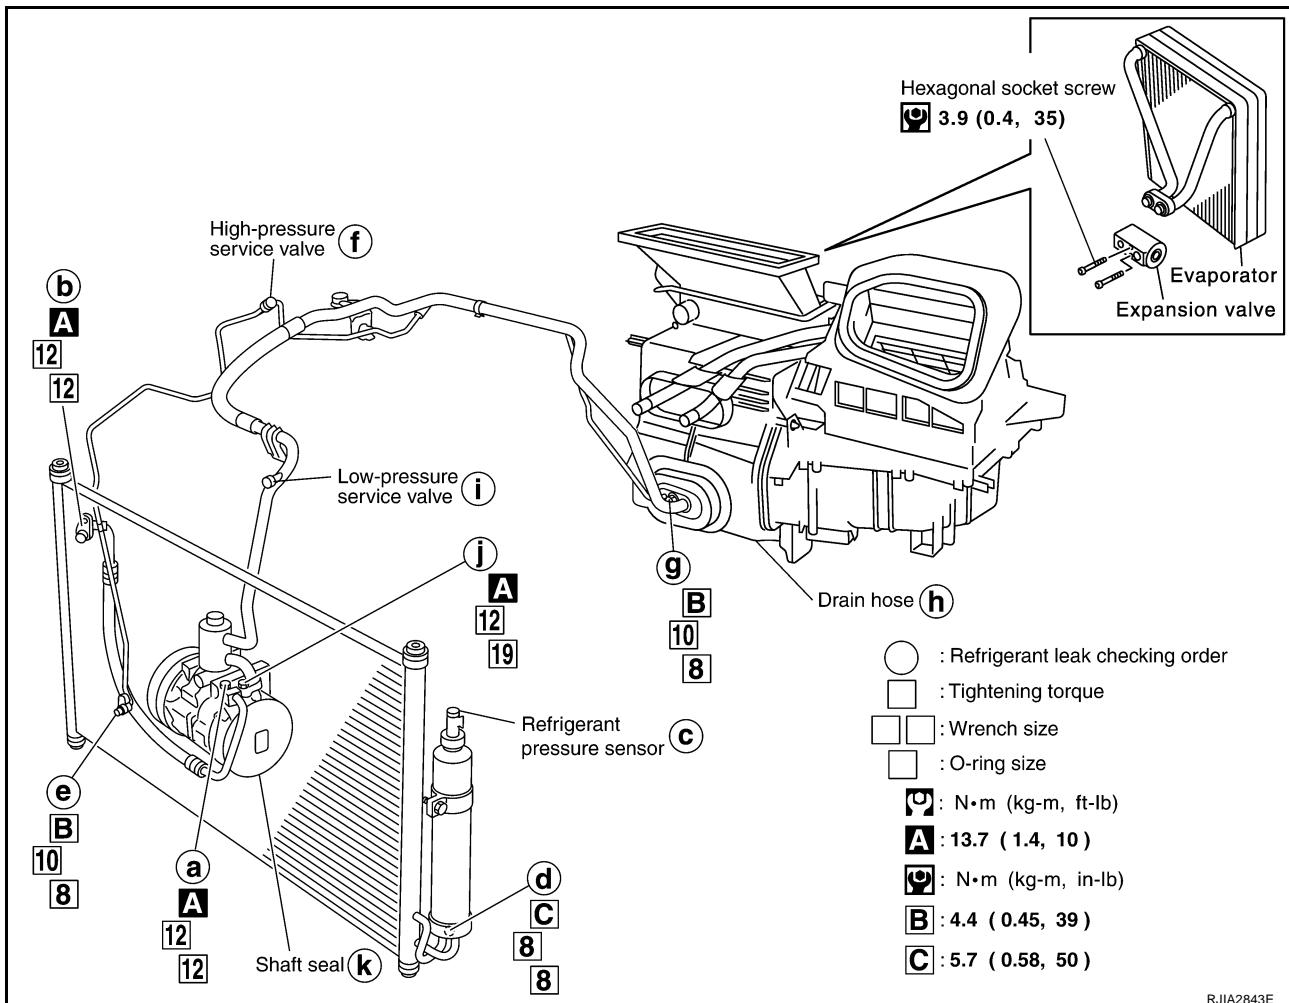

NOTE:


This illustration is for RHD models. The blower unit and heater & cooling unit layouts for LHD models are symmetrically opposite.

A
B
C
D
E
F
G
H
I
ATC
K
L

M

REFRIGERANT LINES

WITH DIESEL ENGINE

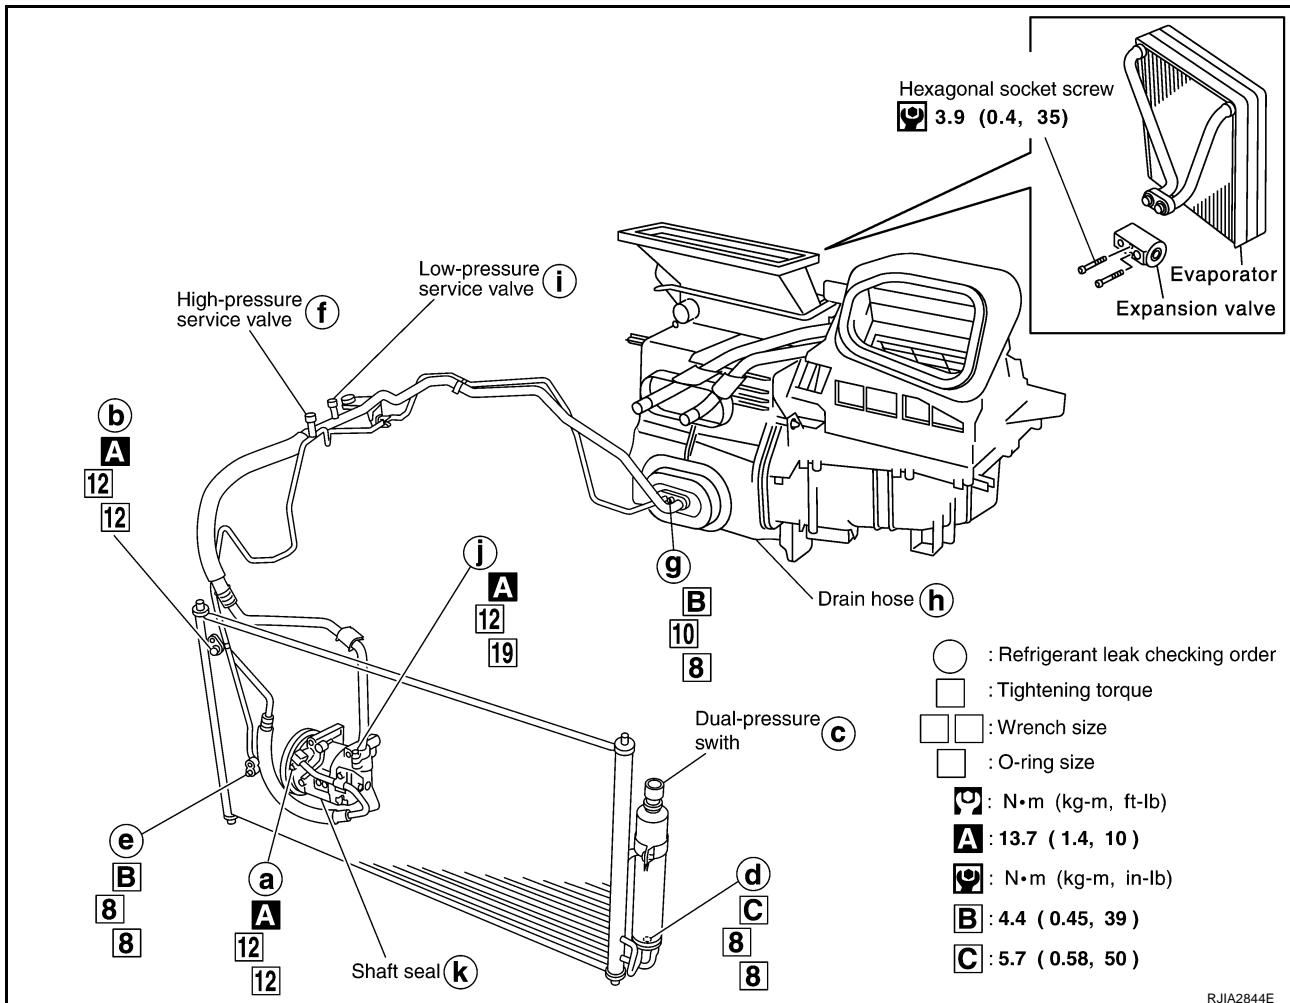


NOTE:

This illustration is for RHD models. The blower unit and heater & cooling unit layouts for LHD models are symmetrically opposite.

Removal and Installation of Compressor


REMOVAL

With Gasoline Engine

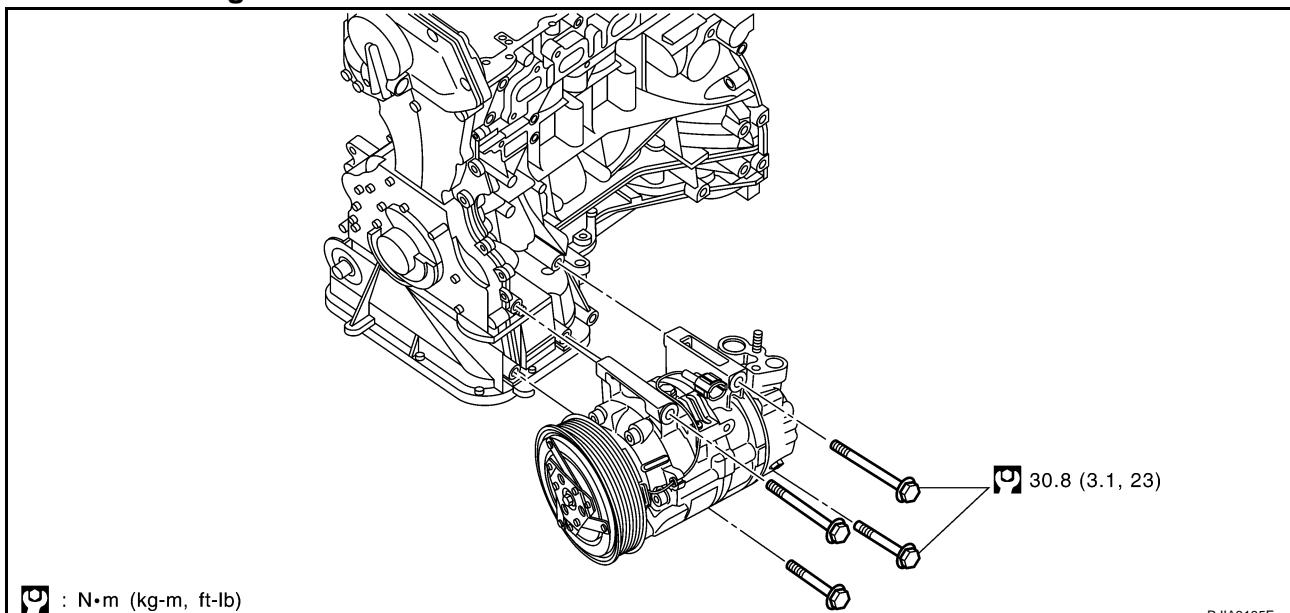

REFRIGERANT LINES



With Diesel Engine

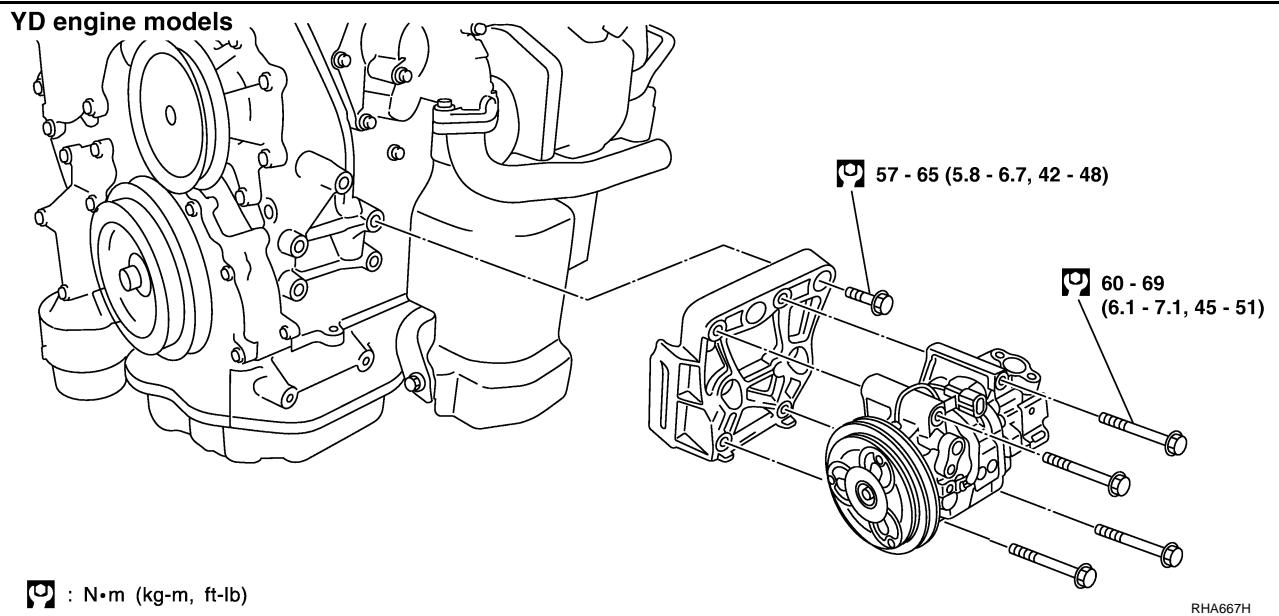

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove engine undercover.
3. Remove compressor-alternator belt. Refer to [EM-13, "Removal and Installation"](#) or [EM-14, "Removal and Installation of Drive Belt Auto-Tensioner"](#) for QR engine, [EM-132, "Removal and Installation"](#) for YD engine.
4. Remove mounting nut (bolts) from high-pressure flexible hose and low-pressure flexible hose.
5. Disconnect compressor connector.



CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

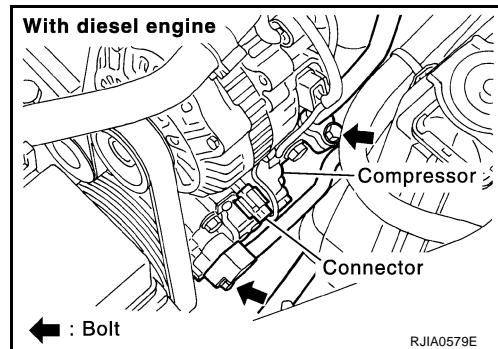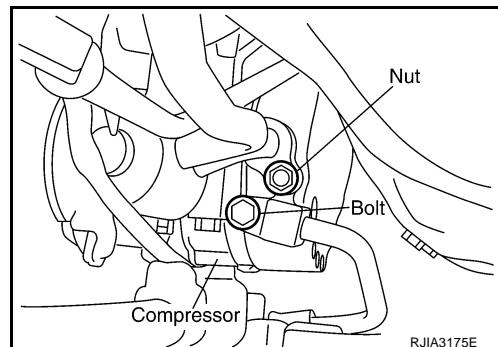

REFRIGERANT LINES

6. Remove mounting bolts from compressor.
7. Remove compressor from the lower side of the vehicle.

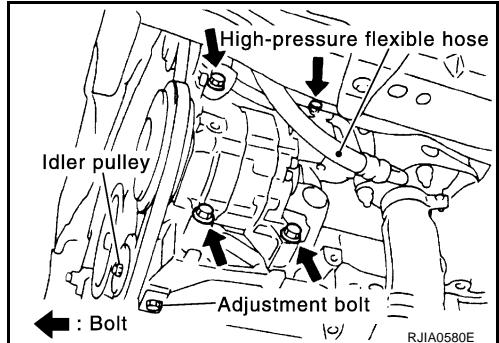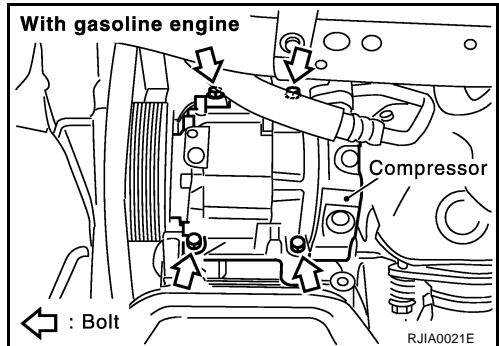

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-ring of low-pressure flexible hose and high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.


Removal and Installation of Compressor Clutch

EJS000VA


REMOVAL

Overhaul (With Gasoline Engine: CWV-615M Compressor)


1. When removing center bolt, hold clutch disc with wrench.

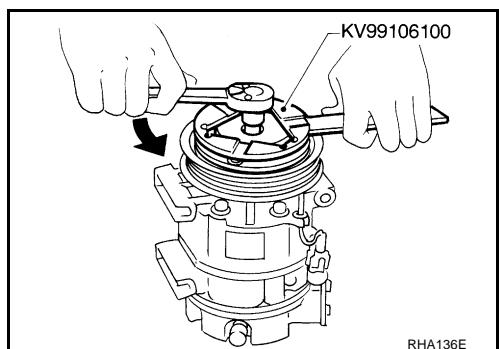


REFRIGERANT LINES

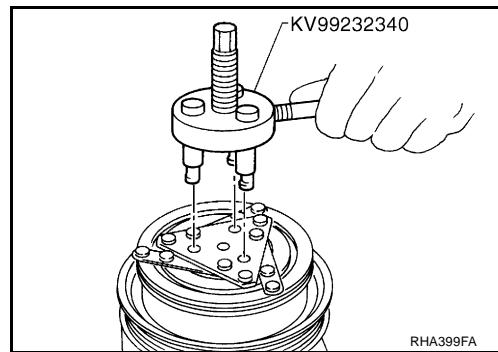

2. Remove clutch disc using clutch disc puller.

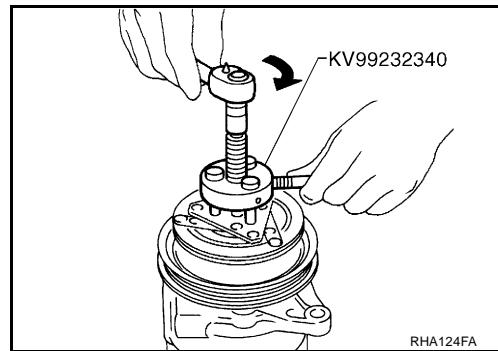


3. Remove snap ring using external snap ring pliers.

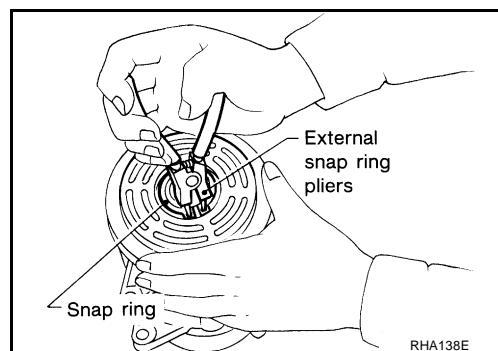

4. Position the center pulley puller on the end of the drive shaft, and remove pulley assembly using any commercially available pulley puller.


To prevent the pulley groove from being deformed, the puller claws should be positioned into the edge of the pulley assembly.

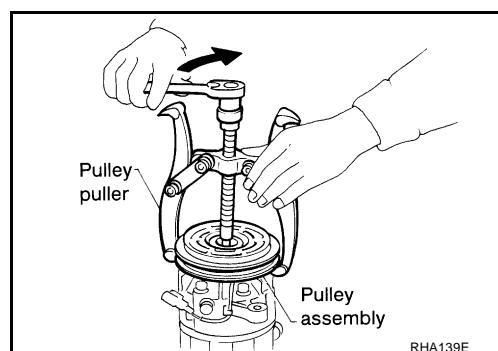


A
B
C
D
E
F
G
H
I
ATC
K
L
M

REFRIGERANT LINES

5. Remove field coil harness clip using a pair of pliers.

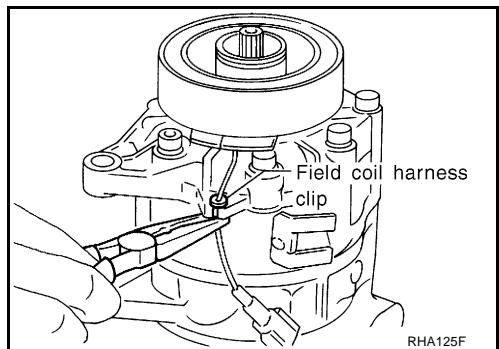


6. Remove snap ring using external snap ring pliers.

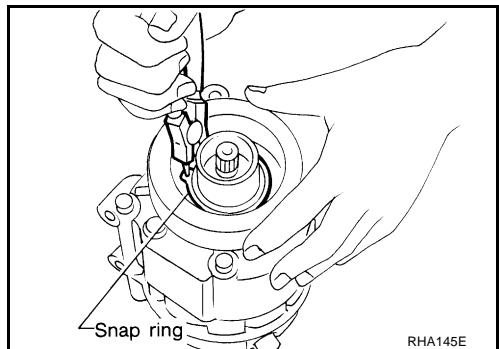


Overhaul (With Diesel Engine: DVK-11G Compressor)

1. Remove two screws holding connector bracket, thermal protector to compressor.

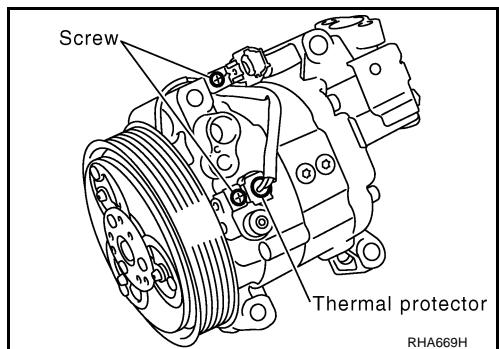


2. When removing center bolt, hold clutch disc with clutch disc wrench.

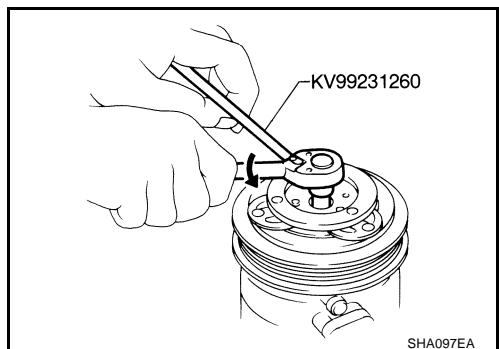


REFRIGERANT LINES

3. Remove drive plate using clutch disc puller.
4. Insert holder's three pins into the drive plate. Rotate holder clockwise to hook it onto plate.
5. Tighten center bolt to remove drive plate.
6. While tightening center bolt, insert a screwdriver between two of the pins (as shown in the figure) to prevent rotation.
7. After removing drive plate, remove shims from either drive shaft or drive plate.

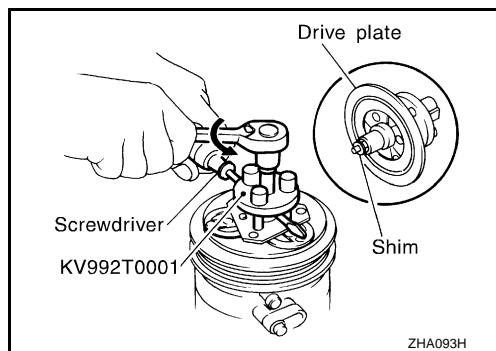

8. Remove snap ring using external snap ring pliers.

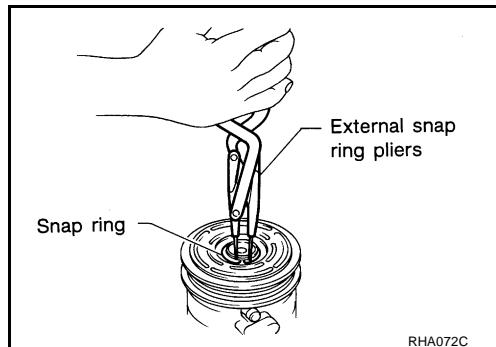


9. Remove pulley assembly with puller using a commercially available pulley puller. (Position center of puller on end of drive shaft.)

For pressed pulleys:

To prevent deformation of pulley groove, puller claws should be hooked under (not into) pulley groove.


For machine lathed pulleys:

Align pulley puller groove with pulley groove, and then remove pulley assembly.

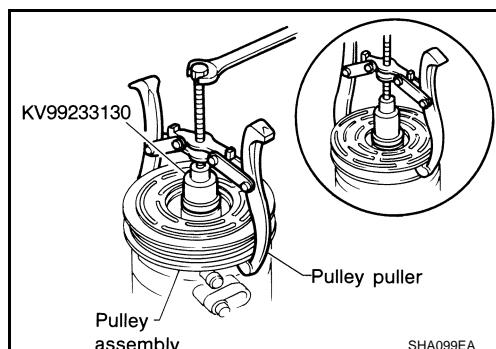

10. Remove field coil harness clip using a screwdriver.

11. Then remove three field coil fixing screws and remove field coil.

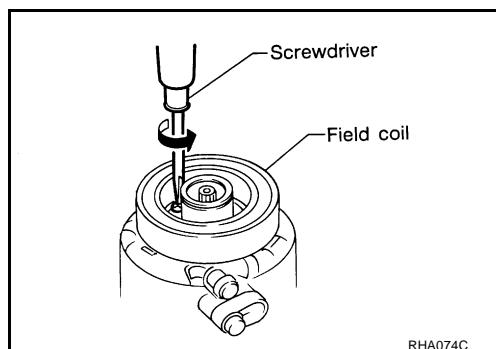

A
B
C
D
E
F
G
H
I
ATC
K

L
M


REFRIGERANT LINES

Inspection

Clutch disc

If the contact surface shows signs of damage due to excessive heat, replace clutch disc and pulley.

With gasoline engine

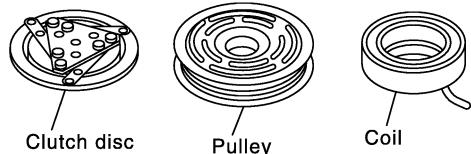


RJIA0582E

Pulley

Check the appearance of the pulley assembly. If contact surface of pulley shows signs of excessive grooving, replace clutch disc and pulley. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

With diesel engine

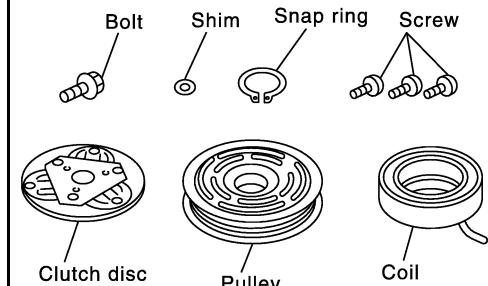

RJIA0583E


Coil

Check coil for loose connection or cracked insulation.

INSTALLATION


With Gasoline Engine (CWV-615M Compressor)

1. Install field coil.
Be sure to align the coil's pin with the hole in the compressor's front head.
2. Install field coil harness clip using a screwdriver.

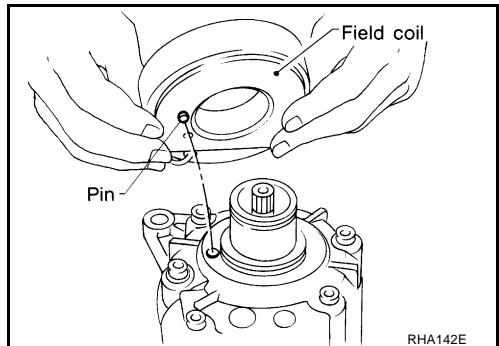

RHA142E


3. Install pulley assembly using installer and a hand press, and then install snap ring using snap ring pliers.

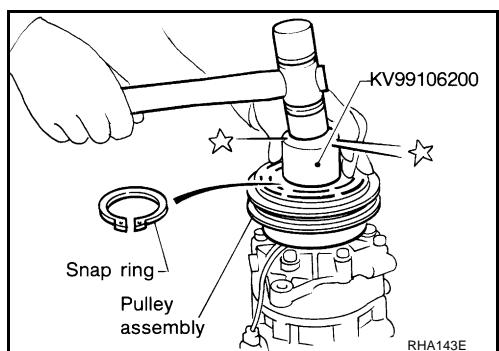

RHA143E

REFRIGERANT LINES


4. Install clutch disc on drive shaft, together with original shim(s). Press clutch disc down by hand.

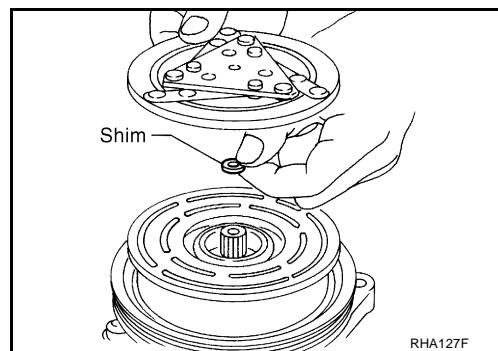

5. Using the holder to prevent clutch disc rotation.

Tightening torque : 14 N·m (1.4 kg·m, 10 ft-lb)


After tightening the bolt, check that the pulley rotates smoothly.

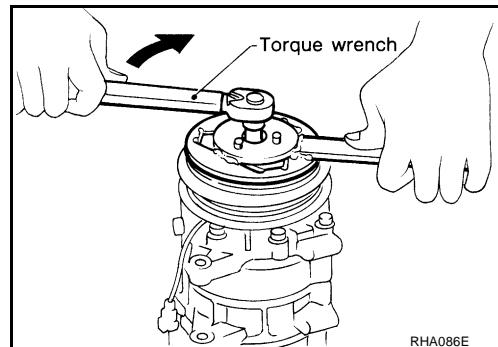

6. Check clearance around the entire periphery of clutch disc.


Disc to pulley clearance : 0.3 - 0.6 mm (0.012 - 0.024 in)

If the specified clearance is not obtained, replace adjusting spacer and readjust.

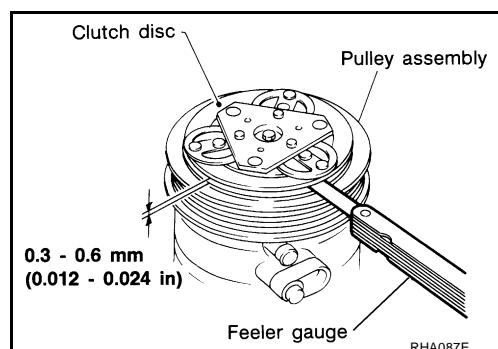


With Diesel Engine (DKV-11G Compressor)

1. Install field coil.
Be sure to align the coil's pin with the hole in the compressor's front head.
2. Install field coil harness clip using a screwdriver.

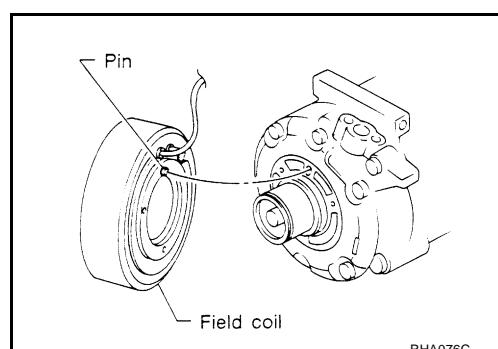


REFRIGERANT LINES

3. Install pulley assembly using installer and a hand press, and then install snap ring using snap ring pliers.

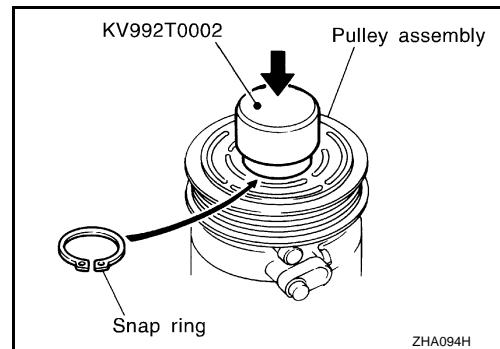


4. Install drive plate on drive shaft, together with original shim(s). Press clutch disc down by hand.

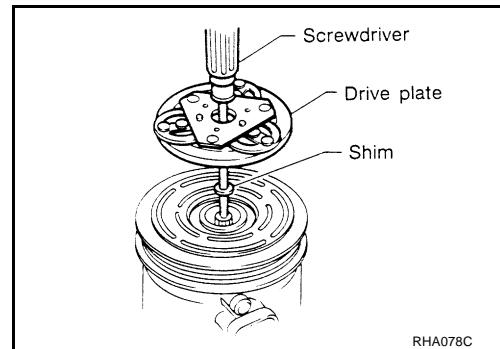

5. Using the holder to prevent clutch disc rotation.

Tightening torque : 14 N·m (1.4 kg·m, 10 ft·lb)

After tightening the bolt, check that the pulley rotates smoothly.

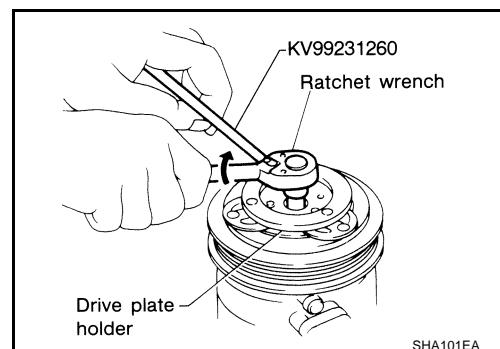


REFRIGERANT LINES

6. Check clearance around the entire periphery of clutch disc.

Disc to pulley clearance : 0.2 - 0.5 mm (0.008 - 0.020 in)

If the specified clearance is not obtained, replace adjusting spacer and readjust.

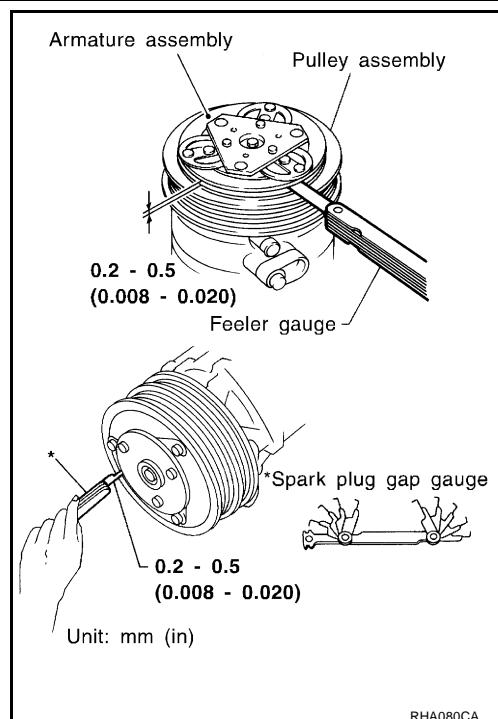

Break-In Operation



When replacing compressor clutch assembly, always carry out the break-in operation. This is done by engaging and disengaging the clutch about thirty times. Break-in operation raises the level of transmitted torque.

Removal and Installation of Low-pressure Flexible Hose

REMOVAL

EJS000VB

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove extension cowl top panel.
3. Remove clips from low-pressure flexible hose.
4. Remove mounting bolts from low-pressure flexible hose bracket.
5. Remove harness bracket mounting bolt (With QR engine).

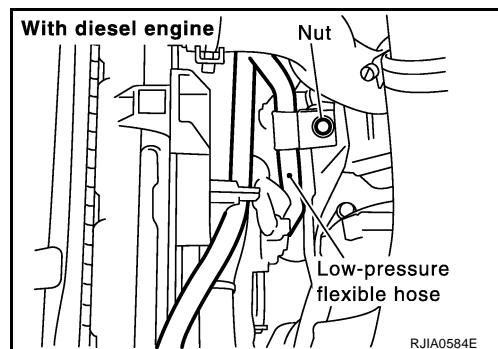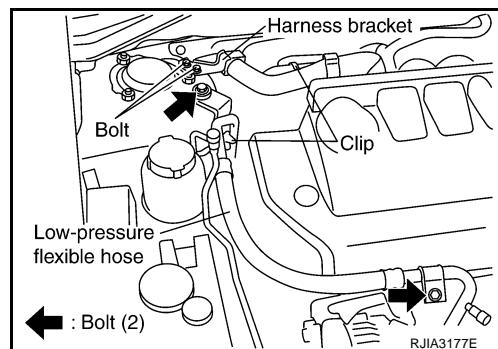


REFRIGERANT LINES

6. Remove mounting bolts (nut) from low-pressure flexible hose.

CAUTION:


Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

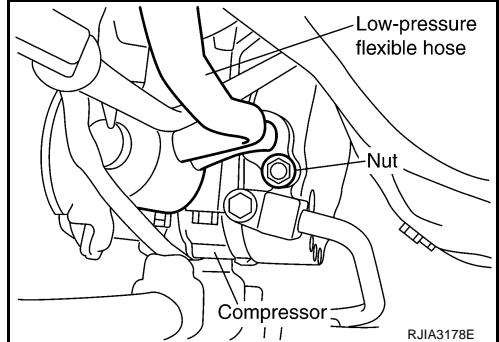

7. Remove mounting bolt, and then remove low-pressure flexible hose.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

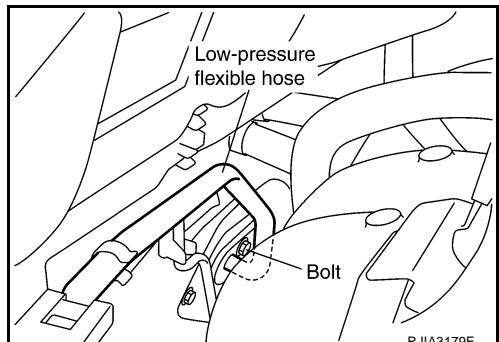

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-ring of low-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

Removal and Installation of High-pressure Flexible Hose



EJS000VC

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove high-pressure flexible hose mounting clip.
3. Remove mounting bolt and nut from high-pressure flexible hose, and then remove it.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

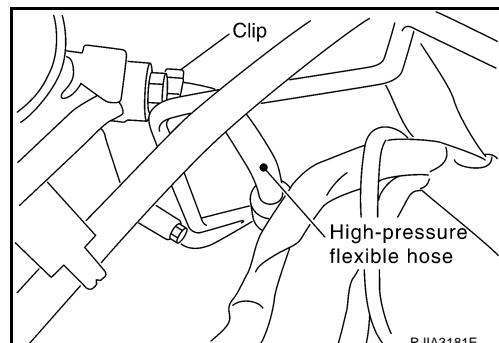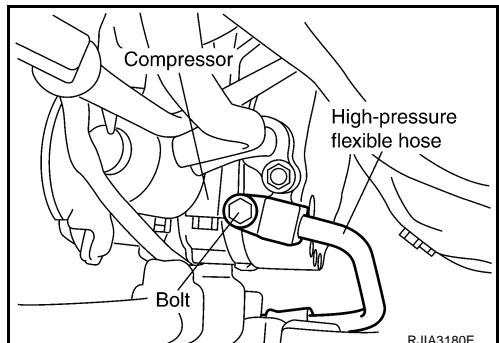

REFRIGERANT LINES

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:


- Replace the O-ring of high-pressure flexible hose with a new one, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

Removal and Installation of High-pressure Pipe

EJS000VD

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove low-pressure flexible hose. Refer to [ATC-153, "Removal and Installation of Low-pressure Flexible Hose"](#).
3. Remove high-pressure pipe from clip.

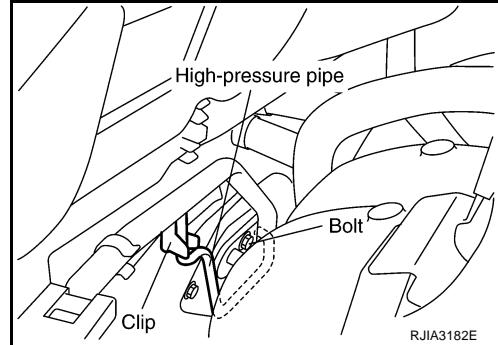


4. Remove mounting bolt from high-pressure pipe.

CAUTION:

Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

5. Remove high-pressure pipe.

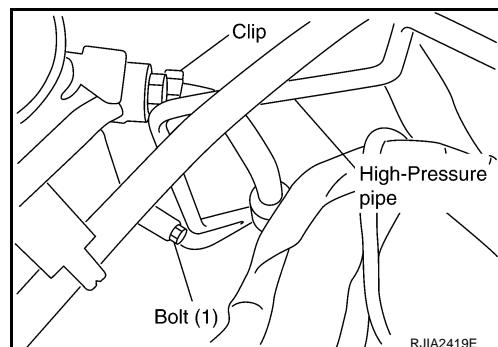

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-ring of high-pressure pipe with a new one, then apply compressor oil to it when installing it.
- When recharging refrigerant, check for leaks.

Removal and Installation of Condenser

EJS0028A


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Disconnect high-pressure flexible hose and high-pressure pipe from condenser.

CAUTION:



Cap or wrap the joint of the pipe with suitable material such as vinyl tape to avoid the entry of air.

3. Remove air duct (inlet). Refer to [EM-15, "AIR CLEANER AND AIR DUCT"](#). (With QR engine)
4. Remove battery and battery tray.

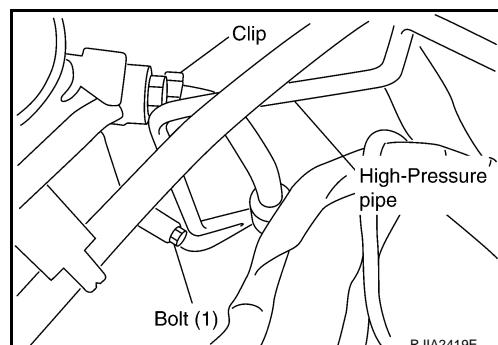

REFRIGERANT LINES


5. Disconnect refrigerant pressure sensor connector (With QR engine) or dual-pressure switch connector (With YD engine).

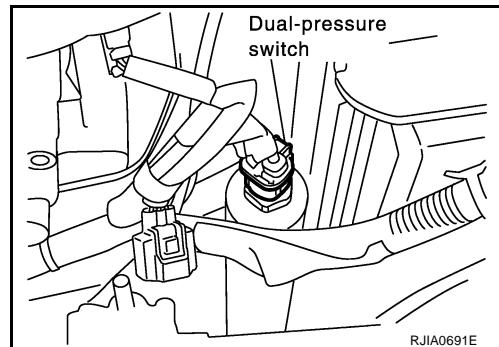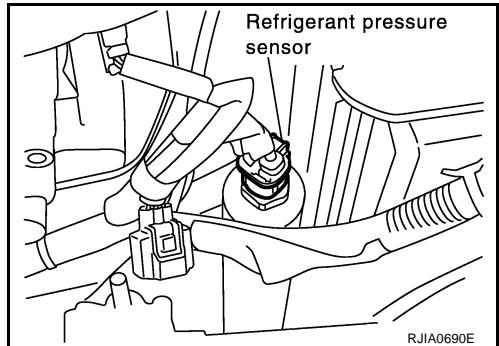

6. Remove front grille and radiator mounting bracket.
7. Remove mounting nuts from condenser.
8. Remove radiator from lower mount, move it to engine side, and then remove condenser between radiator and radiator core support.

CAUTION:

Be careful not to damage the core surface of condenser and radiator.

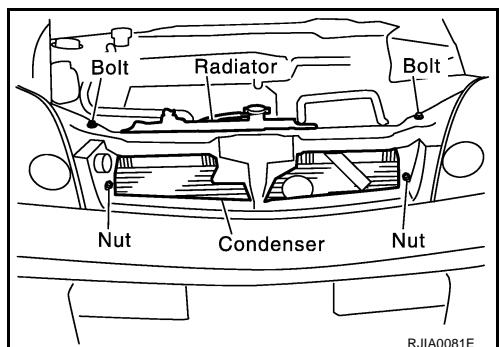

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-rings of high-pressure pipe and high-pressure flexible hose with new ones, then apply compressor oil to them after installing them.
- When recharging refrigerant, check for leaks.

Condenser mounting nuts

Tightening torque : 4.2 N·m (0.43 kg·m, 37 in·lb)

Removal and Installation of Liquid Tank

REMOVAL

1. Remove condenser. Refer to [ATC-155, "Removal and Installation of Condenser"](#) .
2. Clean liquid tank and its surrounding area, and remove dirt and rust from liquid tank.

CAUTION:


Be sure to clean carefully.

REFRIGERANT LINES


3. Remove mounting bolt for liquid tank.

CAUTION:

Cap or wrap joint of condenser pipe with a suitable material such as a vinyl tape to avoid the entry of air.

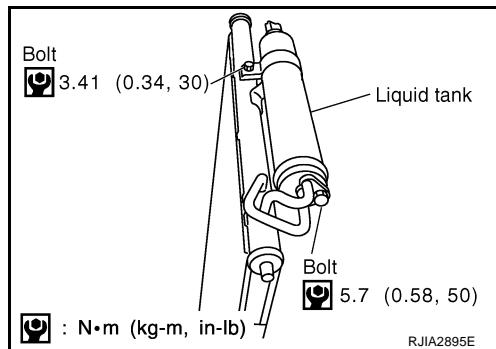

4. Lift liquid tank upward. Remove bracket from protruding part of condenser.
5. Slide liquid tank upward, and then remove liquid tank.

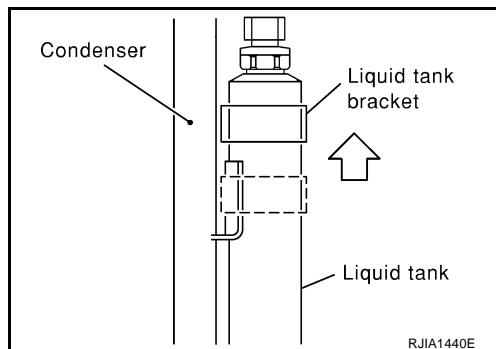


INSTALLATION

Installation liquid tank, and then install liquid tank bracket on condenser.

CAUTION:


- Make sure liquid tank bracket is securely at protrusion of condenser. (Make sure liquid tank bracket does not move to a position below center of liquid tank.)
- Replace the O-rings of condenser pipe with new ones, then apply compressor oil to them after installing them.
- When recharging refrigerant, check for leaks.

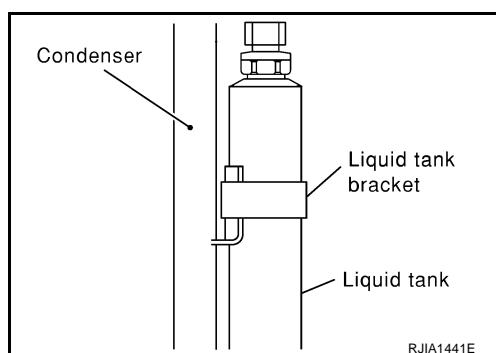

Removal and Installation of Refrigerant Pressure Sensor

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove liquid tank. Refer to [ATC-156, "Removal and Installation of Liquid Tank"](#) .
3. Using a vise, secure liquid tank, and remove refrigerant pressure sensor.

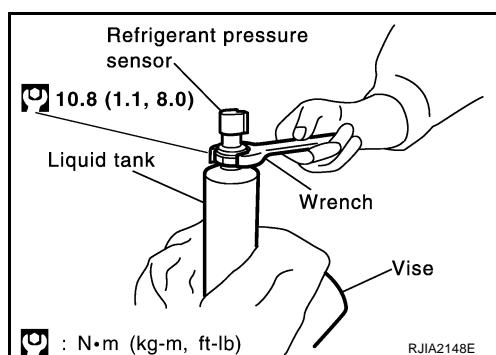

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:


- Apply compressor oil to O-ring of refrigerant pressure sensor when installing it.
- When recharging refrigerant, check for leaks.

Removal and Installation of Dual-pressure Switch

EJS00289

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove liquid tank. Refer to [ATC-156, "Removal and Installation of Liquid Tank"](#) .
3. Using a vise, secure liquid tank, and remove dual-pressure switch.

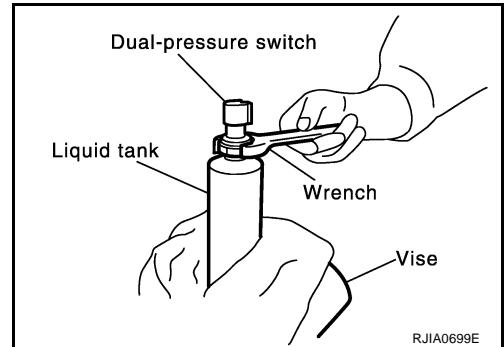

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Apply compressor oil to O-ring of dual pressure switch when installing it.
- When recharging refrigerant, check for leaks.

Tightening torque :10.8 N·m (1.1 kg·m, 8.0 ft-lb)

Removal and Installation of Evaporator


EJS000VG

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove extension cowl top panel.
3. Disconnect low-pressure flexible hose and high-pressure pipe from evaporator.

CAUTION:

Cap or wrap the joint of low-pressure flexible hose and high-pressure pipe with a suitable material such as a vinyl tape to avoid the entry of air.

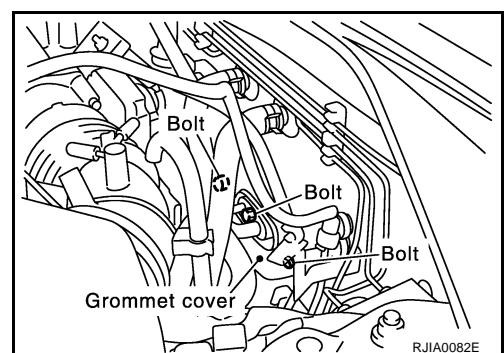


4. Remove mounting screws, and then remove expansion valve cover.
5. Remove mounting bolts, and then remove expansion valve.
6. Remove blower unit. Refer to [ATC-125, "BLOWER UNIT"](#) .

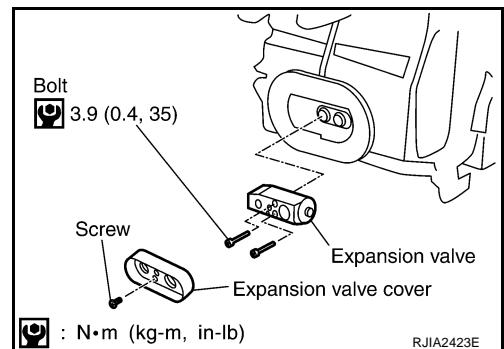


REFRIGERANT LINES

7. Remove foot duct (passenger side).
8. Remove mounting screws, and then remove evaporator cover.
9. Slide evaporator, and then remove it from heater & cooling unit.

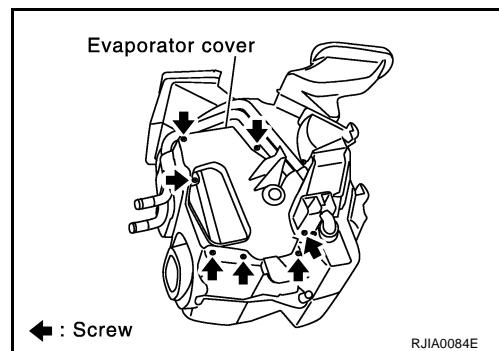

10. Remove intake sensor from evaporator, and then remove evaporator.

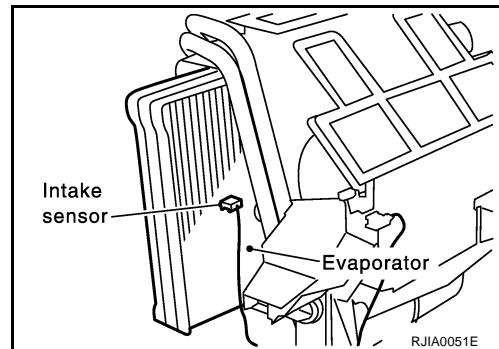

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-rings of low-pressure flexible hose and high-pressure pipe with new ones, then apply compressor oil to them when installing them.
- Mark the mounting position of intake sensor bracket.
- When recharging refrigerant, check for leaks.

Removal and Installation of Expansion Valve


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant.
2. Remove extension cowl top panel.
3. Disconnect low-pressure flexible hose and high-pressure pipe from evaporator.

CAUTION:

Cap or wrap the joint of low-pressure flexible hose and high-pressure pipe with a suitable material such as a vinyl tape to avoid the entry of air.

4. Remove mounting screws, and then remove expansion valve cover.
5. Remove mounting bolts, and then remove expansion valve.

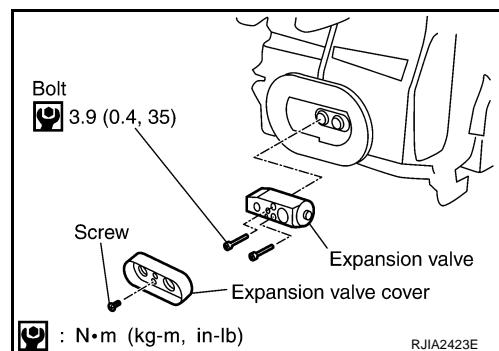

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

- Replace the O-rings of expansion valve and piping with new ones, and then apply compressor oil to them when installing them.
- When recharging refrigerant, check for leaks.

Checking for Refrigerant Leaks

EJS000VJ

Perform a visual inspection of all refrigeration parts, fittings, hoses and components for signs of A/C lubricant leakage, damage and corrosion. A/C lubricant leakage may indicate an area of refrigerant leakage. Allow extra inspection time in these areas when using either an electronic refrigerant leak detector or fluorescent dye leak detector.

If dye is observed, confirm the leak with an electronic refrigerant leak detector. It is possible a prior leak was repaired and not properly cleaned.

When searching for leaks, do not stop when one leak is found but continue to check for additional leaks at all system components and connections.

When searching for refrigerant leaks using an electronic leak detector, move the probe along the suspected leak area at 1 to 2 inches per second and no further than 1/4 inch from the component.

CAUTION:

Moving the electronic leak detector probe slower and closer to the suspected leak area will improve the chances of finding a leak.

Checking System for Leaks Using the Fluorescent Leak Detector

EJS000VK

1. Check A/C system for leaks using the UV lamp and safety goggles (J-42220) in a low sunlight area (area without windows preferable). Illuminate all components, fittings and lines. The dye will appear as a bright green/yellow area at the point of leakage. Fluorescent dye observed at the evaporator drain opening indicates an evaporator core assembly (tubes, core or expansion valve) leak.
2. If the suspected area is difficult to see, use an adjustable mirror or wipe the area with a clean shop rag or cloth, with the UV lamp for dye residue.
3. After the leak is repaired, remove any residual dye using dye cleaner (J-43872) to prevent future misdiagnosis.
4. Perform a system performance check and verify the leak repair with an approved electronic refrigerant leak detector.

NOTE:

Other gases in the work area or substances on the A/C components, for example, anti-freeze, windshield washer fluid, solvents and lubricants, may falsely trigger the leak detector. Make sure the surfaces to be checked are clean.

Clean with a dry cloth or blow off with shop air.

Do not allow the sensor tip of the detector to contact with any substance. This can also cause false readings and may damage the detector.

Dye Injection

EJS000VL

(This procedure is only necessary when recharging the system or when the compressor has seized and was replaced.)

1. Check A/C system static (at rest) pressure. Pressure must be at least 345 kPa (3.45 bar, 3.52 kg/cm² , 50 psi).
2. Pour one bottle (1/4 ounce / 7.4 cc) of the A/C refrigerant dye into the injector tool (J-41459).
3. Connect the injector tool to the A/C LOW-PRESSURE side service fitting.
4. Start engine and switch A/C ON.
5. When the A/C operating (compressor running), inject one bottle (1/4 ounce / 7.4 cc) of fluorescent dye through the low-pressure service valve using dye injector tool J-41459 (refer to the manufacturer's operating instructions).
6. With the engine still running, disconnect the injector tool from the service fitting.

CAUTION:

Be careful the A/C system or replacing a component, pour the dye directly into the open system connection and proceed with the service procedures.

7. Operate the A/C system for a minimum of 20 minutes to mix the dye with the system oil. Depending on the leak size, operating conditions and location of the leak, it may take from minutes to days for the dye to penetrate a leak and become visible.


Electronic Refrigerant Leak Detector

PRECAUTIONS FOR HANDLING LEAK DETECTOR


EJS000VM

When performing a refrigerant leak check, use an A/C leak detector or equivalent. Ensure that the instrument is calibrated and set properly per the operating instructions.


The leak detector is a delicate device. In order to use the leak detector properly, read the operating instructions and perform any specified maintenance.

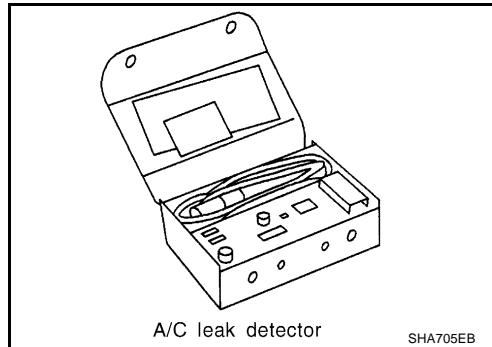


1. Position probe approximately 5 mm (3/16 in) away from point to be checked.

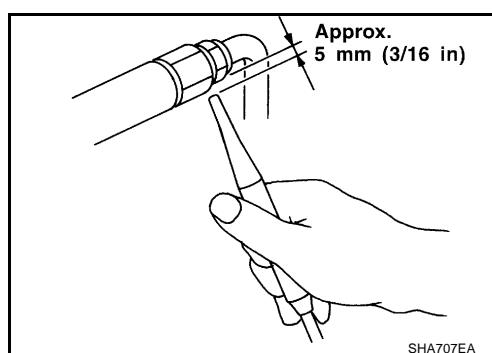

2. When testing, circle each fitting completely with probe.

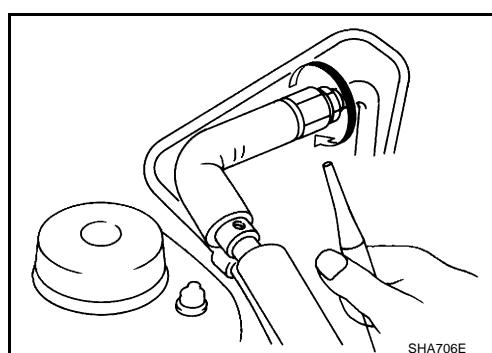

3. Move probe along component approximately 25 to 50 mm (1 to 2 in)/sec.

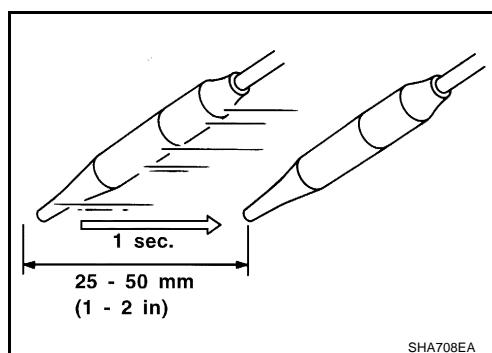

CHECKING PROCEDURE

To prevent inaccurate or false readings, make sure there is no refrigerant vapor, shop chemicals, or cigarette smoke in the vicinity of the vehicle. Perform the leak test in calm area (low air/wind movement) so that the leaking refrigerant is not dispersed.

1. Turn engine OFF.
2. Connect a suitable A/C manifold gauge set to the A/C service valves.

A
B
C
D
E
F
G
H
I
ATC
K
L
M

REFRIGERANT LINES

- Check if the A/C refrigerant pressure is at least 345 kPa (3.45 bar, 3.52 kg/cm², 50 psi) above 16°C (61°F). If less than specification, recover/evacuate and recharge the system with the specified amount of refrigerant.

NOTE:

At temperatures below 16°C (61°F), leaks may not be detected since the system may not reach 345 kPa (3.45 bar, 3.52 kg/cm², 50 psi).

- Perform the leak test from the high-pressure side (compressor discharge a to evaporator inlet g) to the low-pressure side (evaporator drain hose h to shaft seal k). Refer to [ATC-143, "Components"](#). Perform a leak check for the following areas carefully. Clean the component to be checked and move the leak detected probe completely around the connection/component.

Compressor

Check the fitting of high- and low- pressure hoses, relief valve and shaft seal.

Liquid tank

Check the refrigerant pressure sensor or dual pressure switch.

Service valves

Check all around the service valves. Ensure service valve caps are secured on the service valves (to prevent leaks).

NOTE:

After removing A/C manifold gauge set from service valves, wipe any residue from valves to prevent any false readings by leak detector.


Cooling unit (Evaporator)

With engine OFF, turn blower fan on "High" for at least 15 seconds to dissipate any refrigerant trace in the cooling unit. Wait a minimum of 10 minutes accumulation time (refer to the manufacturer's recommended procedure for actual wait time) before inserting the leak detector probe into the drain hose.

Keep the probe inserted for at least 10 seconds. Use caution not to contaminate the probe tip with water or dirt that may be in the drain hose.

- If a leak detector detects a leak, verify at least once by blowing compressed air into area of suspected leak, then repeat check as outlined above.
- Do not stop when one leak is found. Continue to check for additional leaks at all system components. If no leaks are found, perform steps 7-10.
- Start engine.
- Set the heater A/C control as follows:
 - A/C switch: ON
 - Mode control dial: VENT (Ventilation)
 - Intake position: Recirculation
 - Max. cold temperature
 - Fan speed: High
- Run engine at 1,500 rpm for at least 2 minutes.
- Turn engine off and perform leak check again following steps 4 through 6 above.

Refrigerant leaks should be checked immediately after stopping the engine. Begin with the leak detector at the compressor. The pressure on the high-pressure side will gradually drop after refrigerant circulation stops and pressure on the low-pressure side will gradually rise, as shown in the graph. Some leaks are more easily detected when pressure is high.

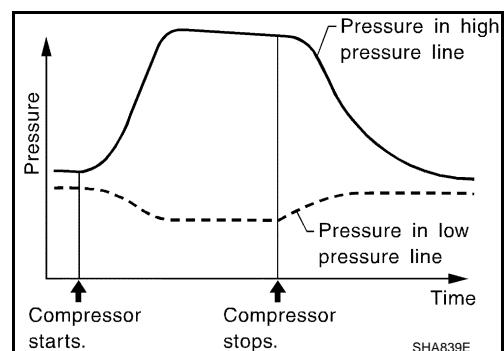

- Discharge A/C system using approved refrigerant recovery equipment. Repair the leaking fitting or component if necessary.
- Evacuate and recharge A/C system and perform the leak test to confirm no refrigerant leaks.

REFRIGERANT LINES

13. Conduct A/C performance test to ensure system works properly.

A

B

C

D

E

F

G

H

I

ATC

K

L

M

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

Compressor

EJS00281

Model		With QR engine	With YD engine
		Calsonic Kansei make CWV-615M	ZEXEL VALEO CLIMATE CONTROL make DKV-11G
Type		V-6 variable displacement	
Displacement cm ³ (cu in)/rev	Max.	146 (8.91)	110 (6.71)
	Min.	14.5 (0.885)	
Cylinder bore × stroke mm (in)		37 (1.46) × [2.3 - 25.0 (0.091 - 0.984)]	-
Direction of rotation		Clockwise (viewed from drive end)	
Drive belt		Poly V	

Lubricant

EJS00282

Model		With QR engine	With YD engine
		Calsonic Kansei make CWV-615M	ZEXEL VALEO CLIMATE CONTROL make DKV-11G
Name		Nissan A/C System Oil Type S (DH-PS)	Nissan A/C System Oil Type R (DH-PR)
Part number		KLH00-PAGS0	KLH00-PAGR0
Capacity m ℥ (Imp fl oz)	Total in system	180 (6.3)	
	Compressor (Service part) charging amount	180 (6.3)	

Refrigerant

EJS00283

Type	HFC-134a (R-134a)
Capacity kg (lb)	0.55 (1.21)

Engine Idling Speed

EJS00284

Refer to [EC-44, "Idle Speed and Ignition Timing Check"](#) for QR engine (WITH EURO-OBD), [EC-506, "Idle Speed and Ignition Timing Check"](#) for QR engine (WITHOUT EURO-OBD), [EC-905, "Basic Inspection"](#) for YD engine (WITH EURO-OBD) or [EC-905, "Basic Inspection"](#) for YD engine (WITHOUT EURO-OBD).

Belt Tension

EJS00285

Refer to [EM-13, "DRIVE BELTS"](#) for QR engine or [EM-131, "DRIVE BELTS"](#) for YD engine.