

How to Use This Manuals

HOW TO USE THIS MANUALS

1. How to Use This Manuals

A: HOW TO USE THIS MANUALS

1. STRUCTURE

Each section consists of SCT that are broken down into SC that are divided into sections for each component. The specification, maintenance and other information for the components are included, and the diagnostic information has also been added where necessary.

2. INDEX

The first page has an index with tabs.

How to Use This Manuals


HOW TO USE THIS MANUALS

3. COMPONENT

Illustrations are provided for each component. The information necessary for repair work (tightening torque, grease up points, etc.) is described on these illustrations. Information is described using symbol.

To order parts, refer to parts catalogue.

Example:

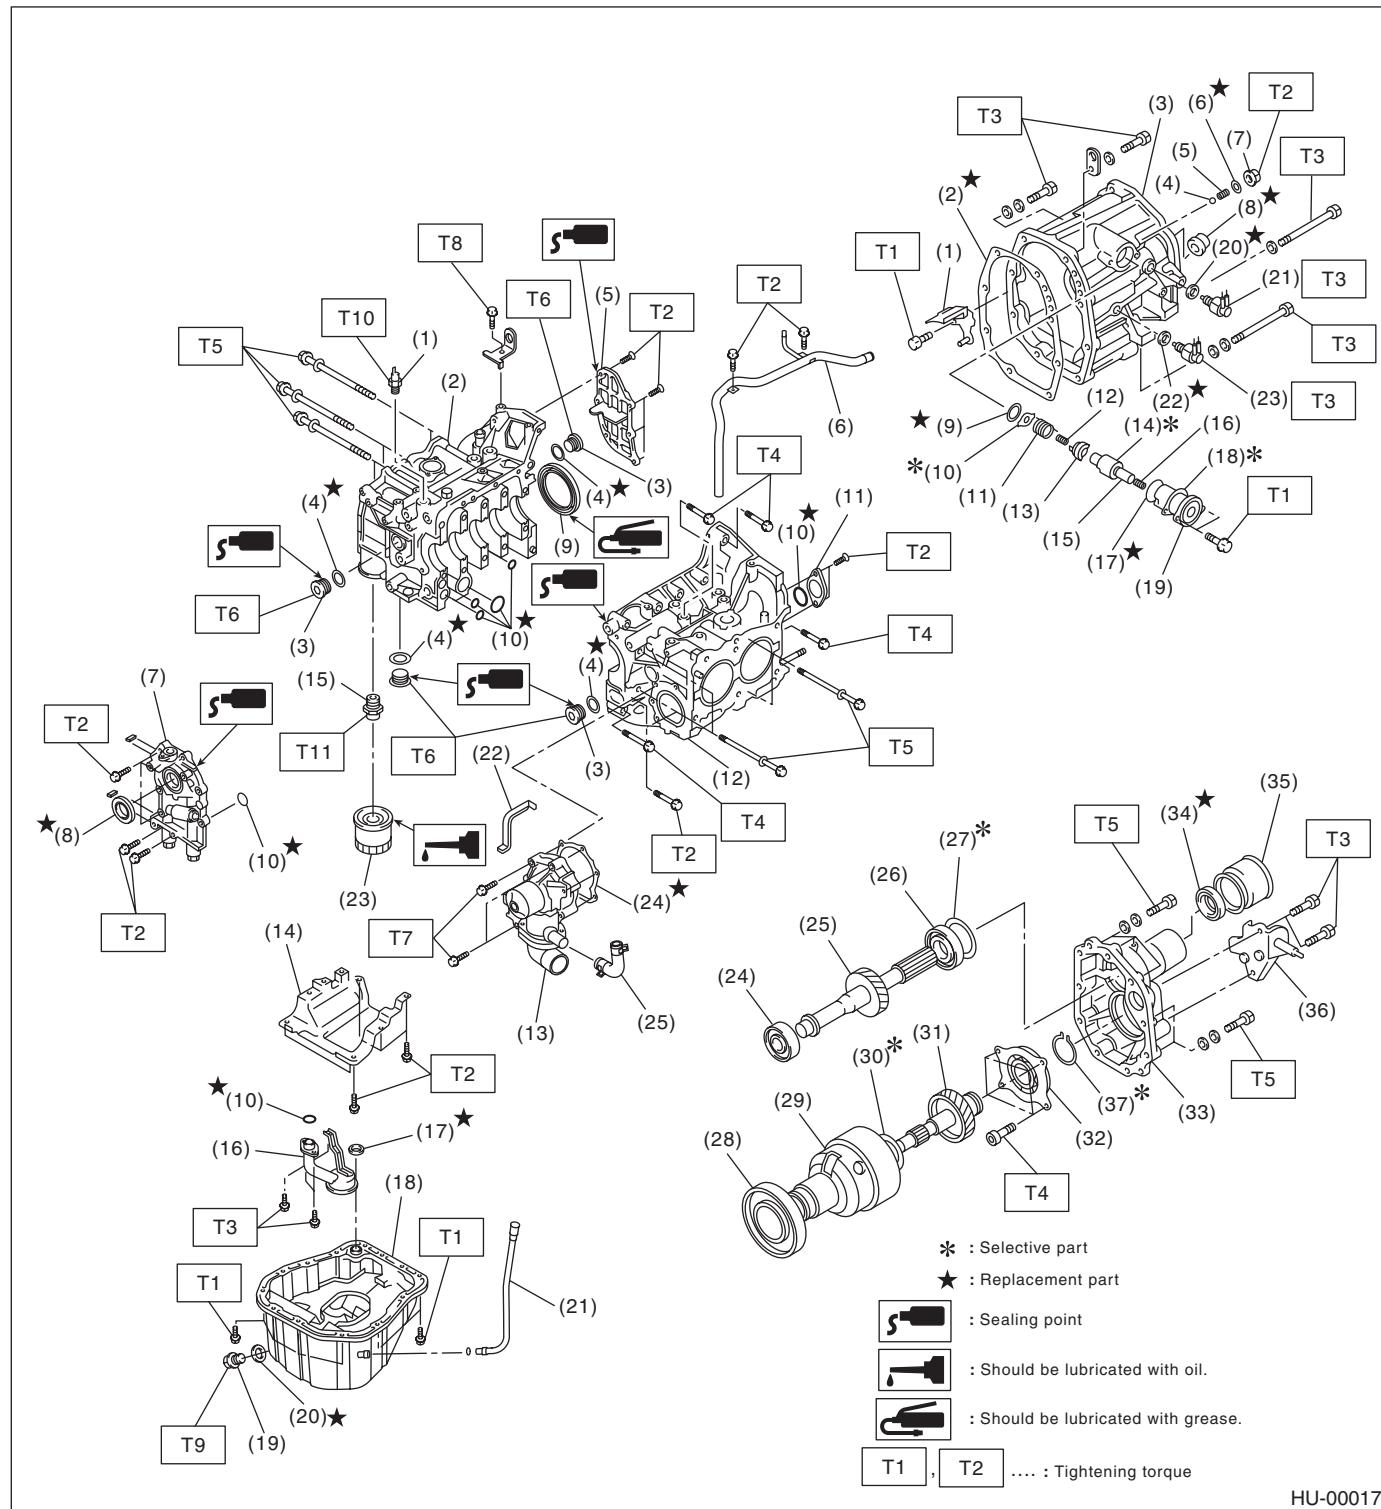

How to Use This Manuals

HOW TO USE THIS MANUALS

4. SPECIFICATION

If necessary, specifications are also included.

5. INSPECTION

Inspections to be carried out before and after maintenance are included.

6. MAINTENANCE

- Maintenance instructions for serviceable parts describe work area and detailed step with illustration. It also describes the use of special tool, tightening torque, caution for each procedure.
- If many serviceable parts are included in one service procedure, appropriate reference is provided for each parts.

Example:

15. Main Shaft Assembly for Single-Range

A: REMOVAL

- 1) Remove the manual transmission assembly from vehicle. <Ref. to MT-33, REMOVAL, Manual Transmission Assembly. >


- 11) Tighten the lock nuts to the specified torque using ST1 and ST2.

NOTE:
Secure the lock nuts in two Places after tightening.

ST1 498937000 TRANSMISSION HOLDER
ST2 499987003 (E) SOCKET WRENCH (35) (F)

Tightening torque:

118 N·m (12.0 kgf·m, 86.8 ft-lb)

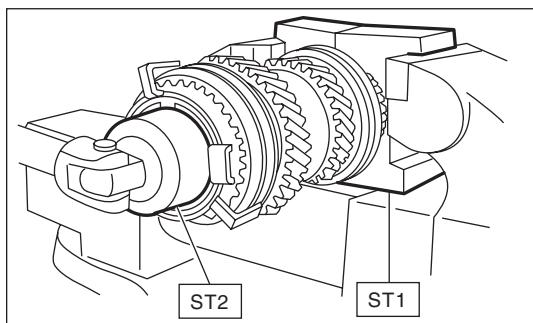

HU-00020

(A) Component

(D) Cautions

(G) Tightening torque

(B) Process

(E) Tool number of special tool

(H) Illustration

(C) Reference

(F) Name of special tool

7. DIAGNOSIS

Tables showing a step-by-step process make it easy to conduct diagnosis.

8. SI UNITS

Measurements in these manuals are according to the SI units. Metric and yard/pound measurements are also included.

Example:

Tightening torque:

44 N·m (4.5 kgf·m, 33 ft-lb)

9. EXPLANATION OF TERMINOLOGY

List

AAI	: Air Assist Injection	MD	: Mini Disc
A/B	: Airbag	MID	: Multi-information Display
ABS	: Antilock Brake System	MFI	: Multipoint Fuel Injection
A/C	: Air Conditioner	MP-T	: Multi-Plate Transfer
A/F	: Air Fuel Ratio	MT	: Manual Transmission
ALT	: Generator	NA	: Natural Aspiration
ASSY	: Assembly	NC	: Normal Close (Relay)
AT	: Automatic Transmission	NO	: Normal Open (Relay)
ATF	: Automatic Transmission Fluid	OP	: Option Parts
AWD	: All Wheel Drive	P/S	: Power Steering
BATT	: Battery	P/W	: Power Window
CD-R/RW	: CD Recordable/Rewritable	PCD	: Pitch Circle Diameter
CPU	: Central Processing Unit	PCV	: Positive Crankcase Ventilation
DOHC	: Double Overhead Camshaft	RH	: RH (Right Hand)
DVD	: Digital Versatile Disc	Rr	: Rear
ECM	: Engine Control Module	SOHC	: Single Overhead Camshaft
EGR	: Exhaust Gas Recirculation	SRS	: Supplemental Restraint System
ELR	: Emergency Locking Retractor	SSM	: Subaru Select Monitor
EX	: Exhaust	ST	: Special Tool
F/B	: Fuse & Joint Box	SW	: Switch
FL	: Fusible Link	TCS	: Traction Control System
Ft	: Full-time (AWD)	TGV	: Tumble Generator Valve
FWD	: Front Wheel Drive	T/M	: Transmission
GPS	: Global Positioning System	TPMS	: Tire Pressure Monitoring System
H/U	: Hydraulic Unit	ViS-C	: Viscous Coupling
IG	: Ignition	VSV	: Vacuum Switching Valve
INT	: Intermittent	VTD	: Variable Torque Distribution
ISC	: Idle Speed Control	W/H	: Wiring Harness
LH	: LH (Left Hand)	Pr	: Primary
LSD	: Limited Slip Differential	2ndr	: Secondary
M/B	: Main Fuse & Relay Box		

How to Use This Manuals

HOW TO USE THIS MANUALS
