

	Page
S SPECIFICATIONS AND SERVICE DATA	2
1. Body Electrical	2
W SERVICE PROCEDURE	3
1. Precaution	3
2. Battery	3
3. Ignition Switch	6
4. Lighting	7
5. Front Wiper and Washer	13
6. Rear Wiper and Washer	16
7. Rear Window Defogger	20
8. Combination Meter	21
9. Radio, Speaker and Antenna	22
K DIAGNOSTICS	23
1. AT Shift Lock System	23
2. Combination Meter	29

PRECAUTION FOR SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"

The Supplemental Restraint System "Airbag" helps to reduce the risk or severity of injury to the driver in a frontal collision.

The Supplemental Restraint System consists of an airbag module (located in the center of the steering wheel), sensors, a control module, warning light, wiring harness and roll connector.

Information necessary to service the safety is included in the "5-5. SUPPLEMENTAL RESTRAINT SYSTEM" of this Service Manual.

WARNING:

- To avoid rendering the Airbag system inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized SUBARU dealer.
- Improper maintenance, including incorrect removal and installation of the Airbag system, can lead to personal injury caused by unintentional activation of the Airbag system.
- All Airbag system electrical wiring harnesses and connectors are covered with yellow outer insulation. Do not use electrical test equipment on any circuit related to the Supplemental Restraint System "Airbag".

1. Body Electrical


Battery	Type	MT model: 55D23L (MF) AT model: 75D23L (MF)
	Capacity	MT model: 100 minutes AT model: 120 minutes
	Cold cranking ampere	MT model: 430 amperes AT model: 520 amperes
Combination meter	Speedometer	Eddy current type
	Temperature gauge	Thermistor cross coil type
	Fuel gauge	Resistance cross coil type
	Tachometer	Electric impulse type
	Turn signal indicator light	12 V — 1.4 W
	Charge indicator light	12 V — 1.4 W
	Oil pressure indicator light	12 V — 1.4 W
	ABS warning light	12 V — 1.4 W
	CHECK ENGINE warning light (Malfunction indicator light)	12 V — 1.4W
	HI-beam indicator light	12 V — 3.4 W
	Door open warning light	12 V — 1.4 W
	Seat belt warning light	12 V — 1.4 W
	Brake fluid and parking brake warning light	12 V — 3.4 W
	FWD indicator light	12 V — 1.4 W
	AIRBAG warning light	12 V — 1.4 W
	Meter illumination light	12 V — 3.4 W
	AT OIL TEMP. warning light	12 V — 1.4 W
Headlight		12 V — 60/55 W (Halogen)
Front turn signal light		12 V — 27 W
Side turn signal light		12 V — 3.8 W
Side marker/Parking light		12 V — 3.8 W
Rear combination light	Tail/Stop light	12 V — 8/27 W
	Turn signal light	12 V — 27W
	Back-up light	12 V — 27 W
License plate light		12 V — 3.8 W
High-mount stop light		Sedan: 12 V — 18 W Wagon: 12 V — 13 W
Room light		12 V — 8 W
Spot light		12 V — 8 W
Trunk room light		12 V — 5 W
Luggage room light		12 V — 5 W
Front wiper motor	Input	12 V — 54 W or less
Rear wiper motor	Input	12 V — 42 W or less
Front washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less
Rear washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less
Horn		12 V — 350 Hz
Cigarette lighter	Input	12 V — 120 W
Rear window defogger	Input	12 V — 160 W
	Indicator light	12 V — 50 mA
Cargo socket	Input	12 V — 120 W

1. Precaution

- Before disassembling or reassembling parts, always disconnect battery ground cable. When repairing radio, control units, etc. which are provided with memory functions, record memory contents before disconnecting battery ground cable. Otherwise, these contents are cancelled upon disconnection.
- Reassemble parts in reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to specifications contained in this manual if so designated.
- Connect connectors and hoses securely during reassembly.
- After reassembly, ensure functional parts operate smoothly.

CAUTION:

- Airbag system wiring harness is routed near the electrical parts and switch.
- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when servicing the ignition key cylinder.

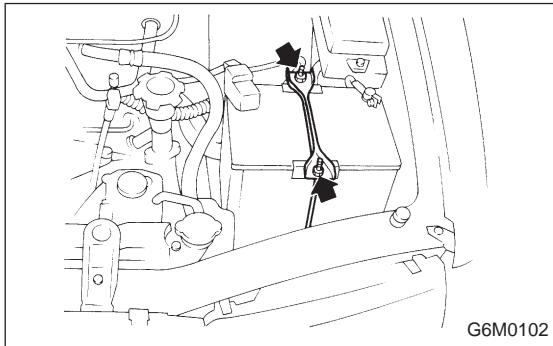

2. Battery

A: REMOVAL AND INSTALLATION

- 1) Disconnect the positive (+) terminal after disconnecting the negative (-) terminal of battery.
- 2) Remove flange nuts from battery rods and take off battery holder.
- 3) Remove battery.
- 4) Installation is in the reverse order of removal.

Tightening torque:

$3.4\pm1.0 \text{ N}\cdot\text{m} (0.35\pm0.1 \text{ kg}\cdot\text{m}, 2.5\pm0.7 \text{ ft}\cdot\text{lb})$

NOTE:

- Clean battery cable terminals and apply grease to retard the formation of corrosion.
- Connect the positive (+) terminal of battery and then the negative (-) terminal of the battery.

B: INSPECTION**WARNING:**

- Electrolyte has toxicity; be careful handling the fluid.
- Avoid contact with skin, eyes or clothing. Especially at contact with eyes, flush with water for 15 minutes and get prompt medical attention.
- Batteries produce explosive gasses. Keep sparks, flame, cigarettes away.
- Ventilate when charging or using in enclosed space.
- For safety, in case an explosion does occur, wear eye protection or shield your eyes when working near any battery. Never lean over a battery.
- Do not let battery fluid contact eyes, skin, fabrics, or paint-work because battery fluid is corrosive acid.
- To lessen the risk of sparks, remove rings, metal watch-bands, and other metal jewelry. Never allow metal tools to contact the positive battery terminal and anything connected to it WHILE you are at the same time in contact with any other metallic portion of the vehicle because a short circuit will be caused.

1. BATTERY**1) External parts:**

Check for the existence of dirt or cracks on the battery case, top cover, vent plugs, and terminal posts. If necessary, clean with water and wipe with a dry cloth. Apply a thin coat of grease on the terminal posts to prevent corrosion.

2) Electrolyte level:

Check the electrolyte level in each cell. If the level is below MIN LEVEL, bring the level to MAX LEVEL by pouring distilled water into the battery cell. Do not fill beyond MAX LEVEL.

3) Specific gravity of electrolyte:


(1) Measure specific gravity of electrolyte using a hydrometer and a thermometer. Specific gravity varies with temperature of electrolyte so that it must be corrected at 20°C (68°F) using the following Equation:

$$S_{20} = St + 0.0007 \times (t - 20)$$

S_{20} : Specific gravity corrected at electrolyte temperature of 20°C

St : Measured specific gravity

t : Measured temperature (°C)

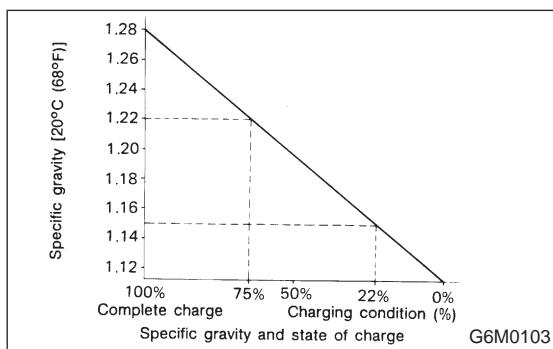

Determine whether or not battery must be charged, according to corrected specific gravity.
Standard specific gravity: 1.220 — 1.290 [at 20°C (68°F)]

(2) Measuring the specific gravity of the electrolyte in the battery will disclose the state of charge of the battery. The relation between the specific gravity and the state of charge is as shown in figure.

C: CHARGING

WARNING:

- Do not bring an open flame close to the battery at this time.

CAUTION:

- Prior to charging, corroded terminals should be cleaned with a brush and common baking soda solution.
- Be careful since battery electrolyte overflows while charging the battery.
- Observe instructions when handling battery charger.
- Before charging the battery on vehicle, disconnect battery ground terminal. Failure to follow this rule may damage alternator's diodes or other electrical units.

1. NORMAL CHARGING

Charge the battery at current value specified by manufacturer or at approximately 1/10 of battery's ampere-hour rating.

2. QUICK CHARGING

Quick charging is a method in which the battery is charged in a short period of time with a relatively large current by using a quick charger.

Since a large current flow raises electrolyte temperature, the battery is subject to damage if the large current is used for prolonged time. For this reason, the quick charging must be carried out within a current range that will not increase the electrolyte temperature above 40°C (104°F). It should be also remembered that the quick charging is a temporary means to bring battery voltage up to a fair value and, as a rule, a battery should be charged slowly with a low current.

CAUTION:

- Observe the items in 1. NORMAL CHARGING.
- Never use more than 10 amperes when charging the battery because that will shorten battery life.




3. JUDGMENT OF BATTERY IN CHARGED CONDITION

- 1) Specific gravity of electrolyte is held at a specific value in a range from 1.250 to 1.290 for more than one hour.
- 2) Voltage per battery cell is held at a specific value in a range from 2.5 to 2.8 volts for more than one hour.

4. CHECK HYDROMETER FOR STATE OF CHARGE

Hydrometer indicator	State of charge	Required action
Green dot	Above 65%	Load test
Dark dot	Below 65%	Charge battery
Clear dot	Low electrolyte	Replace battery* (If cranking complaint)

*: Check electrical system before replacement.

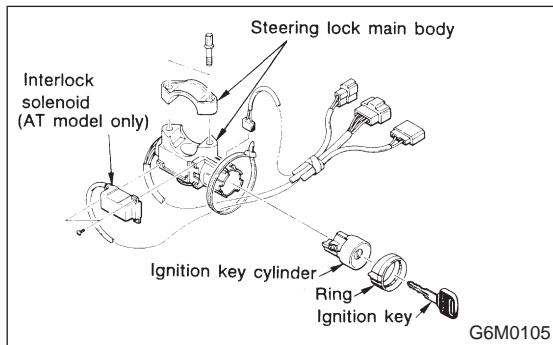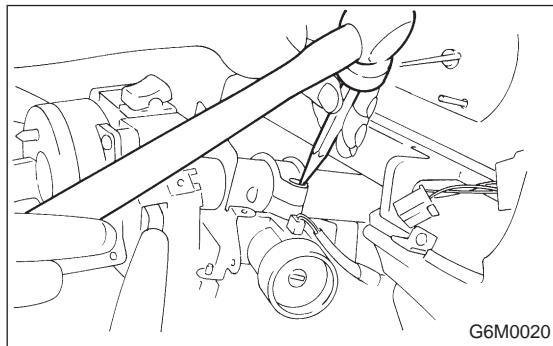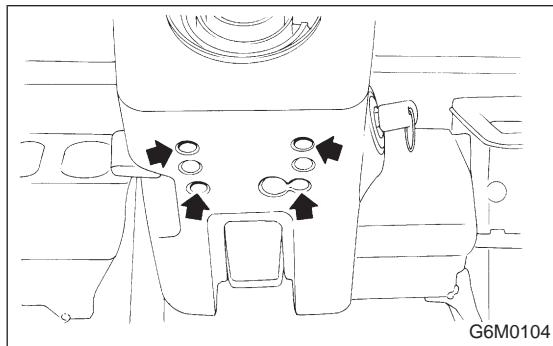

3. Ignition Switch

A: REMOVAL AND INSTALLATION


- 1) Remove screws, separate upper column cover and lower column cover.
- 2) Remove knee protector.
- 3) Remove meter visor.

- 4) Disconnect ignition switch connector from body harness.
- 5) Using a drift and hammer, hit the torn bolt head to loosen and remove the ignition switch.

- 6) Installation is in the reverse order of removal.

NOTE:

When installing, tighten the connecting bolt until its head twists off.

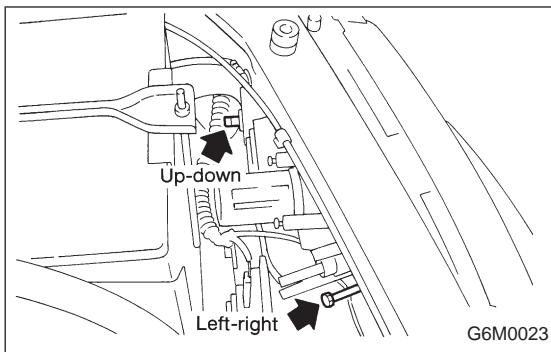

4. Lighting

A: ADJUSTMENT

1. HEADLIGHT AIMING

1) Adjust the headlight aiming by turning the adjusting screws.


CAUTION:

Before checking the headlight aiming, be sure of the following:


- Turn off the light before adjusting headlight aiming. If the light is necessary to check aiming, do not turn on for more than two minutes.
- The area around the headlight has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on level ground.
- The inflation pressure of tires is correct.
- Vehicle's gas tank is fully charged.
- Bounce the vehicle several times to normalize the suspension.
- Make certain that someone is seated in the driver's seat.

NOTE:






Adjust vertical aim first, then horizontal aim.

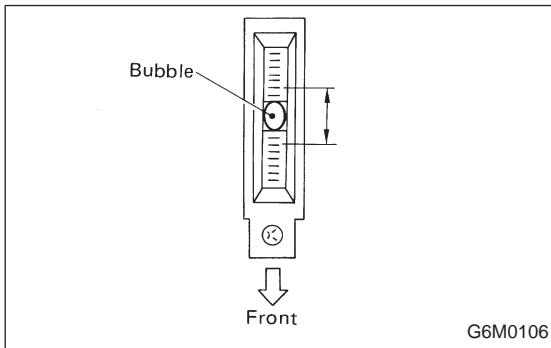

2) Look at the beam angle gauge (vertical movement). The bubble on the gauge should not deviate from the center of the gauge.

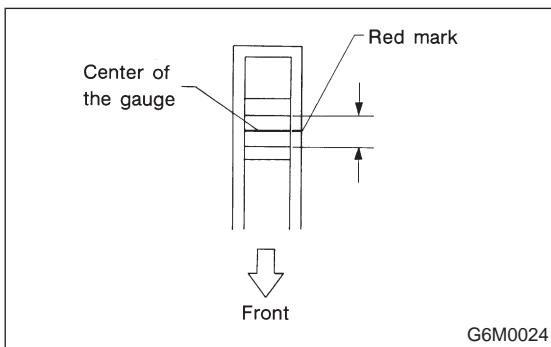

3) Look at the beam angle gauge (horizontal movement). The center mark (the red line on the inner scale) should not deviate from the red line on the outer case.

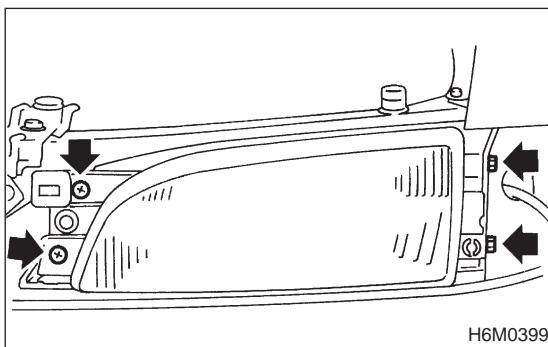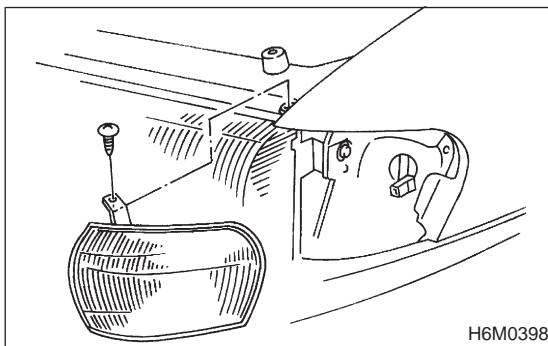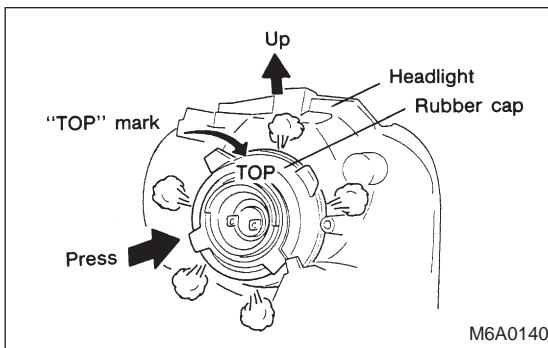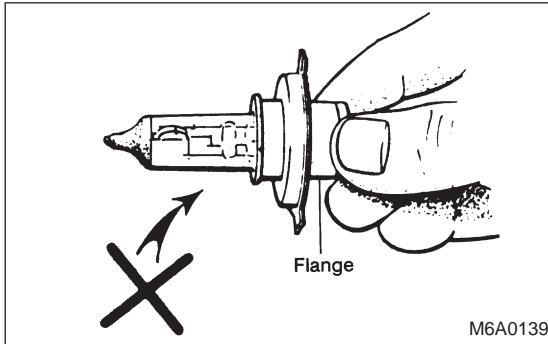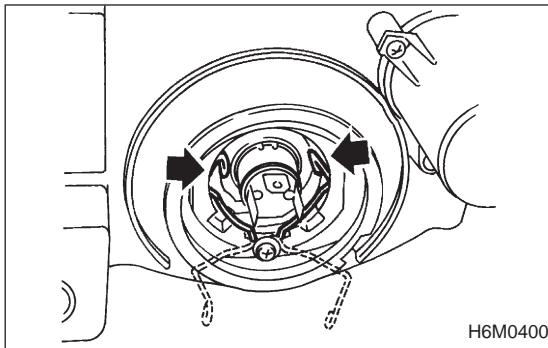

B: REMOVAL AND INSTALLATION

1. HEADLIGHT BULB

- 1) Disconnect the connector from inside of the engine compartment.
- 2) Remove rubber cap.
- 3) Remove the light bulb retaining spring to remove the bulb.
- 4) Replace the bulb with a new one and hook the spring.
- 5) Attach the rubber cap and connect the connector.

CAUTION:

- Since the tungsten halogen bulb operates at high temperature, dirt and oil on the bulb surface decreases the bulb's useful life. When replacing the bulb, hold the flange portion and do not touch the glass portion.

- Attach the rubber cap with letters TOP on the top so that the drain hole will be on the lower side.
- To keep water out, correctly engage the groove portion of the rubber cap.

2. HEADLIGHT AND SIDE MARKER LIGHT

- 1) Remove front grille and disconnect connector from headlight.
- 2) Remove screws which secure side marker light.
- 3) Remove side marker light while disconnecting connector.

- 4) Remove screws and bolts which secure headlight and remove headlight.


Tightening torque:

$6.4 \pm 0.5 \text{ N}\cdot\text{m} (0.65 \pm 0.05 \text{ kg}\cdot\text{m}, 4.7 \pm 0.4 \text{ ft-lb})$

- 5) Installation is in the reverse order of removal.

NOTE:

When installing, securely fit clip (on fender side) into locating (on side marker light side).

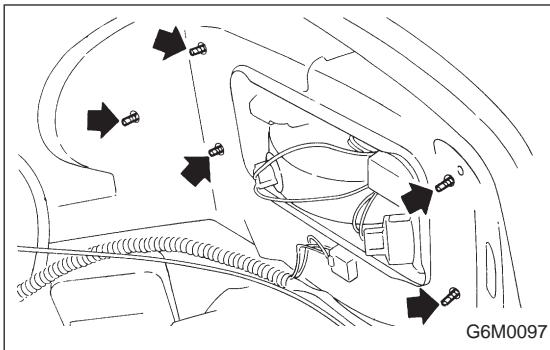

3. REAR COMBINATION LIGHT

- 1) Remove rear trim.
- 2) Remove nuts and disconnect connector.


Tightening torque:

$6.4 \pm 0.5 \text{ N}\cdot\text{m} (0.65 \pm 0.05 \text{ kg}\cdot\text{m}, 4.7 \pm 0.4 \text{ ft}\cdot\text{lb})$

- 3) Attach adhesive cloth tape to body area around rear combination light.
- 4) Using a standard screwdriver, carefully pry rear combination light off and away from the front of vehicle.
- 5) Installation is in the reverse order of removal.

CAUTION:

- Do not pry rear combination light forcefully as this may scratch vehicle body.
- Remove all traces of adhesive tape from body before installation.
- Attach butyl rubber tape to back of rear combination light before installing rear combination light on body for sealing purposes.

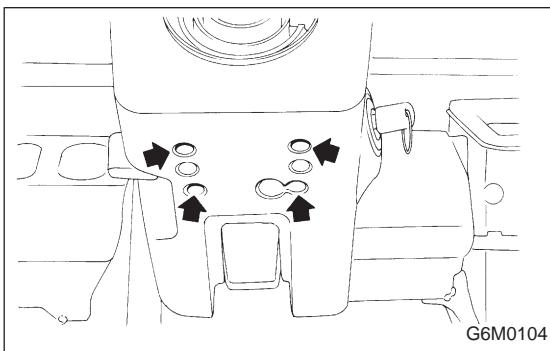

4. COMBINATION SWITCH (WITHOUT AIRBAG MODEL)

NOTE:


For the removal procedure of combination switch, refer to procedure for removal of combination switch on airbag equipped model. <Ref. to 5-5 [W6A0].>

- 1) Remove steering wheel.
- 2) Remove screws which secure upper column cover to lower column cover.
- 3) Remove screws which secure knee protector and remove knee protector.

CAUTION:

When installing knee protector, ensure that harness is not caught by adjacent parts.

- 4) Disconnect connector from body harness and undo holdown band.

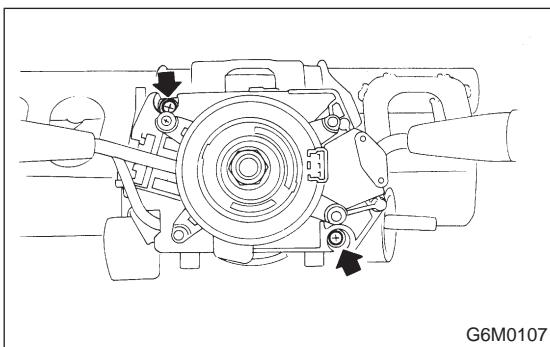


- 5) Remove screws which secure switch and remove switch.
- 6) Installation is in the reverse order of removal.


CAUTION:

During installation (with key interlock):

- When routing combination switch harness around steering system, do not place it over key interlock release knob.
- After installing lower column cover, ensure that key interlock release knob is accessible.

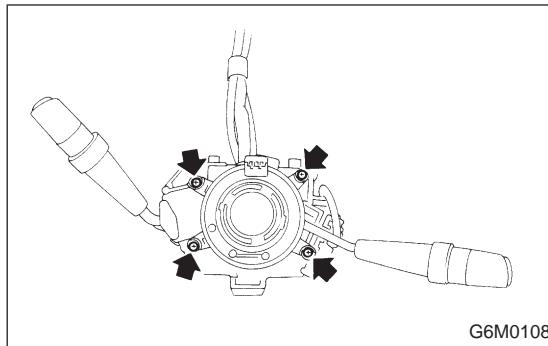

G6M0108

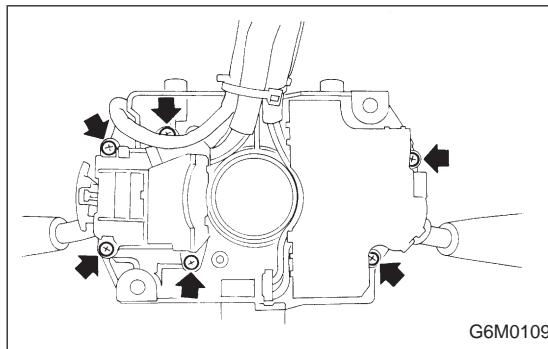

G6M0109

C: DISASSEMBLY AND ASSEMBLY

1. COMBINATION SWITCH

- 1) Remove screws which secure slip ring to combination switch, and remove slip ring.

- 2) Remove screws which secure lighting switch, wiper and washer switch. Remove both switches.


3) Assembly is in the reverse order of disassembly.

D: INSPECTION

1. COMBINATION SWITCH (ON-CAR)

- 1) Remove instrument panel lower cover.
- 2) Remove lower column cover.

- 3) Unfasten holddown clip which secures harness, and disconnect connectors from body harness.

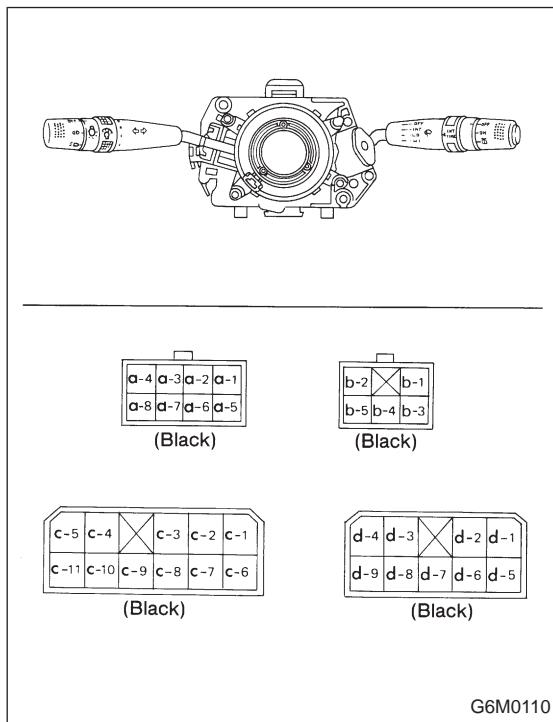

G6M0110

4) Move combination switch to respective positions and check continuity between terminals.

LIGHTING SWITCH


Terminal (Wire color) Switch position	c-1 (W)	c-2 (W)	c-3 (R)
OFF			
Tail	○	○	
Head	○	○	○

PARKING SWITCH

Terminal (Wire color) Switch position	c-10 (R)	c-11 (RG)	c-9 (RW)
OFF	○	○	
ON		○	○

DIMMER AND PASSING SWITCH



Terminal (Wire color) Switch position	a-3 (B)	a-2 (RB)	a-1 (RY)	a-4 (YR)
Flash	○		○	○
Low beam	○	○		
Hi-beam	○	○		

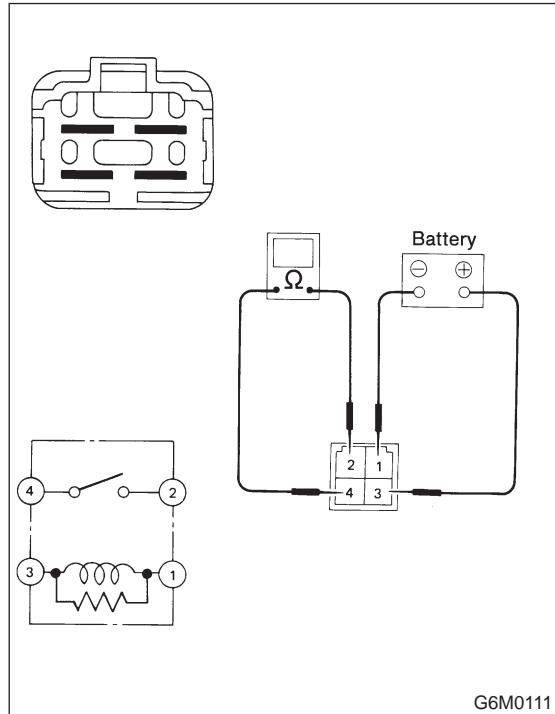

2. HEADLIGHT RELAY

Check continuity between terminals when terminal No. 3 is connected to battery and terminal No. 1 is grounded.

When current flows.	Between terminals No. 2 and No. 4	Continuity exists.
	Between terminals No. 2 and No. 4	Continuity does not exist.
When current does not flow.	Between terminals No. 1 and No. 3	Continuity exists.

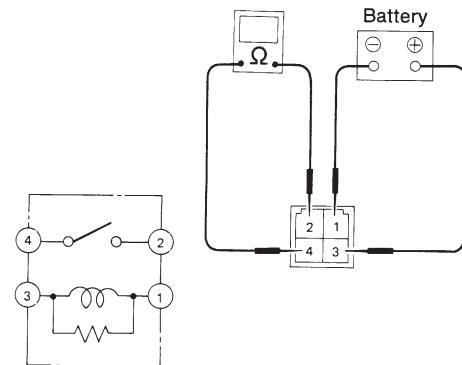
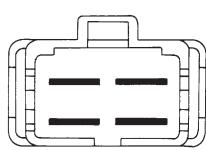


G6M0112

3. TAIL AND ILLUMINATION RELAY

Check continuity between terminals (indicated in table below) when terminal No. 3 is connected to battery and terminal No. 1 is grounded.

When current flows.	Between terminals No. 2 and No. 4	Continuity exists.
When current does not flow.	Between terminals No. 2 and No. 4	Continuity does not exist.
	Between terminals No. 1 and No. 3	Continuity exists.

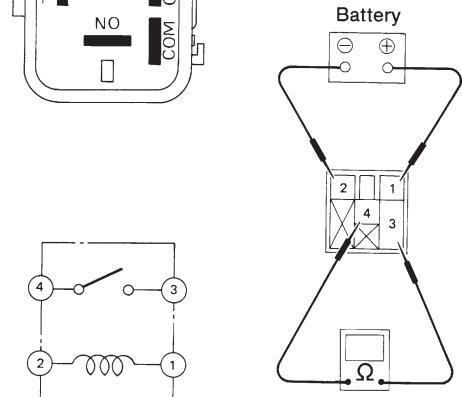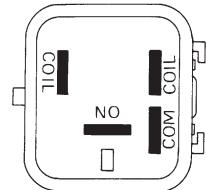


G6M0113

4. DAYTIME RUNNING LIGHT RELAY

- 1) Check continuity between terminals when terminal No. 1 is connected to battery and terminal No. 2 is grounded.


When current flows.	Between terminals No. 3 and No. 4	Continuity exists.
When current does not flow.	Between terminals No. 3 and No. 4	Continuity does not exist.
	Between terminals No. 1 and No. 2	Continuity exists.

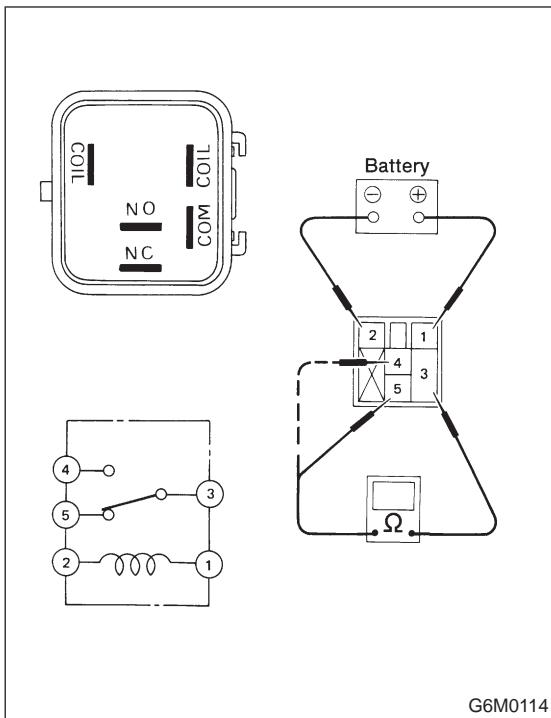


G6M0114

2) Check continuity between terminals when terminal No. 1 is connected to battery and terminal No. 2 is grounded.


When current flows.	Between terminals No. 3 and No. 5	Continuity does not exist.
	Between terminals No. 3 and No. 4	Continuity exists.
When current does not flow.	Between terminals No. 3 and No. 5	Continuity exists.
	Between terminals No. 3 and No. 4	Continuity does not exist.
	Between terminals No. 1 and No. 2	Continuity exists.

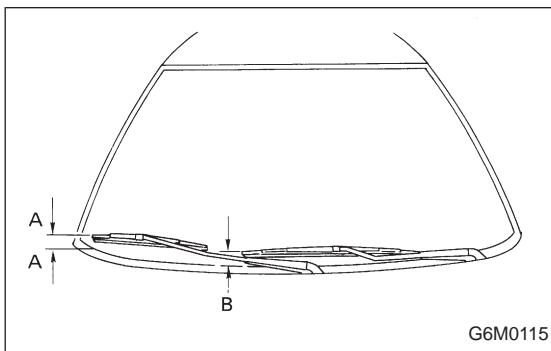

G6M0115

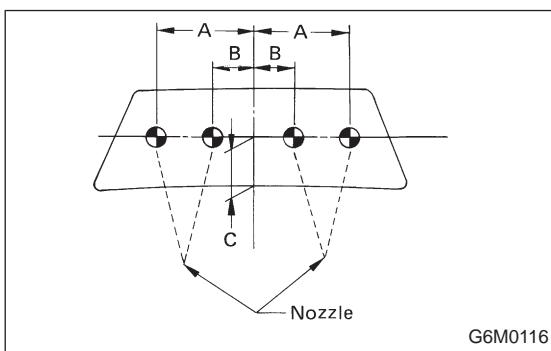

G6M0116

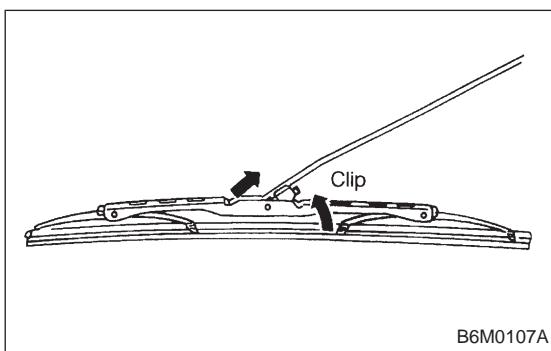

B6M0107A

5. Front Wiper and Washer

A: ADJUSTMENT

- 1) Turn the wiper switch to OFF position.
- 2) Adjust blades in original position as shown in figure by changing wiper arm installation.

Original position:

A: $22.5 \pm 7.5 \text{ mm (} 0.886 \pm 0.295 \text{ in)}$
 B: $32.5 \pm 7.5 \text{ mm (} 1.280 \pm 0.295 \text{ in)}$

- 3) Adjust washer ejecting point on windshield glass as shown in figure when car stops.


Ejecting point:

A: 375 mm (14.76 in)
 B: 150 mm (5.91 in)
 C: 350 mm (13.78 in)

B: REMOVAL AND INSTALLATION

1. BLADE

- 1) Pull out blade following the arrow direction, from arm while pushing up locking clip.
- 2) Installation is in the reverse order of removal.

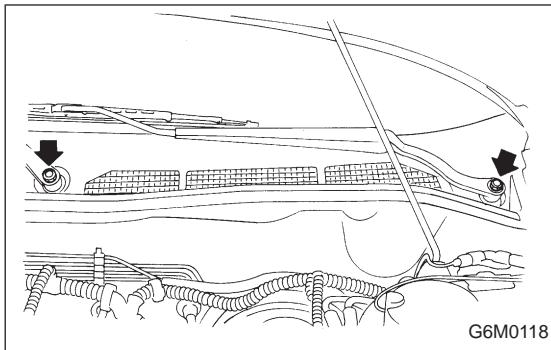


2. WIPER ARM

- 1) Open front hood.
- 2) Remove cap. Remove the nut which secure wiper arm, and remove wiper arm.
- 3) Installation is in the reverse order of removal.

Tightening torque:


$14\pm4 \text{ N}\cdot\text{m} (1.4\pm0.4 \text{ kg}\cdot\text{m}, 10.1\pm2.9 \text{ ft-lb})$

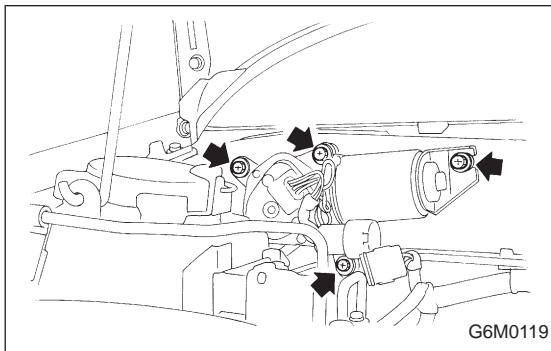

- 2) Disconnect electric connector, and remove motor attaching bolts.

Tightening torque:


$5.9\pm1.5 \text{ N}\cdot\text{m} (0.6\pm0.15 \text{ kg}\cdot\text{m}, 4.3\pm1.1 \text{ ft-lb})$

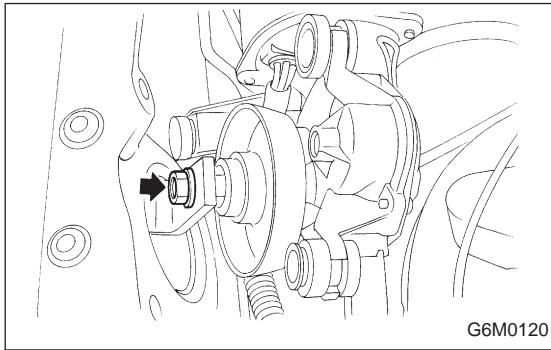

- 3) Remove nut securing motor link on the back side of motor.

Tightening torque:


$15\pm3 \text{ N}\cdot\text{m} (1.5\pm0.3 \text{ kg}\cdot\text{m}, 11\pm2.2 \text{ ft-lb})$

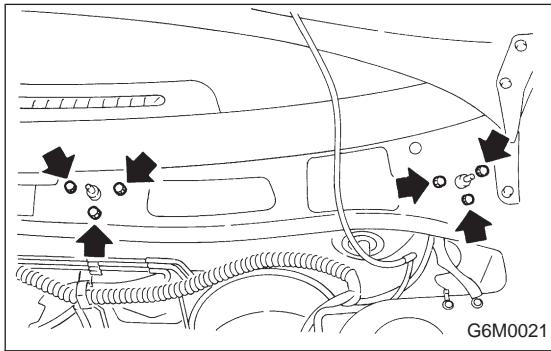


- 4) Remove nuts which secure sleeve unit.

Tightening torque:

$5.9\pm1.5 \text{ N}\cdot\text{m} (0.6\pm0.15 \text{ kg}\cdot\text{m}, 4.3\pm1.1 \text{ ft-lb})$

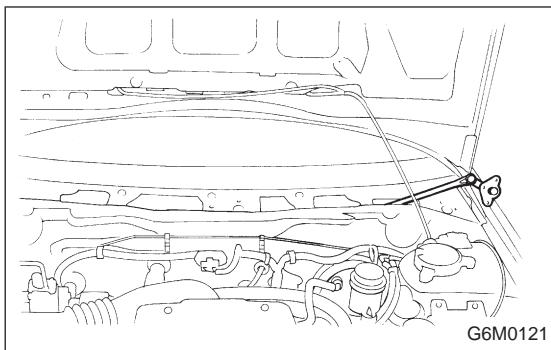

5) Remove wiper link from service hole in front panel.
 6) Installation is in the reverse order of removal.

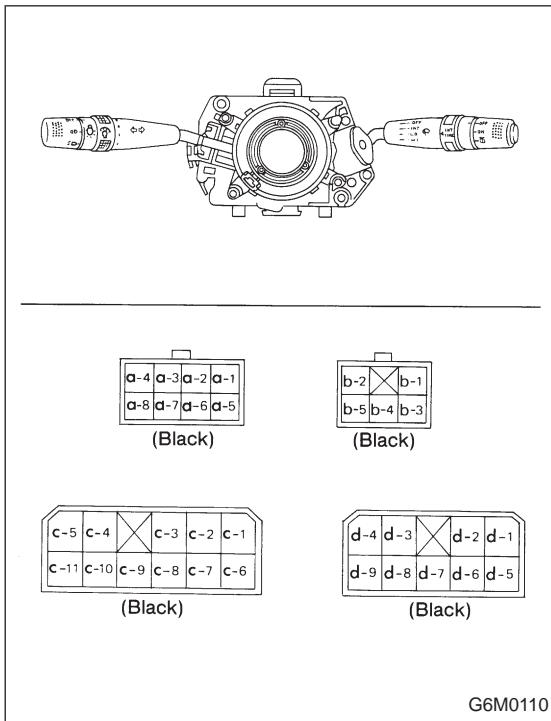

C: INSPECTION

1. COMBINATION SWITCH (ON-CAR)


Set wiper switch to each position and check continuity between terminals.

Wiper switch

Switch position	Terminal (Wire color)	d-9 (Y)	d-8 (L)	d-6 (LY)	d-7 (LW)	INT1	INT2
OFF	OFF	<input type="circle"/>	<input type="circle"/>				
		x		-x			
	MIST		<input type="circle"/>	<input type="circle"/>			
INT	OFF	<input type="circle"/>	<input type="circle"/>			<input type="circle"/>	<input type="circle"/>
		x		-x			
	MIST		<input type="circle"/>	<input type="circle"/>		<input type="circle"/>	<input type="circle"/>
LO	OFF		<input type="circle"/>	<input type="circle"/>			
	MIST		<input type="circle"/>	<input type="circle"/>			
HI	OFF			<input type="circle"/>	<input type="circle"/>		
	MIST		<input type="circle"/>	<input type="circle"/>	<input type="circle"/>		


Washer switch

Switch position	Terminal (Wire color)	d-5 (B)	d-2 (W)
OFF			
ON		<input type="circle"/>	<input type="circle"/>

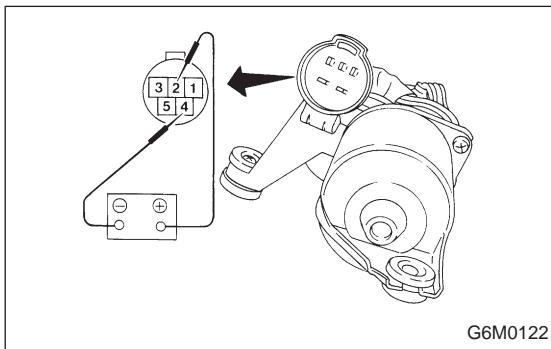


2. WIPER MOTOR

1) Check wiper motor operation at low speed:
 Connect battery to wiper motor. Check wiper motor for proper operation at low speed.

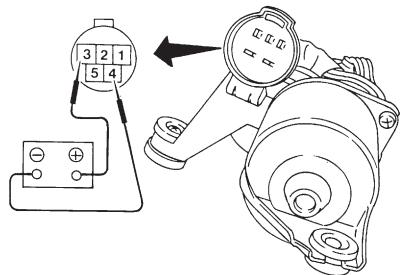


G6M0123

2) Check wiper motor operation at high speed:
Connect battery wiper motor. Check wiper motor for proper operation at high speed.

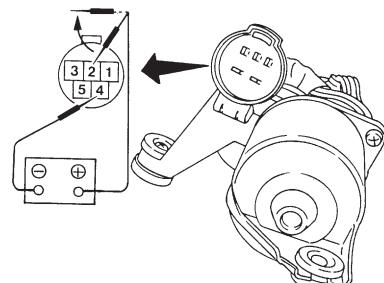


G6M0124

3) Check wiper motor for proper stoppage:
Connect battery to wiper motor. After operating wiper motor at low speed, disconnect battery to stop it.

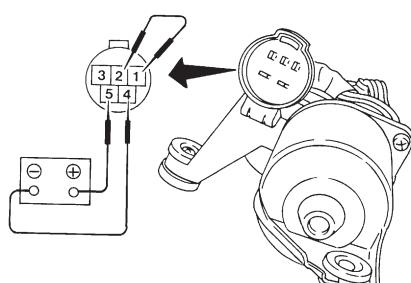

G6M0125

4) Reconnect battery and ensure that wiper motor stops at "AUTO STOP" after operating at low speed.

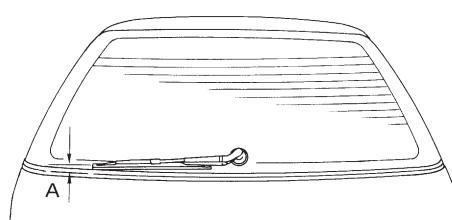

G6M0126


6. Rear Wiper and Washer

A: ADJUSTMENT

1) Adjust wiper blade in original position as shown in figure by changing wiper arm installation.

Original position:

A: 30 ± 5 mm (1.18 \pm 0.20 in)

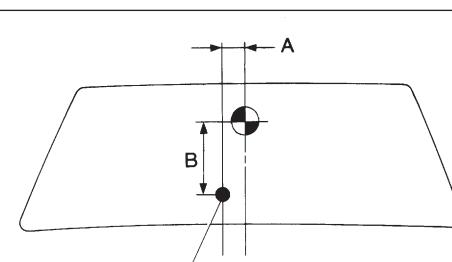





G6M0127

2) Adjust washer ejecting point on rear gate window as shown in figure when the vehicle stops.

Ejecting point:

A: 25 mm (0.98 in)

B: 200 — 300 mm (7.87 — 11.81 in)

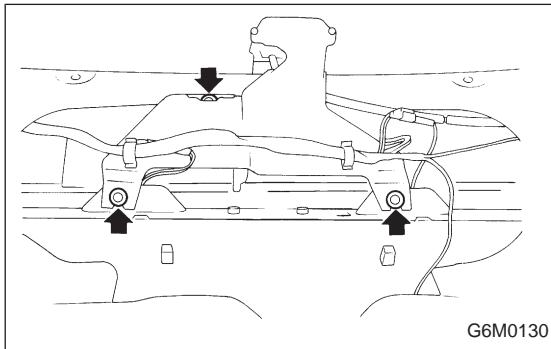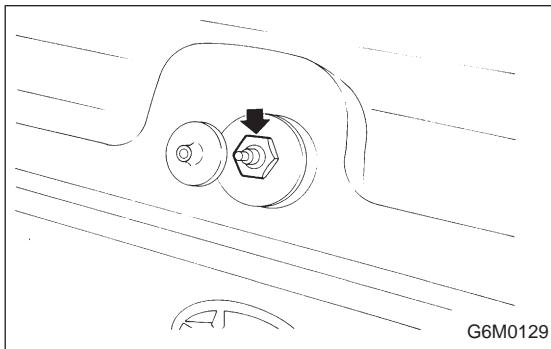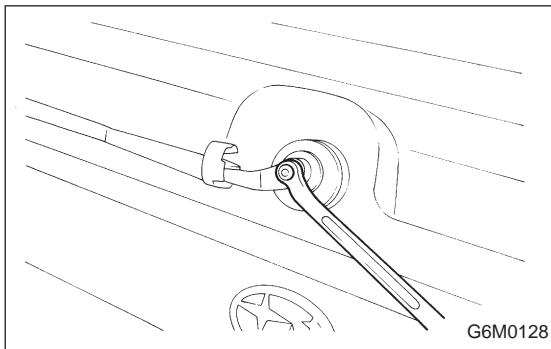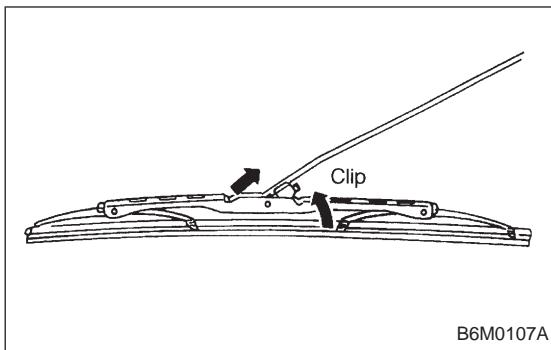

B: REMOVAL AND INSTALLATION

1. BLADE

- 1) Pull out blade following the arrow direction, from arm while pushing up locking clip.
- 2) Installation is in the reverse order of removal.

2. WIPER ARM

- 1) Remove head cover.
- 2) Remove nut and wiper arm.
- 3) Installation is in the reverse order of removal.

Tightening torque:

$5.9 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $4.3 \pm 1.1 \text{ ft-lb}$)

3. WIPER MOTOR

- 1) Remove cap and special nut.

CAUTION:

Be careful not to strike service tool against nozzle during removal.

Tightening torque:

$7.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.15 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.1 \text{ ft-lb}$)

- 2) Remove rear gate trim. <Ref. to 5-2 [W3A0].>
- 3) Undo clips which secure harness, and disconnect connector of wiper motor.

- 4) Separate washer hoses at joint.

- 5) Remove attaching screws and take out wiper motor assembly.


CAUTION:

Be careful not to damage O-ring when removing wiper motor assembly.

- 6) Installation is in the reverse order of removal.

Tightening torque:

$5.9 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $4.3 \pm 1.1 \text{ ft-lb}$)

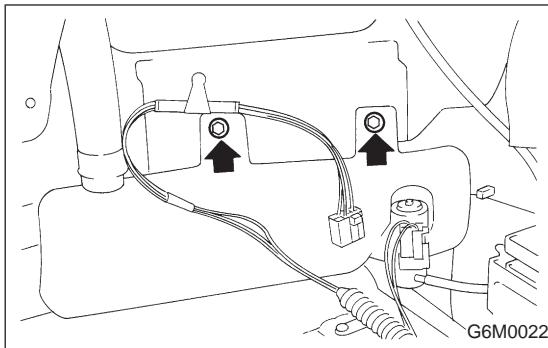


4. WASHER TANK

- 1) Remove rear quarter trim.
- 2) Disconnect washer hose and connector.
- 3) Remove attaching bolts.
- 4) Installation is in the reverse order of removal.

Tightening torque:

$5.9 \pm 1.5 \text{ N}\cdot\text{m} (0.6 \pm 0.15 \text{ kg}\cdot\text{m}, 4.3 \pm 1.1 \text{ ft-lb})$

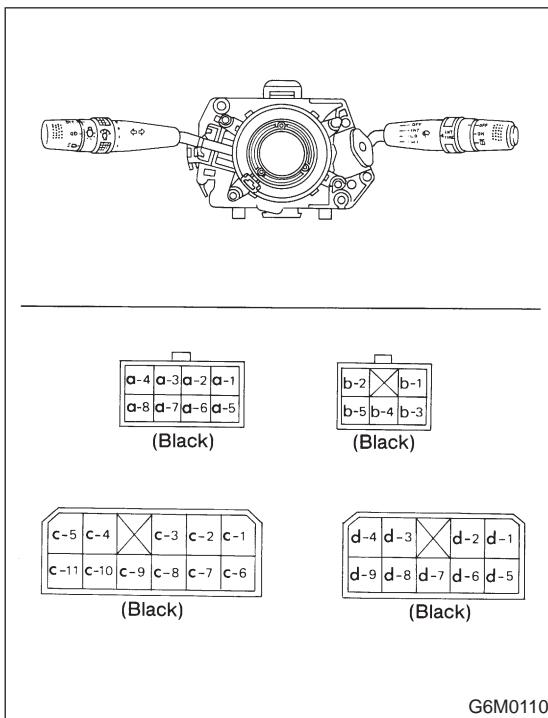


C: INSPECTION

1. COMBINATION SWITCH (ON-CAR)

Set rear wiper and washer switch to each position and check continuity between terminals.

WITHOUT INTERMITTENT REAR WIPER


Switch position	Terminal d-2	Terminal d-1		Terminal d-3
WASH	<input type="circle"/>	<input type="circle"/>		<input type="circle"/>
OFF				
ON	<input type="circle"/>		<input type="circle"/>	
WASH	<input type="circle"/>	<input type="circle"/>		<input type="circle"/>

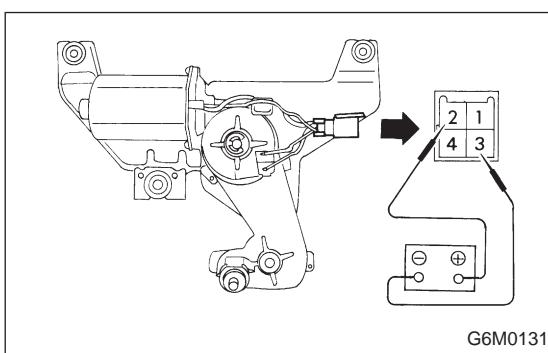

2. WIPER MOTOR


1) Operational check:

Connect battery to wiper motor and check operation of wiper motor.

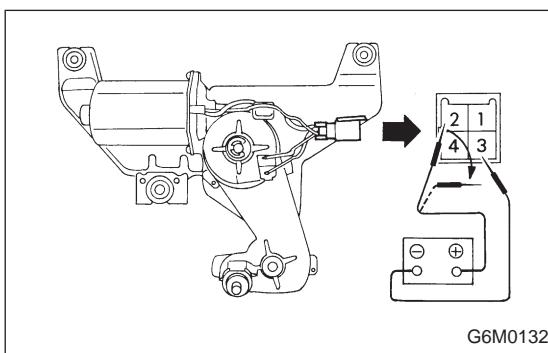


2) Check wiper motor for proper stoppage:

After operating wiper motor, disconnect battery from wiper motor.

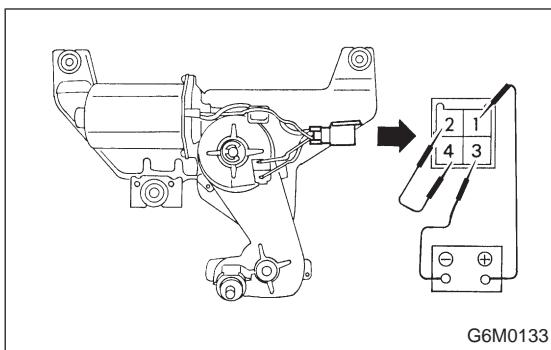





3) Reconnect battery and ensure that wiper motor stops at "AUTO STOP" after it has been operated.

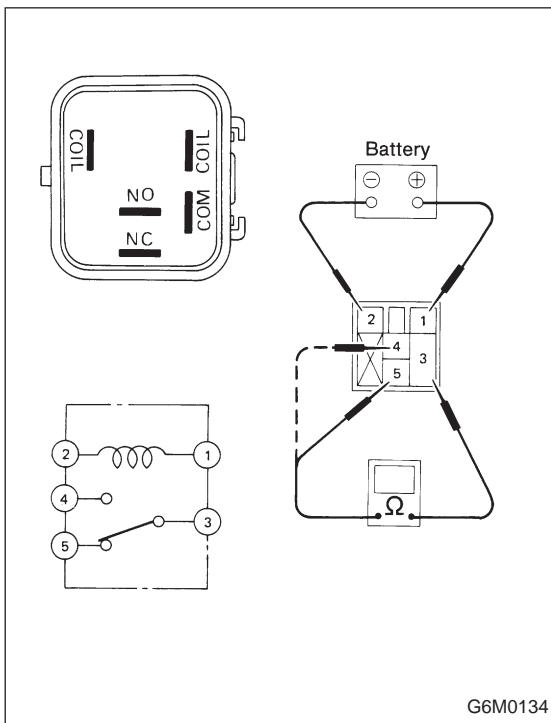

3. REAR WIPER RELAY

1) Connect battery to terminal No. 1 and ground terminal No. 2.
 2) Check continuity between terminals.

When current flows.	Between terminals No. 3 and No. 5	Continuity does not exist.
	Between terminals No. 3 and No. 4	Continuity exists.
When current does not flow.	Between terminals No. 3 and No. 5	Continuity exists.
	Between terminals No. 3 and No. 4	Continuity does not exist.
	Between terminals No. 1 and No. 2	Continuity exists.

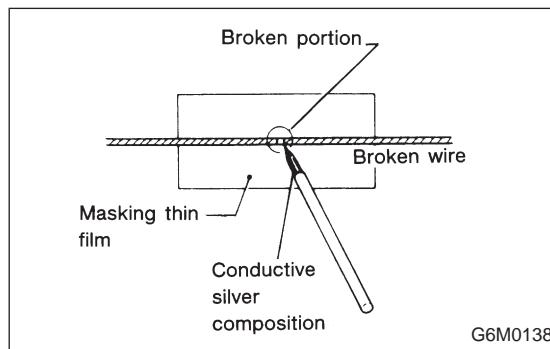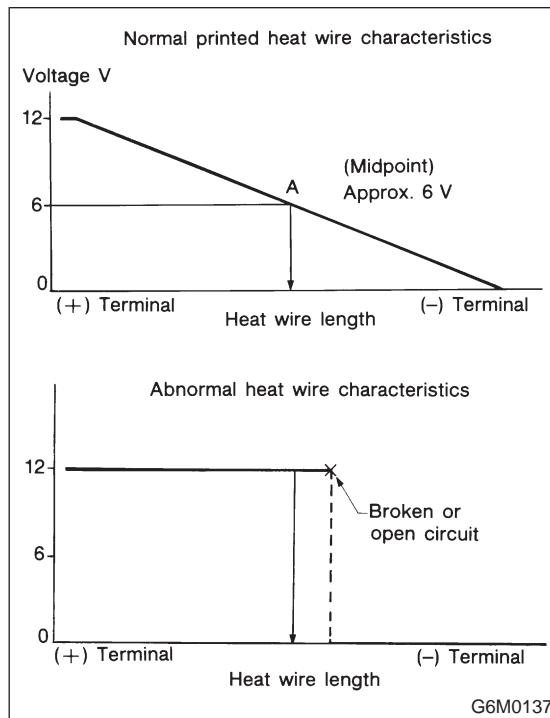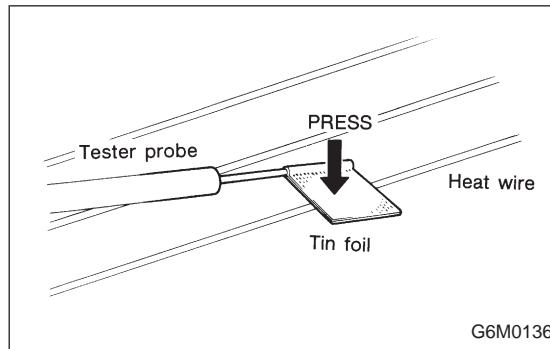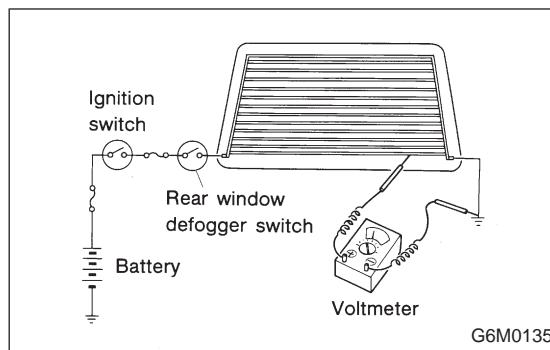

7. Rear Window Defogger

A: INSPECTION

1. HEAT WIRES

- 1) Start the engine so that battery is being charged.
- 2) Turn defogger switch ON.
- 3) Check each heat wire at its center position for discontinuity by setting direct current voltmeter.

NOTE:

Normal indication is about 6 volts.



NOTE:

When measuring voltage, wind a piece of tin foil around the tip of the tester probe and press the foil against the wire with your finger.

- 4) When tester indicates 12 volts when its probe reaches point "A", a broken circuit occurs between point "A" and the negative terminal. Slowly move tester probe toward the negative terminal while contacting it on heat wire to locate point where tester indication changes abruptly (0 volts). This is the point where a broken circuit occurs. When tester indicates 0 volts when its probe reaches point "A", a broken circuit occurs between point "A" and the positive terminal. Locate a point where tester indication changes abruptly (12 volts) while slowly moving tester probe toward the positive terminal.

B: REPAIR

- 1) Clean broken wire and its surrounding area.
- 2) Cut off slit on (used) thin film by 0.5 mm (0.020 in) width and 10 mm (0.39 in) length.
- 3) Place the slit on glass along the broken wire, and deposit conductive silver composition (DUPONT No. 4817) on the broken portion.
- 4) Dry out the deposited portion.
- 5) Inspect the repaired wire for continuity.

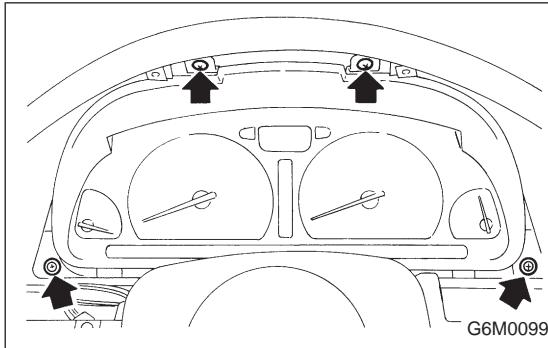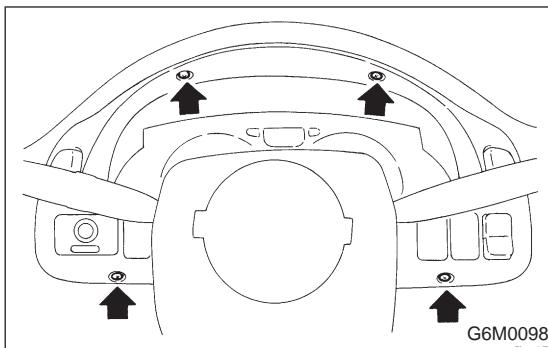

8. Combination Meter


A: REMOVAL AND INSTALLATION

- 1) Move steering wheel down.
- 2) Remove screws which secure visor and remove visor.
- 3) Disconnect switch connectors.
- 4) Remove screws which secure combination meter, and pull combination meter out.
- 5) Disconnect connector and speedometer cable from back of combination meter.
- 6) Installation is in the reverse order of removal.

CAUTION:

When installing combination meter, be sure to connect speedometer cable and connectors to backside of combination meter.

B: BULB REPLACEMENT


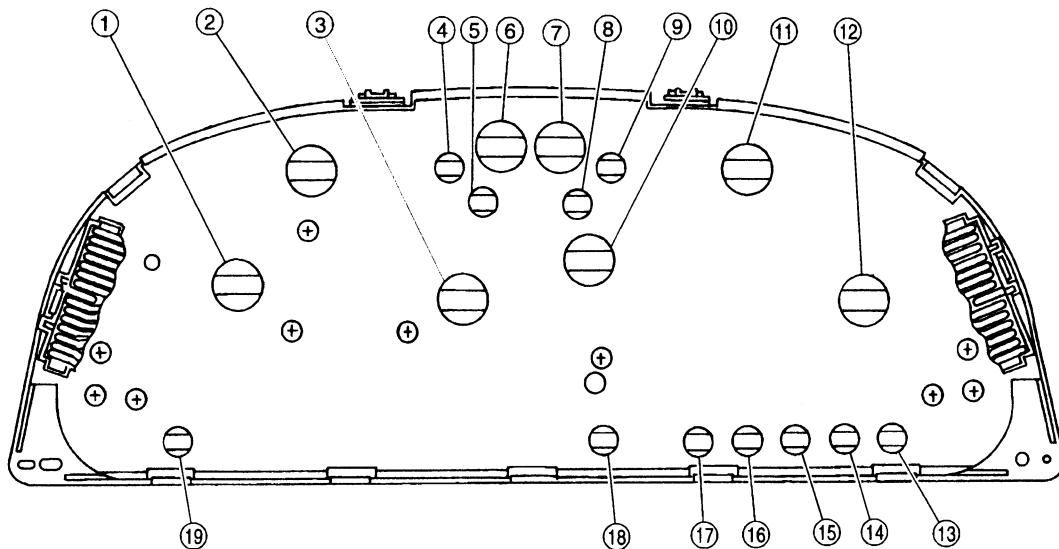


H6M0350A

- ① Speedometer and fuel gauge
- ② Speedometer
- ③ Speedometer
- ④ Turn RH
- ⑤ Door open
- ⑥ Hi-beam
- ⑦ Brake

- ⑧ Seat belt
- ⑨ Turn LH
- ⑩ Tachometer
- ⑪ Tachometer
- ⑫ Tachometer and temperature gauge
- ⑬ Check engine

- ⑭ Charge
- ⑮ Oil pressure
- ⑯ AT oil temp.
- ⑰ ABS
- ⑱ Rear defogger
- ⑲ FWD

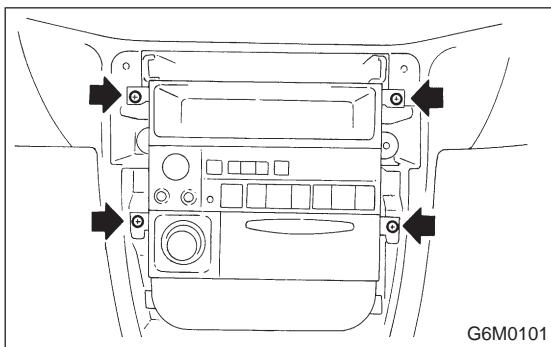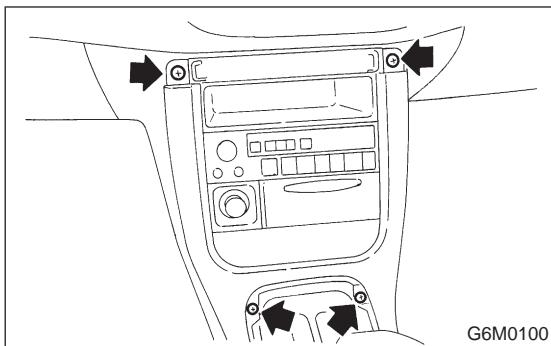

9. Radio, Speaker and Antenna

A: REMOVAL AND INSTALLATION

1. RADIO BODY

- 1) Remove cup holder.
- 2) Remove AT cover (AT model).
- 3) Remove screws which secure center panel. Remove center panel.
- 4) Remove fitting screws, and slightly pull radio out of instrument panel.
- 5) Disconnect electric connectors and antenna feeder cord.
- 6) Installation is in the reverse order of removal.

2. FRONT SPEAKER

- 1) Remove front door trim and disconnect connector. <Ref. to 5-2 [W2A2].>
- 2) Remove screws which secure front speaker.
- 3) Remove speaker and disconnect connector.
- 4) Installation is in the reverse order of removal.

3. REAR SPEAKER (WAGON)


- 1) Remove rear door trim and disconnect connector. <Ref. to 5-2 [W2A2].>
- 2) Remove screws which secure rear speaker.
- 3) Remove speaker and disconnect connector.
- 4) Installation is in the reverse order of removal.

4. REAR SPEAKER (SEDAN)

- 1) Remove rear shelf trim panels.
- 2) Remove screws which secure rear speakers.
- 3) Disconnect connector and remove speakers.
- 4) Installation is in the reverse order of removal.

1. AT Shift Lock System

A: WIRING DIAGRAM

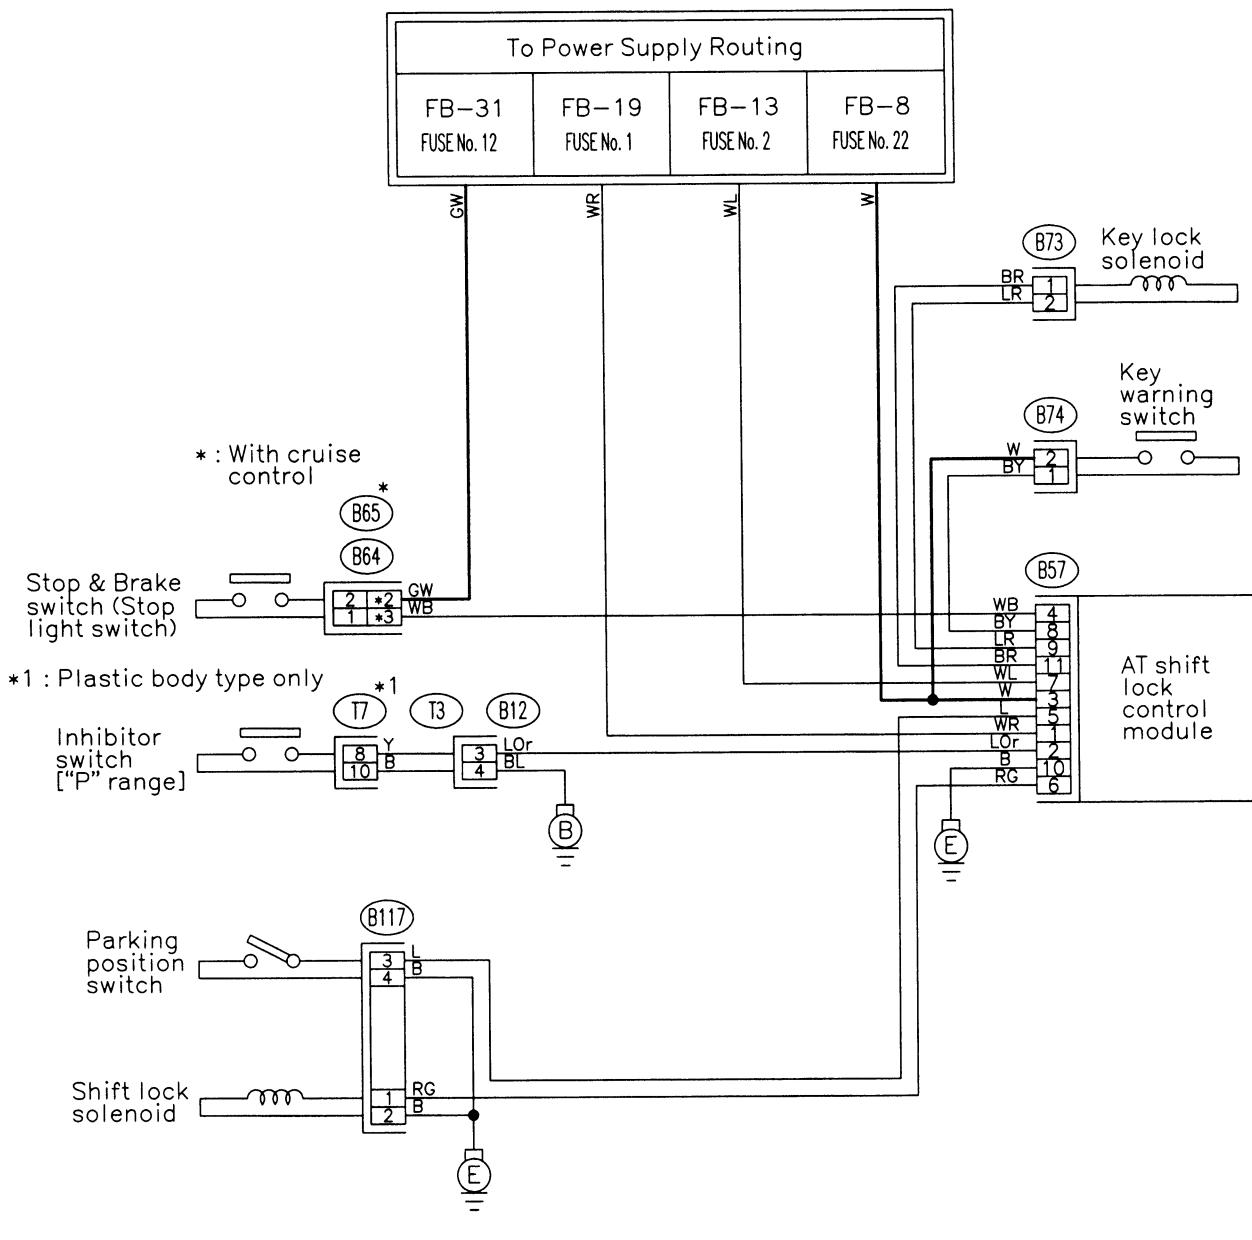


(B74) (Black)

(B73) (Black)

(B64) (Black)



(B65) (Black)

(B117)




(B77) (Black)

(B12) (Gray)




GU42-03


B: BASIC DIAGNOSTICS CHART

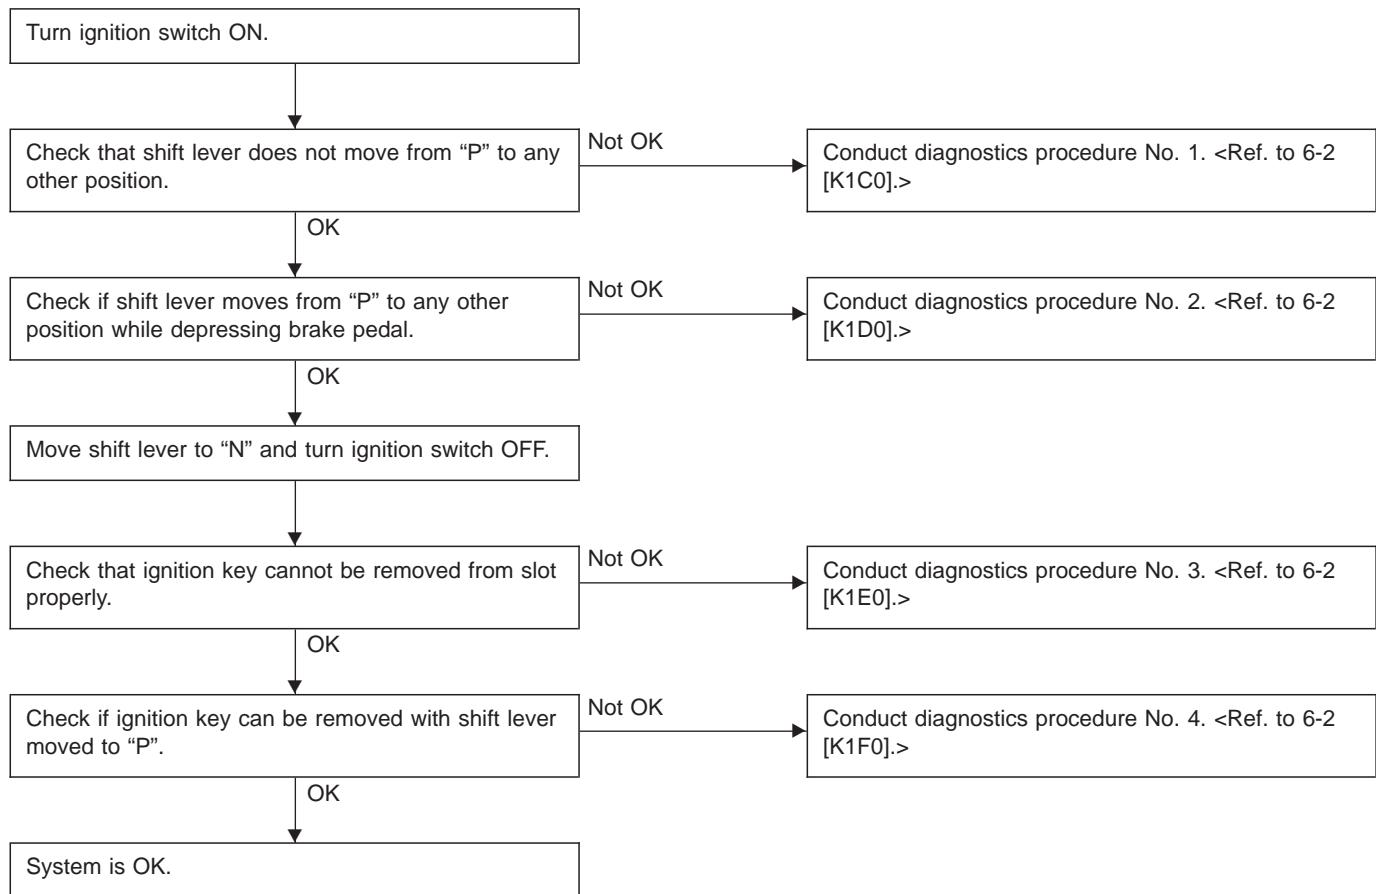


C: DIAGNOSTICS PROCEDURE No. 1

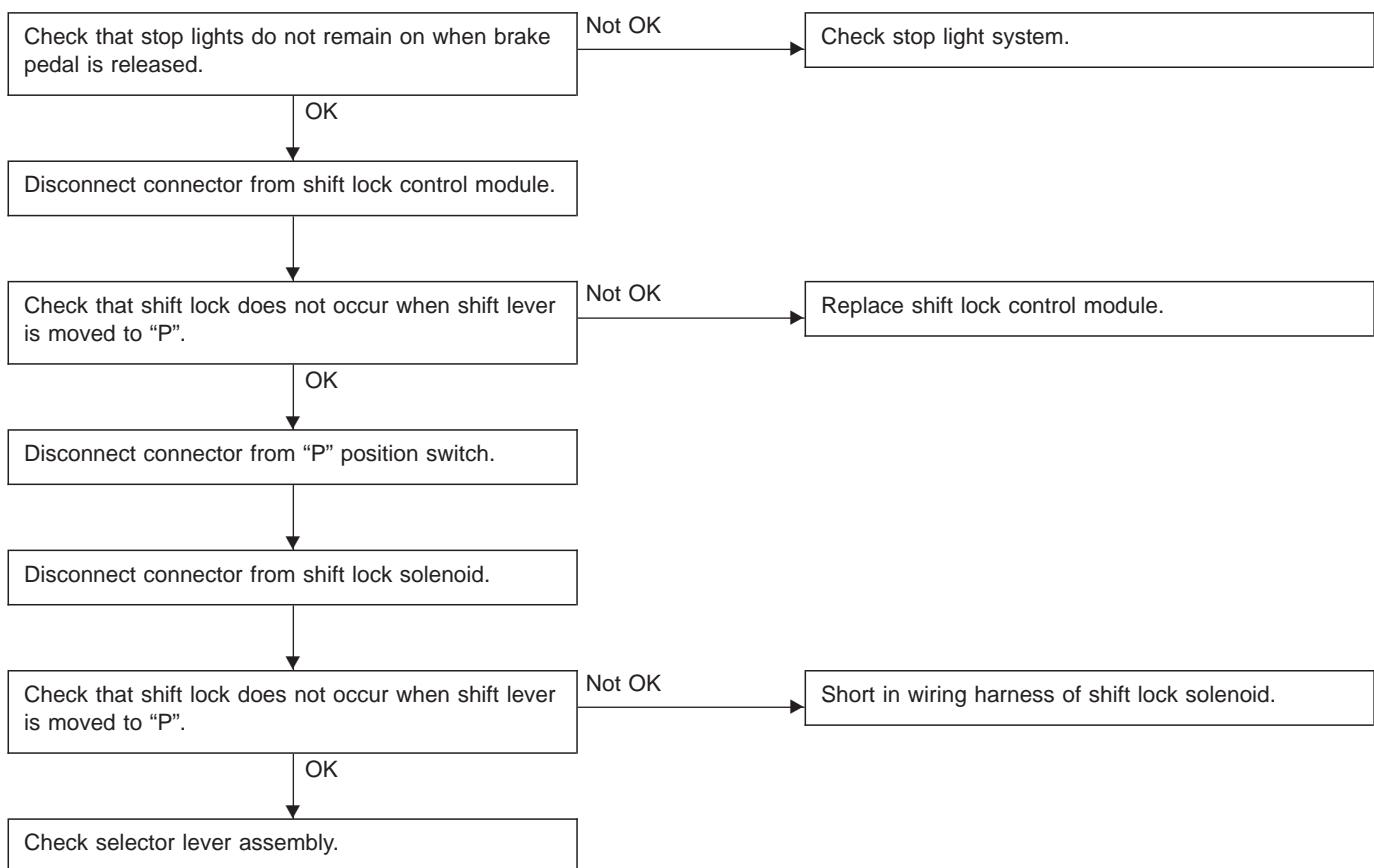

D: DIAGNOSTICS PROCEDURE No. 2 (SHIFT LOCK DOES NOT RELEASE.)

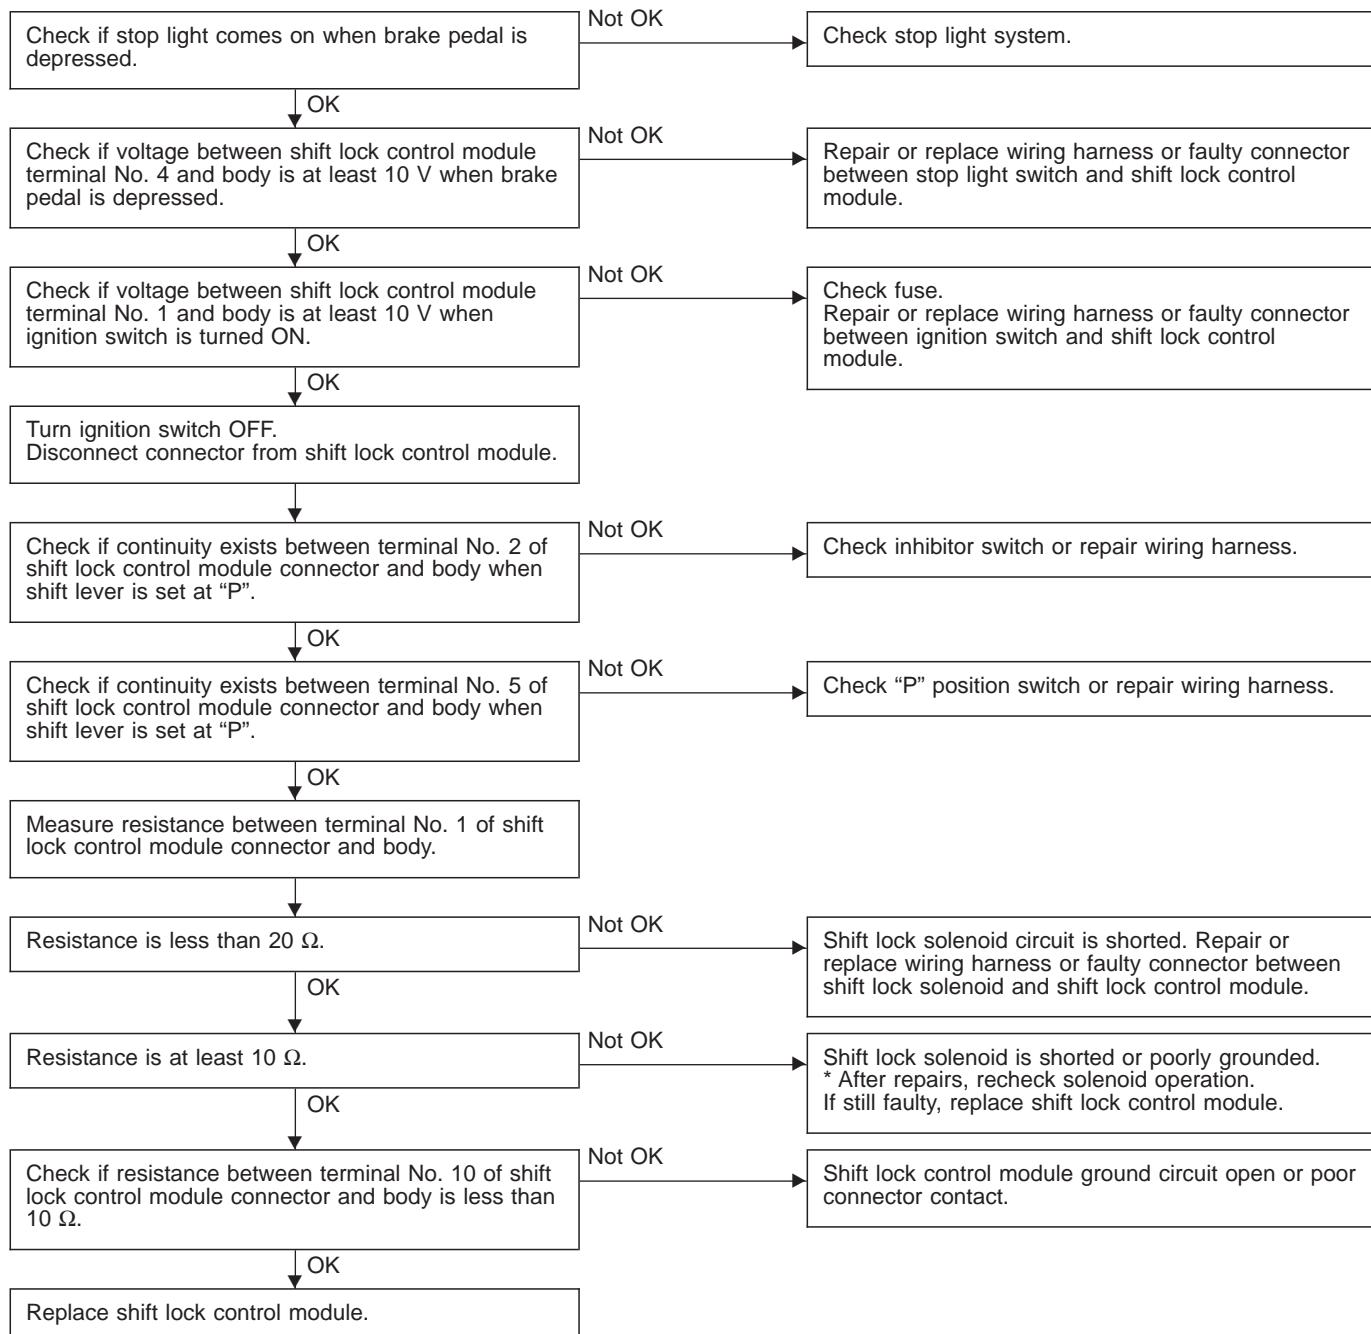


E: DIAGNOSTICS PROCEDURE No. 3 (KEY INTERLOCK DOES NOT OPERATE.)

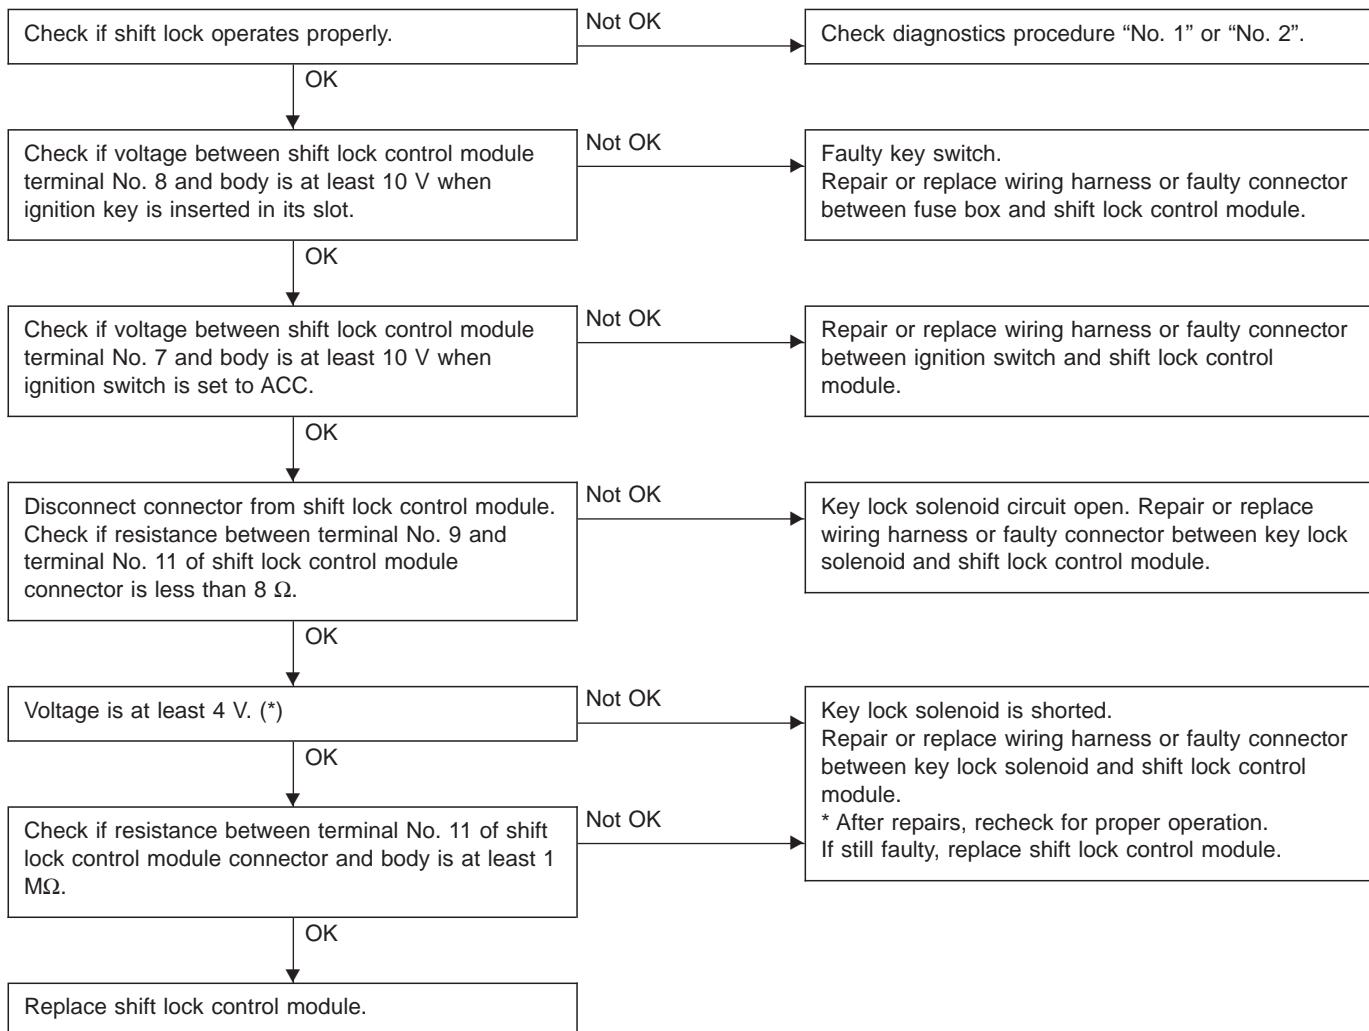

***:** When conducting operational checks of the key lock solenoid, do not apply 12 V to solenoid for more than one second, since this may break solenoid circuit.

F: DIAGNOSTICS PROCEDURE No. 4 (KEY INTERLOCK DOES NOT RELEASE.)

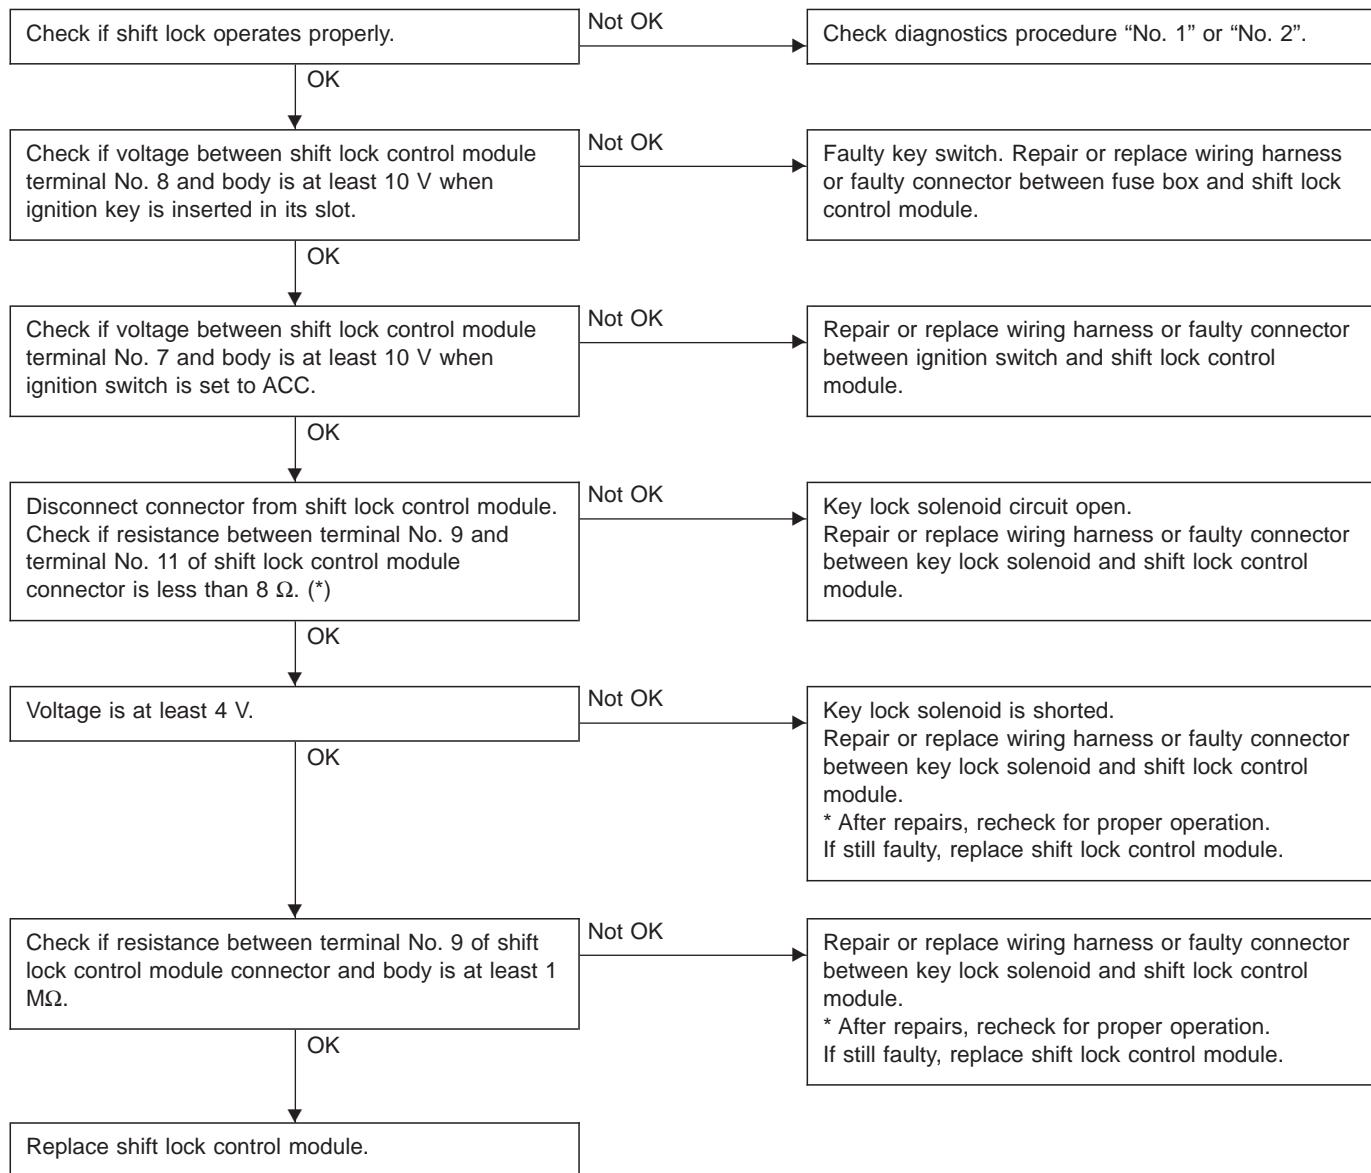

*: When conducting operational checks of the key lock solenoid, do not apply 12 V to solenoid for more than one second, since this may break solenoid circuit.


2. Combination Meter

A: DIAGNOSTICS PROCEDURE

If speedometer does not operate, or operates abnormally, check combination meter circuit.

CAUTION:

Make sure that trouble code of vehicle speed sensor 2 system appears in electrical system on-board diagnosis.

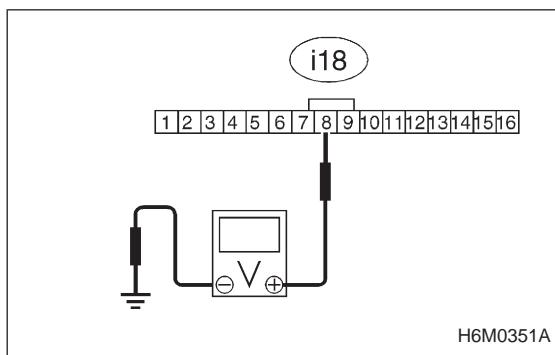

2A1

CHECK POWER SUPPLY FOR COMBINATION METER.

- 1) Remove combination meter.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between combination meter connector and chassis ground.



: **Connector & terminal**

(i18) No. 8 (+) — Chassis ground (-):
Is the voltage more than 10 V?



: Go to step 2A2.




: Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between combination meter and battery.
- Poor contact in coupling connectors (i18) and combination meter connector. <Ref. to FOREWORD [T3C1].>

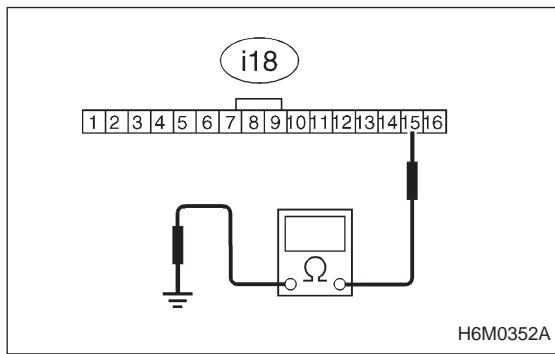

2A2

CHECK GROUND CIRCUIT OF COMBINATION METER.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness between combination meter connector and chassis ground.



: **Connector & terminal**

(i18) No. 15 (+) — Chassis ground (-):
Is the resistance less than 10 Ω?



: Go to step 2A3.




: Repair harness and connector.

2A3

CHECK VEHICLE SPEED SENSOR 2.

NOTE:

- If resistance between terminals of vehicle speed sensor 2 is out of specification, the sensor may have a failure.
- If resistance is OK, mechanical trouble may be present in combination meter, speedometer cable and speedometer drive/driven gears in transmission.

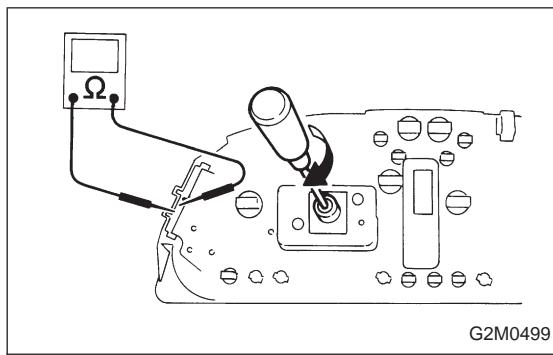

- 1) Remove combination meter.
- 2) Measure resistance between terminals of combination meter by rotating rotor of speedometer cable hole with screwdriver.

CHECK**: Terminals****No. 8 — No. 15:*****Is the resistance between 10 Ω and 1 MΩ
(Four times per rotation)?*****YES**

: Repair or replace combination meter.

NO

: Replace speedometer.

DIAGNOSTICS SECTION

FOREWORD

This portion of the service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

The diagnostics relating to the Electronic Control System which is made up of various electronic components (ECM's etc.) are explained in this manual.

For the repair of exchange of defective parts, please refer to the SERVICE MANUAL (Repair Section).

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD.

ENGINE COOLING SYSTEM 2-5

ON-BOARD DIAGNOSTICS II SYSTEM 2-7

AUTOMATIC TRANSMISSION AND DIFFERENTAIL 3-2

BRAKES 4-4

SUPPLEMENTAL RESTRAINT SYSTEM 5-5

1. Important Safety Notice

- Providing appropriate service and repair is a matter of great importance in the serviceman's safety maintenance and safe operation, function and performance which the SUBARU vehicle possesses.
- In case the replacement of parts or replenishment of consumables is required, genuine SUBARU parts whose parts numbers are designated or their equivalents must be utilized.
- It must be made well known that the safety of the serviceman and the safe operation of the vehicle would be jeopardized if he used any service parts, consumables, special tools and work procedure manuals which are not approved or designated by SUBARU.

All right reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of FUJI HEAVY INDUSTRIES LTD., TOKYO JAPAN.

SUBARU,  and  are trademarks of FUJI HEAVY INDUSTRIES LTD.

© Copyright 1996 FUJI HEAVY INDUSTRIES LTD.

2. How to Use this Manual

- This Service Manual is divided into four volumes by section so that it can be used with ease at work. Refer to the Table of Contents, select and use the necessary section.

- GENERAL INFORMATION SECTION
- REPAIR SECTION
- DIAGNOSTICS SECTION
- WIRING DIAGRAM SECTION

- The description of each area is provided with four types of titles different in size as shown below. The Title No. or Symbol prefixes each title in order that the construction of the article and the flow of explanation can be easily understood.

[Example of each title]

• Area title:	T. DIAGNOSTICS
• Large title (Heading):	1. Diagnostics Chart with Select Monitor (to denote the main item of explanation.)
• Medium title (Section):	A: BASIC DIAGNOSTICS CHART (to denote the type of work in principle.)
• Small title (Sub-section):	1. CHECK INPUT SIGNAL FOR ECM (to denote a derivative item of explanation.)

- The Title Index No. is indicated on the top left (or right) side of the page as the book is opened. This is useful for retrieving the necessary portion.

(Example of usage)

Refer to 3 - 2 [T 5 A 0]

Small title (Sub-section)

Medium title (Section)

Large title (Heading)

DIAGNOSTICS

Chapter no.

Medium title

Large title

Example of title placement

Title index No.

AUTOMATIC TRANSMISSION AND DIFFERENTIAL

[T5A1] 3-2



5. Diagnostic Chart with Trouble Code

5. Diagnostic Chart with Trouble Code**A: TROUBLE CODE 11****— DUTY SOLENOID A —****DIAGNOSIS:**

Output signal circuit of duty solenoid A or resistor is open or shorted

TROUBLE SYMPTOM:

Excessive shift shock

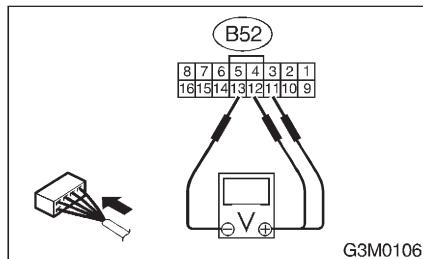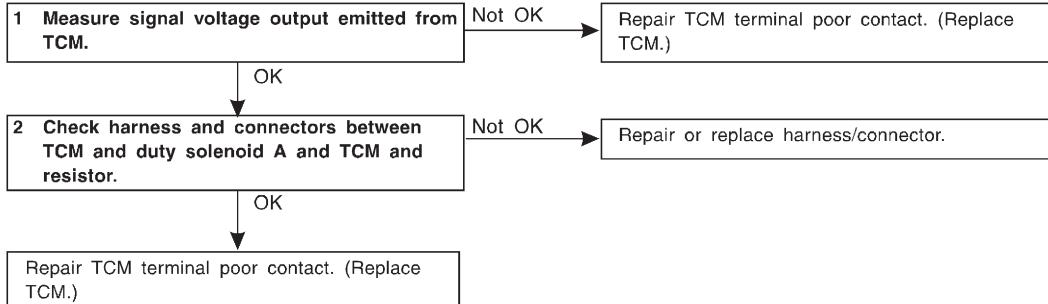**1. MEASURE SIGNAL VOLTAGE OUTPUT EMITTED FROM TCM.**

- 1) Warm-up the engine and transmission.
- 2) Ignition switch ON (Engine OFF)
- 3) Move shift lever to "N"
- 4) While opening and closing throttle valve, measure voltage between TCM connector and body.




Connector & terminal / Specified resistance:
(B52) No. 11—No. 13 /

1.5—4.0 V (Throttle is fully closed.)
0.5 V, max. (Throttle is fully open.)

Small title


B0M0001

- In this manual, the following symbols are used.


Character	Description
 B0M0002	Circuit tester • Voltage measurement
 B0M0003	Circuit tester • Resistance measurement
 B0M0004	The arrow indicates that insertion of the probe or numbering of the connector pins is made from the side.
 B0M0005	The arrow indicates that insertion of the probe or numbering of the connector pins is made from the side.
 B0M0006	Oscilloscope
 B0M0007	Oscilloscope positive probe
 B0M0008	Oscilloscope earth head

- **WARNING, CAUTION, NOTE**


- **WARNING:** Indicates the item which must be observed precisely during performance of maintenance services in order to avoid injury to the mechanics and other persons.
- **CAUTION:** Indicates that item which must be followed precisely during performance of maintenance services so as to avoid damage and breakage to the vehicle and its parts and components.
- **NOTE:** Indicates the hints, knacks, etc. which make the maintenance job easier.

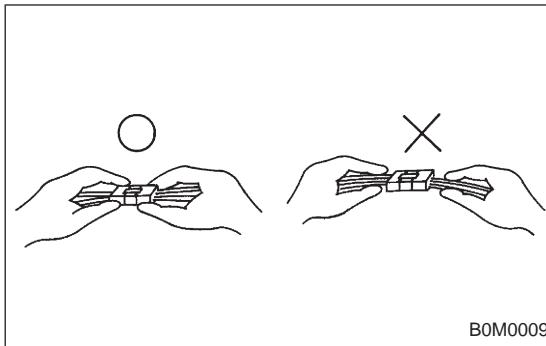


BOM0009

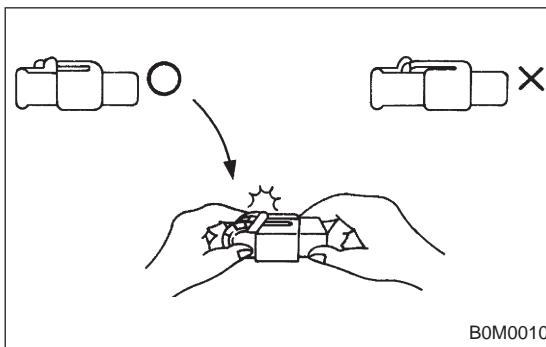


BOM0010

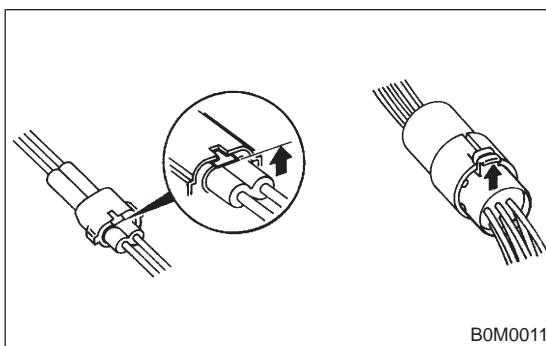

BOM0011

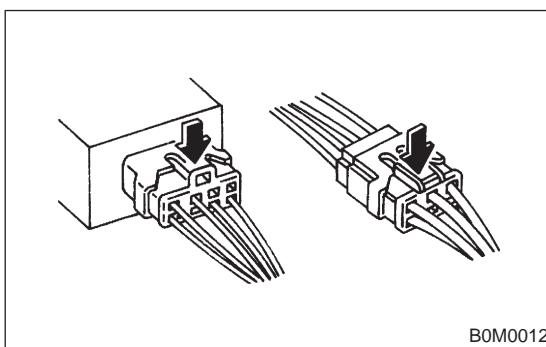

BOM0012

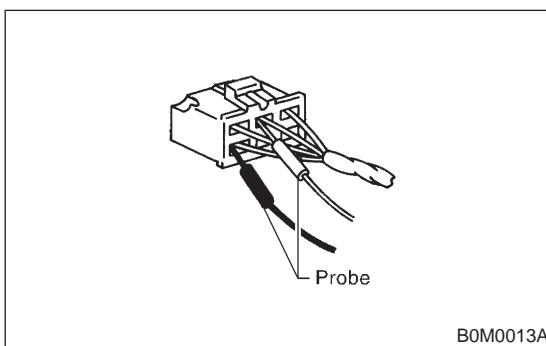

BOM0013A

3. Basic Checks

A: DISCONNECTING CONNECTORS

- Always hold the connector itself.

CAUTION:

Don't pull the harness.


- Inspect a connector by pushing it all the way in. If the connector is equipped with a locking device, push it in until a clicking sound is heard.

- To disconnect a locking connector, first release the lock, then pull the connector off.
<Unlock by pulling the locking tab.>


<Unlock by pushing the locking tab.>

B: INSERTING A PROBE


- Generally, probes are inserted into connectors from the rear side (wire side).
- When removing the shock protector take care not to deform it; this also applies to waterproof connectors, which cannot be tested from the wire side.

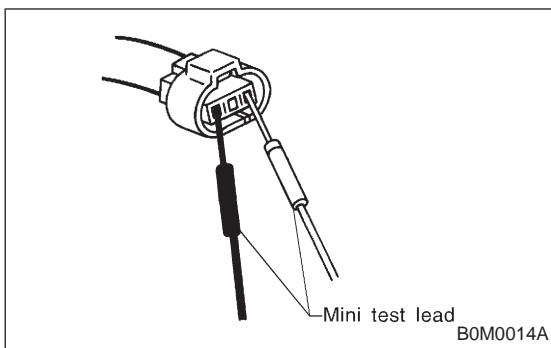

- Connectors equipped with shock protectors must be checked with a mini probe (thin), or it will be necessary to remove the shock protector.

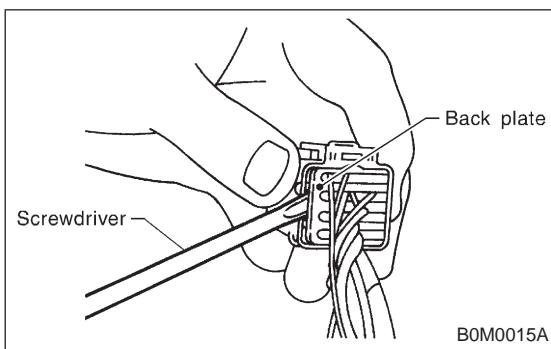

- When the connector has a back plate, remove the plate after removing the projection of the plate first. (Be careful not to use excessive force, since the terminals might break off.)

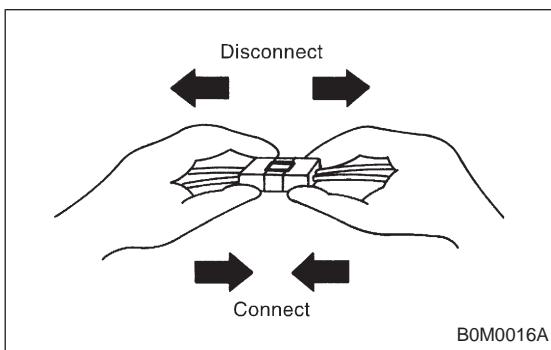

C: CHECKING FOR POOR CONTACT ON PLUG-IN CONNECTORS

1. POOR CONTACT


Poor contact is frequently caused by corroded terminals, dirt, foreign substances, weak contact points between male and female connectors, etc. Quite often a plug with poor contact will work perfectly again after it has been pulled off and reconnected. If harness and connector checks do not reveal any defect, it can be assumed that an intermittent contact in a connector is the source of trouble.

2. VISUAL INSPECTION

- 1) Disconnect the two connector halves.
- 2) Check the connector pins for signs of corrosion or foreign material.
- 3) Check the connector for loose and damaged terminals, and make sure they are set correctly in the connector.

NOTE:


When the harness is pulled lightly, the terminals should not come out.

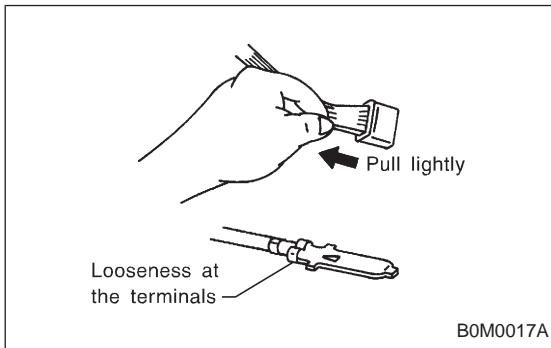


- 4) Insert the male pin of the connector into the female pin, then pull it out.



NOTE:

If one of the pins allows to pull out easily, it is a likely source of a malfunction.

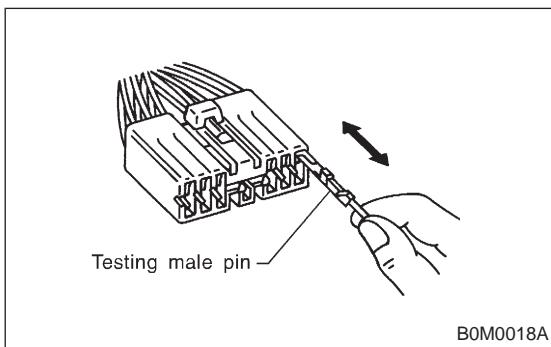

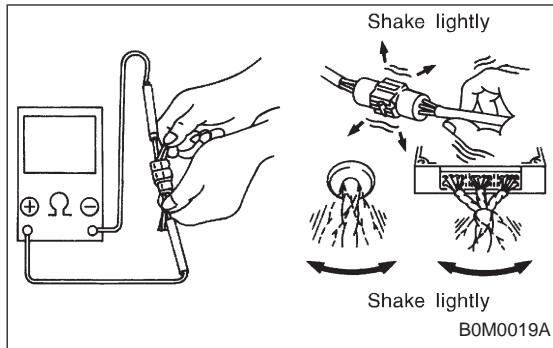

- 5) Shake lightly the connector and the harness, and check for sudden changes in voltage or resistance.

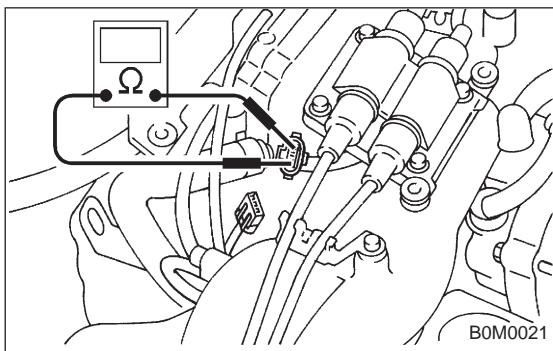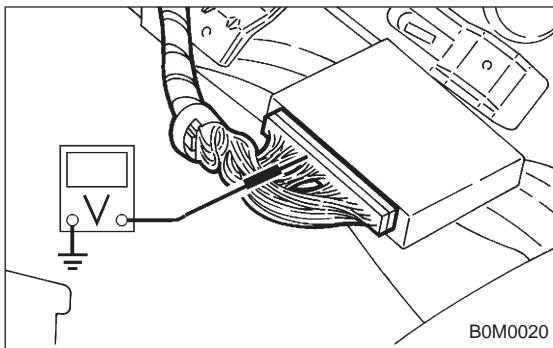

4. Diagnosis and Checking Procedure Using Instruments

A: USING A CIRCUIT TESTER

1. VOLTAGE CHECK (range set to DC V)

Connect the positive probe to the terminal to be tested, and the negative probe to body ground. (or the ground terminal of the ECM)

2. CHECKING THE CONNECTION (range set to Ω)

Measure the resistance and check for open or shorted wire in the harness or the connector.

NOTE:

This check must be carried out with both connectors disconnected.

(This avoids by-passing the connection through other circuits.)

1) Check for open circuit. (range: $\Omega \times 1K$)

Measure the resistance between the respective pins in both connectors.

Specified resistance:

More than $1 M\Omega$ (No continuity) Open circuit

Less than 10Ω (Continuity) O.K.

2) Check for correct insulation value. (range: $\Omega \times 1K$)

Measure the resistance between the pins in both connectors, as well as between the suspected pin and the body. (body short)

Specified resistance:

More than $1 M\Omega$ (No continuity) O.K.

Less than 10Ω (Continuity) Short circuit

3) Resistance measurement (range set to Ω)

Measuring the internal resistance of sensors, solenoid valves etc. to check the operating condition of components.

NOTE:

- Select the appropriate range for measuring the internal resistance, or the measurement will result in an incorrect reading.

- Before changing the measurement range the gauge must be reset to zero.

B: USING A SUBARU SELECT MONITOR

With this testing procedure the defective component can be determined by directly monitoring input/output signals of the ECM or the trouble codes.

1. FEATURES


- A variety of data can be checked without movements from the drivers seat, passenger's seat or from outside the vehicle.
- This unit allows the identification of the type of malfunction, for example whether the cause is an open or shorted wire in the input/output signal line, or whether the breakdown of a component is caused by a lack of maintenance.

2. DIAGNOSIS

- Refer to the reference values for input/output and control data to determine whether the malfunction is caused by a worn out component, an open wire, a short etc.
- Perform the diagnostics procedure as described in chapter "Check based on trouble codes" by monitoring the trouble codes.


NOTE:

It will be easier to determine a malfunction if the vehicle data for normal conditions are available for comparison.

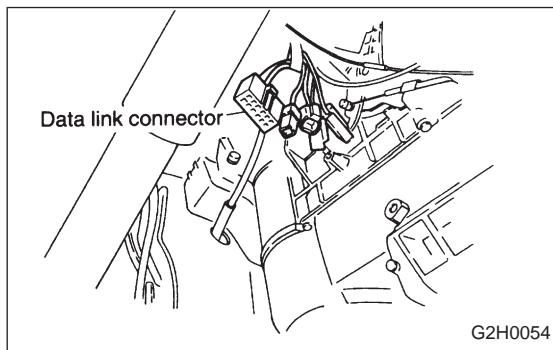


3. CONNECT SELECT MONITOR.


- 1) Connect select monitor to data link connector located under instrument panel. (on driver's side)

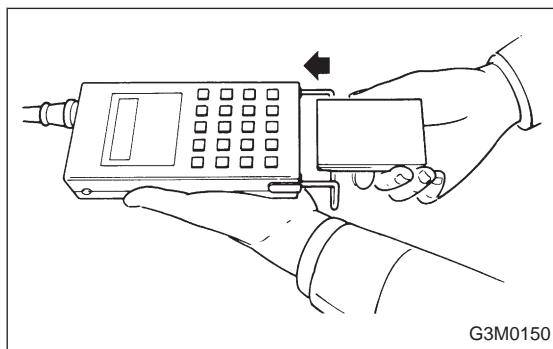

- 2) Insert cartridge into select monitor.

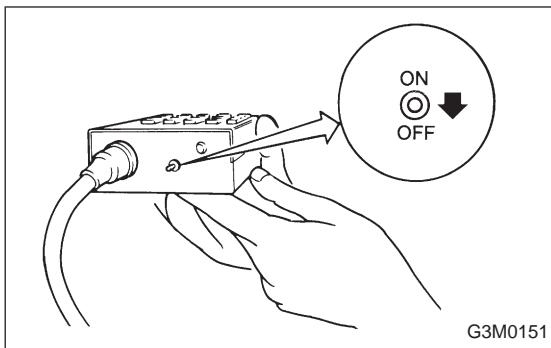


- 3) Turn ignition switch and select monitor switch ON.
- 4) After display is shown, press slash "/" key.
- 5) After AT mode is displayed, press function "[0]".
(Display returns to AT mode when slash "/" is pressed during on-board diagnostic operation.)

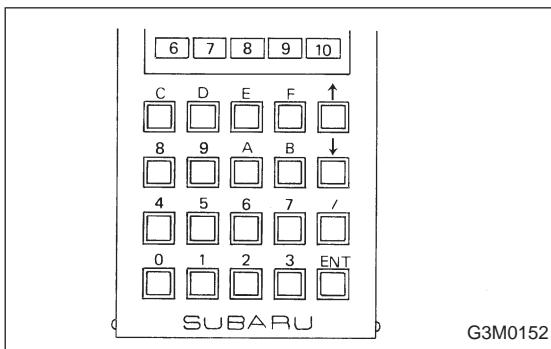

4. READ TROUBLE CODE SHOWN ON DISPLAY.

- 1) Connect select monitor.
- 2) Designate mode using function key.
Press [F] [B] [0] [ENT] in that order.
- 3) Ensure trouble code(s) is shown.

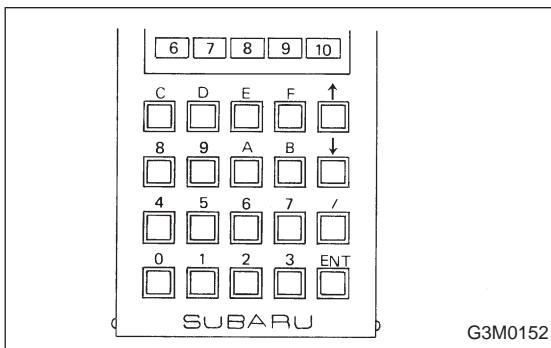

5. PREVIOUS TROUBLE CODE READING

- 1) Connect select monitor.
- 2) Designate mode using function key.
Press [F] [B] [1] [ENT] in that order.
- 3) Ensure displayed trouble code(s).

C: USING AN OSCILLOSCOPE

A malfunction can be determined by displaying the waveforms of input/output signals on the oscilloscope.

1. DIAGNOSIS

A simple comparison of the waveforms may lead to an incorrect diagnosis. To exactly determine the sources of the malfunction it will be necessary to determine them under consideration about information other than waveforms.

2. APPLYING INPUT/OUTPUT SIGNALS

Connect the probe directly with the terminal of the signal.

5. Table of Contents

DIAGNOSTICS SECTION	2-5 Engine Cooling System
	2-7 On-Board Diagnostics II System
	3-2 Automatic Transmission and Differential
	4-4 Brakes
	5-5 Supplemental Restraint System