

MANUAL TRANSMISSION AND DIFFERENTIAL

3-1

	Page
S SPECIFICATIONS AND SERVICE DATA	2
1. Specifications	2
2. Service Data	3
C COMPONENT PARTS	6
1. Transmission Case	6
2. Drive Pinion Assembly	7
3. Main Shaft Assembly	8
4. Shifter Fork and Shifter Rod.....	9
5. Transfer Case and Extension	10
6. Front Differential.....	11
7. Center Differential	12
W SERVICE PROCEDURE	13
1. General	13
2. Transmission Case	16
3. Drive Pinion Assembly	32
4. Main Shaft Assembly	38
5. Transfer Case and Extension	42
6. Front Differential	53
7. Center Differential	57
K DIAGNOSTICS	59
1. Manual Transmission and Differential	59

1. Specifications


A: MANUAL TRANSMISSION AND DIFFERENTIAL

Item	Model	
	AWD	
	1800 cc	2200 cc
Type	5-forward speeds with synchromesh and 1-reverse	
Transmission gear ratio	1st	3.545
	2nd	2.111
	3rd	1.448
	4th	1.088
	5th	0.825
	Reverse	3.416
Front reduction gear	Final	Type of gear
		Gear ratio
Rear reduction gear	Transfer	Type of gear
		Gear ratio
	Final	Type of gear
		Gear ratio
Front differential	Type and number of gear	
Center differential	Type and number of gear	
Transmission gear oil		GL-5
Transmission oil capacity		3.5 ℓ (3.7 US qt, 3.1 Imp qt)

2. Service Data

A: TRANSMISSION GEAR OIL

Recommended oil

ITEM									
• Transmission gear oil									
API Classification									
GL - 5									
SAE Viscosity No. and Applicable Temperature									
(°C)	-30	-26	-15	-5	0	15	25	30	
(°F)	-22	-15	5	23	32	59	77	86	
									
B1H0024									

B: TRANSMISSION CASE ASSEMBLY

Drive pinion shim adjustment

Drive pinion shim			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
32295AA031	0.150 (0.0059)	32295AA071	0.250 (0.0098)
32295AA041	0.175 (0.0069)	32295AA081	0.275 (0.0108)
32295AA051	0.200 (0.0079)	32295AA091	0.300 (0.0118)
32295AA061	0.225 (0.0089)	32295AA101	0.500 (0.0197)

Hypoid gear backlash:

0.13 — 0.18 mm (0.0051 — 0.0071 in)

Selection of main shaft rear plate

Main shaft rear plate		
Dimension "A" mm (in)	Part No.	Mark
4.00 — 4.13 (0.1575 — 0.1626)	32294AA041	1
3.87 — 3.99 (0.1524 — 0.1571)	32294AA051	2

C: DRIVE PINION ASSEMBLY

Preload adjustment of thrust bearing

Starting torque

0.3 — 0.8 N·m (3 — 8 kg-cm, 2.6 — 6.9 in-lb)

Adjusting washer No. 1	
Part No.	Thickness mm (in)
803025051	3.925 (0.1545)
803025052	3.950 (0.1555)
803025053	3.975 (0.1565)
803025054	4.000 (0.1575)
803025055	4.025 (0.1585)
803025056	4.050 (0.1594)
803025057	4.075 (0.1604)

Adjusting washer No. 2	
Part No.	Thickness mm (in)
803025059	3.850 (0.1516)
803025054	4.000 (0.1575)
803025058	4.150 (0.1634)

Assemble a driven shaft and 1st driven gear that are selected for the proper radial clearance adjustment.

Driven shaft		1st driven gear
Part No.	Diameter A mm (in)	Part No.
32229AA150	49.959 — 49.966 (1.9669 — 1.9672)	32231AA270
32229AA140	49.967 — 49.975 (1.9672 — 1.9675)	32231AA260

D: REVERSE IDLER GEAR

Adjustment of reverse idler gear position

Reverse idler gear to transmission case (LH) wall clearance
6.0 — 7.5 mm (0.236 — 0.295 in)

Reverse shifter lever		
Part No.	Mark	Remarks
32820AA000	0	Further from case wall
32820AA010	No mark	Standard
32820AA020	2	Closer to the case wall

After installing a suitable reverse shifter lever, adjust reverse idler gear to transmission case wall clearance to within 0 to 0.5 mm (0 to 0.020 in) using washers.

Washer (20.5 x 26 x t)			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
803020151	0.4 (0.016)	803020154	1.9 (0.075)
803020152	1.1 (0.043)	803020155	2.3 (0.091)
803020153	1.5 (0.059)	—	—

E: SHIFTER FORK AND ROD

Select suitable shifter forks so that both coupling sleeve and reverse driven gear are positioned in the center of their synchromesh mechanisms.

1st-2nd shifter fork		
Part No.	Mark	Remarks
32804AA060	1	Approach to 1st gear by 0.2 mm (0.008 in)
32804AA070	No mark	Standard
32804AA080	3	Approach to 2nd gear by 0.2 mm (0.008 in)

3rd-4th shifter fork		
Part No.	Mark	Remarks
32810AA060	1	Approach to 4th gear by 0.2 mm (0.008 in)
32810AA070	No mark	Standard
32810AA100	3	Approach to 3rd gear by 0.2 mm (0.008 in)

5th shifter fork		
Part No.	Mark	Remarks
32812AA200	4	Approach to 5th gear by 0.2 mm (0.008 in)
32812AA210	No mark	Standard
32812AA220	6	Become distant from 5th gear by 0.2 mm (0.008 in)

Rod end clearance

1st-2nd — 3rd-4th:

0.4 — 1.4 mm (0.016 — 0.055 in)

3rd-4th — 5th:

0.5 — 1.3 mm (0.020 — 0.051 in)

F: TRANSFER CASE

Neutral position adjustment

Adjustment shim	
Part No.	Thickness mm (in)
32190AA000	0.15 (0.0059)
32190AA010	0.30 (0.0118)

Reverse accent shaft		
Part No.	Mark	Remarks
32188AA040	1	Neutral position is closer to 1st.
32188AA011	No mark or 2	Standard
32188AA050	3	Neutral position is closer to reverse gear.

Reverse check plate adjustment

Reverse check plate			
Part No.	Mark	Angle θ	Remarks
32189AA000	0	28°	Arm stops closer to 5th gear.
32189AA010	1	31°	Arm stops closer to 5th gear.
33189AA020	2	34°	Arm stops in the center.
32189AA030	3	37°	Arm stops closer to reverse gear.
32189AA040	4	40°	Arm stops closer to reverse gear.

G: EXTENSION

Snap ring (Inner-72) to ball bearing side clearance

0 — 0.15 mm (0 — 0.0059 in)

Snap ring (Inner-72)	
Part No.	Thickness mm (in)
805172071	1.78 (0.0701)
805172072	1.90 (0.0748)
805172073	2.02 (0.0795)

Snap ring (Outer-30) to ball bearing side clearance

0 — 0.15 mm (0 — 0.0059 in)

Snap ring (Outer-30)	
Part No.	Thickness mm (in)
805030041	1.53 (0.0602)
805030042	1.65 (0.0650)
805030043	1.77 (0.0697)

H: EXTENSION ASSEMBLY

Thrust washer (52 x 61 x t) to ball bearing side clearance
0.05 — 0.30 mm (0.0020 — 0.0118 in)

Thrust washer (52 x 61 x t)	
Part No.	Thickness mm (in)
803052021	0.50 (0.0197)
803052022	0.75 (0.0295)
803052023	1.00 (0.0394)

I: FRONT DIFFERENTIAL

Bevel gear to pinion backlash
0.13 — 0.18 mm (0.0051 — 0.0071 in)

Washer (38.1 x 50 x t)			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
803038021	0.925 — 0.950 (0.0364 — 0.0374)	803038023	1.025 — 1.050 (0.0404 — 0.0413)
803038022	0.975 — 1.000 (0.0384 — 0.0394)	—	—

Pinion shaft to axle drive shaft clearance
0 — 0.2 mm (0 — 0.008 in)

Snap ring (Outer-28)			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
805028011	1.05 (0.0413)	805028012	1.20 (0.0472)

J: CENTER DIFFERENTIAL


Snap ring (Inner-110) to center differential case clearance
0 — 0.15 mm (0 — 0.0059 in)

Snap ring (Inner-110)	
Part No.	Thickness mm (in)
805100061	2.10 (0.0827)
805100062	2.21 (0.0870)
805100063	2.32 (0.0913)

Backlash adjustment axial movement
0.62 — 0.86 mm (0.0244 — 0.0339 in)

Adjusting washer (45 x 62 x t)	
Part No.	Thickness mm (in)
803045041	1.60 (0.0630)
803045042	1.80 (0.0709)
803045043	2.00 (0.0787)
803045044	2.20 (0.0866)
803045045	2.40 (0.0945)

1. Transmission Case

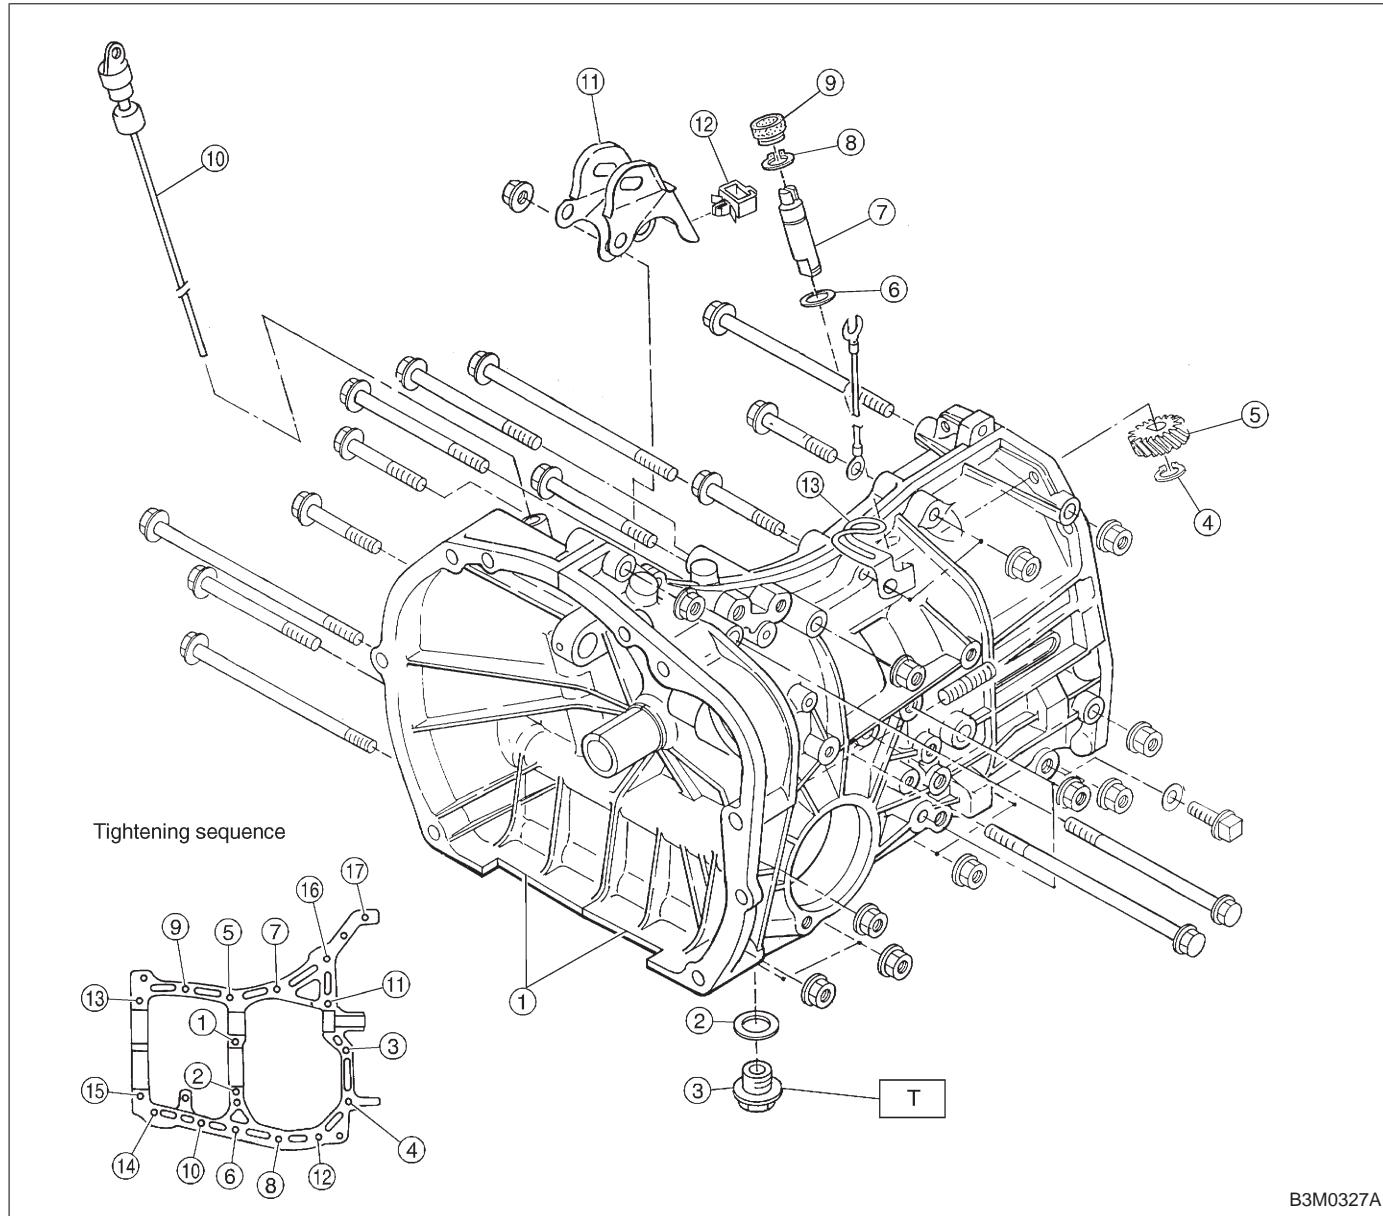


- ① Transmission case ASSY
- ② Gasket
- ③ Drain plug
- ④ Snap ring (Outer)
- ⑤ Speedometer driven gear
- ⑥ Washer
- ⑦ Speedometer shaft
- ⑧ Snap ring (Outer)
- ⑨ Oil seal
- ⑩ Oil level gauge
- ⑪ Pitching stopper bracket
- ⑫ Clamp
- ⑬ Clip

Tightening torque: N·m (kg·m, ft·lb)
T: 44±3 (4.5±0.3, 32.5±2.2)

Size	All models	Torque
8 mm bolt	⑤—⑯	25±2 N·m (2.5±0.2 kg·m, 18.1±1.4 ft·lb)
10 mm bolt	①—④ ⑯—⑰	39±2 N·m (4.0±0.2 kg·m, 28.9±1.4 ft·lb)

2. Drive Pinion Assembly

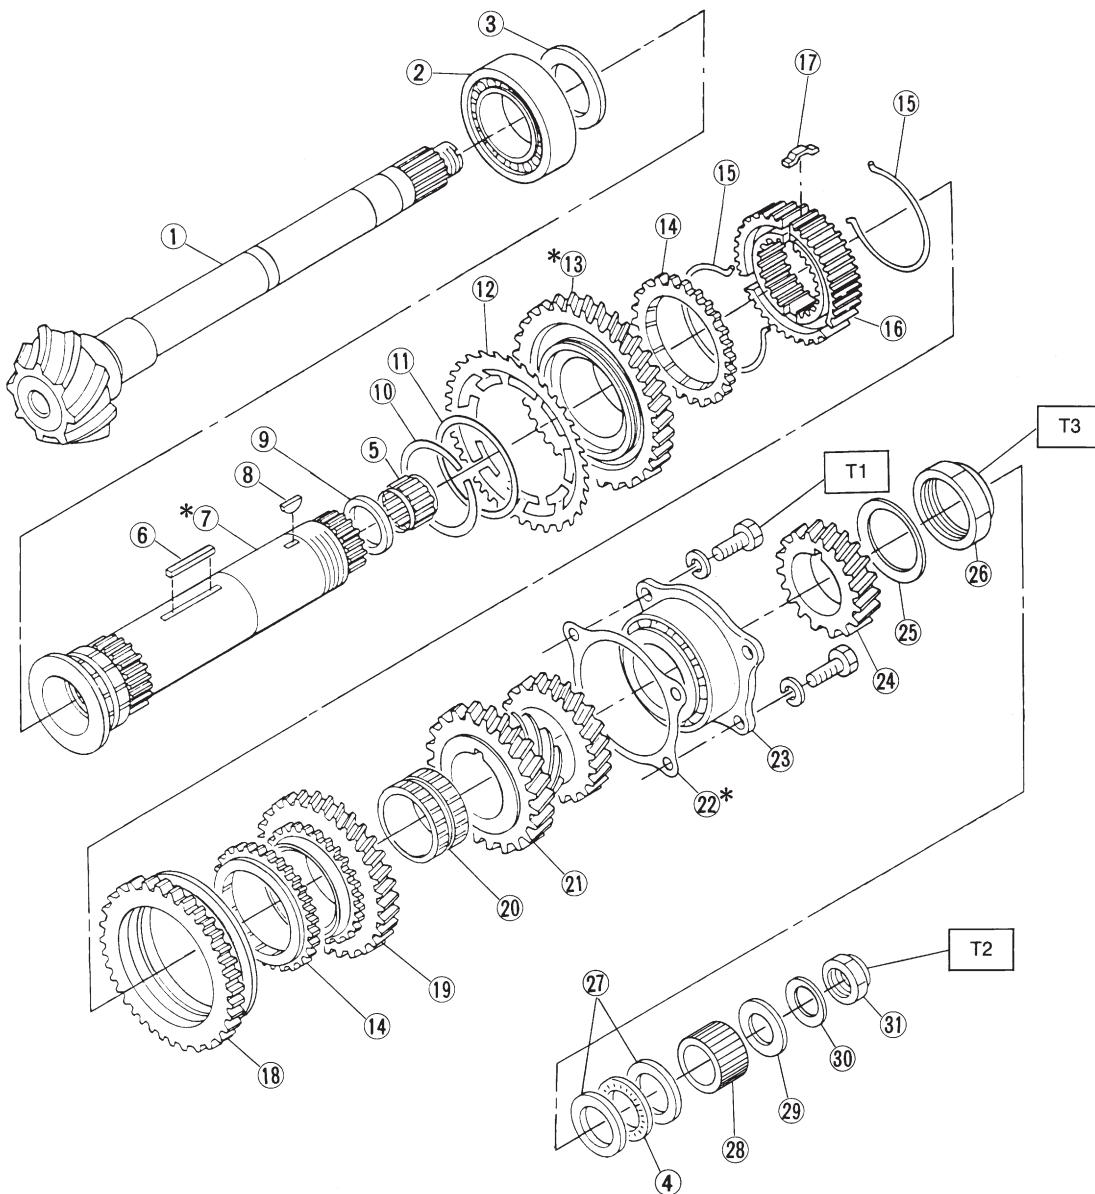

G3M0510


- ① Drive pinion shaft
- ② Roller bearing
- ③ Washer
- ④ Thrust bearing
- ⑤ Needle bearing
- ⑥ Key
- ⑦ Driven shaft
- ⑧ Woodruff key
- ⑨ Drive pinion collar
- ⑩ Snap ring (Outer)
- ⑪ Washer
- ⑫ Sub gear

- ⑬ 1st driven gear
- ⑭ Baulk ring
- ⑮ Spring
- ⑯ 1st-2nd synchronizer hub
- ⑰ Insert
- ⑱ Reverse driven gear
- ⑲ 2nd driven gear
- ⑳ 2nd driven gear bush
- ㉑ 3rd-4th driven gear
- ㉒ Driven pinion shim
- ㉓ Roller bearing
- ㉔ 5th driven gear

- ㉕ Lock washer
- ㉖ Lock nut
- ㉗ Washer
- ㉘ Differential bevel gear sleeve
- ㉙ Washer
- ㉚ Lock washer
- ㉛ Lock nut

Tightening torque: N·m (kg·m, ft·lb)T1: 29 ± 3 (3.0 ± 0.3 , 21.7 ± 2.2)T2: 118 ± 8 (12.0 ± 0.8 , 86.8 ± 5.8)T3: 265 ± 10 (27 ± 1 , 195 ± 7)

3. Main Shaft Assembly

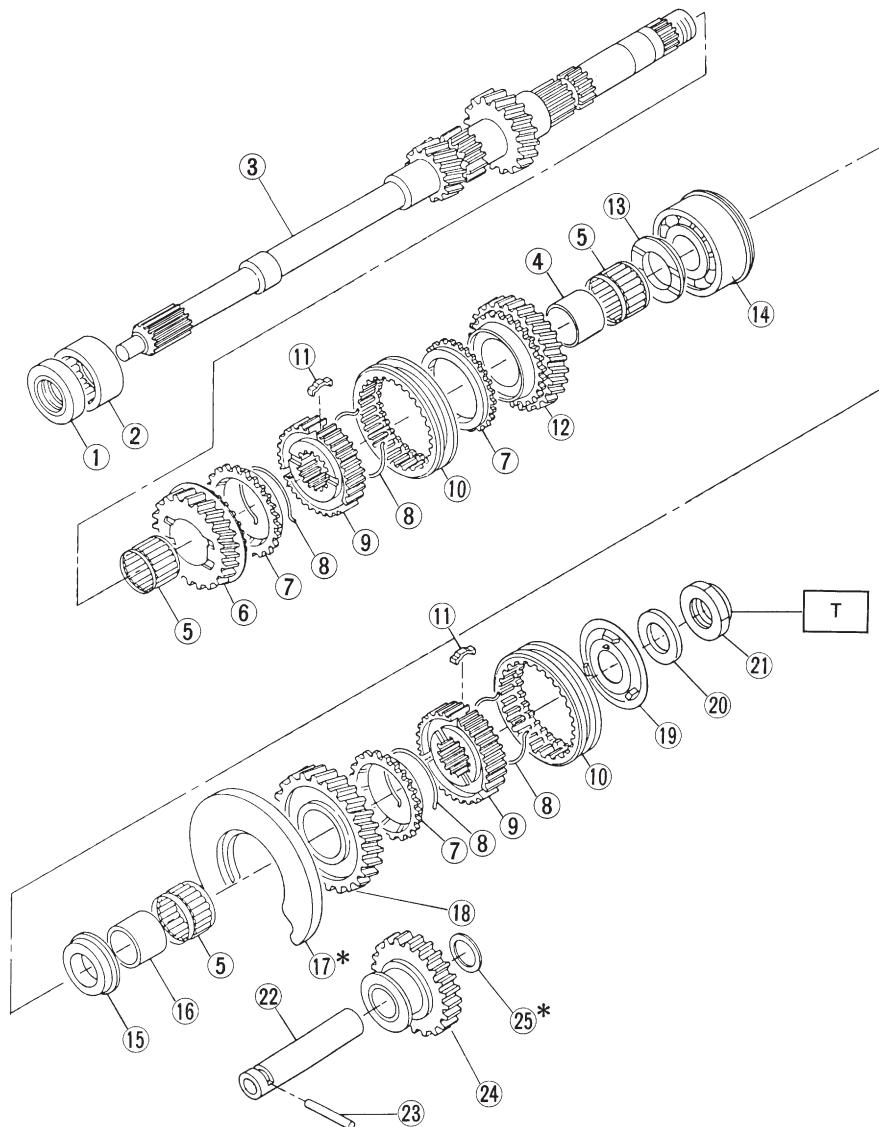

G3M0841


- ① Oil seal
- ② Needle bearing
- ③ Transmission main shaft
- ④ 4th needle bearing race
- ⑤ Needle bearing
- ⑥ 3rd drive gear
- ⑦ Baulk ring
- ⑧ Synchronizer spring
- ⑨ Synchronizer hub
- ⑩ Coupling sleeve

- ⑪ Shifting insert
- ⑫ 4th drive gear
- ⑬ 4th gear thrust washer
- ⑭ Ball bearing
- ⑮ 5th gear thrust washer
- ⑯ 5th needle bearing race
- ⑰ Main shaft rear plate
- ⑱ 5th drive gear
- ⑲ Insert stopper plate
- ⑳ Lock washer

- ㉑ Lock nut
- ㉒ Reverse idler gear shaft
- ㉓ Straight pin
- ㉔ Reverse idler gear
- ㉕ Washer

Tightening torque: N·m (kg-m, ft-lb)
T: 118±6 (12.0±0.6, 86.8±4.3)

4. Shifter Fork and Shifter Rod

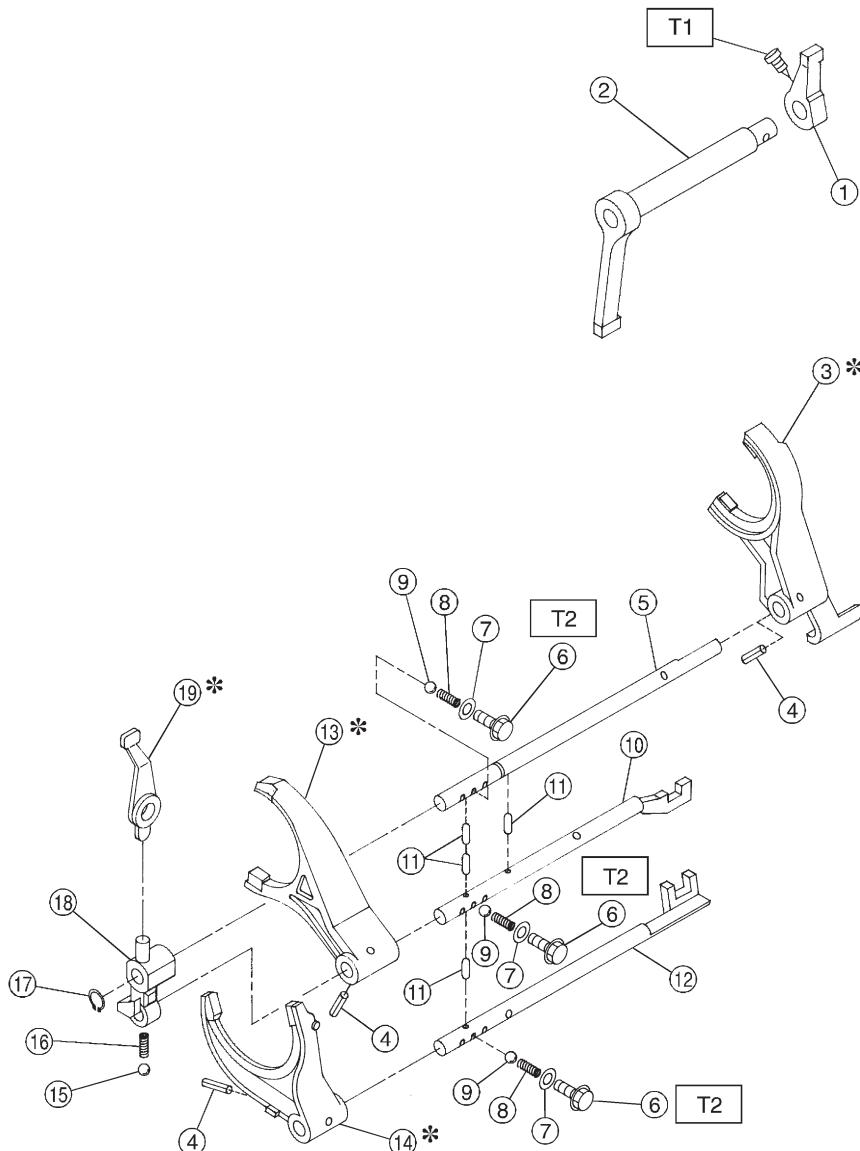

H3M1199A

- ① Selector arm
- ② Shifter arm
- ③ 5th shifter fork
- ④ Straight pin
- ⑤ Reverse fork rod
- ⑥ Checking ball plug
- ⑦ Gasket
- ⑧ Checking ball spring
- ⑨ Ball
- ⑩ 3rd-4th fork rod
- ⑪ Interlock plunger
- ⑫ 1st-2nd fork rod
- ⑬ 3rd-4th shifter fork

- ⑯ 1st-2nd shifter fork
- ⑯ Ball
- ⑯ Spring
- ⑯ Snap ring (Outer)
- ⑯ Reverse fork rod arm
- ⑯ Reverse shifter lever


Tightening torque: N·m (kg·m, ft-lb)

T1: 10 ± 1 (1.0 ± 0.1 , 7.2 ± 0.7)

T2: 19.6 ± 1.5

(2.00±0.15, 14.5±1.1)

5. Transfer Case and Extension

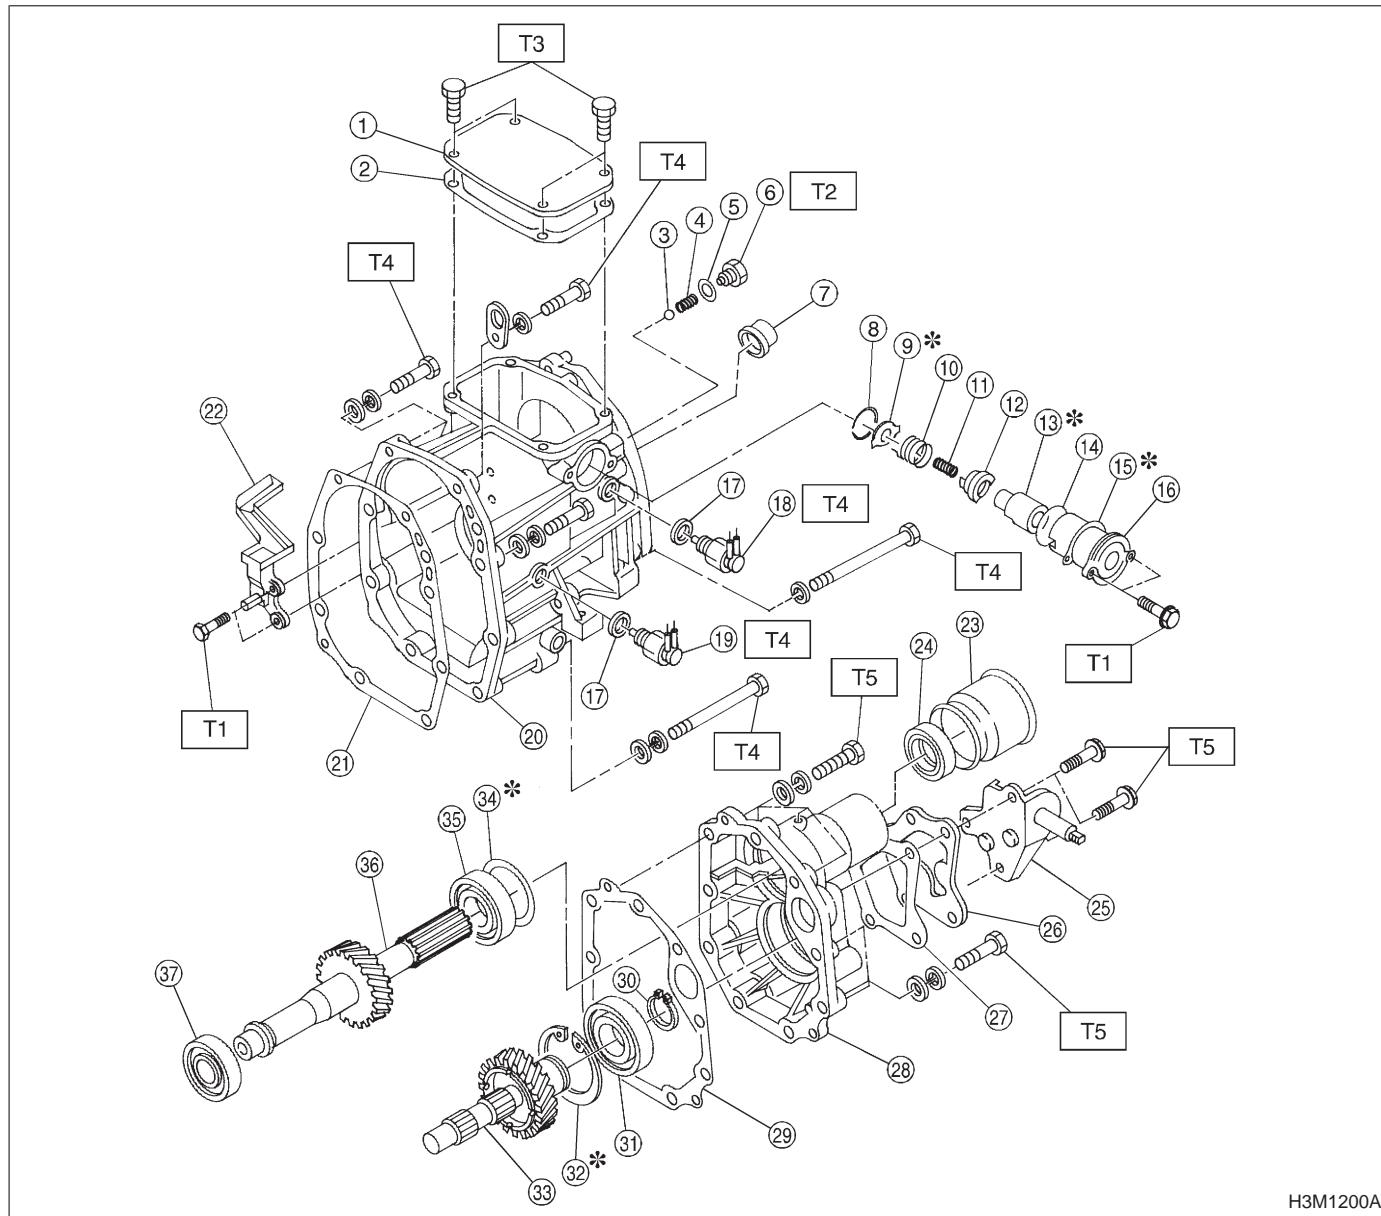

H3M1200A


- ① Transfer cover
- ② Cover gasket
- ③ Ball
- ④ Reverse accent spring
- ⑤ Gasket
- ⑥ Plug
- ⑦ Oil seal
- ⑧ Snap ring (Inner)
- ⑨ Reverse check plate
- ⑩ Reverse check spring
- ⑪ Reverse return spring
- ⑫ Reverse check cam
- ⑬ Reverse accent shaft
- ⑭ O-ring
- ⑮ Adjusting select shim

- ⑯ Reverse check sleeve
- ⑰ Gasket
- ⑱ Neutral switch
- ⑲ Back-up light switch
- ⑳ Transfer case
- ㉑ Gasket
- ㉒ Oil guide
- ㉓ Dust cover
- ㉔ Oil seal
- ㉕ Shift bracket
- ㉖ Extension cover
- ㉗ Gasket
- ㉘ Extension
- ㉙ Gasket
- ㉚ Snap ring (Outer-30)

- ㉛ Ball bearing
- ㉜ Snap ring (Inner-72)
- ㉝ Transfer drive gear
- ㉞ Adjusting washer
- ㉟ Ball bearing
- ㉞ Transfer driven gear
- ㉞ Ball bearing

Tightening torque: N·m (kg·m, ft·lb)T1: 5 ± 1 (0.5 ± 0.1 , 3.6 ± 0.7)T2: 10 ± 1 (1.0 ± 0.1 , 7.2 ± 0.7)T3: 15.7 ± 1.5 (1.6 ± 0.15 , 11.6 ± 1.1)T4: 25 ± 2 (2.5 ± 0.2 , 18.1 ± 1.4)T5: 37 ± 3 (3.8 ± 0.3 , 27.5 ± 2.2)

6. Front Differential

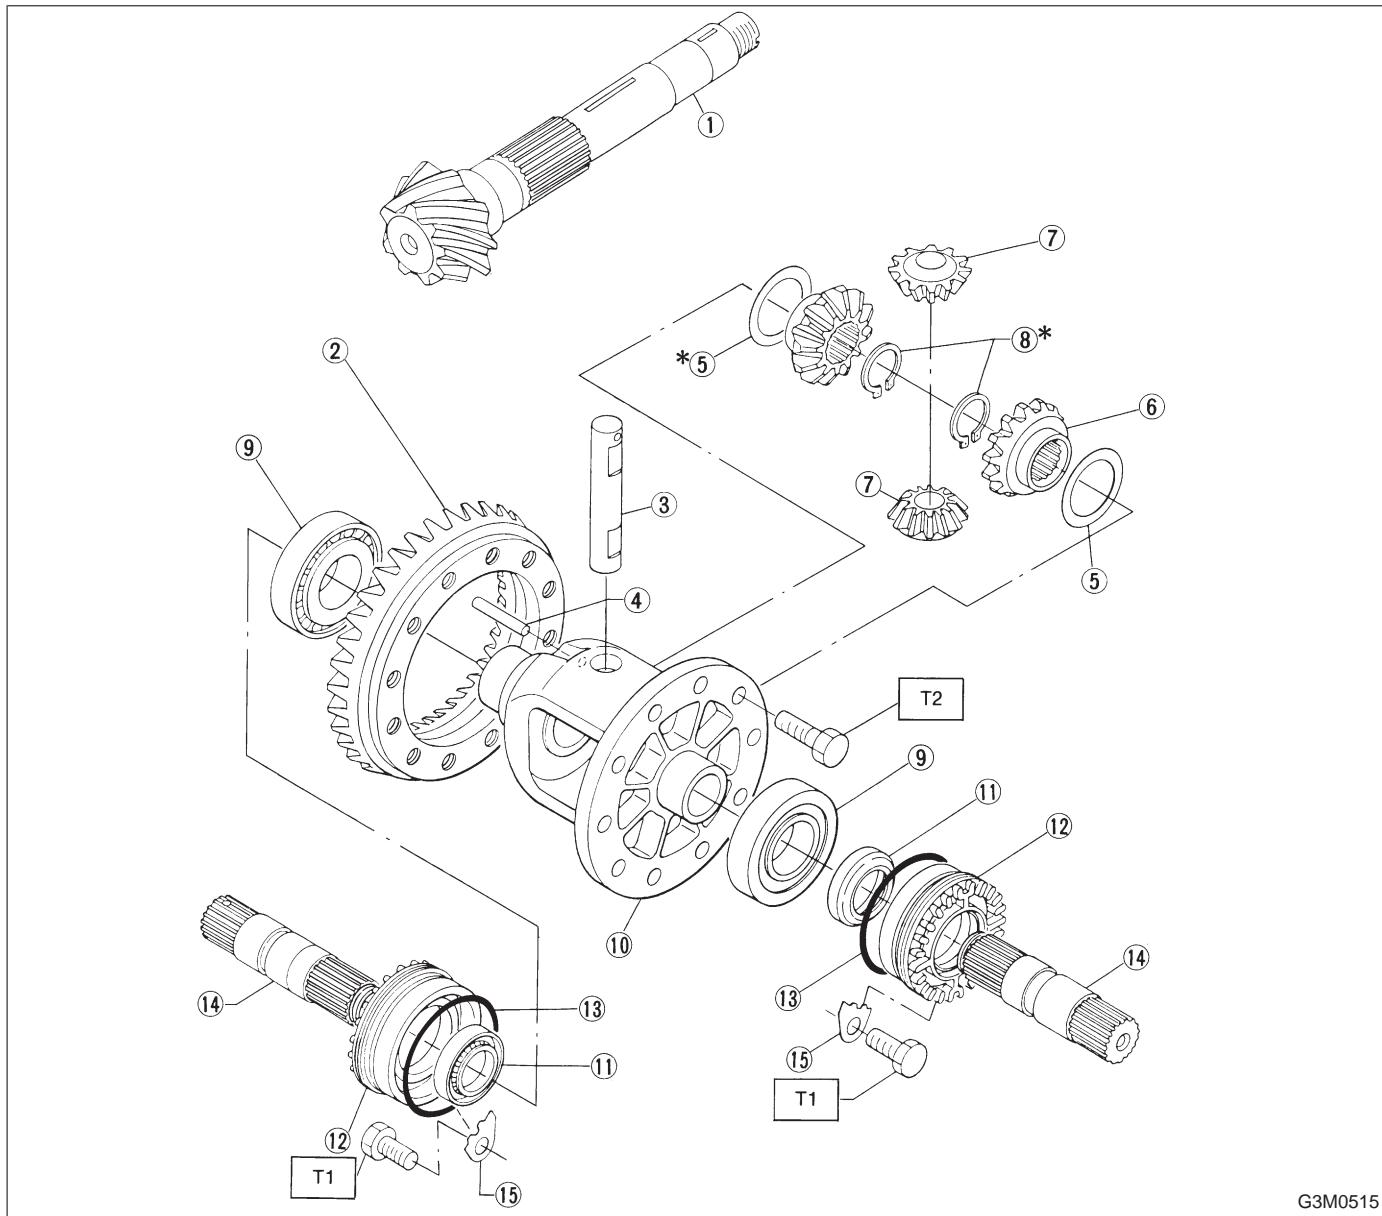


G3M0515

- ① Drive pinion shaft
- ② Hypoid driven gear
- ③ Pinion shaft
- ④ Straight pin
- ⑤ Washer
- ⑥ Differential bevel gear
- ⑦ Differential bevel pinion
- ⑧ Snap ring (Outer)
- ⑨ Roller bearing
- ⑩ Differential case

- ⑪ Oil seal
- ⑫ Differential side retainer
- ⑬ O-ring
- ⑭ Axle drive shaft
- ⑮ Retainer lock plate

Tightening torque: N·m (kg·m, ft·lb)T1: 25 ± 5 (2.5±0.5, 18.1±3.6)T2: 62 ± 5 (6.3±0.5, 45.6±3.6)


7. Center Differential

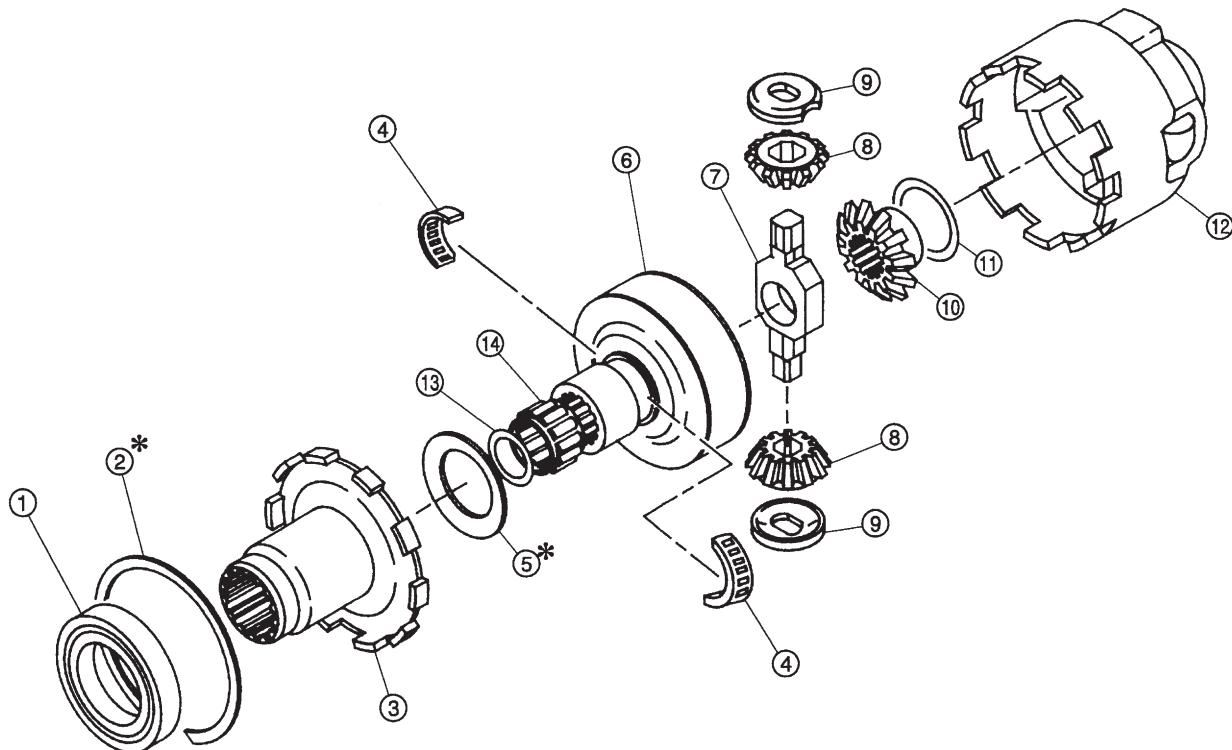

B3M0036A

- ① Ball bearing
- ② Snap ring (Inner-110)
- ③ Center differential cover
- ④ Needle bearing
- ⑤ Adjusting washer
- ⑥ Viscous coupling
- ⑦ Pinion shaft

- ⑧ Differential bevel pinion
- ⑨ Retainer
- ⑩ Differential bevel gear
- ⑪ Washer
- ⑫ Center differential case
- ⑬ Snap ring
- ⑭ Roller bearing

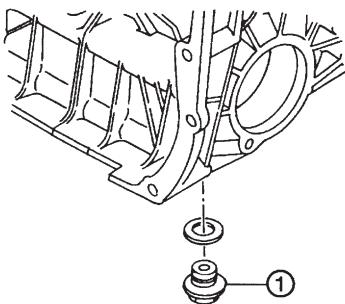

B3M0037A

1. General

A: PRECAUTIONS

1) The following job should be followed before disassembly:


- (1) Clean oil, grease, dirt and dust from transmission.
- (2) Remove drain plug ① to drain oil. After draining, retighten it as before.

CAUTION:

Replace gasket with a new one.

Tightening torque:

$44\pm3\text{ N}\cdot\text{m}$ ($4.5\pm0.3\text{ kg}\cdot\text{m}$, $32.5\pm2.2\text{ ft-lb}$)

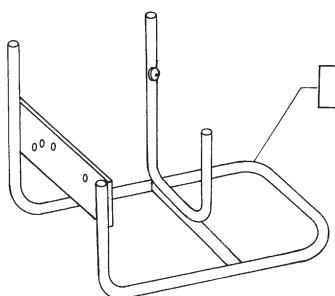

G3M0517

(3) Attach transmission to ST.

ST 499937100 TRANSMISSION STAND SET

- 2) Rotating parts should be coated with oil prior to assembly.
- 3) All disassembled parts, if to be reused, should be reinstalled in the original positions and directions.
- 4) Gaskets and lock washers must be replaced with new ones.
- 5) Liquid gasket should be used where specified to prevent leakage.
- 6) Fill transmission gear oil through the oil level gauge hole up to upper point level gauge. <Ref. to 1-5 [09A1].>


B: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.

1) Bearings

Replace bearings in the following cases:

- Bearings whose balls, outer races and inner races are broken or rusty.
- Worn bearings
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.

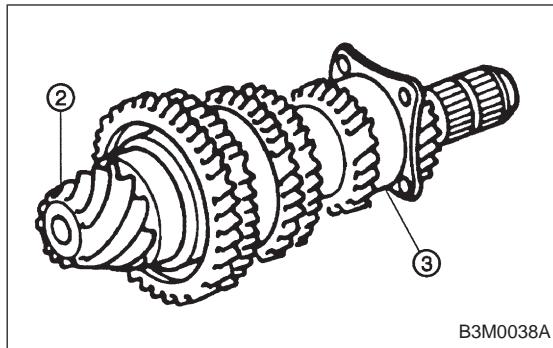

B3M0038A

The ball bearing ③ on the rear side of the drive pinion shaft ② should be checked for smooth rotation before the drive pinion assembly is disassembled. In this case, because a preload is working on the bearing, its rotation feels like it is slightly dragging unlike the other bearings.

- Bearings having other defects


2) Bushing (each gear)

Replace the bushing in the following cases:

- (1) When the sliding surface is damaged or abnormally worn.
- (2) When the inner wall is abnormally worn.

3) Gears

- (1) Replace gears with new ones if their tooth surfaces are broken, damaged, or excessively worn.
- (2) Correct or replace if the cone that contacts the baulk ring is rough or damaged.
- (3) Correct or replace if the inner surface or end face is damaged.

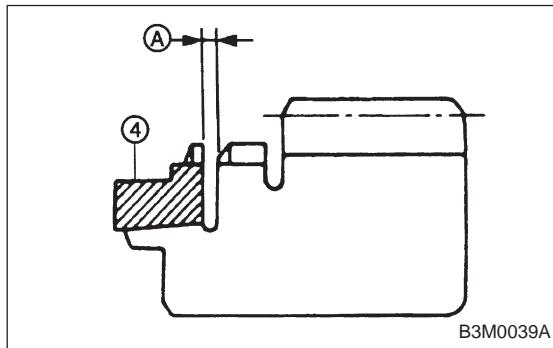

B3M0039A

4) Baulk ring



Replace the ring in the following cases:

- When the inner surface and end face are damaged.
- When the ring inner surface is abnormally or partially worn down.
- If the gap between the end faces of the ring and the gear splined part is excessively small when the ring is pressed against the cone.

Clearance A :

0.5 — 1.0 mm (0.020 — 0.040 in)

- When the contact surface of the synchronizer ring ④ insert is scored or abnormally worn down.

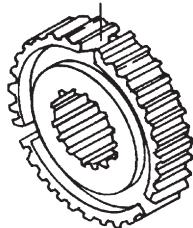

B3M0040A

5) Insert ⑤ (shifting)

Replace the insert if deformed, excessively worn, or defective in any way.

6) Oil seal


Replace the oil seal if the lip is deformed, hardened, damaged, worn, or defective in any way.

7) O-ring

Replace the O-ring if the sealing face is deformed, hardened, damaged, worn, or defective in any way.

8) Gearshift mechanism

Repair or replace the gearshift mechanism if excessively worn, bent, or defective in any way.

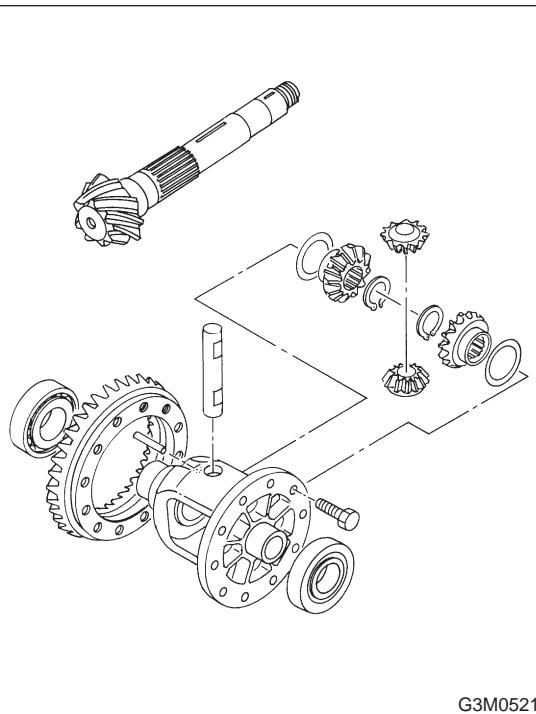

G3M0521

9) Differential gear



Repair or replace the differential gear in the following cases:

- (1) The hypoid drive gear and drive pinion shaft tooth surface are damaged, excessively worn, or seized.
- (2) The roller bearing on the drive pinion shaft has a worn or damaged roller path.
- (3) There is damage, wear, or seizure of the differential bevel pinion, differential bevel gear, washer, pinion shaft, and straight pin.
- (4) The differential case has worn or damaged sliding surfaces.


2. Transmission Case

A: DISASSEMBLY


1. SEPARATION OF TRANSMISSION

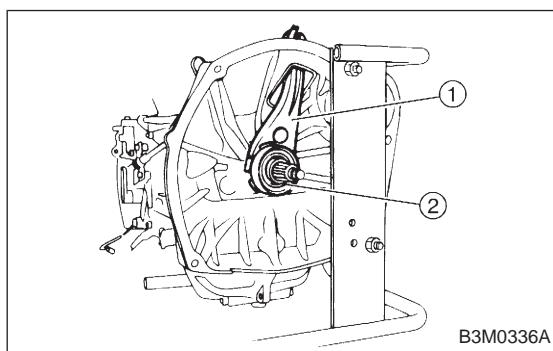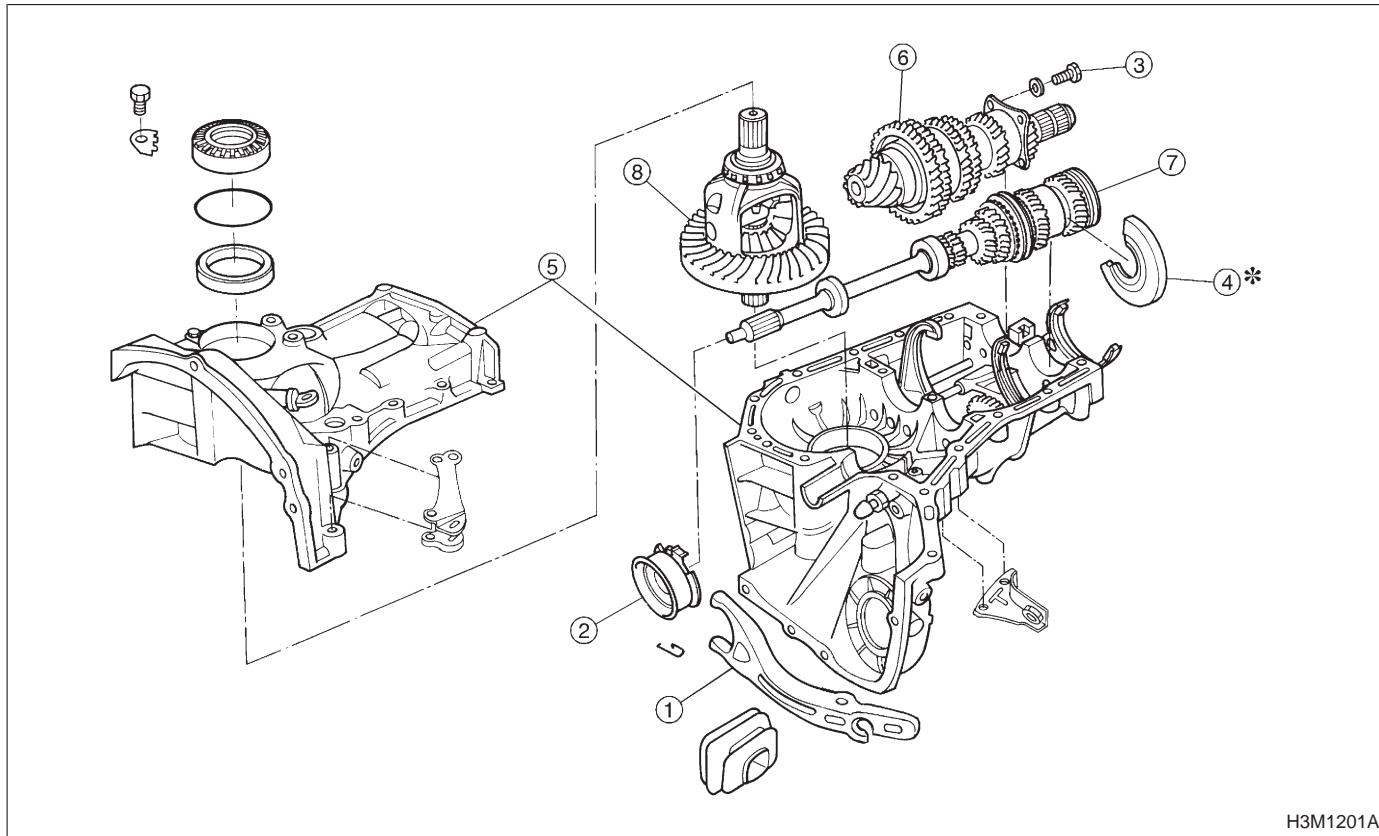


- 1) Remove transfer cover.
- 2) Remove shifter fork screw which secures selector arm to shifter arm.
- 3) Remove transfer case with extension assembly.
- 4) Remove clutch release lever (1) and bearing (2). <Ref. to 2-10 [W3A1].>

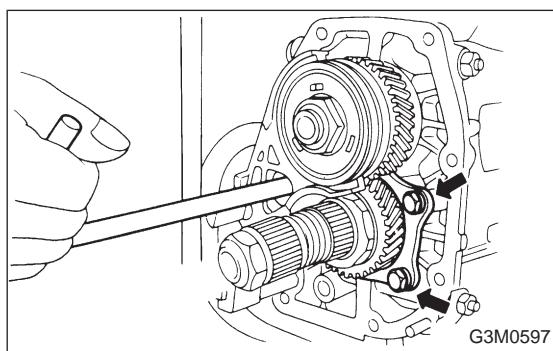

- 5) Remove bearing mounting bolts.

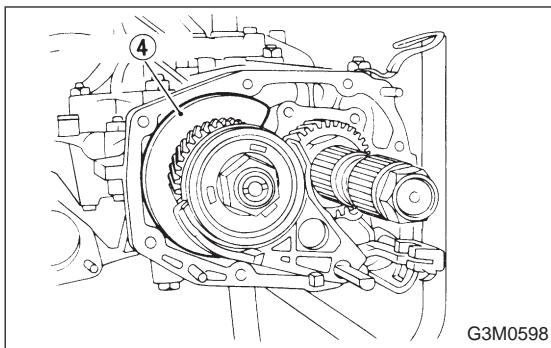


6) Remove main shaft rear plate ④.

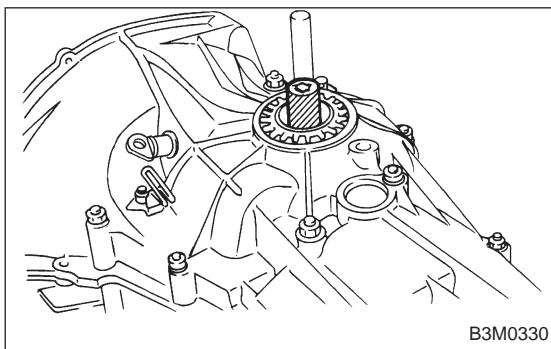


7) Separating transmission case

(1) Put vinyl tape around splines of right and left axle drive shafts to prevent damage to oil seals.

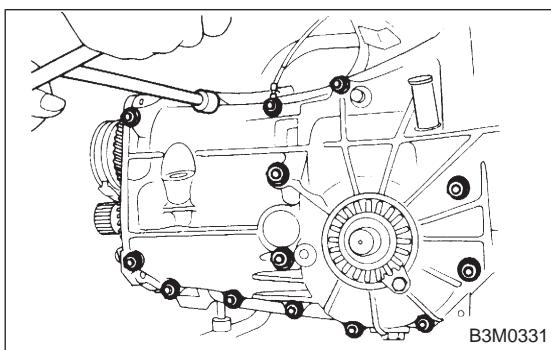

(2) Separate transmission case into right and left cases by loosening seventeen coupling bolts and nuts.

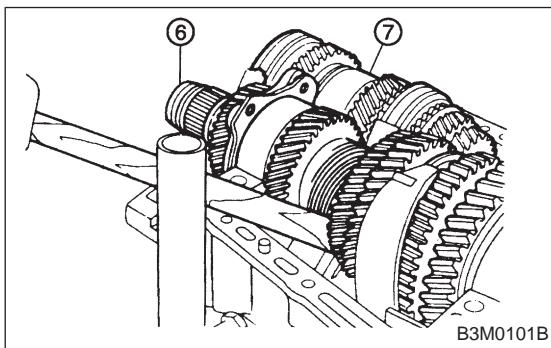


8) Remove drive pinion shaft assembly ⑥ from left side transmission case.

NOTE:

Use a hammer handle, etc. to remove if too tight.

9) Remove main shaft assembly ⑦.

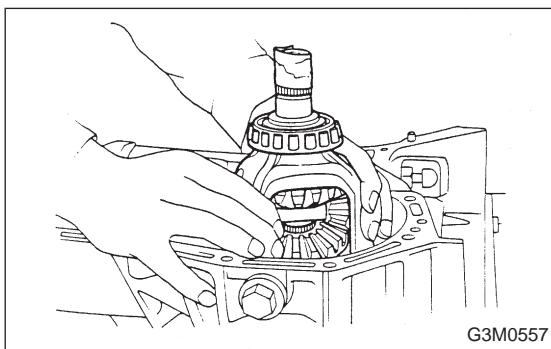


10) Remove differential assembly.

CAUTION:

- Be careful not to confuse right and left roller bearing outer races.
- Be careful not to damage retainer oil seal.


2. TRANSMISSION CASE

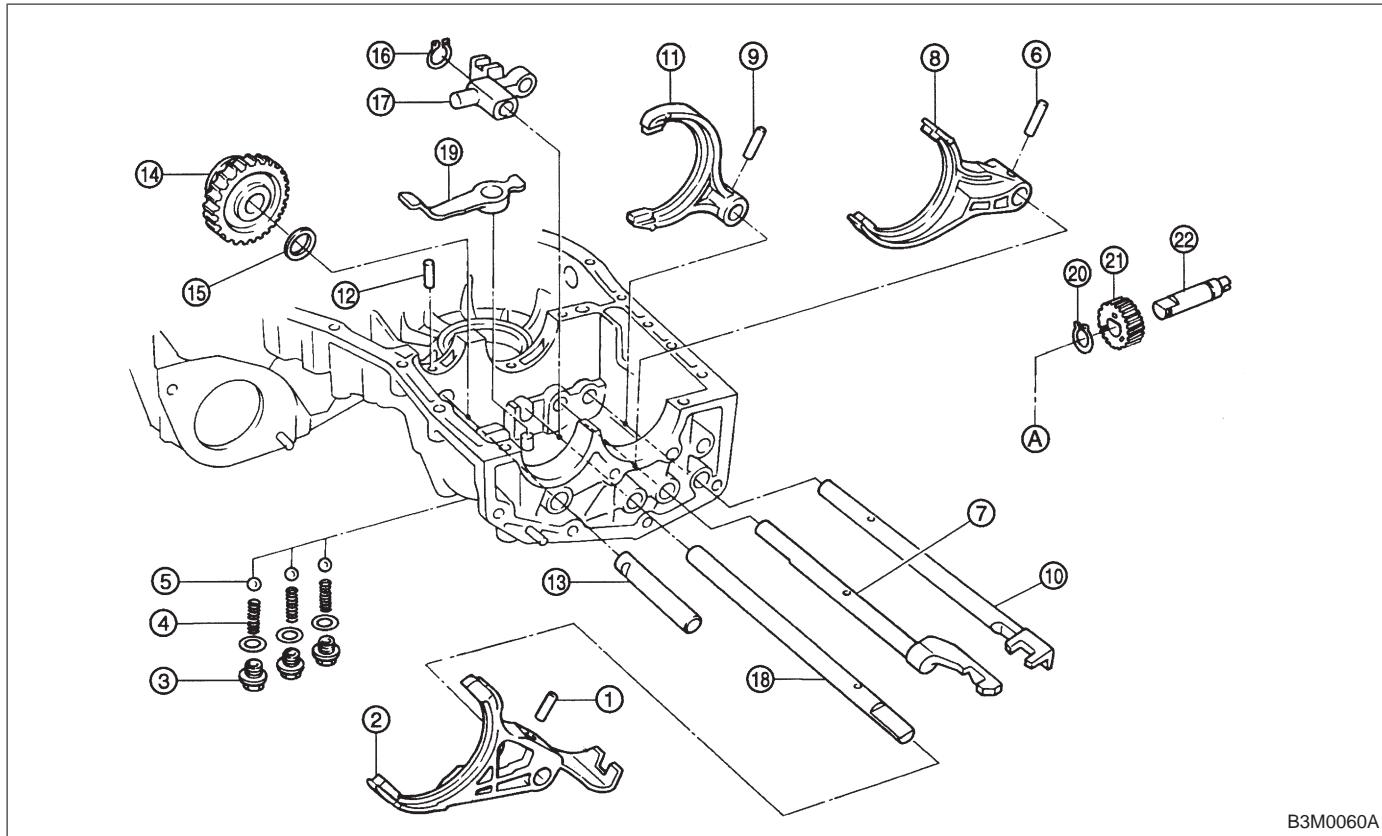

Ⓐ: Front right hand transmission case


1) Drive out spring pin ① with ST, and remove 5th shifter fork ②.

ST 398791700 STRAIGHT PIN REMOVER

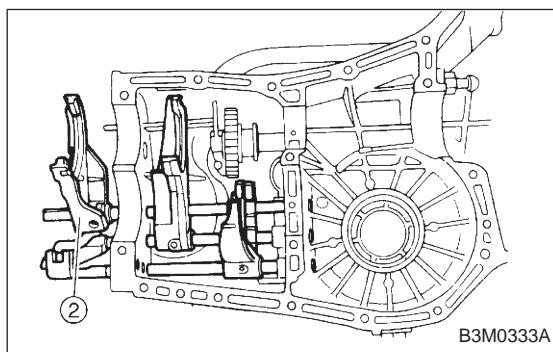

B3M0333A

2) Remove plugs ③, springs ④ and checking balls ⑤.

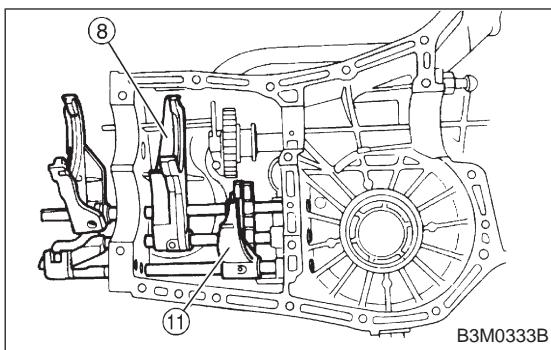


3) Drive out spring pin ⑥, and pull out 3-4 fork rod ⑦ and shifter fork ⑧.

NOTE:

When removing rod, keep other rods in neutral. Also, when pulling out straight pin, remove it toward inside of case so that it may not hit against case.

4) Drive out straight pin ⑨, and pull out 1-2 fork rod ⑩ and shifter fork ⑪.

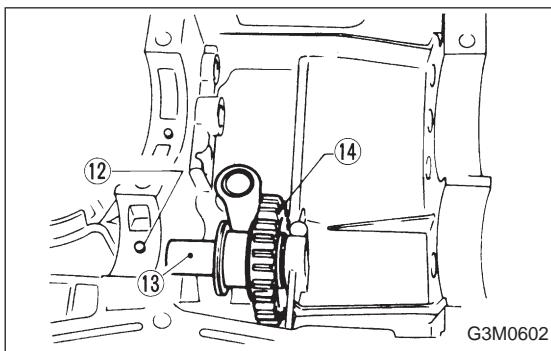


5) Pull out straight pin ⑫, and remove idler gear shaft ⑬, reverse idler gear ⑭ and washer ⑮.

6) Remove outer snap ring ⑯, and pull out reverse shifter rod arm ⑰ from reverse fork rod ⑱. Then take out ball, spring and interlock plunger from rod. And then remove rod.


NOTE:

When pulling out reverse shifter rod arm, be careful not to let ball pop out of arm.

7) Remove reverse shifter lever ⑲.

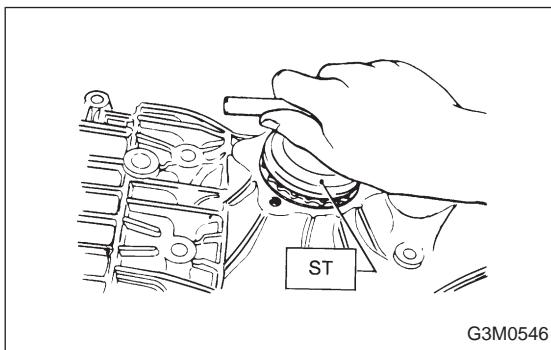


8) Remove differential side retainers using ST.
ST 499787000 WRENCH ASSY

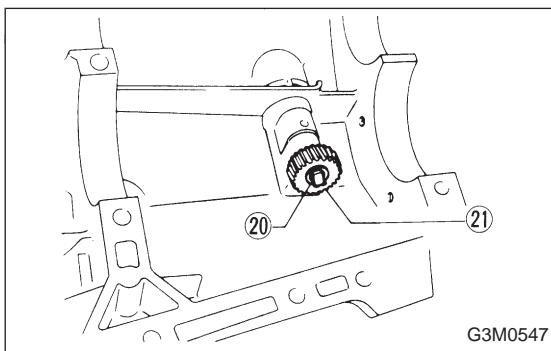

9) Remove outer snap ring ⑳ and pull out speedometer driven gear ㉑. Next, remove vehicle speed sensor 2, oil seal, speedometer shaft ㉒ and washer.

B: ASSEMBLY


1. TRANSMISSION CASE

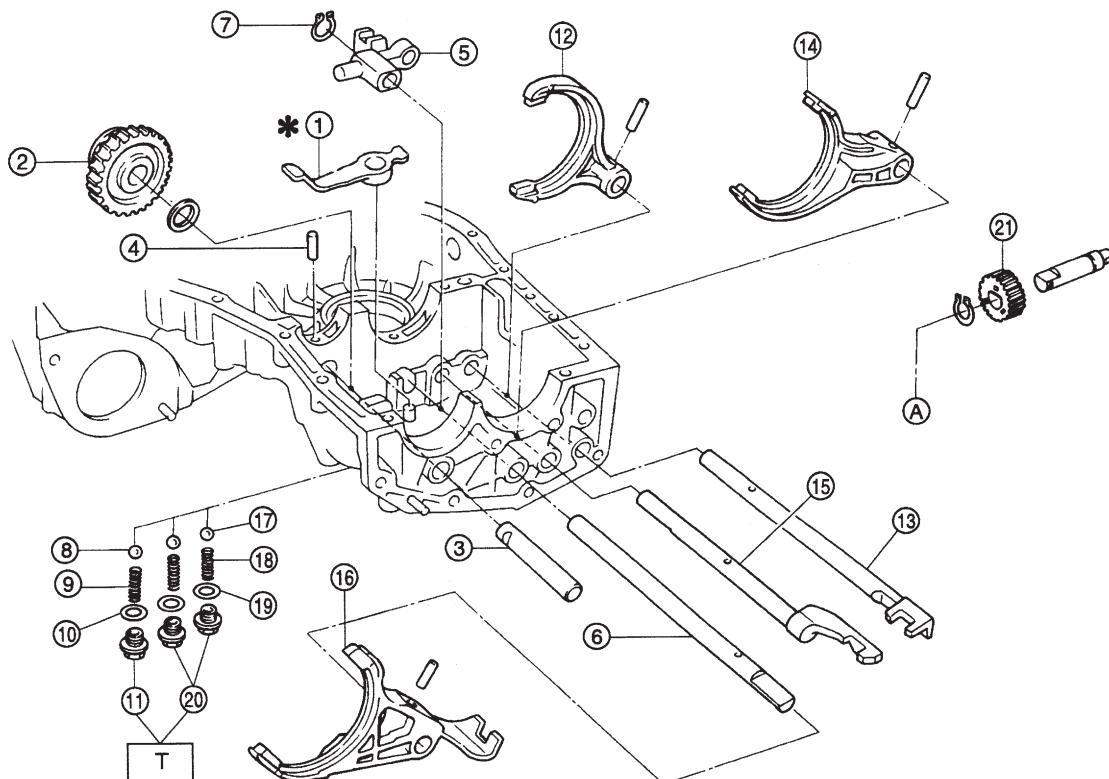

B3M0061A


Ⓐ: To right hand transmission case

Tightening torque: N·m (kg·m, ft·lb)
T: 19.6 ± 0.1 (2.00 \pm 0.015, 14.5 \pm 0.1)

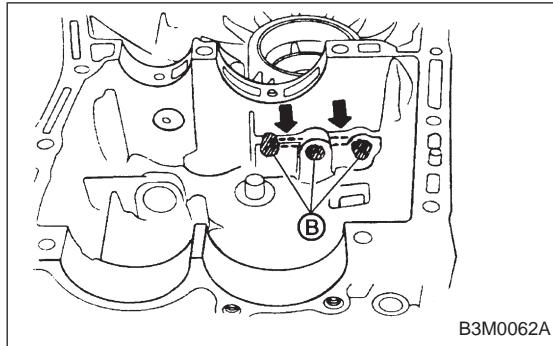

B3M0062A

- 1) Position interlock plungers (5.56 x 19.6), one plunger in hole between 1-2 and 3-4 fork rod holes, and one plunger in hole between 3-4 and reverse fork rod holes.
 Ⓐ: Rod holes

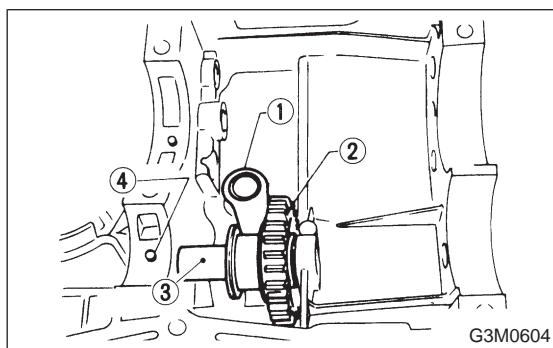

G3M0604

- 2) Install reverse shifter lever ①, reverse idler gear ② and reverse idler gear shaft ③, and secure with straight pin ④.
 NOTE:
 Be sure to install reverse idler shaft from the rear side.

3) Install reverse arm fork spring, ball and interlock plunger (5.56 x 19.6) to reverse fork rod arm ⑤. Insert reverse fork rod ⑥ into hole in reverse fork rod arm ⑤, and hold it with outer snap ring ⑦ using ST.

ST 399411700 ACCENT BALL INSTALLER


CAUTION:

Apply grease to plunger to prevent it from falling.

4) Position ball ⑧ (7.1438), spring ⑨ and gasket ⑩ in reverse shifter rod hole, on left side transmission case, and tighten checking ball plug ⑪.

CAUTION:

Replace gasket with a new one.

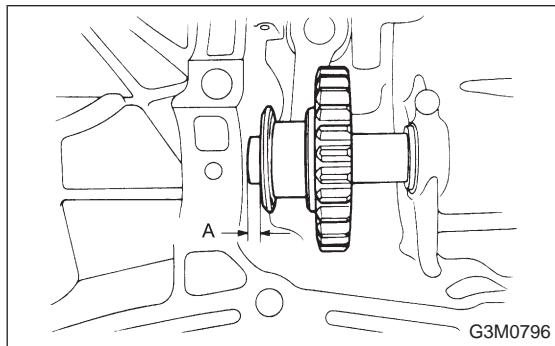


5) Adjustment of reverse idler gear position

(1) Move reverse shifter rod toward REV side. Adjust clearance between reverse idler gear and transmission case wall, using reverse shifter lever ①.

Clearance A:

6.0 — 7.5 mm (0.236 — 0.295 in)

Reverse shifter lever		
Part No.	No.	Remarks
32820AA000	0	Further from case wall
32820AA010	No mark	Standard
32820AA020	2	Closer to case wall

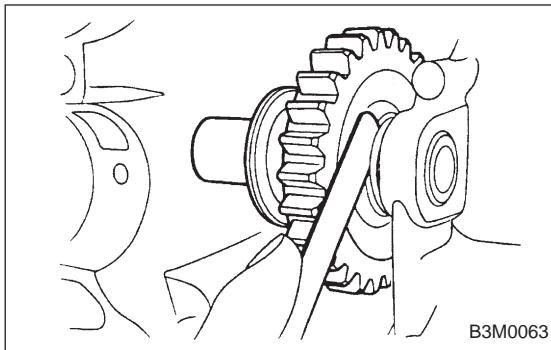


(2) After installing a suitable reverse shifter lever, shift into neutral. Using a thickness gauge, measure clearance between reverse idler gear and transmission case wall and adjust with washer(s).

Clearance:

0 — 0.5 mm (0 — 0.020 in)

Washer (20.5 x 26 x t)	
Part No.	Thickness mm (in)
803020151	0.4 (0.016)
803020152	1.1 (0.043)
803020153	1.5 (0.059)
803020154	1.9 (0.075)
803020155	2.3 (0.091)

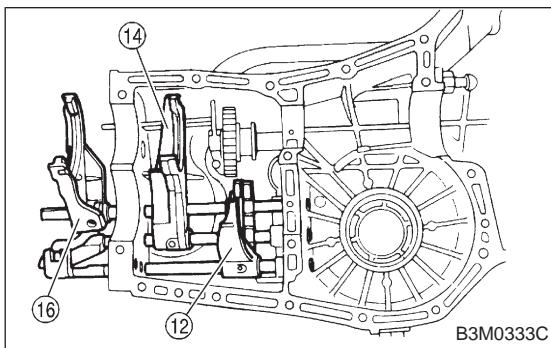

6) Installation of 1-2 shifter fork ⑫ and rod ⑬

- (1) Install 1-2 fork rod into 1-2 shifter fork via the hole on the rear of transmission case.
- (2) Align the holes in rod and fork, and drive straight pin (6 x 22) into these holes using ST.

ST 398791700 STRAIGHT PIN REMOVER

NOTE:

- Set other rods to neutral.
- Make sure interlock plunger (5.56 x 19.6) is on the 3-4 fork rod side.

7) Installation of 3-4 shifter fork ⑭ and rod ⑮

- (1) Install interlock plunger (3 x 11.9) onto 3-4 fork rod.

CAUTION:

Apply a coat of grease to plunger to prevent it from falling.

- (2) Install 3-4 fork rod into 3-4 shifter fork via the hole on the rear of transmission case.

- (3) Align the holes in rod and fork, and drive straight pin (6 x 22) into these holes.


ST 398791700 STRAIGHT PIN REMOVER

NOTE:

- Set reverse fork rod to neutral.
- Make sure interlock plunger (installed before) is on the reverse fork rod side.

8) Install 5th shifter fork ⑯ onto the rear of reverse fork rod ⑯. Align holes in the two parts and drive straight pin into place.


ST 398791700 STRAIGHT PIN REMOVER

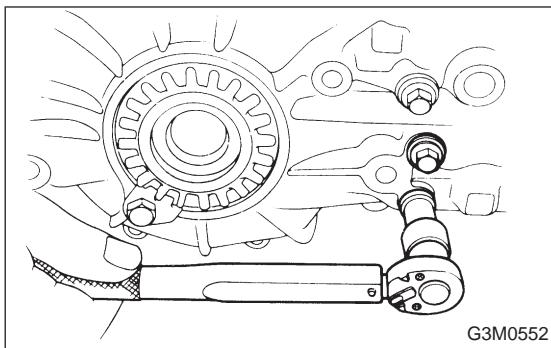

9) Position balls ⑯, checking ball springs ⑯ and gaskets ⑯ into 3-4 and 1-2 rod holes, and install plugs ⑯.

CAUTION:

Replace gasket with a new one.

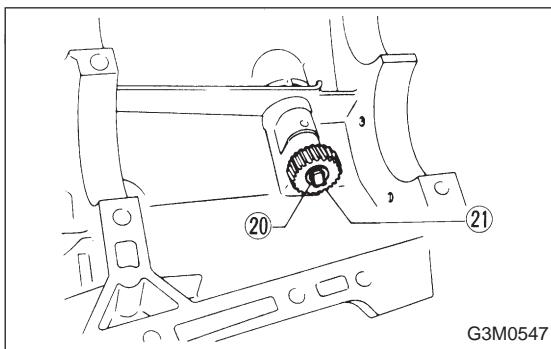

10) Installation of speedometer driven gear ⑯

(1) Install washer and speedometer shaft, and press fit oil seal with ST.


ST 899824100 or 499827000 PRESS

CAUTION:

Use new oil seal, if it has been removed.

(2) Install speedometer driven gear and snap ring.


2. COMBINATION OF TRANSMISSION CASE

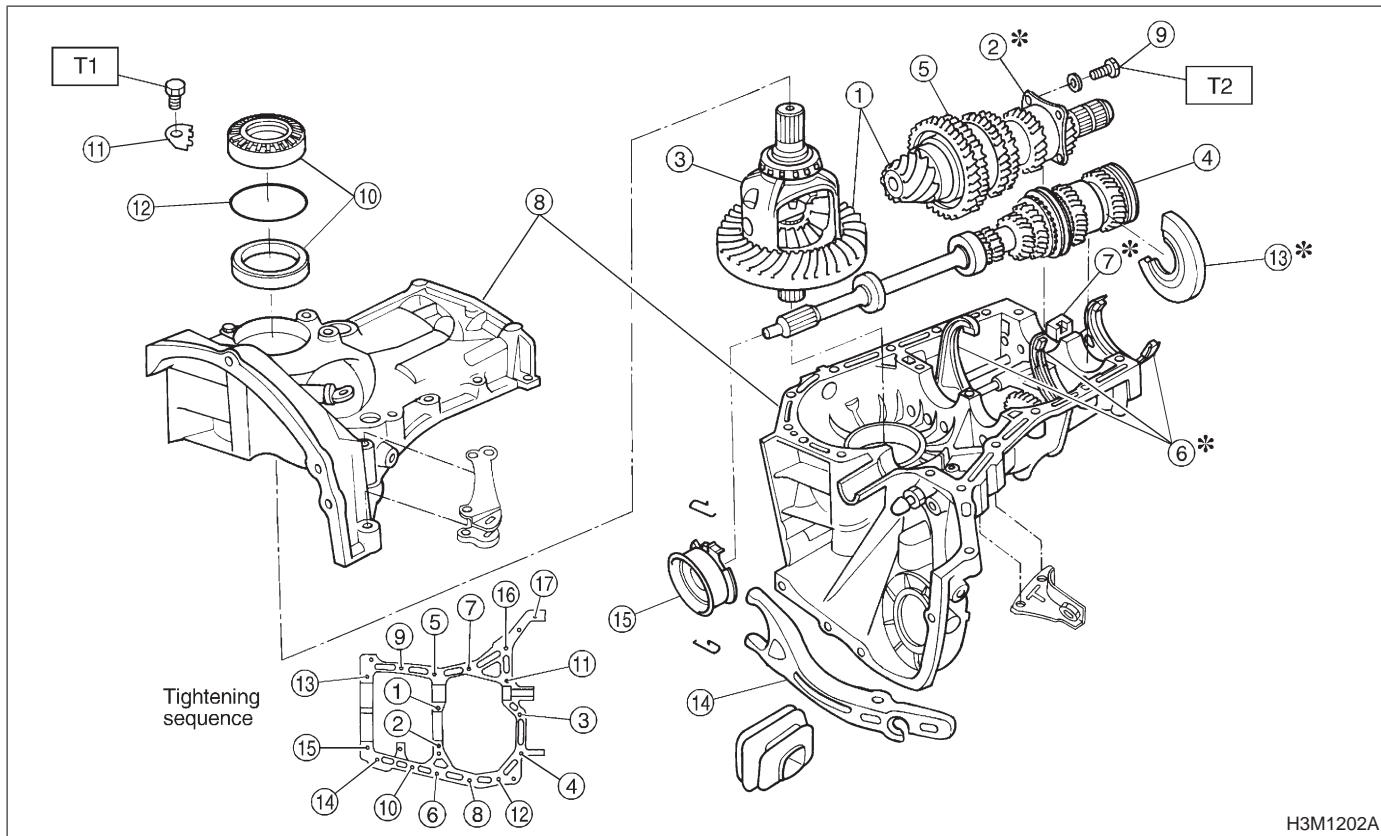


Tightening torque: N·m (kg·m, ft·lb)

T1: 25 (2.5, 18)

T2: 29±3 (3.0±0.3, 21.7±2.2)

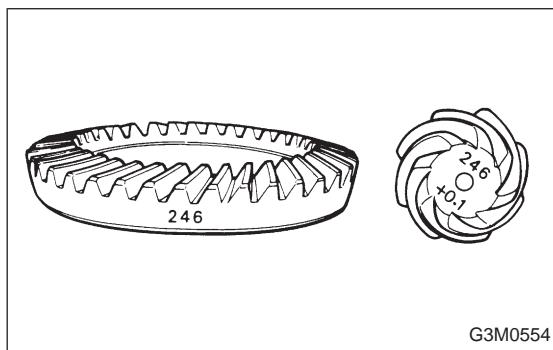

1) Alignment marks/numbers on hypoid gear set ①
 The upper number on driven pinion is the match number for combining it with hypoid driven gear. The lower number is for shim adjustment. If no lower number is shown, the value is zero. The number on hypoid driven gear indicates a number for combination with drive pinion.

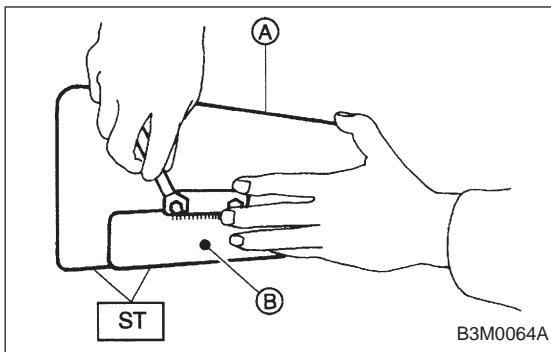

2) Adjustment of drive pinion shim ②

(1) Place drive pinion shaft assembly on right hand transmission main case without shim and tighten bearing mounting bolts.

(2) Inspection and adjustment of ST


NOTE:

- Loosen the two bolts and adjust so that the scale indicates 0.5 correctly when the plate end and the scale end are on the same level.
- Tighten the two bolts.

ST 499917500 DRIVE PINION GAUGE ASSY

Ⓐ: Plate

Ⓑ: Scale

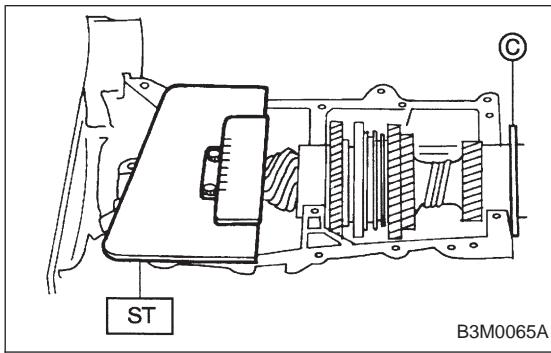

(3) Position the ST by inserting the knock pin of ST into the knock hole in the transmission case.

(4) Slide the drive pinion gauge scale with finger tip and read the value at the point where it matches with the end face of drive pinion.


Ⓒ: Adjust clearance to zero without shim.

(5) The thickness of shim shall be determined by adding the value indicated on drive pinion to the value indicated on the ST. (Add if the number on drive pinion is prefixed by + and subtract if the number is prefixed by -.)

ST 499917500 DRIVE PINION GAUGE ASSY

Select one to three shims from the next table for the value determined as described above and take a shim thickness which is closest to the said value.

Drive pinion shim	
Part No.	Thickness mm (in)
32295AA031	0.150 (0.0059)
32295AA041	0.175 (0.0069)
32295AA051	0.200 (0.0079)
32295AA061	0.225 (0.0089)
32295AA071	0.250 (0.0098)
32295AA081	0.275 (0.0108)
32295AA091	0.300 (0.0118)
32295AA101	0.500 (0.0197)

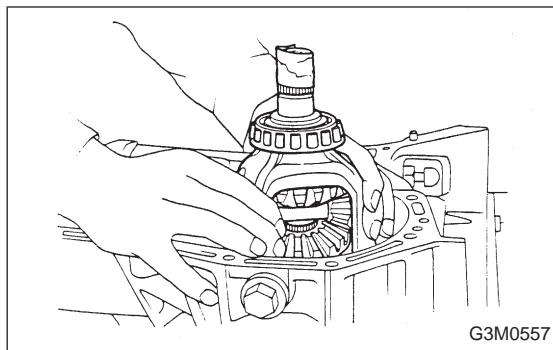


3) Install differential assembly ③ on left hand transmission case.

CAUTION:

Be careful not to fold the sealing lip of oil seal.

NOTE:

Wrap the left and right splined sections of axle shaft with vinyl tape to prevent scratches.

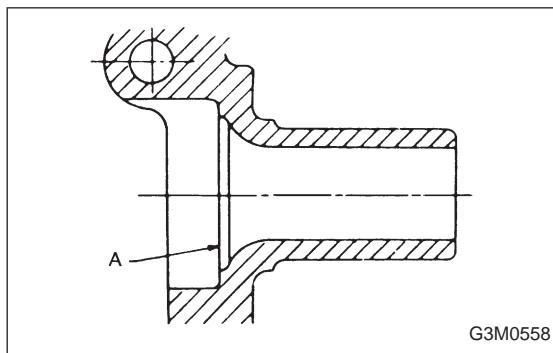


4) Install needle bearing and oil seal onto the front of transmission main shaft assembly ④, and position in left side transmission case.

CAUTION:

- **Wrap clutch splined section with vinyl tape to prevent damage to oil seal.**
- **Apply grease (Unilube #2 or equivalent) to the sealing lip of oil seal.**

NOTE:


- Align the end face of seal with surface A of left side transmission main case when installing oil seal.
- Be careful not to drop oil seal when installing right side transmission main case.
- Make sure straight pin is positioned in hole in needle bearing's outer race.

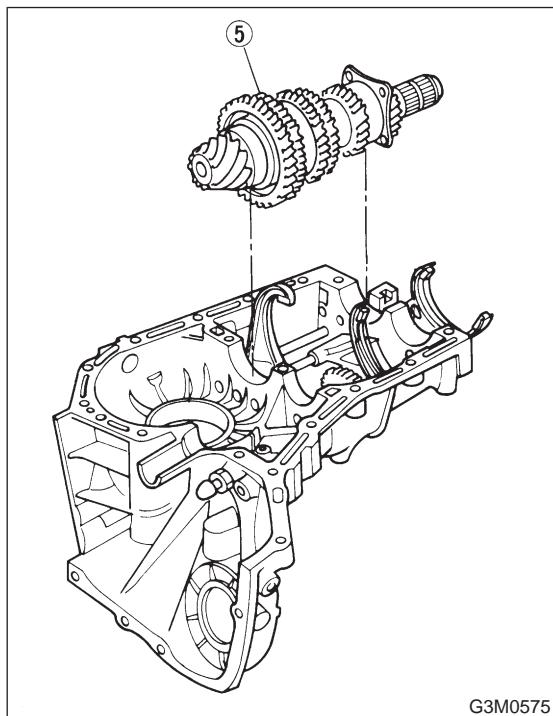


5) Install drive pinion shaft assembly ⑤ with shims selected before into transmission case.

NOTE:


Ensure that the knock pin of the case is fitted into the hole in the bearing outer race.

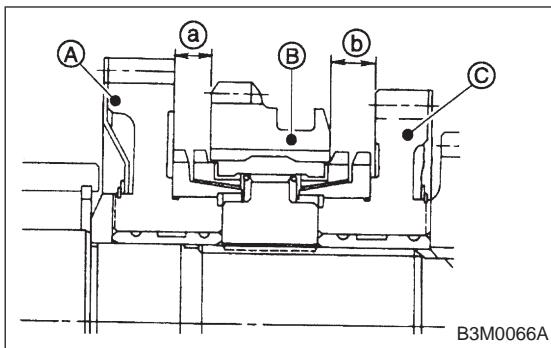

B3M0066A

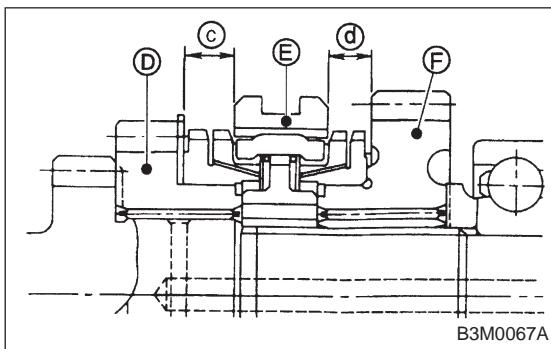

B3M0067A

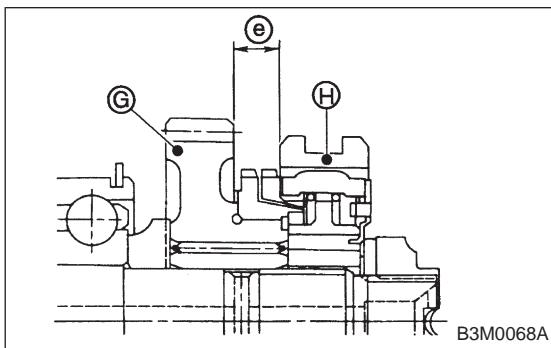

B3M0068A

6) Selection of suitable 1st-2nd, 3rd-4th and 5th shifter fork


Set transmission main shaft assembly and drive pinion shaft assembly in position (so there is no clearance between the two when moved all the way to the front). Select suitable 1st-2nd, 3rd-4th and 5th shifter fork so that coupling sleeve and reverse driven gear are positioned in the center of their synchronizing mechanisms.

	Clearance mm (in)
1st driven gear A to reverse driven gear B	a : 9.5 (0.374)
2nd driven gear C to reverse driven gear B	b : 9.5 (0.374)
3rd drive gear D to coupling sleeve E	c : 9.3 (0.366)
4th drive gear F to coupling sleeve E	d : 9.3 (0.366)
5th drive gear G to coupling sleeve H	e : 9.3 (0.366)

1st-2nd shifter fork		
Part No.	No.	Remarks
32804AA060	1	Approach to 1st gear by 0.2 mm (0.008 in)
32804AA070	No mark	Standard
32804AA080	3	Approach to 2nd gear by 0.2 mm (0.008 in)

3rd-4th shifter fork		
Part No.	No.	Remarks
32810AA060	1	Approach to 4th gear by 0.2 mm (0.008 in)
32810AA070	No mark	Standard
32810AA100	3	Approach to 3rd gear by 0.2 mm (0.008 in)

5th shifter fork		
Part No.	No.	Remarks
32812AA200	4	Approach to 5th gear by 0.2 mm (0.008 in)
32812AA210	No mark	Standard
32812AA220	6	Become distant from 5th gear by 0.2 mm (0.008 in)




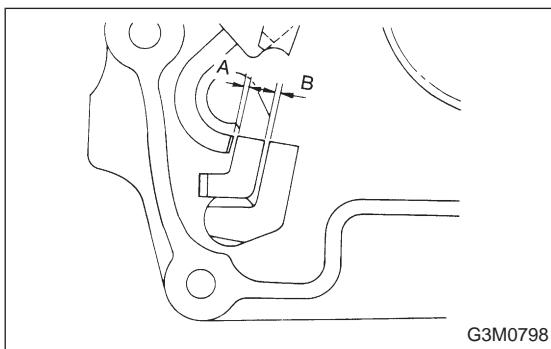


G3M0798

7) Inspection of rod end clearance

Measure rod end clearances A and B. If any clearance is not within specifications, replace rod or fork as required.

A: 1st-2nd to 3rd-4th	0.4 — 1.4 mm (0.016 — 0.055 in)
B: 3rd-4th to 5th	0.5 — 1.3 mm (0.020 — 0.051 in)

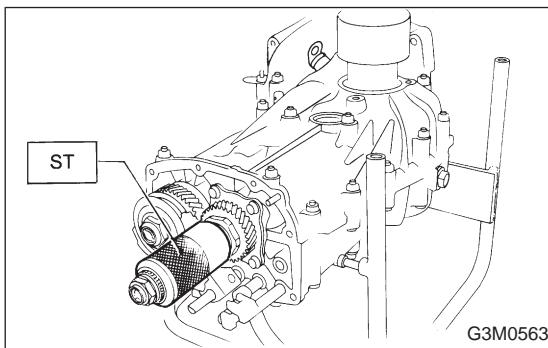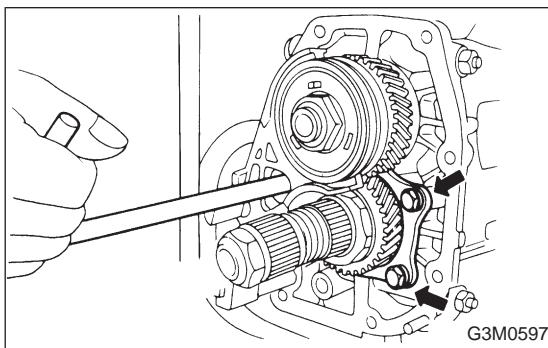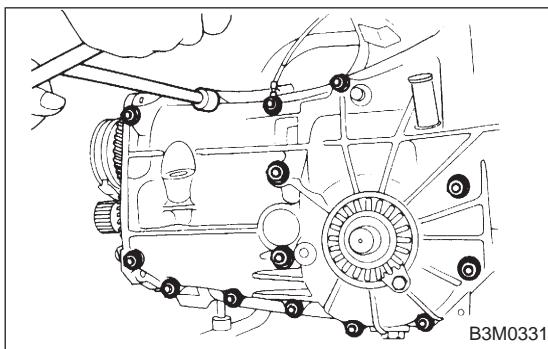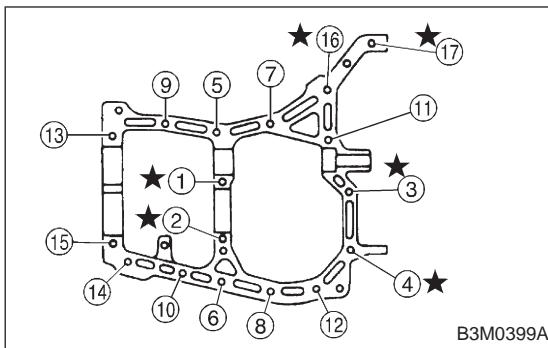

8) Combination of transmission case

(1) Wipe off grease, oil and dust on the mating surfaces of transmission cases with white gasoline, and apply liquid gasket, and then put case right side and left side together.

Liquid gasket:

THREE BOND 1215 or equivalent

(2) Tighten 17 bolts with bracket, clip, etc. as shown in the figure.

Tightening torque:

8 mm bolt

25±2 N·m (2.5±0.2 kg·m, 18.1±1.4 ft-lb)

★ 10 mm bolt

39±3 N·m (4.0±0.3 kg·m, 28.9±2.2 ft-lb)

NOTE:

- Insert bolts from the bottom and tighten nuts at the top.
- Put cases together so that drive pinion shim and input shaft holder shim are not caught up in between.
- Confirm that counter gear and speedometer gear are meshed.

9) Tighten ball bearing attachment bolts.

Tightening torque:


29±3 N·m (3.0±0.3 kg·m, 21.7±2.2 ft-lb)

10) Backlash adjustment of hypoid gear and preload adjustment of roller bearing

NOTE:

Support drive pinion assembly with ST.

ST 498427100 STOPPER

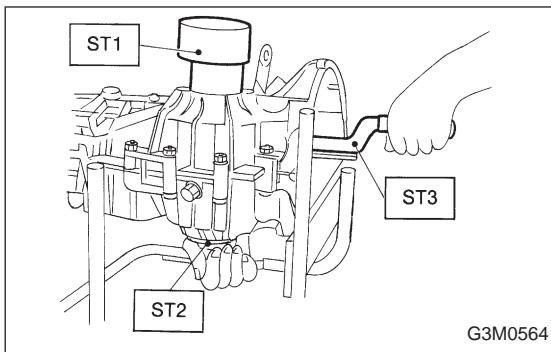

(1) Place the transmission with case left side facing downward and put ST1 on bearing cup.


(2) Screw retainer assembly into left case from the bottom with ST2. Fit ST3 on the transmission main shaft. Shift gear into 4th or 5th and turn the shaft several times. Screw in the retainer while turning ST3 until a slight resistance is felt on ST2.

This is the contact point of hypoid gear and drive pinion shaft. Repeat the above sequence several times to ensure the contact point.

ST1 399780104 WEIGHT

ST2 499787000 WRENCH ASSY

ST3 499927100 HANDLE

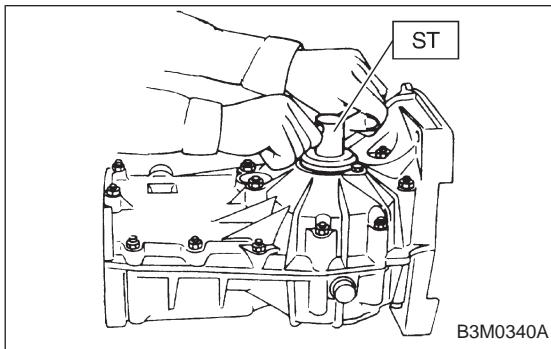


(3) Remove weight and screw in retainer without O-ring on the upper side and stop at the point where slight resistance is felt.

NOTE:

At this point, the backlash between the hypoid gear and drive pinion shaft is zero.

ST 499787000 WRENCH ASSY

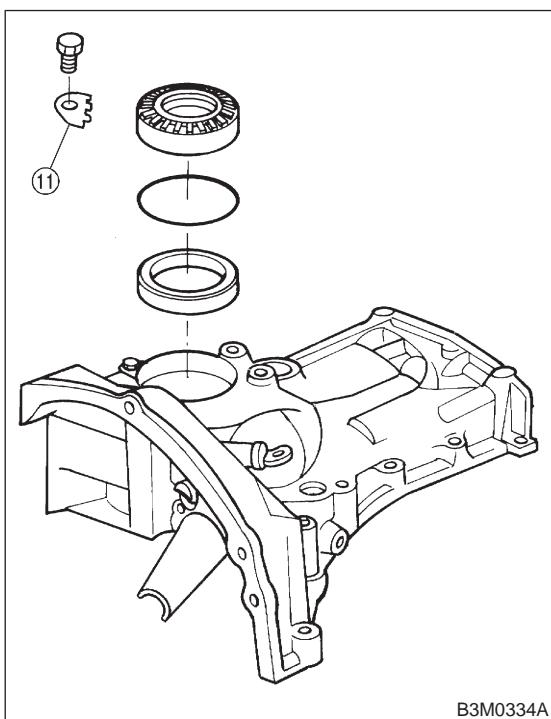

(4) Fit lock plate ⑪. Loosen the retainer on the lower side by 1-1/2 teeth of lock plate and turn in the retainer on the upper side by the same amount in order to obtain the backlash.

NOTE:


The notch on the lock plate moves by 1/2 tooth if the plate is turned upside down.

(5) Turn in the retainer on the upper side additionally by 1 tooth in order to apply preload on taper roller bearing.

(6) Tighten temporarily both the upper and lower lock plates and mark both holder and lock plate for later readjustment.

(7) Turn transmission main shaft several times while tapping around retainer lightly with plastic hammer.


(8) Set ST1 and ST2. Insert the needle through transmission oil drain plug hole so that the needle comes in contact with the tooth surface at a right angle and check the backlash.

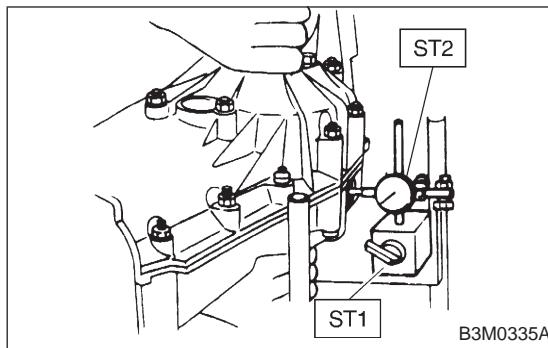

ST1 498247001 MAGNET BASE
ST2 498247100 DIAL GAUGE

Backlash:


$0.13 - 0.18 \text{ mm (0.0051 - 0.0071 in)}$

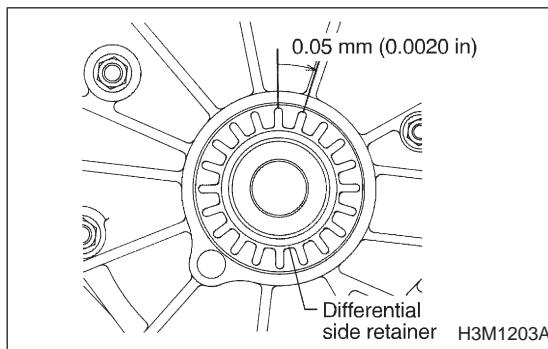

NOTE:


- If backlash is outside specified range, adjust it by turning holder in right side case.
- Each time holder rotates one tooth, backlash changes by 0.05 mm (0.0020 in).

(9) Check tooth contact of hypoid gear as follows:
Apply a uniform thin coat of red lead on both tooth surfaces of 3 or 4 teeth of the hypoid gear. Move the hypoid gear back and forth by turning the transmission main shaft until a definite contact pattern is developed on hypoid gear, and judge whether face contact is correct. If it is incorrect, make the following correction.

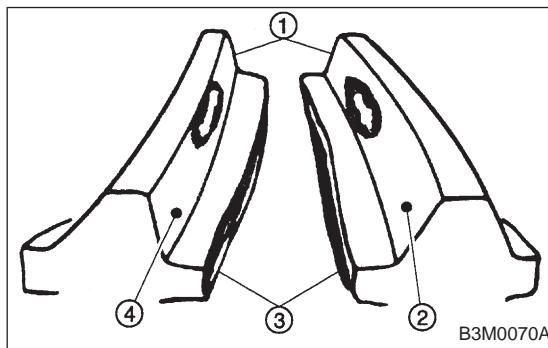


- Tooth contact is correct.

- ① Toe
- ② Coast side
- ③ Heel
- ④ Drive side

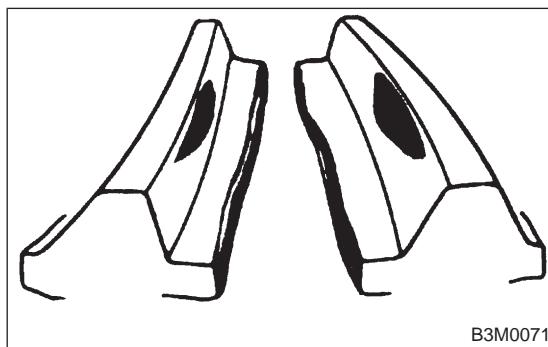


- Backlash is excessive.


To reduce backlash, loosen holder on the upper side (case right side) and turn in the holder on the lower side (case left side) by the same amount.

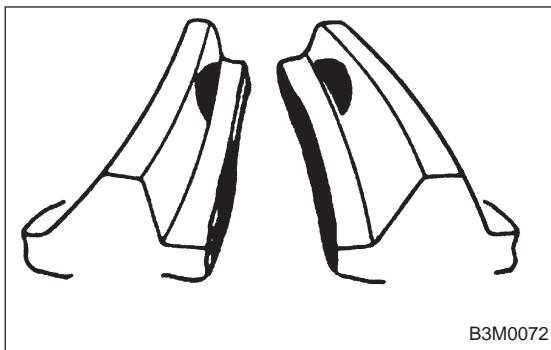


- Backlash is insufficient.
To increase backlash, loosen holder on the lower side (case left side) and turn in the holder on the upper side (case right side) by the same amount.

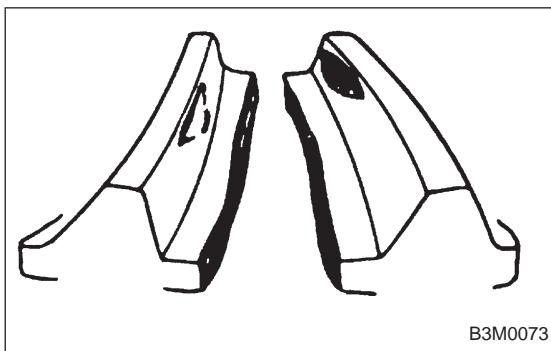

- The drive pinion shim selected before is too thick.
Reduce its thickness.

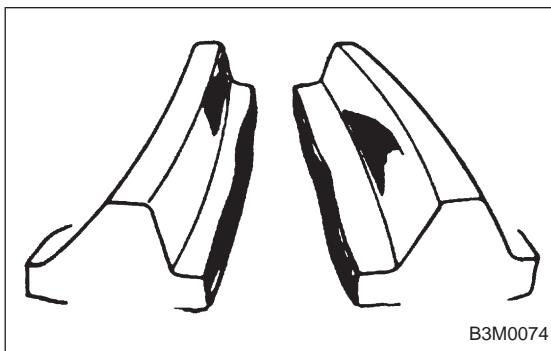

- The drive pinion shim selected before is too thin.
Increase its thickness.

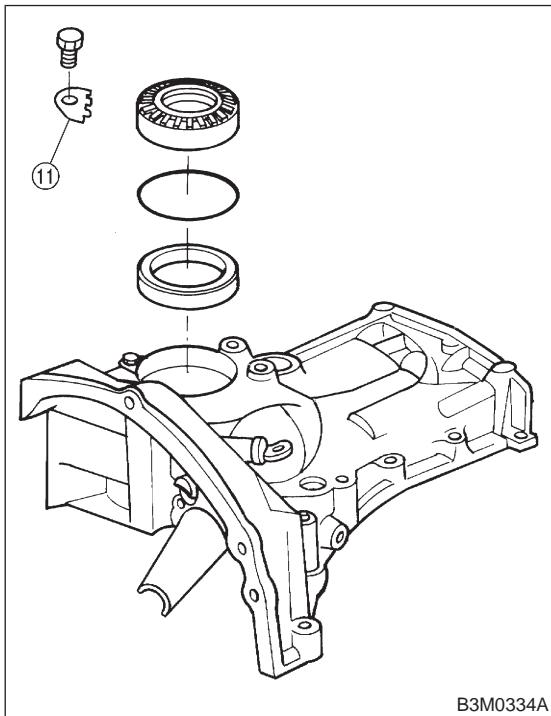

11) After checking the tooth contact of hypoid gears, remove the lock plate ⑪. Then loosen retainer until the O-ring groove appears. Fit O-ring into the groove and tighten retainer into the position where retainer has been tightened in.


Tighten lock plate ⑪.

Tightening torque:

$25\pm3\text{ N}\cdot\text{m}$ (2.5±0.3 kg-m, 18.1±2.2 ft-lb)

NOTE:

Carry out this job on both upper and lower retainers.

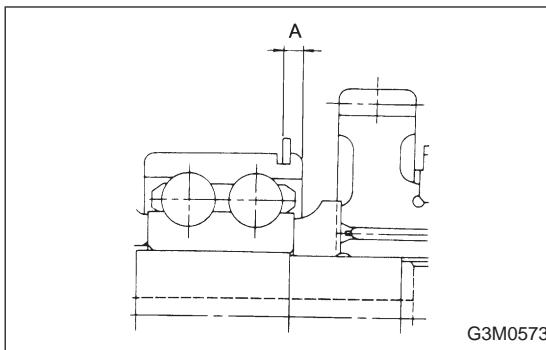

12) Selecting of main shaft rear plate


Using ST, measure the amount A of ball bearing protrusion from transmission main case surface and select the proper plate in the following table:

ST 498147000 DEPTH GAUGE


Dimension "A" mm (in)	Part No.	Mark
4.00 — 4.13 (0.1575 — 0.1626)	32294AA041	1
3.87 — 3.99 (0.1524 — 0.1571)	32294AA051	2

NOTE:

Before measuring, tap the end of main shaft with a plastic hammer lightly in order to make the clearance zero between the main case surface and the moving flange of bearing.

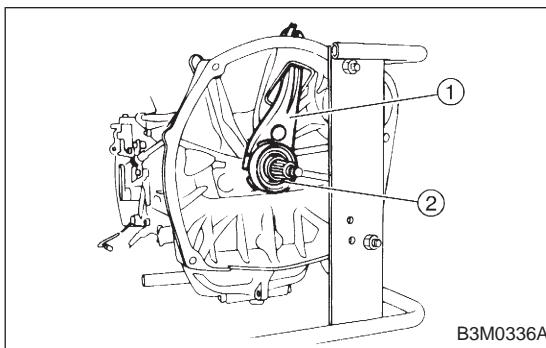

13) Install clutch release lever ① and bearing ②. <Ref. to 2-10 [W3C1].>

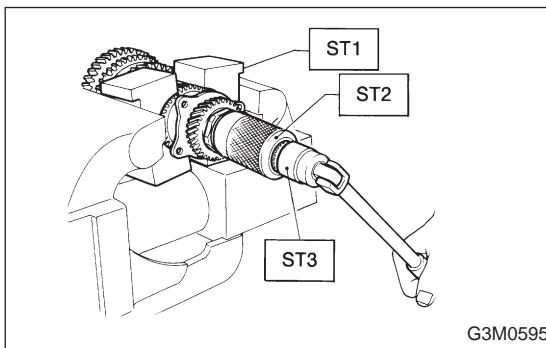

3. Drive Pinion Assembly

A: DISASSEMBLY

1. DRIVE PINION SHAFT

1) Straighten lock nut at staked portion. Remove the lock nut using ST1, ST2 and ST3.


ST1 899884100 HOLDER


ST2 498427100 STOPPER

ST3 899988608 SOCKET WRENCH

2) Withdraw drive pinion from driven shaft.

Remove differential bevel gear sleeve ①, adjusting washer No. 1 ② (25 x 37.5 x t), adjusting washer No. 2 ③ (25 x 37.5 x 4), thrust bearing ④ (25 x 37.5 x 3), needle bearing ⑤ (25 x 30 x 20), drive pinion collar ⑥, needle bearing ⑦ (30 x 37 x 23) and thrust bearing ⑧ (33 x 50 x 3).

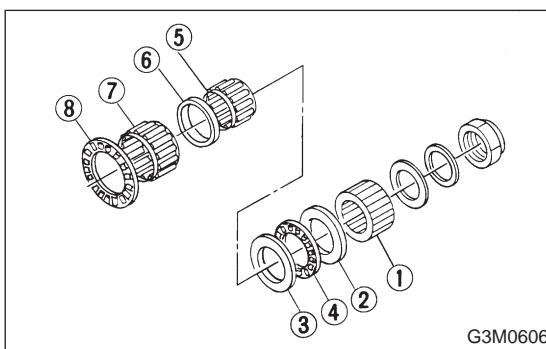

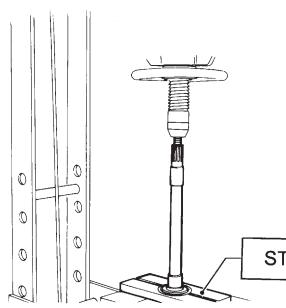


G3M0607

3) Remove roller bearing and washer (33 x 50 x 5) using ST and press.

ST 498077000 REMOVER

CAUTION:

Do not reuse roller bearing.

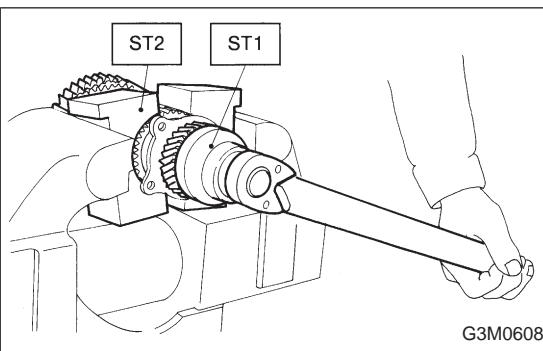

G3M0608

2. DRIVEN GEAR ASSEMBLY

CAUTION:

Attach a cloth to the end of driven shaft (on the frictional side of thrust needle bearing) during disassembly or reassembly to prevent damage.


1) Straighten lock nut at staked portion. Remove the lock nut using ST1 and ST2.

ST1 499987300 SOCKET WRENCH (50)

ST2 899884100 HOLDER

2) Remove 5th driven gear using ST.

ST 499857000 5TH DRIVEN GEAR REMOVER

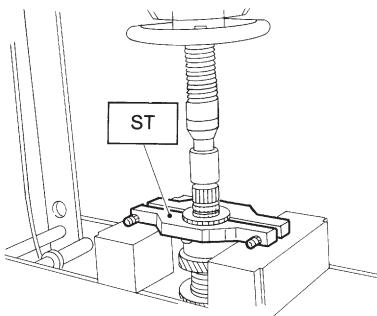


G3M0609

3) Remove woodruff key.

4) Remove roller bearing (42 x 74 x 40), 3rd and 4th driven gear using ST1 and ST2.

ST1 499757002 SNAP RING PRESS

ST2 899714110 REMOVER

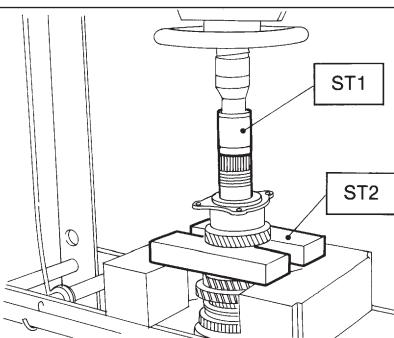

G3M0610

5) Remove the key.


6) Remove 2nd driven gear assembly.

7) Remove 1st driven gear, 2nd gear bushing, gear and hub using ST1 and ST2.

Replace gear and hub if necessary. Do not attempt to disassemble if at all possible because they must engage at a specified point. If they have to be disassembled, mark the engaging point beforehand.




ST1 499757002 SNAP RING PRESS

ST2 899714110 REMOVER

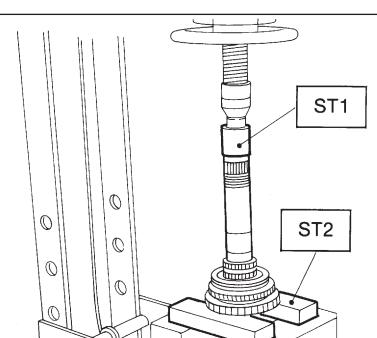

G3M0611

8) Remove sub gears for 1st and 2nd driven gear.

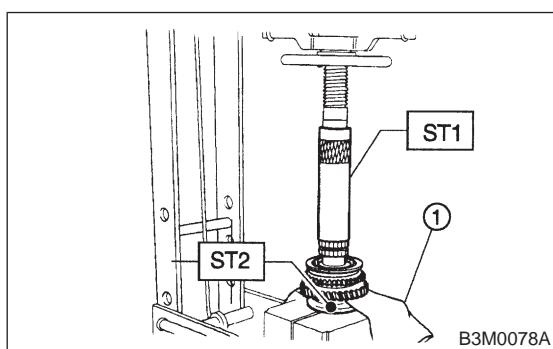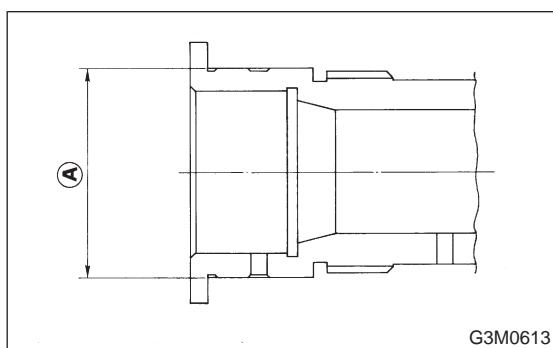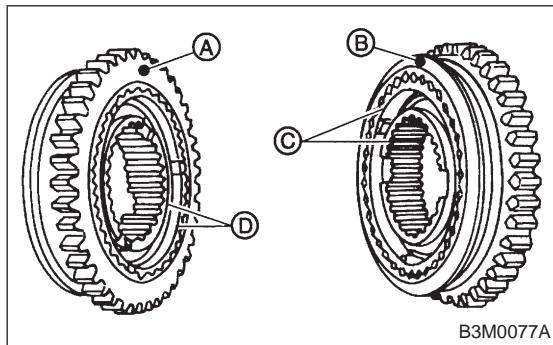

B: ASSEMBLY

1. GEAR AND HUB ASSEMBLY

NOTE:

Position open ends of springs 120° apart.

- Ⓐ: 1st gear side
- Ⓑ: 2nd gear side
- Ⓒ: Flush surface
- Ⓓ: Stepped surface

2. DRIVEN GEAR ASSEMBLY

Assemble a driven shaft and 1st driven gear that select for adjustment the proper radial clearance.

Driven shaft	1st driven gear	
Part No.	Diameter A mm (in)	Part No.
32229AA150	49.959 — 49.966 (1.9669 — 1.9672)	32231AA270
32229AA140	49.967 — 49.975 (1.9672 — 1.9675)	32231AA260

1) Install 1st driven gear, 1st-2nd baulk ring and gear and hub assembly onto driven shaft.

NOTE:


Take care to install gear hub in proper direction.

2) Install 2nd driven gear bushing onto driven shaft using ST1, ST2 and press.

ST1 499277200 INSTALLER
ST2 499587000 INSTALLER

CAUTION:

Attach a cloth ① to the end of driven shaft to prevent damage.

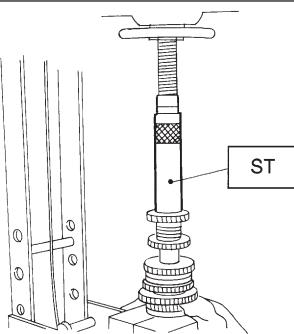


G3M0615

3) Install 2nd driven gear, 1st-2nd baulk ring and insert onto driven shaft. After installing key on driven shaft, install 3rd-4th driven gear using ST and press.

ST 499277200 INSTALLER


Align groove in baulk ring with insert.

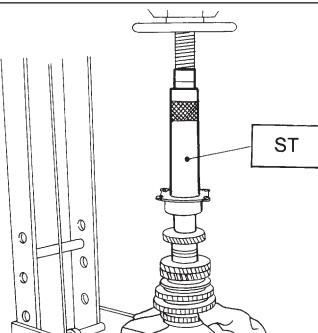

G3M0616

4) Install a set of roller bearings (42 x 74 x 40) onto the driven shaft using ST and press.


ST 499277200 INSTALLER

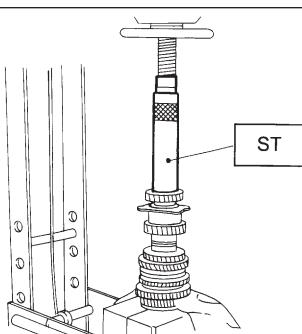

G3M0617

5) Position woodruff key in groove on the rear of driven shaft. Install 5th driven gear onto drive shaft using ST and press.

ST 499277200 INSTALLER

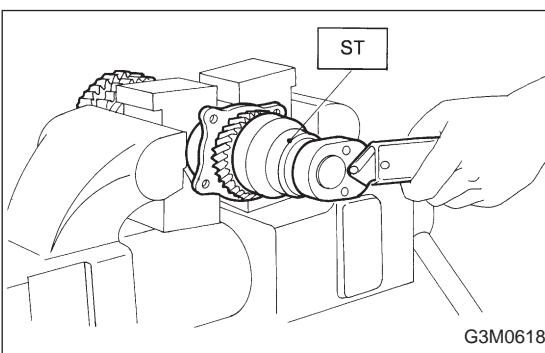

G3M0618

6) Install lock washer (42 x 53 x 2). Install lock nut (42 x 13) and tighten to the specified torque using ST.


ST 499987300 SOCKET WRENCH (50)

Tightening torque:


$265 \pm 10 \text{ N}\cdot\text{m}$ (27 $\pm 1 \text{ kg}\cdot\text{m}$, 195 $\pm 7 \text{ ft}\cdot\text{lb}$)

NOTE:

- Stake lock nut at two points.
- Using spring balancer, check that starting torque of roller bearing ② is 0.1 to 1.5 N·m (1 to 15 kg·cm, 0.9 to 13.0 in-lb).

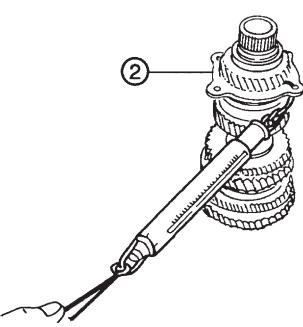

B3M0079A

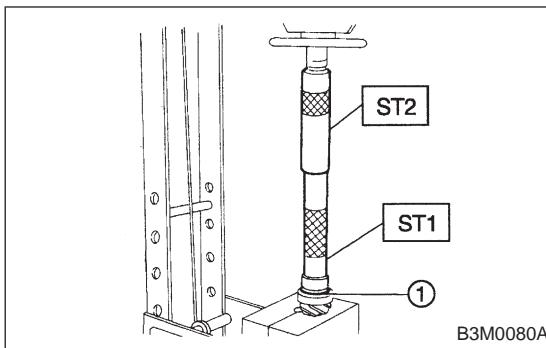


3. DRIVE PINION SHAFT

- 1) Install roller bearing onto drive pinion. Install washer ① (33 x 50 x 5) using ST1, ST2 and press.


ST1 499277100 BUSH 1-2 INSTALLER

ST2 499277200 INSTALLER

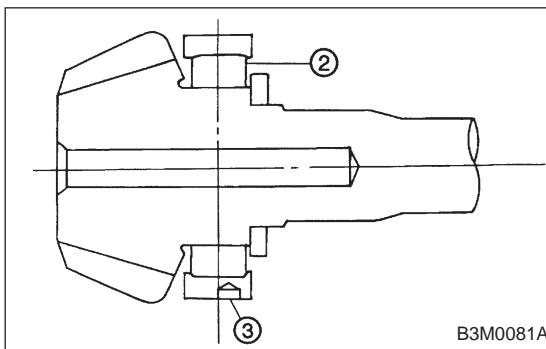


NOTE:

When installing roller bearing ②, note its directions (front and rear) because knock pin hole ③ in outer race is offset.

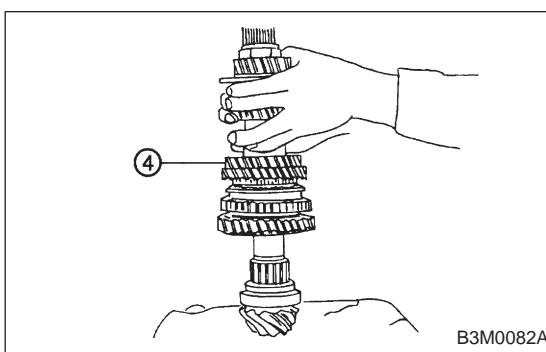

- 2) Install thrust bearing (33 x 50 x 3) and needle bearing (30 x 37 x 23). Install driven shaft assembly ④.

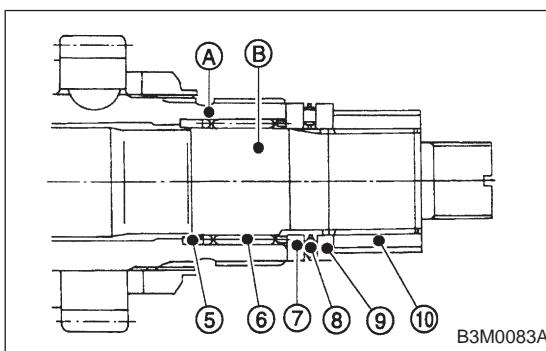


- 3) Install drive pinion collar ⑤, needle bearing ⑥ (25 x 30 x 20), adjusting washer No. 2 ⑦ (25 x 36 x 4), thrust bearing ⑧ (25 x 37.5 x 3), adjusting washer No. 1 ⑨ (25 x 36 x t) and differential bevel gear sleeve ⑩ in that order.

NOTE:

Be careful because spacer must be installed in proper direction.


Ⓐ: Driven shaft

Ⓑ: Driven pinion shaft

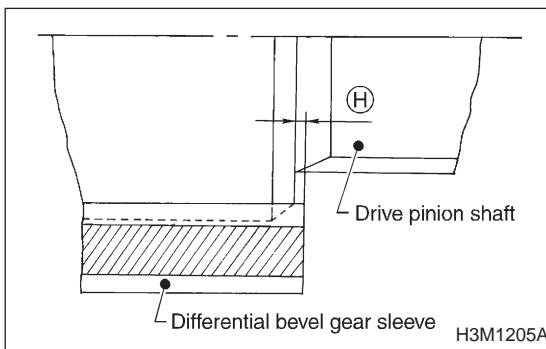

4. ADJUSTMENT OF THRUST BEARING PRELOAD

- 1) After completing the preceding steps 1) through 3), select adjusting washer No. 2 so that dimension (H) is zero through visual check. Position washer (18.3 x 30 x 4) and lock washer (18 x 30 x 2) and install lock nut (18 x 13.5).

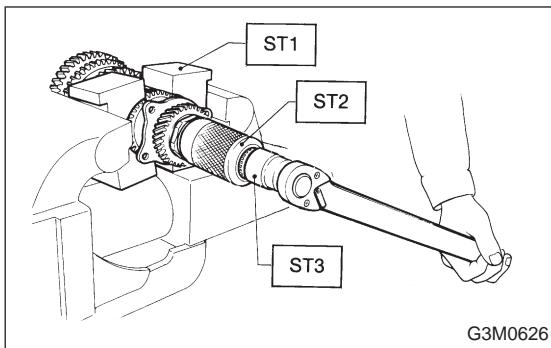

2) Using ST1, ST2 and ST3, tighten lock nut to the specified torque.


ST1 899884100 HOLDER

ST2 498427100 STOPPER

ST3 899988608 SOCKET WRENCH (27)

Tightening torque:

$118 \pm 8 \text{ N}\cdot\text{m} (12 \pm 0.8 \text{ kg}\cdot\text{m}, 86.8 \pm 5.8 \text{ ft}\cdot\text{lb})$

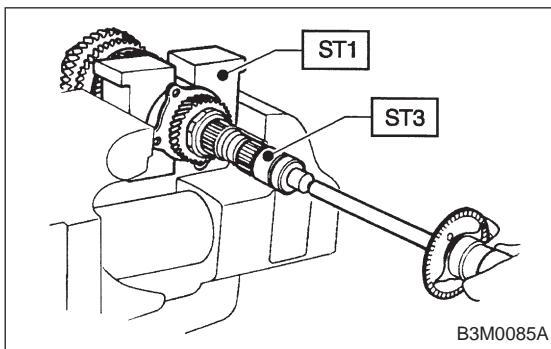


3) After removing ST2, measure starting torque using torque driver.

ST1 899884100 HOLDER

ST3 899988608 SOCKET WRENCH (27)


Starting torque:

$0.5 \pm 0.2 \text{ N}\cdot\text{m} (0.055 \pm 0.025 \text{ kg}\cdot\text{m}, 0.4 \pm 0.2 \text{ ft}\cdot\text{lb})$

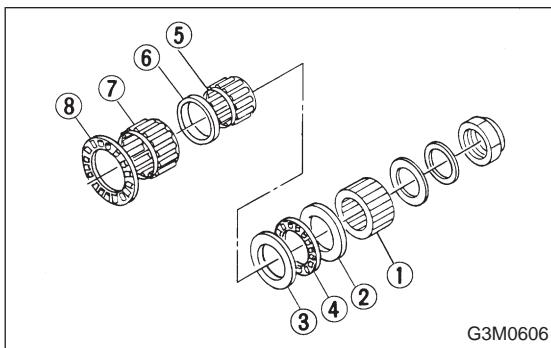

4) If starting torque is not within specified limit, select new adjusting washer No. 1 ② and recheck starting torque.

Adjusting washer No. 1	
Part No.	Thickness mm (in)
803025051	3.925 (0.1545)
803025052	3.950 (0.1555)
803025053	3.975 (0.1565)
803025054	4.000 (0.1575)
803025055	4.025 (0.1585)
803025056	4.050 (0.1594)
803025057	4.075 (0.1604)

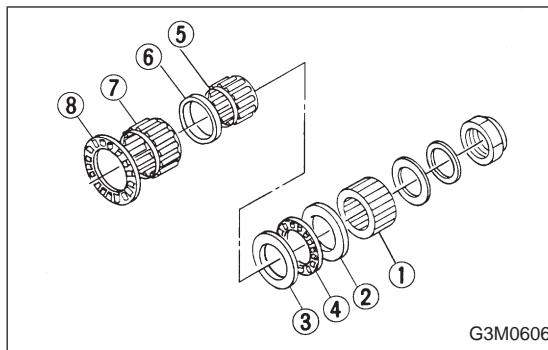


5) If specified starting torque range cannot be obtained when a No. 1 ② adjusting washer is used, then select a suitable No. 2 ③ adjusting washer from those listed in the following table. Repeat steps 1) through 4) to adjust starting torque.

Starting torque	Dimension H	Washer No. 2
Low	Small	Select thicker one.
High	Large	Select thinner one.

Adjusting washer No. 2	
Part No.	Thickness mm (in)
803025059	3.850 (0.1516)
803025054	4.000 (0.1575)
803025058	4.150 (0.1634)

6) Recheck that starting torque is within specified range, then clinch lock nut at four positions.

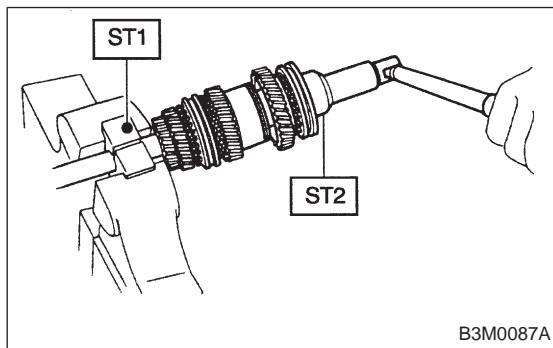

4. Main Shaft Assembly

A: DISASSEMBLY

1) Put vinyl tape around main shaft splines to protect oil seal from damage. Then pull out oil seal and needle bearing by hand.


2) Remove lock nut from transmission main shaft assembly.

NOTE:


Remove caulking before taking off lock nut.

ST1 498937000 TRANSMISSION HOLDER

ST2 499987003 SOCKET WRENCH (35)

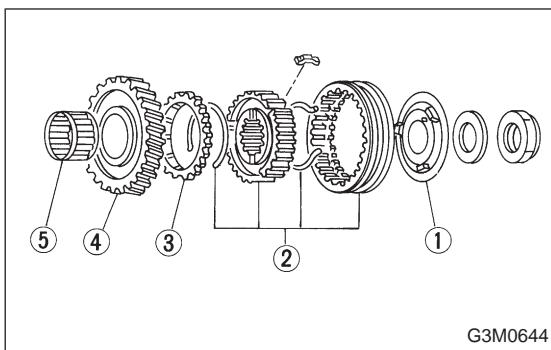

3) Remove insert stopper plate ①, sleeve and hub assembly No. 2, baulk ring ③, 5th drive gear ④, and needle bearing ⑤ (32 x 36 x 25.7).

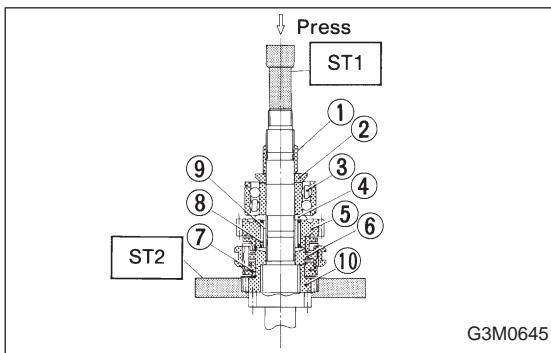

4) Using ST1, ST2 and a press, remove:


- 5th needle bearing inner race ①
- 5th gear thrust washer ②
- Ball bearing ③ (25.5 x 65 x 31)
- 4th gear thrust washer ④
- 4th drive gear ⑤
- Sleeve and hub assembly ⑥
- Baulk ring ⑦
- 4th needle bearing ⑧
- 4th needle bearing inner race ⑨
- 3rd drive gear ⑩

ST1 899864100 REMOVER

ST2 899714110 REMOVER

NOTE:

Replace sleeve and hub with new ones. Do not attempt to disassemble because they must engage at a specified point. If they should be disassembled, mark engagement point on splines beforehand.

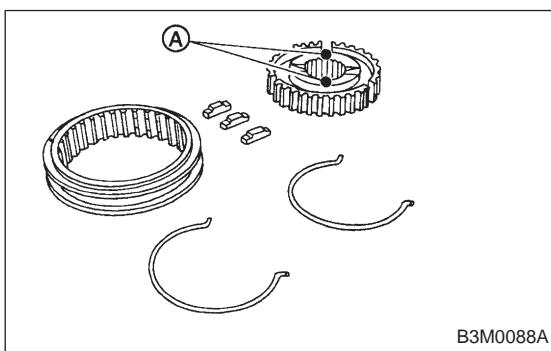


B: ASSEMBLY

1) Assemble sleeve and hub assembly for 3rd-4th and, 5th and high-low synchronizing.

NOTE:

Position open ends of spring 120° apart.

Ⓐ: Two holes for discrimination (3rd-4th hub)

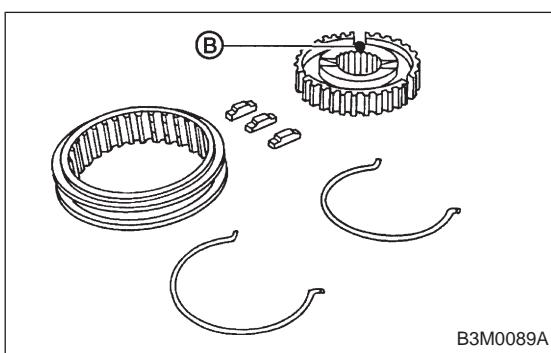


Ⓑ: One hole for discrimination (5th hub)

2) Install 3rd drive gear, baulk ring, and sleeve and hub assembly for 3rd-4th needle bearing (32 x 36 x 25.7) on transmission main shaft.

NOTE:


Align groove in baulk ring with shifting insert.

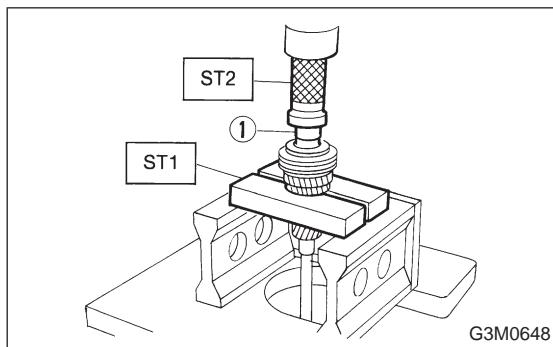

3) Install 4th needle bearing race ① onto transmission main shaft using ST1, ST2 and a press.

ST1 899714110 REMOVER

ST2 499877000 RACE 4-5 INSTALLER

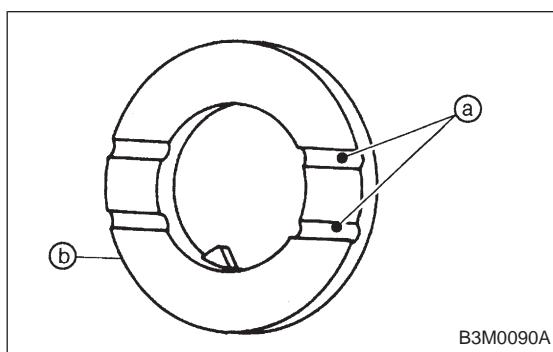


4) Install baulk ring, needle bearing (32 x 30 x 25.7), 4th drive gear and 4th gear thrust washer to transmission main shaft.

NOTE:

Face thrust washer in the correct direction.

①: Groove


②: 4th gear side

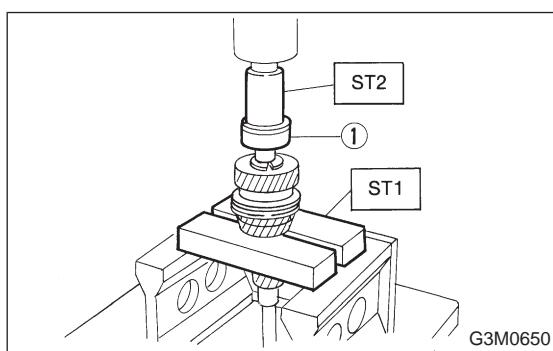

5) Drive ball bearing ① onto the rear section of transmission main shaft using ST1, ST2 and a press.

ST1 899714110 REMOVER

ST2 499877000 RACE 4-5 INSTALLER

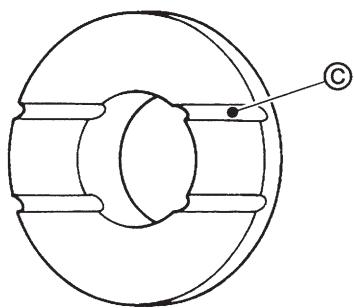

B3M0091A

6) Using the same tools as in step 5) above, install the following parts onto the rear section of transmission main shaft.

- 5th gear thrust washer

NOTE:

Face thrust washer in the correct direction.

④: Face this surface to 5th gear side.

ST1 899714110 REMOVER

ST2 499877000 RACE 4-5 INSTALLER

- 5th needle bearing race

7) Install the following parts to the rear section of transmission main shaft.

- Needle bearing (32 x 36 x 25.7)
- 5th drive gear
- Baulk ring
- Sleeve ④ and hub assembly
- Insert stopper plate ⑤
- Lock washer ⑥ (22 x 38 x 2)
- Tighten lock nuts ⑦ (22 x 13) to the specified torque using ST1 and ST2.

ST1 499987003 SOCKET WRENCH (35)


ST2 498937000 TRANSMISSION HOLDER

NOTE:


- Align groove ④ in baulk ring with shifting insert.
- Be sure to fit pawl ⑤ of insert stopper plate into 4 mm (0.16 in) dia. hole in the boss section of synchronizer hub.
- Secure lock nuts in two places after tightening.

Tightening torque:

$118 \pm 6 \text{ N}\cdot\text{m} (12.0 \pm 0.6 \text{ kg}\cdot\text{m}, 86.8 \pm 4.3 \text{ ft-lb})$

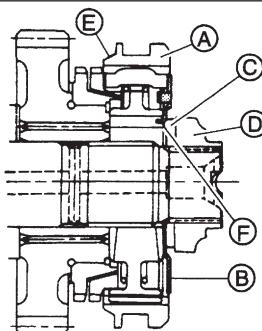


B3M0092A

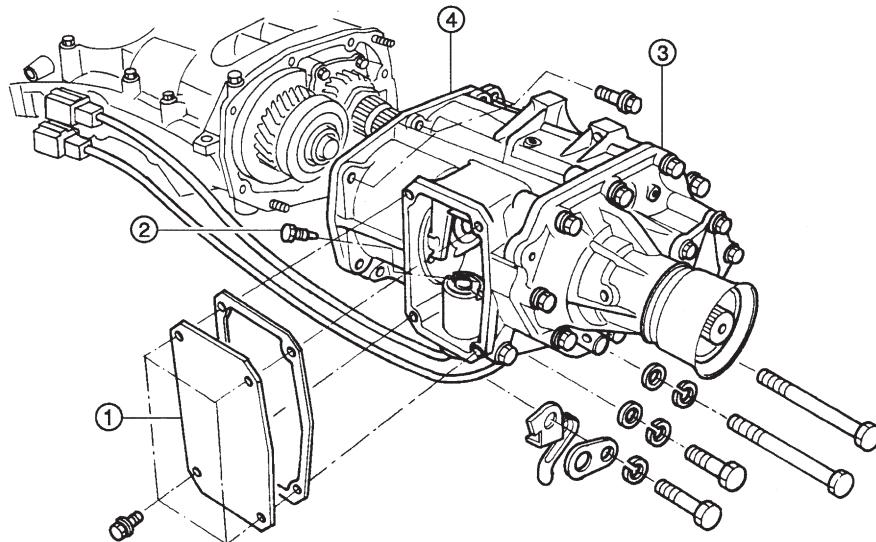5. Transfer Case and Extension**A: REMOVAL**

B3M0041A

- 1) Remove transfer cover ①.
- 2) Remove shifter fork screw ② which secures selector arm to shifter arm.
- 3) Remove transfer case ④ with extension assembly ③.

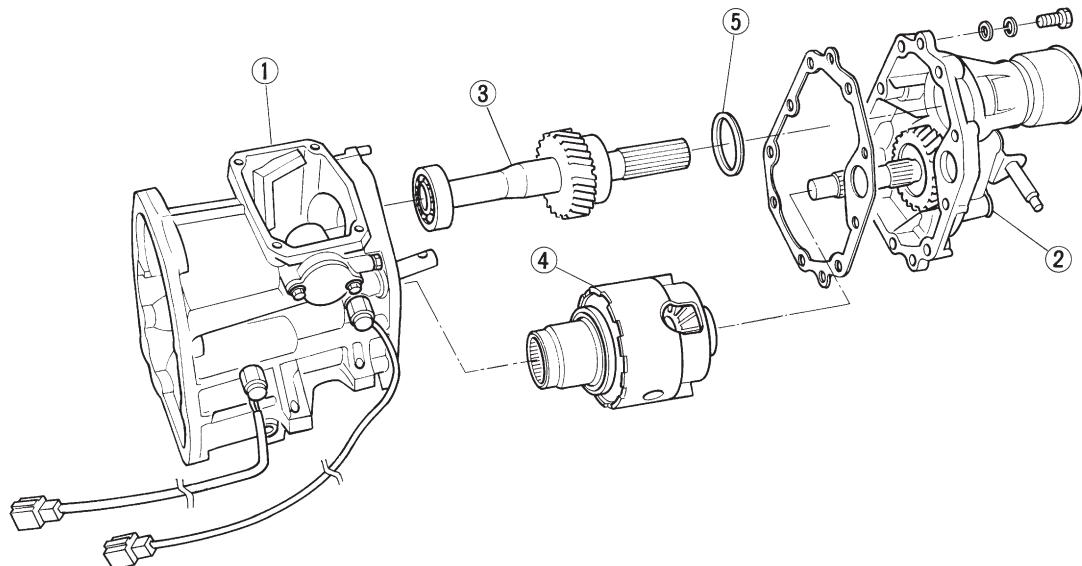B: DISASSEMBLY**1. SEPARATION OF TRANSFER CASE AND EXTENSION ASSEMBLY**

G3M0523

- 1) Separate transfer case ① and extension assembly ②.
- 2) Remove transfer driven gear ③ and center differential ④ as a set.
- 3) Remove thrust washer ⑤ (52 x 61 x t).


2. TRANSFER CASE

- 1) Remove neutral switch ①.


NOTE:

Before removing shifter arm, disconnect neutral switch.

- 2) Draw out shifter arm ② and remove selector arm ③.
- 3) Remove plug ④, spring ⑤ and reverse check ball ⑥.

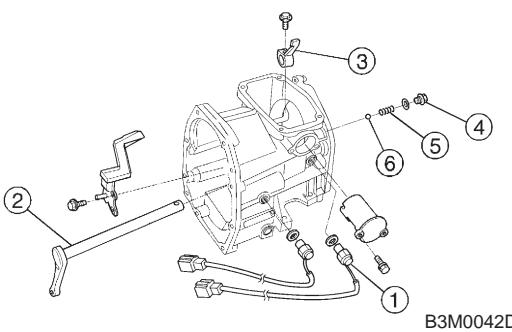

B3M0042D

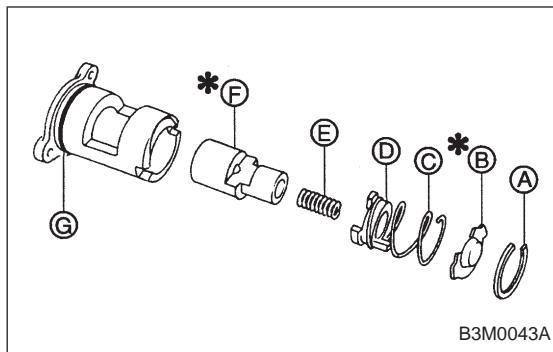

4) Remove reverse check sleeve.
Disassembly procedure is as follows:

(1) Using a standard screwdriver, remove snap ring **(A)** (Inner-28).

NOTE:

Replace snap ring with a new one if deformed or weakened.

(2) Remove reverse check plate **(B)**.

(3) Remove reverse check spring **(C)** with cam **(D)**.

(4) Remove reverse return spring **(E)**.


(5) Remove reverse accent shaft **(F)**.

(6) Remove O-ring **(G)**.

NOTE:


● Reverse check sleeve assembly uses an O-ring which should not be scratched.

● Be careful not to break adjustment shim placed between reverse check sleeve assembly and case.

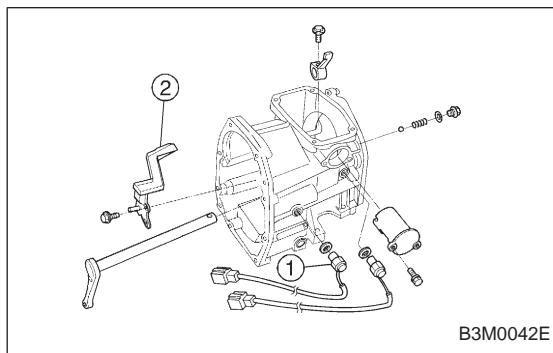

5) Remove back-up light switch **(1)**.
6) Remove oil guide **(2)**.

3. EXTENSION

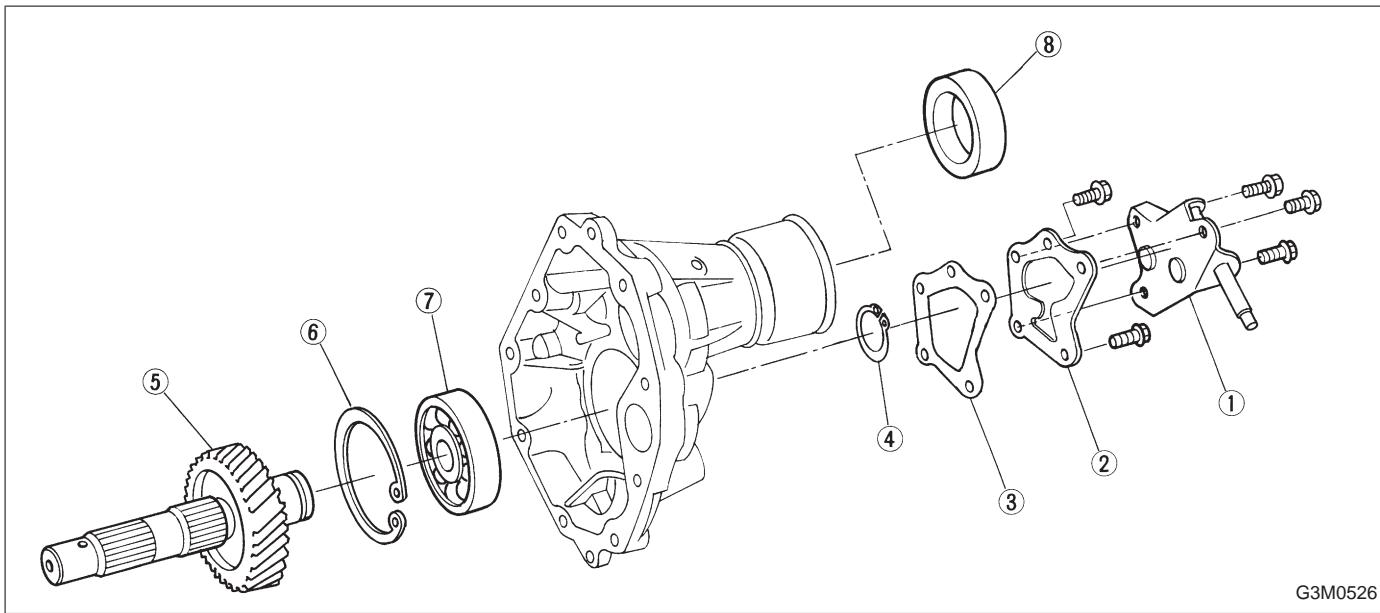

G3M0526

- 1) Remove extension cover ② and shift bracket ①.
- 2) Remove snap ring ④ (Outer-30).
- 3) Remove transfer drive gear ⑤.

CAUTION:**Do not remove ball bearing unless replacing.**

- 4) Remove snap ring ⑥ (Inner-72).
- 5) Remove ball bearing ⑦.


CAUTION:**Do not reuse ball bearing.**

- 6) Remove oil seal ⑧.

CAUTION:**Do not reuse oil seal.**

C: ASSEMBLY

1. EXTENSION

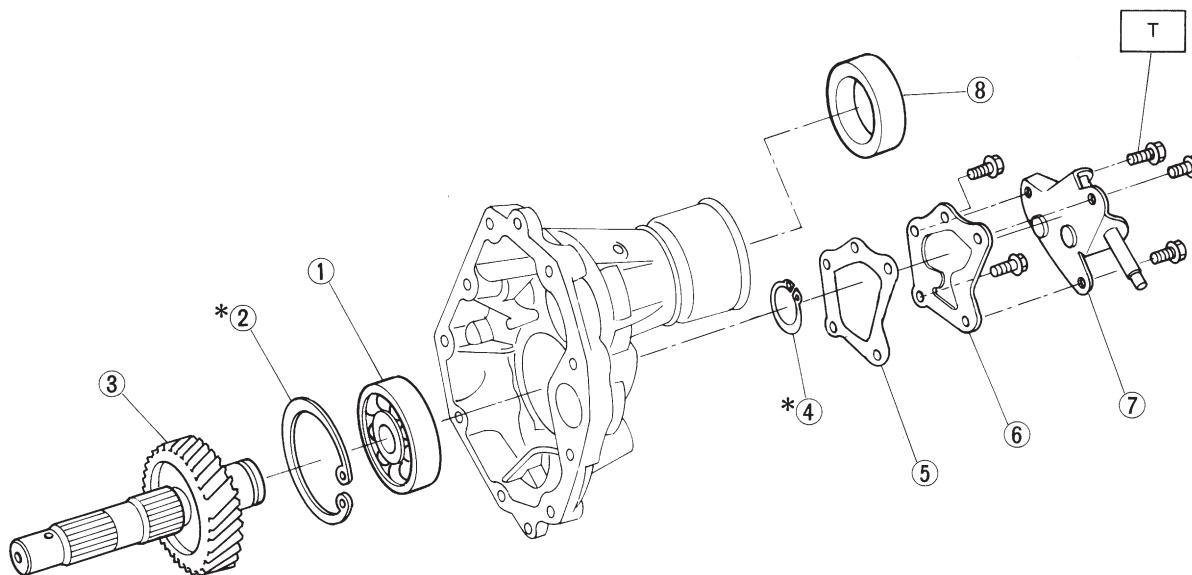

Tightening torque: N·m (kg·m, ft·lb)
T: 25±2 (2.5±0.2, 18.1±1.4)

- 1) Installation of ball bearing ① and selection of snap ring ② (Inner-72)
 - (1) Attach ball bearing ① (30 x 72 x 17) to extension and install snap ring ②.

- (2) Measure clearance between snap ring ② and outer race of ball bearing ① with a thickness gauge.


CAUTION:

Replace ball bearing with a new one.


Clearance:

0 — 0.15 mm (0 — 0.0059 in)


- (3) If the measurement is not within the specification, select suitable snap ring ②.

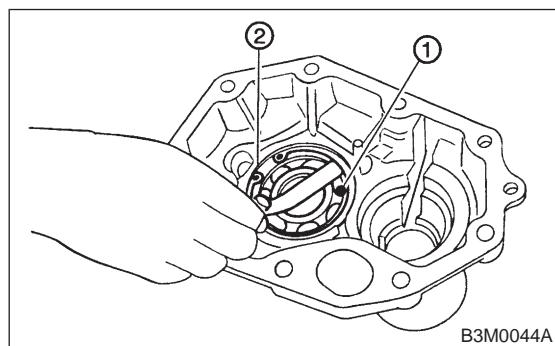

Snap ring (Inner-72)	
Part No.	Thickness mm (in)
805172071	1.78 (0.0701)
805172072	1.90 (0.0748)
805172073	2.02 (0.0795)

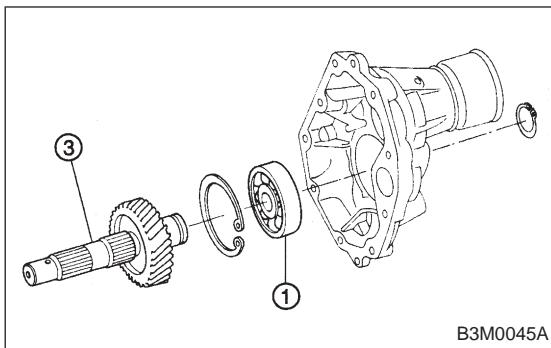

2) Installation of transfer drive gear ③
Press transfer drive gear into inner race of ball bearing.

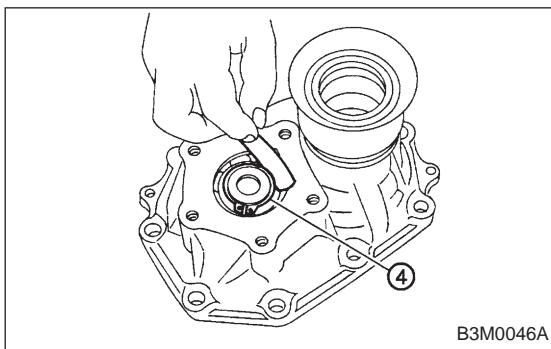


3) Selection of snap ring ④ (Outer-30)
(1) Install snap ring ④ on transfer drive shaft.
(2) Measure clearance between snap ring and inner race of ball bearing with a thickness gauge.

Clearance:

0 — 0.15 mm (0 — 0.0059 in)

(3) If the measurement is not within the specification, select suitable snap ring.

Snap ring (Outer-30)	
Part No.	Thickness mm (in)
805030041	1.53 (0.0602)
805030042	1.65 (0.0650)
805030043	1.77 (0.0697)

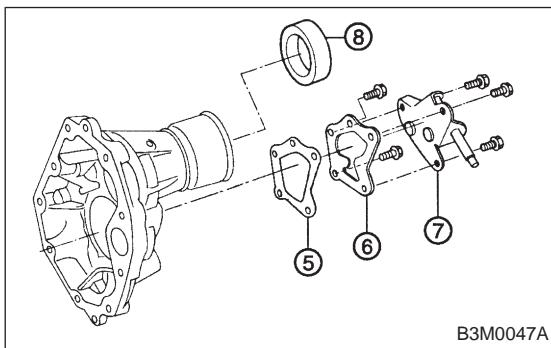

4) Install extension cover ⑥, gasket ⑤ and shift bracket ⑦.

CAUTION:


Use new gasket.

5) Install oil seal ⑧ with ST.

ST 498057300 INSTALLER

CAUTION:

Use new oil seal.

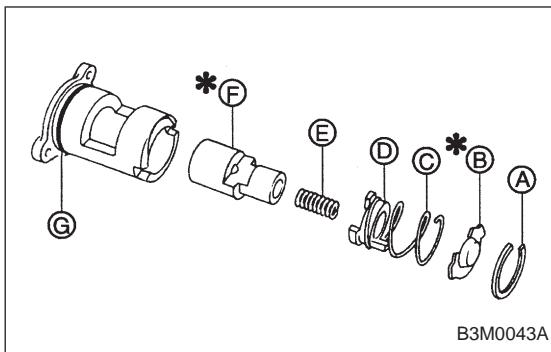

2. TRANSFER CASE

Assembly of transfer case is in the reverse order of disassembly. Do the following:


1) Assembly of reverse check sleeve

- (1) Install reverse accent shaft (F), check cam (D), return spring (E) and check spring (C) onto reverse check sleeve.

NOTE:

Be sure the bent section of reverse check spring is positioned in the groove in check cam.

- (2) Hook the bent section of reverse check spring over reverse check plate (B).
- (3) Rotate cam so that the protrusion of reverse check cam is at the opening in plate.
- (4) With cam held in that position, install plate onto reverse check sleeve and hold with snap ring (A) (Inner-28).
- (5) Position O-ring (G) (35.4 x 1.5) in groove in sleeve.

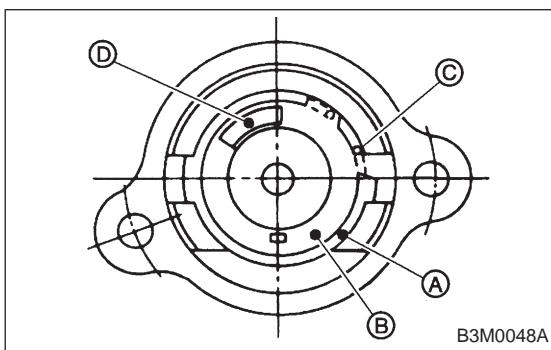

CAUTION:


- Make sure the cutout section of reverse accent shaft is aligned with the opening in reverse check sleeve.
- Spin cam by hand for smooth rotation.

If it does not return properly, replace reverse check spring.

- Move cam and shaft all the way toward plate and release.

If cam does not return properly, replace reverse check spring; if shaft does not, check for scratches on the inner surface of sleeve. If sleeve is in good order, replace spring.

- Select a suitable reverse accent shaft and reverse check plate by referring to "Neutral Position Adjustment."

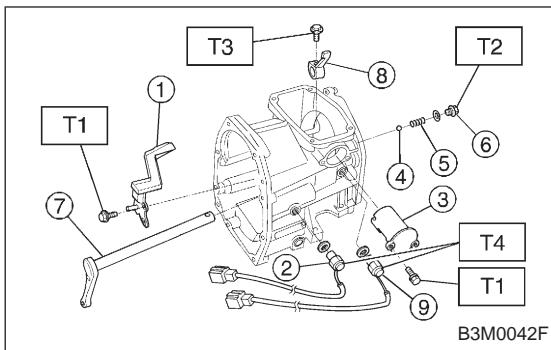

2) Installation of shifter arm ⑦ and selector arm ⑧
Install shifter arm into the partition from the front while inserting selector arm into the opening in reverse check sleeve. Pass shaft through hole in selector arm until its end comes out of the rear of transfer case.

NOTE:

Apply a coat of gear oil to shifter arm. Also make sure oil seal is positioned properly.


Tightening torque:

T1: $6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft-lb}$)

T2: $10 \pm 1 \text{ N}\cdot\text{m}$ ($1.0 \pm 0.1 \text{ kg}\cdot\text{m}$, $7.2 \pm 0.7 \text{ ft-lb}$)

T3: $19.6 \pm 1.5 \text{ N}\cdot\text{m}$ ($2.00 \pm 0.15 \text{ kg}\cdot\text{m}$, $14.5 \pm 1.1 \text{ ft-lb}$)

T4: $25 \pm 2 \text{ N}\cdot\text{m}$ ($2.5 \pm 0.2 \text{ kg}\cdot\text{m}$, $18.1 \pm 1.4 \text{ ft-lb}$)

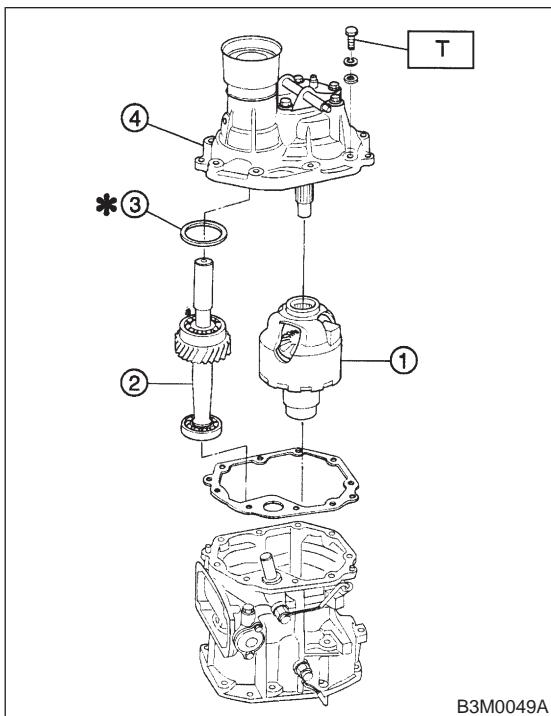


3. COMBINATION OF TRANSFER CASE AND EXTENSION ASSEMBLY

1) Install center differential ① and transfer driven gear ② into transfer case.


Tightening torque:

T: $37 \pm 3 \text{ N}\cdot\text{m}$ ($3.8 \pm 0.3 \text{ kg}\cdot\text{m}$, $27.5 \pm 2.2 \text{ ft-lb}$)

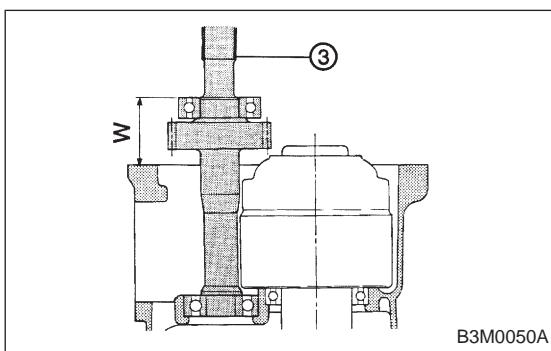

2) Selection of thrust washer (52 x 61 x t)

(1) Measure height "W" between transfer case and ball bearing on the transfer driven gear (3).

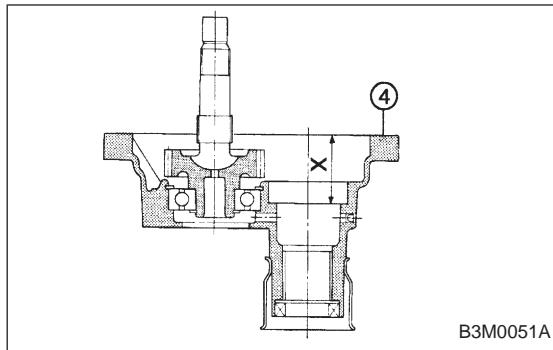

(2) Measure depth "X" as shown in figure.

④ Extension


(3) Calculate space "Y" using the following equation: $Y = X - W + 0.24 \text{ mm (0.0094 in)}$ [Thickness of gasket]
 (4) Select suitable washer in the following table:

Space "Y" mm (in)	Thrust washer (52 x 61 x t)	
	Part No.	Thickness mm (in)
0.55 — 0.79 (0.0217 — 0.0311)	803052021	0.50 (0.0197)
0.80 — 1.04 (0.0315 — 0.0409)	803052022	0.75 (0.0295)
1.05 — 1.30 (0.0413 — 0.0512)	803052023	1.00 (0.0394)

Standard clearance between thrust washer and ball bearing:


0.05 — 0.30 mm (0.0020 — 0.0118 in)

(5) Fit thrust washers on transfer drive shaft.

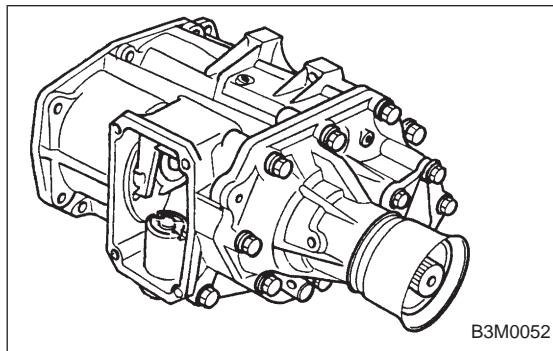

3) Install extension assembly into transfer case.

D: INSTALLATION

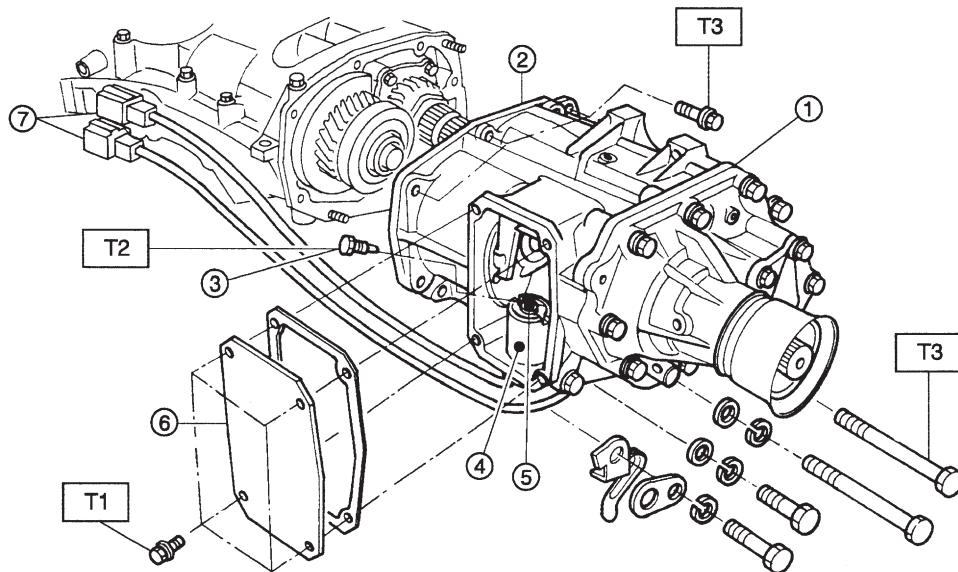**Tightening torque: N·m (kg·m, ft·lb)**T1: 15.7 ± 1.5 (1.6 \pm 0.15, 11.6 \pm 1.1)T2: 19.6 ± 1.5 (2.00 \pm 0.15, 14.5 \pm 1.1)T3: 24.5 ± 2.0 (2.50 \pm 0.20, 18.1 \pm 1.4)


- 1) Install transfer case (2) with extension assembly (1).
- 2) Secure selector arm to shifter arm with shifter fork screw (3). Shifter arm should be caught by pawl of rod. Selector arm must be engaged with reverse check sleeve assembly.
- 3) Adjustment of neutral position
 - (1) Shift gear into 3rd gear position.
 - (2) Shifter arm turns lightly toward the 1st/2nd gear side but heavily toward the reverse gear side because of the function of the return spring, until arm contacts the stopper.
 - (3) Make adjustment so that the heavy stroke (reverse side) is a little more than the light stroke (1st/2nd side).
 - (4) To adjust, remove bolts holding reverse check sleeve assembly (4) to the case, move sleeve assembly outward, and place adjustment shim (0 to 1 ea.) between sleeve assembly and case to adjust the clearance.

CAUTION:
Be careful not to break O-ring when placing shim(s).

Adjustment shim	
Part No.	Thickness mm (in)
32190AA000	0.15 (0.0059)
32190AA010	0.30 (0.0118)

- When shim is removed, the neutral position will move closer to reverse; when shim is added, the neutral position will move closer to 1st gear.
- If shims alone cannot adjust the clearance, replace reverse accent shaft and re-adjust.


Reverse accent shaft		
Part No.	Mark	Remarks
32188AA040	1	Neutral position is closer to 1st gear.
32188AA011	No mark or 2	Standard
32188AA050	3	Neutral position is closer to reverse gear.

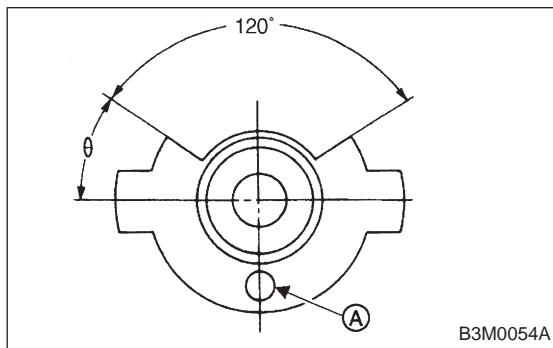

4) Reverse check plate ⑤ adjustment

Shift shifter arm to "5th" and then to reverse to see if reverse check mechanism operates properly. Also check to see if arm returns to neutral when released from the reverse position. If arm does not return properly, replace reverse check plate.

Reverse check plate			
Part No.	Ⓐ: No.	Angle θ	Remarks
32189AA000	0	28°	Arm stops closer to 5th gear.
32189AA010	1	31°	Arm stops closer to 5th gear.
32189AA020	2	34°	Arm stops in the center.
32189AA030	3	37°	Arm stops closer to reverse gear.
32189AA040	4	40°	Arm stops closer to reverse gear.

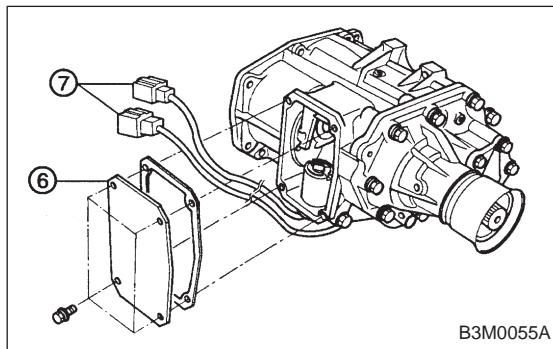

5) Install transfer ⑥ cover and gasket.

6) Connect each connector ⑦.

6. Front Differential



A: DISASSEMBLY

- 1) Remove right and left snap rings ① from differential, and then remove two axle drive shafts ②.

NOTE:


During reassembly, reinstall each axle drive shaft in the same place from which it was removed.

- 2) Loosen twelve bolts ③ and remove hypoid drive gear ④.

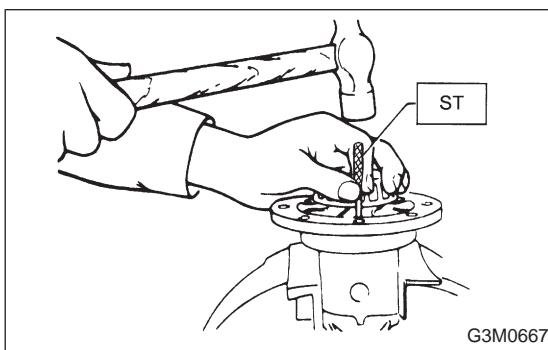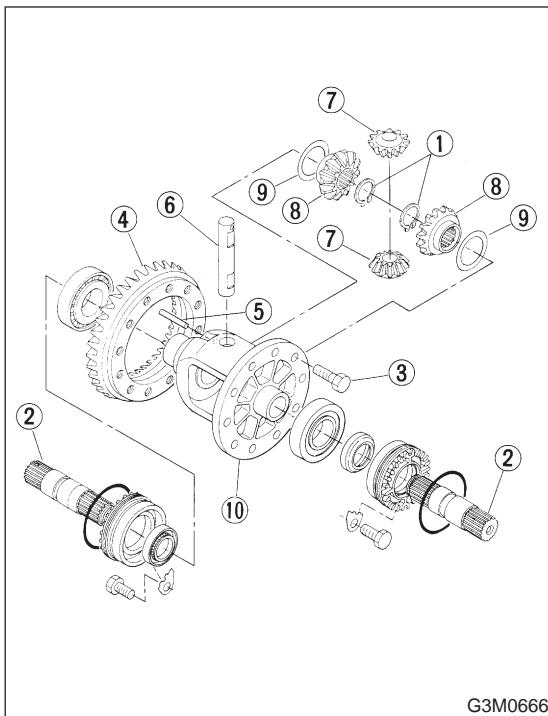


- 3) Drive out straight pin ⑤ from differential assembly toward hypoid driven gear.


ST 899904100 REMOVER

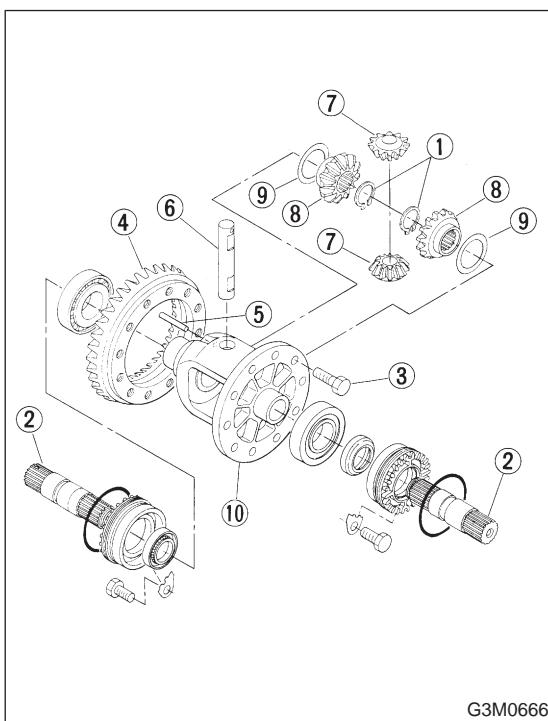

- 4) Pull out pinion shaft ⑥, and remove differential bevel pinion ⑦ and gear ⑧ and washer ⑨.

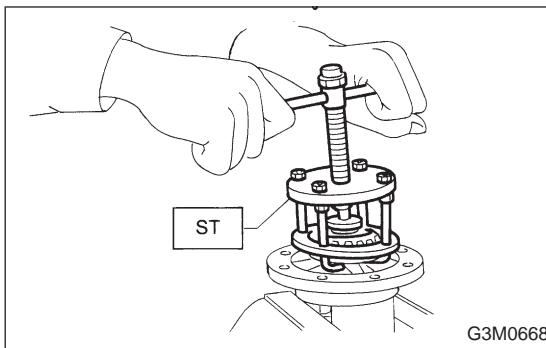

5) Remove roller bearing using ST.
ST 399527700 PULLER SET

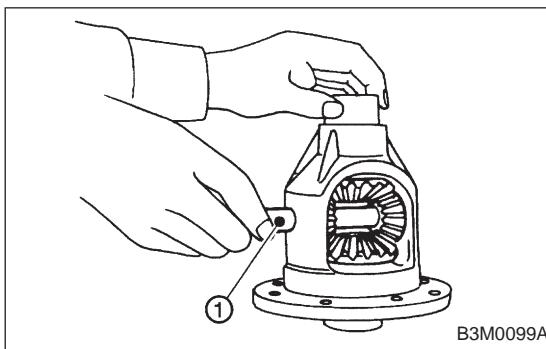


B: ASSEMBLY

1) Install bevel gear and bevel pinion together with washers, and insert pinion shaft ①.

NOTE:

Face the chamfered side of washer toward gear.

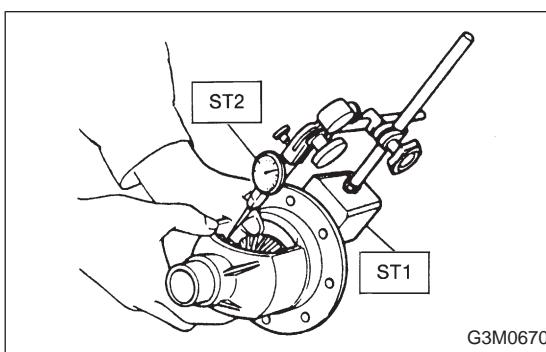

2) Measure backlash between bevel gear and pinion. If it is not within specifications, install a suitable washer to adjust it.

Standard backlash:

0.13 — 0.18 mm (0.0051 — 0.0071 in)


ST1 498247001 MAGNET BASE

ST2 498247100 DIAL GAUGE

NOTE:

Be sure the pinion gear tooth contacts adjacent gear teeth during measurement.

Washer (38.1 x 50 x t)	
Part No.	Thickness mm (in)
803038021	0.925 — 0.950 (0.0364 — 0.0374)
803038022	0.975 — 1.000 (0.0384 — 0.0394)
803038023	1.025 — 1.050 (0.0404 — 0.0413)

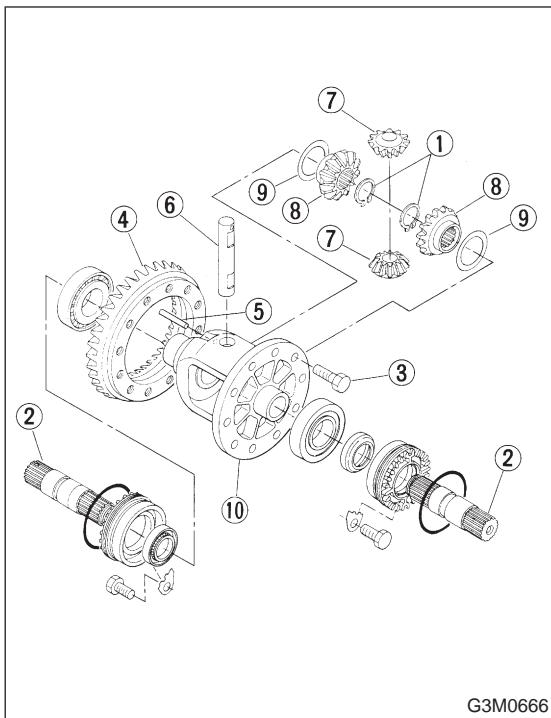


3) Align pinion shaft and differential case at their holes, and drive straight pin ⑤ into holes from the hypoid driven gear side, using ST.

ST 899904100 REMOVER

NOTE:

Lock straight pin after installing.

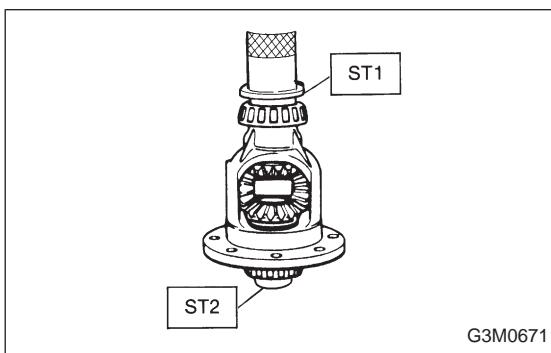


4) Install roller bearing (40 x 80 x 19.75) to differential case.

NOTE:

Be careful because roller bearing outer races are used as a set.

ST1 499277100 BUSH 1-2 INSTALLER


ST2 398497701 ADAPTER

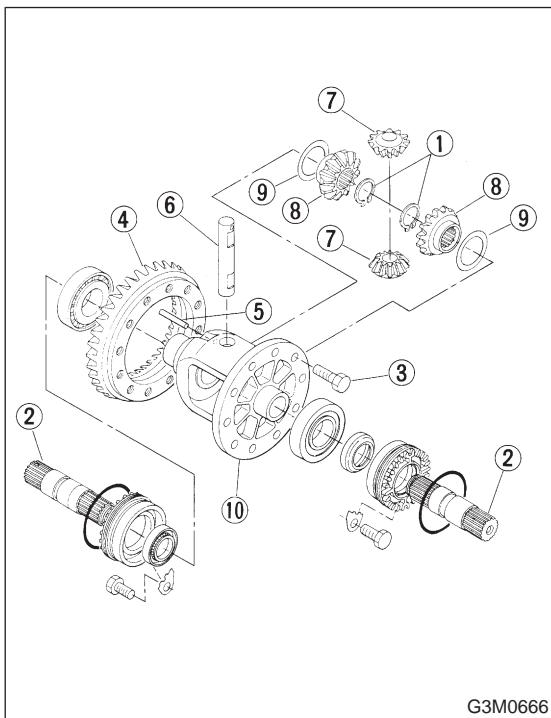

5) Install hypoid driven gear ④ to differential case ⑩ using twelve bolts ③.

Tightening torque:

$62\pm5\text{ N}\cdot\text{m (6.3}\pm0.5\text{ kg}\cdot\text{m, 45.6}\pm3.6\text{ ft}\cdot\text{lb)}$

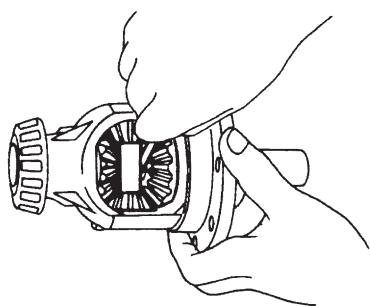

B3M0100

6) Position drive axle shaft in differential case and hold it with outer snap ring (28). Using a thickness gauge, measure clearance between the shaft and case is within specifications.

Clearance:


0 — 0.2 mm (0 — 0.008 in)

If it is not within specifications, replace snap ring with a suitable one.

Snap ring (Outer-28)	
Part No.	Thickness mm (in)
805028011	1.05 (0.0413)
805028012	1.20 (0.0472)

7. Center Differential

A: DISASSEMBLY

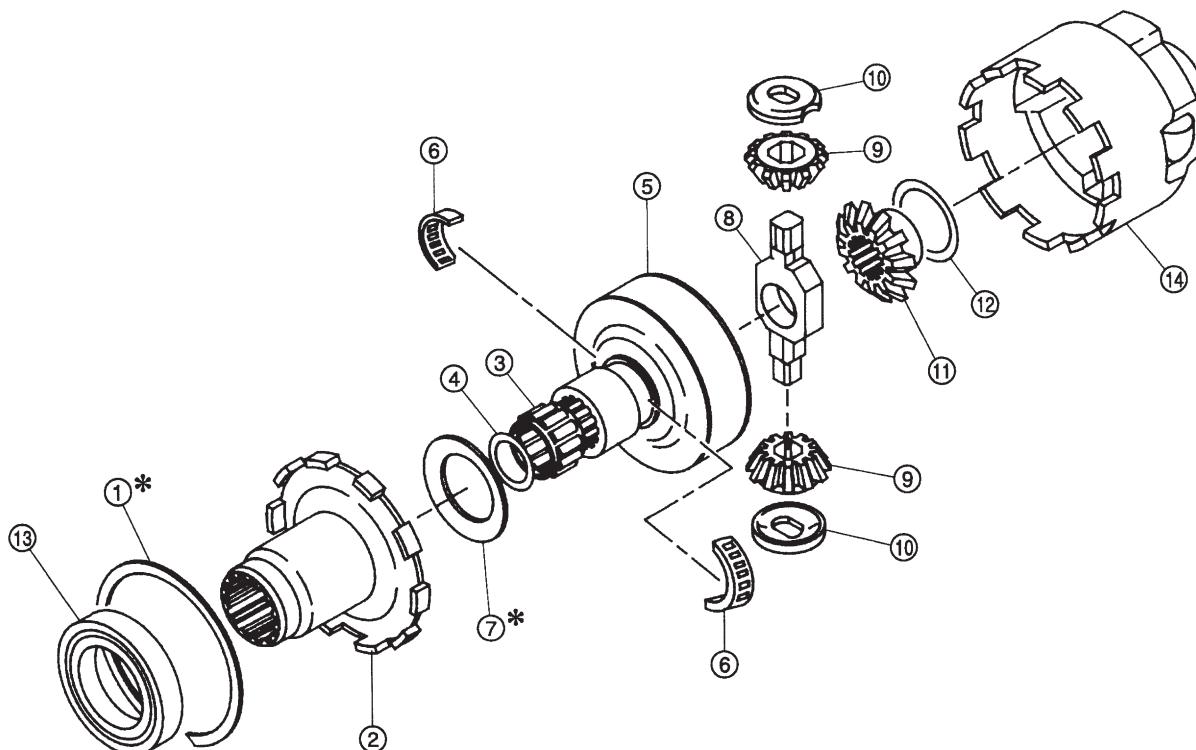


B3M0288A


- 1) Remove snap ring ① (Inner-110) using flat bladed screwdriver.
- 2) Remove center differential cover ②.
- 3) Remove snap ring ④ and roller bearing ③.
- 4) Remove viscous coupling ⑤.
- 5) Remove needle bearings ⑥.
- 6) Remove adjusting washer ⑦ (45 x 62 x t).
- 7) Remove pinion shaft ⑧, bevel pinions ⑨ and retainers ⑩.
- 8) Remove side gear ⑪.
- 9) Remove thrust washer ⑫.

- 10) Remove ball bearing ⑬ using ST.
ST 498077300 CENTER DIFFERENTIAL BEARING REMOVER

CAUTION:
Do not reuse ball bearing.

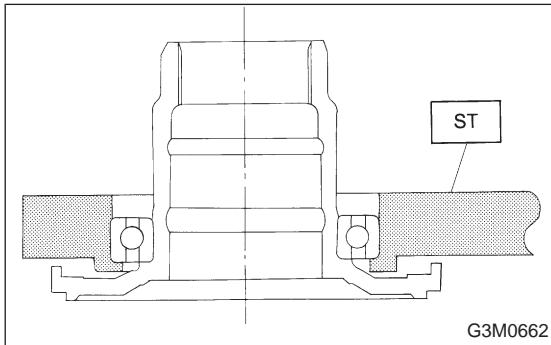

G3M0662

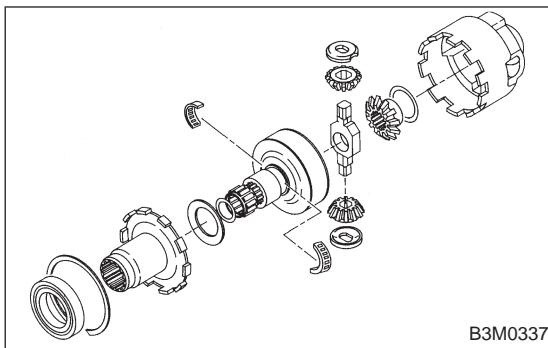


B: ASSEMBLY

Assembly is in the reverse order of disassembly.

Do the following:

- Install thrust washer with chamfered side of inner perimeter facing the side gear.
- Install adjusting washer with chamfered side of inner perimeter facing the viscous coupling using ST.

ST 499547300 INSTALLER SET

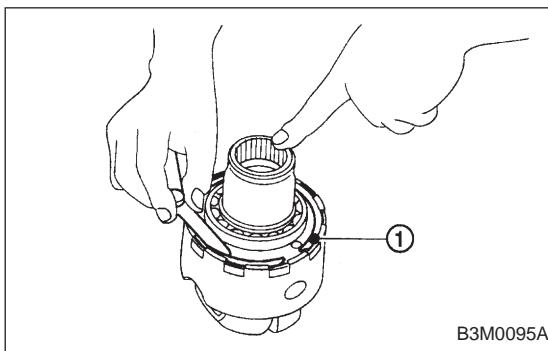

1) Selection of snap ring (Inner-110)


(1) After assembling, using a thickness gauge measure clearance between snap ring ① and center differential case.

Clearance:

0 — 0.15 mm (0 — 0.0059 in)

(2) If the measurement is not within the specification, select suitable snap ring.

Snap ring (Inner-110)	
Part No.	Thickness mm (in)
805100061	2.10 (0.0827)
805100062	2.21 (0.0870)
805100063	2.32 (0.0913)

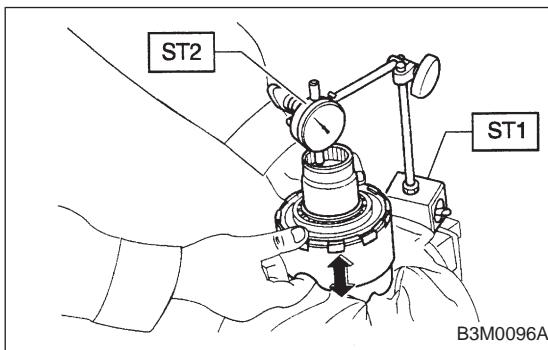

2) Selection of adjusting washer (Backlash adjustment)

(1) After assembling, set up a ST1 and ST2 to end of viscous coupling shaft. Move viscous coupling up and down, and measure backlash in the axial direction.

ST1 498247001 MAGNET BASE

ST2 498247100 DIAL GAUGE

Backlash:

0.62 — 0.86 mm (0.0244 — 0.0339 in)

(2) If the measurement is not within the specification, select suitable washer.

Adjusting washer (45 x 62 x t)	
Part No.	Thickness mm (in)
803045041	1.60 (0.0630)
803045042	1.80 (0.0709)
803045043	2.00 (0.0787)
803045044	2.20 (0.0866)
803045045	2.40 (0.0945)

1. Manual Transmission and Differential

Symptom and possible cause	Remedy
1. Gears are difficult to intermesh. The cause for difficulty in shifting gears can be classified into two kinds: one is malfunction of the gear shift system and the other is malfunction of the transmission. However, if the operation is heavy and engagement of the gears is difficult, defective clutch disengagement may also be responsible. Check whether the clutch is correctly functioning, before checking the gear shift system and transmission.	
(a) Worn, damaged or burred chamfer of internal spline of sleeve and reverse driven gear (b) Worn, damaged or burred chamfer of spline of gears (c) Worn or scratched bushings (d) Incorrect contact between synchronizer ring and gear cone or wear	Replace. Replace. Replace. Correct or replace.
2. Gear slips out. (1) Gear slips out when coasting on rough road. (2) Gear slips out during acceleration.	
(a) Defective pitching stopper adjustment (b) Loose engine mounting bolts (c) Worn fork shifter, broken shifter fork rail spring (d) Worn or damaged ball bearing (e) Excessive clearance between splines of synchronizer hub and synchronizer sleeve (f) Worn tooth step of synchronizer hub (responsible for slip-out of 3rd gear) (g) Worn 1st driven gear, needle bearing and race (h) Worn 2nd driven gear, needle bearing and race (i) Worn 3rd drive gear and bushing (j) Worn 4th drive gear and bushing (k) Worn reverse idler gear and bushing	Adjust. Tighten or replace. Replace. Replace. Replace. Replace. Replace. Replace. Replace. Replace. Replace. Replace.
3. Unusual noise comes from transmission. If an unusual noise is heard when the vehicle is parked with its engine idling and if the noise ceases when the clutch is disengaged, it may be considered that the noise comes from the transmission.	
(a) Insufficient or improper lubrication (b) Worn or damaged gears and bearings NOTE: If the trouble is only wear of the tooth surfaces, merely a high roaring noise will occur at high speeds, but if any part is broken, rhythmical knocking sound will be heard even at low speeds.	Lubricate or replace with specified oil. Replace.

Symptom and possible cause	Remedy
4. Broken differential (case, gear, bearing, etc.) Abnormal noise will develop and finally it will become impossible to continue to run due to broken pieces obstructing the gear revolution.	
(a) Insufficient or improper oil (b) Use of vehicle under severe conditions such as excessive load and improper use of clutch (c) Improper adjustment of taper roller bearing (d) Improper adjustment of drive pinion and hypoid driven gear (e) Excessive backlash due to worn differential side gear, washer or differential pinion (f) Loose hypoid driven gear clamping bolts	Disassemble differential and replace broken components and at the same time check other components for any trouble, and replace if necessary. Readjust bearing preload and backlash and face contact of gears. Adjust. Adjust. Add recommended oil to specified level. Do not use vehicle under severe operating conditions. Tighten.
5. Differential and hypoid gear noises Troubles of the differential and hypoid gear always appear as noise problems. Therefore noise is the first indication of the trouble. However noises from the engine, muffler, tire, exhaust gas, bearing, body, etc. are easily mistaken for the differential noise. Pay special attention to the hypoid gear noise because it is easily confused with other gear noises. There are the following four kinds of noises. (1) Gear noise when driving: If noise increases as vehicle speed increases it may be due to insufficient gear oil, incorrect gear engagement, damaged gears, etc. (2) Gear noise when coasting: Damaged gears due to maladjusted bearings and incorrect shim adjustment (3) Bearing noise when driving or when coasting: Cracked, broken or damaged bearings (4) Noise which mainly occurs when turning: Unusual noise from differential side gear, differential pinion, differential pinion shaft, etc.	
(a) Insufficient oil (b) Improper adjustment of hypoid driven gear and drive pinion (c) Worn teeth of hypoid driven gear and drive pinion (d) Loose roller bearing (e) Distorted hypoid driven gear or differential case (f) Worn washer and differential pinion shaft	Lubricate. Check tooth contact. Replace as a set. Readjust bearing preload. Readjust hypoid driven gear to drive pinion backlash and check tooth contact. Replace. Replace.