

# ENGINE ELECTRICAL SYSTEM

**6-1**

	Page
<b>S SPECIFICATIONS AND SERVICE DATA.....</b>	2
1. Specifications .....	2
<b>C COMPONENT PARTS .....</b>	4
1. Starter.....	4
2. Generator .....	5
3. Ignition System.....	6
<b>W SERVICE PROCEDURE .....</b>	8
1. Starter.....	8
2. Generator .....	14
3. Spark Plug.....	19
4. Ignition Coil.....	26
5. Spark Plug Cord.....	28
6. Ignitor.....	28
<b>K DIAGNOSTICS.....</b>	29
1. Starter.....	29
2. Generator .....	30

# 1. Specifications


## A: 2200 cc MODEL

Item		Designation	
Type		Reduction type	
Model		MT M001T77181	AT M001T75681
Manufacturer		MITSUBISHI	
Voltage and output		12 V — 1.0 kW	12 V — 1.4 kW
Direction of rotation		Counterclockwise (when observed from pinion)	
Number of pinion teeth		8	9
Starter	Voltage	11 V	
	Current	90 A or less	
	Rotating speed	3,000 rpm or more	
Load characteristics	Voltage	8 V	7.7 V
	Current	280 A or less	300 A or less
	Torque	8.5 N·m (0.87 kg-m, 6.27 ft-lb)	9.8 N·m (1.00 kg-m, 7.24 ft-lb)
	Rotating speed	980 rpm or more	1,000 rpm or more
Lock characteristics	Voltage	4 V	
	Current	780 A or less	980 A or less
	Torque	17.6 N·m (1.80 kg-m, 13.0 ft-lb) or more	23 N·m (2.3 kg-m, 17 ft-lb) or more
Type		Rotating-field three-phase type, Voltage regulator built-in type	
Model		A2T39091	
Manufacturer		MITSUBISHI	
Voltage and output		12 V — 75 A	
Polarity on ground side		Negative	
Rotating direction		Clockwise (when observed from pulley side)	
Armature connection		3-phase Y-type	
Generator	Output current		1,500 rpm — 30 A or more 2,500 rpm — 64 A or more 5,000 rpm — 76 A or more
	Regulated voltage		14.5 <sup>+0.3</sup> / <sub>-0.4</sub> V [20°C (68°F)]
	Insulation resistance between primary terminal and case		More than 10 MΩ
Ignition coil	Model	FH0047-01R	
	Manufacturer	DEMCO	
	Primary coil resistance	0.73 Ω <sub>±10%</sub>	
	Secondary coil resistance	12.8 kΩ <sub>±15%</sub>	
	Insulation resistance between primary terminal and case		More than 10 MΩ
Spark plug	Standard	RC8YC4, RC10YC4 ..... CHAMPION	
	Type and manufacturer	BKR6E-11 ..... NGK K20PR-U11 ..... NIPPONDENSO	
	Alternate		
	Thread size mm	14, P = 1.25	
	Spark gap mm (in)	1.0 — 1.1 (0.039 — 0.043)	

## B: 2500 cc MODEL

Item		Designation	
Type	Reduction type		
Vehicle type	MT vehicles	AT vehicles	
Model	M000T81681	M000T84481, M001T84481	
Manufacturer	Mitsubishi Electric		
Voltage and output	12 V — 1.0 kW	12 V — 1.4 kW	
Direction of rotation	Counterclockwise (when observed from pinion)		
Number of pinion teeth	8	9	
Starter	Voltage	11 V	
	Current	90 A or less	
	Rotating speed	2,800 rpm or more	2,400 rpm or more
Load characteristics	Voltage	7.5 V	7.7 V
	Current	300 A	400 A
	Torque	8.73 N·m (0.89 kg·m, 6.4 ft-lb) or more	16.0 N·m (1.63 kg·m, 11.8 ft-lb) or more
Lock characteristics	Rotating speed	890 rpm or more	740 rpm or more
	Voltage	4 V	3.5 V
	Current	780 A or less	940 A or less
	Torque	15.7 N·m (1.60 kg·m, 11.6 ft-lb) or more	28.9 N·m (2.95 kg·m, 21.3 ft-lb) or more
Generator	Type	Rotating-field three-phase type, Voltage regulator built-in type, with load response control system	Rotating-field three-phase type, Voltage regulator built-in type, without load response control system
	Model	A2TA7691	
	Manufacturer	Mitsubishi Electric	
	Voltage and output	12 V — 75 A	
	Polarity on ground side	Negative	
	Rotating direction	Clockwise (when observed from pulley side)	
	Armature connection	3-phase Y-type	
	Output current	1,500 rpm — 30 A or more 2,500 rpm — 64 A or more 5,000 rpm — 76 A or more	
	Regulated voltage	14.1 — 14.8 V [20°C (68°F)]	
Ignition coil	Model	F-569-01R	
	Manufacturer	Diamond	
	Primary coil resistance	0.69 Ω±10%	
	Secondary coil resistance	21.0 Ω±15%	
	Insulation resistance between primary terminal and case	More than 10 MΩ	
Spark plug	Type and manufacturer	PFR5B-11 ..... NGK, RC10PYP4A ..... Champion	
	Thread size mm	14, P = 1.25	
	Spark gap mm (in)	1.0 — 1.1 (0.039 — 0.043)	


## 1. Starter

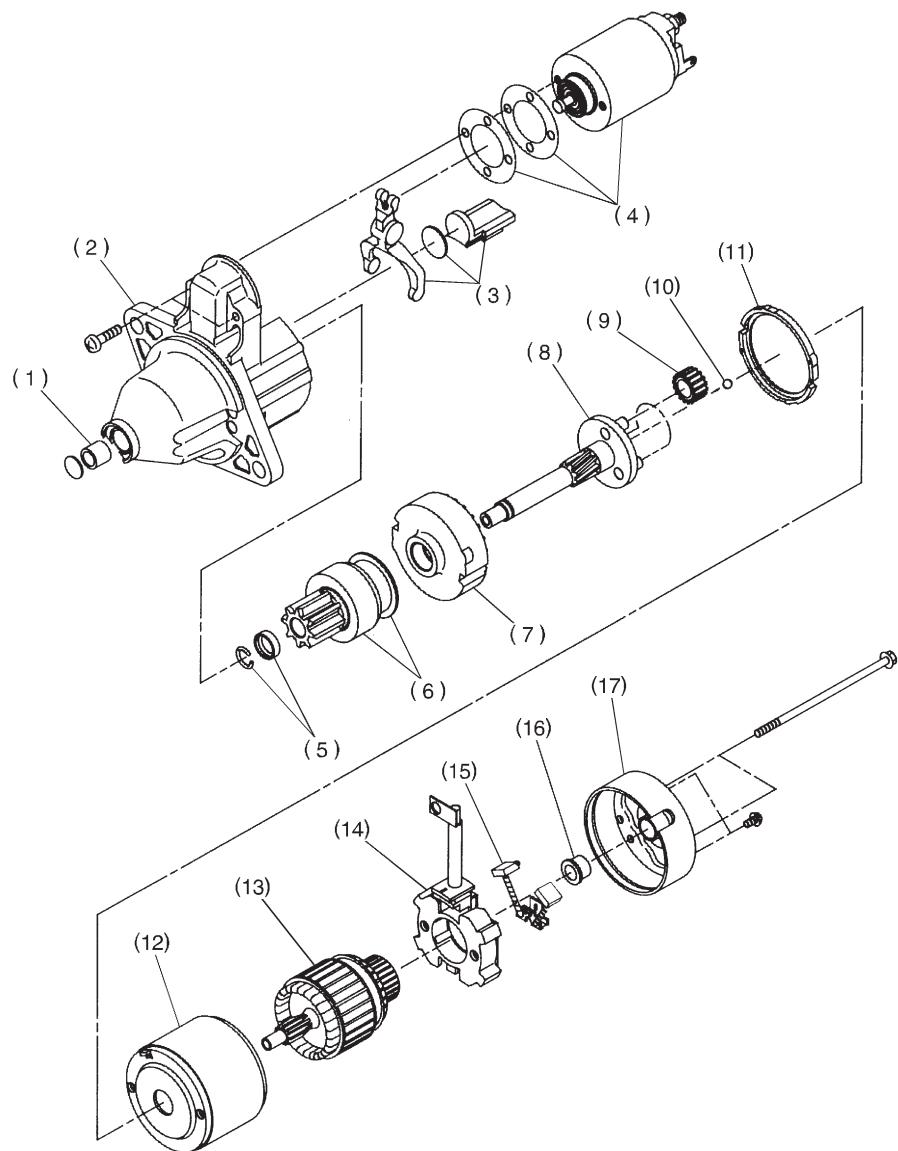

H6M0492B

(1) Sleeve bearing	(7) Internal gear ASSY	(13) Armature
(2) Front bracket	(8) Shaft ASSY	(14) Brush holder
(3) Lever set	(9) Gear ASSY	(15) Brush
(4) Magnet switch ASSY	(10) Ball	(16) Sleeve bearing
(5) Stopper set	(11) Packing	(17) Rear bracket
(6) Over running clutch	(12) Yoke	


## 2. Generator

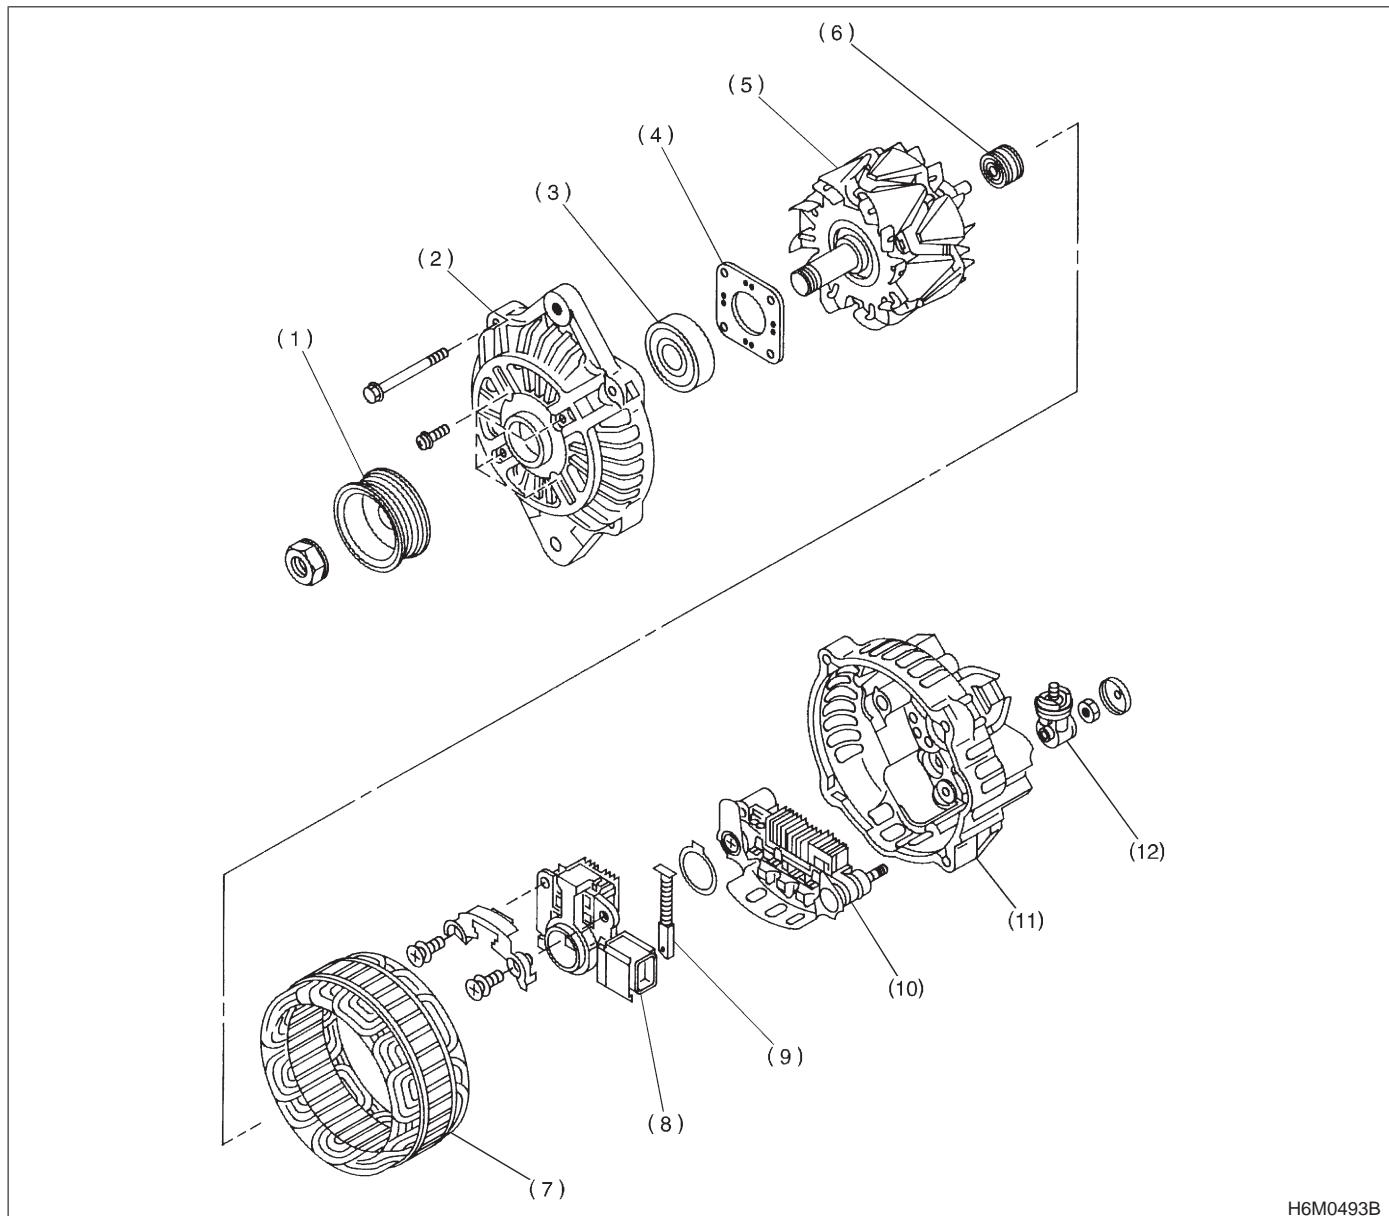

(1) Pulley	(5) Rotor	(9) Brush
(2) Front cover	(6) Bearing	(10) Rectifier
(3) Ball bearing	(7) Stator coil	(11) Rear cover
(4) Bearing retainer	(8) IC regulator with brush	(12) Terminal

## 3. Ignition System

## A: 2200 cc MODEL

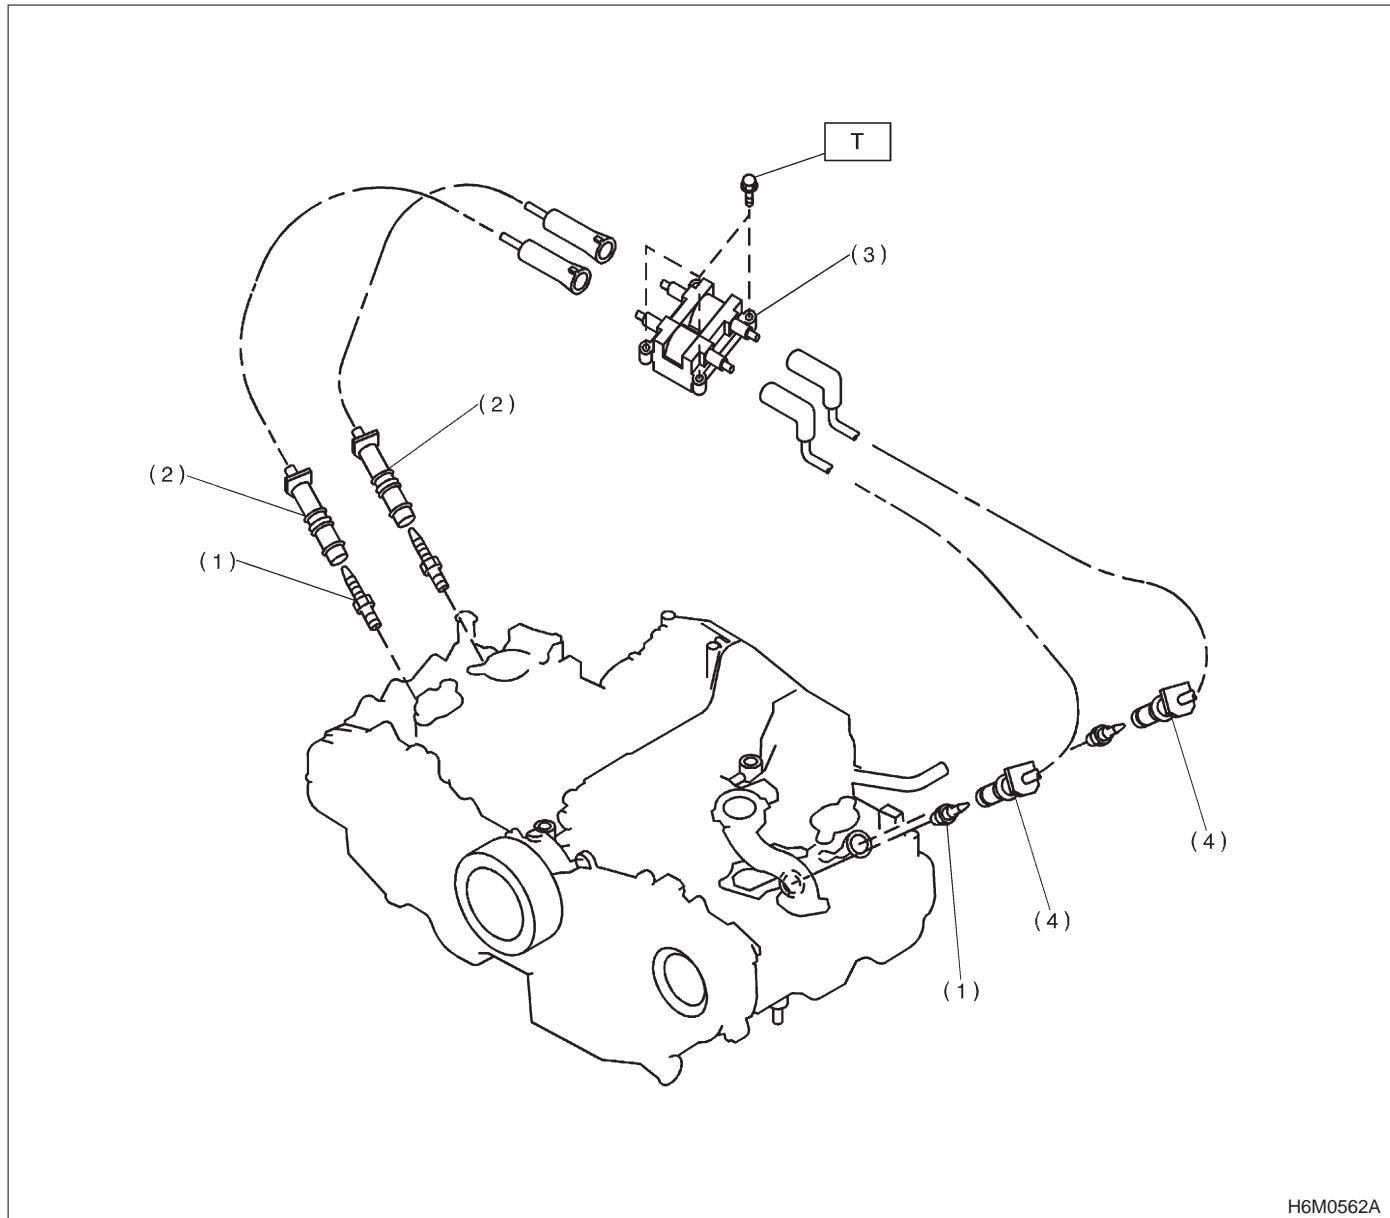

H6M0562A

(1) Spark plug

(4) Spark plug cord (#2, #4)


***Tightening torque: N·m (kg·m, ft·lb)***

(2) Spark plug cord (#1, #3)

***T: 22±2 (2.2±0.2, 15.9±1.4)***

(3) Ignition coil and ignitor ASSY

## B: 2500 cc MODEL

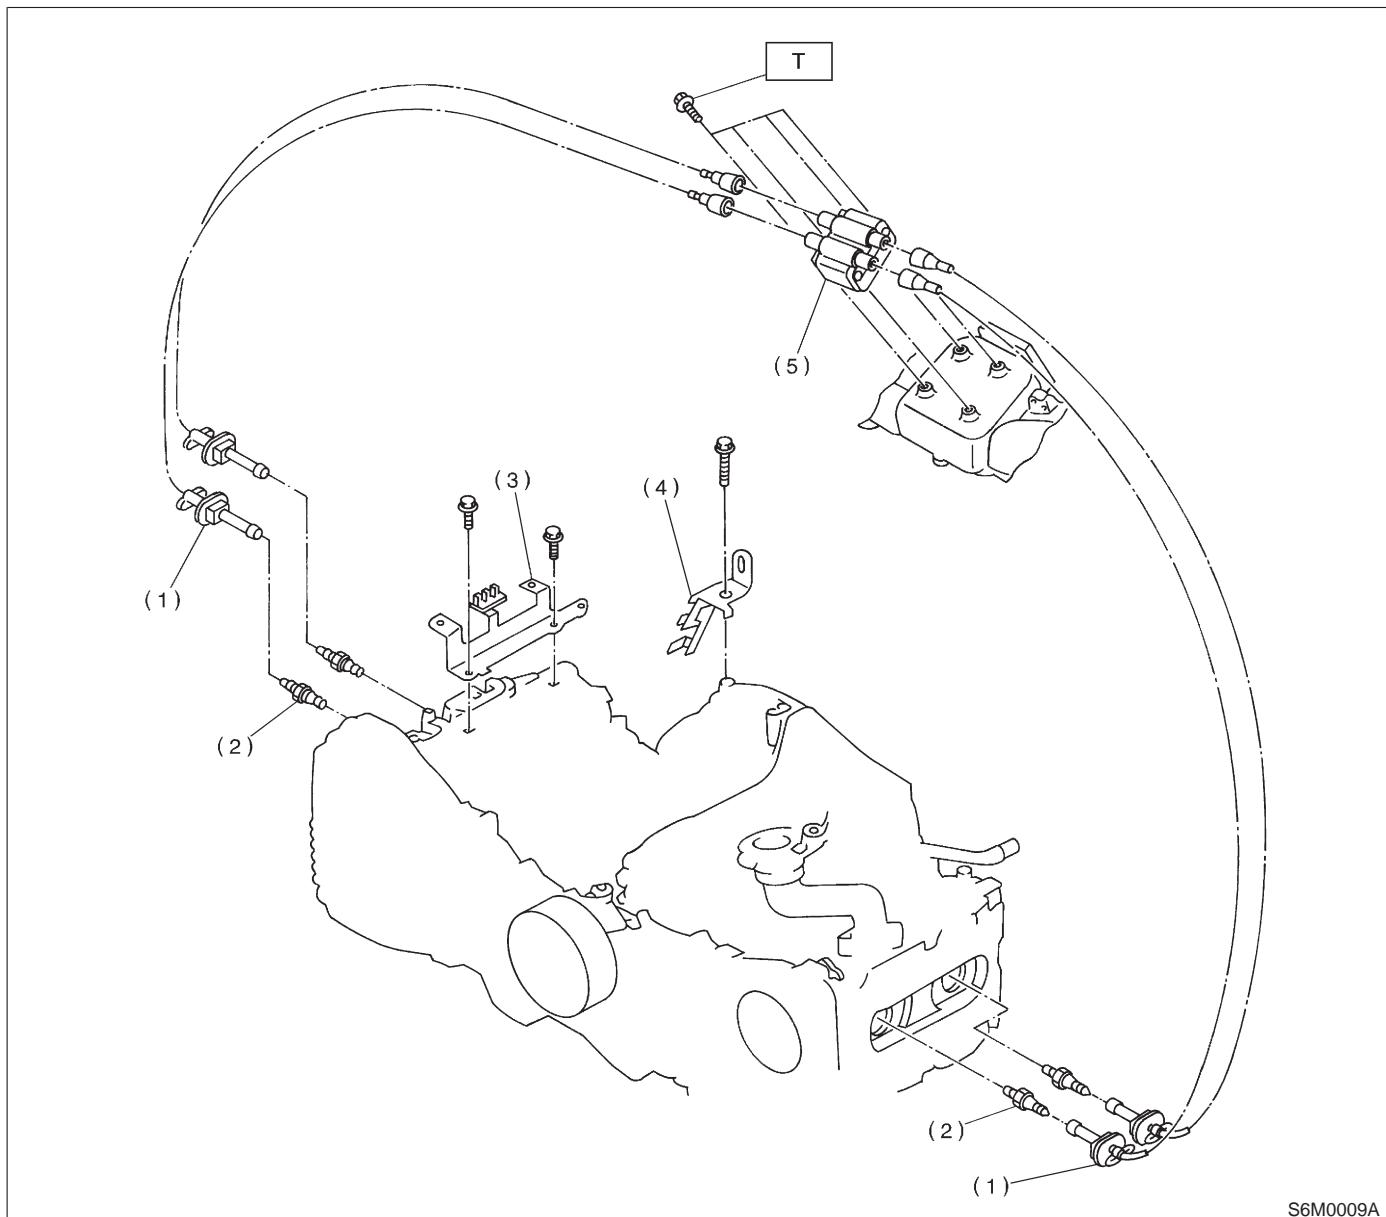

(1) Spark plug cord  
(2) Spark plug  
(3) Spark plug cord guide

(4) Engine harness guide  
(5) Ignition coil


**Tightening torque: N·m (kg·m, ft·lb)**  
**T:  $22\pm2$  (2.2±0.2, 15.9±1.4)**

## 1. Starter


### A: REMOVAL AND INSTALLATION

#### 1. 2200 cc MODEL


- 1) Disconnect battery ground cable.

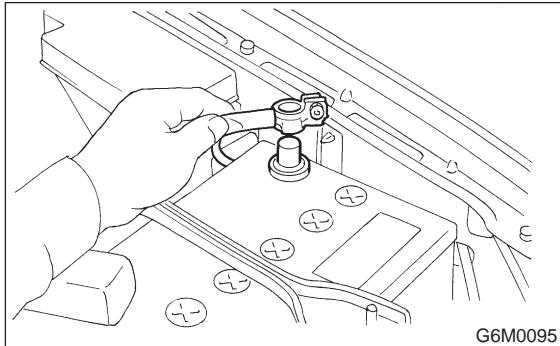

- 2) Remove air intake chamber. <Ref. to 2-7 [W18A0].>

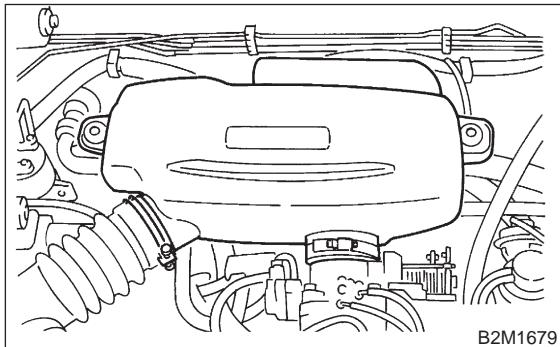


- 3) Disconnect connector and terminal from starter.

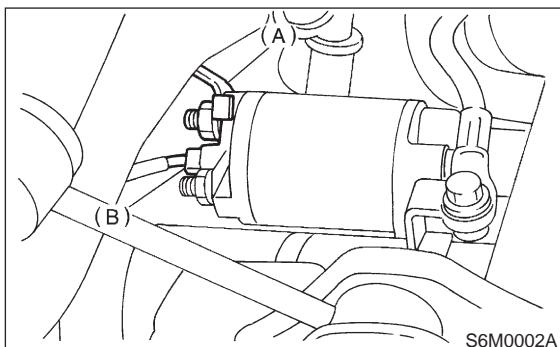

(A) Terminal  
(B) Connector


- 4) Remove starter from transmission.

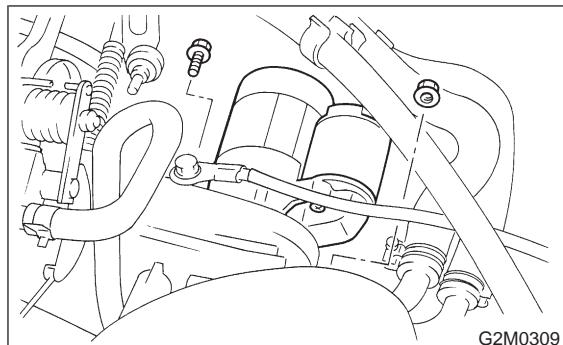

- 5) Installation is in the reverse order of removal.


**Tightening torque:**

**$50\pm4$  N·m (5.1±0.4 kg·m, 36.9±2.9 ft·lb)**

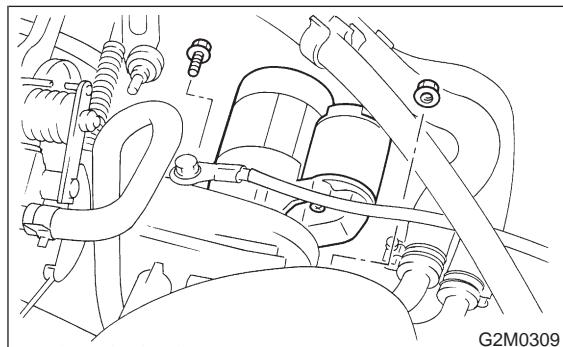


#### 2. 2500 cc MODEL


- 1) Disconnect battery ground cable.

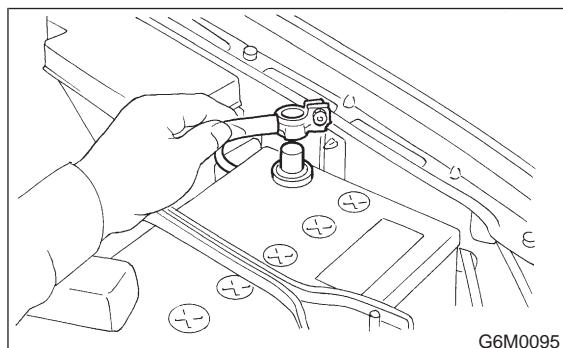


2) Remove air intake chamber. <Ref. to 2-7 [W18A0].>

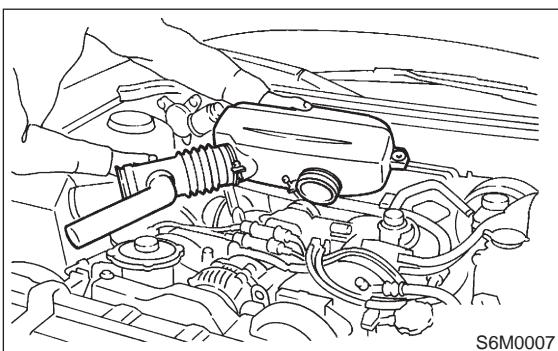

3) Remove air intake chamber stay. (AT vehicles only)

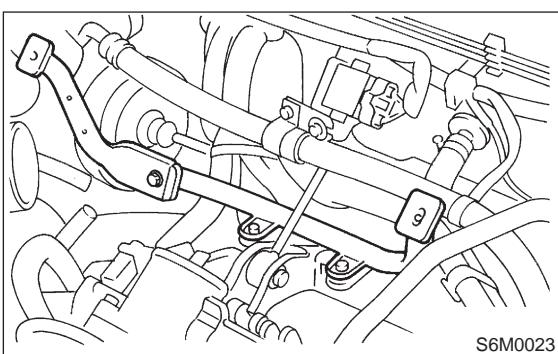


4) Disconnect connector and terminal from starter.

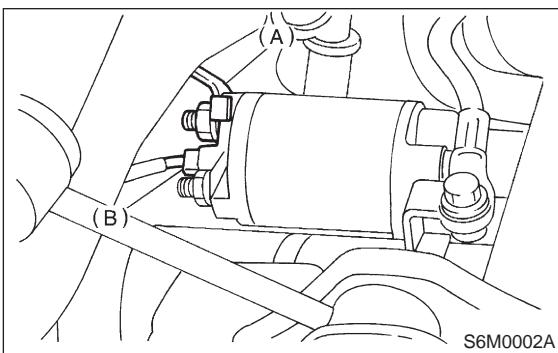

(A) Terminal  
(B) Connector


5) Remove starter from transmission.

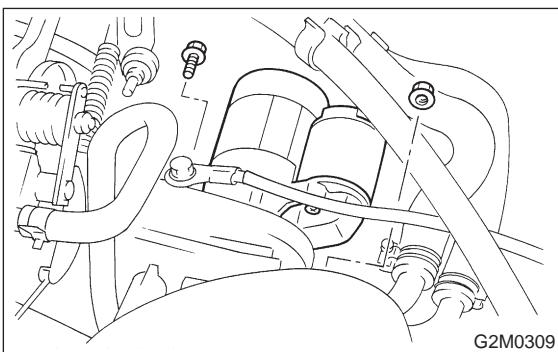

6) Installation is in the reverse order of removal.

**Tightening torque:**

**$50\pm4$  N·m (5.1±0.4 kg·m, 36.9±2.9 ft-lb)**

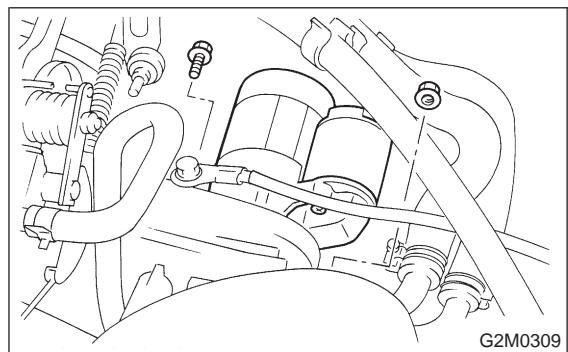

## B: TEST

### 1. SWITCH ASSEMBLY OPERATION


1) Connect terminal S of switch assembly to positive terminal of battery with a lead wire, and starter body to ground terminal of battery. Pinion should be forced endwise on shaft.

**CAUTION:**

With pinion forced endwise on shaft, starter motor can sometimes rotate because current flows, through pull-in coil, to motor. This is not a problem.

2) Disconnect connector from terminal M, and connect positive terminal of battery and terminal M using a lead wire and ground terminal to starter body.

In this test set up, pinion should return to its original position even when it is pulled out with a screwdriver.

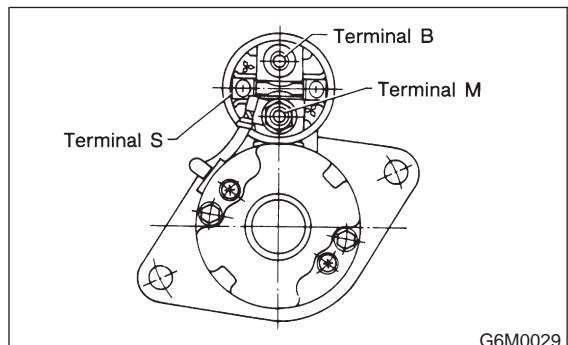


## 2. PINION GAP

1) With pinion forced endwise on shaft, as outlined in step 1) before <Ref. to 6-1 [W1B1].>, measure pinion gap.

### Pinion gap:

0.5 — 2.0 mm (0.020 — 0.079 in)

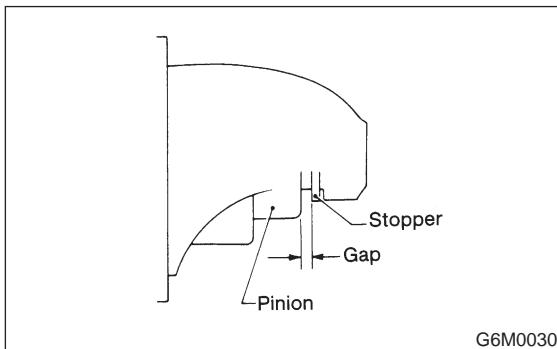

2) If motor is running with the pinion forced endwise on the shaft, disconnect connector from terminal M of switch assembly and connect terminal M to ground terminal (—) of battery with a lead wire. Next, gently push pinion back with your fingertips and measure pinion gap.


3) If pinion gap is outside specified range, remove or add number of adjustment washers used on the mounting surface of switch assembly until correct pinion gap is obtained.

## 3. PERFORMANCE TEST

The starter should be submitted to performance tests whenever it has been overhauled, to assure its satisfactory performance when installed on the engine.

Three performance tests, no-load test, load test, and lock test, are presented here; however, if the load test and lock test cannot be performed, carry out at least the no-load test.

For these performance tests, use the circuit shown in figure.

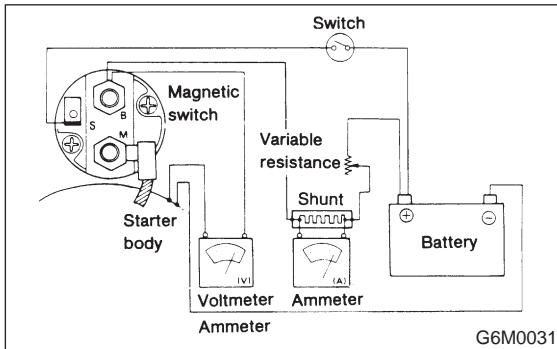

### 1) No-load test

With switch on, adjust the variable resistance to obtain 11 V, take the ammeter reading and measure the starter speed. Compare these values with the specifications.

#### No-load test (Standard):

##### Voltage / Current

11 V / 90 A or less

##### Rotating speed

- MT vehicles 2,800 rpm or more
- AT vehicles 2,400 rpm or more

### 2) Load test

Apply the specified braking torque to starter. The condition is satisfactory if the current draw and starter speed are within specifications.

#### Load test (Standard):

##### • MT vehicles

##### Voltage / Load

7.5 V / 8.73 N·m (0.89 kg-m, 6.4 ft-lb)

##### Current / Speed

300 A / 890 rpm or more

##### • AT vehicles

##### Voltage / Load

7.7 V / 16.00 N·m (1.63 kg-m, 11.8 ft-lb)

##### Current / Speed

400 A max. / 740 rpm or more

### 3) Lock test

With starter stalled, or not rotating, measure the torque developed and current draw when the voltage is adjusted to the specified voltage.

#### Lock test (Standard):

##### • MT vehicles

##### Voltage / Load

4 V / 780 A or less

##### Torque

15.7 N·m (1.60 kg-m, 11.6 ft-lb) or more

##### • AT vehicles

##### Voltage / Current

3.5 V / 940 A or less

##### Torque


28.9 N·m (2.95 kg-m, 21.3 ft-lb) or more

**C: DISASSEMBLY****1. STARTER ASSEMBLY**


- 1) Loosen nut which holds terminal M of switch assembly, and disconnect connector.
- 2) Remove bolts which hold switch assembly, and remove switch assembly, plunger and plunger spring from starter as a unit.

**CAUTION:**

Be careful because pinion gap adjustment washer may sometimes be used on the mounting surface of switch assembly.

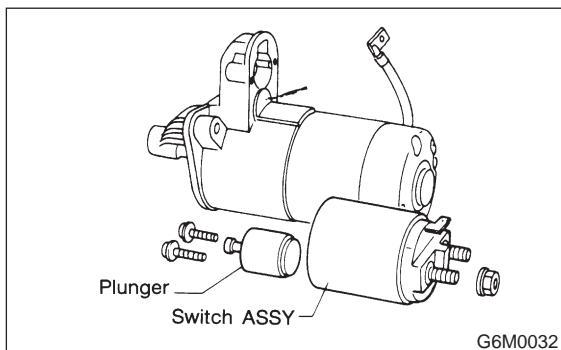


- 3) Remove both through-bolts and brush holder screws, and detach rear bracket and brush holder.

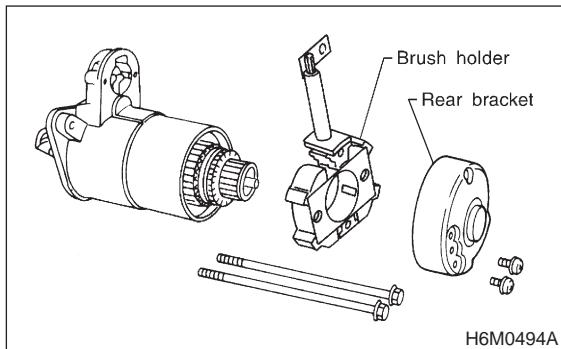


- 4) Remove armature and yoke. Ball used as a bearing will then be removed from the end of armature.

**CAUTION:**

Be sure to mark an alignment mark on yoke and front bracket before removing yoke.

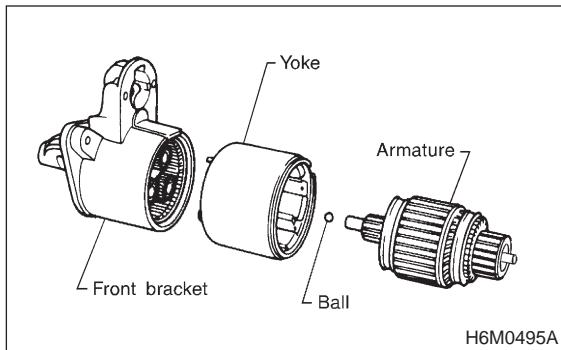


- 5) Remove packing A, three planetary gears, packing B and plate.

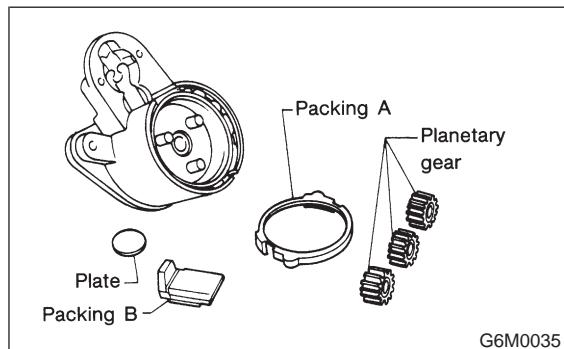


- 6) Remove shaft assembly and overrunning clutch as a unit.

**CAUTION:**  
Record the direction of lever before removing.

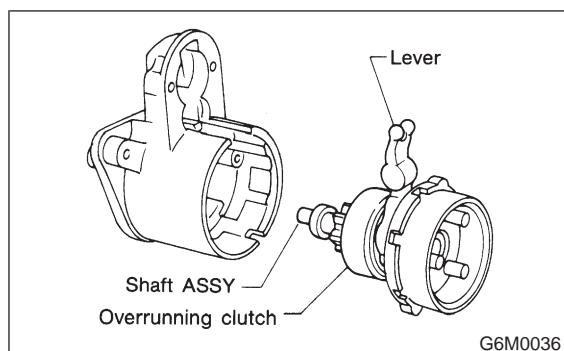

- 7) Remove overrunning clutch from shaft assembly as follows:

- (1) Remove stopper from ring by lightly tapping a fit tool placed on stopper.
- (2) Remove ring, stopper and clutch from shaft.

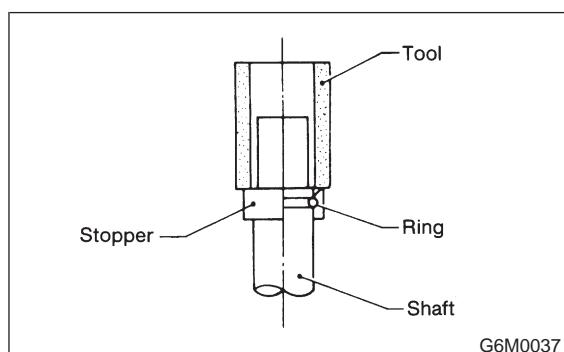


## 2. BRUSH HOLDER

Slightly open the metal fitting holding the insulating plate to the brush holder. Remove the insulating plate.


### NOTE:

The brush and spring can be easily removed from the brush holder at this time.

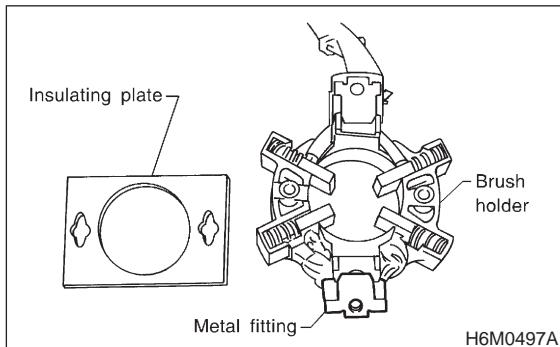

3) Depth of segment mold  
Check the depth of segment mold.

**Depth of segment mold:**  
**0.5 mm (0.020 in)**

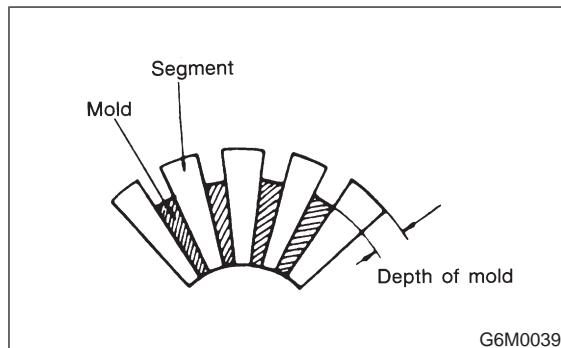

## D: INSPECTION

### 1. ARMATURE

1) Check commutator for any sign of burns of rough surfaces or stepped wear. If wear is of a minor nature, correct it by using sand paper.

#### 2) Run-out test

Check the commutator run-out and replace if it exceeds the limit.


#### Commutator run-out:

**Standard**

**0.05 mm (0.0020 in)**


**Service limit**

**Less than 0.10 mm (0.0039 in)**

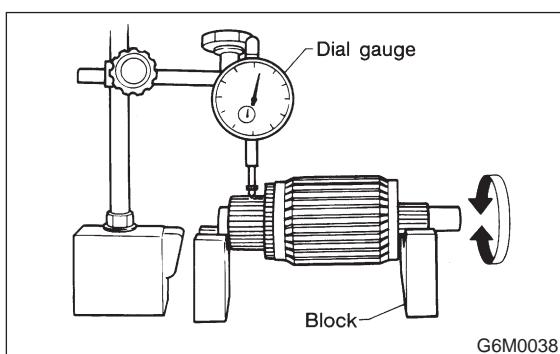

4) Armature short-circuit test


Check armature for short-circuit by placing it on growler tester. Hold a hacksaw blade against armature core while slowly rotating armature. A short-circuited armature will cause the blade to vibrate and to be attracted to core. If the hacksaw blade is attracted or vibrates, the armature, which is short-circuited, must be replaced or repaired.

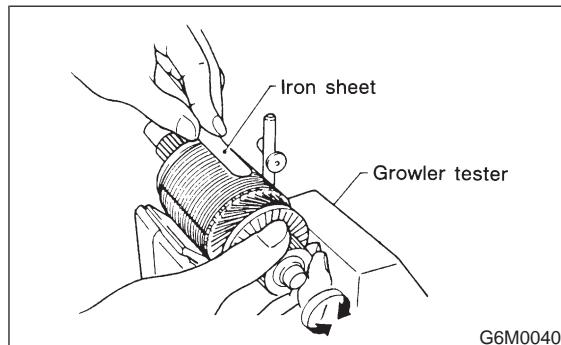

5) Armature ground test

Using circuit tester, touch one probe to the commutator segment and the other to shaft. There should be no continuity. If there is a continuity, armature is grounded.

Replace armature if it is grounded.

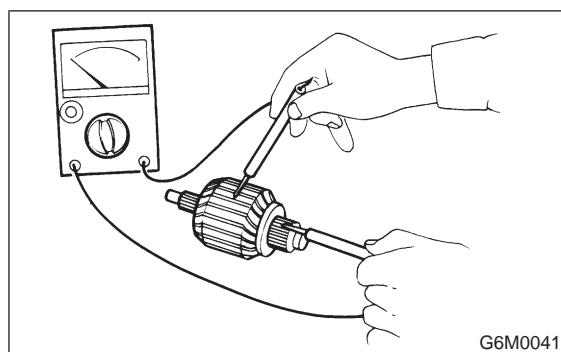

### 2. YOKE

Make sure pole is set in position.

### 3. OVERRUNNING CLUTCH

Inspect teeth of pinion for wear and damage. Replace if it damaged. Rotate pinion in direction of rotation (clockwise). It should rotate smoothly. But in opposite direction, it should be locked.

#### CAUTION:

**Do not clean overrunning clutch with oil to prevent grease from flowing out.**

### 4. BRUSH AND BRUSH HOLDER

#### 1) Brush length


Measure the brush length and replace if it exceeds the service limit.

Replace if abnormal wear or cracks are noticed.

#### *Brush length:*

**Standard 17.0 mm (0.669 in)**

**Service limit 11.5 mm (0.453 in)**

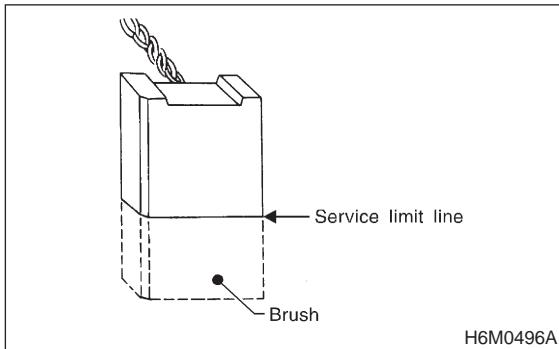

#### 2) Brush movement

Be sure brush moves smoothly inside brush holder.

#### 3) Brush spring force

Measure brush spring force with a spring scale. If it is less than the service limit, replace brush spring.

#### *Brush spring force:*

**Standard**

**21.6 N (2.2 kg, 4.9 lb) (when new)**

**Service limit**

**5.9 N (0.6 kg, 1.3 lb)**

### 5. SWITCH ASSEMBLY

Be sure there is continuity between terminals S and M, and between terminal S and ground. Use a circuit tester (set in "ohm").


Also check to be sure there is no continuity between terminal M and B.

#### *Terminal / Specified resistance:*

**S—M / Continuity**

**S—Ground / Continuity**

**M—B / No continuity**

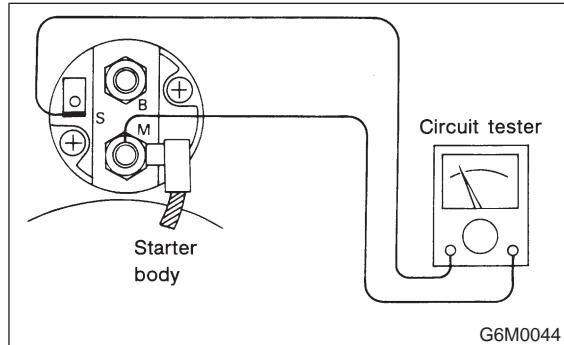

### E: ASSEMBLY

Assembly is in the reverse order of disassembly procedures. Observe the following:

1) Carefully assemble all parts in the order of assembly and occasionally inspect nothing has been overlooked.

2) Apply grease to the following parts during assembly.


- Front bracket sleeve bearing
- Armature shaft gear
- Outer periphery of plunger
- Mating surface of plunger and lever
- Gear shaft splines
- Mating surface of lever and clutch
- Ball at the armature shaft end
- Internal and planetary gears

3) After assembling parts correctly, check to be sure starter operates properly.


## 2. Generator

### A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

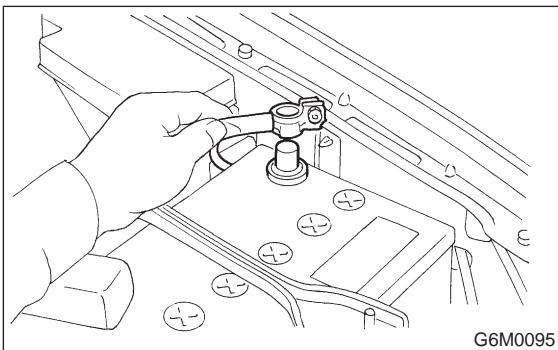


- 2) Disconnect connector and terminal from generator.

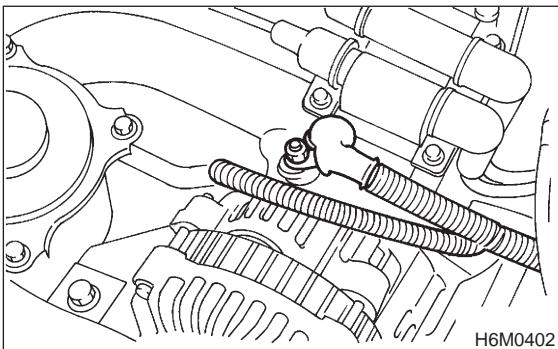


- 3) Remove V-belt cover.

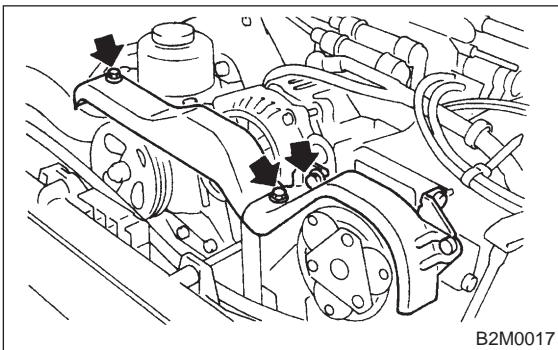

- 4) Remove front side V-belt.

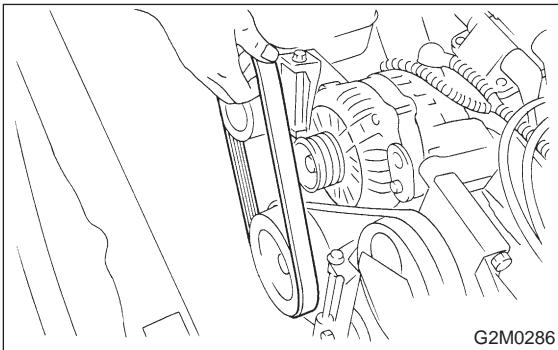


- 5) Remove bolts which install generator onto bracket.

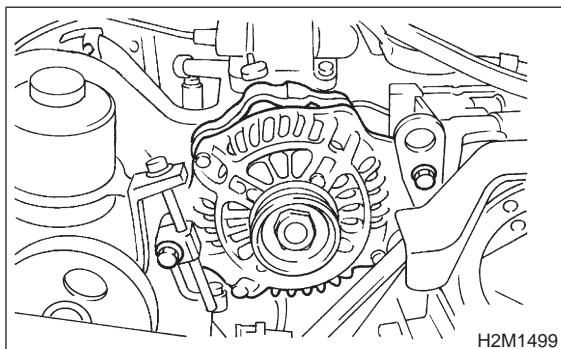

- 6) Installation is in the reverse order of removal.


**CAUTION:**

Check and adjust V-belt tension. <Ref. to 1-5 [G2A0].>

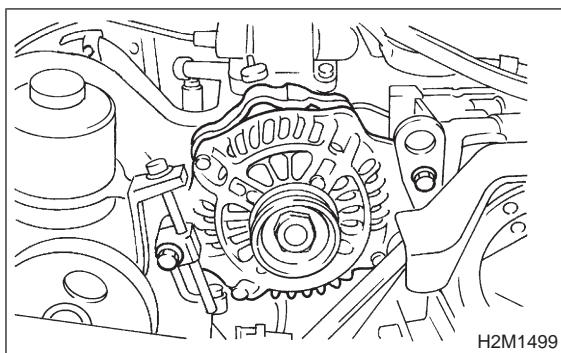


### B: DISASSEMBLY

- 1) Remove the four through bolts. Then insert the tip of a flat-head screwdriver into the gap between the stator core and front bracket. Pry them apart to disassemble.

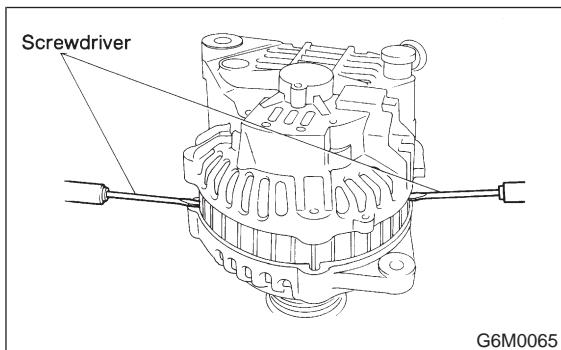


2) Hold rotor with a vise and remove pulley nut.

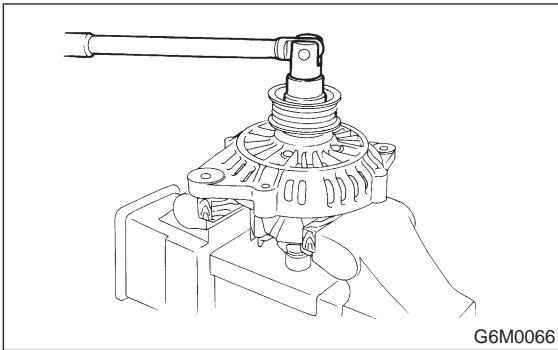

**CAUTION:**


When holding rotor with vise, insert aluminum plates or wood pieces on the contact surfaces of the vise to prevent rotor from damage.

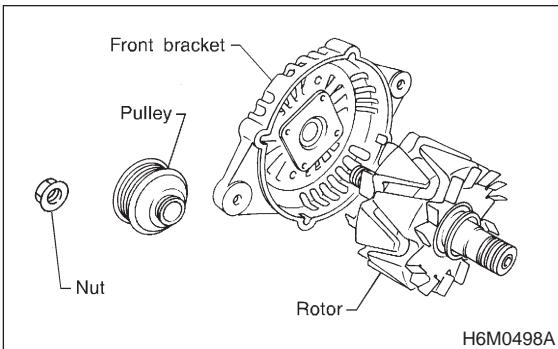


3) Unsolder connection between rectifier and stator coil to remove stator coil.

**CAUTION:**


Finish the work rapidly (less than three seconds) because the rectifier cannot withstand heat very well.

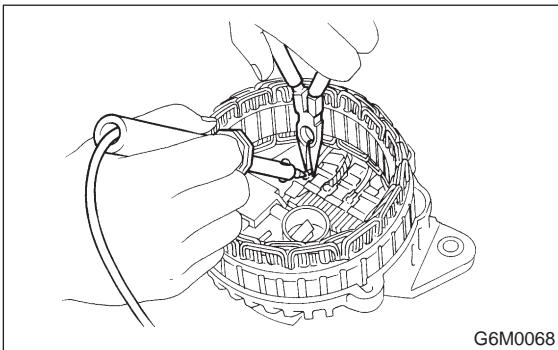


4) Remove screws which secure IC regulator to rear cover, and unsolder connection between IC regulator and rectifier to remove IC regulator.

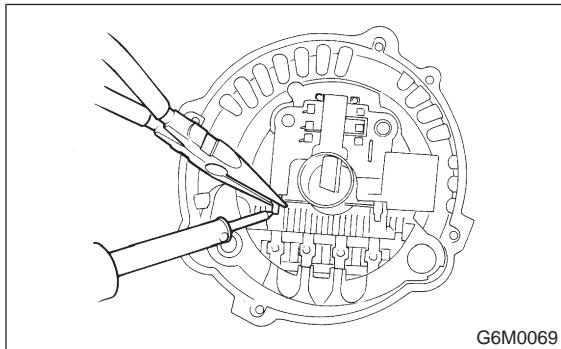

5) Remove the brushes by unsoldering at the pig-tails.

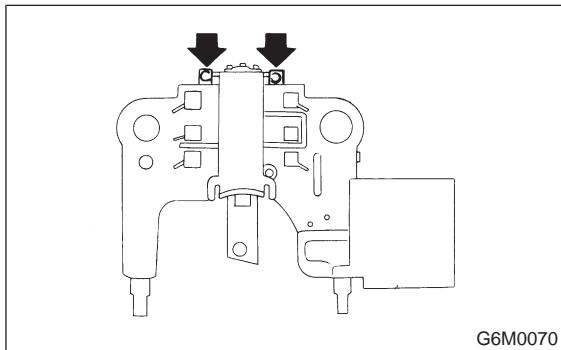

6) Remove the nut and insulating bushing at terminal B. Remove rectifier.

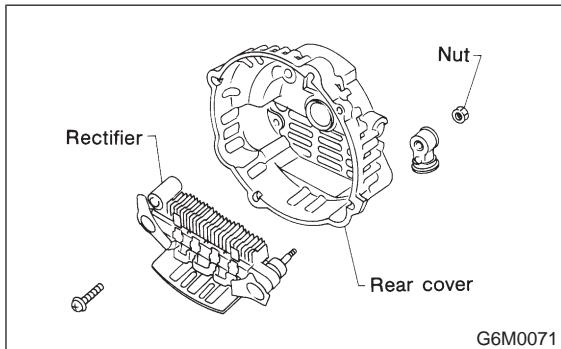

## C: INSPECTION AND REPAIR


### 1. DIODE

**CAUTION:**

Never use a megger tester (measuring use for high voltage) or any other similar measure for this test; otherwise, the diodes may be damaged.


## 1) Checking positive diode

Check for continuity between the diode lead and the positive side heat sink. The positive diode is in good condition if continuity exists only in the direction from the diode lead to the heat sink.

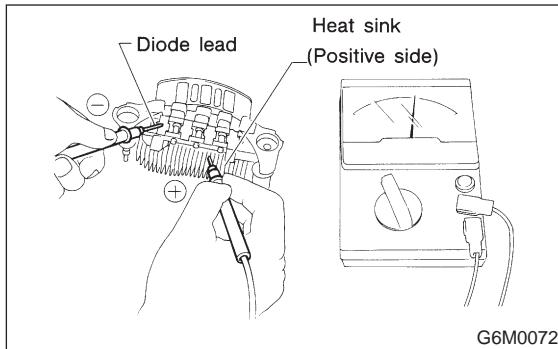

## 2) Checking negative diode

Check for continuity between the negative side heat sink and diode lead. The negative diode is in good condition if continuity exists only in the direction from the heat sink to the diode lead.

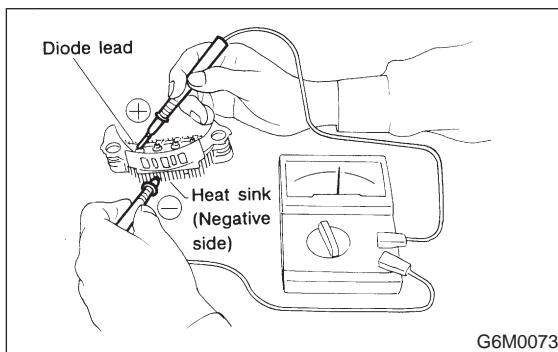

## 2. ROTOR

## 1) Slip ring surface

Inspect slip rings for contamination or any roughness of the sliding surface. Repair slip ring surface using a lathe or sand paper.


## 2) Slip ring outer diameter

Measure slip ring outer diameter. If slip ring is worn replace rotor assembly.

**Slip ring outer diameter:****Standard****22.7 mm (0.894 in)****Limit****22.1 mm (0.870 in)**


## 3) Continuity test

Check resistance between slip rings using circuit tester. If the resistance is not within specification, replace rotor assembly.

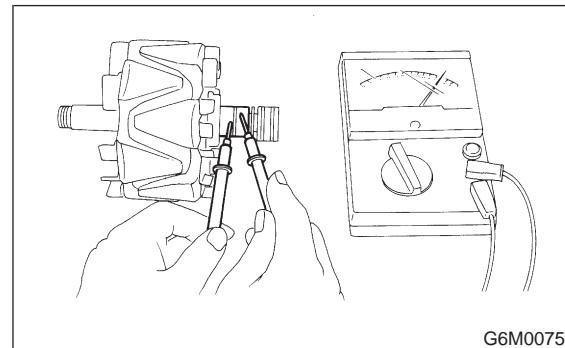**Specified resistance:****Approx. 2.7 — 3.2  $\Omega$** 

## 4) Insulation test


Check continuity between slip ring and rotor core or shaft. If continuity exists, the rotor coil is short-circuited, and so replace rotor assembly.

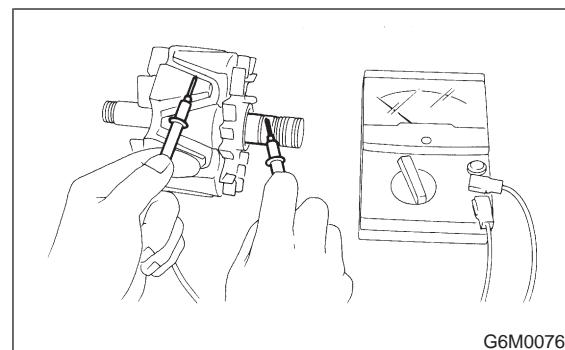

## 5) Ball bearing (rear side)

(1) Check rear ball bearing. Replace if it is noisy or if rotor does not turn smoothly.


(2) The rear bearing can be removed by using common bearing puller.

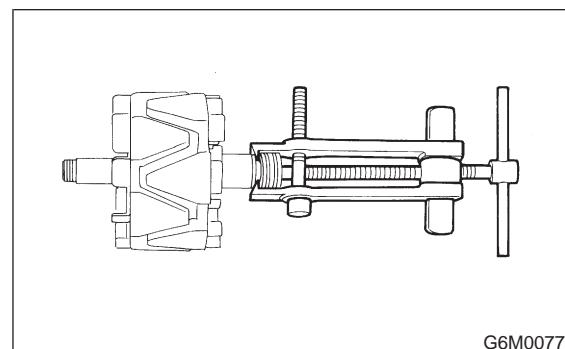

### 3. STATOR


#### 1) Continuity test

Inspect stator coil for continuity between each end of the lead wires. If there is no continuity between individual lead wires, the lead wire is broken, and so replace stator assembly.

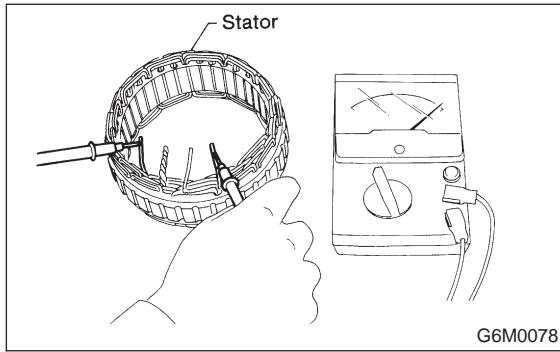

#### 2) Insulation test

Inspect stator coil for continuity between stator core and each end of the lead wire. If there is continuity, the stator coil is short-circuited, and so replace stator assembly.

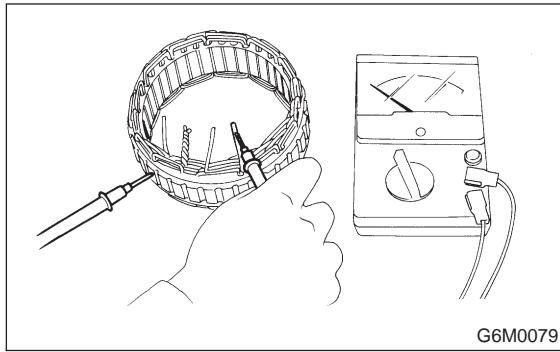

### 4. BRUSH

#### 1) Measure the length of each brush. If wear exceeds the service limit, replace the brush. Each brush has the service limit mark on it.


##### **Brush length:**

**Standard**


**18.5 mm (0.728 in)**

**Service limit**

**5.0 mm (0.197 in)**

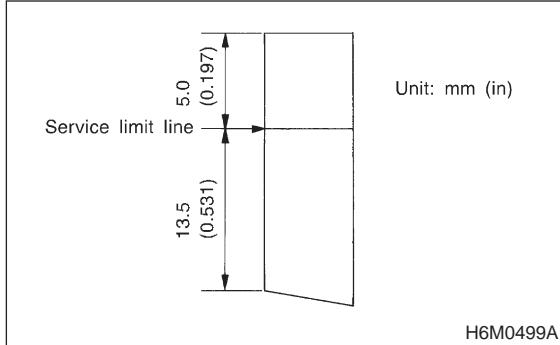

**2) Checking brush spring for proper pressure**  
Using a spring pressure indicator, push the brush into the brush holder until its tip protrudes 2 mm (0.08 in). Then measure the pressure of the brush spring. If the pressure is less than 2.648 N (270 g, 9.52 oz), replace the brush spring with a new one. The new spring must have a pressure of 4.609 to 5.786 N (470 to 590 g, 16.58 to 20.81 oz).

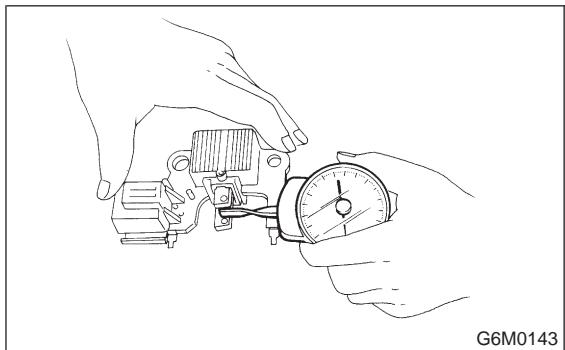


## 5. BEARING (FRONT SIDE)

1) Check front ball bearing. If resistance is felt while rotating, or if abnormal noise is heard, replace the ball bearing.

2) Replacing front bearing

(1) Remove front bearing retainer.


(2) Closely install a fit tool on the bearing inner race. Press the bearing down out of front bracket with a hand press or vise. A socket wrench can serve as the tool.

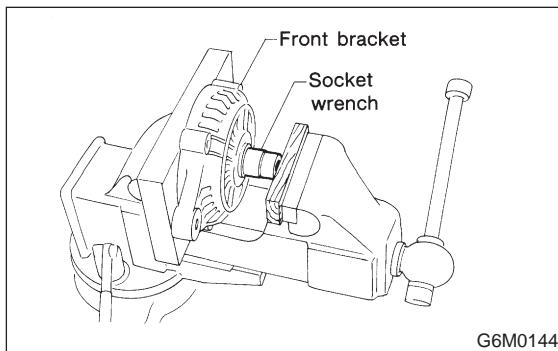

G6M0144

(3) Set a new bearing and closely install a fit tool on the bearing outer race. Press the bearing down into place with a hand press or vise. A socket wrench can serve as the tool.

(4) Install front bearing retainer.

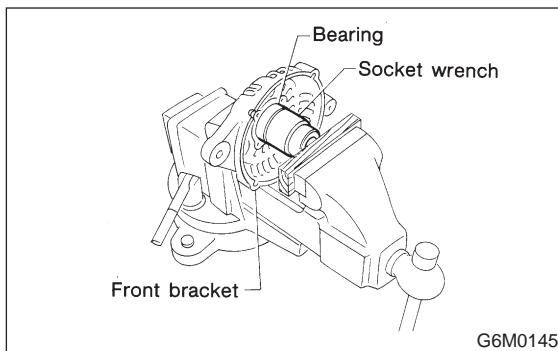

G6M0145

## D: ASSEMBLY


To assemble, reverse order of disassembly.

1) Pulling up brush

Before assembling, press the brush down into the brush holder with your finger and secure in that position by passing a [2 mm (0.08 in) dia. length 4 to 5 cm (1.6 to 2.0 in)] wire through the hole shown in the figure.

**CAUTION:**

Be sure to remove the wire after reassembly.

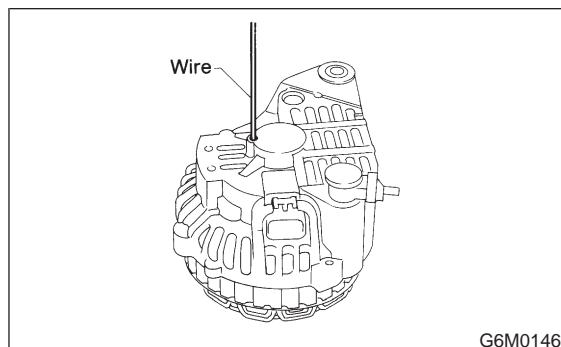

G6M0146

2) Heat the rear bracket [50 to 60°C (122 to 140°F)] and press the rear bearing into the rear bracket. Then lubricate the rear bracket.

**CAUTION:**

Grease should not be applied for the rear bearing.

Remove oil completely if it is found on the bearing box.

3) After reassembly, turn the pulley by hand to check that the rotor turns smoothly.

### 3. Spark Plug

#### A: REMOVAL AND INSTALLATION (2200 cc MODEL)

**CAUTION:**

All spark plugs installed on an engine, must be of the same heat range.

**Spark plug:**

(Standard)


CHAMPION: RC8YC4, RC10YC4

(Alternate)


NGK: BKR6E-11

NIPPONDENSO: K20PR-U11

- 1) Disconnect battery ground cable.

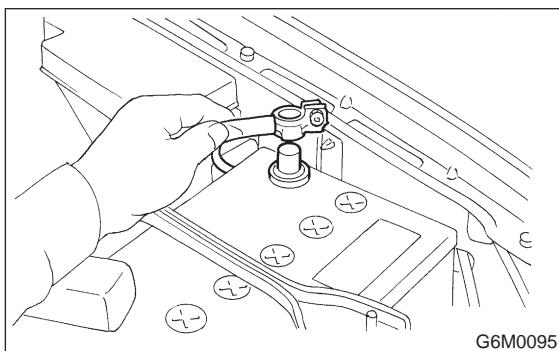

- 2) Remove spark plug cords by pulling boot, not cord itself.

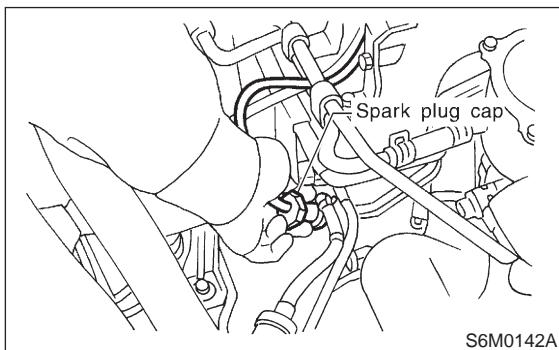

- 3) Remove spark plugs.
- 4) When installing spark plugs on cylinder head, use spark plug wrench.

**Tightening torque (Spark plug):**

$21\pm3\text{ N}\cdot\text{m}$  ( $2.1\pm0.3\text{ kg}\cdot\text{m}$ ,  $15.2\pm2.2\text{ ft}\cdot\text{lb}$ )

**CAUTION:**

The above torque should be only applied to new spark plugs without oil on their threads. In case their threads are lubricated, the torque should be reduced by approximately 1/3 of the specified torque in order to avoid their overstressing.

- 5) Connect spark plug cords.

#### B: REMOVAL (2500 cc MODEL)

**CAUTION:**

All spark plugs installed on an engine, must be of the same heat range.


**Spark plug:**

NGK: PFR5B-11


Champion: RC10PYP4A

#### 1. #1 SPARK PLUG


- 1) Disconnect battery ground cable.

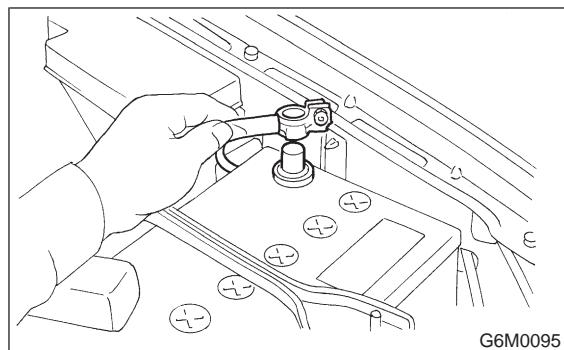


- 2) Disconnect mass air flow sensor connector.

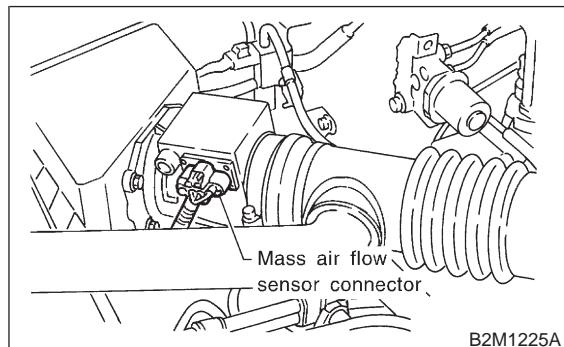


- 3) Remove four clips securing air cleaner upper cover.
- 4) Loosen the clamp screw and separate air cleaner upper cover from air intake duct.

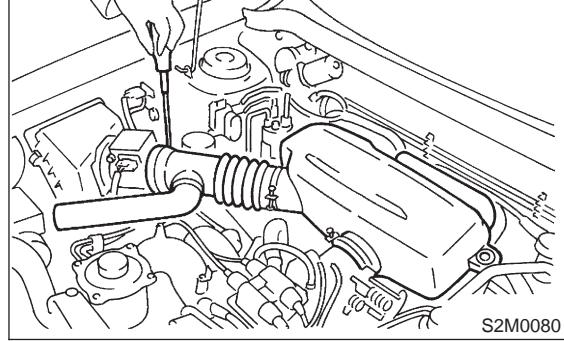


5) Remove air cleaner element and air cleaner case.

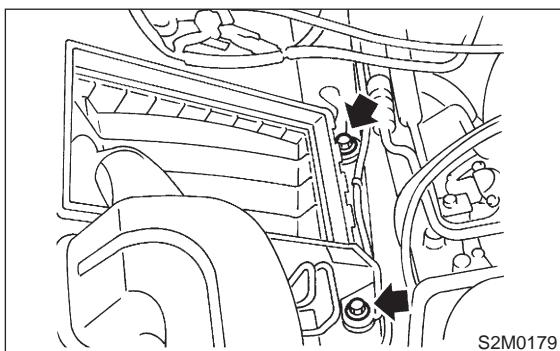

6) Remove #1 spark plug cord by pulling boot, not cord itself.

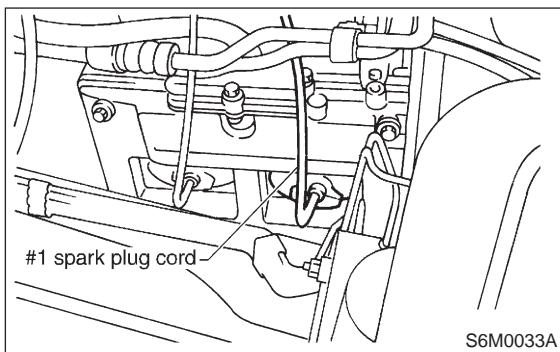

7) After connecting (A) spark plug socket, (B) extension and (C) Universal Joint to each other, securely set them over the spark plug in cylinder head.

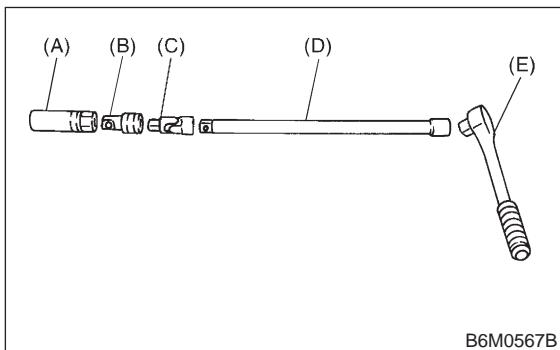

- (A) Spark plug socket 16 mm (5/8 in)
- (B) Extension
- (C) Universal Joint
- (D) Extension
- (E) Ratchet

8) Cover ABS pipes with a rag to prevent damage.


NOTE:

- Length L1 is important in making for easy removal.
- It may be necessary to wrap points (A) and (B) with vinyl tape to prevent them separating while working.
- If they do separate, spark plug socket is left on the spark plug and it is very difficult to remove.
- An approximately 250 mm (9.84 in) long extension is recommended to be connected to ratchet.
- For spark plug socket, extension and Universal Joint, it is recommended to use the following tools.


Spark plug socket : PROTO 5020-50

Extension : SNAP-ON FX1


Universal Joint : SNAP-ON FU80B

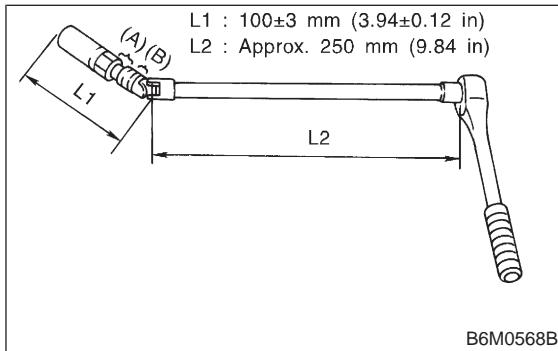

9) Set (D) extension and (E) ratchet in turn onto the connected tools in plug hole, and remove spark plug using them.

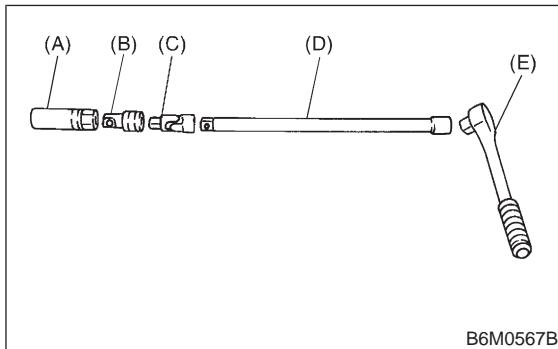


- (A) Spark plug socket 16 mm (5/8 in)
- (B) Extension
- (C) Universal Joint
- (D) Extension
- (E) Ratchet

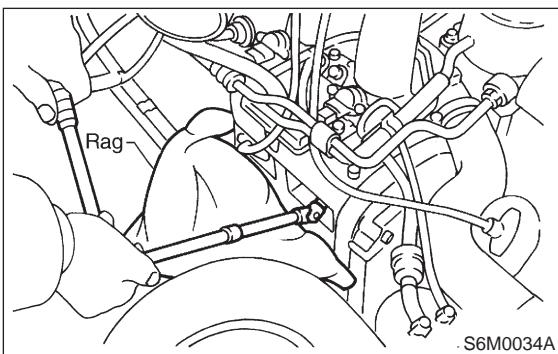


## 2. #2 SPARK PLUG


- 1) Disconnect battery ground cable.

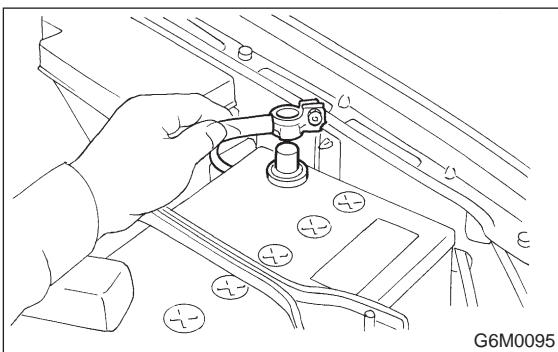

- 2) Remove battery.

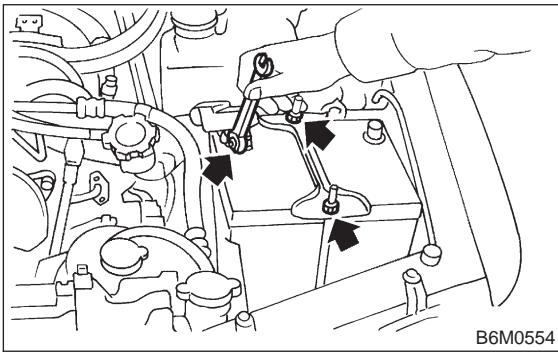

- 3) Remove #2 spark plug cord by pulling boot, not cord itself.

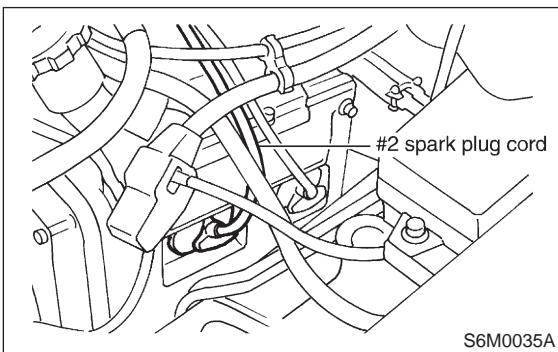


- 4) For subsequent procedures, refer to the procedure for #1 spark plug. <Ref. to 6-1 [W3B1].>

**CAUTION:**


**When removing spark plug, cover the ATF cooling pipes with a rag to prevent damage.**

## 3. #3 SPARK PLUG


- 1) Disconnect battery ground cable.

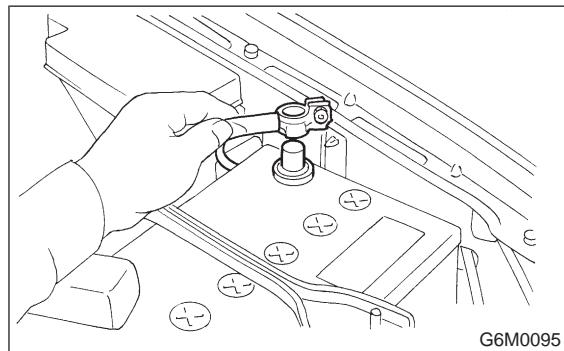


- 2) Disconnect mass air flow sensor connector.

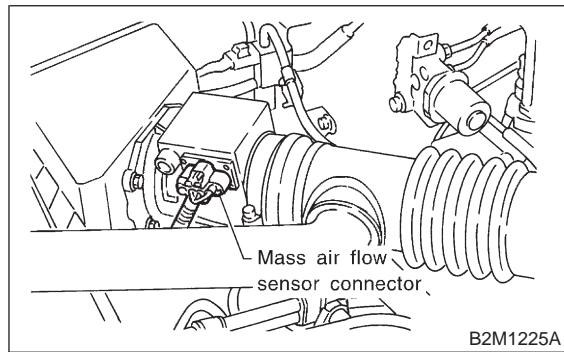


- 3) Remove four clips securing air cleaner upper cover.
- 4) Loosen the clamp screw and separate air cleaner upper cover from air intake duct.

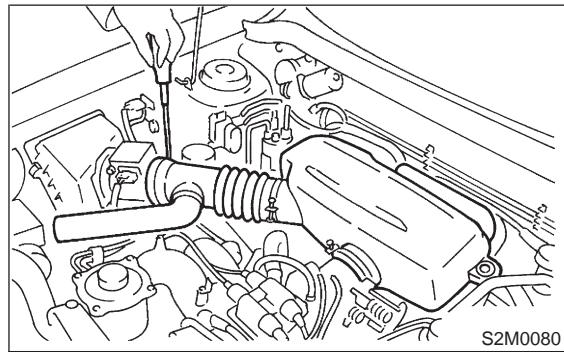

5) Remove air cleaner element and air cleaner case.

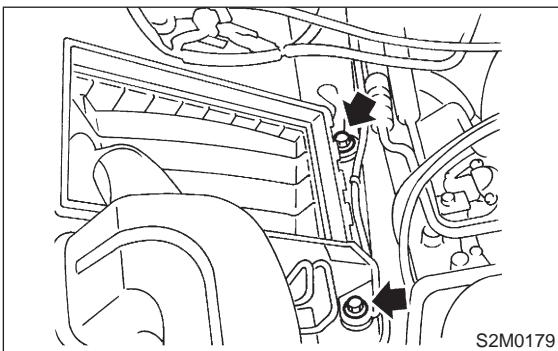


6) Remove #3 spark plug cord by pulling boot, not cord itself.

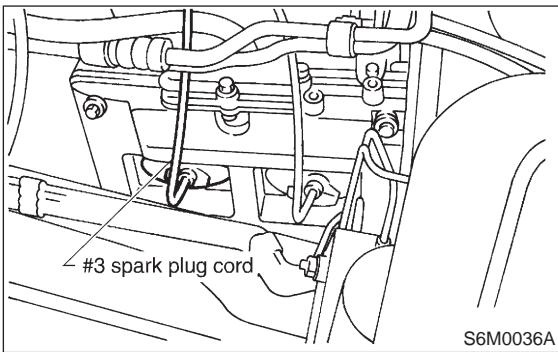


7) For subsequent procedures, refer to the procedure for #1 spark plug. <Ref. to 6-1 [W3B1].>

#### 4. #4 SPARK PLUG


1) Disconnect battery ground cable.

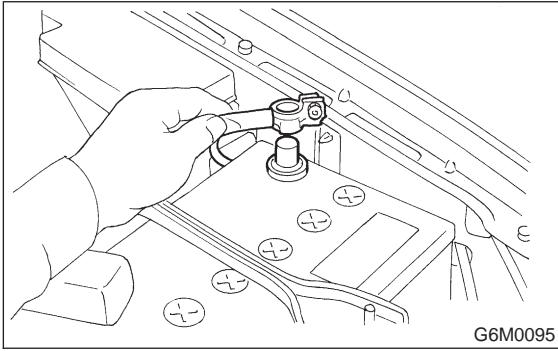

2) Remove battery.

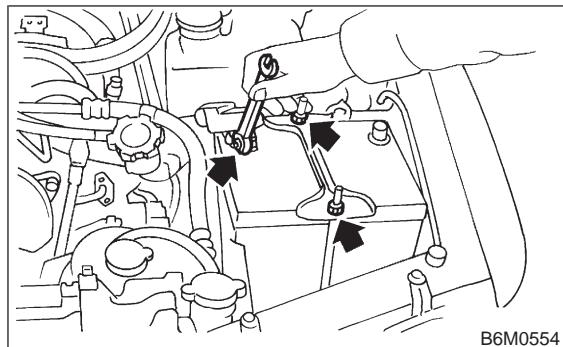


3) Remove washer tank mounting bolts.

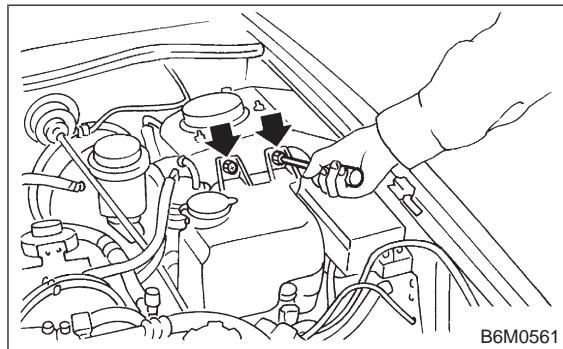

4) Disconnect washer tank connectors.

**CAUTION:**


**Do not disconnect washer tank hoses as washer fluid will leak out from washer tank.**

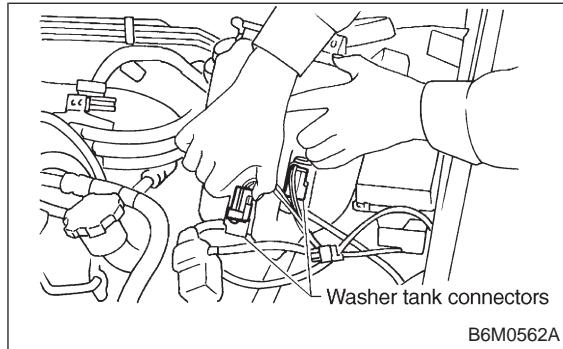


5) Move washer tank upward.

**CAUTION:**

**Secure the washer tank with wire.**

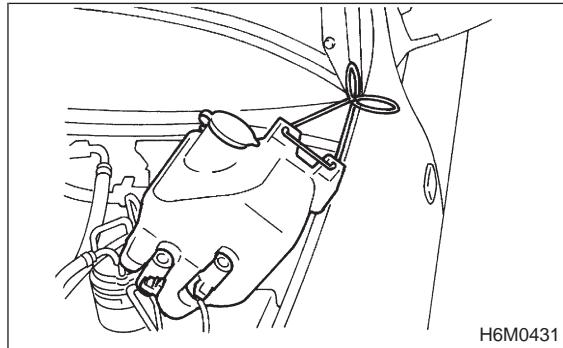

6) Remove #4 spark plug cord by pulling boot, not cord itself.

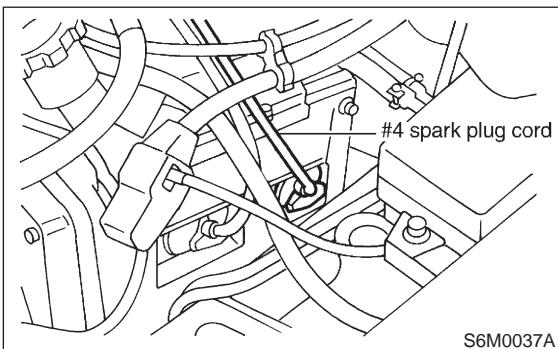


7) For subsequent procedures, refer to the procedure for #1 spark plug. <Ref. to 6-1 [W3B1].>

**CAUTION:**

**When removing spark plug, cover the ATF cooling pipes with a rag to prevent damage.**

**NOTE:**


For easier removal of spark plug, diagonally insert the tools from the direction of battery stand into plug hole as shown in figure.

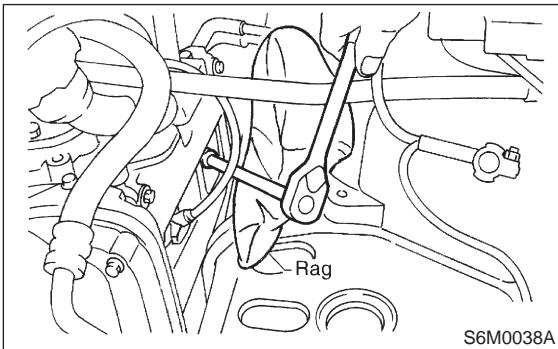

## C: INSTALLATION (2500 cc MODEL)

### 1. #1 SPARK PLUG

- 1) After setting spark plug in spark plug socket, connect the spark plug socket, extension and Universal Joint to each other. <Ref. to 6-1 [W3B1].>
- 2) Screw spark plug into cylinder head using the connected tools above mentioned. At this point, it is necessary to support the rear end of the tools with fingertips.

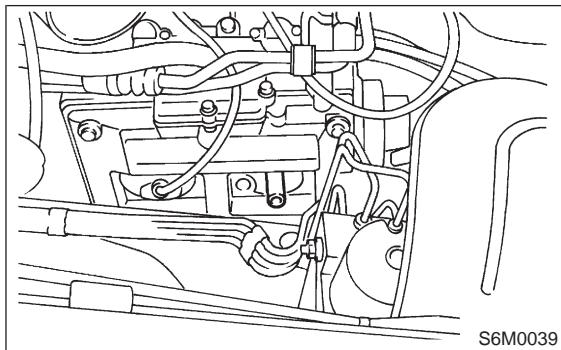

- 3) When spark plug is screwed in two or three turns, temporarily disconnect the tools connected in the first step.
- 4) Confirm that spark plug is screwed into the cylinder head properly by touching it with finger. If it is difficult to reach it by hand, confirm its condition by using mirror and suchlike.
- 5) Cover ABS pipes with rag to prevent damage.
- 6) Re-insert the tools disconnected in three steps before into plug hole, and set them again over the spark plug.


7) Set extension and ratchet in turn onto the connected tools in plug hole, and tighten spark plug to the specified torque.

**Tightening torque (spark plug):**

$20.6 \pm 2.9 \text{ N}\cdot\text{m}$  ( $2.10 \pm 0.30 \text{ kg}\cdot\text{m}$ ,  $15.19 \pm 2.14 \text{ ft-lb}$ )

**CAUTION:**

The above torque should be only applied to new spark plugs without oil on their threads. In case their threads are lubricated, the torque should be reduced by approximately 1/3 of the specified torque in order to avoid over-stressing.

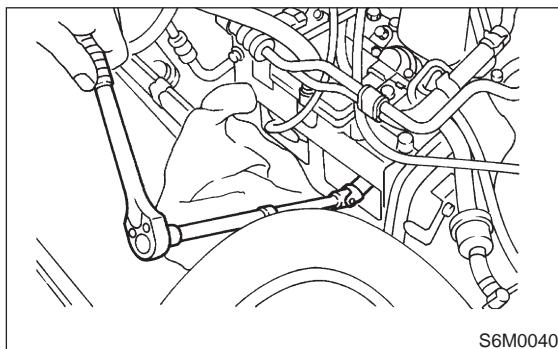

8) The subsequent procedures are in reverse order of #1 spark plug removal. <Ref. to 6-1 [W3B1].>

## 2. #2 SPARK PLUG

**CAUTION:**

When installing spark plug, cover the ATF cooling pipes with a rag to prevent damage.

- 1) Carry out #1 spark plug installation procedure. <Ref. to 6-1 [W3C1].>
- 2) Proceed in reverse order of #2 spark plug removal. <Ref. to 6-1 [W3B2].>

## 3. #3 SPARK PLUG

- 1) Carry out #1 spark plug installation procedure. <Ref. to 6-1 [W3C1].>
- 2) Proceed in reverse order of #3 spark plug removal. <Ref. to 6-1 [W3B3].>

## 4. #4 SPARK PLUG


**CAUTION:**

When installing spark plug, cover the ATF cooling pipes with a rag to prevent damage.

- 1) Carry out #1 spark plug installation procedure. <Ref. to 6-1 [W3C1].>
- 2) Proceed in reverse order of #4 spark plug removal. <Ref. to 6-1 [W3B4].>


## D: INSPECTION

Check electrodes and inner and outer porcelain of plugs, noting the type of deposits and the degree of electrode erosion.

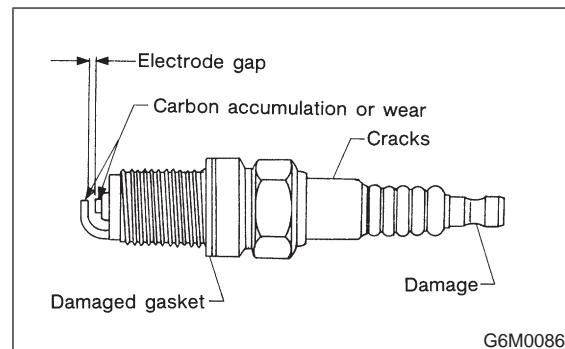

1) Normal


Brown to grayish-tan deposits and slight electrode wear indicate correct spark plug heat range.

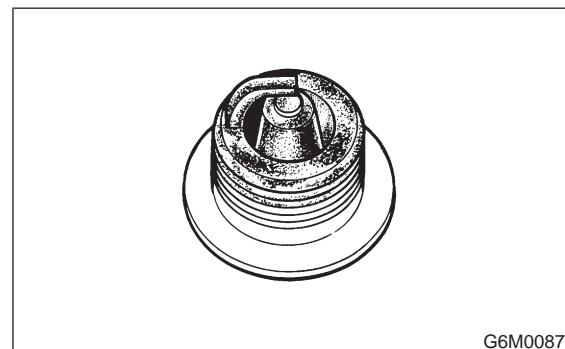

2) Carbon fouled


Dry fluffy carbon deposits on insulator and electrode are mostly caused by slow speed driving in city, weak ignition, too rich fuel mixture, dirty air cleaner, etc.

It is advisable to replace with plugs having hotter heat range.

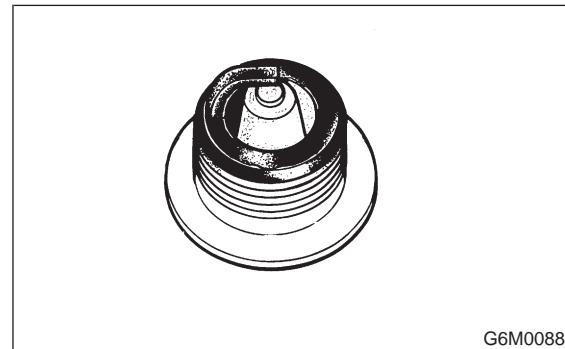


## 3) Oil fouled

Wet black deposits show excessive oil entrance into combustion chamber through worn rings and pistons or excessive clearance between valve guides and stems. If same condition remains after repair, use a hotter plug.

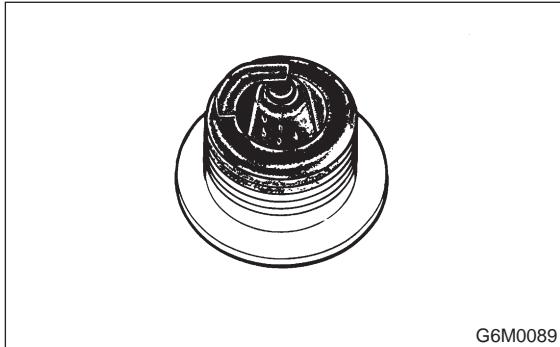

## 4) Overheating

White or light gray insulator with black or gray brown spots and bluish burnt electrodes indicate engine overheating. Moreover, the appearance results from incorrect ignition timing, loose spark plugs, wrong selection of fuel, hotter range plug, etc. It is advisable to replace with plugs having colder heat range.

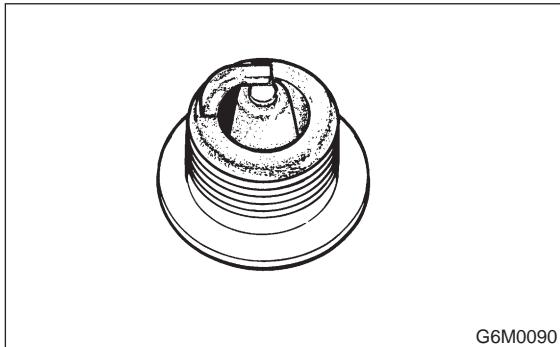

## E: CLEANING AND REGAPPING


Clean spark plugs in a sand blast type cleaner. Avoid excessive blasting. Clean and remove carbon or oxide deposits, but do not wear away porcelain.

If deposits are too stubborn, discard plugs.

After cleaning spark plugs, recondition firing surface of electrodes with file. Then correct the spark plug gap using a gap gauge.

*Spark plug gap: L*

**1.0 — 1.1 mm (0.039 — 0.043 in)**

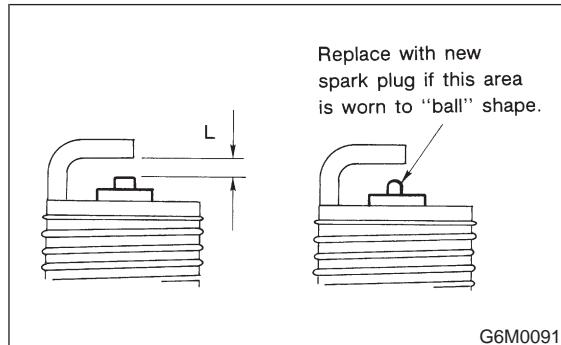


## 4. Ignition Coil

### A: REMOVAL AND INSTALLATION

#### 1. 2200 cc MODEL

- 1) Disconnect battery ground cable.
- 2) Disconnect connector from ignition coil.
- 3) Disconnect spark plug cords from ignition coil.

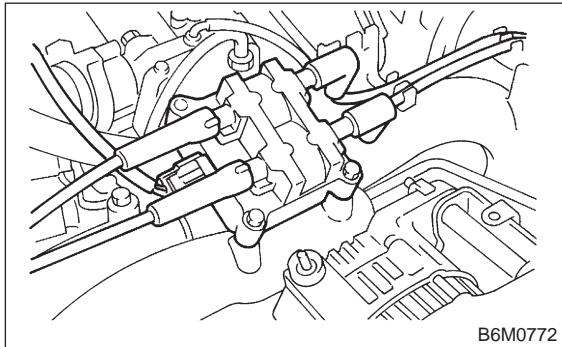

B6M0772

- 4) Remove ignition coil.
- 5) Installation is in the reverse order of removal.

**Tightening torque:**


$22 \pm 2 \text{ N}\cdot\text{m}$  (2.2±0.2 kg-m, 15.9±1.4 ft-lb)

**CAUTION:**

Be sure to connect wires to their proper positions. Failure to do so will damage unit.

#### 2. 2500 cc MODEL

- 1) Disconnect battery ground cable.
- 2) Disconnect connector from ignition coil.
- 3) Remove ignition coil.

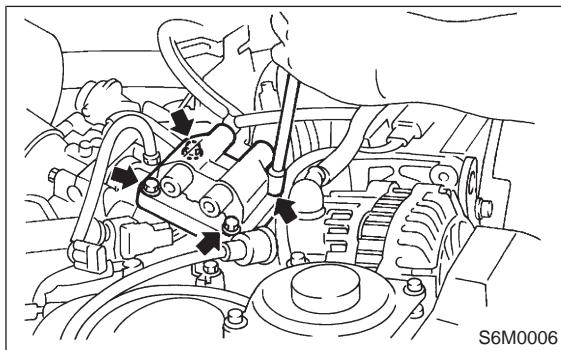

S6M0006


- 4) Installation is in the reverse order of removal.

**Tightening torque:**

$22 \pm 2 \text{ N}\cdot\text{m}$  (2.2±0.2 kg-m, 15.9±1.4 ft-lb)

**CAUTION:**

Be sure to connect wires to their proper positions. Failure to do so will damage unit.

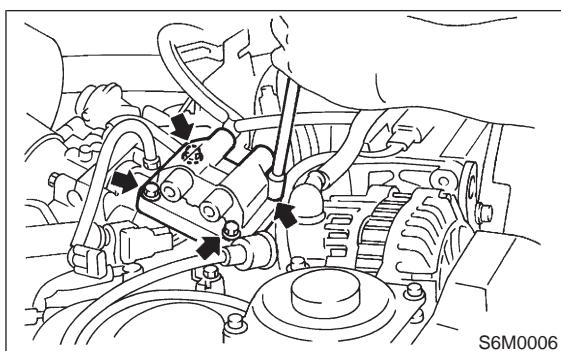

S6M0006

**B: INSPECTION****1. 2200 cc MODEL**

Using accurate tester, inspect the following items, and replace if defective.

- 1) Primary resistance
- 2) Secondary coil resistance

**CAUTION:**


If the resistance is extremely low, this indicates the presence of a short-circuit.

**Specified resistance:****[Primary side]**

Between terminal No. 1 and No. 2

Between terminal No. 2 and No. 3


$0.73 \Omega \pm 10\%$

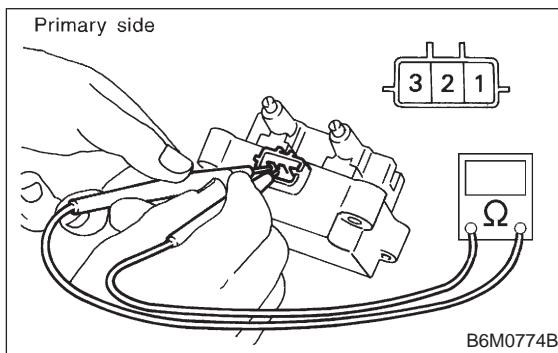**[Secondary side]**

Between (1) and (2)

Between (3) and (4)

$12.8 k\Omega \pm 15\%$

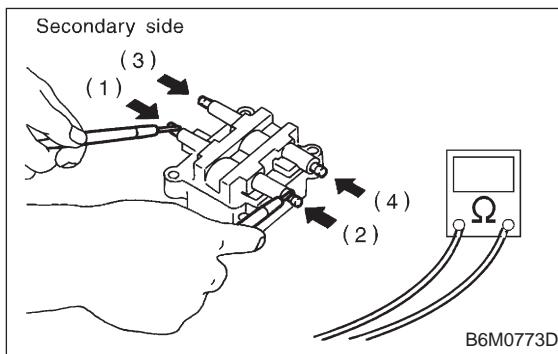

- 3) Insulation between primary terminal and case:  
 $10 M\Omega$  or more.

**2. 2500 cc MODEL**

Using accurate tester, inspect the following items, and replace if defective.

- 1) Primary resistance
- 2) Secondary coil resistance

**CAUTION:**

If the resistance is extremely low, this indicates the presence of a short-circuit.

**Specified resistance:****[Primary side]**

Between No. 1 and No. 2

$0.69 \Omega \pm 10\%$

Between No. 2 and No. 3

$0.69 \Omega \pm 10\%$

**[Secondary side]**

Between terminal (A) and (B)

$21.0 k\Omega \pm 15\%$


Between terminal (C) and (D)

$21.0 k\Omega \pm 15\%$

**[Insulation]**

Between primary terminal and case

$10 M\Omega$  or more

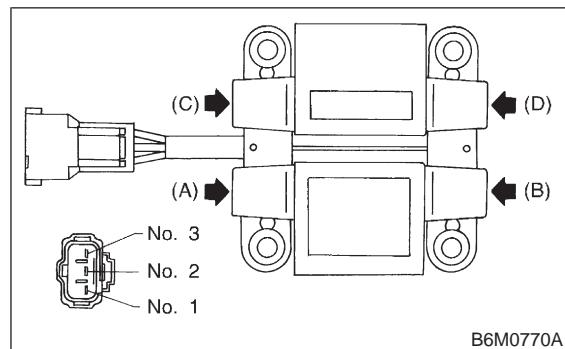

## 5. Spark Plug Cord

### A: INSPECTION


#### 1. 2200 cc MODEL

Check for:

- 1) Damage to cords, deformation, burning or rust formation of terminals
- 2) Resistance values of cords

**Resistance value:**

5.12 — 12.34 k $\Omega$

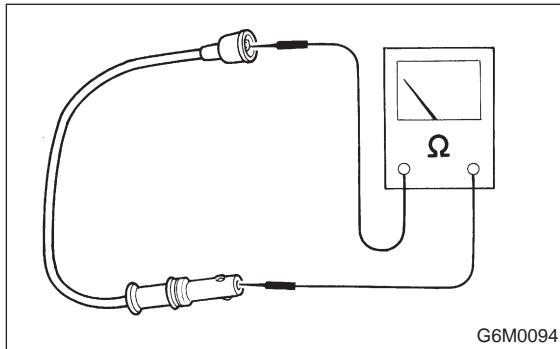

#### 2. 2500 cc MODEL

Check for:


- 1) Damage to cords, deformation, burning or rust formation of terminals
- 2) Resistance values of cords

**Resistance value:**

#1 5.95 — 13.89 k $\Omega$

#2 and #3 6.24 — 14.56 k $\Omega$


#4 6.67 — 15.57 k $\Omega$

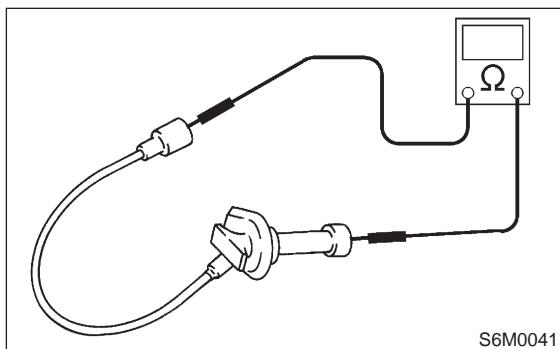


## 6. Ignitor

### A: REMOVAL AND INSTALLATION

- 1) Disconnect battery ground cable.

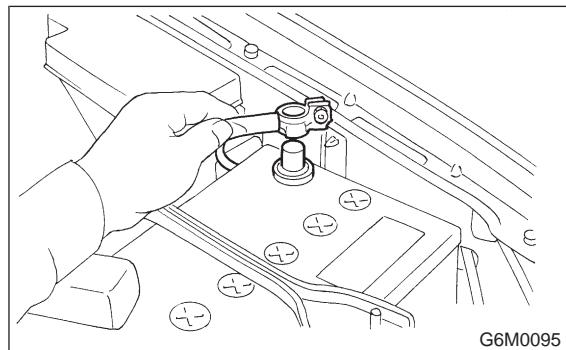

- 2) Remove intake air chamber. <Ref. to 2-7 [W18A0].>
- 3) Disconnect connector from ignitor.
- 4) Remove screws which hold ignitor onto body.

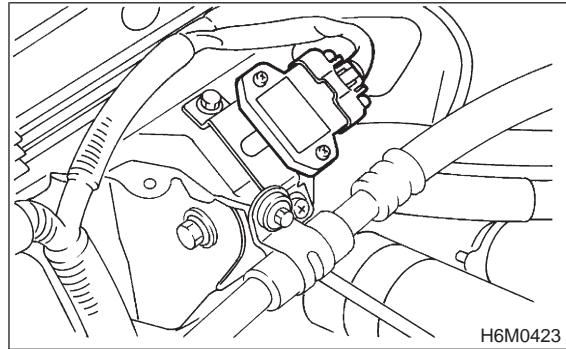


- 5) Installation is in the reverse order of removal.

## 1. Starter

Trouble		Probable cause
Starter does not start.	Magnet switch does not operate. (no clicks are heard.)	Magnet switch poor contact or discontinuity of pull-in coil circuit Improper sliding of magnet switch plunger
	Magnet switch operates. (clicks are issued.)	Poor contact of magnet switch's main contact point Layer short of armature Contaminants on armature commutator High armature mica Improper grounding of yoke field coil Insufficient carbon brush length Insufficient brush spring pressure
Starter starts but does not crank engine.	Failure of pinion gear to engage ring gear	Worn pinion teeth Improper sliding of overrunning clutch Improper adjustment of stud bolt
	Clutch slippage	Faulty clutch roller spring
Starter starts but engine cranks too slowly.		Poor contact of magnet switch's main contact point Layer short of armature Discontinuity, burning or wear of armature commutator Poor grounding of yoke field coil Insufficient brush length Insufficient brush spring pressure Abnormal brush wear
Starter overruns.		Magnet switch coil is a layer short.

## 2. Generator

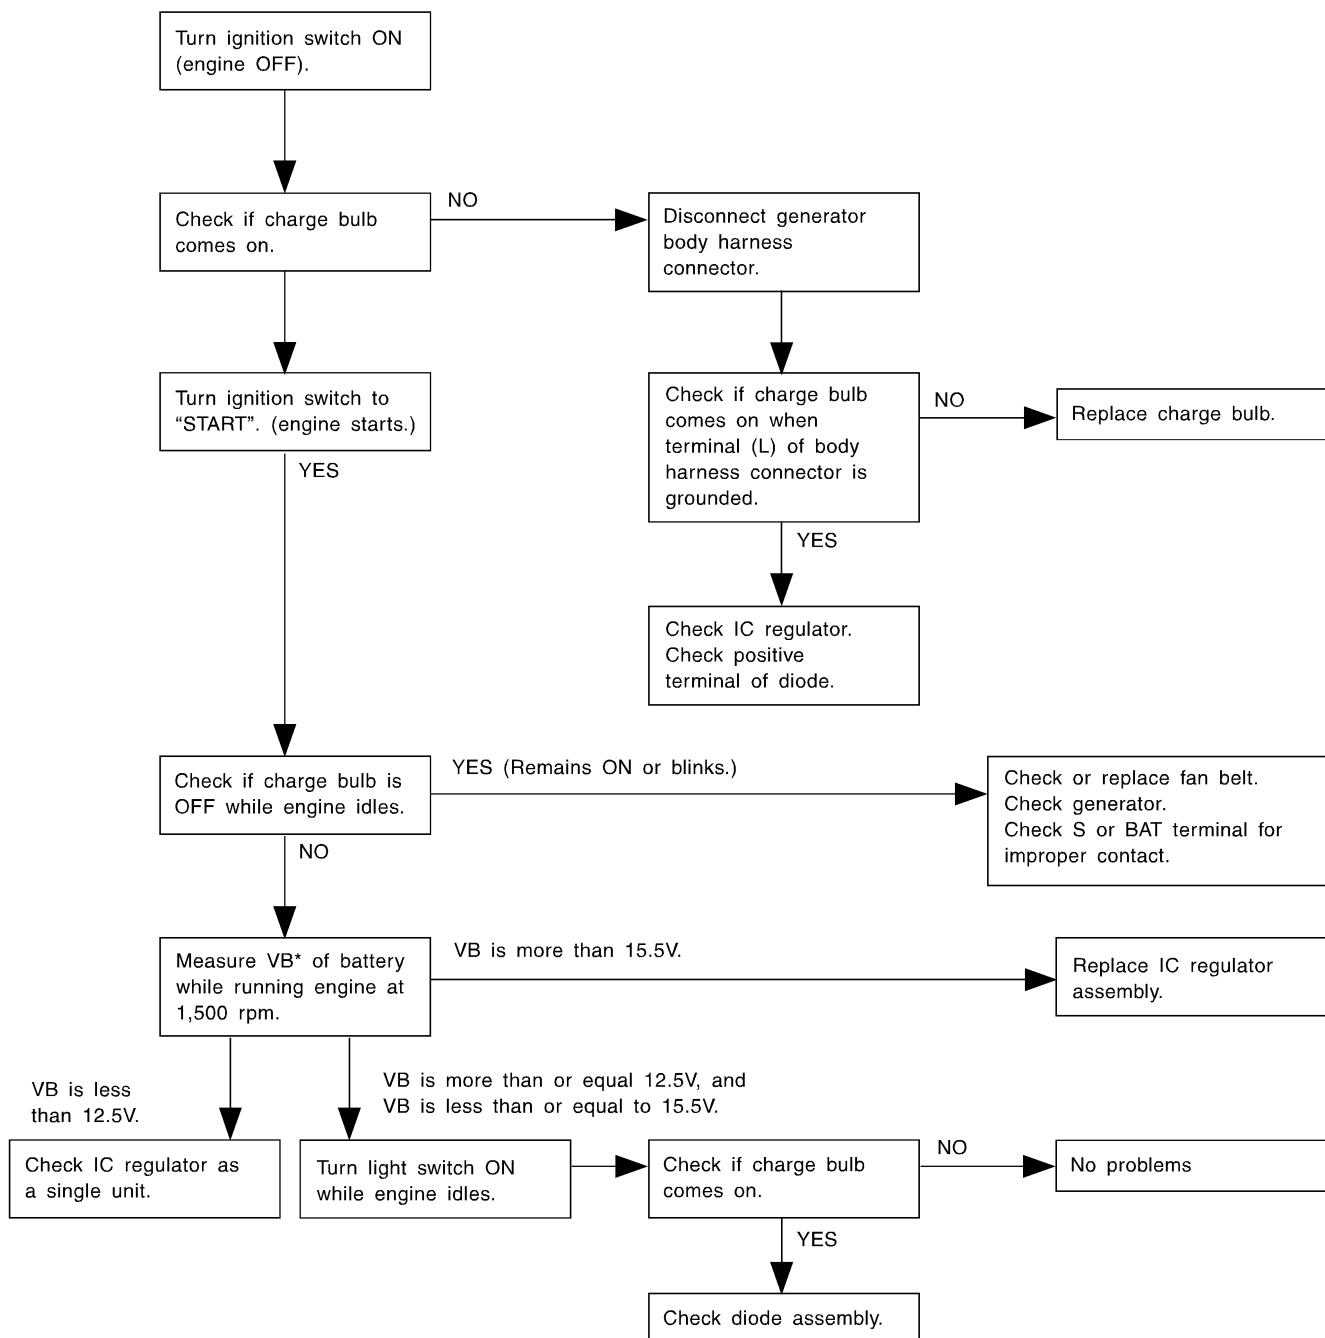

\*: Terminal voltage