


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)


3. General Description

A: CAUTION

- When servicing a vehicle, be sure to turn the ignition switch OFF, disconnect the ground terminal from the battery, and wait for more than 20 seconds before starting work.
- The airbag system is fitted with a backup power source. If the airbag system is serviced within 20 seconds after the ground terminal is disconnected, it may inflate.

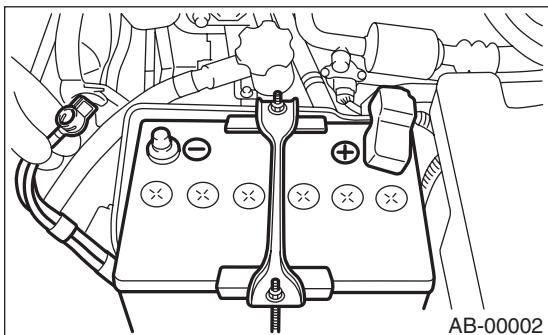



- If the sensors, airbag module, airbag control module pretensioner and harness are deformed or damaged, replace them with new genuine parts.

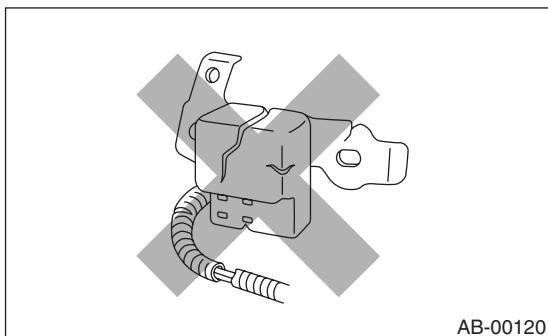

- Do not use the airbag system and pretensioners on other vehicles. When replacing parts, be sure to replace them with new parts.
- Never re-use a deployed airbag and pretensioner.
- When checking the system, be sure to use a digital circuit tester.


Use of an analog circuit tester may cause the airbag to activate erroneously.

- When checking, use a test harness. Do not directly apply the tester probe to any connector terminal of the airbag.

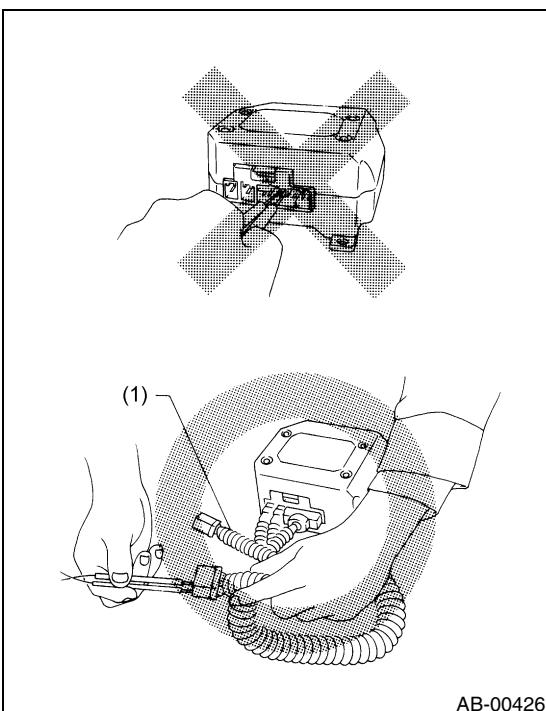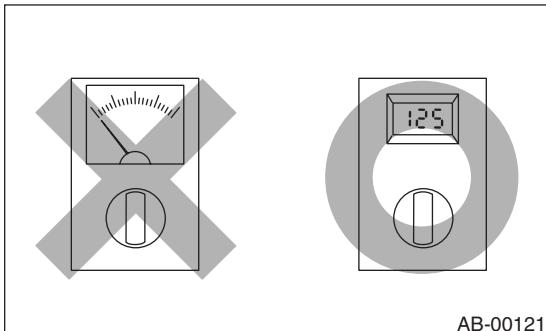

(1) Test harness


- Do not check continuity of the driver, passenger, side airbag modules and pretensioner.

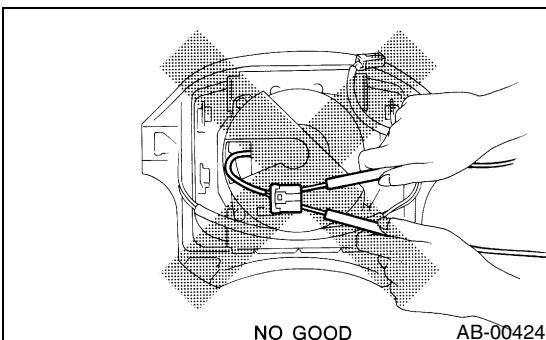


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)


- Do not allow water or oil to come in contact with the connector terminals. Do not touch the connector terminals.

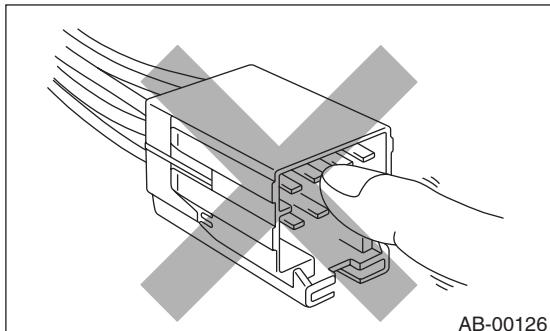


- The airbag module (driver, passenger, side) and pretensioner must not be disassembled.

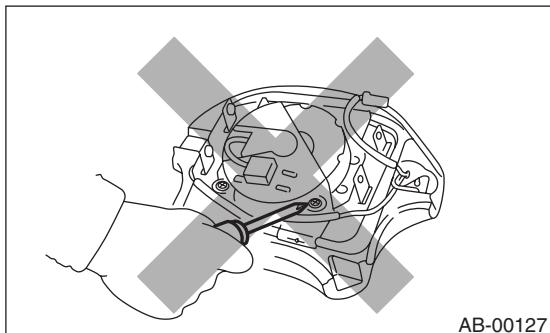


- If any damage, opening or rust is found on the airbag system wire harness, do not attempt to repair using soldering equipment. Be sure to replace the faulty harness with a new genuine part.

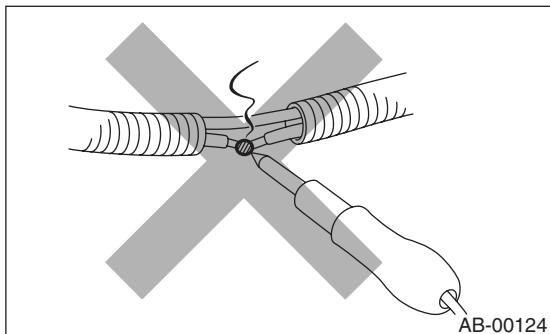

- Install the wire harness securely with the specified clips to avoid interference or tangled up with other parts.

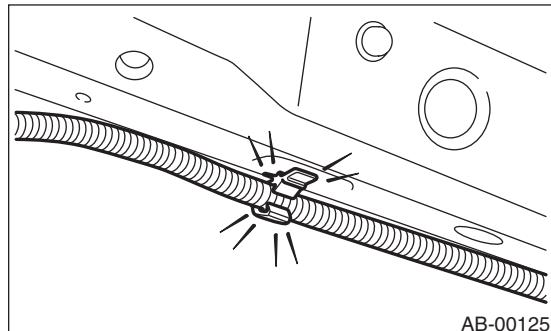


- When painting or performing sheet metal work on the front part of the vehicle, including the front wheel apron, front fender, and front side frame, remove the front sub sensors and wire harness of the airbag system.
- When painting or performing sheet metal work on the side of the vehicle, including the side sill, center pillar, and front and rear doors, remove the side airbag sensors and wire harness of the airbag system.

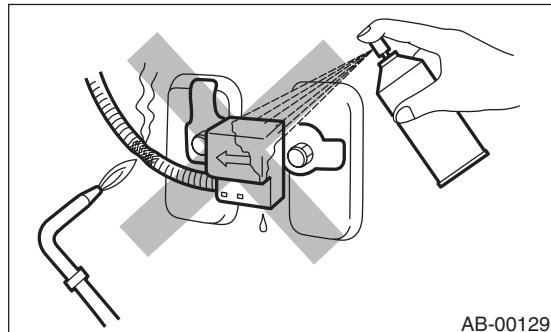


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

- Do not drop the airbag modulator parts, subject them to high temperature over 93°C (199°F), or let water, oil, or grease get on them; otherwise, the internal parts may be damaged and reliability greatly lowered.

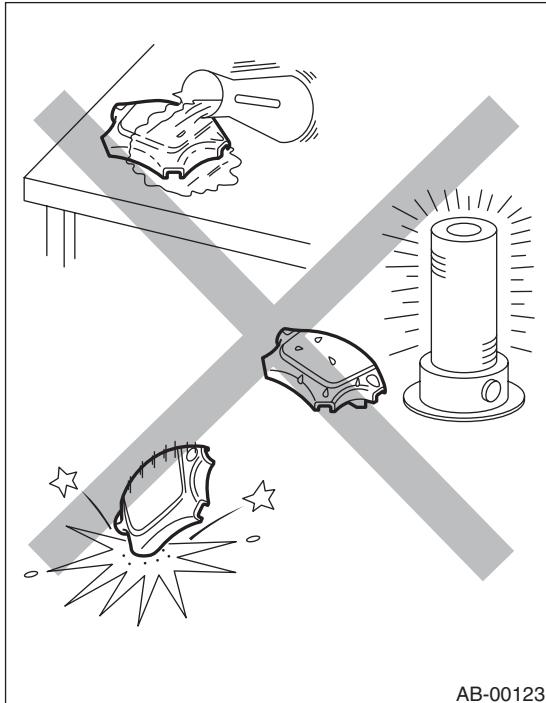

- The removed front seat with the airbag module must be kept at least 200 mm (8 in) away from walls and other objects.

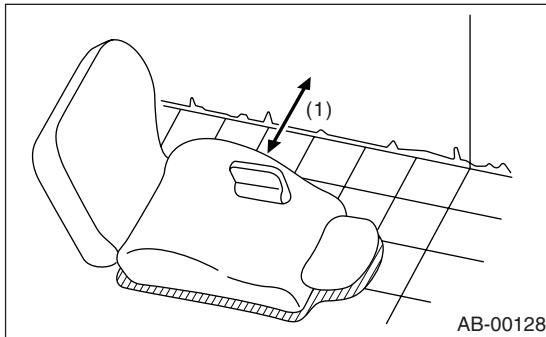









(1) More than 200 mm (8 in)

- When storing a removed airbag module, do not place any objects on it or pile airbag modules on top of each other. If the airbag inflates for some reason when it is placed with its pad side facing downward or under any object, a serious accident may result.






GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

(1)

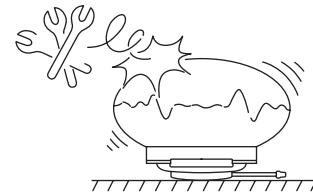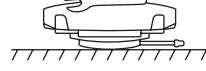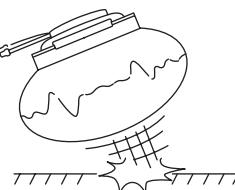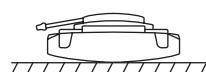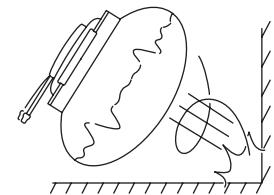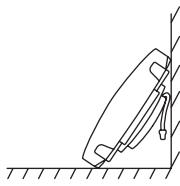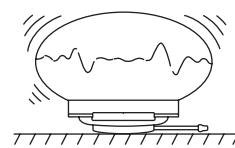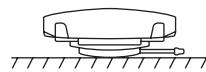

(2)

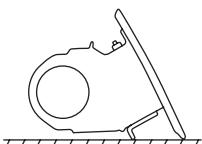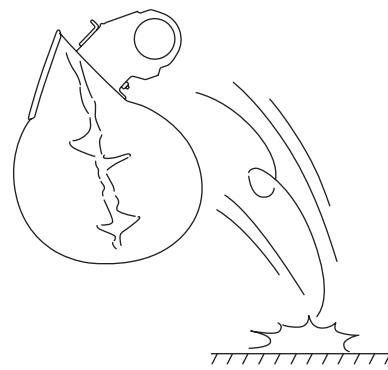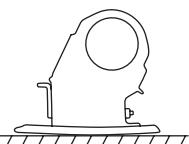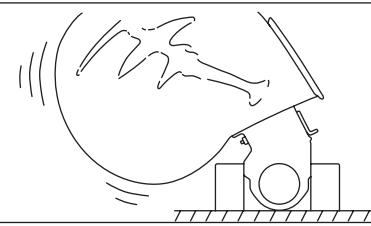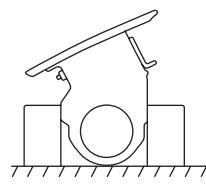

(1) Driver's module

(2) Passenger's module

AB-00130

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

- Do not discard undeployed airbag modules. They could easily cause a serious accident if accidentally deployed.

B: INSPECTION

Before diagnosing, check the following items that might be related to the engine problem:

1. BATTERY

Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12V

Specific gravity: Above 1.260

GENERAL DESCRIPTION


AIRBAG SYSTEM (DIAGNOSTICS)

C: PREPARATION TOOL

1. SPECIAL TOOLS

- TEST HARNESS M

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	98299FE020	TEST HARNESS M	Used when measuring voltage, resistance of air-bag system.

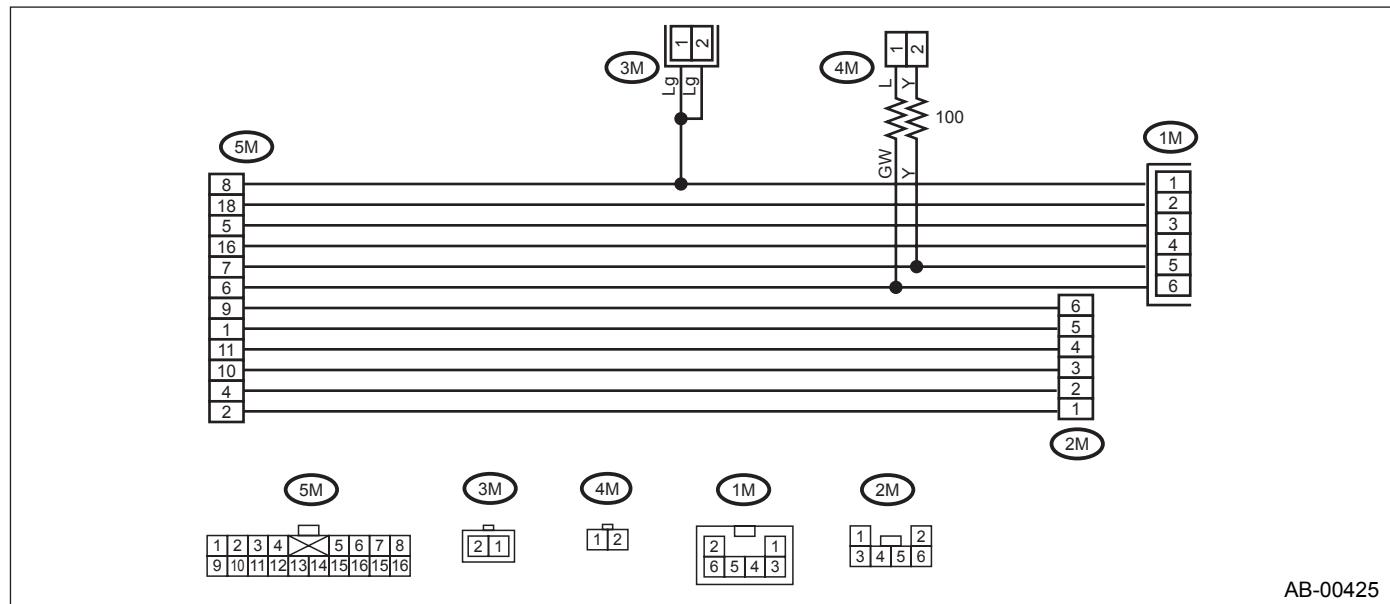


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

- TEST HARNESS F

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	98299FC010 ST98299FC010	TEST HARNESS F	Used when measuring voltage, resistance of air-bag module harnesses.

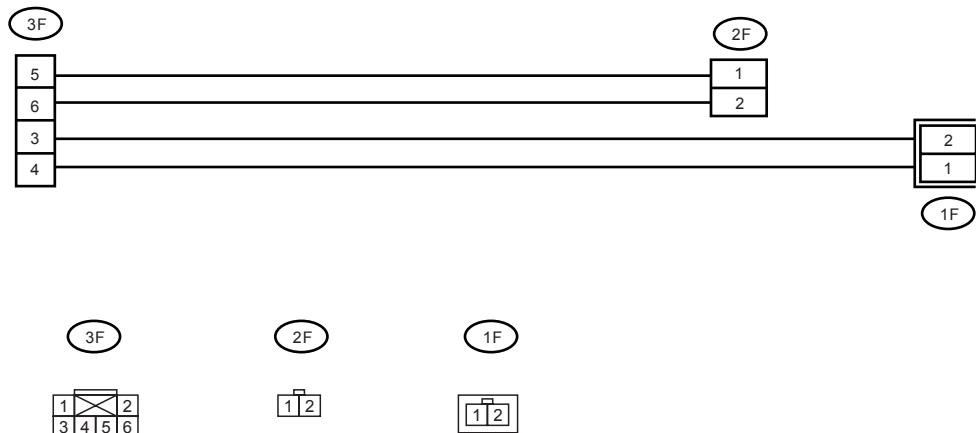



AB-00427

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS G

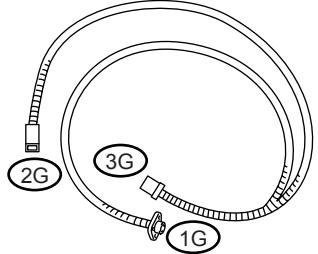
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FC020	98299FC020	TEST HARNESS G	Used when measuring voltage, resistance of side airbag sensor.

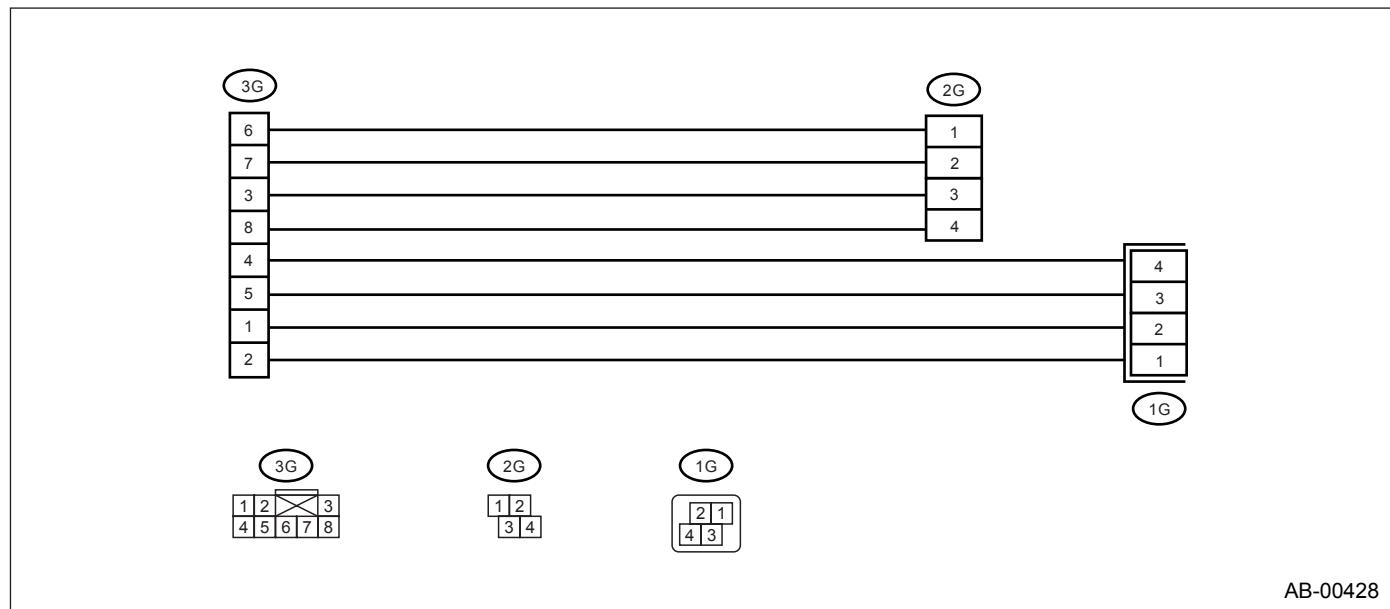


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS H

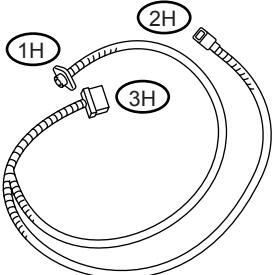
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FA030	98299FA030	TEST HARNESS H	Used when measuring voltage, resistance of front sub-sensor.

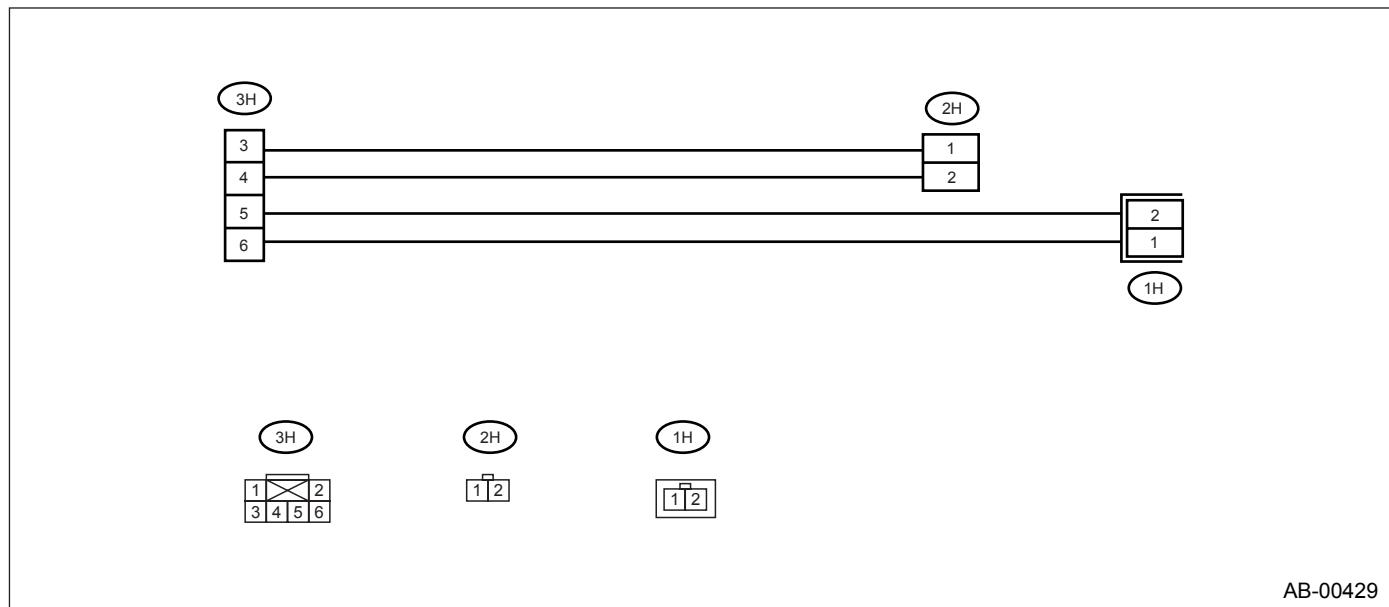


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS L

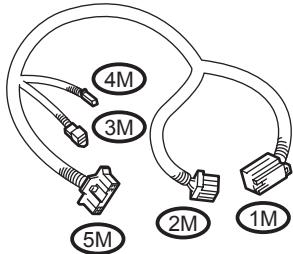ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FE020	98299FE000	TEST HARNESS L	Used when measuring voltage, resistance of seat belt pretensioner.

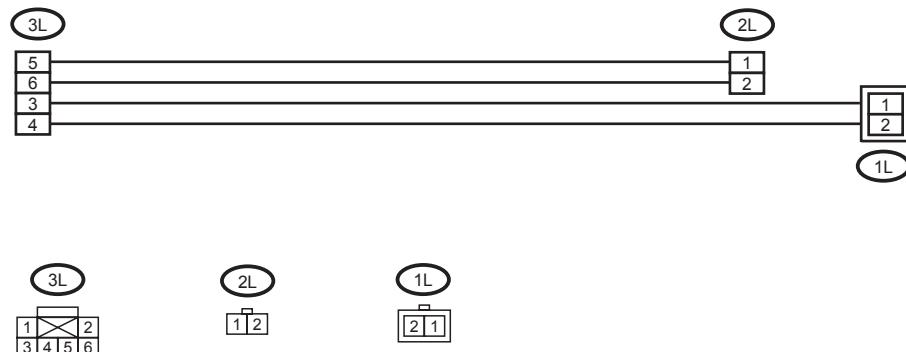



AB-00430

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

- TEST HARNESS I

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	98299FC040	TEST HARNESS I	Used when measuring voltage, resistance of air-bag control module.

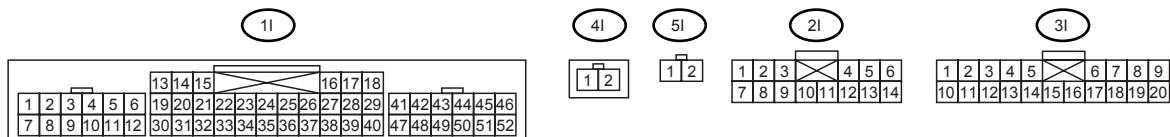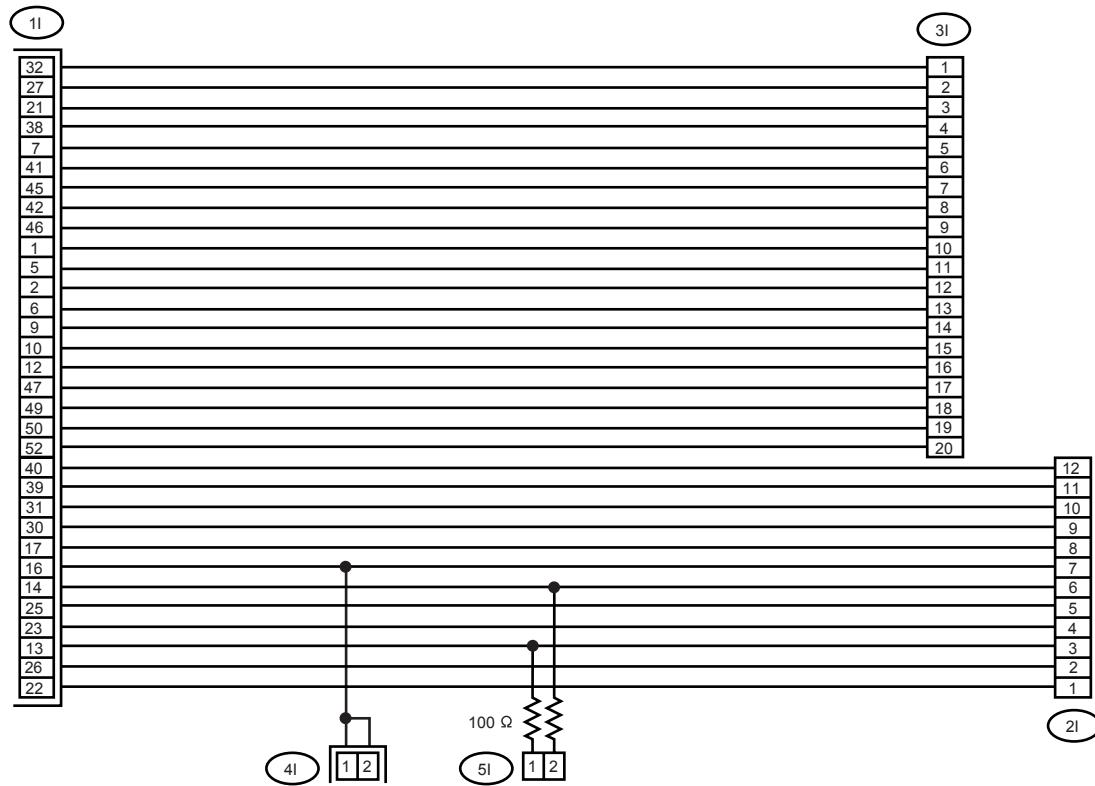



AB-00431

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS I2

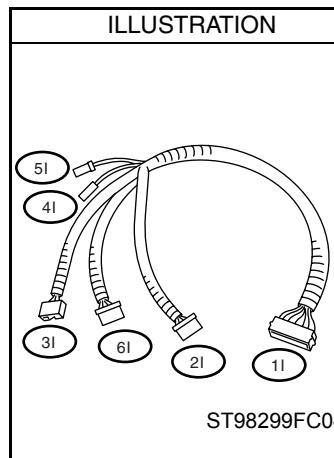ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	98299FC041	TEST HARNESS I2	Used when measuring voltage, resistance of airbag control module.

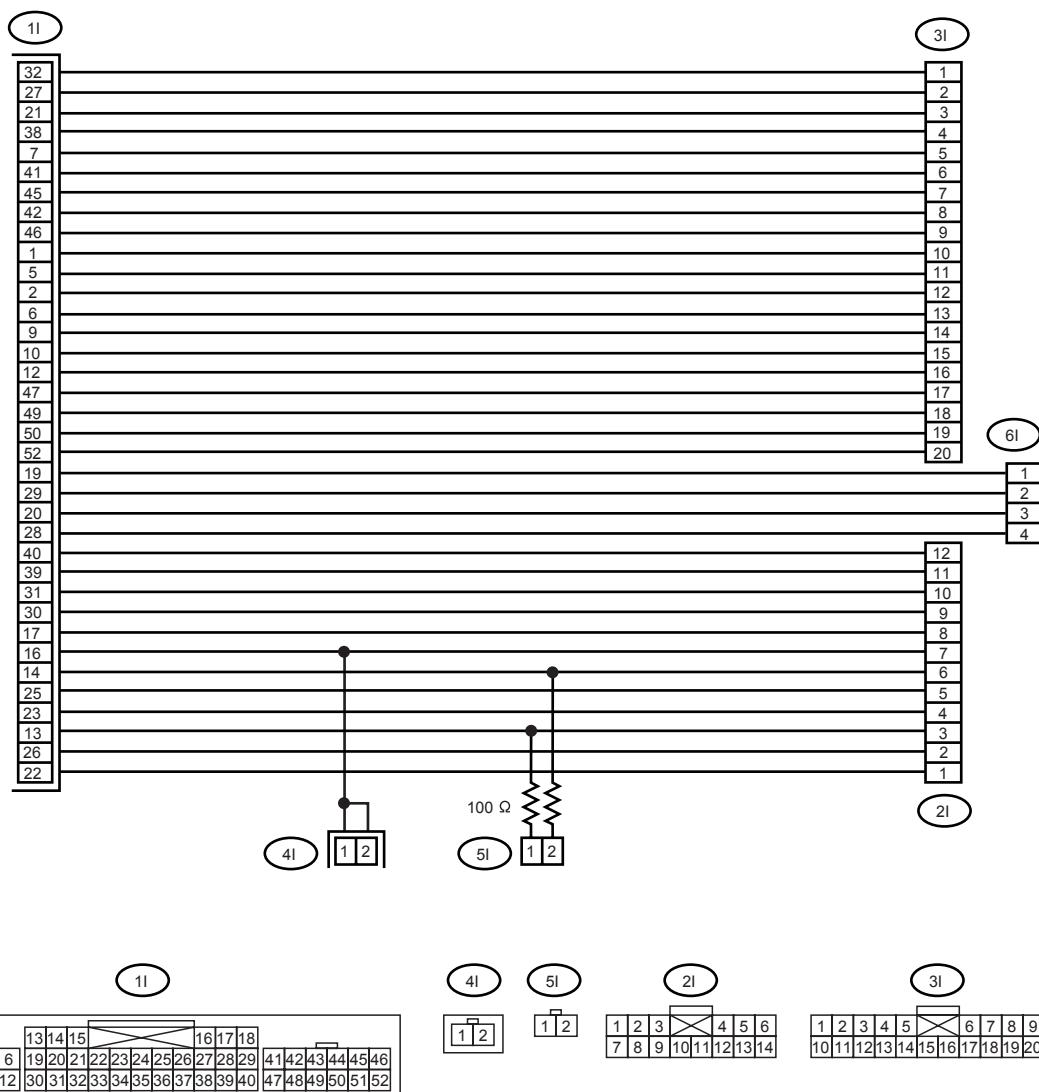



AB-00432

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

• AIRBAG RESISTOR

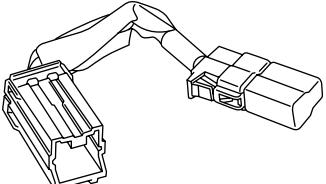ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299PA040	98299PA040	AIRBAG RESISTOR	Used in replacement of airbag module which resistance value is same as airbag module.

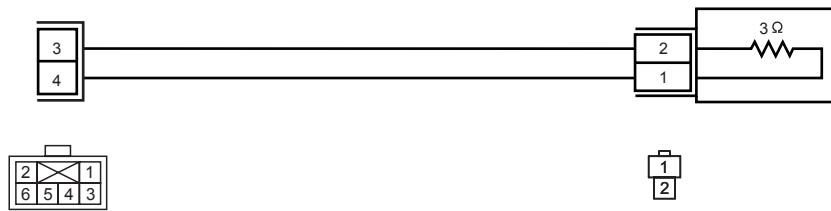

AB-00433

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)
