

Headlight and Tail Light System

LIGHTING SYSTEM

2. Headlight and Tail Light System

A: WIRING DIAGRAM

1. HALOGEN TYPE HEADLIGHT

Refer to "Headlight System" in WI section. <Ref. to WI-80, WIRING DIAGRAM, Headlight System.>

2. HID TYPE HEADLIGHT

Refer to "Headlight System" in WI section. <Ref. to WI-80, WIRING DIAGRAM, Headlight System.>

3. CLEARANCE LIGHT AND ILLUMINATION LIGHT

Refer to "Clearance Light and Illumination Light System" in WI section. <Ref. to WI-87, WIRING DIAGRAM, Clearance Light and Illumination Light System.>

B: INSPECTION

1. LIGHTING SWITCH


Measure the resistance between lighting switch terminals. <Ref. to LI-12, INSPECTION, Combination Switch (Light).>

2. DIMMER & PASSING SWITCH

Measure the resistance between dimmer & passing switch terminals. <Ref. to LI-12, INSPECTION, Combination Switch (Light).>

3. HEADLIGHT RELAY

1) Connect terminal No. 4 to the battery positive terminal and the terminal No. 3 to the battery negative terminal, and check the resistance value between the headlight relay terminals.

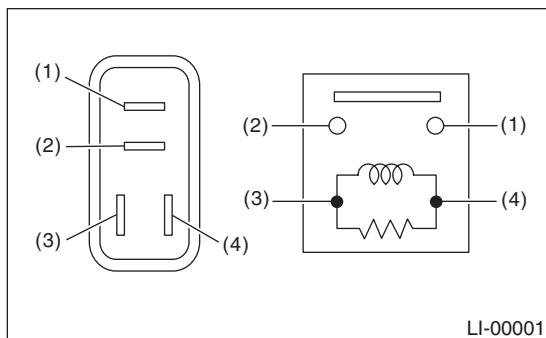


LI-00001

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 MΩ or more

2) Replace the headlight relay if it is found defective.

4. TAIL AND ILLUMINATION RELAY

1) Connect terminal No. 4 to the battery positive terminal and terminal No. 3 to the battery ground terminal, and check the resistance between tail and illumination relay terminals.

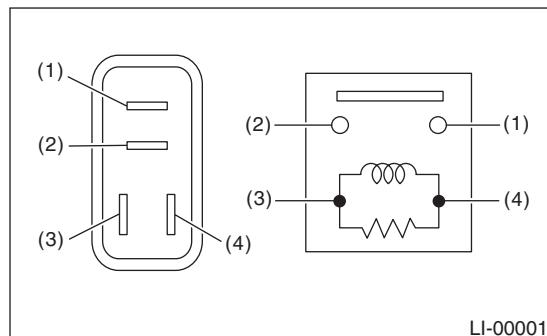

LI-00001

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 MΩ or more

2) Replace the tail and illumination relay if it is found defective.