

6. Back-up Light System


A: WIRING DIAGRAM

Refer to "Back-up Light System" in WI section.
<Ref. to WI-95, WIRING DIAGRAM, Back-up Light System.>

B: INSPECTION

1. BACK-UP LIGHT SWITCH

1) Measure the resistance between back-up light switch terminals.

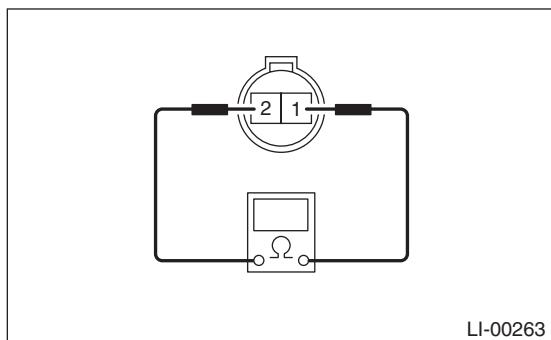

| Switch position | Terminal No. | Specification |
|---|--------------|---------------|
| When shift lever is set in reverse position | 1 and 2 | Less than 1 Ω |
| Other positions | | 1 MΩ or more |

2) Replace the back-up light switch if the inspection result is not within the standard value.

C: NOTE

For operation procedures of each component of the back-up light system, refer to the respective section.

- Rear combination light assembly: <Ref. to LI-25, Rear Combination Light Assembly.>
- Back-up light bulb: <Ref. to LI-30, Back-up Light Bulb.>