

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

17. Diagnostics for Engine Starting Failure

A: PROCEDURE

1. Check of the fuel amount
↓
2. Inspection of starter motor circuit <Ref. to EN(H4DOTC)(diag)-75, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
3. Inspection of ECM power supply and ground line <Ref. to EN(H4DOTC)(diag)-78, CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MODULE (ECM), Diagnostics for Engine Starting Failure.>
↓
4. Inspection of ignition control system <Ref. to EN(H4DOTC)(diag)-80, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>
↓
5. Inspection of fuel pump circuit <Ref. to EN(H4DOTC)(diag)-82, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
6. Inspection of fuel injector circuit <Ref. to EN(H4DOTC)(diag)-83, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>


B: STARTER MOTOR CIRCUIT

CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-63, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4DOTC)(diag)-49, PROCEDURE, Inspection Mode.>.

WIRING DIAGRAM:

- Engine electrical system, without SI-DRIVE <Ref. to WI-32, WITHOUT SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>
- Engine electrical system, with SI-DRIVE <Ref. to WI-48, WITH SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>

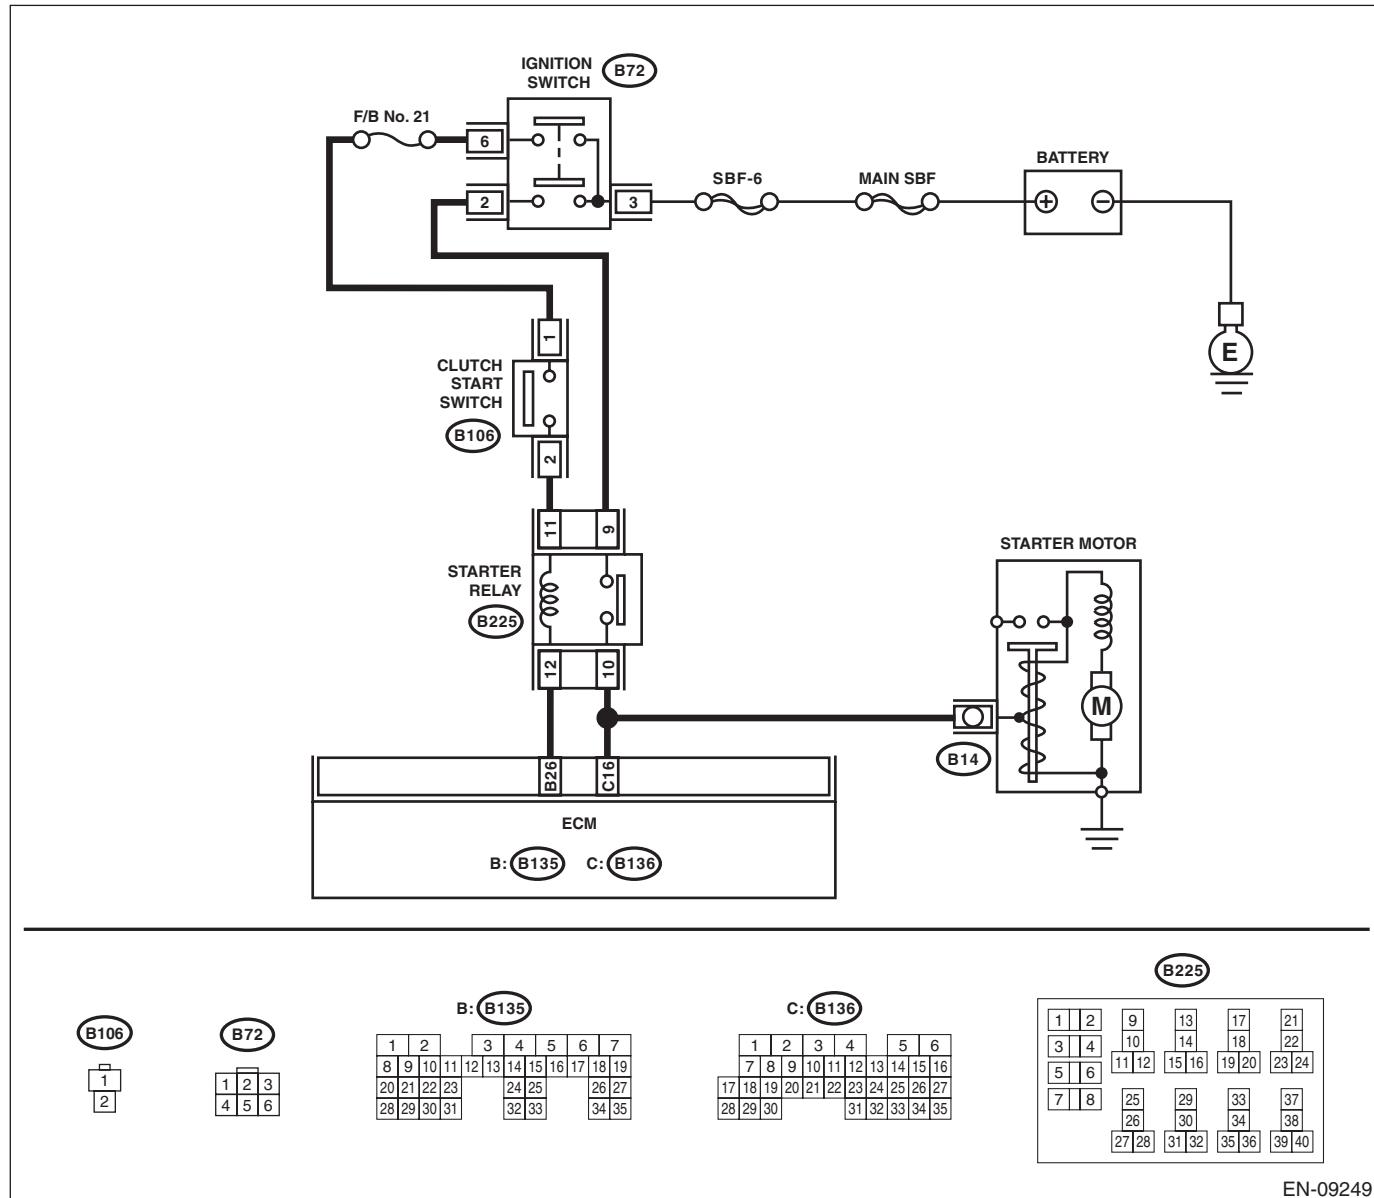

EN-09249

Step	Check	Yes	No
1 CHECK BATTERY. Check the battery. <Ref. to SC(STI)-27, Battery.>	Is the battery OK?	Go to step 2.	Charge or replace the battery. <Ref. to SC(STI)-27, Battery.>
2 CHECK OPERATION OF STARTER MOTOR.	Does the starter motor operate?	Go to step 3.	Go to step 4.

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
3 CHECK DTC.	Is DTC displayed? <Ref. to EN(H4DOTC)(diag)-48, OPERATION, Read Diagnostic Trouble Code (DTC).>	Check the appropriate DTC using the "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)(diag)-87, List of Diagnostic Trouble Code (DTC).>	Check ignition control system. <Ref. to EN(H4DOTC)(diag)-80, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>
4 CHECK INPUT SIGNAL FOR STARTER MOTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from starter motor. 3) Depress the clutch pedal. 4) Turn the ignition switch to START. 5) Measure the voltage between the starter motor connector and the engine ground. <i>Connector & terminal</i> <i>(B14) No. 1 (+) — Engine ground (-):</i>	Is the voltage 10 V or more?	Check the starter motor. <Ref. to SC(STI)-8, Starter.>	Go to step 5.
5 CHECK INPUT SIGNAL FOR STARTER MOTOR. 1) Depress the clutch pedal. 2) Turn the ignition switch to START. 3) Measure the voltage between starter relay connector and chassis ground. <i>Connector & terminal</i> <i>(B225) No. 10 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Repair the open circuit of the harness between starter relay connector and starter motor.	Go to step 6.
6 CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ignition switch. 3) Measure the voltage between ignition switch connector and chassis ground. <i>Connector & terminal</i> <i>(B72) No. 3 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Go to step 7.	Repair the power supply circuit.
7 CHECK IGNITION SWITCH. Measure the resistance between ignition switch terminals after turning the ignition switch to START position. <i>Terminals</i> <i>No. 2 — No. 3:</i> <i>No. 6 — No. 3:</i>	Is the resistance less than 1 Ω?	Go to step 8.	Replace the ignition switch. <Ref. to SL-42, REPLACEMENT, Ignition Key Lock.>
8 CHECK INPUT VOLTAGE OF CLUTCH START SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the clutch start switch connector. 3) Connect the connector to ignition switch. 4) Turn the ignition switch to START. 5) Measure the voltage between the clutch start switch connector and chassis ground. <i>Connector & terminal</i> <i>(B106) No. 1 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Go to step 9.	Check the following item and repair if necessary. <ul style="list-style-type: none">• Blown out of fuse (F/B No. 21)• Open or short circuit to ground in harness between ignition switch connector and clutch start switch connector

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
9 CHECK HARNESS BETWEEN STARTER RELAY CONNECTOR AND CLUTCH START SWITCH CONNECTOR. 1) Turn the ignition switch to OFF. 2) Remove the starter relay. 3) Measure the resistance of harness between starter relay connector and clutch start switch connector. Connector & terminal (B225) No. 11 — (B106) No. 2:	Is the resistance less than 1 Ω?	Go to step 10.	Repair the open circuit in harness between starter relay connector and clutch start switch connector.
10 CHECK INPUT VOLTAGE OF STARTER RELAY. 1) Connect the connector to the clutch start switch. 2) Depress the clutch pedal. 3) Turn the ignition switch to START. 4) Measure the voltage between starter relay connector and chassis ground. Connector & terminal (B225) No. 11 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 11.	Replace the clutch start switch. <Ref. to CL-33, Clutch Switch.>
11 CHECK INPUT VOLTAGE OF STARTER RELAY. 1) Turn the ignition switch to START. 2) Measure the voltage between starter relay connector and chassis ground. Connector & terminal (B225) No. 9 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 12.	Repair the open circuit of harness between starter relay connector and ignition switch connector.
12 CHECK STARTER RELAY. 1) Connect the battery to starter relay terminals No. 11 and No. 12. 2) Measure the resistance between starter relay terminals. Terminals No. 9 — No. 10:	Is the resistance less than 1 Ω?	Go to step 13.	Replace the starter relay.
13 CHECK HARNESS BETWEEN ECM AND STARTER RELAY CONNECTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance of harness between ECM connector and starter relay connector. Connector & terminal (B136) No. 16 — (B225) No. 10:	Is the resistance less than 1 Ω?	Go to step 14.	Repair the open circuit of harness between ECM connector and starter relay connector.
14 CHECK ECM INPUT VOLTAGE. 1) Install the starter relay. 2) Depress the clutch pedal. 3) Turn the ignition switch to START. 4) Measure the voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 26 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Check the ECM power supply and ground line. <Ref. to EN(H4DOTC)(diag)-78, CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MODULE (ECM), Diagnostics for Engine Starting Failure.>	Repair the open circuit of harness between ECM connector and starter relay connector.

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)


C: CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MODULE (ECM)

CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-63, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4DOTC)(diag)-49, PROCEDURE, Inspection Mode.>.

WIRING DIAGRAM:

- Engine electrical system, without SI-DRIVE <Ref. to WI-32, WITHOUT SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>
 - Engine electrical system, with SI-DRIVE <Ref. to WI-48, WITH SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>

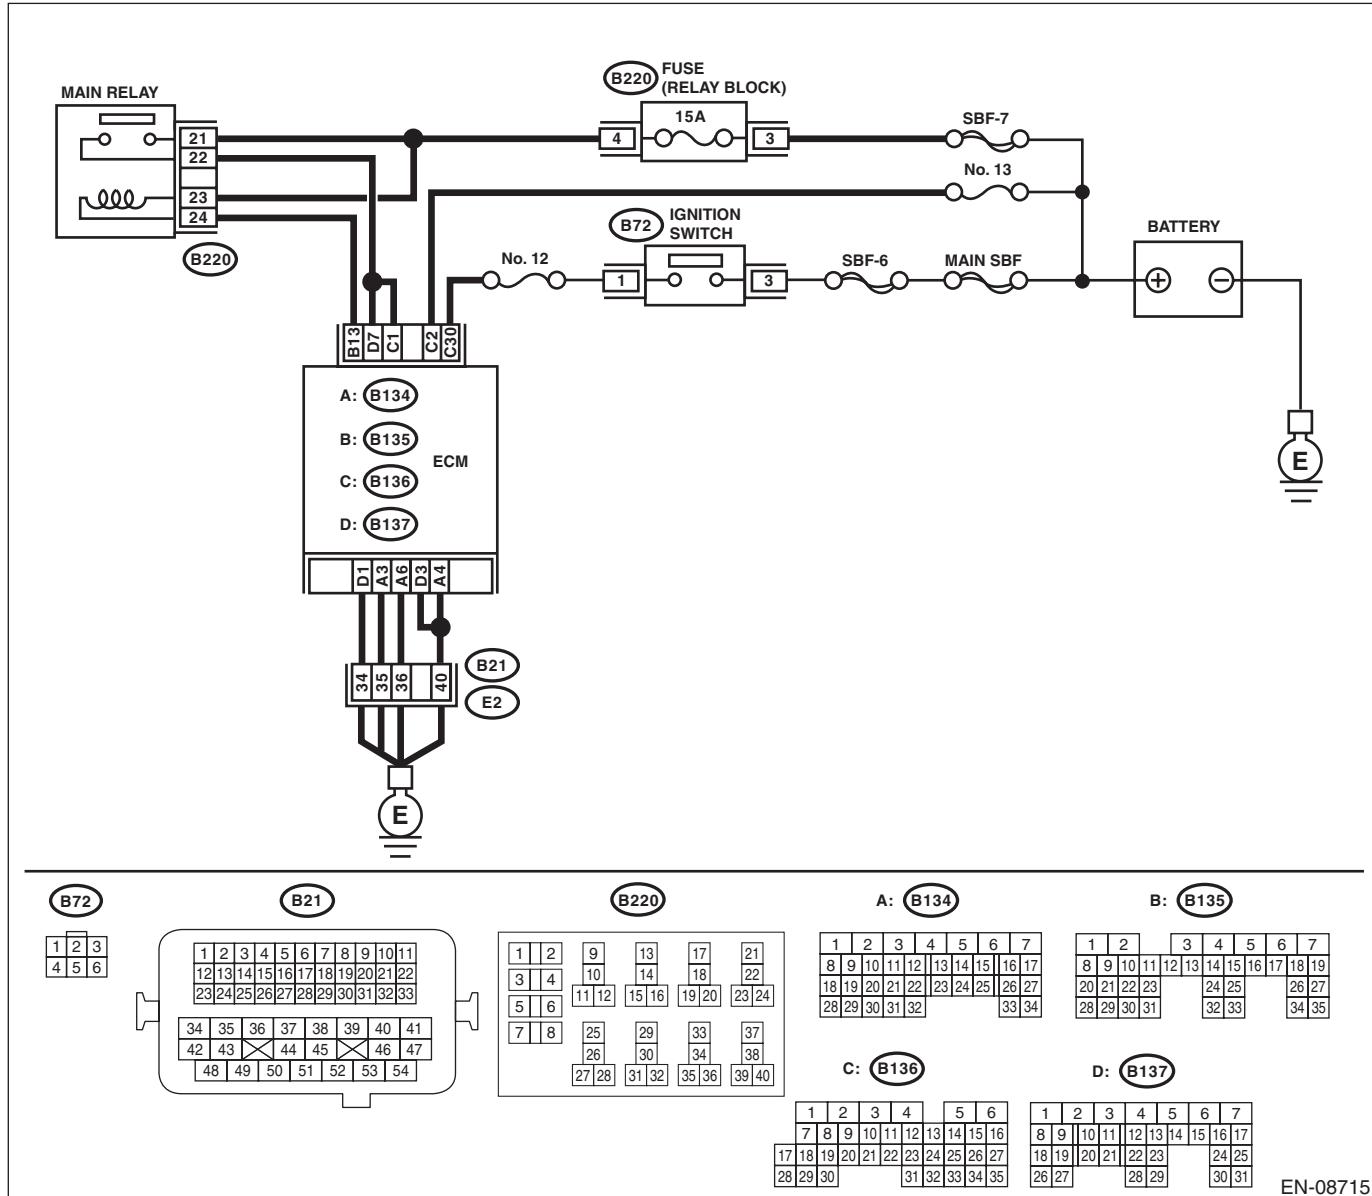

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK MAIN RELAY. 1) Turn the ignition switch to OFF. 2) Remove the main relay. 3) Connect the battery to main relay terminals No. 23 and No. 24. 4) Measure the resistance between main relay terminals. Terminals No. 21 — No. 22:	Is the resistance less than 1 Ω?	Go to step 2.	Replace the main relay. <Ref. to FU(STI)-60, Main Relay.> <Ref. to FU(w/o STI)-58, Main Relay.>
2 CHECK GROUND CIRCUIT FOR ECM. 1) Disconnect the connector from ECM. 2) Measure the resistance of harness between ECM connector and chassis ground. Connector & terminal (B134) No. 3 — Chassis ground: (B134) No. 4 — Chassis ground: (B134) No. 6 — Chassis ground: (B137) No. 1 — Chassis ground: (B137) No. 3 — Chassis ground:	Is the resistance less than 5 Ω?	Go to step 3.	Repair the harness and connector. NOTE: In this case, repair the following item: <ul style="list-style-type: none">• Open circuit of harness between ECM connector and engine ground• Poor contact of coupling connector
3 CHECK INPUT VOLTAGE OF ECM. 1) Turn the ignition switch to ON. 2) Measure the voltage between ECM connector and chassis ground. Connector & terminal (B136) No. 2 (+) — Chassis ground (-): (B136) No. 30 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 4.	Repair the open or ground short circuit of harness of power supply circuit.
4 CHECK INPUT VOLTAGE OF MAIN RELAY. Measure the voltage between main relay connector and chassis ground. Connector & terminal (B220) No. 21 (+) — Chassis ground (-): (B220) No. 23 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 5.	Repair the open or ground short circuit of harness of power supply circuit.
5 CHECK INPUT VOLTAGE OF ECM. 1) Turn the ignition switch to OFF. 2) Install the main relay. 3) Turn the ignition switch to ON. 4) Measure the voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 13 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 6.	Repair the open or ground short circuit of harness between ECM connector and main relay connector.
6 CHECK INPUT VOLTAGE OF ECM. 1) Turn the ignition switch to OFF. 2) Connect the connector to ECM. 3) Turn the ignition switch to ON. 4) Measure the voltage between ECM connector and chassis ground. Connector & terminal (B136) No. 1 (+) — Chassis ground (-): (B137) No. 7 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Check ignition control system. <Ref. to EN(H4DOTC)(diag)-80, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Repair the harness and connector. NOTE: In this case, repair the following item: <ul style="list-style-type: none">• Open circuit in harness between ECM connector and main relay connector• Poor contact of main relay connector• Poor contact of ECM connector

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)


D: IGNITION CONTROL SYSTEM

CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-63, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4DOTC)(diag)-49, PROCEDURE, Inspection Mode.>.

WIRING DIAGRAM:

- Engine electrical system, without SI-DRIVE <Ref. to WI-32, WITHOUT SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>
- Engine electrical system, with SI-DRIVE <Ref. to WI-48, WITH SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>

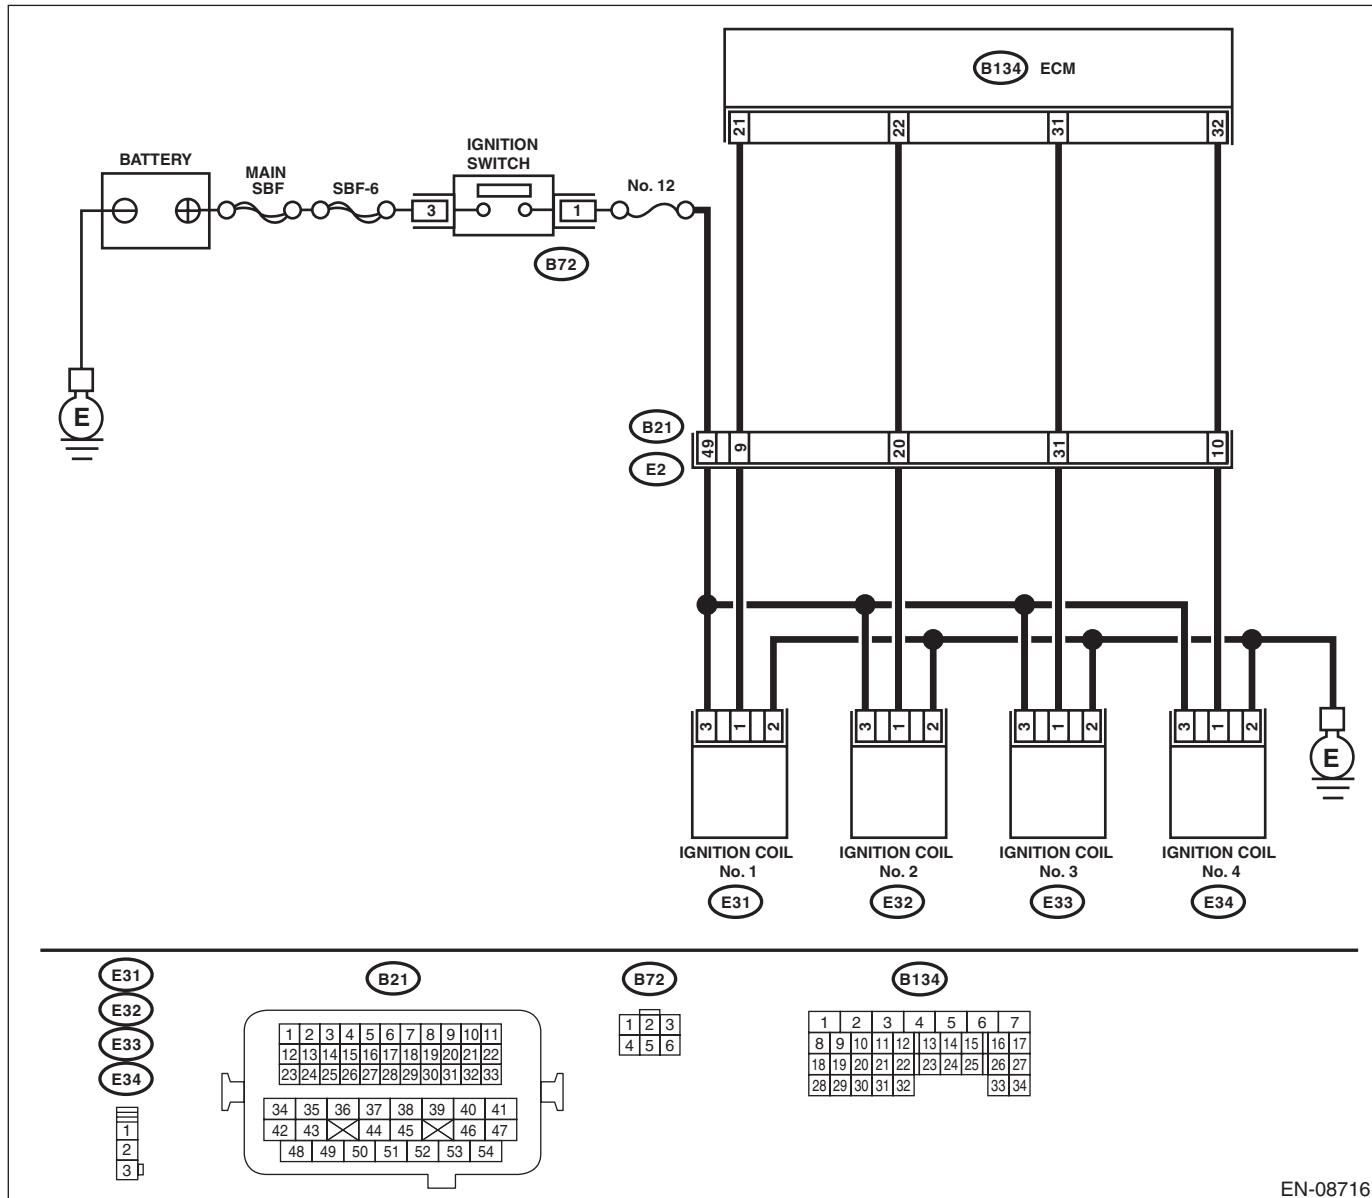

EN-08716

Step	Check	Yes	No
1 CHECK SPARK PLUG CONDITION. 1) Remove the spark plug. <Ref. to IG(STI)-4, REMOVAL, Spark Plug.> <Ref. to IG(w/o STI)-5, REMOVAL, Spark Plug.> 2) Check the spark plug condition. <Ref. to IG(STI)-5, INSPECTION, Spark Plug.> <Ref. to IG(w/o STI)-6, INSPECTION, Spark Plug.>	Is the spark plug condition normal?	Go to step 2.	Replace the spark plug. <Ref. to IG(STI)-4, Spark Plug.> <Ref. to IG(w/o STI)-5, Spark Plug.>

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
2 CHECK IGNITION SYSTEM FOR SPARKS. 1) Connect the spark plug to ignition coil. 2) Release the fuel pressure. <Ref. to FU(STI)-67, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.> <Ref. to FU(w/o STI)-65, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.> 3) Contact the spark plug thread portion to engine. 4) While opening the throttle valve fully, crank the engine to check that spark occurs at each cylinder.	Does spark occur at each cylinder?	Check fuel pump system. <Ref. to EN(H4DOTC)(diag)-82, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step 3.
3 CHECK IGNITION COIL POWER SUPPLY CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ignition coil. 3) Turn the ignition switch to ON. 4) Measure the power supply voltage between ignition coil connector and engine ground. <i>Connector & terminal</i> (E31) No. 3 (+) — Engine ground (-): (E32) No. 3 (+) — Engine ground (-): (E33) No. 3 (+) — Engine ground (-): (E34) No. 3 (+) — Engine ground (-):	Is the voltage 10 V or more?	Go to step 4.	Repair the harness and connector. NOTE: In this case, repair the following item: <ul style="list-style-type: none">• Open circuit or short circuit to ground in power supply circuit• Poor contact of coupling connector• Blown out of fuse
4 CHECK HARNESS OF IGNITION COIL GROUND CIRCUIT. 1) Turn the ignition switch to OFF. 2) Measure the resistance between ignition coil connector and engine ground. <i>Connector & terminal</i> (E31) No. 2 — Engine ground: (E32) No. 2 — Engine ground: (E33) No. 2 — Engine ground: (E34) No. 2 — Engine ground:	Is the resistance less than 1 Ω ?	Go to step 5.	Repair the open circuit in harness between ignition coil connector and engine ground.
5 CHECK HARNESS BETWEEN ECM AND IGNITION COIL CONNECTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM and ignition coil. 3) Measure the resistance of harness between ECM connector and ignition coil connector. <i>Connector & terminal</i> (B134) No. 21 — (E31) No. 1: (B134) No. 22 — (E32) No. 1: (B134) No. 31 — (E33) No. 1: (B134) No. 32 — (E34) No. 1:	Is the resistance less than 1 Ω ?	Go to step 6.	Repair the harness and connector. NOTE: In this case, repair the following item: <ul style="list-style-type: none">• Open circuit of harness between ECM connector and the ignition coil connector• Poor contact of coupling connector
6 CHECK HARNESS BETWEEN ECM AND IGNITION COIL CONNECTOR. Measure the resistance of harness between ECM connector and engine ground. <i>Connector & terminal</i> (B134) No. 21 — Engine ground: (B134) No. 22 — Engine ground: (B134) No. 31 — Engine ground: (B134) No. 32 — Engine ground:	Is the resistance 1 $M\Omega$ or more?	Go to step 7.	Repair the ground short circuit of harness between ECM connector and ignition coil connector.

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK FOR POOR CONTACT. Check for poor contact of ECM connector.	Is there poor contact of ECM connector?	Repair the poor contact of ECM connector.	Replace the ignition coil. <Ref. to IG(STI)-7, Ignition Coil.> <Ref. to IG(w/o STI)-8, Ignition Coil.>

E: FUEL PUMP CIRCUIT

CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-63, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4DOTC)(diag)-49, PROCEDURE, Inspection Mode.>.

Step	Check	Yes	No
1 CHECK OPERATING SOUND OF FUEL PUMP. Make sure that the fuel pump operates for two seconds when turning the ignition switch to ON. NOTE: Fuel pump operation can be executed using the Subaru Select Monitor. For the procedures, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H4DOTC)(diag)-64, Compulsory Valve Operation Check Mode.>	Does the fuel pump emit operating sound?	Check the fuel injector circuit. <Ref. to EN(H4DOTC)(diag)-83, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>	Display the DTC. <Ref. to EN(H4DOTC)(diag)-48, OPERATION, Read Diagnostic Trouble Code (DTC).>


F: FUEL INJECTOR CIRCUIT

CAUTION:

- Check or repair only faulty parts.
 - After servicing or replacing faulty parts, perform Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-63, OPERATION, Clear Memory Mode.>, and Inspection Mode <Ref. to EN(H4DOTC)(diag)-49, PROCEDURE, Inspection Mode.>.

WIRING DIAGRAM:

- Engine electrical system, without SI-DRIVE <Ref. to WI-32, WITHOUT SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>
 - Engine electrical system, with SI-DRIVE <Ref. to WI-48, WITH SI-DRIVE, WIRING DIAGRAM, Engine Electrical System.>

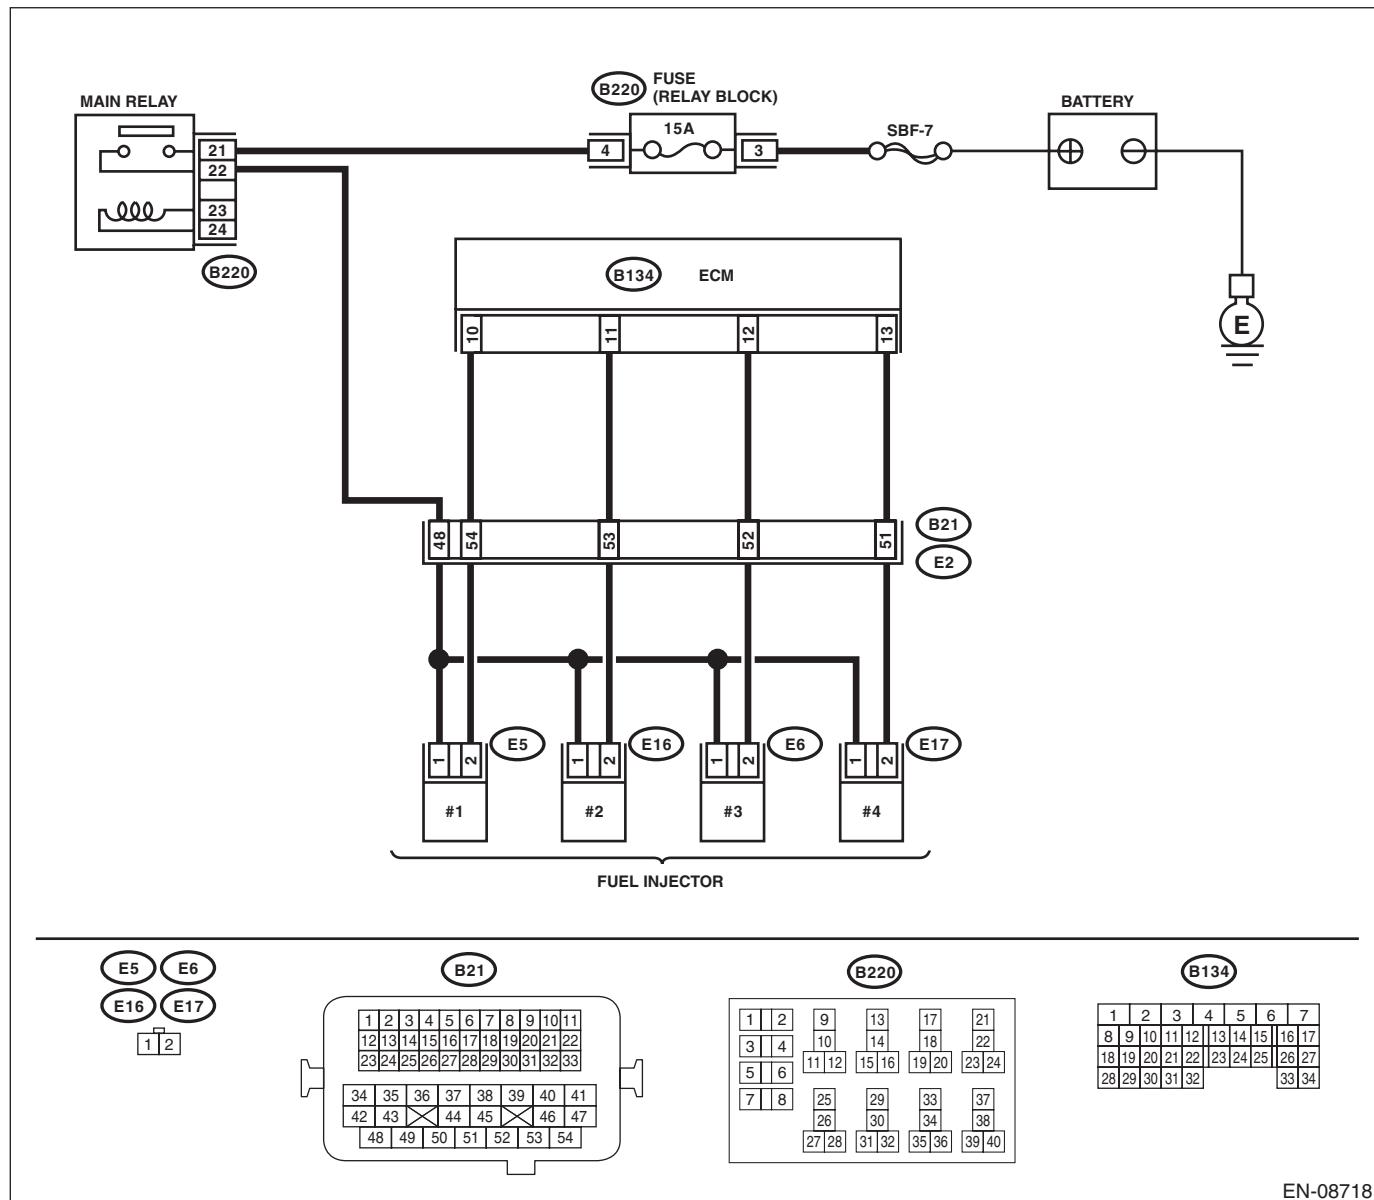

Diagnostics for Engine Starting Failure

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK OPERATION OF EACH FUEL INJECTOR. While cranking the engine, check each fuel injector emits operating sound. Use a sound scope or attach a screwdriver to the injector for this check.	Does the fuel injector emit operating sound?	Check the fuel pressure. <Ref. to ME(STI)-25, INSPECTION, Fuel Pressure.> <Ref. to ME(w/o STI)-24, INSPECTION, Fuel Pressure.>	Go to step 2.
2 CHECK POWER SUPPLY TO EACH FUEL INJECTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from fuel injector. 3) Turn the ignition switch to ON. 4) Measure the power supply voltage between fuel injector connector and the engine ground. <i>Connector & terminal</i> #1 (E5) No. 1 (+) — Engine ground (-): #2 (E16) No. 1 (+) — Engine ground (-): #3 (E6) No. 1 (+) — Engine ground (-): #4 (E17) No. 1 (+) — Engine ground (-):	Is the voltage 10 V or more?	Go to step 3.	Repair the harness and connector. NOTE: In this case, repair the following item: <ul style="list-style-type: none">• Open circuit in harness between main relay connector and fuel injector connector• Poor contact of main relay connector• Poor contact of coupling connector
3 CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance of harness between ECM connector and fuel injector connector. <i>Connector & terminal</i> #1 (B134) No. 10 — (E5) No. 2: #2 (B134) No. 11 — (E16) No. 2: #3 (B134) No. 12 — (E6) No. 2: #4 (B134) No. 13 — (E17) No. 2:	Is the resistance less than 1 Ω ?	Go to step 4.	Repair the harness and connector. NOTE: In this case, repair the following item: <ul style="list-style-type: none">• Open circuit in harness between ECM connector and fuel injector connector• Poor contact of coupling connector
4 CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR. Measure the resistance of harness between ECM connector and chassis ground. <i>Connector & terminal</i> #1 (B134) No. 10 — Chassis ground: #2 (B134) No. 11 — Chassis ground: #3 (B134) No. 12 — Chassis ground: #4 (B134) No. 13 — Chassis ground:	Is the resistance 1 $M\Omega$ or more?	Go to step 5.	Repair the short circuit to ground in harness between ECM connector and fuel injector connector.
5 CHECK EACH FUEL INJECTOR. Measure the resistance between each fuel injector terminals. <i>Terminals</i> No. 1 — No. 2:	Is the resistance 5 — 20 Ω ?	Go to step 6.	Replace the faulty fuel injector. <Ref. to FU(STI)-45, Fuel Injector.> <Ref. to FU(w/o STI)-45, Fuel Injector.>
6 CHECK FOR POOR CONTACT. Check for poor contact of ECM connector.	Is there poor contact of ECM connector?	Repair the poor contact of ECM connector.	Inspection using "General Diagnostic Table". <Ref. to EN(H4DOTC)(diag)-471, INSPECTION, General Diagnostic Table.>