






2. Oil Pressure System

A: WIRING DIAGRAM

Oil pressure warning system <Ref. to WI-318, WIRING DIAGRAM, Oil Pressure Warning Light System. >

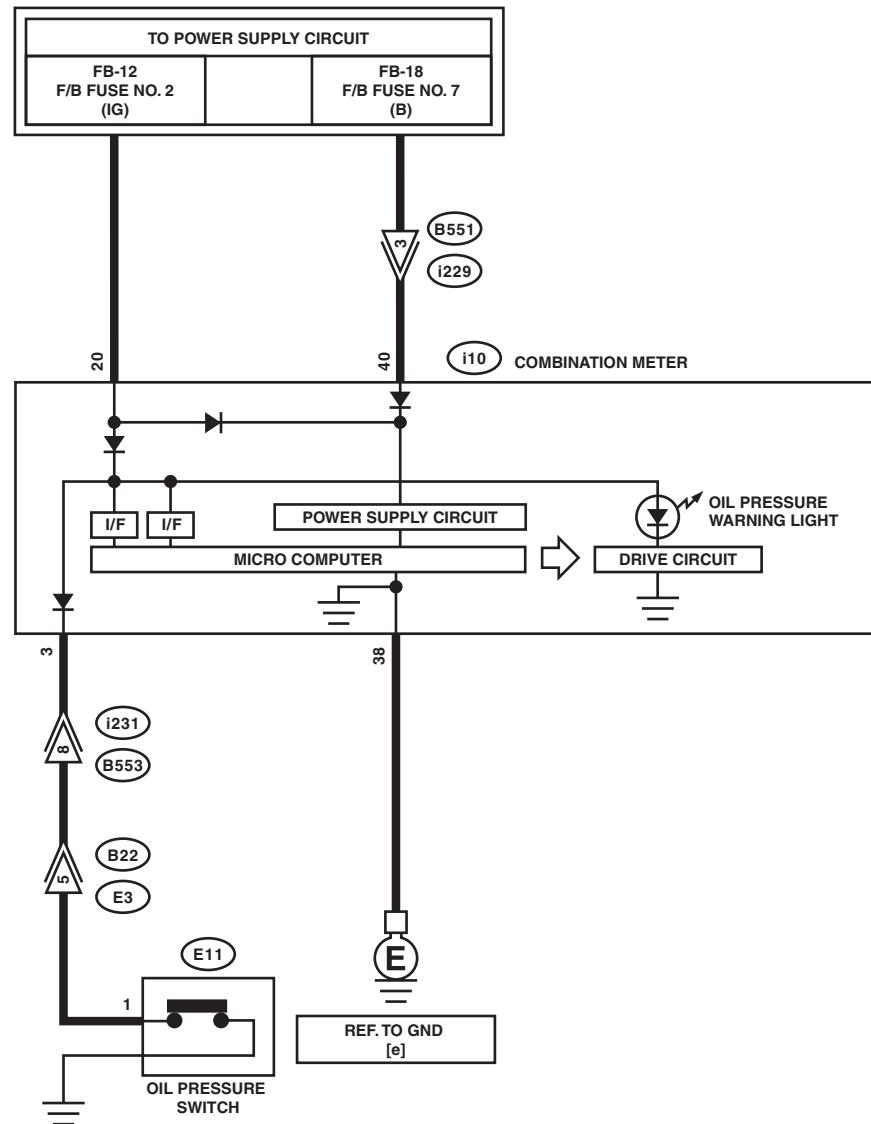

LU-03205

Oil Pressure System

LUBRICATION

B: INSPECTION

Step	Check	Yes	No
1 CHECK COMBINATION METER. 1) Turn the ignition switch to ON (engine OFF). 2) Check other warning lights.	Does the warning light illuminate?	Go to step 2.	Repair or replace the combination meter. <Ref. to IDI-9, INSPECTION, Combination Meter System.>
2 CHECK POWER SUPPLY TO OIL PRESSURE SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from oil pressure switch. 3) Turn the ignition switch to ON. 4) Measure the voltage between oil pressure switch harness connector and chassis ground. <i>Connector & terminal (E11) No. 1 (+) — Chassis ground (-):</i>	Is the voltage 10 V or more?	Replace the oil pressure switch. <Ref. to LU(STI)-22, Oil Pressure Switch.>	Go to step 3.
3 CHECK COMBINATION METER. Perform the self-diagnosis of combination meter to check if there are any faults in the combination meter. <Ref. to IDI-6, OPERATION, Combination Meter System.>	Is combination meter OK?	Repair the harness and connector. NOTE: In this case, repair the following item: <ul style="list-style-type: none">• Open circuit of harness between combination meter and oil pressure switch• Poor contact of combination meter connector• Poor contact of oil pressure switch connector• Poor contact of coupling connector	Repair or replace the combination meter. <Ref. to IDI-9, INSPECTION, Combination Meter System.>