



## 21. Oxygen Sensor Relay

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the bolts and nuts securing the fuse block and move down the fuse block.

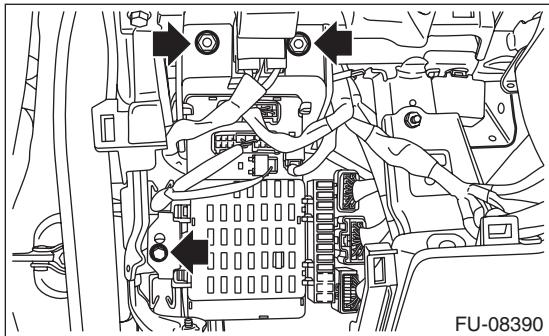

- 4) Remove the oxygen sensor relay from the relay block.

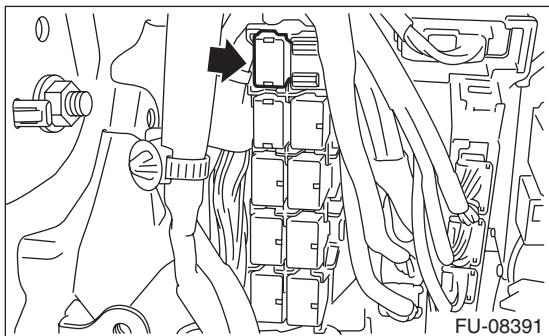

### B: INSTALLATION


Install in the reverse order of removal.

#### *Tightening torque:*

**7.5 N·m (0.8 kgf·m, 5.5 ft-lb)**

### C: INSPECTION

- 1) Check that the oxygen sensor relay has no deformation, cracks or other damages.
- 2) Measure the resistance between oxygen sensor relay terminals.

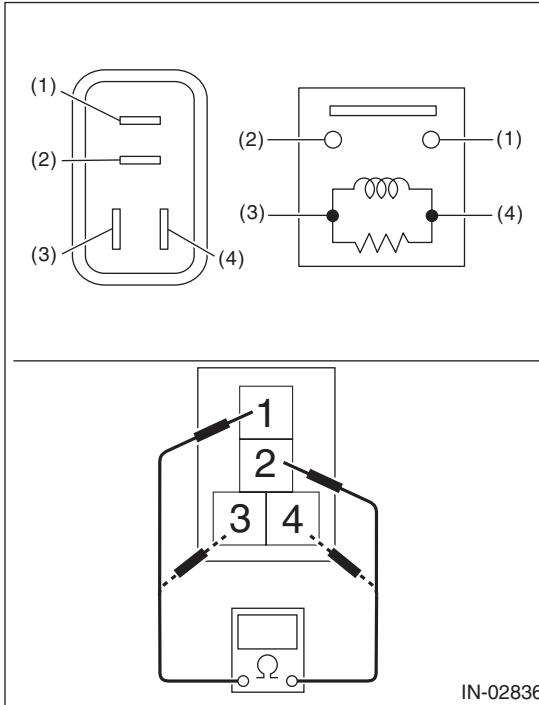


IN-02836

Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	130.4 — 230.8 Ω (when 20°C (68°F))

# Oxygen Sensor Relay

## FUEL INJECTION (FUEL SYSTEMS)

3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between oxygen sensor relay terminals.

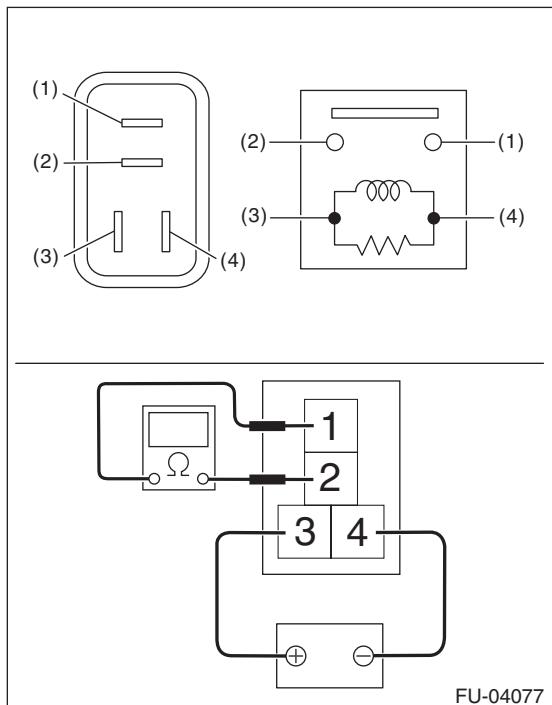

Terminal No.	Standard
1 and 2	Less than 1 Ω