


3. Intake Manifold


A: REMOVAL

1. INTAKE MANIFOLD


- 1) Release the fuel pressure. <Ref. to FU(H4SO)-46, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Disconnect the ground cable from battery.

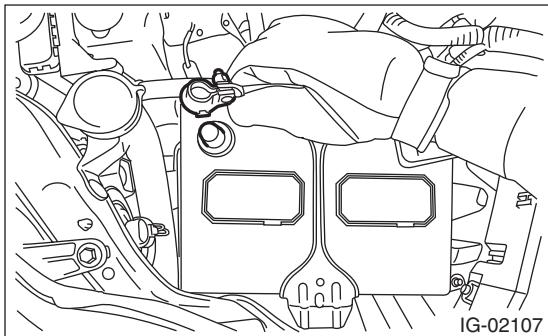

- 3) Open the fuel filler lid and remove the fuel filler cap.
- 4) Remove the air intake boot assembly. <Ref. to IN(H4SO)-8, REMOVAL, Air Intake Boot.>
- 5) Disconnect the connector (A) from the ignition coil of #3 cylinder.
- 6) Disconnect the PCV hose (B) from the rocker cover RH.

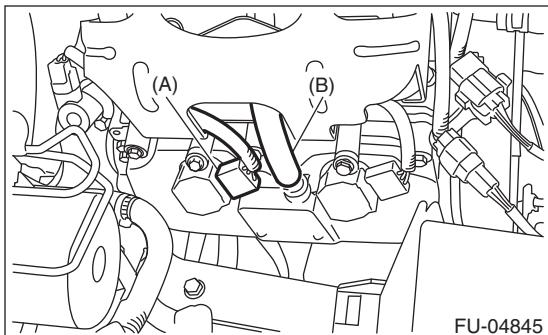


- 7) Remove the intake manifold protector RH.

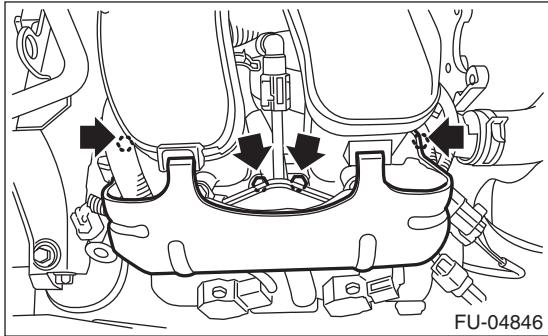

- 8) Remove the fuel injector (A).

- 9) Disconnect the fuel delivery pipe (B) from fuel gallery RH.

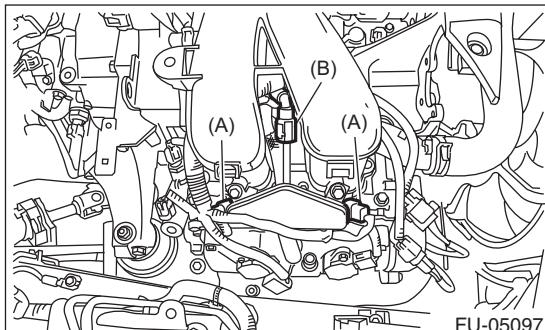

- 10) Disconnect the fuel delivery hose (A) and evaporation hose (B).


CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

(1) Attach ST to the fuel delivery pipe and push ST in the direction of arrow mark to disconnect the quick connector of the fuel delivery hose (A).

ST 42099AE000 QUICK CONNECTOR RELEASE


(2) Remove the clip and disconnect the evaporation hose (B) from the pipe.

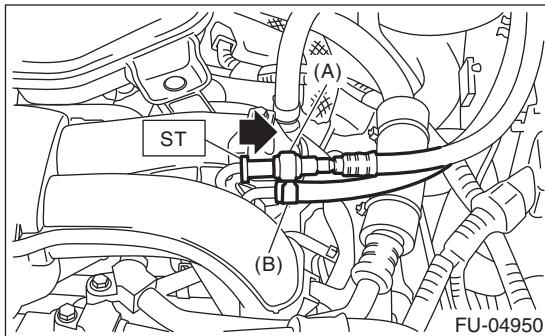

- 11) Remove the generator cable clip (A) from the intake manifold protector LH.

- 12) Remove the oil filler pipe (B) from the rocker cover LH.


- 13) Disconnect the brake booster vacuum hose (C).

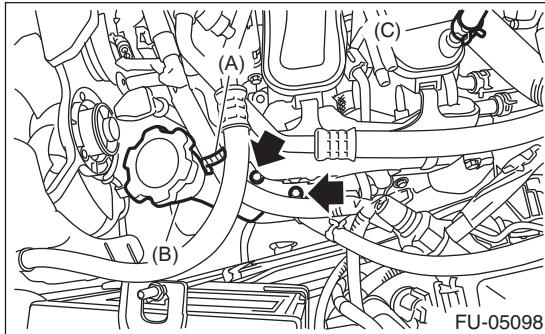


Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)


- 14) Disconnect the connector (A) from the ignition coil of #2 cylinder.
- 15) Disconnect the PCV hose (B) from the rocker cover LH.

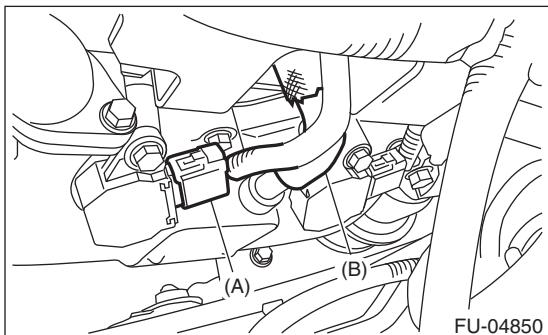


- 16) Remove the intake manifold protector LH.

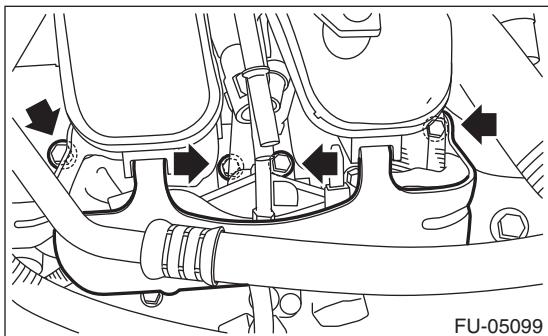


- 17) Disconnect the fuel injector connector (A) and disconnect the fuel delivery pipe (B) from fuel gallery LH.

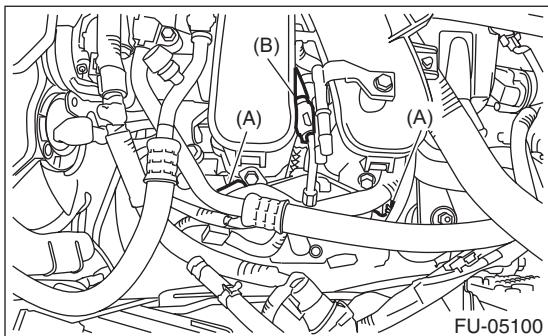


- 18) Remove the clip (A) which holds the engine harness to intake manifold.
- 19) Remove the bolts (B) on the LH side which secure the multi-function duct assembly to intake manifold.

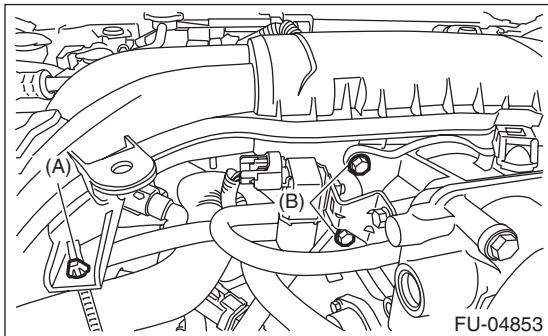


- 20) Remove the bolt (A) on RH side securing multi-function duct assembly to the intake manifold.

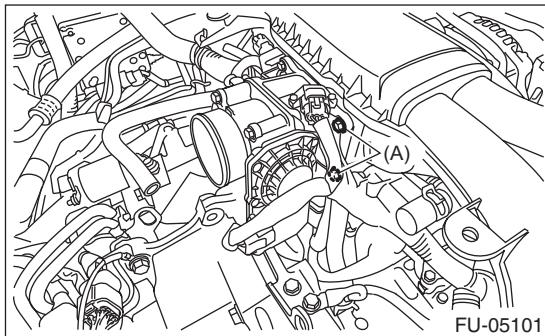

- 21) Remove the intake manifold from cylinder head.
- 22) Remove the fuel gallery RH and fuel injector from the intake manifold.

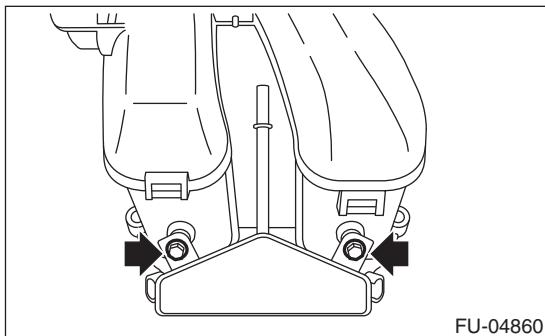


- 23) Remove the fuel gallery LH, fuel pipe and fuel injector from the intake manifold.

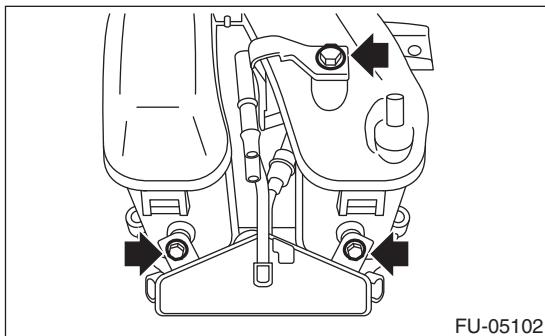

2. MULTI-FUNCTION DUCT ASSEMBLY


- 1) Release the fuel pressure. <Ref. to FU(H4SO)-46, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Disconnect the ground cable from battery.

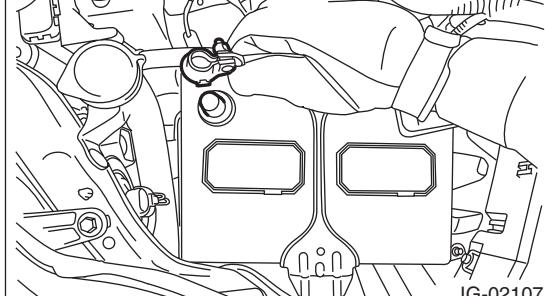


Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)


- 3) Open the fuel filler lid and remove the fuel filler cap.
- 4) Lift up the vehicle.
- 5) Remove the under cover. <Ref. to EI-35, REMOVAL, Front Under Cover.>
- 6) Drain approximately 3.0 l (3.2 US qt, 2.6 Imp qt) of engine coolant. <Ref. to CO(H4SO)-14, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 7) Lower the vehicle.
- 8) Remove the intake manifold. <Ref. to FU(H4SO)-16, INTAKE MANIFOLD, REMOVAL, Intake Manifold.>
- 9) Remove the bolt, and disconnect the bulkhead harness connector from the engine harness connector and rear engine hanger.

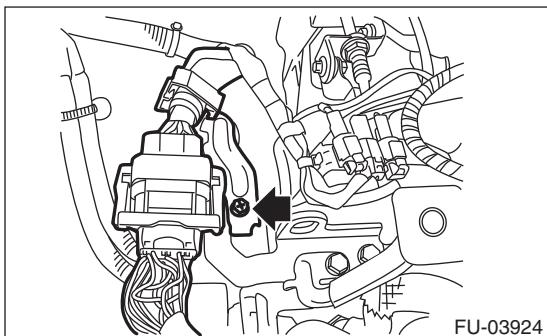


- 10) Slide the engine harness connector in the direction of the arrow and remove it from the rear engine hanger.

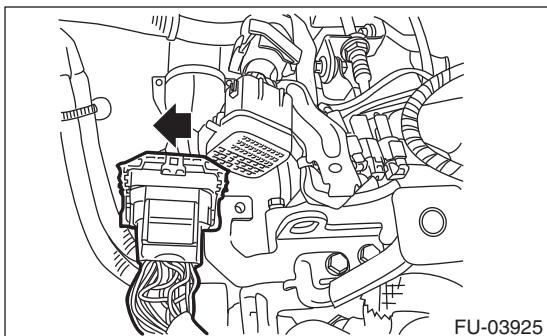


- 11) Disconnect the connector from knock sensor.

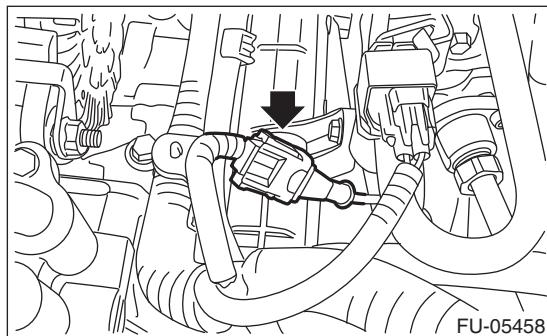


- 12) Disconnect the water hose (A) and EGR pipe (B) from the LH side of multi-function duct assembly.

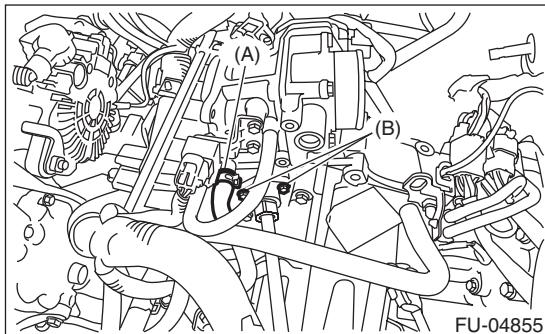

- 13) Disconnect the PCV hose (A) and water hose (B) from the RH side of multi-function duct assembly.

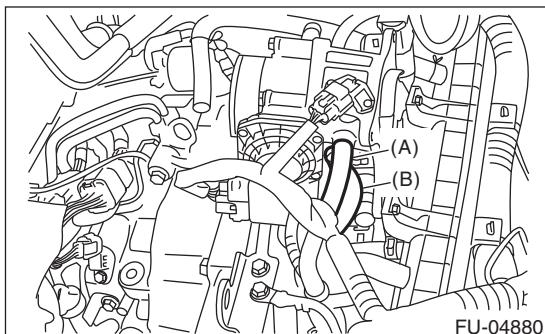


- 14) Disconnect the connectors from the engine coolant temperature sensor (A), oil pressure switch (B) and crankshaft position sensor (C).

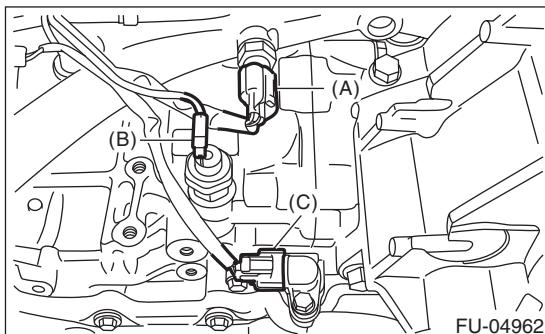


- 15) Disconnect the connectors from front oxygen (A/F) sensor (A) and rear oxygen sensor (B).

- 16) Disconnect the connector (C) from the ignition coil of #1 cylinder.

- 17) Disconnect the connectors from oil switching solenoid valve RH (D), oil temperature sensor RH (E) and variable valve lift diagnosis switch (F), and remove the bolt to detach the ground terminal (G).

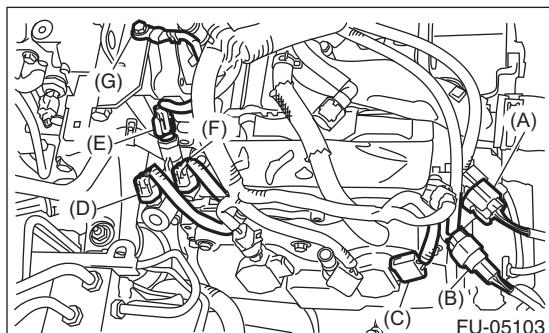


18) Slide the front oxygen (A/F) sensor connector and rear oxygen sensor connector in the direction of the arrow and remove them from the bracket.

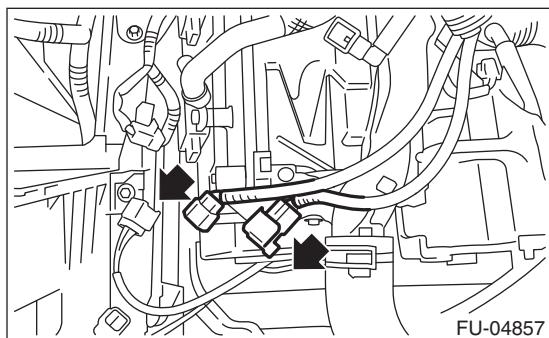


19) Disconnect the connector from the ignition coil of #4 cylinder.

20) Disconnect the connectors from the oil switching solenoid valve LH (A) and camshaft position sensor LH (B).

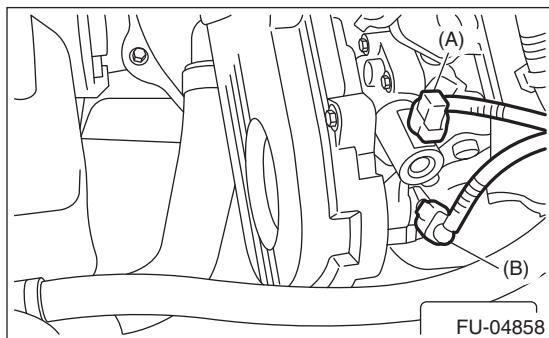


21) Remove the PCV pipe, multi-function duct assembly and engine harness as a single unit from the engine.

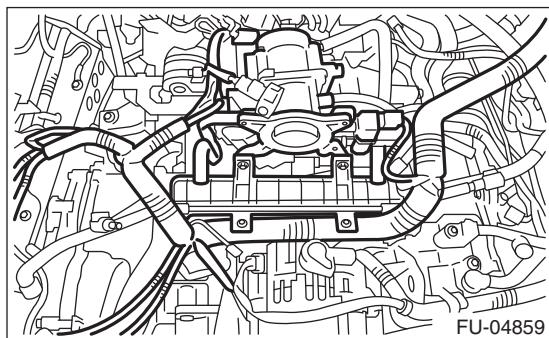

22) Remove the bolts (A) and remove the multi-function duct assembly from the PCV pipe.

23) Remove the clips (B) and remove the engine harness from the PCV pipe.

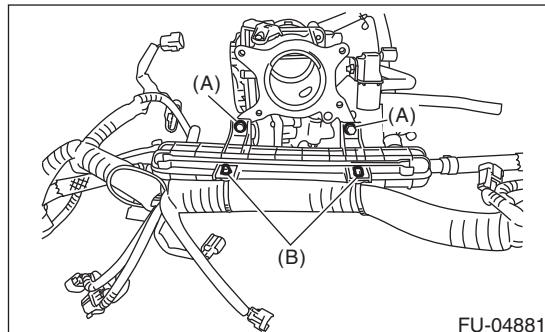

B: INSTALLATION



1. INTAKE MANIFOLD

1) Install in the reverse order of removal.

Tightening torque:

T1: 6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

T2: 19 N·m (0.9 kgf-m, 14.0 ft-lb)

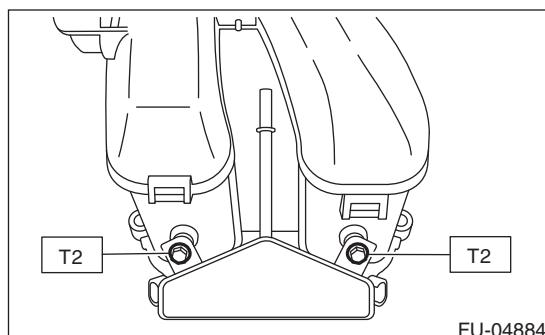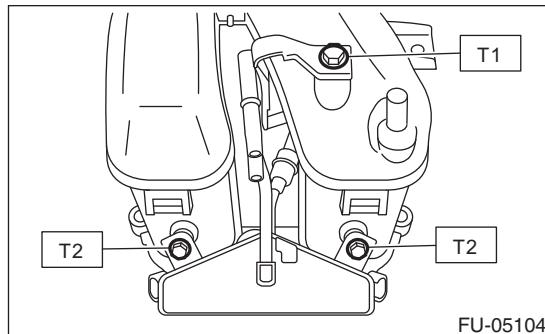

NOTE:



Use a new gasket.

Intake Manifold

FUEL INJECTION (FUEL SYSTEMS)

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

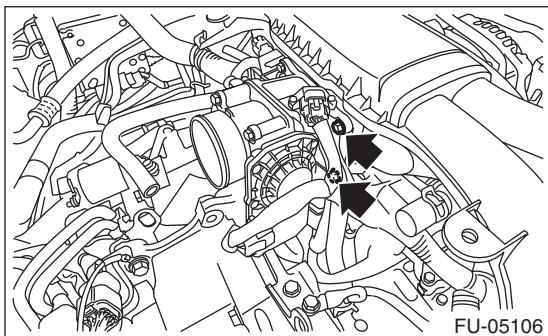
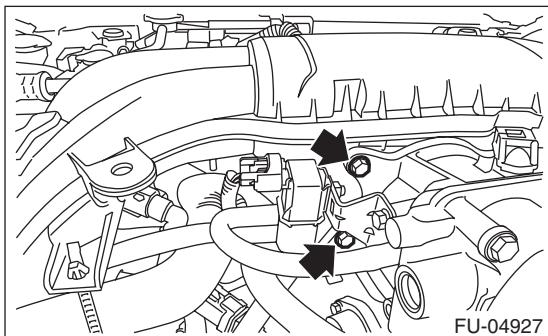


NOTE:

Use a new gasket.

Tightening torque:

25 N·m (2.5 kgf-m, 18.4 ft-lb)

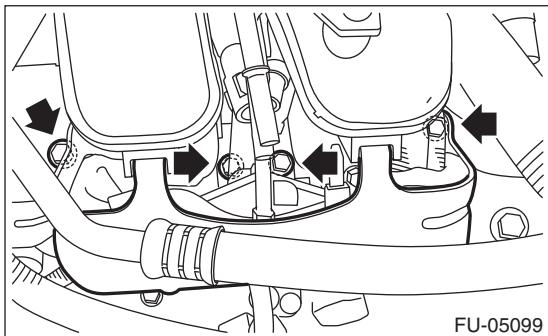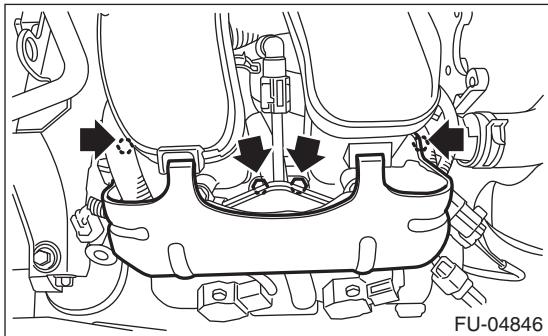


NOTE:

Use a new gasket.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

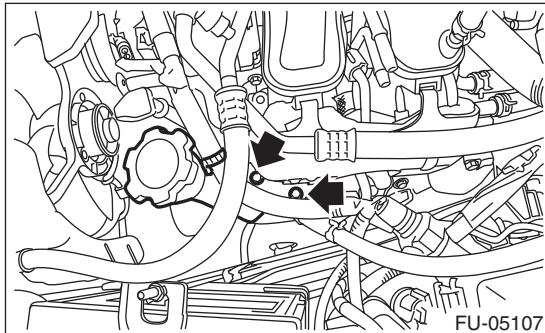

2. MULTI-FUNCTION DUCT ASSEMBLY




1) Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

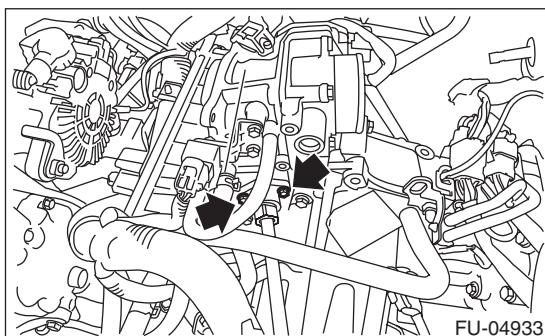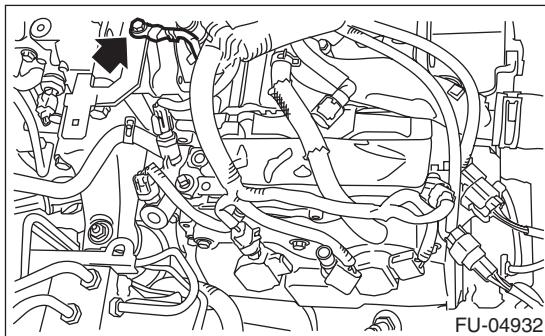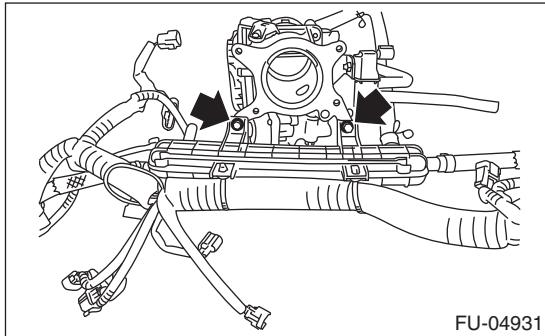

C: INSPECTION

- 1) Check that the intake manifold and fuel pipe have no deformation, cracks and other damages.
- 2) Check that the hose has no cracks, damage or loose part.