

Purge Control Solenoid Valve


EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

5. Purge Control Solenoid Valve

A: REMOVAL


1. PURGE CONTROL SOLENOID VALVE 1

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

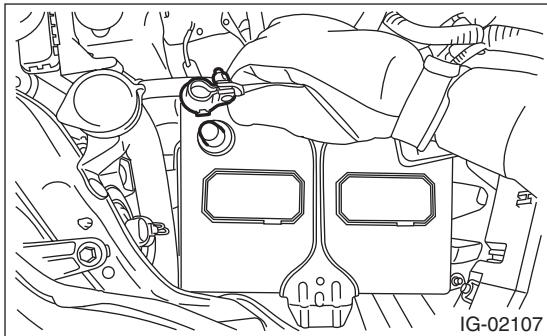


3) Remove the intercooler. <Ref. to IN(H4DOTC)-17, REMOVAL, Intercooler.>


4) Remove the bolt securing the solenoid valve bracket assembly from intake manifold.

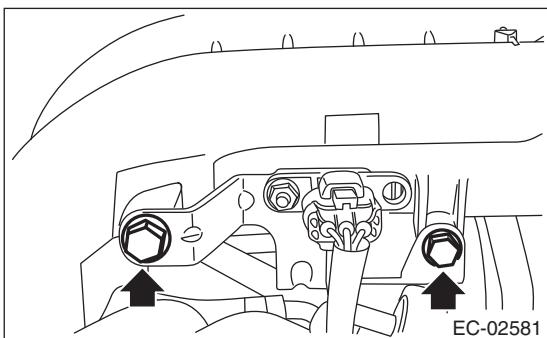


5) Remove the bolts securing the PCV pipe and engine harness from intake manifold.

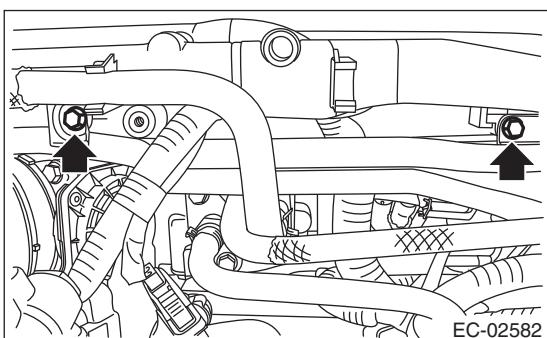

- 6) Remove the nut securing the purge control solenoid valve 1 to the solenoid valve bracket assembly.

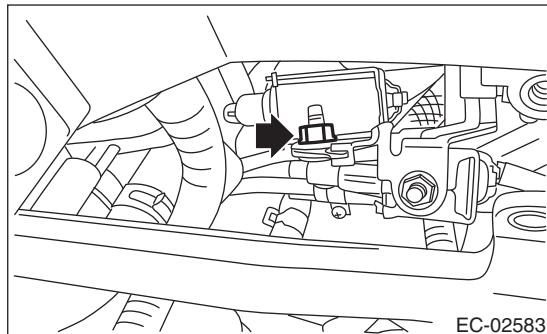


7) Disconnect the connector (A) and evaporation hose (B), and then remove the purge control solenoid valve 1.

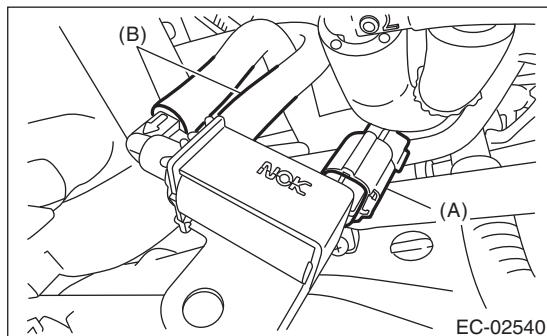

2. PURGE CONTROL SOLENOID VALVE 2

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

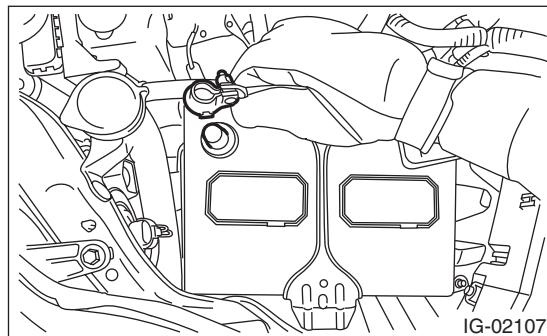


3) Remove the intercooler. <Ref. to IN(H4DOTC)-17, REMOVAL, Intercooler.>


Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


- 4) Remove the bolt securing the solenoid valve bracket assembly from intake manifold.

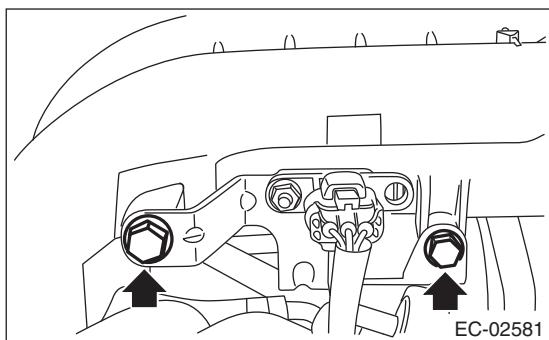


- 5) Remove the bolts securing the PCV pipe and engine harness from intake manifold.

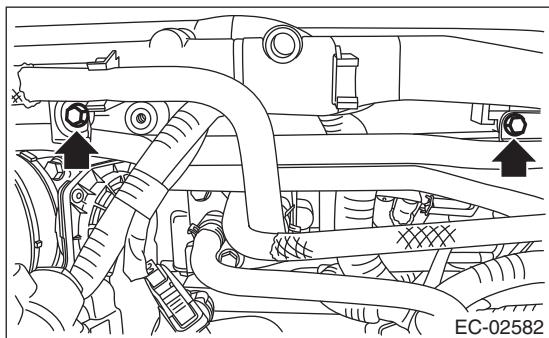

- 6) Remove the nut securing the purge control solenoid valve 2 to the solenoid valve bracket assembly.

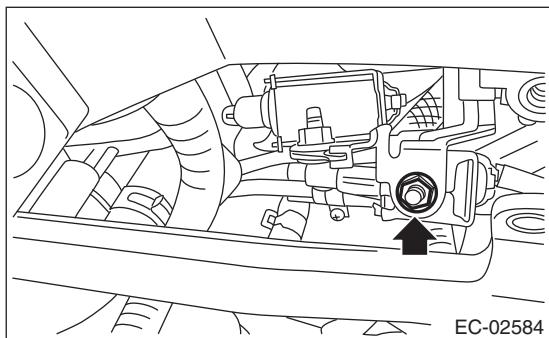

- 7) Disconnect the connector (A) and evaporation hose (B), and then remove the purge control solenoid valve 2.

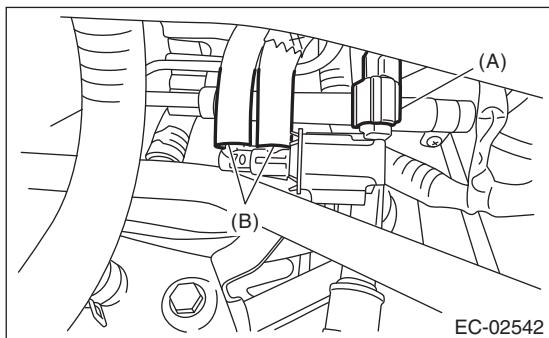


B: INSTALLATION

1. PURGE CONTROL SOLENOID VALVE 1

Install in the reverse order of removal.

NOTE:

Connect the evaporation hose as shown in the figure.

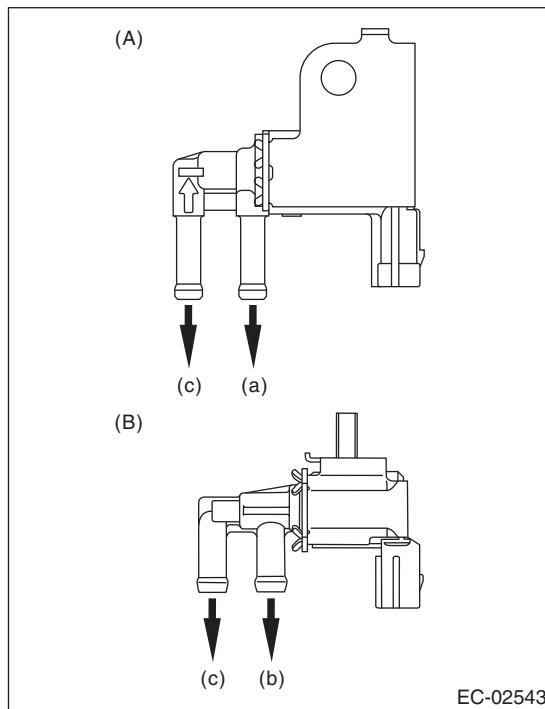

(A) Purge control solenoid valve 1

(B) Purge control solenoid valve 2

(a) To intake manifold

(b) To intake duct

(c) To fuel pipe



EC-02543

Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


Tightening torque:

6.4 N·m (0.7 kgf·m, 4.7 ft-lb)

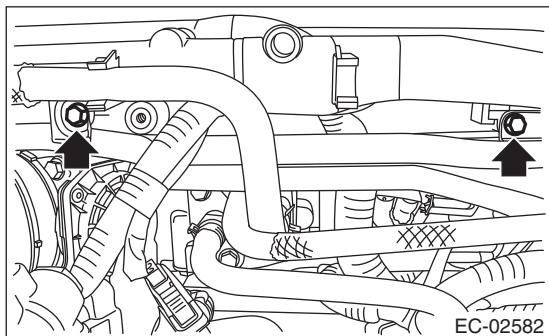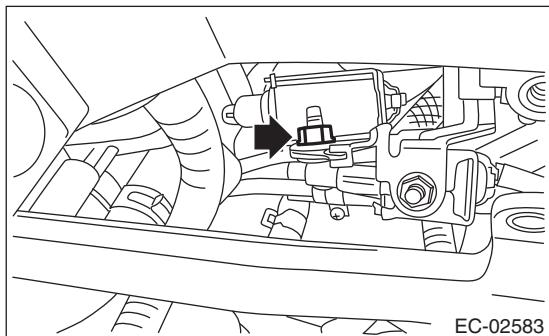

Tightening torque:

19 N·m (1.9 kgf·m, 14.0 ft-lb)

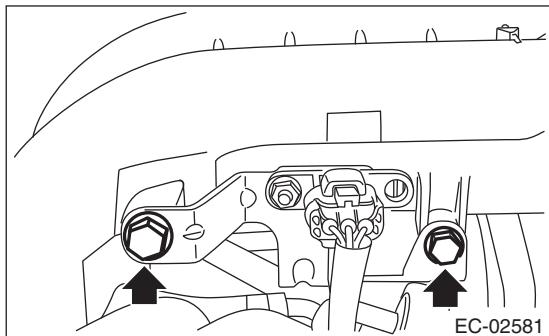


2. PURGE CONTROL SOLENOID VALVE 2

Install in the reverse order of removal.

NOTE:

Connect the evaporation hose as shown in the figure.

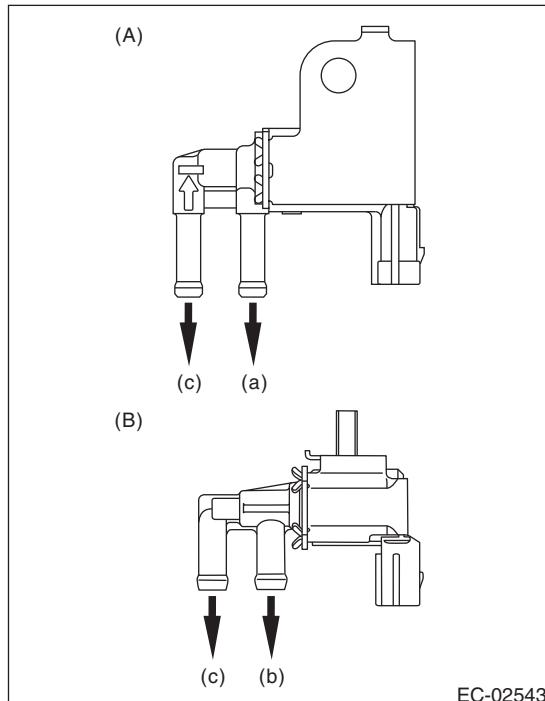

(A) Purge control solenoid valve 1

(B) Purge control solenoid valve 2

(a) To intake manifold

(b) To intake duct



(c) To fuel pipe

Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


Tightening torque:

6.4 N·m (0.7 kgf·m, 4.7 ft-lb)

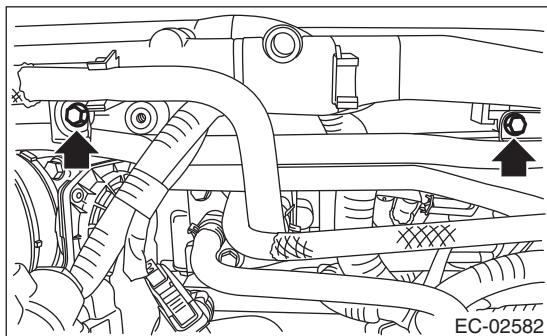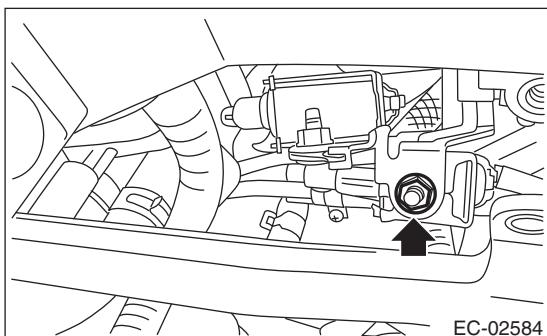

Tightening torque:


19 N·m (1.9 kgf·m, 14.0 ft-lb)

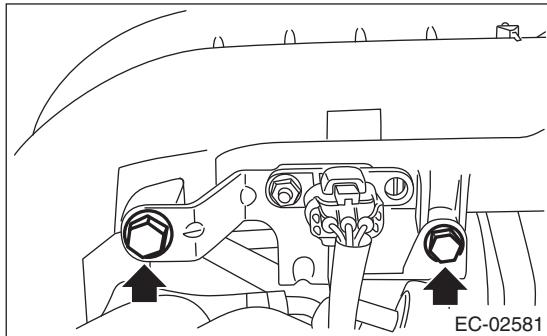

C: INSPECTION

1. PURGE CONTROL SOLENOID VALVE


- 1) Check that the purge control solenoid valve has no deformation, cracks or other damages.
- 2) Measure the resistance between the purge control solenoid valve terminals.

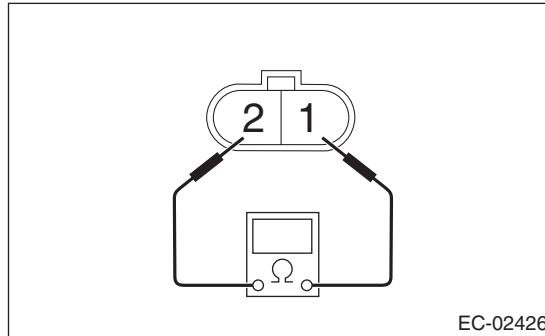


	Terminal No.	Standard
Purge control solenoid valve 1	1 and 2	$32 \pm 2 \Omega$ (when 20°C (68°F))
Purge control solenoid valve 2		$24 \pm 3 \Omega$ (when 20°C (68°F))

- 3) Check that air does not come out from (B) when air is blown into (A).

- Purge control solenoid valve 1

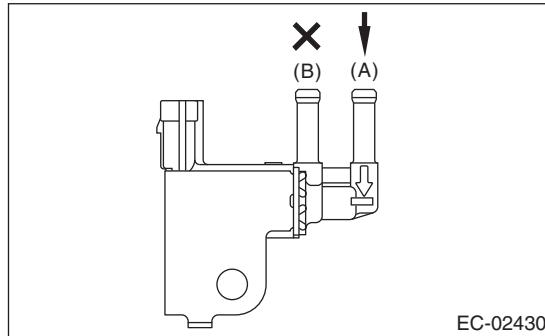

- Purge control solenoid valve 2

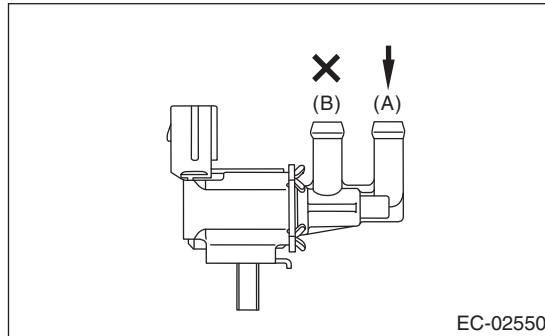


- 4) With terminal No. 1 connected to the battery positive terminal and terminal No. 2 to the battery ground terminal, check that air comes out from (B) when air is blown into (A).


Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

- Purge control solenoid valve 1

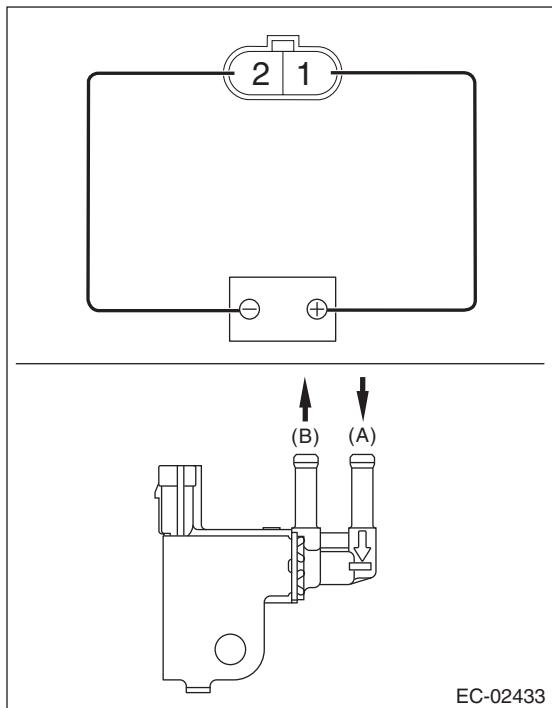

- Purge control solenoid valve 2

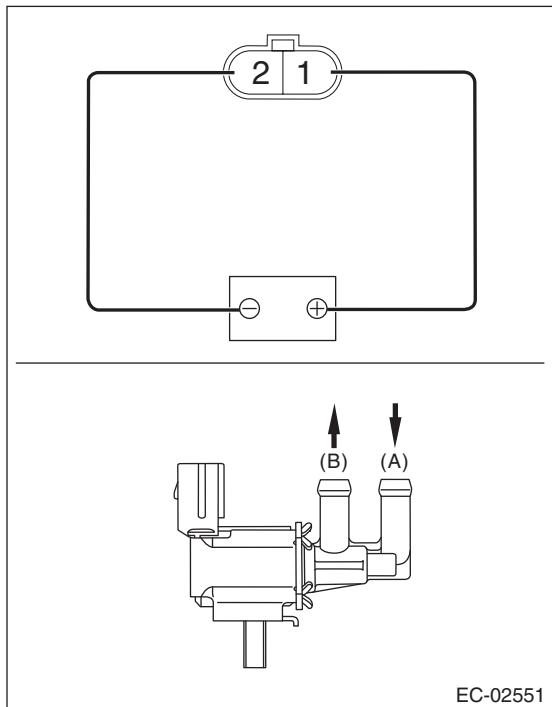

2. OTHER INSPECTIONS

Check that the evaporation hose has no cracks, damage or loose part.