

## 11. Inspection Mode

### A: PROCEDURE

When performing the diagnosis not listed in “List of Diagnostic Trouble Code (DTC)”, refer the item on the drive cycle. <Ref. to EN(H6DO)(diag)-40, Drive Cycle.>

DTC	Item	On condition
P0011	Intake Camshaft Position Timing - Over-Advanced (Bank 1)	—
P0016	Crankshaft Position - Camshaft Position Correlation (Bank 1)	—
P0018	Crankshaft Position - Camshaft Position Correlation (Bank 2)	—
P0021	Intake Camshaft Position Timing - Over-Advanced (Bank 2)	—
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)	—
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)	—
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)	—
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)	—
P0051	HO2S Heater Control Circuit Low (Bank 2 Sensor 1)	—
P0052	HO2S Heater Control Circuit High (Bank 2 Sensor 1)	—
P0057	HO2S Heater Control Circuit Low (Bank 2 Sensor 2)	—
P0058	HO2S Heater Control Circuit High (Bank 2 Sensor 2)	—
P0077	Intake Valve Control Circuit High (Bank 1)	—
P0083	Intake Valve Control Circuit High (Bank 2)	—
P0102	Mass or Volume Air Flow Circuit Low Input	—
P0103	Mass or Volume Air Flow Circuit High Input	—
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input	—
P0108	Manifold Absolute Pressure/Barometric Pressure Circuit High Input	—
P0112	Intake Air Temperature Circuit Low Input	—
P0113	Intake Air Temperature Circuit High Input	—
P0117	Engine Coolant Temperature Circuit Low Input	—
P0118	Engine Coolant Temperature Circuit High Input	—
P0122	Throttle/Pedal Position Sensor/Switch “A” Circuit Low Input	—
P0123	Throttle/Pedal Position Sensor/Switch “A” Circuit High Input	—
P0131	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 1)	—
P0132	O2 Sensor Circuit High Voltage (Bank 1 Sensor 1)	—
P0137	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	—
P0138	O2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	—
P0140	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 2)	—
P0151	O2 Sensor Circuit Low Voltage (Bank 2 Sensor 1)	—
P0152	O2 Sensor Circuit High Voltage (Bank 2 Sensor 1)	—
P0157	O2 Sensor Circuit Low Voltage (Bank 2 Sensor 2)	—
P0158	O2 Sensor Circuit High Voltage (Bank 2 Sensor 2)	—
P0160	O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 2)	—
P0182	Fuel Temperature Sensor “A” Circuit Low Input	—
P0183	Fuel Temperature Sensor “A” Circuit High Input	—
P0197	Engine Oil Temperature Sensor Circuit Low	—
P0198	Engine Oil Temperature Sensor Circuit High	—
P0222	Throttle/Pedal Position Sensor/Switch “B” Circuit Low Input	—
P0223	Throttle/Pedal Position Sensor/Switch “B” Circuit High Input	—
P0230	Fuel Pump Primary Circuit	—
P0327	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)	—
P0328	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)	—
P0332	Knock Sensor 2 Circuit Low Input (Bank 2)	—
P0333	Knock Sensor 2 Circuit High Input (Bank 2)	—
P0335	Crankshaft Position Sensor “A” Circuit	—
P0336	Crankshaft Position Sensor “A” Circuit Range/Performance	—

# Inspection Mode

## ENGINE (DIAGNOSTICS)


DTC	Item	On condition
P0340	Camshaft Position Sensor "A" Circuit (Bank 1 or Single Sensor)	—
P0345	Camshaft Position Sensor "A" Circuit (Bank 2)	—
P0447	Evaporative Emission Control System Vent Control Circuit Open	—
P0448	Evaporative Emission Control System Vent Control Circuit Shorted	—
P0452	Evaporative Emission Control System Pressure Sensor Low Input	—
P0453	Evaporative Emission Control System Pressure Sensor High Input	—
P0458	Evaporative Emission Control System Purge Control Valve Circuit Low	—
P0462	Fuel Level Sensor Circuit Low Input	—
P0463	Fuel Level Sensor Circuit High Input	—
P0500	Vehicle Speed Sensor	—
P0512	Starter Request Circuit	—
P0513	Incorrect Immobilizer Key	—
P0519	Idle Control System Malfunction (Fail-Safe)	—
P0600	Serial Communication Link	—
P0604	Internal Control Module Random Access Memory (RAM) Error	—
P0605	Internal Control Module Read Only Memory (ROM) Error	—
P0607	Control Module Performance	—
P0638	Throttle Actuator Control Range/Performance (Bank 1)	—
P0691	Cooling Fan 1 Control Circuit Low	—
P0692	Cooling Fan 1 Control Circuit High	—
P0700	Transmission Control System (MIL Request)	—
P1152	O2 Sensor Circuit Range/Performance (Low) (Bank 1 Sensor 1)	—
P1153	O2 Sensor Circuit Range/Performance (High) (Bank 1 Sensor 1)	—
P1154	O2 Sensor Circuit Range/Performance (Low) (Bank 2 Sensor 1)	—
P1155	O2 Sensor Circuit Range/Performance (High) (Bank 2 Sensor 1)	—
P1160	Return Spring Failure	—
P1518	Starter Switch Circuit Low Input	—
P1560	Back-Up Voltage Circuit Malfunction	—
P1570	Antenna	—
P1571	Reference Code Incompatibility	—
P1572	IMM Circuit Failure (Except Antenna Circuit)	—
P1574	Key Communication Failure	—
P1576	EGI Control Module EEPROM	—
P1577	IMM Control Module EEPROM	—
P1578	Meter Failure	—
P2088	OCV Solenoid Valve Signal A Circuit Open (Bank 1)	—
P2089	OCV Solenoid Valve Signal A Circuit Short (Bank 1)	—
P2092	OCV Solenoid Valve Signal A Circuit Open (Bank 2)	—
P2093	OCV Solenoid Valve Signal A Circuit Short (Bank 2)	—
P2101	Throttle Actuator Control Motor Circuit Range/Performance	—
P2102	Throttle Actuator Control Motor Circuit Low	—
P2109	Throttle/Pedal Position Sensor A Minimum Stop Performance	—
P2122	Throttle/Pedal Position Sensor/Switch "D" Circuit Low Input	—
P2123	Throttle/Pedal Position Sensor/Switch "D" Circuit High Input	—
P2127	Throttle/Pedal Position Sensor/Switch "E" Circuit Low Input	—
P2128	Throttle/Pedal Position Sensor/Switch "E" Circuit High Input	—
P2135	Throttle/Pedal Position Sensor/Switch "A"/"B" Voltage Rationality	—
P2138	Throttle/Pedal Position Sensor/Switch "D"/"E" Voltage Rationality	—
P2227	Barometric Pressure Circuit Range/Performance	—
P2228	Barometric Pressure Circuit Low Input	—
P2229	Barometric Pressure Circuit High Input	—

## 1. PREPARATION FOR THE INSPECTION MODE

- 1) Check battery voltage is more than 12 V and fuel remains half [20 to 40 ℥ (5.3 to 10.6 US gal, 4.4 to 8.8 Imp gal)].
- 2) Lift-up the vehicle using a garage jack and place it on rigid racks, or drive the vehicle onto free rollers.

### WARNING:

- Before lifting-up the vehicle, ensure parking brakes are applied.
- Do not use a pantograph jack in place of a rigid rack.
- Secure a rope or wire to the front or rear towing hooks to prevent the lateral runout of front wheels.
- Do not abruptly depress/release clutch pedal or accelerator pedal during works even when the engine is operating at low speeds since this may cause vehicle to jump off free rollers.
- In order to prevent the vehicle from slipping due to vibration, do not place any wooden blocks or similar items between the rigid racks and vehicle.
- Since the rear wheels will also rotate, do not place anything near them. Also, make sure that nobody goes in front of the vehicle.

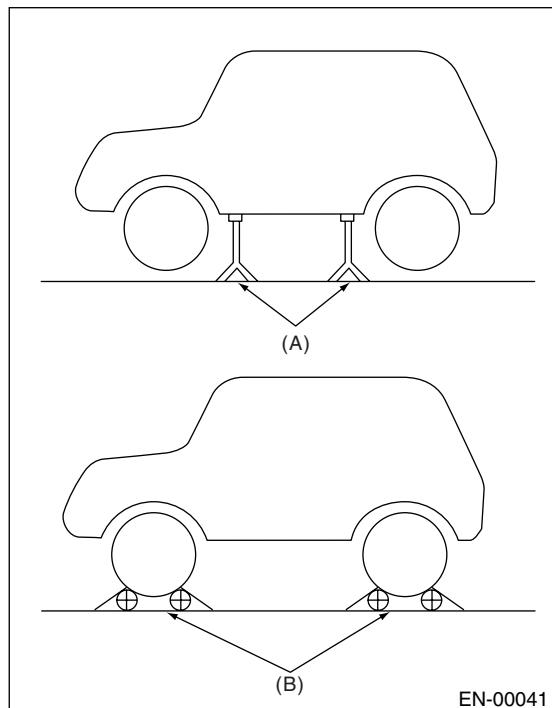

(A) Rigid racks


(B) Free rollers

## 2. SUBARU SELECT MONITOR


- 1) After clearing the memory, check for any remaining unresolved trouble data. <Ref. to EN(H6DO)(diag)-45, Clear Memory Mode.>
- 2) Idle the engine.
- 3) Prepare the Subaru Select Monitor kit. <Ref. to EN(H6DO)(diag)-7, PREPARATION TOOL, General Description.>



- 4) Connect the diagnosis cable to Subaru Select Monitor.
- 5) Insert the cartridge to Subaru Select Monitor. <Ref. to EN(H6DO)(diag)-7, PREPARATION TOOL, General Description.>

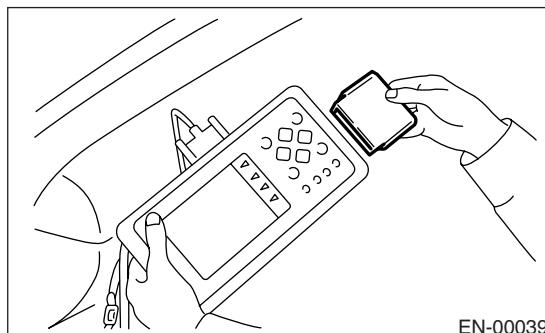


- 6) Connect the test mode connector (A) located under the glove box.

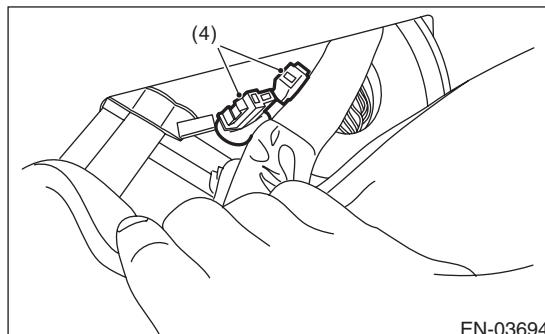

# Inspection Mode

## ENGINE (DIAGNOSTICS)


7) Connect the Subaru Select Monitor to the data link connector at the lower portion of instrument panel (on the driver's side).

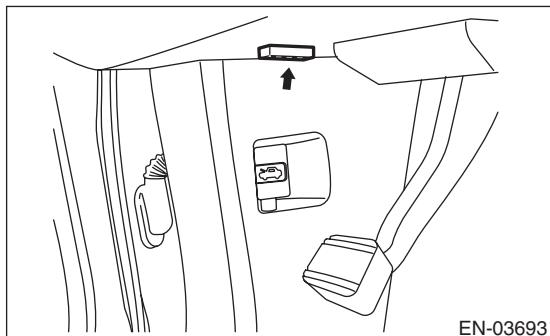

### CAUTION:

**Do not connect any scan tools except Subaru Select Monitor or general scan tool.**

8) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

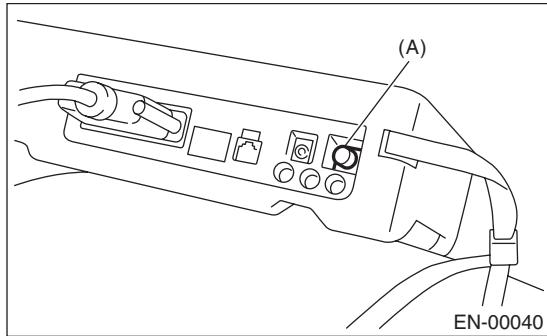

(A) Power switch


9) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.  
10) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.  
11) Press the [YES] key after the information of engine type has been displayed.  
12) On the «Engine Diagnosis» display screen, select the {D Check} and press the [YES] key.  
13) When the “Perform D Check?” is shown on the screen, press the [YES] key.  
14) Perform subsequent procedures as instructed on the display screen.  
• If trouble still remains in the memory, the corresponding DTC appears on the display screen.

### NOTE:

- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.
- For details concerning DTC, refer to “List of Diagnostic Trouble Code (DTC)”.  
<Ref. to EN(H6DO)(diag)-69, List of Diagnostic Trouble Code (DTC).>
- Release the parking brake.
- The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunctions. When engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis function.

## 3. GENERAL SCAN TOOL


- 1) After performing the diagnostics and clearing the memory, check for any remaining unresolved trouble data. <Ref. to EN(H6DO)(diag)-45, Clear Memory Mode.>
- 2) Idle the engine.
- 3) Connect the test mode connector (A) located under the glove box.

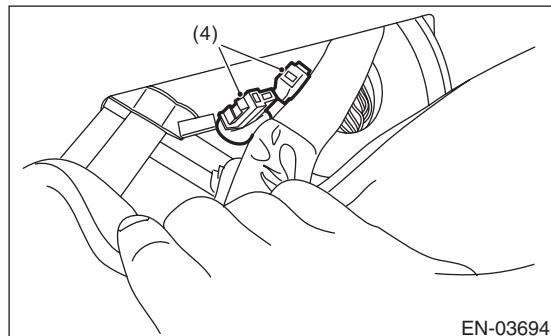

- 4) Connect the Subaru Select Monitor to the data link connector at the lower portion of instrument panel (on the driver's side).

### CAUTION:

**Do not connect any scan tools except Subaru Select Monitor or general scan tool.**

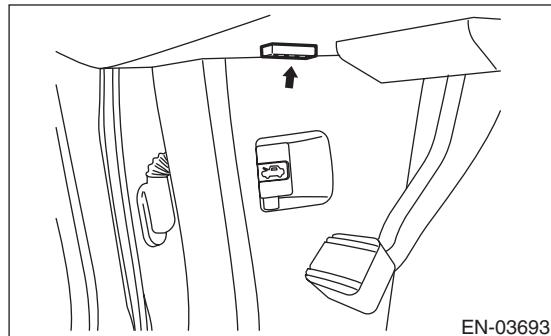

5) Start the engine.

NOTE:

Make sure the select lever is placed in “P” position before starting.

6) Using the select lever, turn the “P” position switch and the “N” position switch to ON.

7) Depress the brake pedal to turn brake switch ON.

8) Keep the engine speed in 2,500 — 3,000 rpm range for 40 seconds.

9) Shift the select lever in the “D” range and drive the vehicle at 5 to 10 km/h (3 to 6 MPH).

NOTE:

- For AWD model, release the parking brake.
- The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunctions. When engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

10) Using the general scan tool, check DTC and record the result(s).

NOTE:

- For detailed operation procedure, refer to the general scan tool operation manual.
- For details concerning DTC, refer to “List of Diagnostic Trouble Code (DTC)”.

<Ref. to EN(H6DO)(diag)-69, List of Diagnostic Trouble Code (DTC).>