
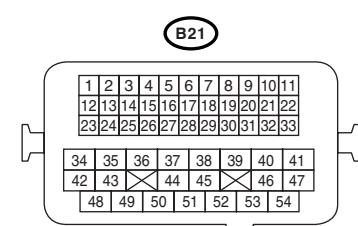

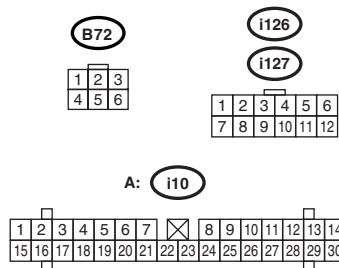


2. Oil Pressure System

A: WIRING DIAGRAM

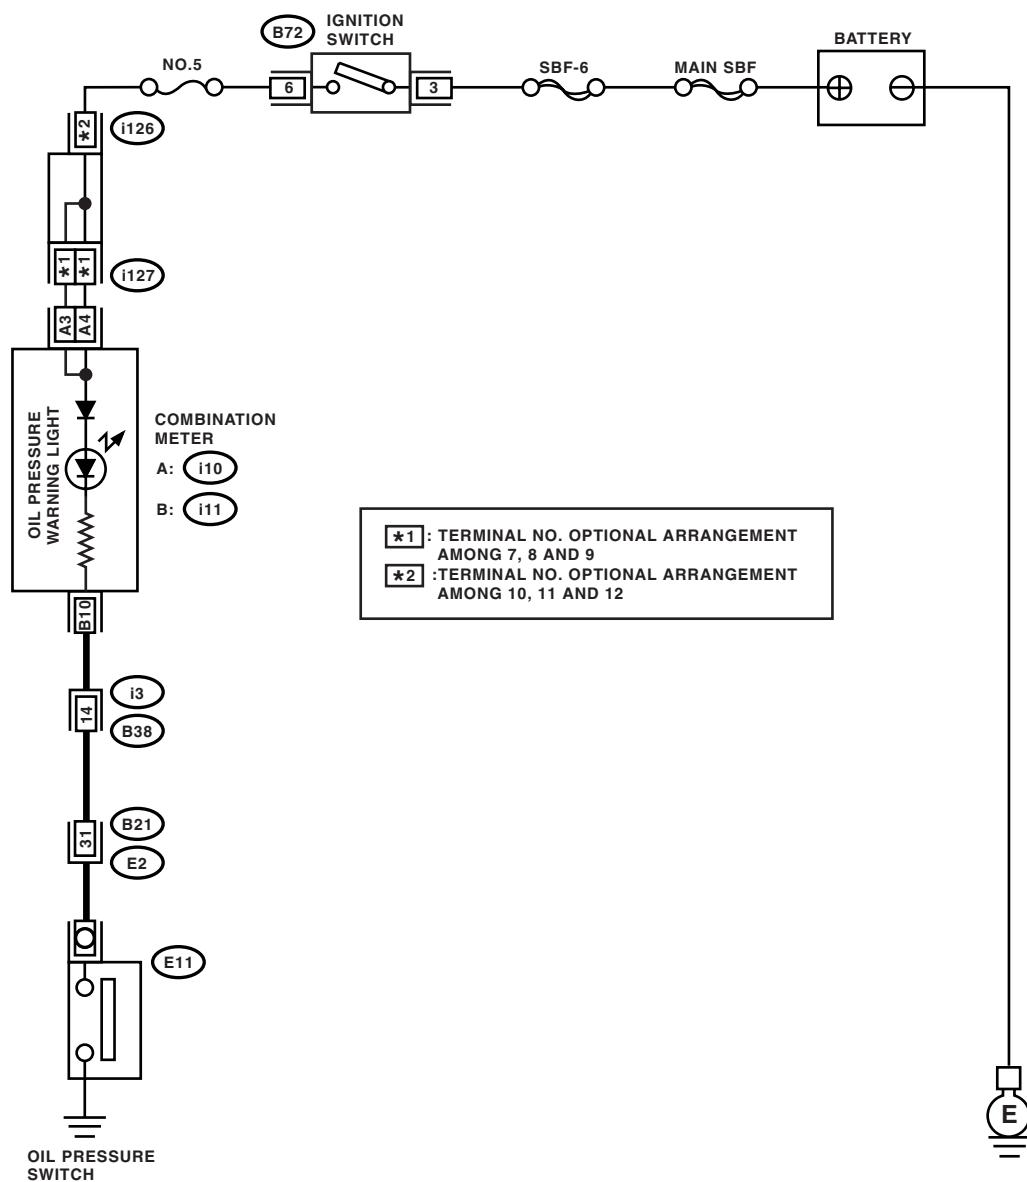

LU-02159

Oil Pressure System

LUBRICATION

B: INSPECTION

| Step | Check | Yes | No |
|--|---|--|---|
| 1 CHECK COMBINATION METER. 1) Turn the ignition switch ON. (Engine OFF) 2) Check the warning light of combination meter. | Does the warning light illuminate? | Go to step 2. | Repair or replace the combination meter. <Ref. to IDI-4, INSPECTION, Combination Meter System.> |
| 2 CHECK HARNESS CONNECTOR BETWEEN COMBINATION METER AND OIL PRESSURE SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from oil pressure switch. 3) Turn the ignition switch ON. 4) Measure the voltage of harness between oil pressure switch connector and chassis ground. <i>Connector & terminal</i> <i>(E11) No. 1 (+) — Chassis ground (-):</i> | Is the voltage more than 10 V? | Replace the oil pressure switch. | Go to step 3. |
| 3 CHECK COMBINATION METER. 1) Turn the ignition switch to OFF. 2) Remove the combination meter. 3) Measure the resistance of combination meter. <i>Terminals</i> <i>(i10) No. 4 — (i77) No. 10:</i> <i>(i10) No. 3 — (i77) No. 10:</i> | Is the resistance less than 10 Ω ? | Replace the harness connector between combination meter and oil pressure switch. | Repair or replace the combination meter. <Ref. to IDI-4, INSPECTION, Combination Meter System.> |