

General Description

COOLING

• OUTSIDE TEMPERATURE: LESS THAN 35°C (95°F)


A/C compressor load		Engine coolant temperature		
		Increase: less than 95°C (203°F)	Increase: 98 — 101°C (203 — 214°F)	Increase: 102°C (216°F) or more
OFF		Decrease: less than 92°C (198°F)	Decrease: 92 — 99°C (198 — 210°F)	Decrease: 100°C (212°F) or more
ON	Middle pressure switch OFF	See the figure (1)		100%
	Middle pressure switch ON	See the figure (2)		100%

• OUTSIDE TEMPERATURE: 35°C (95°F) OR MORE

Vehicle speed	A/C compressor load	Engine coolant temperature			
		Increase: less than 95°C (203°F)	Increase: 95 — 101°C (203 — 214°F)	Increase: 102°C (216°F) or more	
During acceleration: 19 km/h (12 MPH) or less During deceleration: 10 km/h (6 MPH) or less	OFF	Decrease: less than 92°C (198°F)	Decrease: 92 — 99°C (198 — 210°F)	Decrease: 100°C (212°F) or more	
	ON	Middle pressure switch OFF	See the figure (1)	100%	
During acceleration: 20 — 69 km/h (12 — 43 MPH) During deceleration: 11 — 64 km/h (7 — 40 MPH)		Middle pressure switch ON	See the figure (2)	100%	
		OFF	100%	100%	
During acceleration: 70 — 105 km/h (43 — 65 MPH) During deceleration: 65 — 103 km/h (40 — 64 MPH)	ON	Middle pressure switch OFF	See the figure (1)	100%	
		Middle pressure switch ON	100%	100%	
During acceleration: 106 km/h (66 MPH) or more During deceleration: 104 km/h (65 MPH) or more	ON	OFF	See the figure (2)	100%	
		Middle pressure switch ON	See the figure (3)	100%	
During acceleration: 106 km/h (66 MPH) or more During deceleration: 104 km/h (65 MPH) or more		OFF	See the figure (1)	100%	
		Middle pressure switch ON	See the figure (2)	100%	
		OFF	See the figure (3)	100%	

General Description

COOLING

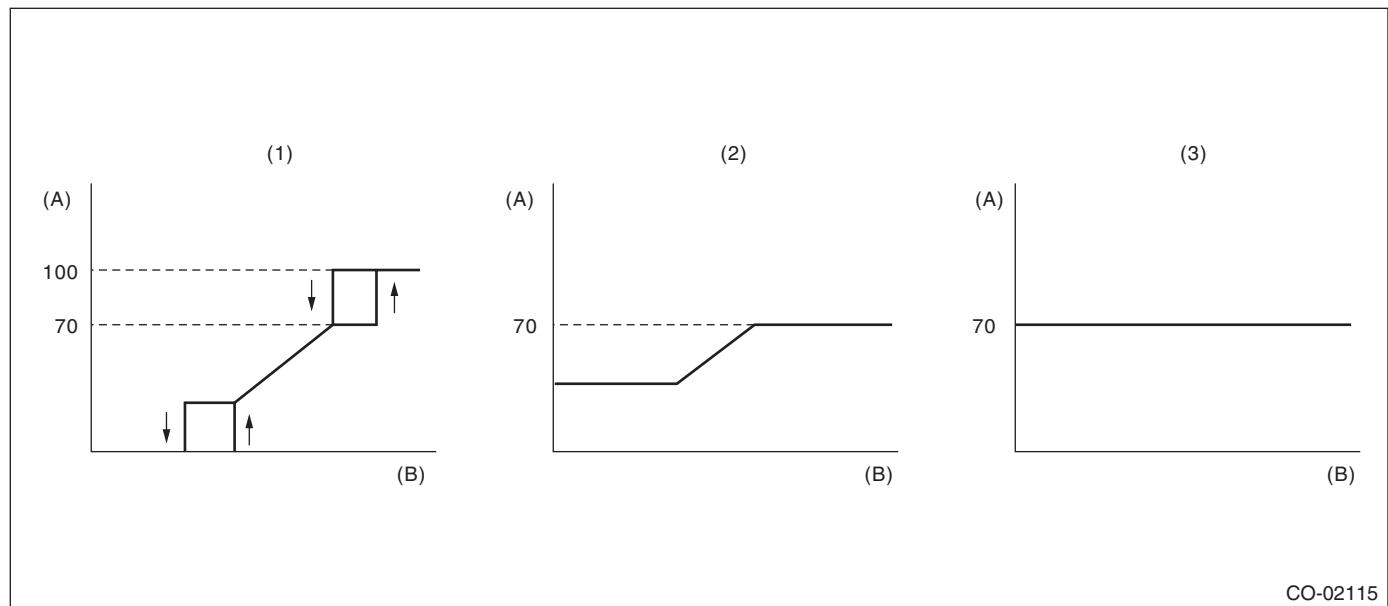

CO-02115

(A) Fan speed (%)

(B) Coolant temperature


(1) A/C OFF control

(2) A/C ON control (A/C middle pressure switch OFF)

(3) A/C ON control (A/C middle pressure switch ON)

B: COMPONENT

1. WATER PUMP & WATER PIPE

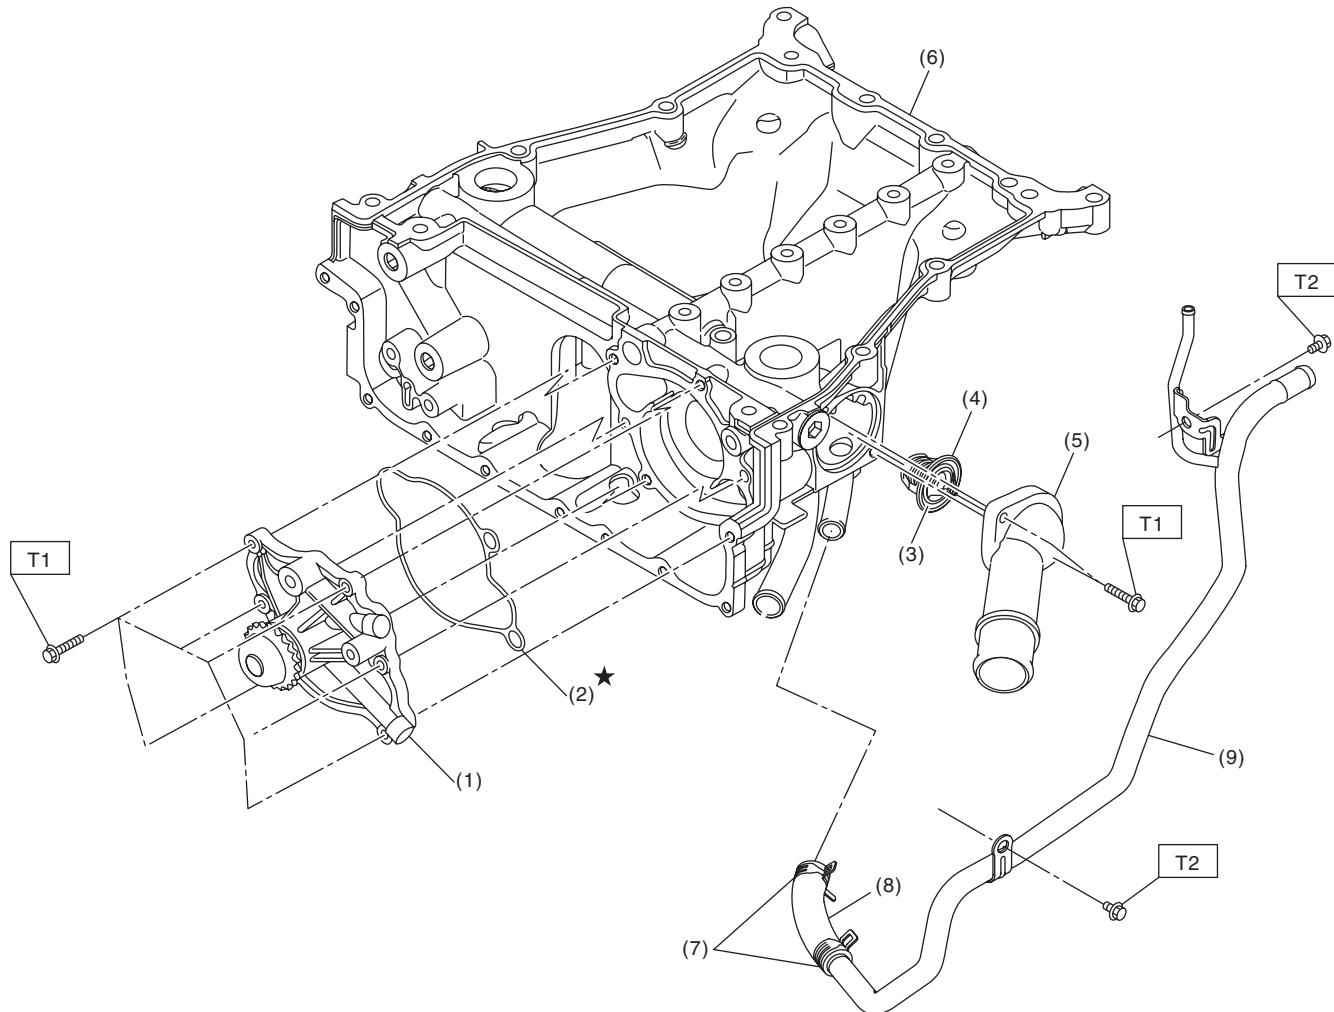

CO-02339


(1) Water pump ASSY	(6) Oil pan upper
(2) O-ring	(7) Clamp
(3) Thermostat	(8) Hose
(4) Gasket	(9) Water return pipe
(5) Thermostat cover	

Tightening torque:N·m (kgf·m, ft·lb)***T1: 6.4 (0.7, 4.7)******T2: 16 (1.6, 11.8)***

General Description

COOLING

2. ENGINE COOLANT TEMPERATURE SENSOR & HEATER HOSE

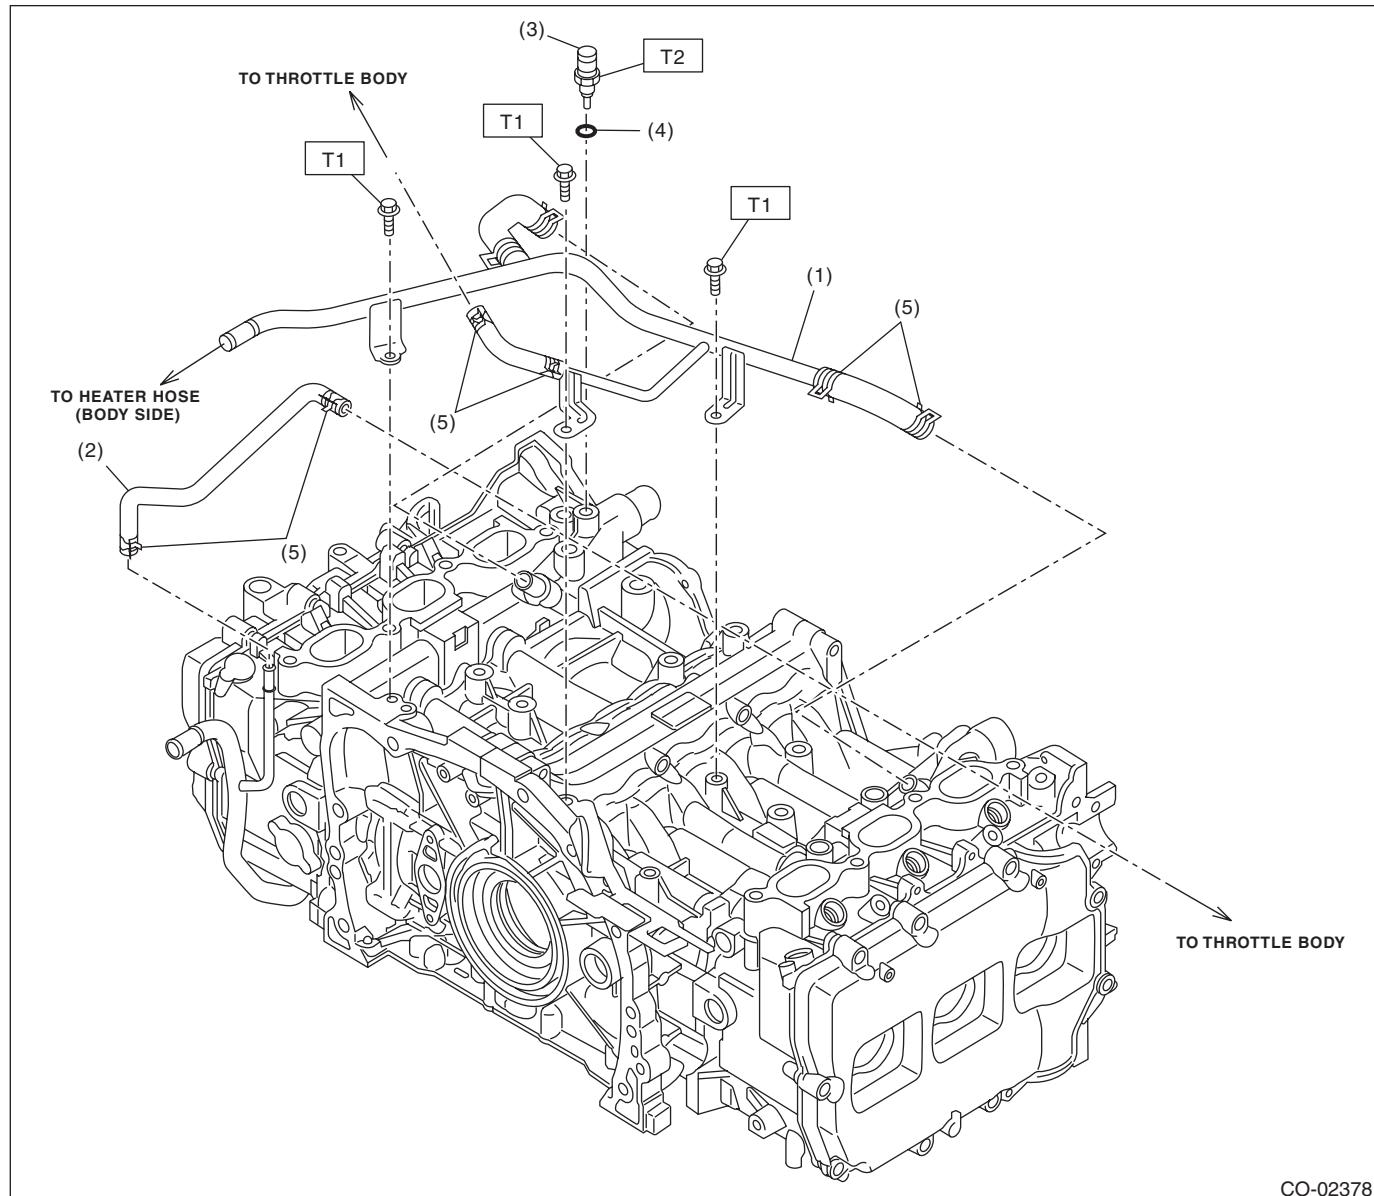

CO-02378

- (1) Heater hose pipe
- (2) Preheater hose
- (3) Engine coolant temperature sensor
- (4) Gasket
- (5) Clamp

Tightening torque: N·m (kgf·m, ft·lb)


T1: 19 (1.9, 14.0)

T2: 22 (2.2, 16.2)

General Description

COOLING

3. RADIATOR AND RADIATOR FAN

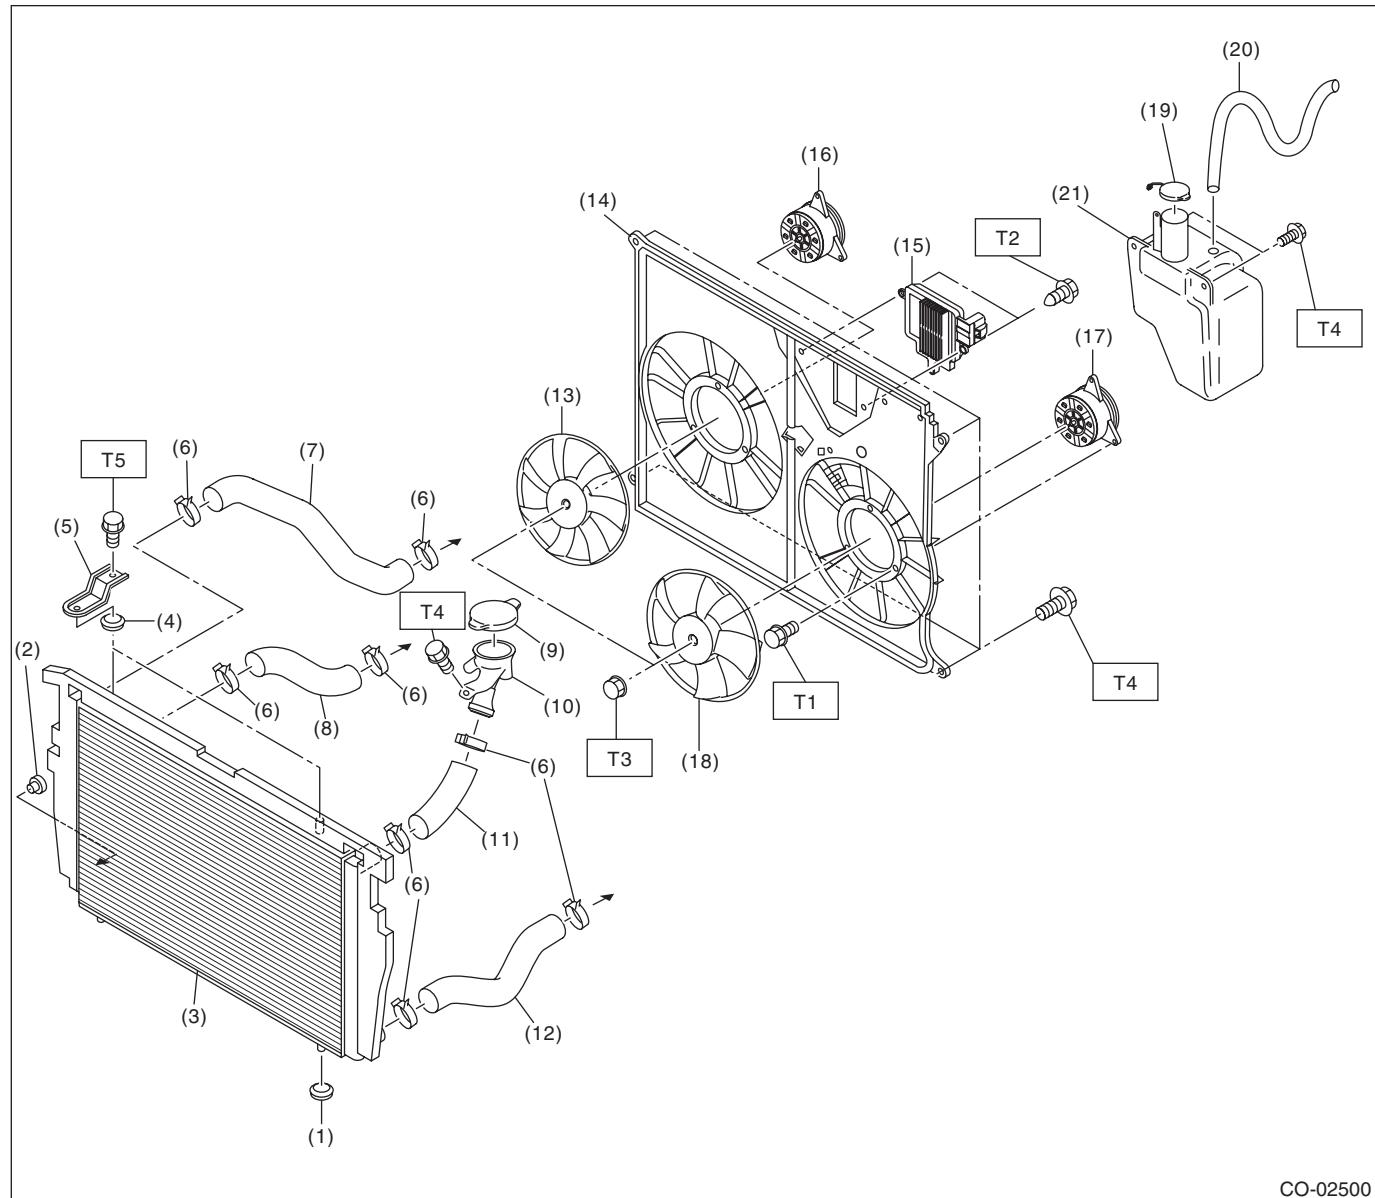

CO-02500

(1) Radiator lower cushion	(11) Radiator hose C	(20) Over flow hose
(2) Engine coolant drain cock	(12) Radiator hose D	(21) Engine coolant reservoir tank
(3) Radiator	(13) Radiator sub fan	
(4) Radiator upper cushion	(14) Radiator fan shroud	
(5) Radiator upper bracket	(15) Radiator fan control unit	
(6) Clamp	(16) Radiator sub fan motor	
(7) Radiator hose A	(17) Radiator main fan motor	
(8) Radiator hose B	(18) Radiator main fan	
(9) Radiator cap	(19) Engine coolant reservoir tank cap	
(10) Radiator hose bracket		

Tightening torque:N·m (kgf·m, ft·lb)

T1: 3.8 (0.4, 2.8)

T2: 2.6 (0.3, 1.9)

T3: 6.3 (0.6, 4.6)

T4: 7.5 (0.8, 5.5)

T5: 12 (1.2, 8.9)

General Description


COOLING

C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Prepare a container and cloth to prevent scattering of engine coolant when performing work where engine coolant can be spilled. If the fuel spills, wipe it off immediately to prevent from penetrating into floor or flowing out for environmental protection.
- Follow all government and local regulations concerning disposal of refuse when disposing engine coolant.

D: PREPARATION TOOL

1. SPECIAL TOOL

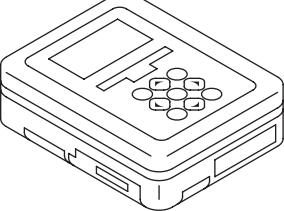ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting for electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Radiator cap tester	Used for measuring pressure.