

General Description

MECHANICAL

1. General Description

A: SPECIFICATION

Engine	Model	3.6 L		
	Cylinder arrangement	Horizontally opposed, liquid cooled, 6-cylinder, 4-stroke gasoline engine		
	Valve system mechanism	Chain driven, double overhead camshaft, 4-valve/cylinder		
	Bore x Stroke	mm (in)		92 x 91 (3.622 x 3.583)
	Displacement	cm ³ (cu in)		3,630 (221.5)
	Compression ratio	10.5		
	Compression (350 rpm and fully open throttle)	kPa (kgf/cm ² , psi)	Standard	1,275 — 1,471 (13.0 — 15.0, 185 — 213)
	Number of piston rings	Pressure ring: 2, Oil ring: 1		
	Intake valve timing	Open	Max. retard	ATDC 10°
			Min. advance	BTDC 40°
		Close	Max. retard	ABDC 74°
			Min. advance	ABDC 24°
	Exhaust valve timing	Open	Max. retard	BBDC 4°
			Min. advance	BBDC 44°
		Close	Max. retard	ATDC 44°
			Min. advance	ATDC 4°
	Valve clearance	mm (in)	Intake	0.20 ^{+0.04} _{-0.06} (0.0079 ^{+0.0016} _{-0.0024})
			Exhaust	0.35±0.05 (0.0138±0.0020)
	Idle speed ["P" or "N" range]	rpm	No load	Standard
			A/C ON	Standard
	Ignition order	1 → 6 → 3 → 2 → 5 → 4		
	Ignition timing	BTDC/rpm	Standard	15°±8°/700

General Description

MECHANICAL

NOTE:

OS: Oversize

US: Undersize

Camshaft	Bending limit	mm (in)	0.020 (0.00079)	
	Cam lobe height mm (in)	Intake	Standard	45.90 — 46.00 (1.8071 — 1.8110)
		Exhaust	Standard	44.65 — 44.75 (1.7579 — 1.7618)
	Cam base circle diameter mm (in)	Intake	Standard	36.00 (1.4173)
		Exhaust	Standard	36.00 (1.4173)
	Journal O.D. mm (in)	Front	Standard	37.946 — 37.963 (1.4939 — 1.4946)
		Except for front	Standard	25.946 — 25.963 (1.0215 — 1.0222)
	Oil clearance	mm (in)	Standard	0.037 — 0.072 (0.0015 — 0.0028)
	Thrust clearance mm (in)	Intake	Standard	0.075 — 0.135 (0.0030 — 0.0053)
		Exhaust	Standard	0.075 — 0.135 (0.0030 — 0.0053)
Cylinder head	Warping limit (Mating surface with cylinder block)			mm (in) 0.020 (0.0008)
	Standard height			mm (in) 124±0.05 (4.88±0.0020)
Valve seat	Seating angle between valve and valve seat			90°
	Contacting width between valve and valve seat mm (in)	Intake	Standard	1.0 (0.039)
		Exhaust	Standard	1.5 (0.059)
Valve guide	Clearance between the valve guide and valve stem mm (in)	Intake	Standard	0.030 — 0.057 (0.0012 — 0.0022)
		Exhaust	Standard	0.040 — 0.067 (0.0016 — 0.0026)
	Inside diameter	mm (in)	5.500 — 5.512 (0.2165 — 0.2170)	
	Valve stem outer diameters mm (in)	Intake	5.455 — 5.470 (0.2148 — 0.2154)	
		Exhaust	5.445 — 5.460 (0.2144 — 0.2150)	
	Valve guide protrusion amount	Intake	mm (in)	8.6 — 9.0 (0.3386 — 0.3543)
		Exhaust	mm (in)	10.7 — 11.1 (0.4213 — 0.4370)
Valve	Head edge thickness mm (in)	Intake	Standard	1.0 (0.039)
		Exhaust	Standard	1.2 (0.047)
	Overall length mm (in)	Intake	103.5 (4.075)	
		Exhaust	103.2 (4.063)	
Valve spring	Free length mm (in)	Intake	49.06 (1.9315)	
		Exhaust	49.06 (1.9315)	
	Tension/spring height N (kgf, lb)/mm (in)	Set	182 — 210 (18.6 — 21.4, 40.9 — 47.2) /31.0 (1.220)	
			Lift	316 — 350 (32.2 — 35.7, 71.0 — 78.7) /21.0 (0.827)
	Squareness			2.5°, 2.1 mm (0.083 in)
Valve lifter	Outer diameter	mm (in)	Standard	32.959 — 32.975 (1.2976 — 1.2982)
	Inner diameter of valve lifter hole	mm (in)	Standard	32.994 — 33.016 (1.2990 — 1.2998)
	Clearance between the valve lifter and valve lifter hole	mm (in)	Standard	0.019 — 0.057 (0.0007 — 0.0022)
Cylinder block	Warping limit (Mating surface with cylinder head)			mm (in) 0.020 (0.0008)
	Standard height			mm (in) 202 (7.95)
	Cylindricality	mm (in)	Standard	0.030 (0.0012)
	Out-of-roundness	mm (in)	Standard	0.010 (0.0004)
	Clearance between cylinder and piston at 20°C (68°F)	mm (in)	Standard	-0.010 — 0.010 (-0.0004 — 0.0004)
	Cylinder inner diameter boring limit (diameter)	mm (in)	92.515 (3.6717)	

General Description

MECHANICAL

Piston	Piston grade point			mm (in)	37.3 (1.4685)		
	Outer diameter mm (in)	Standard		A	92.005 — 92.015 (3.6222 — 3.6226)		
				B	91.995 — 92.005 (3.6218 — 3.6222)		
		0.25 (0.0098) OS			92.245 — 92.265 (3.6317 — 3.6325)		
		0.50 (0.0197) OS			92.495 — 92.515 (3.6415 — 3.6423)		
Inner diameter of piston pin hole			mm (in)	Standard	22.000 — 22.006 (0.8661 — 0.8664)		
Piston pin	Degree of fit				Piston pin must be fitted into position with thumb at 20°C (68°F).		
	Outer diameter mm (in)			Standard	21.994 — 22.000 (0.8659 — 0.8661)		
	Clearance between piston and piston pin mm (in)			Standard	0.004 — 0.008 (0.0002 — 0.0003)		
Piston ring	Piston ring gap mm (in)	Top ring		Standard	0.20 — 0.25 (0.0079 — 0.0098)		
		Second ring		Standard	0.40 — 0.50 (0.0157 — 0.0197)		
		Oil ring		Standard	0.20 — 0.50 (0.0079 — 0.0197)		
	Clearance between piston ring and piston ring groove mm (in)	Top ring		Standard	0.040 — 0.080 (0.0016 — 0.0031)		
		Second ring		Standard	0.030 — 0.070 (0.0012 — 0.0028)		
		Oil ring		Standard	0.065 — 0.165 (0.0026 — 0.0065)		
Connecting rod and connecting rod bearing	Bend or twist per 100 mm (3.94 in) in length			mm (in)	Limit		
					0.10 (0.0039 in)		
	Thrust clearance			mm (in)	Standard		
					0.070 — 0.330 (0.0028 — 0.0130)		
	Oil clearance			mm (in)	Standard		
	Bearing size (Thickness at center)	mm (in)			Standard		
					1.489 — 1.505 (0.0586 — 0.0593)		
					0.03 (0.0012) US		
					1.507 — 1.515 (0.0593 — 0.0596)		
Bushing of small end	Clearance between piston pin and bushing	mm (in)	Standard		0.05 (0.0020) US		
					1.517 — 1.525 (0.0597 — 0.0600)		
					0.25 (0.0098) US		
					1.617 — 1.625 (0.0637 — 0.0640)		
					0 — 0.022 (0 — 0.0009)		

General Description

MECHANICAL

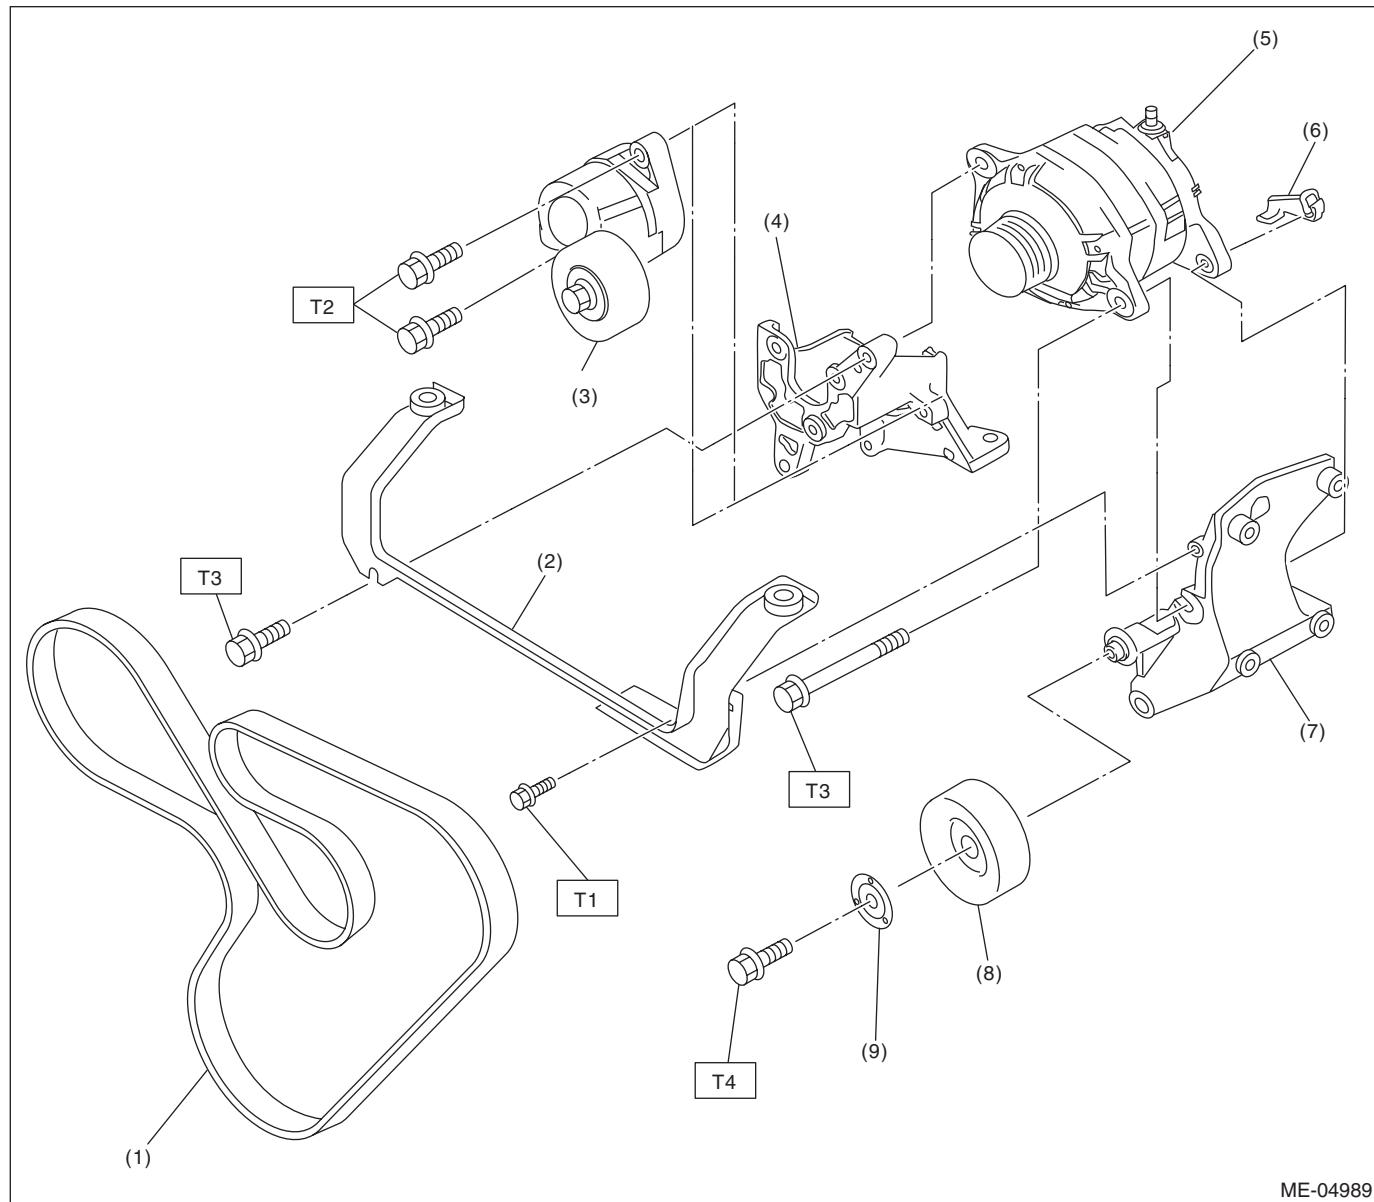
Crankshaft and crank-shaft bearing	Bending limit		mm (in)		0.035 (0.0014)
	Crank pin	Out-of-roundness	mm (in)	Standard	0.005 (0.0002)
		Cylindricality	mm (in)	Standard	0.006 (0.0002)
		Grinding limit	mm (in)		51.734 (2.0368)
	Crank journal	Out-of-roundness	mm (in)	Standard	0.005 (0.0002)
		Cylindricality	mm (in)	Standard	0.006 (0.0002)
		Grinding limit	mm (in)		63.742 (2.5095)
	Crank pin outer diameter		mm (in)	Standard	51.976 — 52.000 (2.0463 — 2.0472)
				0.03 (0.0012) US	51.954 — 51.970 (2.0454 — 2.0461)
				0.05 (0.0020) US	51.934 — 51.950 (2.0446 — 2.0453)
				0.25 (0.0098) US	51.734 — 51.750 (2.0368 — 2.0374)
	Crank journal outer diameter		#1, #3, #5, #7	Standard	63.992 — 64.016 (2.5194 — 2.5203)
				0.03 (0.0012) US	63.962 — 63.978 (2.5182 — 2.5188)
				0.05 (0.0020) US	63.942 — 63.958 (2.5174 — 2.5180)
				0.25 (0.0098) US	63.742 — 63.758 (2.5095 — 2.5102)
			#2, #4, #6	Standard	63.992 — 64.016 (2.5194 — 2.5203)
				0.03 (0.0012) US	63.962 — 63.978 (2.5182 — 2.5188)
				0.05 (0.0020) US	63.942 — 63.958 (2.5174 — 2.5180)
				0.25 (0.0098) US	63.742 — 63.758 (2.5095 — 2.5102)
	Bearing size (Thickness at center)		#1, #3, #5	Standard	1.996 — 2.013 (0.0786 — 0.0793)
				0.03 (0.0012) US	2.011 — 2.014 (0.0792 — 0.0793)
				0.05 (0.0020) US	2.021 — 2.024 (0.0796 — 0.0797)
				0.25 (0.0098) US	2.121 — 2.124 (0.0835 — 0.0836)
			#2, #4, #6	Standard	1.996 — 2.013 (0.0786 — 0.0793)
				0.03 (0.0012) US	2.015 — 2.018 (0.0793 — 0.0794)
				0.05 (0.0020) US	2.025 — 2.028 (0.0797 — 0.0798)
				0.25 (0.0098) US	2.125 — 2.128 (0.0837 — 0.0838)
			#7	Standard	1.992 — 2.009 (0.0784 — 0.0791)
				0.03 (0.0012) US	2.011 — 2.014 (0.0792 — 0.0793)
				0.05 (0.0020) US	2.021 — 2.024 (0.0796 — 0.0797)
				0.25 (0.0098) US	2.121 — 2.124 (0.0835 — 0.0836)
Thrust clearance		mm (in)	Standard	0.030 — 0.115 (0.0012 — 0.0045)	
Oil clearance		mm (in)	Standard	0.010 — 0.030 (0.0004 — 0.0012)	

General Description

MECHANICAL

B: COMPONENT

1. V-BELT




(1) V-belt	(6) Generator plate
(2) Collector cover bracket	(7) A/C compressor stay
(3) Belt tension adjuster ASSY	(8) Idler pulley
(4) Power steering pump bracket	(9) Idler pulley cover
(5) Generator	

Tightening torque: N·m (kgf·m, ft-lb)

- T1: 6.4 (0.7, 4.7)**
- T2: 20 (2.0, 14.8)**
- T3: 25 (2.5, 18.4)**
- T4: 33 (3.4, 24.3)**

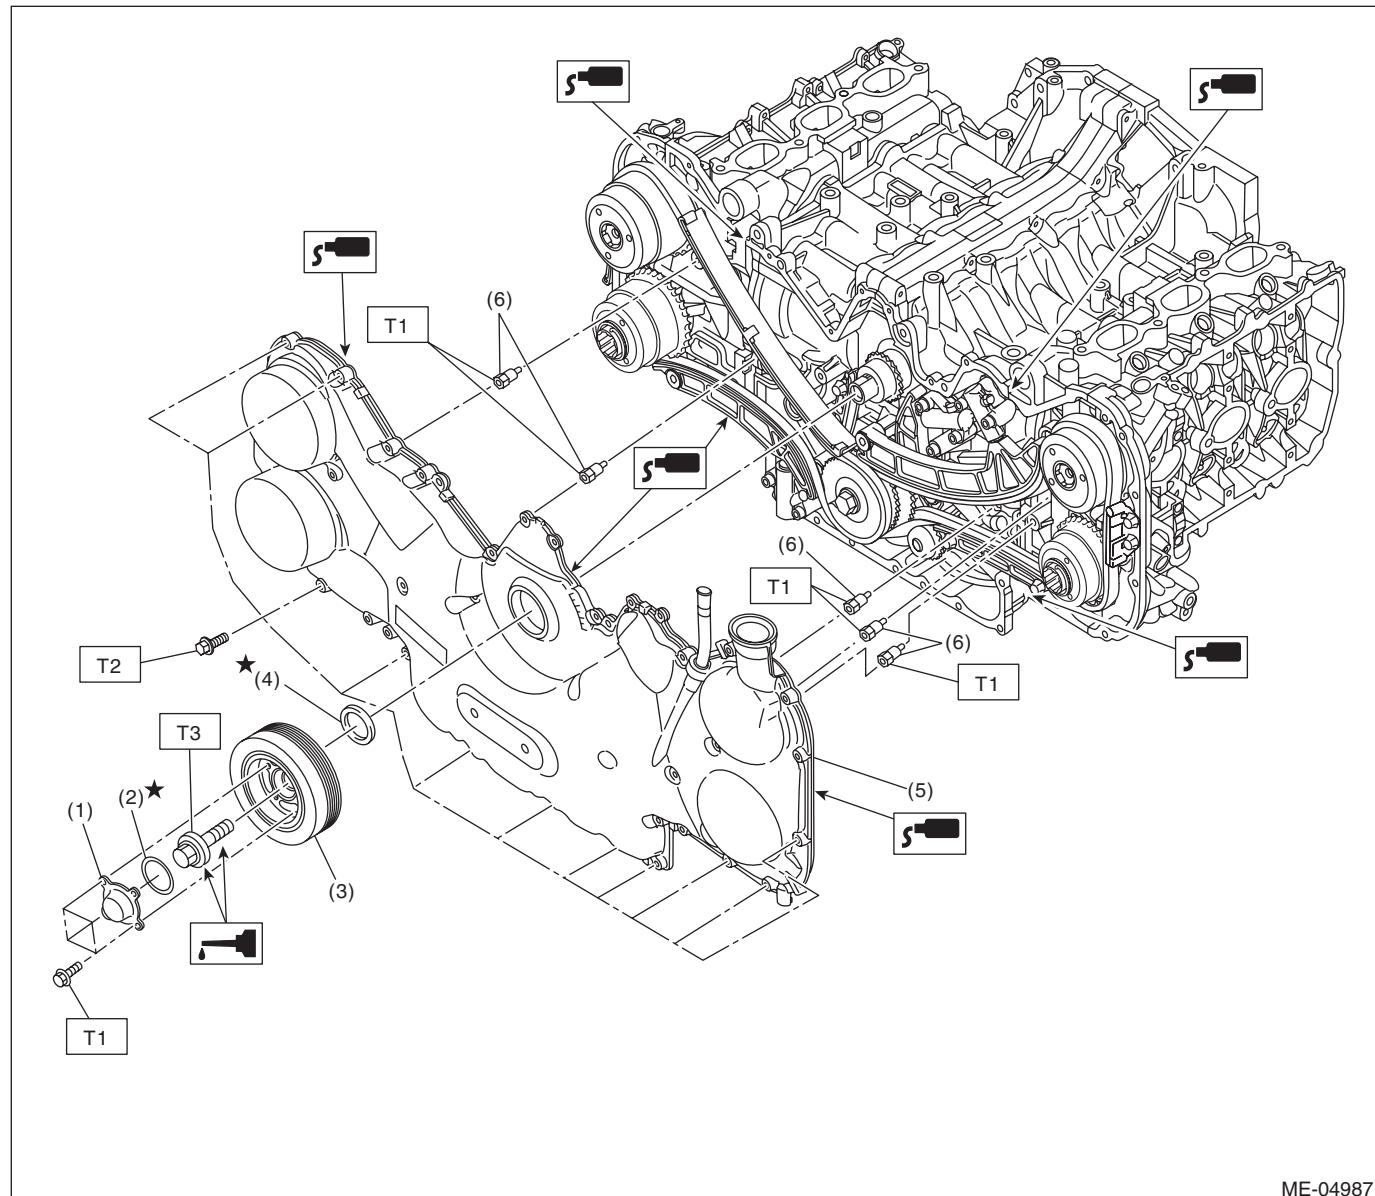2. TIMING CHAIN COVER



ME-04987

(1) Crank pulley cover
(2) O-ring
(3) Crank pulley

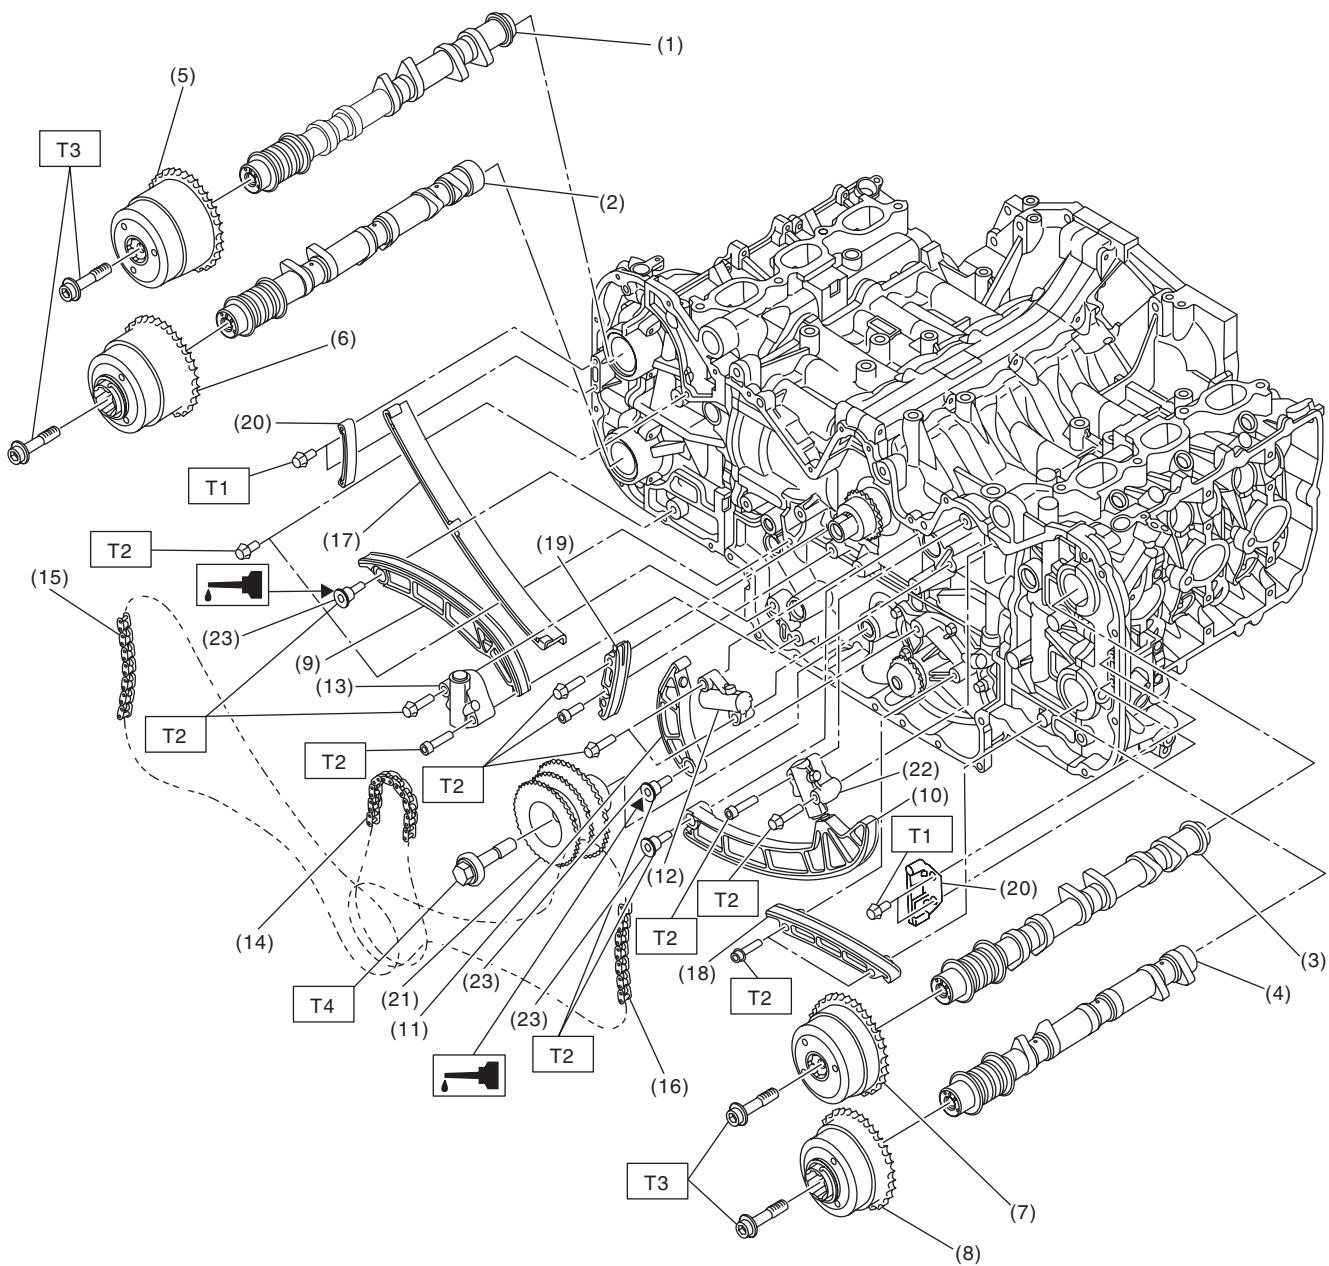
(4) Oil seal
(5) Chain cover
(6) Bolt

Tightening torque:N·m (kgf·m, ft·lb)
T1: 6.4 (0.7, 4.7)
T2: 10 (1.0, 7.4)
T3: 195 (19.9, 143.8)

General Description

MECHANICAL

3. TIMING CHAIN



ME-04428

ME(H6DO)-8

General Description


MECHANICAL

(1) Intake camshaft (RH)	(11) Chain tensioner lever (Main)	(21) Idler sprocket
(2) Exhaust camshaft (RH)	(12) Chain tensioner (Main)	(22) Chain tensioner (LH)
(3) Intake camshaft (LH)	(13) Chain tensioner (RH)	(23) Chain tensioner lever shaft
(4) Exhaust camshaft (LH)	(14) Timing chain (Main)	
(5) Intake cam sprocket (RH)	(15) Timing chain (RH)	Tightening torque: N·m (kgf·m, ft-lb)
(6) Exhaust cam sprocket (RH)	(16) Timing chain (LH)	T1: 6.4 (0.7, 4.7)
(7) Intake cam sprocket (LH)	(17) Chain guide (RH)	T2: 16 (1.6, 11.8)
(8) Exhaust cam sprocket (LH)	(18) Chain guide (LH)	T3: <Ref. to ME(H6DO)-74, Cam Sprocket.>
(9) Chain tensioner lever (RH)	(19) Chain guide (Main)	
(10) Chain tensioner lever (LH)	(20) Chain guide (Between cams)	T4: 120 (12.2, 88.5)

General Description

MECHANICAL

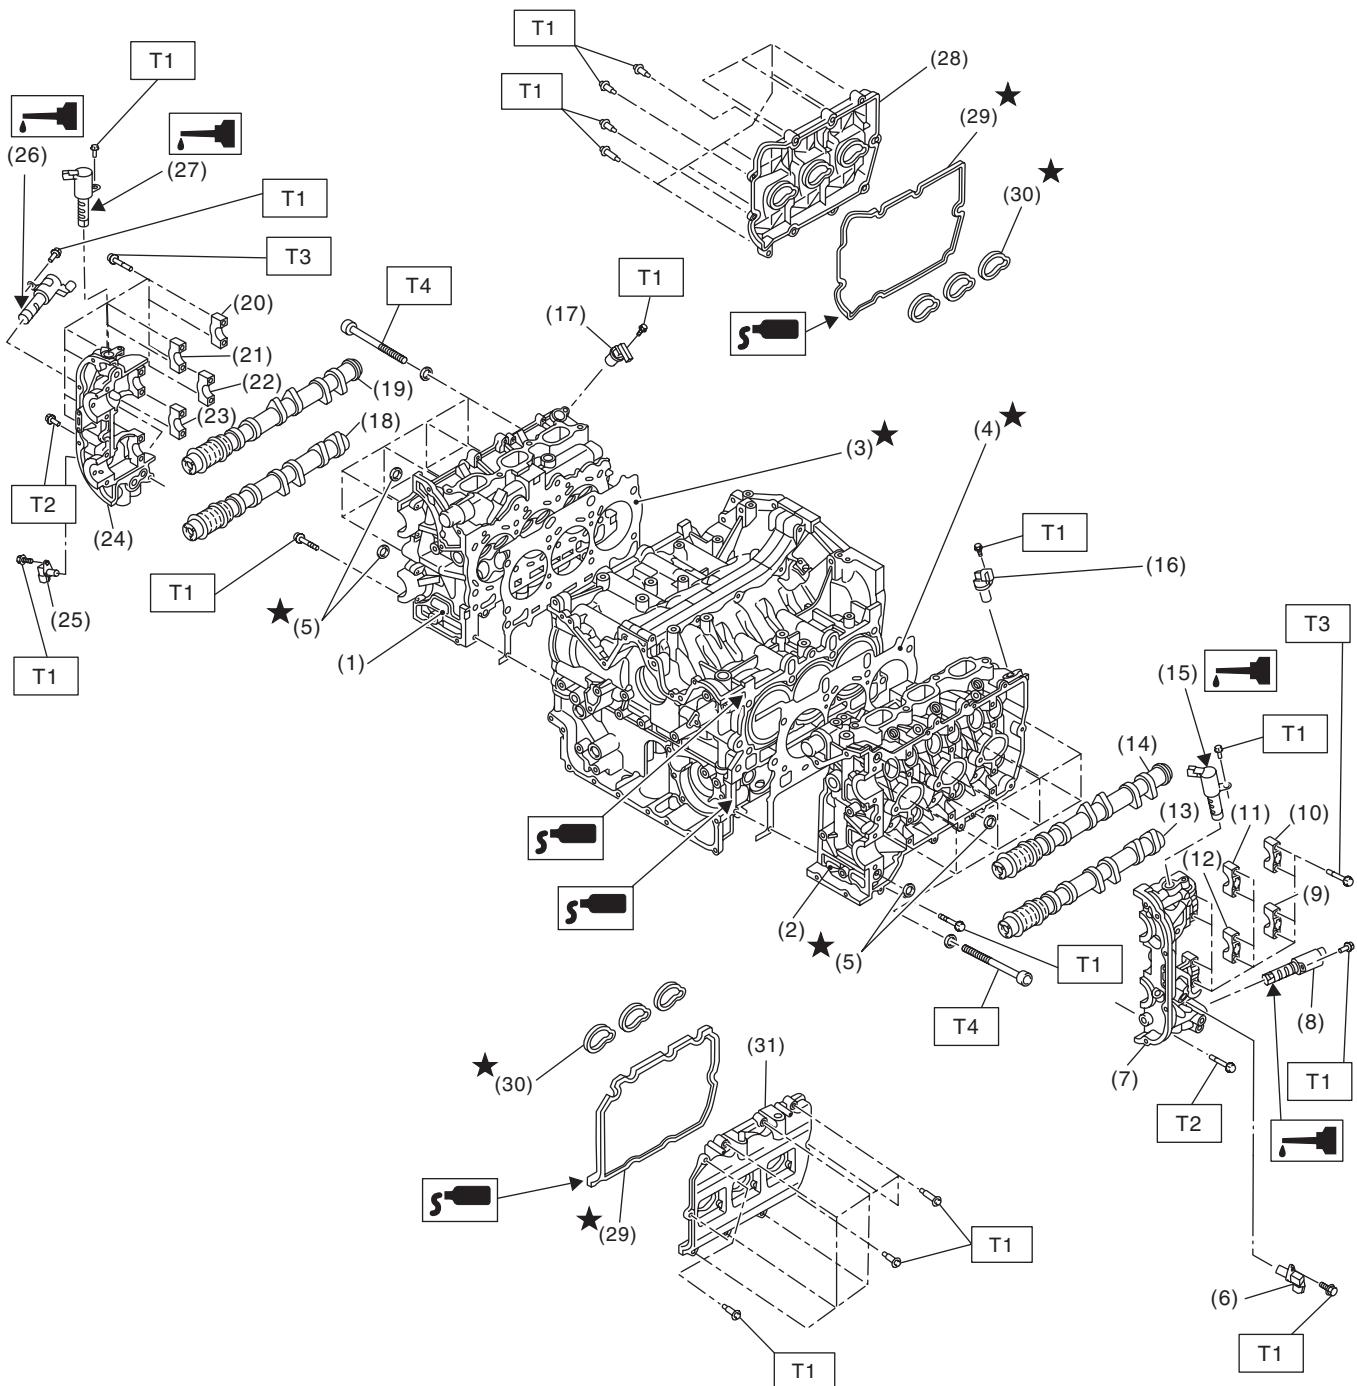4. CYLINDER HEAD AND CAMSHAFT



ME-04916

General Description


MECHANICAL

(1) Cylinder head (RH)	(14) Intake camshaft (LH)	(27) Intake oil flow control solenoid valve (RH)
(2) Cylinder head (LH)	(15) Intake oil flow control solenoid valve (LH)	(28) Rocker cover (RH)
(3) Cylinder head gasket (RH)	(16) Intake camshaft position sensor (LH)	(29) Gasket
(4) Cylinder head gasket (LH)	(17) Intake camshaft position sensor (RH)	(30) Gasket
(5) O-ring	(18) Exhaust camshaft (RH)	(31) Rocker cover (LH)
(6) Exhaust camshaft position sensor (LH)	(19) Intake camshaft (RH)	
(7) Front camshaft cap (LH)	(20) Intake camshaft cap (Rear RH)	<i>Tightening torque:N·m (kgf·m, ft-lb)</i>
(8) Exhaust oil flow control solenoid valve (LH)	(21) Intake camshaft cap (Center RH)	<i>T1: 6.4 (0.7, 4.7)</i>
(9) Exhaust camshaft cap (Rear LH)	(22) Exhaust camshaft cap (Rear RH)	<i>T2: 9.75 (1.0, 7.2)</i>
(10) Intake camshaft cap (Rear LH)	(23) Exhaust camshaft cap (Center RH)	<i>T3: 16 (1.6, 11.8)</i>
(11) Intake camshaft cap (Center LH)	(24) Front camshaft cap (RH)	<i>T4: <Ref. to ME(H6DO)-83, Cylinder Head.></i>
(12) Exhaust camshaft cap (Center LH)	(25) Exhaust camshaft position sensor (RH)	
(13) Exhaust camshaft (LH)	(26) Exhaust oil flow control solenoid valve (RH)	

General Description

MECHANICAL

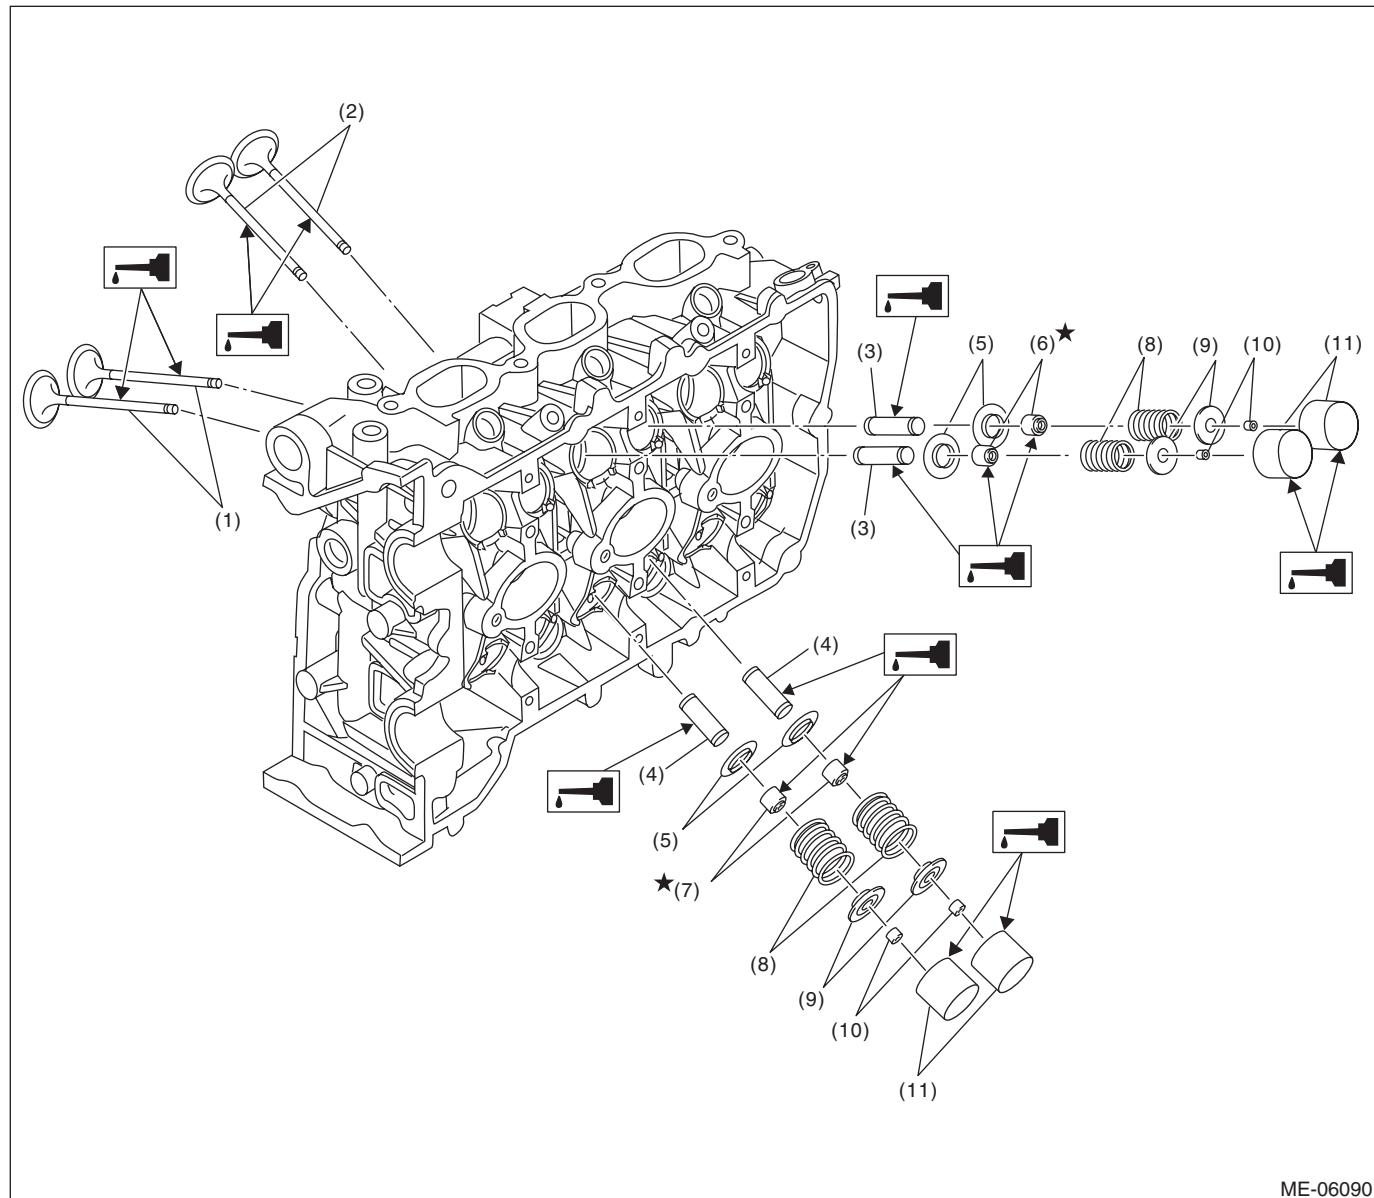
5. CYLINDER HEAD AND VALVE ASSEMBLY



ME-06090

(1) Intake valve	(5) Valve spring seat	(9) Valve spring retainer
(2) Exhaust valve	(6) Stem seal (Intake)	(10) Valve collet
(3) Valve guide (Intake)	(7) Stem seal (Exhaust)	(11) Valve lifter
(4) Valve guide (Exhaust)	(8) Valve spring	

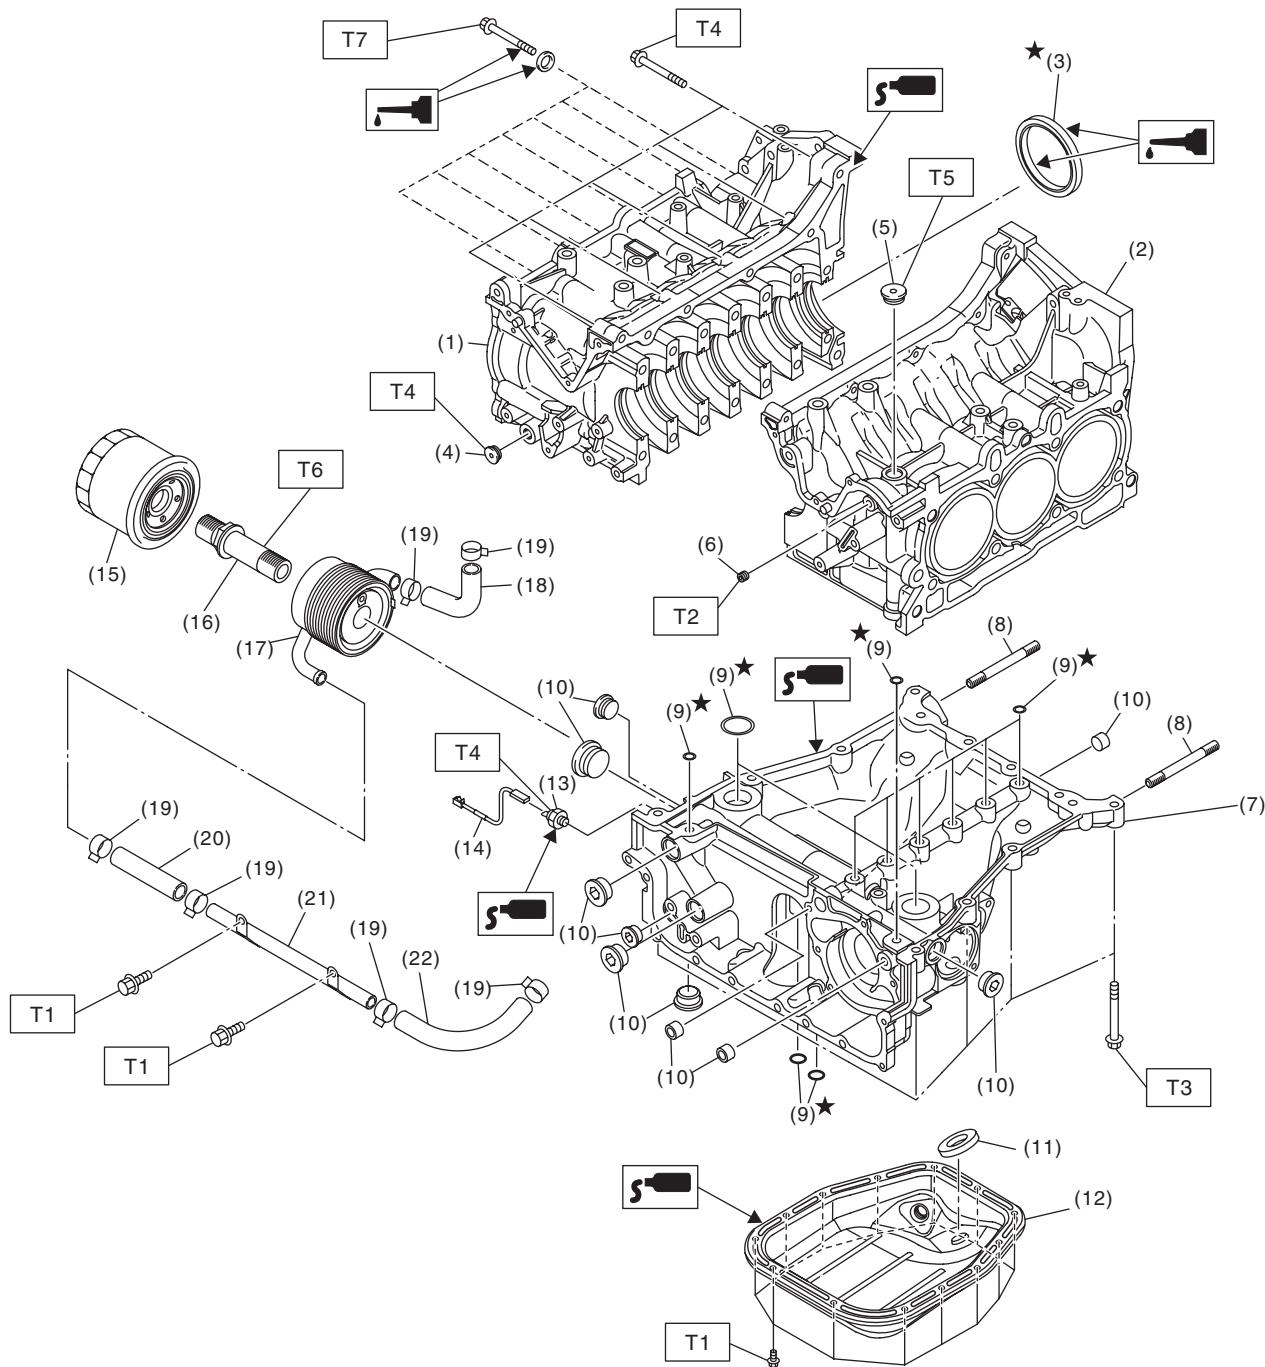6. CYLINDER BLOCK




ME-04988

General Description

MECHANICAL

(1) Cylinder block (RH)	(12) Oil pan lower	Tightening torque: N·m (kgf·m, ft-lb)
(2) Cylinder block (LH)	(13) Oil pressure switch	T1: 6.4 (0.7, 4.7)
(3) Oil seal	(14) Oil pressure switch harness	T2: 17 (1.7, 12.5)
(4) Plug	(15) Oil filter	T3: 18 (1.8, 13.3)
(5) Plug	(16) Oil cooler connector	T4: 25 (2.5, 18.4)
(6) Orifice	(17) Oil cooler	T5: 37 (3.8, 27.3)
(7) Oil pan upper	(18) Hose	T6: 54 (5.5, 39.8)
(8) Stud bolt	(19) Clamp	T7: <Ref. to ME(H6DO)-97, Cylinder Block.>
(9) O-ring	(20) Hose	
(10) Plug	(21) Oil cooler pipe	
(11) Magnet	(22) Hose	

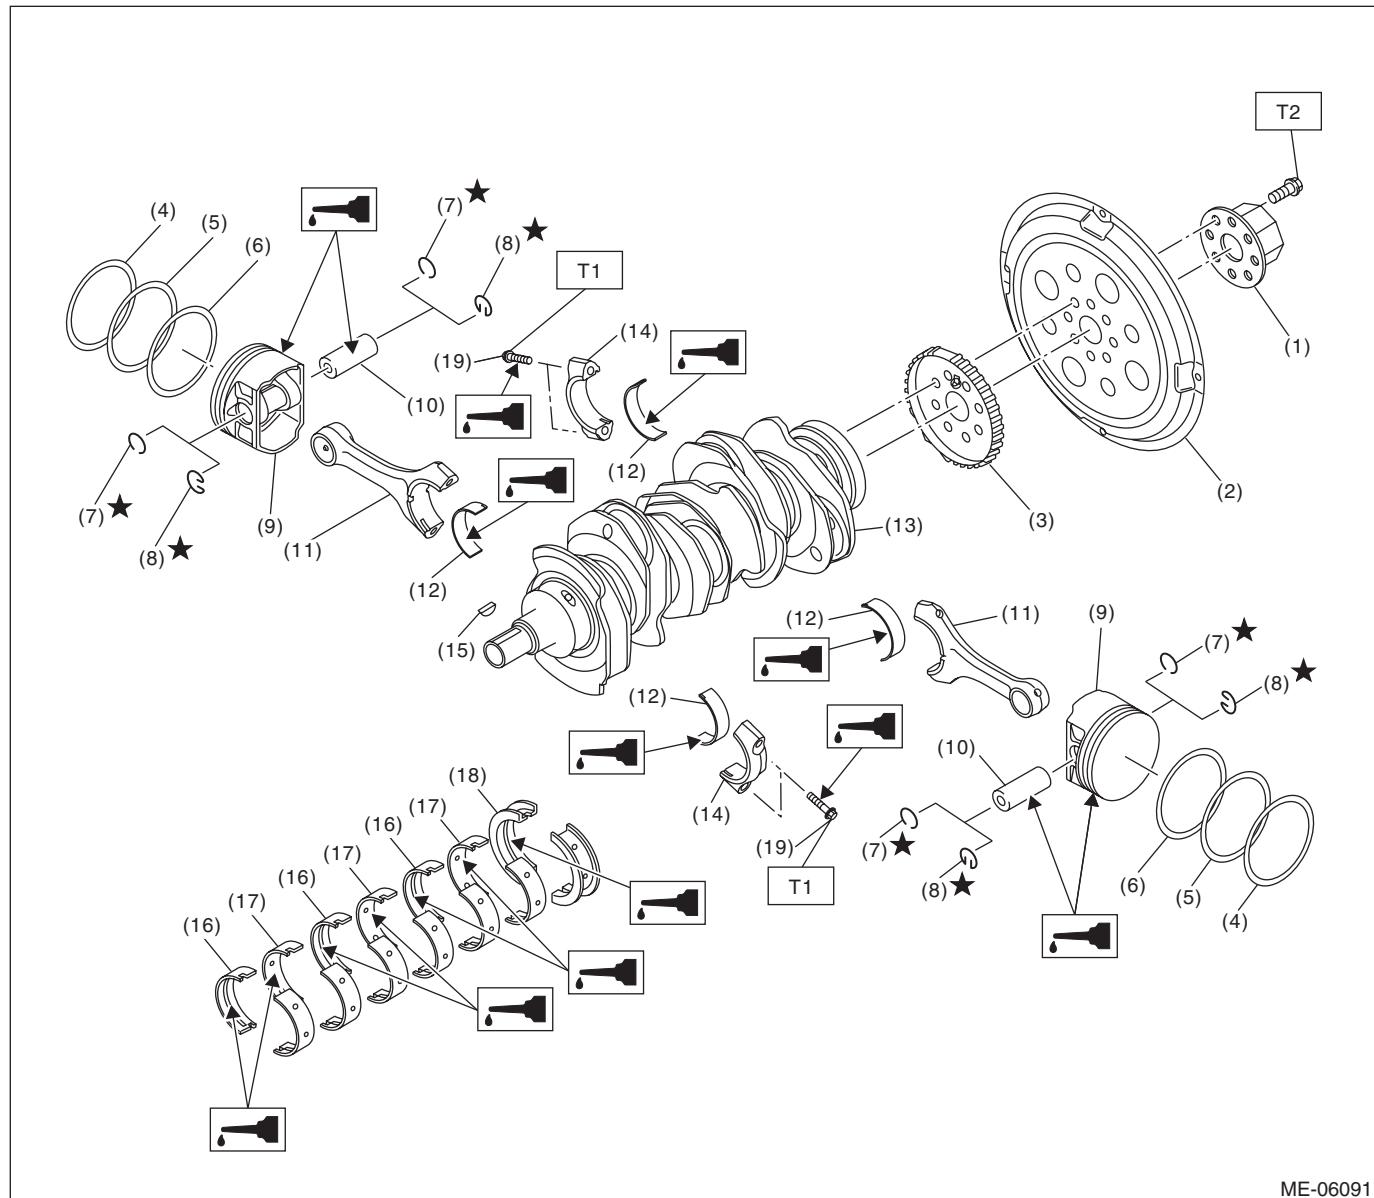7. CRANKSHAFT AND PISTON



ME-06091

(1) Reinforcement	(9) Piston	(17) Crankshaft bearing #2, #4, #6
(2) Drive plate	(10) Piston pin	(18) Crankshaft bearing #7
(3) Crankshaft sensor plate	(11) Connecting rod	(19) Connecting rod cap bolt
(4) Top ring	(12) Connecting rod bearing	
(5) Second ring	(13) Crankshaft	
(6) Oil ring	(14) Connecting rod cap	
(7) Circlip	(15) Woodruff key	
(8) Snap ring	(16) Crankshaft bearing #1, #3, #5	

Tightening torque:N·m (kgf·m, ft·lb)

T1: 60 (6.1, 44.3)

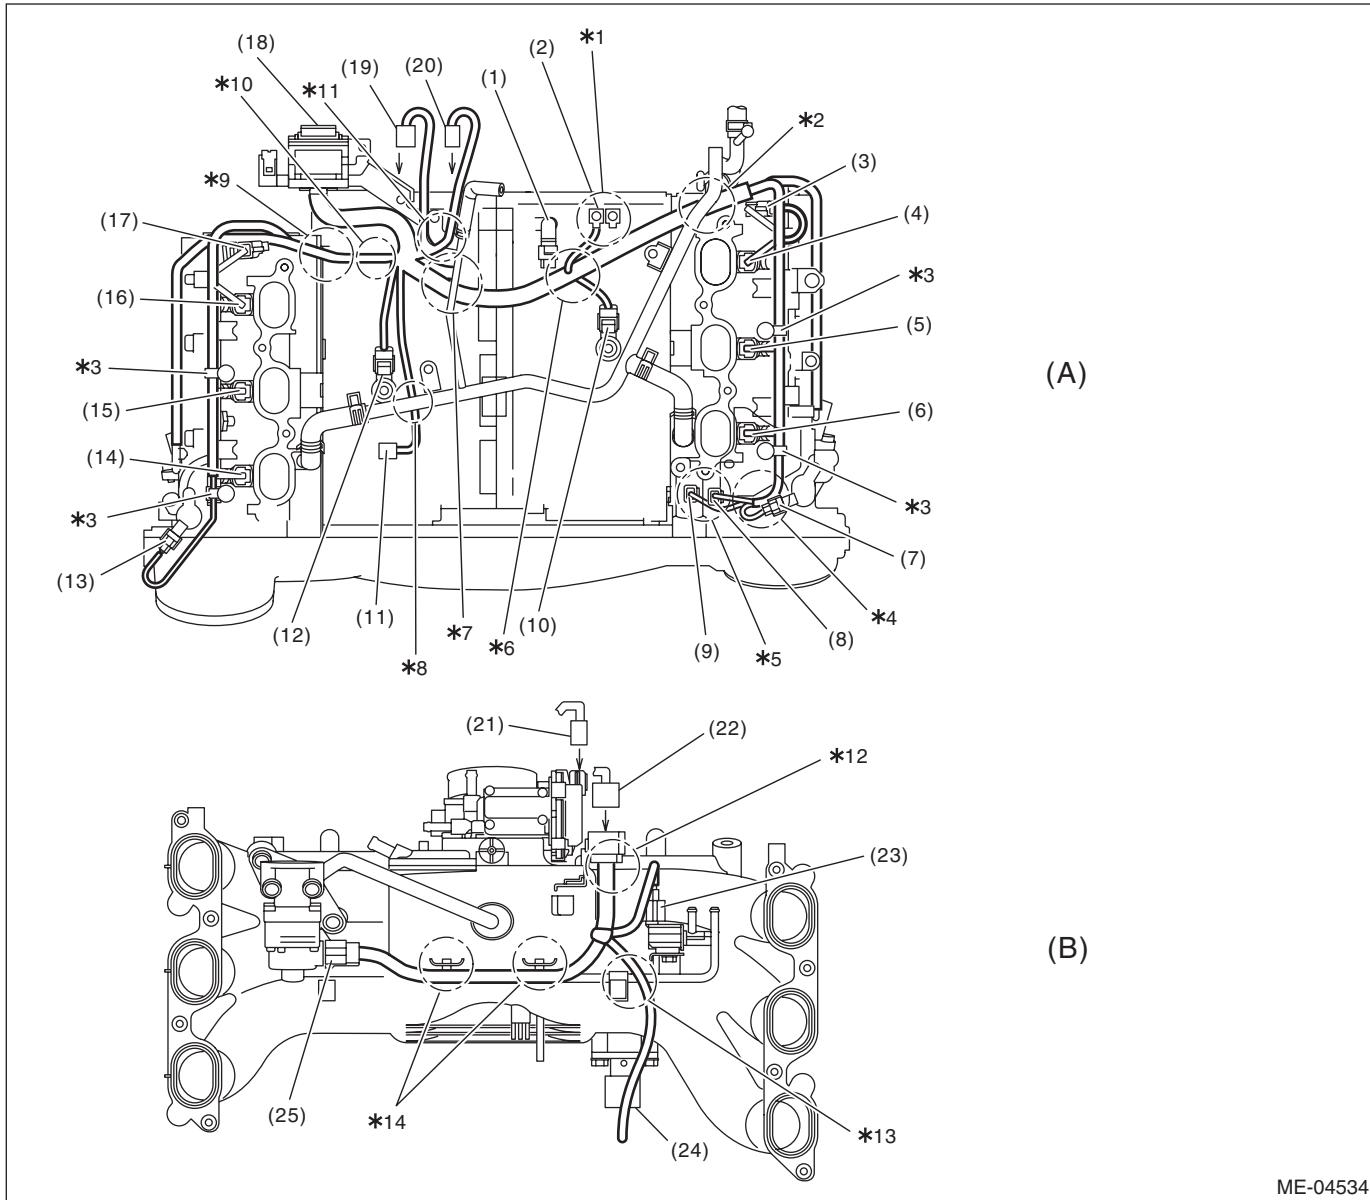
T2: <Ref. to 5AT-62, INSTALLATION, Drive Plate.>

General Description

MECHANICAL

8. ENGINE HARNESS

Engine harness assembly diagram 1



General Description

MECHANICAL

(A) Cylinder block upper face	(B) Intake manifold back surface	
(1) Crankshaft position sensor connector	(10) Knock sensor LH connector	(19) Upper/lower connection connector (To intake manifold)
(2) Engine ground	(11) Power steering switch connector	(20) Electronic throttle control connector (To intake manifold)
(3) Intake camshaft position sensor LH connector	(12) Knock sensor RH connector	(21) Electronic throttle control connector (From upper part of the cylinder block)
(4) #6 injector connector	(13) Intake oil flow control solenoid valve RH connector	(22) Upper/lower connection connector (From upper part of the cylinder block)
(5) #4 injector connector	(14) #1 injector connector	(23) Purge control solenoid valve connector
(6) #2 injector connector	(15) #3 injector connector	(24) Manifold absolute pressure sensor connector
(7) Intake oil flow control solenoid valve LH connector	(16) #5 injector connector	(25) EGR valve connector
(8) Oil temperature sensor connector	(17) Intake camshaft position sensor RH connector	
(9) Engine coolant temperature sensor connector	(18) Engine harness docking connector	

*1: Install so that engine ground terminals face the rear side of vehicle.

*2: Route under the heater pipe.

*3: Attach the engine harness fixing clip to the fuel pipe stay.

*4: Route from the cutout portion on the fuel pipe protector LH.

*5: Be careful not to mix up the connectors of oil temperature sensor and engine coolant temperature sensor.

*6: Route between crankshaft position sensor and knock sensor LH.

*7: Route under the heater pipe.

*8: Route under the heater pipe.

*9: Route under the fuel pipe.

*10: Attach the engine harness fixing clip to the fixing boss on the cylinder block.

*11: Route over the heater pipe stay.

*12: Securely install the engine harness fixing stay.

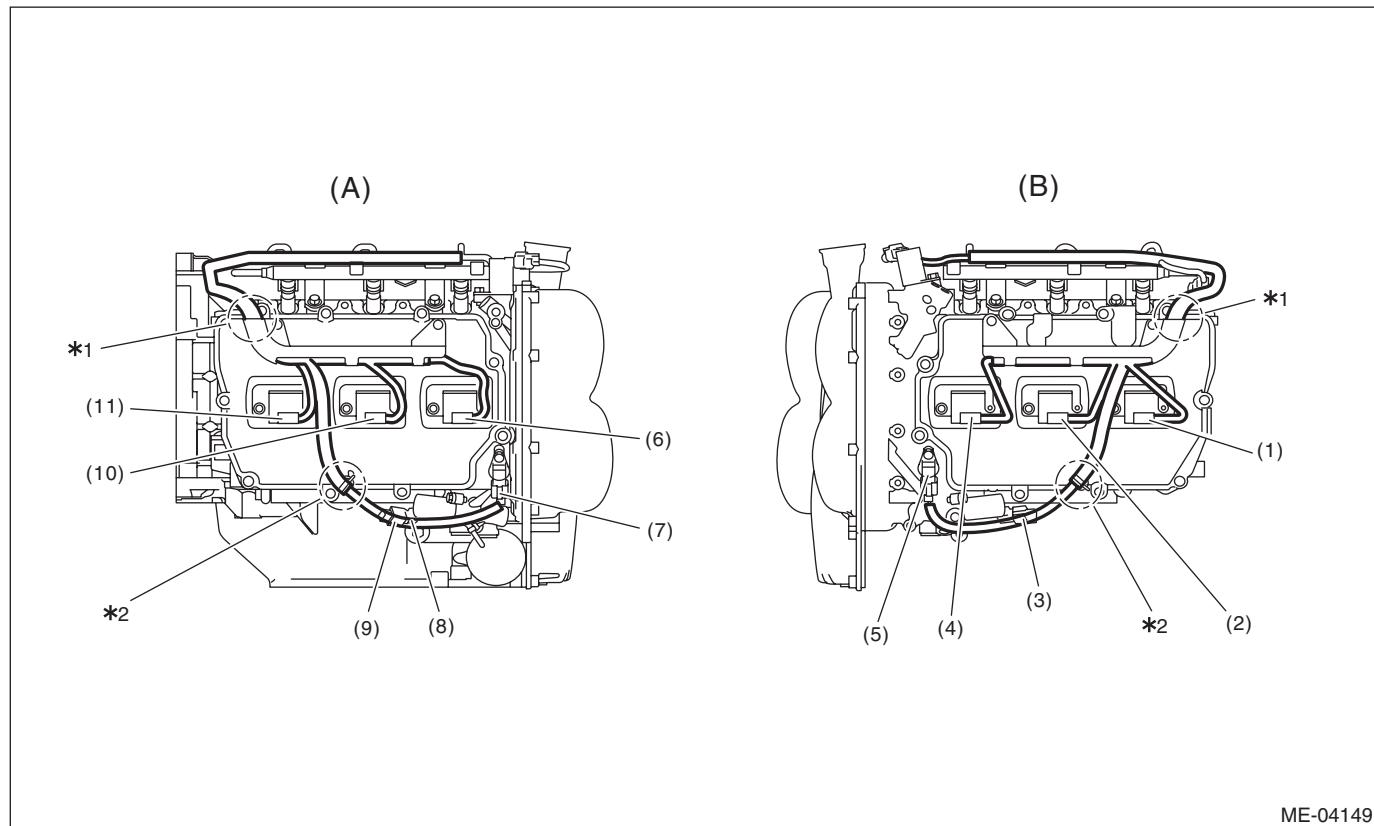
*13: Route outside the fuel pipe.

*14: Attach the engine harness fixing clip to the fixing stay on the intake manifold.

General Description

MECHANICAL

Engine harness assembly diagram 2



ME-04149

(A) Right side of the engine


(B) Left side of the engine

(1) #6 ignition coil connector	(5) Exhaust camshaft position sensor LH connector	(9) Exhaust oil flow control valve solenoid RH connector
(2) #4 ignition coil connector	(6) #1 injector connector	(10) #3 ignition coil connector
(3) Exhaust oil flow control valve solenoid LH connector	(7) Exhaust camshaft position sensor RH connector	(11) #5 ignition coil connector
(4) #2 ignition coil connector	(8) Oil pressure switch connector	

*1: Align the engine harness stay end with the end of engine harness identification tape.

*2: Attach the engine harness fixing clip to the fixing boss on the rocker cover.

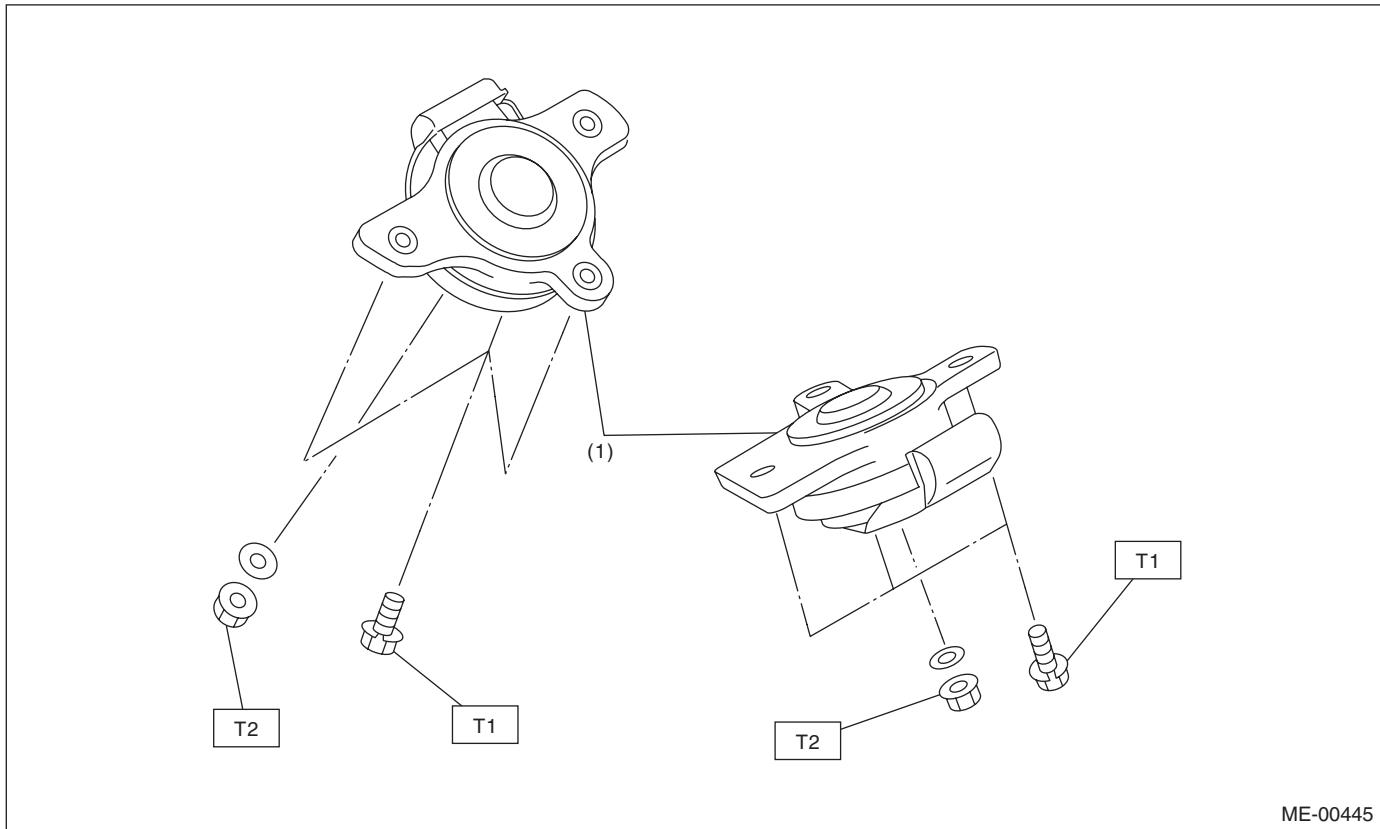9. ENGINE MOUNTING



(1) Front cushion rubber

Tightening torque:N·m (kgf·m, ft-lb)

T1: 35 (3.6, 25.8)





T2: 75 (7.6, 55.3)

C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- All parts should be thoroughly cleaned, paying special attention to engine oil passages, pistons and bearings.
- Before applying liquid gasket, completely remove the old liquid gasket and degrease it.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
- All removed parts, if to be reused, should be reinstalled in the original positions and directions.
- Bolts, nuts and washers should be replaced with new parts as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making re-checks.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools, or not to stain seats and windows with coolant or oil. Place a cover over fender, as required, for protection.
- Prior to starting work, prepare the following:
Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift up or lower the vehicle when necessary. Make sure to support the correct positions.






D: PREPARATION TOOL

1. SPECIAL TOOL

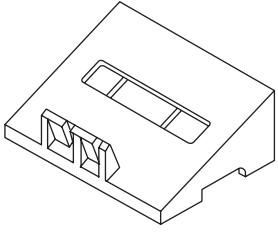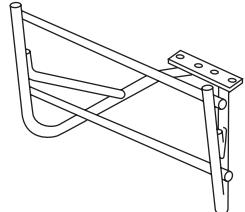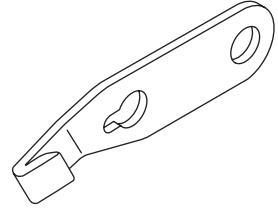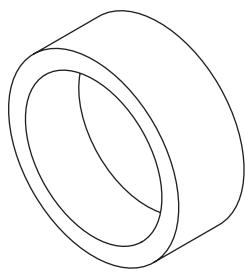ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18250AA010	18250AA010	CYLINDER HEAD TABLE	<ul style="list-style-type: none">Used for replacing valve guides.Used for removing and installing valve spring.
 ST18232AA000	18232AA000	ENGINE STAND	Used for disassembling and assembling engine.
 ST-498497100	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of drive plate when removing/tightening crank pulley bolt.
 ST-398744300	398744300	PISTON GUIDE	Used for installing piston in cylinder.






General Description

MECHANICAL

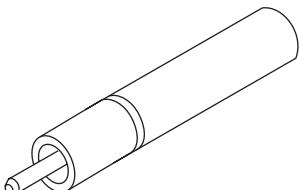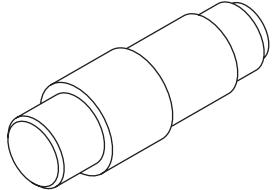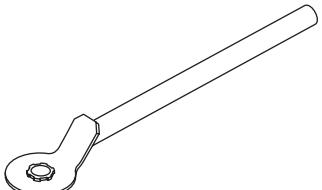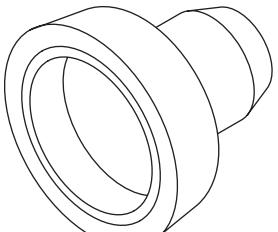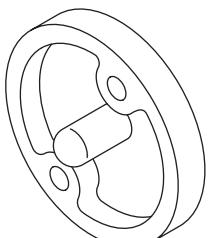ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18261AA010	18261AA010	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.
 ST18350AA000	18350AA000	CONNECTING ROD BUSHING REMOVER AND INSTALLER	Used for removing and installing connecting rod bushing.
 ST-499977500	499977500	CAM SPROCKET WRENCH	Used for removing and installing cam sprocket.
 ST-499587200	499587200	CRANKSHAFT OIL SEAL INSTALLER	<ul style="list-style-type: none"> Used for installing crankshaft oil seal. Used together with CRANKSHAFT OIL SEAL GUIDE (499597100).
 ST-499597100	499597100	CRANKSHAFT OIL SEAL GUIDE	<ul style="list-style-type: none"> Used for installing crankshaft oil seal. Used together with CRANKSHAFT OIL SEAL INSTALLER (499587200).






General Description

MECHANICAL

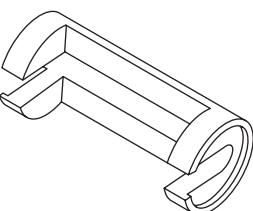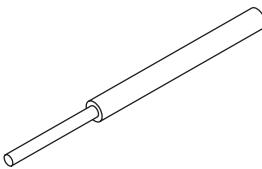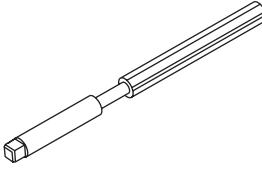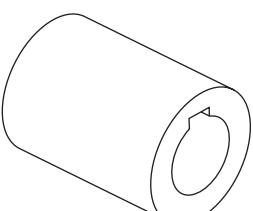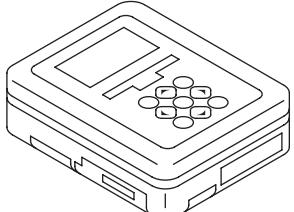ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499718000	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.
 ST-499765700	499765700	VALVE GUIDE REMOVER	Used for removing valve guides.
 ST-499765900	499765900	VALVE GUIDE REAMER	Used for reaming valve guides.
 ST18252AA000	18252AA000	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 ST1B022XU0	1B022XU0	SUBARU SELECT MONI- TOR III KIT	Used for troubleshooting the electrical system.






General Description

MECHANICAL

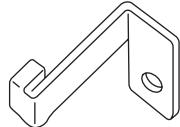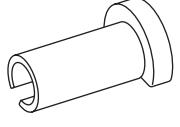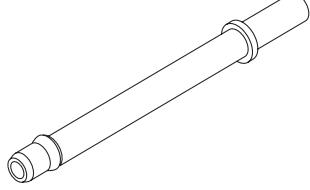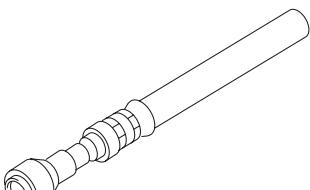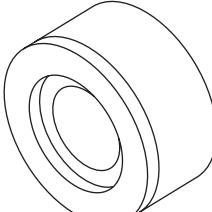ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
   ST-498277200	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.
 ST42099AE000	42099AE000	QUICK CONNECTOR RELEASE	Used for disconnecting quick connector of the engine compartment.
 ST18471AA000	18471AA000	FUEL PIPE ADAPTER	Used for measuring fuel pressure.
 ST42075AG690	42075AG690	FUEL HOSE	<ul style="list-style-type: none"> • Used for measuring fuel pressure. • This is the SUBARU genuine part.
 ST18251AA050	18251AA050	VALVE GUIDE ADJUSTER	Used for installing valve guides on intake side.

General Description

MECHANICAL

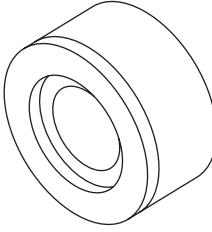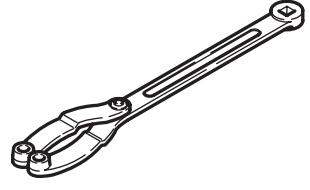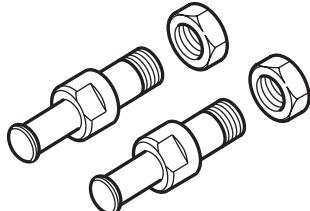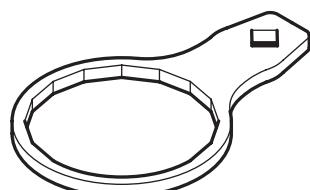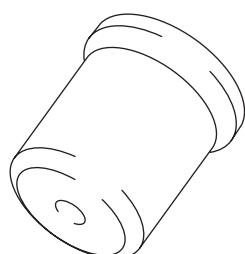ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18251AA060	18251AA060	VALVE GUIDE ADJUSTER	Used for installing valve guides on exhaust side.
 ST18355AA000	18355AA000	PULLEY WRENCH	<ul style="list-style-type: none"> Used for stopping rotation of crank pulley when removing and installing crank pulley bolt. Used for stopping rotation of idler sprocket when removing and installing idler sprocket bolt.
 ST18334AA000	18334AA000	PULLEY WRENCH PIN SET	<ul style="list-style-type: none"> Used for stopping rotation of crank pulley when removing and installing crank pulley bolt. Used for stopping rotation of idler sprocket when removing and installing idler sprocket bolt.
 ST18332AA020	18332AA020	OIL FILTER WRENCH	Used for removing and installing oil filter.
 ST-499585700	499585700	OIL SEAL GUIDE	Used for installing the chain cover oil seal.

General Description

MECHANICAL

2. GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Vacuum gauge	Used for measuring intake manifold vacuum.
Oil pressure gauge	Used for measuring engine oil pressure.
Fuel pressure gauge	Used for measuring fuel pressure.
TORX® socket (E12)	Used for removing and installing connecting rod cap.