

# SUZUKI

***SQ416/SQ420***  
***SQ625***

## SERVICE MANUAL

VOLUME 2 OF 2  
ENGINE

**SUZUKI**  
Caring for Customers  
99500-65D02-01E  
(英)

# IMPORTANT

## WARNING/CAUTION/NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the words **WARNING**, **CAUTION** and **NOTE** have special meanings. Pay special attention to the messages highlighted by these signal words.

### WARNING:

Indicates a potential hazard that could result in death or injury.

### CAUTION:

Indicates a potential hazard that could result in vehicle damage.

### NOTE:

Indicates special information to make maintenance easier or instructions clearer.

### WARNING:

This service manual is intended for authorized SUZUKI dealers and qualified service mechanics only. Inexperienced mechanics or mechanics without the proper tools and equipment may not be able to properly perform the services described in this manual. Improper repair may result in injury to the mechanic and may render the vehicle unsafe for the driver and passengers.

### WARNING:

For vehicles equipped with a Supplemental Restraint (Air Bag) System:

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components and Wiring Location View" under "General Description" in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and "Service Precautions" under "On-Vehicle Service" in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- If the air bag system and another vehicle system both need repair, SUZUKI recommends that the air bag system be repaired first, to help avoid unintended air bag system activation.
- Do not modify the steering wheel, instrument panel or any other air bag system component (on or around air bag system components or wiring). Modifications can adversely affect air bag system performance and lead to injury.
- If the vehicle will be exposed to temperatures over 93°C (200°F) (for example, during a paint baking process), remove the air bag system components (air bag (inflator) module, sensing and diagnostic module (SDM), seat belt pretensioner (if equipped) beforehand to avoid component damage or unintended activation.

# FOREWORD

This manual (Volumes 1 and 2) contains procedures for diagnosis, maintenance, adjustments, minor service operations, replacement of components (Service) and for disassembly and assembly of major components (Unit Repair-Overhaul).

VOLUME 1 contains Chassis, Electrical and Body sections (all sections except engine).

VOLUME 2 contains Engine sections (Sections 6 – 6K).

## **Applicable model: SQ416/SQ420/SQ625**

The contents are classified into sections each of which is given a section number as indicated in the Table of Contents on next page. And on the first page of each individual section is an index of that section.

This manual should be kept in a handy place for ready reference of the service work.

Strict observance of the so specified items will enable one to obtain the full performance of the vehicle.

When replacing parts or servicing by disassembling, it is recommended to use SUZUKI genuine parts, tools and service materials (lubricant, sealants, etc.) as specified in each description.

All information, illustrations and specifications contained in this literature are based on the latest product information available at the time of publication approval. And used as the main subject of description is the vehicle of standard specifications among others.

Therefore, note that illustrations may differ from the vehicle being actually serviced.

The right is reserved to make changes at any time without notice.

## **RELATED MANUALS:**

Manual Name	Manual No.
SQ416/SQ420/SQ625 Unit Repair Manual for Manual Transmission, Automatic Transmission, Transfer and Differential.	99501-65D00
SQ416/SQ420/SQ625 Wiring Diagram Manual	99512-65D00

**SUZUKI MOTOR CORPORATION**

*OVERSEAS SERVICE DEPARTMENT*

TABLE OF CONTENTS	SECTION
<b>GENERAL INFORMATION</b>	
General Information	0A
Maintenance and Lubrication	0B
<b>HEATING AND AIR CONDITIONING</b>	
Heater and Ventilation	1A
Air Conditioning	1B
<b>STEERING, SUSPENSION, WHEELS AND TIRES</b>	3
Front End Alignment	3A
Power Steering (P/S) System	3B1
Steering Wheel and Column (Not Equipped with Air Bag)	3C
Air Bag Steering Wheel and Column	3C1
Front Suspension	3D
Rear Suspension	3E
Wheel and Tires	3F
<b>DRIVE SHAFT/PROP. SHAFT</b>	
Front Drive Shaft/Shaft Bearing, Oil Seal	4A2
Propeller Shaft	4B
<b>BRAKES</b>	5
Brake Pipe/Hose/Master Cylinder	5A
Front Brakes	5B
Parking and Rear Brakes	5C
Antilock Brake System	5E1

TABLE OF CONTENTS	SECTION
<b>ENGINE</b>	
General Information and Diagnosis	6
Engine Mechanical (G16)	6A1
Engine Mechanical (H25)	6A2
Engine Mechanical (J20)	6A4
Engine Cooling	6B
Engine Fuel	6C
Engine and Emission Control System (SF1 for G16/J20)	6E1
Engine and Emission Control System (SF1 for H25)	6E2
Ignition System (G16)	6F1
Ignition System (J20/H25)	6F2
Cranking System (Reduction Type)	6G
Cranking System (No-Reduction Type)	6G1
Charging System	6H
Exhaust System	6K
<b>TRANSMISSION, CLUTCH AND DIFFERENTIAL</b>	
Manual Transmission (Type 1)	7A
Manual Transmission (Type 2)	7A1
Automatic Transmission	7B1
Clutch (Hydraulic Type)	7C1
Transfer	7D
Differential (Front)	7E
Differential (Rear)	7F
<b>BODY ELECTRICAL SYSTEM</b>	8
Wiring Diagram	8A
Lighting System	8B
Instrumentation/Driver Information	8C
Windows, Mirrors, Security and Lock	8D
Immobilizer Control System	8G
<b>BODY SERVICE</b>	9
<b>RESTRAINT SYSTEM</b>	10
Seat Belt	10A
Air Bag System	10B
<b>SERVICE BULLETIN</b>	
Power Steering (P/S) System	3B1

0A	6
0B	6A1
1A	6A2
1B	6A4
3	6B
3A	6C
3B1	6E1
3C	6E2
3C1	6F1
3D	6F2
3E	6G
3F	6G1
4A2	6H
4B	6K
5	7A
5A	7A1
5B	7B1
5C	7C1
5E1	7D
	7E
	7F
	8
	8A
	8B
	8C
	8D
	8G
	9
	10
	10A
	10B
	3B1

**NOTE:**

The screen toned Sections 0A – 5E1 and 7A – 10B are included in Volume 1 and section 8A is in Wiring Diagram Manual mentioned in Foreword of this manual.



## SECTION 6

# ENGINE

## (G16/J20/H25 ENGINE)

**WARNING:**

**For vehicles equipped with Supplemental Restraint (Air Bag) System:**

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to “Air Bag System Components and Wiring Location View” under “General Description” in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and “Service Precautions” under “On-Vehicle Service” in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the “LOCK” position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

## CONTENTS



<b>GENERAL INFORMATION</b> .....	6- 1
<b>ENGINE DIAGNOSIS</b> .....	6- 6
On-Board Diagnostic System .....	6- 6
Precaution in Diagnosing Troubles .....	6- 6
Engine Diagnostic Flow Table .....	6- 7
Engine Diagnosis Table .....	6-12

## GENERAL INFORMATION

### STATEMENT ON CLEANLINESS AND CARE


An automobile engine is a combination of many machined, honed, polished and lapped surfaces with tolerances that are measured in the thousands of an millimeter (ten thousands of inch). Accordingly, when any internal engine parts are serviced, care and cleanliness are important. Throughout this section, it should be understood that proper cleaning and protection of machined surfaces and friction areas is part of the repair procedure. This is considered standard shop practice even if not specifically stated.

- A liberal coating of engine oil should be applied to friction areas during assembly to protect and lubricate the surfaces on initial operation.
- Whenever valve train components, pistons, piston rings, connecting rods, rod bearings, and crankshaft journal bearings are removed for service, they should be retained in order. At the time of installation, they should be installed in the same locations and with the same mating surfaces as when removed.
- Battery cables should be disconnected before any major work is performed on the engine. Failure to disconnect cables may result in damage to wire harness or other electrical parts.

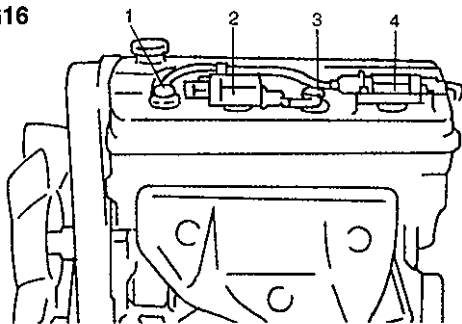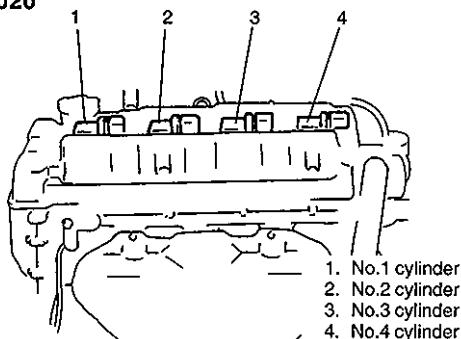**G16****J20**

1. No.1 cylinder
2. No.2 cylinder
3. No.3 cylinder
4. No.4 cylinder

- Throughout this manual, the four cylinders of the engine are identified by numbers: No.1, No.2, No.3 and No.4 as counted from crankshaft pulley side to flywheel side.

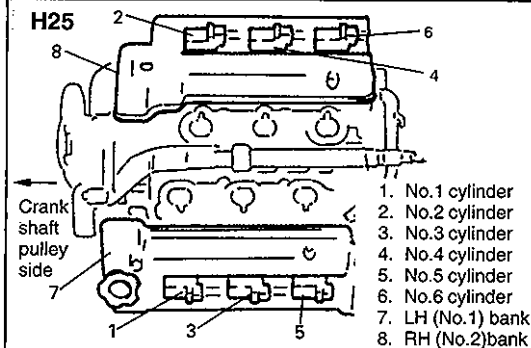**H25**

1. No.1 cylinder
2. No.2 cylinder
3. No.3 cylinder
4. No.4 cylinder
5. No.5 cylinder
6. No.6 cylinder
7. LH (No.1) bank
8. RH (No.2) bank

- Throughout this manual, the 6 cylinders of the engine are identified by numbers; No.1, No.2, No.3, No.4, No.5 and No.6 as counted from crankshaft pulley side to flywheel side.
- Figure at the left shows engine with intake manifold removed and viewed from the top.  
LH (No.1) bank consists of No.1, No.3 and No.5 cylinders.  
RH (No.2) bank consists of No.2, No.4 and No.6 cylinders.


## GENERAL INFORMATION ON ENGINE SERVICE

THE FOLLOWING INFORMATION ON ENGINE SERVICE SHOULD BE NOTED CAREFULLY, AS IT IS IMPORTANT IN PREVENTING DAMAGE, AND IN CONTRIBUTING TO RELIABLE ENGINE PERFORMANCE.

- When raising or supporting engine for any reason, do not use a jack under oil pan. Due to small clearance between oil pan and oil pump strainer, jacking against oil pan may cause it to be bent against strainer resulting in damaged oil pick-up unit.
- It should be kept in mind, while working on engine, that 12-volt electrical system is capable of violent and damaging short circuits.


When performing any work where electrical terminals could possibly be grounded, ground cable of the battery should be disconnected at battery.

- Any time the air cleaner, air intake hose, throttle body or intake manifold is removed, the intake opening should be covered. This will protect against accidental entrance of foreign material which could follow intake passage into cylinder and cause extensive damage when engine is started.

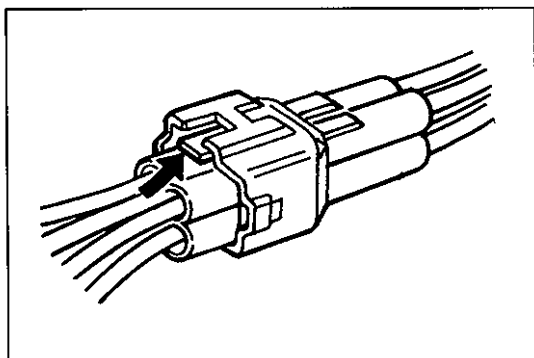


- When disconnecting couplers, don't pull wire harness but make sure to hold coupler itself. With lock type coupler, be sure to unlock before disconnection. Attempt to disconnect coupler without unlocking may result in damage to coupler. When connecting lock type coupler, insert it till clicking sound is heard and connect it securely.


With short pipe, fit hose as far as it reaches pipe joint as shown.

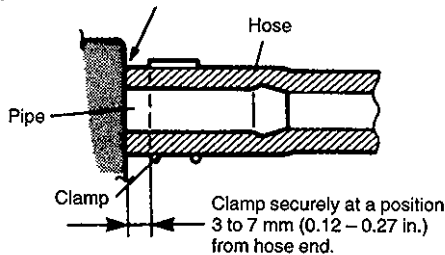


With following type pipe, fit hose as far as its peripheral projection as shown.

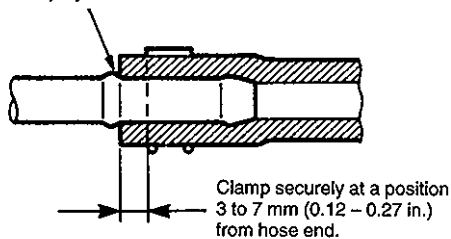

With bent pipe, fit hose as far as its bent part as shown or till pipe is about 20 to 30 mm (0.79 - 1.18 in.) into the hose.

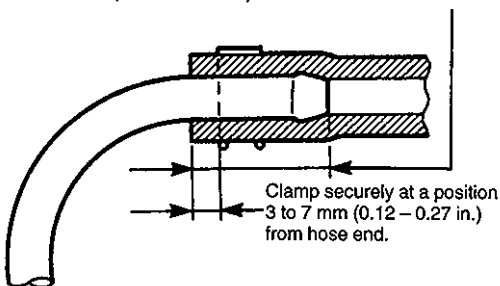

With straight pipe, fit hose till pipe is about 20 to 30 mm (0.79 - 1.18 in.) into the hose.

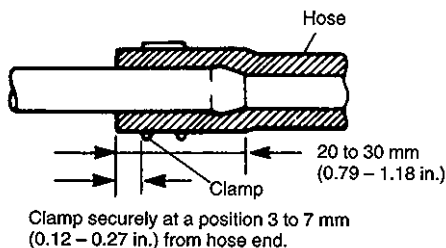


## PRECAUTION ON FUEL SYSTEM SERVICE

- Work must be done with no smoking, in a well-ventilated area and away from any open flames.
- As fuel feed line (between fuel pump and fuel pressure regulator) is still under high fuel pressure even after engine was stopped, loosening or disconnecting fuel feed line directly may cause dangerous spout of fuel to occur where loosened or disconnected. Before loosening or disconnecting fuel feed line, make sure to release fuel pressure according to "FUEL PRESSURE RELIEF PROCEDURE".


A small amount of fuel may be released after the fuel line is disconnected.

In order to reduce the chance of personal injury, cover the fitting to be disconnected with a shop cloth. Put that cloth in an approved container when disconnection is completed.

- Never run engine with fuel pump relay disconnected when engine and exhaust system are hot.
- Fuel or fuel vapor hose connection varies with each type of pipe. When reconnecting fuel or fuel vapor hose, be sure to connect and clamp each hose correctly referring to left figure. After connecting, make sure that the hose has no twist or kink.
- When installing fuel union bolt gasket, always use new gasket and tighten union bolt to specified torque. See Section 6C for specified torque.
- When installing injector, fuel feed pipe or fuel pressure regulator, lubricate its O-ring with spindle oil or gasoline.
- When connecting fuel pipe flare nut, first tighten flare nut by hand and then tighten it to specified torque.

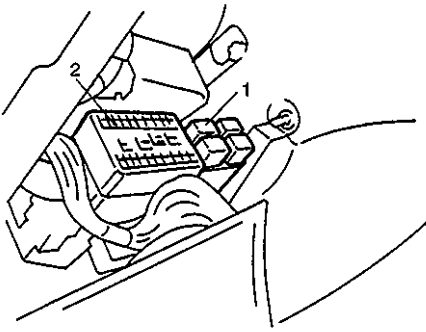**Left hand steering vehicle**

1. Fuel pump relay  
2. Fuse box

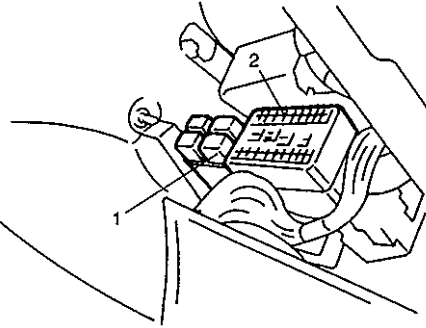**Right hand steering vehicle**

1. Fuel pump relay  
2. Fuse box

**FUEL PRESSURE RELIEF PROCEDURE****CAUTION:**

**This work must not be done when engine is hot. If done so, it may cause adverse effect to catalyst.**

After making sure that engine is cold, relief fuel pressure as follows.

- 1) Place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T vehicle), set parking brake, and block drive wheels.
- 2) Remove fuel pump relay from relay box.
- 3) Remove fuel filler cap to release fuel vapor pressure in fuel tank and then reinstall it.
- 4) Start engine and run it till it stops for lack of fuel. Repeat cranking engine 2 – 3 times of about 3 seconds each time to dissipate fuel pressure in lines. Fuel connections are now safe for servicing.
- 5) Upon completion of servicing, install fuel pump relay to relay box.

**FUEL LEAKAGE CHECK PROCEDURE**

After performing any service on fuel system, check to make sure that there are no fuel leakages as follows.

- 1) Turn ON ignition switch for 3 seconds (to operate fuel pump) and then turn it OFF.  
Repeat this (ON and OFF) 3 or 4 times and apply fuel pressure to fuel line (till fuel pressure is felt by hand placed on fuel return hose).
- 2) In this state, check to see that there are no fuel leakages from any part of fuel system.

## ENGINE DIAGNOSIS

This vehicle is equipped with an engine and emission control system, which controls the A/F mixture, ignition timing, emission, etc. suitably to engine conditions by ECM (PCM). ECM (PCM) has an On-Board Diagnostic system which detects a malfunction in this system.

When diagnosing a trouble in the engine including this system, be sure to have understanding of the outline of "On-Board Diagnostic system" and each item in "Precaution in Diagnosing Trouble" and follow "ENGINE DIAGNOSTIC FLOW TABLE" given below to obtain correct result smoothly.

### ON-BOARD DIAGNOSTIC SYSTEM

Refer to "On-Board Diagnostic System" in Section 6E1 or 6E2.

### PRECAUTION IN DIAGNOSING TROUBLES

Be sure to read "Precaution in Diagnosing Troubles" in Section 6E1 or 6E2 and observe what is written there.

## ENGINE DIAGNOSTIC FLOW TABLE

Refer to the following pages for the details of each step.

STEP	ACTION	YES	NO
1	Customer Complaint Analysis 1) Perform customer complaint analysis. Was customer complaint analysis performed?	Go to Step 2.	Perform customer complaint analysis.
2	Diagnostic Trouble Code (DTC) Check, Record and Clearance 1) Check for DTC referring to "DTC Check" in Section 6E1. Is there any malfunction DTC(s)?	1) Print DTC or write it down and clear it by referring to "DTC Clearance" in section 6E1. 2) Go to Step 3.	Go to Step 4.
3	Visual Inspection 1) Perform Visual inspection referring to the "Visual Inspection" in this section. Is there any faulty condition?	1) Repair or replace malfunction part. 2) Go to Step 11.	Go to Step 5.
4	Visual Inspection 1) Perform visual inspection referring to the "Visual Inspection" in this section. Is there any faulty condition?		Go to Step 8.
5	Trouble Symptom Confirmation 1) Confirm trouble symptom referring to the "Trouble Symptom Confirmation" in this section. Is trouble symptom identified?	Go to Step 6.	Go to Step 7.
6	Rechecking and Record of DTC 1) Recheck for DTC referring to "DTC Check" in Section 6E1. Is there any DTC(s)?	Go to Step 9.	Go to Step 8.
7	Rechecking and Record of DTC 1) Recheck for DTC referring to "DTC Check" in Section 6E1. Is there any malfunction DTC(s)?		Go to Step 10.
8	Engine Basic Inspection and Engine Diagnosis Table 1) Check and repair according to "Engine Basic Check" and "Engine Diagnosis Table" in this section. Are check and repair complete?	Go to Step 11.	1) Check and repair malfunction part(s). 2) Go to Step 11.
9	Trouble shooting for DTC 1) Check and repair according to applicable DTC diag. flow table in Section 6E1 or 6E2. Are check and repair complete?		
10	Check for Intermittent Problems 1) Check for intermittent problems referring to "Check for Intermittent Problem" in this section. Is there any faulty condition?	1) Repair or replace malfunction part(s). 2) Go to Step 11.	Go to Step 11.
11	Final Confirmation Test 1) Clear DTC if any. 2) Perform final confirmation test referring to "Final Confirmation Test" in this section. Is there any problem symptom, malfunction DTC or abnormal condition?	Go to Step 6.	End.



**1. CUSTOMER COMPLAINT ANALYSIS**

Record details of the problem (failure, complaint) and how it occurred as described by the customer. For this purpose, use of such an inspection form will facilitate collecting information to the point required for proper analysis and diagnosis.

**CUSTOMER PROBLEM INSPECTION FORM (EXAMPLE)**

User name:	Model:	VIN:	
Date of issue:	Date of Reg.:	Date of problem:	Mileage:

**PROBLEM SYMPTOMS**

- |   |  |
|---|--|
| <input type="checkbox"/> <b>Difficult Starting</b><br><input type="checkbox"/> No cranking<br><input type="checkbox"/> No initial combustion<br><input type="checkbox"/> No combustion<br><input type="checkbox"/> Poor starting at<br>( <input type="checkbox"/> cold <input type="checkbox"/> warm <input type="checkbox"/> always)<br><input type="checkbox"/> Other _____ | <input type="checkbox"/> <b>Poor Driveability</b><br><input type="checkbox"/> Hesitation on acceleration<br><input type="checkbox"/> Back fire/ <input type="checkbox"/> After fire<br><input type="checkbox"/> Lack of power<br><input type="checkbox"/> Surging<br><input type="checkbox"/> Abnormal knocking<br><input type="checkbox"/> Other _____  |
| <input type="checkbox"/> <b>Poor idling</b><br><input type="checkbox"/> Poor fast idle<br><input type="checkbox"/> Abnormal idling speed<br>( <input type="checkbox"/> High <input type="checkbox"/> Low) (     r/min.)<br><input type="checkbox"/> Unstable<br><input type="checkbox"/> Hunting (     r/min. to     r/min.)<br><input type="checkbox"/> Other _____          | <input type="checkbox"/> <b>Engine Stall when</b><br><input type="checkbox"/> Immediately after start<br><input type="checkbox"/> Accel. pedal is depressed<br><input type="checkbox"/> Accel. pedal is released<br><input type="checkbox"/> Load is applied<br><input type="checkbox"/> A/C <input type="checkbox"/> Electric load <input type="checkbox"/> P/S<br><input type="checkbox"/> Other _____<br><input type="checkbox"/> Other _____ |

☐ OTHERS:
**VEHICLE/ENVIRONMENTAL CONDITION WHEN PROBLEM OCCURS****Environmental Condition**

- |   |  |
|---|--|
| Weather<br>Temperature<br>Frequency<br>Road | <input type="checkbox"/> Fair <input type="checkbox"/> Cloudy <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Always <input type="checkbox"/> Other _____<br><input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold (   °F/   °C) <input type="checkbox"/> Always<br><input type="checkbox"/> Always <input type="checkbox"/> Sometimes (   times/   day, month) <input type="checkbox"/> Only once <input type="checkbox"/> Under certain condition<br><input type="checkbox"/> Urban <input type="checkbox"/> Suburb <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous ( <input type="checkbox"/> Uphill <input type="checkbox"/> Downhill) <input type="checkbox"/> Tarmacadam<br><input type="checkbox"/> Gravel <input type="checkbox"/> Other _____ |
|---|--|

**Vehicle Condition**

- |                      |   |
|----------------------|---|
| Engine<br>Condition  | <input type="checkbox"/> Cold <input type="checkbox"/> Warming up phase <input type="checkbox"/> Warmed up <input type="checkbox"/> Always <input type="checkbox"/> Other at starting<br><input type="checkbox"/> Immediately after start <input type="checkbox"/> Racing without load <input type="checkbox"/> Engine speed (     r/min)   |
| Vehicle<br>condition | <input type="checkbox"/> During driving: <input type="checkbox"/> Constant speed <input type="checkbox"/> Accelerating <input type="checkbox"/> Decelerating<br><input type="checkbox"/> Right hand corner <input type="checkbox"/> left hand corner <input type="checkbox"/> When shifting (Lever position     ) <input type="checkbox"/> At stop<br><input type="checkbox"/> Vehicle speed when problem occurs (   km/h,   Mile/h) <input type="checkbox"/> Other _____ |

- |   |  |
|---|--|
| Malfunction indicator<br>lamp condition | <input type="checkbox"/> Always ON <input type="checkbox"/> Sometimes ON <input type="checkbox"/> Always OFF <input type="checkbox"/> Good condition |
|---|--|

- |                            |   |
|----------------------------|---|
| Diagnostic trouble<br>code | First check: <input type="checkbox"/> No code <input type="checkbox"/> Normal code <input type="checkbox"/> Malfunction code (     )<br>Second check: <input type="checkbox"/> No code <input type="checkbox"/> Normal code <input type="checkbox"/> Malfunction code (     ) |
|----------------------------|---|

**NOTE:**

The above form is a standard sample. It should be modified according to conditions characteristic of each market.

## 2. DIAGNOSTIC TROUBLE CODE (DTC) CHECK, RECORD AND CLEARANCE

First, check DTC referring to "DTC Check" in Section 6E1. If DTC is indicated, print it or write it down and then clear it by referring to "DTC Clearance" in Section 6E1. DTC indicates malfunction that occurred in the system but does not indicate whether it exists now or it occurred in the past and the normal condition has been restored now. To check which case applies, check the symptom in question according to Step 5 and recheck DTC according to Step 6 or 7.

Attempt to diagnose a trouble based on DTC in this step only or failure to clear the DTC in this step will lead to incorrect diagnosis, trouble diagnosis of a normal circuit or difficulty in troubleshooting.

### NOTE:

If only Automatic transmission related DTC is indicated in this step, perform trouble diagnosis according to "Diagnosis" in Section 7B or 7B1.

## 3. and 4. VISUAL INSPECTION

Be sure to perform visual check of the following items that support proper function of the engine.

INSPECTION ITEM	REFERRING SECTION
● Engine oil ----- level, leakage	Section 0B
● Engine coolant ----- level, leakage	Section 0B
● Fuel ----- level, leakage	Section 0B
● A/T fluid ----- level, leakage	Section 0B
● Air cleaner element ----- dirt, clogging	Section 0B
● Battery ----- fluid level, corrosion of terminal	Section 0B
● Water pump belt and/or cooling fan belt ----- tension, damage	Section 0B
● Throttle cable ----- play, installation	Section 6E1/6E2
● A/T throttle cable ----- play, installation	
● Vacuum hoses of air intake system ----- disconnection, looseness, deterioration, bend	
● Connectors of electric wire harness ----- disconnection, friction	
● Fuses ----- burning	Section 8
● Parts ----- installation, bolt ----- looseness	
● Parts ----- deformation	
● Other parts that can be checked visually	
Also check following items at engine start, if possible	
● Malfunction indicator lamp ("CHECK ENGINE" lamp)	Section 6E1
● Charge warning lamp	Section 6H
● Engine oil pressure warning lamp	Section 8
● Engine coolant temp. meter	Section 8
● Fuel lever meter	Section 8
● Abnormal air being inhaled from air intake system	
● Exhaust system ----- leakage of exhaust gas, noise	
● Other parts that can be checked visually	

**5. TROUBLE SYMPTOM CONFIRMATION**

Based on information obtained in Step 1 Customer complaint analysis and Step 2 DTC check, confirm trouble symptoms. Also, reconfirm DTC according to "DTC Confirmation Procedure" in Section 6E1 or 6E2.

**6. and 7. RECHECKING AND RECORD OF DTC**

Refer to "DTC Check" in section 6E1 for checking procedure.

**8. ENGINE BASIC INSPECTION AND ENGINE DIAGNOSIS TABLE**

Perform basic engine check according to the "Engine Basic Inspection Flow Table" first. When the end of the flow table has been reached, check the parts of the system suspected as a possible cause referring to ENGINE DIAGNOSIS TABLE and based on symptoms appearing on the vehicle (symptoms obtained through steps of customer complaint analysis, trouble symptom confirmation and/or basic engine check) and repair or replace faulty parts, if any.

**ENGINE BASIC INSPECTION FLOW TABLE**

STEP	ACTION	YES	NO
1	Was "ENGINE DIAG. FLOW TABLE" performed?	Go to Step 2.	Go to "ENGINE DIAG. FLOW TABLE".
2	Check battery voltage. Is it 11 V or more?	Go to Step 3.	Charge or replace battery.
3	Is engine cranked?	Go to Step 4.	Go to "DIAGNOSIS" in section 6G or 6G1.
4	Does engine start?	Go to Step 5.	Go to Step 7.
5	Check engine idle speed/IAC duty referring to "Idle Speed/IAC Duty Inspection" in section 6E1 or 6E2. Is check result as specified?	Go to Step 6.	Go to "ENGINE DIAGNOSIS TABLE" in this section.
6	Check ignition timing referring to "Ignition Timing Inspection" in section 6F1 or 6F2. Is check result as specified?	Go to "ENGINE DIAGNOSIS TABLE" in this section.	Adjust ignition timing.
7	Check fuel supply as follows: 1) Check to make sure that enough fuel is filled in fuel tank. 2) Turn ON ignition switch for 3 seconds and then OFF. Repeat this a few times. Is fuel return pressure (returning sounds) felt from fuel return hose when ignition switch is turned ON?	Go to Step 9.	Go to Step 8.
8	Check fuel pump for operating. 1) Was fuel pump operating sound heard from fuel filler for about 3 seconds after ignition switch ON and stop?	Go to "Diag. Flow Table B-3" in section 6E1 or 6E2.	Go to "Diag. Flow Table B-1" in section 6E1 or 6E2.
9	Check ignition spark referring to "Ignition Spark Test" in section 6F1 or 6F2. Is it in good condition?	Go to Step 10.	Go to "DIAGNOSIS" in section 6F1 or 6F2.
10	Check fuel injector referring to "Fuel Injector Inspection" in section 6E1 or 6E2. Is it in good condition?	Go to "ENGINE DIAGNOSIS TABLE" in this section.	Go to "Diag. Flow Table B-2" in section 6E1 or 6E2.

**9. TROUBLESHOOTING FOR DTC**

Based on the DTC indicated in Step 6 or 7 and referring to the applicable DTC diag. flow table in Section 6E1 or 6E2, locate the cause of the trouble, namely in a sensor, switch, wire harness, connector, actuator, ECM (PCM) or other part and repair or replace faulty parts.

**10. CHECK FOR INTERMITTENT PROBLEM**

Check parts where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to "INTERMITTENT AND POOR CONNECTION" in Section 0A and related circuit of DTC recorded in step 2.

**11. FINAL CONFIRMATION TEST**

Confirm that the problem symptom has gone and the engine is free from any abnormal conditions. If what has been repaired is related to the DTC, clear the DTC once, perform DTC confirmation procedure and confirm that no malfunction DTC (a normal code) is indicated.

## ENGINE DIAGNOSIS TABLE

Condition	Possible Cause	Reference Item
Hard starting (Engine cranks OK)	<p><b>Ignition system out of order.</b></p> <ul style="list-style-type: none"> <li>● Blown fuse</li> <li>● Faulty spark plug</li> <li>● Loose connection or disconnection of lead wires</li> <li>● Faulty ignition coil with ignitor</li> <li>● Faulty camshaft position sensor</li> <li>● Improper ignition timing</li> <li>● Faulty ECM (PCM)</li> </ul> <p><b>Fuel system out of order.</b></p> <ul style="list-style-type: none"> <li>● Lack of fuel in fuel tank</li> <li>● Fuel pump circuit malfunction</li> <li>● Fuel pressure out of specification               <ul style="list-style-type: none"> <li>– Dirty fuel filter</li> <li>– Dirty or clogged fuel hose or pipe</li> <li>– Malfunctioning fuel pressure regulator</li> <li>– Malfunctioning fuel pump</li> </ul> </li> <li>● Vacuum leaks (or air inhaled in air intake system)</li> </ul> <p><b>Engine and emission control system out of order.</b></p> <ul style="list-style-type: none"> <li>● Faulty idle air control system</li> <li>● Fuel injector or its circuit faulty</li> <li>● Faulty CMP sensor</li> <li>● Faulty ECT sensor or MAF sensor</li> <li>● Faulty ECM (PCM)</li> </ul> <p><b>Low compression.</b></p> <ul style="list-style-type: none"> <li>● Poor spark plug tightening or faulty gasket</li> <li>● Faulty hydraulic valve lash adjuster (if equipped)</li> <li>● Compression leak from valve seat</li> <li>● Sticky valve stem</li> <li>● Weak or damaged valve springs</li> <li>● Compression leak at cylinder head gasket</li> <li>● Sticking or damaged piston ring</li> <li>● Worn piston, ring or cylinder</li> </ul> <p><b>Others</b></p> <ul style="list-style-type: none"> <li>● Malfunctioning PCV valve</li> <li>● Loose connection or disconnection of vacuum hoses</li> </ul>	<p>Spark plugs in Section 6F1/6F2. Connect securely.</p> <p>Ignition coils in Section 6F1/6F2. Camshaft position sensor in Section 6F1/6F2. Ignition timing in Section 6F1/6F2. Diagnosis in Section 6F1/6F2.</p> <p>Refill. Diag. Flow Table B-1 in Section 6E1/6E2. Diag. Flow Table B-3 in Section 6E1/6E2.</p> <p>Diag. Flow Table B-4 in Section 6E1/6E2. Diag. Flow Table B-2 in Section 6E1/6E2. CMP sensor in Section 6E1/6E2. ECT sensor or MAF sensor in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2. Compression check in Section 6A1/6A2/6A4. Spark plug in Section 6F1/6F2.</p> <p>Valve lash adjuster in Section 6A2/6A4. Valves inspection in Section 6A1/6A2/6A4. Valves inspection in Section 6A1/6A2/6A4. Valves spring inspection in Section 6A1/6A2/6A4. Cylinder head inspection in Section 6A1/6A2/6A4. Piston ring inspection in Section 6A1/6A2/6A4. Cylinders, pistons and piston rings inspection in Section 6A1/6A2/6A4.</p> <p>PCV system inspection in Section 6E1/6E2. Connect securely.</p>

Condition	Possible Cause	Reference Item
Engine has no power	<p><b>Engine overheating.</b></p> <p><b>Ignition system out of order.</b></p> <ul style="list-style-type: none"> <li>● Incorrect ignition timing</li> <li>● Defective spark plug</li> <li>● Faulty ignition coil with ignitor</li> </ul> <p><b>Fuel system out of order.</b></p> <ul style="list-style-type: none"> <li>● Fuel pressure out of specification               <ul style="list-style-type: none"> <li>– Dirty fuel filter</li> <li>– Dirty or clogged fuel hose or pipe</li> <li>– Malfunctioning fuel pressure regulator</li> <li>– Malfunctioning fuel pump</li> </ul> </li> <li>● Clogged air cleaner element</li> <li>● Vacuum leaks (or air inhaled) in air intake system</li> </ul> <p><b>Engine and emission control system out of order.</b></p> <ul style="list-style-type: none"> <li>● Maladjusted accelerator cable play</li> <li>● Maladjusted TP sensor installation angle if adjustable</li> <li>● Faulty EGR system (if equipped)</li> <li>● Faulty injector</li> <li>● Faulty TP sensor, ECT sensor or MAF sensor</li> <li>● Faulty ECM (PCM)</li> </ul> <p><b>Low compression.</b></p> <p><b>Others</b></p> <ul style="list-style-type: none"> <li>● Loose connection or disconnection of vacuum hoses</li> <li>● Dragging brakes</li> <li>● Slipping clutch</li> </ul>	<p>Refer to "Overheating" Section.</p> <p>Ignition timing in Section 6F1/6F2. Spark plugs in Section 6F1/6F2. Ignition coil in Section 6F1/6F2.</p> <p>Diag. Flow Table B-3 in Section 6E1/6E2.</p> <p>Air cleaner element in Section 6A1/6A2/6A4.</p> <p>Accelerator cable adjustment in Section 6E1/6E2. TP sensor in Section 6E2.</p> <p>Diag. Flow Table B-6 in Section 6E1/6E2. Fuel injector in Section 6E1/6E2. TP sensor, ECT sensor or MAF sensor in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2.</p> <p>Previously outlined.</p> <p>Connect Securely.</p> <p>Diagnosis in Section 5. Diagnosis in Section 7C1.</p>

Condition	Possible Cause	Reference Item
<b>Improper engine idling or engine fails to idle</b>	<p><b>Ignition system out of order.</b></p> <ul style="list-style-type: none"> <li>● Faulty spark plug</li> <li>● Faulty ignition coil with ignitor</li> <li>● Improper ignition timing</li> </ul> <p><b>Fuel system out of order.</b></p> <ul style="list-style-type: none"> <li>● Shortage of fuel in fuel tank</li> <li>● Clogged air cleaner element</li> </ul> <ul style="list-style-type: none"> <li>● Vacuum leaks (or air inhaled) in air intake system</li> <li>● Fuel pressure out of specification</li> </ul> <p>– Malfunctioning fuel pressure regulator</p> <p><b>Engine overheating.</b></p> <p><b>Engine and emission control system out of order.</b></p> <ul style="list-style-type: none"> <li>● Maladjusted accelerator cable play</li> <li>● Maladjusted TP sensor installation angle if adjustable</li> <li>● Faulty idle air control system</li> <li>● Faulty evaporative emission control system</li> <li>● Faulty EGR system (if equipped)</li> <li>● Faulty injector</li> <li>● Faulty ECT sensor, TP sensor or MAF sensor</li> <li>● Faulty ECM (PCM)</li> </ul> <p><b>Low compression</b></p> <p><b>Others</b></p> <ul style="list-style-type: none"> <li>● Loose connection or disconnection of vacuum hoses</li> <li>● Malfunctioning PCV valve</li> </ul>	<p>Spark plugs in Section 6F1/6F2. Ignition coil in Section 6F1/6F2. Ignition timing in Section 6F1/6F2.</p> <p>Refill Air cleaner element in Section 6A1/6A2/6A4.</p> <p>Diag. Flow Table B-3 in Section 6E1/6E2.</p> <p>Refer to "Overheating" Section.</p> <p>Accelerator cable adjustment in Section 6E1/6E2. TP sensor in Section 6E2.</p> <p>Diag. Flow Table B-4 in Section 6E1/6E2. Diag. Flow Table B-5 in Section 6E1/6E2. Diag. Flow Table B-6 in Section 6E1/6E2. Fuel injector in Section 6E1/6E2. ECT sensor, TP sensor or MAF sensor in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2.</p> <p>Previously outlined.</p> <p>Connect Securely.</p> <p>PCV system inspection in Section 6E1/6E2.</p>



Condition	Possible Cause	Reference Item
<b>Engine hesitates</b> (Momentary lack of response as the accelerator is depressed. Can occur at all vehicle speeds. Usually most severe when first trying to make the vehicle move, as from a stop sign.)	<b>Ignition system out of order.</b> <ul style="list-style-type: none"> <li>● Improper ignition timing</li> <li>● Spark plug faulty or plug gap as out of adjustment</li> </ul> <b>Fuel system out of order.</b> <ul style="list-style-type: none"> <li>● Clogged air cleaner element</li> <li>● Vacuum leaks (or air inhaled) in air intake system</li> <li>● Fuel pressure out of specification               <ul style="list-style-type: none"> <li>– Clogged fuel filter</li> <li>– Faulty fuel pressure regulator</li> </ul> </li> <li>● Clogged fuel filter, hose or pipe</li> </ul> <b>Engine overheating</b> <b>Engine and emission control system out of order.</b> <ul style="list-style-type: none"> <li>● Faulty EGR system (if equipped)</li> <li>● Faulty injector</li> <li>● Faulty TP sensor, ECT sensor or MAF sensor</li> <li>● Faulty ECM (PCM).</li> </ul> <b>Low compression</b>	Ignition timing in Section 6F1/6F2. Spark plugs in Section 6F1/6F2.  Air cleaner element in Section 6A1/6A2/6A4.  Diag. Flow Table B-3 in Section 6E1/6E2.  Fuel pressure check in Section 6E1/6E2. Refer to "Overheating" Section.  Diag. Flow Table B-6 in Section 6E1/6E2. Fuel injector in Section 6E1/6E2. TP sensor, ECT sensor or MAF sensor in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2. Previously outlined.
<b>Surges</b> (Engine power variation under steady throttle or cruise. Feels like the vehicle speeds up and down with no change in the accelerator pedal.)	<b>Ignition system out of order.</b> <ul style="list-style-type: none"> <li>● Improper ignition timing</li> <li>● Defective spark plug (excess carbon deposits, improper gap, and burned electrodes, etc.)</li> </ul> <b>Fuel system out of order.</b> <ul style="list-style-type: none"> <li>● Variable fuel pressure               <ul style="list-style-type: none"> <li>– Clogged fuel filter</li> <li>– Kinky or damaged fuel hose and line</li> <li>– Faulty fuel pressure regulator</li> </ul> </li> <li>● Vacuum leaks (or air inhaled) in air intake system</li> </ul> <b>Engine and emission control system out of order.</b> <ul style="list-style-type: none"> <li>● Faulty EGR system (if equipped)</li> <li>● Faulty MAF sensor</li> <li>● Faulty injector</li> <li>● Faulty ECM (PCM)</li> </ul>	Ignition timing in Section 6F1/6F2. Spark plugs in Section 6F1/6F2.  Diag. Flow Table B-3 in Section 6E1/6E2.  Diag. Flow Table B-6 in Section 6E1/6E2. MAF sensor in Section 6E1/6E2. Fuel injector in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2.
<b>Excessive detonation</b> (The engine makes sharp metallic knocks that change with throttle opening. Sounds like pop corn popping.)	<b>Engine overheating</b> <b>Ignition system out of order.</b> <ul style="list-style-type: none"> <li>● Faulty spark plug</li> <li>● Improper ignition timing</li> </ul>	Refer to "Overheating" Section.  Spark plugs in Section 6F1/6F2. Ignition timing in Section 6F1/6F2.

Condition	Possible Cause	Reference Item
	<p><b>Fuel system out of order.</b></p> <ul style="list-style-type: none"> <li>● Clogged fuel filter and fuel lines</li> <li>● Vacuum leaks (or air inhaled) in air intake system</li> </ul> <p><b>Engine and emission control system out of order.</b></p> <ul style="list-style-type: none"> <li>● Faulty EGR system (if equipped)</li> <li>● Faulty ECT sensor or MAF sensor</li> <li>● Faulty injector</li> <li>● Faulty ECM (PCM)</li> </ul> <p><b>Others</b></p> <ul style="list-style-type: none"> <li>● Excessive combustion chamber deposits</li> </ul>	<p>Fuel pressure check in Section 6E1/6E2.</p> <p>Diag. Flow Table B-6 in Section 6E1/6E2. ECT sensor or MAF sensor in Section 6E1/6E2. Fuel injector in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2.</p> <p>Piston and cylinder head cleaning in Section 6A1/6A2/6A4.</p>
<b>Overheating</b>	<ul style="list-style-type: none"> <li>● Insufficient coolant</li> <li>● Loose water pump belt</li> <li>● Inoperative thermostat</li> <li>● Poor water pump performance</li> <li>● Improper ignition timing</li> <li>● Clogged or leaky radiator</li> <li>● Improper engine oil grade</li> <li>● Clogged oil filter or oil strainer</li> <li>● Not enough oil</li> <li>● Poor oil pump performance</li> <li>● Oil leakage</li> <li>● Dragging brakes</li> <li>● Slipping clutch</li> <li>● Blown cylinder head gasket</li> </ul>	<p>Coolant level check in Section 6B. Cooling fan belt tension inspection in Section 6B. Thermostat in Section 6B. Water pump in Section 6B. Ignition timing in Section 6F1/6F2. Radiator in Section 6B. Engine oil and oil filter change in Section 0B. Oil pressure check in Section 6A1/6A2/6A4. Engine oil and oil filter change in Section 0B. Oil pressure check in Section 6A1/6A2/6A4.</p> <p>Diagnosis in Section 5. Diagnosis in Section 7C1. Cylinder head inspection in Section 6A1/6A2/6A4.</p>

Condition	Possible Cause	Reference Item
<b>Poor gasoline mileage</b>	<p><b>Fuel system out of order.</b></p> <ul style="list-style-type: none"> <li>● Fuel leakage from fuel tank and lines</li> <li>● Clogged air cleaner element</li> </ul> <p><b>Ignition system out of order.</b></p> <ul style="list-style-type: none"> <li>● Improper ignition timing</li> <li>● Faulty spark plug (improper gap, heavy deposits, and burned electrodes, etc..)</li> </ul> <p><b>Engine and emission control system out of order.</b></p> <ul style="list-style-type: none"> <li>● High idle speed</li> <li>● Fuel pressure out of specification or fuel leakage</li> <li>● Faulty TP sensor, ECT sensor or MAF sensor</li> <li>● Faulty EGR system (if equipped)</li> <li>● Faulty injector</li> <li>● Faulty ECM (PCM)</li> </ul> <p><b>Low compression</b></p> <p><b>Others</b></p> <ul style="list-style-type: none"> <li>● Poor valve seating</li> <li>● Dragging brakes</li> <li>● Slipping clutch</li> <li>● Thermostat out of order</li> <li>● Improper tire pressure</li> </ul>	<p>Air cleaner element in Section 6A1/6A2/6A4.</p> <p>Ignition timing in Section 6F1/6F2. Spark plugs in Section 6F1/6F2.</p> <p>Diag. Flow Table B-4 in Section 6E1/6E2. Diag. Flow Table B-3 in Section 6E1/6E2. TP sensor, ECT sensor or MAF sensor in Section 6E1/6E2. Diag. Flow Table B-6 in Section 6E1/6E2. Fuel injector in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2. Previously outlined.</p> <p>Valves inspection in Section 6A1/6A2/6A4. Diagnosis in Section 5. Diagnosis in Section 7C1. Thermostat in Section 6B.</p>

Condition	Possible Cause	Reference Item
<b>Excessive engine oil consumption</b>	<p><b>Oil leakage</b></p> <ul style="list-style-type: none"> <li>• Loose oil drain plug</li> <li>• Loose oil pan bolts</li> <li>• Deteriorated or broken oil pan sealant</li> <li>• Leaky crankshaft oil seal (flywheel side)</li> <li>• Leaky cylinder head cover gasket</li> <li>• Improper tightening of oil filter</li> <li>• Loose oil pressure switch</li> <li>• Blown cylinder head gasket</li> <li>• Leaky crankshaft pulley oil seal</li> <li>• Deteriorated or broken timing chain cover sealant</li> </ul> <p><b>Oil entering combustion chamber</b></p> <ul style="list-style-type: none"> <li>• Sticky piston ring</li> <li>• Worn piston and cylinder</li> <li>• Worn piston ring groove and ring</li> <li>• Improper location of piston ring gap</li> <li>• Worn or damaged valve stem seal</li> <li>• Worn valve stem</li> </ul>	<p>Oil pan and oil pump strainer in Section 6A1/6A2/6A4.  Oil pan and oil pump strainer in Section 6A1/6A2/6A4.  Oil pan and oil pump strainer in Section 6A1/6A2/6A4.  Crankshaft in Section 6A1/6A2/6A4.</p> <p>Cylinder head cover in Section 6A1/6A2/6A4.  Engine oil and oil filter change in Section 0B.  Oil pressure check in Section 6A1/6A2/6A4.  Cylinder head inspection in Section 6A1/6A2/6A4.  Timing chain cover in Section 6A1/6A2/6A4.  Timing chain cover in Section 6A1/6A2/6A4.</p> <p>Piston cleaning in Section 6A1/6A2/6A4.  Cylinders, pistons and piston rings inspection in Section 6A1/6A2/6A4.  Pistons and piston rings inspection in Section 6A1/6A2/6A4.  Pistons installation in Section 6A1/6A2/6A4.  Valves and cylinder head in Section 6A1/6A2/6A4.  Valves inspection in Section 6A1/6A2/6A4.</p>
<b>Low oil pressure</b>	<ul style="list-style-type: none"> <li>• Improper oil viscosity</li> <li>• Malfunctioning oil pressure switch</li> <li>• Not enough oil</li> <li>• Clogged oil strainer</li> <li>• Functional deterioration of oil pump</li> <li>• Worn oil pump relief valve</li> <li>• Excessive clearance in various sliding parts</li> </ul>	<p>Engine oil and oil filter change in Section 0B.  Oil pressure switch inspection in Section 8.</p> <p>Oil pan and oil pump strainer cleaning in Section 6A1/6A2/6A4.  Oil pump in Section 6A1/6A2/6A4.  Oil pump in Section 6A1/6A2/6A4.</p>

Condition	Possible Cause	Reference Item
<b>Engine noise</b> Note: Before checking the mechanical noise, make sure that: <ul style="list-style-type: none"> <li>● Ignition timing is properly adjusted.</li> <li>● Specified spark plug is used.</li> <li>● Specified fuel is used.</li> </ul>	<b>Valve noise</b> <ul style="list-style-type: none"> <li>● Improper valve lash (G16)</li> <li>● Faulty hydraulic valve lash adjuster (J20/H25)</li> <li>● Worn valve stem and guide</li> <li>● Weak or broken valve spring</li> <li>● Warped or bent valve</li> <li>● Loose camshaft housing bolts</li> </ul> <b>Piston, ring and cylinder noise</b> <ul style="list-style-type: none"> <li>● Worn piston, ring and cylinder bore</li> </ul> <b>Connecting rod noise</b> <ul style="list-style-type: none"> <li>● Worn crankpin bearing</li> <li>● Worn crankpin</li> <li>● Loose connecting rod nuts</li> <li>● Low oil pressure</li> </ul> <b>Crankshaft noise</b> <ul style="list-style-type: none"> <li>● Low oil pressure</li> <li>● Worn crankshaft journal bearing</li> <li>● Worn crankshaft journal</li> <li>● Loose lower crankcase (bearing cap) bolts</li> <li>● Excessive crankshaft thrust play</li> </ul>	Valve lash in Section 6A1. Hydraulic valve lash adjuster in Section 6A2/6A4. Valves inspection in Section 6A1/6A2/6A4. Valve springs inspection in Section 6A1/6A2/6A4. Valves inspection in Section 6A1/6A2/6A4. Camshafts in Section 6A1/6A2/6A4.  Pistons and cylinders inspection in Section 6A1/6A2/6A4.  Crankpin and connecting rod bearing inspection in Section 6A1/6A2/6A4. Crankpin and connecting rod bearing inspection in Section 6A1/6A2/6A4. Connecting rod installation in Section 6A1/6A2/6A4. Previously outlined.  Previously outlined. Crankshaft and bearing inspection in Section 6A1/6A2/6A4. Crankshaft and bearing inspection in Section 6A1/6A2/6A4. Crankshaft installation in Section 6A1/6A2/6A4. Crankshaft inspection in Section 6A1/6A2/6A4.

Condition	Possible Cause	Referring Item
<b>Excessive hydrocarbon (HC) emission or Excessive carbon monoxide (CO) emission</b>	<b>Ignition system out of order</b> <ul style="list-style-type: none"> <li>● Incorrect ignition timing</li> <li>● Defective spark plug</li> </ul> <b>Fuel system out of order</b> <ul style="list-style-type: none"> <li>● Vacuum leaks (or air inhaled) in air intake system</li> <li>● Clogged air cleaner element</li> <li>● Fuel pressure out of specification</li> </ul> <b>Engine and Emission control system out of order.</b> <ul style="list-style-type: none"> <li>● Lead contamination of three way catalytic converter (if equipped)</li> <li>● Malfunctioning PCV valve</li> <li>● Faulty EVAP control system</li> <li>● Closed loop system (A/F feed back compensation) fails (vehicle with HO2S) <ul style="list-style-type: none"> <li>– Faulty TP sensor</li> <li>– Faulty ECT sensor or MAF sensor</li> <li>– Faulty HO2S</li> </ul> </li> <li>● Maladjusted CO adjusting resistor (vehicle without HO2S)</li> <li>● Faulty injector</li> <li>● Faulty ECM (PCM)</li> </ul> <b>Low compression</b>	Ignition timing in Section 6F1/6F2. Spark plug in Section 6F1/6F2.  Air cleaner element in Section 6A1/6A2/6A4. Fuel pressure check in Section 6E1/6E2.  Check for absence of filler neck restrictor. PCV valve in Section 6E1/6E2. EVAP control system check in Section 6E1/6E2. Check oxygen sensor output voltage referring to DTC No.13 Diag. Flow Table in Section 6E1/6E2.  Idle mixture adjustment in Section 6E1/6E2. Fuel injector in Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2.  Previously outlined.
<b>Excessive nitrogen oxides (NOx) emission</b>	<b>Ignition system out of order</b> <ul style="list-style-type: none"> <li>● Improper ignition timing</li> </ul> <b>Fuel system out of order</b> <ul style="list-style-type: none"> <li>● Vacuum leaks (or air inhaled) in air intake system</li> <li>● Fuel pressure out of specification</li> </ul> <b>Engine and emission control system</b> <ul style="list-style-type: none"> <li>● Lead contamination of three way catalytic converter (if equipped)</li> <li>● Faulty EGR system (if equipped)</li> <li>● Closed loop system (A/F feed back compensation) fails (vehicle with HO2S) <ul style="list-style-type: none"> <li>– Faulty TP sensor</li> <li>– Faulty ECT sensor or MAF sensor</li> <li>– Faulty HO2S</li> </ul> </li> <li>● Faulty injector</li> <li>● Faulty ECM (PCM)</li> </ul>	Ignition timing in Section 6F1/6F2.  Fuel pressure check in Section 6E1/6E2.  Check for absence of filler neck restrictor. Diag. Flow Table B-6 in Section 6E1/6E2. Check oxygen sensor output voltage referring to DTC No.13 Diag. Flow Table in Section 6E1/6E2.  Fuel injector Section 6E1/6E2. Inspection of ECM (PCM) and its circuit in Section 6E1/6E2.

## SECTION 6A1

# ENGINE MECHANICAL (G16 ENGINE)

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System:

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to “Air Bag System Components and Wiring Location View” under “General Description” in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and “Service Precautions” under “On-Vehicle Service” in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the “LOCK” position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6A1- 2
<b>ON-VEHICLE SERVICE</b> .....	6A1- 4
Compression Check .....	6A1- 4
Engine Vacuum Check .....	6A1- 6
Oil Pressure Check .....	6A1- 7
Valve Lash (Clearance) .....	6A1- 9
Air Cleaner Element .....	6A1-11
Cylinder Head Cover .....	6A1-12
Throttle Body and Intake Manifold .....	6A1-13
Exhaust Manifold .....	6A1-16
Timing Belt and Belt Tensioner .....	6A1-18
Oil Pan and Oil Pump Strainer .....	6A1-23
Oil Pump .....	6A1-27
Rocker Arms, Rocker Arm Shaft and Camshaft .....	6A1-32
Valves and Cylinder Head .....	6A1-41
Piston, Piston Rings, Connecting Rods and Cylinders .....	6A1-54
<b>UNIT REPAIR OVERHAUL</b> .....	6A1-64
Engine Assembly .....	6A1-64
Main Bearings, Crankshaft and Cylinder Block .....	6A1-69
<b>SPECIAL TOOLS</b> .....	6A1-81
<b>REQUIRED SERVICE MATERIALS</b> .....	6A1-82
<b>TIGHTENING TORQUE SPECIFICATIONS</b> .....	6A1-83

**NOTE:**

For what each abbreviation stands for (i.e., full term), refer to SECTION 0A.




## GENERAL DESCRIPTION

### ENGINE

The engine is a water-cooled, in line 4 cylinders, 4 stroke cycle gasoline unit equipped with its S.O.H.C. (Single Overhead Camshaft) valve mechanism arranged for "V"-type valve configuration and 16 valves (IN 2 and EX 2/one cylinder).

The single overhead camshaft is mounted over the cylinder head: it is driven from crankshaft through timing belt and opens and closes its valves via the rocker arms.

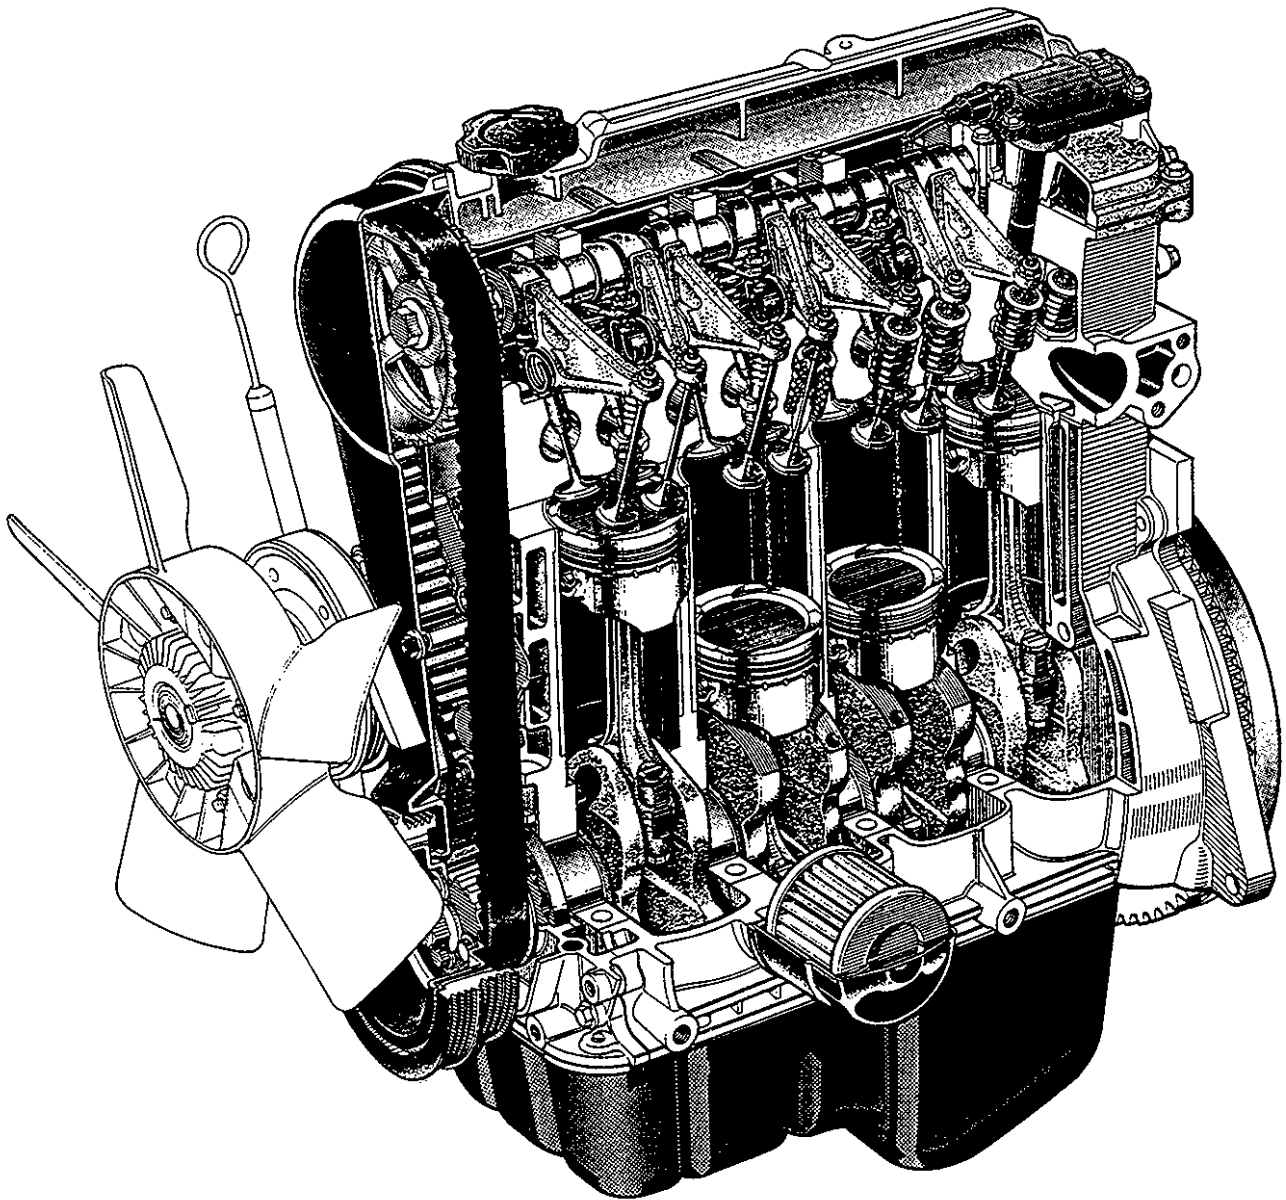

## ENGINE LUBRICATION


The oil pump is of a trochoid type, and mounted on crankshaft at crankshaft pulley side.

Oil is drawn up through oil pump strainer and passed through pump to oil filter.

The filtered oil flows into two paths in cylinder block. In one path, oil reaches crankshaft journal bearings. Oil from crankshaft journal bearings is supplied to connecting rod bearings by means of intersecting passages drilled in crankshaft, and then injected from a small hole provided on big end of connecting rod to lubricate piston, rings, and cylinder wall.

In another path, oil goes up to cylinder head and lubricates camshaft journals, rocker arms, camshaft, etc., passing through oil gallery in rocker arm shaft.

An oil relief valve is provided on oil pump. This valve starts relieving oil pressure when the pressure comes over about 400 kPa (4.0 kg/cm<sup>2</sup>, 56.9 psi). Relieved oil drains back to oil pan.

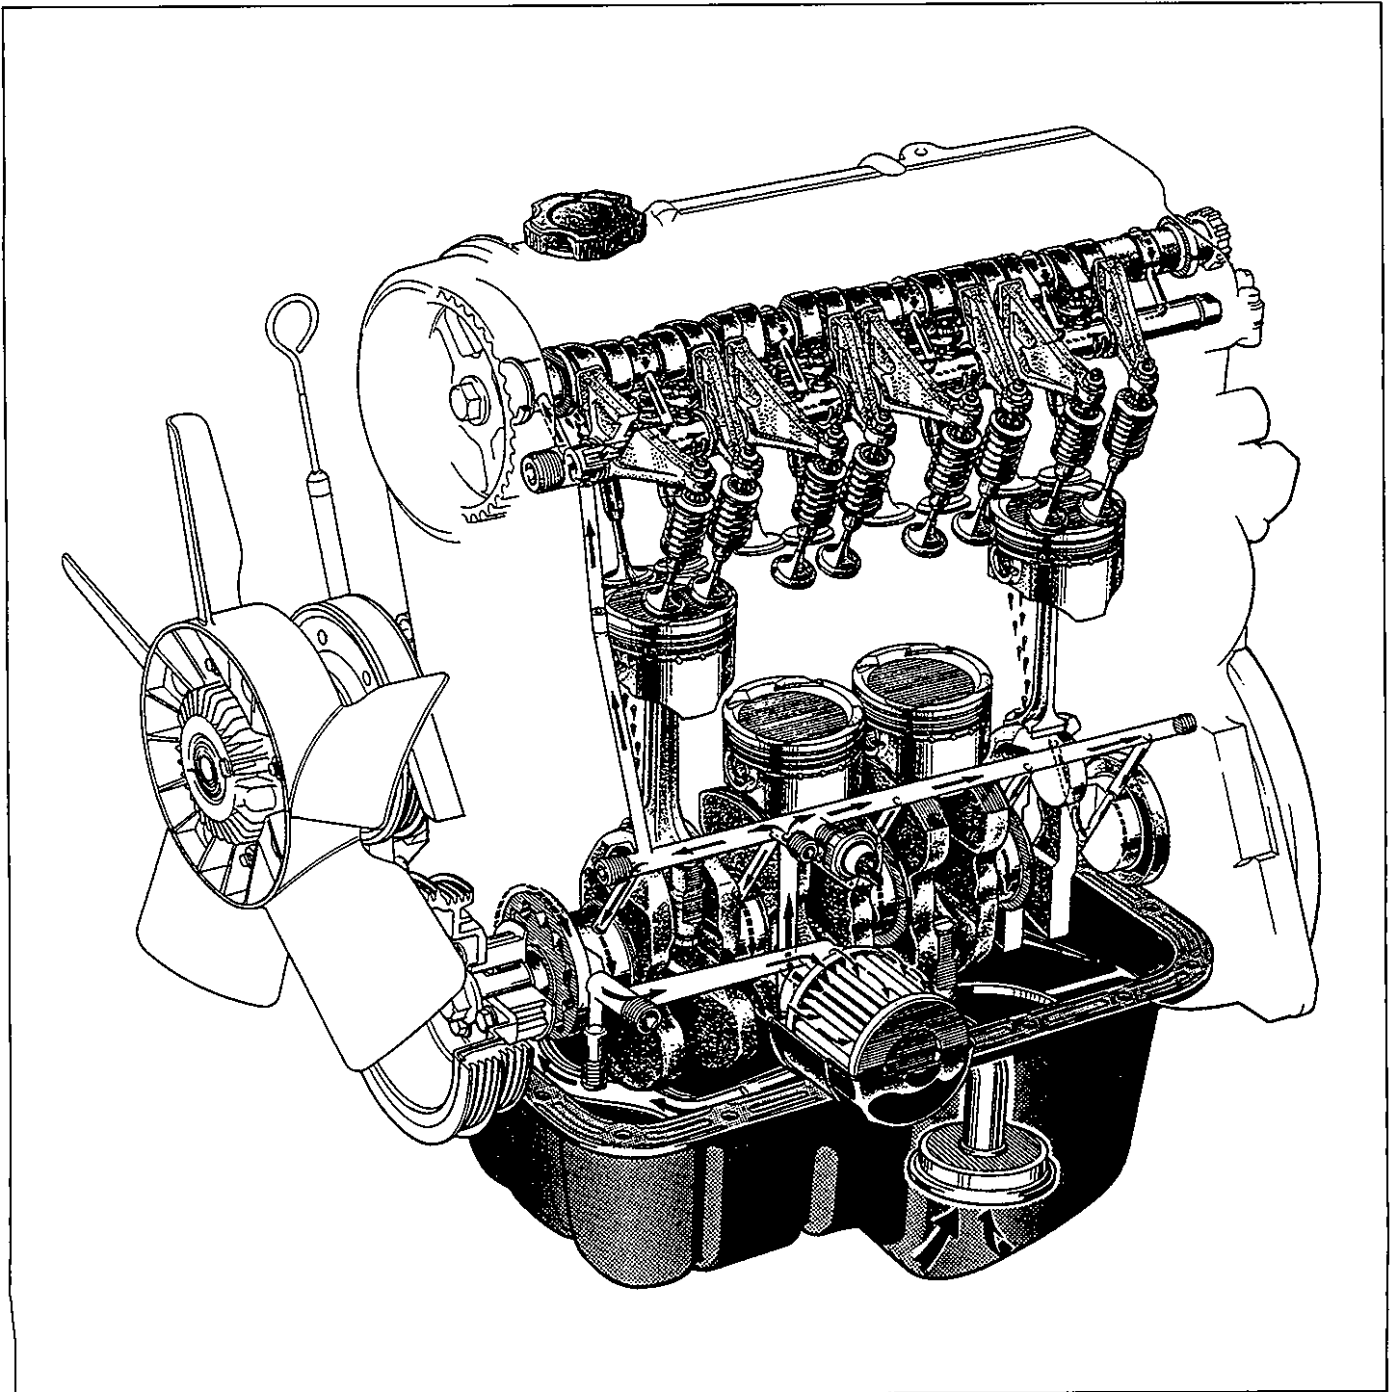

## ON-VEHICLE SERVICE

### COMPRESSION CHECK


Check compression pressure on all four cylinders as follows:

- 1) Warm up engine.
- 2) Stop engine after warming up.


**NOTE:**

After warming up engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake and block drive wheels.


- 3) Disconnect fuel injector wire harness connector.

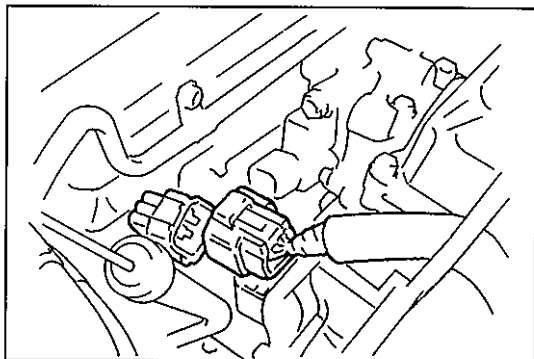

- 4) Remove ignition coil assemblies and all spark plugs referring to section 6F1

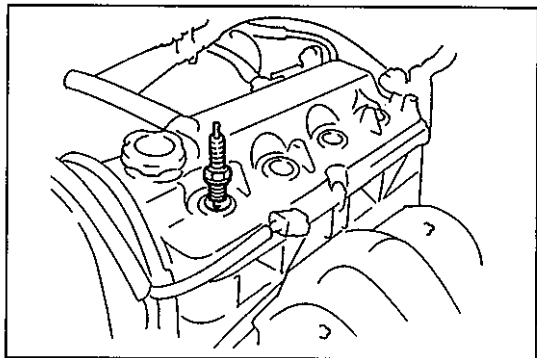


- 5) Install special tool (Compression gauge) into spark plug hole.

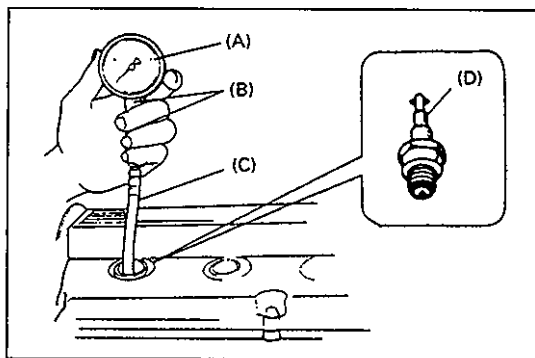

**Special Tool**

- (A): 09915-64510-001  
 (B): 09915-64510-002  
 (C): 09915-64530  
 (D): 09915-67010

- 6) Disengage clutch (to lighten starting load on engine) for M/T model, and depress accelerator pedal all the way to make throttle valve full-open.

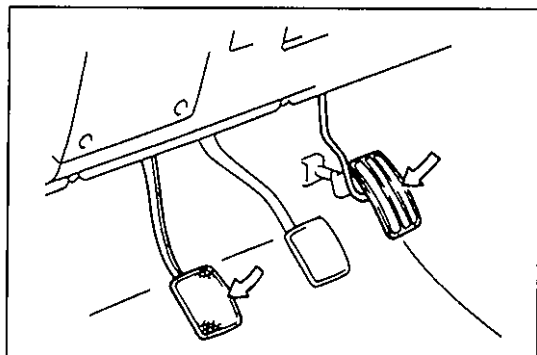


- 7) Crank engine with fully charged battery, and read the highest pressure on compression gauge.

**NOTE:**

**For measuring compression pressure, crank engine at least 250 r/min. by using fully charged battery.**

	Compression pressure
Standard	1400 kPa (14.0 kg/cm <sup>2</sup> , 199.0 psi)
Limit	1200 kPa (12.0 kg/cm <sup>2</sup> , 170.0 psi)
Max. difference between any two cylinders	100 kPa (1.0 kg/cm <sup>2</sup> , 14.2 psi)

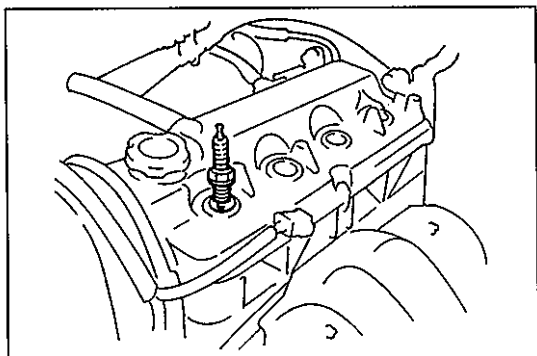

- 8) Carry out steps 5) through 7) on each cylinder to obtain four readings.
- 9) After checking, install spark plugs and ignition coil assemblies and connect injector wire harness connector securely.


## ENGINE VACUUM CHECK

The engine vacuum that develops in the intake line is a good indicator of the condition of the engine. The vacuum checking procedure is as follows:

- 1) Warm up engine to normal operating temperature.

**NOTE:**

After warming up engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake and block drive wheels.

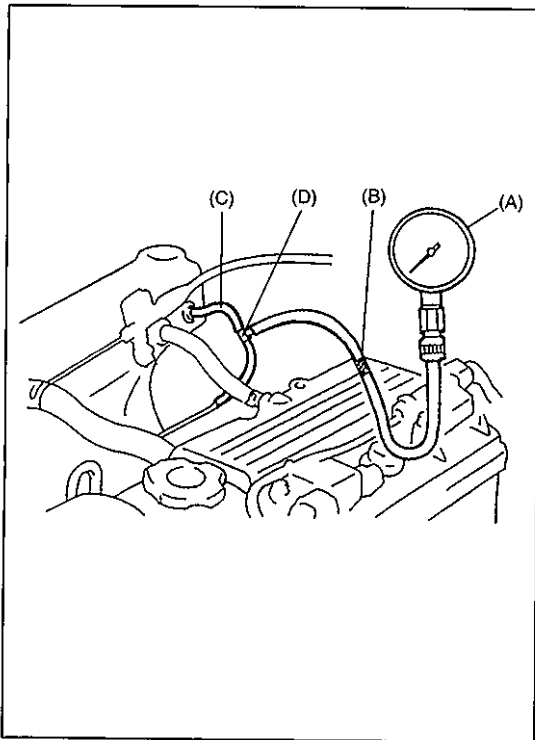

- 2) With engine stopped, disconnect fuel pressure regulator vacuum hose from intake manifold and connect 3-way joint, hoses and special tool (vacuum gauge and joint) between intake manifold and vacuum hose disconnected.

**Special Tool**

(A): 09915-67310

(B): 09918-08210

**SUZUKI GENUINE PARTS**

(C): Hose 09343-03087

(D): 3-way joint 09367-04002

- 3) Run engine at specified idle speed, and read vacuum gauge. Vacuum should be within following specification.

**Vacuum specification (at sea level):**

52.6 – 72.3 kPa (40 – 55 cmHg, 15.7 – 21.6 in.Hg) at specified idling speed

- 4) After checking, connect vacuum hose to intake manifold.

## OIL PRESSURE CHECK

### NOTE:

Prior to checking oil pressure, check following items.

- Oil level in oil pan.

If oil level is low, add oil up to Full level mark on oil level gauge.



- Oil quality.

If oil is discolored, or deteriorated, change it.


For particular oil to be used, refer to the table in "MAINTENANCE SERVICE" section.

- Oil leaks.

If leak is found, repair it.

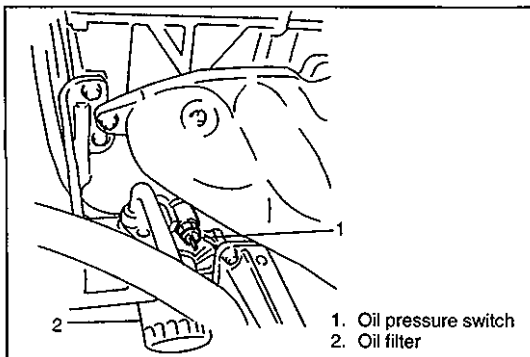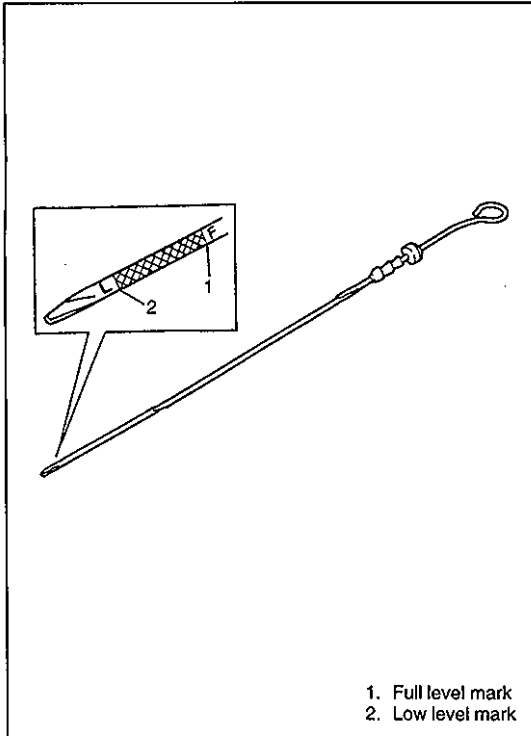

1) Remove oil pressure switch from cylinder block.

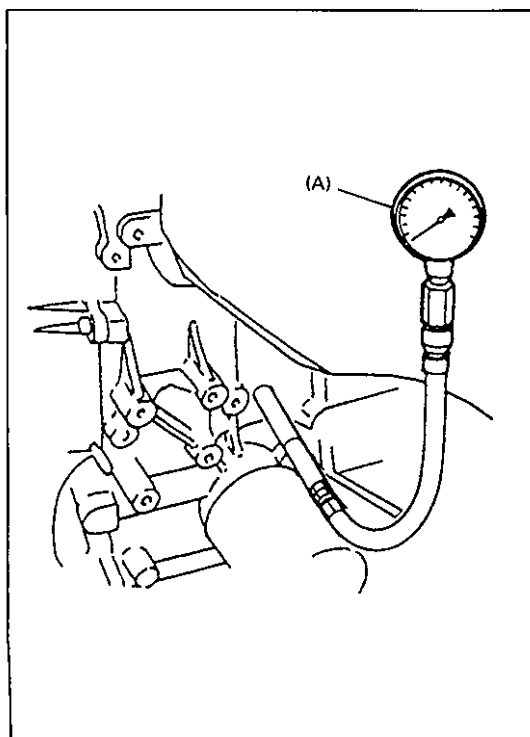

2) Install special tool (Oil pressure gauge) to vacated threaded hole.

### Special Tool

(A): 09915-77310

3) Start engine and warm it up to normal operating temperature.

### NOTE:


Be sure to place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake and block drive wheels.

4) After warming up, raise engine speed to 4,000 r/min and measure oil pressure.

### Oil pressure specification:

330 – 430 kPa (3.3 – 4.3 kg/cm<sup>2</sup>, 46.9 – 61.1 psi) at 4,000 r/min (rpm)

5) Stop engine and remove oil pressure gauge.

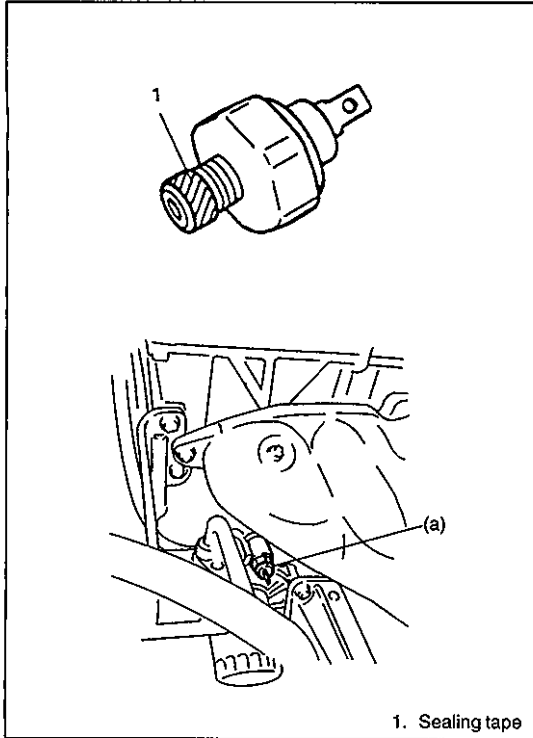

- 6) Before reinstalling oil pressure switch, be sure to wrap its screw threads with sealing tape and tighten switch to specified torque.

**NOTE:**


If sealing tape edge is bulged out from screw threads of switch, cut it off.

**Tightening Torque**

(a): 14 N·m (1.4 kg-m, 10.5 lb-ft)


- 7) Start engine and check oil pressure switch for oil leakage.



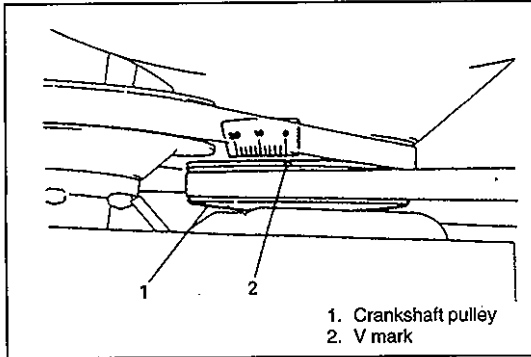

## VALVE LASH (CLEARANCE)


- 1) Remove negative cable at battery.
- 2) Remove cylinder head cover referring to item "Cylinder Head cover".
- 3) Using 17 mm socket, turn crankshaft pulley clockwise until "V" mark (in white paint) on pulley aligns with "O" (zero) calibrated on timing belt cover.

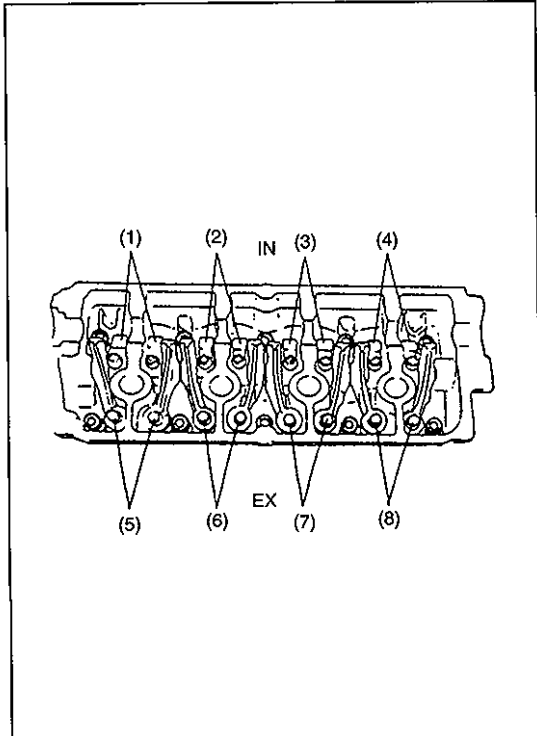

- 4) Check if the rocker arms of No.1 cylinder are off the respective cam lobes (of camshaft); if so, valves (1), (2), (5) and (7) in left figure are ready for clearance checking and adjustment. Check valve lashes at valves (1), (2), (5) and (7).  
If the rocker arms of No.4 cylinder are off the respective cam lobes, check valve lashes at valves (3), (4), (6) and (8).

### NOTE:

**When checking valve clearance, insert thickness gauge between camshaft and cam-riding face of rocker arm.**

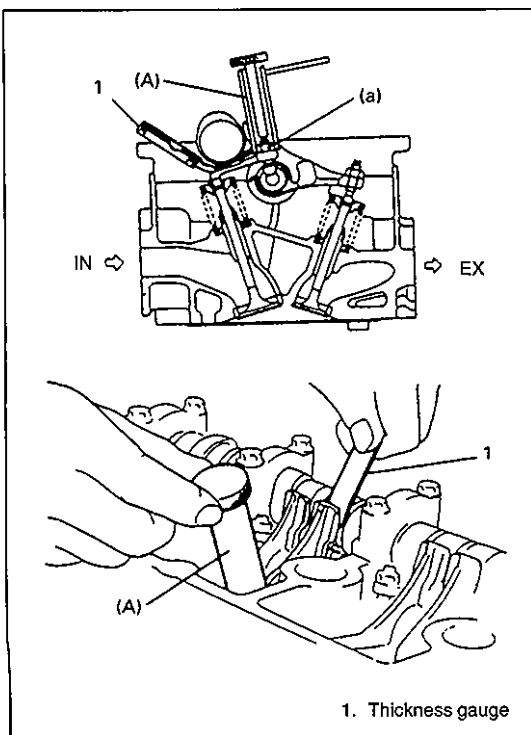

- 5) If valve lash is out of specification, adjust it to specification by turning adjusting screw after loosening lock nut.

After adjustment, tighten lock nut to specified torque while holding adjusting screw stationary, and then make sure again that valve lash is within specification.


Valve clearance specification		When cold (Coolant temperature is 15 – 25°C or 59 – 77°F)	When hot (Coolant temperature is 60 – 68°C or 140 – 154°F)
	Intake	0.13 – 0.17 mm (0.005 – 0.007 in.)	0.17 – 0.21 mm (0.007 – 0.008 in.)
	Exhaust	0.23 – 0.27 mm (0.009 – 0.011 in.)	0.28 – 0.32 mm (0.011 – 0.013 in.)

### Special Tool


(A): 09917-18210

### Tightening Torque

(a): 12 N·m (1.2 kg-m, 9.0 lb-ft)

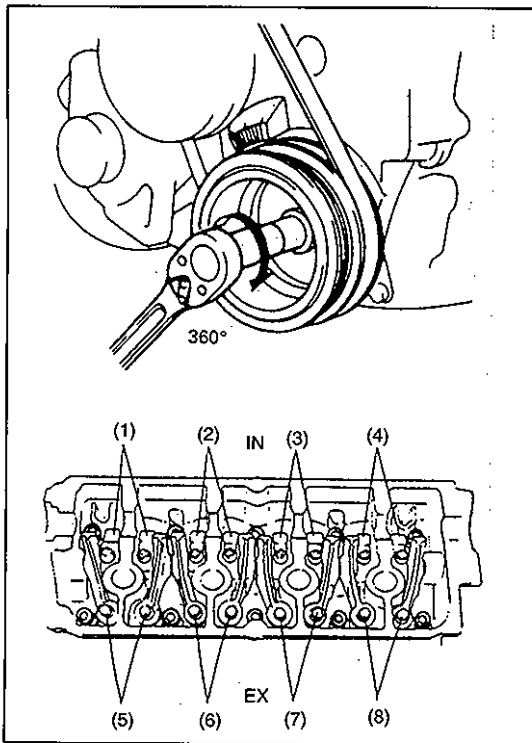

- 6) After checking and adjusting valve lash at valves (1), (2), (5) and (7), (or (3), (4), (6) and (8)) rotate crankshaft exactly one full turn (360°) and check the same at valves (3), (4), (6) and (8) (or (1), (2), (5) and (7)). Adjust them as necessary.
- 7) After checking and adjusting all valves, reverse removal procedure for installation.

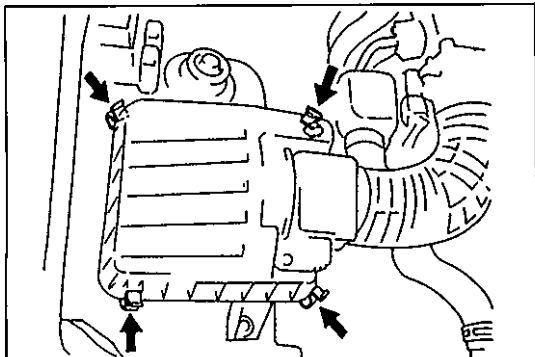


## AIR CLEANER ELEMENT

### REMOVAL

- 1) Remove air cleaner case clamps.
- 2) Remove air cleaner element from case.

### INSPECT

Check air cleaner element for dirt. Replace excessively dirty element.

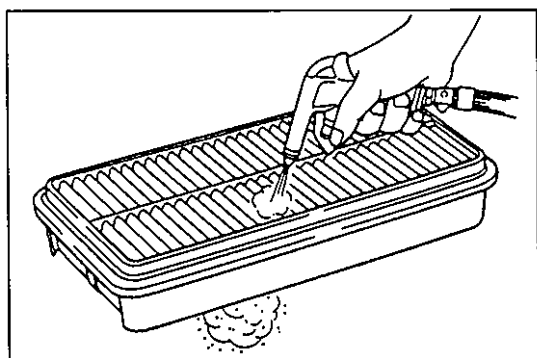

### CLEAN

Blow off dust by compressed air from air outlet side of element.


### INSTALLATION

Reverse removal procedure for installation.


## CYLINDER HEAD COVER

### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Remove ignition coil assemblies with high-tension cord.
- 3) Disconnect PCV valve and breather hose from head cover.
- 4) Detach accelerator cable from clamp.

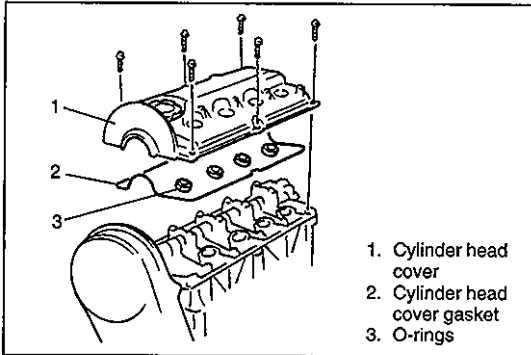

- 5) Remove cylinder head cover with cylinder head cover gasket and O-rings.

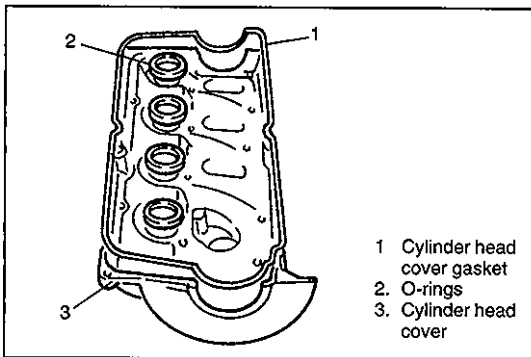


### INSTALLATION

- 1) Install O-rings and cylinder head cover gasket to cylinder head cover.

#### NOTE:

**Be sure to check each of these parts for deterioration or any damage before installation and replace if found defective.**

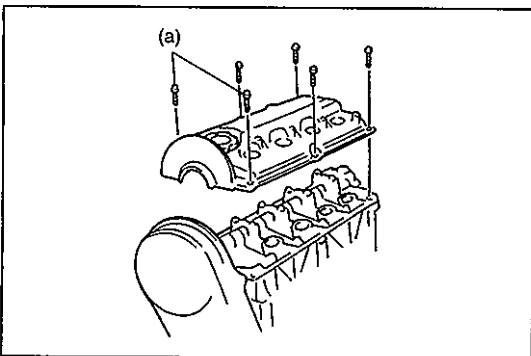


- 2) Install cylinder head cover to cylinder head and tighten cover bolts to specified torque.

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)


#### NOTE:

**When installing cylinder head cover, use care so that cylinder head cover gasket or O-rings will not get out of place or fall off.**

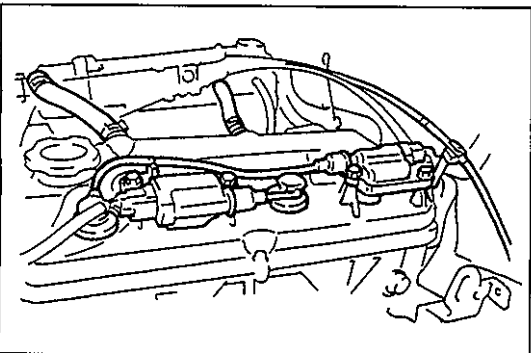


- 3) Fix accelerator cable with clamp.
- 4) Install ignition coil assemblies with high-tension cord.
- 5) Connect PCV valve and breather hose to head cover.
- 6) Connect negative cable at battery.

## THROTTLE BODY AND INTAKE MANIFOLD

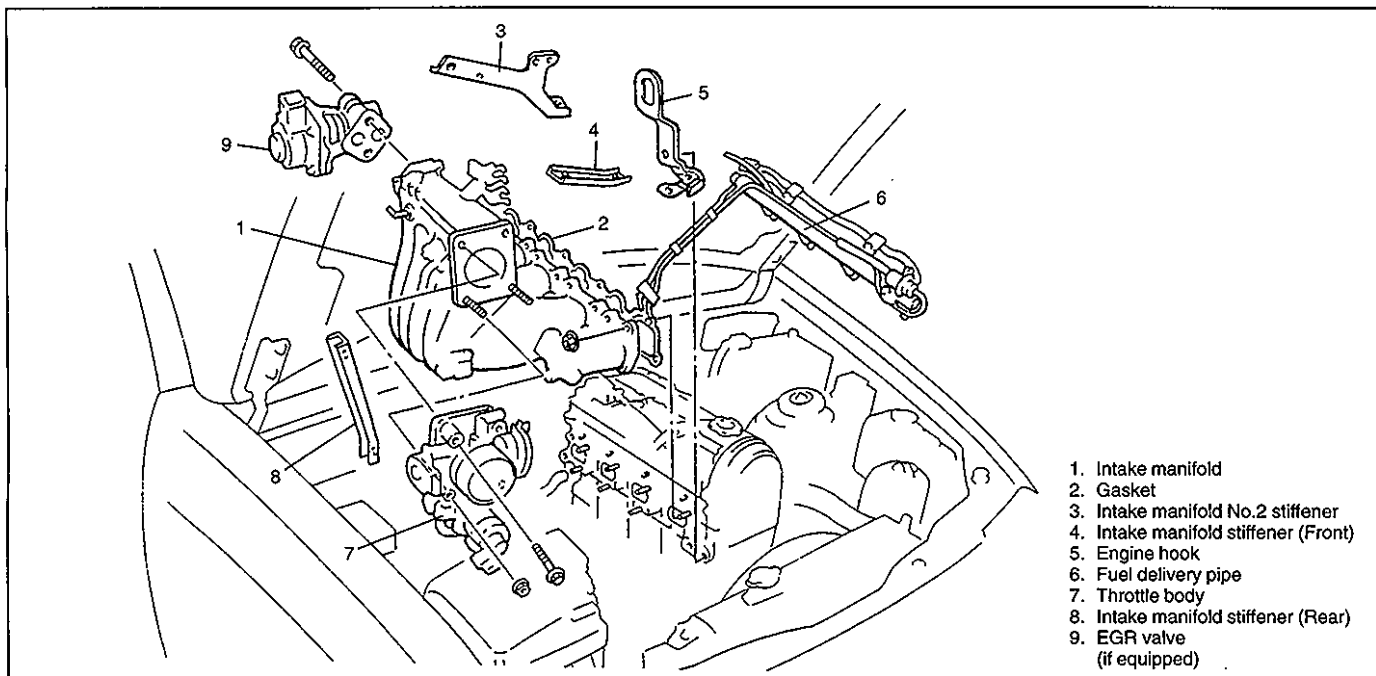

### REMOVAL


- 1) Relieve fuel pressure according to fuel pressure relief procedure described in section 6.
- 2) Disconnect negative cable at battery.

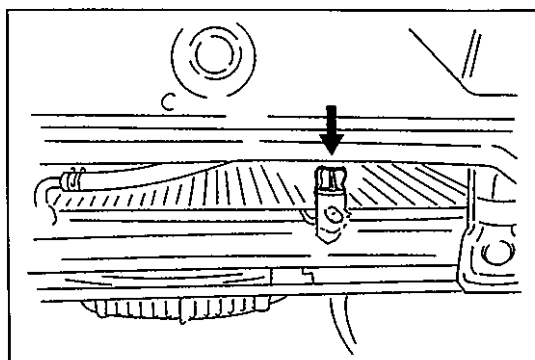


- 3) Drain cooling system.

### WARNING:


To help avoid danger of being burned, do not remove drain plug and radiator cap while engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure if plug and cap are taken off too soon.

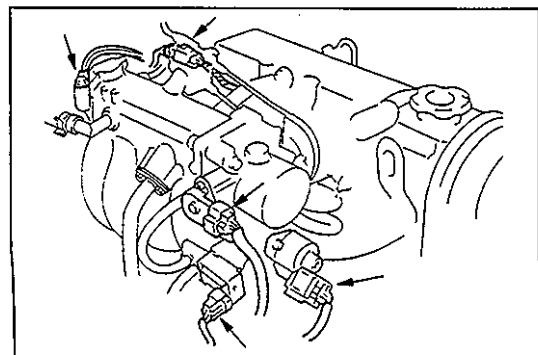


- 4) Remove air intake hose.
- 5) Disconnect following electric lead wires:
  - EGR valve (if equipped)
  - Ground wires from intake manifold
  - Engine coolant temperature sensor
  - Injectors lead wires at the coupler
  - EVAP canister purge valve
  - Throttle position sensor
  - Idle air control valve

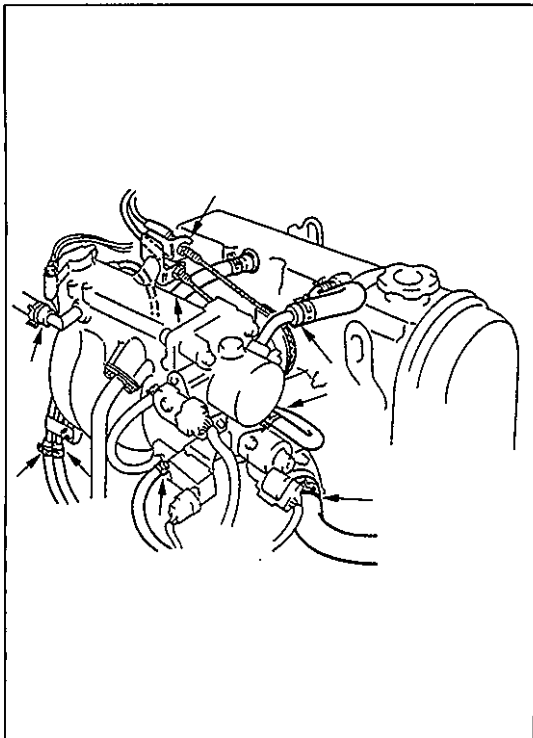


- 6) Disconnect accelerator cable and A/T throttle cable (for A/T) from throttle body.
- 7) Disconnect following hoses:
  - Brake booster hose from intake manifold
  - Canister purge hose from EVAP canister purge valve
  - Engine cooling water (coolant) hose (outlet side) from throttle body
  - Radiator inlet hose from thermostat cap
  - PCV hoses from intake manifold and throttle body
  - Fuel feed hose and return hose from each pipe

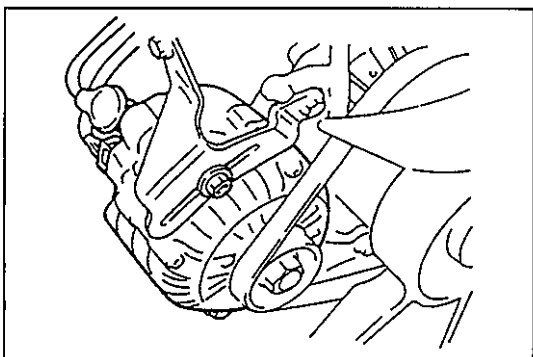

- 8) Remove generator adjust arm.
- 9) Remove intake manifold stiffeners from intake manifold.

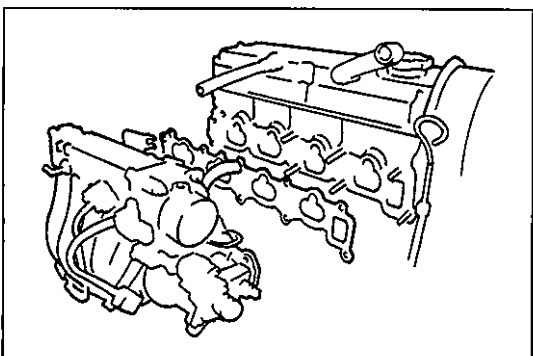


- 10) Remove intake manifold with throttle body from cylinder head, and then its gasket.

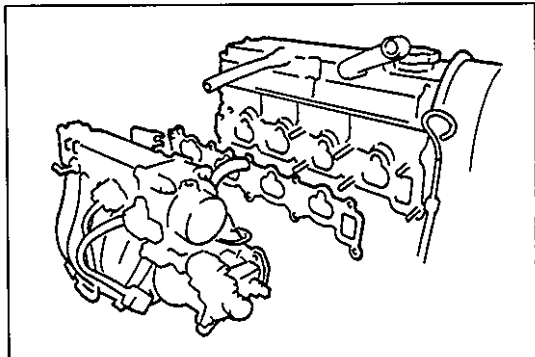


## INSTALLATION

Reverse removal procedure for installation noting the followings.

- Use new intake manifold gasket.

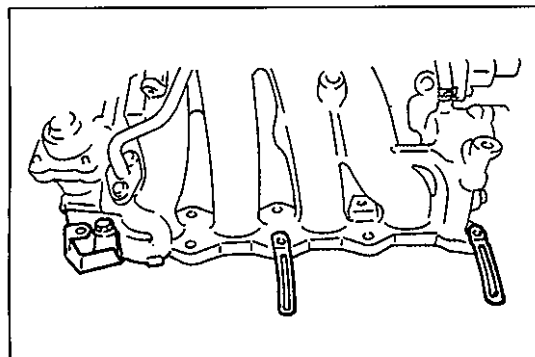


- When installing intake manifold, install clamps at positions as shown in figure.

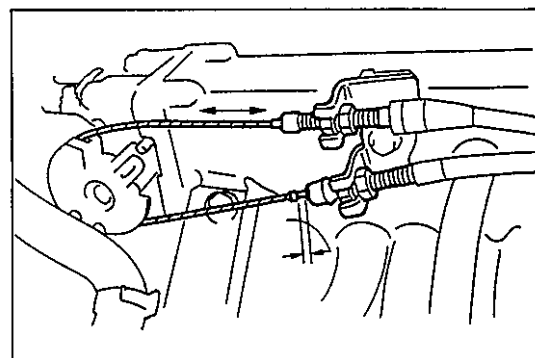

- Adjust accelerator cable play and A/T throttle cable (for A/T) play, referring to section 6E1.

- Check to ensure that all removed parts are back in place. Reinstall any necessary parts which have not been reinstalled.
- Refill cooling system, referring to "ENGINE COOLING" section.
- Adjust water pump drive belt tension, referring to "ENGINE COOLING" section.
- Upon completion of installation, turn ignition switch ON but engine OFF and check for fuel leaks.
- Finally, start engine and check for engine coolant leaks.

## EXHAUST MANIFOLD


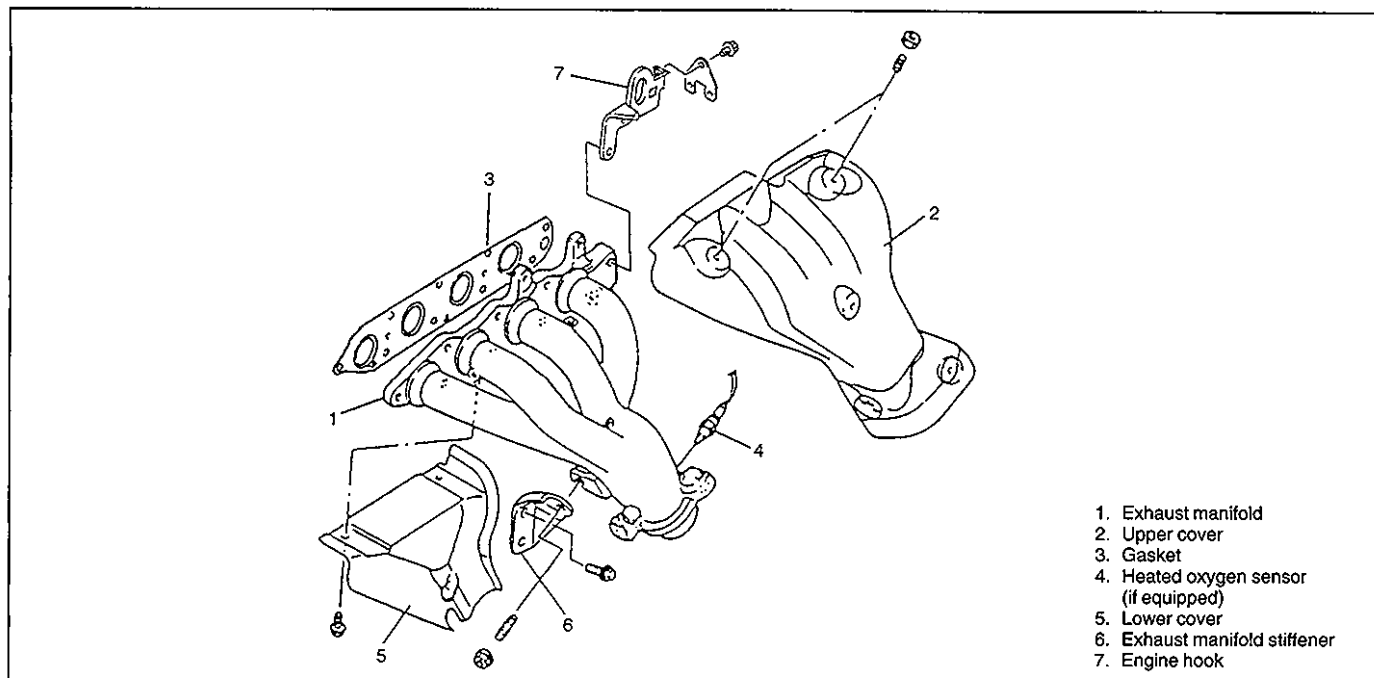


### WARNING:

To avoid danger of being burned, do not service exhaust system while it is still hot. Service should be performed after system cools down.


### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Disconnect heated oxygen sensor coupler (if equipped).
- 3) Remove upper cover of exhaust manifold.
- 4) Remove or disconnect exhaust pipe from exhaust manifold.

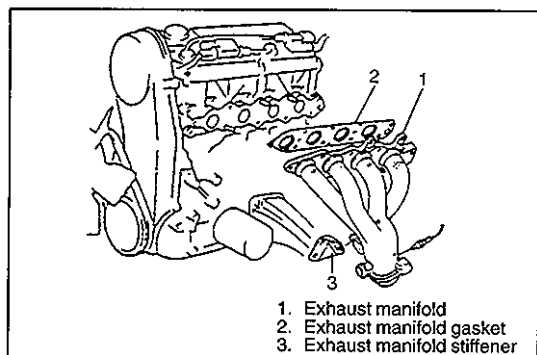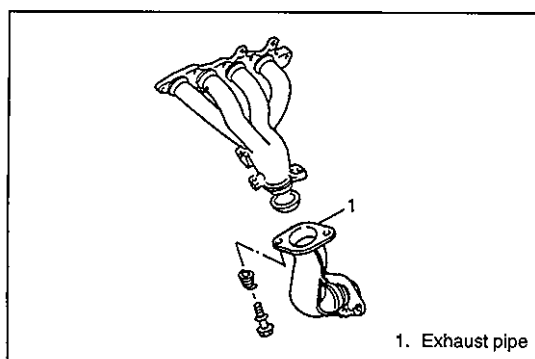


- 5) Remove exhaust manifold stiffener.
- 6) Remove exhaust manifold and its gasket from cylinder head.



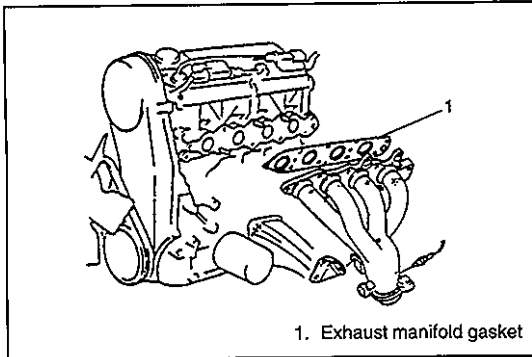

## INSTALLATION


- 1) Install new gasket to cylinder head.
- 2) Install exhaust manifold and stiffener.  
Tighten bolts and nuts to specified torque.

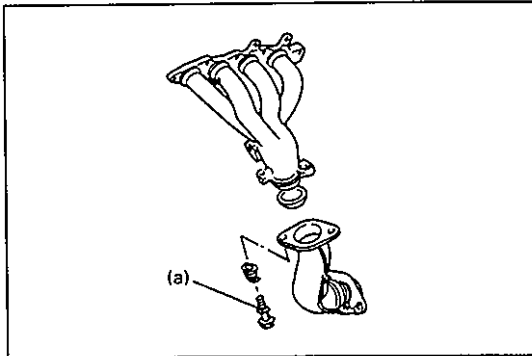

- 3) Install pipe gasket and install exhaust pipe to exhaust manifold.  
Before installing pipe gasket, check it for deterioration or damage, and replace as necessary.  
Tighten pipe fasteners to specified torque.


### Tightening Torque

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

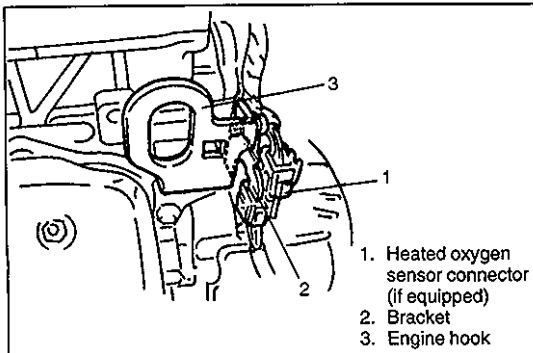


- 4) Install upper cover to exhaust manifold.
- 5) Connect heated oxygen sensor connector and fit connector to bracket. (if equipped)
- 6) Connect negative cable at battery.
- 7) Check exhaust system for exhaust gas leakage.

## TIMING BELT AND BELT TENSIONER

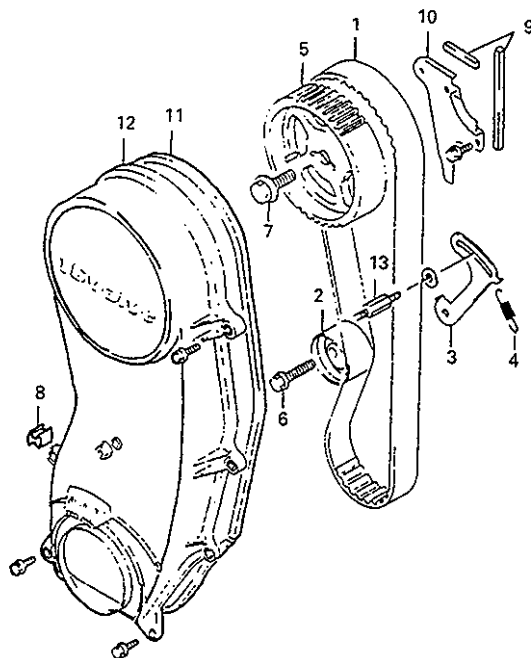


1. Timing belt
2. Tensioner
3. Tensioner plate
4. Tensioner spring
5. Camshaft timing pulley
6. Tensioner bolt
7. Pulley bolt
8. Seal
9. Inside cover seal
10. Inside cover
11. Outside cover seal
12. Outside cover
13. Tensioner stud

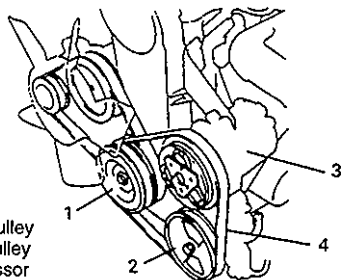


1. Crankshaft pulley
2. P/S pump pulley
3. A/C compressor (if equipped)
4. P/S belt

## REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain engine coolant and disconnect inlet hose from radiator.
- 3) Remove power steering pump belt or A/C compressor belt, if equipped.
- 4) Remove radiator cooling fan, water pump pulley, water pump drive belt and fan shroud.

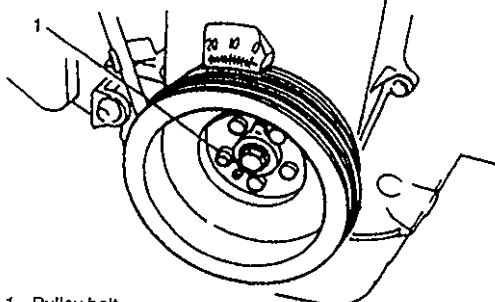


- 5) Remove crankshaft pulley by removing 5 pulley bolts.

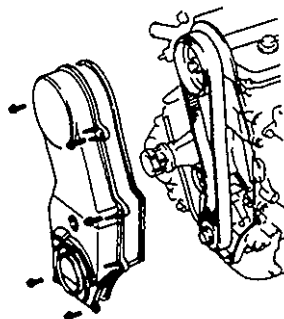


- 6) Remove timing belt outside cover.

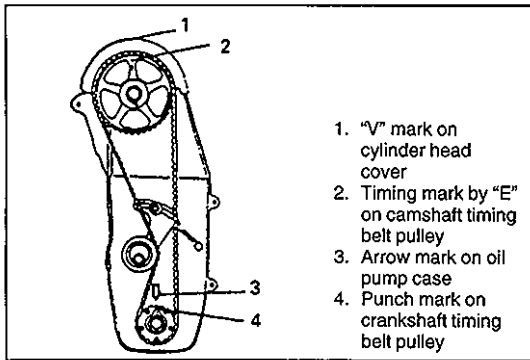

7) For installation of timing belt, align 4 timing marks as shown in figure by turning crankshaft.

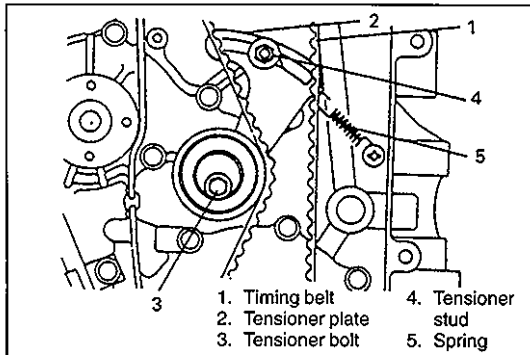


8) Remove timing belt tensioner, tensioner plate, tensioner spring and timing belt.

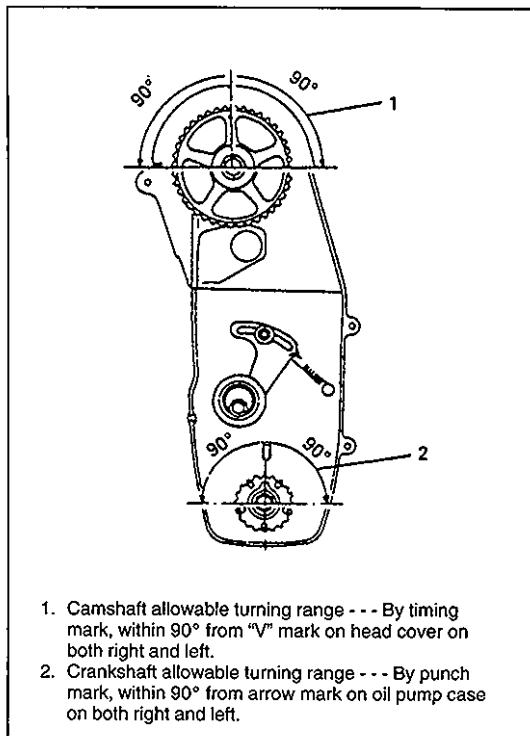


#### CAUTION:

- After timing belt is removed, never turn camshaft and crankshaft independently more than such an extent as shown in figure. If turned, interference may occur among piston and valves, and parts related to piston and valves may be damaged.
- Never bend timing belt.

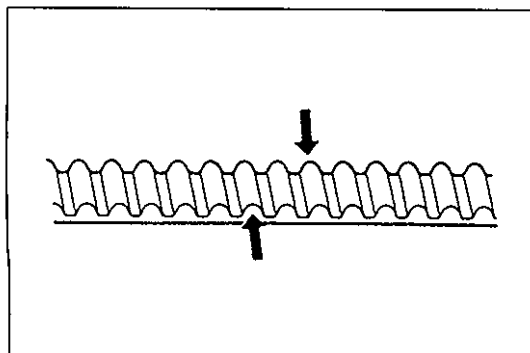


#### INSPECTION

- Inspect timing belt for wear or crack. Replace it as necessary.

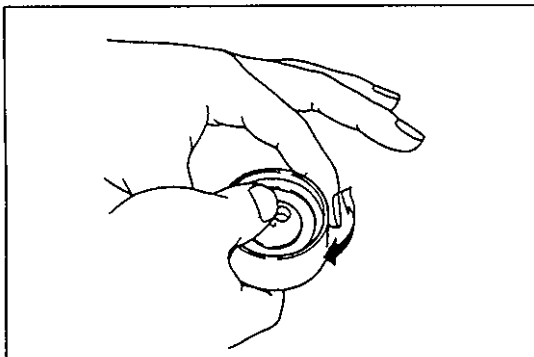


- Inspect tensioner for smooth rotation.

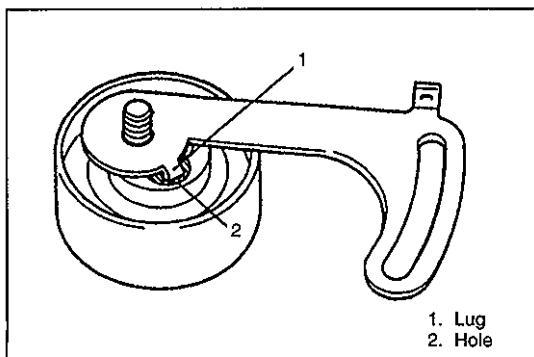


## INSTALLATION


- 1) Install tensioner plate to tensioner.  
Insert lug of tensioner plate into hole in tensioner.

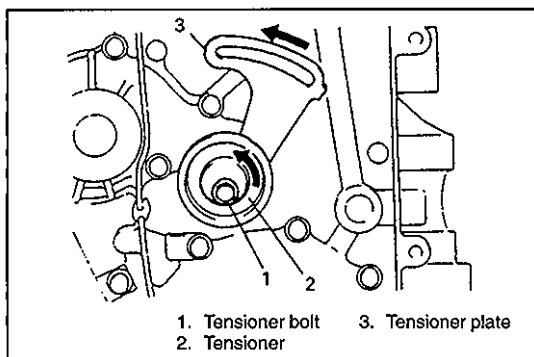


- 2) Install tensioner and tensioner plate:  
Do not tighten tensioner bolt with wrench yet. Hand tighten only at this time.  
Check to ensure that plate movement in arrow direction as shown in figure causes tensioner to move in the same direction. If no associated movement between plate and tensioner occurs, remove tensioner and plate again and reinsert plate lug into tensioner hole.

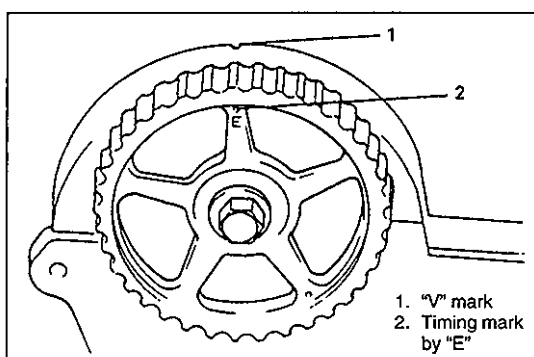

- 3) Check that timing mark on camshaft timing belt pulley is aligned with "V" mark on cylinder head cover. If not, align two marks by turning camshaft but be careful not to turn it more than its allowable turning range which is described on page 6A1-19.

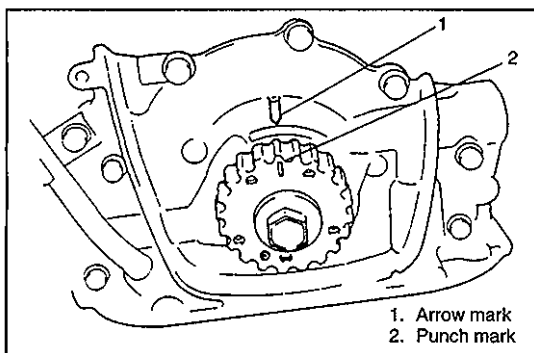

- 4) Check that punch mark on crankshaft timing belt pulley is aligned with arrow mark on oil pump case. If not, align two marks by turning crankshaft but be careful not to turn it more than its allowable turning range which is described on page 6A1-19.

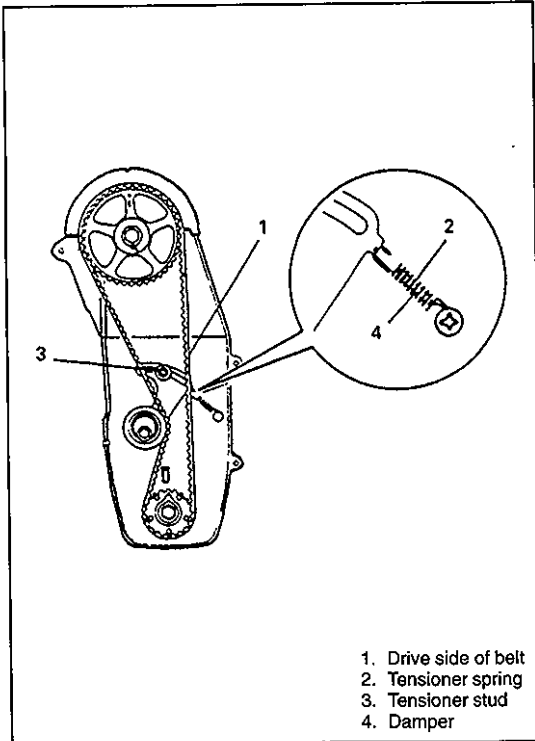


5) Install timing belt and tensioner spring.

With two sets of marks aligned and tensioner plate pushed up, install timing belt on two pulleys in such a way that drive side of belt is free from any slack.

And then install tensioner spring as shown in figure, and hand-tighten tensioner stud.

**NOTE:**

- When installing timing belt, match arrow mark ( $\Rightarrow$ ) on timing belt with rotating direction of crankshaft.
- In this state, No. 4 piston is at top dead center of compression stroke.

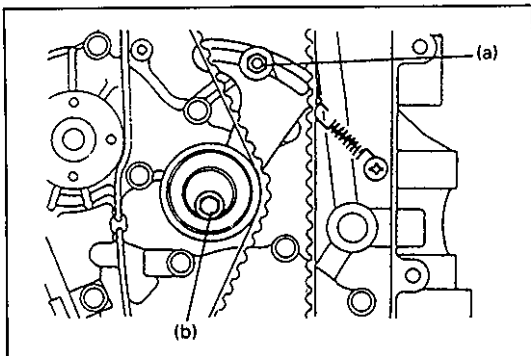


- 6) To take up slack of timing belt, turn crankshaft two rotations clockwise after installing it. After making sure that belt is free from slack, tighten tensioner stud first and then tensioner bolt to each specified torque.
- Then confirm again that two sets of marks are aligned respectively.

**Tightening Torque**

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

(b): 25 N·m (2.5 kg-m, 18.0 lb-ft)

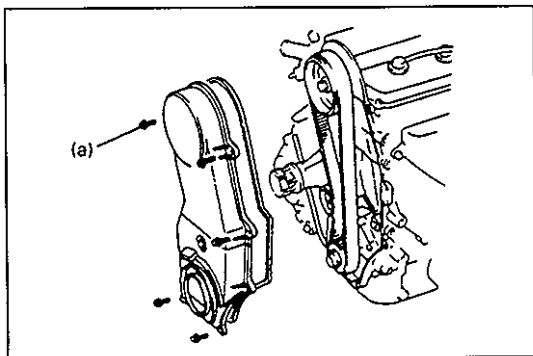


7) Install timing belt outside cover.

Before installing, make sure that seal is between water pump and oil pump case.

**Tightening Torque**

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

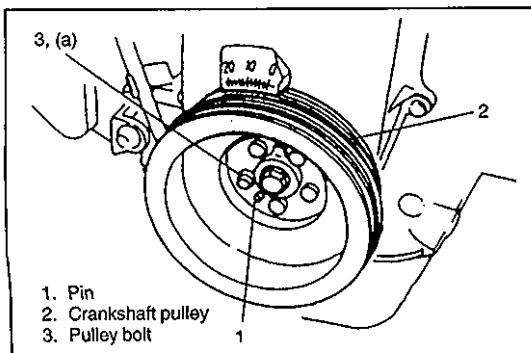

8) Install crankshaft pulley.



Fit hole of pulley to pin on crankshaft timing belt pulley, and tighten pulley bolts to specified torque.

**Tightening Torque**

(a): 16 N·m (1.6 kg-m, 11.5 lb-ft)


- 9) Install radiator fan shroud, water pump pulley, cooling fan and water pump drive belt.  
Adjust water pump drive belt tension, referring to "ENGINE COOLING" section.
- 10) Install power steering pump belt or A/C compressor belt, if equipped.  
Adjust its belt tension, referring to section 0B.
- 11) Connect radiator inlet hose to radiator.
- 12) Refill cooling system, referring to "ENGINE COOLING" section.
- 13) Connect negative cable to battery.
- 14) Verify that there is no coolant leakage at hose connection.

## OIL PAN AND OIL PUMP STRAINER

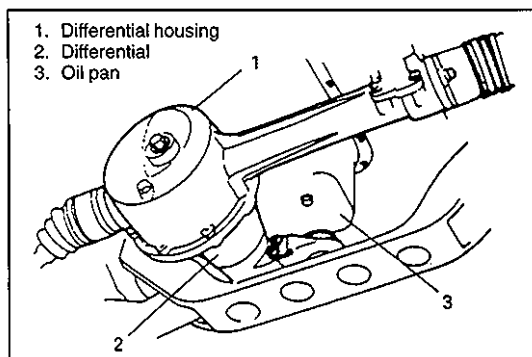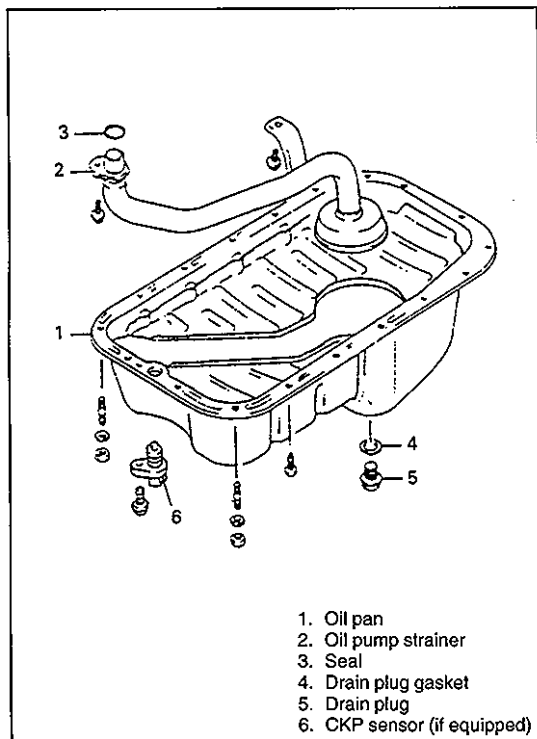


### REMOVAL


- 1) Raise vehicle.
- 2) Remove front differential housing with differential, referring to "DIFFERENTIAL" section.

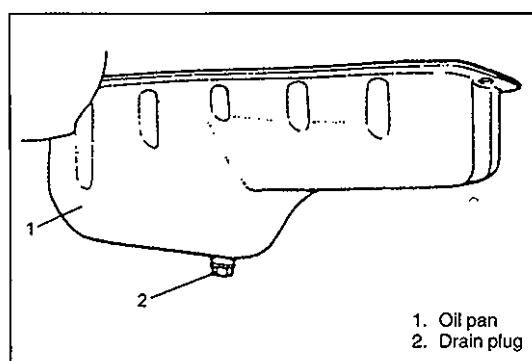

- 3) Disconnect CKP sensor coupler and remove CKP sensor by removing its bolt. (if equipped)
- 4) Drain engine oil by removing drain plug.

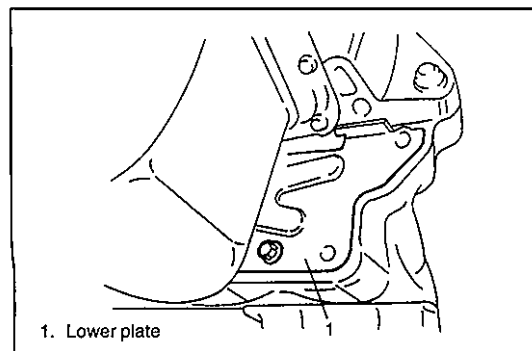


- 5) Remove clutch housing (torque converter housing for A/T) lower plate.

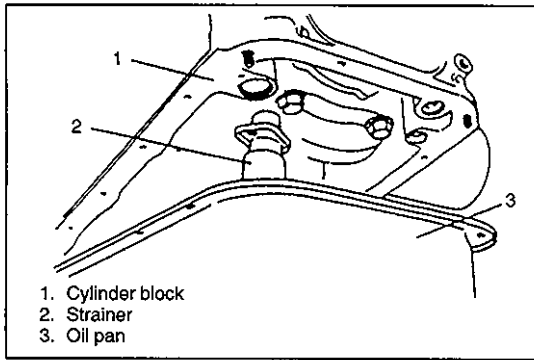


6) Remove oil pan and then oil pump strainer.

### CLEANING


- Clean mating surfaces of oil pan and cylinder block.  
Remove oil, old sealant, and dusts from mating surfaces and oil pan inside.

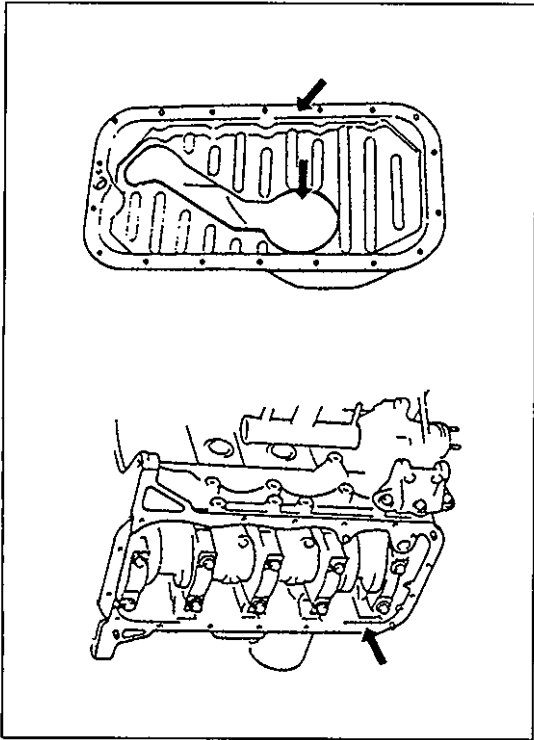

- Clean oil pump strainer screen.

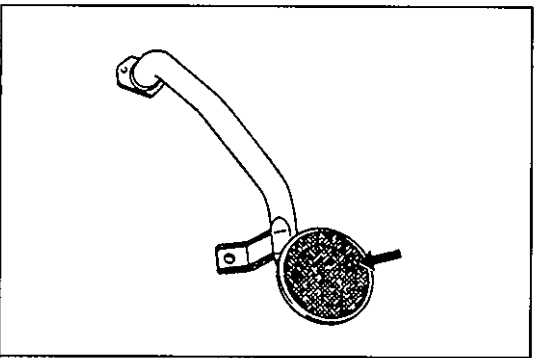




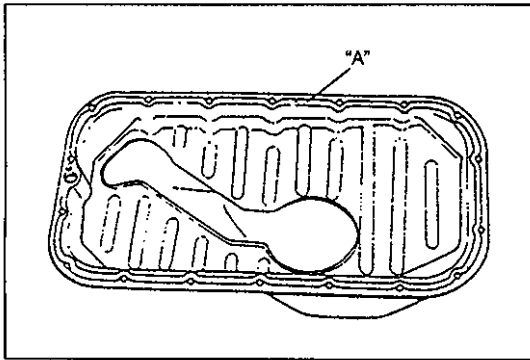

## INSTALLATION

- 1) Apply sealant to oil pan mating surface continuously as shown in figure.

**"A" Sealant: 99000-31150**

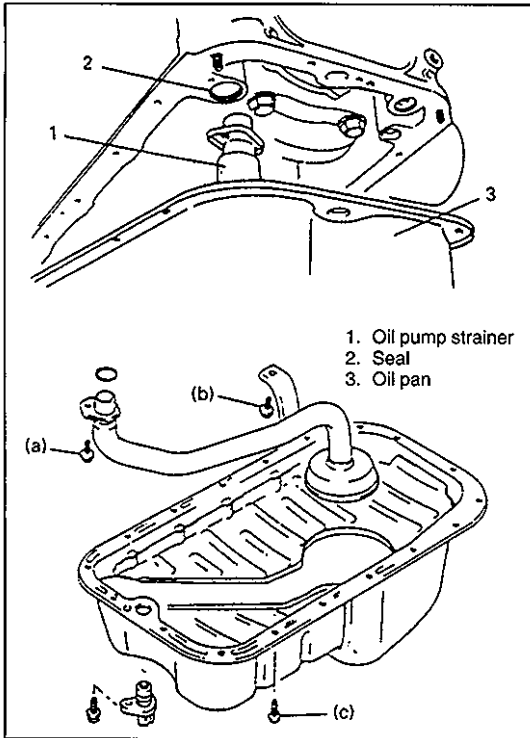

- 2) Install oil pump strainer and oil pan.  
Install seal in the position as shown in figure.  
Tighten strainer bolt first and then bracket bolt to specified torque.

### Tightening Torque

**(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)**


**(b): 11 N·m (1.1 kg-m, 8.0 lb-ft)**

After fitting oil pan to cylinder block, run in securing bolts and start tightening at the center: move wrench outward, tightening one bolt at a time.

Tighten bolts to specified torque.

### Tightening Torque


**(c): 11 N·m (1.1 kg-m, 8.0 lb-ft)**

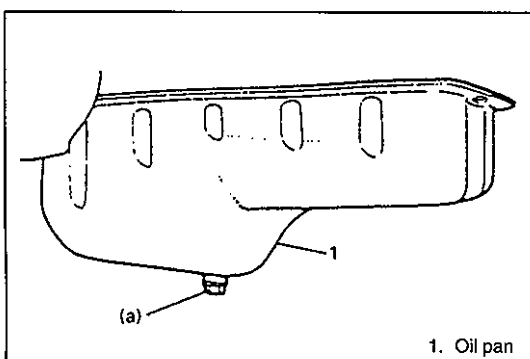

- 3) Install gasket and drain plug to oil pan.  
Tighten drain plug to specified torque.

### Tightening Torque



**(a): 35 N·m (3.5 kg-m, 25.5 lb-ft)**

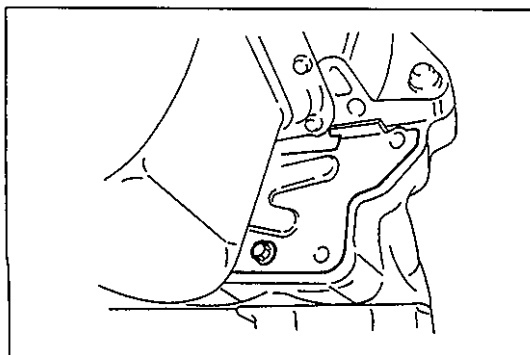

- 4) Install clutch (torque converter) housing lower plate.

- 5) Install CKP sensor and connect its coupler. (if equipped)
- 6) Install front differential housing with differential according to installation procedure described in "DIFFERENTIAL" section.
- 7) Refill front differential housing with gear oil, referring to "DIFFERENTIAL" section.
- 8) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in section 0B.
- 9) Verify that there is no engine oil leakage and differential oil leakage at each connection.

## OIL PUMP

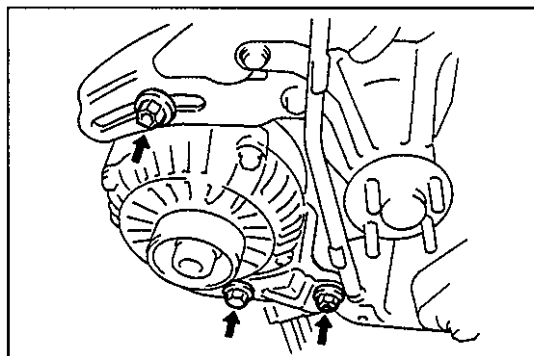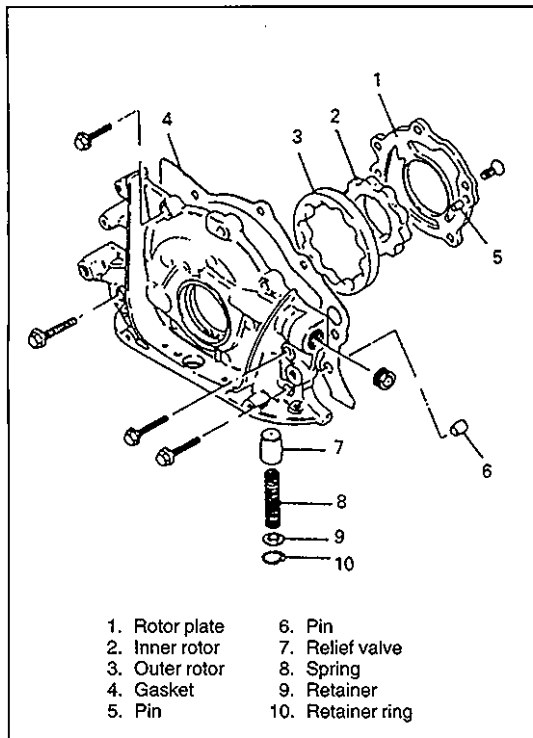


### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Remove timing belt as previously outlined.
- 3) Remove generator and its bracket.

### NOTE:


When installing bracket, fasten nut first.

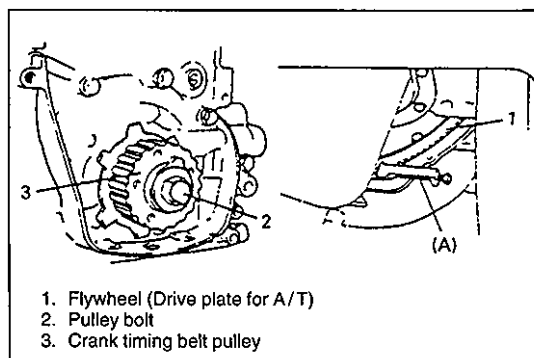


- 4) Remove crankshaft timing belt pulley.  
To lock crankshaft, engage special tool (gear stopper) with flywheel ring gear (drive plate ring gear for A/T).  
With crankshaft locked, remove crankshaft timing belt pulley bolt.

### Special Tool


(A): 09927-56010

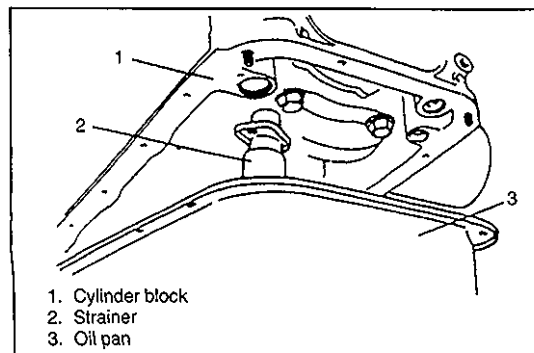

- 5) Remove oil pan and oil pump strainer as previously outlined.

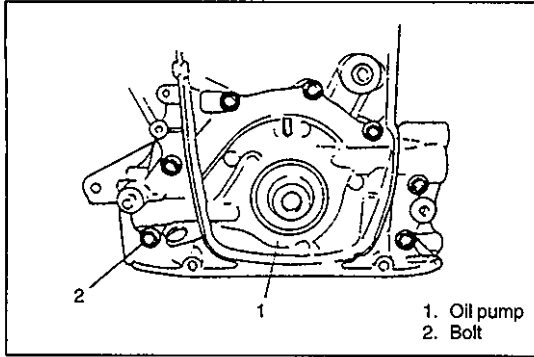


6) Remove oil pump assembly after removing bolts.

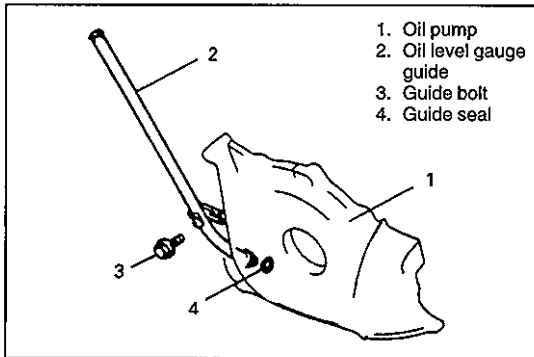


## DISASSEMBLY


1) Remove oil level gauge guide bolt and pull out guide from oil pump.

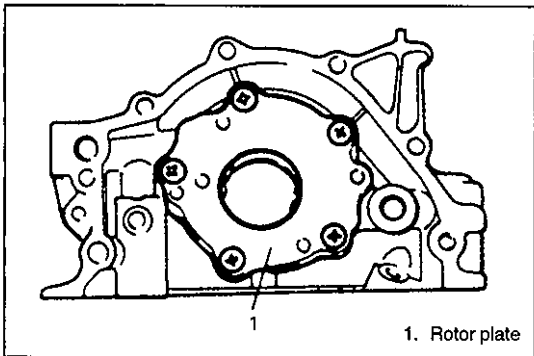

2) Remove rotor plate.

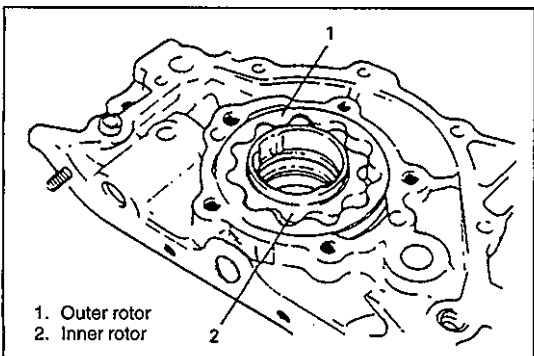


3) Remove outer rotor and inner rotor.

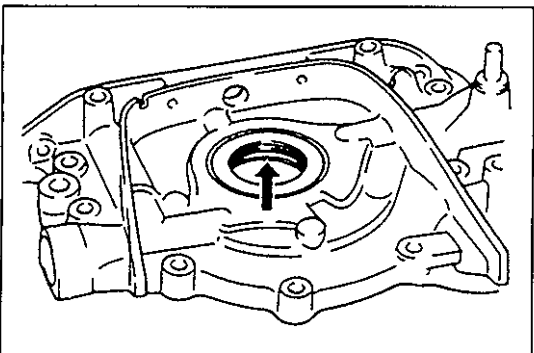


## INSPECTION


- Check oil seal lip for fault or other damage. Replace as necessary.

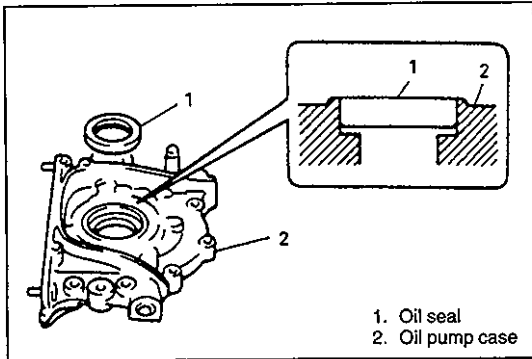**NOTE:**

When installing oil seal, press-fit it till its end face is flush with oil pump case end face.

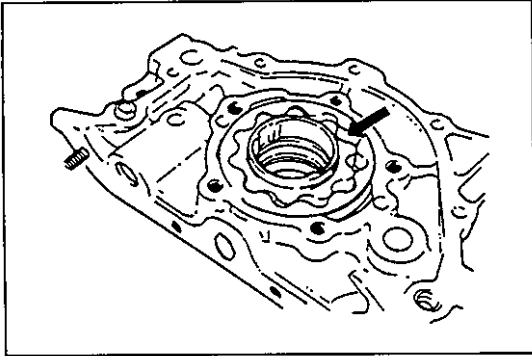

- Check outer and inner rotors, rotor plate, and oil pump case for excessive wear or damage.

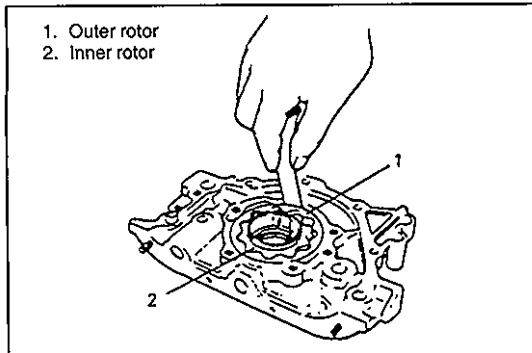
**MEASUREMENT**

- **Radial clearance**

Check radial clearance between outer rotor and case, using thickness gauge.

If clearance exceeds its limit, replace outer rotor or case.


**Limit on radial clearance between outer rotor and case:**  
0.310 mm (0.0122 in.)

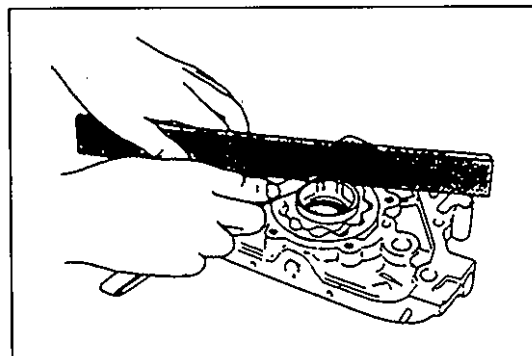


- **Side clearance**

Using straight edge and thickness gauge, measure side clearance.


**Limit on side clearance: 0.15 mm (0.0059 in.)**

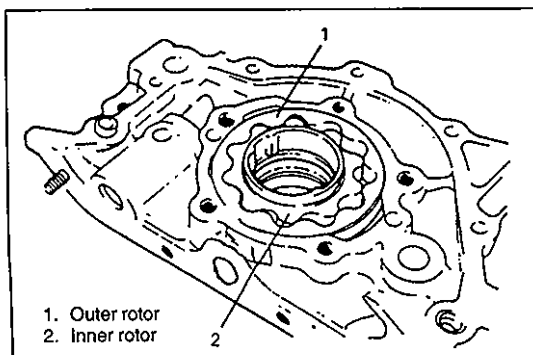**ASSEMBLY**


- 1) Wash, clean and then dry all disassembled parts.
- 2) Apply thin coat of engine oil to inner and outer rotors, oil seal lip portion, and inside surfaces of oil pump case and plate.
- 3) Install outer and inner rotors to pump case.

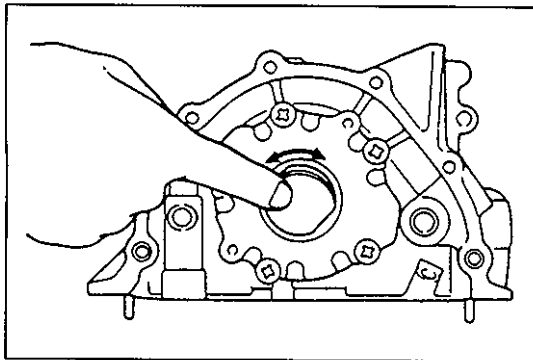

- 4) Install rotor plate. Tighten 5 screw securely.  
After installing plate, check to be sure that gears turn smoothly by hand.

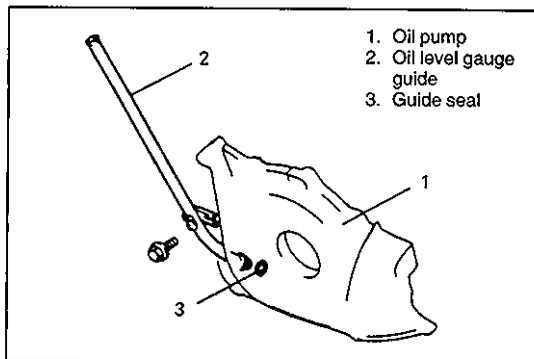

- 5) Apply engine oil to guide seal and install guide seal and guide.

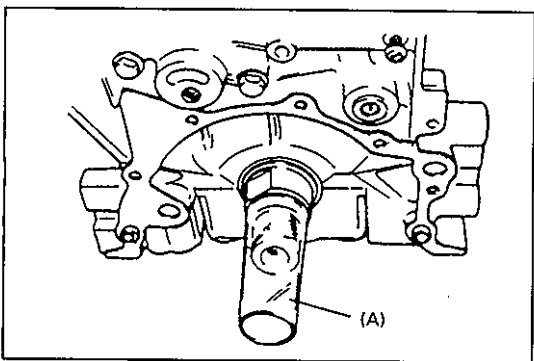


### INSTALLATION

- 1) Install two oil pump pins and oil pump gasket to cylinder block. Use a new gasket.
- 2) To prevent oil seal lip from being damaged or upturned when installing oil pump to crankshaft, fit special tool (Oil seal guide) to crankshaft, and apply engine oil to special tool.

### Special Tool


(A): 09926-18210

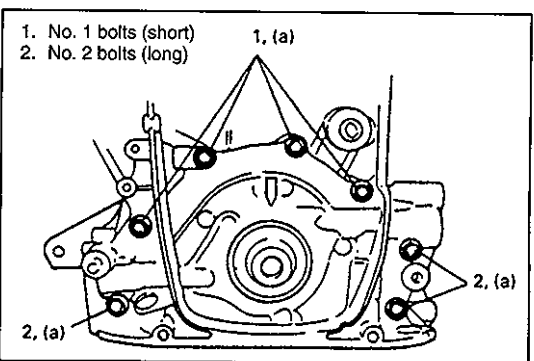


- 3) Install oil pump to cylinder block.  
As there are 2 types of oil pump bolts, refer to figure for their correct use and tighten them to specified torque.

### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

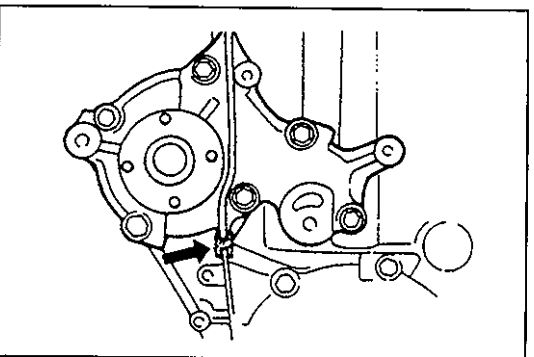

- 4) Install rubber seal between oil pump and water pump.

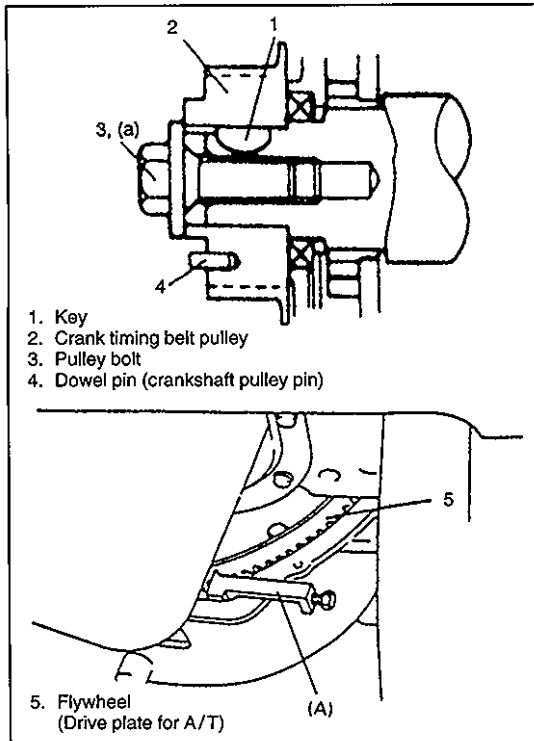

- 5) Install timing pulley key and crank timing belt pulley. Refer to figure for proper installation of these parts.  
With crankshaft locked, tighten crank timing belt pulley bolt to specified torque.

#### **Tightening Torque**



**(a): 130 N·m (13.0 kg-m, 94.0 lb-ft)**

#### **Special Tool**

**(A): 09927-56010**

- 6) Install timing belt, tensioner, oil pump strainer, oil pan and other parts as previously outlined.
- 7) Check to ensure that all removed parts are back in place. Reinstall any necessary parts which have not been reinstalled.
- 8) Adjust water pump drive belt tension, referring to "ENGINE COOLING" section.
- 9) Adjust power steering pump belt tension or A/C compressor belt tension, if equipped. Refer to section 0B.
- 10) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in section 0B.
- 11) Refill front differential housing with gear oil, referring to "DIFFERENTIAL" section.
- 12) Connect negative cable at battery.
- 13) Verify that there is no coolant leakage and each oil leakage at each connection.
- 14) After completing installation, check oil pressure by running engine.

## ROCKER ARMS, ROCKER SHAFT AND CAMSHAFT

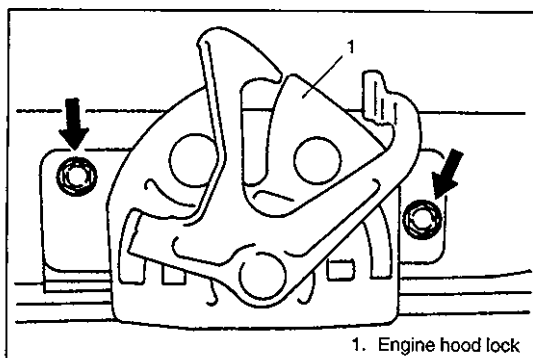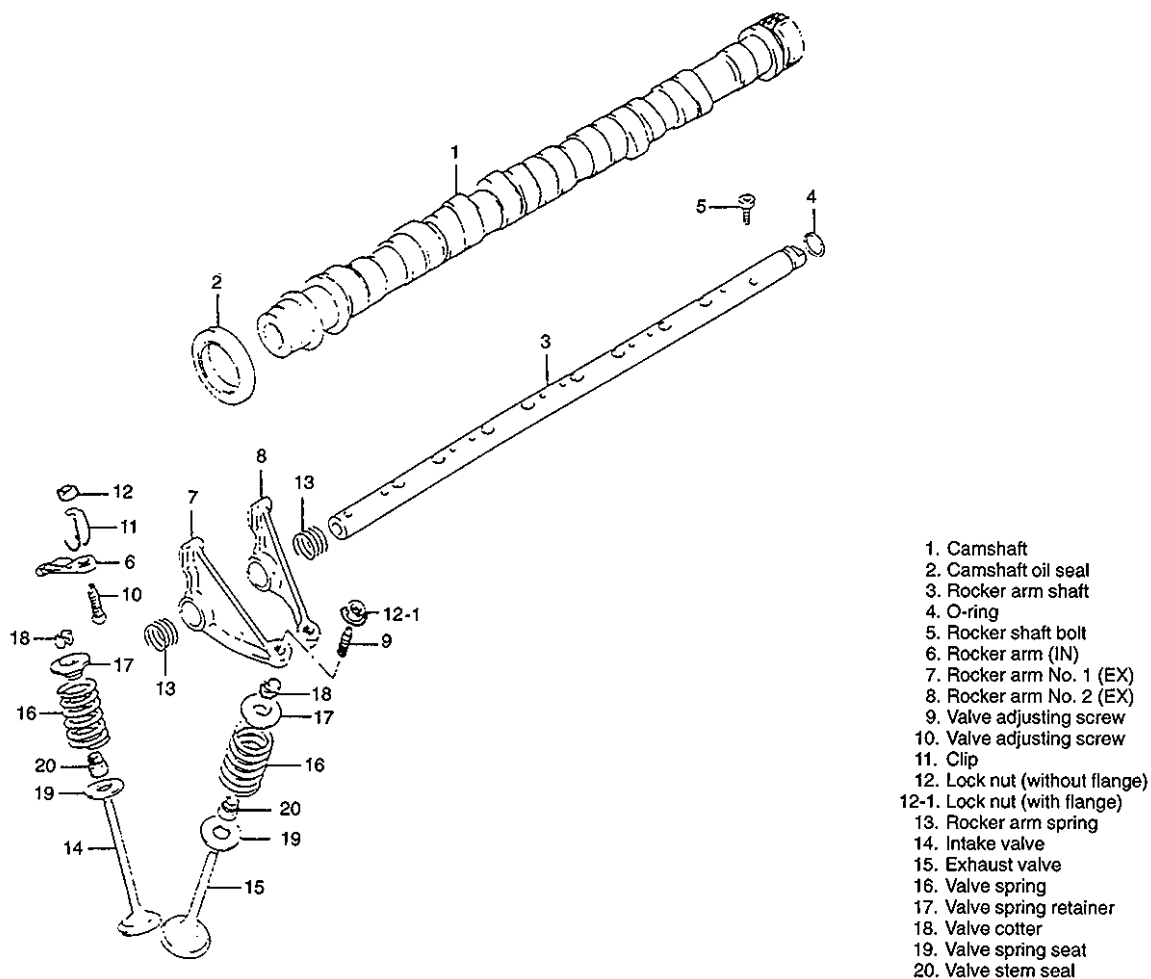


### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Removal engine hood lock from front upper member.

- 3) Remove radiator referring to "ENGINE COOLING" section.
- 4) Remove timing belt as previously outlined.



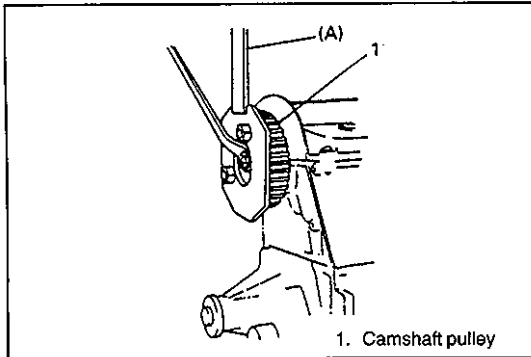


- 5) Remove camshaft timing belt pulley by using special tool.

**Special Tool**


(A): 09917-68220

- 6) Remove cylinder head cover as previously outlined.

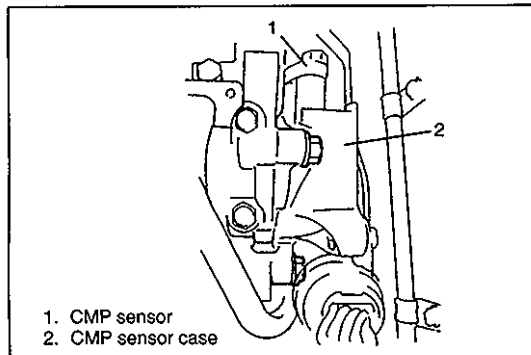


- 7) Disconnect CMP sensor connector and remove CMP sensor case from cylinder head.

Place a container or rag under CMP sensor case, for a small amount of oil flows out during removal of case.

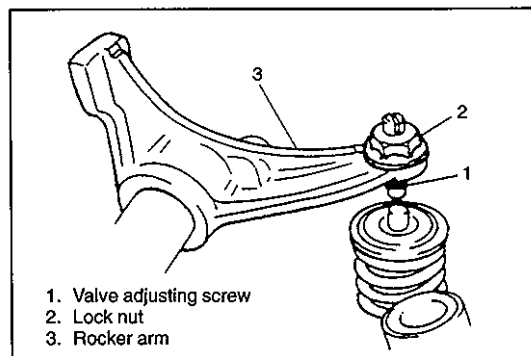


- 8) After loosening all valve adjusting screw lock nuts, turn adjusting screws back all the way to allow all rocker arms to move freely.

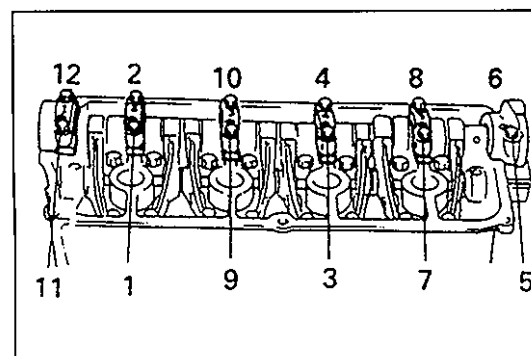


- 9) Remove camshaft housing and camshaft.

**NOTE:**

To remove camshaft housing bolts, loosen them in such order as indicated in figure, a little at a time.

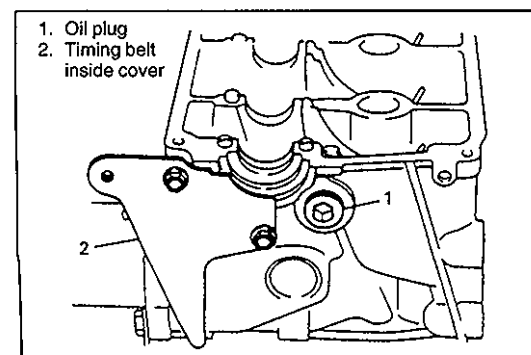


- 10) Remove rocker arm shaft plug and timing belt inside cover.

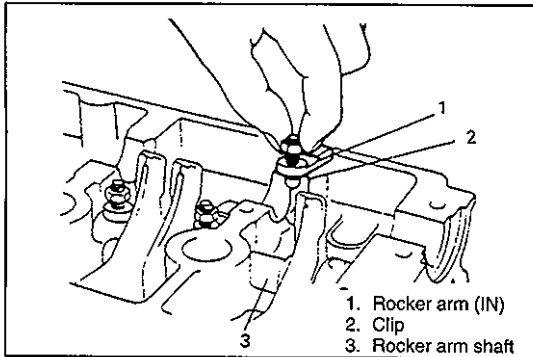


11) Remove intake rocker arm with clip from rocker arm shaft.

**NOTE:**


**Do not bend clip when removing intake rocker arm.**

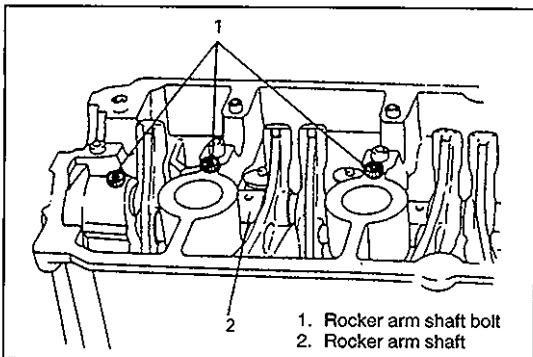


12) Remove rocker arm shaft bolts.

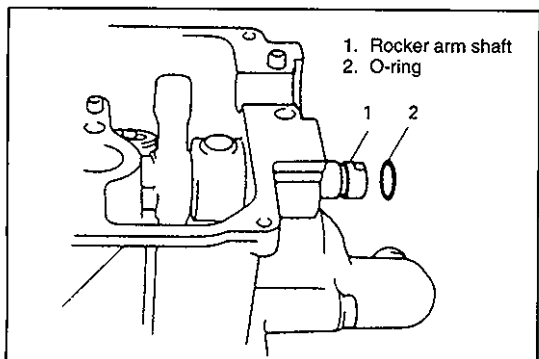

13) Push off rocker arm shaft end to CMP sensor case side and remove O-ring from shaft.

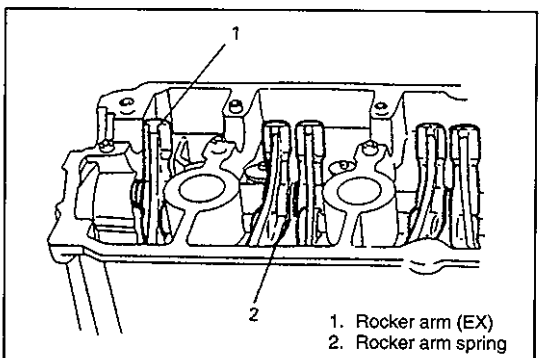

14) Remove exhaust rocker arms and rocker arm spring by pulling rocker arm shaft to front side.

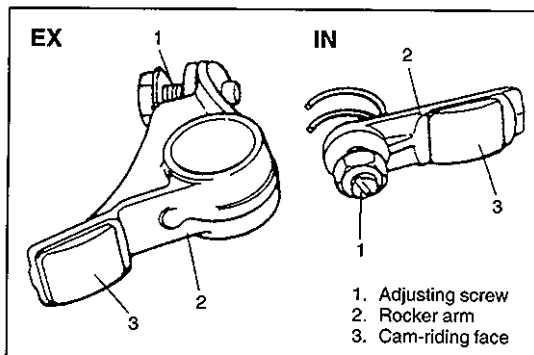


**INSPECTION**

**Adjusting Screw and Rocker Arm**

If tip of adjusting screw is badly worn, replace it.


Rocker arm must be replaced if its cam-riding face is badly worn.

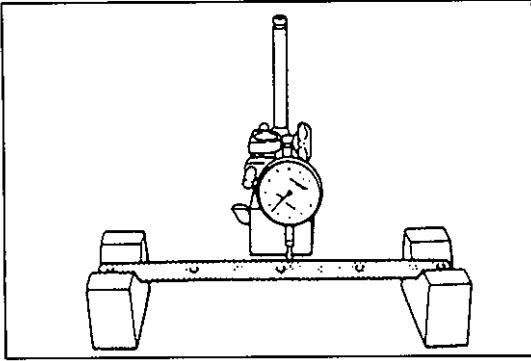

### Rocker Arm Shaft Runout

Using "V" blocks and dial gauge, check runout. If runout exceeds its limit, replace rocker arm shaft.

**Runout limit: 0.20 mm (0.008 in.)**

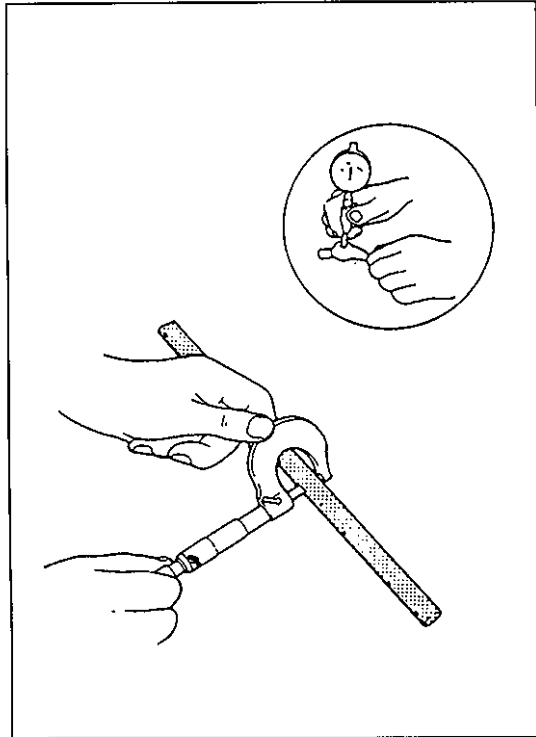


### Rocker Arm-to-Rocker Arm Shaft Clearance

Using a micrometer and a bore gauge, measure rocker shaft dia. and rocker arm I.D.

Difference between two readings is arm-to-shaft clearance on which a limit is specified.

If limit is exceeded, replace shaft or arm, or both.


Item	Standard	Limit
Rocker arm I.D.	15.996 – 16.014 mm (0.6298 – 0.6305 in.)	—
Rocker arm shaft dia.	15.969 – 15.984 mm (0.6287 – 0.6293 in.)	—
Arm-to-shaft clearance	0.012 – 0.045 mm (0.0005 – 0.0018 in.)	0.09 mm (0.0035 in.)

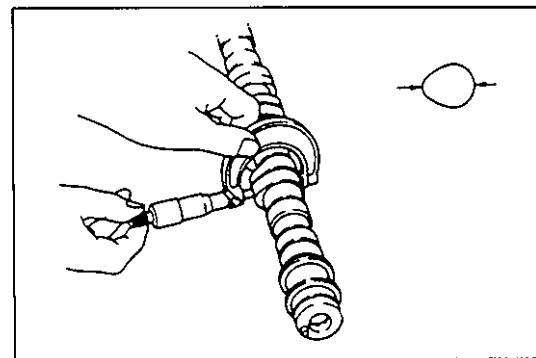

### Cam Wear

Using a micrometer, measured height of cam. If measured height is below limit, replace camshaft.

Cam height	Standard	Limit
Intake cam	36.184 – 36.344 mm (1.4246 – 1.4308 in.)	36.084 mm (1.4206 in.)
Exhaust cam	35.900 – 36.060 mm (1.4134 – 1.4197 in.)	35.800 mm (1.4094 in.)

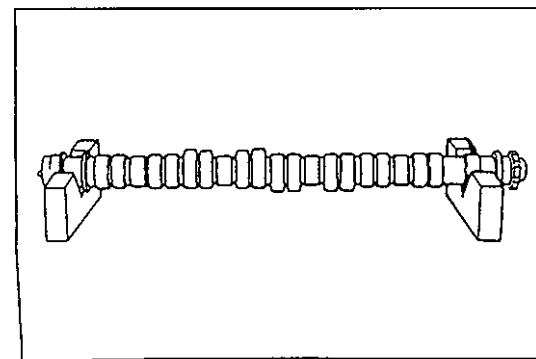


### Camshaft Runout

Hold camshaft between two "V" blocks, and measure runout by using a dial gauge.

If runout exceeds the limit, replace camshaft.


**Runout limit: 0.10 mm (0.0039 in.)**

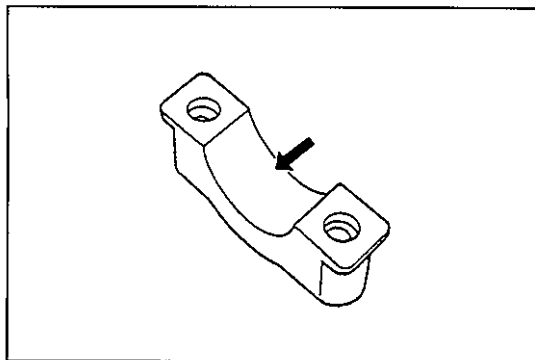

### Camshaft Journal Wear

Check camshaft journals and camshaft housings for pitting, scratches, wear or damage.

If any malfunction is found, replace camshaft or cylinder head with housing. Never replace cylinder head without replacing housing.

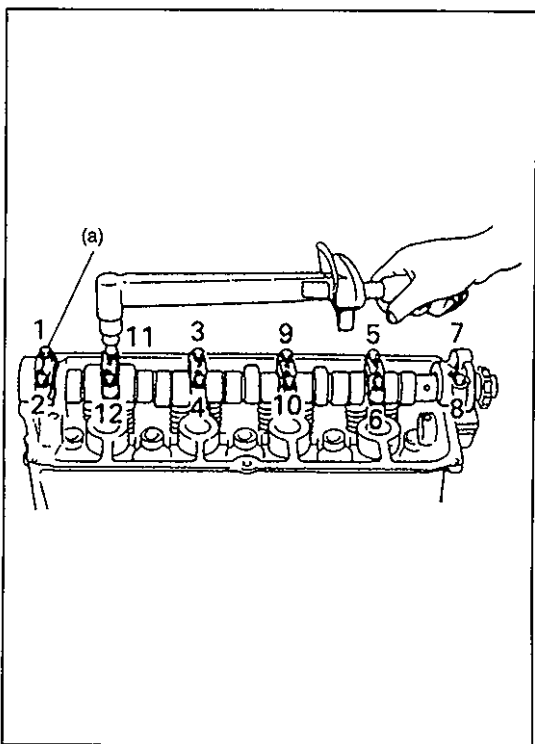

Check clearance by using gaging plastic.

The procedure is as follows.


- 1) Clean housing and camshaft journals.
- 2) Install camshaft to cylinder head.
- 3) Place a piece of gaging plastic the full width of journal of camshaft (parallel to camshaft).
- 4) Install camshaft housing, referring to page 6A1-38.
- 5) Tighten camshaft housing bolts in such order as indicated in figure a little at a time till they are tightened to specified torque.

### Tightening Torque

(a): 11 N·m (1.1kg-m, 8.0 lb-ft)


### NOTE:

Do not rotate camshaft while gaging plastic is installed.

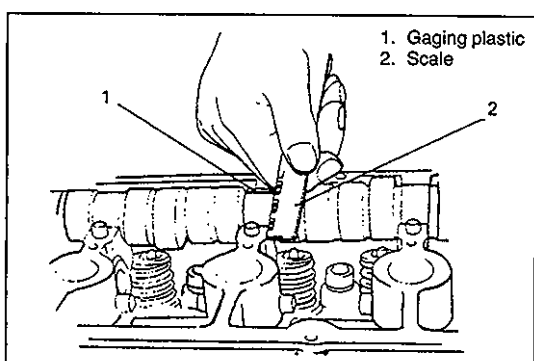


- 6) Remove housing and using scale on gaging plastic envelope, measure gaging plastic width at its widest point.

	Standard	Limit
Journal clearance	0.040 – 0.082 mm (0.0016 – 0.0032 in.)	0.12 mm (0.0047 in.)

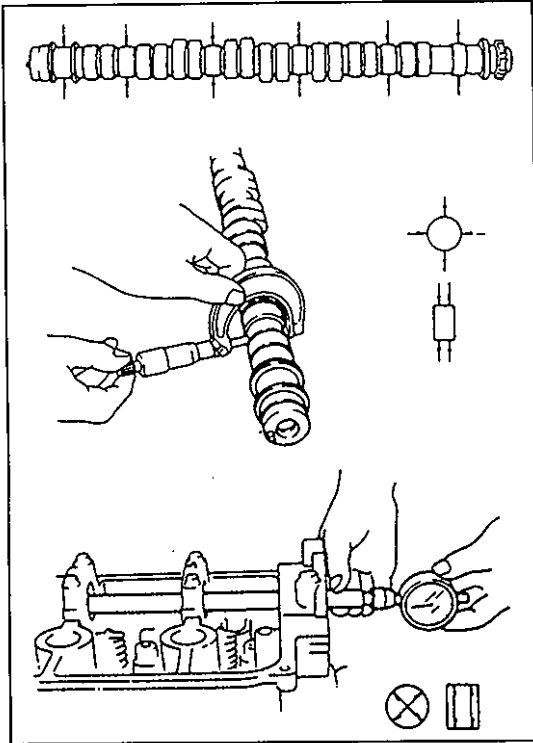



If measured camshaft journal clearance exceeds limit, measure journal (housing) bore and outside diameter of camshaft journal. Replace camshaft or cylinder head assembly whichever the difference from specification is greater.


Item	Standard
Camshaft Journal bore dia.	28.000 – 28.021 mm (1.1024 – 1.1031 in.)
Camshaft journal O.D.	27.939 – 27.960 mm (1.1000 – 1.1008 in.)

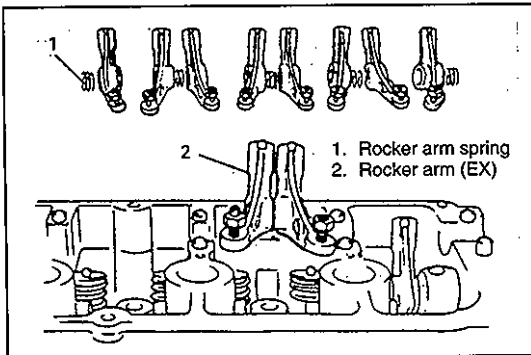

## INSTALLATION

- 1) Apply engine oil to rocker arm shaft and rocker arms.
- 2) Install rocker arm shaft, rocker arm (exhaust side) and rocker arm spring.
- 3) Check O-ring for damage or deterioration. With O-ring groove in rocker arm shaft exposed to transmission side once, install O-ring to rocker arm shaft.
- 4) Set rocker arm shaft so that its cut part faces down and becomes in parallel with head cover mating surface.

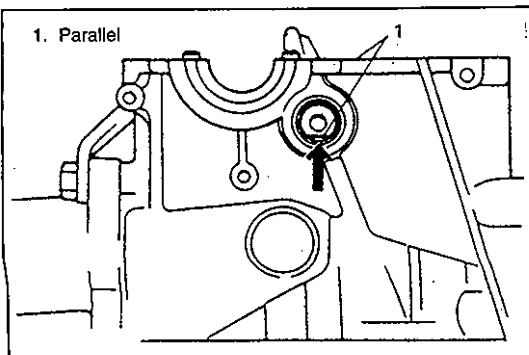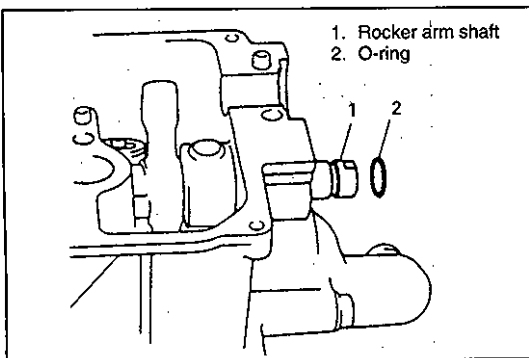


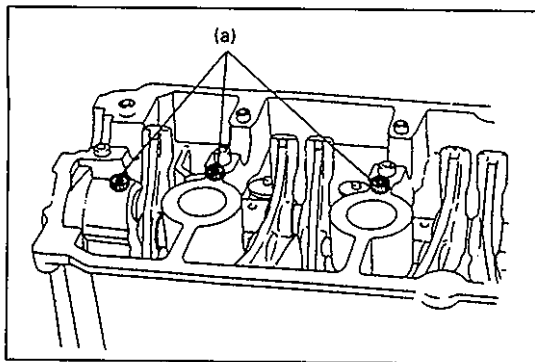


- 5) Install rocker arm shaft bolts and tighten them to specified torque.

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

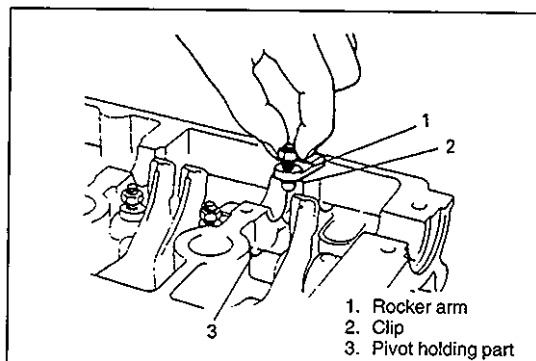


- 6) Fill small amount of engine oil into arm pivot holding part of rocker arm shaft. Install rocker arm (intake side) with clips to rocker arm shaft.

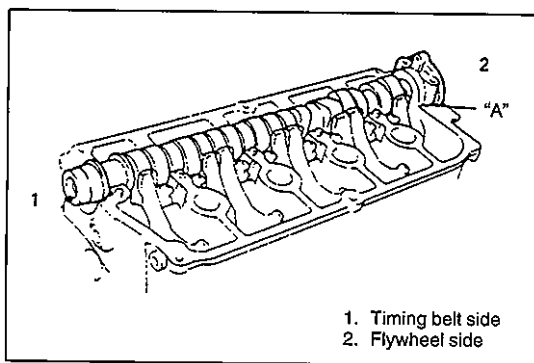


- 7) Apply engine oil to cams and journals on camshaft and put camshaft on cylinder head. Install camshaft housing to camshaft and cylinder head.

- Apply engine oil to sliding surface of each housing against camshaft journal.
- Apply sealant to mating surface of No.6 housing which will mate with cylinder head.

**"A" Sealant: 99000-31110**

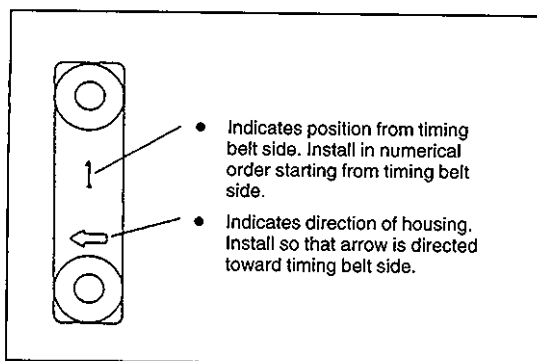

- Embossed marks are provided on each camshaft housing, indicating position and direction for installation. Install housing as indicated by these marks.
- As camshaft housing No. 1 retains camshaft in proper position as to thrust direction, make sure to first fit No. 1 housing to No. 1 journal of camshaft securely.

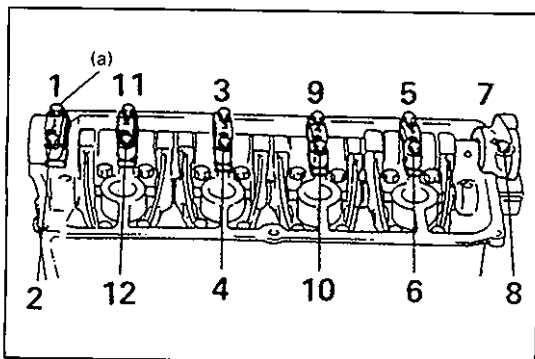


- After applying engine oil to housing bolts, tighten them temporarily first. Then tighten them by following sequence as indicated in figure.


Tighten a little at a time and evenly among bolts and repeat tightening sequence three to four times before they are tightened to specified torque.

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

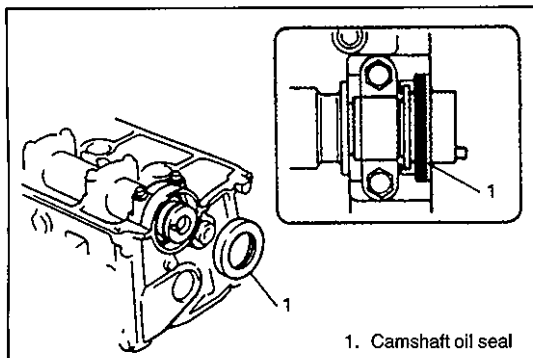


- 8) Install camshaft oil seal.  
After applying engine oil to oil seal lip, press-fit camshaft oil seal till oil seal surface becomes flush with housing surface.

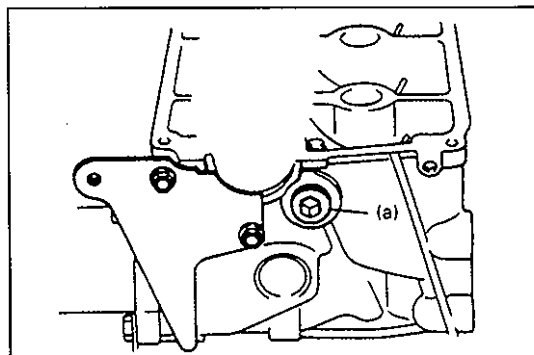


- 9) Install rocker arm shaft plug and timing belt inside cover. Then tighten rocker arm shaft plug to specified torque.

#### Tightening Torque

(a): 33 N·m (3.3 kg-m, 24.0 lb-ft)

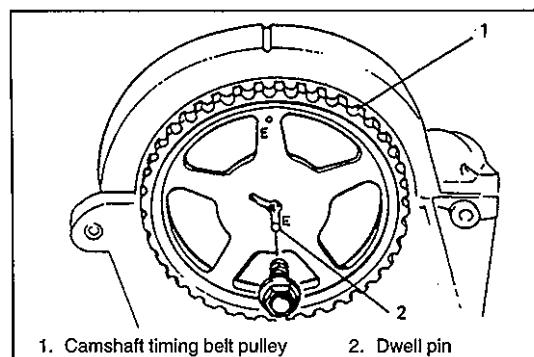

- 10) Install camshaft timing belt pulley to camshaft while fitting pin on camshaft into slot at "E" mark.

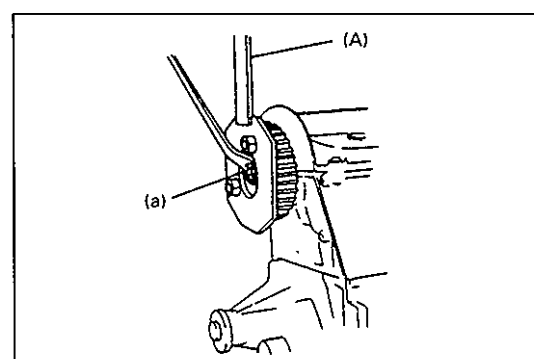

- 11) Using special tool, tighten pulley bolt to specified torque.


#### Tightening Torque

(a): 60 N·m (6.0 kg-m, 43.5 lb-ft)

#### Special Tool

(A): 09917-68220

- 12) Install belt tensioner, timing belt, outside cover, crankshaft pulley and water pump belt as previously outlined.

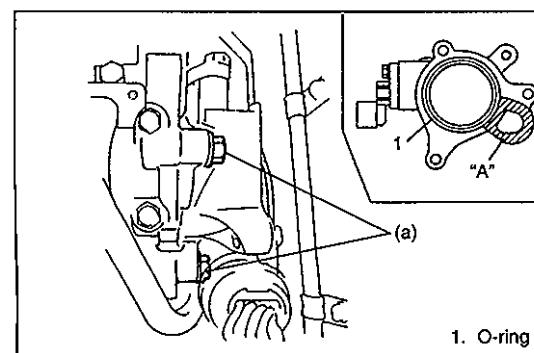

- 13) After applying sealant to part "A" as shown in figure at the left, install CMP sensor case to cylinder head and tighten its fixing bolts to specified torque.


"A" Sealant: 99000-31110

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

Connect CMP sensor connector.


- 14) Adjust valve clearance as previously outlined.
- 15) Install cylinder head cover.
- 16) Install radiator and refill cooling system referring to "ENGINE COOLING" section.

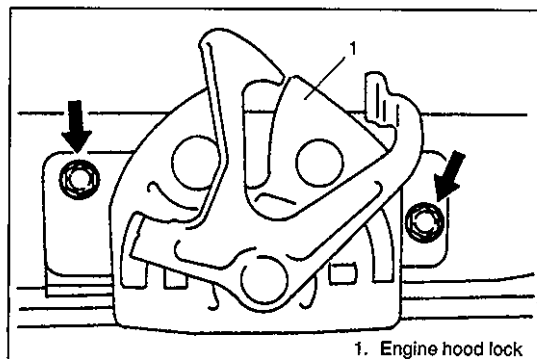

- 17) Install hood lock to front upper member and adjust lock position referring to "BODY SERVICE" section.
- 18) Refill A/T fluid referring to "AUTOMATIC TRANSMISSION" section.
- 19) Connect negative cable at battery.
- 20) Upon completion of installation, verify that there is no coolant leakage or A/T fluid leakage (for A/T vehicle) at each connection.
- 21) Confirm that ignition timing is within specification referring to "IGNITION SYSTEM" section.




## VALVES AND CYLINDER HEAD

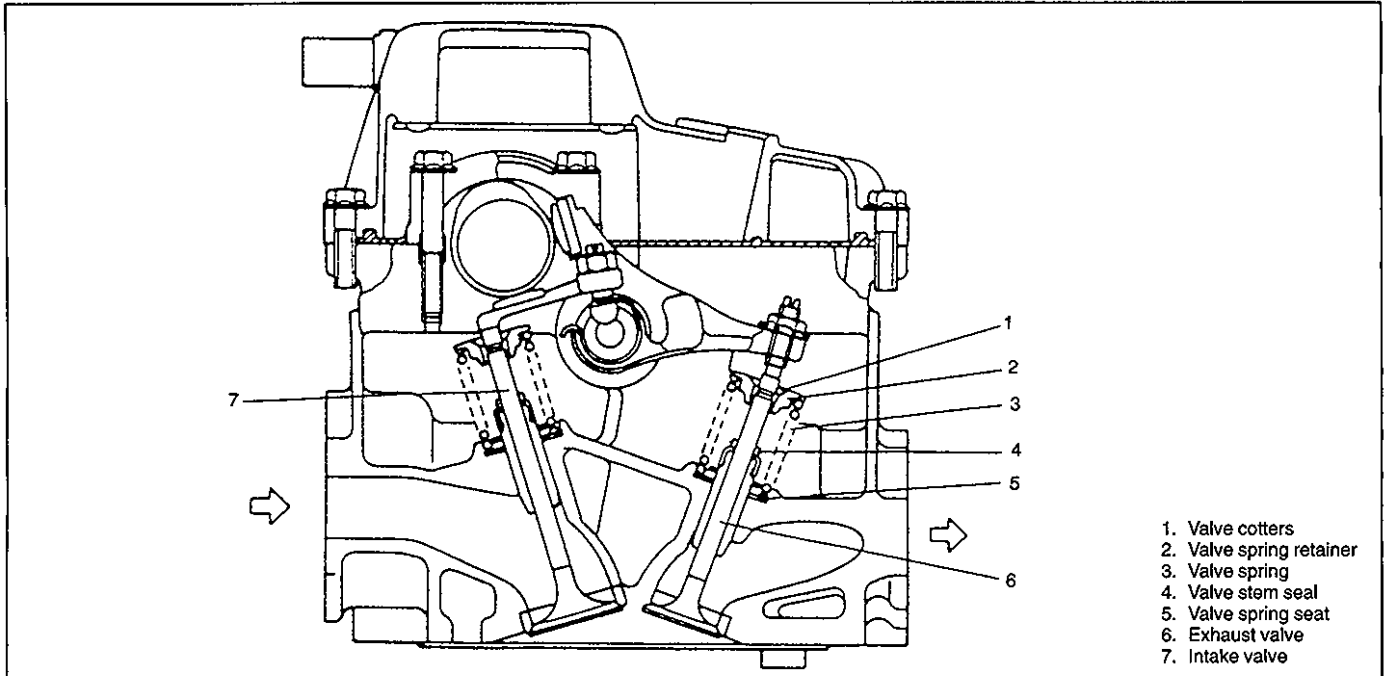


### REMOVAL


- 1) Relieve fuel pressure according to fuel pressure relief procedure described in section 6.
- 2) Disconnect negative cable at battery.

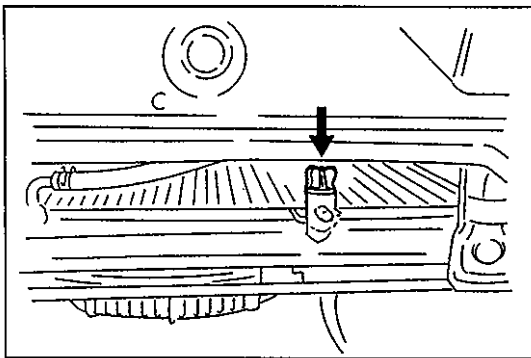


- 3) Drain cooling system.

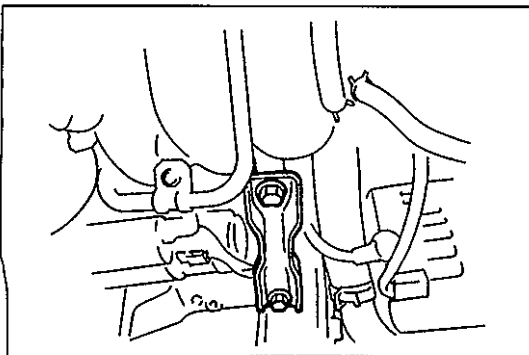


- 4) Remove intake manifold stiffener.

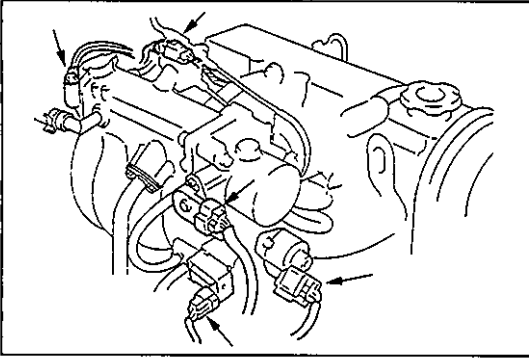


- 5) Remove air intake hose.
  - 6) Disconnect following electric wires:
    - Throttle position sensor
    - Idle air control valve
    - Engine coolant temp. sensor
    - Camshaft position sensor
    - Ground wires from intake manifold
    - EGR valve (if equipped)
    - EVAP canister purge valve
    - Injector wires at the coupler
    - Heated oxygen sensor (if equipped)
- and then release above wire harnesses from clamps.

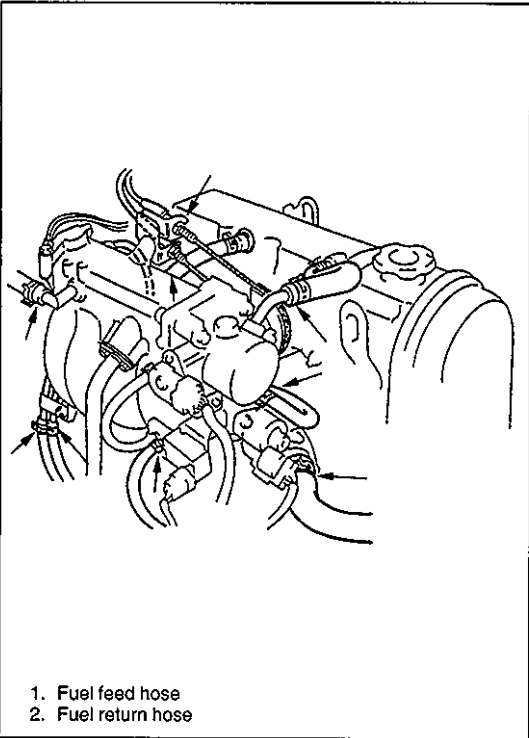


- 7) Disconnect following hoses:
  - EVAP canister purge hose from EVAP canister purge valve
  - Brake booster hose from intake manifold
  - Engine coolant hose (outlet side) from throttle body.
  - Radiator inlet hose from thermostat cap.
  - Heater inlet hose from pipe.
  - Fuel feed hose and return hose from each pipe.
- 8) Disconnect accelerator cable and A/T throttle cable (if equipped) from throttle body.

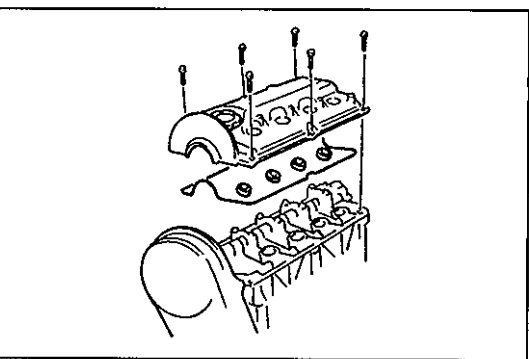


- 9) Remove cylinder head cover as previously outlined.  
Loosen all valve lash adjusting screws fully.

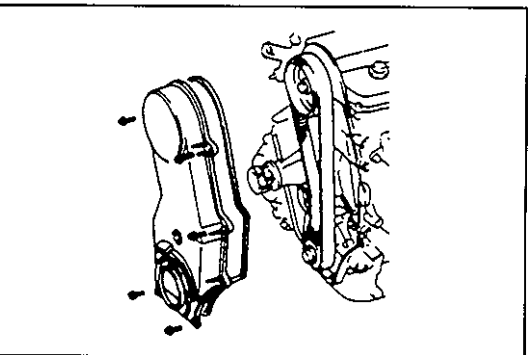

- 10) Remove timing belt and camshaft as previously outlined.
- 11) Remove generator adjust arm from intake manifold.
- 12) Remove air conditioning compressor adjust arm from cylinder head. (if equipped)



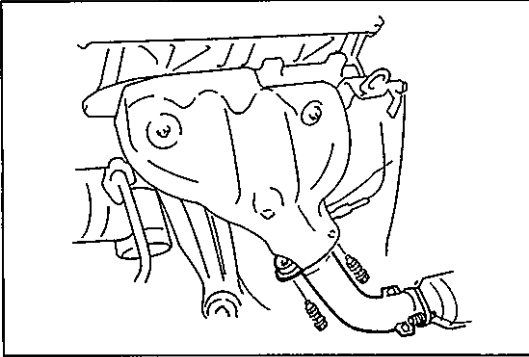


- 13) Disconnect exhaust pipe from exhaust manifold and remove exhaust manifold stiffener.

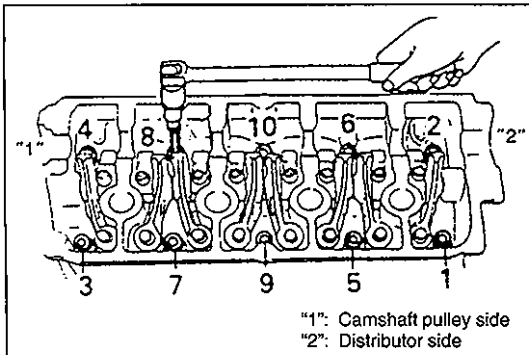

- 14) Loosen cylinder head bolts in such order as indicated in figure and remove them.
- 15) Check all around cylinder head for any other parts required to be removed or disconnected and remove or disconnect whatever necessary.

- 16) Remove cylinder head with intake manifold and exhaust manifold, using lifting device.

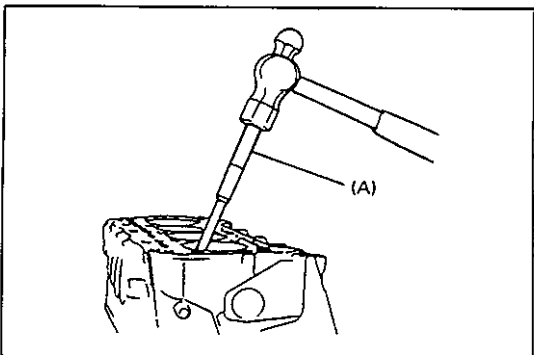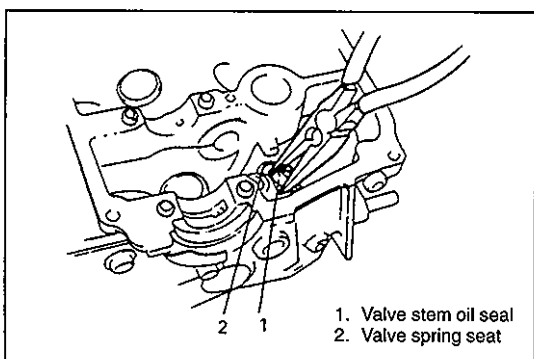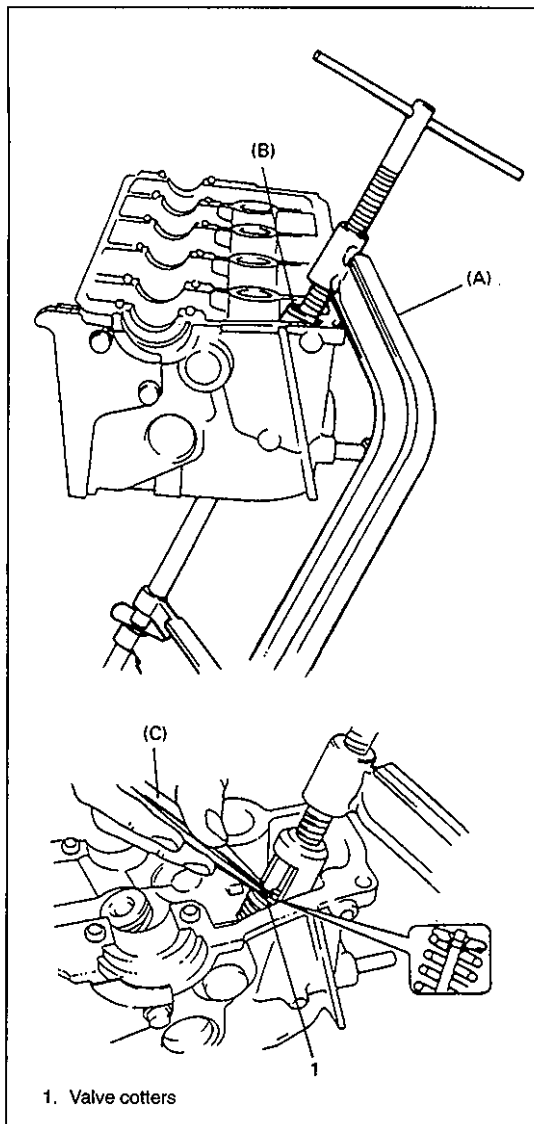

## DISASSEMBLY

- 1) For ease in servicing cylinder head, remove intake manifold with throttle body and exhaust manifold from cylinder head.
- 2) Remove intake rocker arm with clip from rocker arm shaft, remove rocker arm shaft bolts and remove exhaust rocker arms and springs by pulling its shaft out to transmission side.
- 3) Using special tool (Valve lifter), compress valve springs and then remove valve cotters by using special tool (Forceps) as shown.

### Special Tool

(A): 09916-14510

(B): 09916-14910

(C): 09916-84511

- 4) Release special tool, and remove spring retainer and valve spring.
- 5) Remove valve from combustion chamber side.

- 6) Remove valve stem oil seal from valve guide, and then valve spring seat.

### NOTE:

**Do not reuse oil seal once disassembled. Be sure to use new oil seal when assembling.**

- 7) Using special tool (Valve guide remover), drive valve guide out from combustion chamber side to valve spring side.


### Special Tool

(A): 09916-44910

### NOTE:

**Do not reuse valve guide once disassembled. Be sure to use new valve guide (Oversize) when assembling.**

- 8) Place disassembled parts except valve stem seal and valve guide in order, so that they can be installed in their original position.

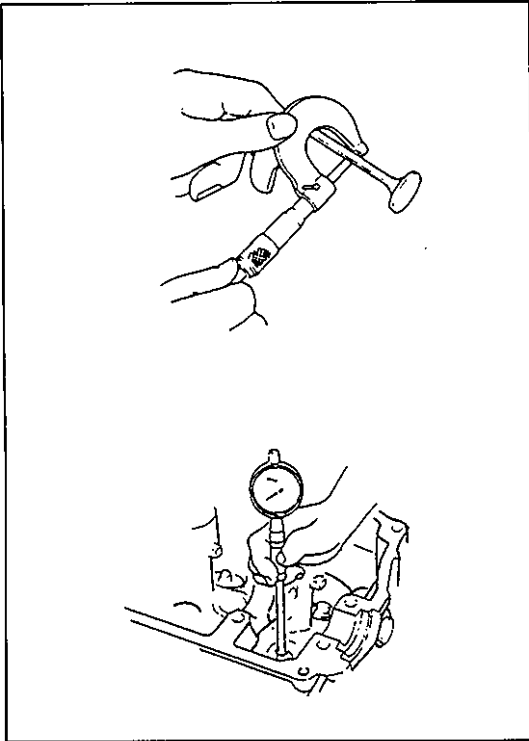

## INSPECTION


### Valve Guides

Using a micrometer and bore gauge, take diameter readings on valve stems and guides to check stem-to-guide clearance.

Be sure to take reading at more than one place along the length of each stem and guide.

If clearance exceeds limit, replace valve and valve guide.

Item		Standard	Limit
Valve stem diameter	In	5.465 – 5.480 mm (0.2152 – 0.2157 in.)	–
	Ex	5.440 – 5.455 mm (0.2142 – 0.2148 in.)	–
Valve guide I.D.	In	5.500 – 5.512 mm (0.2166 – 0.2170 in.)	–
	Ex		
Stem-to-guide clearance	In	0.020 – 0.047 mm (0.0008 – 0.0018 in.)	0.07 mm (0.0027 in.)
	Ex	0.045 – 0.072 mm (0.0018 – 0.0028 in.)	0.09 mm (0.0035 in.)

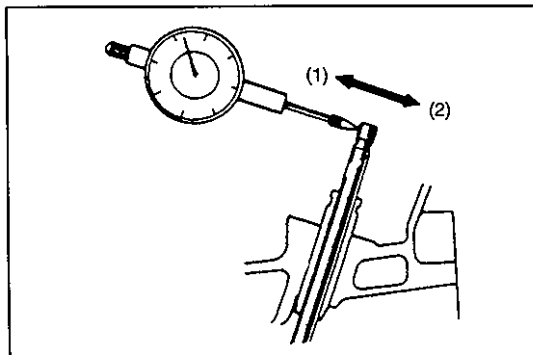


If bore gauge is not available, check end deflection of valve stem with a dial gauge instead.

Move stem end in directions (1) and (2) to measure end deflection.

If deflection exceeds its limit, replace valve stem and valve guide.


Valve stem end deflection limit	In	0.14 mm (0.005 in.)
	Ex	0.18 mm (0.007 in.)

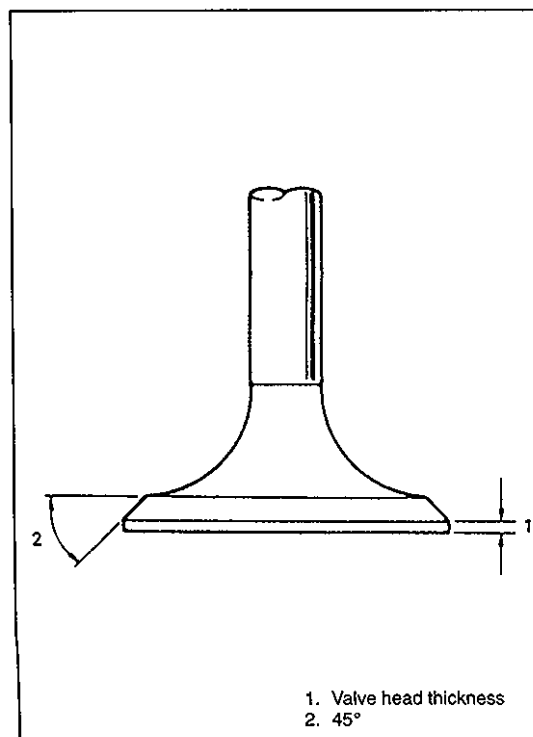


### Valves

- Remove all carbon from valves.
- Inspect each valve for wear, burn or distortion at its face and stem and, as necessary, replace it.
- Measure thickness of valve head. If measured thickness exceeds limit, replace valve.

Valve head thickness		
	Standard	Limit
IN	0.8 – 1.2 mm (0.03 – 0.047 in.)	0.6 mm (0.024 in.)
EX		0.7 mm (0.027 in.)

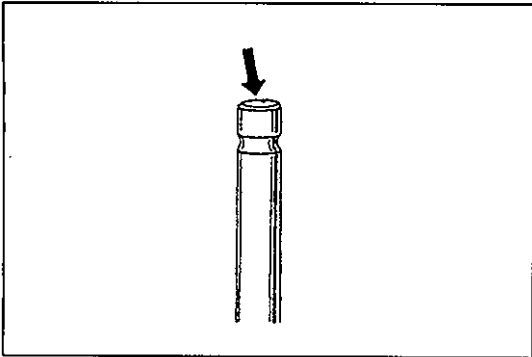


- Inspect valve stem end face for pitting and wear. If pitting or wear is found there, valve stem end may be resurfaced, but not so much as to grind off its chamfer. When it is worn so much that its chamfer is gone, replace valve.

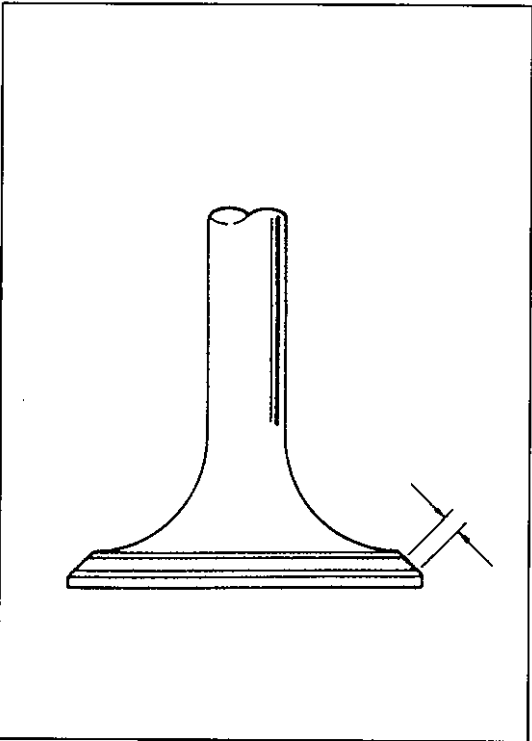

- Seating contact width:  
Create contact pattern on each valve in the usual manner, i.e., by giving uniform coat of marking compound to valve seat and by rotatingly tapping seat with valve head. Valve lapper (tool used in valve lapping) must be used.

Pattern produced on seating face of valve must be a continuous ring without any break, and the width of pattern must be within specified range.

Standard seating width revealed by contact pattern on valve face	In	1.1 – 1.3 mm
	Ex	(0.0433 – 0.0512 in.)

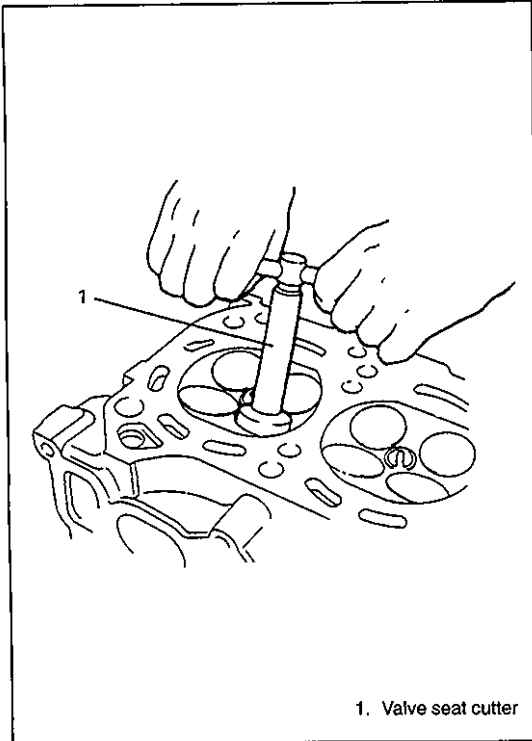


- **Valve seat repair:**

A valve seat not producing a uniform contact with its valve or showing width of seating contact that is out of specified range must be repaired by regrinding or by cutting and regrinding and finished by lapping.

- 1) **EXHAUST VALVE SEAT:** Use valve seat cutters to make two cuts as illustrated in figure. Two cutters must be used: the first for making 15° angle, and the second for making 45° angle. The second cut must be made to produce desired seat width.

**Seat width for exhaust valve seat:**

**1.1 – 1.3 mm (0.0433 – 0.0512 in.)**

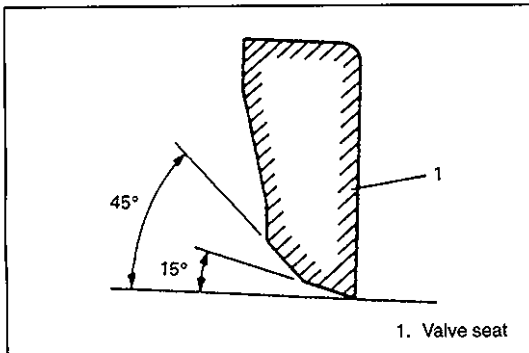


- 2) **INTAKE VALVE SEAT:** Cutting sequence is the same as for exhaust valve seats.

**Seat width for intake valve seat:**

**1.1 – 1.3 mm (0.0433 – 0.0512 in.)**

- 3) **VALVE LAPPING:** Lap valve on seat in two steps, first with coarse size lapping compound applied to face and the second with fine-size compound, each time using valve lapper according to usual lapping method.

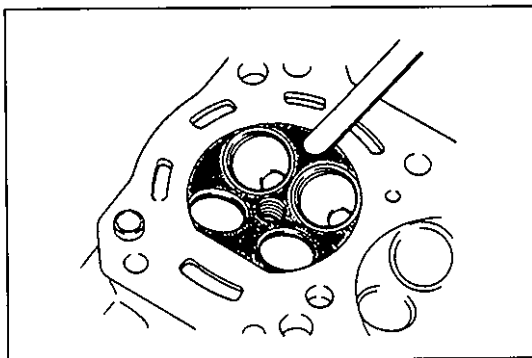


### Cylinder Head

- Remove all carbon from combustion chambers.

**NOTE:**

**Do not use any sharp-edged tool to scrape off carbon. Be careful not to scuff or nick metal surfaces when decarboning. The same applies to valves and valve seats, too.**


- Check cylinder head for cracks in intake and exhaust ports, combustion chambers, and head surface.

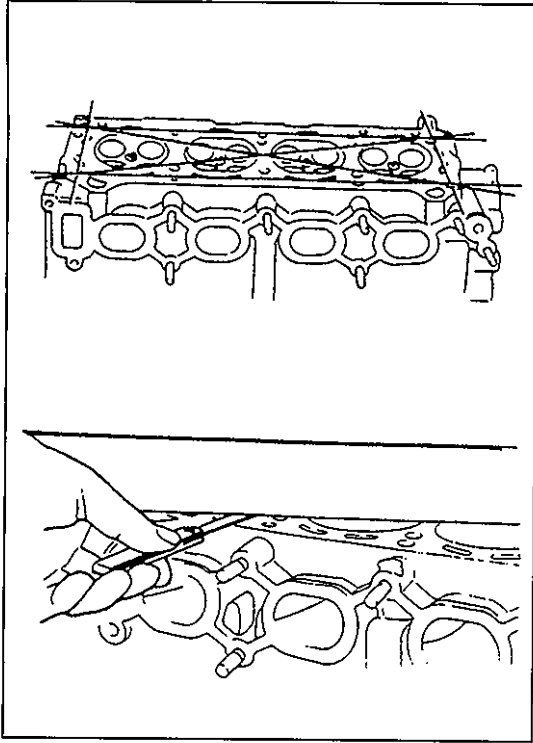

- **Flatness of gasketed surface:**

Using a straightedge and thickness gauge, check surface at a total of 6 locations. If distortion limit, given below, is exceeded, correct gasketed surface with a surface plate and abrasive paper of about #400 (Waterproof silicon carbide abrasive paper): place paper on and over surface plate, and rub gasketed surface against paper to grind off high spots. Should this fail to reduce thickness gauge readings to within limit, replace cylinder head. Leakage of combustion gases from this gasketed joint is often due to warped gasketed surface: such leakage results in reduced power output.

**Limit of distortion: 0.05 mm (0.002 in.)**

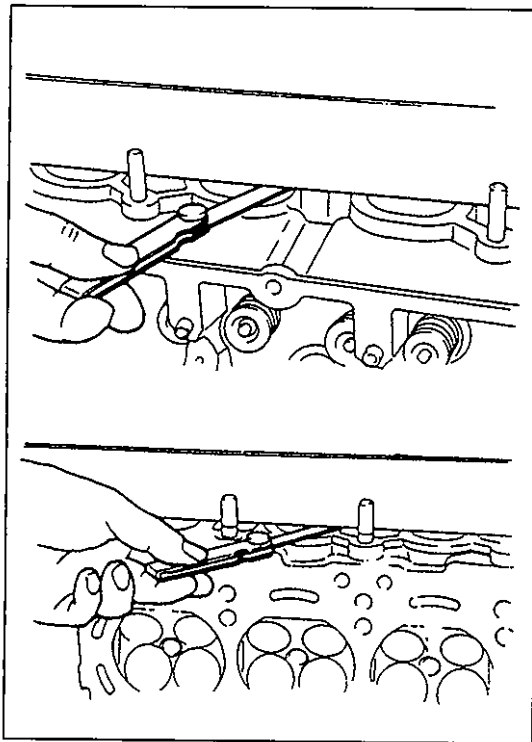


- **Distortion of manifold seating faces:**

Check seating faces of cylinder head for manifolds, using a straightedge and thickness gauge, in order to determine whether these faces should be corrected or cylinder head replaced.

**Limit of distortion: 0.10 mm (0.004 in.)**




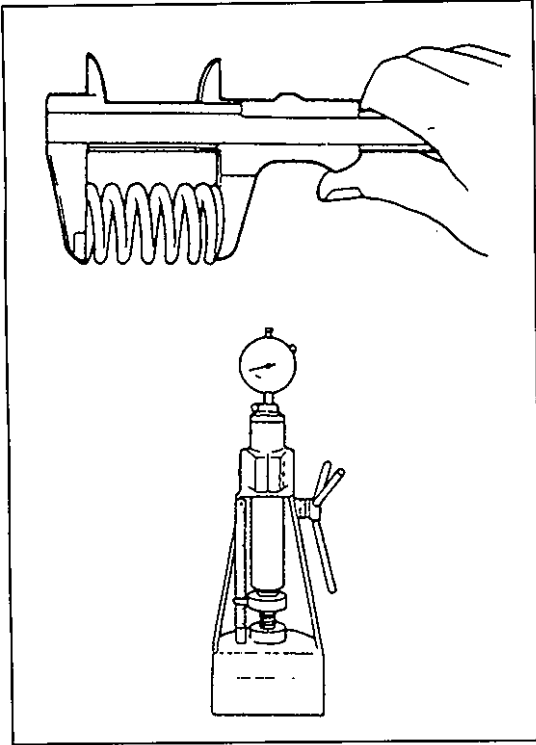

### Valve Springs

- Referring to data given below, check to be sure that each spring is in sound condition, free of any evidence of breakage or weakening. Remember, weakened valve springs can cause chatter, not to mention possibility of reducing power output due to gas leakage caused by decreased seating pressure.



Item	Standard	Limit
Valve spring free length	36.83 mm (1.4500 in.)	35.67 mm (1.4043 in.)
Valve spring preload	10.7 – 12.5 kg for 31.5 mm (23.6 – 27.5 lb/ 1.24 in.)	9.3 kg for 31.5 mm (20.5 lb/ 1.24 in.)

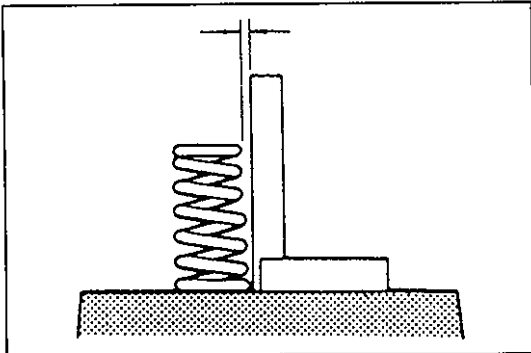


- Spring squareness:**

Use a square and surface plate to check each spring for squareness in terms of clearance between end of valve spring and square. Valve springs found to exhibit a larger clearance than limit given below must be replaced.

**Valve spring squareness limit: 2.0 mm (0.079 in.)**

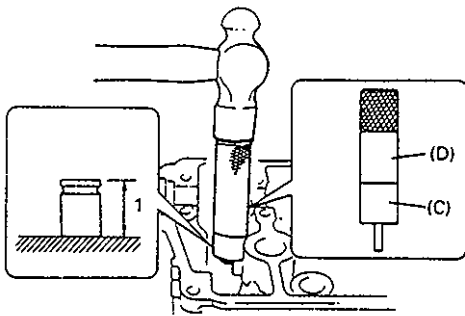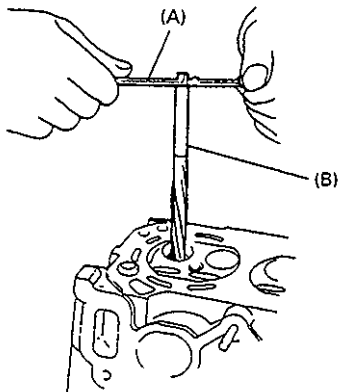

1. Valve guide protrusion (11.5 mm)

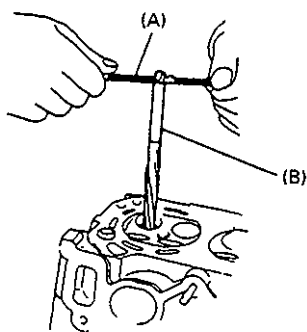**ASSEMBLY**

- 1) Before installing valve guide into cylinder head, ream guide hole with special tool (11 mm reamer) so remove burrs and make it truly round.

**Special Tool****(A): 09916-34542****(B): 09916-38210**

- 2) Install valve guide to cylinder head.

Heat cylinder head uniformly at a temperature of 80 to 100°C (176 to 212°F) so that head will not be distorted, and drive new valve guide into hole with special tools. Drive in new valve guide until special tool (Valve guide installer) contacts cylinder head. After installing, make sure that valve guide protrudes by 11.5 mm (0.45 in.) from cylinder head.

**Special Tool****(C): 09916-56011****(D): 09916-58210****NOTE:**

- Do not reuse valve guide once disassembled.  
Install new valve guide (Oversize).
- Intake and exhaust valve guides are identical.


Valve guide oversize: 0.03 mm (0.0012 in.)

Valve guide protrusion (In and Ex): 11.5 mm (0.45 in.)

- 3) Ream valve guide bore with special tool (5.5 mm reamer). After reaming, clean bore.

**Special Tool****(A): 09916-34542****(B): 09916-34550**

- 4) Install valve spring seat to cylinder head.

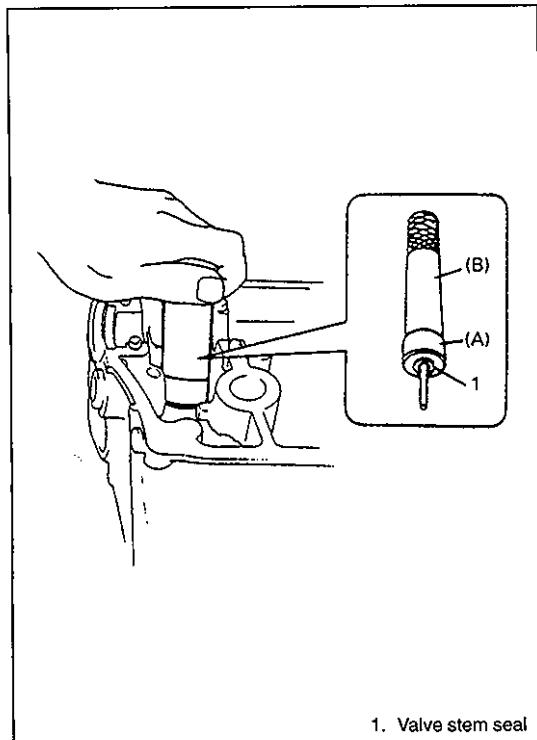

### 5) Install new valve stem seal to valve guide.

After applying engine oil to seal and spindle of special tool (Valve guide installer handle), fit oil seal to spindle, and then install seal to valve guide by pushing special tool by hand.

After installing, check to be sure that seal is properly fixed to valve guide.


#### Special Tool

(A): 09917-98221

(B): 09916-58210


#### NOTE:

- Do not reuse seal once disassembled. Be sure to install new seal.
- When installing, never tap or hit special tool with a hammer or else. Install seal to guide only by pushing special tool by hand. Tapping or hitting special tool may cause damage to seal.

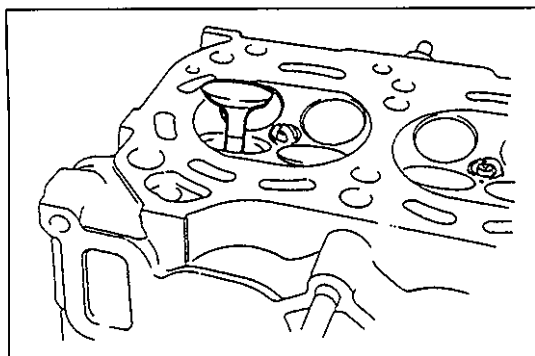


### 6) Install valve to valve guide.

Before installing valve to valve guide, apply engine oil to stem seal, valve guide bore, and valve stem.

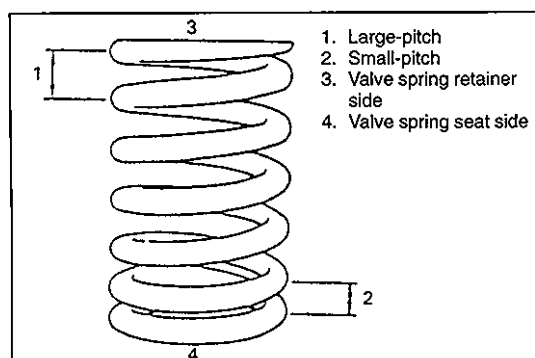

### 7) Install valve spring and spring retainer.

Each valve spring has top end (large-pitch end) and bottom end (small-pitch end). Be sure to position spring in place with its bottom end (small-pitch end) facing the bottom (valve spring seat side).

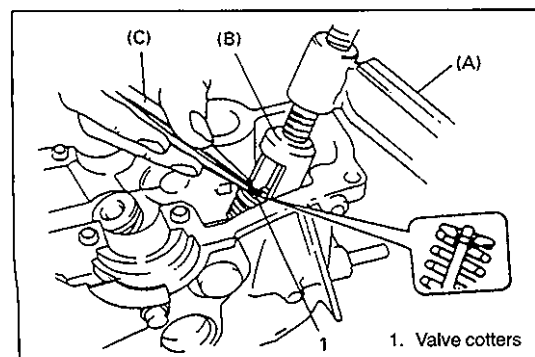

### 8) Using special tool (Valve lifter), compress valve spring and fit two valve cotteners into groove in valve stem.


#### Special Tool

(A): 09916-14510

(B): 09916-14910


(C): 09916-84511

- 9) Install rocker arms, springs and rocker arm shaft as previously outlined.
- 10) Install intake manifold and exhaust manifold.

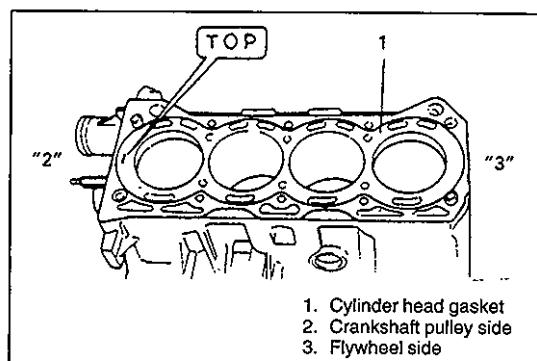

## INSTALLATION


- 1) Remove old gasket and oil on mating surfaces and install new head gasket as shown in figure, that is, "TOP" mark provided on gasket comes to crankshaft pulley side, facing up (toward cylinder head side).

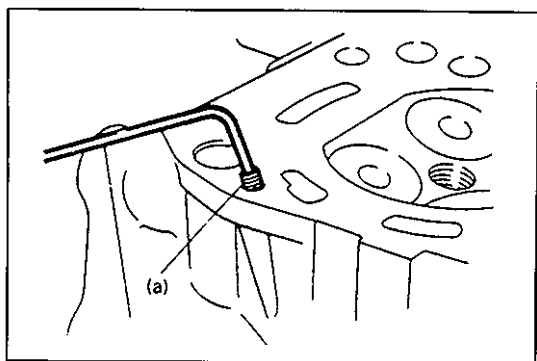

- 2) Check to make sure that oil jet (venturi plug) is installed and if it is, that it is not clogged.  
When installing it, be sure to tighten to specified torque.

### Tightening Torque

(a): 5 N·m (0.5 kg-m, 4.0 lb-ft)

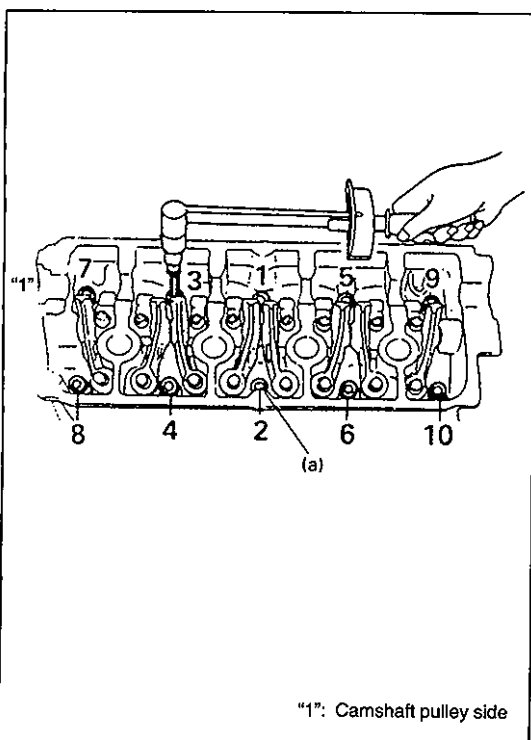


- 3) Apply engine oil to cylinder head bolts and tighten them gradually as follows.

- (1) Tighten all bolts to 35 N·m (3.5 kg-m, 25.0 lb-ft) according to numerical order in figure.
- (2) In the same manner as in (1), tighten them to 55 N·m (5.5 kg-m, 40.0 lb-ft).
- (3) In the same manner as in (1) again, tighten them to specified torque.

### Tightening Torque

(a): 68 N·m (6.8 kg-m, 49.5 lb-ft)


- 4) Reverse removal procedure for installation.
- 5) Adjust water pump drive belt tension, referring to "ENGINE COOLING" section.
- 6) Adjust power steering pump belt tension or A/C compressor belt tension, if equipped. Refer to section 0B.
- 7) Adjust intake and exhaust valve lashes as previously outlined.
- 8) Adjust accelerator cable play and A/T throttle cable play. Refer to section 6E1.
- 9) Check to ensure that all removed parts are back in place.  
Reinstall any necessary parts which have not been reinstalled.
- 10) Refill cooling system referring to "ENGINE COOLING" section.
- 11) Connect negative cable at battery.
- 12) Verify that there is no fuel leakage, coolant leakage and exhaust gas leakage at each connection.
- 13) Confirm that ignition timing is within specification referring to "IGNITION SYSTEM" section.

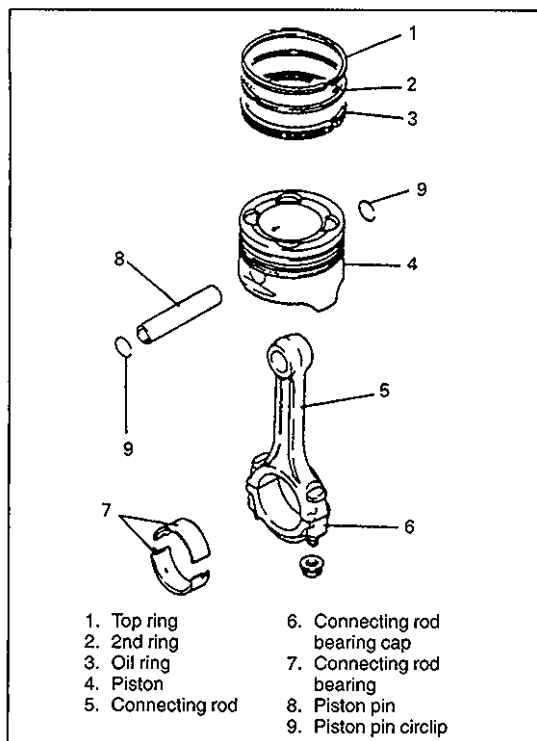

## PISTON, PISTON RINGS, CONNECTING RODS AND CYLINDERS

### REMOVAL


- 1) Remove cylinder head from cylinder block as previously outlined.
- 2) Drain engine oil.
- 3) Remove oil pan and oil pump strainer as previously outlined.
- 4) Mark cylinder number on all pistons, connecting rods and rod bearing caps, using silver pencil or quick drying paint.

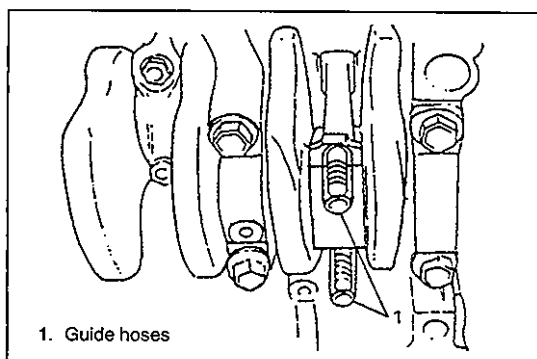


- 5) Remove rod bearing caps.
- 6) Install guide hose over threads of rod bolts. This is to prevent damage to bearing journal and rod bolt threads when removing connecting rod.
- 7) Decarbon top of cylinder bore before removing piston from cylinder.
- 8) Push piston and connecting rod assembly out through the top of cylinder bore.

**DISASSEMBLY**

- 1) Using piston ring expander, remove two compression rings (Top and 2nd) and oil ring from piston.

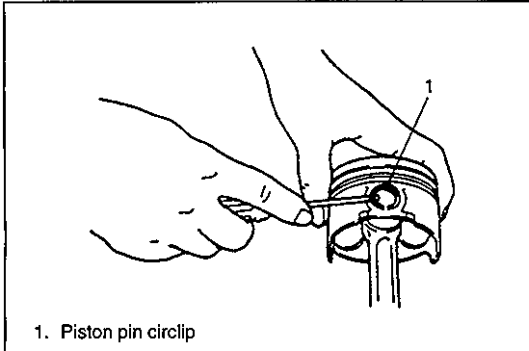

- 2) Remove piston pin from connecting rod.
  - Ease out piston pin circlips, as shown.

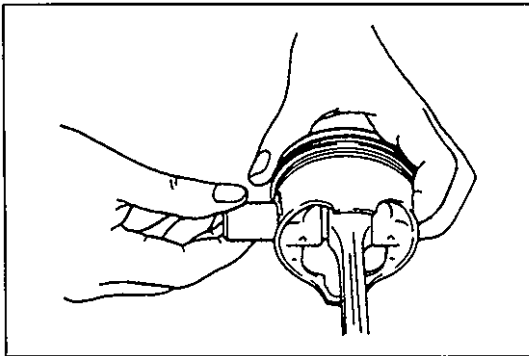

- Force piston pin out.


**CLEANING**

Clean carbon from piston head and ring grooves, using a suitable tool.

## INSPECTION

### Cylinders

- Inspect cylinder walls for scratches, roughness, or ridges which indicate excessive wear. If cylinder bore is very rough or deeply scratched, or ridged, rebore cylinder and use oversize piston.

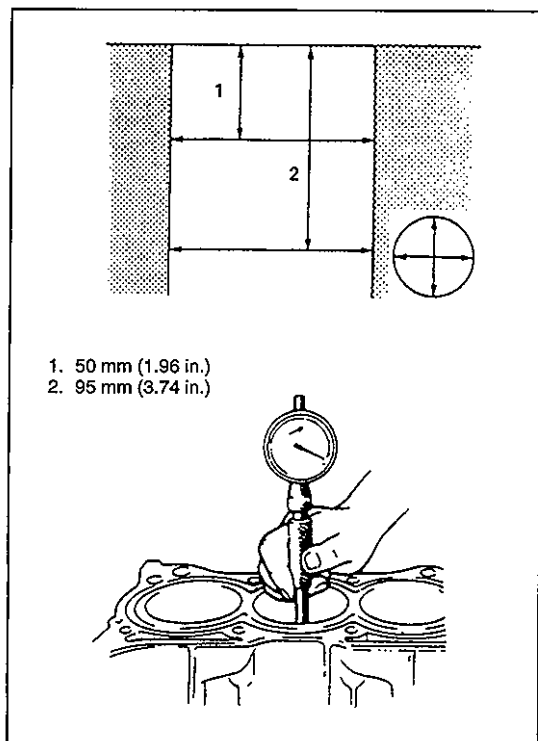

- Using a cylinder gauge, measure cylinder bore in thrust and axial directions at two positions as shown in figure.

If any of following conditions is noted, rebore cylinder.


- 1) Cylinder bore dia. exceeds limit.
- 2) Difference of measurements at two positions exceeds taper limit.
- 3) Difference between thrust and axial measurements exceeds out-of-round limit.

**Cylinder bore dia. limit: 75.15 mm (2.9586 in.)**

**Taper and out-of-round limit: 0.10 mm (0.0039 in.)**

#### NOTE:

If any one of four cylinders has to be rebored, rebore all four to the same next oversize. This is necessary for the sake of uniformity and balance.

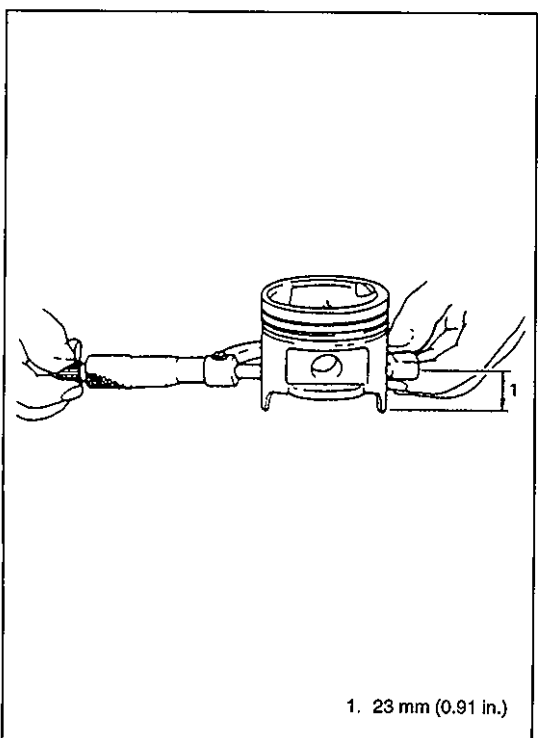

### Pistons


- Inspect piston for faults, cracks or other damaged. Damaged or faulty piston should be replaced.

- Piston diameter:

As indicated in figure, piston diameter should be measured at a position 23 mm (0.91 in.) from piston skirt end in the direction perpendicular to piston pin.

Piston diameter	Standard	74.970 – 74.990 mm (2.9516 – 2.9523 in.)
	Oversize: 0.25 mm (0.0098 in.)	75.220 – 75.230 mm (2.9614 – 2.9618 in.)
	0.50 mm (0.0196 in.)	75.470 – 75.480 mm (2.9712 – 2.9716 in.)



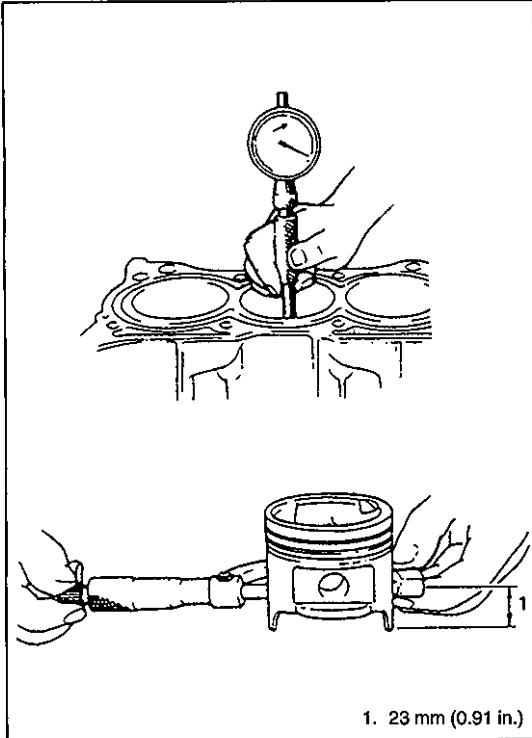


- **Piston clearance:**

Measure cylinder bore diameter and piston diameter to find their difference which is piston clearance. Piston clearance should be within specification as given below. If it is out of specification, re-bore cylinder and use oversize piston.

**Piston clearance: 0.02 – 0.04 mm (0.0008 – 0.0015 in.)**

**NOTE:**

**Cylinder bore diameters used here are measured in thrust direction at two positions.**

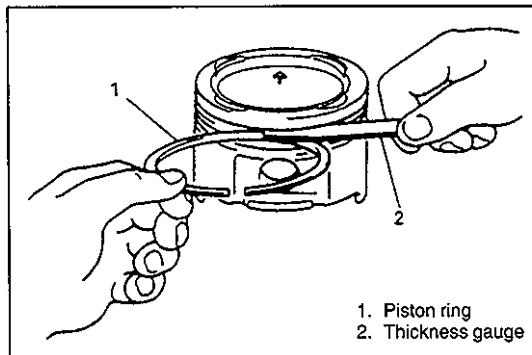

- **Ring groove clearance:**

Before checking, piston grooves must be clean, dry and free of carbon.


Fit new piston ring into piston groove, and measure clearance between ring and ring land by using thickness gauge.

If clearance is out of specification, replace piston.

**Ring groove clearance:**

**Top: 0.03 – 0.07 mm (0.0012 – 0.0027 in.)**

**2nd: 0.02 – 0.06 mm (0.0008 – 0.0023 in.)**

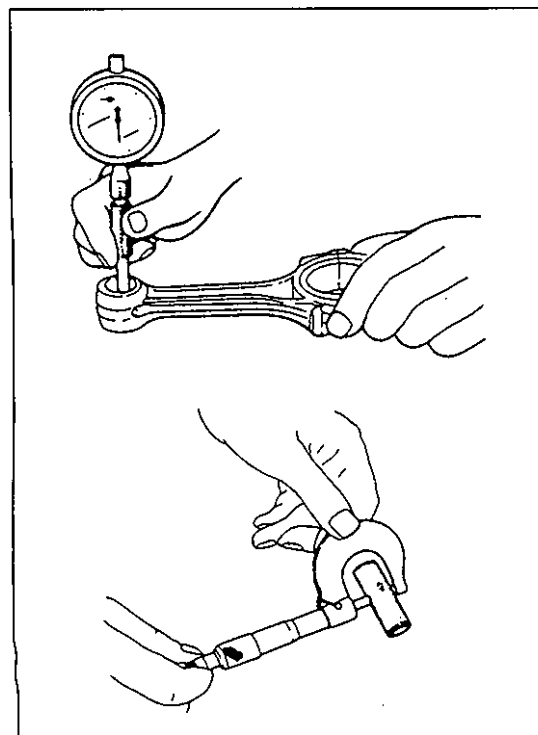

**Piston Pin**

- Check piston pin, connecting rod small end bore and piston bore for wear or damage, paying particular attention to condition of small end bore bush. If pin, connecting rod small end bore or piston bore is badly worn or damaged, replace pin, connecting rod or piston.

- **Piston pin clearance:**

Check piston pin clearance in small end. Replace connecting rod if its small end is badly worn or damaged or if measured clearance exceeds limit.


Item	Standard	Limit
Piston clearance in small end	0.003 – 0.014 mm (0.0001 – 0.0006 in.)	0.05 mm (0.0020 in.)

**Small-end bore:**

**19.003 – 19.011 mm (0.7482 – 0.7486 in.)**

**Piston pin dia.:**

**18.997 – 19.000 mm (0.7479 – 0.7480 in.)**

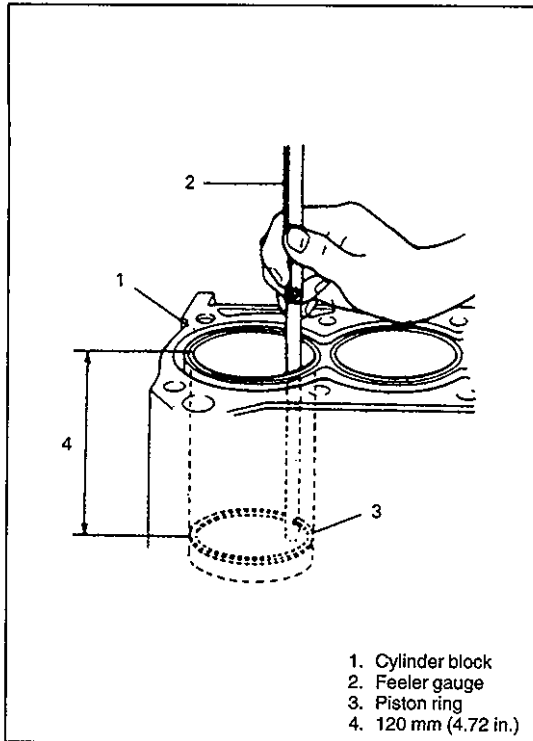

## Piston Rings


To measure end gap, insert piston ring into cylinder bore and then measure the gap by using thickness gauge.

If measured gap is out of specification, replace ring.

### NOTE:

**Decarbon and clean top of cylinder bore before inserting piston ring.**

Item		Standard	Limit
Piston ring end gap	Top ring	0.2 – 0.35 mm (0.0079 – 0.0137 in.)	0.7 mm (0.0275 in.)
	2nd ring	0.35 – 0.50 mm (0.0138 – 0.0197 in.)	0.7 mm (0.0275 in.)
	Oil ring	0.1 – 0.4 mm (0.0039 – 0.0157 in.)	1.7 mm (0.0669 in.)

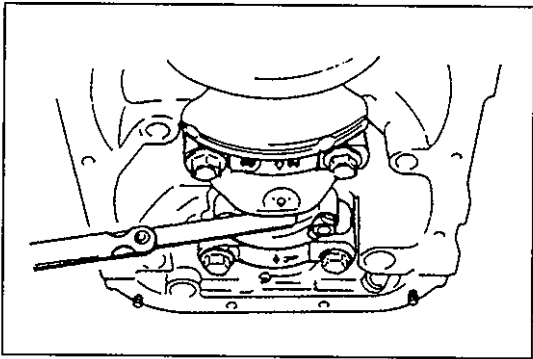

## Connecting Rod

### ● Big-end side clearance:

Check big-end of connecting rod for side clearance, with rod fitted and connected to its crank pin in the normal manner. If measured clearance is found to exceed its limit, replace connecting rod.


Item	Standard	Limit
Big-end side clearance	0.10 – 0.25 mm (0.0039 – 0.0098 in.)	0.35 mm (0.0137 in.)

### ● Connecting rod alignment:

Mount connecting rod on aligner to check it for bow and twist and, if limit is exceeded, replace it.

**Limit on bow: 0.05 mm (0.0020 in.)**

**Limit on twist: 0.10 mm (0.0039 in.)**

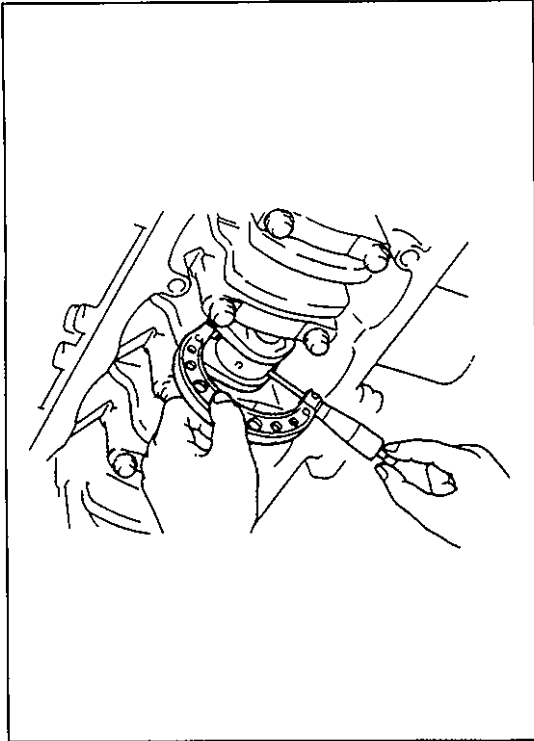


### Crank Pin and Connecting Rod Bearings

- Inspect crank pin for uneven wear or damage. Measure crank pin for out-of-round or taper with a micrometer. If crank pin is damaged, or out-of-round or taper is out of limit, replace crankshaft or regrind crank pin referring to following step 6).

Connecting rod bearing size	Crank pin diameter
Standard	43.982 – 44.000 mm (1.7316 – 1.7322 in.)
0.25 mm undersize	43.732 – 43.750 mm (1.7218 – 1.7224 in.)


**Out-of-round and taper limit: 0.01 mm (0.0004 in.)**

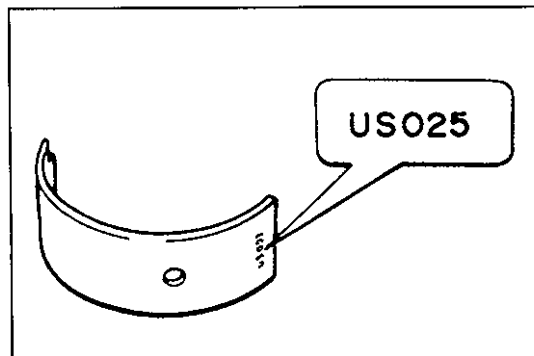

#### ● Rod bearing:


Inspect bearing shells for signs of fusion, pitting, burn or flaking and observe contact pattern. Bearing shells found in defective condition must be replaced.

Two kinds of rod bearing are available; standard size bearing and 0.25 mm undersize bearing. To distinguish them, 0.25 mm undersize bearing has the stamped number (US025) on its backside as indicated in figure, but standard size one has no number.

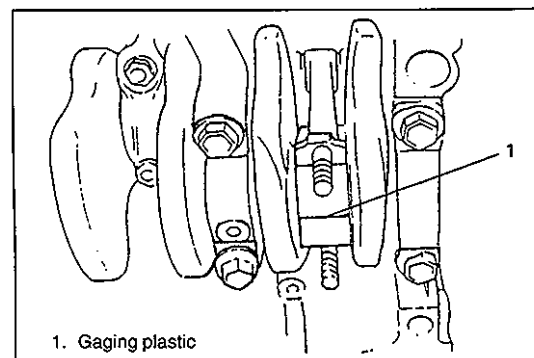

#### ● Rod bearing clearance:

- 1) Before checking bearing clearance, clean bearing and crank pin.
- 2) Install bearing in connecting rod and bearing cap.
- 3) Place a piece of gaging plastic to full width of crankpin as contacted by bearing (parallel to crankshaft), avoiding oil hole.

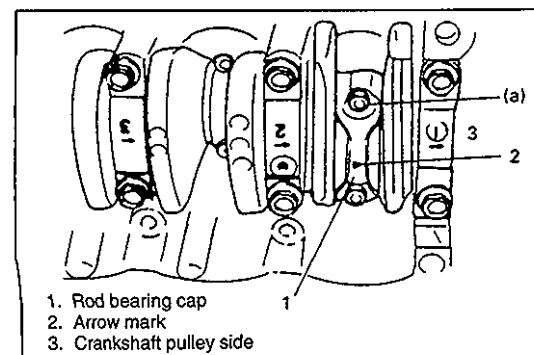


- 4) Install rod bearing cap to connecting rod.

When installing cap, be sure to point arrow mark on cap to crankshaft pulley side, as shown in figure. After applying engine oil to rod bolts, tighten cap nuts to specified torque. **DO NOT** turn crankshaft with gaging plastic installed.

### Tightening Torque

(a): 35 N·m (3.5 kg-m, 25.5 lb-ft)

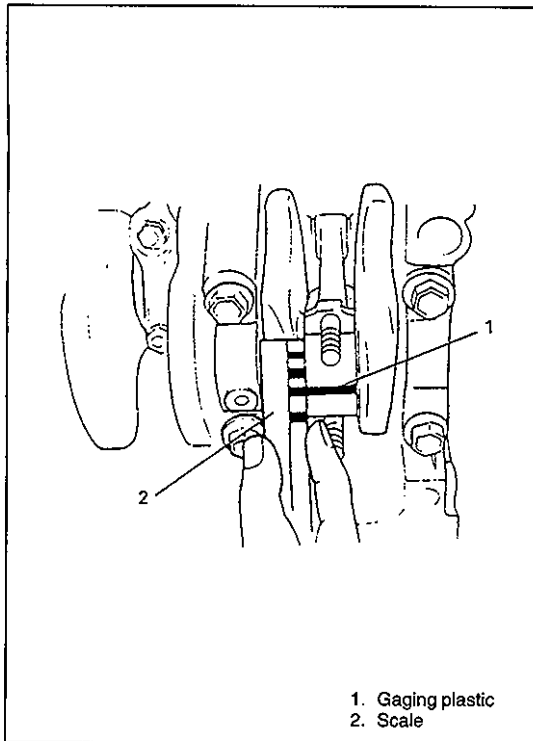

- 5) Remove cap and using a scale on gaging plastic envelope, measure gaging plastic width at the widest point (clearance). If clearance exceeds its limit, use a new standard size bearing and remeasure clearance.

Item	Standard	Limit
Bearing clearance	0.020 – 0.050 mm (0.0008 – 0.0019 in.)	0.080 mm (0.0031 in.)

- 6) If clearance can not be brought to within its limit even by using a new standard size bearing, replace crankshaft or regrind crankpin to undersize as follows.
- Install 0.25 mm undersize bearing to connecting rod big end.
  - Measure bore diameter of connecting rod big end.
  - Regrind crankpin to following finished diameter.

Finished crankpin dia.	=	Measured big end bore dia. (including undersize bearing)	–	0.035 mm (0.0014 in.)
------------------------	---	--	---	--------------------------


- Confirm that bearing clearance is within above standard value.


## ASSEMBLY

### NOTE:

Two sizes of piston are available as standard size spare part so as to ensure proper piston-to-cylinder clearance. When installing a standard size piston, make sure to match piston with cylinder as follows.

- Each piston has stamped number 1 or 2 as shown. It represents outer diameter of piston.
- There are also stamped numbers of 1 and 2 on the cylinder block as shown. The first number represents inner diameter of No.1 cylinder, the second number of No.2 cylinder, the third number of No.3 cylinder and the fourth number of No.4 cylinder.

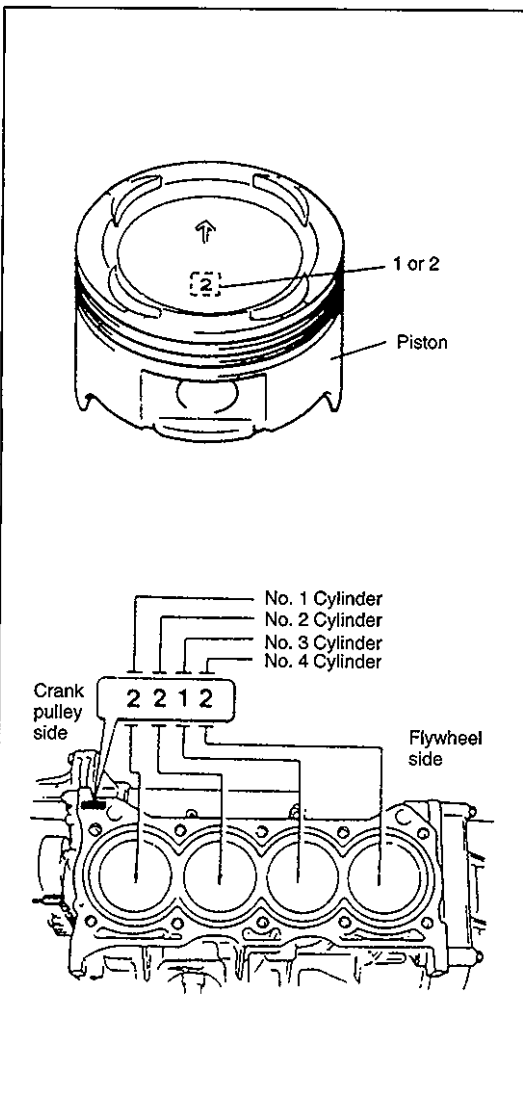


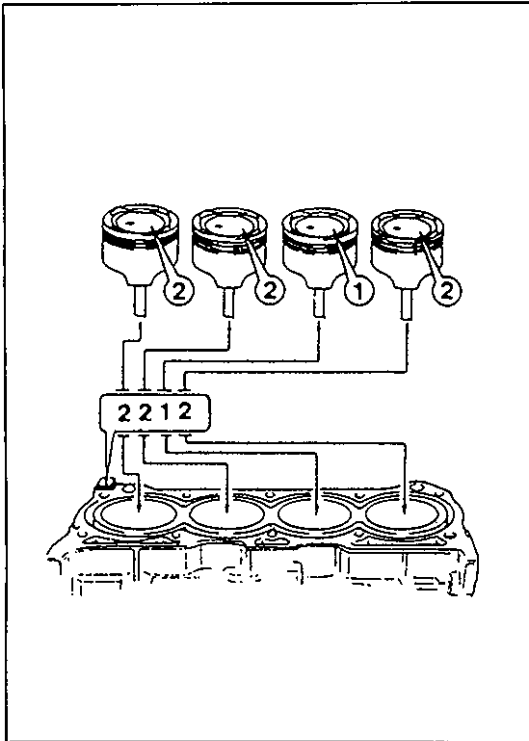

- c) Stamped number on piston and that on cylinder block should correspond. That is, install number 2 stamped piston to cylinder which is identified with number 2 and a number 1 piston to cylinder with number 1.

Piston		Cylinder		Piston-to-cylinder clearance
Number at the top (mark)	Outer diameter	Number (mark)	Bore diameter	
1	74.98 – 74.99 mm (2.9520 – 2.9524 in.)	1	75.01 – 75.02 mm (2.9531 – 2.9535 in.)	0.02 – 0.04 mm (0.0008 – 0.0015 in.)
2	74.97 – 74.98 mm (2.9516 – 2.9520 in.)	2	75.00 – 75.01 mm (2.9528 – 2.9531 in.)	0.02 – 0.04 mm (0.0008 – 0.0015 in.)

Also, a letter A, B or C is stamped on piston head but ordinarily it is not necessary to discriminate each piston by this letter.

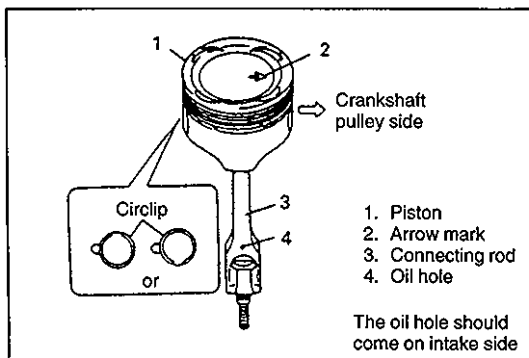


- 1) Install piston pin to piston and connecting rod:

After applying engine oil to piston pin and piston pin holes in piston and connecting rod, fit connecting rod to piston as shown in figure and insert piston pin to piston and connecting rod, and install piston pin circlips.


**NOTE:**

**Circlip should be installed with its cut part facing either up or down as shown in figure.**

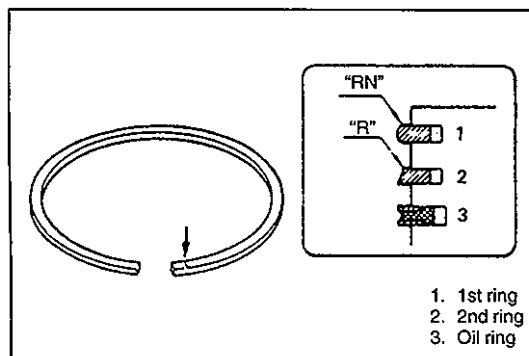

- 2) Install piston rings to piston:

- As indicated in figure at the left, 1st and 2nd rings have "RN", "T" or "R" mark respectively. When installing these piston rings to piston, direct marked side of each ring toward top of piston.
- 1st ring differs from 2nd ring in thickness, shape and color of surface contacting cylinder wall. Distinguish 1st ring from 2nd ring by referring to figure.
- When installing oil ring, install spacer first and then two rails.

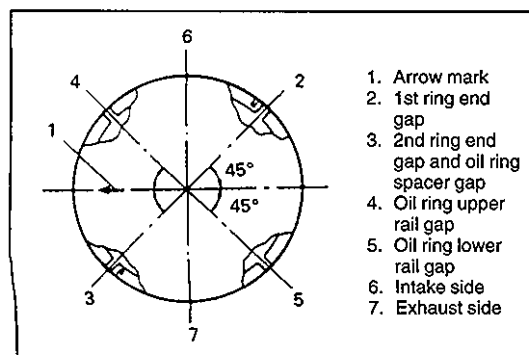





- 3) After installing three rings (1st, 2nd and oil rings), distribute their end gaps as shown in figure.

**INSTALLATION OR CONNECTION**

- 1) Apply engine oil to pistons, rings, cylinder walls, connecting rod bearings and crankpins.

**NOTE:**

**Do not apply oil between connecting rod and bearing or between bearing cap and bearing.**

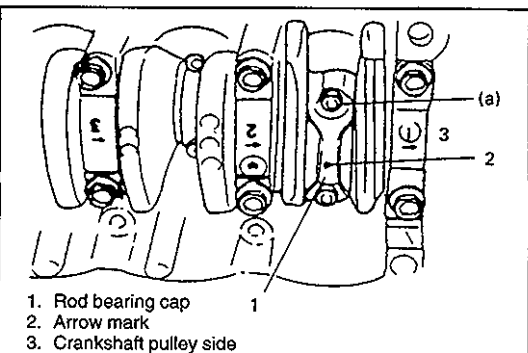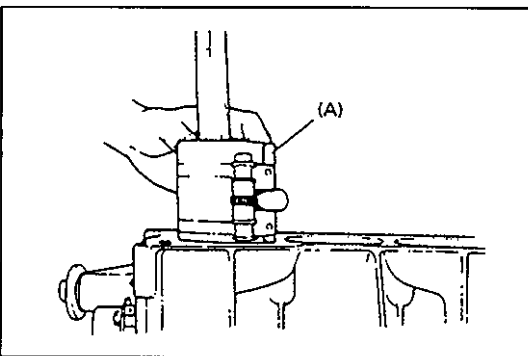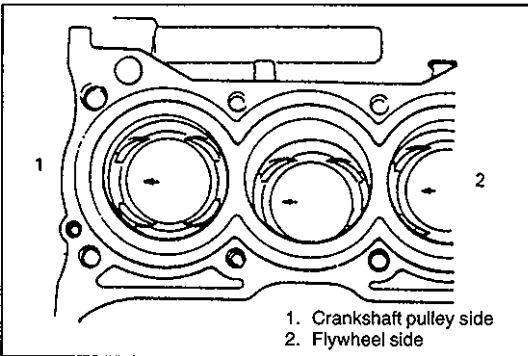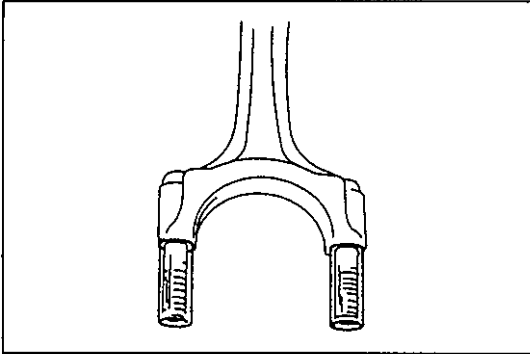

- 2) Install guide hoses over connecting rod bolts.  
These guide hoses protect crankpin and threads of rod bolt from damage during installation of connecting rod and piston assembly.

- 3) When installing piston and connecting rod assembly into cylinder bore, point arrow mark on piston head to crankshaft pulley side.

- 4) Install piston and connecting rod assembly into cylinder bore.  
Use special tool (Piston ring compressor) to compress rings.  
Guide connecting rod into place on crankshaft.  
Using a hammer handle, tap piston head to install piston into bore. Hold ring compressor firmly against cylinder block until all piston rings have entered cylinder bore.

**Special Tool**

**(A): 09916-77310**

- 5) Install bearing cap:  
Point arrow mark on cap to crankshaft pulley side.  
Tighten cap nuts to specification.

**Tightening Torque**

**(a): 35 N·m (3.5 kg-m, 25.5 lb-ft)**


- 6) Reverse removal procedure for installation, as previously outlined.
- 7) Adjust water pump drive belt tension, referring to section 0B.
- 8) Adjust power steering pump belt tension or A/C compressor belt tension, if equipped. Refer to section 0B.
- 9) Adjust intake and exhaust valve lashes as previously outlined.
- 10) Adjust accelerator cable play and A/T throttle cable (for 4 A/T model) play. Refer to section 6E1.
- 11) Check to ensure that all removed parts are back in place. Reinstall any necessary parts which have not been reinstalled.
- 12) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in section 0B.
- 13) Refill cooling system referring to "ENGINE COOLING" section.
- 14) Refill front differential housing with gear oil, referring to "DIFFERENTIAL" section.
- 15) Connect negative cable at battery.
- 16) Verify that there is no fuel leakage, coolant leakage, oil leakage and exhaust gas leakage at each connection.
- 17) Verify that ignition timing is within specification referring to "IGNITION SYSTEM" section.

# UNIT REPAIR OVERHAUL


## ENGINE ASSEMBLY

### REMOVAL

- 1) Release fuel pressure in fuel feed line by referring to Fuel Pressure Relief Procedure in section 6.
- 2) Disconnect negative cable from battery.
- 3) Remove engine hood.

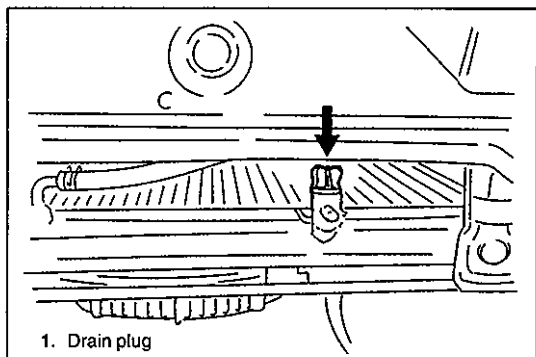


- 4) Drain cooling system.
- 5) Remove radiator fan and fan shroud.  
Refer to "ENGINE COOLING" section.

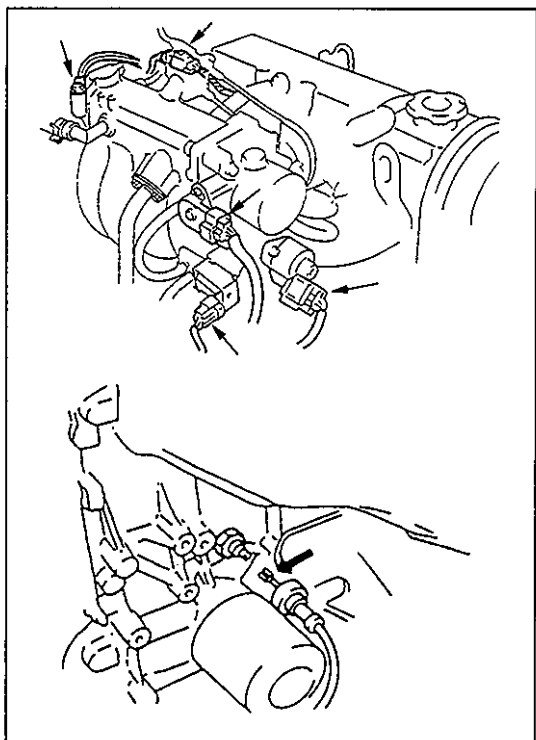


- 6) Remove air intake hose.
- 7) Disconnect following electric wires:
  - Ground wires from intake manifold
  - Camshaft position sensor
  - EGR valve (if equipped)
  - EVAP canister purge valve
  - Engine coolant temp. sensor
  - Throttle position sensor
  - Idle air control valve
  - Fuel injector wire at the connector
  - Generator
  - Ground cable from cylinder block (if equipped)
  - Heated oxygen sensor (if equipped)
  - Engine oil pressure switch
  - Power steering pressure switch (if equipped)
 and then release wire harnesses from clamps.
- 8) Remove starter motor.




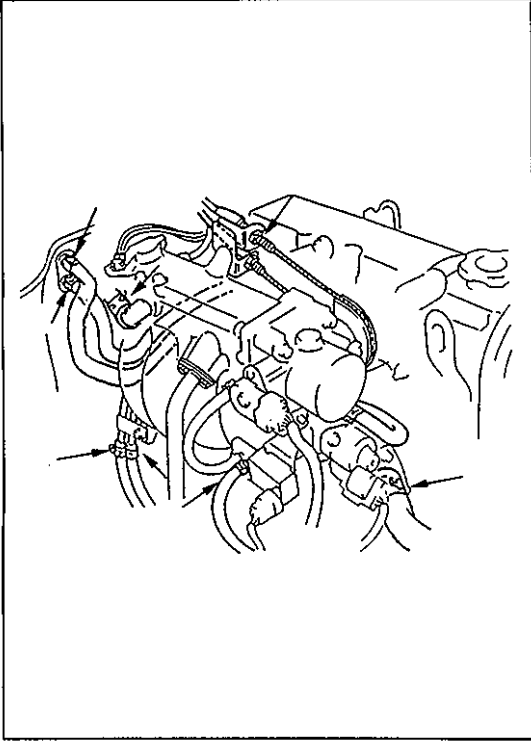


- 9) Disconnect following hoses:
  - Canister purge hose from EVAP canister purge valve
  - Radiator outlet hose from inlet pipe
  - Brake booster hose from intake manifold
  - Heater inlet and outlet hose from pipe
  - Fuel feed hose and return hose from each pipe
  - A/T fluid hose clamp from bracket
- 10) Disconnect accelerator cable and A/T throttle cable (if equipped) from throttle body and each clamp.

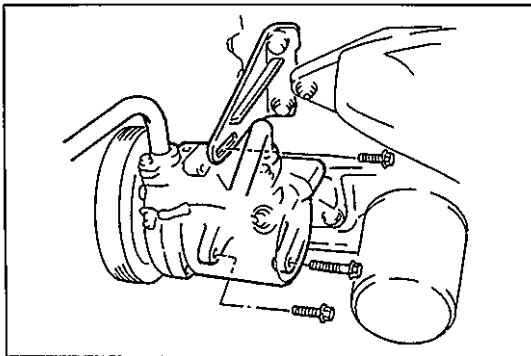


- 11) With hose connected, detach A/C compressor and/or power steering pump with bracket from cylinder block if equipped.

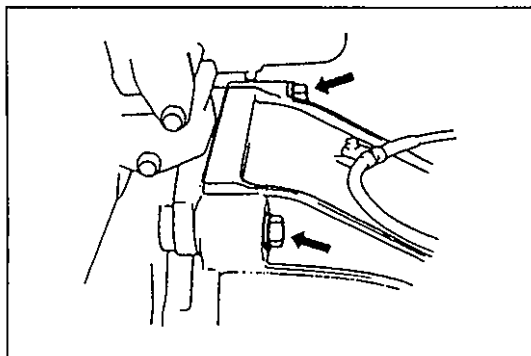


- 12) Loosen bolts fastening cylinder block and transmission.

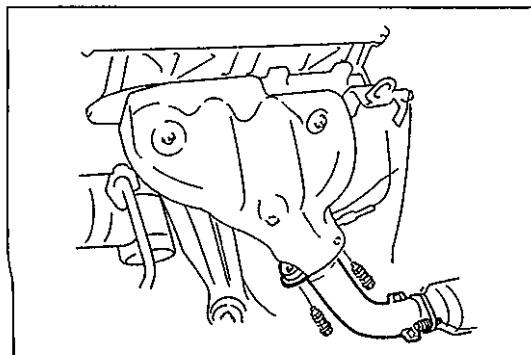


- 13) Hoist vehicle.
- 14) Drain engine oil if necessary.
- 15) Remove exhaust pipe bolts.

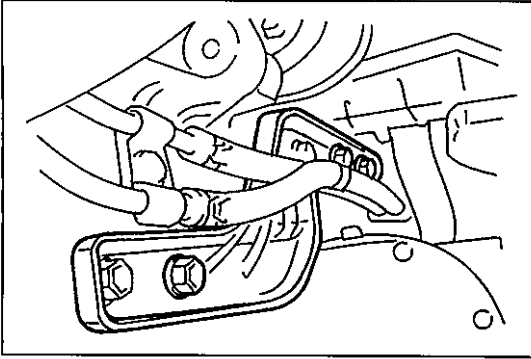

- 16) Remove right side transmission stiffener from transmission and cylinder block (A/T).

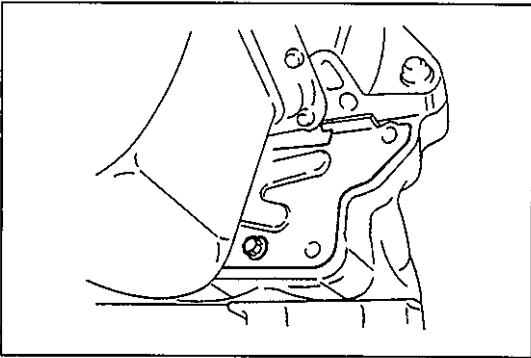


- 17) Remove clutch housing (torque converter housing) lower plate.

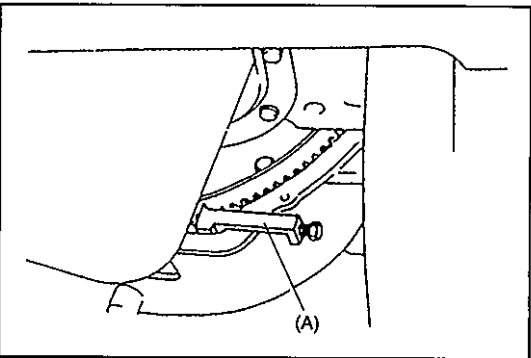

- 18) Remove torque converter bolts (A/T).

**Special Tool**

**(A): 09927-56010**

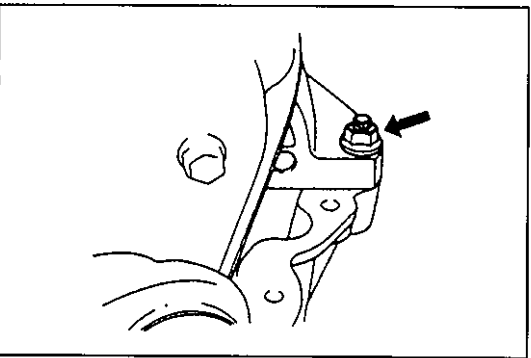


- 19) Remove nuts fastening cylinder block and transmission.

- 20) Lower vehicle.

- 21) Support transmission with jack.

With A/T vehicle, don't jack under A/T oil pan to support transmission.

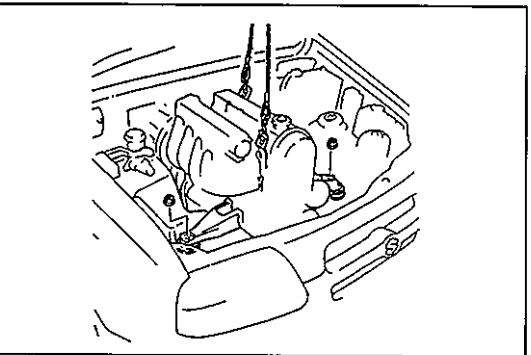


- 22) Install lifting device.

- 23) Remove engine mounting bracket nuts (R & L).


- 24) Before lifting engine, check to ensure all hoses, electric wires and cables are disconnected from engine.

- 25) Remove engine assembly from chassis and transmission by lifting a little, sliding towards the front side, and then carefully hoist engine assembly.

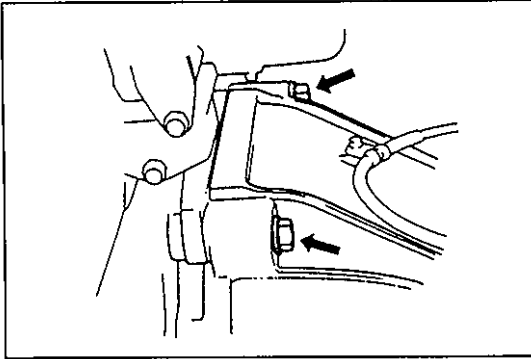

## INSTALLATION


- 1) Lower engine assembly into engine compartment and connect engine to transmission.  
Hand-tighten bolts and nuts fastening cylinder block and transmission.

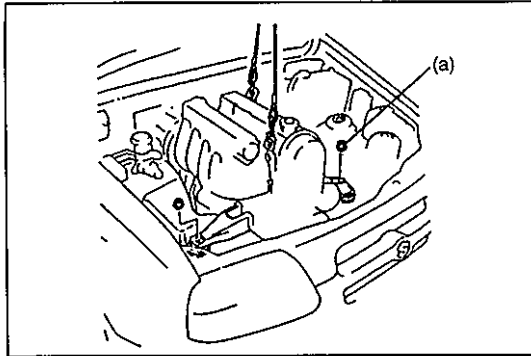

- 2) Tighten engine mounting bracket nuts (R & L).

### Tightening Torque

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

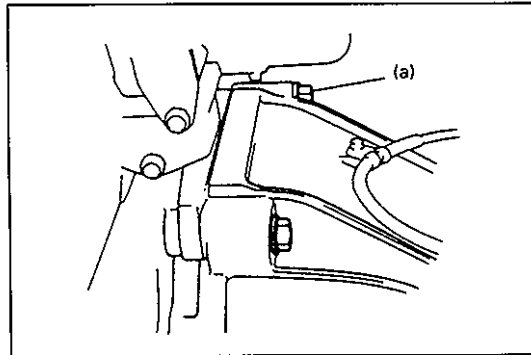


- 3) Tighten bolts fastening cylinder block and transmission to specified torque.

### Tightening Torque

(a): 85 N·m (8.5 kg-m, 61.5 lb-ft)


- 4) Remove lifting device.

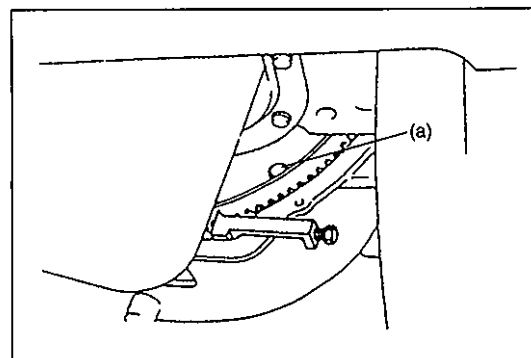

- 5) Reverse removal procedure for installation, noting the following.
  - Tighten torque converter bolts to specified torque (A/T).

### Tightening Torque


(a): 65 N·m (6.5 kg-m, 47.0 lb-ft)

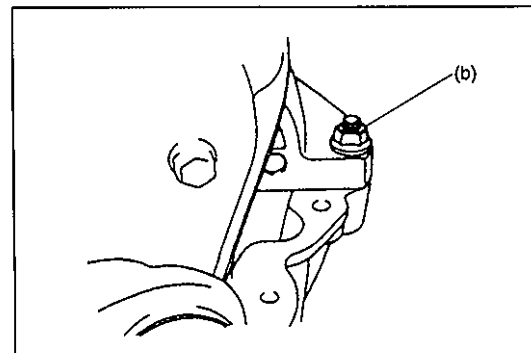

- Tighten nuts fastening cylinder block and transmission to specified torque.

### Tightening Torque


(b): 85 N·m (8.5 kg-m, 61.5 lb-ft)

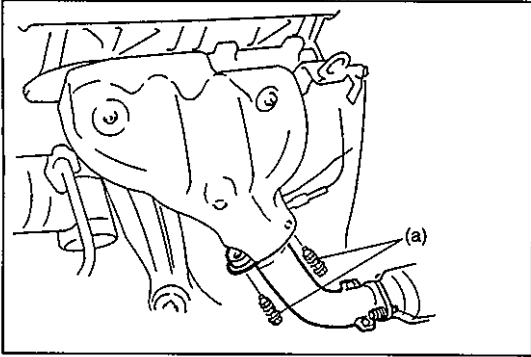

- Tighten bolts of exhaust pipes to specified torque.

**Tightening Torque**

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

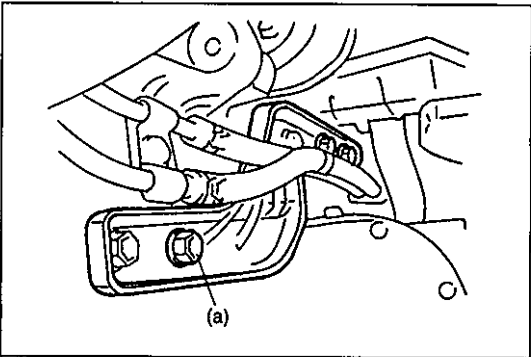


- Tighten transmission stiffener bolts (right side) to specified torque (A/T).

**Tightening Torque**


(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

- 6) Adjust water pump drive belt tension, referring to "ENGINE COOLING" section.
- 7) Adjust power steering pump belt tension or A/C compressor belt tension, if equipped. Refer to section 0B.
- 8) Adjust accelerator cable play and A/T throttle cable (for A/T) play. Refer to section 6E1.
- 9) Check to ensure that all removed parts are back in place. Reinstall any necessary parts which have not been reinstalled.
- 10) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in section 0B.
- 11) Refill cooling system referring to "ENGINE COOLING" section.
- 12) Verify that there is no fuel leakage, coolant leakage and exhaust gas leakage at each connection.

# MAIN BEARINGS, CRANKSHAFT AND CYLINDER BLOCK

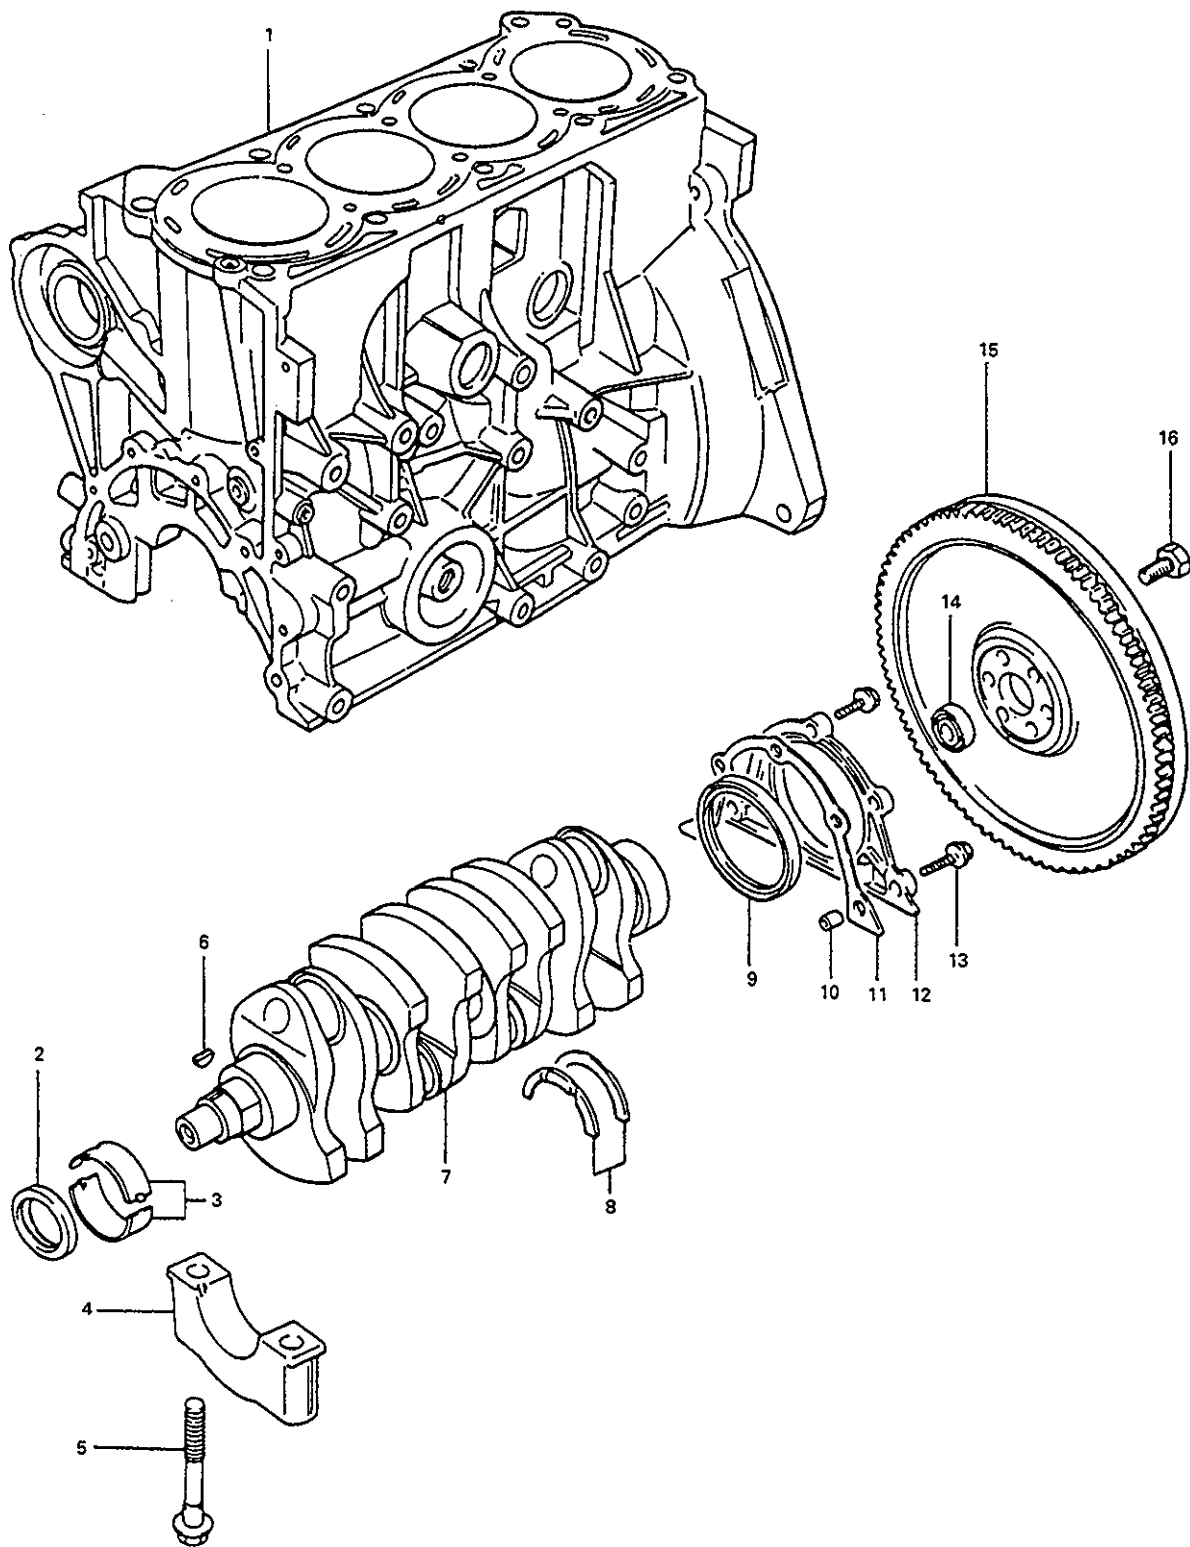

- |                      |  |                         |
|----------------------|--|-------------------------|
| 1. Cylinder block    | 7. Crankshaft                                | 12. Oil seal housing    |
| 2. Front oil seal    | 8. Thrust bearing                            | 13. Housing bolt        |
| 3. Main bearing      | 9. Rear oil seal                             | 14. Input shaft bearing |
| 4. Bearing cap       | 10. Pin                                      | 15. Flywheel            |
| 5. Cap bolt          | 11. Oil seal housing gasket<br>(if equipped) | 16. Flywheel bolt       |
| 6. Timing pulley key |  |                         |

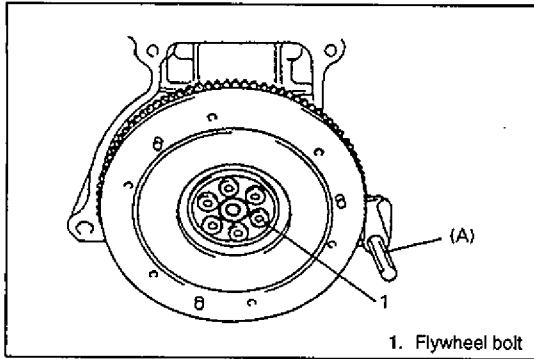


## REMOVAL


- 1) Remove engine assembly from body as previously outlined.
- 2) Remove clutch cover, clutch disc and flywheel (drive plate for A/T).

### Special Tool


(A): 09924-17810

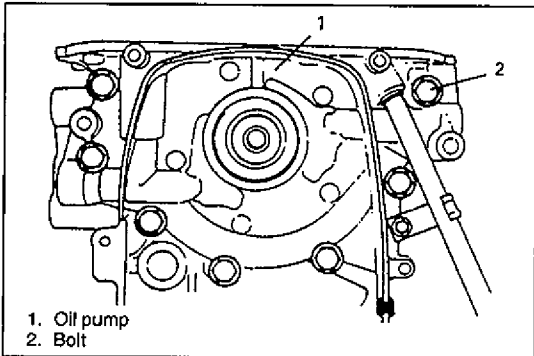


- 3) Remove crankshaft pulley, timing belt and crankshaft timing pulley.
- 4) Remove cylinder head assembly.
- 5) Remove oil pan and oil pump strainer.
- 6) Remove oil pump.

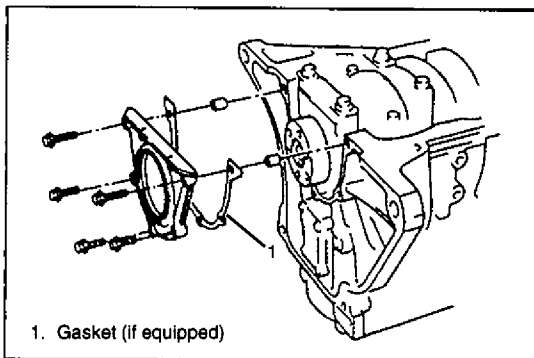

- 7) Remove oil seal housing.
- 8) Remove connecting rod bearing caps.

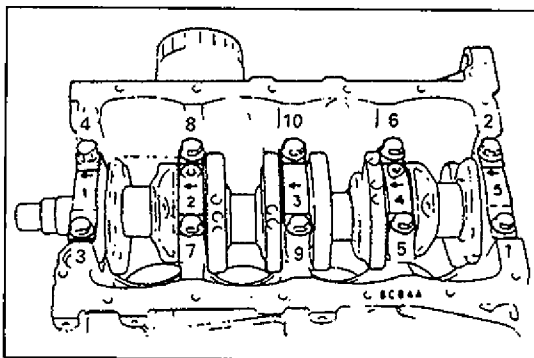

- 9) Loosen crankshaft bearing cap bolts in such order as indicated in figure a little at a time and remove bearing caps.
- 10) Remove crankshaft from cylinder block.

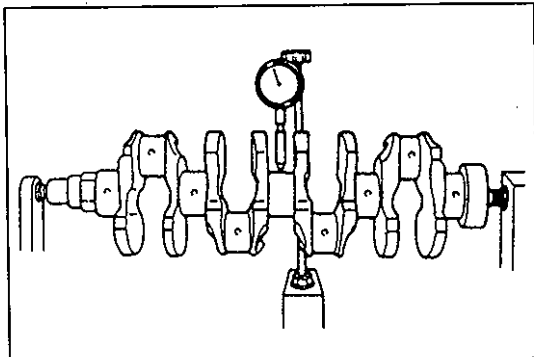


## INSPECTION

### Crankshaft

#### Crankshaft runout


Using a dial gauge, measure runout at center journal. Rotate crankshaft slowly. If runout exceeds its limit, replace crankshaft.

**Limit on runout: 0.06 mm (0.0023 in.)**

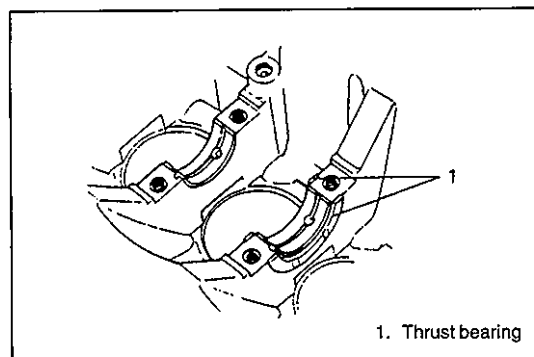

#### Crankshaft thrust play

Measure this play with crankshaft set in cylinder block in the normal manner, that is, with thrust bearing and journal bearing caps installed.

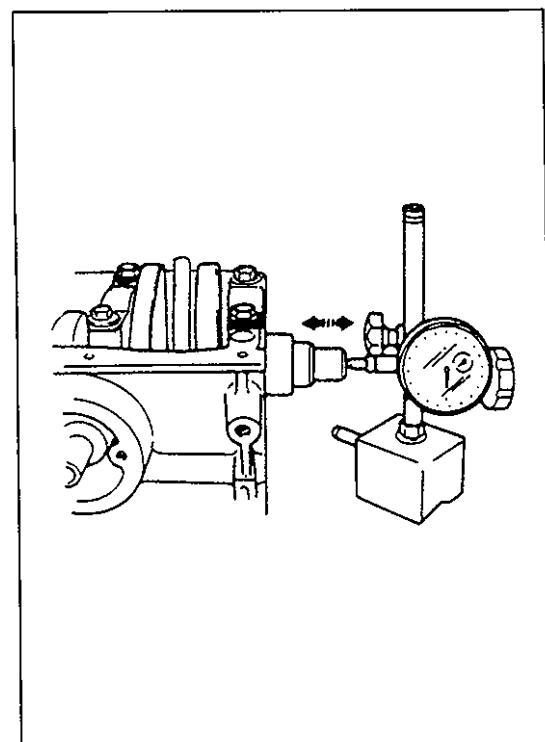


Use a dial gauge to read displacement in axial (thrust) direction of crankshaft.

If its limit is exceeded, replace thrust bearing with new standard one or oversize one to obtain standard thrust play.

Item	Standard	Limit
Crankshaft thrust play	0.11 – 0.31 mm (0.0044 – 0.0122 in.)	0.38 mm (0.0149 in.)

Thickness of crankshaft thrust bearing	Standard	2.500 mm (0.0984 in.)
	Oversize: 0.125 mm (0.0049 in.)	2.563 mm (0.1009 in.)

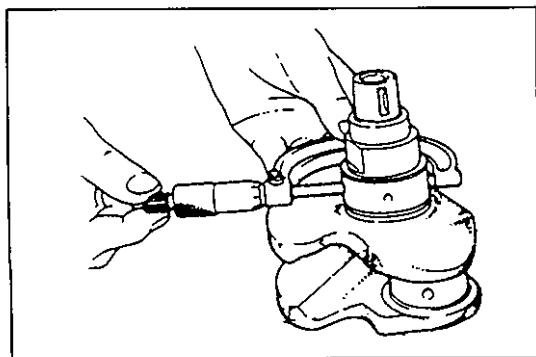


#### Out-of-round and taper (uneven wear) of journals

An unevenly worn crankshaft journal shows up as a difference in diameter at a cross section or along its length (or both). This difference, if any, is determined by taking micrometer readings.

If any one of journals is badly damaged or if amount of uneven wear in the sense explained above exceeds its limit, regrind or replace crankshaft.


**Limit on out-of-round and taper: 0.01 mm (0.0004 in.)**

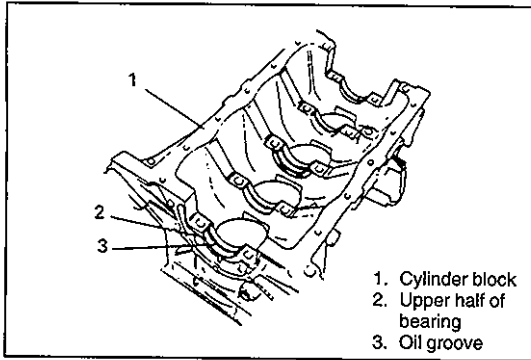

## Main Bearings


### General information

- Service main bearings are available in standard size and 0.25 mm (0.0098 in.) undersize, and each of them has 5 kinds of bearings differing in tolerance.
- Upper half of bearing has oil groove as shown in figure. Install this half with oil groove to cylinder block.

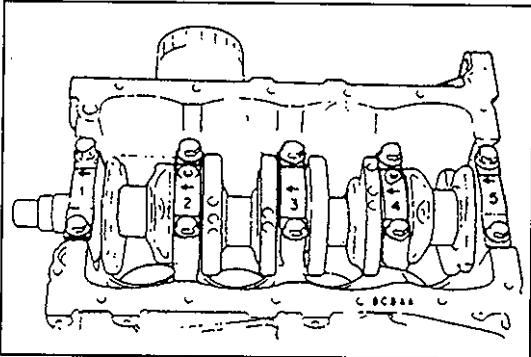

- On each main bearing cap, arrow mark and number are embossed as shown in figure.


When installing each bearing cap to cylinder block, point arrow mark toward crankshaft pulley side and install each cap from that side to flywheel side in ascending order of numbers "1", "2", "3", "4" and "5". Tighten cap bolts to specified torque.

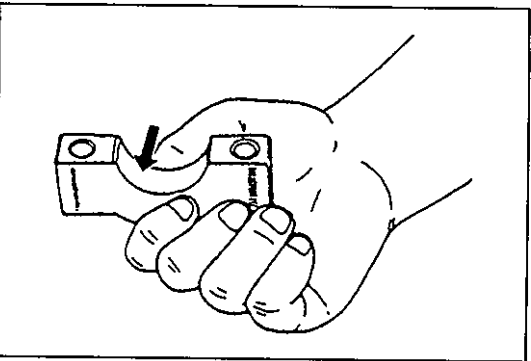

### Inspection

Check bearings for pitting, scratches, wear or damage.

If any malcondition is found, replace both upper and lower halves. Never replace one half without replacing the other half.

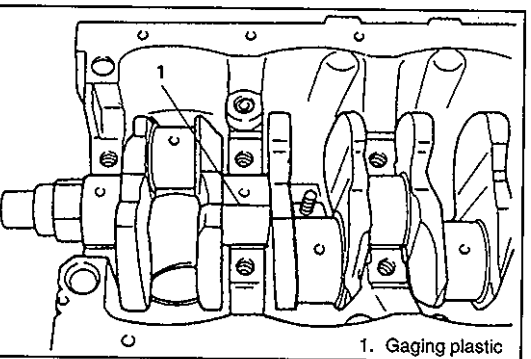

### Main bearing clearance

Check clearance by using gaging plastic according to following procedure.

- 1) Remove bearing caps.
- 2) Clean bearings and main journals.
- 3) Place a piece of gaging plastic to full width of bearing (parallel to crankshaft) on journal, avoiding oil hole.

- 4) Install bearing cap as previously outlined and evenly torque cap bolts to specified torque.


Bearing cap **MUST** be torqued to specification in order to assure proper reading of clearance.

### Tightening Torque


(a): 54 N·m (5.4 kg-m, 39.0 lb-ft)

### NOTE:

**Do not rotate crankshaft while gaging plastic is installed.**

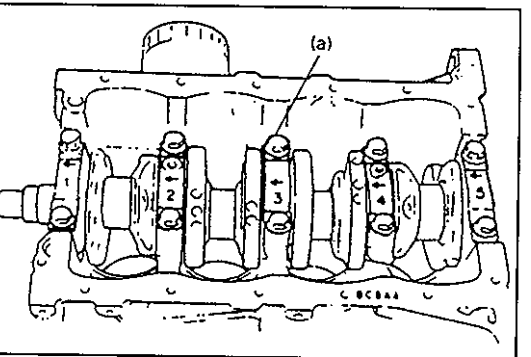



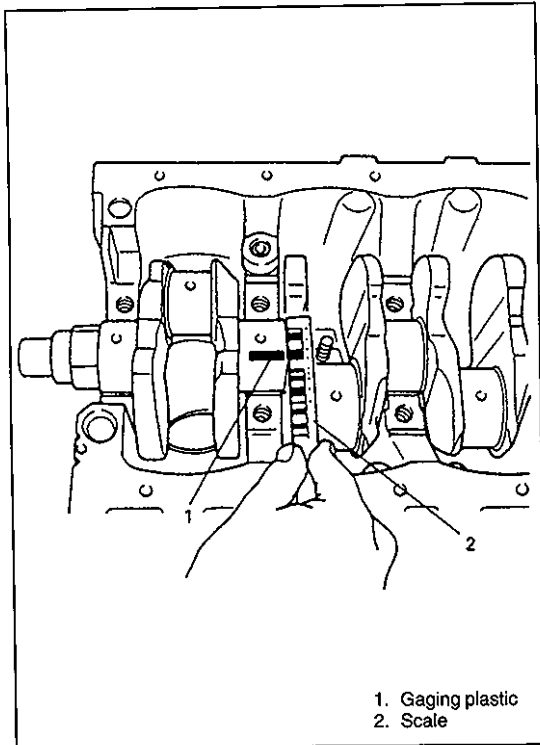

- 5) Remove cap and using scale on gaging plastic envelope, measure gaging plastic width at its widest point. If clearance exceeds its limit, replace bearing. Always replace both upper and lower inserts as a unit.

A new standard bearing may produce proper clearance. If not, it will be necessary to regrind crankshaft journal for use of 0.25 mm undersize bearing.

After selecting new bearing, recheck clearance.

Bearing clearance	Standard	Limit
	0.016 – 0.036 mm (0.0006 – 0.0014 in.)	0.060 mm (0.0023 in.)

### Selection of main bearings

#### STANDARD BEARING:

If bearing is in malcondition, or bearing clearance is out of specification, select a new standard bearing according to following procedure and install it.

- 1) First check journal diameter by using following procedure.


As shown in figure, crank webs of No.2 and No.3 cylinders have five stamped numerals.


Three kinds of numerals ("1", "2" and "3") represent following journal diameters.

Numeral stamped	Journal diameter
1	51.994 – 52.000 mm (2.0470 – 2.0472 in.)
2	51.988 – 51.994 mm (2.0468 – 2.0470 in.)
3	51.982 – 51.988 mm (2.0465 – 2.0468 in.)

The first, second, third, fourth and fifth (left to right) stamped numerals represent journal diameters at bearing caps "1", "2", "3", "4" and "5" respectively.

For example, in figure, the first (leftmost) numeral "3" indicates that journal dia. at bearing cap "1" is within 51.982 – 51.988 mm, and second one "1" indicate that journal dia. at cap "2" is within 51.994 – 52.000 mm.

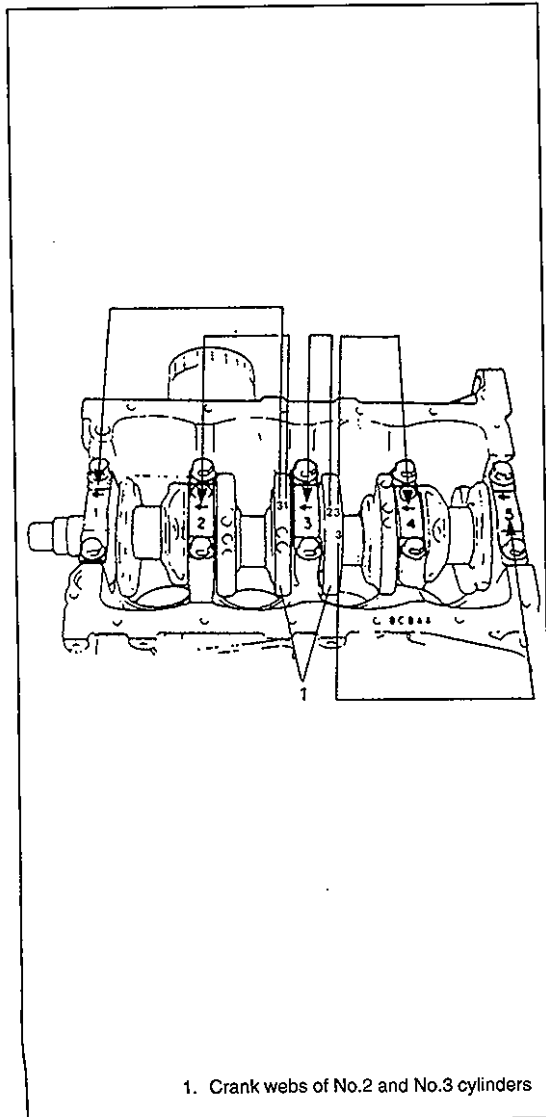

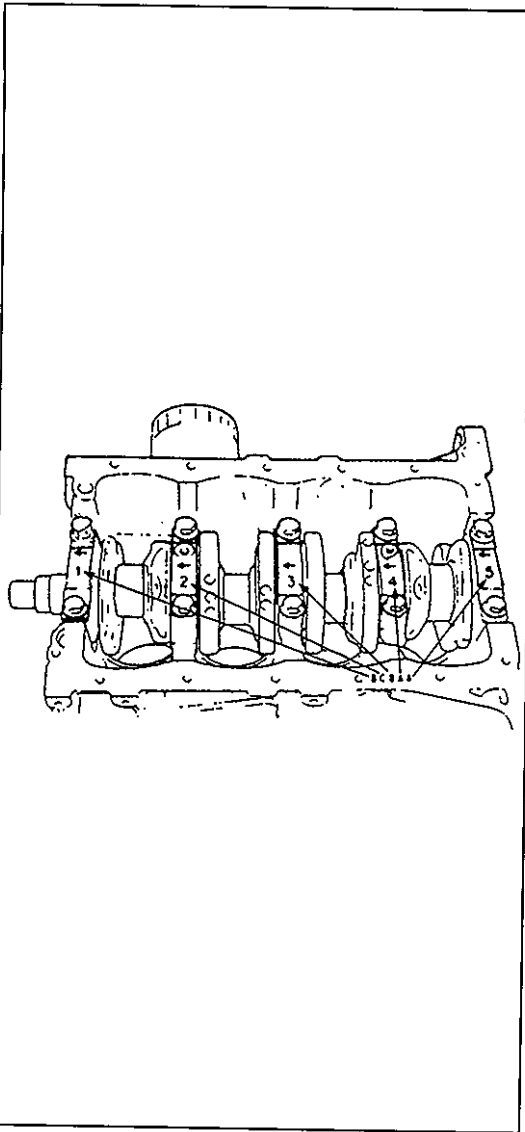


- 2) Next, check bearing cap bore diameter without bearing. On mating surface of cylinder block, four alphabets are stamped as shown in figure.

Three kinds of alphabets ("A", "B" and "C") represent following cap bore diameters.

Alphabet stamped	Bearing cap bore diameter (without bearing)
A	56.000 – 56.006 mm (2.2047 – 2.2050 in.)
B	56.006 – 56.012 mm (2.2050 – 2.2052 in.)
C	56.012 – 56.018 mm (2.2052 – 2.2054 in.)

The first, second, third, fourth and fifth (left to right) stamped alphabets represent cap bore diameters of bearing caps "1", "2", "3", "4" and "5", respectively.




For example, in figure, the first (leftmost) alphabet "B" indicates that cap bore dia. of bearing cap "1" is within 56.006 – 56.012 mm, and the fifth (rightmost) alphabet "A" indicates that cap bore dia. of cap "5" is within 56.000 – 56.006 mm.

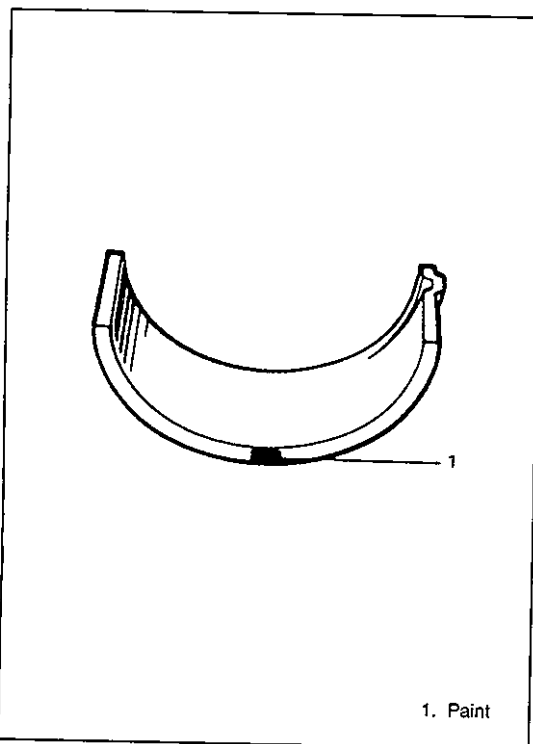

- 3) There are five kinds of standard bearings differing in thickness. To distinguish them, they are painted in following colors at the position as indicated in figure.

Each color indicates following thickness at the center of bearing.

Color painted	Bearing thickness
Green	1.998 – 2.002 mm (0.0787 – 0.0788 in.)
Black	2.001 – 2.005 mm (0.0788 – 0.0789 in.)
Colorless (no paint)	2.004 – 2.008 mm (0.0789 – 0.0790 in.)
Yellow	2.007 – 2.011 mm (0.0790 – 0.0791 in.)
Blue	2.010 – 2.014 mm (0.0791 – 0.0792 in.)

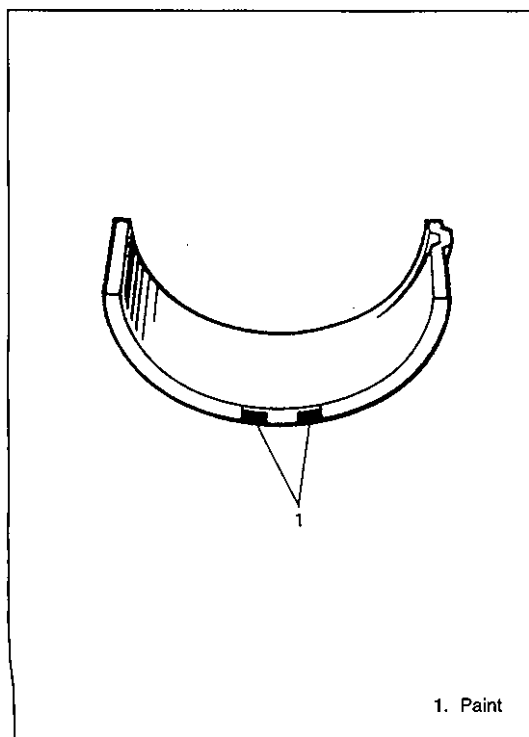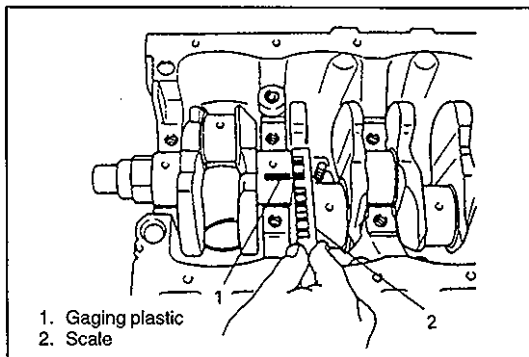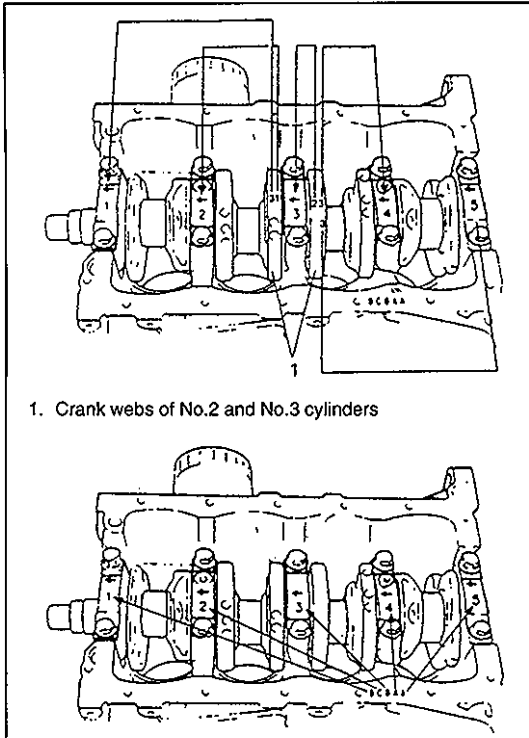

- 4) From numerals stamped on crank webs of No. 2 and No. 3 cylinders and the alphabets stamped on mating surface of cylinder block, determine new standard bearing to be installed to journal, by referring to table given below.

For example, if numeral stamped on crank web is "1" and alphabet stamped on mating surface is "B", install a new standard bearing painted in "Black" to its journal.

		Numeral stamped on crank web (Journal diameter)		
		1	2	3
Alphabet stamped on mating surface (Bearing cap bore dia.)	A	Green	Black	Colorless
	B	Black	Colorless	Yellow
	C	Colorless	Yellow	Blue
		New standard bearing to be installed.		

- 5) Using gaging plastic, check bearing clearance with newly selected standard bearing.  
If clearance still exceeds its limit, use next thicker bearing and recheck clearance.
- 6) When replacing crankshaft or cylinder block due to any reason, select new standard bearings to be installed by referring to numerals stamped on new crankshaft or alphabets stamped on mating surface of new cylinder block.

#### UNDERSIZE BEARING (0.25 mm):

- 0.25 mm undersize bearing is available, in five kinds varying in thickness.

To distinguish them, each bearing is painted in following colors at such position as indicated in figure.


Each color represents following thickness at the center of bearing.

Color painted	Bearing thickness
Green & Red	2.123 – 2.127 mm (0.0836 – 0.0837 in.)
Black & Red	2.126 – 2.130 mm (0.0837 – 0.0838 in.)
Red only	2.129 – 2.133 mm (0.0838 – 0.0839 in.)
Yell & Red	2.132 – 2.136 mm (0.0839 – 0.0840 in.)
Blue & Red	2.135 – 2.139 mm (0.0840 – 0.0841 in.)

- If necessary, regrind crankshaft journal and select under-size bearing to use with it as follows.


1) Regrind journal to following finished diameter.

**Finished diameter: 51.732 – 51.750 mm  
(2.0367 – 2.0373 in.)**

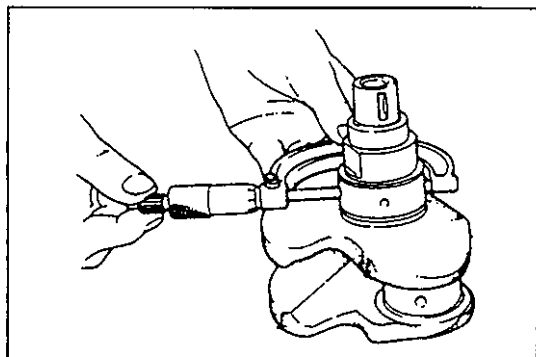


- 2) Using micrometer, measure reground journal diameter. Measurement should be taken in two directions perpendicular to each other in order to check for out-of-round.
- 3) Using journal diameter measured above and alphabets stamped on mating surface of cylinder block, select an under-size bearing by referring to table given below. Check bearing clearance with newly selected undersize bearing.

		Measured journal diameter		
		51.744 – 51.750 mm (2.0371 – 2.0373 in.)	51.738 – 51.744 mm (2.0369 – 2.0371 in.)	51.732 – 51.738 mm (2.0367 – 2.0369 in.)
Alphabets stamped on mating surface of cylinder block	A	Green & Red	Black & Red	Red only
	B	Black & Red	Red only	Yellow & Red
	C	Red only	Yellow & Red	Blue & Red
		Undersize bearing to be installed		

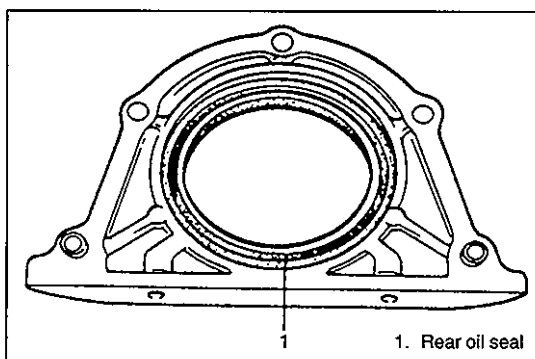


### Rear Oil Seal

Carefully inspect oil seal for wear or damage. If its lip is worn or damaged, replace it.

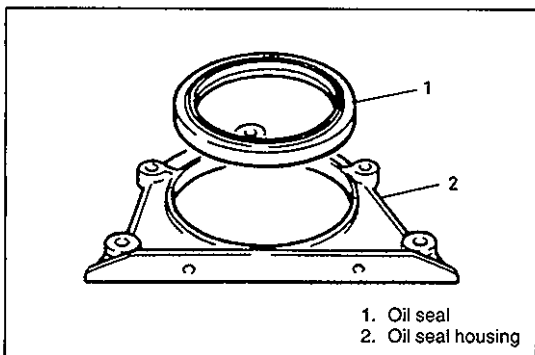


For oil seal installation, press-fit rear oil seal so that oil seal housing end face is flush with oil seal end face.

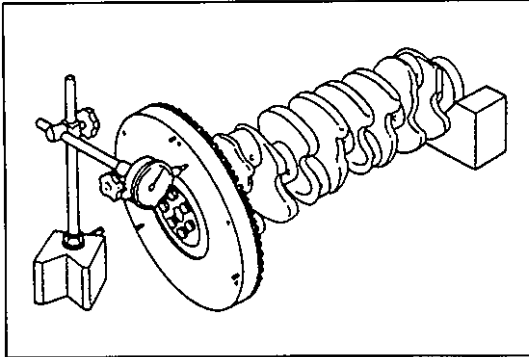

### Flywheel

- If ring gear is damaged, cracked or worn, replace flywheel.
- If the surface contacting clutch disc is damaged, or excessively worn, replace flywheel.
- Check flywheel for face runout with dial gauge.  
If runout exceeds its limit, replace flywheel.

**Limit on runout: 0.2 mm (0.0078 in.)**

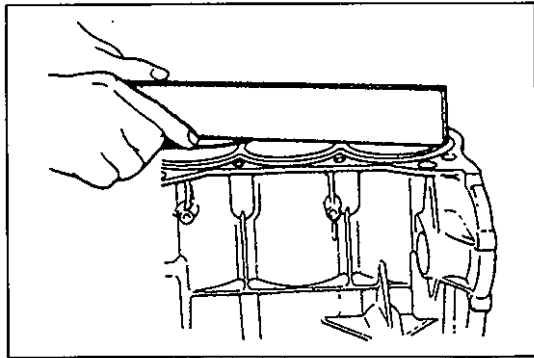

### Cylinder Block

#### Distortion of gasketed surface


Using straightedge and thickness gauge, check gasketed surface for distortion and, if flatness exceeds its limit, correct it.

Item	Standard	Limit
Flatness	0.03 mm (0.0012 in.)	0.06 mm (0.0024 in.)

### Honing or reboring cylinders

- 1) When any cylinder needs reboring, all other cylinders must also be rebored at the same time.
- 2) Select oversized piston according to amount of cylinder wear.

Size	Piston diameter
O/S 0.25	75.220 – 75.230 mm (2.9614 – 2.9618 in.)
O/S 0.50	75.470 – 75.480 mm (2.9712 – 2.9716 in.)

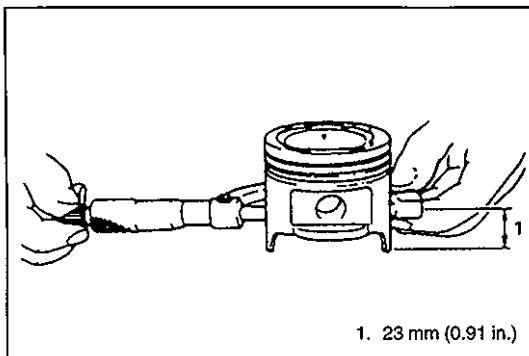

- 3) Using micrometer, measure piston diameter.

- 4) Calculate cylinder bore diameter to be rebored.

$$D = A + B - C$$

D: Cylinder bore diameter to be rebored.

A: Piston diameter as measured.

B: Piston clearance = 0.02 – 0.04 mm  
(0.0008 – 0.0015 in.)

C: Allowance for honing = 0.02 mm (0.0008 in.)

- 5) Rebore and hone cylinder to calculated dimension.

**NOTE:**


**Before reboring, install all main bearing caps in place and tighten to specification to avoid distortion of bearing bores.**

- 6) Measure piston clearance after honing.

## INSTALLATION

**NOTE:**


- All parts to be installed must be perfectly clean.
- Be sure to oil crankshaft journals, journal bearings, thrust bearings, crankpins, connecting rod bearings, pistons, piston rings and cylinder bores.
- Journal bearings, bearing caps, connecting rods, rod bearings, rod bearing caps, pistons and piston rings are in combination sets. Do not disturb such combination and make sure that each part goes back to where it came from, when installing.

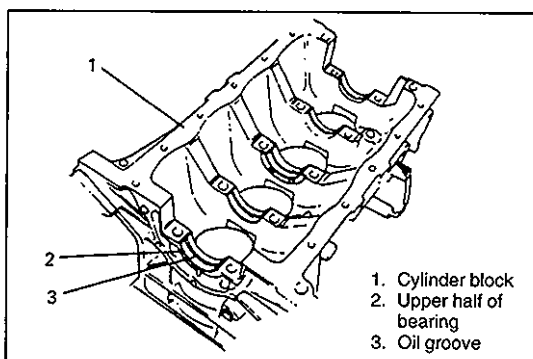


- 1) Install main bearings to cylinder block.

One of two halves of main bearing, has an oil groove. Install it to cylinder block, and the other half without oil groove to bearing cap.

Make sure that two halves are painted in the same color.

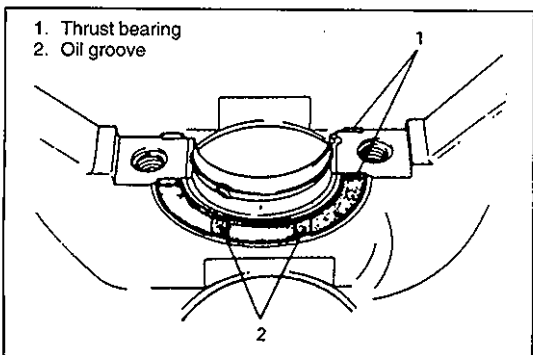

- 2) Install thrust bearings to cylinder block between No.2 and No.3 cylinders. Face oil groove sides to crank webs.

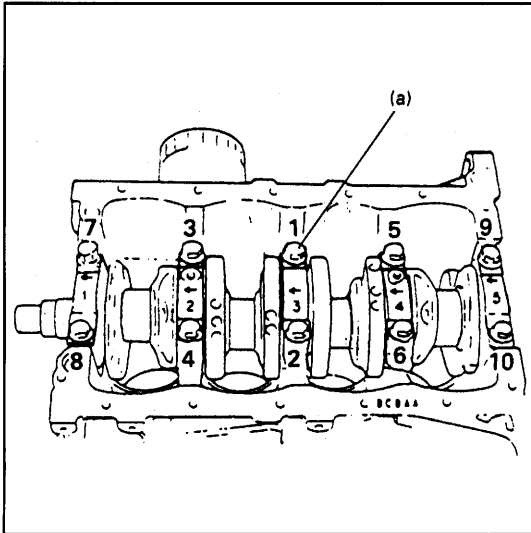

- 3) Install crankshaft to cylinder block.
- 4) Install bearing cap to cylinder block, making sure to point arrow mark (on each cap) to crankshaft pulley side. Fit them sequentially in ascending order, 1, 2, 3, 4 and 5, starting from pulley side.

After installing bearing cap stiffeners, tighten bearing cap bolts in such order as shown in figure a little at a time and repeat it till they are tightened to specified torque.

#### Tightening Torque

(a): 54 N·m (5.4 kg-m, 39.0 lb-ft)

#### NOTE:

After tightening cap bolts, check to be sure that crankshaft rotates smoothly when turning it by 8.0 N·m (0.8 kg-m, 5.8 lb-ft) torque or below.

- 5) Install new gasket or apply sealant to mating surface of oil seal housing as shown in figure, and then install oil seal housing.

#### CAUTION:

Be sure to use gasket for cylinder block with P/No.11200-XXXX1 and/or crankshaft oil seal housing with P/No.11341-82000 or when reassembling engine that gasket is used originally. Otherwise, oil leakage may result.

Do not reuse gasket removed in disassembly. Apply engine oil to oil seal lip before installation. Tighten housing bolts to specification.

“A”: Sealant 99000-31250

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

#### NOTE:

As there are 2 types of housing bolts, refer to figure for their correct use.

After installing oil seal housing, gasket edges might bulge out; if so, cut them off to make them flush with cylinder block and oil seal housing.

- 6) Install oil pump.  
Refer to item “Oil pump” for installation of oil pump.



- 7) Install flywheel (M/T model) or drive plate (A/T model).  
Using special tool, lock flywheel or drive plate, and torque its bolts to specification.

#### Special Tool


(A): 09924-17810

#### Tightening Torque

(a): 78 N·m (7.8 kg-m, 56.5 lb-ft)

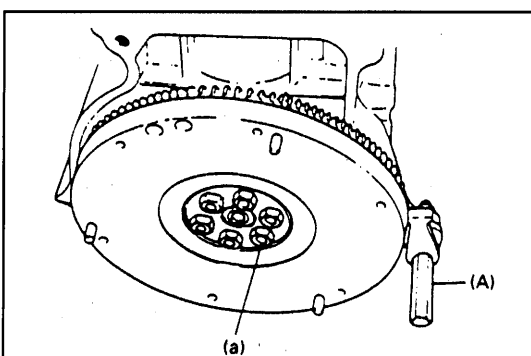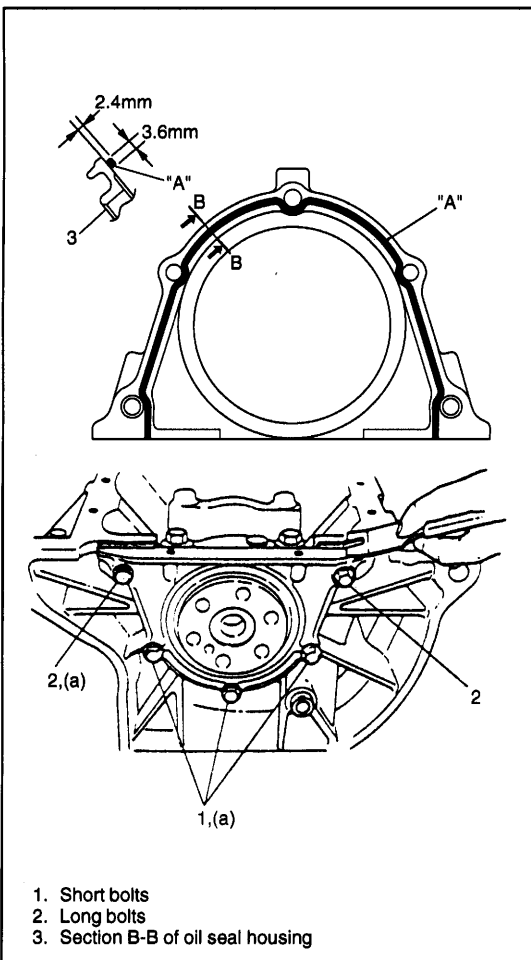

- 8) Install pistons and connecting rods as previously outlined.
- 9) Install oil pump strainer and oil pan as previously outlined.

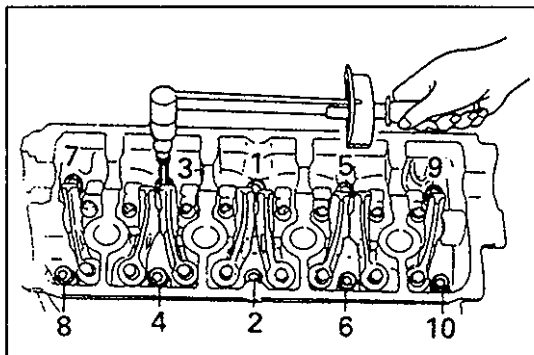


- 10) Install cylinder head assembly to cylinder block as previously outlined.

**NOTE:**

**Tighten cylinder head bolts to specified torque as previously outlined. Whenever installing cylinder head to new cylinder block, use following procedure to tighten cylinder head bolts.**

- Tighten cylinder head bolts to specified torque as previously outlined and loosen them once till tightening torque becomes "zero". And then torque them to specification again.

- 11) Install camshaft, crankshaft timing belt pulley, timing belt, crankshaft pulley, water pump pulley, etc., as previously outlined.
- 12) Install clutch to flywheel (for M/T vehicle). For clutch installation, refer to "CLUTCH" section.

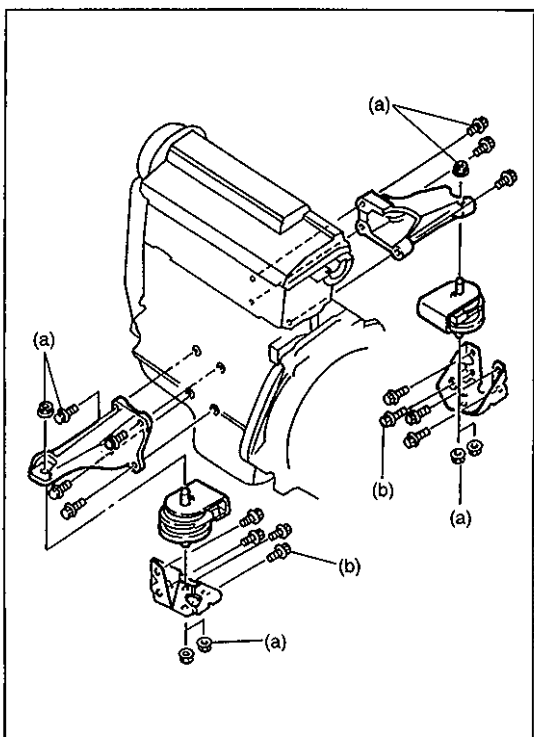

- 13) Install engine mountings brackets.

**Tightening Torque**

















**(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)**





**(b): 85 N·m (8.5 kg-m, 61.5 lb-ft)**

- 14) Install engine assembly to vehicle as previously outlined.



## SPECIAL TOOLS

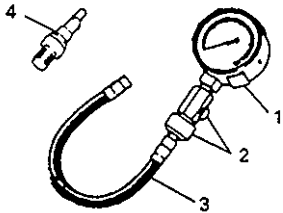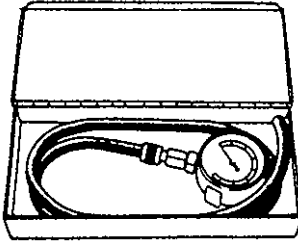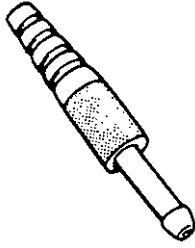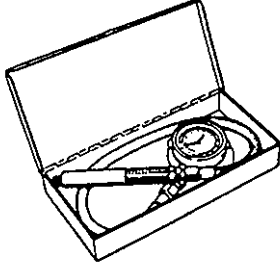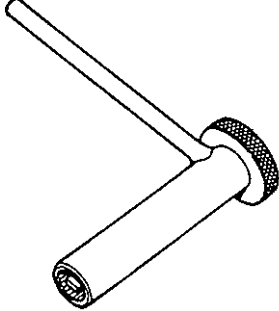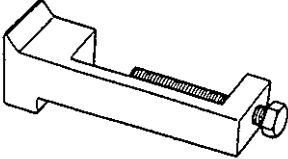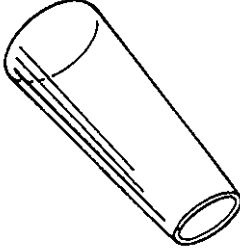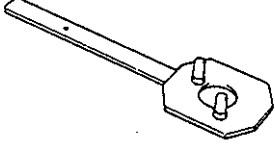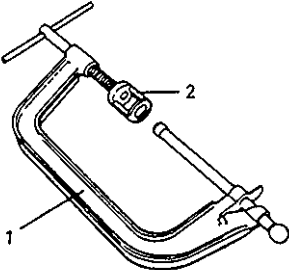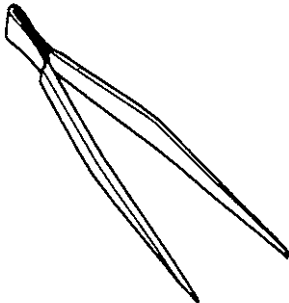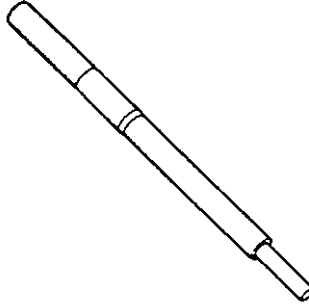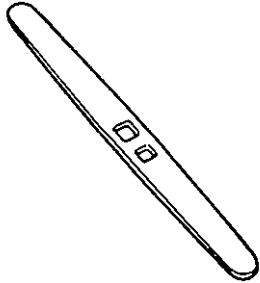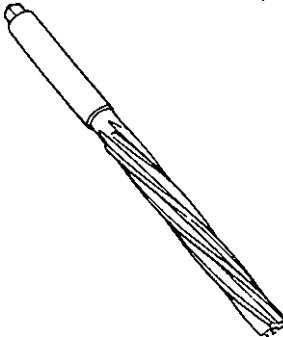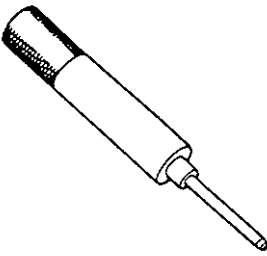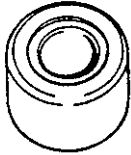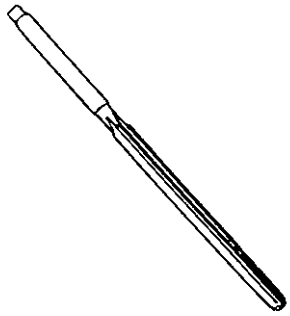 <p>1. 09915-64510-001 Compression gauge 2. 09915-64510-002 Connector 3. 09915-64530 Hose 4. 09915-67010 Attachment</p>	 <p>09915-67310 Vacuum gauge</p>	 <p>09918-08210 Vacuum gauge hose joint</p>	 <p>09915-77310 Oil pressure gauge</p>
 <p>09917-18210 Tappet adjuster wrench</p>	 <p>09927-56010 Gear stopper</p>	 <p>09926-18210 Oil seal guide (Vinyl resin)</p>	 <p>09917-68220 Camshaft pulley holder</p>
 <p>1. 09916-14510 Valve lifter 2. 09916-14910 Valve lifter attachment</p>	 <p>09916-84511 Forceps</p>	 <p>09916-44910 Valve guide remover</p>	 <p>09916-34542 Reamer handle</p>
 <p>09916-38210 Reamer (11 mm)</p>	 <p>09916-58210 Valve guide installer handle</p>	 <p>09916-56011 Valve guide installer attachment</p>	 <p>09916-34550 Reamer (5.5 mm)</p>

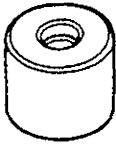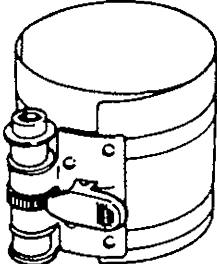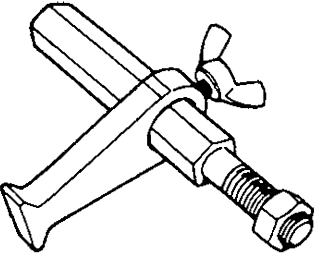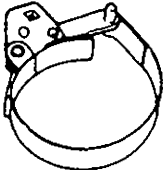			
09917-98221 Valve stem seal installer	09916-77310 Piston ring compressor	09924-17810 Flywheel holder	09915-47330 Oil filter wrench

REQUIRED SERVICE MATERIALS

MATERIALS	RECOMMENDED SUZUKI PRODUCT	USE
Sealant	SUZUKI BOND NO.1207C (99000-31150)	● Mating surfaces of cylinder block and oil pan.
Sealant	SUZUKI BOND NO.1215 (99000-31110)	● Mating surfaces of camshaft housings (No.6). ● Mating surfaces of camshaft position sensor case and cylinder head.
Sealant	SUZUKI BOND NO.1207F (99000-31250)	● Mating surfaces of cylinder block and crankshaft oil seal housing.

## TIGHTENING TORQUE SPECIFICATIONS

FASTENING PARTS	TIGHTENING TORQUE		
	N·m	kg·m	lb·ft
Oil pressure switch	14	1.4	10.5
Valve adjusting screw lock nuts	12	1.2	9.0
Cylinder head cover bolts	11	1.1	8.0
Timing belt tensioner stud	11	1.1	8.0
Timing belt tensioner bolt	25	2.5	18.0
Timing belt cover bolts and nut	11	1.1	8.0
Crankshaft pulley bolt	16	1.6	11.5
Exhaust pipe bolts	50	5.0	36.5
Oil pump strainer bolt and stay bolt	11	1.1	8.0
Oil pan bolts and nuts			
Oil pan drain plug	35	3.5	25.5
Transmission stiffener bolts	50	5.0	36.5
Oil pump rotor plate screws	11	1.1	8.0
Oil pump case bolts			
Crankshaft timing belt pulley bolt	130	13.0	94.0
Camshaft housing bolts	11	1.1	8.0
Rocker arm shaft bolts			
Rocker arm shaft plug	33	3.3	24.0
Camshaft timing belt pulley bolt	60	6.0	43.5
Cylinder head venturi plug	5	0.5	4.0
Cylinder head bolts	68	6.8	49.5
Connecting rod bearing cap nuts	35	3.5	25.5
Bolt and nuts fastening T/M and cylinder block	85	8.5	61.5
Torque converter bolts (A/T)	65	6.5	47.0
Crankshaft main bearing cap bolts	54	5.4	39.0
Flywheel bolts (Drive plate bolts for A/T)	78	7.8	56.5
Engine mounting & bracket bolts and nuts	Refer to p. 6A1-80.		

## SECTION 6A2

# ENGINE MECHANICAL

## (H25 ENGINE)

6A2

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System:

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components and Wiring Location View" under "General Description" in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and "Service Precautions" under "On-Vehicle Service" in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the "LOCK" position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

## CONTENTS


<b>GENERAL DESCRIPTION</b> .....	6A2- 2
<b>ON-VEHICLE SERVICE</b> .....	6A2- 4
Compression Check .....	6A2- 4
Engine Vacuum Check .....	6A2- 5
Oil Pressure Check .....	6A2- 6
Air Cleaner Element .....	6A2- 7
Throttle Body and Intake Manifold .....	6A2- 8
Exhaust Manifold .....	6A2-14
Cylinder Head Covers .....	6A2-17
Oil Pan and Oil Pump Strainer .....	6A2-18
Timing Chain Cover .....	6A2-21
Oil Pump .....	6A2-23
LH Bank 2nd Timing Chain and Chain Tensioner .....	6A2-26
1st Timing Chain and Chain Tensioner .....	6A2-32
RH Bank 2nd Timing Chain and Chain Tensioner .....	6A2-40
Oil Pump Chain .....	6A2-45
Camshaft and Valve Lash Adjuster .....	6A2-49
Valves and Cylinder Heads .....	6A2-55
Piston, Piston Rings, Connecting Rods and Cylinders .....	6A2-66
<b>UNIT REPAIR OVERHAUL</b> .....	6A2-77
Engine Assembly .....	6A2-77
Main Bearings, Crankshaft and Cylinder Block .....	6A2-81
<b>SPECIAL TOOLS</b> .....	6A2-91
<b>REQUIRED SERVICE MATERIAL</b> .....	6A2-92

## GENERAL DESCRIPTION

### ENGINE

The engine is a water-cooled, 60°V 6 cylinders, 4 stroke cycle gasoline unit with its DOHC (Double overhead camshaft) valve mechanism arranged for "V" type valve configuration.

The double overhead camshaft is mounted over the cylinder head; it is driven from crankshaft through timing chains, and no push rods are provided in the valve train system.

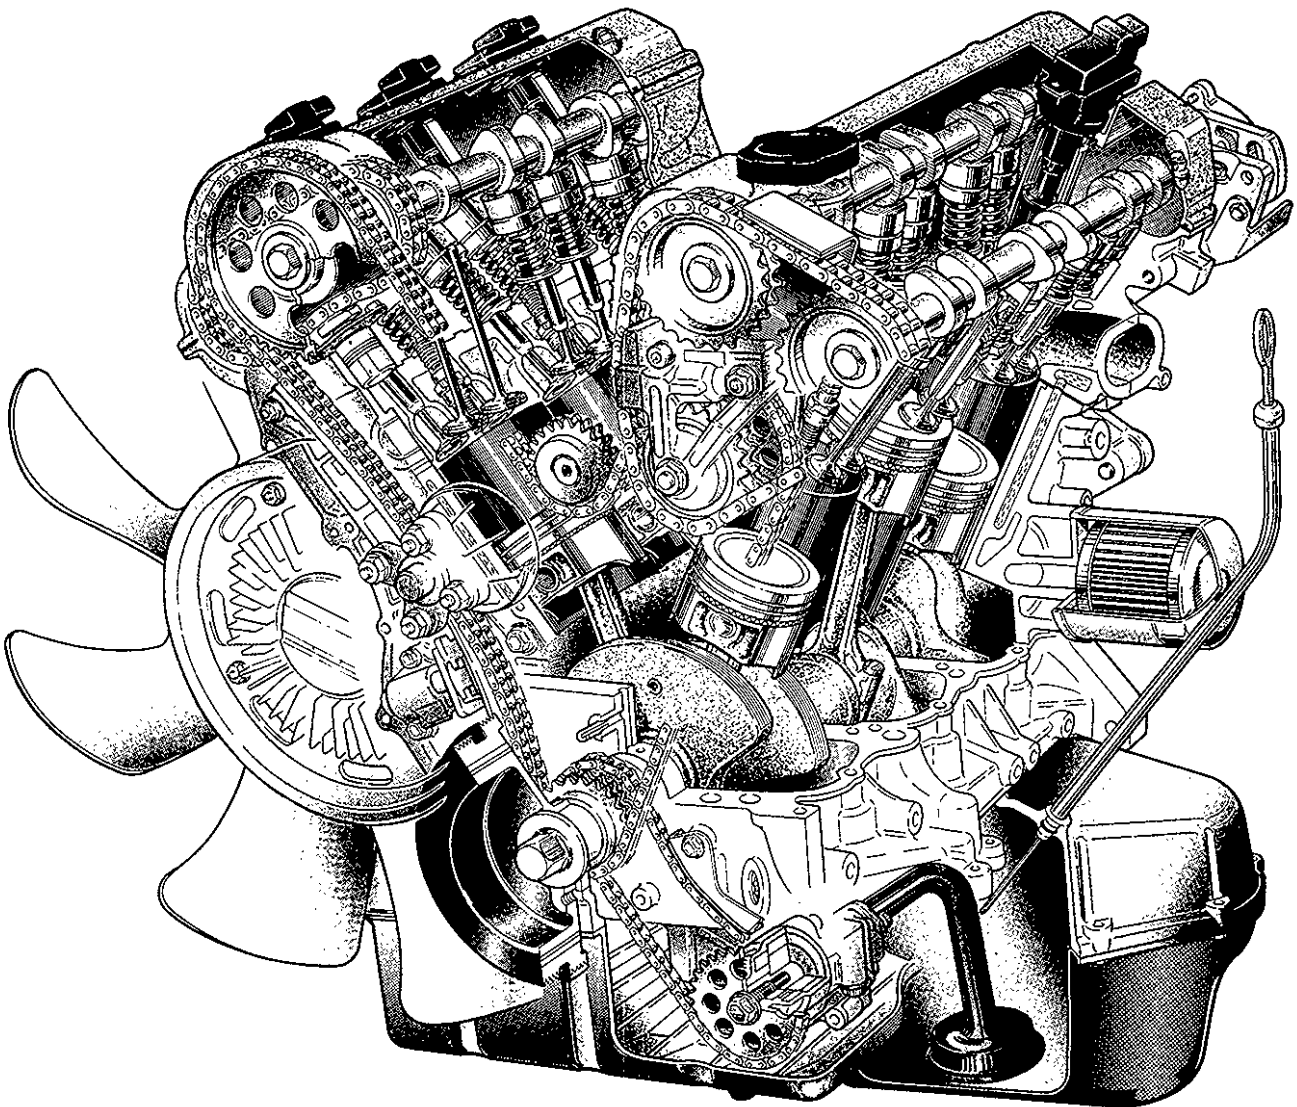





## ENGINE LUBRICATION

The oil pump is of a trochoid type, and mounted under the crankshaft. Oil is drawn up through the oil pump strainer and passed through the pump to the oil filter. The filtered oil flows into 3 paths in cylinder block. In one path, oil reaches the crankshaft journal bearings. Oil from the crankshaft journal bearings is supplied to the connecting rod bearings by means of intersecting passages drilled in the crankshaft, and then injected from the big end of connecting rod to lubricate piston, rings, and cylinder wall.

In other paths oil goes up to the cylinder heads and lubricates valves and camshafts, etc., after passing through the internal oilway of camshafts.

An oil relief valve is provided on the oil pump. This valve starts relieving oil pressure when the pressure exceeds about 430 kPa (4.3 kg/cm<sup>2</sup>, 61.1 psi).

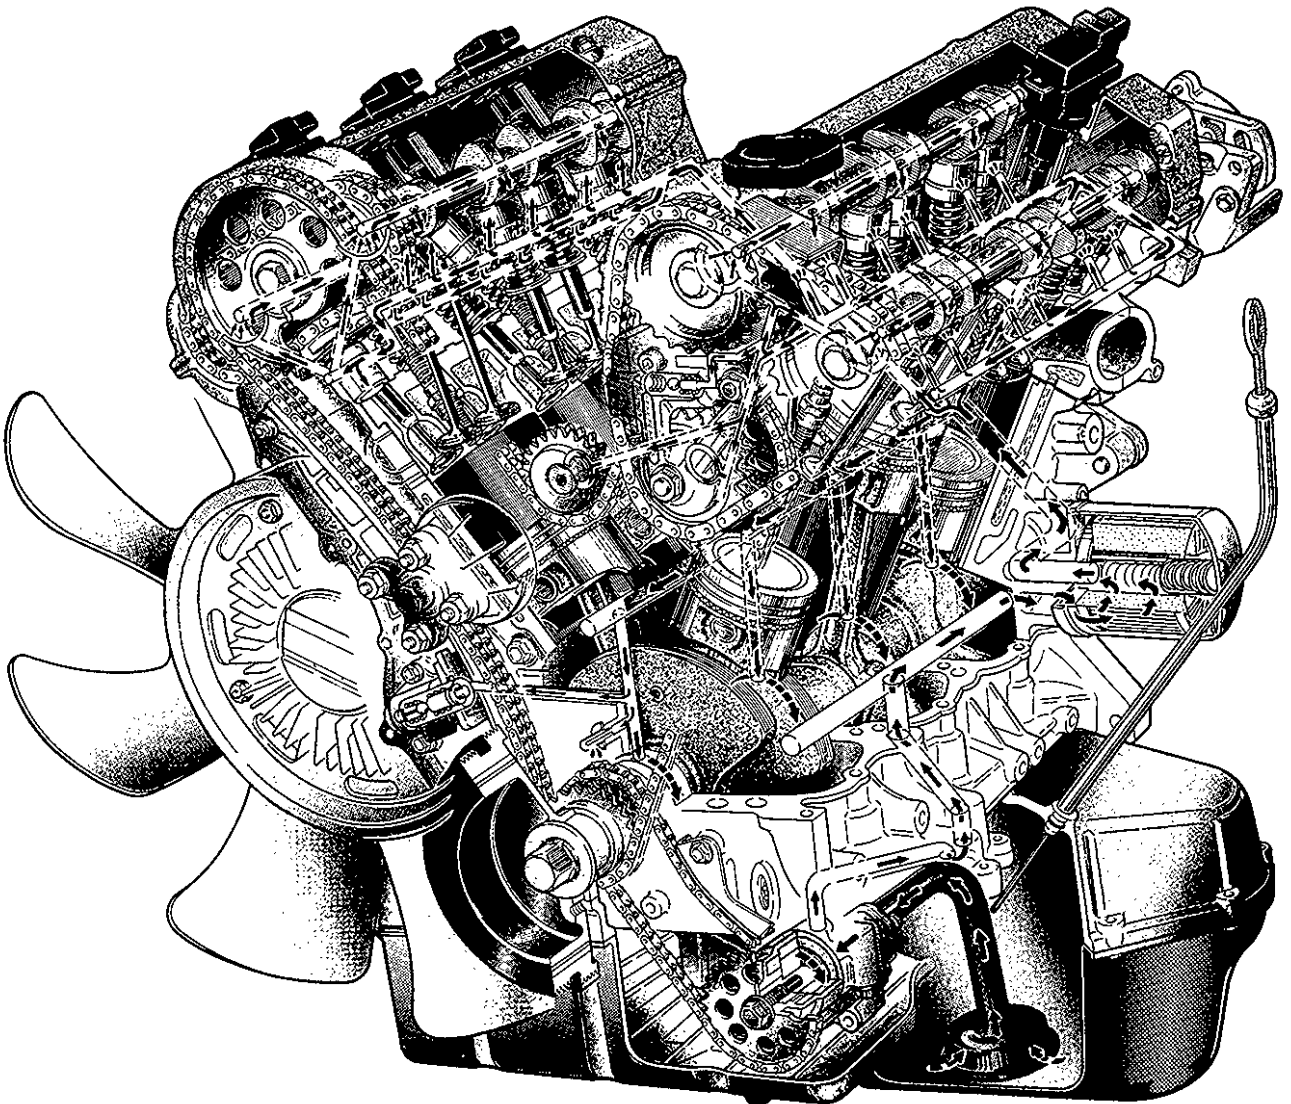

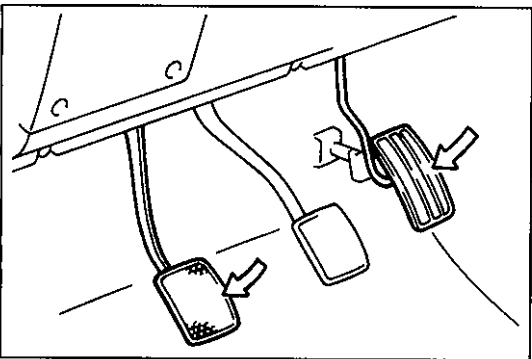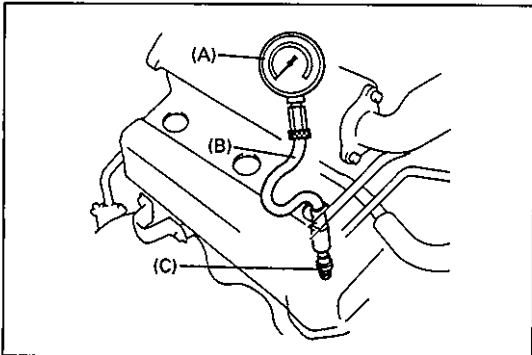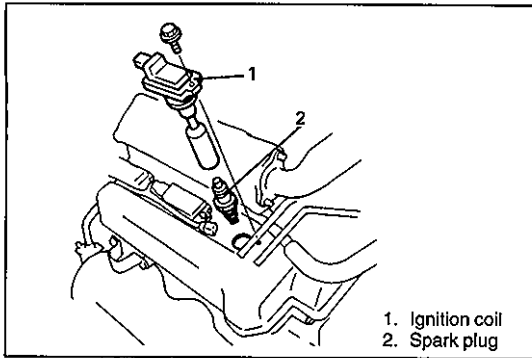

## ON-VEHICLE SERVICE

### COMPRESSION CHECK

Check compression pressure on all 6 cylinders as follows:

- 1) Warm up engine.
- 2) Stop engine after warming up.
- 3) Remove ignition coil covers and disconnect ignition coil harness couplers.
- 4) Remove ignition coils.
- 5) Remove all spark plugs.
- 6) Remove fuel pump relay.
- 7) Install special tool (Compression gauge) into spark plug hole.

#### Special Tool

(A): 09915-64510

(B): 09915-64530

(C): 09915-67010

- 8) Disengage clutch (to lighten starting load on engine) for M/T vehicle, and depress accelerator pedal all the way to make throttle fully open.

- 9) Crank engine with fully charged battery, and read the highest pressure on compression gauge.

#### NOTE:

For measuring compression pressure, crank engine at least 400 r/min (rpm) by using fully charged battery.

#### Compression pressure

Standard: 14.0 – 16.0 kg/cm<sup>2</sup>

(199.0 – 227.5 psi, 1400 – 1600 kPa)

Limit: 13.0 kg/cm<sup>2</sup> (185.0 psi, 1300 kPa)

Max. difference between any two cylinders:


1.0 kg/cm<sup>2</sup> (14.2 psi, 100 kPa)

- 10) Carry out steps 7), 8) and 9) on each cylinder to obtain 6 readings.

## ENGINE VACUUM CHECK

The engine vacuum that develops in the intake line is a good indicator of the condition of the engine. The vacuum checking procedure is as follows:

- 1) Warm up engine to normal operating temperature and make sure that engine idle speed is within specification.

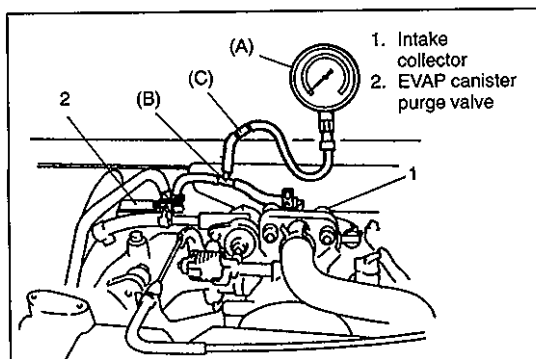

- 2) Stop engine and disconnect vacuum hoses from intake collector to EVAP canister purge valve.
- 3) Connect special tools (Vacuum gauge and hose joint) to vacuum hose of intake manifold side.

### Special Tool

(A): 09915-67310

(B): T joint

(C): 09918-08210

- 4) Start engine and run engine at specified idle speed, and read vacuum gauge. Vacuum should be within specification.

**Vacuum specification: 450 – 600 mm Hg**

**(sea level)**

**(17.7 – 23.7 in.Hg)**

**at 800 r/min (rpm)**

- 5) After checking, remove vacuum gauge and hose joint.
- 6) Connect vacuum hoses to intake collector and EVAP canister purge valve.




## OIL PRESSURE CHECK


### NOTE:

Prior to checking oil pressure, check the followings.

- Oil level in oil pan  
If oil level is low, add oil up to Full level hole on oil level gauge.
- Oil quality  
If oil is discolored, or deteriorated, change it.  
For particular oil to be used, refer to Section 0B.
- Oil leaks  
If leak is found, repair it.

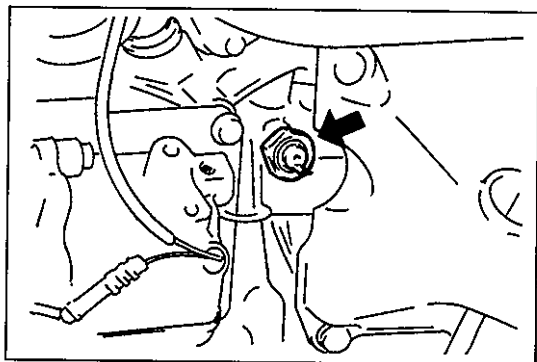

- 1) Remove oil pressure switch from cylinder block.

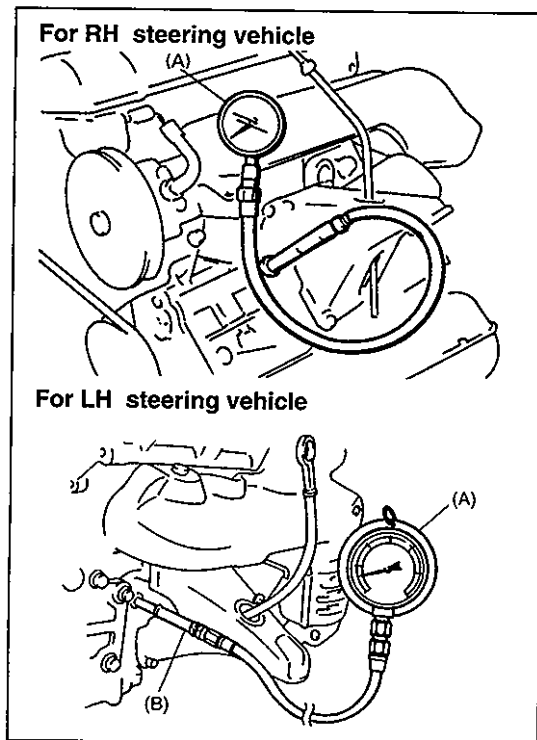

- 2) Install special tool (Oil pressure gauge) to vacated threaded hole.

For LH steering vehicle, use oil pressure gauge (special tool (A)) with special tool (B) instead of the steel adaptor supplied in special tool (A).

### Special Tool

(A): 09915-77310

(B): 09915-76510

- 3) Start engine and warm it up to normal operating temperature.
- 4) After warming up, raise engine speed to 4,000 r/min (rpm) and measure oil pressure.

### Oil pressure specification:

390 – 470 kPa (3.9 – 4.7 kg/cm<sup>2</sup>, 55.5 – 66.8 psi) at 4,000 r/min (rpm)

- 5) After checking oil pressure, stop engine and remove oil pressure gauge.


- 6) Before reinstalling oil pressure switch, be sure to wrap its screw threads with sealing tape and tighten switch to specified torque.

### Tightening Torque


(a): 14 N·m (1.4 kg-m, 10.0 lb-ft)

### NOTE:

If sealing tape edge is bulged out from screw threads of switch, cut it off.

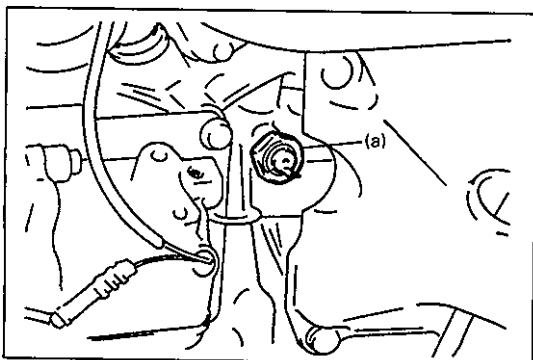

- 7) Start engine and check oil pressure switch for oil leakage.

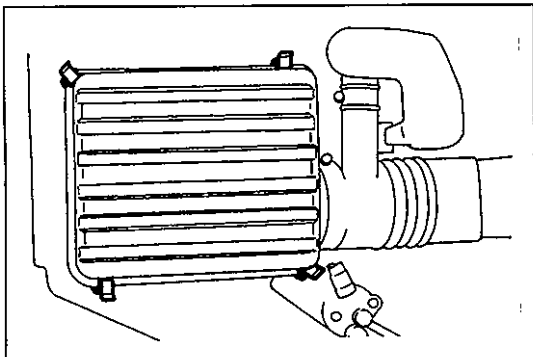

## AIR CLEANER ELEMENT


This air cleaner element is of dry type. Note that it needs cleaning according to the following method.

### REMOVAL

- 1) Disconnect IAT sensor coupler.
- 2) Remove air cleaner upper case.
- 3) Remove air cleaner element.

### INSPECT

Check element for dirt.

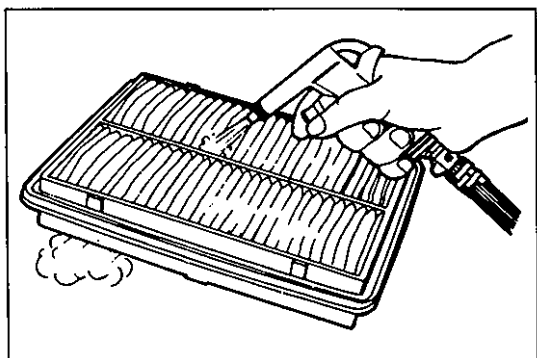


### CLEAN

Blow off dust by blowing compressed air from air outlet side of element (i.e., the side facing up when installed in air cleaner case).

### INSTALLATION

- 1) Install element to air cleaner box.
- 2) Install air cleaner upper case.
- 3) Connect IAT sensor coupler.

## THROTTLE BODY AND INTAKE MANIFOLD

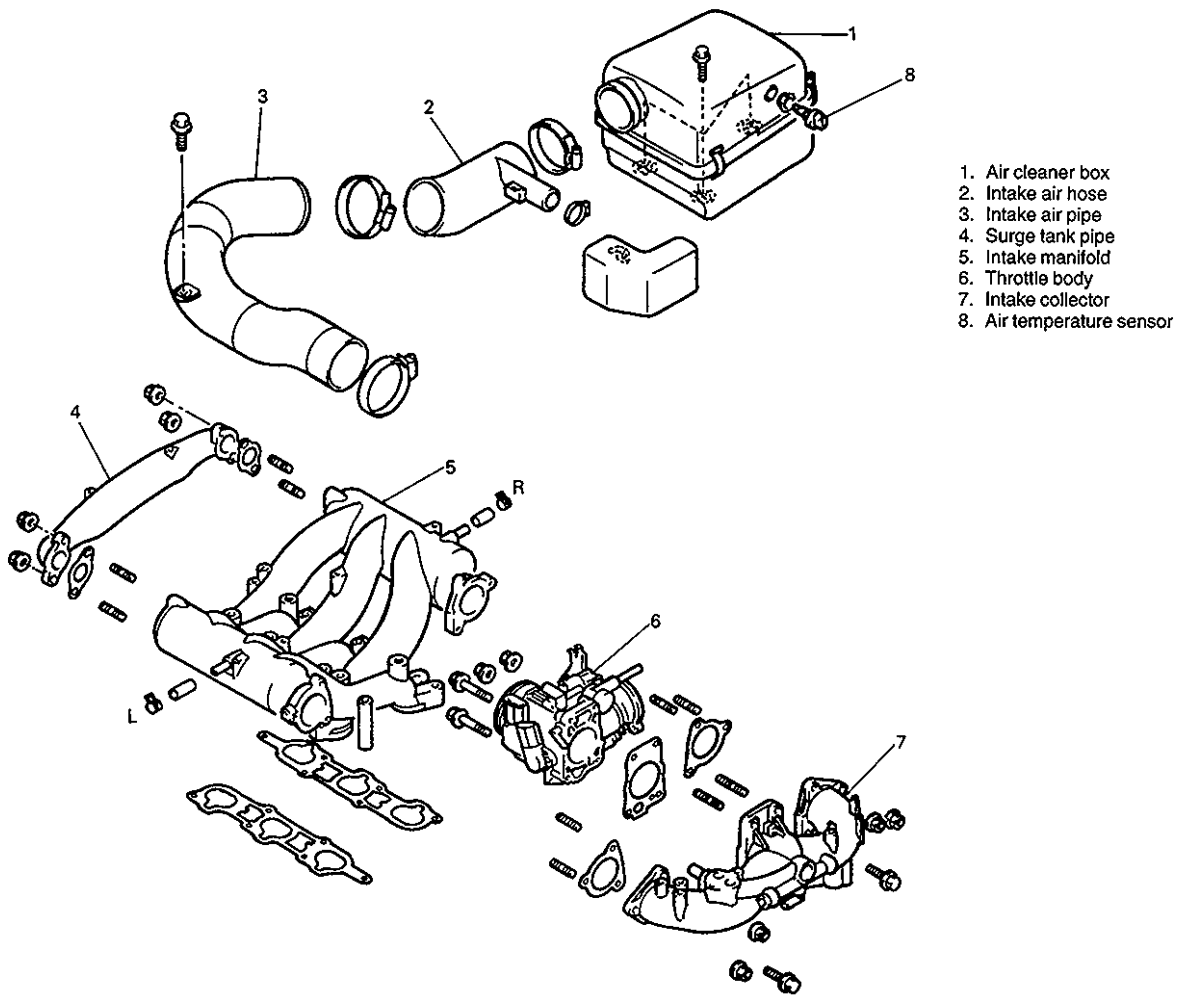

1. Air cleaner box
2. Intake air hose
3. Intake air pipe
4. Surge tank pipe
5. Intake manifold
6. Throttle body
7. Intake collector
8. Air temperature sensor

### REMOVAL


- 1) Release fuel pressure in fuel feed line by referring to Section 6.

#### CAUTION:

This work must not be done when engine is hot. If done so, it may cause adverse effect to catalyst.

- 2) Disconnect negative cable at battery.


- 3) Drain coolant.

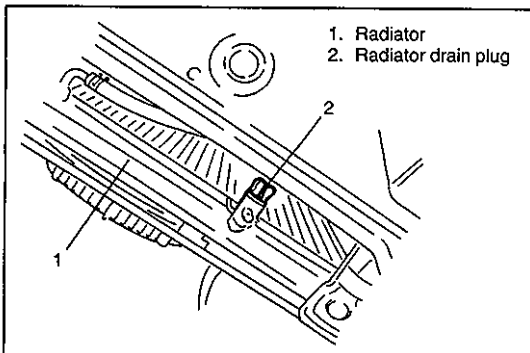


#### WARNING:

To help avoid danger of being burned, do not remove drain plug and radiator cap while engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure if plug and cap are taken off too soon.


- 4) Remove strut tower bar.
- 5) Disconnect air temperature sensor coupler from air cleaner upper case.

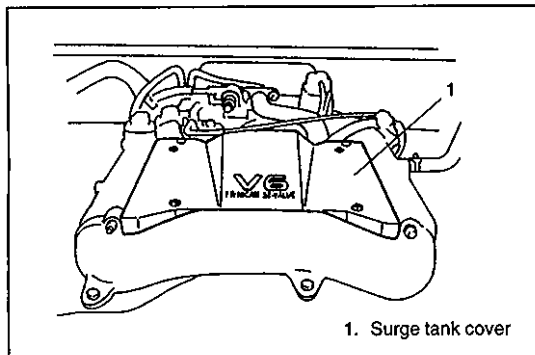

6) Remove surge tank cover.

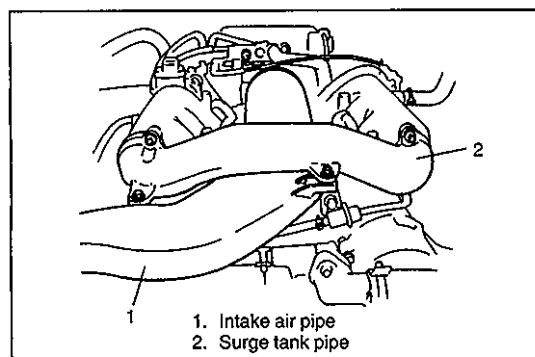


7) Remove air cleaner upper case, intake air hose, intake air pipe and surge tank pipe as one component. Do not disassemble them, when removing and reinstalling.

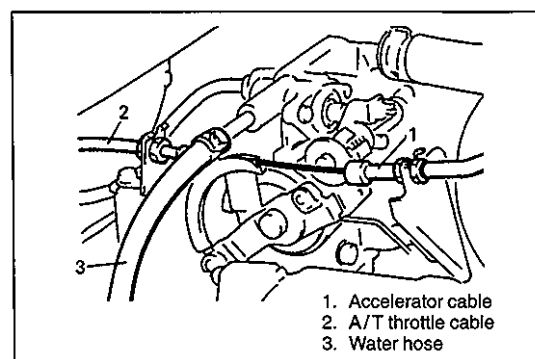


8) Disconnect accelerator cable and A/T throttle cable (for A/T vehicle) from throttle body.

9) Disconnect water hoses from throttle body.

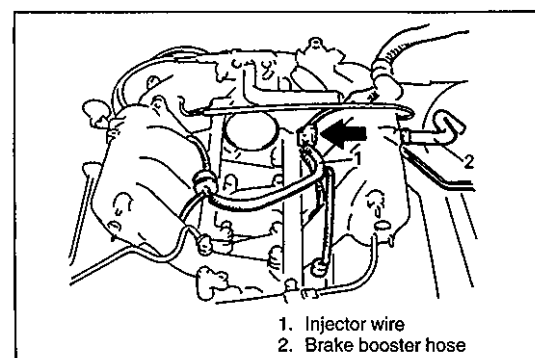

10) Disconnect injector wire coupler.






11) Disconnect brake booster hose from intake manifold.

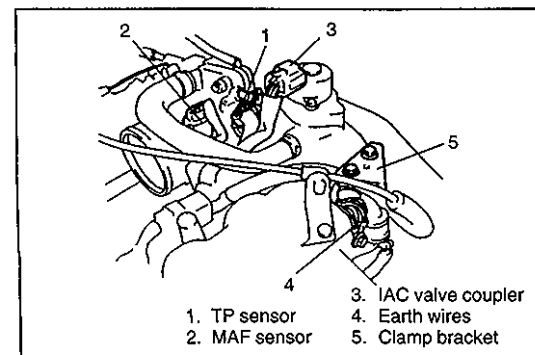

12) Disconnect couplers of TP sensor, MAF sensor and IAC valve.

13) Disconnect earth terminal from intake collector.

14) Remove clamp bracket from intake collector.

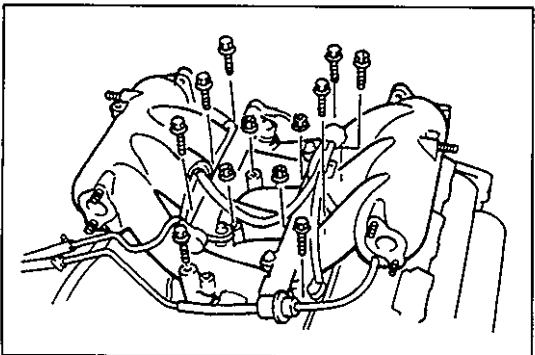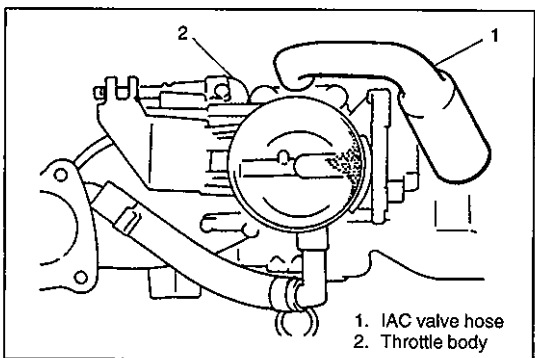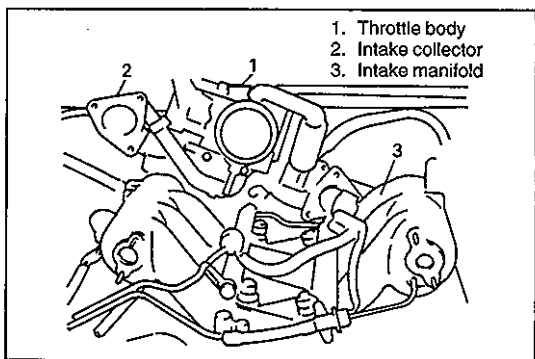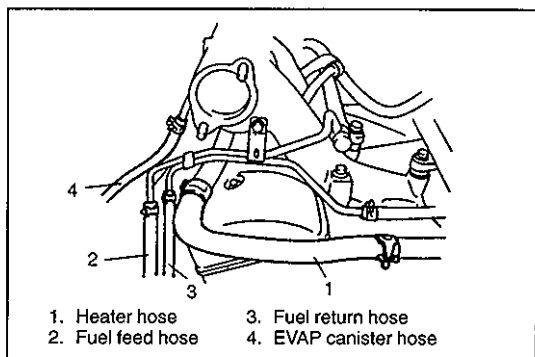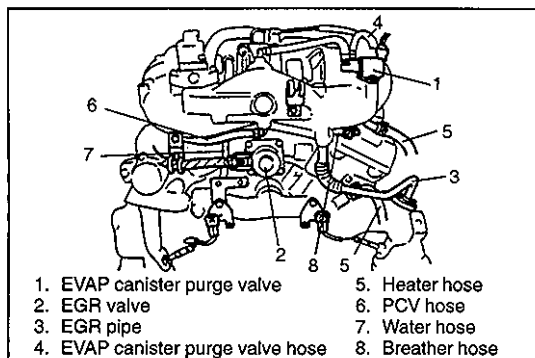


- 15) Disconnect couplers EVAP canister purge valve and EGR valve.
- 16) Disconnect PCV hose from cylinder head cover.  
Disconnect breather hoses from throttle body or cylinder head cover.
- 17) Disconnect hoses of EVAP canister purge valve and heater.
- 18) Remove EGR pipe.

- 19) Disconnect hoses of heater, EVAP canister, fuel feed and fuel return.

- 20) Remove throttle body and intake collector from intake manifold.


- 21) Disconnect hoses of IAC valve and EVAP canister purge valve from intake collector.
- 22) Remove throttle body from intake collector.
- 23) Remove IAC valve, EGR valve and EVAP canister purge valve from intake collector.

- 24) Remove intake manifold bolts (8 pc.) and nuts (4 pc.).
- 25) Remove intake manifold.

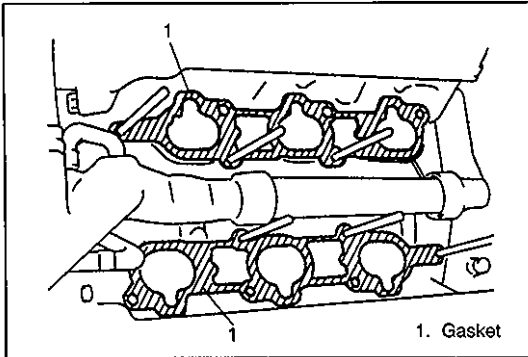

## INSTALLATION


- 1) Install new intake manifold gaskets to cylinder heads.

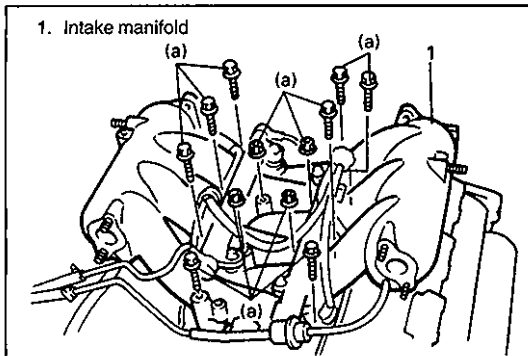

- 2) Install intake manifold.  
Tighten bolts and nuts to specified torque.

### Tightening Torque


(a): 23.0 N·m (2.3 kg-m, 16.5 lb-ft)

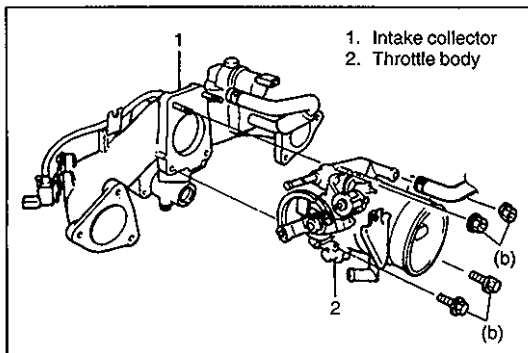


- 3) Install throttle body to intake collector with new throttle body gasket.  
Tighten bolts and nuts to specified torque.

### Tightening Torque


(b): 12.0 N·m (1.2 kg-m, 8.5 lb-ft)

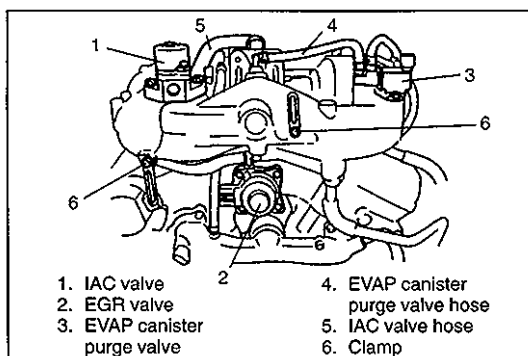


- 4) Install IAC valve, EGR valve, EVAP canister purge valve, clamps and each hoses to intake collector and throttle body.  
Use new gasket, when installing IAC valve and EGR valve.
- 5) Install throttle body and intake collector assembly to intake manifold with new intake collector gaskets.

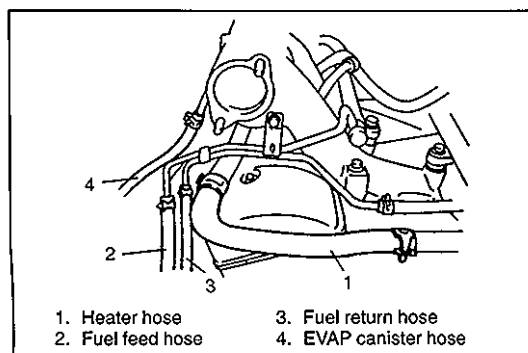


- 6) Connect hoses of heater, EVAP canister, fuel feed and fuel return.

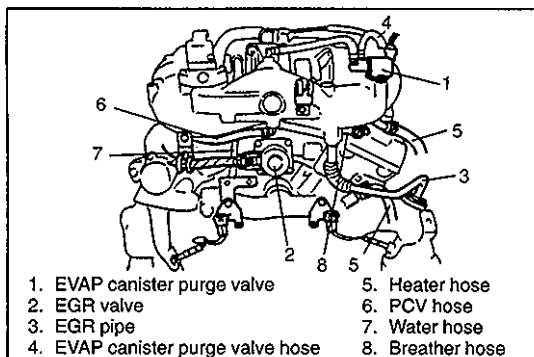


- 7) Install EGR pipe with new gaskets.
  - 8) Connect hoses of EVAP canister purge valve and heater.
  - 9) Connect hoses of PCV, breather and water.
  - 10) Connect couplers of EVAP canister purge valve and EGR valve.
- Fix wire harness with clamps.

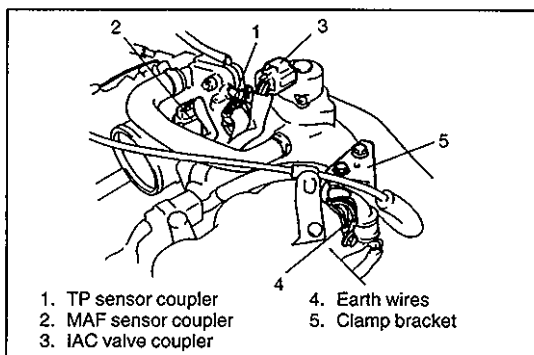


- 11) Install clamp bracket to intake collector.
- 12) Connect earth terminal to intake collector.
- 13) Connect couplers of TP sensor, MAF sensor and IAC valve.

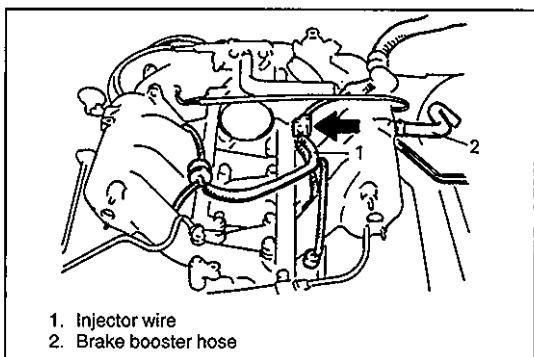


- 14) Connect brake booster hose to intake manifold.
- 15) Connect injector wire coupler.

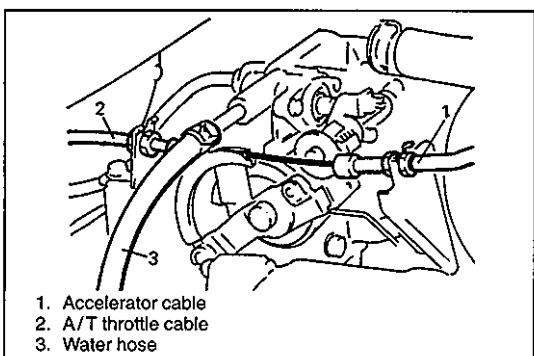


- 16) Connect water hoses to throttle body.
- 17) Connect accelerator cable and A/T throttle cable (for A/T vehicle) to throttle body.

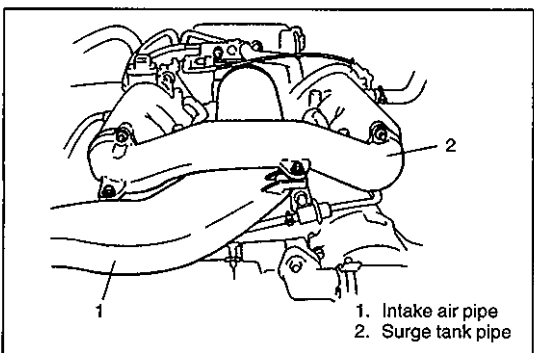

- 18) Install surge tank pipe to intake manifold with new gaskets and intake air pipe to throttle body.

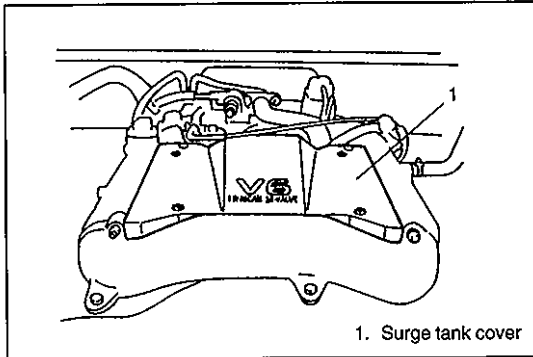

19) Install surge tank cover.

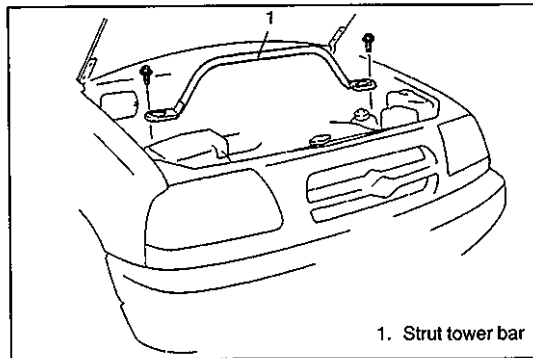

20) Install air cleaner upper case.

21) Connect air temperature sensor (ATS) coupler to air cleaner upper case.

22) Install strut tower bar.

23) Check to ensure that all removed parts are back in place.

Reinstall any necessary parts which have not been reinstalled.


24) Refill cooling system, referring to Section 6B.

25) Connect negative cable at battery.


26) Upon completion of installation, verify that there is no fuel leakage at each connection according to procedure described in Section 6.



Type 1

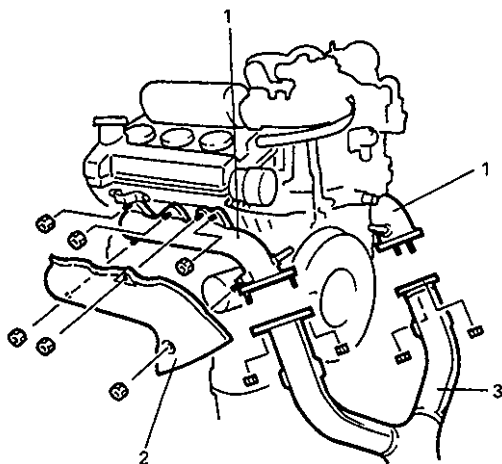


Type 2

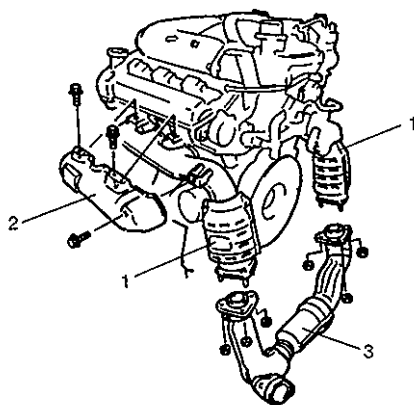

- 1. Exhaust manifold
- 2. Exhaust manifold cover
- 3. Exhaust No.1 pipe

- 1. Exhaust manifold
- 2. Exhaust manifold cover
- 3. Oil level gauge guide

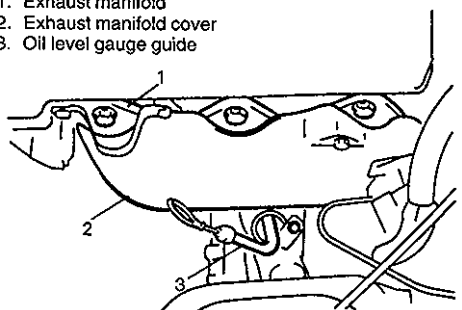

## EXHAUST MANIFOLD

### WARNING:

To avoid danger of being burned, do not service exhaust system while it is still hot. Service should be performed after system has cooled off.


### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Remove air cleaner upper case and intake air hose.
- 3) Disconnect oxygen sensor lead wires at couplers and detach couplers from their bracket.
- 4) Remove oil level gauge guide.
- 5) Disconnect EGR pipe from RH bank exhaust manifold.
- 6) Remove exhaust manifold covers from exhaust manifolds.


### NOTE:

**Detach EVAP canister from its bracket if necessary.**


- 7) Hoist vehicle.
- 8) Before disconnecting front propeller shaft, put match mark on joint flange and propeller shaft to facilitate their installation as shown in figure.
- 9) Disconnect propeller shaft from front differential.

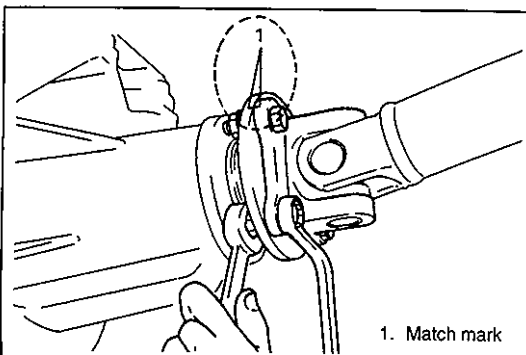

1. Match mark

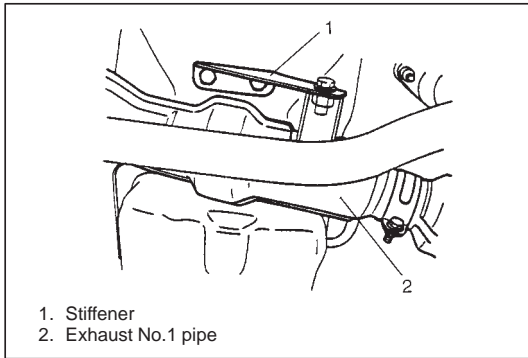


10) Remove exhaust No.1 pipe.

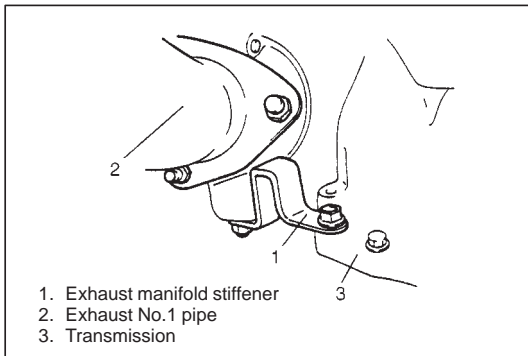

11) For Type 2 exhaust system only:

Detach exhaust manifold stiffener from transmission case.

12) Remove exhaust manifolds and their gaskets from cylinder heads.

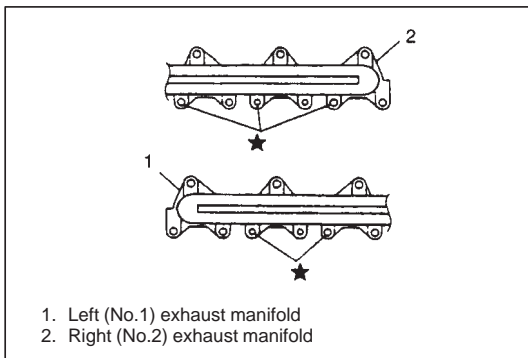

## INSTALLATION

1) Install new manifold gaskets to cylinder heads and No.1 pipe gasket to exhaust pipe No.1.

2) Install exhaust manifolds.

Always install new bolts with pre-coated adhesive to the locations with ★ mark.

Tighten manifold nuts and bolts to specified torque.

### Tightening Torque

(a): 30 N·m (3.0 kg-m, 21.5 lb-ft)

3) For Type 2 exhaust system only:


Attach exhaust manifold stiffener to transmission.

4) Install exhaust No.1 pipe and stiffener.


Tighten exhaust No.1 pipe bolts and nuts to specified torque.

### Tightening Torque



(b): 50 N·m (5.0 kg-m, 36.5 lb-ft)

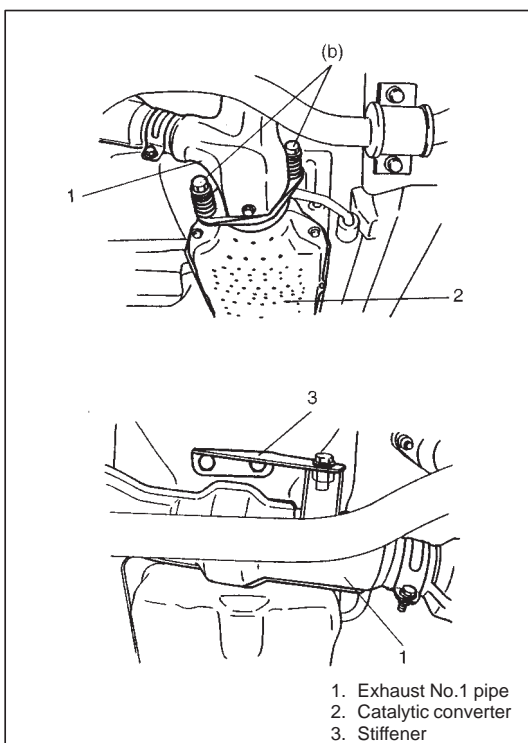


Type 1

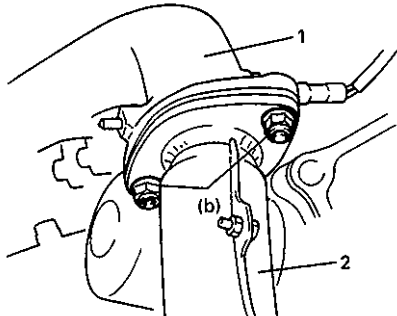

Type 2

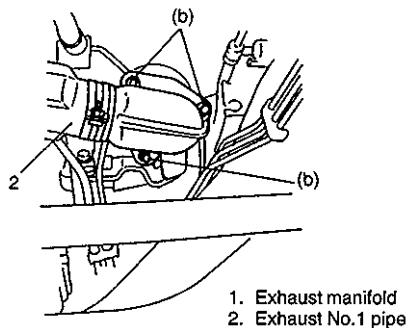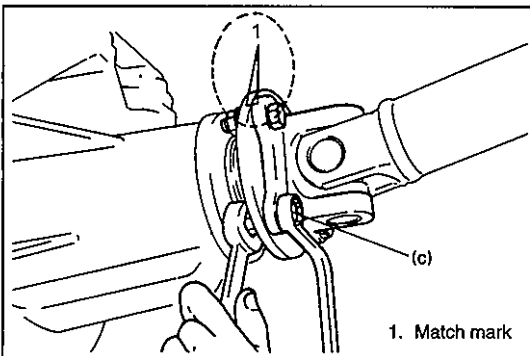**Tightening Torque****(b) 50 N·m (5.0 kg-m, 36.5 lb-ft)**

- 5) Reverse removal procedure to install front propeller shaft. When installing propeller shaft, align match mark. Use following specification to torque universal joint flange.


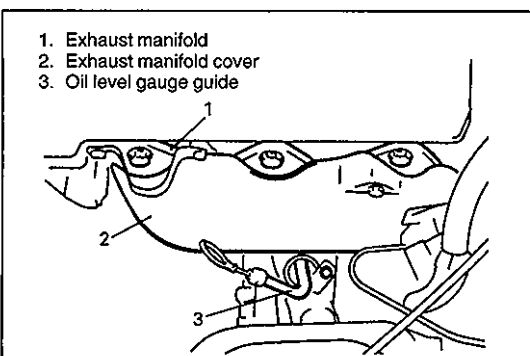
**Tightening Torque****(c): 55 N·m (5.5 kg-m, 40.0 lb-ft)**

- 6) Connect EGR pipe to RH bank exhaust manifold.  
 7) Install exhaust manifold covers.  
 8) Install oil level gauge guide using new O-ring.  
 9) Connect oxygen sensor lead wire couplers. Be sure to clamp its lead wires.  
 10) Connect negative cable to battery. Upon completion of installation, start engine and check that no exhaust gas leakage exists.

## CYLINDER HEAD COVERS


### REMOVAL

- 1) Remove throttle body and intake manifold.  
Refer to item "THROTTLE BODY AND INTAKE MANIFOLD" in this section for removal.
- 2) Remove ignition coil covers.
- 3) Disconnect ignition coil couplers and remove ignition coils.
- 4) Remove cylinder head covers.

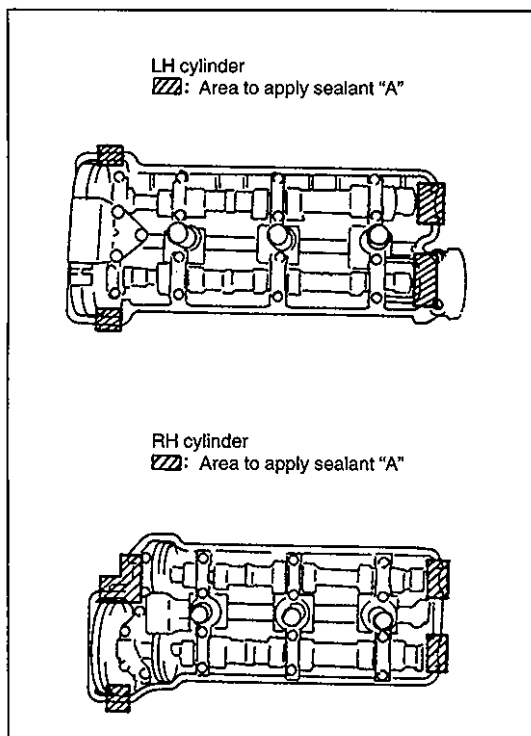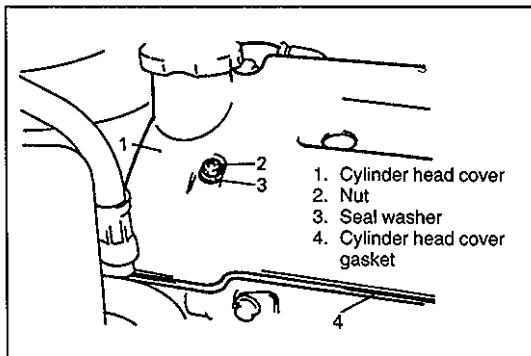

### INSTALLATION

- 1) Clean sealing surfaces on cylinder heads and covers.
- 2) Remove oil, old sealant, and dust from sealing surfaces. After cleaning, apply sealant "A" to cylinder heads sealing surface area as shown in figure.
- "A": Sealant 99000-31150**
- 3) Install new cylinder head cover gaskets to head covers.

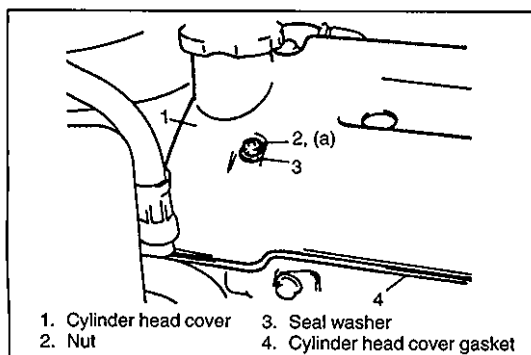


- 4) Install cylinder head covers to cylinder heads.
- 5) Using new seal washers, tighten nuts to specified torque.

#### Tightening Torque

(a): 10.5 N·m (1.1 kg-m, 7.5 lb-ft)


- 6) Install ignition coils and connect ignition coil couplers.
- 7) Install ignition coil covers.
- 8) Install throttle body and intake manifold.  
Refer to item "THROTTLE BODY AND INTAKE MANIFOLD" in this section for installation.

## OIL PAN AND OIL PUMP STRAINER

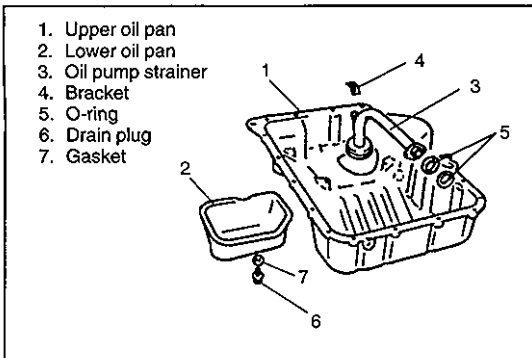


### REMOVAL


- 1) Remove oil level gauge guide.
- 2) Raise vehicle and remove both front wheels.
- 3) Remove rack and pinion assembly.  
Refer to Section 3B1 for removal.

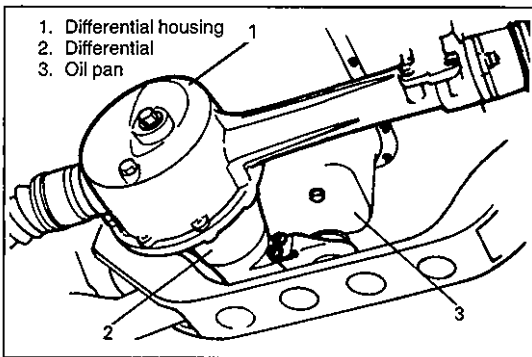


- 4) Remove front differential housing with differential from chassis.  
Refer to Section 7E for removal.

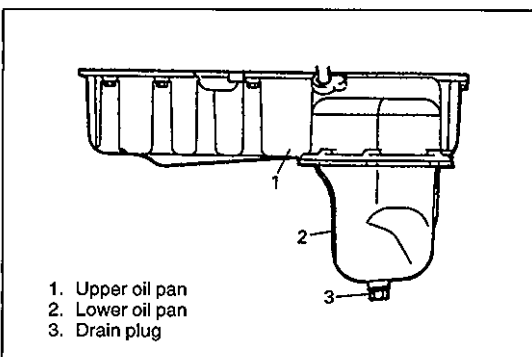

- 5) Drain engine oil by removing drain plug.
- 6) Remove lower oil pan from upper oil pan.
- 7) Remove oil strainer bracket.
- 8) Detach radiator outlet pipe from upper oil pan.

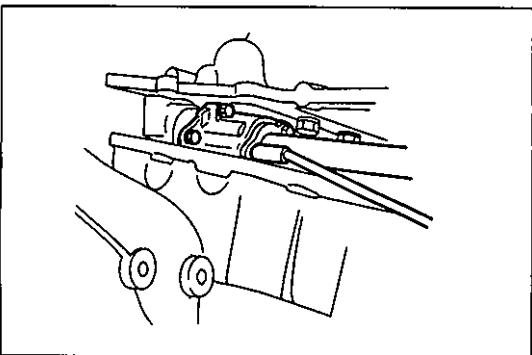


- 9) Remove upper oil pan according to following procedure:  
Lower upper oil pan until it stops by way of cross member and oil pump strainer and keep it at that position temporarily.  
With wrench inserted between upper oil pan and lower crankcase, and oil pump strainer mounting bolt removed, remove oil pump strainer.  
Then remove upper oil pan from temporarily supported position.

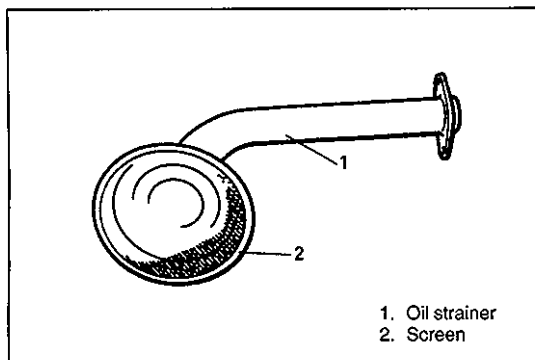


## CLEAN

- Inside of oil pan and oil pump strainer screen.

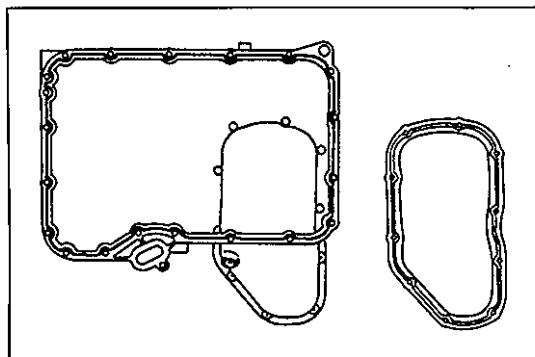


- Clean sealing surface on upper oil pan, lower oil pan and lower crankcase.

Remove oil, old sealant, and dust from sealing surface.

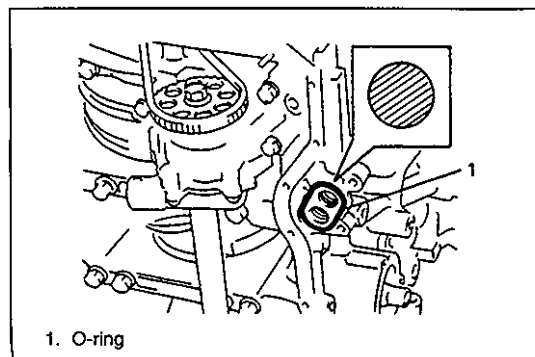


## INSTALLATION

- 1) Install new O-ring to lower crankcase as shown in figure.
- 2) Install two new O-rings to oil pump strainer.

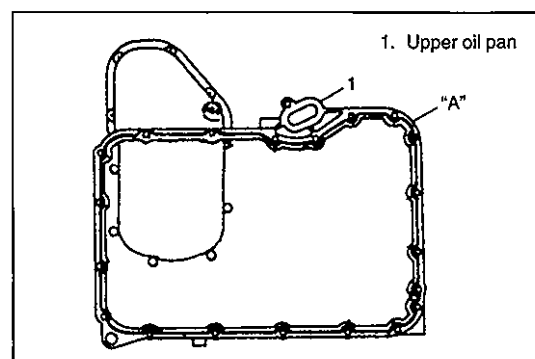

- 3) Apply sealant "A" to upper oil pan sealing surface area as shown in figure.


**"A": Sealant 99000-31150**

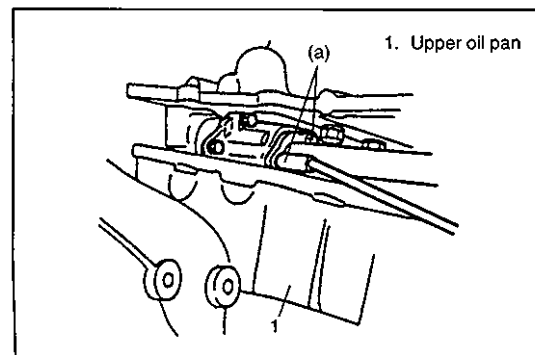

- 4) Place the upper oil pan on the cross member and suspension member (just beneath the lower crankcase). At this point install oil pump strainer.

## Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

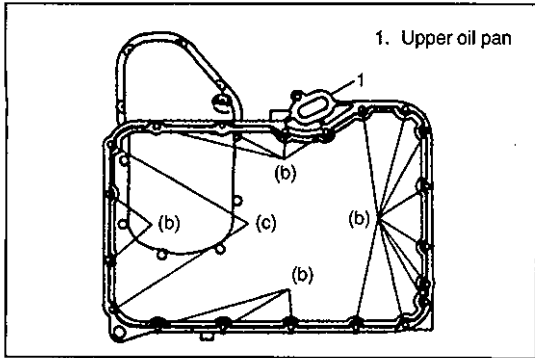


- 5) Install upper oil pan to lower crankcase.

**Tightening Torque**

(b): 11.0 N·m (1.1 kg-m, 8.0 lb-ft)


(c): 27.0 N·m (2.7 kg-m, 19.5 lb-ft)

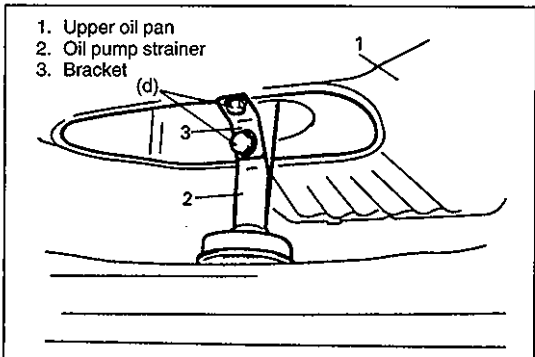

- 6) Install bracket to oil pump strainer and upper oil pan.

**Tightening Torque**

(d): 11 N·m (1.1 kg-m, 8.0 lb-ft)

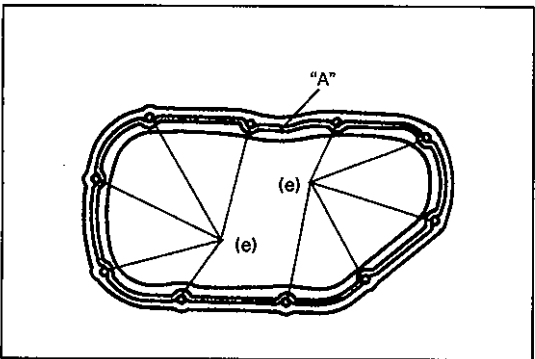


- 7) Apply sealant "A" to lower oil pan sealing surface area as shown in figure.

**"A": Sealant 99000-31150**

- 8) Install lower oil pan to upper oil pan.

**Tightening Torque**

(e): 11 N·m (1.1 kg-m, 8.0 lb-ft)

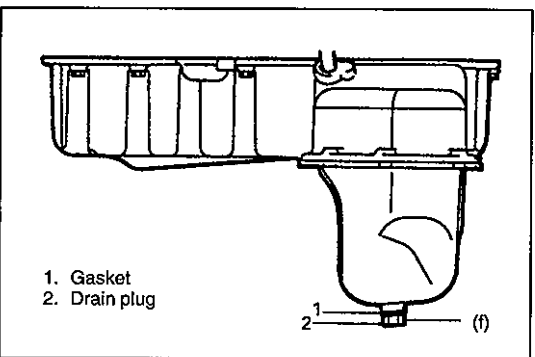

- 9) Install gasket and drain plug to oil pan.

**Tightening Torque**

(f): 35.0 N·m (3.5 kg-m, 25.5 lb-ft)

- 10) Attach radiator outlet pipe to upper oil pan.

- 11) Install front differential housing according to installation procedure described in Section 7E.

- 12) Install rack and pinion assembly.


Refer to Section 3B1 for installation.

- 13) Refill front differential housing with gear oil, referring to Section 7E.

- 14) Install oil level gauge guide with new O-ring.

- 15) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in Section 0B.

- 16) Check wheel alignment, referring to SECTION 3.

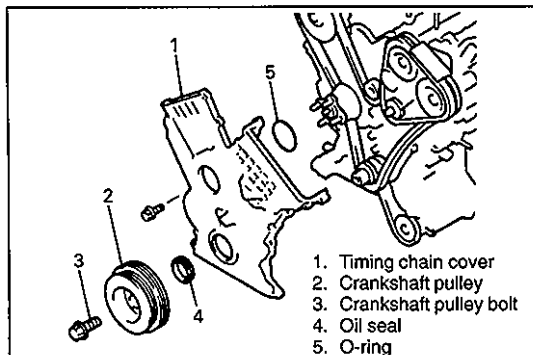

## TIMING CHAIN COVER

### REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove throttle body and intake manifold.  
Refer to item "THROTTLE BODY AND INTAKE MANIFOLD" in this section for removal.
- 5) Remove cylinder head covers.  
Refer to item "CYLINDER HEAD COVER" in this section for removal.
- 6) Remove cooling fan, fan clutch and water pump pulley.  
Refer to Section 6B for removal.
- 7) Remove radiator.  
Refer to Section 6B for removal.
- 8) Remove thermostat cap.  
Refer to Section 6B for removal.
- 9) Remove P/S pump (A/C compressor) drive belt.  
Refer to Section 3B1 for removal.
- 10) Remove water pump drive belt.  
Refer to Section 6B for removal.
- 11) Remove P/S pump and P/S pump bracket.  
Refer to Section 3B1 for removal.
- 12) Raise vehicle.
- 13) Remove oil pan.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 14) Remove crankshaft pulley bolt.  
To lock crankshaft pulley, use special tool (camshaft pulley holder) as shown in figure.  
**Special Tool**  
**(A): 09917-68221**

#### CAUTION:


Be sure to use the following bolt for fixing special tool to crankshaft pulley.



**Bolt size: M8, P1.25  $l = 45$  mm**  
**Strength: 7T**

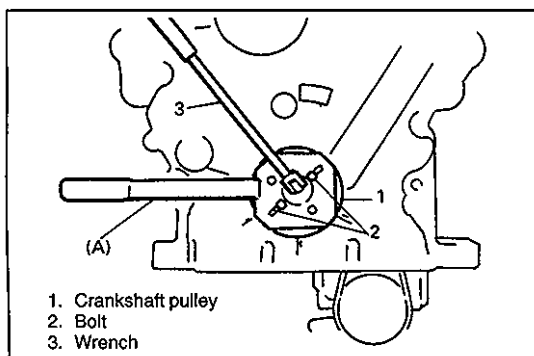

1. Crankshaft pulley
2. Bolt
3. Wrench

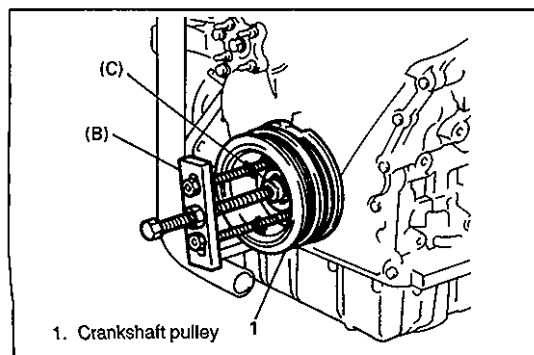

1. Crankshaft pulley

- 15) Remove crankshaft pulley.  
To remove crankshaft pulley, use special tools (Steering wheel remover, Bearing puller attachment) as shown in figure.


#### Special Tool

**(B): 09944-36011**

**(C): 09926-58010**


- 16) Remove timing chain cover.



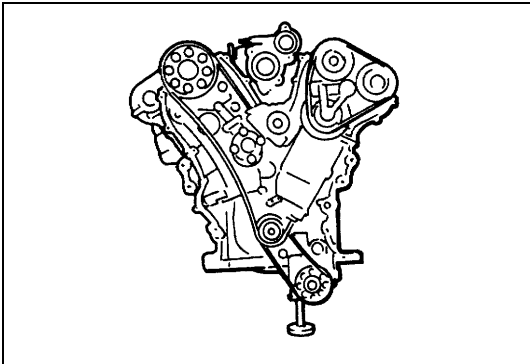

**CLEAN**

Clean sealing surface on timing chain cover, crankcase, cylinder block and cylinder heads.  
Remove oil, old sealant, and dust from sealing surface.

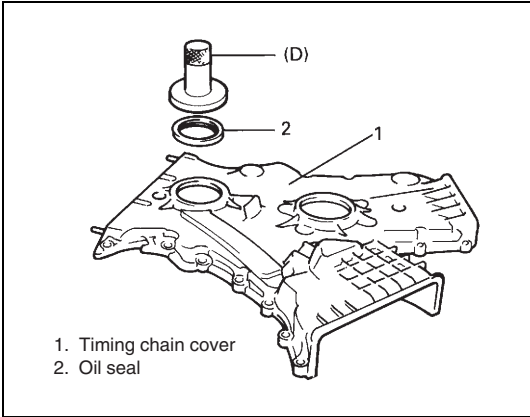


**INSPECTION**

Check oil seal lip for damages or deterioration.  
Replace as necessary.

**NOTE:**

When installing new oil seal, top it in until its surface is flash with edge of timing chain cover.  
To install oil seal, use special tool (bearing installer).

**Special tool**  
**(D): 09913-75510**

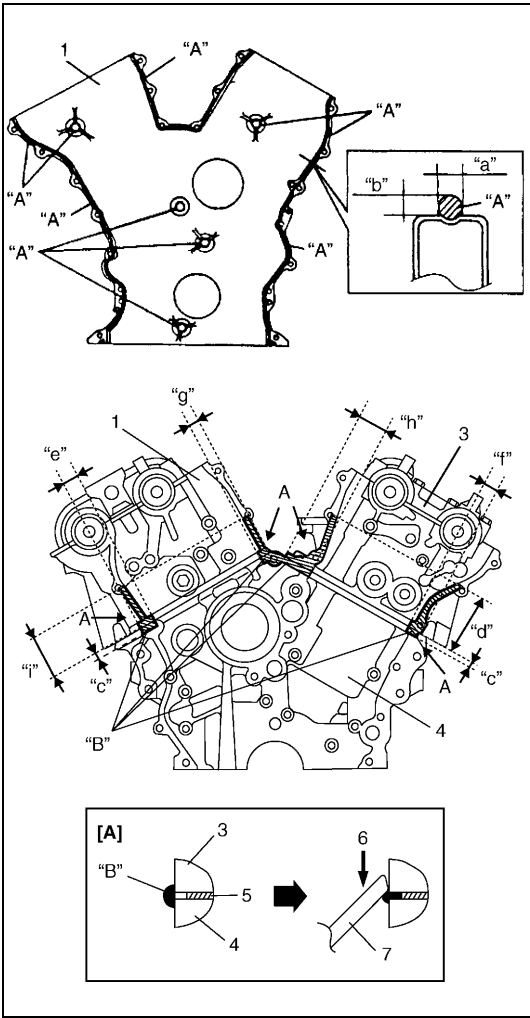


**INSTALLTION**

Reverse removal sequence to install timing chain cover noting following points.

- 1) Apply sealant “A” to timing chain cover (1) sealing surface area as shown in figure.  
**“A”: Sealant 99000-31250**  
2) Apply sealant “B” to mating surfaces of cylinder head (3) and cylinder block (4) as shown.  
**“B”: Sealant 99000-31140**  
3) Apply engine oil to oil seal lip and water pump O-ring, then install timing chain cover.

**Tightening torque**  
**Timing chain cover bolt: 11 N·m (1.1 kg·m, 7.5 lb·ft)**

“a”:	3 mm (0.12 in.)
“b”:	2 mm (0.08 in.)
“c”:	7 mm (0.28 in.)
“d”:	67 mm (2.64 in.)
“e”:	17 mm (0.67 in.)
“f”:	18 mm (0.71 in.)
“g”:	10 mm (0.39 in.)
“h”:	34 mm (1.34 in.)
“i”:	50 mm (1.97 in.)
5.	Cylinder head gasket
6.	Rub into
7.	Jig
[A]:	View A

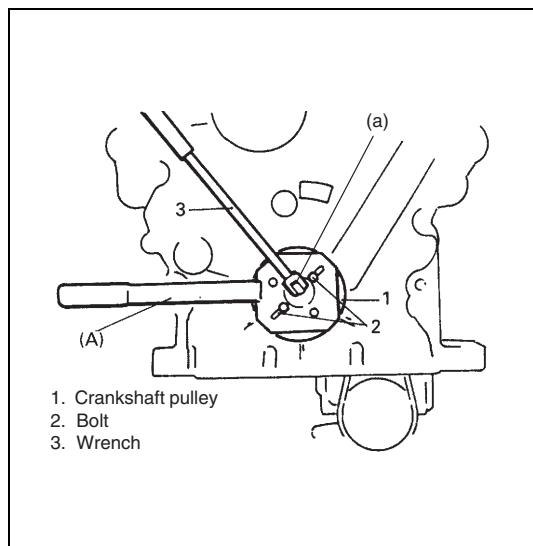

#### 4) Install crankshaft pulley.


To lock crankshaft pulley, use special tool (camshaft pulley holder) with it at shown in figure.

#### Special tool

(A): 09917-68221

#### CAUTION:

Be sure to use the following bolt for fixing special tool to crank pulley.



Bolt size: M8, P1.25  $l = 45$  mm

Strength: 7T



#### Tightening torque

(a): 150 N·m (15 kg-m, 108.5 lb-ft)

## OIL PUMP

### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove oil pan, oil pump strainer and timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section.
- 5) Loosen oil pump chain guide bolts.

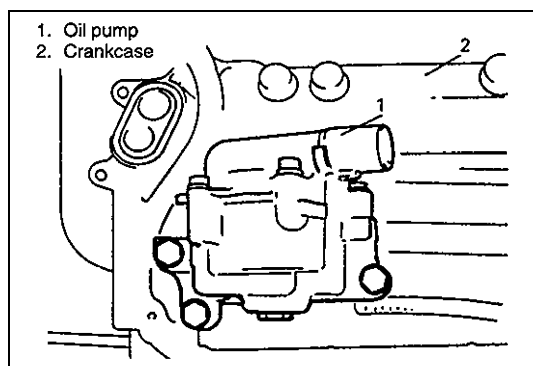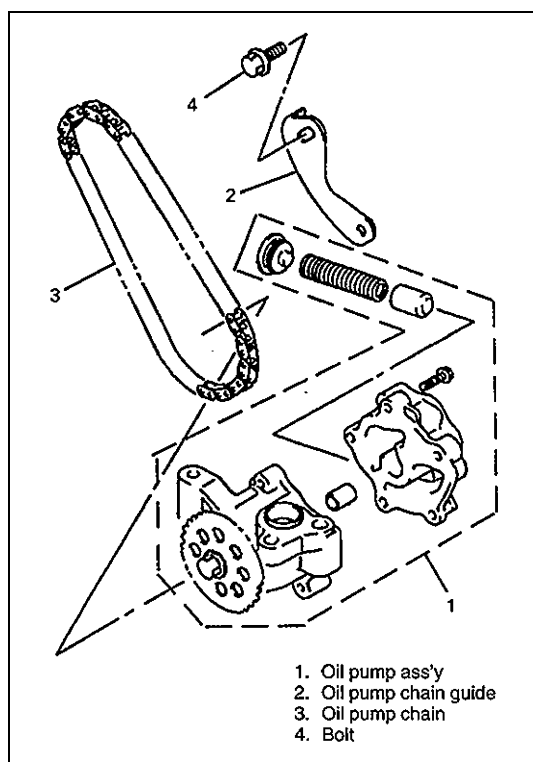


#### 6) Remove oil pump from crankcase.

#### CAUTION:

Do not remove oil pump sprocket or bolt.

Otherwise, oil pump sprocket and/or oil pump rotor shaft might be damaged.

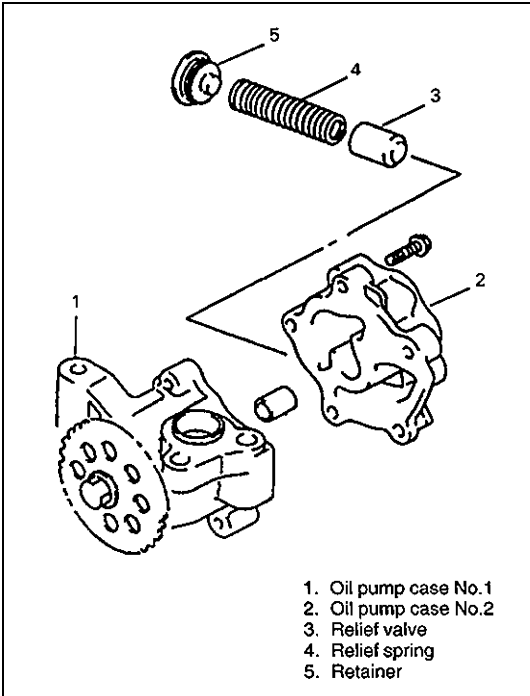


**DISASSEMBLY**

Disassemble oil pump as shown in figure.

**CAUTION:**  
**Do not remove oil pump sprocket or bolt.**  
**Otherwise, oil pump sprocket and/or oil pump rotor shaft might be damaged.**


**INSPECTION**

- Check outer rotor, inner rotor and oil pump cases for excessive wear or damage.
- Check relief valve for excessive wear or damage.

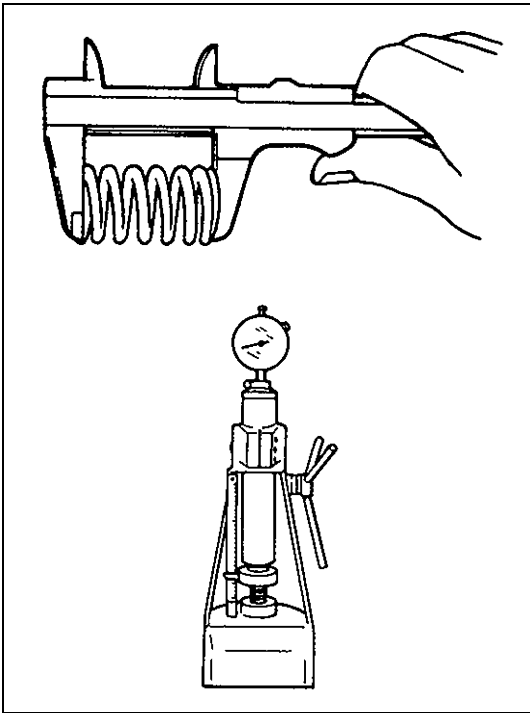

- Measure free length and tension of oil relief spring.

Item	Standard
Spring free length	63.5 mm (2.5 in.)
Spring preload	86.0 N for 52.0 mm (8.6 kg for 52.0 mm 62.2 lb/ 2.05 in.)

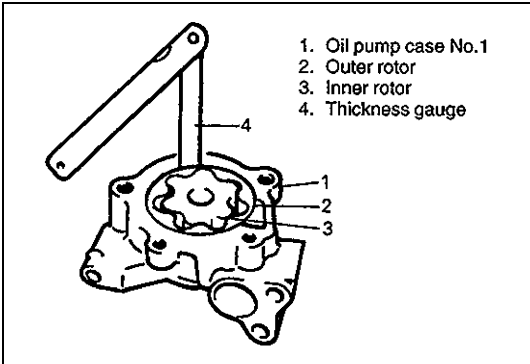


- Measure clearance of oil pump rotor and oil pump case.

**Radial Clearance**

Check radial clearance between outer rotor and case, using thickness gauge.

If clearance exceeds its limit, replace oil pump assembly.

**Limit on radial clearance between  
outer rotor and case: 0.15 mm (0.0059 in.)**

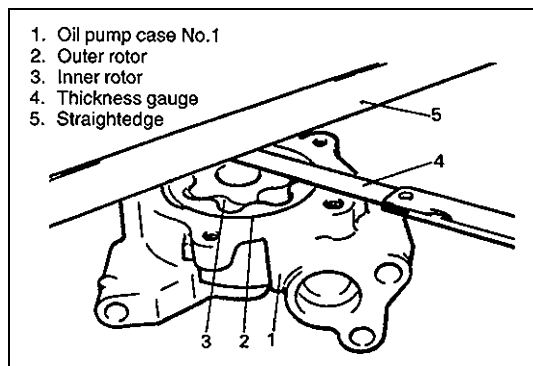

### Side Clearance

Using straightedge and thickness gauge, measure side clearance.

If clearance exceeds its limit, replace oil pump assembly.


**Limit on side clearance: 0.11 mm (0.0043 in.)**

### ASSEMBLY

- 1) Wash, clean and then dry all disassembled parts.
- 2) Apply thin coat of engine oil to inner and outer rotors, and inside surfaces of oil pump case.
- 3) Assemble oil pump. After assembling oil pump check to be sure that rotor turns smoothly by hand.

#### Tightening torque

**(a): 12.0 N·m (1.2 kg-m, 8.5 lb-ft)**


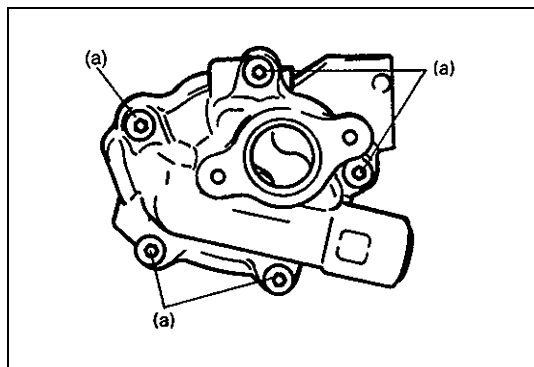


### INSTALLATION

- 1) Install oil pump to crankcase.

#### Tightening torque

**(c), (d): 27.0 N·m (2.7 kg-m, 19.5 lb-ft)**

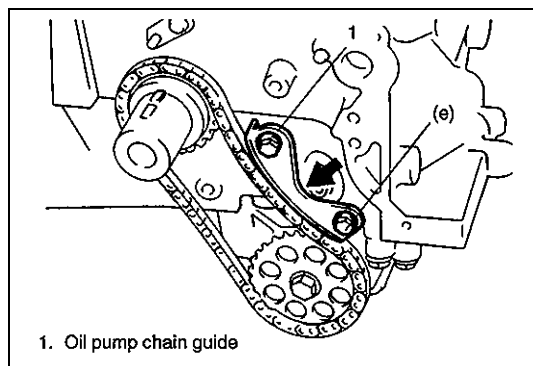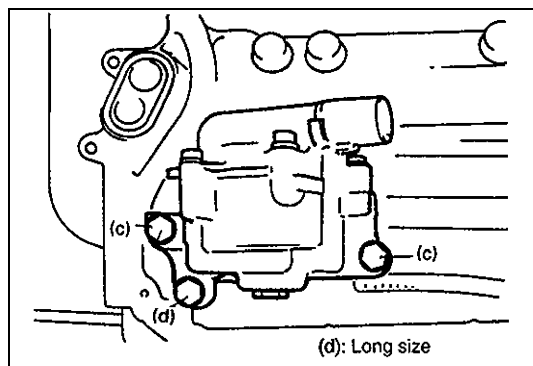

- 2) Hand-tighten oil pump chain guide bolts.
- 3) To take up slack of oil pump chain, push center of oil pump chain guide with a force of 0.5 to 0.6 N (50 – 60 g, 0.11 – 0.13 lb) then tighten oil pump chain guide bolts to specified torque.



#### Tightening torque

**(e): 11 N·m (1.1 kg-m, 7.5 lb-ft)**

- 4) Install timing chain cover, oil pump strainer and oil pan.  
Refer to item "TIMING CHAIN COVER" in this section.

## LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER

1. LH bank 2nd timing chain
2. Timing chain tensioner adjuster No.3
3. LH bank intake camshaft sprocket
4. LH bank exhaust camshaft sprocket
5. Camshaft sprocket bolt
6. Timing chain guide No.4
7. Timing chain guide No.5
8. Idler sprocket No.2

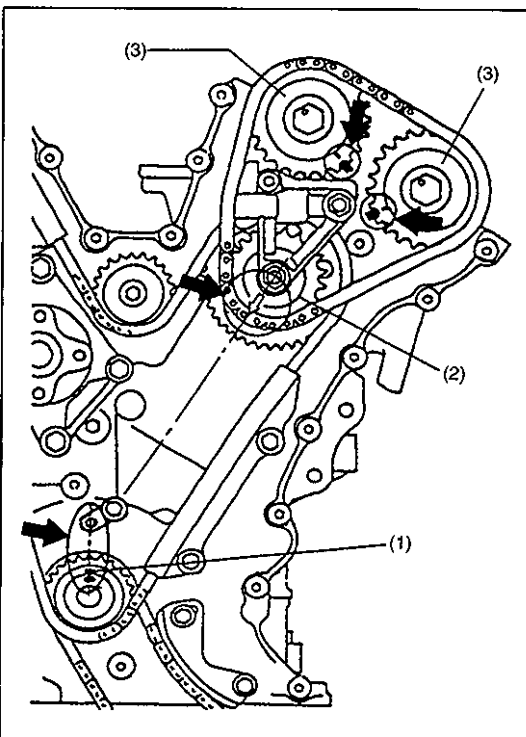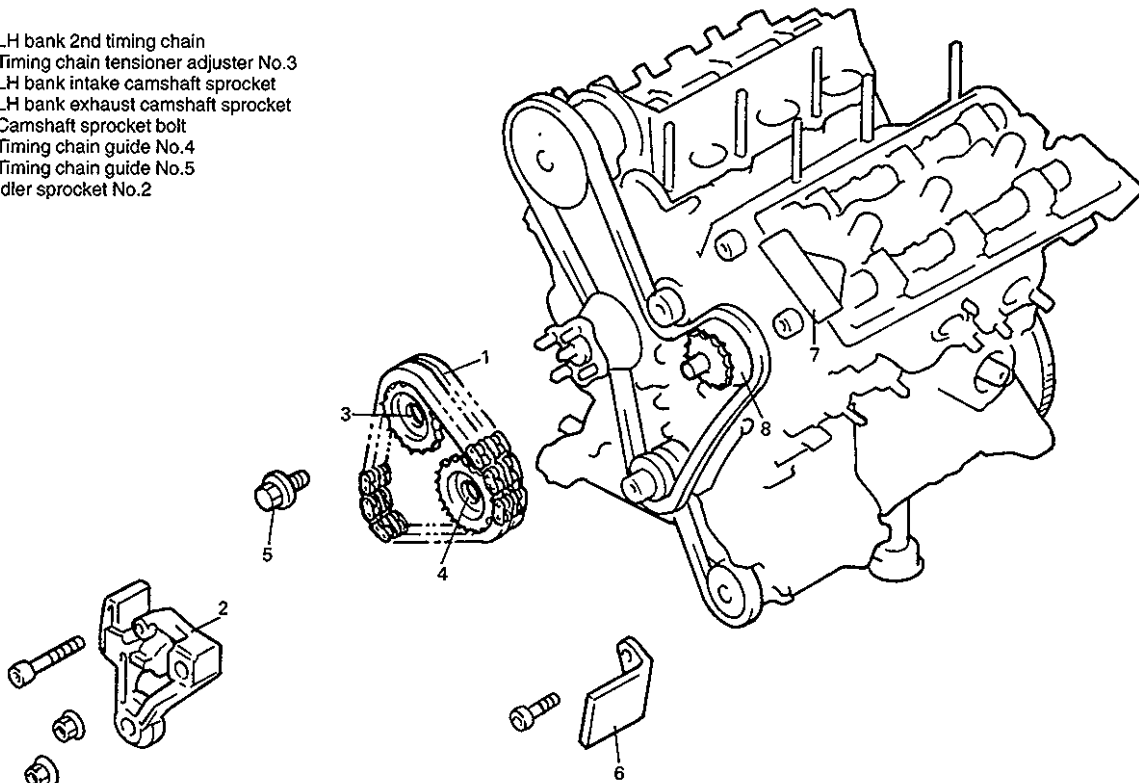

### REMOVAL

1) Disconnect negative cable at battery.

2) Drain engine oil.

3) Drain coolant.

4) Remove timing chain cover.

Refer to item "TIMING CHAIN COVER" in this section for removal.


5) Turn crankshaft to meet following condition.

• Key (1) on crankshaft positions as shown.

• Arrow mark on idler sprocket No.2 (2) points the center of crankshaft.


• The marks on sprockets (3) match with marks on cylinder head.

Note that this step must be followed for reinstallation of timing chain.

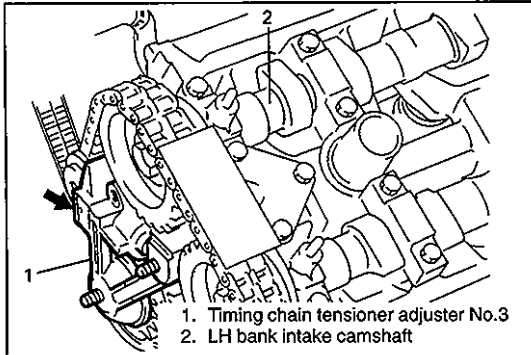


- 6) Remove timing chain tensioner adjuster No.3.

To remove it, slacken LH bank 2nd timing chain by turning intake camshaft counterclockwise a little while pushing back pad.

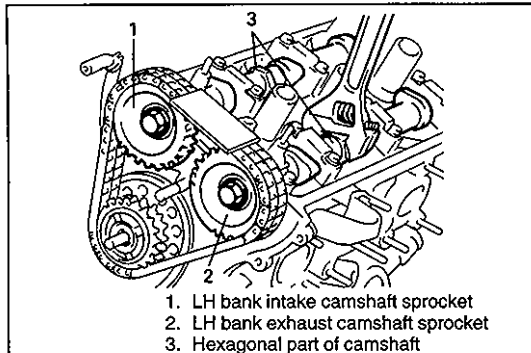

- 7) Remove LH bank intake and exhaust camshaft sprocket bolts.  
To remove it, fit a spanner to hexagonal part at the center of camshaft to hold it stationary.

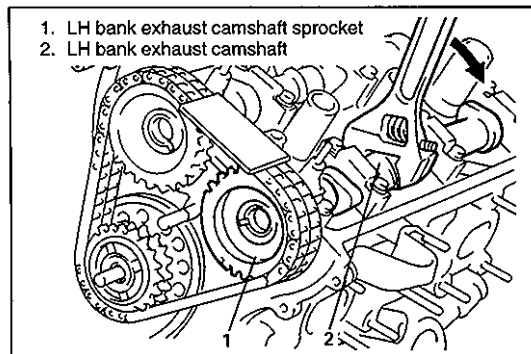


- 8) Remove LH bank exhaust camshaft sprocket.

**CAUTION:**

Removing sprocket from camshaft may cause cam to turn, resulting in damage to valve and piston. To prevent this, when removing sprocket, hold camshaft stationary by using a spanner at its hexagonal part.

- 9) Remove LH bank intake camshaft sprocket.


- 10) Remove LH bank 2nd timing chain.

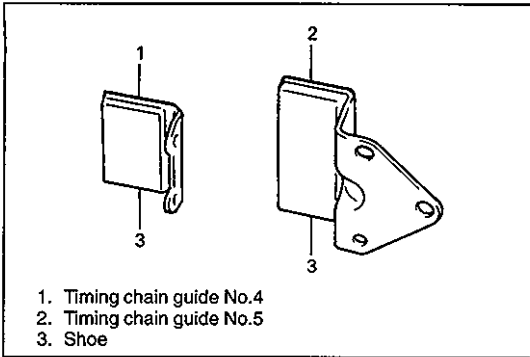

## INSPECTION


### Timing chain guide No.4 and No.5

Check shoe for wear or damage.

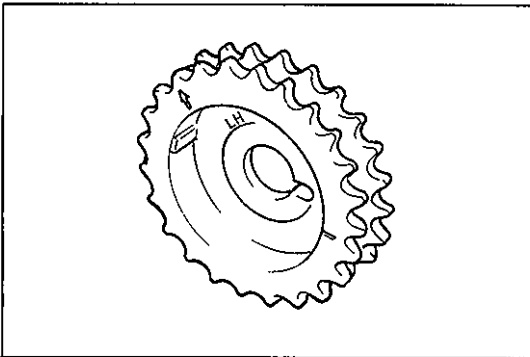


### Camshaft sprocket

Check teeth of sprocket for wear or damage.

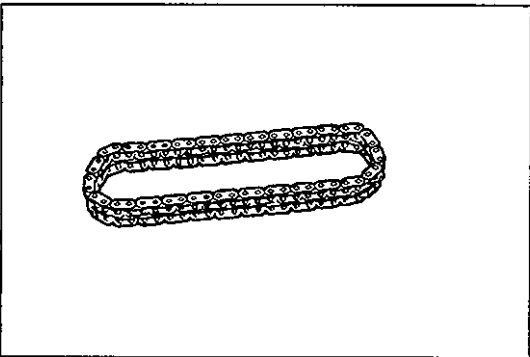


### Timing chain

Check timing chain for wear or damage.

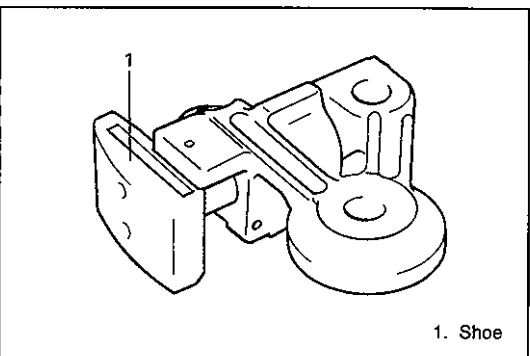


### Tensioner adjuster No.3

● Check shoe for wear or damage.

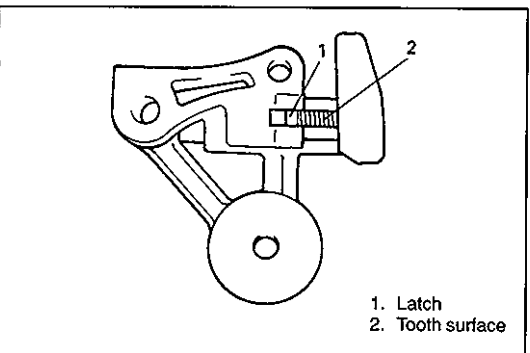


● Check that latch and tooth surface are free from damage and latch functions properly.

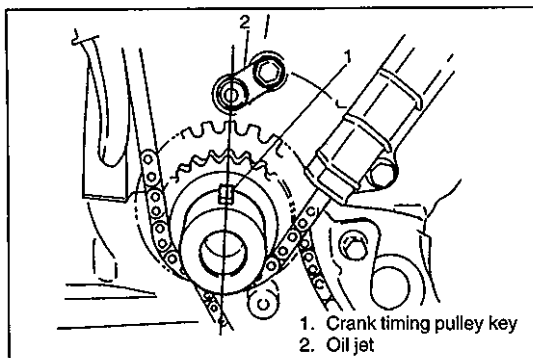


## INSTALLATION

1) Check timing mark on crankshaft as shown in figure.

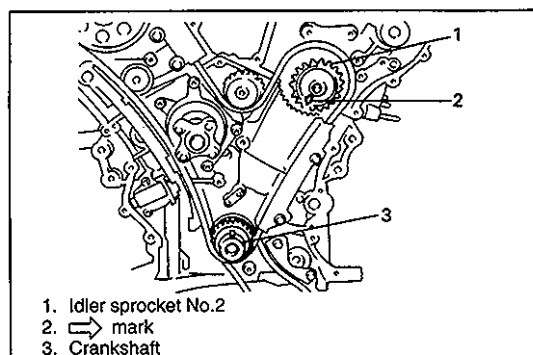


2) Check timing mark on idler sprocket No.2 as shown in figure.

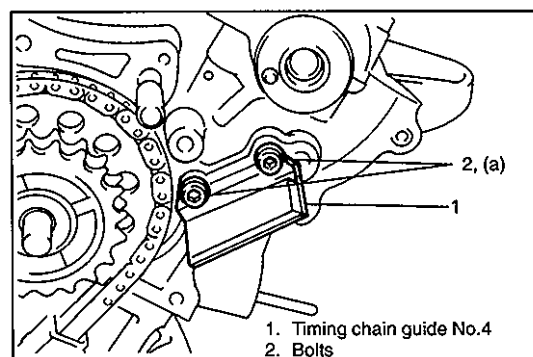


3) Install timing chain guide No.4.

### Tightening Torque

(a): 11 N·m (1.1 kg-m, 7.5 lb-ft)

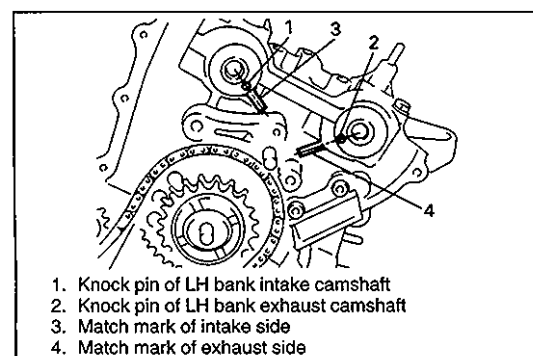


4) Check that knock-pins of intake and exhaust camshafts are aligned with match marks on cylinder head as shown in figure.

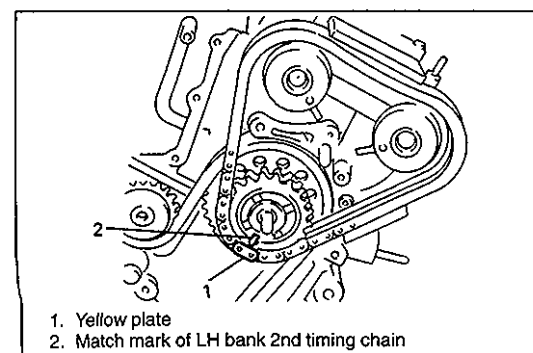

5) Install by aligning match marks on yellow plate of LH bank 2nd timing chain and idler sprocket No.2.



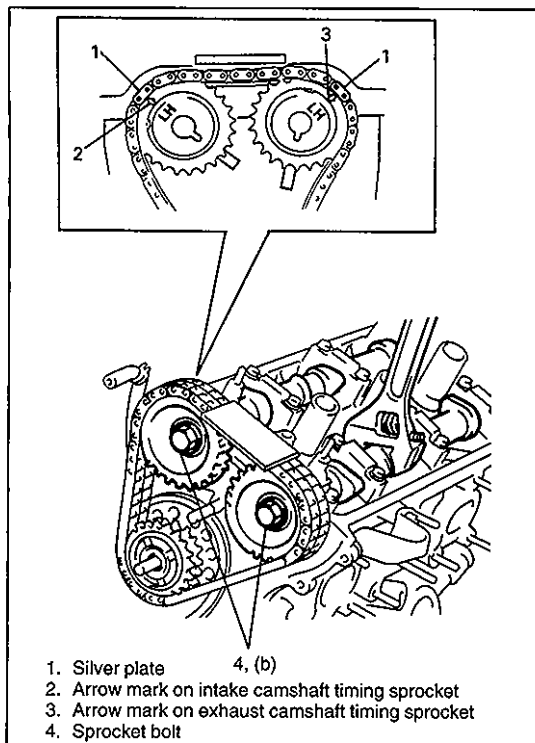

- 6) Install sprockets to intake and exhaust camshafts by aligning silver plate of LH bank 2nd timing chain, match marks on intake sprocket and exhaust sprocket respectively.

**CAUTION:**


**Do not turn camshaft more than necessary.**

**If turned excessively, valve and piston may get damaged.**


- 7) Install LH bank intake and exhaust camshaft timing sprockets. To install it, fit a spanner to hexagonal part at the center of camshaft to hold stationary.

**Tightening Torque**

**(b): 80 N·m (8.0 kg-m, 57.5 lb-ft)**

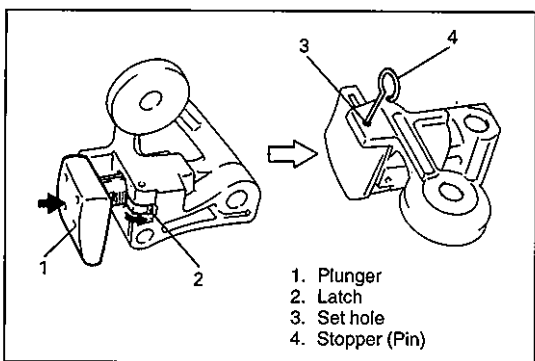

- 8) With latch of tensioner adjuster No.3 returned and plunger pushed back into body, insert stopper (pin) into set hole. After inserting it, check to make sure that plunger will not come out.

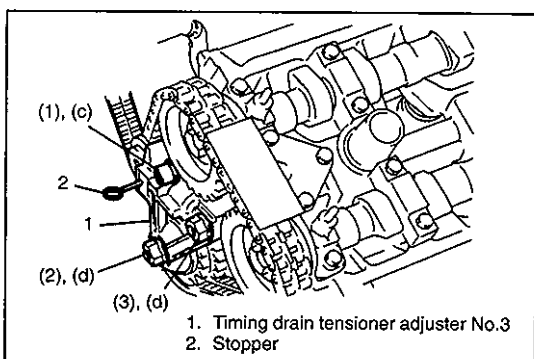

- 9) Install timing chain tensioner adjuster No.3.

**Tightening Torque**

**(c): 25 N·m (2.5 kg-m, 18.0 lb-ft)**


**(d): 45 N·m (4.5 kg-m, 32.5 lb-ft)**

**Tightening order: (1) → (2) → (3)**

- 10) Pull out stopper (pin) from set hole.

- 11) Turn crankshaft two rotations clockwise then align timing mark on crankshaft and timing mark on cylinder block as shown in figure.


Check each other timing marks that align them shown in figure.

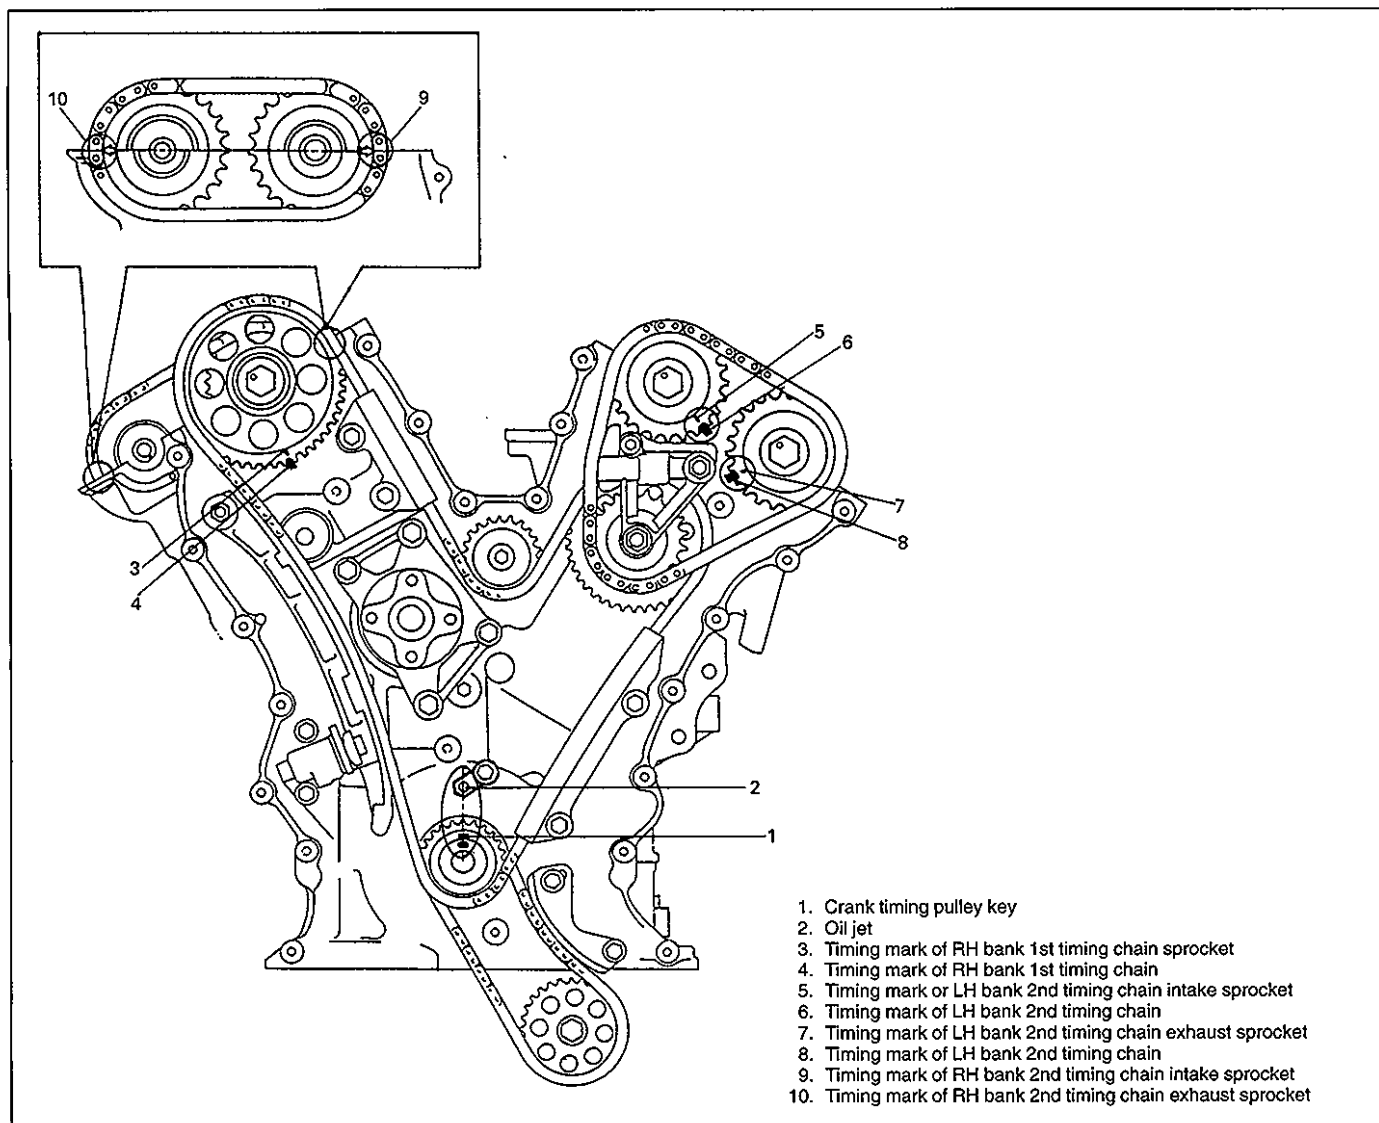

- 12) Apply oil to timing chains, tensioner adjusters sprockets, and guides.
- 13) Install timing chain cover, oil pan, front differential housing, P/S system, cooling system, intake manifold with throttle body and other parts.
- 14) Refill cooling system, P/S system, front differential and engine with each oil/fluid.
- 15) Check wheel alignment, referring to SECTION 3.
- 16) Verify that there is no fuel leakage, water leakage and oil leakage at each connection.

# 1ST TIMING CHAIN AND CHAIN TENSIONER


1. 1st timing chain
2. Timing chain tensioner adjuster No.1
3. RH bank 1st timing chain intake camshaft sprocket
4. 1st timing chain crankshaft sprocket
5. Idler sprocket No.2
6. Shaft
7. Idler sprocket No.1
8. Shaft
9. Washer
10. Timing chain tensioner
11. Timing chain guide No.1
12. Timing chain guide No.2

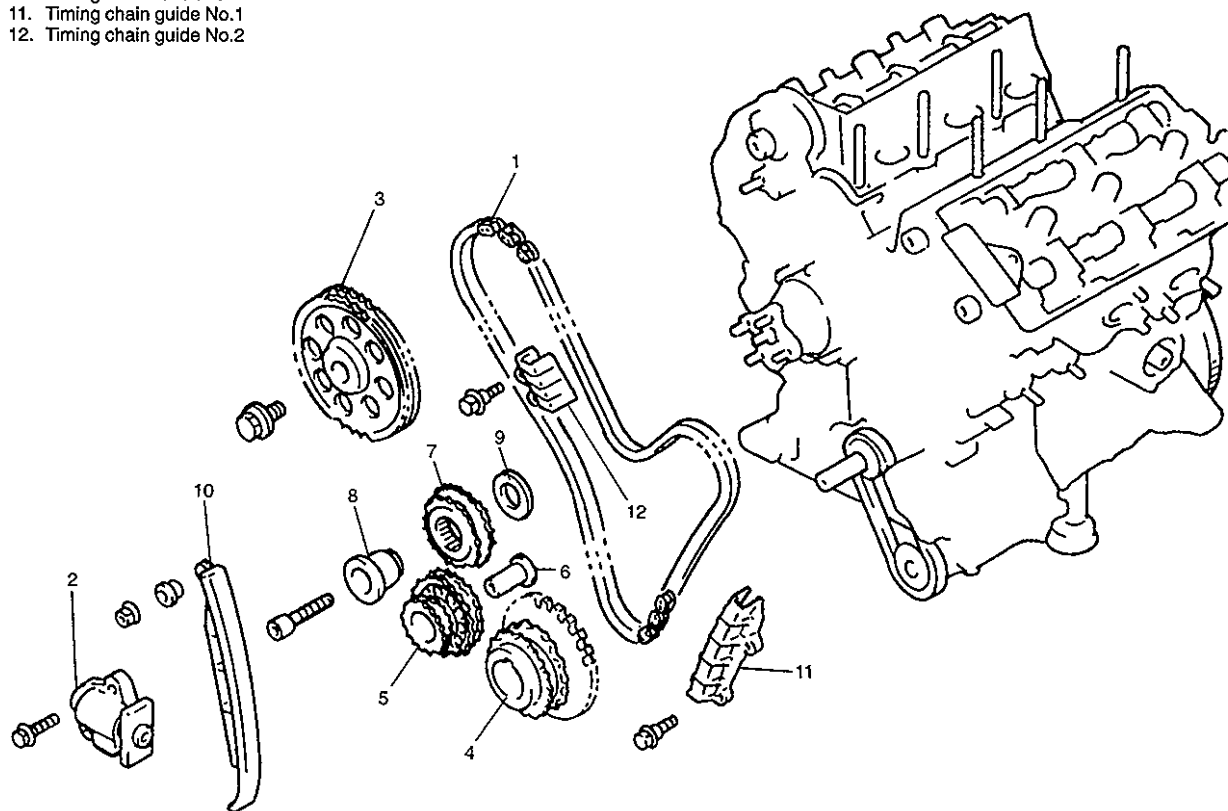

## REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove timing chain cover.

Refer to item "TIMING CHAIN COVER" in this section for removal.

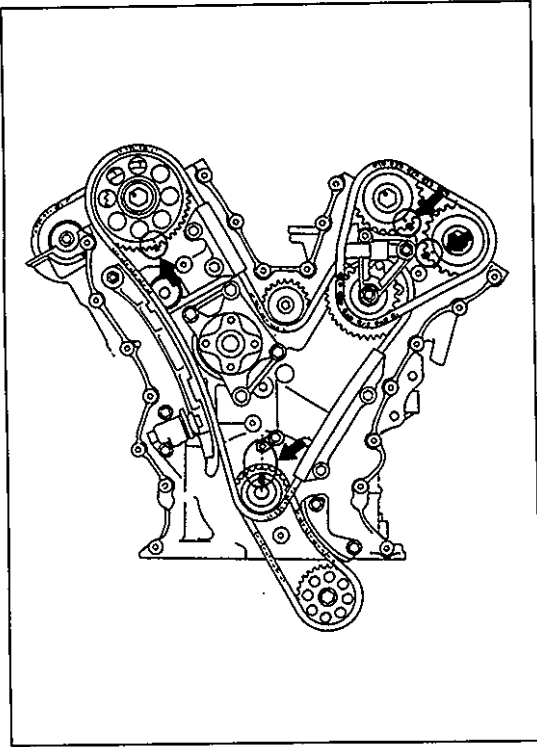


- 5) For reinstallation of timing chain, align 8 timing marks as shown in figure by turning crankshaft.
- 6) Remove LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.

- 7) Remove timing chain guide No.1.
- 8) Remove timing chain guide No.2.
- 9) Remove timing chain tensioner adjuster No.1.
- 10) Remove idler sprocket No.1 and 1st timing chain.
- 11) Remove idler sprocket No.2 and sprocket shaft.
- 12) Remove timing chain tensioner.

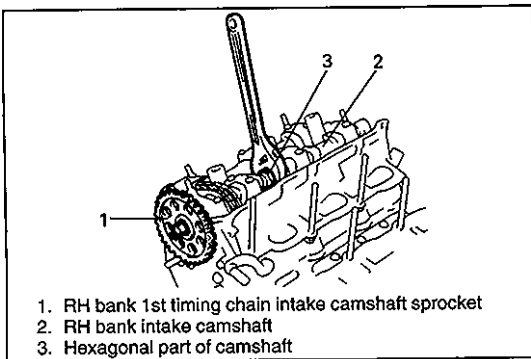

- 13) Remove RH bank 1st timing chain intake camshaft sprocket bolt. To remove it, fit a spanner to hexagonal part at the center of camshaft to hold it stationary.
- 14) Remove RH bank 1st timing chain intake camshaft sprocket.


- 15) Remove 1st timing chain crankshaft sprocket.

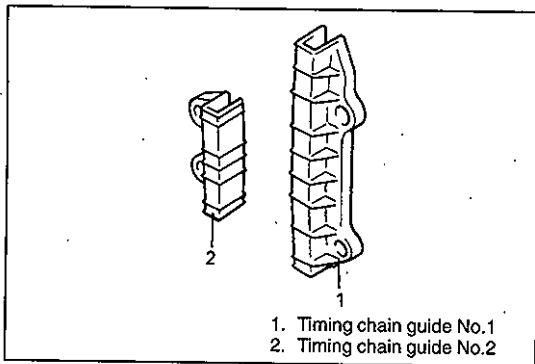

### INSPECTION


#### Timing chain guides No.1 and No.2

Check shoe for wear or damage.

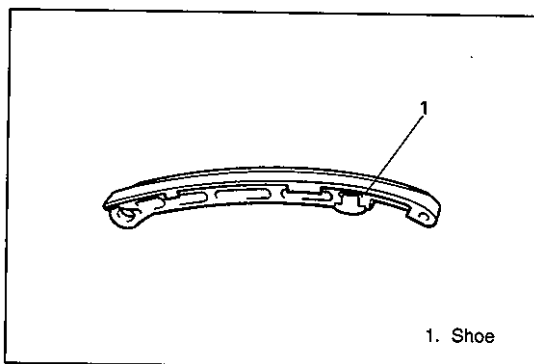


#### Timing chain tensioner

Check shoe for wear or damage.

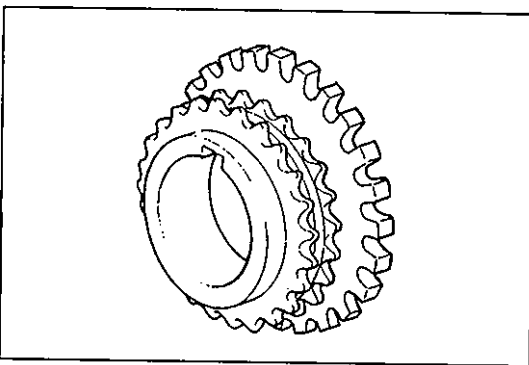


#### 1st timing chain crankshaft sprocket

Check teeth of sprocket for wear or damage.

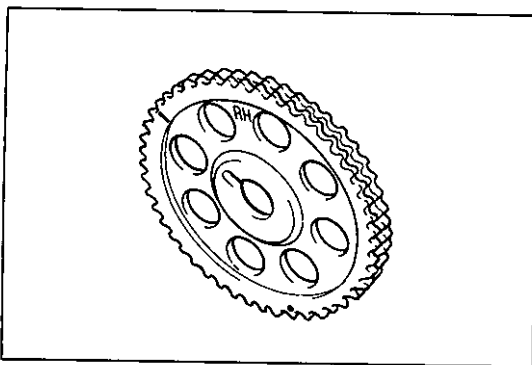


#### RH bank 1st timing chain intake camshaft sprocket

Check teeth of sprocket for wear or damage.

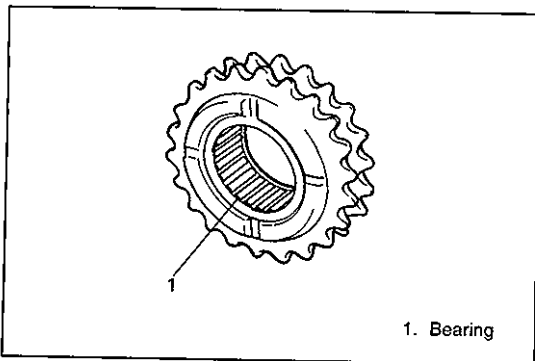


#### Idler sprocket No.1

Check teeth of sprocket for wear or damage.

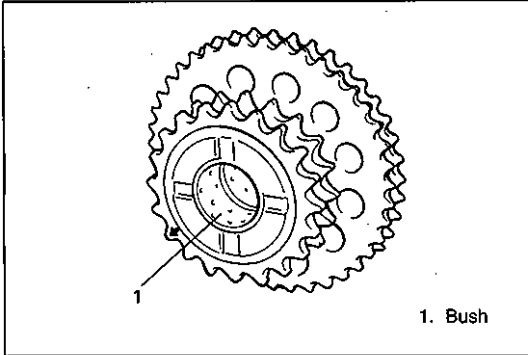


### Idler sprocket No.2

Check teeth of sprocket for wear or damage.

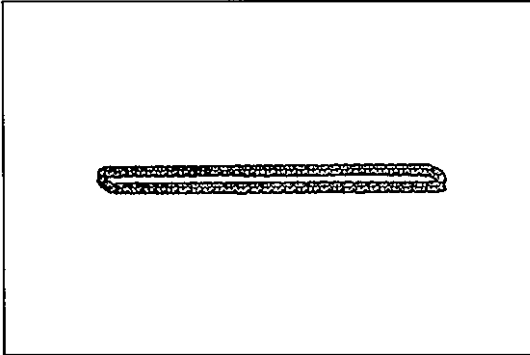


### 1st timing chain

Check timing chain for wear or damage.

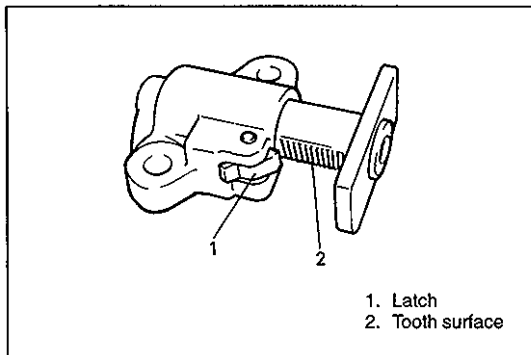


### Timing chain tensioner adjuster No.1

Check that latch and tooth surface are free from damage and latch functions properly.

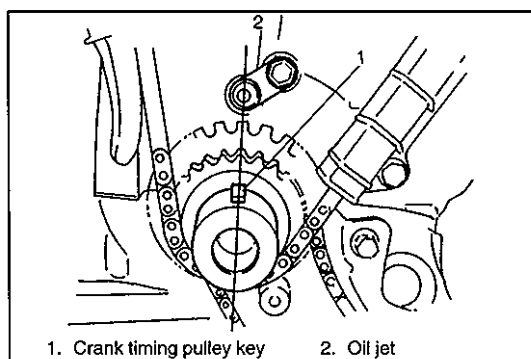


### INSTALLATION


1) Check timing mark on crankshaft as shown in figure.

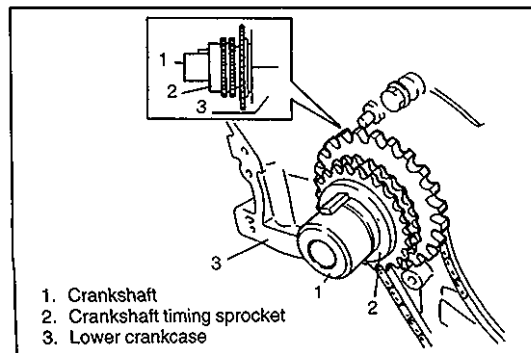

2) Install 1st timing chain crankshaft sprocket as shown in figure.

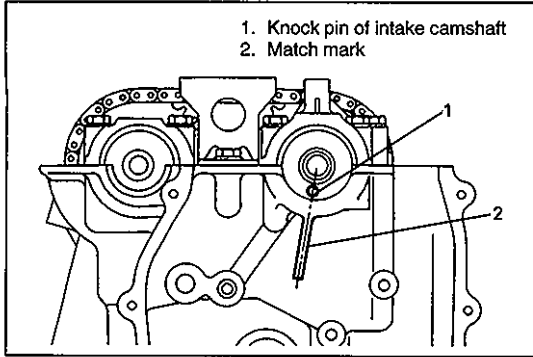

- 3) Check timing mark on RH bank intake camshaft as shown in figure.

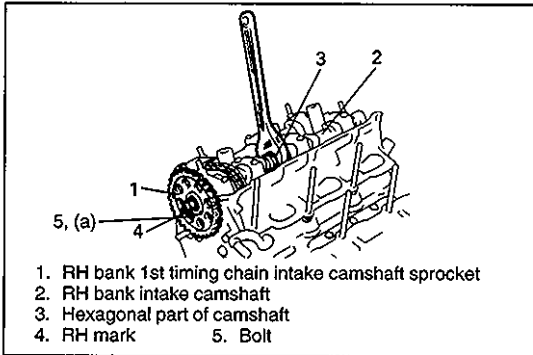


- 4) Install RH bank 1st timing chain intake camshaft sprocket noting following points.

- The sprocket should be set in such way that its RH mark can be seen.
- Camshaft should be held stationary by using a spanner at its hexagonal parts as shown in figure.

#### Tightening Torque


(a): 80 N·m (8.0 kg-m, 57.5 lb-ft)

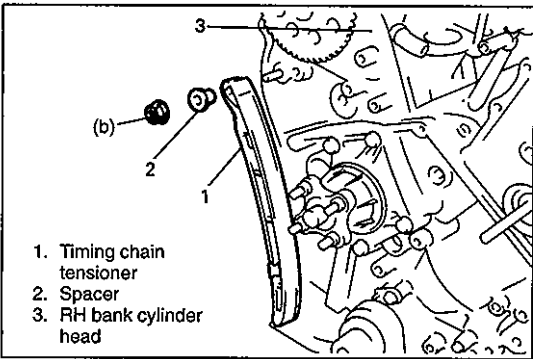

- 5) Install timing chain tensioner as shown in figure.

#### Tightening Torque


(b): 27 N·m (2.7 kg-m, 19.5 lb-ft)

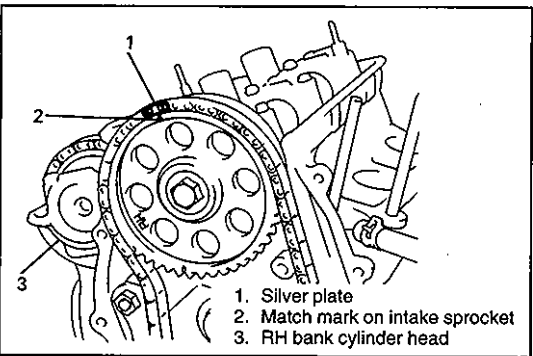


- 6) Install 1st timing chain by aligning match marks on RH silver plate of 1st timing chain and RH bank 1st timing chain intake camshaft sprocket.

- 7) Apply oil to bush of idler sprocket No.2.

- 8) Install idler sprocket No.2 and sprocket shaft.

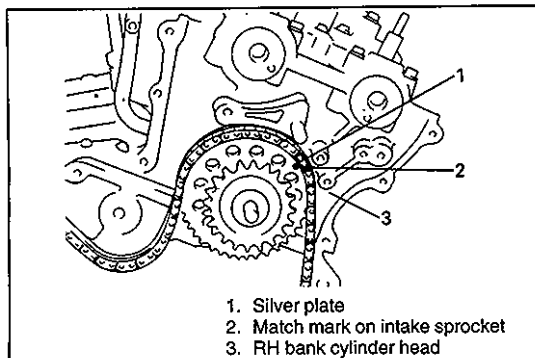

- 9) Install idler sprocket No.2 by aligning match marks on LH silver plate of 1st timing chain.

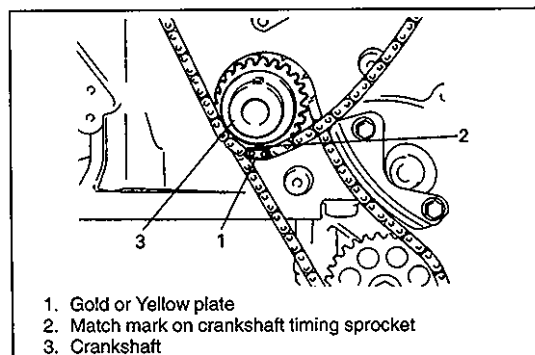


- 10) Install crankshaft sprocket by aligning match marks on gold or yellow plate of 1st timing chain and crankshaft timing sprocket. To install it, fit a spanner to hexagonal part at the center of RH bank intake camshaft to turn a little.

**CAUTION:**

**Do not turn camshaft more than necessary.**


**If turned excessively, valve and piston may get damaged.**

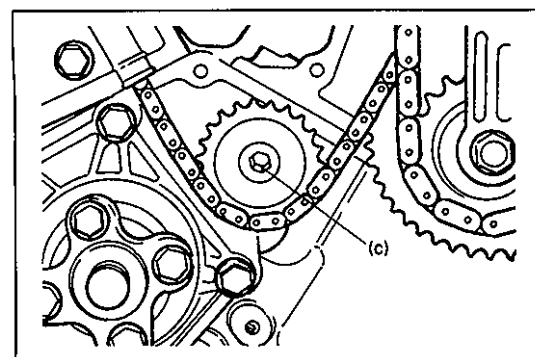


- 11) Apply oil to bearing of idler sprocket No.1.  
12) Install idler sprocket No.1.

**Tightening Torque**

**(c): 45 N·m (4.5 kg-m, 32.5 lb-ft)**

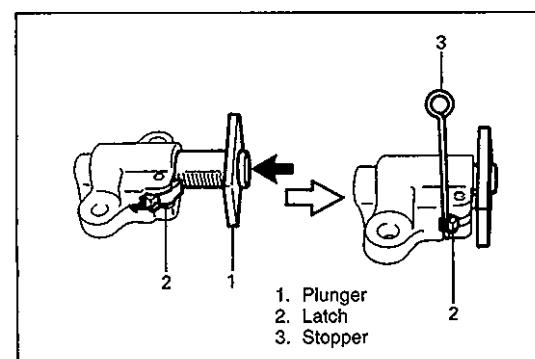

- 13) With latch of tensioner adjuster No.1 returned and plunger pushed back into body, insert stopper into latch and body. After inserting it, check to make sure that plunger will not come out.

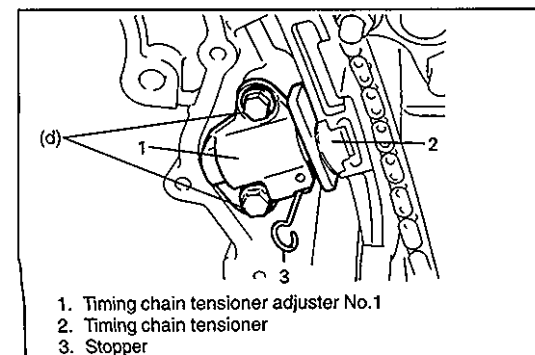

- 14) Install timing chain tensioner adjuster No.1.

**Tightening Torque**

**(d): 11 N·m (1.1 kg-m, 7.5 lb-ft)**


- 15) Pull out stopper from adjuster No.1.




16) Install timing chain guide No.1 and No.2.

**Tightening Torque**


**(e): 11 N·m (1.1 kg-m, 7.5 lb-ft)**

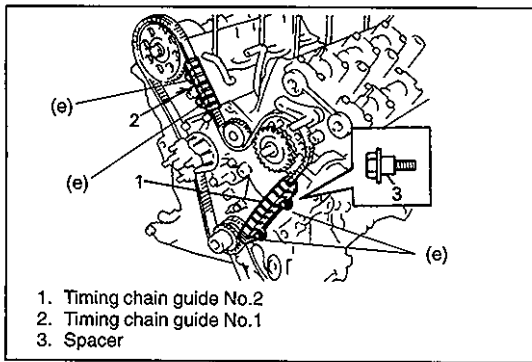


17) Check each aligned timing marks as shown in figure.

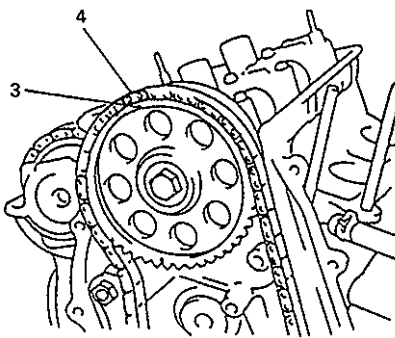


- 3. Match mark of RH bank 1st timing chain sprocket
- 4. Silver plate (LH) of 1st timing chain

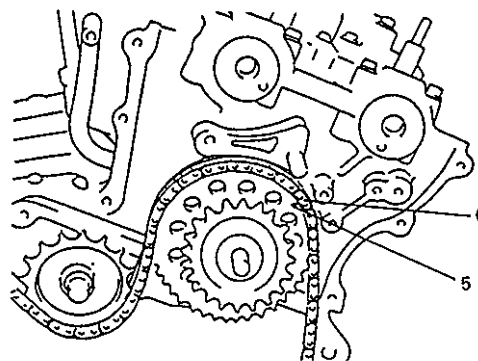

- 5. Match mark of idler sprocket No.2
- 6. Silver plate (RH) of 1st timing chain

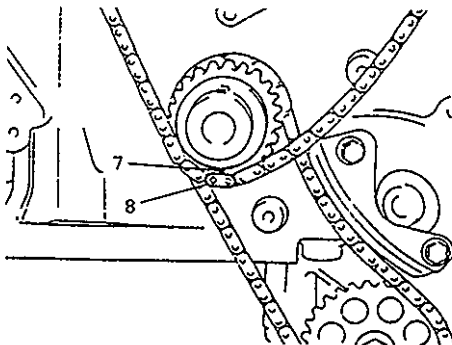


- 7. Match mark of crankshaft timing sprocket
- 8. Gold or Yellow plate of 1st timing chain

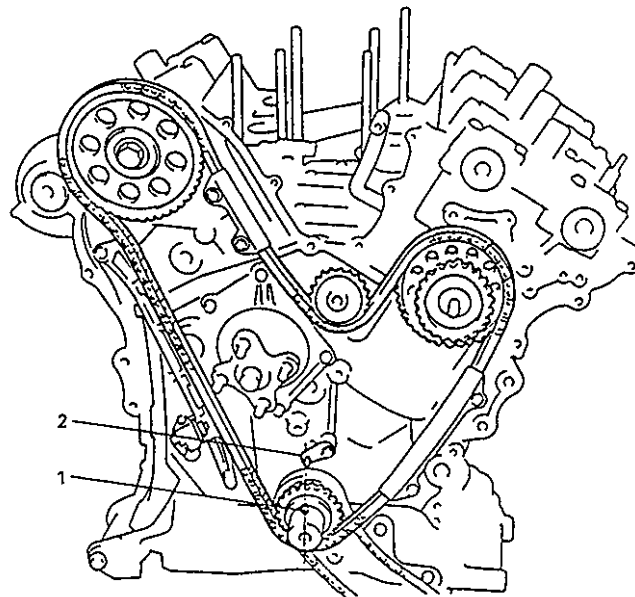

- 1. Crank timing pulley key
- 2. Oil jet


- 18) Install LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND TENSIONER" in this section for installation.
  
- 19) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 20) Install oil pan, front differential housing, P/S system, cooling system, intake manifold with throttle body and other parts.
- 21) Refill cooling system with coolant, front differential with gear oil, P/S system with specified fluid and engine with engine oil.
- 22) Check wheel alignment referring to SECTION 3.
- 23) Verify that there is no fuel leakage, water leakage and oil leakage at each connection.

## RH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER

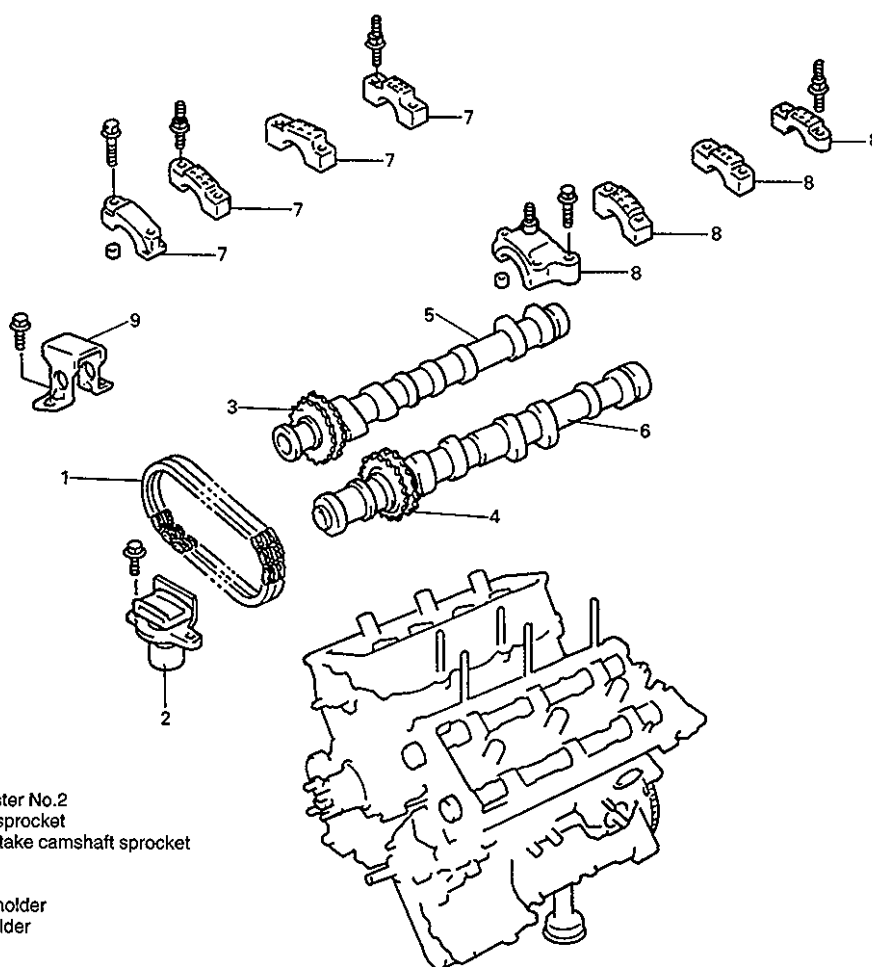


### REMOVAL

- 1) For reinstallation of timing chain, align 12 timing marks as shown in figure by turning crankshaft.

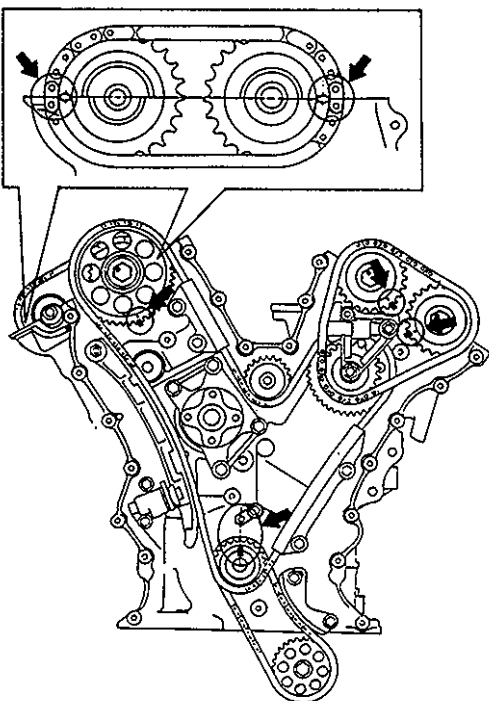


- 2) Remove LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.
- 3) Remove 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.
- 4) Remove timing chain guide No.3.

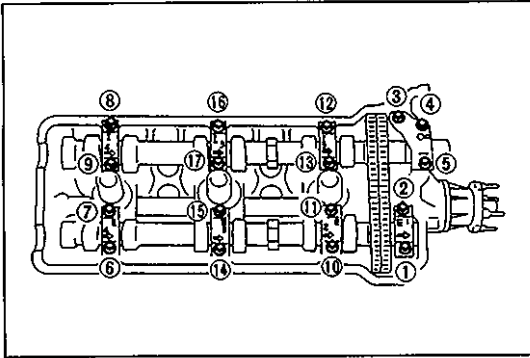

- 5) Loosen camshaft housing bolts in such order as indicated in figure and remove them.
- 6) Remove camshaft housings.

- 7) Remove RH bank intake camshaft, RH bank exhaust camshaft, and RH bank 2nd timing chain as a set.

- 8) Remove timing chain tensioner adjuster No.2.

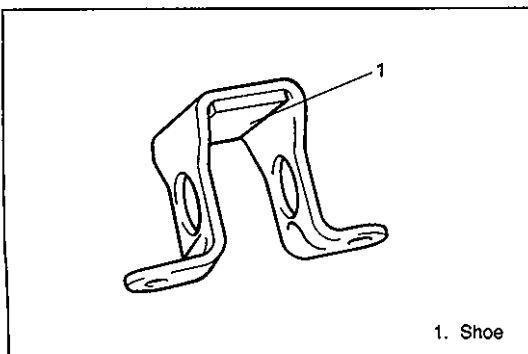


1. Shoe

## INSPECTION


### Timing chain guide No.3

Check shoe for wear or damage.

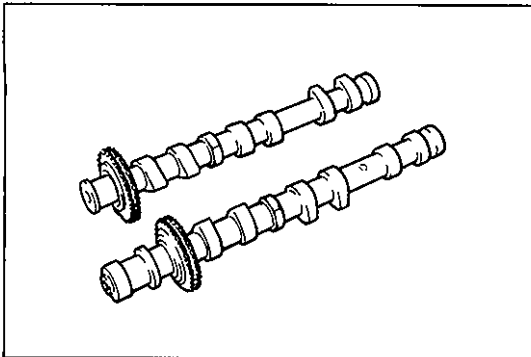


### RH bank 2nd timing chain sprockets

Check teeth of sprocket for wear or damage.

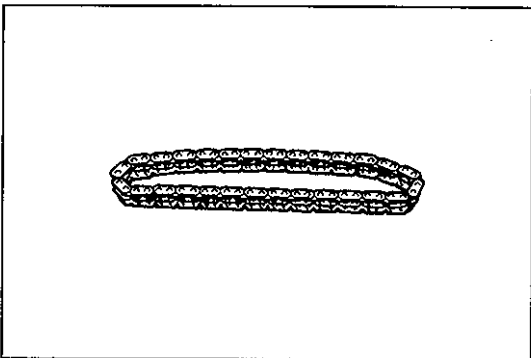


### RH bank 2nd timing chain

Check timing chain for wear or damage.

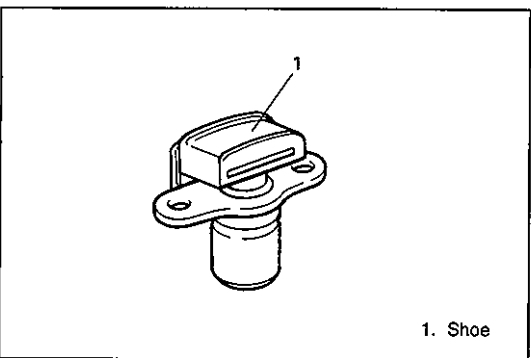


### Timing chain tensioner adjuster No.2

- Check shoe for wear or damage.
- Check that plunger slides smoothly.

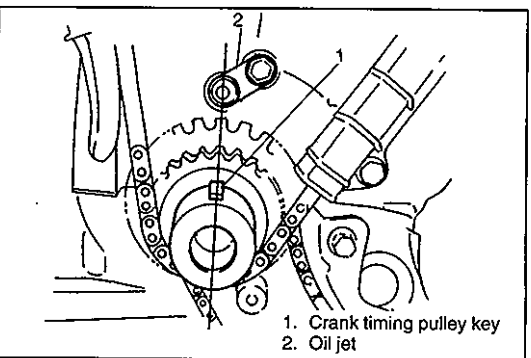

### INSTALLATION

- 1) Check timing mark on crankshaft as shown in figure.

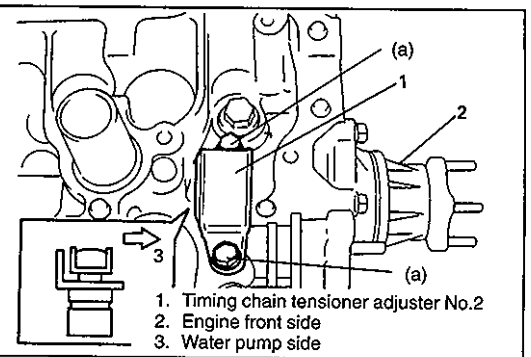


- 2) Apply oil to timing chain tensioner adjuster No.2.

- 3) Install timing chain tensioner adjuster No.2.


### Tightening Torque

(a): 11 N·m (1.1 kg-m, 7.5 lb-ft)


- 4) Apply oil to sliding surface of each camshafts and camshaft journals.

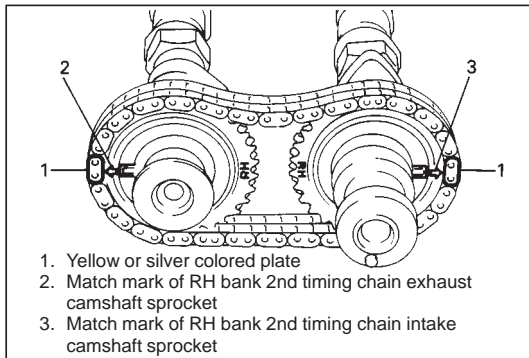

- 5) Install RH bank 2nd timing chain on camshaft sprockets by aligning match marks with the plates in silver or yellow color.

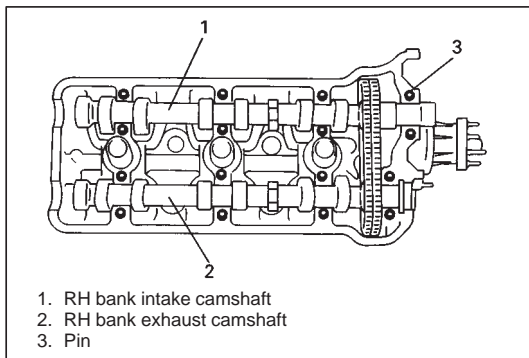


- 6) Install camshaft housing pins as shown in figure.

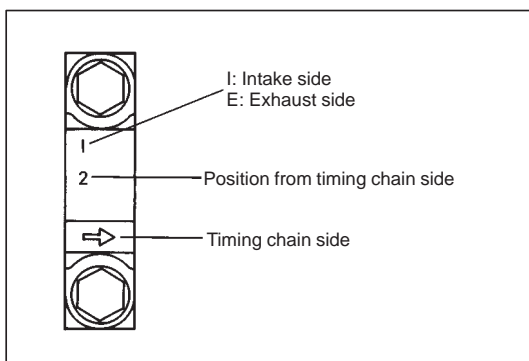


- 7) Check position of camshaft housings.

Embossed marks are provided on each camshaft housing, indicating position and direction for installation. Install housings as indicated by these marks.

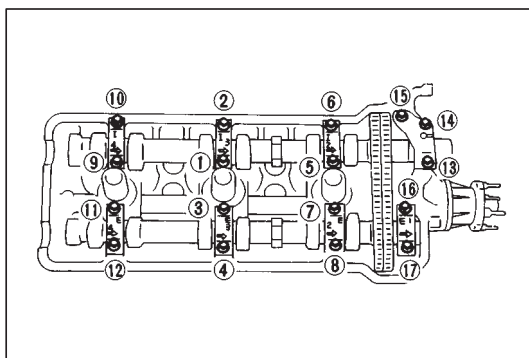

- 8) After applying oil to housing bolts, tighten them temporarily first. Then tighten them by following sequence as indicated in figure. Tighten a little at a time and evenly among bolts and repeat tightening sequence two or three times before they are tightened to specified torque below.

**Tightening Torque**  
12 N·m (1.2 kg-m, 8.5 lb-ft)

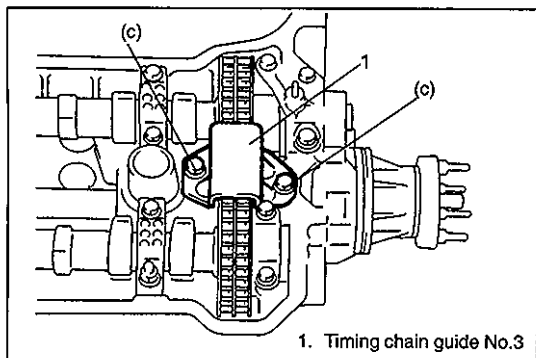


- 9) Install timing chain guide No.3.

### **Tightening Torque**

**(c): 11 N·m (1.1 kg-m, 7.5 lb-ft)**

- 10) Install 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 11) Install LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 12) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" for installation.
- 13) Install oil pan, front differential housing, P/S system, cooling system, intake manifold with throttle body and other parts.
- 14) Refill cooling system with coolant, front differential with gear oil, P/S system with specified fluid and engine with engine oil.
- 15) Check wheel alignment referring to SECTION 3.
- 16) Verify that there is no fuel leakage, water leakage and oil leakage at each connection.


## OIL PUMP CHAIN

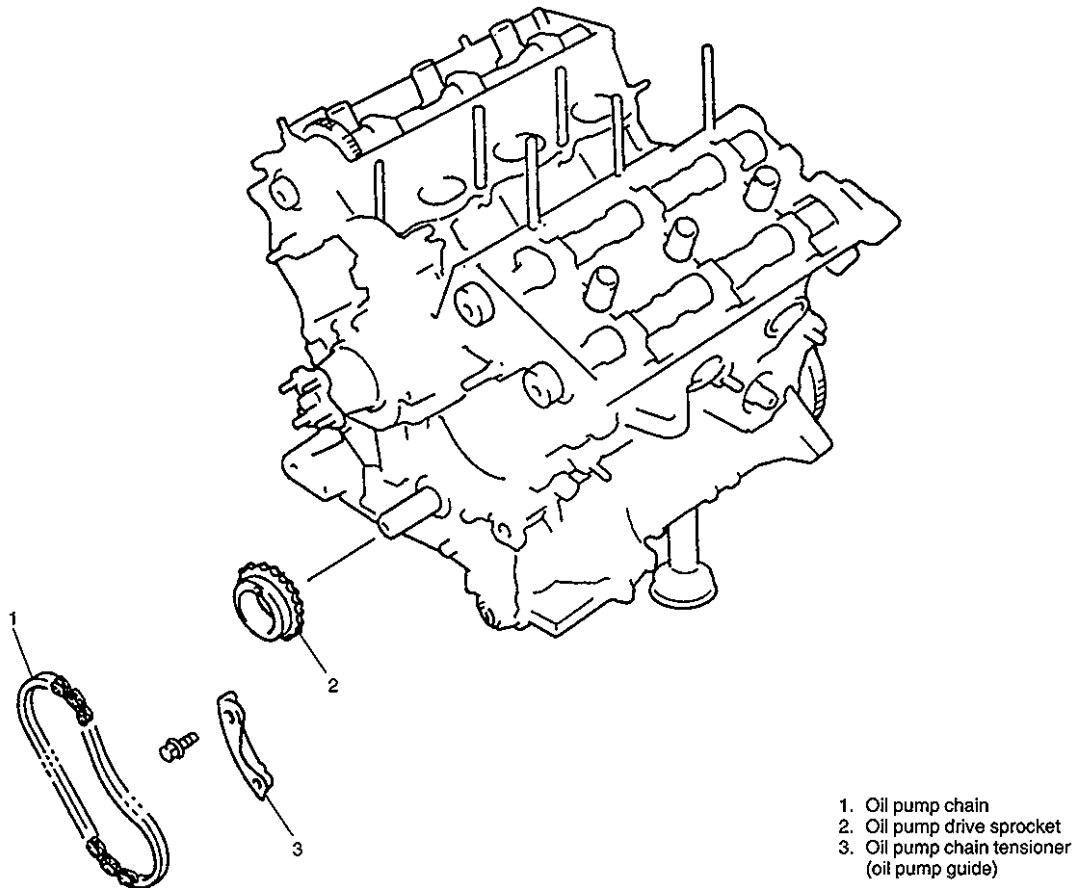

### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for removal.
- 5) Remove LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.
- 6) Remove 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.



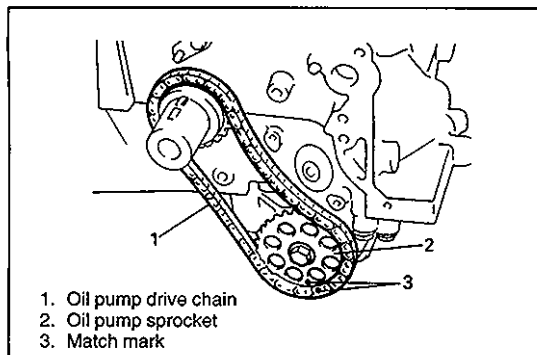


7) Put match marks to oil pump chain and oil pump sprocket.

8) Remove oil pump chain guide.

9) Remove oil pump chain.


10) Remove oil pump drive sprocket.

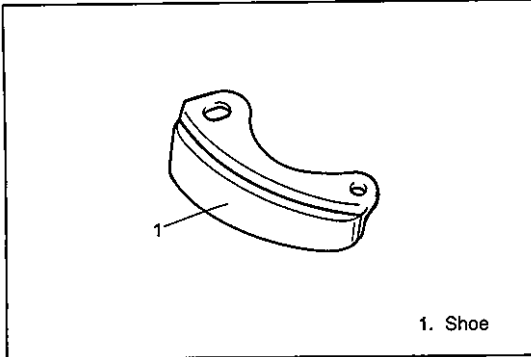

## INSPECTION


### Oil pump chain guide

Check shoe for wear or damage.

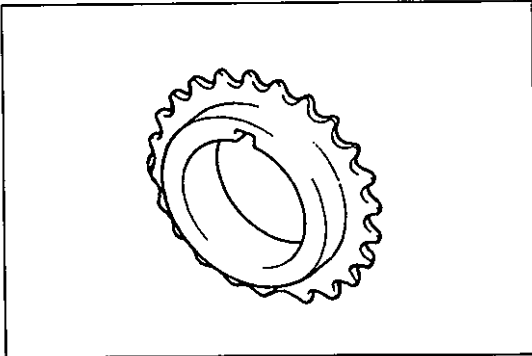


### Oil pump drive sprocket

Check teeth of sprocket for wear or damage.

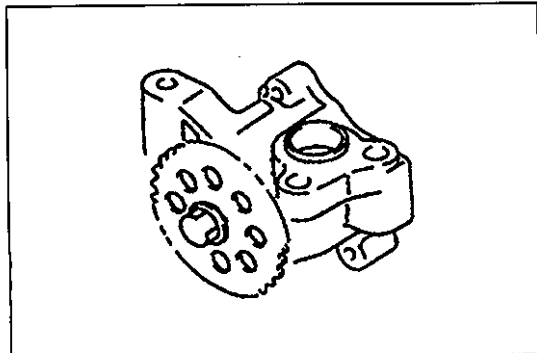


### Oil pump sprocket

Check teeth of sprocket for wear or damage.

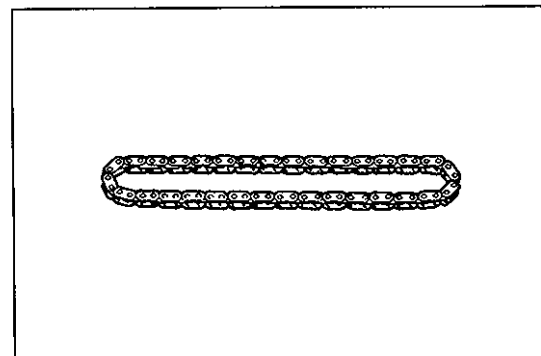


### Oil pump chain

Check oil pump chain for wear or damage.

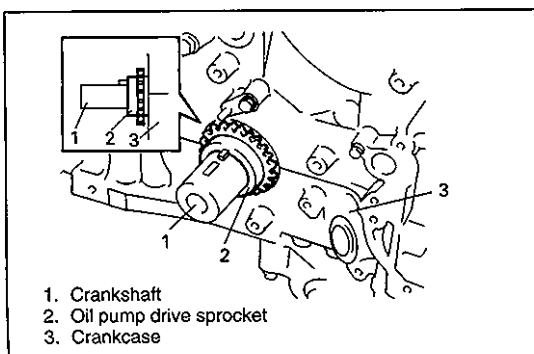


## INSTALLATION

1) Install oil pump drive sprocket as shown in figure.

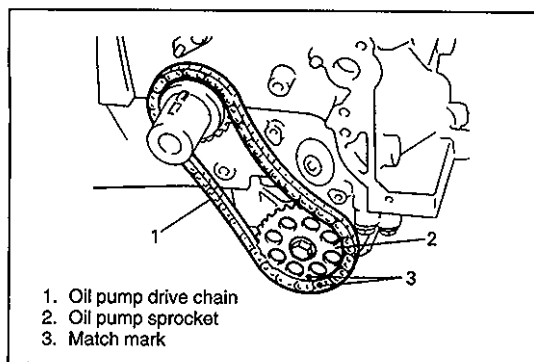

- 2) Install oil pump chain by aligning match marks on oil pump chain and oil pump sprocket.

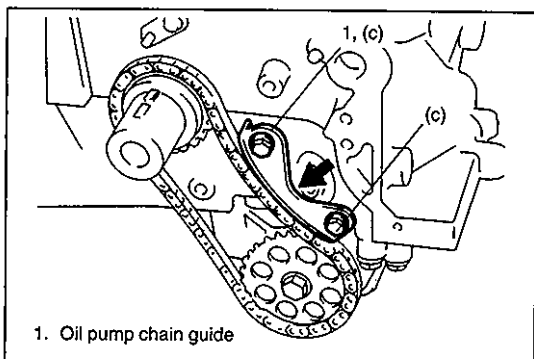


- 3) Install oil pump chain guide and hand-tighten oil pump chain guide bolts.
- 4) To take up slack of oil pump chain, push center of oil pump chain guide with a force of 0.5 to 0.6 N (50 – 60 g, 0.11 – 0.13 lb) then tighten oil pump chain guide bolts to specified torque.

#### **Tightening Torque**

**(c): 11 N·m (1.1 kg-m, 7.5 lb-ft)**

- 5) Install 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 6) Install LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 7) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 8) Install oil pan, front differential housing, P/S system, cooling system, intake manifold with throttle body and other parts.
- 9) Refill cooling system with coolant, front differential with gear oil, P/S system with specified fluid and engine with engine oil.
- 10) Check wheel alignment referring to SECTION 3.
- 11) Verify that there is no fuel leakage, water leakage and oil leakage at each connection.


## CAMSHAFT AND VALVE LASH ADJUSTER

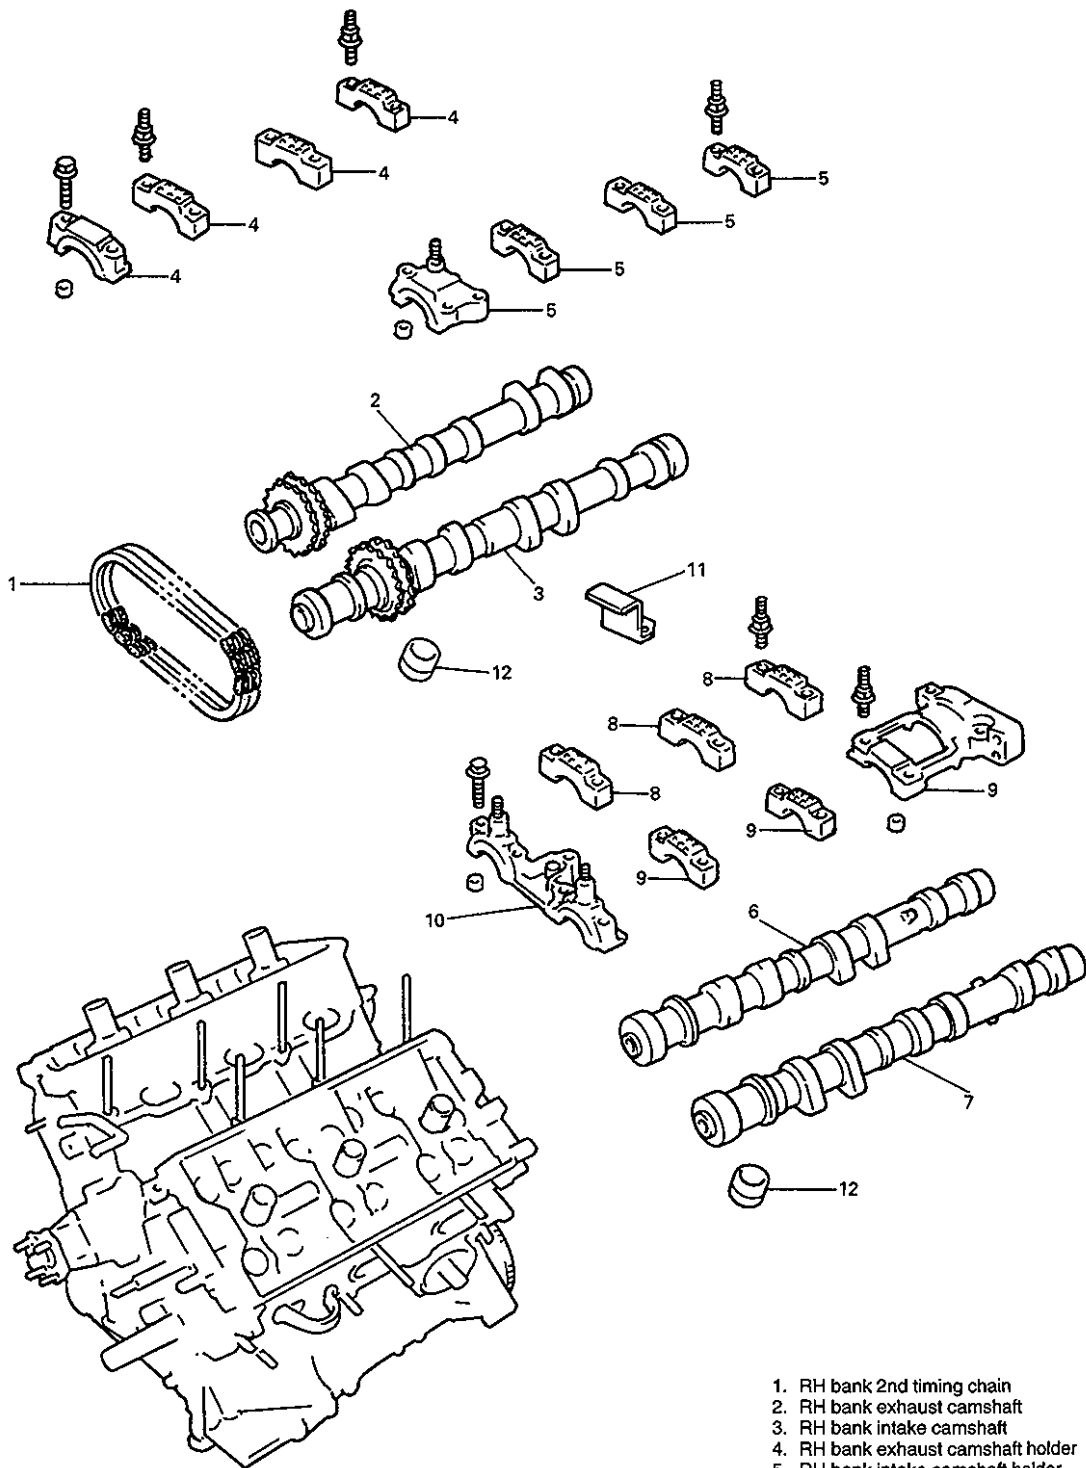


1. RH bank 2nd timing chain
2. RH bank exhaust camshaft
3. RH bank intake camshaft
4. RH bank exhaust camshaft holder
5. RH bank intake camshaft holder
6. LH bank intake camshaft
7. LH bank exhaust camshaft
8. LH bank intake camshaft holder
9. LH bank exhaust camshaft holder
10. LH bank camshaft holder
11. Timing chain guide No.5
12. Valve lash adjuster

**REMOVAL**

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for removal.
- 5) Remove LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.
- 6) Remove 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.
- 7) Remove RH bank camshafts.  
Refer to item "RH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.
- 8) Remove CMP sensor. Refer to Section 6F2 for removal.
- 9) Loosen LH bank camshaft housing bolts in such order as indicated in figure and remove them.
- 10) Remove LH bank camshaft housings.
- 11) Remove LH bank camshafts.

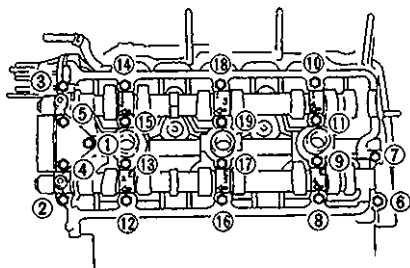**LH bank**

Don't apply force

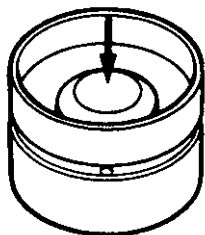


- 12) Remove valve lash adjuster.

**NOTE:**

- Never disassemble hydraulic valve lash adjuster.
- Don't apply force to body of adjuster, oil in high pressure chamber in adjuster will leak.

- Immerse removed adjuster in clean engine oil and keep it there till reinstalling it so as to prevent oil leakage. If it is left in air, place it with its bucket body facing down. Don't place on its side or with bucket body facing up.

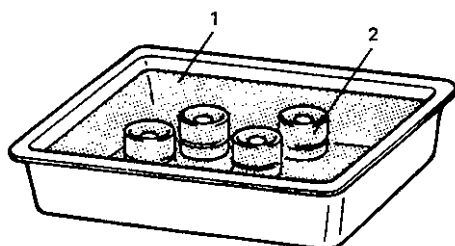



1. Engine oil
2. Valve lash adjuster

**INSPECTION****Cam Wear**

Using a micrometer, measure cam height. If measured height is below its limit, replace camshaft.

Cam height	Standard	Limit
Intake cam	39.445 – 39.605 mm (1.5530 – 1.5593 in.)	39.400 mm (1.5512 in.)
Exhaust cam	39.428 – 39.588 mm (1.5523 – 1.5586 in.)	39.400 mm (1.5512 in.)

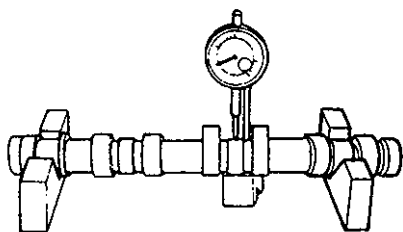

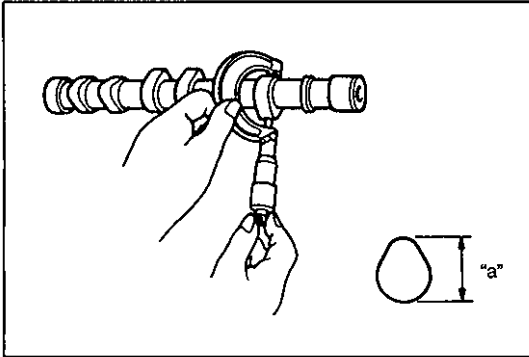


### Camshaft Runout

Set camshaft between two "V" blocks, and measure its runout by using a dial gauge.

If measured runout exceeds below specified limit, replace camshaft.

Runout limit	0.10 mm (0.0039 in.)
--------------	----------------------

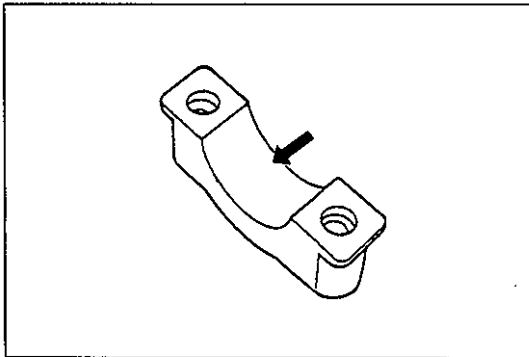


### Camshaft Journal Wear


Check camshaft journals and camshaft housings for pitting, scratches, wear or damage.

If any malcondition is found, replace camshaft or cylinder head with housing. Never replace cylinder head without replacing housings.

RH bank

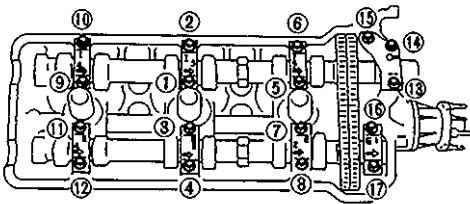

LH bank

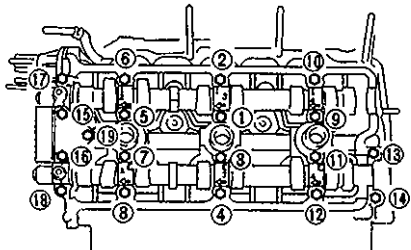


Check clearance by using gaging plastic. The procedure is as follows.

- 1) Clean housings and camshaft journals.
- 2) Make sure that all valve lash adjusters are removed and install camshaft to cylinder head.
- 3) Place a piece of gaging plastic the full width of journal of camshaft (parallel to camshaft).
- 4) Install camshaft housing.
- 5) Tighten camshaft housing bolts in such order as indicated in figure a little at a time till they are tightened to specified torque.


### NOTE:

**Do not rotate camshaft while gaging plastic is installed.**

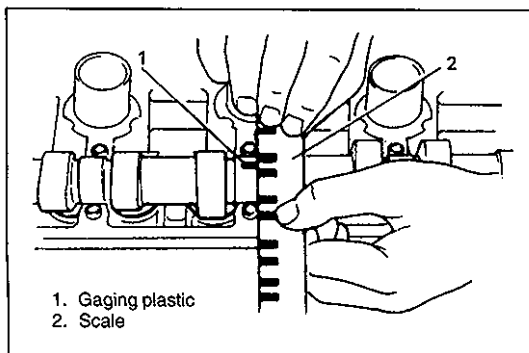


- 6) Remove housing, and using scale on gaging plastic envelop, measure gaging plastic width at its widest point.

	Standard	Limit
Journal clearance	0.020 – 0.074 mm (0.0008 – 0.0029 in.)	0.12 mm (0.0047 in.)

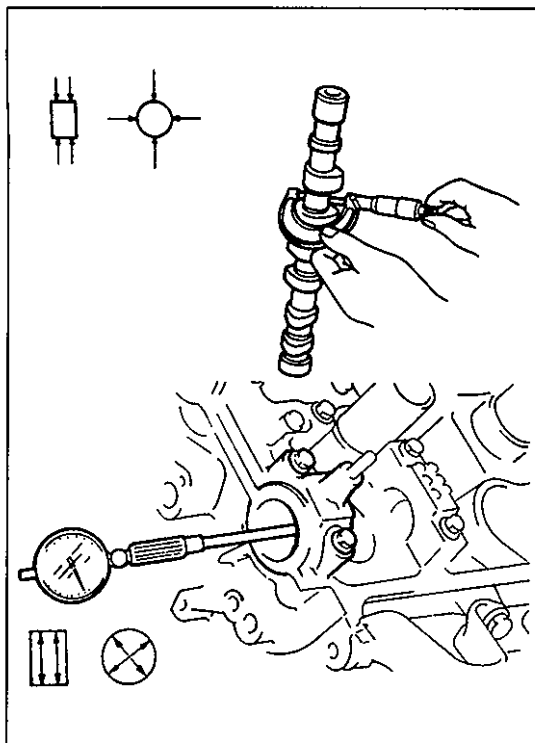


If measured camshaft journal clearance exceeds limit, measure journal (housing) bore and outside diameter of camshaft journal. Replace camshaft or cylinder head assembly whichever the difference from specification is greater.

	Standard
Camshaft journal bore dia. (IN & EX)	26.000 – 26.033 mm (1.0236 – 1.0249 in.)
Camshaft journal O.D. (IN & EX)	25.959 – 25.980 mm (1.0220 – 1.0228 in.)

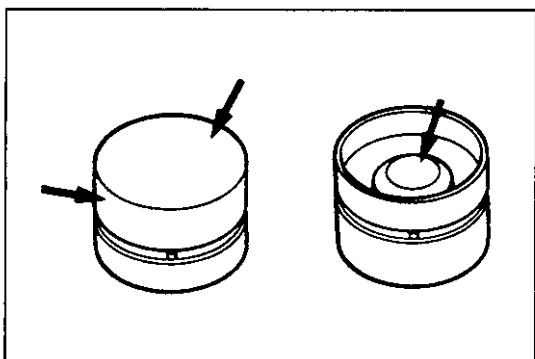


#### Wear of Hydraulic Valve Lash Adjuster

Check adjuster for pitting, scratches, or damage. If any malcondition is found, replace.

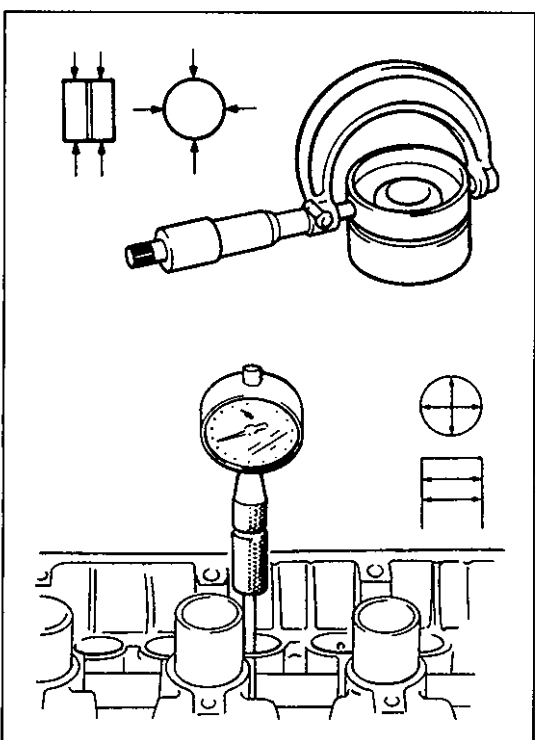

Measure cylinder head bore and adjuster outside diameter to determine cylinder head-to-adjuster clearance. If clearance exceeds limit, replace adjuster or cylinder head.

Item	Standard	Limit
Hydraulic valve lash adjuster O.D.	30.959 – 30.975 mm (1.2188 – 1.2194 in.)	—
Cylinder head bore	31.000 – 31.025 mm (1.2205 – 1.2214 in.)	—
Cylinder head to adjuster clearance	0.025 – 0.066 mm (0.0010 – 0.0025 in.)	0.15 mm (0.0059 in.)

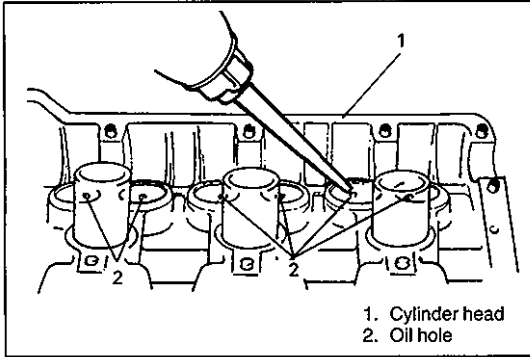


## INSTALLATION

- 1) Before installing valve lash adjuster to cylinder head, fill oil passage of cylinder head with engine oil according to following procedure.


Pour engine oil through oil holes and check that oil comes out from oil holes in sliding part of valve lash adjuster.

Perform this check on both intake and exhaust sides.

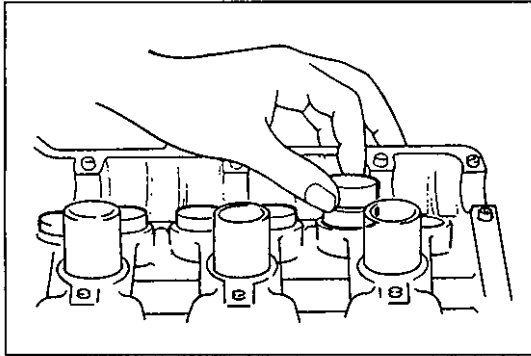


- 2) Valve lash adjuster to cylinder head.

Apply engine oil around valve lash adjuster and then install it to cylinder head.

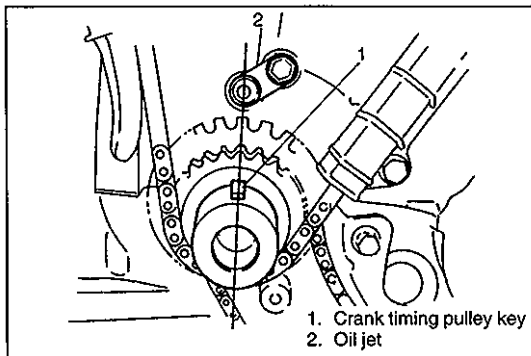

- 3) Check timing mark on crankshaft as shown in figure.




- 4) Install RH bank camshafts, referring to item "RH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.

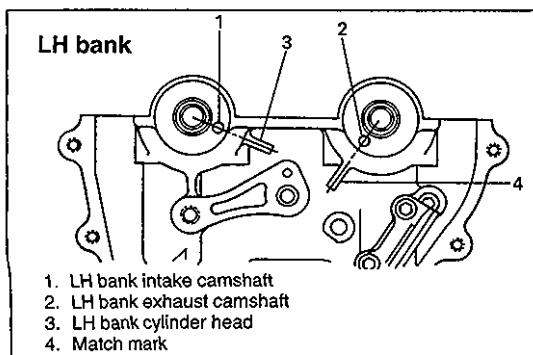

- 5) Install LH bank camshafts.

Apply oil to sliding surface of each camshaft and camshaft journal then install them by aligning match marks on cylinder head and LH bank camshafts as shown in figure.



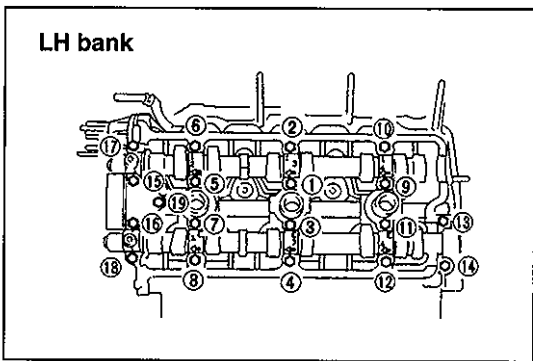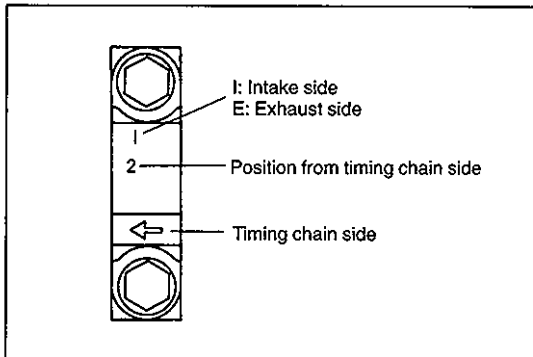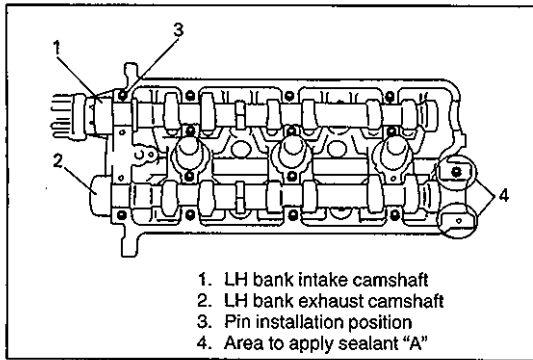

- 6) Install LH bank camshaft housing pins as shown in figure.
- 7) Apply sealant "A" to LH bank exhaust camshaft housing No.5 sealing surface area as shown in figure.

**"A": Sealant 99000-31150**

- 8) Check position of LH bank camshaft housings.  
Embossed marks are provided on each camshaft housing, indicating position and direction for installation. Install housings as indicated by these marks.


- 9) After applying oil to housing bolts, tighten them temporarily first. Then tighten them by following sequence as indicated in figure. Tighten a little at a time and evenly among bolts and repeat tightening sequence two or three times before they are tightened to specified torque below.

#### **Tightening Torque**

**12 N·m (1.2 kg-m, 8.5 lb-ft)**


- 10) Install 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 11) Install LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 12) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 13) Install oil pan, front differential housing, P/S system, cooling system, intake manifold with throttle body and other parts.
- 14) Install CMP sensor. Refer to Section 6F2 for details.
- 15) Refill cooling system with coolant, front differential with gear oil, P/S system with specified fluid and engine with engine oil.
- 16) Check wheel alignment referring to SECTION 3.
- 17) Verify that there is no fuel leakage, water leakage and oil leakage at each connection.
- 18) Check ignition timing, referring to Section 6F2.

## VALVES AND CYLINDER HEADS

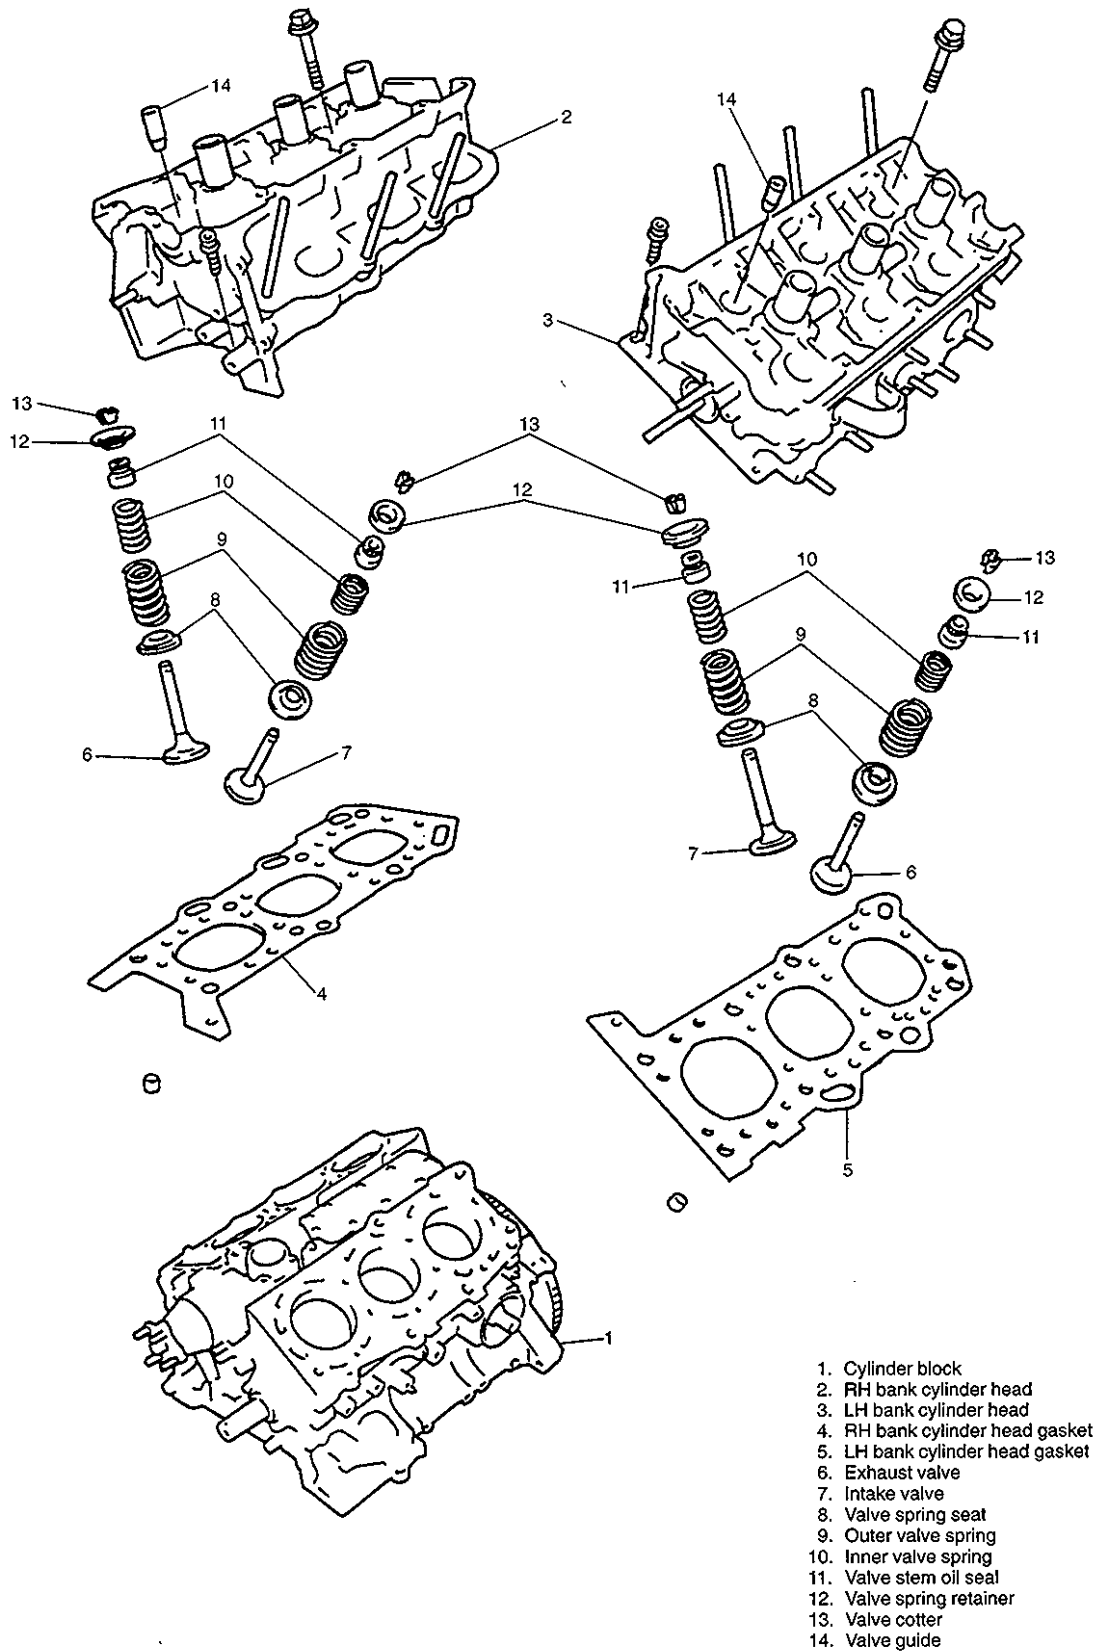

**REMOVAL**

- 1) Relieve fuel pressure according to procedure described in Section 6.
- 2) Disconnect negative cable at battery.
- 3) Drain engine oil.
- 4) Drain coolant.
- 5) Remove CMP sensor, camshaft and valve lash adjuster.  
Refer to Section 6F2 for CMP sensor removal and item "CAM-SHAFT AND VALVE LASH ADJUSTER" in this section for camshaft and valve lash adjuster removal.
- 6) Remove exhaust manifold.  
Refer to item "EXHAUST MANIFOLD" in this section for removal.
- 7) Remove water outlet cap.

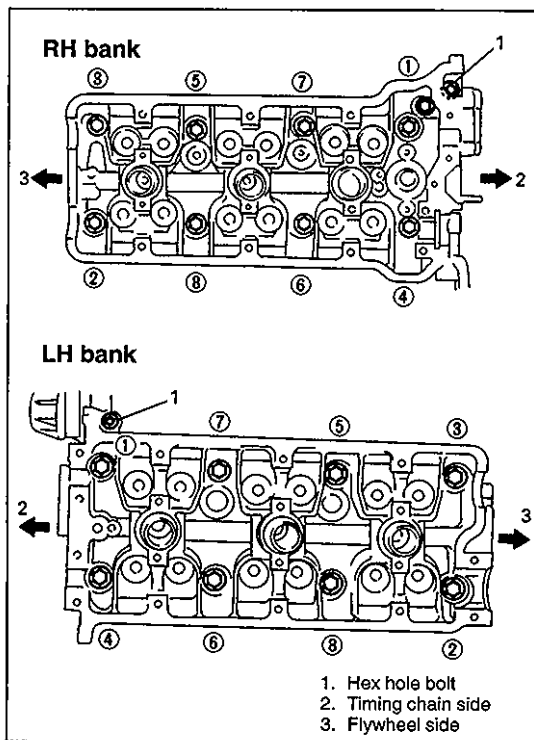


- 8) Loosen cylinder head bolts in such order as indicated in figure and remove them.

**NOTE:**

**Don't forget to remove two hex bolts shown in figure.**

- 9) Remove cylinder heads.

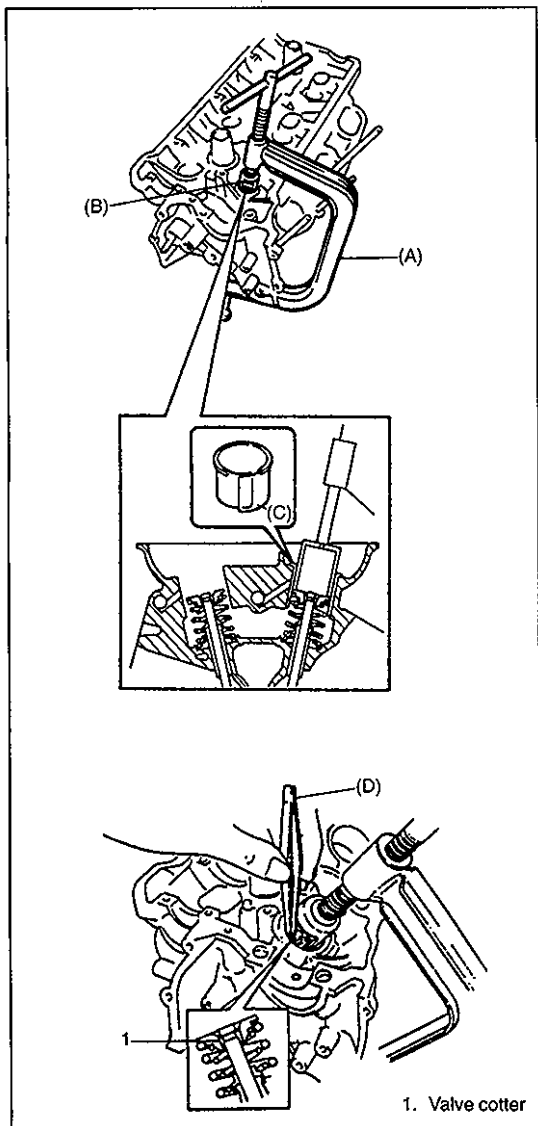

## DISASSEMBLY

- 1) Using special tools (A), (B) & (C), compress valve springs and then remove valve cotteners by using special tool (D).

### Special Tool


(A): 09916-14510

(B): 09916-14910

(C): 09919-28610

(D): 09916-84510


- 2) Release special tool, and remove spring retainer and valve spring.
- 3) Remove valve from combustion chamber side.

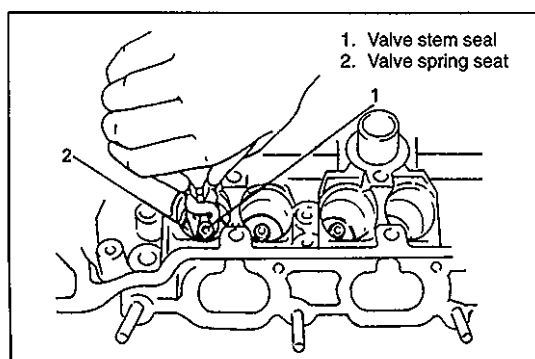

- 4) Remove valve stem seal from valve guide, and then valve spring seat.

### NOTE:

**Do not reuse seal once disassembled. Be sure to use new seal when assembling.**

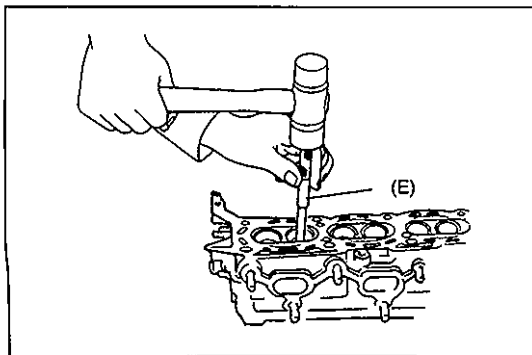

- 5) Using special tool (E) (Valve guide remover), drive valve guide out from combustion chamber side to valve spring side.


### Special Tool

(E): 09916-44910

### NOTE:

**Do not reuse valve guide once disassembled. Be sure to use new valve guide (Oversize) when assembling.**

- 6) Place disassembled parts except valve stem seal and valve guide in order so that they can be installed in their original positions.

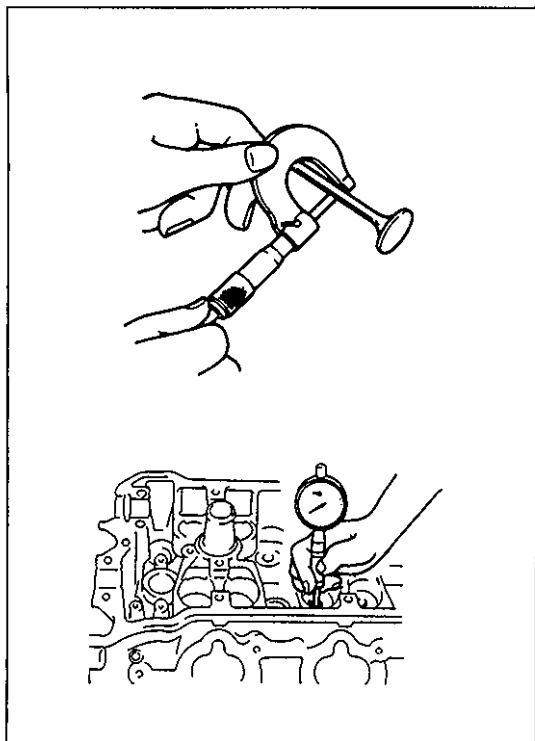


## INSPECTION

### Valve Guides

Using a micrometer and bore gauge, take diameter readings on valve stems and guides to check stem-to-guide clearance. Be sure to take reading at more than one place along the length of each stem and guide.

If clearance exceeds limit, replace valve and valve guide.


Item		Standard	Limit
Valve stem diameter	Intake	5.965 – 5.980 mm (0.2348 – 0.2354 in.)	–
	Exhaust	5.940 – 5.955 mm (0.2339 – 0.2344 in.)	–
Valve guide I.D.	In & Exh	6.000 – 6.012 mm (0.2362 – 0.2367 in.)	–
Stem-to-guide clearance	Intake	0.020 – 0.047 mm (0.0008 – 0.0018 in.)	0.07 mm (0.0027 in.)
	Exhaust	0.045 – 0.072 mm (0.0018 – 0.0028 in.)	0.09 mm (0.0035 in.)

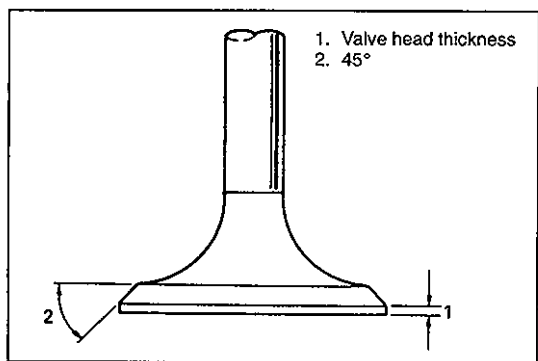


### Valves

- Remove all carbon from valves.
- Inspect each valve for wear, burn or distortion at its face and stem and, as necessary, replace it.
- Measure thickness of valve head. If measured thickness exceeds limit, replace valve.

Item	Standard	Limit
Intake	1.0 mm (0.039 in.)	0.6 mm (0.023 in.)
Exhaust	1.2 mm (0.047 in.)	0.7 mm (0.027 in.)

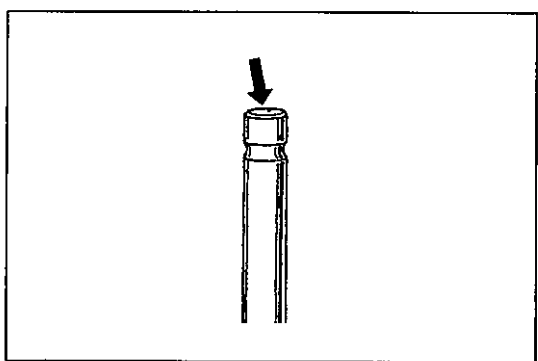


- Inspect valve stem end face for pitting and wear. If pitting or wear is found there, valve stem end may be resurfaced, but not too much to grind off its chamber. When it is worn out too much that its chamber is gone, replace valve.

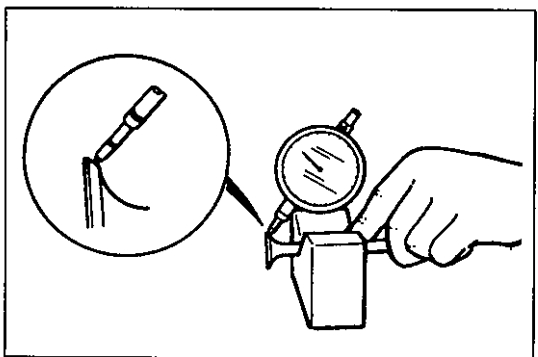

- Check each valve for radial runout with a dial gauge and "V" block. To check runout, rotate valve slowly. If runout exceeds its limit, replace valve.

**Limit on valve head radial runout:**  
0.08 mm (0.003 in.)

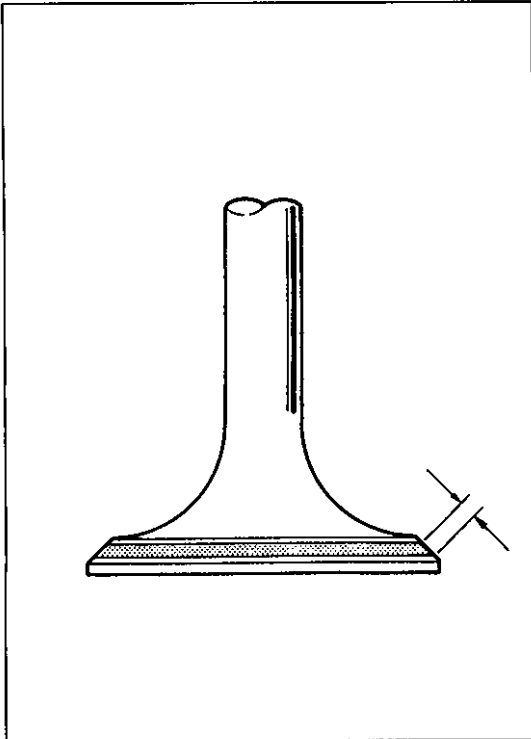


● **Seating contact width:**

Create contact pattern on each valve in the usual manner, i.e., by giving uniform coat of marking compound to valve seat and by rotatingly tapping seat with valve head. Valve lapper (tool used in valve lapping) must be used.

Pattern produced on seating face of valve must be a continuous ring without any break, and the width of pattern must be within specified range.

Standard seating width revealed by contact pattern on valve face	Intake	1.1 – 1.3 mm (0.0433 – 0.0512 in.)
	Exhaust	

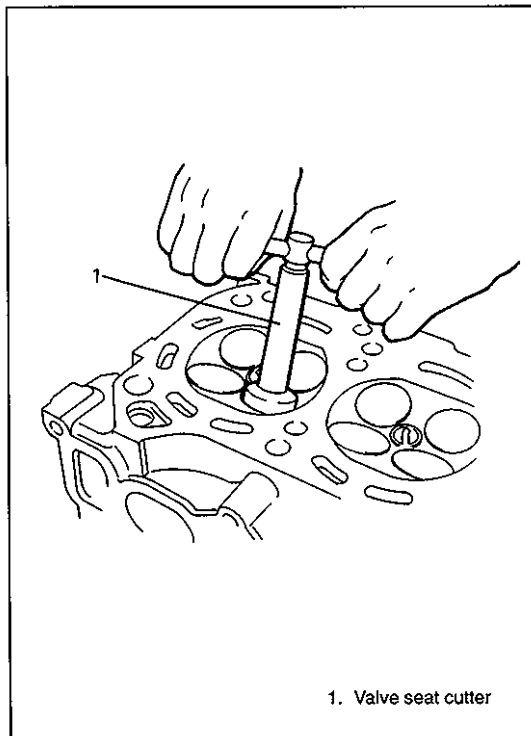

● **Valve seat repair:**

A valve seat not producing a uniform contact with its valve or showing width of seating contact that is out of specified range must be repaired by regrinding or by cutting and regrinding and finished by lapping.

- 1) **VALVE SEAT:** Use valve seat cutters to make two cuts as illustrated in figure. Two cutters must be used: the first for making 15° angle, and the second for making 45° angle. The second cut must be made to produce desired seat width.

**Seat width for valve seat:**


**1.1 – 1.3 mm (0.0433 – 0.0512 in.)**


- 2) **INTAKE VALVE SEAT:** Use valve seat cutters to make three cuts as illustrated in figure. Three cutters must be used: the 1st for making 15° angle, the 2nd for making 60° angle, and 3rd for making 45° angle. The 3rd cut (45°) must be made to produce desired seat width.

**Seat width for intake valve seat:**

**1.1 – 1.3 mm (0.0433 – 0.0512 in.)**

- 3) **VALVE LAPPING:** Lap valve on seat in two steps, first with coarse size lapping compound applied to face and the second with fine-size compound, each time using valve lapper according to usual lapping method.

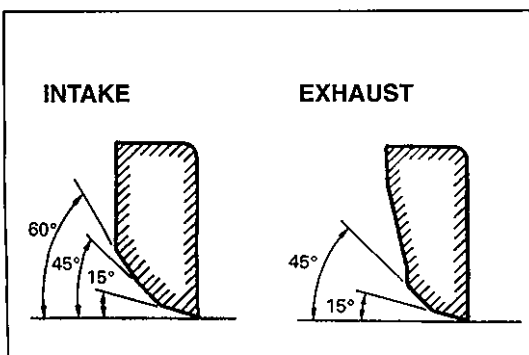

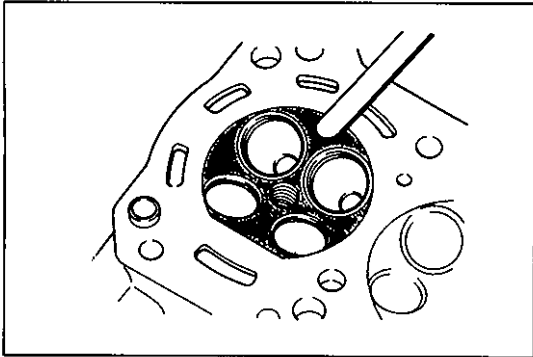


### Cylinder Head

- Remove all carbon from combustion chambers.

#### NOTE:

**Do not use any sharp-edged tool to scrape off carbon. Be careful not to scuff or nick metal surfaces when decarboning. The same applies to valves and valve seats, too.**

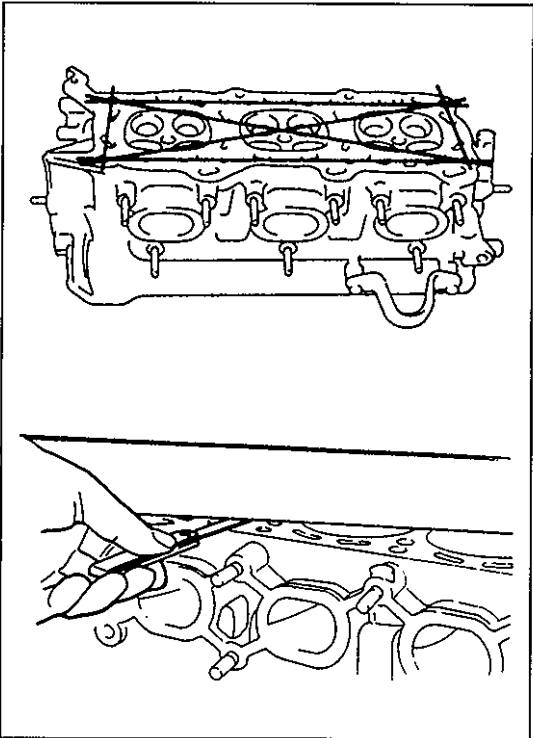


- Check cylinder head for cracks on intake and exhaust ports, combustion chambers, and head surface.

Using straightedge and thickness gauge, check flatness of gasketed surface at a total of 6 locations. If distortion limit, given below, is exceeded, correct gasketed surface with a surface plate and abrasive paper of about #400 (Waterproof silicon carbide abrasive paper): Place abrasive paper on and over surface plate, and rub gasketed surface against paper to grind off high spots. Should this fail to reduce thickness gauge readings to within limit, replace cylinder head.

Leakage of combustion gases from this gasketed joint is often due to warped gasketed surface: such leakage results in reduced power output.


**Limit of distortion: 0.05 mm (0.002 in.)**

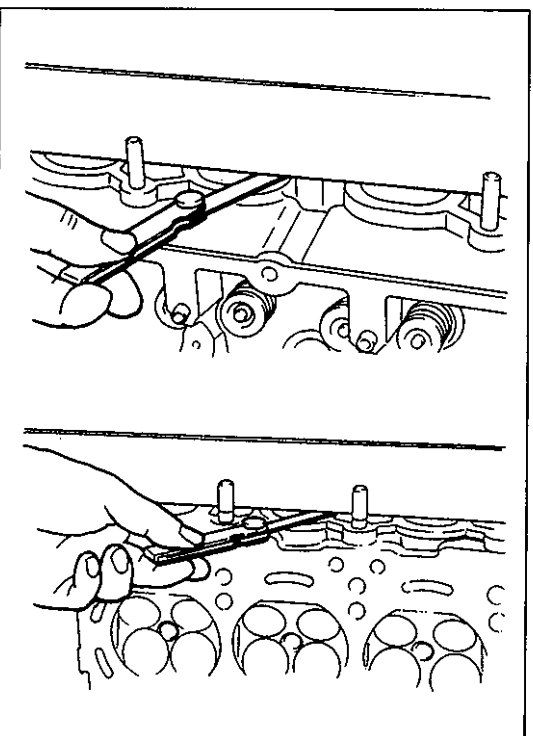

- Distortion of manifold seating faces:

Check seating faces of cylinder head for manifolds, using a straightedge and thickness gauge, in order to determine whether these faces should be corrected or cylinder head replaced.


**Limit of distortion: 0.10 mm (0.004 in.)**

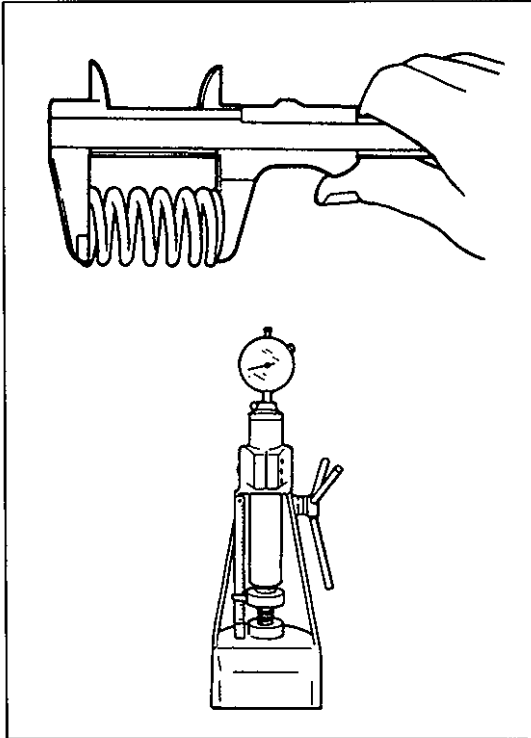

### Valve Springs

- Referring to data given below, check to be sure that each spring is in sound condition, free of any evidence of breakage or weakening. Remember, weakened valve springs can cause chatter, not to mention possibility of reducing power output due to gas leakage caused by decreased seating pressure.

Item		Standard	Limit
Valve spring free length	INNER	36.08 mm (1.4204 in.)	35.00 mm (1.3780 in.)
	OUTER	40.44 mm (1.5921 in.)	39.22 mm (1.5441 in.)
Valve spring preload	INNER	6.9 – 7.9 kg for 27.5 mm (15.2 – 17.4 lb/ 1.08 in.)	5.9 kg for 27.5 mm (13.0 lb/ 1.08 in.)
	OUTER	15.4 – 17.8 kg for 31.7 mm (33.9 – 39.2 lb/ 1.25 in.)	13.3 kg for 31.7 mm (30.0 lb/ 1.25 in.)


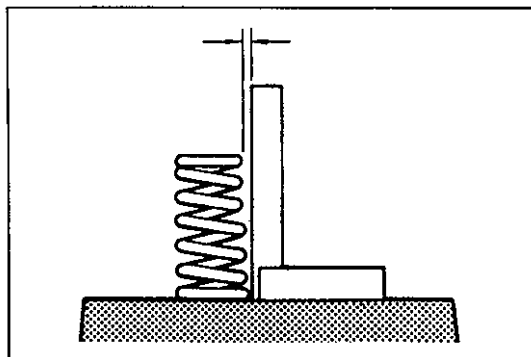


- Spring squareness:

Use a square and surface plate to check each spring for squareness in terms of clearance between end of valve spring and square. Valve springs found to exhibit a larger clearance than limit given below must be replaced.

**Valve spring squareness limit:** Inner spring 1.6 mm (0.063 in.)  
Outer spring 1.8 mm (0.070 in.)



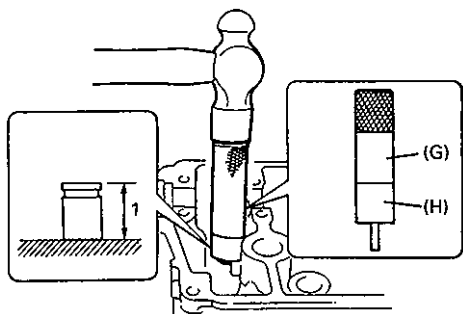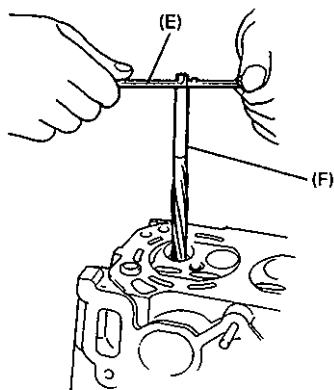

1. Valve guide protrusion (13.5 mm)

**ASSEMBLY**

- 1) Before installing valve guide into cylinder head, ream guide hole with special tool (11 mm reamer) so as to remove burrs and make it truly round.

**Special Tool****(E): 09916-34542****(F): 09916-38210**

- 2) Install valve guide to cylinder head.

Heat cylinder head uniformly at a temperature of 80 to 100 °C (176 to 212 °F) so that head will not be distorted, and drive new valve guide into hole with special tools. Drive in new valve guide until special tool (Valve guide installer) contacts cylinder head.


After installing, make sure that valve guide protrudes by 13.5 mm (0.53 in.) from cylinder head.

**Special Tool****(G): 09916-58210****(H): 09917-87810****NOTE:**

- Do not reuse valve guide once disassembled.  
Install new valve guide (Oversize).
- Intake and exhaust valve guides are identical.

Valve guide oversize: 0.03 mm (0.0012 in.)


Valve guide protrusion (In and Ex): 13.5 mm (0.53 in.)

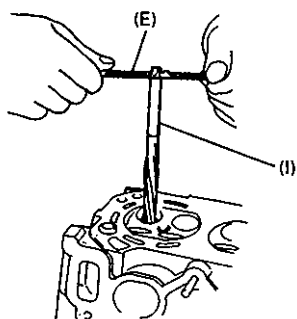

- 3) Ream valve guide bore with special tool (6.0 mm reamer). After reaming, clean bore.

**Special Tool****(E): 09916-34542****(I): 09916-37810**

- 4) Install valve spring seat to cylinder head.

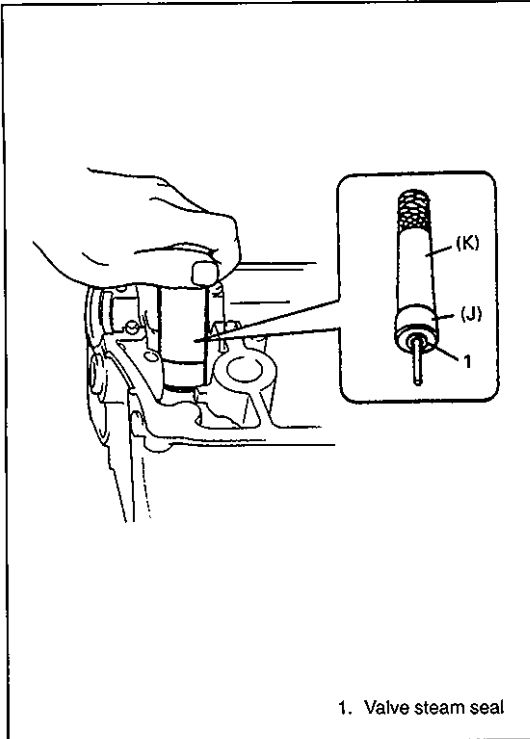

5) Install new valve stem seal to valve guide.

After applying engine oil to seal and spindle of special tool (Valve guide installer handle), fit oil seal to spindle, and then install seal to valve guide by pushing special tool by hand.

After installing, check to be sure that seal is properly fixed to valve guide.


**Special Tool**

(J): 09917-98221

(K): 09916-58210


**NOTE:**

- Do not reuse seal once disassembled. Be sure to install new seal.
- When installing, never tap or hit special tool with a hammer or else. Install seal to guide only by pushing special tool by hand. Tapping or hitting special tool may cause damage to seal.

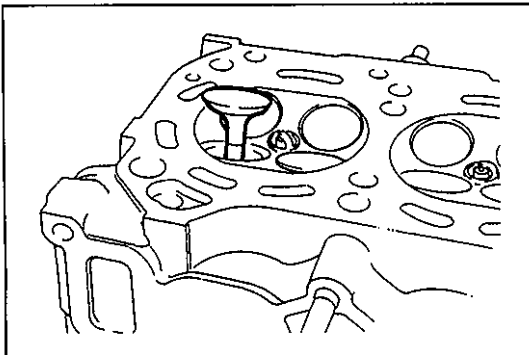


6) Install valve to valve guide.

Before installing valve to valve guide, apply engine oil to stem seal, valve guide bore, and valve stem.

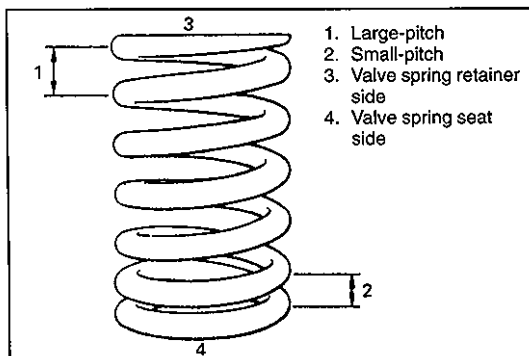

7) Install valve spring and spring retainer.

Each valve spring has top end (large-pitch end) and bottom end (small-pitch end). Be sure to position spring in place with its bottom end (small-pitch end) facing the bottom (valve spring seat side).

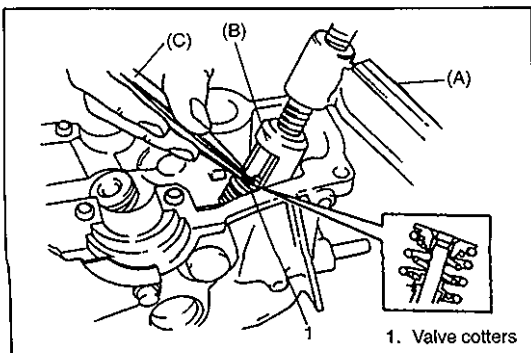


8) Using special tool (Valve lifter), compress valve spring and fit two valve cotter pins into groove in valve stem.

**Special Tool**

(A): 09916-14510

(B): 09916-14910

(C): 09916-84510

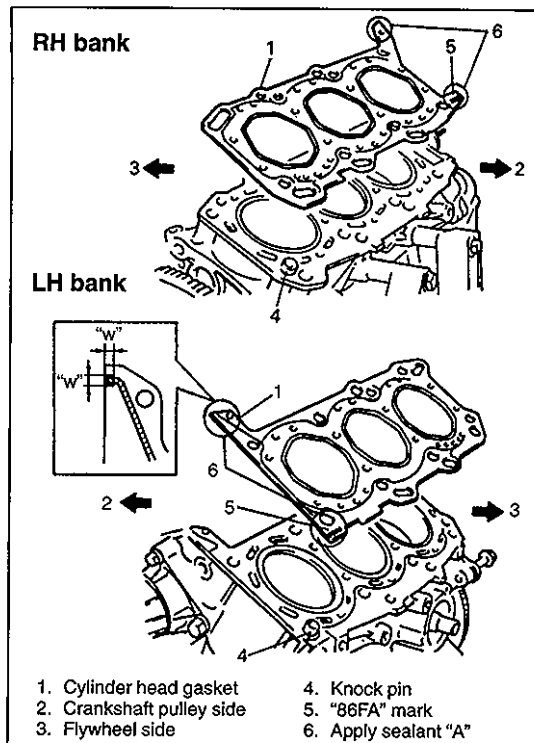


## INSTALLATION

- 1) Clean mating surface on cylinder head and cylinder block. Remove oil, old gasket and dust from mating surface.
- 2) Install knock pin to cylinder block.
- 3) Apply sealant "A" to cylinder head gasket as shown in figure.

**"A": Sealant 99000-31150**

**Width "w": Min. 4 mm (0.158 in.)**

- 4) Install new cylinder head gasket to cylinder block as shown in figure. "86FA" mark on cylinder head gasket should face up (toward cylinder head side).

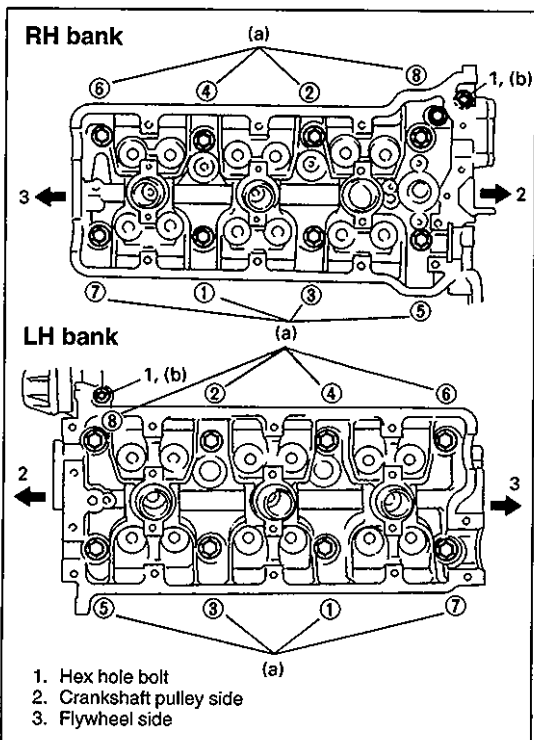

- 5) Install cylinder head to block.

After applying oil to cylinder head bolts, tighten then gradually with a torque wrench, following sequence given in figure. Finally tighten bolts to specified torque.

### Tightening Torque

**(a): 105 N·m (10.5 kg-m, 76.0 lb-ft)**


**(b): 11 N·m (1.1 kg-m, 7.5 lb-ft)**

### NOTE:

**Don't forget to install (b) bolts as shown in figure.**


- 6) Install water outlet cap.

- 7) Check timing mark on crankshaft as shown in figure.

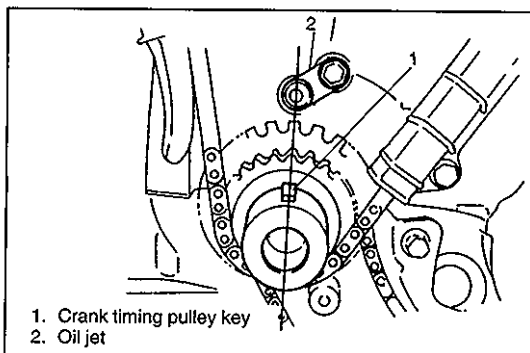

- 8) Install valve lash adjuster, camshaft, CMP sensor and RH bank 2nd timing chain.  
Refer to item "CAMSHAFT AND VALVE LASH ADJUSTER" and "RH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section. For CMP sensor, refer to Section 6F2 for installation.
- 9) Install 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 10) Install LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 11) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 12) Install oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for installation.
- 13) Install cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for installation.
- 14) Install exhaust manifold.  
Refer to item "EXHAUST MANIFOLD" in this section for installation.
- 15) Install radiator outlet pipe radiator, cooling fan and water hose.  
Refer to Section 6B installation.
- 16) Install throttle body and intake manifold.  
Refer to item "THROTTLE BODY AND INTAKE MANIFOLD" in this section for installation.
- 17) Adjust water pump drive belt tension.  
Refer to Section 6B for adjusting procedure.
- 18) Adjust power steering pump drive belt tension.  
Refer to Section 3B1 for adjusting procedure.
- 19) Adjust accelerator cable play and A/T throttle cable play. Refer to Section 6E2.
- 20) Check to ensure that all removed parts are back in place. Reinstall any necessary parts which have not been reinstalled.
- 21) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in Section 0B.
- 22) Refill cooling system referring to Section 6B.
- 23) Refill front differential housing with gear oil, referring to "DIFFERENTIAL" section.
- 24) Connect negative cable at battery.
- 25) Check ignition timing and adjust as necessary, referring to Section 6F2.
- 26) Verify that there is no fuel leakage, water leakage, oil leakage and exhaust gas leakage at each connection.
- 27) Check wheel alignment, referring to SECTION 3.


# PISTON, PISTON RINGS, CONNECTING RODS AND CYLINDERS

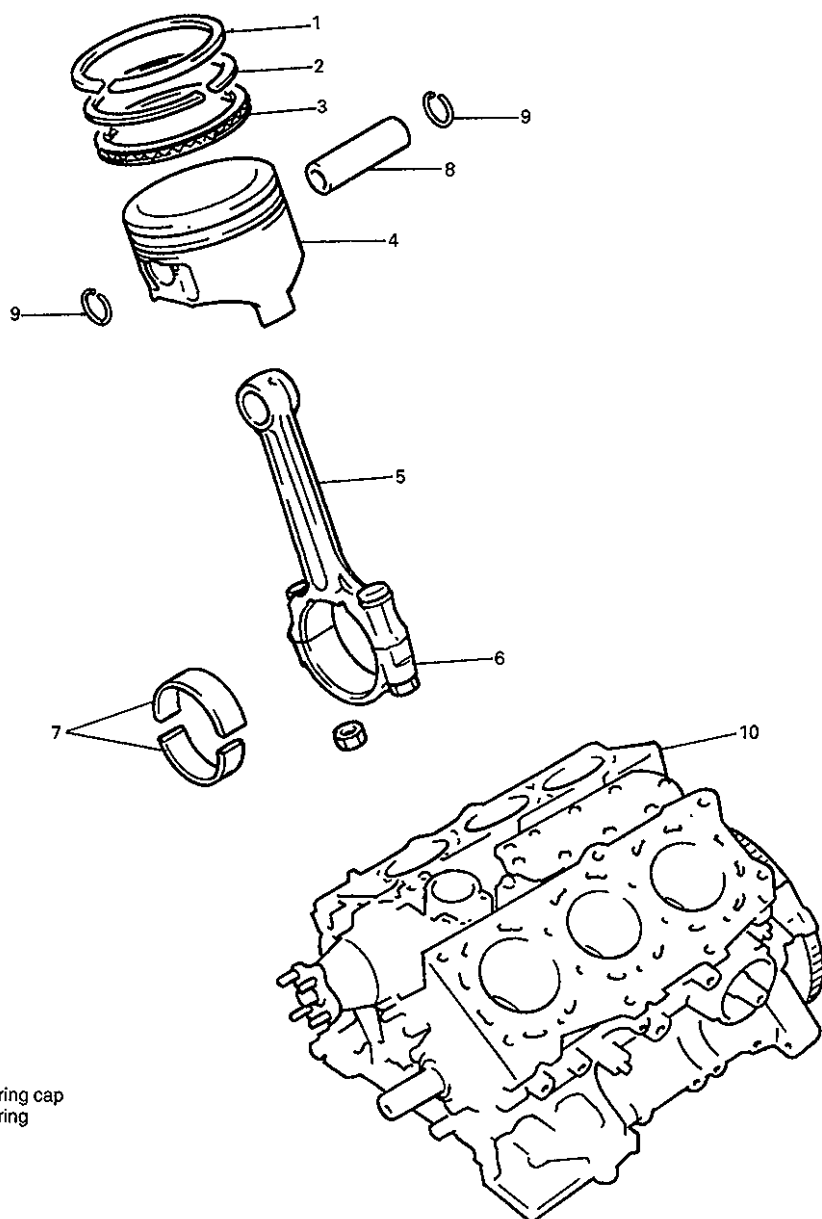

1. Top ring
2. 2nd ring
3. Oil ring
4. Piston
5. Connecting rod
6. Connecting rod bearing cap
7. Connecting rod bearing
8. Piston pin
9. Piston pin circlip
10. Cylinder block

## REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove cylinder heads.  
Refer to item "VALVES AND CYLINDER HEADS" in this section for removal.
- 5) Remove oil pump.  
Refer to item "OIL PUMP" in this section for removal.

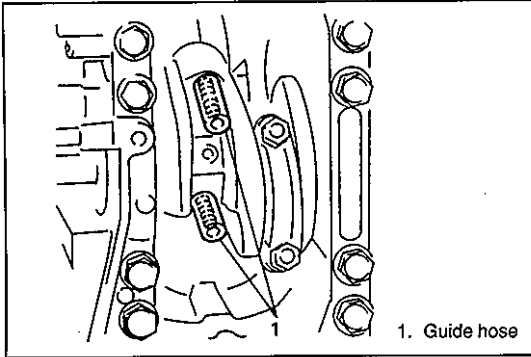


- 6) Mark cylinder number on all pistons, connecting rods and connecting rod caps.
- 7) Remove rod bearing caps.
- 8) Install guide hose over threads of rod bolts.  
This prevents damage to bearing journal and rod bolt threads when removing connecting rod.
- 9) Clean carbon from top of cylinder bore before removing piston from cylinder.
- 10) Push piston and connecting rod assembly out through the top of cylinder bore.

### DISASSEMBLY

- 1) Using piston ring expander, remove two compression rings (Top and 2nd) and oil ring from piston.

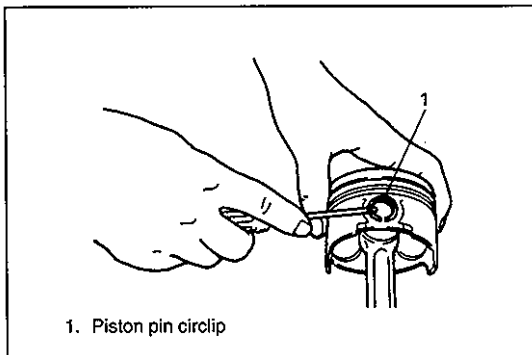

- 2) Remove piston pin from connecting rod.
  - Ease out piston pin circlips, as shown.

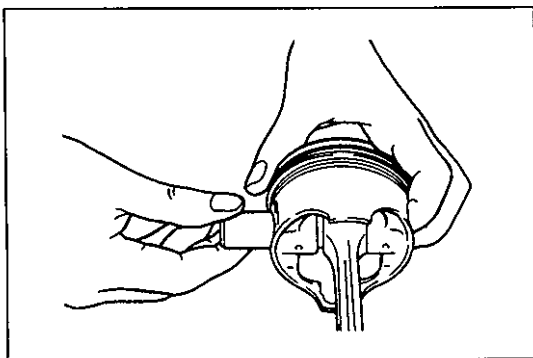

- Force piston pin out.


### CLEANING

Clean carbon from piston head and ring grooves, using a suitable tool.

## INSPECTION

### Cylinders

- Inspect cylinder walls for scratches, roughness, or ridges which indicate excessive wear. If cylinder bore is very rough or deeply scratched, or ridged, rebore cylinder and use over size piston.

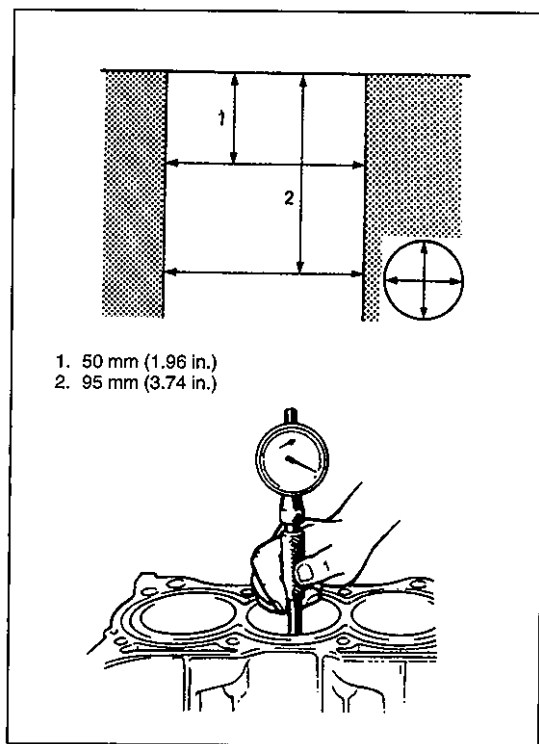

- Using a cylinder gauge, measure cylinder bore in thrust and axial directions at two positions as shown in figure.

If any of the following conditions is noted, rebore cylinder.


- Cylinder bore dia. exceeds limit.
- Difference of measurements at two positions exceeds taper limit.
- Difference between thrust and axial measurements exceeds out-of-round limit.

**Cylinder bore dia. limit: 84.050 mm (3.3090 in.)**

**Taper and out-of-round limit: 0.10 mm (0.004in.)**

#### NOTE:

If any one of six cylinders has to be rebored, rebore all six to the same next oversize. This is necessary for the sake of uniformity and balance.

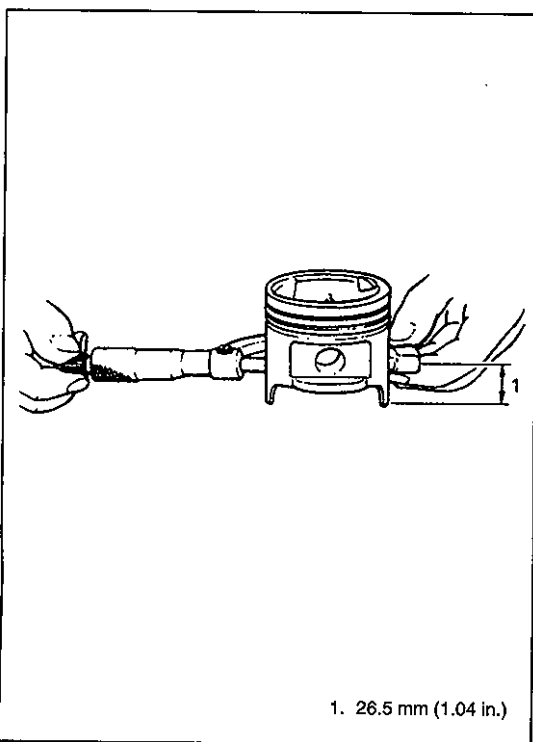

### Pistons


- Inspect piston for faults, cracks or other damages. Damaged or faulty piston should be replaced.

- Piston diameter:

As indicated in figure, piston diameter should be measured at a position 26.5 mm (1.04 in.) from piston skirt end in the direction perpendicular to piston pin.

Piston diameter	Standard	83.970 – 83.990 mm (3.3059 – 3.3067 in.)
	Oversize: 0.25 mm (0.0098 in.)	84.220 – 84.240 mm (3.3157 – 3.3165 in.)
	0.50 mm (0.0196 in.)	84.470 – 84.490 mm (3.3256 – 3.3264 in.)

1. 26.5 mm (1.04 in.)

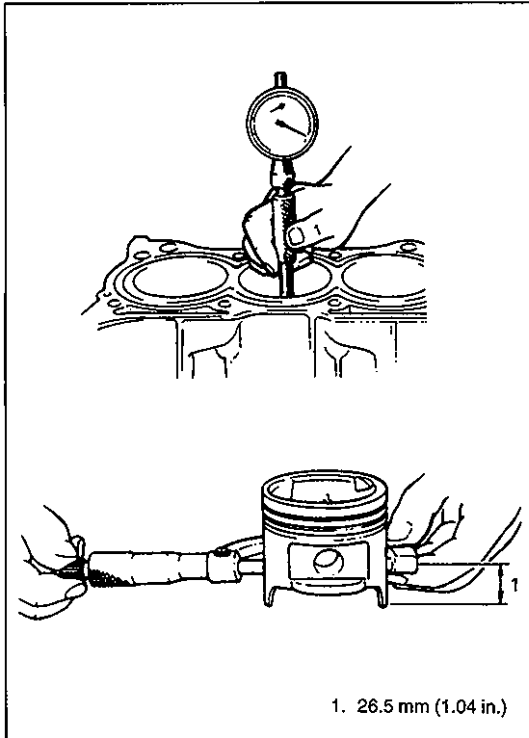


- **Piston clearance:**

Measure cylinder bore diameter and piston diameter to find their difference which is piston clearance. Piston clearance should be within specification as given below. If it is out of specification, re-bore cylinder and use oversize piston.

**Piston clearance: 0.02 – 0.04 mm (0.0008 – 0.0015 in.)**

**NOTE:**

**Cylinder bore diameters used here are measured in thrust direction at two positions.**

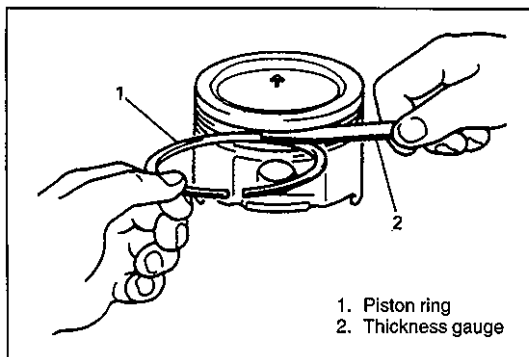

- **Ring groove clearance:**

Before checking, piston grooves must be clean, dry and free of carbon.


Fit new piston ring into piston groove, and measure clearance between ring and ring land by using thickness gauge. If clearance is out of specification, replace piston.

**Ring groove clearance:**

**Top: 0.03 – 0.07 mm (0.0012 – 0.0027 in.)**

**2nd: 0.02 – 0.06 mm (0.0008 – 0.0023 in.)**

**Oil: 0.06 – 0.15 mm (0.0023 – 0.0059 in.)**

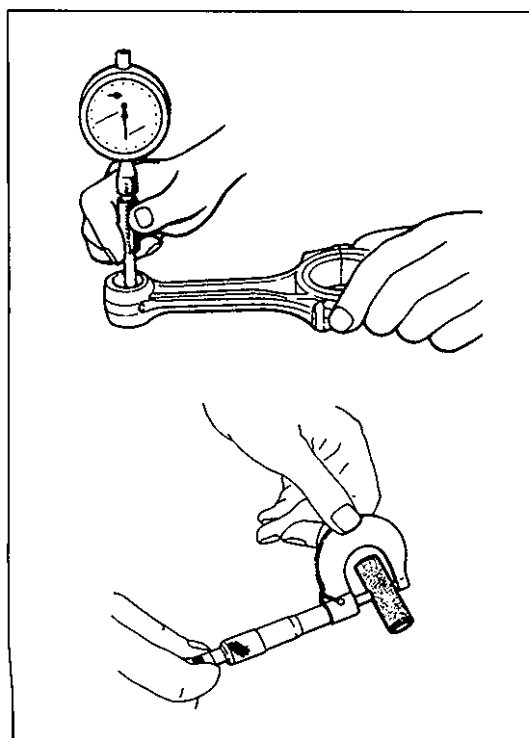

**Piston Pin**

- Check piston pin, connecting rod small end bore and piston bore for wear or damage, paying particular attention to condition of small end bore bush. If pin, connecting rod small end bore or piston bore is badly worn or damaged, replace pin, connecting rod or piston.

- **Piston pin clearance:**

Check piston pin clearance in small end. Replace connecting rod if its small end is badly worn or damaged or if measured clearance exceeds limit.

Item	Standard
Piston clearance in small end	0.003 – 0.014 mm (0.0001 – 0.0005 in.)


**Small-end bore:**

**21.003 – 21.011 mm (0.8269 – 0.8272 in.)**

**Piston pin dia.:**

**20.997 – 21.000 mm (0.8266 – 0.8268 in.)**



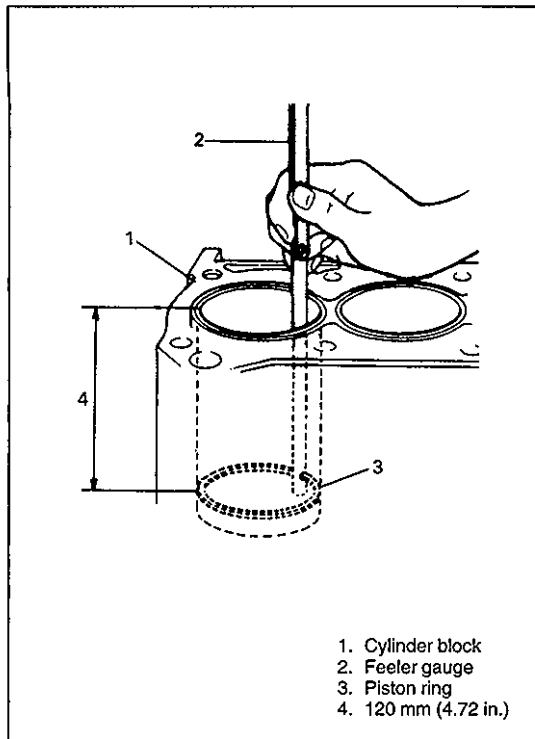

### Piston Rings


To measure end gap, insert piston ring into cylinder bore and then measure the gap by using thickness gauge.

If measure gap is out of specification, replace ring.

#### NOTE:

**Clean carbon and any other dirt from top of cylinder bore before inserting piston ring.**

Item		Standard	Limit
Piston ring end gap	Top ring	0.20 – 0.35 mm (0.0079 – 0.0137 in.)	0.7 mm (0.0276 in.)
	2nd ring	0.35 – 0.50 mm (0.0138 – 0.0196 in.)	0.7 mm (0.0276 in.)
	Oil ring	0.20 – 0.70 mm (0.0079 – 0.0275 in.)	1.8 mm (0.0709 in.)

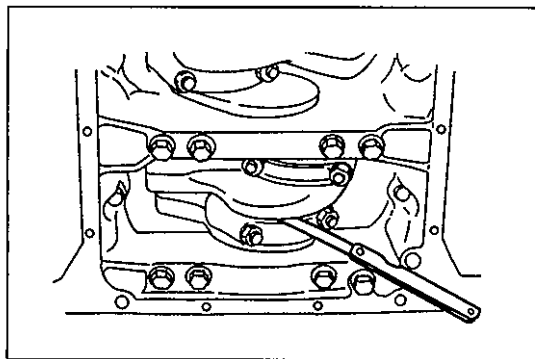

### Connecting Rod

#### ● Big-end side clearance:

Check big-end of connecting rod for side clearance, with rod fitted and connected to its crank pin in the normal manner. If measured clearance is found to exceed its limit, replace connecting rod.


Item	Standard	Limit
Big-end side clearance	0.25 – 0.40 mm (0.0099 – 0.0157 in.)	0.45 mm (0.0177 in.)

#### ● Connecting rod alignment:

Mount connecting rod on aligner to check it for bow and twist. If limit is exceeded, replace it.

**Limit on bow: 0.05 mm (0.0020 in.)**

**Limit on twist: 0.10 mm (0.0039 in.)**

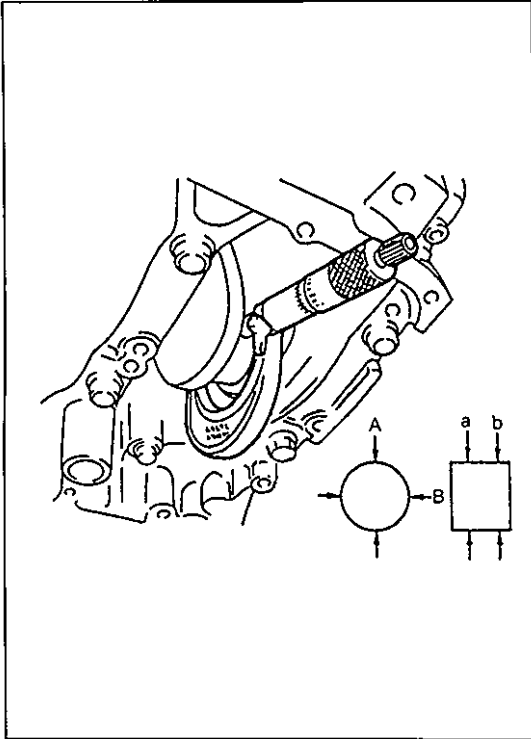

### Crank Pin and Connecting Rod Bearings


- Inspect crank pin for uneven wear or damage. Measure crank pin for out-of-round or taper with a micrometer. If crank pin is damaged, or out-of-round or taper is out of limit, replace crankshaft or regrind crank pin referring to following step 6).

Connecting rod bearing size	Crank pin diameter
Standard	49.982 – 50.000 mm (1.9678 – 1.9685 in.)
0.25 mm (0.0098 in.) undersize	49.732 – 49.750 mm (1.9580 – 1.9586 in.)

**Out-of-round:  $A - B$**

**Taper limit :  $a - b$**


**Out-of-round and taper limit: 0.01 mm (0.0004 in.)**

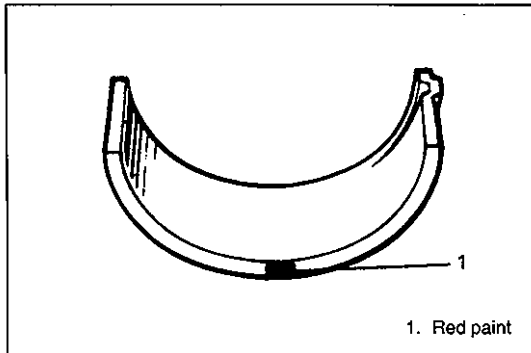

- Rod bearing:


Inspect bearing shells for signs of fusion, pitting, burn or flaking and observe contact pattern. Bearing shells found in defective condition must be replaced.

Two kinds of rod bearing are available; standard size bearing and 0.25 mm undersize bearing. For identification of undersize bearing, it is painted red at the position as indicated in figure, undersize bearing thickness is 1.605 – 1.615 mm (0.0632 – 0.0635 in.) at the center of it.

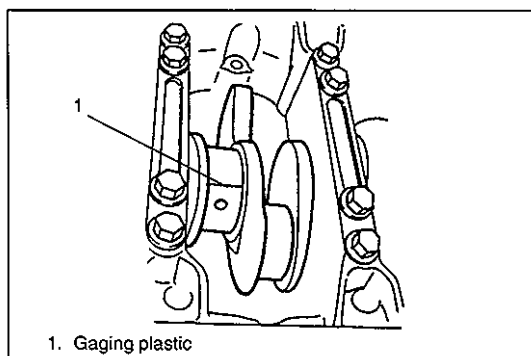

- Rod bearing clearance:

- 1) Before checking bearing clearance, clean bearing and crank pin.
- 2) Install bearing in connecting rod and bearing cap.
- 3) Place a piece of gaging plastic to full width of crank pin as contacted by bearing (parallel to crankshaft), avoiding oil hole.

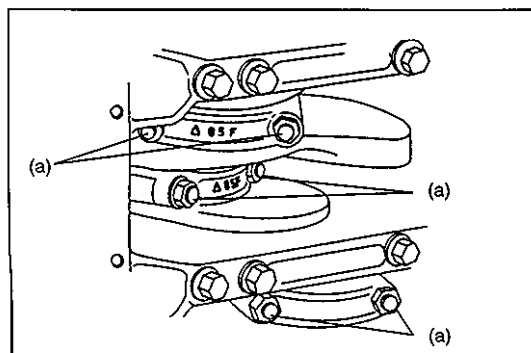


- 4) Install rod bearing cap to connecting rod.

When installing cap, be sure to point arrow mark on cap to crankshaft pulley side, as shown in figure. After applying engine oil to rod bolts, tighten cap nuts to specified torque. DO NOT turn crankshaft with gaging plastic installed.

### Tightening Torque

**(a): 45 N·m (4.5 kg-m, 32.5 lb-ft)**

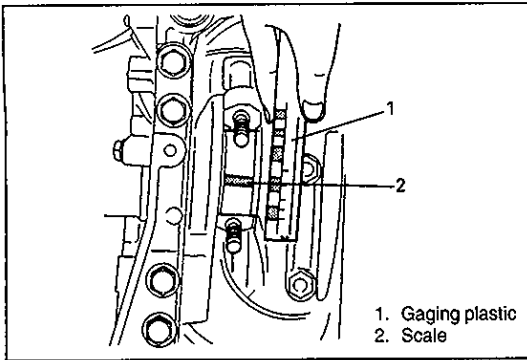

- 5) Remove cap and using a scale on gaging plastic envelope, measure gaging plastic width at the widest point (clearance). If clearance exceeds its limit, use a new standard size bearing and remeasure clearance.

Item	Standard	Limit
Bearing clearance	0.045 – 0.063 mm (0.0018 – 0.0025 in.)	0.08 mm (0.0031 in.)

- 6) If clearance can not be brought to within its limit even by using a new standard size bearing, regrind crank pin to undersize as follows.
- Install 0.25 mm undersize bearing to connecting rod big end.
  - Measure bore diameter of connecting rod big end.
  - Regrind crank pin to following finished diameter:

$$\boxed{\text{Finished crank pin dia.}} = \boxed{\text{Measured big end bore dia. (including under-size bearing)}} - \boxed{0.054 \text{ mm (0.0021 in.)}}$$


- d) Confirm that bearing clearance is within above standard value.

## ASSEMBLY

### NOTE:


Two sizes of piston are available as standard size spare part so as to ensure proper piston-to-cylinder clearance. When installing a standard size piston, make sure to match piston with cylinder as follows.

- Each piston has stamped number (1 or 2) on its piston head. It represents outer diameter of piston.
- There are also stamped numbers of 1 and 2 on the cylinder block as shown.
- Stamped number on piston and cylinder block must correspond. That is, install number "2" stamped piston to cylinder which is stamped also number "2" and a number "1" piston to cylinder with number "1".

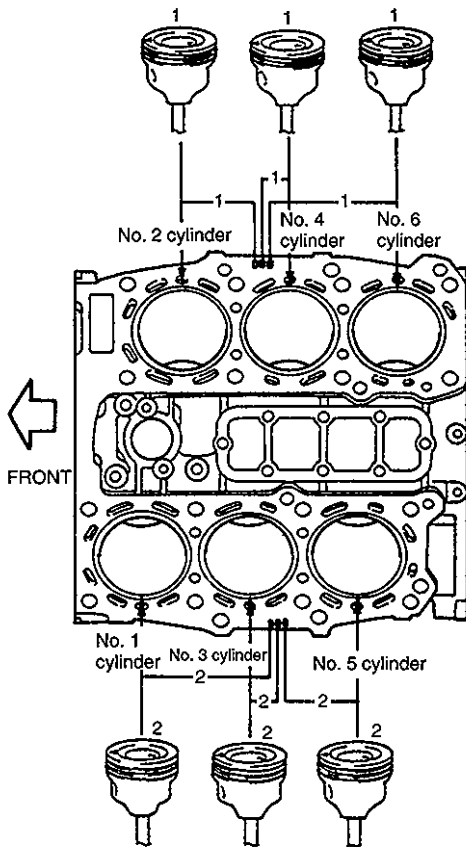

Piston		Cylinder		Piston-to-cylinder clearance
Number at the top (mark)	Outer diameter	Number on cylinder block	Bore diameter	
1	83.98 – 83.99 mm (3.3063 – 3.3066 in.)	1	84.01 – 84.02 mm (3.3075 – 3.3078 in.)	0.02 – 0.04 mm (0.0008 – 0.0015 in.)
2	83.97 – 83.98 mm (3.3059 – 3.3062 in.)	2	84.00 – 84.01 mm (3.3071 – 3.3074 in.)	0.02 – 0.04 mm (0.0008 – 0.0015 in.)

Also, a letter A, B or C is stamped on piston head but ordinarily it is not necessary to distinguish each piston by this letter.

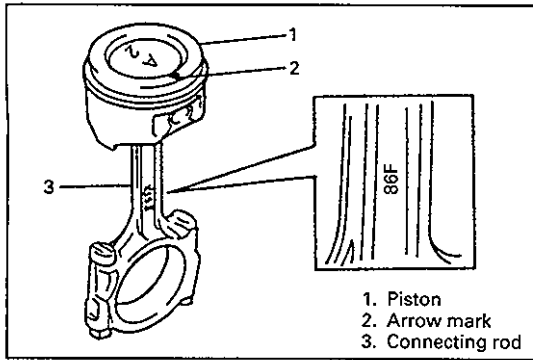



### 1) Install piston pin to piston and connecting rod:

After applying engine oil to piston pin and piston pin holes in piston and connecting rod, fit connecting rod to piston as shown in figure and insert piston pin to piston and connecting rod, and install piston pin circlips.

#### NOTE:

- "86F" mark on connecting rod must face toward crankshaft pulley side.

- Install circlip with its cut part facing as shown in figure.

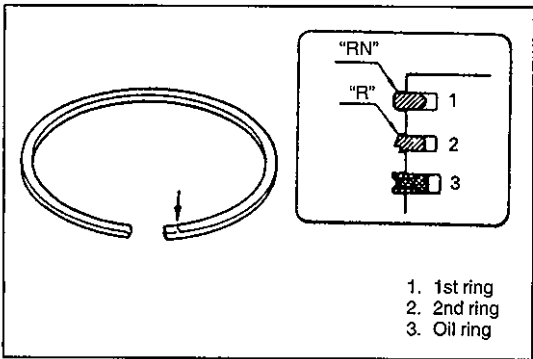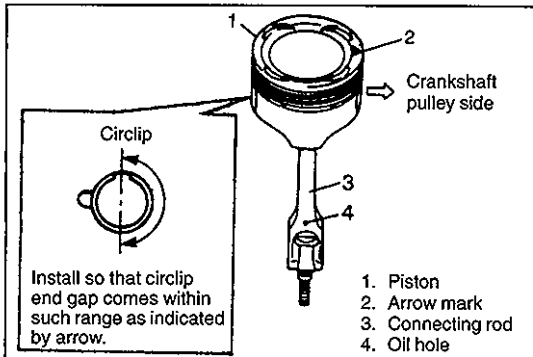


### 2) Install piston rings to piston:

- As indicated in figure at the left, 1st and 2nd rings have "RN" or "R" mark respectively. When installing these piston rings to piston, direct marked side of each ring toward top of piston.
- 1st rings differs from 2nd ring in thickness, shape and color of surface contacting cylinder wall.

Distinguish 1st ring from 2nd ring by referring to figure.

- When installing oil ring, install spacer first and then two rails.

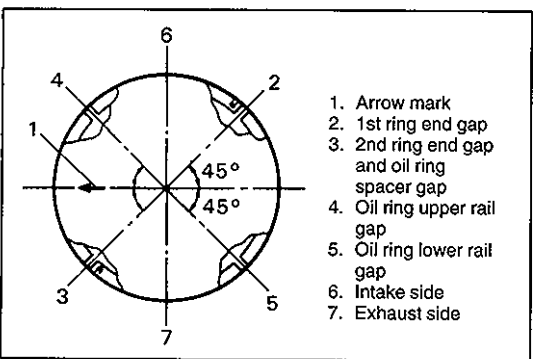


### 3) After installing three rings (1st, 2nd and oil rings), distribute their end gaps as shown in figure.

**INSTALLATION**


- 1) Apply engine oil to pistons, rings, cylinder walls, connecting rod bearings and crank pins.

**NOTE:**


**Do not apply oil between connecting rod and bearing or between bearing cap and bearing.**

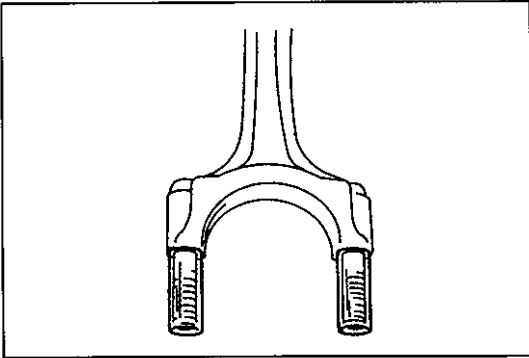

- 2) Install guide hoses over connecting rod bolts.  
These guide hoses protect crank pin and threads of rod bolt from damage during installation of connecting rod and piston assembly.

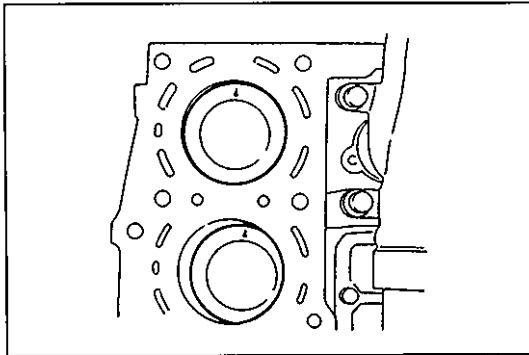


- 3) When installing piston and connecting rod assembly into cylinder bore, point arrow mark on piston head to crankshaft pulley side.

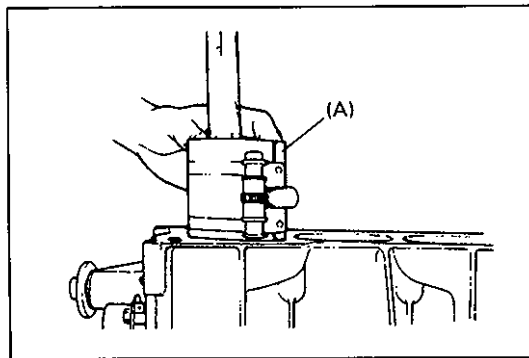

- 4) Install piston and connecting rod assembly into cylinder bore.  
Use special tool (Piston ring compressor) to compress rings.  
Guide connecting rod into place on crankshaft.  
Using a hammer handle, tap piston head to install piston into bore. Hold ring compressor firmly against cylinder block until all piston rings have entered cylinder bore.

**Special Tool**

**(A): 09916-77310**

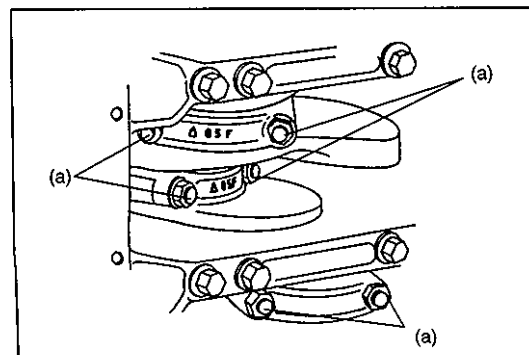

- 5) Install bearing cap:  
Point arrow mark on cap to crankshaft pulley side.  
Tighten cap nuts to specification.

**Tightening Torque**

**(a): 45 N·m (4.5 kg-m, 32.5 lb-ft)**




- 6) Install cylinder heads and oil pump to cylinder block.  
Refer to item "VALVES AND CYLINDER HEADS" and "OIL PUMP" in this section.
- 7) Install valve lash adjusters, camshafts and RH bank 2nd timing chain.  
Refer to item "CAMSHAFT AND VALVE LASH ADJUSTER" and "RH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 8) Install 1st timing chain.  
Refer to item "1ST TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 9) Install LH bank 2nd timing chain.  
Refer to item "LH BANK 2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 10) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 11) Install oil pan and pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for installation.
- 12) Install cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for installation.
- 13) Install exhaust manifold.  
Refer to item "EXHAUST MANIFOLD" in this section for installation.
- 14) Install radiator outlet pipe, radiator, cooling fan and water hose.  
Refer to Section 6B for installation.
- 15) Install throttle body and intake manifold.  
Refer to item "THROTTLE BODY AND INTAKE MANIFOLD" in this section for installation.
- 16) Adjust water pump drive belt tension.  
Refer to Section 6B for adjusting procedure.
- 17) Adjust power steering pump drive belt tension.  
Refer to Section 3B1 for adjusting procedure.
- 18) Adjust accelerator cable play and A/T throttle cable play. Refer to Section 6E2.
- 19) Check to ensure that all removed parts are back in place.  
Reinstall any necessary parts which have not been reinstalled.
- 20) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in Section 0B.
- 21) Refill cooling system referring to Section 6B.
- 22) Refill front differential housing with gear oil, referring to "DIFFERENTIAL" section.
- 23) Connect negative cable at battery.
- 24) Check ignition timing and adjust as necessary, referring to Section 6F2.
- 25) Verify that there is no fuel leakage, water leakage, oil leakage and exhaust gas leakage at each connection.
- 26) Check wheel alignment, referring to SECTION 3.

# UNIT REPAIR OVERHAUL

## ENGINE ASSEMBLY


### REMOVAL

- 1) Release fuel pressure in fuel feed line.  
Refer to Section 6.
- 2) Disconnect negative cable at battery.
- 3) Remove engine hood.
- 4) Drain engine oil.
- 5) Drain coolant.
- 6) Remove radiator, radiator fan shroud, cooling fan and radiator reservoir. Refer to Section 6B for removal.
- 7) Disconnect accelerator cable and A/T throttle cable (for A/T vehicle) from throttle body.
- 8) Remove strut tower bar and surge tank cover.
- 9) Disconnect IAT sensor coupler then remove air cleaner upper case, intake air hose, intake air pipe and surge tank pipe as a component.
- 10) Remove engine oil level gauge guide and A/T fluid level gauge guide (for A/T vehicle).
- 11) Remove ignition coil covers.

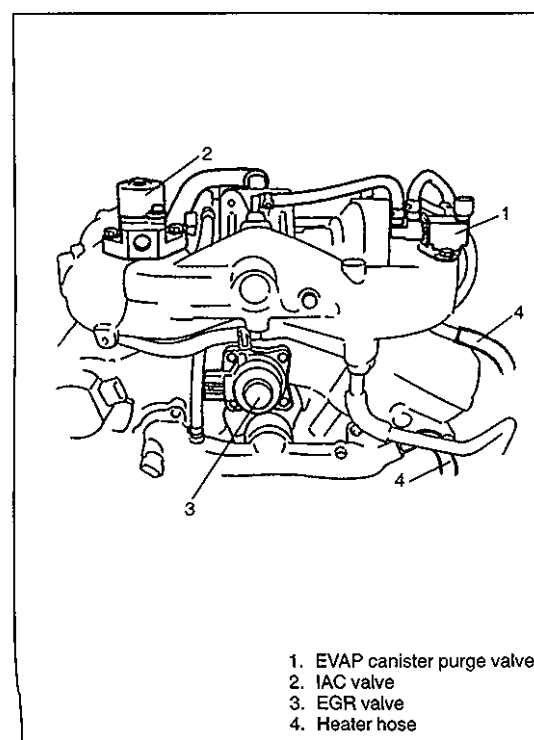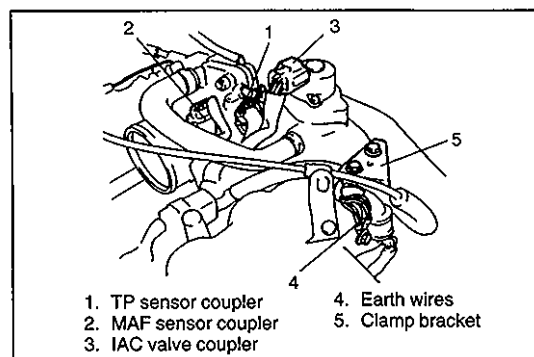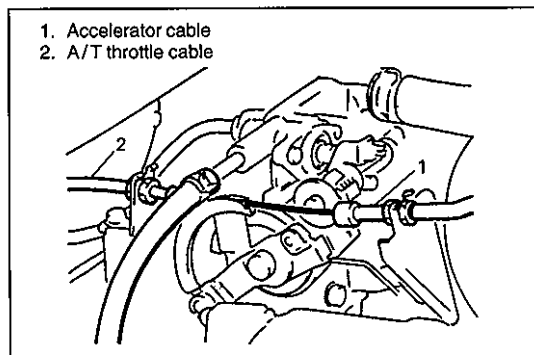

- 12) Disconnect following electric lead wires:
  - Injector wire coupler
  - CMP sensor coupler
  - Ignition coil coupler
  - TP sensor coupler
  - MAF sensor coupler
  - IAC valve coupler
  - Earth wire from surge tank
  - EVAP canister purge valve coupler
  - EGR valve coupler
  - Oxygen sensor coupler
  - Coolant temperature sensor coupler
  - Generator wires
  - Startor wires
  - Oil pressure wire
  - P/S pump wire
  - Earth wire from generator bracket
- 13) Remove clamps and brackets.
- 14) Disconnect following hoses:
  - Heater hose from heater water pipe
  - Heater hose from water outlet cap
  - EVAP canister hose from canister pipe
  - Brake booster vacuum hose
- 15) Remove IAC valve and EVAP canister purge valve.



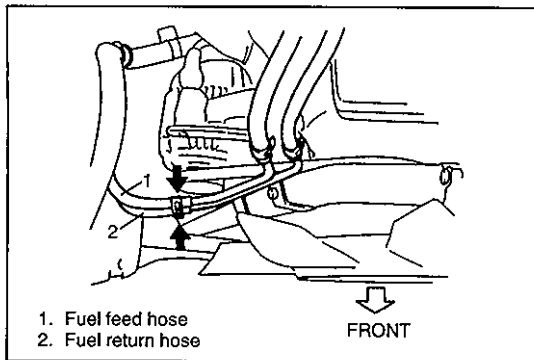

16) Disconnect following hoses at the location shown in figure:


- Fuel feed hose from fuel feed pipe
- Fuel return hose from fuel return pipe

17) Remove EVAP canister.

18) Remove P/S pump ass'y. Refer to Section 3B1 for details.

19) Remove A/C compressor ass'y. Refer to Section 1B for details.

20) Remove steering shaft lower assembly. Refer to Section 3C for details.

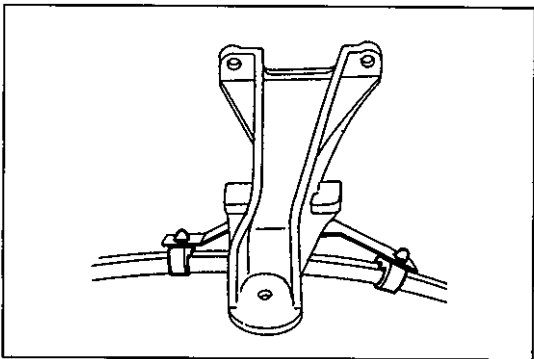

21) Raise vehicle.


22) Remove front differential housing with differential from chassis. Refer to Section 7E for removal.

23) Remove exhaust No.1 pipe. Refer to item "EXHAUST MAN-IFOLD" in this section for removal.

24) For vehicle with catalytic converter mounted exhaust manifold: Remove exhaust manifold stiffener from transmission.

25) Remove A/T fluid hose clamps from engine mounting bracket. (for A/T vehicle)

For A/T vehicle

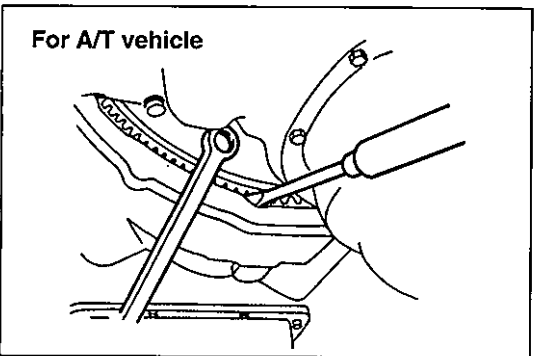


26) Remove clutch housing lower plate.

27) Remove torque converter bolts (for A/T vehicle).


28) Remove starter motor.

29) Lower vehicle.

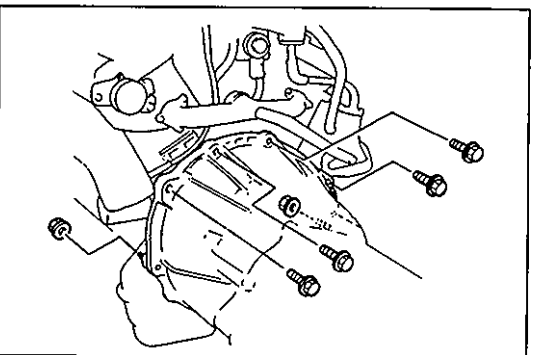


30) Support transmission. For A/T vehicle, don't jack under A/T oil pan to support transmission.

31) Remove bolts and nuts fastening cylinder block and transmission.

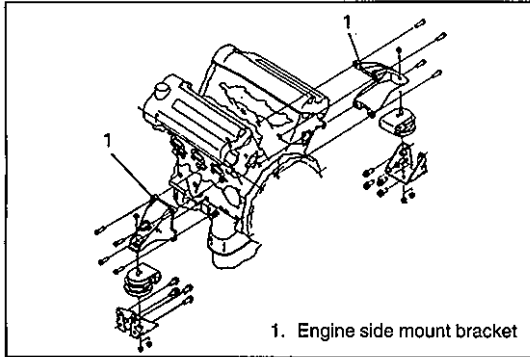

- 32) Install lifting device.
- 33) Disconnect engine side mounting brackets to engine mountings.

- 34) Before lifting engine, check to ensure all hoses, wires and cables are disconnected from engine.
- 35) Remove engine assembly from chassis and transmission by sliding toward front, and then, carefully hoist engine assembly.

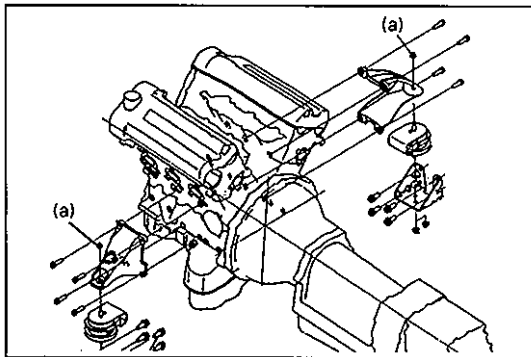


## INSTALLATION

Reverse removal procedure for installation, noting following points.

- 1) Lower engine assembly into engine compartment. Connect engine to transmission and engine side mounting brackets to engine mountings.
- 2) Tighten nuts fastening engine side mounting brackets and engine mountings.

### Tightening Torque

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

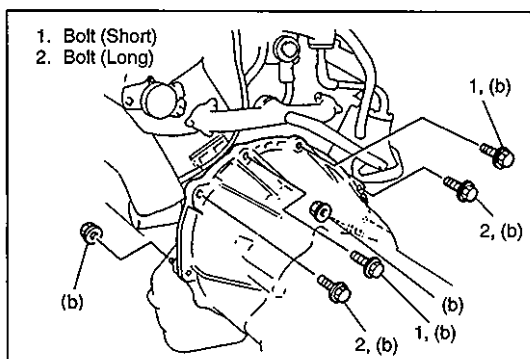


- 3) Tighten bolts and nuts fastening cylinder block and transmission to specified torque.

### Tightening Torque

(b): 80 N·m (8.0 kg-m, 58.0 lb-ft)

- 4) Remove lifting device

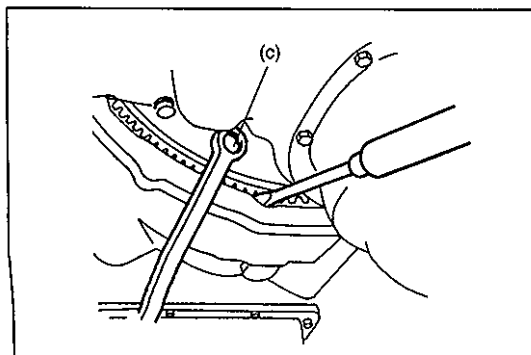


- 5) Tighten torque converter bolts to specified torque (for A/T vehicle).



### Tightening Torque

(c): 65 N·m (6.5 kg-m, 47.0 lb-ft)

Type 1

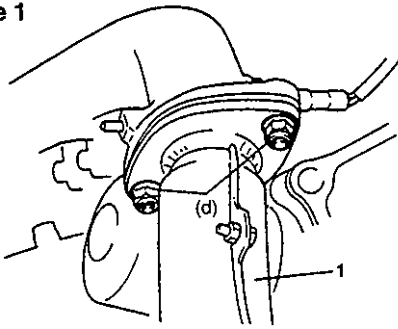

Type 2

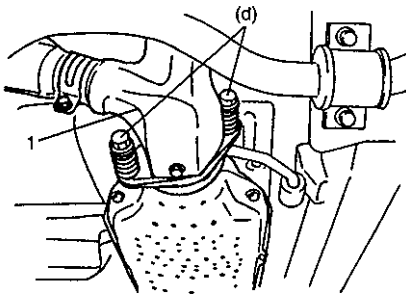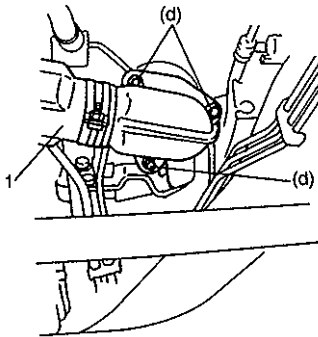

1. Exhaust No.1 pipe


6) Tighten bolts and nuts of exhaust No. 1 pipe to specified torque.


**Tightening Torque**

(d): 50 N·m (5.0 kg-m, 36.5 lb-ft)

- 7) Install front differential housing with differential to chassis. Refer to Section 7E for installation.
- 8) Install steering shaft lower assembly. Refer to Section 3C for details.
- 9) Install A/C compressor ass'y. Refer to Section 1B for details.
- 10) Install P/S pump ass'y. Refer to Section 3B1 for details.
- 11) Connect hoses, cables and electric wires.
- 12) Adjust accelerator cable and A/T throttle cable (for A/T vehicle) according to procedure described in Section 6E2.
- 13) Refill engine with engine oil referring to item "ENGINE OIL CHANGE" in Section 0B.
- 14) Refill cooling system, referring to Section 6B.
- 15) Check to ensure that all fasteners and clamps are tightened.
- 16) Upon completion of installation, verify that there is no fuel leakage, coolant leakage, P/S fluid leakage or exhaust gas leakage at each connection.

# MAIN BEARINGS, CRANKSHAFT AND CYLINDER BLOCK

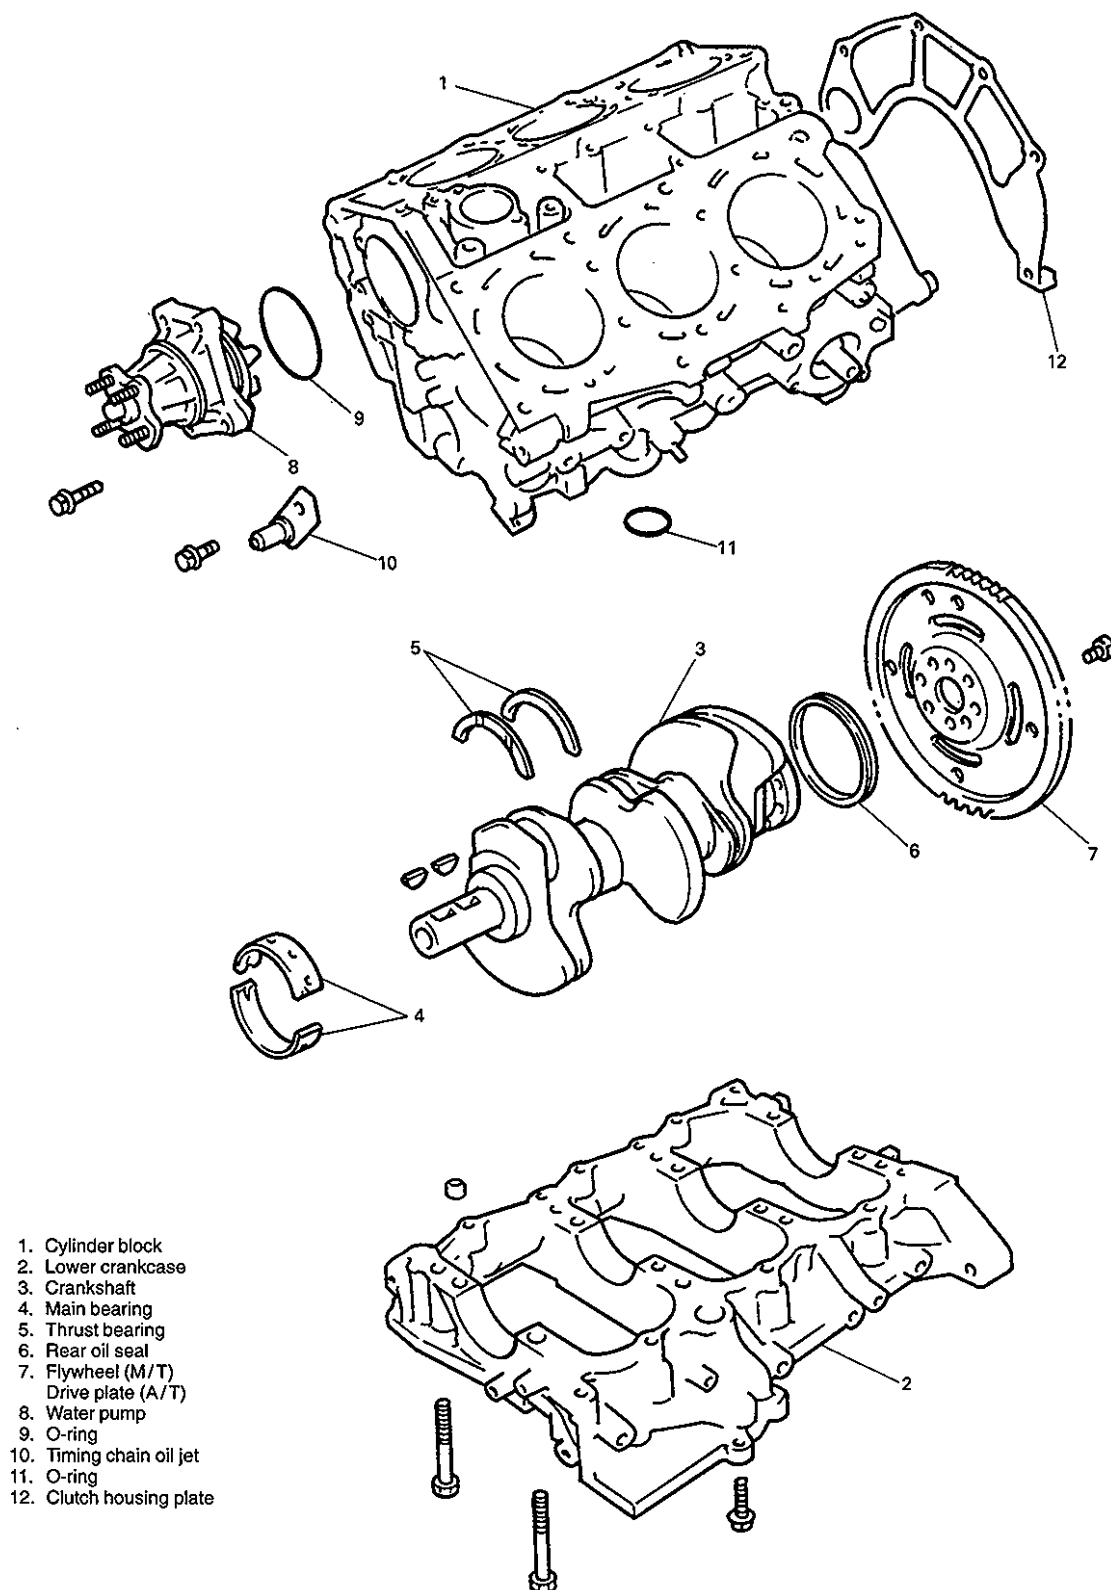

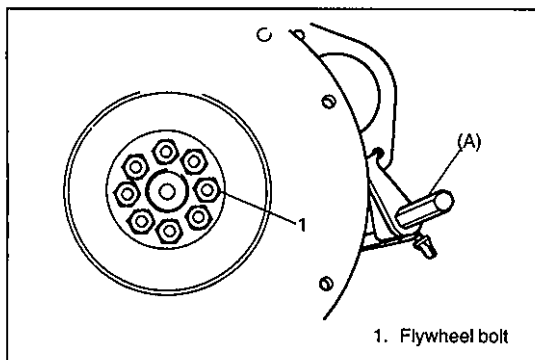

## REMOVAL

- 1) Remove engine assembly from vehicle as previously outlined.
- 2) Remove clutch and flywheel (for M/T vehicle) or drive plate (for A/T vehicle). For clutch removal, refer to Section 7C1. Using special tool (flywheel holder), remove flywheel (M/T vehicle) or drive plate (A/T vehicle).

### Special Tool

(A): 09924-17810


- 3) Remove throttle body, intake manifold, exhaust manifolds.
- 4) Remove oil pans (lower and upper) and oil pump strainer. Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 5) Remove cylinder head cover.
- 6) Remove timing chain cover. Refer to item "TIMING CHAIN COVER" in this section for removal.
- 7) Remove timing chains and chain tensioners, LH Bank 2nd timing chain, 1st timing chain and RH Bank 2nd timing chain.
- 8) Remove cylinder head assembly.
- 9) Remove pistons and connecting rods.
- 10) Remove oil pump and oil pump chain.

- 11) Loosen crankcase bolts, following sequence in figure and remove them.

### NOTE:

Loosen 8 mm thread diameter bolts first, then loosen 10 mm thread diameter bolts following the order shown in figure.

- 12) Remove crankshaft from cylinder block.


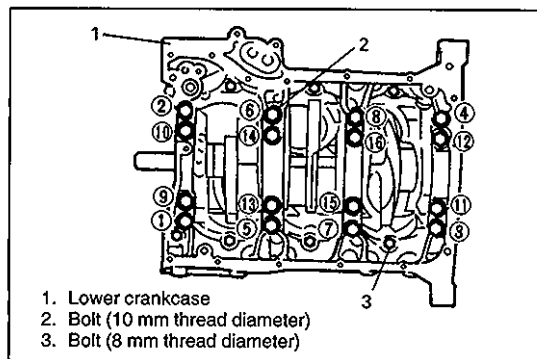


## INSPECTION

### Crankshaft runout

Using a dial gauge, measure runout at center journal. Rotate crankshaft slowly. If runout exceeds its limit, replace crankshaft.

**Limit on runout: 0.06 mm (0.0023 in.)**

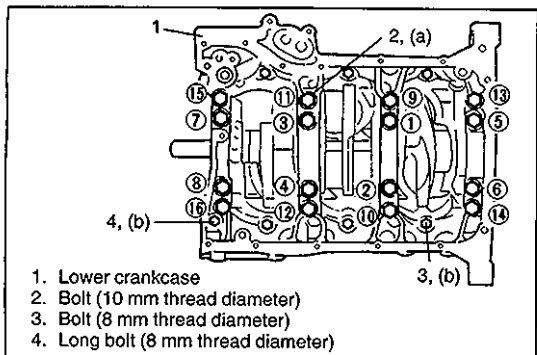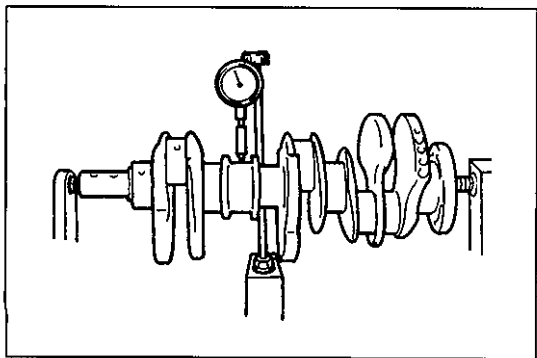

### Crankshaft thrust play


Measure this play with crankshaft set in cylinder block in the normal manner, that is, with thrust bearing and journal bearing caps installed. Tighten crankcase bolts to specified torque in such order as indicated in figure.

### NOTE:

Tighten 10 mm thread diameter bolts first (following the order shown in figure), then tighten 8 mm thread diameter bolts.

### Tightening Torque

- (a): 58 N·m (5.8 kg-m, 42.0 lb-ft)  
 (b): 27 N·m (2.7 kg-m, 19.5 lb-ft)

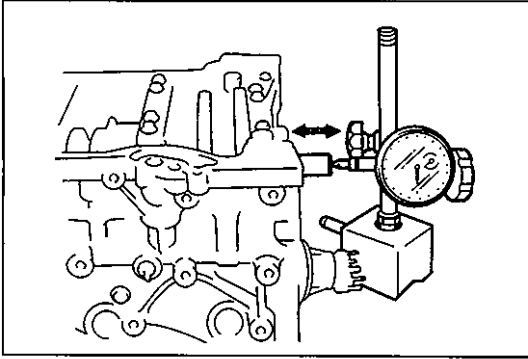


Use a dial gauge to read displacement in axial (thrust) direction of crankshaft.

If its limit is exceeded, replace thrust bearing with new standard one or oversize one to obtain standard thrust play.


#### Crankshaft Thrust Play

**Standard:** 0.11 – 0.31 mm (0.0044 – 0.0122 in.)

**Limit:** 0.38 mm (0.0149 in.)

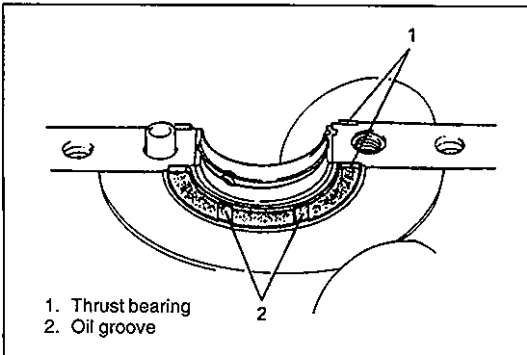

Item	Thrust Bearing	
	Standard	Oversize 0.125 mm (0.0049 in.)
Thickness of crankshaft thrust bearing	2.500 mm (0.984 in.)	2.563 mm (0.1009 in.)

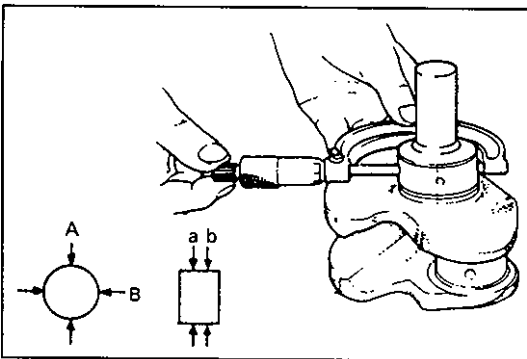

#### Out-of-round and taper (uneven wear) of journals

An unevenly worn crankshaft journal shows up as a difference in diameter at a cross section or along its length (or both). This difference, if any, is determined by taking micrometer readings. If any one of journals is badly damaged or if amount of uneven wear in the sense explained above exceeds its limit, regrind or replace crankshaft.

**Limit on out-of-round and taper:** 0.01 mm (0.0004 in.)


**Out-of-round:** A – B

**Taper:** a – b

#### Main Bearings

##### General information

- Service main bearings are available in standard size and 0.25 mm (0.0098 in.) undersize, and each of them has 5 kinds of bearings differing in tolerance.

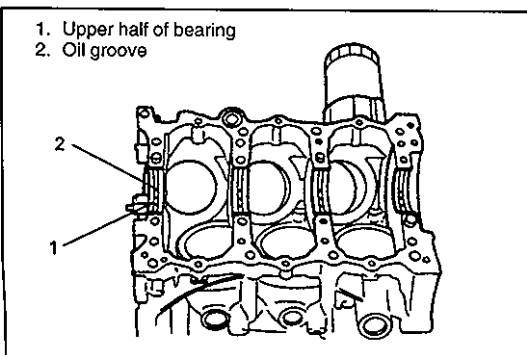




- Upper half of bearing has oil groove as shown in figure. Install this half with oil groove toward cylinder block.
- Lower half of bearing does not have oil groove.

## Inspect

Check bearings for pitting, scratches, wear or damage.

If any malfunction is found, replace both upper and lower halves.

Never replace either half without replacing the other half.

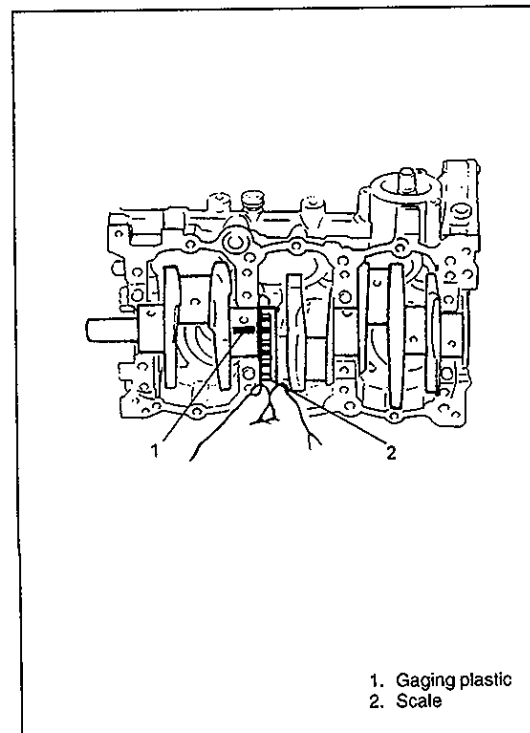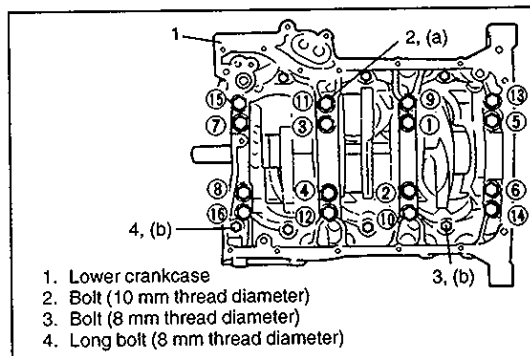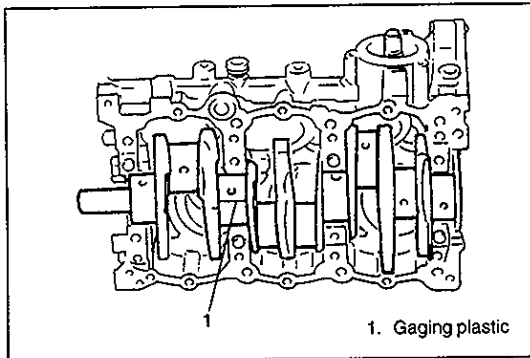

## Main bearing clearance

Check clearance by using gaging plastic according to following procedure.

- 1) Remove crankcase.
- 2) Clean bearings and main journals.
- 3) Place a piece of gaging plastic to full width of bearing (parallel to crankshaft) on journal, avoiding oil hole.
- 4) Install crankcase to cylinder block. Tighten crankcase bolts, following sequence in figure. Tighten crankcase bolts to specified torque.

### NOTE:

Tighten 10 mm thread diameter bolts first (following the order shown in figure) then tighten 8 mm thread diameter bolts.

### Tightening Torque

(a): 59 N·m (5.9 kg-m, 43.0 lb-ft)

(b): 27 N·m (2.7 kg-m, 19.5 lb-ft)

### NOTE:

Do not rotate crankshaft while gaging plastic is installed.

- 5) Remove crankcase and using scale on gaging plastic envelop, measure gaging plastic width at its widest point. If clearance exceeds its limit, replace bearing. Always replace both upper and lower inserts as a unit.


A new standard bearing may produce proper clearance. If not, it will be necessary to regrind crankshaft journal for use of 0.25 mm undersize bearing.

After selecting new bearing, recheck clearance.

## Bearing Clearance

Standard: 0.026 – 0.046 mm (0.0010 – 0.0018 in.)

Limit: 0.060 mm (0.0023 in.)

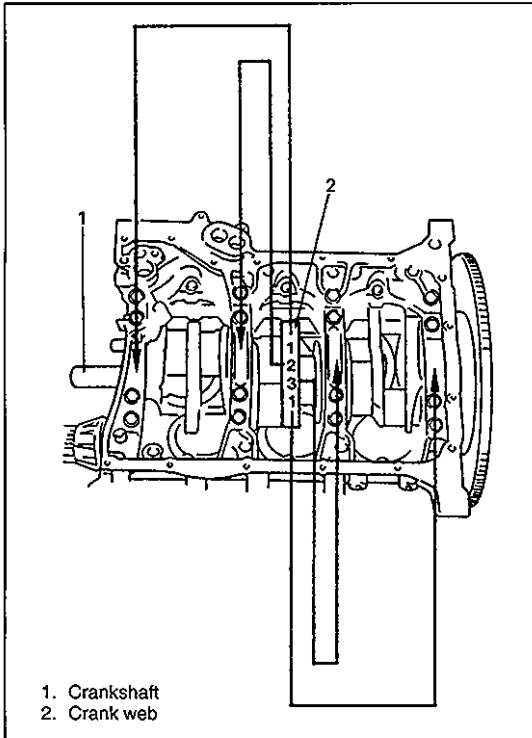


## Selection of main bearings

### STANDARD BEARING:

If bearing is in malcondition, or bearing clearance is out of specification, select a new standard bearing according to following procedure and install it.

- 1) First check journal diameter. As shown in figure, crank web has stamped numbers and alphabet at the center. Three kinds of numbers ("1", "2" and "3") represent following journal diameters.

Stamped numbers	Journal diameter
1	64.994 – 65.000 mm (2.5588 – 2.5590 in.)
2	64.988 – 64.994 mm (2.5586 – 2.5588 in.)
3	64.982 – 64.988 mm (2.5583 – 2.5586 in.)

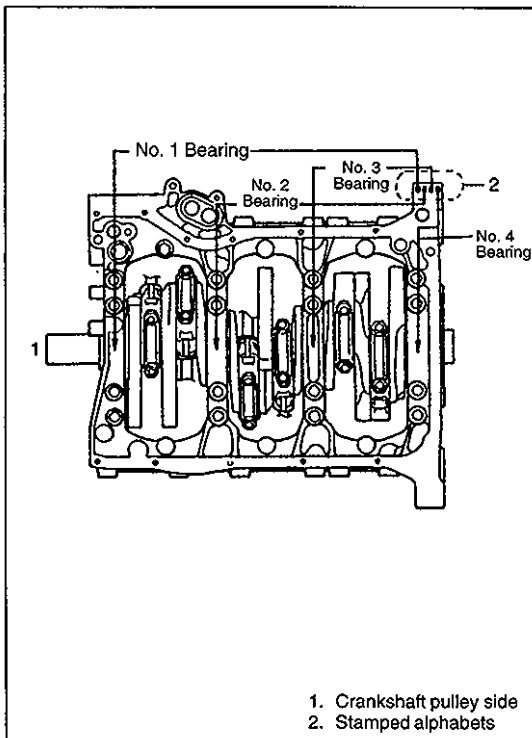


- 2) Next, check crankcase (bearing cap) bore diameter without bearing. On lower surface of lower crankcase 4 alphabets are stamped as shown in figure.

Three kinds of alphabets (A, B and C) represent following cap bore diameters.

Stamped alphabet	Bearing cap bore diameter (without bearing)
A	70.000 – 70.006 mm (2.7559 – 2.7561 in.)
B	70.006 – 70.012 mm (2.7561 – 2.7563 in.)
C	70.012 – 70.018 mm (2.7563 – 2.7566 in.)



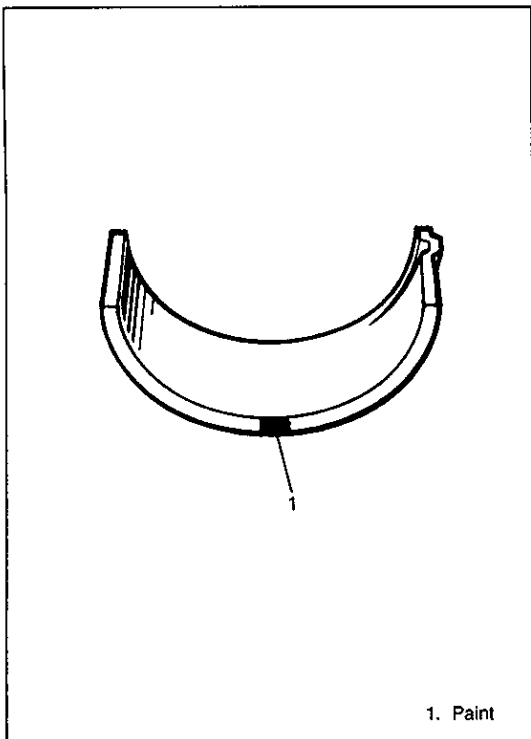

- 3) There are five kinds of standard bearings differing in thickness. To distinguish them, they are painted in following colors at the position as indicated in figure.

Each color indicates following thickness at the center of bearing.

Color painted	Bearing thickness
Green	2.493 – 2.497 mm (0.0982 – 0.0983 in.)
Black	2.496 – 2.500 mm (0.0983 – 0.0984 in.)
Colorless (no paint)	2.499 – 2.503 mm (0.0984 – 0.0985 in.)
Yellow	2.502 – 2.506 mm (0.0985 – 0.0986 in.)
Blue	2.505 – 2.509 mm (0.0986 – 0.0987 in.)

- 4) From number stamped on crank webs at its center and alphabets stamped on crankcase lower side, determine new standard bearing to be installed to journal, by referring to table shown below.


For example, if number stamped on crank webs is “1” and alphabet stamped on crankcase is “B”, install a new standard bearing painted in “Black” to its journal.

		Number stamped on crank web (Journal diameter)		
		1	2	3
Alphabet stamped on lower crankcase (Cap bore dia.)	A	Green	Black	Colorless
	B	Black	Colorless	Yellow
	C	Colorless	Yellow	Blue
		New standard bearing to be installed.		

- 5) Using gaging plastic, check bearing clearance with newly selected standard bearing.

If clearance still exceeds its limit, use next thicker bearing and recheck clearance.

- 6) When replacing crankshaft or cylinder block and crank case due to any reason, select new standard bearings to be installed by referring to number stamped on new crankshaft or alphabets stamped on new crankcase lower side.

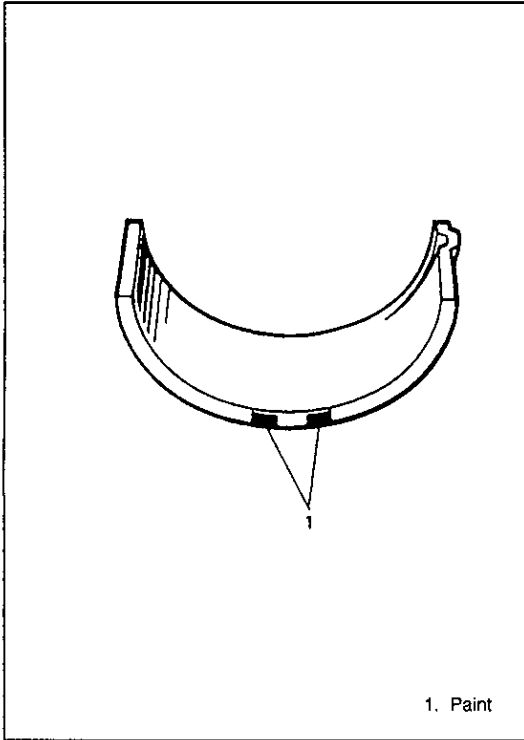**UNDERSIZE BEARING (0.25 mm):**

- 0.25 mm undersize bearing is available, in five kinds varying in thickness.

To distinguish them, each bearing is painted in following colors at such position as indicated in figure.


Each color represents following thicknesses at the center of bearing.

Color painted	Bearing thickness
Green & Red	2.618 – 2.622 mm (0.1031 – 0.1032 in.)
Black & Red	2.621 – 2.625 mm (0.1032 – 0.1033 in.)
Red only	2.624 – 2.628 mm (0.1033 – 0.1034 in.)
Yellow & Red	2.627 – 2.631 mm (0.1034 – 0.1035 in.)
Blue & Red	2.630 – 2.634 mm (0.1035 – 0.1036 in.)

- If necessary, regrind crankshaft journal and select undersize bearing to use with it as follows.


1) Regrind journal to following finished diameter.

**Finished diameter: 64.732 – 64.750 mm  
(2.5485 – 2.5492 in.)**

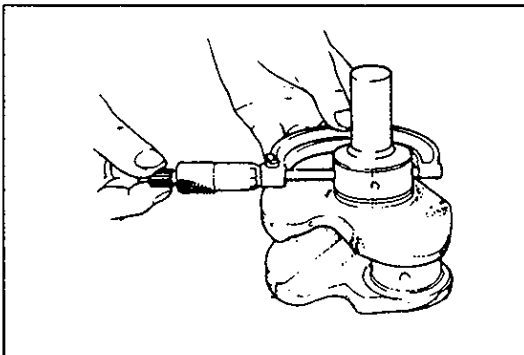


- 2) Using micrometer, measure reground journal diameter. Measurement should be taken in two directions perpendicular to each other in order to check for out-of-round.
- 3) Using journal diameter measured above and alphabets stamped on lower crankcase, select an undersize bearing by referring to table given below.
- Check bearing clearance with newly selected undersize bearing.

		Measured journal diameter		
		64.744 – 64.750 mm (2.5489 – 2.5492 in.)	64.738 – 64.744 mm (2.5487 – 2.5489 in.)	64.732 – 64.738 mm (2.5485 – 2.5487 in.)
Alphabets stamped on lower crankcase	A	Green & Red	Black & Red	Red only
	B	Black & Red	Red only	Yellow & Red
	C	Red only	Yellow & Red	Blue & Red
		Undersize bearing to be installed		

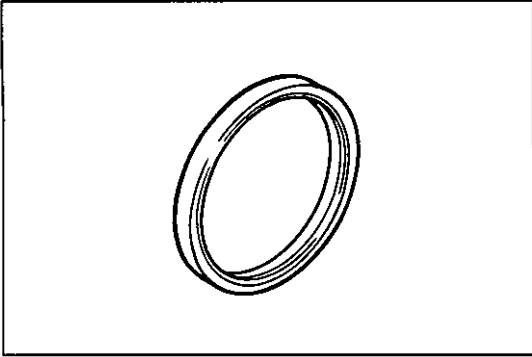

### Rear Oil Seal


Carefully inspect oil seal for wear or damage. If lip portion is worn or damaged, replace oil seal.

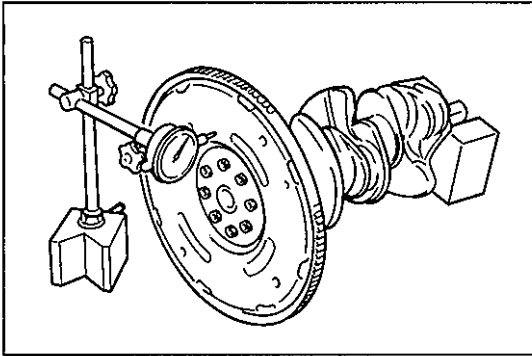

### Flywheel

- If ring gear is damaged, cracked or worn, replace flywheel.
- If the surface contacting clutch disc is damaged, or excessively worn, replace flywheel.
- Check flywheel for face runout with a dial gauge.  
If runout exceeds its limit, replace flywheel.

**Limit on runout: 0.2 mm (0.0078 in.)**

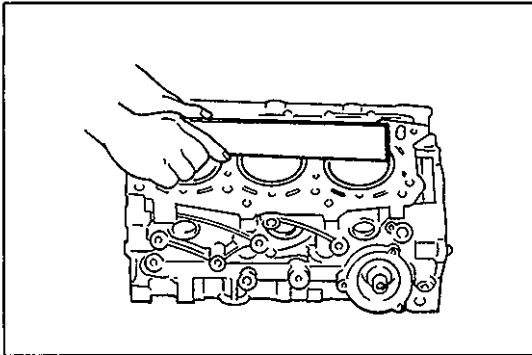


### Cylinder Block

#### Distortion of gasketed surface

- Using straightedge and thickness gauge, check gasketed surface for distortion and, if flatness exceeds its limit, correct it.

**Flatness Limit: 0.06 mm (0.0024 in.)**

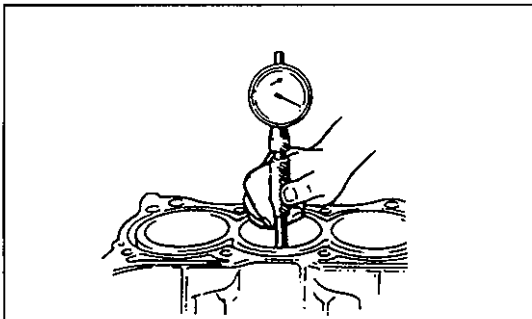

### Honing or rebores cylinders

- 1) When any cylinder needs rebores, all other cylinders must also be rebores at the same time.
- 2) Select oversized piston according to amount of cylinder wear.

Size	Piston diameter
STD	83.970 – 83.990 mm (3.3059 – 3.3067 in.)
O/S 0.25	84.220 – 84.240 mm (3.3157 – 3.3165 in.)
O/S 0.50	84.470 – 84.490 mm (3.3256 – 3.3264 in.)

- 3) Using micrometer, measure piston diameter.
- 4) Calculate cylinder bore diameter to be rebores as follows.


$$D = A + B - C$$

D: Cylinder bore diameter to be rebores

A: Piston diameter as measured

B: Piston clearance = 0.02 – 0.04 mm  
(0.0008 – 0.0015 in.)

C: Allowance for honing = 0.02 mm  
(0.0008 in.)

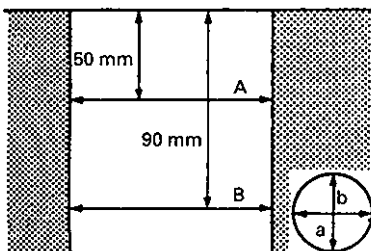

- 5) Rebore and hone cylinder to calculated dimension.

**NOTE:**

**Before reboring, install all main bearing caps in place and tighten to specification to avoid distortion of bearing bores.**

- 6) Measure piston clearance after honing.

## INSTALLATION

**NOTE:**

- All parts to be installed must be perfectly clean.
- Be sure to oil crankshaft journals, journal bearings, thrust bearings, crank pins, connecting rod bearings, pistons, piston rings and cylinder bores.
- Journal bearings, crankcase (bearings caps), connecting rods, rod bearings, rod bearing caps, pistons and piston rings are in combination sets. Do not disturb combination and try to see that each part goes back to where it came from, when installing.
- Clean mating surface of cylinder block and crankcase, remove oil, old sealant and dust from mating surface.

- 1) Fit main bearings to cylinder block.

One of two halves of main bearing, has oil groove. Install this half with oil groove to cylinder block, and another half without oil groove to crankcase.

Make sure that two halves are painted in the same color.




- 2) Install O-ring to cylinder block.


- 3) Fit thrust bearings to cylinder block between No.2 and No.3 cylinders. Face oil groove sides to crank webs.

- 4) Put crankshaft to cylinder block.

- 5) Apply sealant "A" to crankcase mating surface area as shown in figure.

**"A": Sealant 99000-31150**

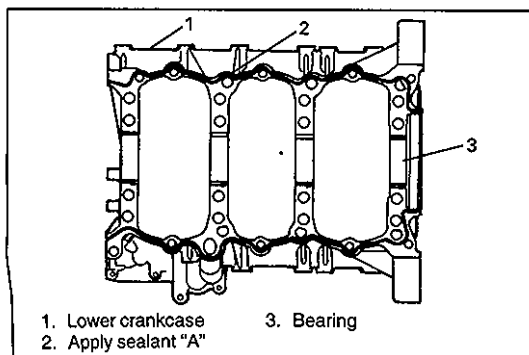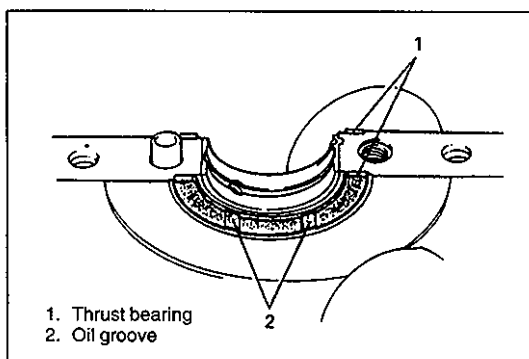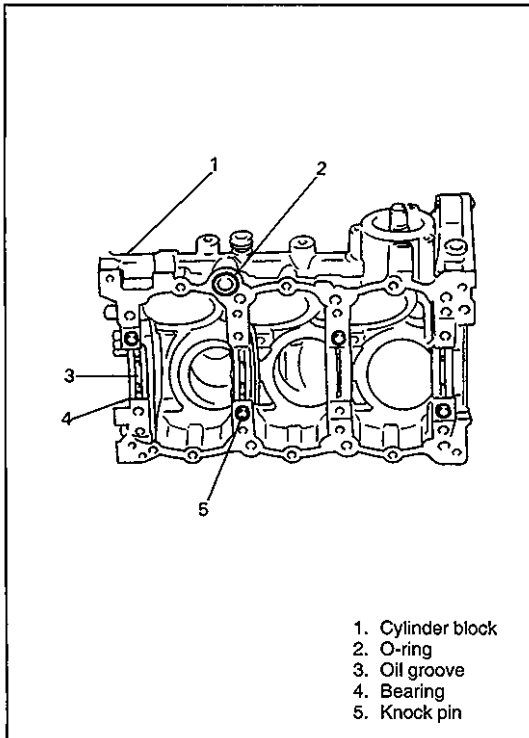

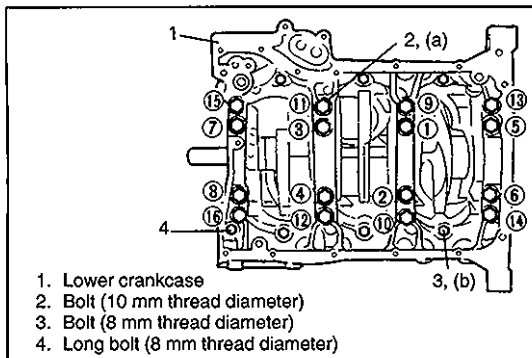

- 6) Install crankcase to cylinder block. Apply oil to crankcase bolts before installing them. Tighten crankcase bolts, following sequence in figure. Tighten crankcase bolts to specified torque.

**NOTE:**

Tighten 10 mm thread diameter bolts first (following the order shown in figure), then tighten 8 mm thread diameter bolts.


**Tightening Torque**

(a): 58 N·m (5.8 kg-m, 42.0 lb-ft)

(b): 27 N·m (2.7 kg-m, 19.5 lb-ft)

**NOTE:**

After tightening crankcase bolts, check to be sure that crankshaft rotates smoothly when turned by hand.

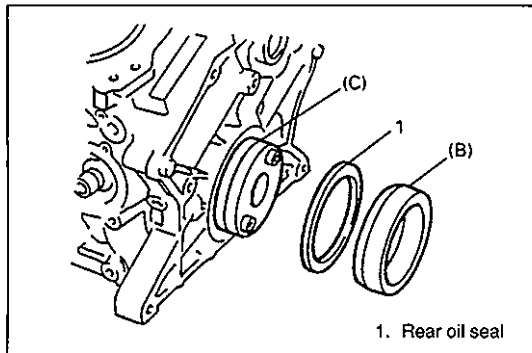


- 7) Using special tools (Oil seal installer and oil seal guide), install rear oil seal.

**Special Tool**

(B): 09911-97810

(C): 09911-97710

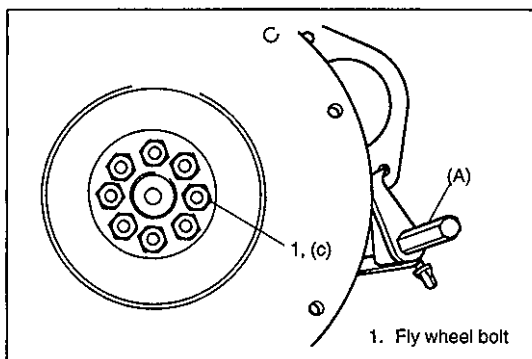

- 8) Install flywheel (M/T vehicle) or drive plate (A/T vehicle). Using special tool, lock flywheel or drive plate, and tighten flywheel or drive plate bolts to specification.

**Special Tool**

(A): 09924-17810

**Tightening Torque**

(c): 70 N·m (7.0 kg-m, 50.5 lb-ft)

- 9) Install oil pump, pistons and connecting rods as previously outlined.  
10) Install oil pump strainer and oil pan.  
11) Install cylinder heads assembly to cylinder block.

**NOTE:**


Tighten cylinder head bolts to specified torque as previously outlined.

Whenever installing cylinder head to new cylinder block, use following procedure to tighten cylinder head bolts.


- Tighten cylinder head bolts to specified torque as previously outlined and loosen them once till tightening torque becomes "zero". And then torque them to specification again.

- 12) Install crankshaft oil pump sprocket, timing chain sprocket, oil pump chain, timing chain, timing chain cover, crankshaft pulley, water pump pulley, etc., as previously outlined.  
13) Install clutch to flywheel (for M/T vehicle). For clutch installation, refer to Section 7C1.  
14) Install engine assembly to vehicle as previously outlined.


# SPECIAL TOOLS

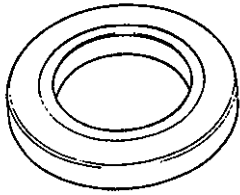


09911-97810  
Oil seal installer

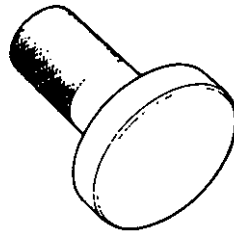


09913-75510  
Bearing installer

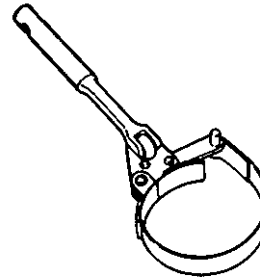


09915-47310  
Oil filter wrench

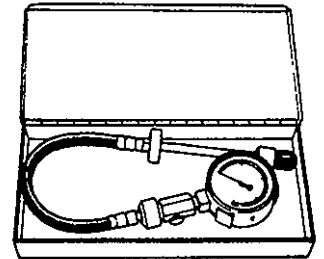


09915-64510  
Compression gauge

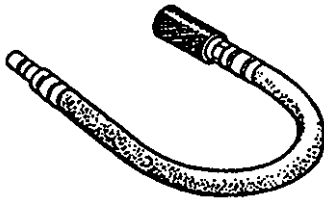


09915-64530  
Compression gauge hose

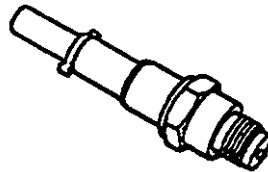


09915-67010  
Compression gauge attachment (c)

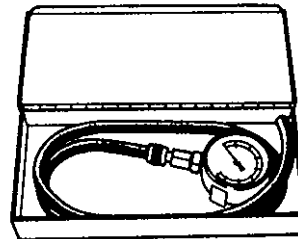


09915-67310  
Vacuum gauge

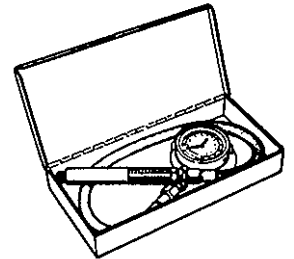


09915-77310  
Oil pressure gauge

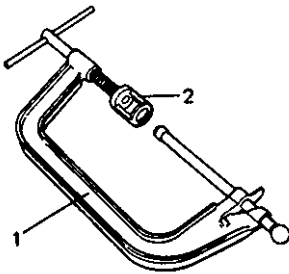


1. 09916-14510  
Valve lifter  
2. 09916-14910  
Valve lifter attachment

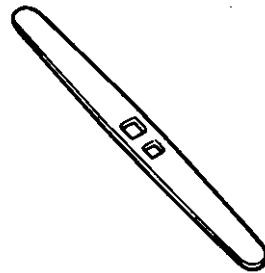


09916-34541  
Reamer handle

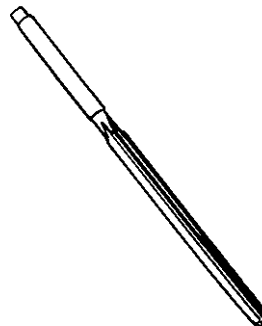


09916-37810  
Reamer (6 mm)

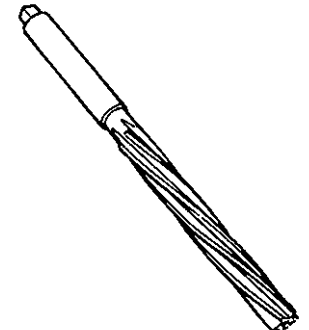


09916-38210  
Reamer (11 mm)

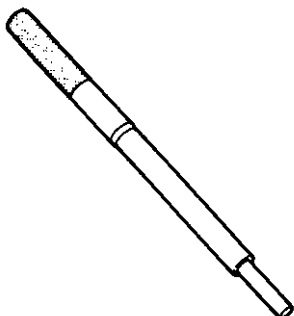


09916-44910  
Valve guide remover

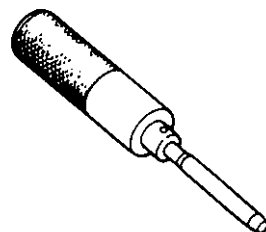

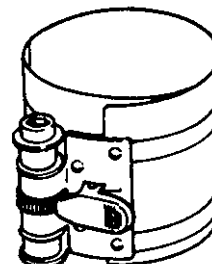






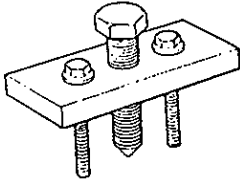
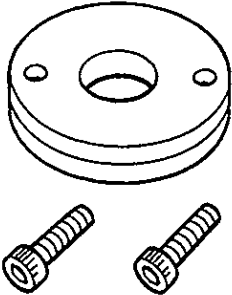
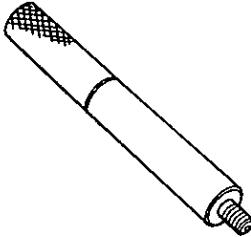
09916-58210  
Valve guide installer handle

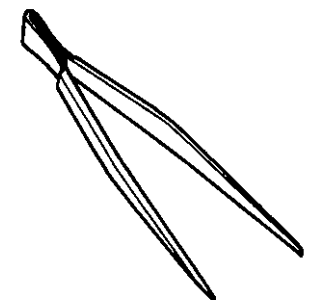

09916-77310  
Piston ring compressor

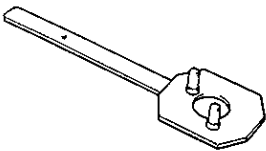

09916-84510  
Forceps

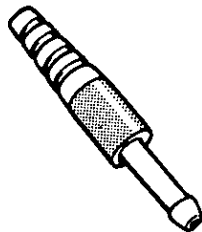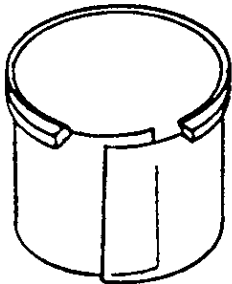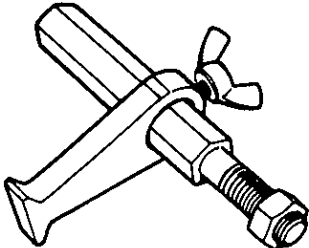 <p>09917-68221 Camshaft lock holder</p>	 <p>09917-87810 Valve guide installer</p>	 <p>09917-98221 Valve stem seal installer</p>	 <p>09918-08210 Vacuum gauge hose joint</p>
 <p>09919-28610 Protective sleeve</p>	 <p>09924-17810 Flywheel holder</p>		 <p>09926-58010 Bearing puller attachment</p>
 <p>09944-36011 Steering wheel remover</p>	 <p>09911-97710 Oil seal guide</p>	 <p>09915-76510 Oil pressure gauge attachment</p>	

## REQUIRED SERVICE MATERIAL

RECOMMENDED SUZUKI PRODUCT	USE
Sealant 1207C 99000-31150	<ul style="list-style-type: none"> <li>• To apply to mating surfaces of cylinder block and oil pan.</li> <li>• To apply to mating surfaces of cylinder block and timing chain cover.</li> </ul>

# SECTION 6A4

## ENGINE MECHANICAL (J20 ENGINE)

6A4

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System:

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components and Wiring Location View" under "General Description" in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and "Service Precautions" under "On-Vehicle Service" in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the "LOCK" position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6A4- 2
<b>ON-VEHICLE SERVICE</b> .....	6A4- 4
Compression Check .....	6A4- 4
Engine Vacuum Check .....	6A4- 6
Oil Pressure Check .....	6A4- 7
Air Cleaner Element .....	6A4- 8
Throttle Body and Intake Manifold .....	6A4- 9
Exhaust Manifold .....	6A4-12
Cylinder Head Cover .....	6A4-15
Oil Pan and Oil Pump Strainer .....	6A4-16
Oil Pump .....	6A4-19
Timing Chain Cover .....	6A4-22
2nd Timing Chain and Chain Tensioner .....	6A4-26
1st Timing Chain and Chain Tensioner .....	6A4-32
Camshafts and Valve Lash Adjusters .....	6A4-38
Valves and Cylinder Head .....	6A4-45
Pistons, Piston Rings, Connecting Rods and Cylinders .....	6A4-57
Engine Mountings .....	6A4-67
<b>UNIT REPAIR OVERHAUL</b> .....	6A4-68
Engine Assembly .....	6A4-68
Main Bearings, Crankshaft and Cylinder Block .....	6A4-72
<b>SPECIAL TOOLS</b> .....	6A4-85
<b>REQUIRED SERVICE MATERIALS</b> .....	6A4-86
<b>TIGHTENING TORQUE SPECIFICATIONS</b> .....	6A4-87




## GENERAL DESCRIPTION

### ENGINE

The engine is water-cooled, in line 4 cylinders, 4 stroke cycle gasoline unit with its DOHC (Double overhead camshaft) valve mechanism arranged for "V" type valve configuration and 16 valves (4 valves/one cylinder).

The double overhead camshaft is mounted over the cylinder head; it is driven from crankshaft through timing chains, and no push rods are provided in the valve train system.

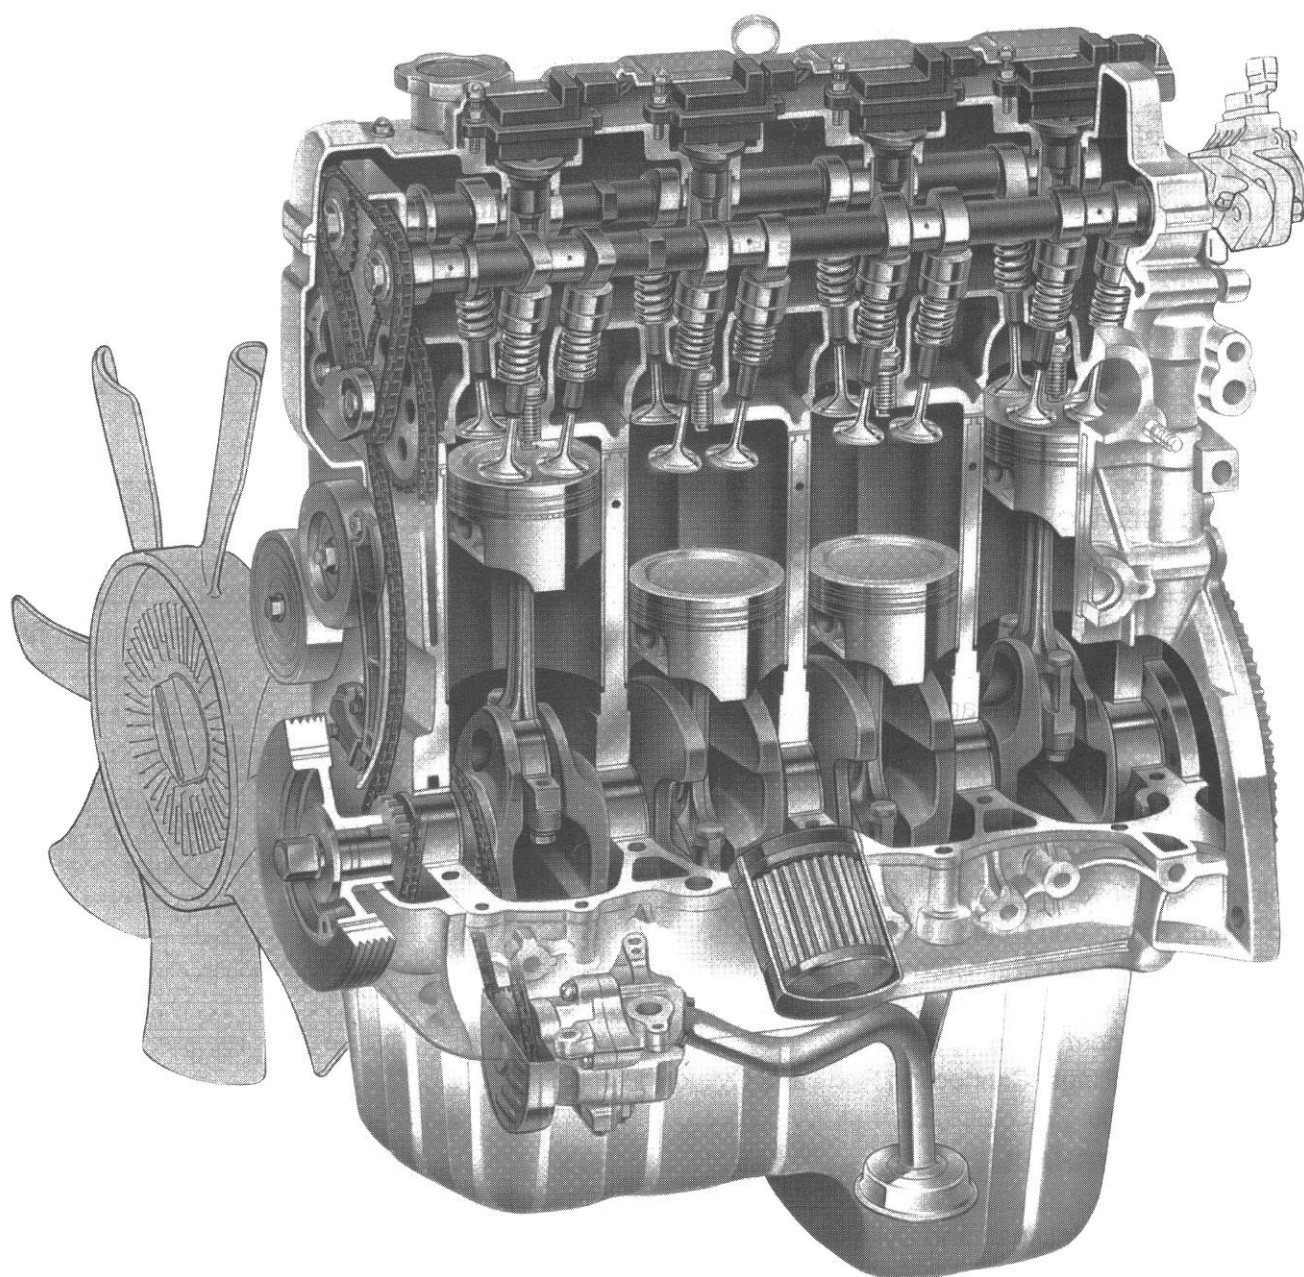


## ENGINE LUBRICATION

The oil pump is of a trochoid type, and mounted under the crankshaft. Oil is drawn up through the oil pump strainer and passed through the pump to the oil filter. The filtered oil flows into 2 paths in cylinder block. In one path, oil reaches the crankshaft journal bearings. Oil from the crankshaft journal bearings is supplied to the connecting rod bearings by means of intersecting passages drilled in the crankshaft, and then injected from the big end of connecting rod to lubricate piston, rings, and cylinder wall.

In other path oil goes up to the cylinder head and lubricates valves and camshafts, etc., after passing through the internal oilway of camshafts.

An oil relief valve is provided on the oil pump. This valve starts relieving oil pressure when the pressure exceeds about 420 kPa (4.2 kg/cm<sup>2</sup>, 59.7 psi).

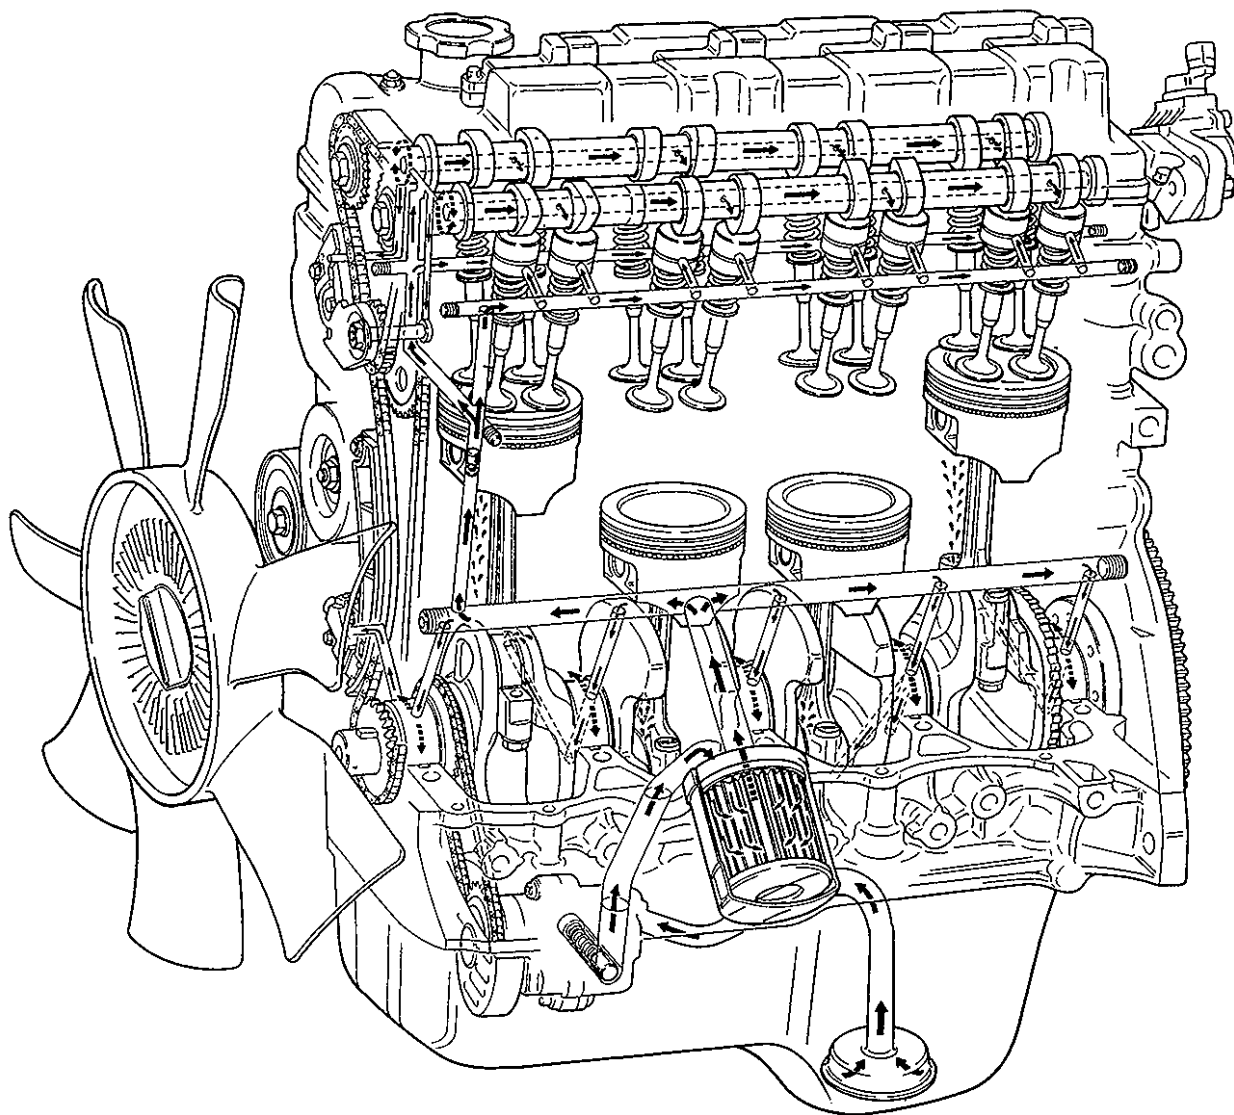

## ON-VEHICLE SERVICE


### COMPRESSION CHECK

Check compression pressure on all 4 cylinders as follows:


- 1) Warm up engine.
- 2) Stop engine after warming up.

#### NOTE:

**After warming up engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake and block drive wheels.**

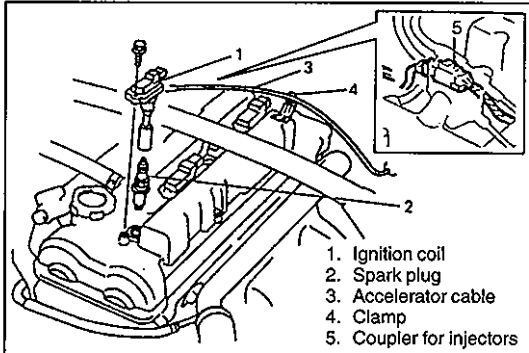

- 3) Disconnect accelerator cable from clamp (For LH steering vehicle only).
- 4) Disconnect ignition coil couplers.
- 5) Remove ignition coils.
- 6) Remove all spark plugs.
- 7) Disconnect fuel injector wires at the coupler.

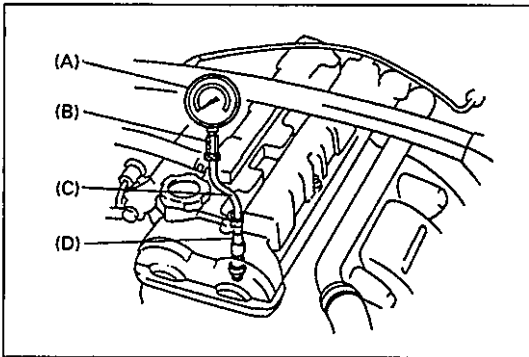

- 8) Install special tool (Compression gauge) into spark plug hole.


#### Special Tool

(A): 09915-64510-001

(B): 09915-64510-002

(C): 09915-64530

(D): 09915-67010

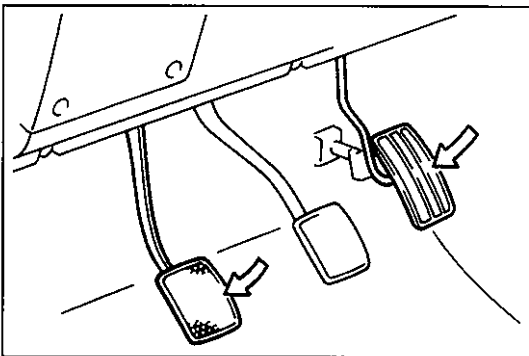


- 9) Disengage clutch (to lighten starting load on engine) for M/T vehicle, and depress accelerator pedal all the way to make throttle fully open.

- 10) Crank engine with fully charged battery, and read the highest pressure on compression gauge.

**NOTE:**

**For measuring compression pressure, crank engine at least 250 r/min. by using fully charged battery.**

	Compression pressure
Standard	1400 kPa (14.0 kg/cm <sup>2</sup> , 199.0 psi)
Limit	1200 kPa (12.0 kg/cm <sup>2</sup> , 170.0 psi)
Max. difference between any two cylinders	100 kPa (1.0 kg/cm <sup>2</sup> , 14.2 psi)

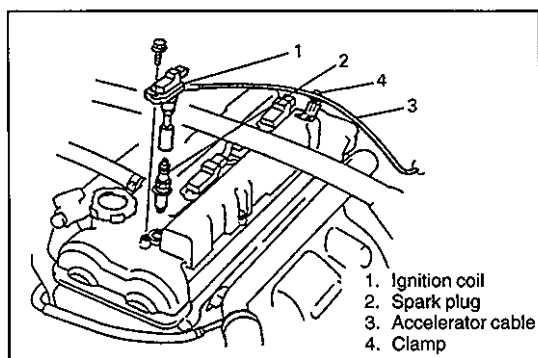

- 11) Carry out steps 8), 9) and 10) on each cylinder to obtain 4 readings.
- 12) After checking, install spark plugs and ignition coils.
- 13) Connect ignition coil couplers.
- 14) Connect accelerator cable to clamp (For LH steering vehicle only).


## ENGINE VACUUM CHECK

The engine vacuum that develops in the intake line is a good indicator of the condition of the engine. The vacuum checking procedure is as follows:

- 1) Warm up engine to normal operating temperature and make sure that engine idle speed is within specification.

### NOTE:

After warming up engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake and block drive wheels.

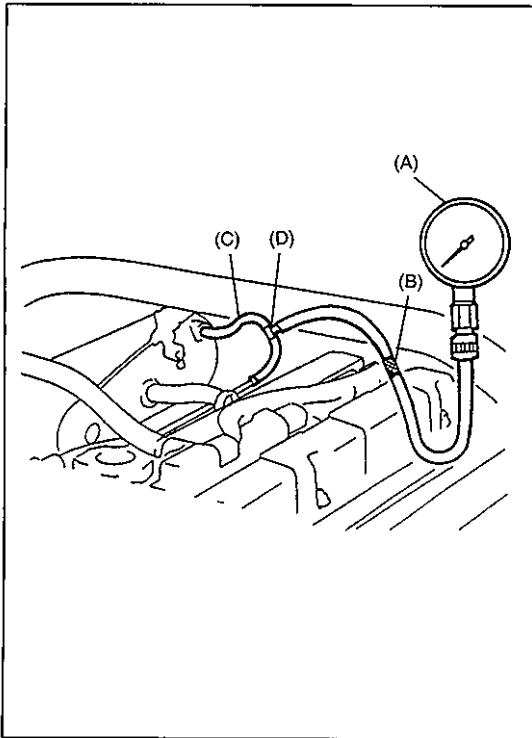

- 2) Stop engine and disconnect vacuum hose from intake manifold.
- 3) Connect special tools (vacuum gauge and hose joint) to vacuum hose and intake manifold.

### Special Tool

(A): 09915-67310

(B): 09918-08210

### SUZUKI GENUINE PARTS

(C): Hose 09343-03087

(D): 3-way joint 09367-04002

- 4) Start engine and run engine at specified idle speed (see section 6E1), and read vacuum gauge. Vacuum should be within specification.

**Vacuum specification: 52.6 – 65.8 kPa**

(at sea level)

(40 – 50 cm Hg, 15.7 – 19.7 in Hg)

at specified idle speed

- 5) After checking, remove vacuum gauge and hose joint.
- 6) Connect vacuum hose to intake manifold.

## OIL PRESSURE CHECK

### WARNING:

To avoid danger of being burned, do not touch exhaust manifold when exhaust system is hot.

When servicing, be sure to perform it after exhaust system has cooled down.

### NOTE:

Prior to checking oil pressure, check the followings.

- Oil level in oil pan.

If oil level is low, add oil up to Full level hole on oil level gauge.

- Oil quality.

If oil is discolored, or deteriorated, change it.

For particular oil to be used, refer to Section 0B.

- Oil leaks.

If leak is found, repair it.

1) Remove exhaust manifold cover and then oil pressure switch from cylinder block.

2) Install special tool (Oil pressure gauge) to vacated threaded hole.

### Special Tool

(A): 09915-77310

(B): 09915-78211

### CAUTION:

Be careful not to make special tool touch exhaust manifold when installing because exhaust manifold becomes very hot.

3) Start engine and warm it up to normal operating temperature.

### NOTE:

Be sure to place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake and block drive wheels.

4) After warming up, raise engine speed to 4,000 r/min and measure oil pressure.

### Oil pressure specification:

390 – 470 kPa (3.9 – 4.7 kg/cm<sup>2</sup>, 55.5 – 66.8 psi) at 4,000 r/min (rpm)

5) After checking oil pressure, stop engine and remove oil pressure gauge.

6) Before reinstalling oil pressure switch, be sure to wrap its screw threads with sealing tape and tighten switch to specified torque.




### Tightening Torque


(a): 14 N·m (1.4 kg-m, 10.5 lb-ft)

### NOTE:

If sealing tape edge is bulged out from screw threads of switch, cut it off.

7) Start engine and check oil pressure switch for oil leakage.

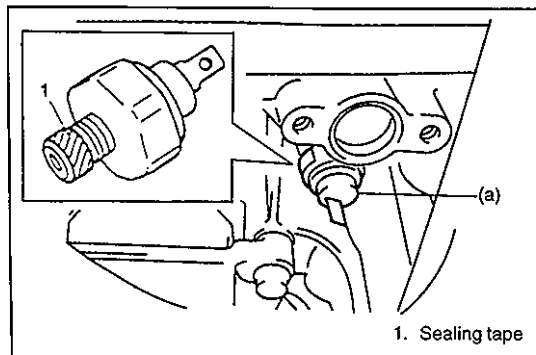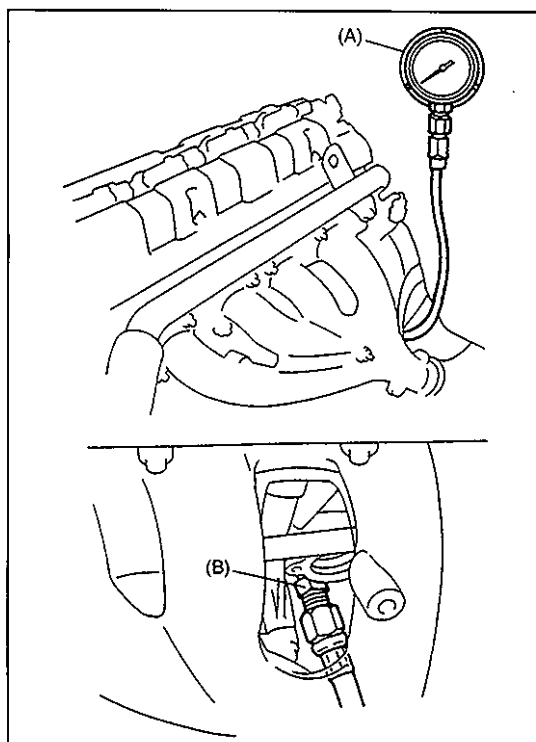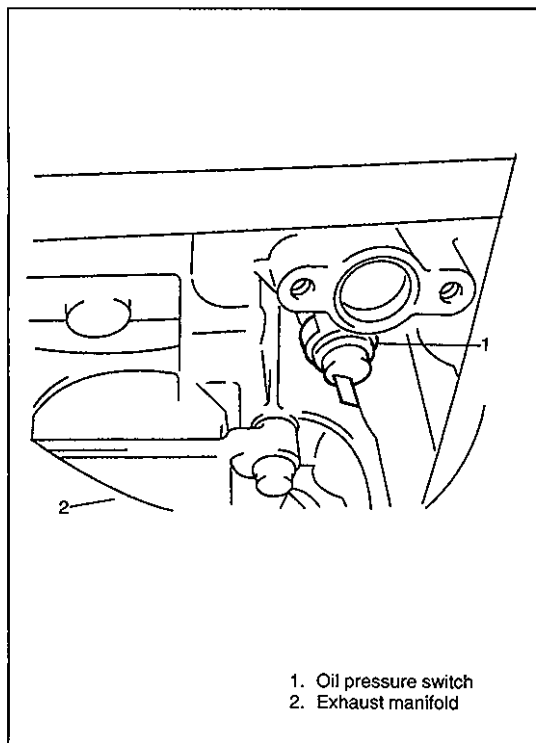

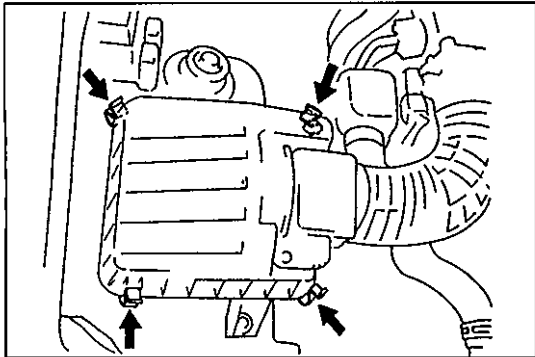


## AIR CLEANER ELEMENT

### REMOVAL

- 1) Remove air cleaner case clamps.
- 2) Remove air cleaner element from case.

### INSPECT

Check air cleaner element for dirt. Replace excessively dirty element.

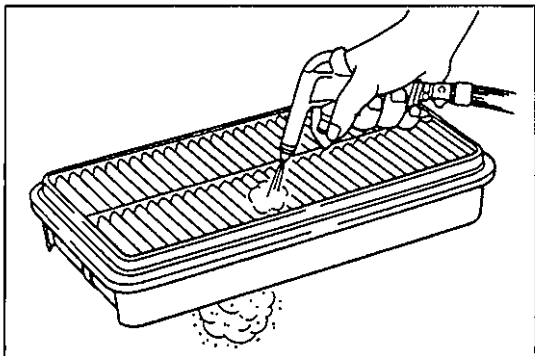


### CLEAN

Blow off dust by compressed air from air outlet side of element.

### INSTALLATION


Reverse removal procedure for installation.

## THROTTLE BODY AND INTAKE MANIFOLD

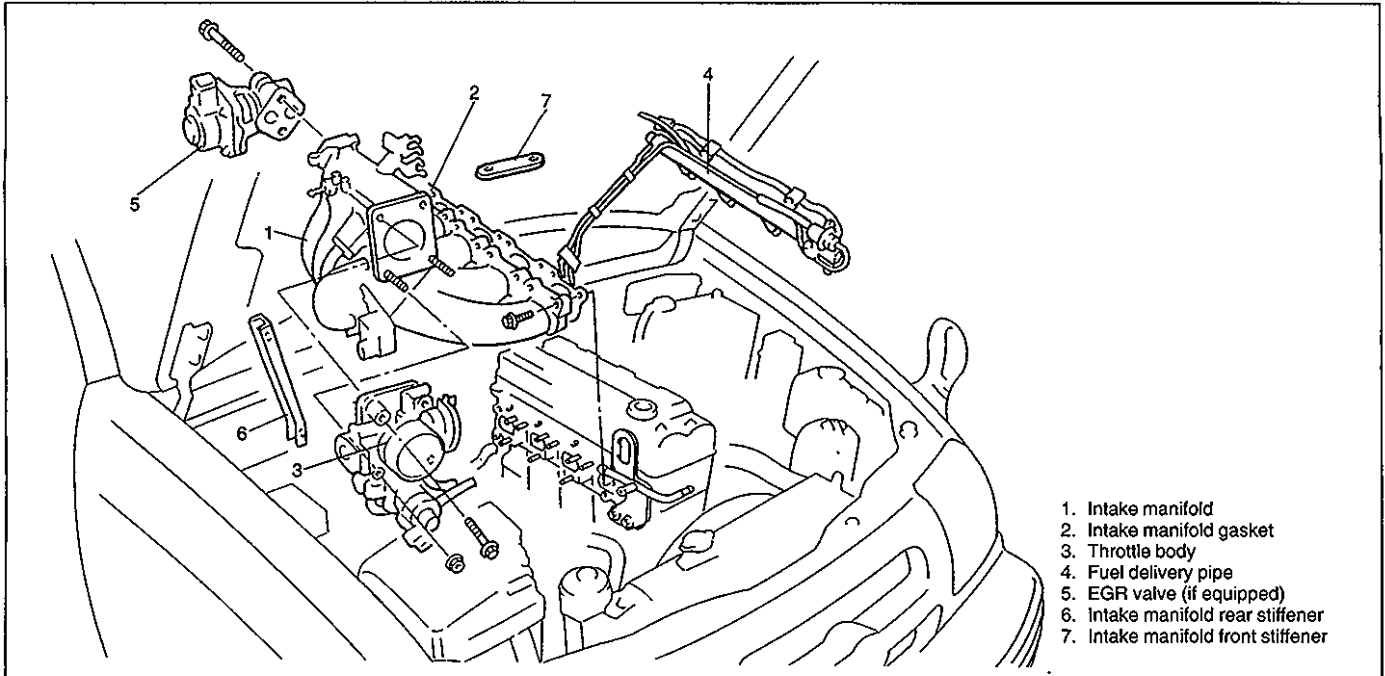

### REMOVAL

- 1) Relieve fuel pressure according to fuel pressure relief procedure described in Section 6.
- 2) Disconnect negative cable at battery.

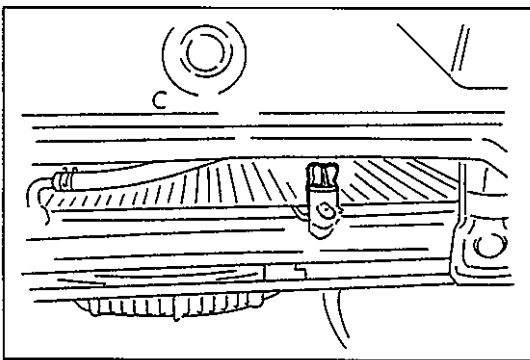


- 3) Drain coolant.

### WARNING:


To help avoid danger of being burned, do not remove drain plug and radiator cap while engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure if plug and cap are taken off too soon.

- 4) Remove air cleaner outlet hose.

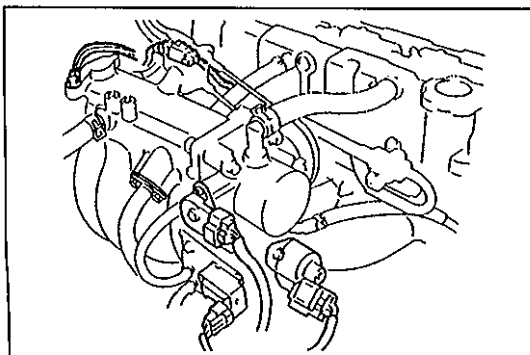


- 5) Disconnect following electric lead wires:
  - EGR valve coupler (if equipped)
  - IAC valve coupler
  - TP sensor coupler
  - EVAP solenoid purge valve coupler
  - Ground terminal from intake manifold




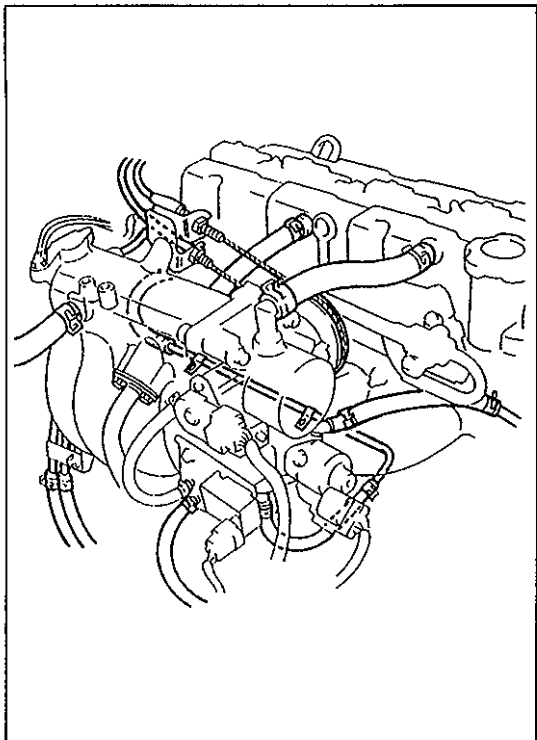

- 6) Disconnect accelerator cable and A/T throttle cable (For A/T vehicle) from throttle body.
- 7) Disconnect following hoses:
  - Brake booster hose from intake manifold
  - PCV hose from intake manifold
  - Fuel pressure regulator vacuum hose from intake manifold
  - Canister purge hose from EVAP canister purge valve
  - Water hoses from throttle body and water bypass pipe
  - Breather hose from throttle body
  - Fuel feed hose and return hose from each pipe
- 8) Remove fuel delivery pipe with fuel injectors from cylinder head.
- 9) Remove intake manifold front stiffener and rear stiffener.
- 10) Detach water pipe from intake manifold.

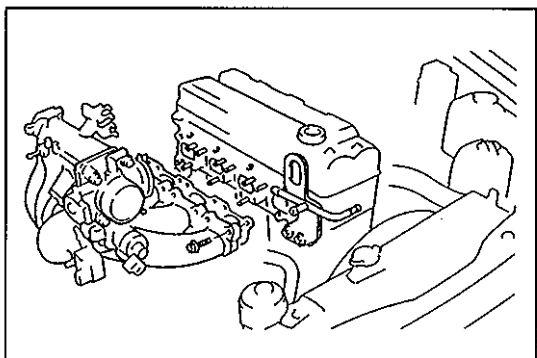


- 11) Remove intake manifold from cylinder head, and then its gasket.

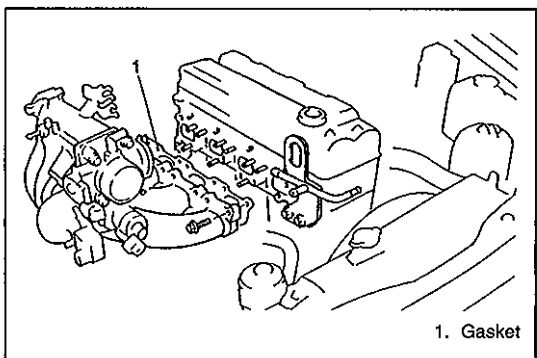

## INSTALLATION

Reverse removal procedure for installation noting the followings.


- Use new intake manifold gasket.
- Install fuel delivery pipe with fuel injectors to cylinder head referring to "Fuel Injector Installation" in Section 6E1.

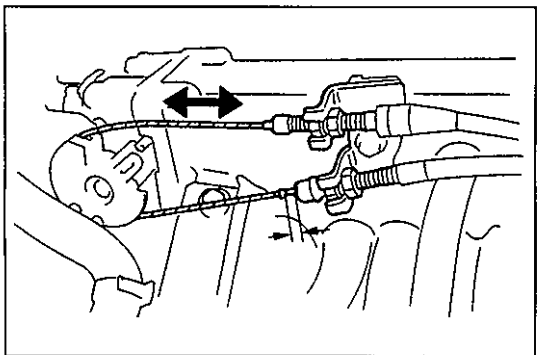

- Adjust accelerator cable play and A/T throttle cable play (for vehicle with A/T), referring to Section 6E1.


- Check to ensure that all removed parts are back in place.  
Reinstall any necessary parts which have not been reinstalled.
- Refill cooling system, referring to Section 6B.
- Upon completion of installation, turn ignition switch ON but engine OFF and check for fuel leaks.
- Finally, start engine and check for engine coolant leaks.

## EXHAUST MANIFOLD

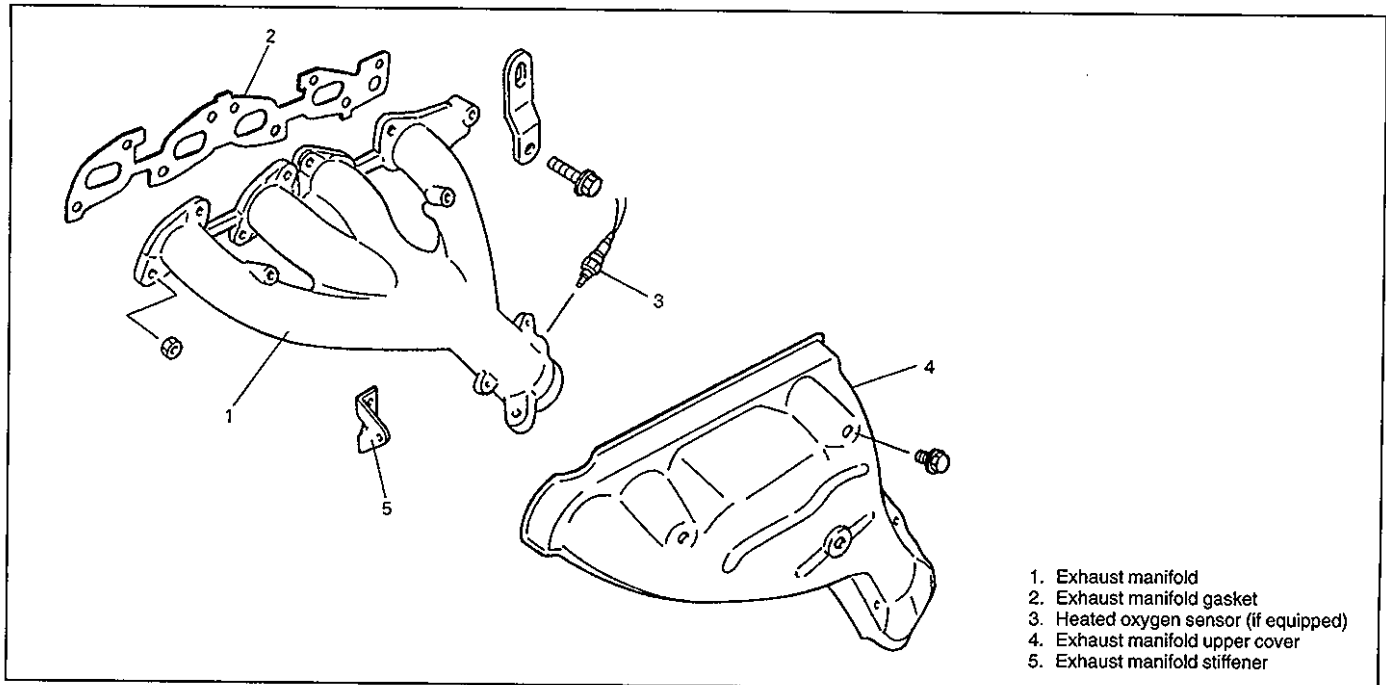


### WARNING:

To avoid danger of being burned, do not service exhaust system while it is still hot. Service should be performed after system cools down.

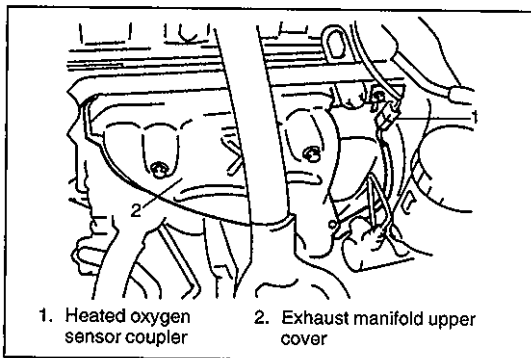


### REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Disconnect heated oxygen sensor coupler (if equipped) and detach it from its stay.
- 3) Remove upper cover of exhaust manifold.

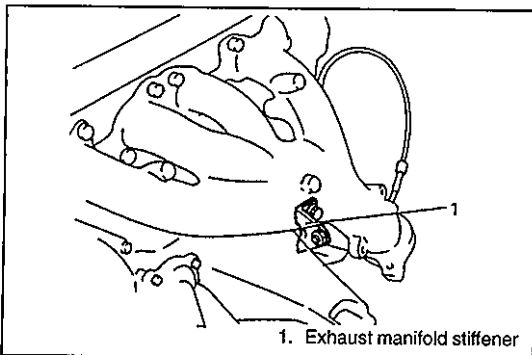


- 4) Remove exhaust manifold stiffener.

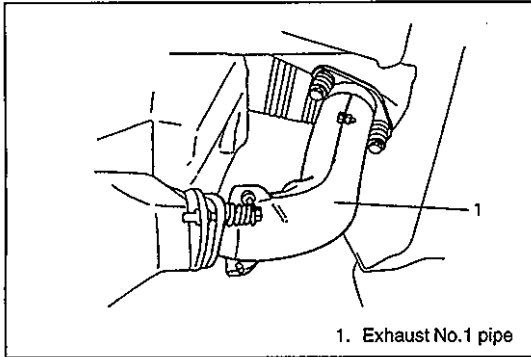

- 5) Remove or disconnect exhaust No.1 pipe from exhaust manifold.

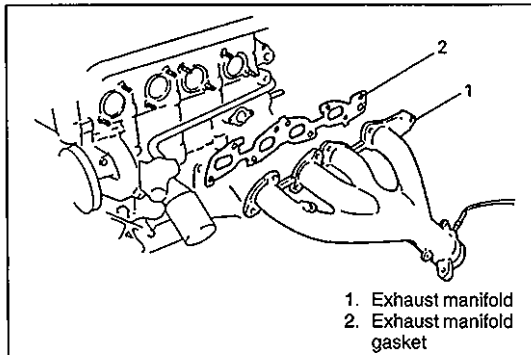


- 6) Remove exhaust manifold and its gasket from cylinder head.

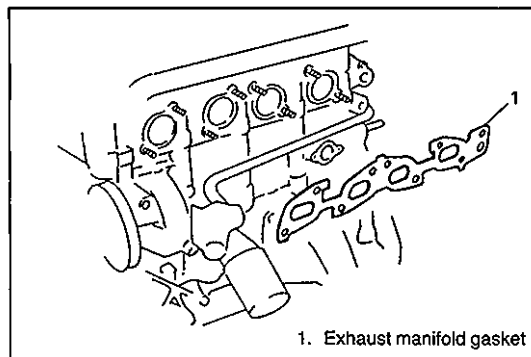


## INSTALLATION

- 1) Install new gasket to cylinder head.

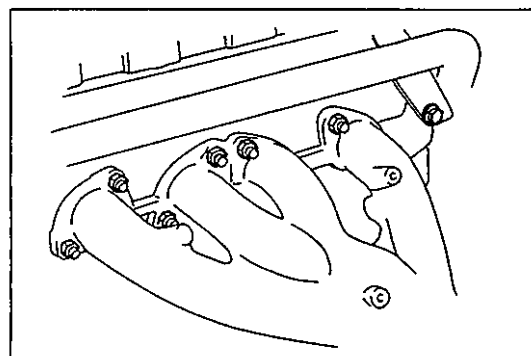


- 2) Install exhaust manifold.  
Tighten manifold bolts and nuts to specified torque.

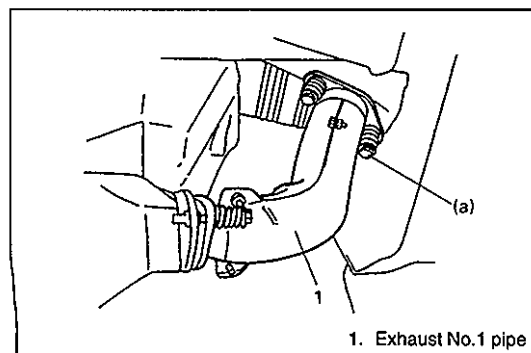


- 3) Install seal ring and install exhaust No.1 pipe to exhaust manifold.  
Before installing seal ring, check it for deterioration or damage, and replace as necessary.  
Tighten pipe fasteners to specified torque.

### Tightening Torque

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

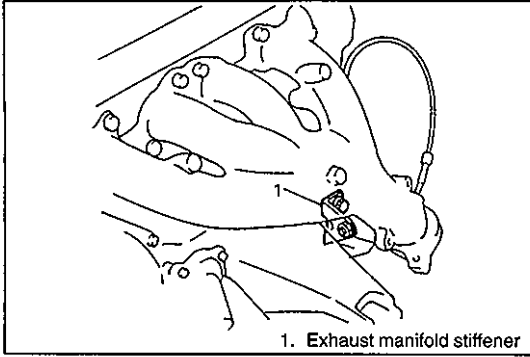

- 4) Install exhaust manifold stiffener.  
Tighten exhaust manifold stiffener nut and bolt to specified torque.

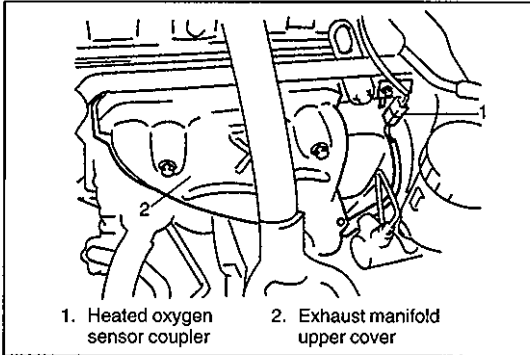


- 5) Install upper cover to exhaust manifold.
- 6) Connect heated oxygen sensor coupler and fit coupler to bracket securely (if equipped).

- 7) Connect negative cable at battery.
- 8) Check exhaust system for exhaust gas leakage.


## CYLINDER HEAD COVER

### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Disconnect ignition coil couplers.
- 3) Remove ignition coils.

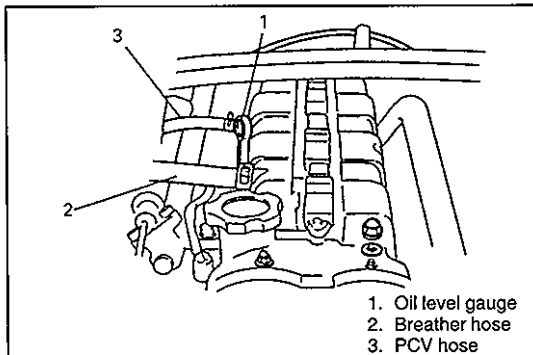


- 4) Disconnect accelerator cable from clamp (For LH steering vehicle only).
- 5) Remove oil level gauge.
- 6) Disconnect breather hose and PCV hose from cylinder head cover.
- 7) Remove cylinder head cover.

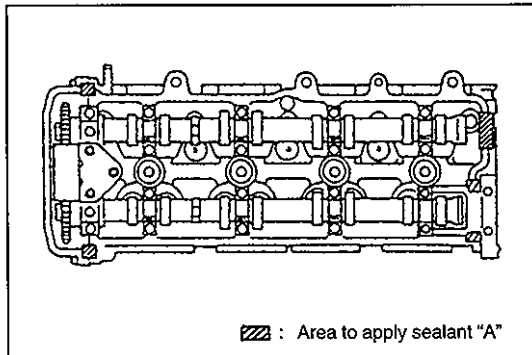

### INSTALLATION

- 1) Remove oil, old sealant, and dust from sealing surfaces on cylinder head and cover. After cleaning, apply sealant "A" to cylinder head sealing surface area as shown in figure.

**"A": Sealant 99000-31150**

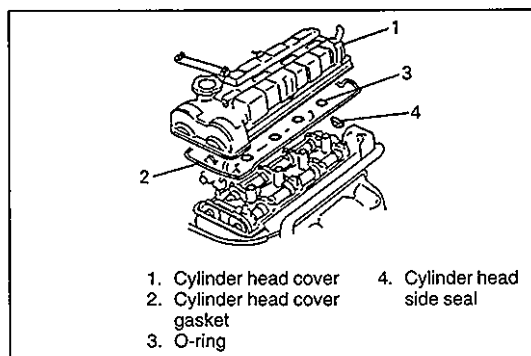


- 2) Install O-rings and cylinder head cover gasket to cylinder head cover.

#### NOTE:

**Be sure to check each of these parts for deterioration or any damage before installation and replace if found defective.**

- 3) Install cylinder head side seal and cylinder head cover to cylinder head.

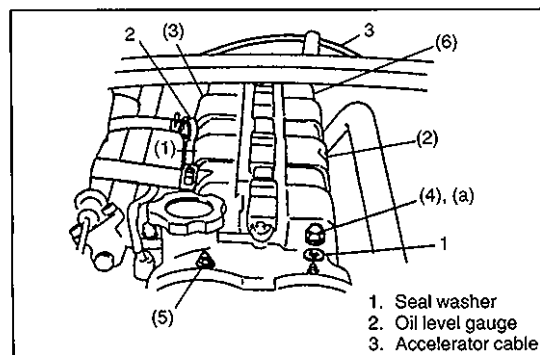



- 4) Tighten nuts in such order as indicated in figure a little at a time till they are tightened to specified torque.  
● Use new seal washers.

#### Tightening Torque

**(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)**


- 5) Install ignition coils and connect ignition coil couplers.
- 6) Install oil level gauge.
- 7) Connect breather hose and PCV hose to cylinder head cover.
- 8) Connect accelerator cable to clamp (For LH steering vehicle only).

## OIL PAN AND OIL PUMP STRAINER

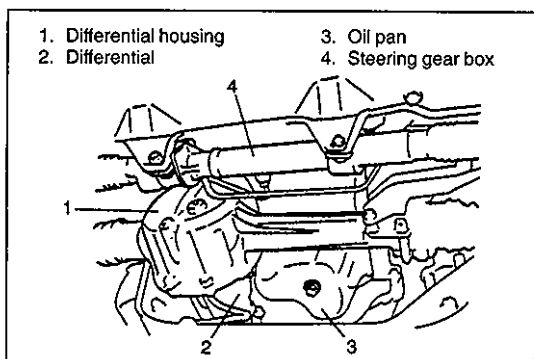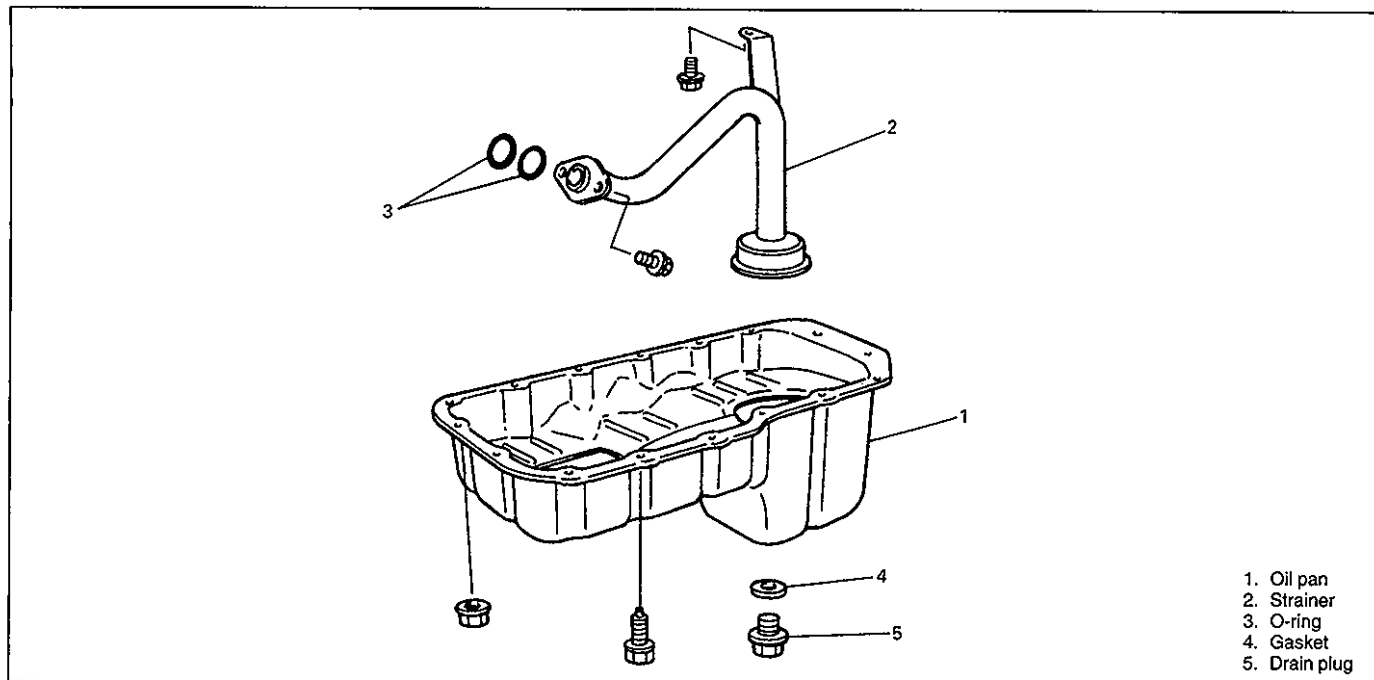


### REMOVAL

- 1) Remove oil level gauge.
- 2) Raise vehicle and remove both front wheels.
- 3) Remove steering gear box from vehicle referring to "Steering Gear Box Removal" in Section 3B1.
- 4) Remove front differential housing with differential from chassis. Refer to Section 7E for removal.
- 5) Drain engine oil by removing drain plug.
- 6) Remove transmission stiffener if equipped.
- 7) Remove clutch (torque converter) housing lower plate.

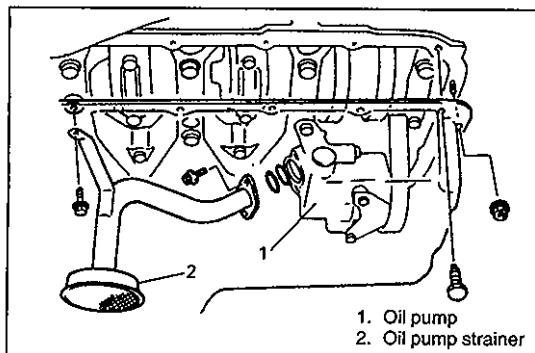


- 8) Remove oil pan and oil pump strainer from crankcase.

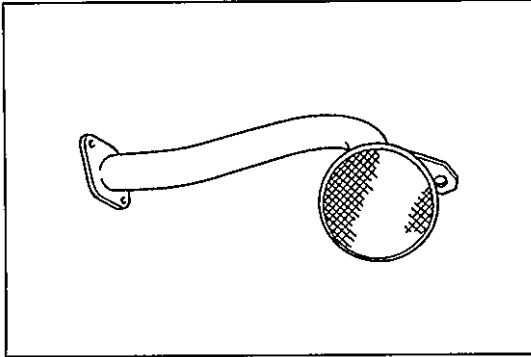


## CLEAN

- 1) Inside of oil pan and oil pump strainer screen.

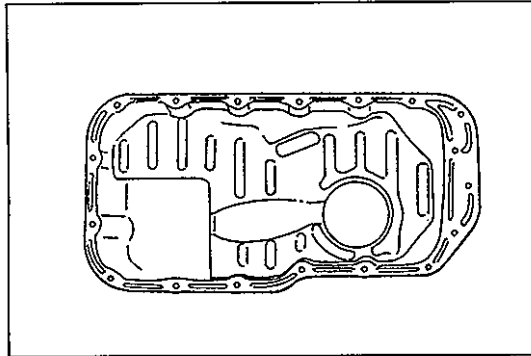

- 2) Clean sealing surface on oil pan and crankcase.  
Remove oil, old sealant, and dust from sealing surface.

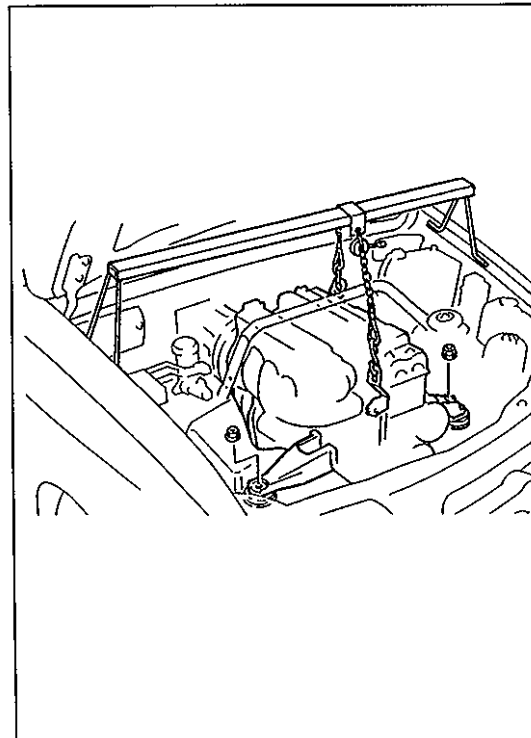


## INSTALLATION

- 1) To facilitate and ensure installation of oil pan, increase clearance between engine and vehicle body according to following procedure.
  - a. Disconnect exhaust pipe from exhaust manifold.
  - b. Remove engine mounting nuts (Right & Left).
  - c. Using engine support jack, hoist engine 2 – 3cm (about 1 in).

### CAUTION:


Do not hoist engine more than instructed above. That may cause trouble to engine or transmission.

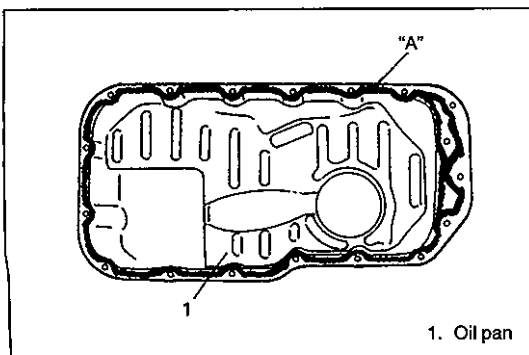

- 2) Apply sealant continuously to oil pan mating surface as shown in figure.

**"A" Sealant: 99000-31150**



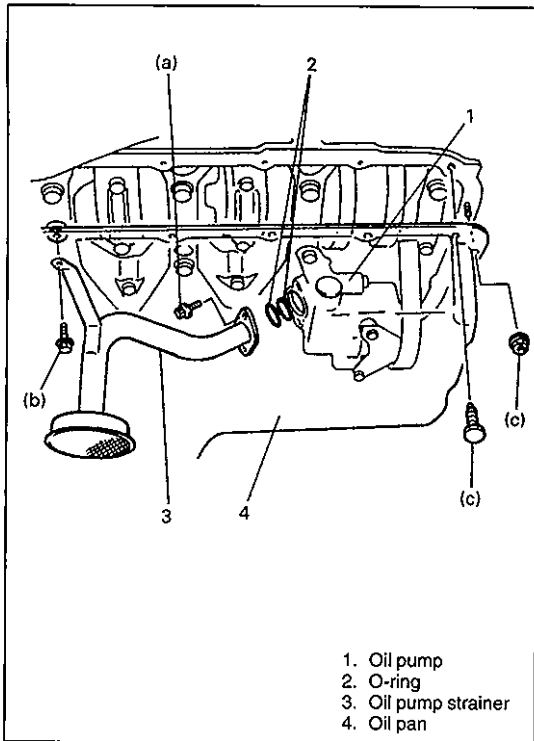

- 3) Install O-rings in the position as shown in figure and install oil pump strainer to oil pump.  
Tighten strainer bolts first and then bracket bolt to specified torque.

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)


(b): 11 N·m (1.1 kg-m, 8.0 lb-ft)

- 4) After fitting oil pan to cylinder block, run in securing bolts and start tightening at the center: move wrench outward, tightening one bolt at a time.  
Tighten bolts and nuts to specified torque.

#### Tightening Torque

(c): 11 N·m (1.1 kg-m, 8.0 lb-ft)

- 5) Lower engine and tighten engine mounting nuts to specified torque referring to "Engine Assembly Installation" in this section.

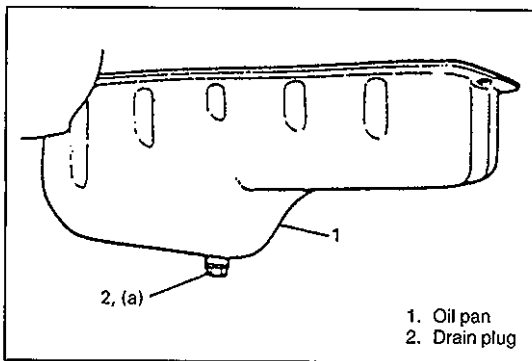



- 6) Install gasket and drain plug to oil pan.  
Tighten drain plug to specified torque.

#### Tightening Torque

(a): 35 N·m (3.5 kg-m, 25.5 lb-ft)


- 7) Install clutch (torque converter) housing lower plate.
- 8) Connect exhaust pipe to exhaust manifold referring to Section 6K.
- 9) Install transmission stiffener to transmission and cylinder block if equipped.
- 10) Install front differential housing according to installation procedure described in Section 7E.
- 11) Refill front differential housing with gear oil, referring to Section 7E.
- 12) Install steering gear box to vehicle referring to "Steering Gear Box Installation" in Section 3B1.
- 13) Install oil level gauge.
- 14) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in Section 0B.
- 15) Refill power steering system with specified fluid referring to Section 3B1.
- 16) Verify that there is no engine oil leakage, differential oil leakage and power steering fluid leakage at each connection.

# OIL PUMP

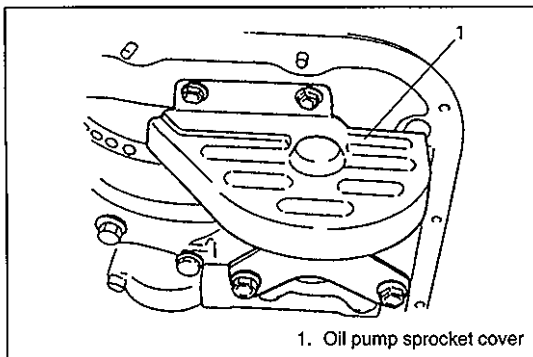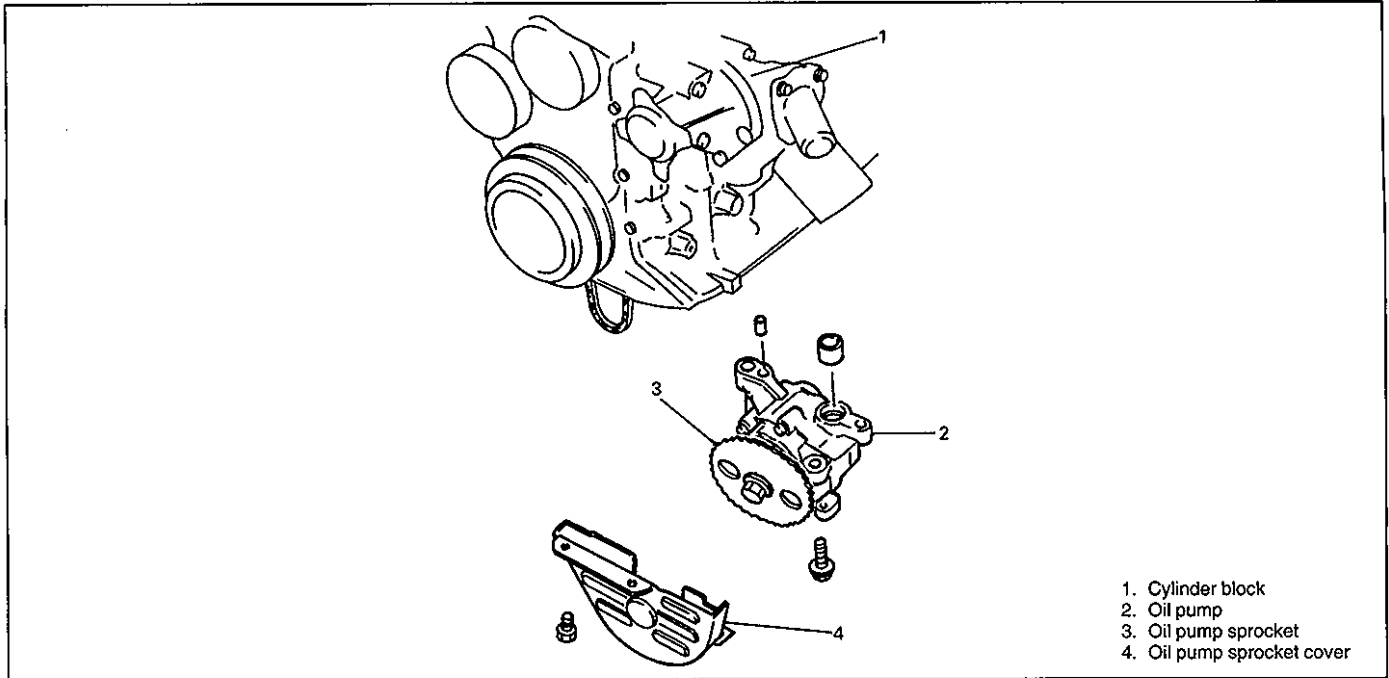

## REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Remove oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section.
- 4) Remove oil pump sprocket cover.

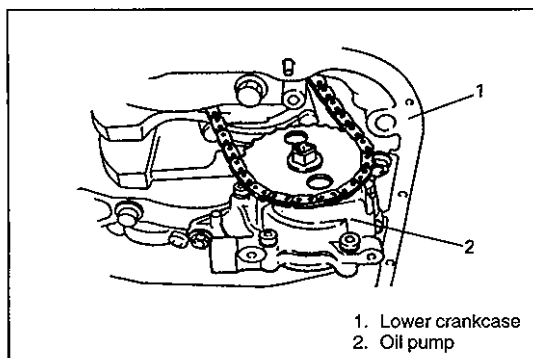

- 5) Remove oil pump from lower crankcase.

## CAUTION:

Don't remove sprocket out of oil pump. Or damage of oil pump center shaft and abnormal operation of oil pump could result.

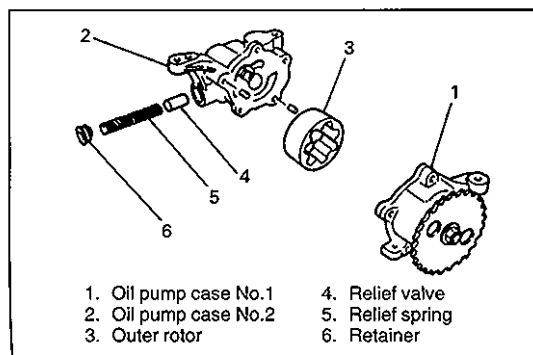

## DISASSEMBLY


- Disassemble oil pump as shown in figure.

## INSPECTION

- Check outer rotor, inner rotor and oil pump cases for excessive wear or damage.
- Check relief valve for excessive wear or damage.


## NOTE:

If any repair is required on outer rotor, inner rotor and oil pump cases, replace them as an assembly.

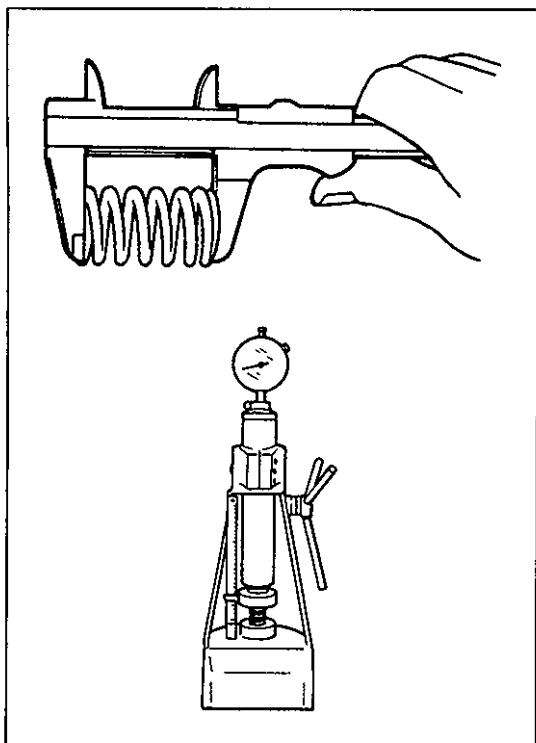

- Measure free length and tension of oil relief spring.

Item	Standard
Spring free length	63.5 mm (2.5 in.)
Spring preload	$\left( \begin{array}{l} 86.0 \text{ N for} \\ 52.0 \text{ mm} \\ 8.6 \text{ kg for} \\ 52.0 \text{ mm} \\ 62.2 \text{ lb/} \\ 2.05 \text{ in.} \end{array} \right)$

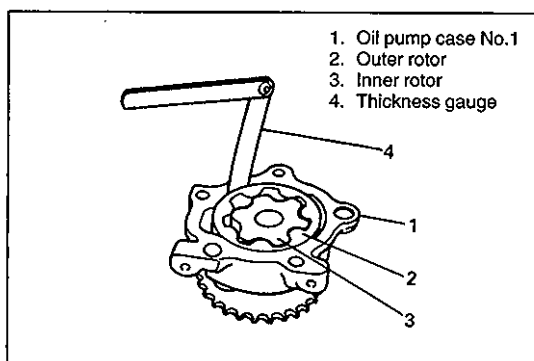


- Measure clearance of oil pump rotor and oil pump case.

### Radial Clearance

Check radial clearance between outer rotor and case, using thickness gauge.

If clearance exceeds its limit, replace outer rotor or case.

**Limit on radial clearance between  
outer rotor and case: 0.15 mm (0.0059 in.)**

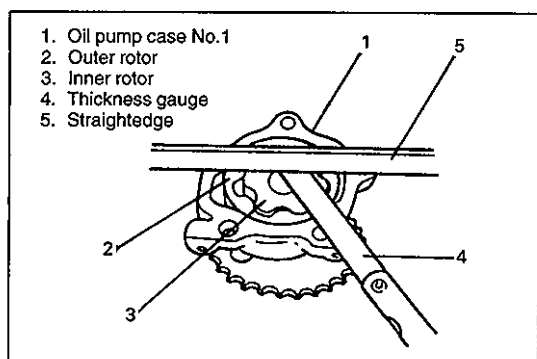


### Side Clearance

Using straightedge and thickness gauge, measure side clearance.

**Limit on side clearance: 0.11 mm (0.0043 in.)**

## ASSEMBLY

- 1) Wash, clean and then dry all disassembled parts.
- 2) Apply thin coat of engine oil to inner and outer rotors, and inside surfaces of oil pump case.
- 3) Install outer rotor to pump case No.1.

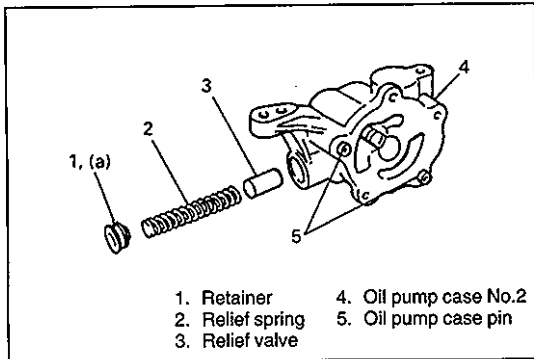


- 4) Install relief valve, relief spring and retainer to oil pump case No.2.

Tighten retainer to specified torque.

#### Tightening Torque

(a): 29 N·m (2.9 kg-m, 21.0 lb-ft)


- 5) Install oil pump case pins to oil pump case No.2.

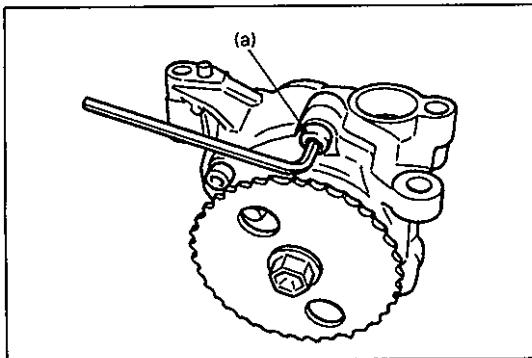

- 6) Assemble oil pump. After assembling oil pump check to be sure that rotor turns smoothly by hand.

#### Tightening Torque

(a): 12 N·m (1.2 kg-m, 9.0 lb-ft)

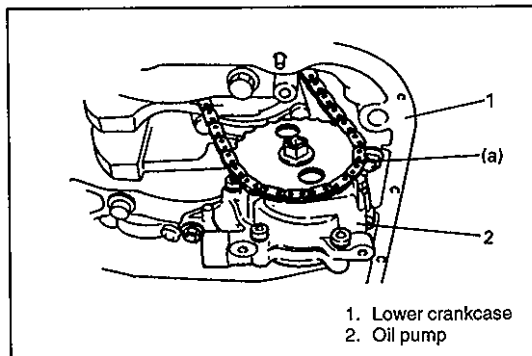

### INSTALLATION


- 1) Install oil pump to lower crankcase and tighten bolts to specified torque.

#### NOTE:

When installing oil pump, be careful not to allow pins to fall off.

#### Tightening Torque

(a): 27 N·m (2.7 kg-m, 19.5 lb-ft)

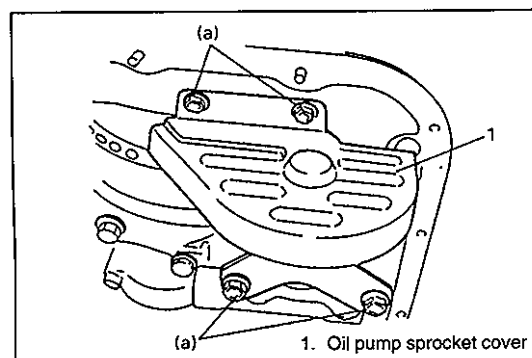


- 2) Install oil pump sprocket cover and tighten bolts to specified torque.

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)


- 3) Install oil pan and oil pump strainer. Refer to "OIL PAN AND OIL PUMP STRAINER" in this section.  
4) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in Section 0B.  
5) Connect negative cable at battery.  
6) After completing installation, check oil pressure by running engine. Refer to "OIL PRESSURE CHECK" in this section.


## TIMING CHAIN COVER

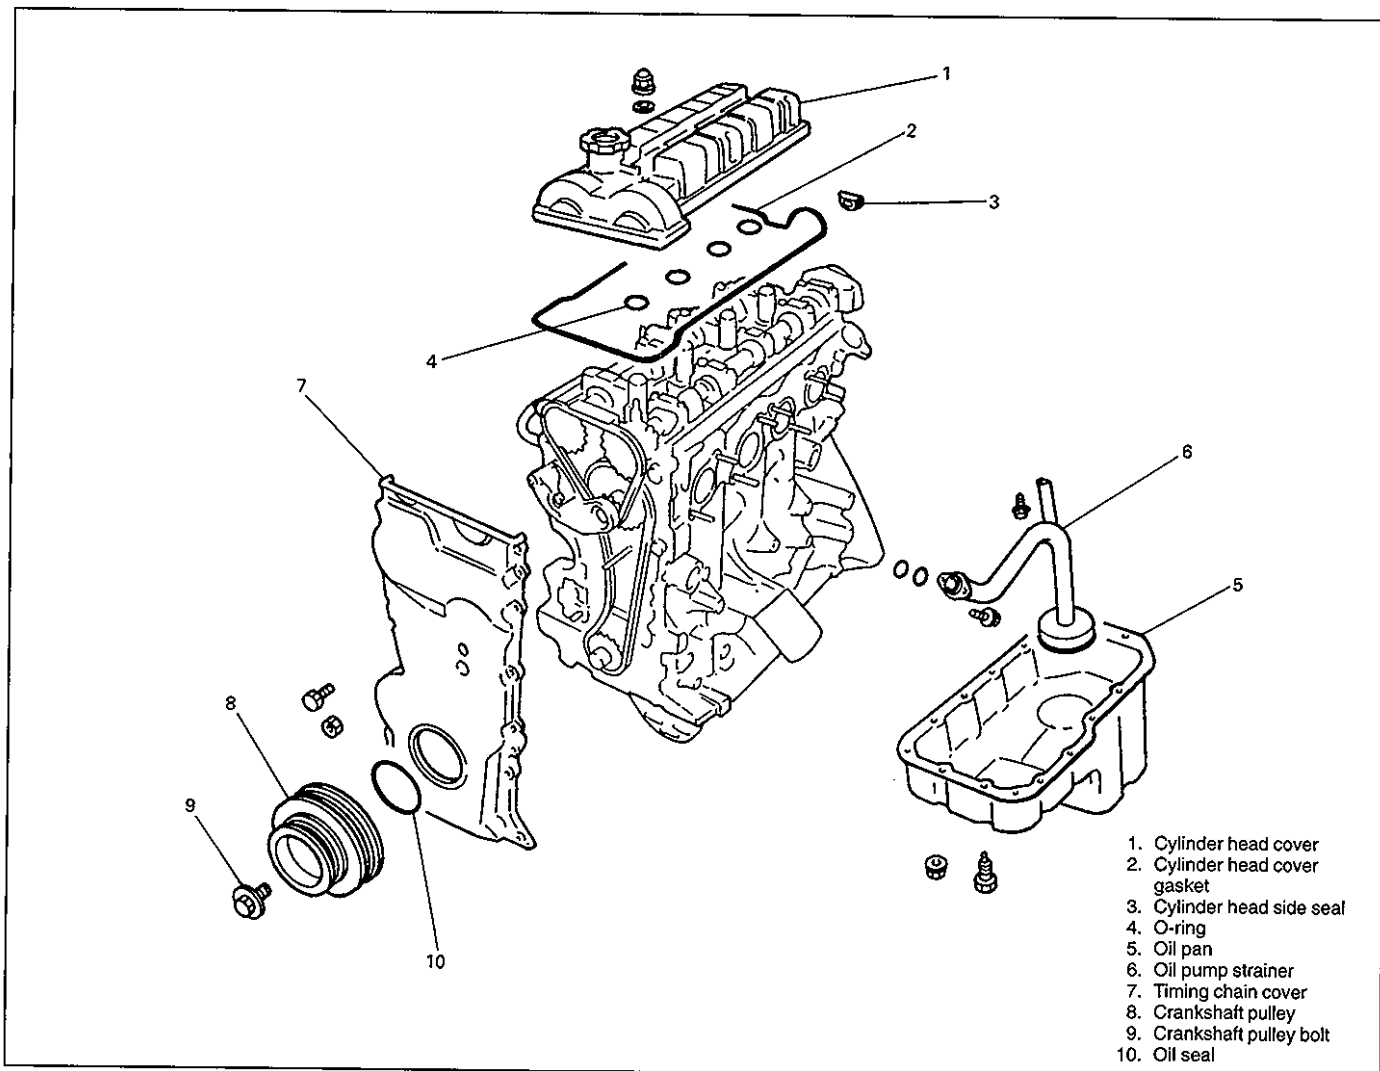


## REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 5) Remove cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for removal.
- 6) Remove water bypass pipe and bypass hose No.2.
- 7) Remove cooling fan and fan shroud referring to Section 6B. And then remove cooling fan belt and cooling fan pulley.
- 8) Remove generator belt by turning generator belt tensioner center bolt clockwise to loosen tension of generator belt. Refer to Section 6H for removal.
- 9) Remove water pump pulley.
- 10) Remove generator belt tensioner.

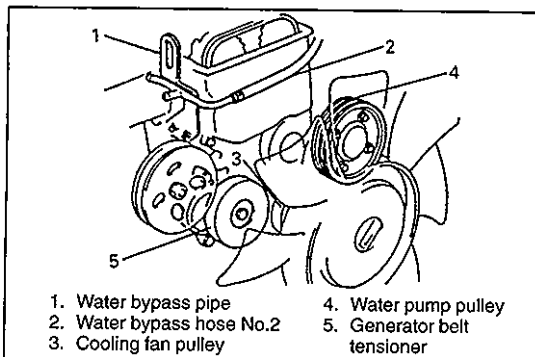

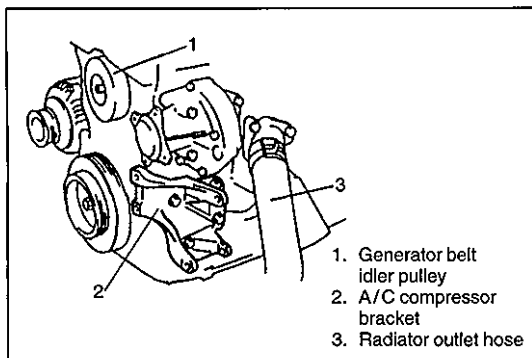

- 11) Remove generator belt idler pulley.
- 12) Disconnect radiator outlet hose from thermostat cap.
- 13) With hoses connected, detach A/C compressor from compressor bracket if equipped.
- 14) Remove A/C compressor bracket if equipped.

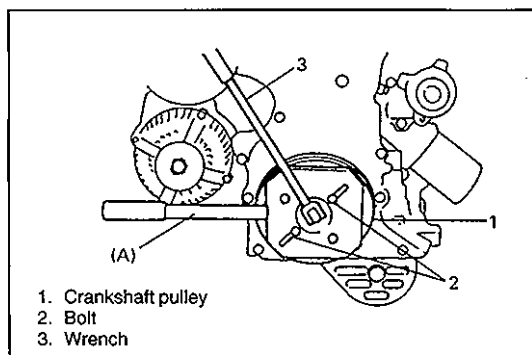


- 15) Remove crankshaft pulley bolt.  
To lock crankshaft pulley, use special tool (camshaft pulley holder) with it as shown in figure.

**Special Tool**  
**(A): 09917-68221**

**NOTE:**

**Be sure to use the following bolt for fixing special tool to crankshaft pulley.**

**Bolt size: M8, P1.25  $\ell$  = 45 mm**  
**Strength: 7T**

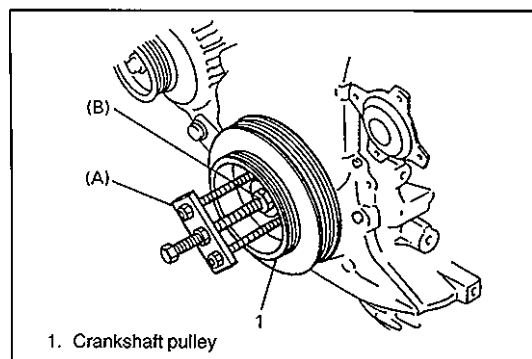


- 16) Remove crankshaft pulley.  
If it is hard to remove, use special tools (Steering wheel remover and Bearing puller attachment) as shown in figure.  
If bolts of steering wheel remover are too long, replace them with those of suitable length.

**Special Tool**  
**(A): 09944-36011**  
**(B): 09926-58010**

- 17) Remove timing chain cover.

**CLEAN**

- Clean sealing surface on timing chain cover, crankcase, cylinder block and cylinder head.  
Remove oil, old sealant, and dust from sealing surface.

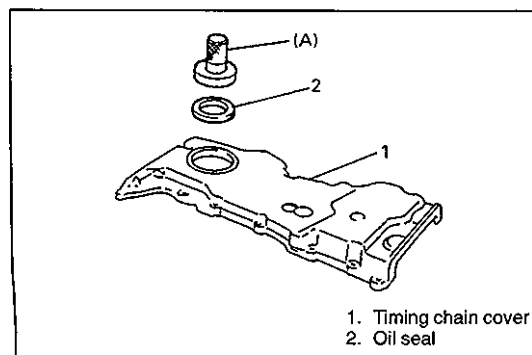

**INSPECTION**


- Check oil seal lip for fault or other damage.  
Replace as necessary.

**NOTE:**

**When installing new oil seal, tap it in until its surface is flush with edge of timing chain cover.**

**To install oil seal, use special tool (bearing installer).**

**Special Tool**  
**(A): 09913-75510**

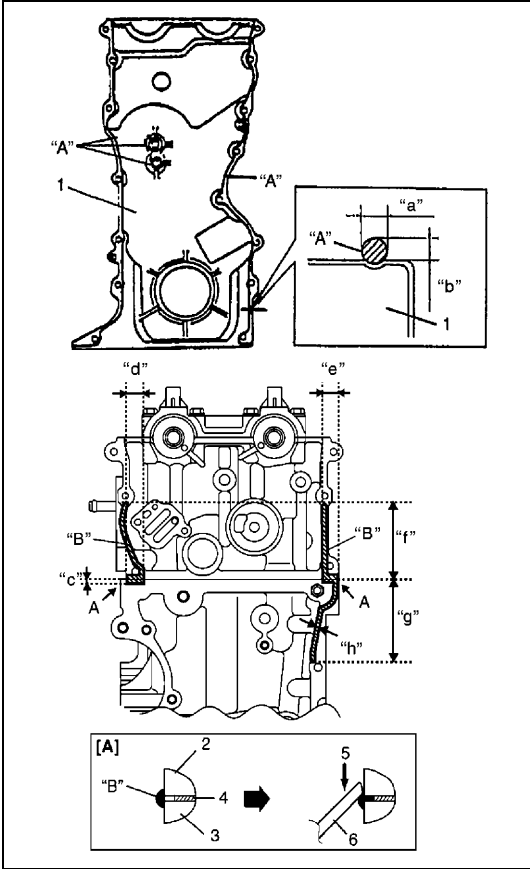

**INSTALLATION**


Reverse removal sequence to install timing chain cover noting following points.

1) Apply sealant “A” and “B” to area as shown in figure.

**“A”:** Sealant 99000-31250

**“B”:** Sealant 99000-31140

“a”:	3 mm (0.12 in.)
“b”:	2 mm (0.08 in.)
“c”:	6 mm (0.24 in.)
“d”:	16 mm (0.63 in.)
“e”:	14 mm (0.55 in.)
“f”:	65 mm (2.56 in.)
“g”:	73 mm (2.87 in.)
“h”:	4 mm (0.16 in.)
1.	Timing chain cover
2.	Cylinder head
3.	Cylinder block
4.	Cylinder head gasket
5.	Rub into
6.	Jig
[A]:	View A

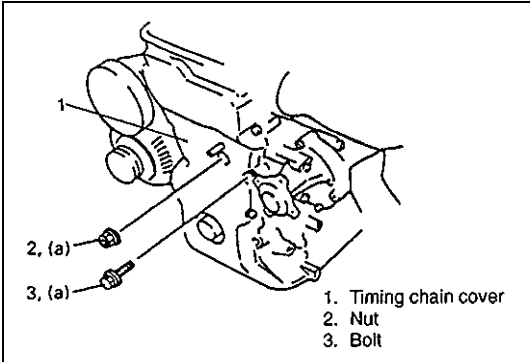


2) Apply engine oil to oil seal lip, then install timing chain cover. Tighten bolts and nut to specified torque.

**NOTE:**

Before installing timing chain cover, check that pin is securely fitted.

**Tightening Torque**

**(a):** 11.0 N·m (1.1 kg-m, 8.0 lb-ft)

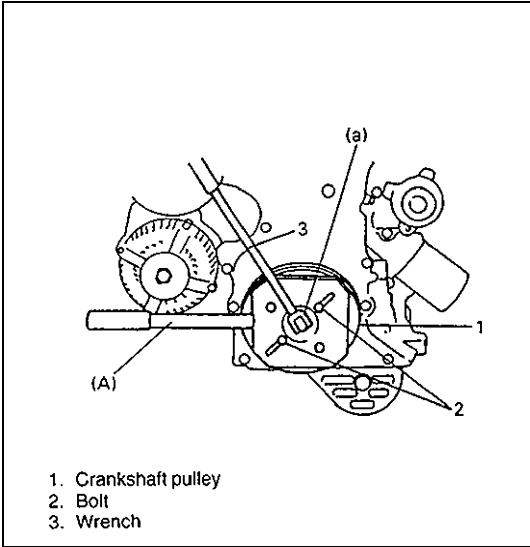

3) Install crankshaft pulley.

To lock crankshaft pulley, use special tool (camshaft pulley holder) with it at shown in figure.

**Special Tool**

**(A):** 09917-68221

**NOTE:**


Be sure to use the following bolt for fixing special tool to crankshaft pulley.

**Bolt size:** M8, P1.25  $\ell$  = 45 mm

**Strength:** 7T

**Tightening Torque**

**(a):** 150 N·m (15 kg-m, 108.5 lb-ft)

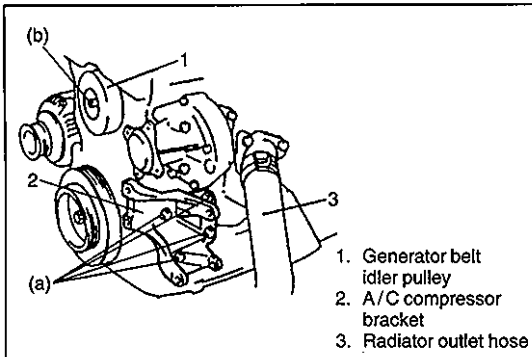

- 4) Install A/C compressor bracket if equipped.  
Tighten bracket bolts to specified torque.

**Tightening Torque**

**(a): 55 N·m (5.5 kg-m, 40.0 lb-ft)**

- 5) Install generator belt idler pulley.  
Tighten nut to specified torque.

**Tightening Torque**


**(b): 45 N·m (4.5 kg-m, 33.0 lb-ft)**

- 6) Connect radiator outlet hose to thermostat cap.

- 7) Install generator belt tensioner.  
Tighten bolts to specified torque.

**Tightening Torque**

**(a): 25 N·m (2.5 kg-m, 18.5 lb-ft)**

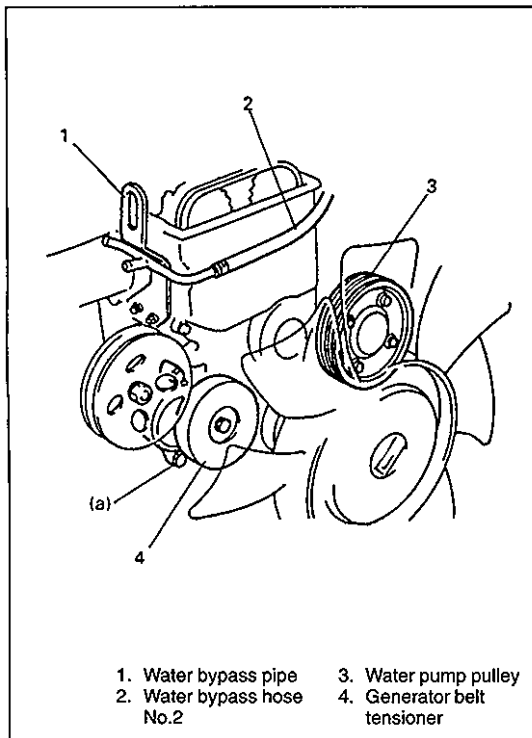


- 8) Install water pump pulley.
- 9) Install generator belt by turning generator belt tensioner center bolt clockwise to loosen tension of generator belt.
- 10) Install cooling fan belt, fan pulley, cooling fan and shroud.
- 11) Install bypass pipe and water bypass hose No.2.


- 12) Install cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for installation.
- 13) Install oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for installation.
- 14) Adjust cooling fan belt tension.  
Refer to Section 6B for adjusting procedure.
- 15) Refill cooling system with coolant, front differential with gear oil, engine with engine oil and power steering system with specified fluid.
- 16) Verify that there is no coolant leakage, oil leakage, power steering fluid leakage and exhaust gas leakage at each connection.



## 2ND TIMING CHAIN AND CHAIN TENSIONER

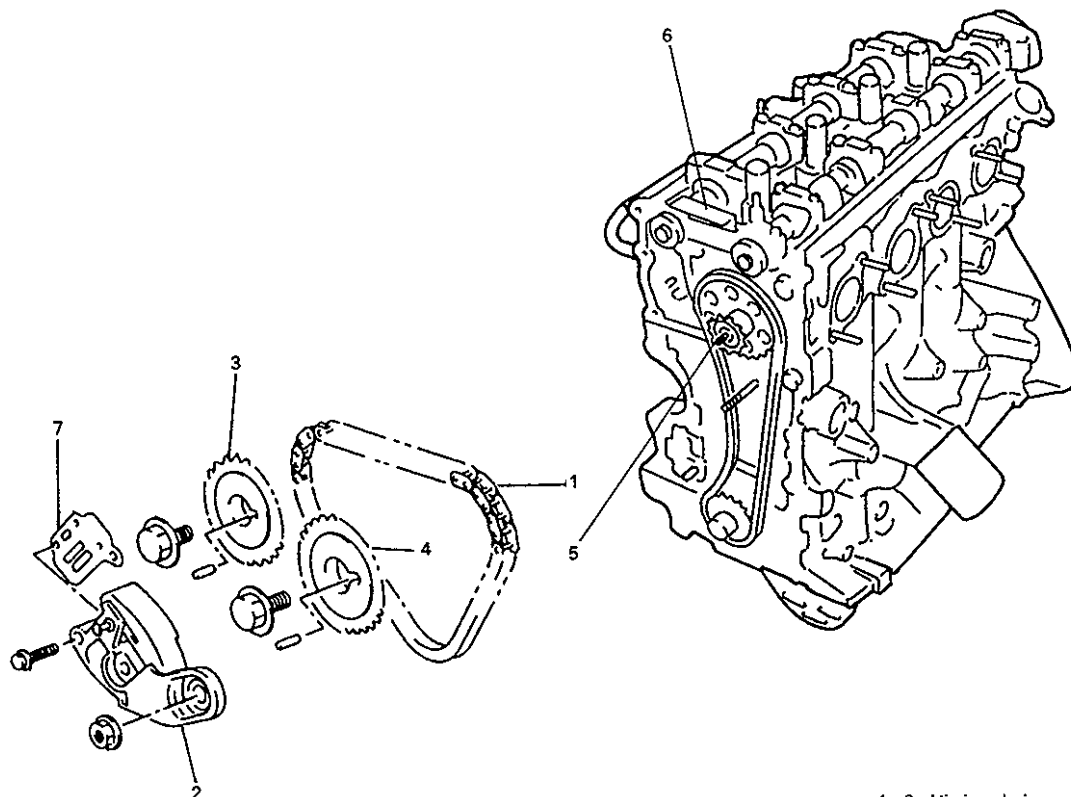

1. 2nd timing chain
2. Timing chain tensioner adjuster No.2
3. Intake camshaft timing sprocket
4. Exhaust camshaft timing sprocket
5. Idler sprocket
6. Timing chain guide No.2
7. Tensioner adjuster No.2 gasket



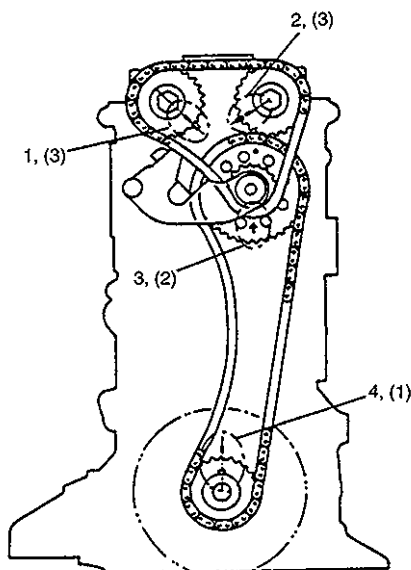


1. Timing marks of intake camshaft timing sprocket
2. Timing marks of exhaust camshaft timing sprocket
3. Arrow mark on idler sprocket
4. Timing marks of crankshaft timing sprocket

### REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 5) Remove cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for removal.
- 6) Remove timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for removal.
- 7) Turn crankshaft to meet following condition.
  - Key (1) on crankshaft position as shown.
  - Arrow mark on idler sprocket (2) points upward vertically.
  - The marks on sprockets (3) match with marks on cylinder head.

Note that this step must be followed for reinstallation of timing chain.

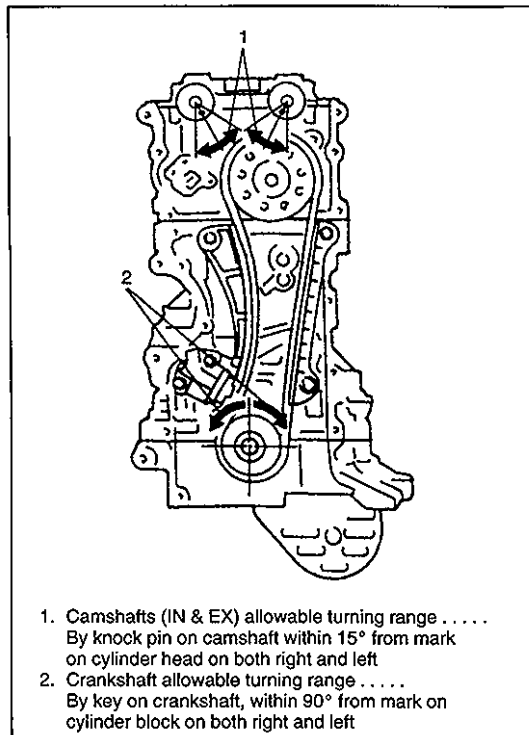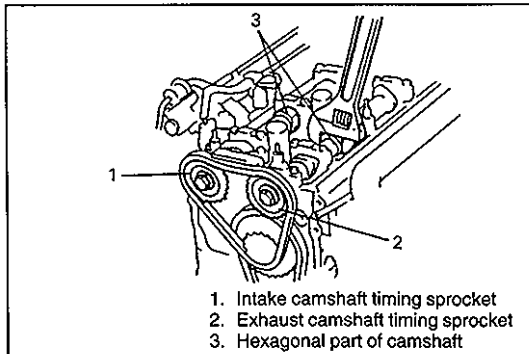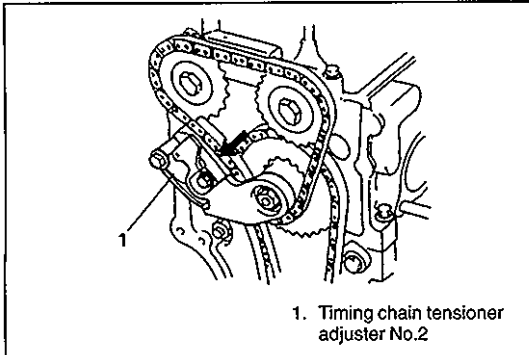

8) Remove timing chain tensioner adjuster No.2.

To remove it, slacken 2nd timing chain by turning intake camshaft counterclockwise a little while pushing back pad.

9) Remove intake and exhaust camshaft timing sprocket bolts.

To remove it, fit a spanner to hexagonal part at the center of camshaft to hold it stationary.

10) Remove camshaft timing sprockets and 2nd timing chain.


**CAUTION:**

After 2nd timing chain is removed, never turn intake camshaft, exhaust camshaft and crankshaft independently more than such an extent as shown. If turned, interference may occur between piston and valves and valves themselves, and parts related to piston and valves may be damaged.

## INSPECTION

### Timing Chain Guide No.2


- Check shoe for wear or damage.

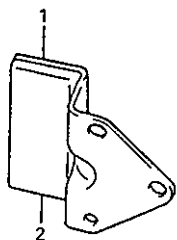

1. Timing chain guide No.2
2. Shoe


### Camshaft Sprocket

- Check teeth of sprocket for wear or damage.

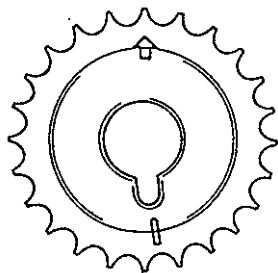


### Timing Chain

- Check timing chain for wear or damage.




### Tensioner Adjuster No.2

- Check shoe for wear or damage.

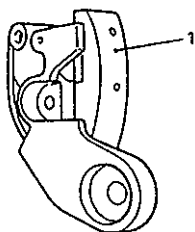


1. Shoe

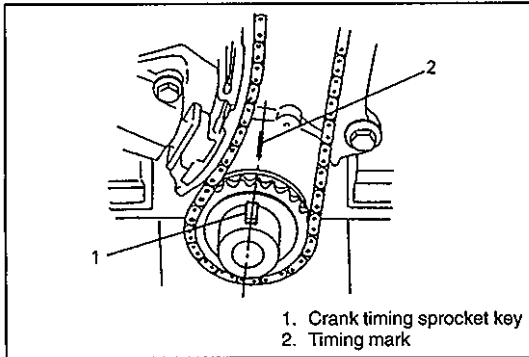


## INSTALLATION


- 1) Check that crank timing sprocket key is in match with timing mark on cylinder block as shown in figure.

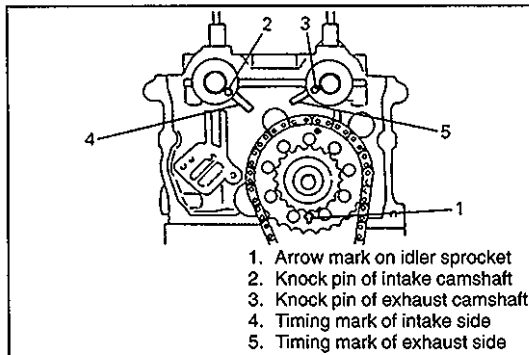

- 2) Check that arrow mark on idler sprocket faces upward as shown in figure.
- 3) Check that knock pins of intake and exhaust camshafts are aligned with timing marks on cylinder head as shown in figure.

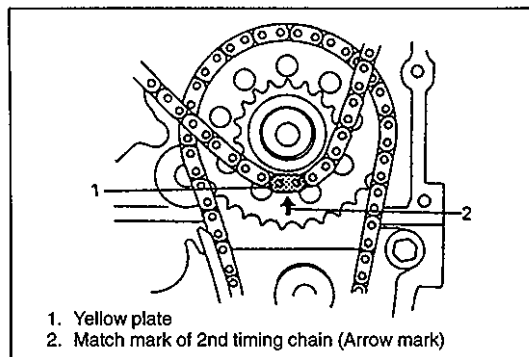

- 4) Install 2nd timing chain by aligning yellow plate of 2nd timing chain with arrow mark on idler sprocket.

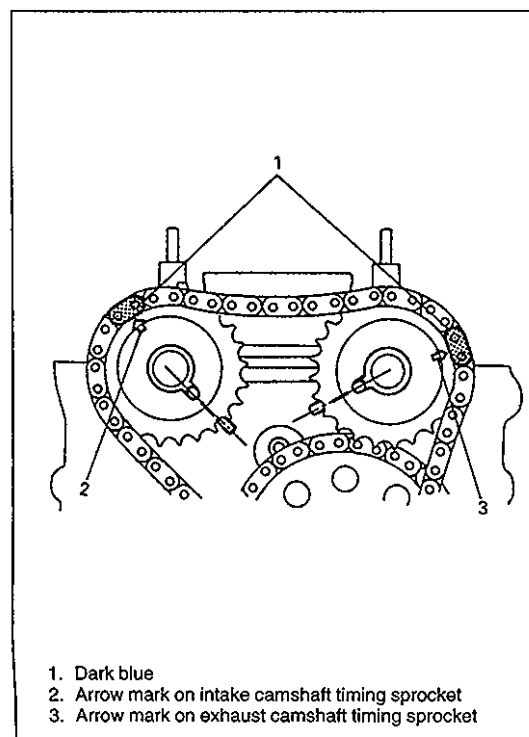


- 5) Install sprockets to intake and exhaust camshafts by aligning dark blue plate of 2nd timing chain with arrow marks on intake sprocket and exhaust sprocket respectively.

### CAUTION:

**Do not turn camshaft more than allowable turning range.  
If turned excessively, valve and piston may get damaged.**

### NOTE:


**As an arrow mark is provided on both sides, camshaft timing sprocket has no specific installation direction.**

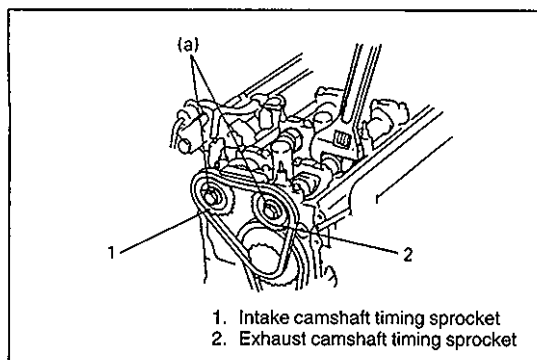


- 6) Install intake and exhaust camshaft timing sprocket bolts.  
To install it, fit a spanner to hexagonal part at the center of camshaft to hold stationary.

#### Tightening Torque

(a): 80 N·m (8.0 kg-m, 57.5 lb-ft)

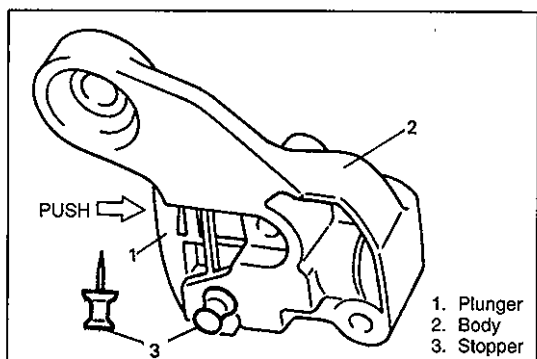

- 7) Push back plunger into tensioner body and hold it with stopper at the position by inserting stopper into body.

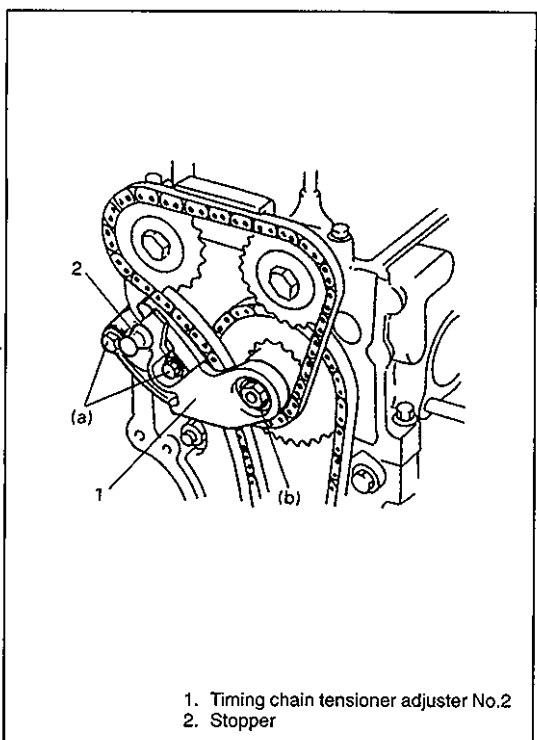


- 8) Install timing chain tensioner adjuster No.2 with gasket.

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

(b): 45 N·m (4.5 kg-m, 33.0 lb-ft)

- 9) Pull out stopper from timing chain tensioner adjuster No.2.

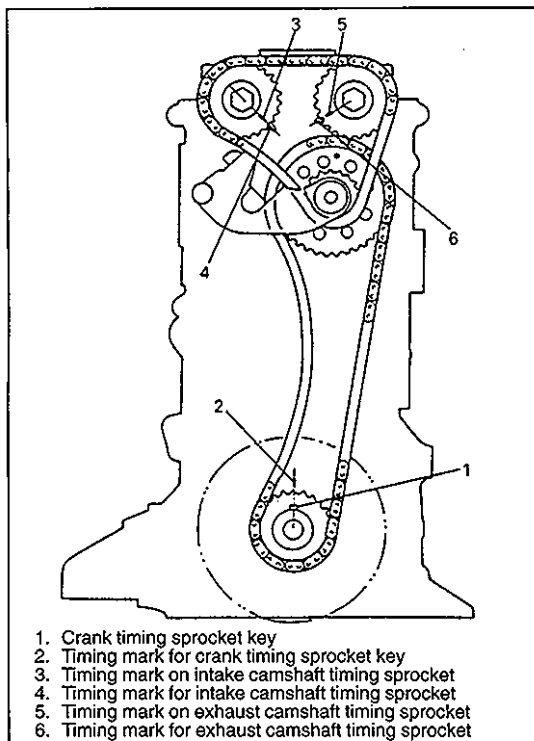


- 10) Turn crankshaft two rotations clockwise then align timing mark on crankshaft and timing mark on cylinder block as shown in figure.

Check that timing marks of cylinder head and cylinder block are in match with match marks on sprockets respectively.


- 11) Apply oil to timing chains, tensioner, tensioner adjusters, sprockets and guides.
- 12) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 13) Install cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for installation.
- 14) Install oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section installation.
- 15) Install cooling system and other parts.
- 16) Refill cooling system with coolant, front differential with gear oil, engine with engine oil and power steering system with specified fluid.
- 17) Verify that there is no coolant leakage, power steering fluid leakage, exhaust gas leakage and oil leakage at each connection.

# 1ST TIMING CHAIN AND CHAIN TENSIONER

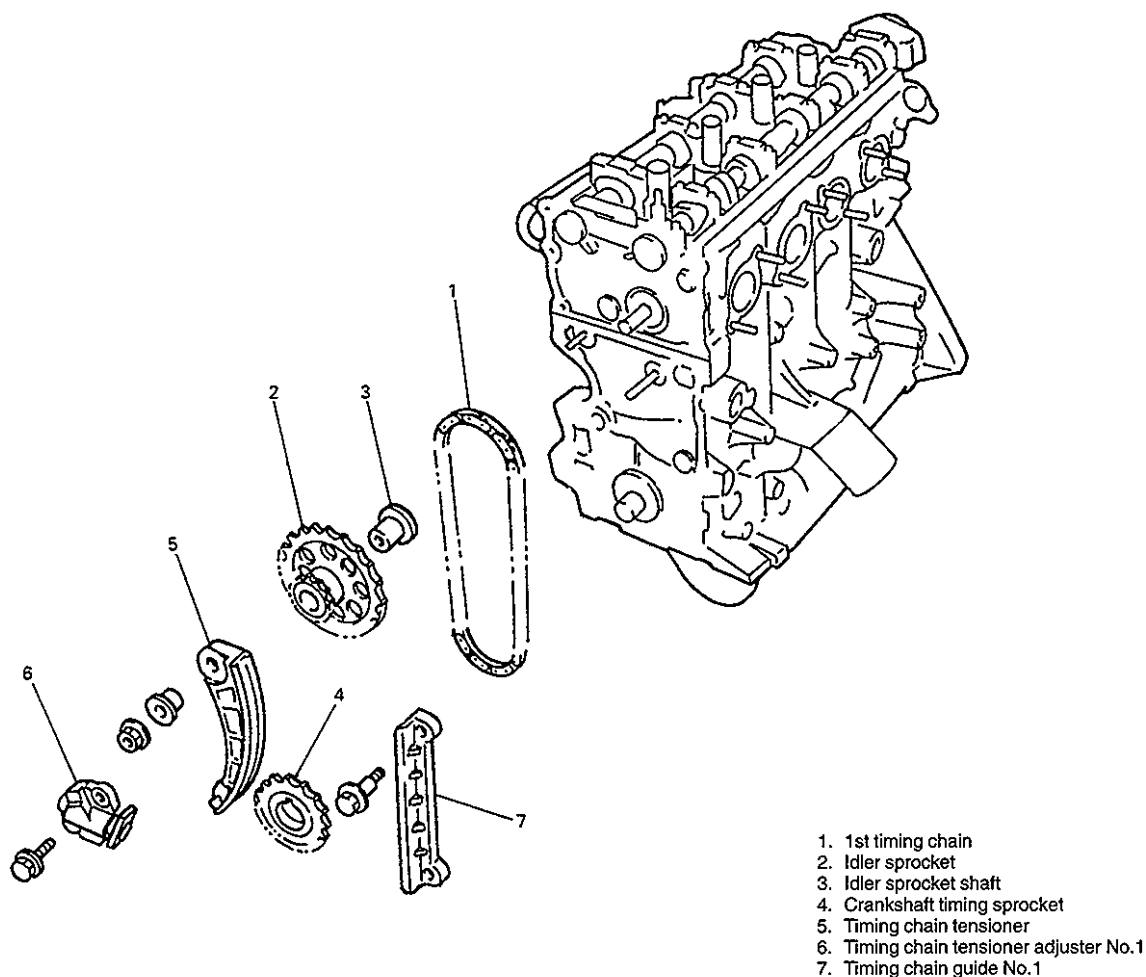


## REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove oil pan and oil pump strainer.  
 Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 5) Remove cylinder head cover.  
 Refer to item "CYLINDER HEAD COVER" in this section for removal.
- 6) Remove timing chain cover.  
 Refer to item "TIMING CHAIN COVER" in this section for removal.

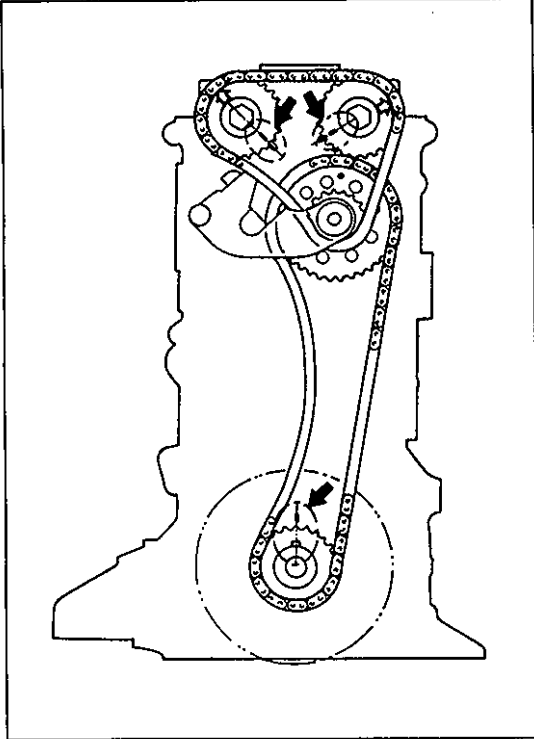

- 7) For reinstallation of timing chain, turn crankshaft so that timing marks on cylinder head and cylinder block match with those on sprockets as shown in figure.
- 8) Remove 2nd timing chain.  
Refer to item "2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.

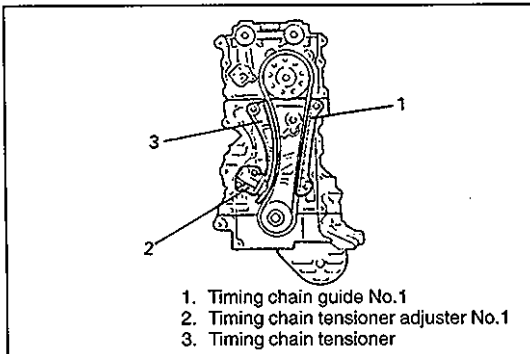


- 9) Remove timing chain guide No.1.
- 10) Remove timing chain tensioner adjuster No.1.
- 11) Remove timing chain tensioner.
- 12) Remove idler sprocket and 1st timing chain.
- 13) Remove crankshaft timing sprocket.

## INSPECTION


### Timing Chain Guide No.1

- Check shoe for wear or damage.

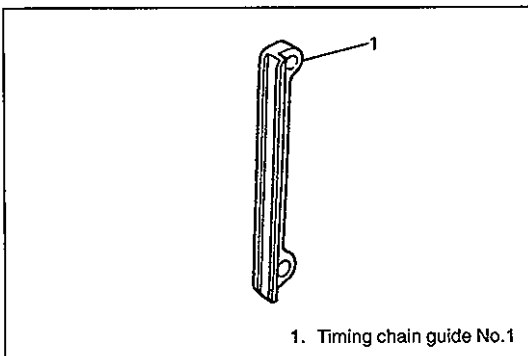


### Timing Chain Tensioner

- Check shoe for wear or damage.

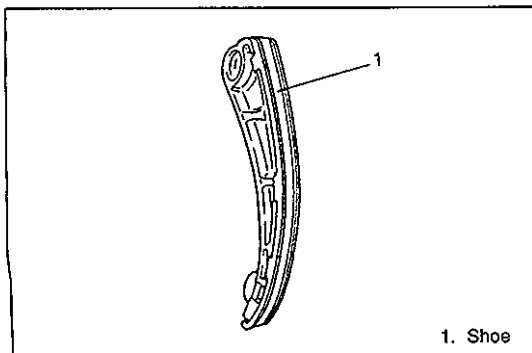




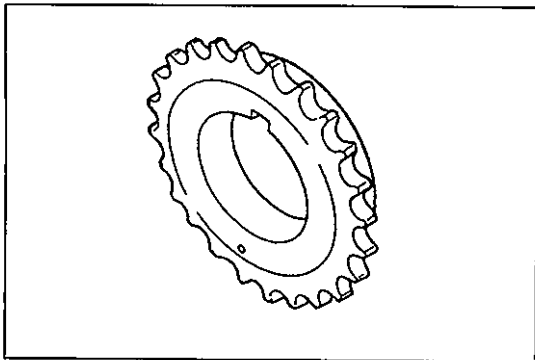


### Crankshaft Timing Sprocket

- Check teeth of sprocket for wear or damage.

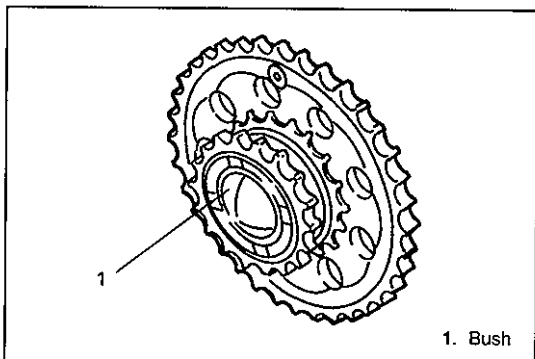


### Idler Sprocket

- Check teeth and bush of sprocket for wear or damage.

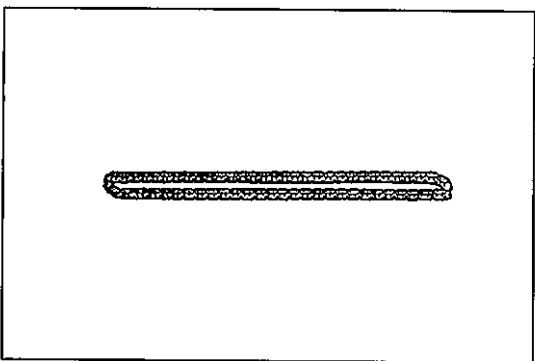


### 1st Timing Chain

- Check timing chain for wear or damage.

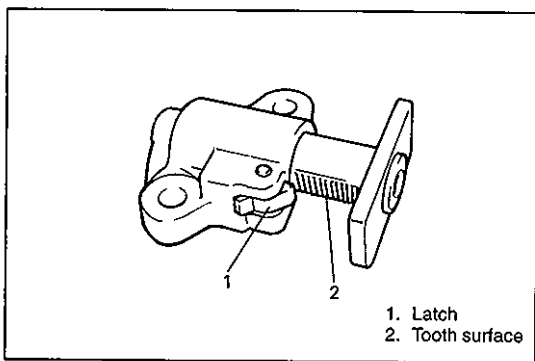


### Timing Chain Tensioner Adjuster No.1

- Check that latch and tooth surface are free from damage and latch functions properly.

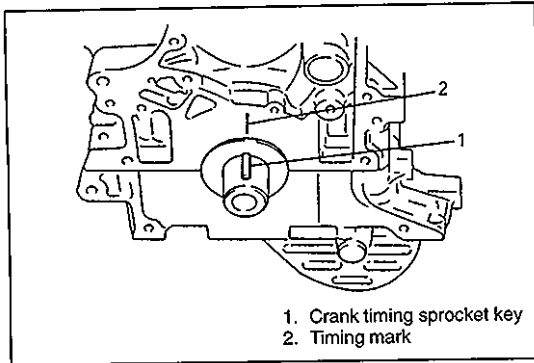


## INSTALLATION


- 1) Check that crank timing sprocket key is in match with timing mark on cylinder block.

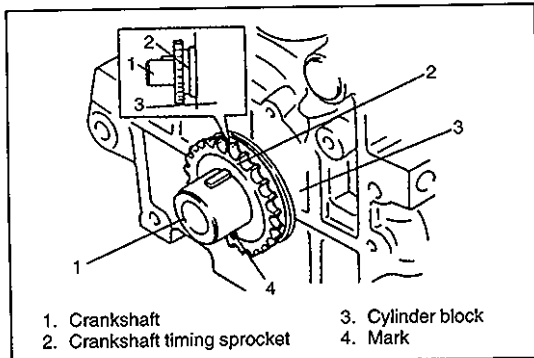


- 2) Install crankshaft timing sprocket as shown in figure. Match mark faces to chain cover.

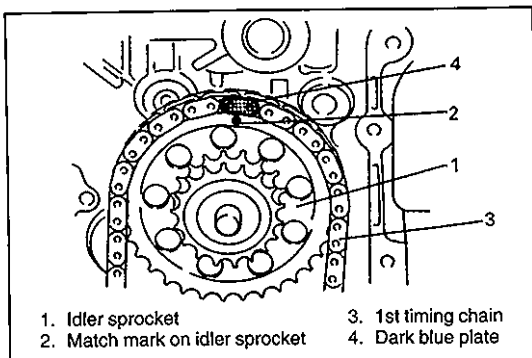

- 3) Apply oil to bush of idler sprocket.
- 4) Install sprocket shaft and idler sprocket.
- 5) Install 1st timing chain by aligning dark blue plate of 1st timing chain and match mark on idler sprocket.

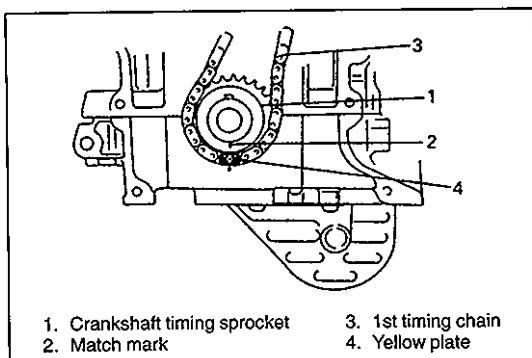


- 6) Bring yellow plate of 1st timing chain into match with match mark on crankshaft timing sprocket.

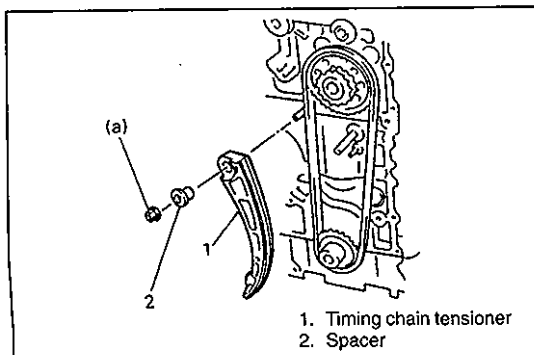


- 7) Install timing chain tensioner as shown in figure.

## Tightening Torque

(a): 25 N·m (2.5 kg·m, 18.5 lb·ft)

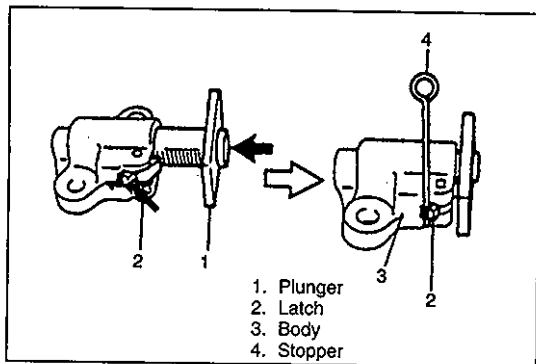

- 8) With latch of tensioner adjuster No.1 returned and plunger pushed back into body, hold it at the position by inserting stopper between latch and body.

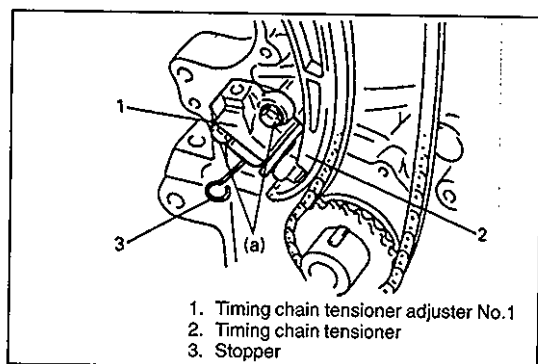


- 9) Install timing chain tensioner adjuster No.1.

**Tightening Torque**

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)


- 10) Pull out stopper from adjuster No.1.

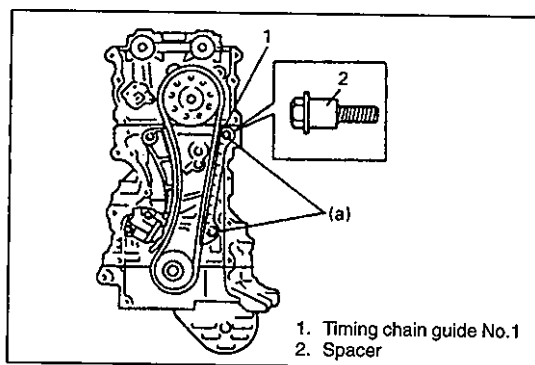

- 11) Install timing chain guide No.1.

**Tightening Torque**


(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

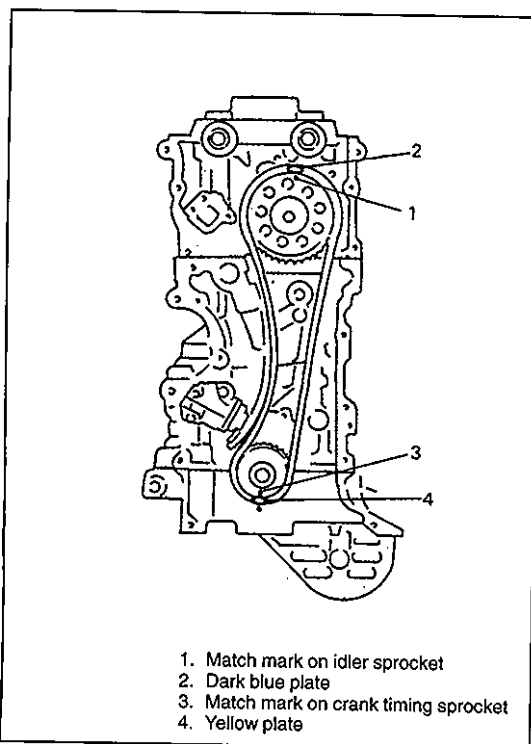

- 12) Check that dark blue and yellow plate of 1st timing chain are in match with match marks on sprockets respectively.

- 13) Install 2nd timing chain.  
Refer to item "2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 14) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 15) Install cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for installation.
- 16) Install oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for installation.
- 17) Install cooling system and other parts.
- 18) Refill cooling system with coolant, front differential with gear oil, engine with engine oil and power steering system with specified fluid.
- 19) Verify that there is no coolant leakage, power steering fluid leakage, exhaust gas leakage and oil leakage at each connection.


## CAMSHAFTS AND VALVE LASH ADJUSTERS

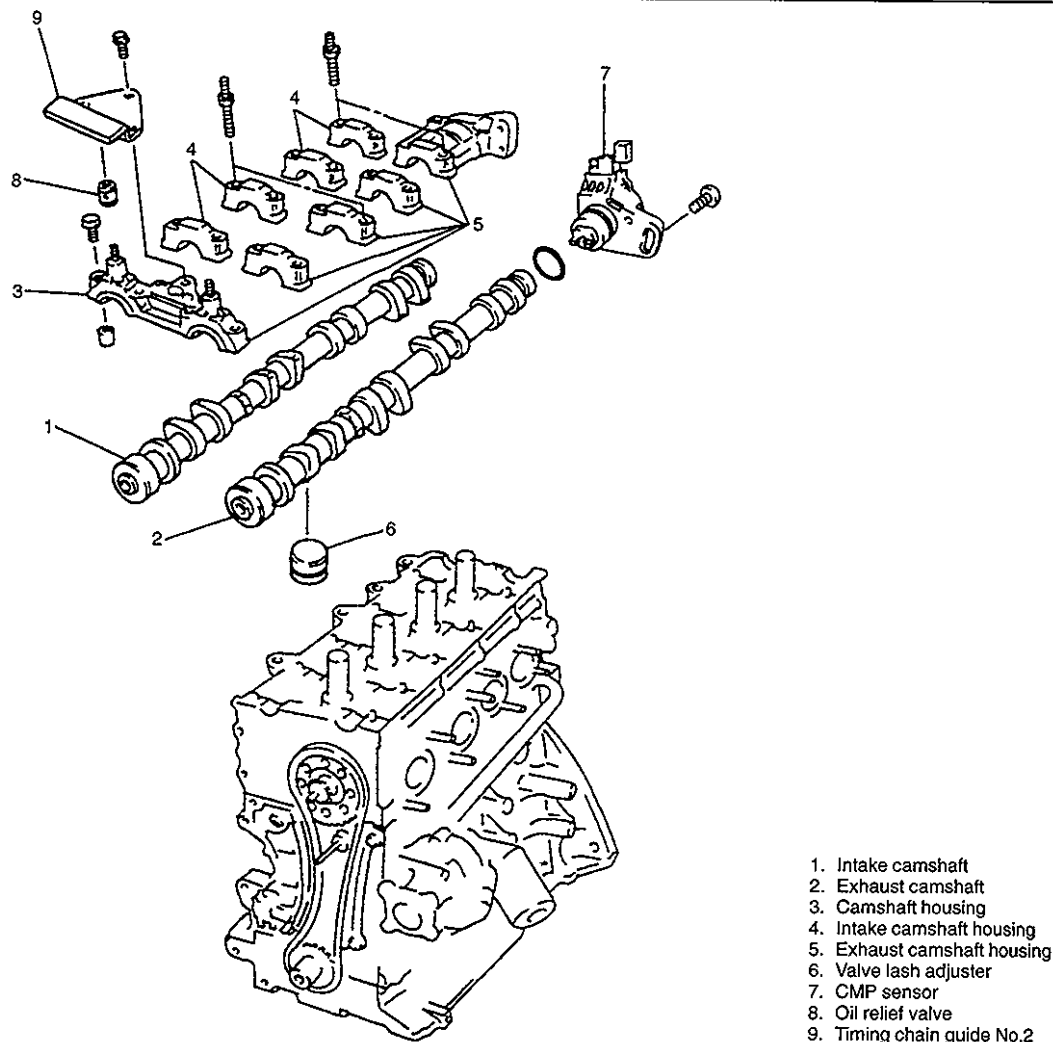


1. Intake camshaft
2. Exhaust camshaft
3. Camshaft housing
4. Intake camshaft housing
5. Exhaust camshaft housing
6. Valve lash adjuster
7. CMP sensor
8. Oil relief valve
9. Timing chain guide No.2

### REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 5) Remove cylinder head cover.  
Refer to item "CYLINDER HEAD COVER" in this section for removal.
- 6) Remove timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for removal.
- 7) Remove 2nd timing chain.  
Refer to item "2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for removal.
- 8) Remove CMP sensor.  
Refer to Section 6F2 for CMP sensor removal.

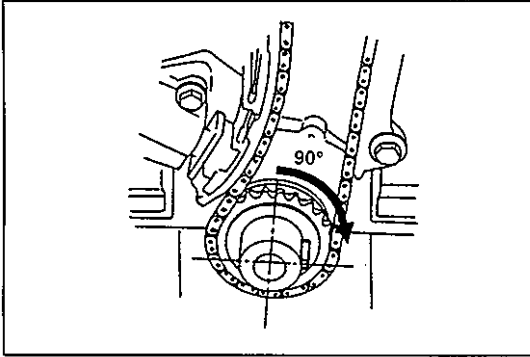

- 9) After removing 2nd timing chain, set key on crankshaft in position as shown by turning crankshaft. This is to prevent interference between valves and piston.

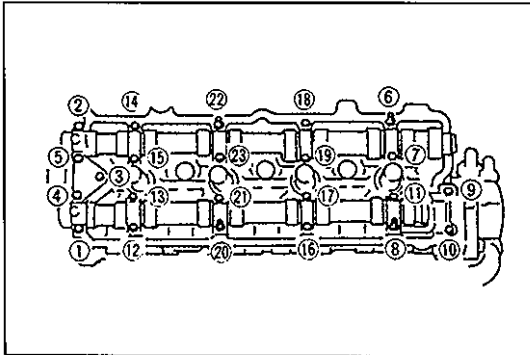


- 10) Loosen camshaft housing bolts in such order as indicated in figure and remove them.  
 11) Remove camshaft housings.  
 12) Remove camshafts.

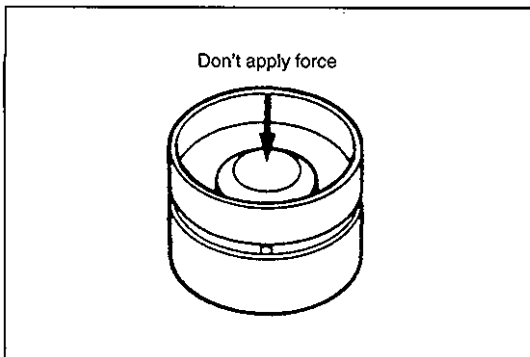


- 13) Remove valve lash adjusters.

#### NOTE:

- Never disassemble hydraulic valve lash adjuster.
- Don't apply force to body of adjuster, oil in high pressure chamber in adjuster will leak.

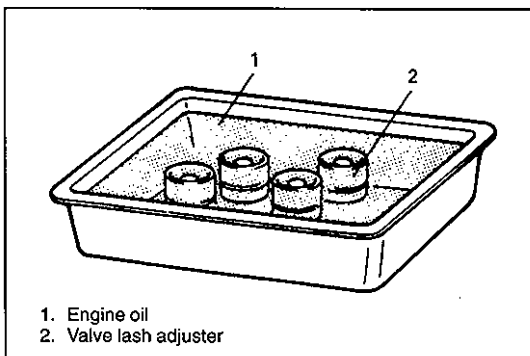

- Immerse removed adjuster in clean engine oil and keep it there till reinstalling it so as to prevent oil leakage. If it is left in air, place it with its bucket body facing down. Don't place on its side or with bucket body facing up.

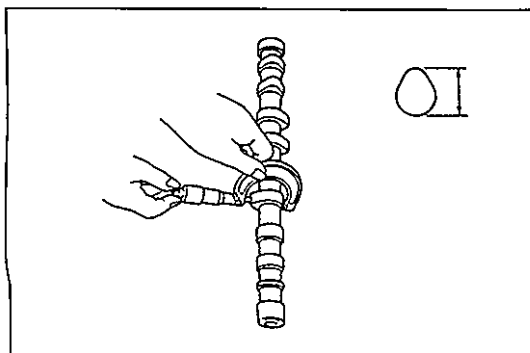


## INSPECTION

### Cam Wear

Using a micrometer, measure cam height. If measured height is below its limit, replace camshaft.


Cam height	Standard	Limit
Intake cam	40.402 – 40.562 mm (1.5906 – 1.5969 in.)	40.202 mm (1.5827 in.)
Exhaust cam	39.921 – 40.081 mm (1.5717 – 1.5780 in.)	39.721 mm (1.5638 in.)

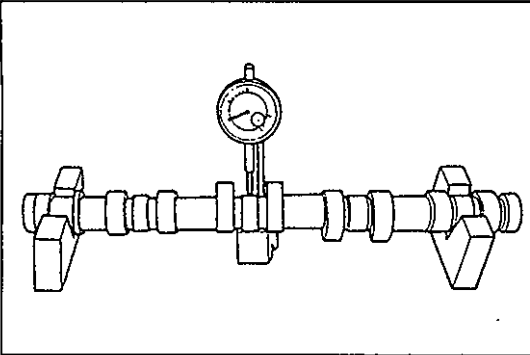

**Camshaft Runout**


Set camshaft between two "V" blocks, and measure its runout by using a dial gauge.  
If measured runout exceed below specified limit, replace camshaft.

Runout limit	0.10 mm (0.0039 in.)
--------------	----------------------

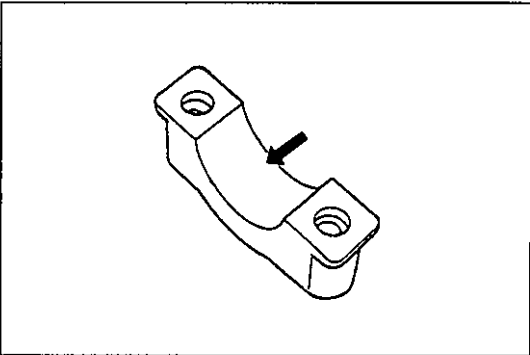

**Camshaft Journal Wear**

Check camshaft journals and camshaft housings for pitting, scratches, wear or damage.  
If any malcondition is found, replace camshaft or cylinder head with housing. Never replace cylinder head without replacing housings.

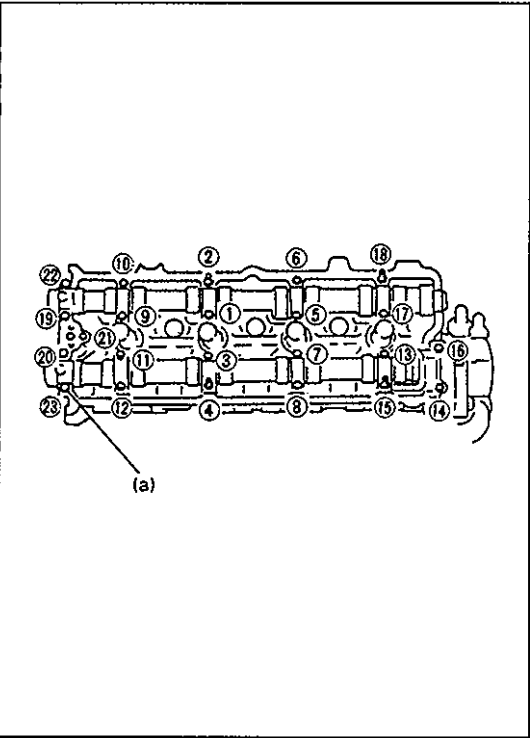


Check clearance by using gaging plastic. The procedure is as follows.

- 1) Clean housings and camshaft journals.
- 2) Make sure that all valve lash adjusters are removed and install camshaft to cylinder head.
- 3) Place a piece of gaging plastic the full width of journal of camshaft (parallel to camshaft).
- 4) Install camshaft housing.
- 5) Tighten camshaft housing bolts in such order as indicated in figure a little at a time till they are tightened to specified torque.


**NOTE:**  
Do not rotate camshaft while gaging plastic is installed.

**Tightening Torque**  
(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)

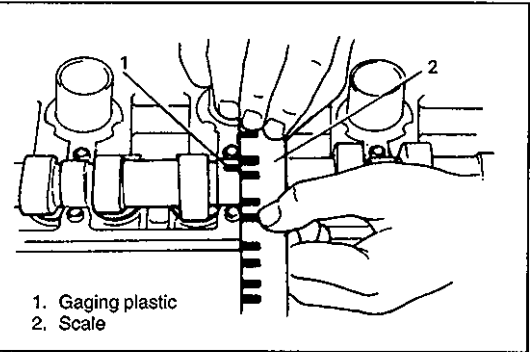


6) Remove housing, and using scale on gaging plastic envelop, measure gaging plastic width at its widest point.

	Standard	Limit
Journal clearance	0.020 – 0.074 mm (0.0008 – 0.0029 in.)	0.12 mm (0.0047 in.)

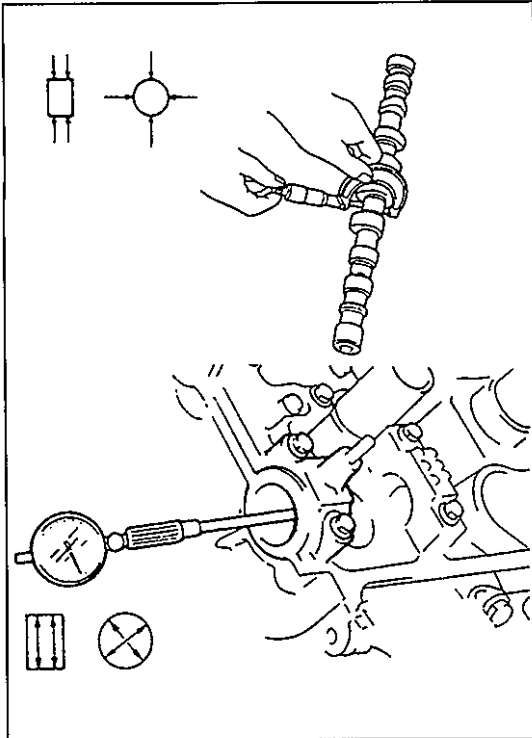


If measured camshaft journal clearance exceeds limit, measure journal (housing) bore and outside diameter of camshaft journal. Replace camshaft or cylinder head assembly whichever the difference from specification is greater.

Item	Standard
Camshaft journal bore dia. (IN & EX)	26.000 – 26.033 mm (1.0236 – 1.0249 in.)
Camshaft journal O.D. (IN & EX)	25.959 – 25.980 mm (1.0220 – 1.0228 in.)

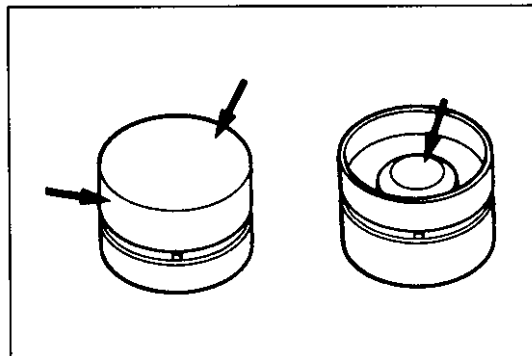

#### Wear of Hydraulic Valve Lash Adjuster


Check adjuster for pitting, scratches, or damage. If any malcondition is found, replace.

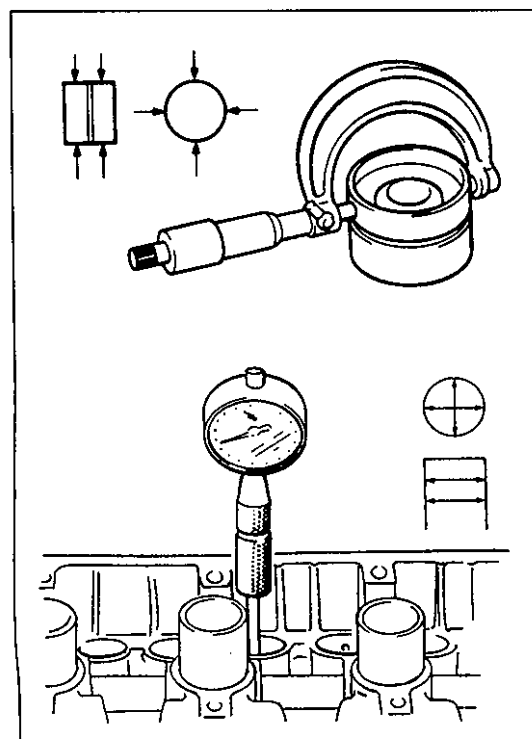

Measure cylinder head bore and adjuster outside diameter to determine cylinder head-to-adjuster clearance. If clearance exceeds limit, replace adjuster or cylinder head.


Item	Standard	Limit
Hydraulic valve lash adjuster O.D.	30.959 – 30.975 mm (1.2189 – 1.2194 in.)	—
Cylinder head bore	31.000 – 31.025 mm (1.2205 – 1.2214 in.)	—
Cylinder head to adjuster clearance	0.025 – 0.066 mm (0.0010 – 0.0025 in.)	0.15 mm (0.0059 in.)



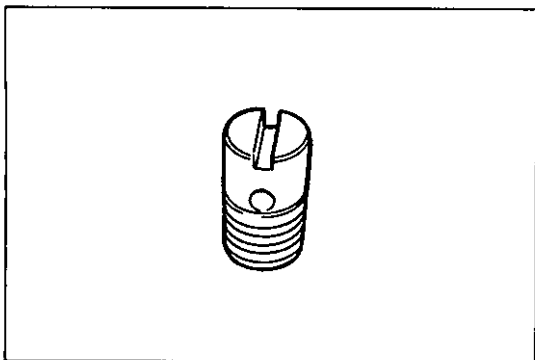

### Oil relief valve

Check oil relief valve for clogging and ball for being stuck.

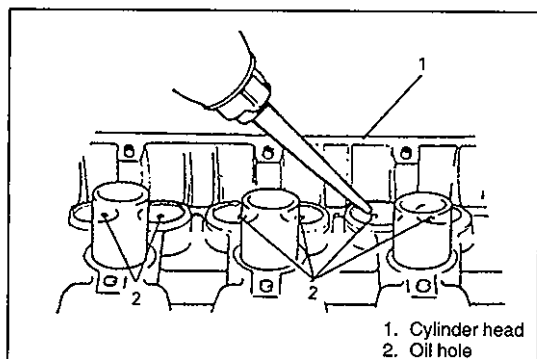


### INSTALLATION


- 1) Before installing valve lash adjuster to cylinder head, fill oil passage of cylinder head with engine oil according to following procedure.

Pour engine oil through oil holes and check that oil comes out from oil holes in sliding part of valve lash adjuster.


Perform this check on both intake and exhaust sides.

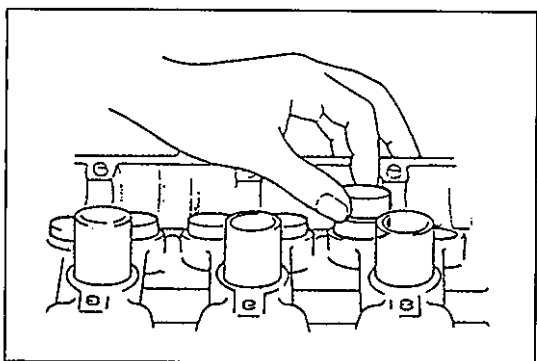

- 2) Install valve lash adjusters to cylinder head.  
Apply engine oil around valve lash adjuster and then install it to cylinder head.

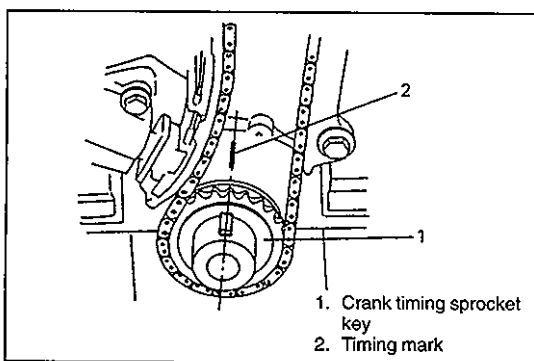

- 3) Match key on crankshaft to timing mark as shown in figure.



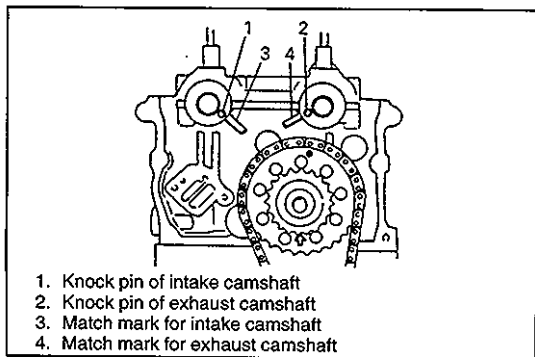


- 4) Install camshafts.

Apply oil to sliding surface of each camshaft and camshaft journal then install them by aligning match marks on cylinder head and pins on camshafts as shown in figure.

### NOTE:

Install camshaft in such direction that its end with groove for CMP sensor installation comes to exhaust side.

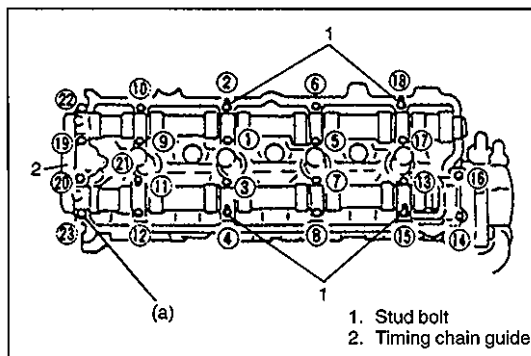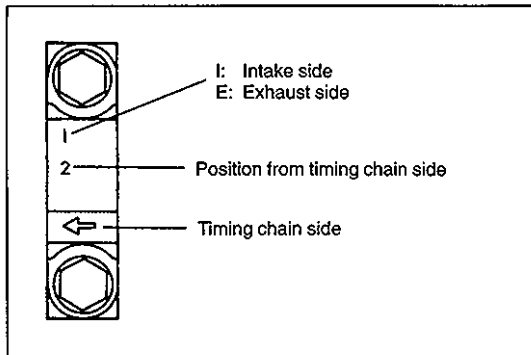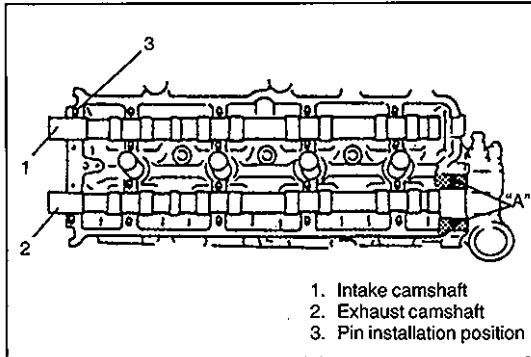

- 5) Install camshaft housing pins as shown in figure.
- 6) Apply sealant "A" to exhaust camshaft end housing sealing surface area as shown in figure.

**"A": Sealant 99000-31150**

- 7) Check position of camshaft housings.  
Embossed marks are provided on each camshaft housing, indicating position and direction for installation. Install housings as indicated by these marks.

- 8) After applying oil to housing bolts, tighten them temporarily first. Then tighten them by following sequence as indicated in figure. Tighten a little at a time and evenly among bolts and repeat tightening sequence two or three times before they are tightened to specified torque.

#### **Tightening Torque**

**(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)**

- 9) Install CMP sensor.  
Refer to Section 6F2 for CMP sensor installation.
- 10) Install 2nd timing chain.  
Refer to item "2ND TIMING CHAIN AND CHAIN TENSIONER" in this section for installation.
- 11) Install timing chain cover.  
Refer to item "TIMING CHAIN COVER" in this section for installation.
- 12) Install cylinder head cover. Refer to item "CYLINDER HEAD COVER" in this section for installation.
- 13) Install oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for installation.
- 14) Install cooling system and other parts.
- 15) Refill cooling system with coolant, front differential with gear oil, engine with engine oil and power steering system with specified fluid.
- 16) Verify that there is no coolant leakage, power steering fluid leakage, exhaust gas leakage and oil leakage at each connection.
- 17) Check ignition timing and adjust as necessary, referring to Section 6F2.



**CAUTION:**

- Don't turn camshafts or start engine (i.e., valves should not be operated) for about half an hour after reinstalling hydraulic valve lash adjusters and camshafts. As it takes time for valves to settle in place, operating engine within half an hour after their installation may cause interference to occur between valves themselves or valves and piston.
- If air is trapped in valve lash adjuster, valve may make tapping sound when engine is operated after valve lash adjuster is installed. In such a case, run engine for about half an hour at about 2,000 r/min., and then air will be purged and tapping sound will cease. Should tapping sound not cease, it is possible that valve lash adjuster is defective. Replace it if defective.

If defective adjuster can't be located by hearing among 16 of them, check as follows.


- 1) Stop engine and remove cylinder head cover.
- 2) Push adjuster downward by hand (with less than 20 kg or 44 lbs force) when cam crest is not on adjuster to be checked and check if clearance exists between cam and adjuster. If it does, adjuster is defective and needs replacement.

## VALVES AND CYLINDER HEAD

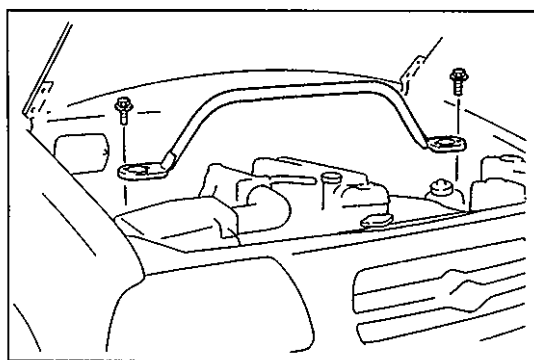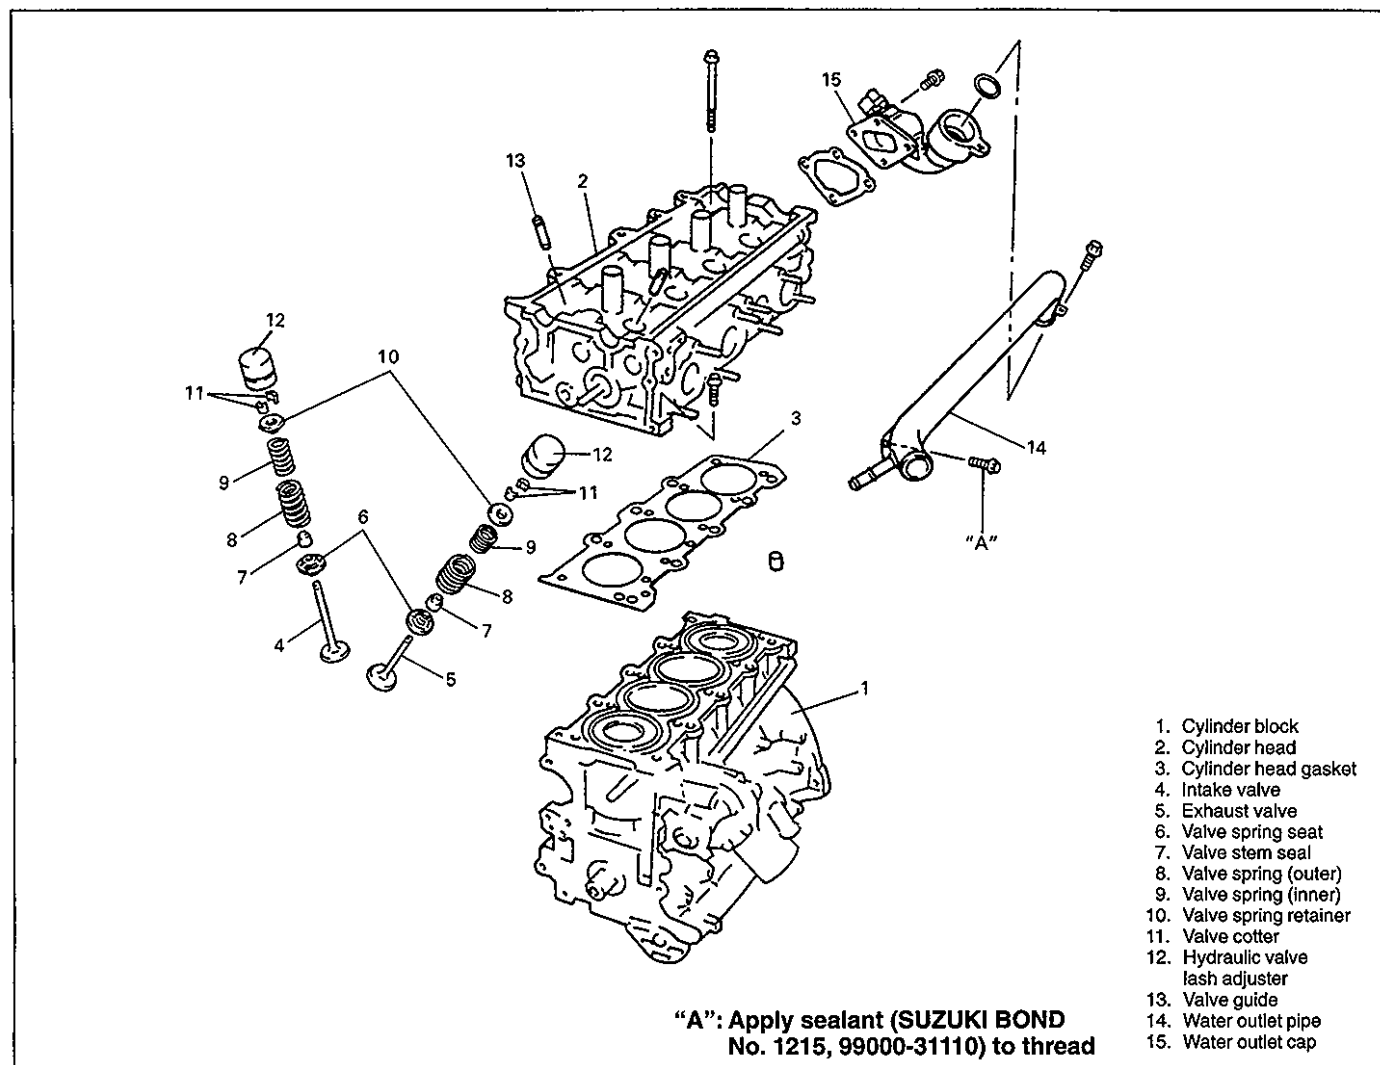


### REMOVAL

- 1) Relieve fuel pressure according to procedure described in Section 6.
- 2) Disconnect negative cable at battery.
- 3) Drain engine oil.
- 4) Drain coolant.
- 5) Remove strut tower bar.
- 6) Remove air cleaner outlet hose.

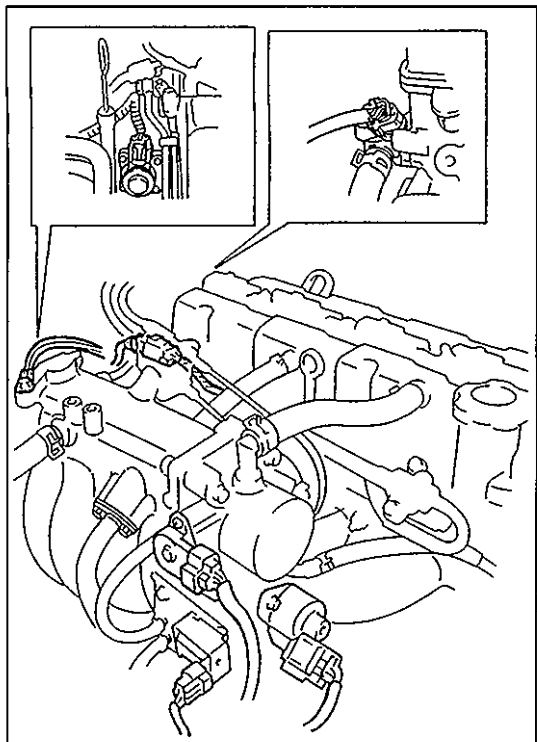


- 7) Disconnect following electric lead wires:
- EGR valve coupler (if equipped)
  - IAC valve coupler
  - TP sensor coupler
  - EVAP solenoid purge valve coupler
  - Ground terminal from intake manifold
  - Heated oxygen sensor coupler (if equipped)
  - CMP sensor coupler
  - ECT sensor coupler
  - Injector wire harness coupler
  - Ground wire at the coupler
  - Ignition coils couplers
  - Wire harness clamps

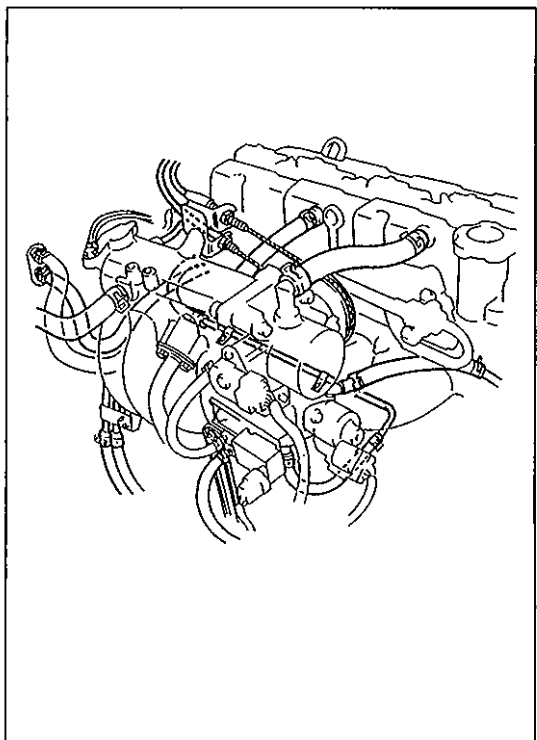


- 8) Disconnect accelerator cable and A/T throttle cable (for vehicle with A/T) from throttle body.
- 9) Disconnect following hoses:
- Brake booster hose from intake manifold
  - Canister purge hose from EVAP canister
  - Water hose from bypass pipe
  - Fuel feed hose and return hose from each pipe
  - Heater hose from heater outlet pipe
  - Radiator inlet hose from water outlet pipe
- 10) Remove intake manifold rear stiffener.
- 11) Detach water pipe from intake manifold.


- 12) Remove cylinder head cover, oil pan, timing chain cover, 2nd and 1st timing chains, camshafts and valve lash adjusters referring to item "CAMSHAFTS AND VALVE LASH ADJUSTERS" in this section.

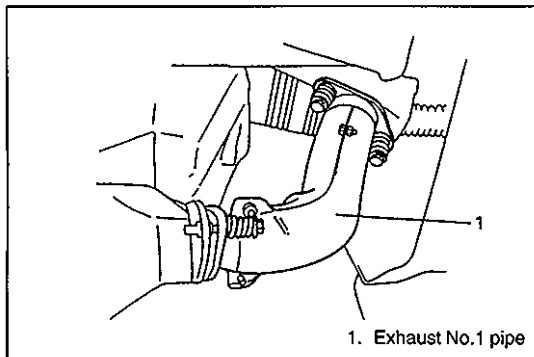

13) Disconnect exhaust No. 1 pipe from exhaust manifold.

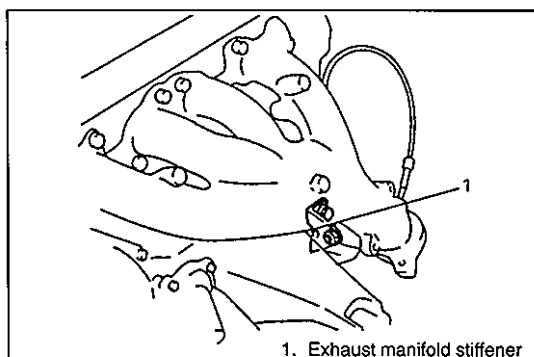

14) Remove exhaust manifold stiffener.

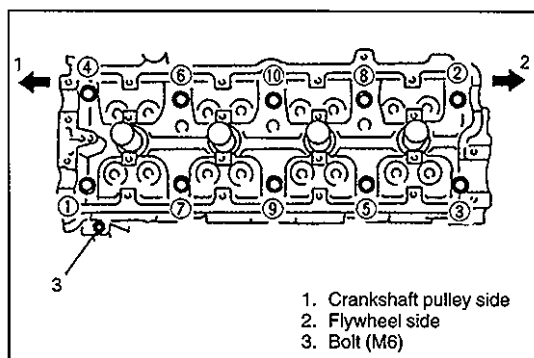


15) Loosen cylinder head bolts in such order as indicated in figure and remove them.

**NOTE:**

**Don't forget to remove bolt (M6) shown in figure.**

16) Check all around cylinder head for any other parts required to be removed or disconnected and remove or disconnect whatever necessary.

17) Remove cylinder head with intake manifold, exhaust manifold and water outlet pipe. Use lifting device if necessary.

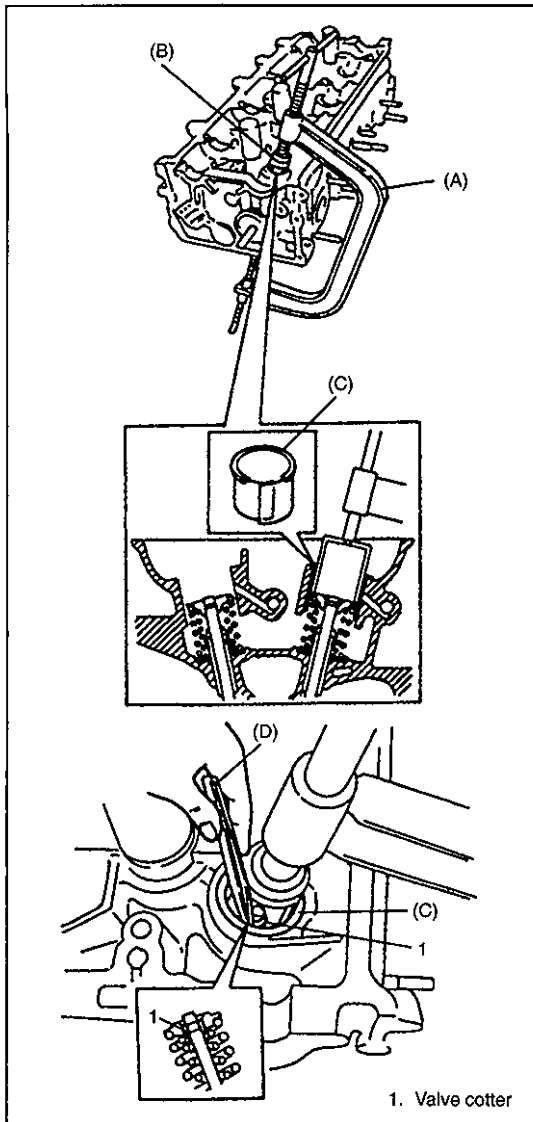

## DISASSEMBLY

- 1) When servicing cylinder head, remove intake manifold, injectors, exhaust manifold, water outlet pipe and water outlet cap from cylinder head.
- 2) Using special tools, compress valve springs and then remove valve cotter by using special tool.

### Special Tool


(A): 09916-14510

(B): 09916-14910

(C): 09919-28610

(D): 09916-84511


- 3) Release special tool, and remove spring retainers and valve springs.
- 4) Remove valve from combustion chamber side.

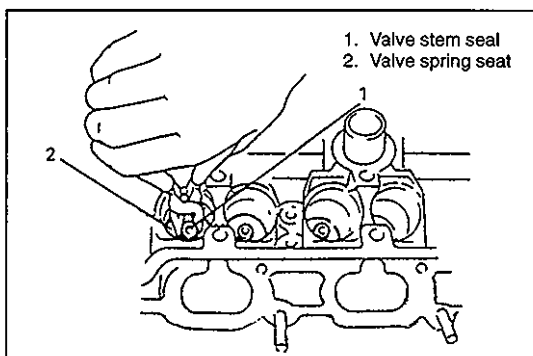

- 5) Remove valve stem seal from valve guide, and then valve spring seat.

### NOTE:

**Do not reuse seal once disassembled. Be sure to use new seal when assembling.**

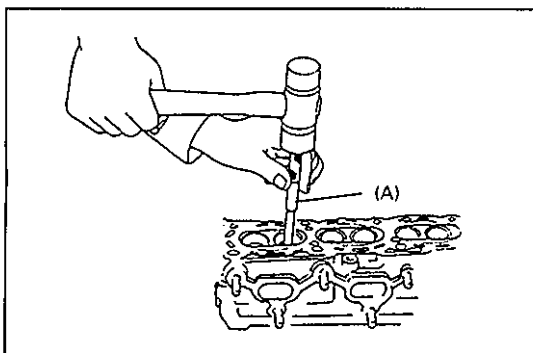

- 6) Using special tool (Valve guide remover), drive valve guide out from combustion chamber side to valve spring side.


### Special Tool

(A): 09916-44910

### NOTE:

**Do not reuse valve guide once disassembled. Be sure to use new valve guide (Oversize) when assembling.**

- 7) Place disassembled parts except valve stem seal and valve guide in order so that they can be installed in their original positions.

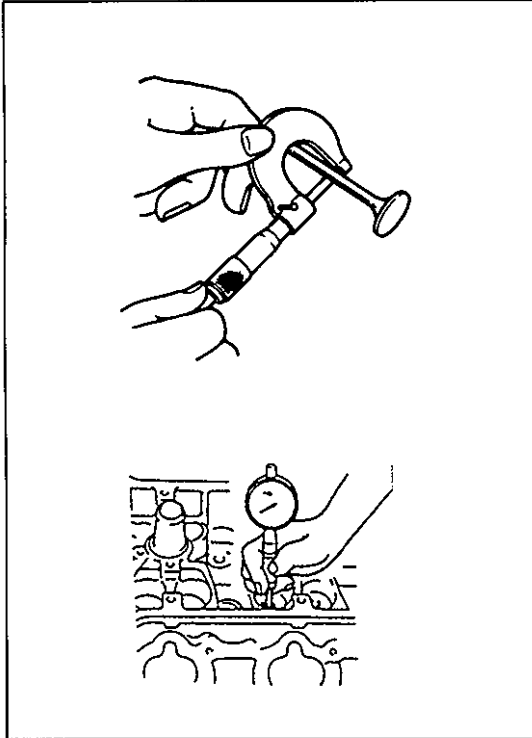


## INSPECTION

### Valve Guides

Using a micrometer and bore gauge, take diameter readings on valve stems and guides to check stem-to-guide clearance. Be sure to take reading at more than one place along the length of each stem and guide.

If clearance exceeds limit, replace valve and valve guide.


Item		Standard	Limit
Valve stem diameter	In	5.965 – 5.980 mm (0.2348 – 0.2354 in.)	—
	Ex	5.940 – 5.955 mm (0.2339 – 0.2344 in.)	—
Valve guide I.D.	In & Ex	6.000 – 6.012 mm (0.2362 – 0.2366 in.)	—
Stem-to-guide clearance	In	0.020 – 0.047 mm (0.0008 – 0.0018 in.)	0.07 mm (0.0027 in.)
	Ex	0.045 – 0.072 mm (0.0018 – 0.0028 in.)	0.09 mm (0.0035 in.)

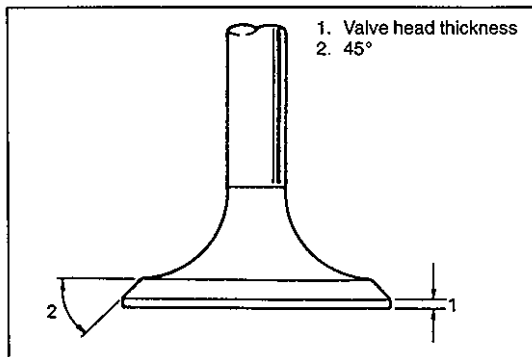


### Valves

- Remove all carbon deposits from valves.
- Inspect each valve for wear, burn or distortion at its face and stem, replace as necessary.
- Measure thickness of valve head. If measured thickness exceeds limit, replace valve.

Item	Standard	Limit
In	1.0 mm (0.039 in.)	0.6 mm (0.024 in.)
Ex	1.2 mm (0.047 in.)	0.7 mm (0.028 in.)

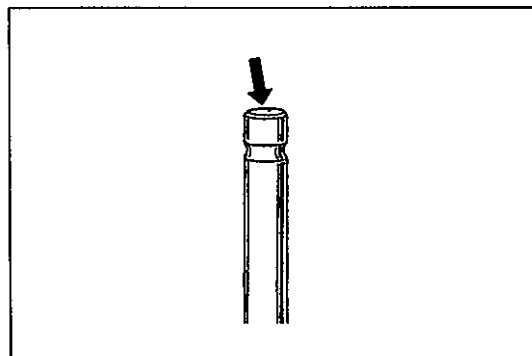


- Inspect valve stem end face for pitting and wear. If pitting or wear is found there, valve stem end may be resurfaced, but not too much to grind off its chamber. When it is worn out too much that its chamber is gone, replace valve.

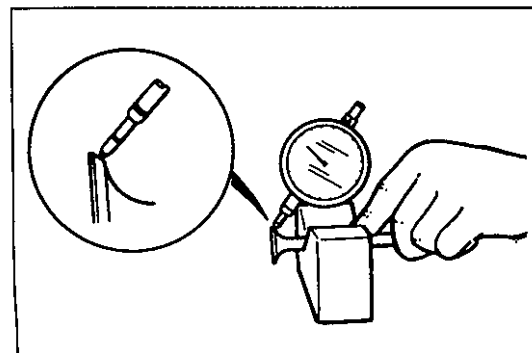

- Check each valve for radial runout with a dial gauge and "V" block. To check runout, rotate valve slowly. If runout exceeds its limit, replace valve.

**Limit on valve head radial runout:**  
0.08 mm (0.003 in.)



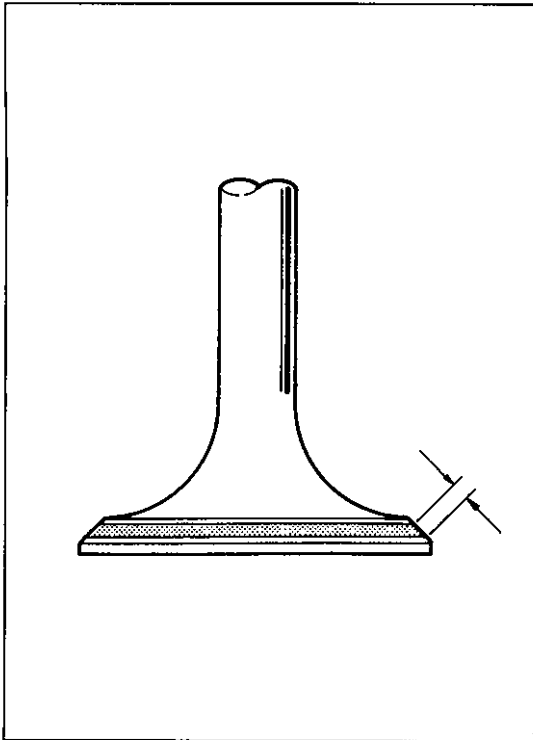


● **Seating contact width:**

Create contact pattern on each valve in the usual manner, i.e. by giving uniform coat of marking compound to valve seat and by rotatingly tapping seat with valve head. Valve lapper (tool used in valve lapping) must be used.

Pattern produced on seating face of valve must be a continuous ring without any break, and the width of pattern must be within specified range.

Standard seating width revealed by contact pattern on valve face	In	1.1 – 1.3 mm (0.0433 – 0.0512 in.)
	Ex	

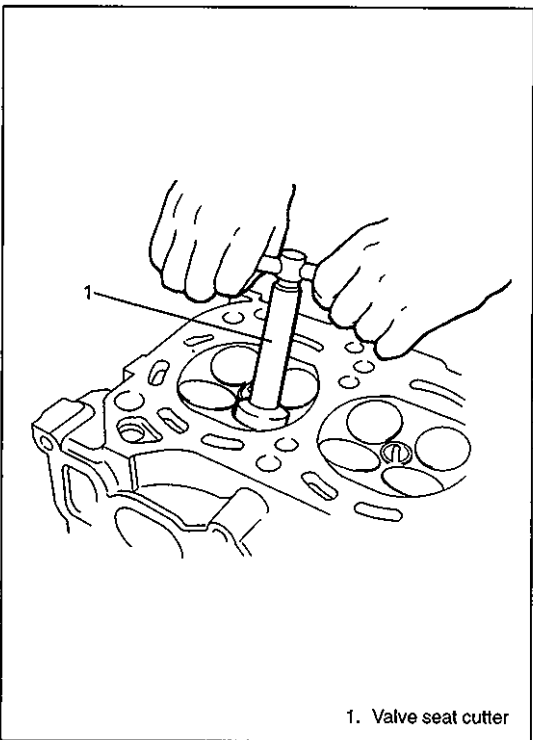

● **Valve seat repair:**

A valve seat not producing a uniform contact with its valve or showing width of seating contact that is out of specified range must be repaired by regrinding or by cutting and regrinding and finished by lapping.

- 1) **EXHAUST VALVE SEAT:** Use valve seat cutters to make two cuts as illustrated in figure. Two cutters must be used: the first for making 15° angle, and the second for making 45° angle. The second cut must be made to produce desired seat width.


**Seat width for valve seat:**

**1.1 – 1.3 mm (0.0433 – 0.0512 in.)**


- 2) **INTAKE VALVE SEAT:** Use valve seat cutters to make three cuts as illustrated in figure. Three cutters must be used: the 1st for making 15° angle, the 2nd for making 60° angle, and 3rd for making 45° angle. The 3rd cut (45°) must be made to produce desired seat width.

**Seat width for intake valve seat:**

**1.1 – 1.3 mm (0.0433 – 0.0512 in.)**

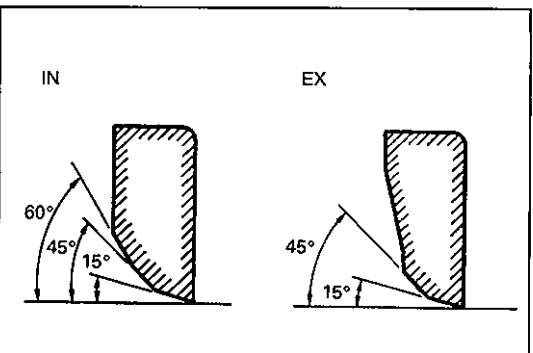

- 3) **VALVE LAPPING:** Lap valve on seat in two steps, first with coarse size lapping compound applied to face and the second with fine-size compound, each time using valve lapper according to usual lapping method.

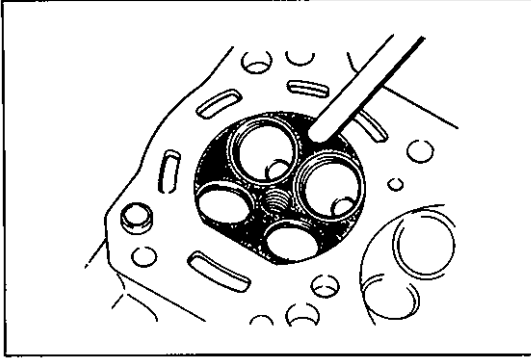


### Cylinder Head

- Remove all carbon deposits from combustion chambers.

#### NOTE:

**Do not use any sharp-edged tool to scrape off carbon deposits. Be careful not to scuff or nick metal surfaces when decarboning. The same applies to valves and valve seats, too.**

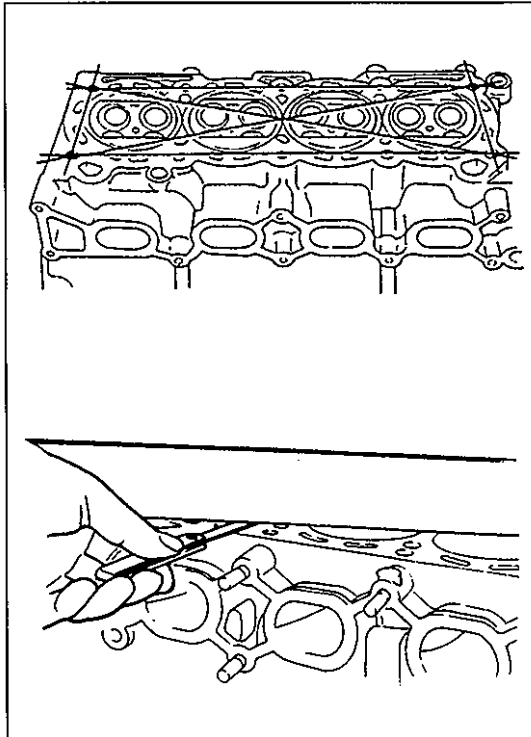


- Check cylinder head for cracks on intake and exhaust ports, combustion chambers, and head surface.

Using straightedge and thickness gauge, check flatness of gasketed surface at a total of 6 locations. If distortion limit, given below, is exceeded, correct gasketed surface with a surface plate and abrasive paper of about #400 (Waterproof silicon carbide abrasive paper): Place abrasive paper on and over surface plate, and rub gasketed surface against paper to grind off high spots. Should this fail to reduce thickness gauge readings to within limit, replace cylinder head.

Leakage of combustion gases from this gasketed joint is often due to warped gasketed surface: such leakage results in reduced power output.


**Limit of distortion: 0.05 mm (0.002 in.)**

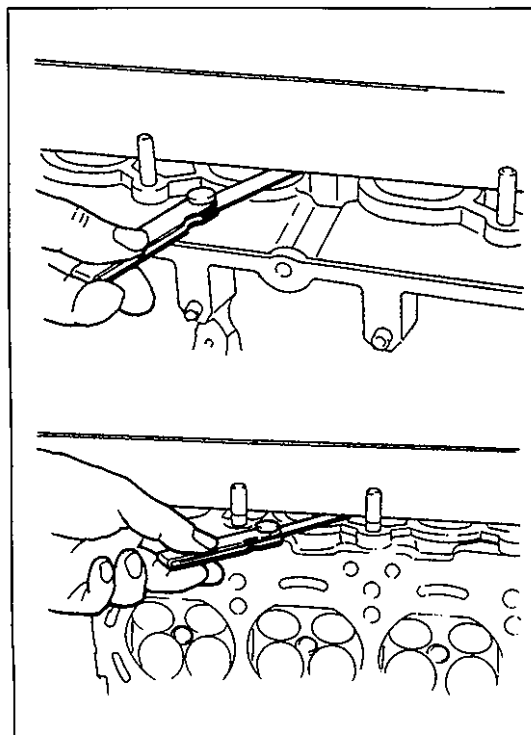

- Distortion of manifold seating faces:

Check seating faces of cylinder head for manifolds, using a straightedge and thickness gauge, in order to determine whether these faces should be corrected or cylinder head replaced.


**Limit of distortion: 0.10 mm (0.004 in.)**

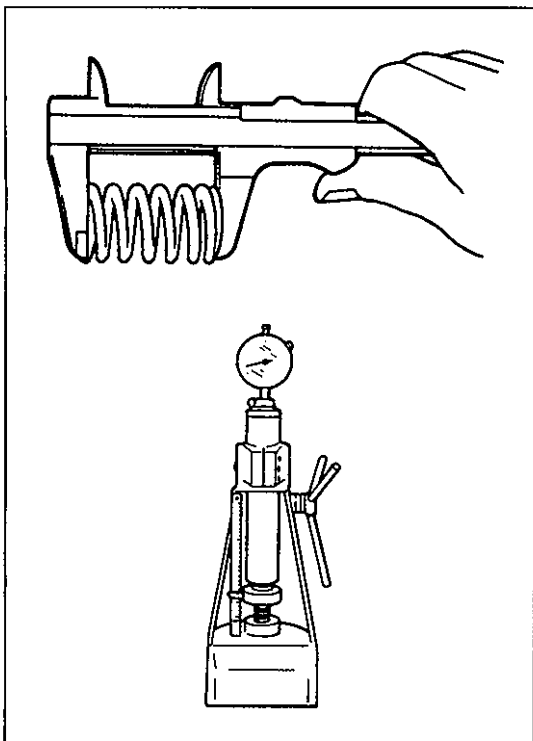

### Valve Springs

- Referring to data given below, check to be sure that each spring is in sound condition, free of any evidence of breakage or weakening. Remember, weakened valve springs can cause chatter, not to mention possibility of reducing power output due to gas leakage caused by decreased seating pressure.


Item		Standard	Limit
Valve spring free length	INNER	36.08 mm (1.4204 in.)	35.00 mm (1.3780 in.)
	OUTER	40.44 mm (1.5921 in.)	39.22 mm (1.5441 in.)
Valve spring preload	INNER	6.9 – 7.9 kg for 27.5 mm (15.2 – 17.4 lb/ 1.08 in.)	6.2 kg for 27.5 mm (13.6 lb/ 1.08 in.)
	OUTER	15.4 – 17.8 kg for 31.7 mm (33.9 – 39.2 lb/ 1.25 in.)	13.8 kg for 31.7 mm (30.4 lb/ 1.25 in.)

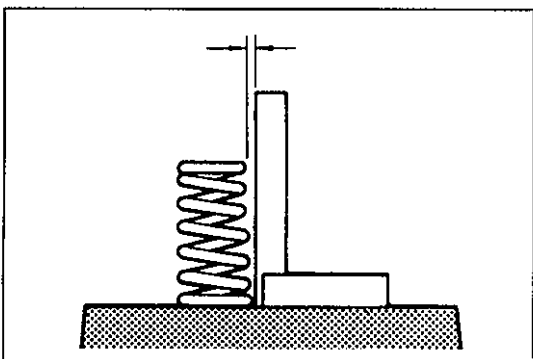

- Spring squareness:

Use a square and surface plate to check each spring for squareness in terms of clearance between end of valve spring and square. Valve springs found to exhibit a larger clearance than limit given below must be replaced.

**Valve spring squareness limit: 2.0 mm (0.079 in.)**

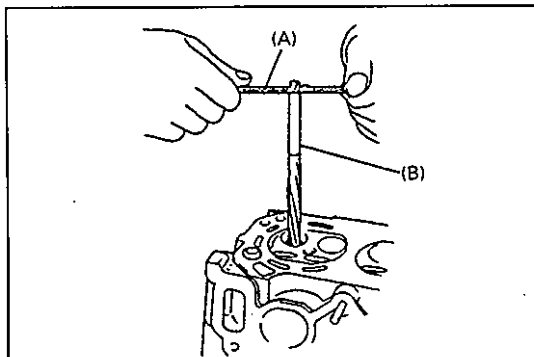


## ASSEMBLY

- 1) Before installing valve guide into cylinder head, ream guide hole with special tool (11 mm reamer) so as to remove burrs and make it truly round.

### Special Tool

(A): 09916-34542

(B): 09916-38210

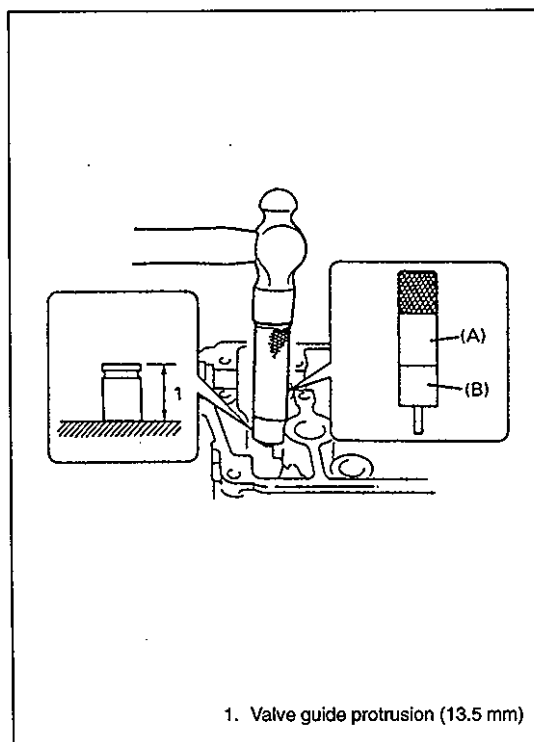

- 2) Install valve guide to cylinder head.

Heat cylinder head uniformly to a temperature of 80 to 100 °C (176 to 212 °F) so that head will not be distorted, and drive new valve guide into hole with special tools. Drive in new valve guide until special tool (Valve guide installer) contacts cylinder head.

After installing, make sure that valve guide protrudes by 13.5 mm (0.53 in.) from cylinder head.

### Special Tool

(A): 09916-58210


(B): 09917-87810

### NOTE:

- Do not reuse once-disassembled valve guide. Install new valve guide (Oversize).
- Intake and exhaust valve guides are identical.

Valve guide oversize: 0.03 mm (0.0012 in.)

Valve guide protrusion (In and Ex): 13.5 mm (0.53 in.)

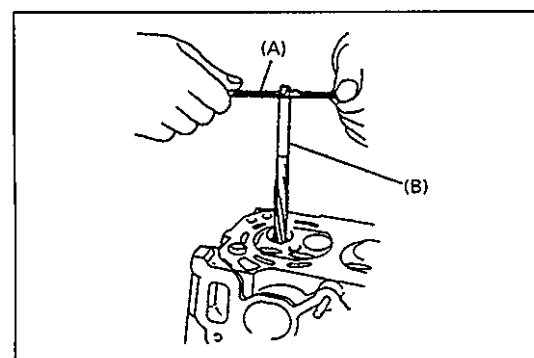


- 3) Ream valve guide bore with special tool (6.0 mm reamer). After reaming, clean bore.

### Special Tool

(A): 09916-34542

(B): 09916-37810

- 4) Install valve spring seat to cylinder head.

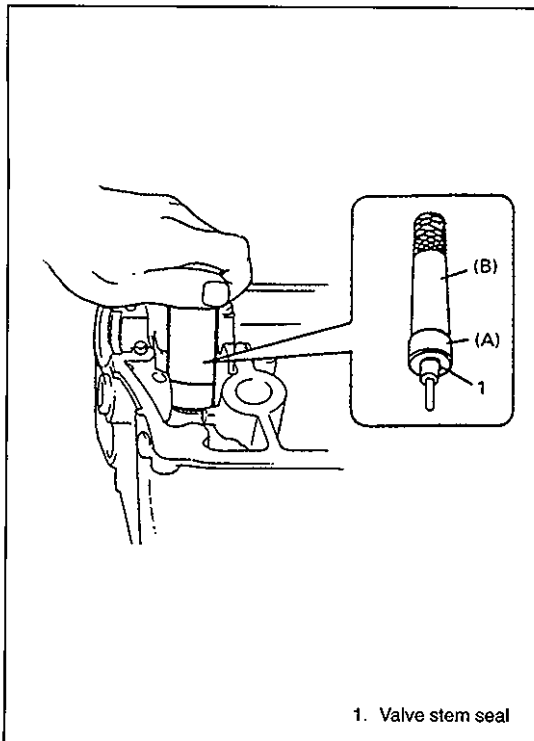

5) Install new valve stem seal to valve guide.

After applying engine oil to seal and spindle of special tool (Valve guide installer handle), fit oil seal to spindle, and then install seal to valve guide by pushing special tool by hand.

After installing, check to be sure that seal is properly fixed to valve guide.


**Special Tool**

(A): 09917-98221

(B): 09916-58210


**NOTE:**

- Do not reuse once-disassembled seal. Be sure to install new seal.
- When installing, never tap or hit special tool with a hammer or else. Install seal to guide only by pushing special tool by hand. Tapping or hitting special tool may cause damage to seal.

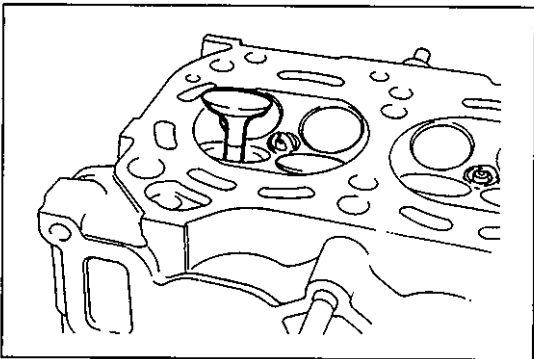


6) Install valve to valve guide.

Before installing valve to valve guide, apply engine oil to stem seal, valve guide bore, and valve stem.

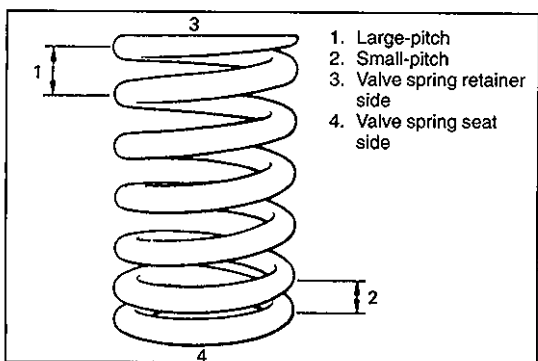

7) Install valve springs (inner and outer springs) and spring retainer.

Each valve spring has top end (large-pitch end) and bottom end (small-pitch end). Be sure to position spring in place with its bottom end (small-pitch end) facing the bottom (valve spring seat side).

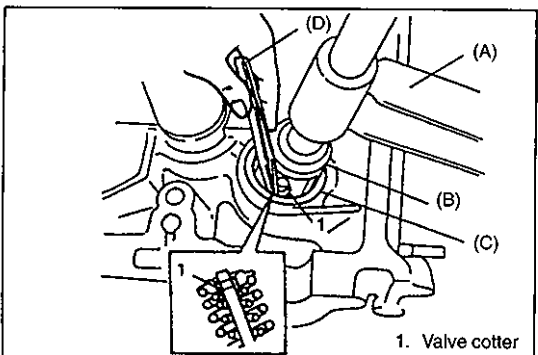

8) Using special tool (Valve lifter), compress valve spring and fit two valve cotter pins into groove in valve stem.


**Special Tool**

(A): 09916-14510

(B): 09916-14910

(C): 09919-28610

(D): 09916-84511

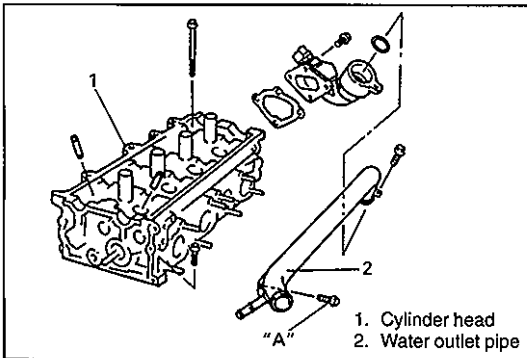


- 9) Install intake manifold, injectors, exhaust manifold, water outlet pipe and water outlet cap to cylinder head.

**NOTE:**


When installing water outlet pipe, apply sealant to the thread of the bolt shown in figure.

"A": Sealant 99000-31110

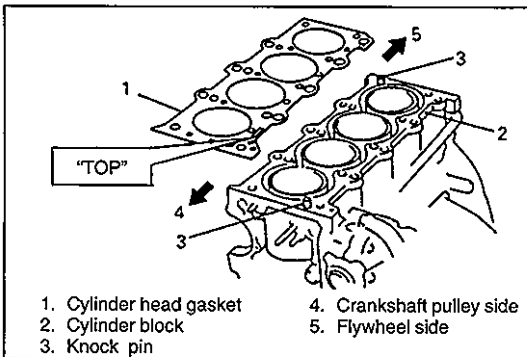


**INSTALLATION**


- 1) Clean mating surface of cylinder head and cylinder block. Remove oil, old gasket and dust from mating surface.
- 2) Install knock pins to cylinder block.
- 3) Install new cylinder head gasket to cylinder block. "TOP" mark provided on gasket comes to crankshaft pulley side, facing up (toward cylinder head side).

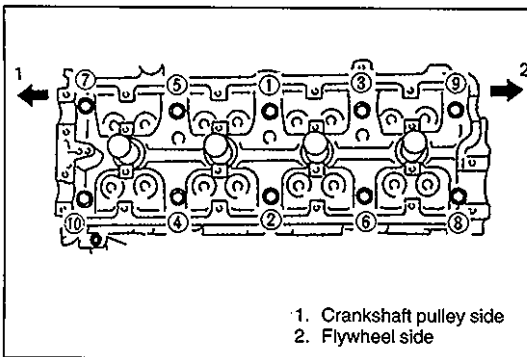

- 4) Install cylinder head to cylinder block. Apply engine oil to cylinder head bolts and tighten them gradually as follows.
  - (1) Tighten all bolts to 53 N·m (5.3 kg-m, 38.5 lb-ft) according to numerical order in figure.
  - (2) In the same manner as in (1), tighten them to 84 N·m (8.4 kg-m, 61.0 lb-ft).

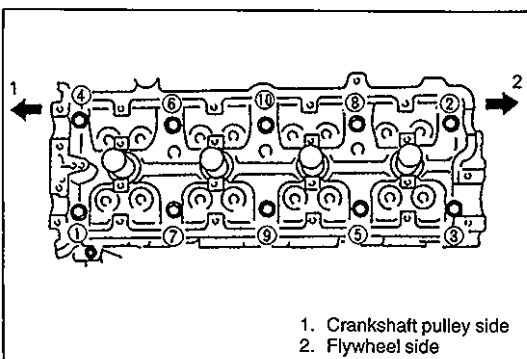

- (3) Loosen all the bolts until tightening torque is reduced to 0 in the illustrated order.

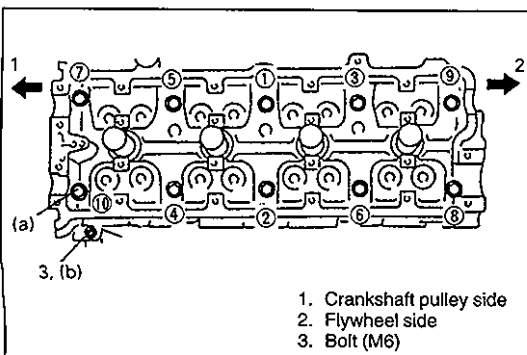

- (4) Tighten all bolts to 53 N·m (5.3 kg-m, 38.5 lb-ft) according to numerical order in figure.
- (5) In the same manner as in (4) again, tighten them to specified torque.


**Tightening Torque**

(a): 105 N·m (10.5 kg-m, 76.0 lb-ft)

(b): 11 N·m ( 1.1 kg-m, 8.0 lb-ft)


**NOTE:**

Be sure to tighten M6 bolt after securing the other bolt.

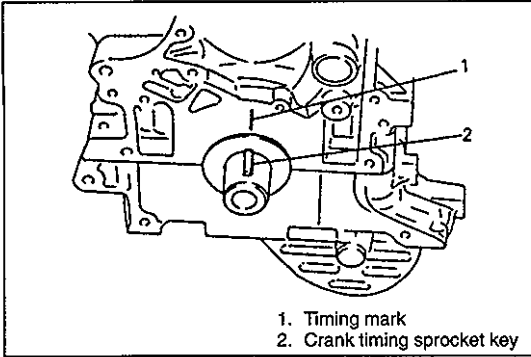


- 5) Check that key on crankshaft aligns with timing mark as shown in figure.
- 6) Reverse removal procedure for installation.
- 7) Adjust cooling fan belt tension.  
Refer to Section 6B for adjusting procedure.
- 8) Adjust accelerator cable play and A/T throttle cable play (for vehicle with A/T). Refer to Section 6E1.
- 9) Check to ensure that all removed parts are back in place.  
Reinstall any necessary parts which have not been reinstalled.
- 10) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in Section 0B.
- 11) Refill cooling system referring to Section 6B.
- 12) Refill front differential housing with gear oil, referring to "DIFFERENTIAL" section.
- 13) Refill power steering system with specified fluid referring to Section 3B1.
- 14) Connect negative cable at battery.
- 15) Verify that there is no fuel leakage, coolant leakage, oil leakage and exhaust gas leakage at each connection.
- 16) Check ignition timing and adjust as necessary, referring to Section 6F2.

# PISTONS, PISTON RINGS, CONNECTING RODS AND CYLINDERS

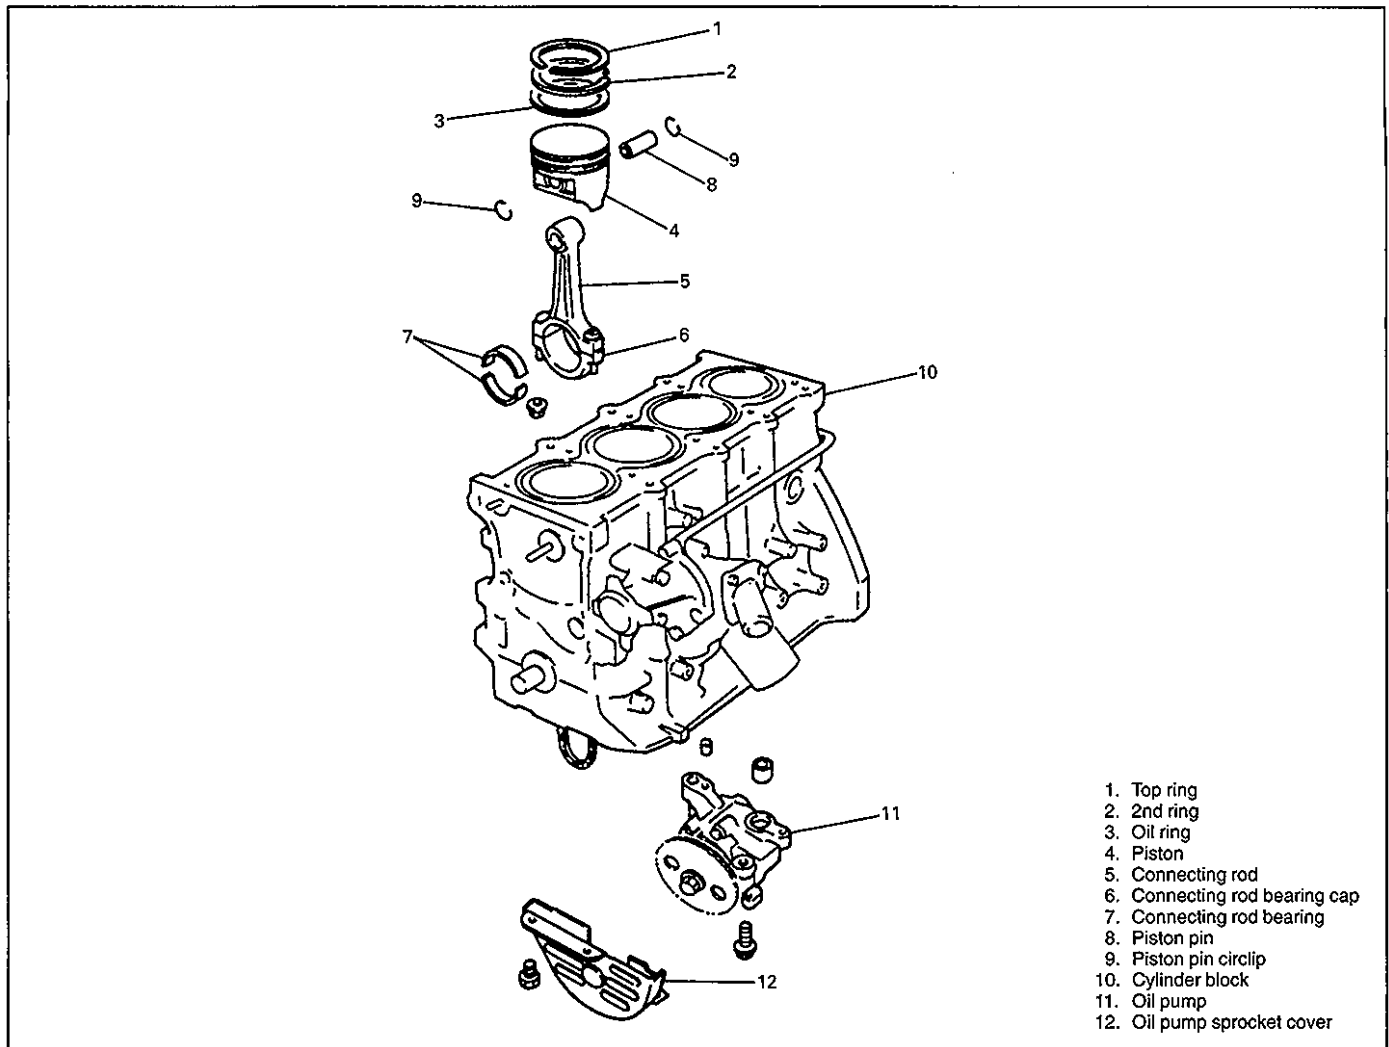

## REMOVAL

- 1) Relieve fuel pressure according to procedure described in Section 6.
- 2) Disconnect negative cable at battery.
- 3) Drain engine oil.
- 4) Drain coolant.
- 5) Remove cylinder head with intake manifold, exhaust manifold and water outlet pipe. Refer to item "VALVES AND CYLINDER HEAD" in this section for removal.
- 6) Remove oil pump. Refer to item "OIL PUMP" in this section for removal.

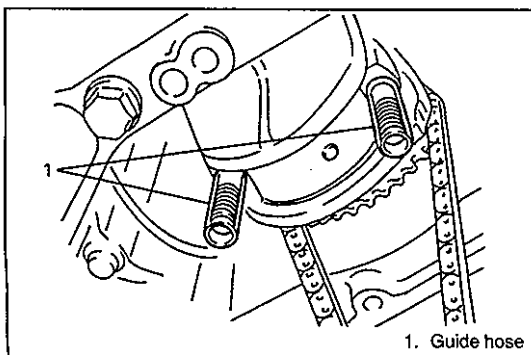


- 7) Mark cylinder number on all pistons, connecting rods and connecting rod caps.
- 8) Remove rod bearing caps.
- 9) Install guide hose over threads of rod bolts.  
This prevents damage to bearing journal and rod bolt threads when removing connecting rod.
- 10) Clean carbon deposits from top of cylinder bore before removing piston from cylinder.
- 11) Push piston and connecting rod assembly out through the top of cylinder bore.




## DISASSEMBLY

- 1) Using piston ring expander, remove two compression rings (Top and 2nd) and oil ring from piston.

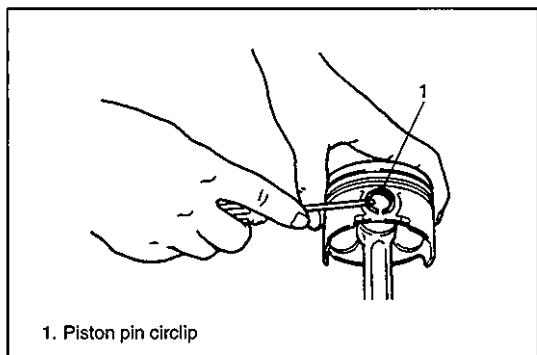

- 2) Remove piston pin from connecting rod.
  - Ease out piston pin circlips, as shown.

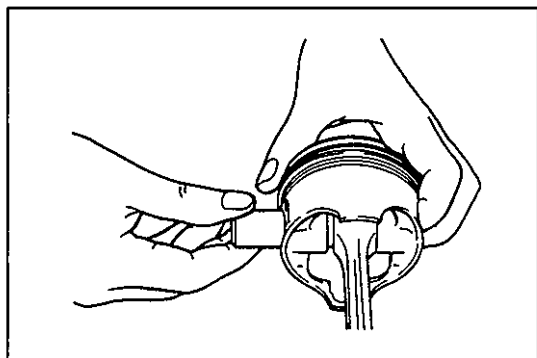

- Force piston pin out.


## CLEANING

Clean carbon deposits from piston head and ring grooves, using a suitable tool.

## INSPECTION

### Cylinder

- Inspect cylinder walls for scratches, roughness, or ridges which indicate excessive wear. If cylinder bore is very rough or deeply scratched, or ridged, rebore cylinder and use over size piston.

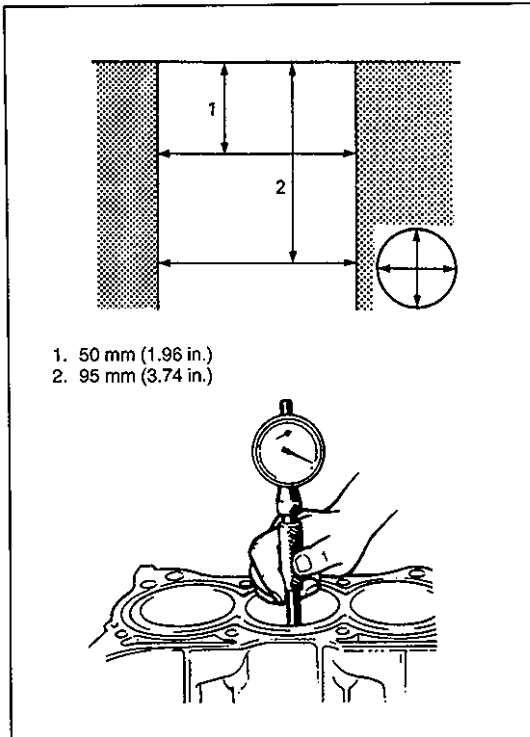

- Using a cylinder gauge, measure cylinder bore in thrust and axial directions at two positions as shown in figure.

If any of the following conditions is noted, rebore cylinder.


- Cylinder bore dia. exceeds limit.
- Difference of measurements at two positions exceeds taper limit.
- Difference between thrust and axial measurements exceeds out-of-round limit.

**Cylinder bore dia. limit:** 84.050 mm (3.3090 in.)

**Taper and out-of-round limit:** 0.10 mm (0.004 in.)

#### NOTE:

If any one of four cylinders has to be rebored, rebore all four to the same next oversize. This is necessary for the sake of uniformity and balance.

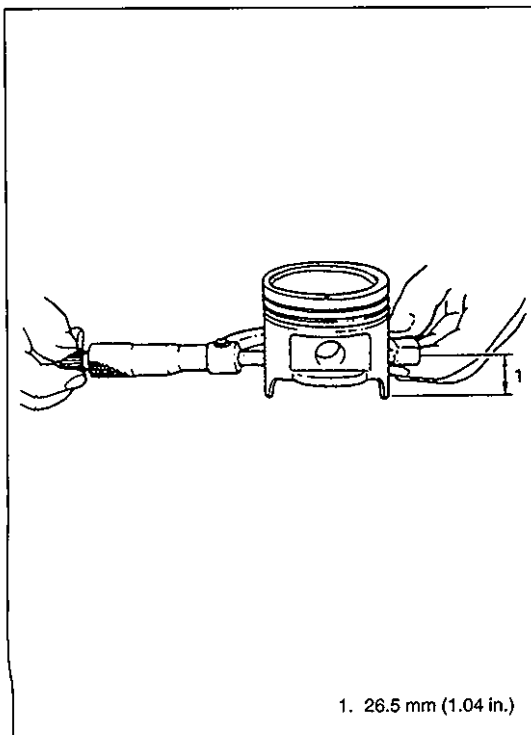


### Pistons

- Inspect piston for faults, cracks or other damages. Damaged or faulty piston should be replaced.

- Piston diameter:

As indicated in figure, piston diameter should be measured at a position 26.5 mm (1.04 in.) from piston skirt end in the direction perpendicular to piston pin.

Piston diameter	Standard	83.970 – 83.990 mm (3.3059 – 3.3066 in.)
	Oversize: 0.25 mm (0.0098 in.)	84.220 – 84.240 mm (3.3157 – 3.3165 in.)
	0.50 mm (0.0196 in.)	84.470 – 84.490 mm (3.3256 – 3.3263 in.)

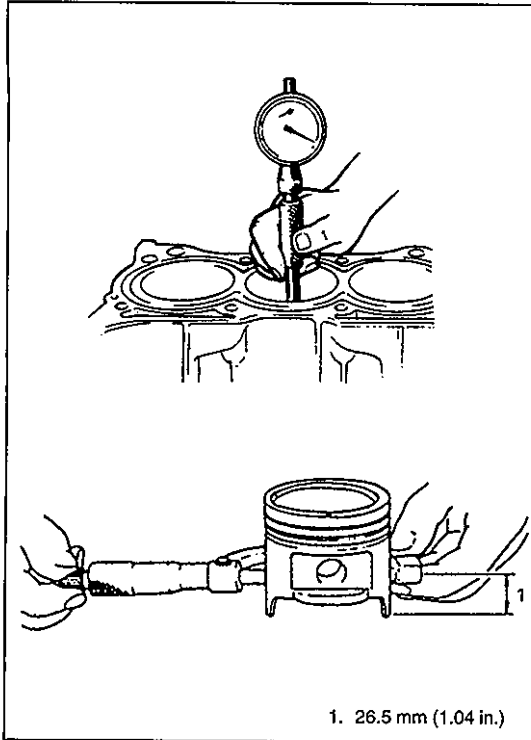


- **Piston clearance:**

Measure cylinder bore diameter and piston diameter to find their difference which is piston clearance. Piston clearance should be within specification as given below. If it is out of specification, re-bore cylinder and use oversize piston.

**Piston clearance: 0.02 – 0.04 mm (0.0008 – 0.0015 in.)**

**NOTE:**

Cylinder bore diameters used here are measured in thrust direction at two positions.

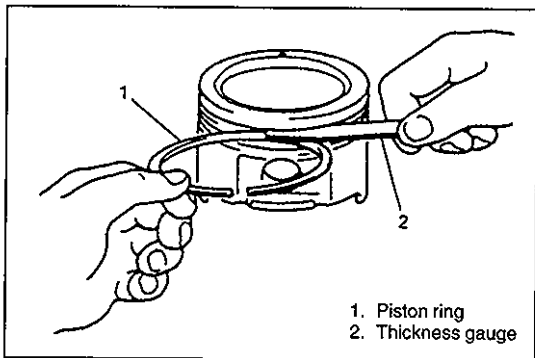

- **Ring groove clearance:**


Before checking, piston grooves must be clean, dry and free of carbon deposits.

Fit new piston ring into piston groove, and measure clearance between ring and ring land by using thickness gauge. If clearance is out of specification, replace piston.

**Ring groove clearance:**

**Top: 0.03 – 0.07 mm (0.0012 – 0.0027 in.)**

**2nd: 0.02 – 0.06 mm (0.0008 – 0.0023 in.)**

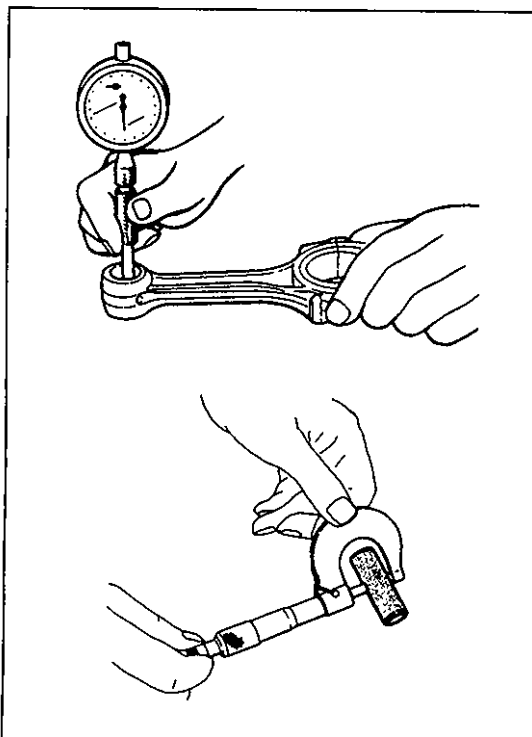

**Piston Pin**

- Check piston pin, connecting rod small end bore and piston bore for wear or damage, paying particular attention to condition of small end bore bush. If pin, connecting rod small end bore or piston bore is badly worn or damaged, replace pin, connecting rod or piston.

- **Piston pin clearance:**

Check piston pin clearance in small end. Replace connecting rod if its small end is badly worn or damaged or if measured clearance exceeds limit.


Item	Standard
Piston clearance in small end	0.003 – 0.014 mm (0.0001 – 0.0005 in.)

**Small-end bore:**

**21.003 – 21.011 mm (0.8269 – 0.8272 in.)**

**Piston pin dia.:**

**20.997 – 21.000 mm (0.8267 – 0.8267 in.)**

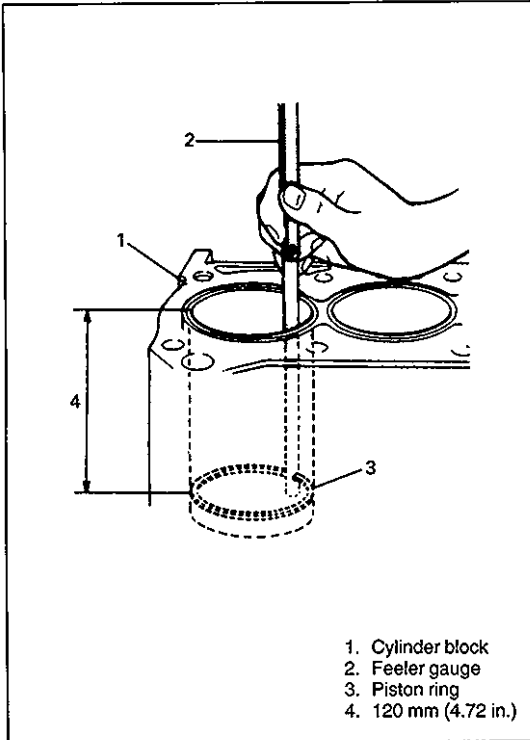

### Piston Rings


To measure end gap, insert piston ring into cylinder bore and then measure the gap by using thickness gauge.

If measured gap is out of specification, replace ring.

#### NOTE:

**Clean carbon deposits and any other dirt from top of cylinder bore before inserting piston ring.**

Item		Standard	Limit
Piston ring end gap	Top ring	0.20 – 0.35 mm (0.0079 – 0.0137 in.)	0.7 mm (0.0276 in.)
	2nd ring	0.35 – 0.50 mm (0.0138 – 0.0196 in.)	0.7 mm (0.0276 in.)
	Oil ring	0.20 – 0.70 mm (0.0079 – 0.0275 in.)	1.8 mm (0.0709 in.)

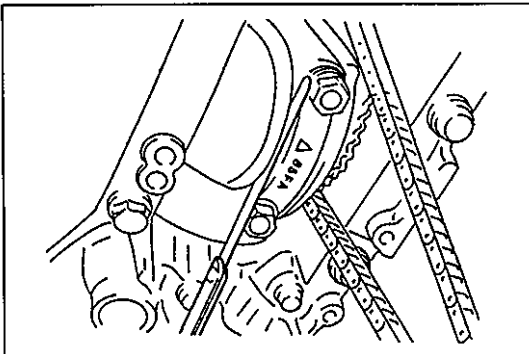

### Connecting Rod

#### ● Big-end side clearance:

Check big-end of connecting rod for side clearance, with rod fitted and connected to its crank pin in the normal manner. If measured clearance is found to exceed its limit, replace connecting rod.


Item	Standard	Limit
Big-end side clearance	0.25 – 0.40 mm (0.0099 – 0.0157 in.)	0.45 mm (0.0177 in.)

#### ● Connecting rod alignment:

Mount connecting rod on aligner to check it for bow and twist. If limit is exceeded, replace it.

**Limit on bow: 0.05 mm (0.0020 in.)**

**Limit on twist: 0.10 mm (0.0039 in.)**

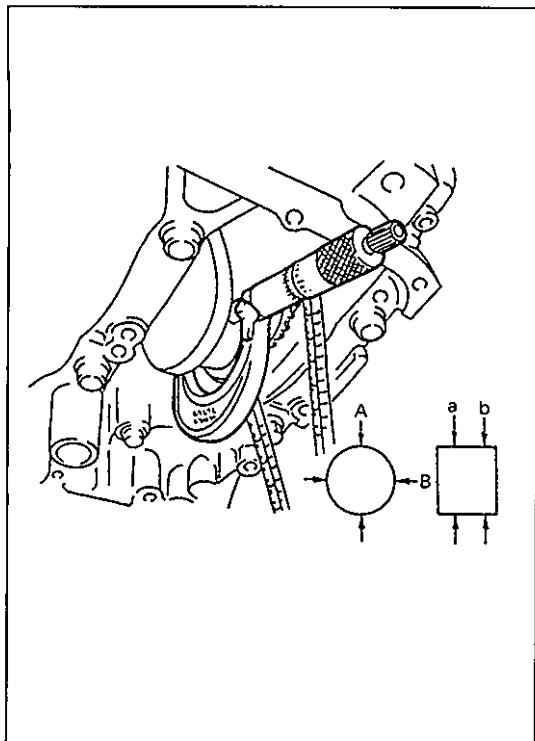

### Crank Pin and Connecting Rod Bearings


- Inspect crank pin for uneven wear or damage. Measure crank pin for out-of-round or taper with a micrometer. If crank pin is damaged, or out-of round or taper is out of limit, replace crankshaft or regrind crank pin referring to following step 6).

Connecting rod bearing size	Crank pin diameter
Standard	49.982 – 50.000 mm (1.9678 – 1.9685 in.)
0.25 mm undersize	49.732 – 49.750 mm (1.9580 – 1.9586 in.)

**Out-of-round:  $A - B$**

**Taper limit :  $a - b$**


**Out-of-round and taper limit: 0.01 mm (0.0004 in.)**

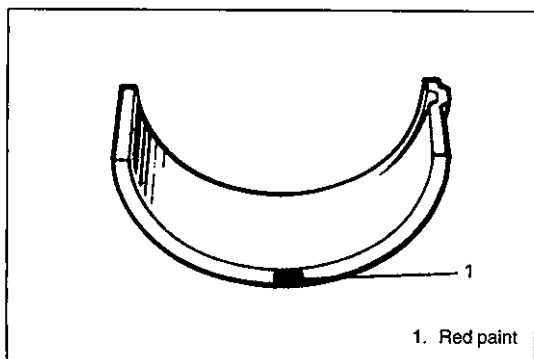

- Rod bearing:


Inspect bearing shells for signs of fusion, pitting, burn or flaking and observe contact pattern. Bearing shells found in defective condition must be replaced.

Two kinds of rod bearing are available; standard size bearing and 0.25 mm (0.0098 in.) undersize bearing. For identification of undersize bearing, it is painted red at the position as indicated in figure, undersize bearing thickness is 1.605 – 1.615 mm (0.0632 – 0.0635 in.) at the center of it.

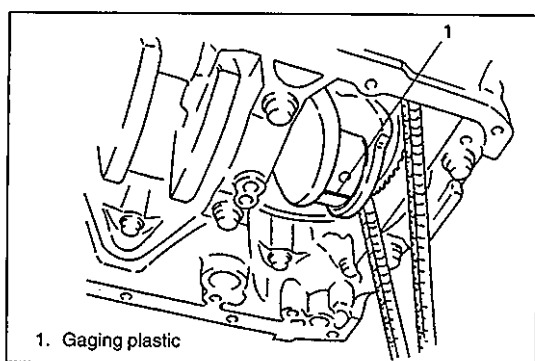

- Rod bearing clearance:

- 1) Before checking bearing clearance, clean bearing and crank pin.
- 2) Install bearing in connecting rod and bearing cap.
- 3) Place a piece of gaging plastic to full width of crank pin as contacted by bearing (parallel to crankshaft), avoiding oil hole.

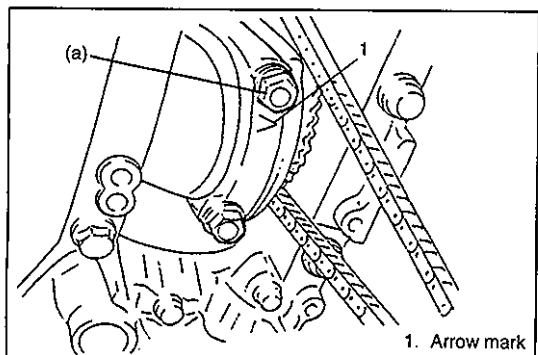


- 4) Install rod bearing cap to connecting rod.

When installing cap, be sure to point arrow mark on cap to crankshaft pulley side, as shown in figure. After applying engine oil to rod bolts, tighten cap nuts to specified torque. DO NOT turn crankshaft with gaging plastic installed.

### Tightening Torque

**(a): 45 N·m (4.5 kg·m, 33.0 lb·ft)**

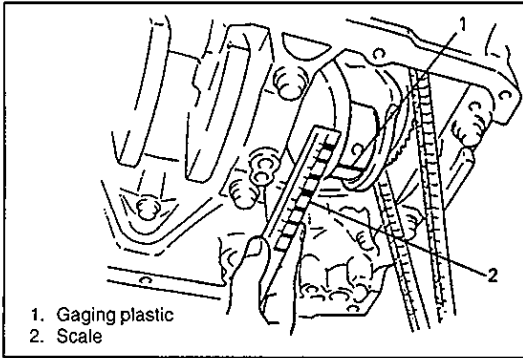

- 5) Remove cap and using a scale on gaging plastic envelope, measure gaging plastic width at the widest point (clearance). If clearance exceeds its limit, use a new standard size bearing and remeasure clearance.


Item	Standard	Limit
Bearing clearance	0.045 – 0.063 mm (0.0018 – 0.0025 in.)	0.08 mm (0.0031 in.)

- 6) If clearance can not be brought to within its limit even by using a new standard size bearing, replace crankshaft or regrind crankpin to undersize as follows.

- Install 0.25 mm undersize bearing to connecting rod big end.
- Measure bore diameter of connecting rod big end.
- Regrind crankpin to following finished diameter

Finished crankpin dia.	=	Measured big end bore dia. (including under-size bearing)	–	0.054 mm (0.0021 in.)
------------------------	---	---	---	--------------------------

- Confirm that bearing clearance is within above standard value.

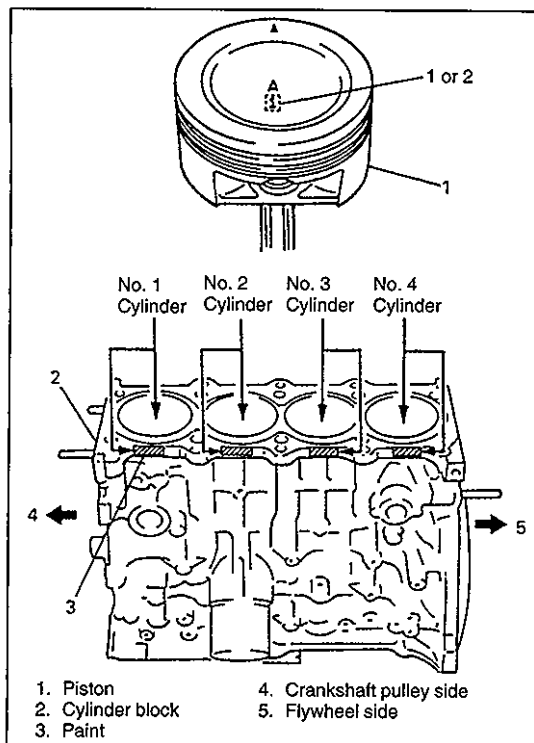

## ASSEMBLY

### NOTE:


Two sizes of piston are available as standard size spare part so as to ensure proper piston-to-cylinder clearance. When installing a standard size piston, make sure to match piston with cylinder as follows.


- Each piston has stamped number 1 or 2 as shown. It represents outer diameter of piston.
- There are also painted color of red or blue on the cylinder block as shown. It represent inner diameter of cylinder.

- Stamped number on piston and painted mark on cylinder block should correspond. That is, install number 2 stamped piston to cylinder which is identified with mark blue and a number 1 piston to cylinder with mark red.

Piston		Cylinder		Piston-to-cylinder clearance
Number at the top (mark)	Outer diameter	Mark	Bore diameter	
1	83.98 – 83.99 mm (3.3063 – 3.3066 in.)	Red	84.01 – 84.02 mm (3.3075 – 3.3078 in.)	0.02 – 0.04 mm (0.0008 – 0.0015 in.)
2	83.97 – 83.98 mm (3.3059 – 3.3062 in.)	Blue	84.00 – 84.01 mm (3.3071 – 3.3074 in.)	0.02 – 0.04 mm (0.0008 – 0.0015 in.)

Also, a letter A, B or C is stamped on piston head but ordinarily it is not necessary to discriminate each piston by this letter.

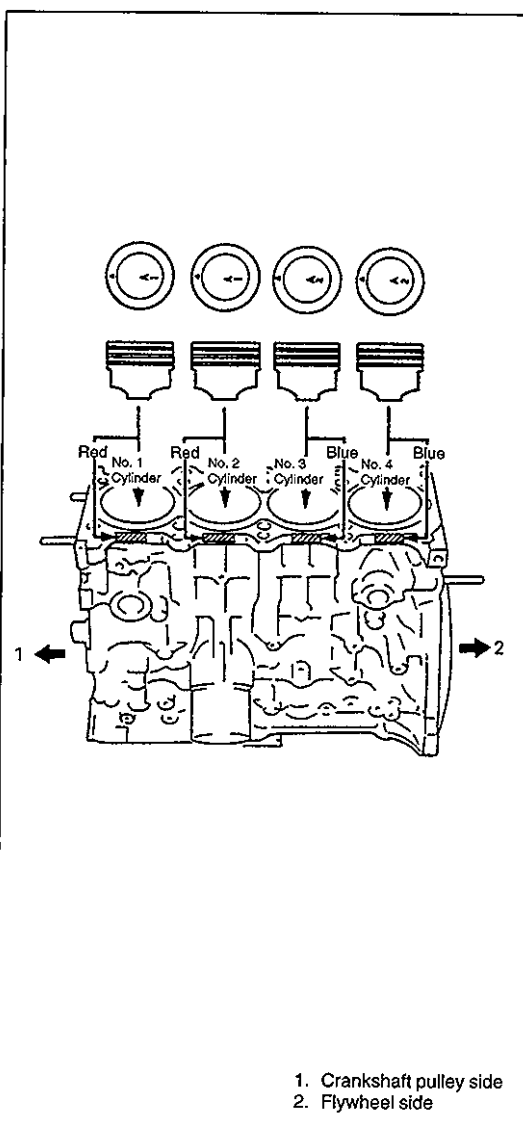

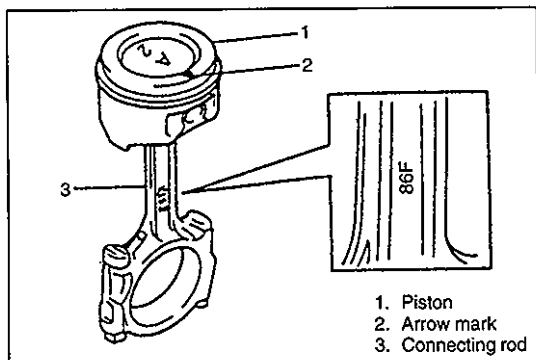


### 1) Install piston pin to piston and connecting rod:


After applying engine oil to piston pin and piston pin holes in piston and connecting rod, fit connecting rod to piston as shown in figure and insert piston pin to piston and connecting rod, and install piston pin circlips.

#### NOTE:

- "86F" mark on connecting rod should come on crankshaft pulley side.

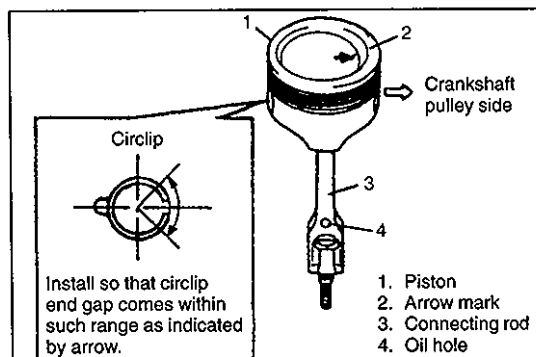


- Circlip should be installed with its cut part facing as shown in figure.

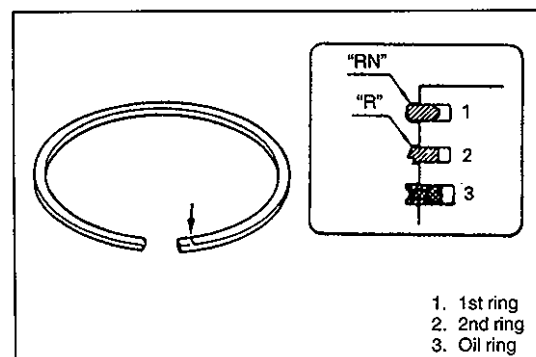

### 2) Install piston rings to piston:

- As indicated in figure at the left, 1st and 2nd rings have "RN" or "R" mark respectively. When installing these piston rings to piston, direct marked side of each ring toward top of piston.
- 1st rings differs from 2nd ring in thickness, shape and color of surface contacting cylinder wall.
- When installing oil ring, install spacer first and then two rails.

### 3) After installing three rings (1st, 2nd and oil rings), distribute their end gaps as shown in figure.

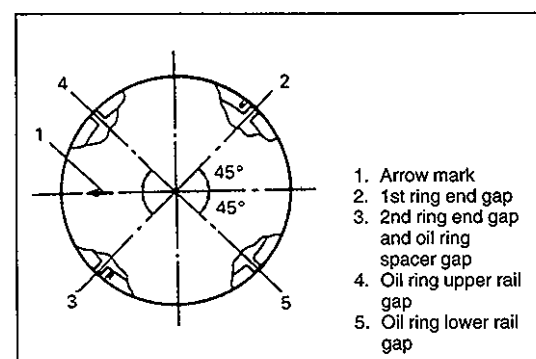




**INSTALLATION**


- 1) Apply engine oil to pistons, rings, cylinder walls, connecting rod bearings and crankpins.

**NOTE:**


**Do not apply oil between connecting rod and bearing or between bearing cap and bearing.**

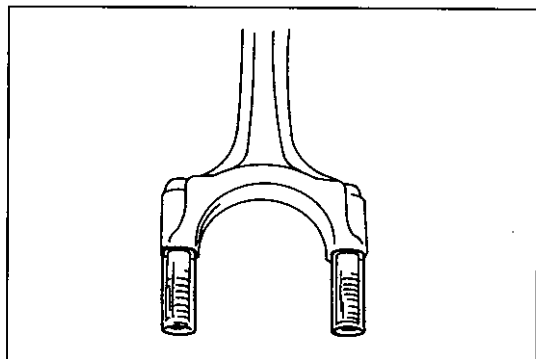

- 2) Install guide hoses over connecting rod bolts.  
These guide hoses protect crank pin and threads of rod bolt from damage during installation of connecting rod and piston assembly.

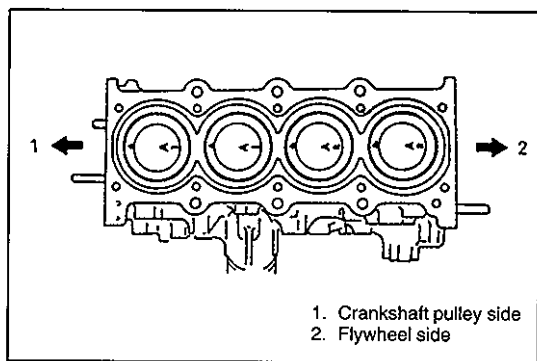


- 3) When installing piston and connecting rod assembly into cylinder bore, point arrow mark on piston head to crankshaft pulley side.

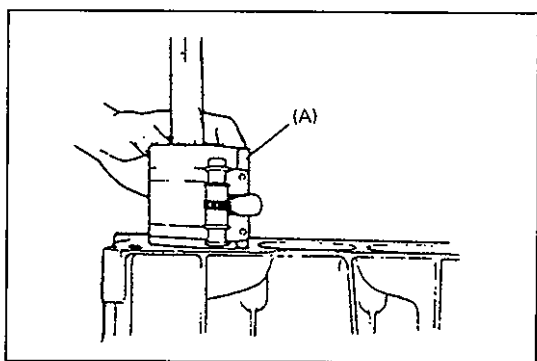

- 4) Install piston and connecting rod assembly into cylinder bore.  
Use special tool (Piston ring compressor) to compress rings.  
Guide connecting rod into place on crankshaft.  
Using a hammer handle, tap piston head to install piston into bore. Hold ring compressor firmly against cylinder block until all piston rings have entered cylinder bore.

**Special Tool**

**(A): 09916-77310**

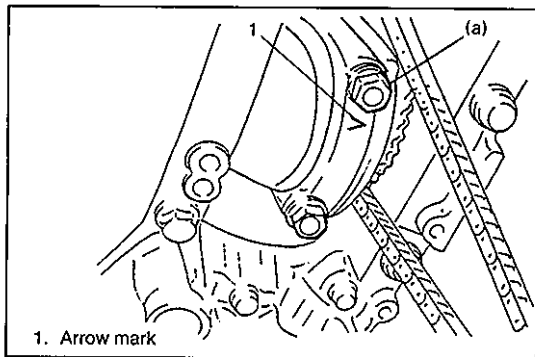


- 5) Install bearing cap:  
Point arrow mark on cap to crankshaft pulley side.  
Tighten cap nuts to specification.

**Tightening Torque**


**(a): 45 N·m (4.5 kg-m, 33.0 lb-ft)**

- 6) Reverse removal procedure for installation, as previously outlined.
- 7) Adjust cooling fan belt tension.  
Refer to Section 6B for adjusting procedure.
- 8) Adjust accelerator cable play and A/T throttle cable play (for vehicle with A/T). Refer to Section 6E1.
- 9) Check to ensure that all removed parts are back in place.  
Reinstall any necessary parts which have not been reinstalled.
- 10) Refill engine with engine oil, referring to item "ENGINE OIL CHANGE" in Section 0B.
- 11) Refill cooling system referring to Section 6B.
- 12) Refill front differential housing with gear oil, referring to "DIFFERENTIAL" section.
- 13) Refill power steering system with specified fluid referring to Section 3B1.
- 14) Connect negative cable at battery.
- 15) Verify that there is no fuel leakage, coolant leakage, oil leakage and exhaust gas leakage at each connection.
- 16) Check ignition timing and adjust as necessary, referring to Section 6F2.

## ENGINE MOUNTINGS

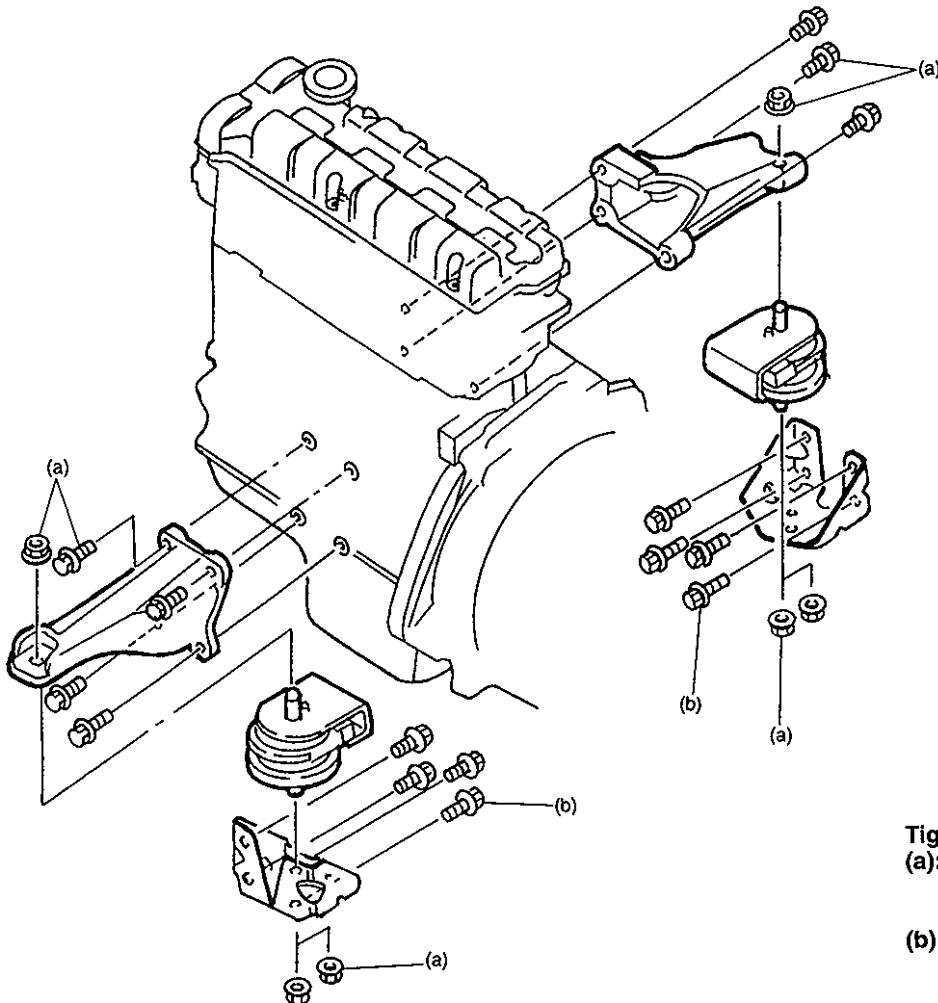

**Tightening Torque**  
 (a): 50 N·m  
       5.0kg·m  
       36.5 lb·ft  
 (b): 85 N·m  
       8.5 kg·m  
       61.5 lb·ft

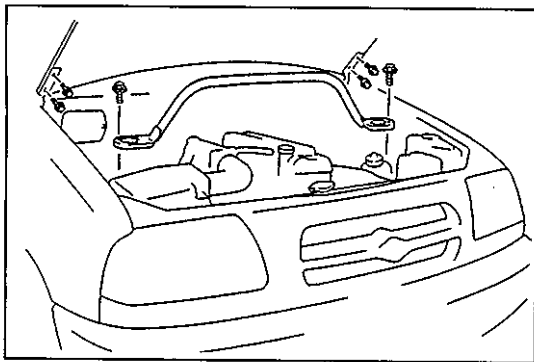


## UNIT REPAIR OVERHAUL


### ENGINE ASSEMBLY

#### REMOVAL


- 1) Release fuel pressure in fuel feed line. Refer to Section 6.
- 2) Disconnect negative cable at battery.
- 3) Remove engine hood.
- 4) Remove strut tower bar.

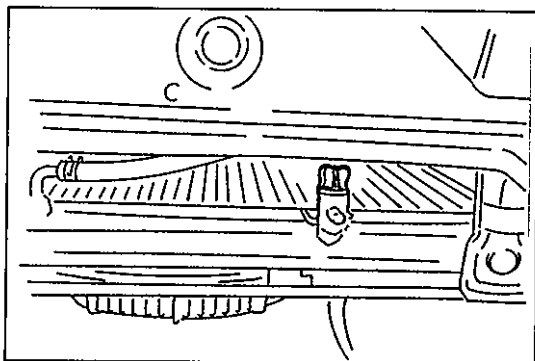


- 5) Drain coolant.
- 6) Remove radiator, radiator fan shroud and cooling fan.  
Refer to Section 6B for removal.
- 7) Remove air cleaner outlet hose.

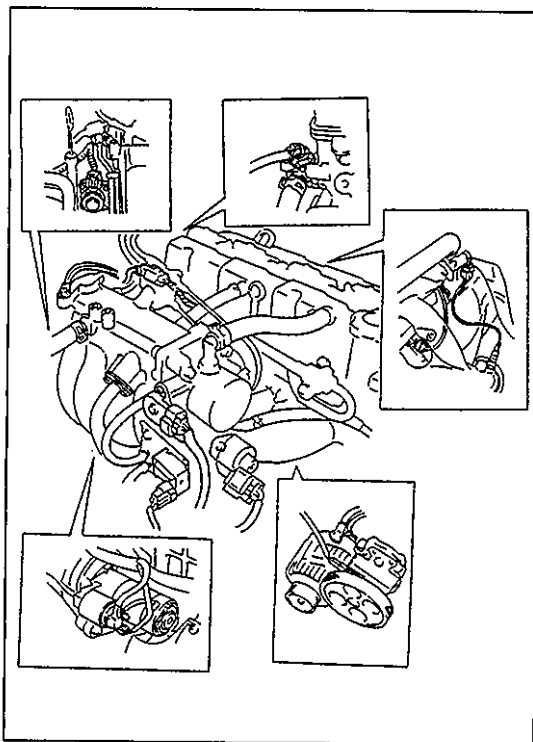

- 8) Disconnect following electric lead wires:
  - Injector wire harness coupler
  - CMP sensor coupler
  - Ignition coil couplers
  - TP sensor coupler
  - MAF sensor coupler
  - IAT sensor coupler
  - IAC valve coupler
  - Ground wire from intake manifold
  - EVAP canister purge valve coupler
  - EGR valve coupler (if equipped)
  - Heated oxygen sensor wire (if equipped)
  - ECT sensor coupler
  - Generator wires
  - Starter wires
  - Oil pressure switch wire
  - Power steering pressure switch wire
  - Wire harness clamps
- 9) Remove starter motor.

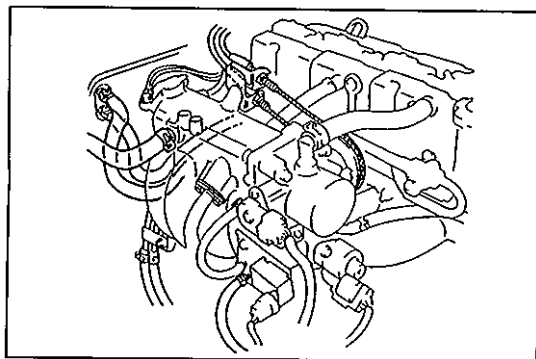


- 10) Disconnect accelerator cable and A/T throttle cable (for A/T vehicle) from throttle body.
- 11) Disconnect following hoses:
  - Fuel feed hose and return hose from each pipe
  - Heater hoses from heater core
  - EVAP canister hose from canister pipe
  - Brake booster vacuum hose

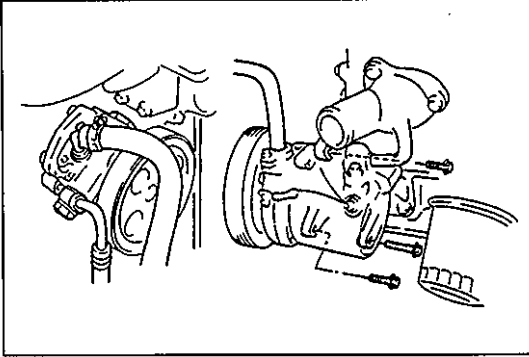


- 12) With hoses connected, detach power steering pump and A/C compressor from cylinder block if equipped.


- 13) Raise vehicle.  
 14) Drain engine oil if necessary.  
 15) Remove front differential housing with differential from chassis. Refer to Section 7E for removal.

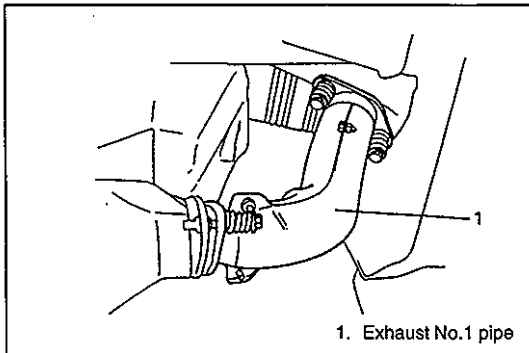

- 16) Disconnect exhaust No. 1 pipe from exhaust manifold.

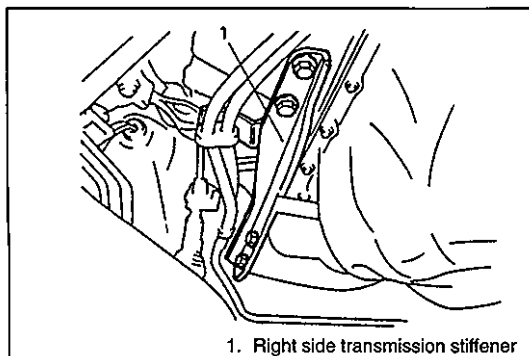


- 17) Release A/T fluid hoses from clamps (for A/T vehicle).  
 18) Remove right side transmission stiffener (if equipped).

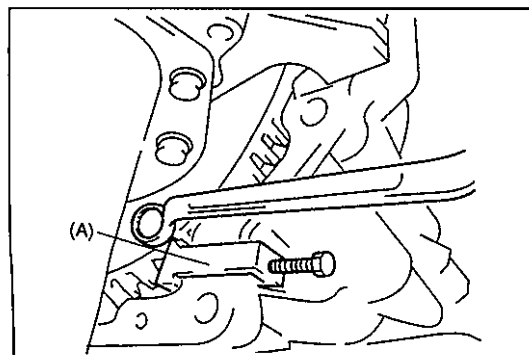


- 19) Remove clutch housing lower plate.  
 20) Remove torque converter bolts (for A/T vehicle).

**Special Tool**  
**(A): 09927-56010**


- 21) Lower vehicle.  
 22) Support transmission. For A/T vehicle, don't jack under A/T oil pan to support transmission.

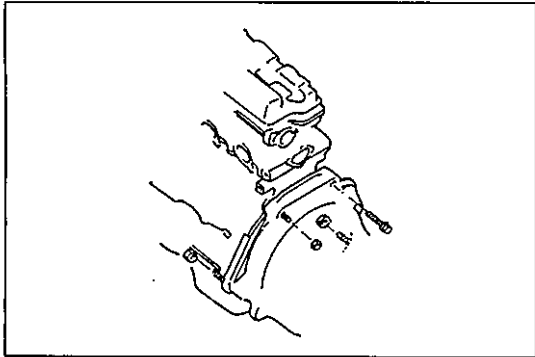

- 23) Remove bolt and nuts fastening cylinder block and transmission.

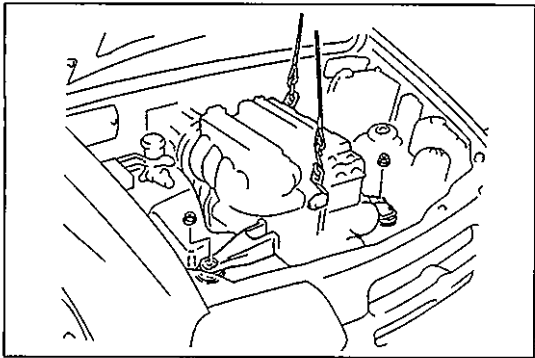

- 24) Install lifting device.  
 25) Remove engine side mounting bracket nuts from engine mountings.  
 26) Before lifting engine, check to ensure all hoses, wires and cables are disconnected from engine.  
 27) Remove engine assembly from chassis and transmission by lifting a little, sliding toward front, and then, carefully hoist engine assembly.

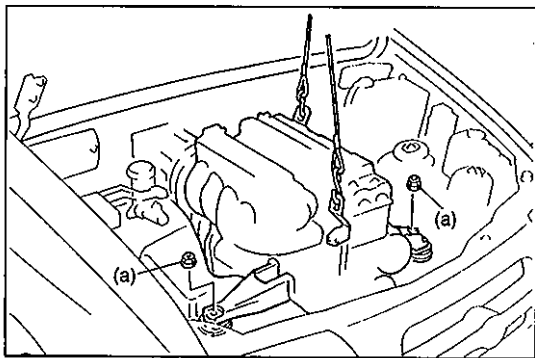


## INSTALLATION

Reverse removal procedure for installation, noting following points.

- 1) Lower engine assembly into engine compartment. Connect engine to transmission and engine side mounting brackets to engine mountings.
- 2) Tighten nuts fastening engine side mounting brackets and engine mountings.

### Tightening Torque

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

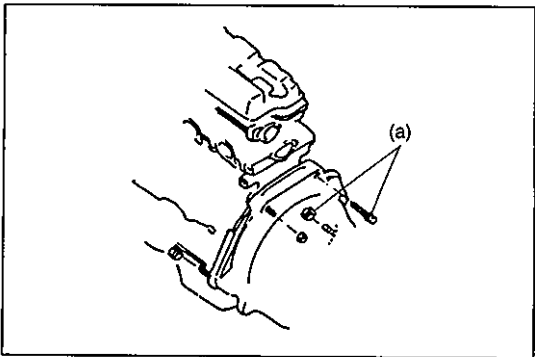


- 3) Tighten bolt and nuts fastening cylinder block and transmission to specified torque.

### Tightening Torque

(a): 85 N·m (8.5 kg-m, 61.5 lb-ft)


- 4) Remove lifting device.

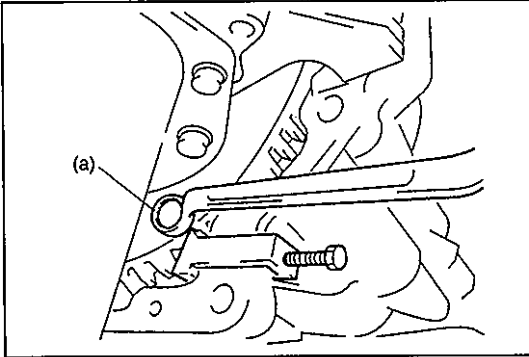

- 5) Tighten torque converter bolts to specified torque (for A/T vehicle).

**Tightening Torque**


(a): 65 N·m (6.5 kg-m, 47.0 lb-ft)

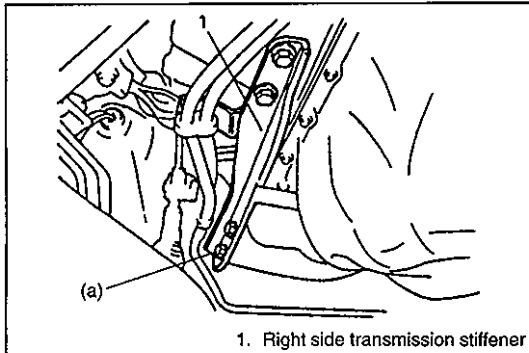

- 6) Tighten transmission stiffener bolts to specified torque if equipped.

**Tightening Torque**

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

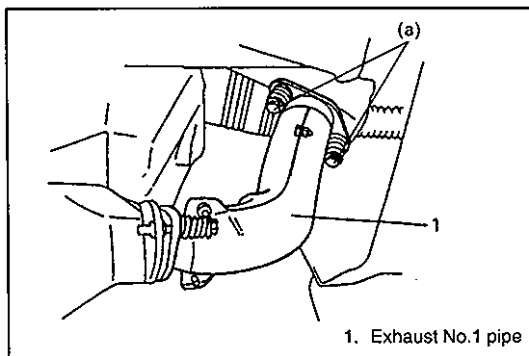


- 7) Tighten bolts of exhaust No.1 pipe to specified torque.

**Tightening Torque**

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)


- 8) Install front differential housing with differential to chassis. Refer to Section 7E for installation.
- 9) Reverse disconnected hoses, cables and electric wires for connection.
- 10) Adjust cooling fan belt tension, referring to Section 6B.
- 11) Adjust accelerator cable and A/T throttle cable (for A/T vehicle) according to procedure described in Section 6E1.
- 12) Check to ensure that all removed parts are back in place.  
Reinstall any necessary parts which have not been reinstalled.
- 13) Refill engine with engine oil referring to item "ENGINE OIL CHANGE" in Section 0B.
- 14) Refill cooling system, referring to Section 6B.
- 15) Check to ensure that all fasteners and clamps are tightened.
- 16) Upon completion of installation, verify that there is no fuel leakage, coolant leakage or exhaust gas leakage at each connection.

## MAIN BEARINGS, CRANKSHAFT AND CYLINDER BLOCK

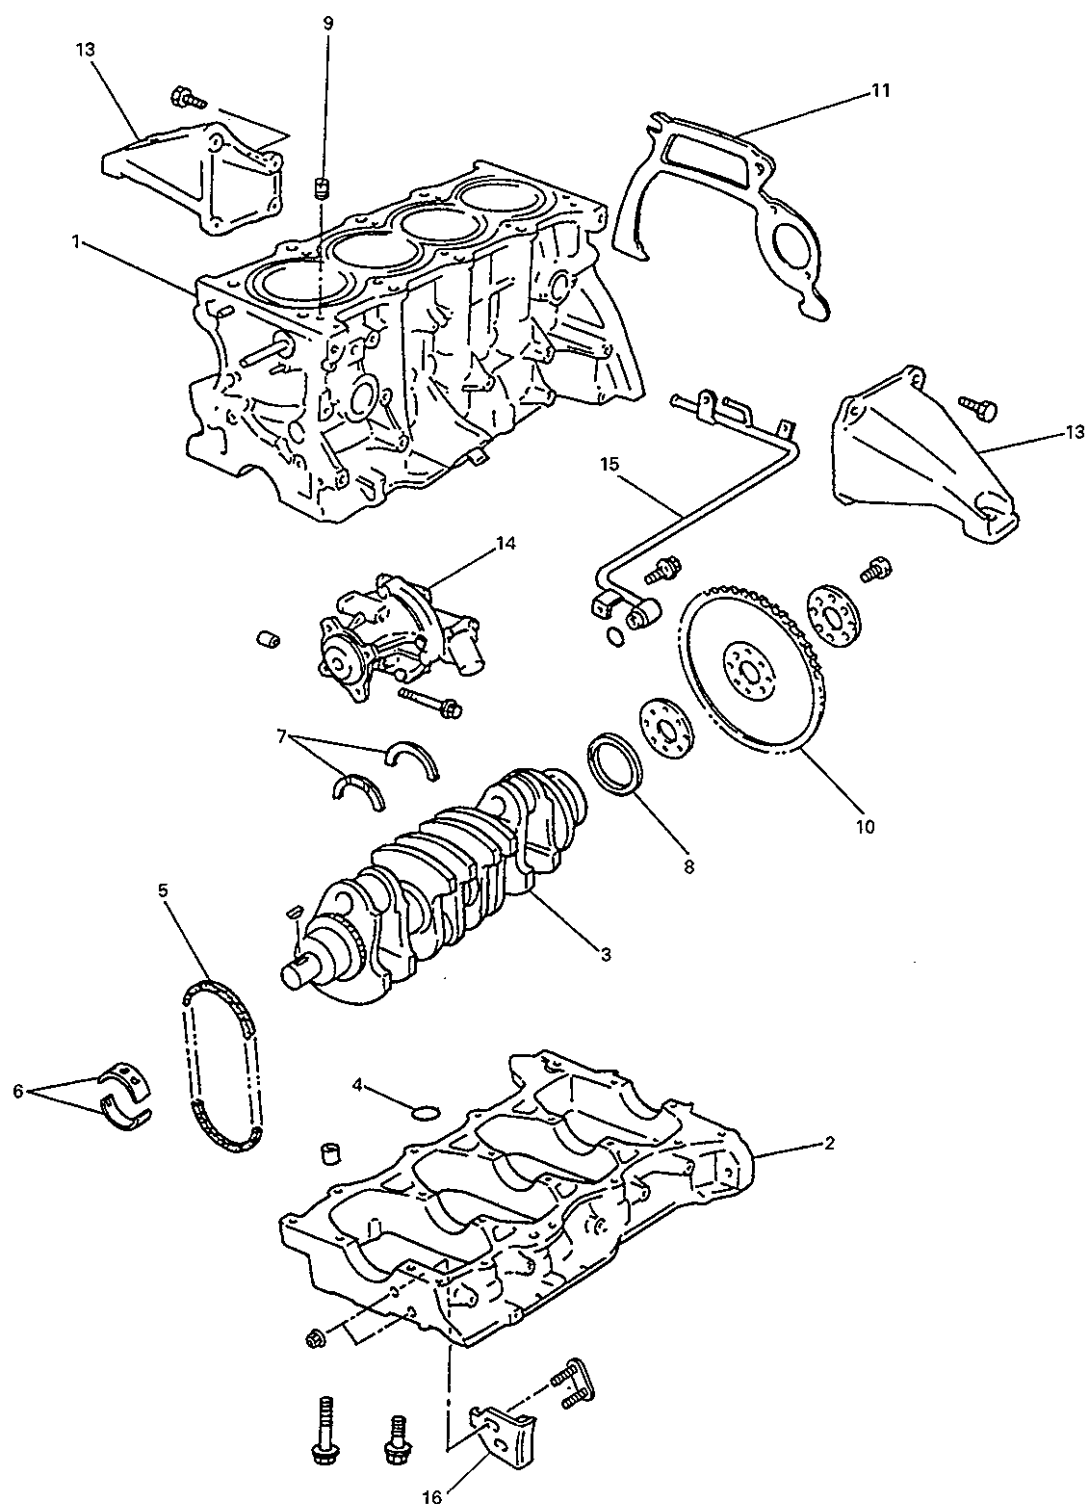

1. Cylinder block
2. Lower crankcase
3. Crankshaft
4. O-ring
5. Oil pump drive chain
6. Main bearing
7. Thrust bearing
8. Rear oil seal
9. Check valve

10. Flywheel (M/T)  
Drive plate (A/T)
11. Clutch housing plate
12. Blank
13. Engine side mounting bracket
14. Water pump
15. Heater outlet pipe
16. Oil pump chain guide

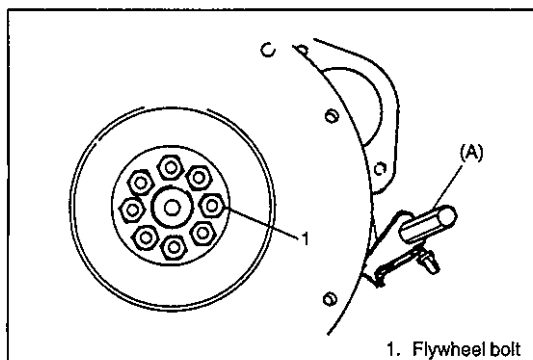


## REMOVAL

- 1) Remove engine assembly from vehicle as previously outlined.
- 2) Remove clutch and flywheel (for M/T vehicle) or drive plate (for A/T vehicle). For clutch removal, refer to Section 7C1.


### Special Tool

(A): 09924-17810

- 3) Remove throttle body, intake manifold, exhaust manifold.
- 4) Remove oil pan and oil pump strainer.  
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 5) Remove oil pump.
- 6) Remove cylinder head cover.
- 7) Remove timing chain cover. Refer to item "TIMING CHAIN COVER" in this section for removal.
- 8) Remove timing chain guide, chain tensioner, tensioner adjusters, 2nd timing chain and 1st timing chain.
- 9) Remove cylinder head assembly.
- 10) Remove pistons and connecting rods.

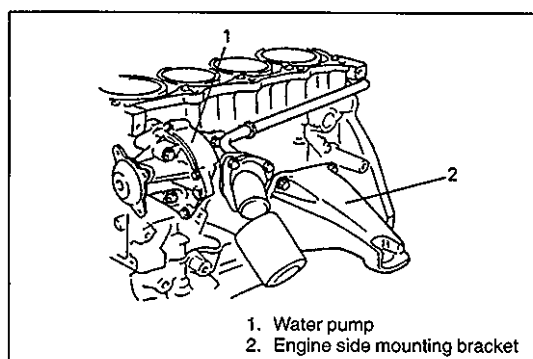


- 11) Remove water pump and heater outlet pipe.
- 12) Remove engine side mounting brackets (right and left).

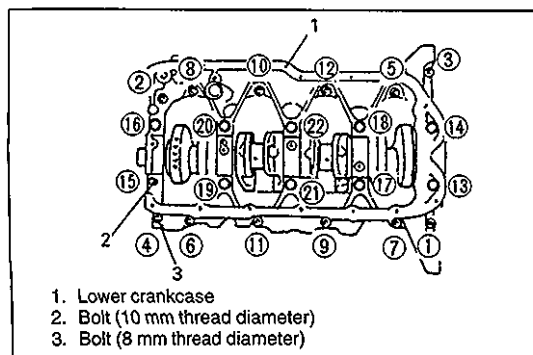

- 13) Loosen crankcase bolts, following sequence in figure and remove them.
- 14) Remove crankshaft from cylinder block.



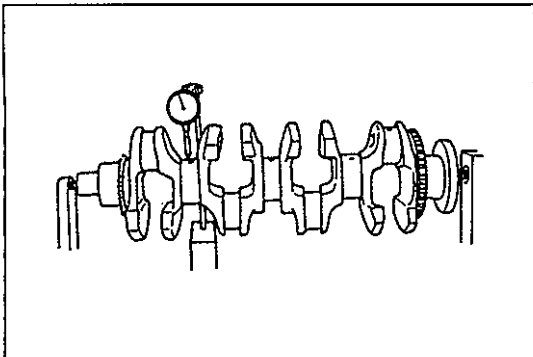


## INSPECTION

### Crankshaft

#### Crankshaft runout

Using a dial gauge, measure runout at center journal. Rotate crankshaft slowly. If runout exceeds its limit, replace crankshaft.

**Limit on runout: 0.06 mm (0.0023 in.)**

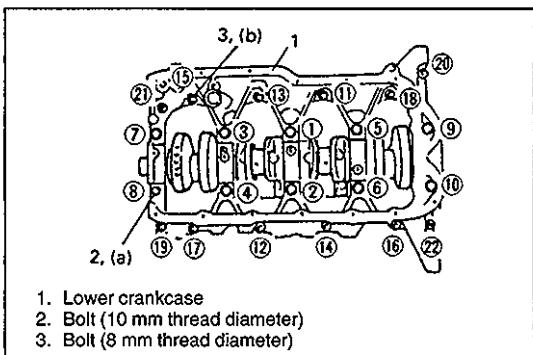


#### Crankshaft thrust play

Measure this play with crankshaft set in cylinder block in the normal manner, that is, with thrust bearing and journal bearing caps installed. Tighten crankcase bolts to specified torque in such order as indicated in figure.

#### Tightening Torque

**(a): 60 N·m (6.0 kg-m, 43.5 lb-ft)**

**(b): 27 N·m (2.7 kg-m, 19.5 lb-ft)**

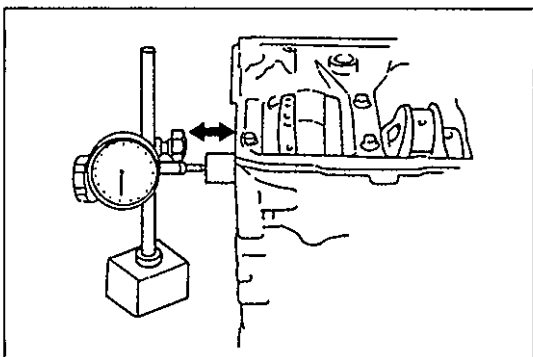


Use a dial gauge to read displacement in axial (thrust) direction of crankshaft.

If its limit is exceeded, replace thrust bearing with new standard one or oversize one to obtain standard thrust play.


#### Crankshaft Thrust Play

**Standard: 0.10 – 0.35 mm (0.0039 – 0.0138 in.)**

**Limit: 0.42 mm (0.0165 in.)**

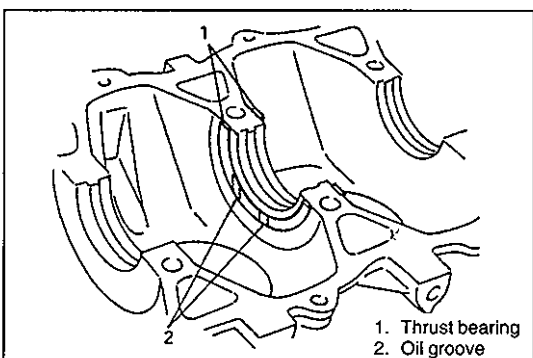

Thickness of crankshaft thrust bearing	Standard	
	Standard	2.500 mm (0.984 in.)
	Oversize:	0.125 mm (0.0049 in.)
		2.563 mm (0.1009 in.)

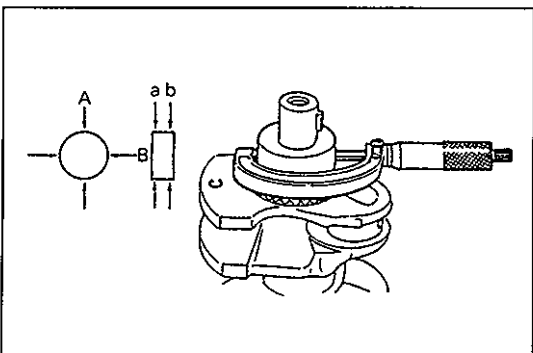

#### Out-of-round and taper (uneven wear) of journals

An unevenly worn crankshaft journal shows up as a difference in diameter at a cross section or along its length (or both). This difference, if any, is determined by taking micrometer readings. If any one of journals is badly damaged or if amount of uneven wear in the sense explained above exceeds its limit, regrind or replace crankshaft.

**Limit on out-of-round and taper: 0.01 mm (0.0004 in.)**


**Out-of-round: A – B**

**Taper: a – b**

## Main Bearings

### General information


- Service main bearings are available in standard size and 0.25 mm (0.0098 in.) undersize, and each of them has 5 kinds of bearings differing in tolerance.

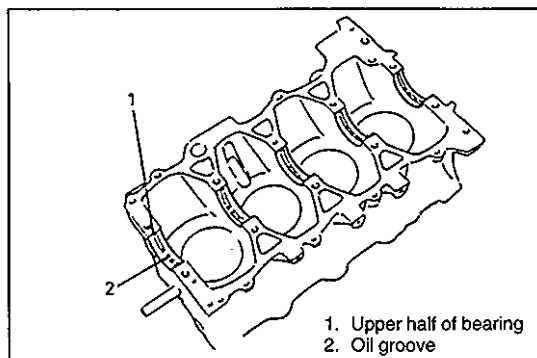

- Upper half of bearing has oil groove as shown in figure. Install this half with oil groove to cylinder block.
- Lower half of bearing does not have oil groove.

### Inspect

Check bearings for pitting, scratches, wear or damage. If any malcondition is found, replace both upper and lower halves. Never replace either half without replacing the other half.

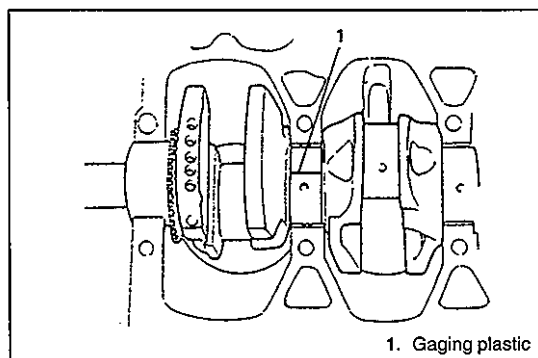

### Main bearing clearance

Check clearance by using gaging plastic according to following procedure.


- 1) Remove lower crankcase.
- 2) Clean bearings and main journals.
- 3) Place a piece of gaging plastic the full width of bearing (parallel to crankshaft) on journal, avoiding oil hole.
- 4) Install lower crankcase to cylinder block. Tighten crankcase bolts, following sequence in figure. Tighten crankcase bolts to specified torque.


### Tightening Torque

- (a): 60 N·m (6.0 kg-m, 43.5 lb-ft)  
(b): 27 N·m (2.7 kg-m, 19.5 lb-ft)

### NOTE:

**Do not rotate crankshaft while gaging plastic is installed.**

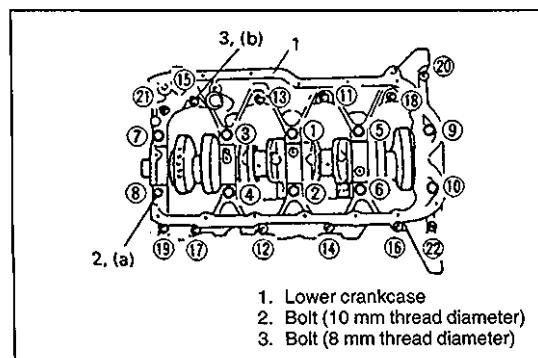

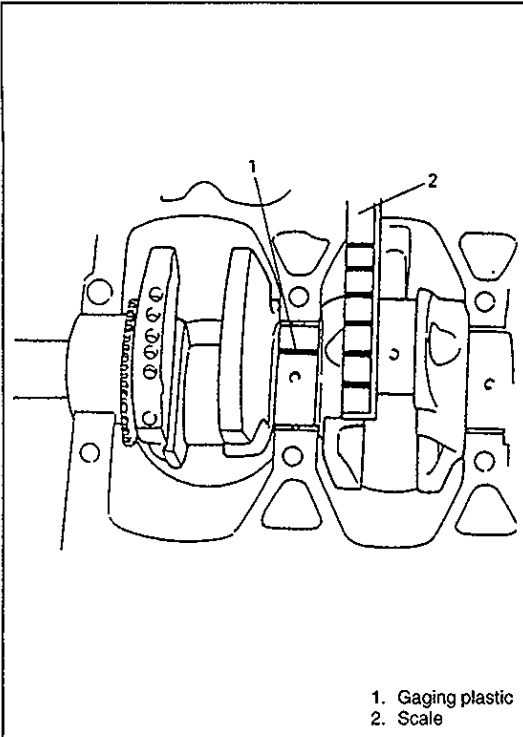

- 5) Remove lower crankcase and using scale on gaging plastic envelop, measure gaging plastic width at its widest point. If clearance exceeds its limit, replace bearing. Always replace both upper and lower inserts as a unit.


A new standard bearing may produce proper clearance. If not, it will be necessary to regrind crankshaft journal for use of 0.25 mm undersize bearing.

After selecting new bearing, recheck clearance.

#### Bearing Clearance

**Standard: 0.032 – 0.052 mm (0.0013 – 0.0020 in.)**

**Limit: 0.060 mm (0.0023 in.)**

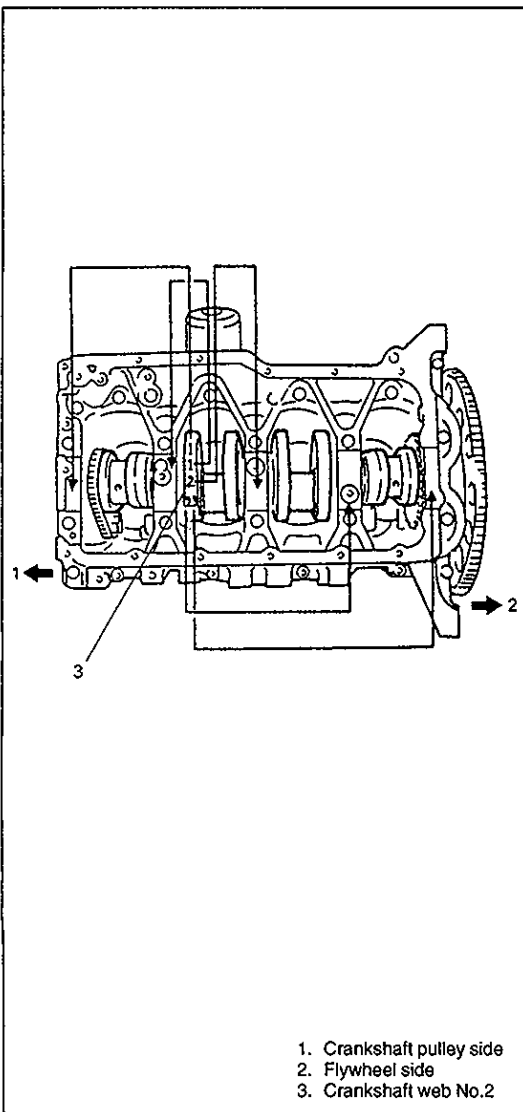

#### Selection of main bearings

##### STANDARD BEARING:

If bearing is in malcondition, or bearing clearance is out of specification, select a new standard bearing according to following procedure and install it.


- 1) First check journal diameter. As shown in figure, crank web No.2 has stamped numbers.

Three kinds of numbers ("1", "2" and "3") represent following journal diameters.

Stamped numbers	Journal diameter
1	57.994 – 58.000 mm (2.2832 – 2.2834 in.)
2	57.988 – 57.994 mm (2.2830 – 2.2832 in.)
3	57.982 – 57.988 mm (2.2828 – 2.2829 in.)

Stamped numbers on crank web No.2 represent journal diameters marked with an arrow in figure respectively.

For example, stamped number "1" indicates that corresponding journal diameter is 57.994 – 58.000 mm.

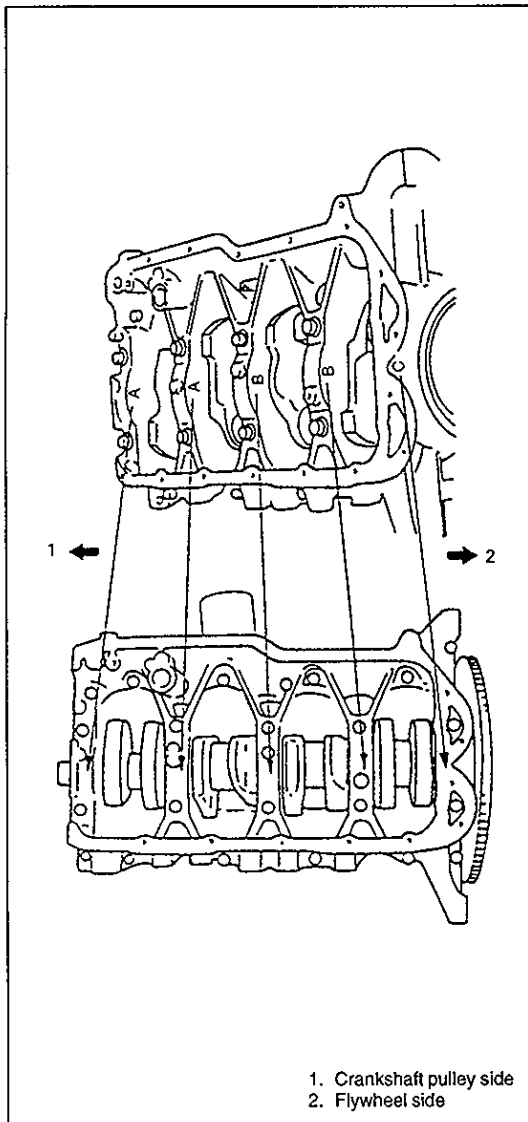


2) Next, check crankcase (bearing cap) bore diameter without bearing. On lower crankcase five alphabets are stamped as shown in figure.

Three kinds of alphabets ("A", "B" and "C") represent following cap bore diameters.

Stamped alphabet	Bearing cap bore diameter (without bearing)
A	62.000 – 62.006 mm (2.4409 – 2.4411 in.)
B	62.006 – 62.012 mm (2.4412 – 2.4414 in.)
C	62.012 – 62.018 mm (2.4414 – 2.4416 in.)

Stamped alphabets on lower crankcase represent crankcase bore diameter marked with an arrow in figure respectively.

For example, stamped alphabet "A" indicates that corresponding bearing cap bore diameter is 62.000 – 62.006 mm.

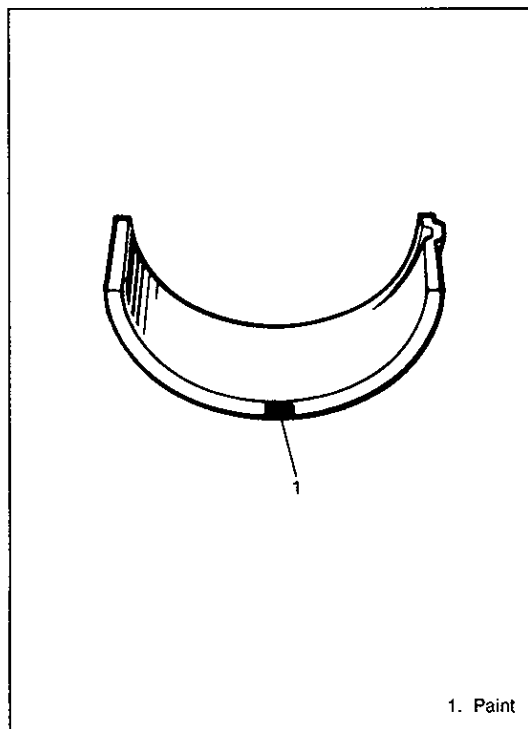


3) There are five kinds of standard bearings differing in thickness. To distinguish them, they are painted in following colors at the position as indicated in figure.

Each color indicated following thickness at the center of bearing.


Color painted	Bearing thickness
Green	1.990 – 1.994 mm (0.0783 – 0.0785 in.)
Black	1.993 – 1.997 mm (0.0785 – 0.0786 in.)
Colorless (no paint)	1.996 – 2.000 mm (0.0786 – 0.0787 in.)
Yellow	1.999 – 2.003 mm (0.0787 – 0.0789 in.)
Blue	2.002 – 2.006 mm (0.0788 – 0.0790 in.)

- 4) From number stamped on crank web No.2 and alphabets stamped on lower crankcase, determine new standard bearing to be installed to journal, by referring to table shown below. For example, if number stamped on crank web No.2 is "1" and alphabet stamped on lower crankcase is "B", install a new standard bearing painted in "Black" to its journal.

		Number stamped on crank web (Journal diameter)		
		1	2	3
Alphabet stamped on lower crankcase (Cap bore dia.)	A	Green	Black	Colorless
	B	Black	Colorless	Yellow
	C	Colorless	Yellow	Blue
		New standard bearing to be installed.		

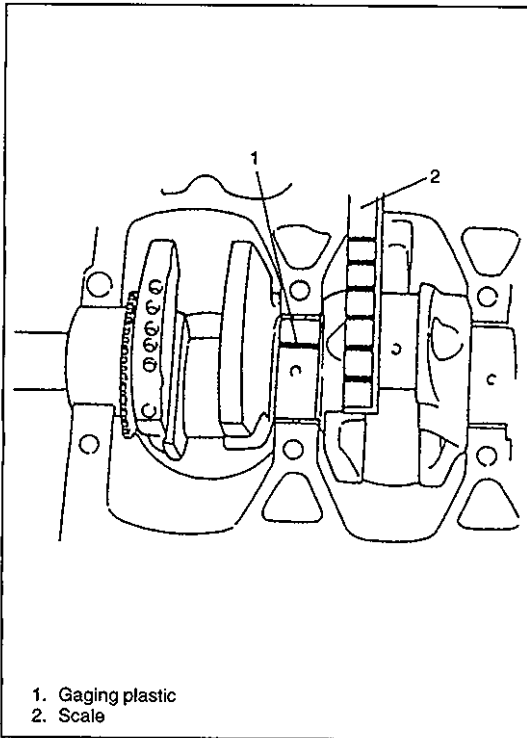

- 5) Using gaging plastic, check bearing clearance with newly selected standard bearing. If clearance still exceeds its limit, use next thicker bearing and recheck clearance.
- 6) When replacing crankshaft or cylinder block and lower crankcase due to any reason, select new standard bearings to be installed by referring to number stamped on new crankshaft or alphabets stamped on new lower crankcase.

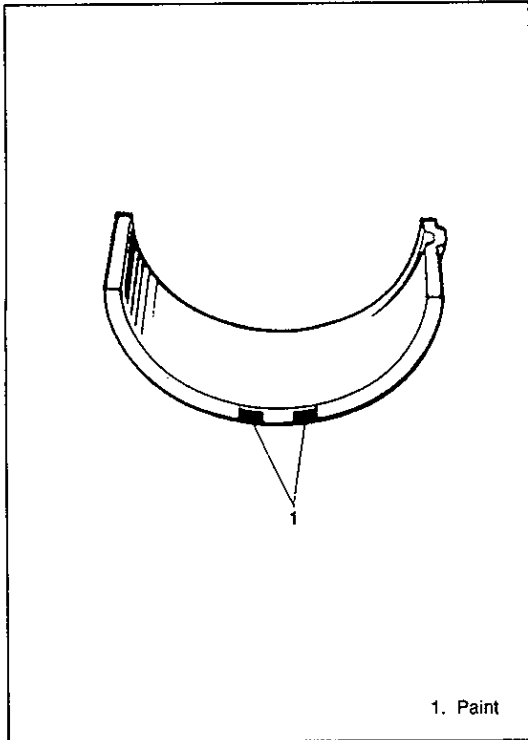**UNDERSIZE BEARING (0.25 mm):**

- 0.25 mm undersize bearing is available, in five kinds varying in thickness.

To distinguish them, each bearing is painted in following colors at such position as indicated in figure.


Each color represents following thickness at the center of bearing.

Color painted	Bearing thickness
Green & Red	2.115 – 2.119 mm (0.0833 – 0.0834 in.)
Black & Red	2.118 – 2.122 mm (0.0834 – 0.0835 in.)
Red only	2.121 – 2.125 mm (0.0835 – 0.0837 in.)
Yellow & Red	2.124 – 2.128 mm (0.0836 – 0.0838 in.)
Blue & Red	2.127 – 2.131 mm (0.0837 – 0.0839 in.)

- If necessary, regrind crankshaft journal and select under-size bearing to use with it as follows.


1) Regrind journal to following finished diameter.

**Finished diameter: 57.732 – 57.750 mm  
(2.2729 – 2.2736 in.)**

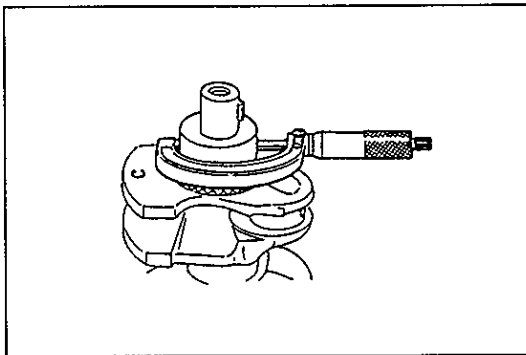


- Using micrometer, measure reground journal diameter. Measurement should be taken in two directions perpendicular to each other in order to check for out-of-round.
- Using journal diameter measured above and alphabets stamped on lower crankcase, select an undersize bearing by referring to table given below. Check bearing clearance with newly selected undersize bearing.

		Measured journal diameter		
		57.744 – 57.750 mm (2.2734 – 2.2736 in.)	57.738 – 57.744 mm (2.2731 – 2.2733 in.)	57.732 – 57.738 mm (2.2729 – 2.2731 in.)
Alphabets stamped on lower crankcase	A	Green & Red	Black & Red	Red only
	B	Black & Red	Red only	Yellow & Red
	C	Red only	Yellow & Red	Blue & Red
		Undersize bearing to be installed		

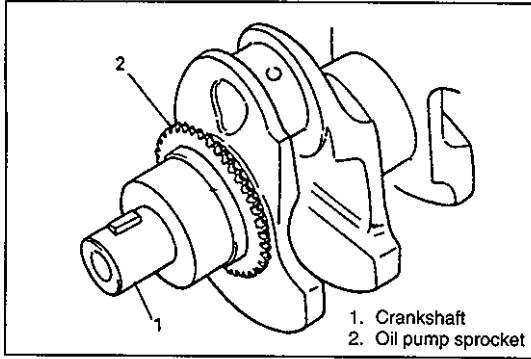


### Oil Pump Sprocket

- Check teeth of sprocket for wear or damage.  
If any damage or wear is found, replace crankshaft.

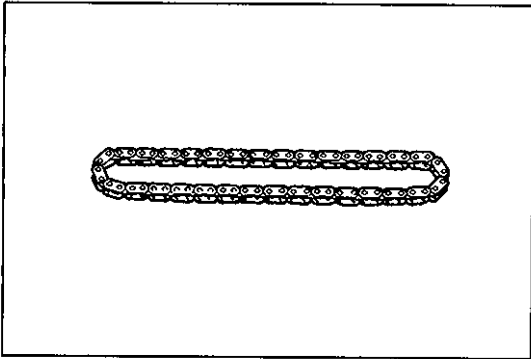


### Oil Pump Drive Chain

- Check oil pump drive chain for wear or damage.

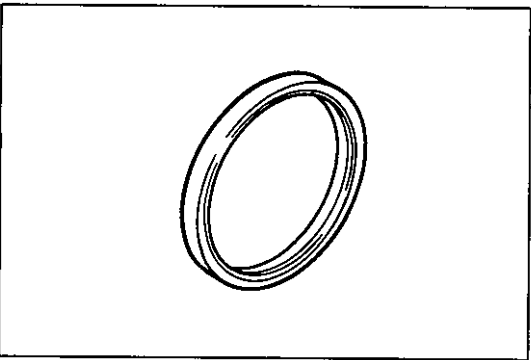

### Rear Oil Seal


Carefully inspect oil seal for wear or damage. If lip portion is worn or damaged, replace oil seal.

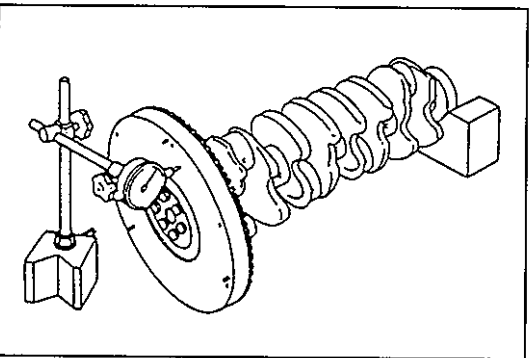

### Flywheel

- If ring gear is damaged, cracked or worn, replace flywheel.
- If the surface contacting clutch disc is damaged, or excessively worn, replace flywheel.
- Check flywheel for face runout with a dial gauge.  
If runout exceeds its limit, replace flywheel.

**Limit on runout: 0.2 mm (0.0078 in.)**

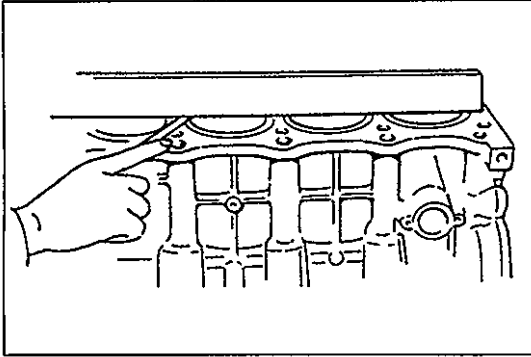

## Cylinder Block

### Distortion of gasketed surface


- Using straightedge and thickness gauge, check gasketed surface for distortion and, if flatness exceeds its limit, correct it.

**Flatness Limit: 0.06 mm (0.0024 in.)**

### Honing or reboring cylinders

- 1) When any cylinder needs reboring, all other cylinders must also be rebored at the same time.
- 2) Select oversized piston according to amount of cylinder wear.

Size	Piston diameter
STD	83.970 – 83.990 mm (3.3059 – 3.3066 in.)
O/S 0.25	84.220 – 84.240 mm (3.3157 – 3.3165 in.)
O/S 0.50	84.470 – 84.490 mm (3.3256 – 3.3263 in.)

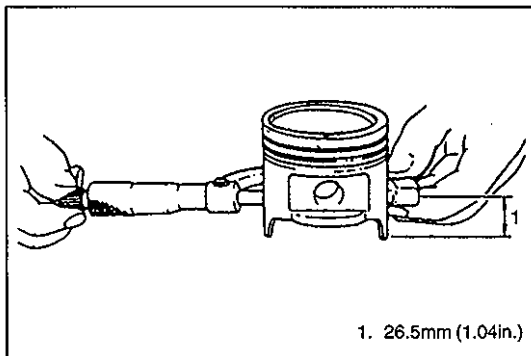

- 3) Using micrometer, measure piston diameter.
- 4) Calculate cylinder bore diameter to be rebored as follows.

$$D = A + B - C$$

D: Cylinder bore diameter to be rebored.

A: Piston diameter as measured.

B: Piston clearance = 0.02 – 0.04 mm  
(0.0008 – 0.0015 in.)


C: Allowance for honing = 0.02 mm  
(0.0008 in.)

- 5) Rebore and hone cylinder to calculated dimension.

### NOTE:

**Before reboring, install lower crankcase and tighten to specification to avoid distortion of bearing bores.**





- 6) Measure piston clearance after honing.

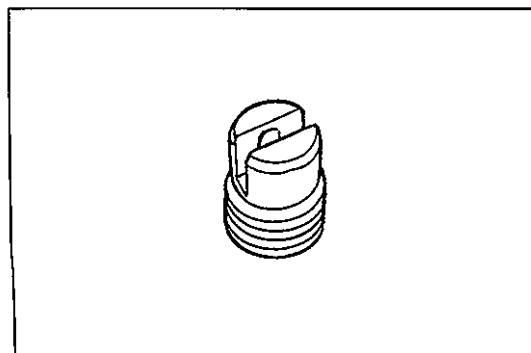

### Check valve

Inspect check valve for clogging and ball for being stuck.



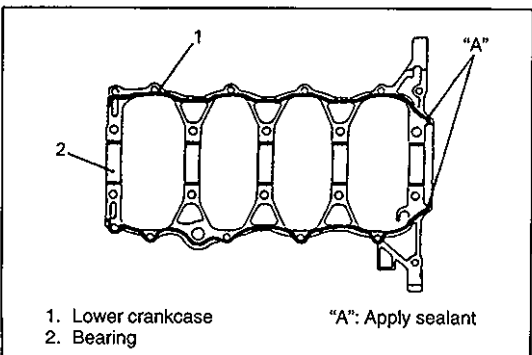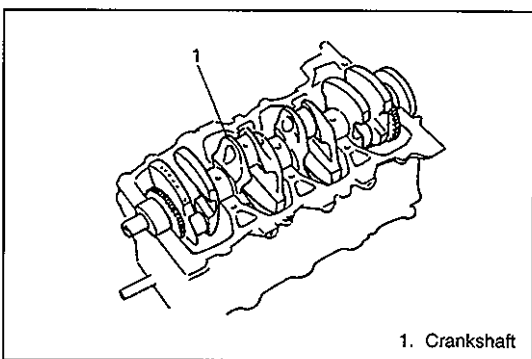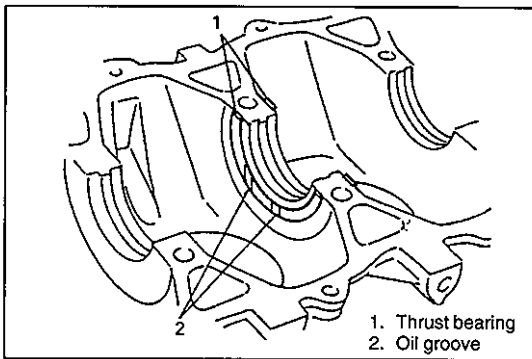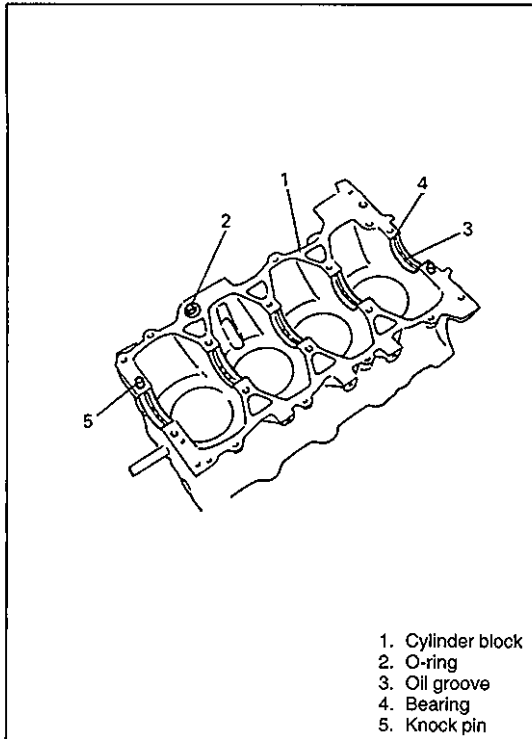

## INSTALLATION

### NOTE:


- All parts to be installed must be perfectly clean.
- Be sure to oil crankshaft journals, journal bearings, thrust bearings, crankpins, connecting rod bearings, pistons, piston rings and cylinder bores.
- Journal bearings, crankcase (bearings caps), connecting rods, rod bearings, rod bearing caps, pistons and piston rings are in combination sets. Do not disturb combination and try to see that each part goes back to where it came from, when installing.
- Clean mating surface of cylinder block and lower crankcase, remove oil, old sealant and dust from mating surface.

- 1) Fit main bearings to cylinder block.  
One of two halves of main bearing, has oil groove. Install this half with oil groove to cylinder block, and another half without oil groove to lower crankcase.  
Make sure that two halves are painted in the same color.
- 2) Install O-ring to cylinder block.
- 3) Fit thrust bearings to cylinder block between No.2 and No.3 cylinders. Face oil groove sides to crank webs.

- 4) Put crankshaft with oil pump drive chain to cylinder block.

- 5) Apply sealant "A" to lower crankcase mating surface area as shown in figure.

**"A": Sealant 99000-31150**

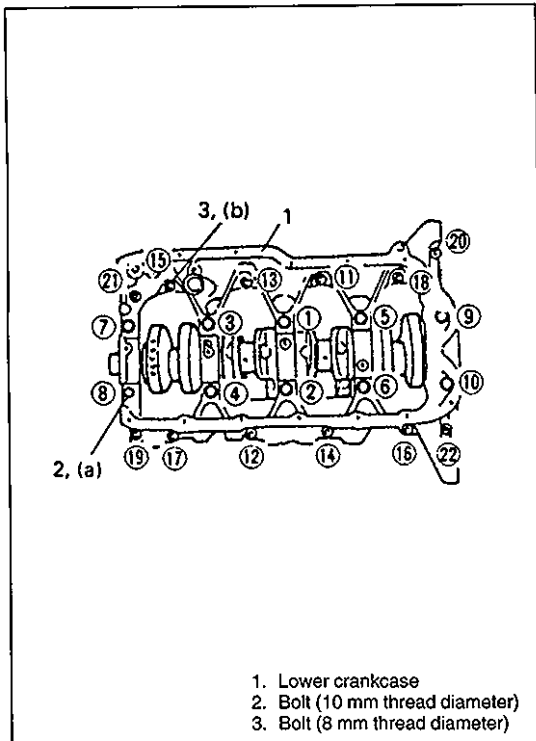

- 6) Install lower crankcase to cylinder block. Apply oil to crankcase bolts before installing them. Tighten crankcase bolts to 70% torque of specified torque, following sequence in figure and then tighten crankcase bolts to specified torque according to numerical order in figure.


#### Tightening Torque

(a): 60 N·m (6.0 kg-m, 43.5 lb-ft)

(b): 27 N·m (2.7 kg-m, 19.5 lb-ft)

#### NOTE:

After tightening crankcase bolts, check to be sure that crankshaft rotates smoothly when turned by hand.

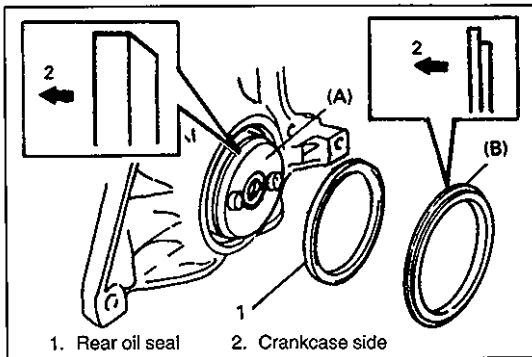


- 7) Install rear oil seal by using plastic hammer and special tools.

#### Special Tool

(A): 09911-97710

(B): 09911-97810

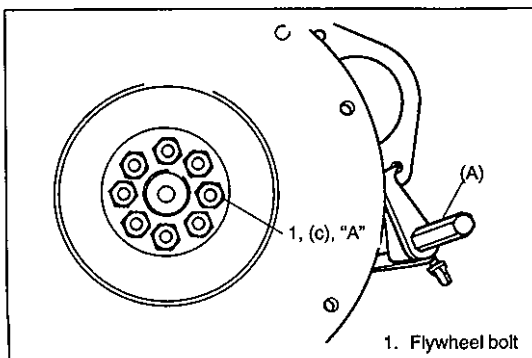

- 8) Install flywheel (M/T vehicle) or drive plate (A/T vehicle).

Using special tool, lock flywheel or drive plate, and tighten flywheel or drive plate bolts applied with thread lock cement to specification.

“A”: Thread lock 99000-32110

#### Special Tool

(A): 09924-17810

#### Tightening Torque


(c): 70 N·m (7.0 kg-m, 51.0 lb-ft)

- 9) Install engine side mounting brackets (right and left).

Tighten bracket bolts to specified torque.

#### Tightening Torque

(d): 50 N·m (5.0 kg-m, 36.5 lb-ft)

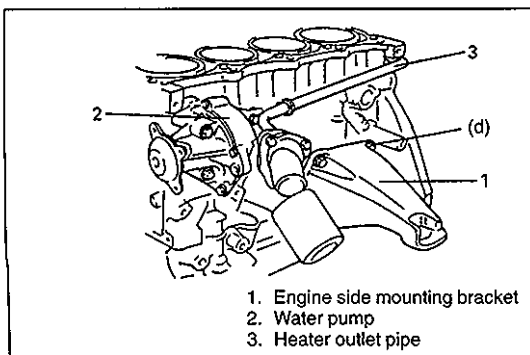

- 10) Install water pump and heater outlet pipe.

Refer to Section 6B.

- 11) Install pistons and connecting rods as previously outlined.
- 12) Install cylinder head assembly to cylinder block.

**NOTE:**


**Tighten cylinder head bolts to specified torque as previously outlined.**

**Whenever installing cylinder head to new cylinder block, use following procedure to tighten cylinder head bolts.**


- **Tighten cylinder head bolts to specified torque as previously outlined and loosen them once till tightening torque becomes “zero”. And then torque them to specification again.**

- 13) Install timing chains, timing chain tensioner, timing chain guide, timing chain sprockets, timing chain cover, crankshaft pulley, water pump pulley, etc., as previously outlined.
- 14) Install oil pump strainer and oil pan.
- 15) Install clutch to flywheel (for M/T vehicle). For clutch installation, refer to Section 7C1.
- 16) Install engine assembly to vehicle as previously outlined.


## SPECIAL TOOLS

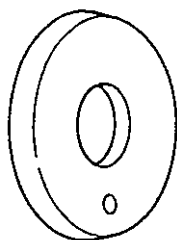


09911-97710  
Oil seal guide

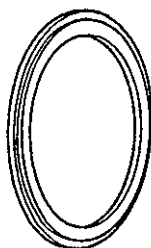


09911-97810  
Oil seal installer

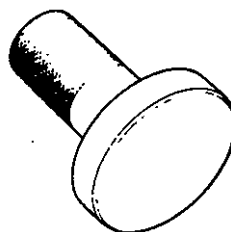


09913-75510  
Bearing installer

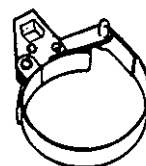


09915-47330  
Oil filter wrench

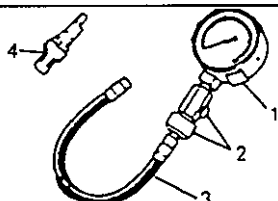


1. 09915-64510-001  
Compression gauge
2. 09915-64510-002  
Connector
3. 09915-64530  
Hose
4. 09915-67010  
Attachment

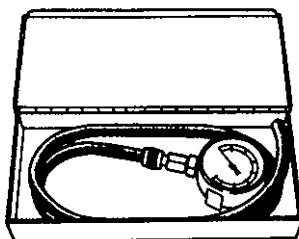


09915-67310  
Vacuum gauge

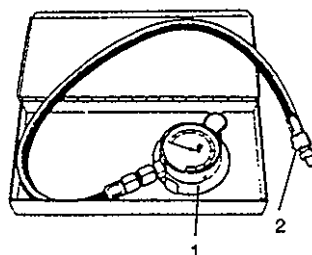


1. 09915-77310  
Oil pressure gauge
2. 09915-78211  
Oil pressure gauge attachment

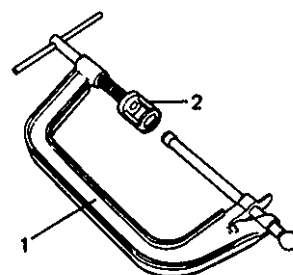


1. 09916-14510  
Valve lifter
2. 09916-14910  
Valve lifter attachment

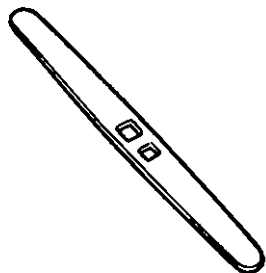


09916-34542  
Reamer handle

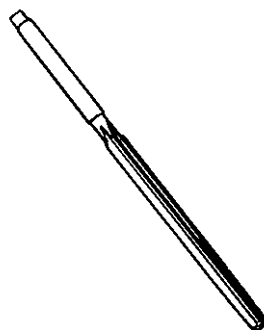


09916-37810  
Reamer (6 mm)

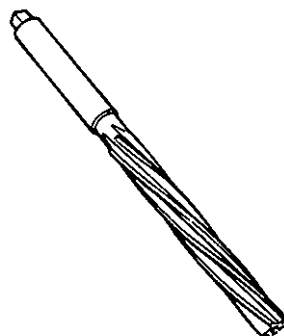


09916-38210  
Reamer (11 mm)

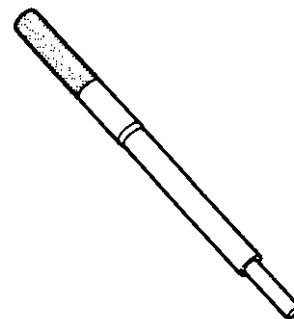


09916-44910  
Valve guide remover

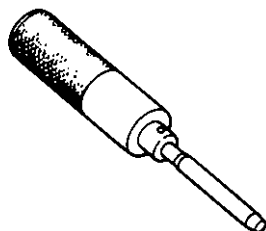


09916-58210  
Valve guide installer handle

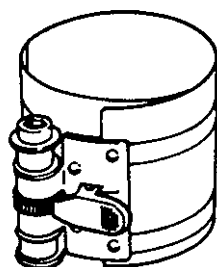



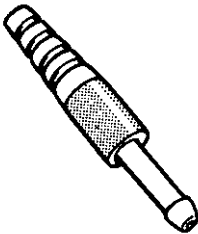
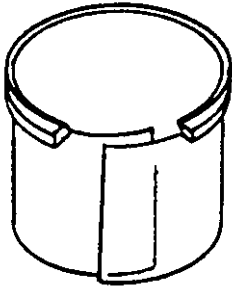
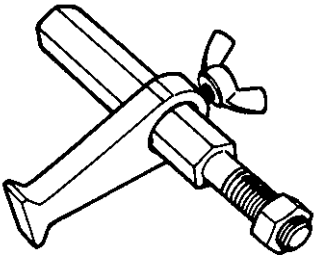

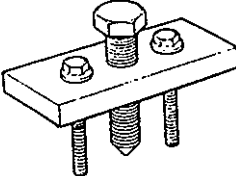
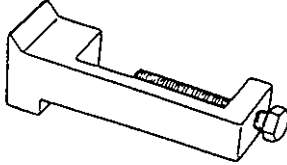
09916-77310  
Piston ring compressor

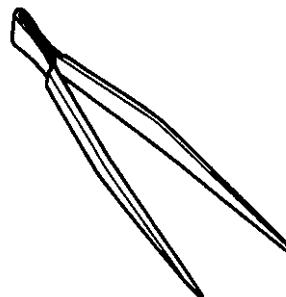

09916-84511  
Forceps

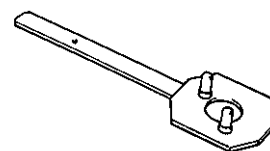

09917-68221  
Camshaft lock holder

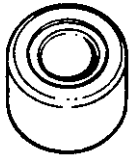 <p>09917-87810 Valve guide installer</p>	 <p>09917-98221 Valve stem seal installer</p>	 <p>09918-08210 Vacuum gauge hose joint</p>	 <p>09919-28610 Protective sleeve</p>
 <p>09924-17810 Flywheel holder</p>	 <p>09926-58010 Bearing puller attachment</p>	 <p>09944-36011 Steering wheel remover</p>	 <p>09927-56010 Gear stopper</p>

## REQUIRED SERVICE MATERIALS

RECOMMENDED SUZUKI PRODUCT	USE
Sealant 1207C 99000-31150	<ul style="list-style-type: none"> <li>● To apply to mating surfaces of cylinder block and oil pan.</li> <li>● To apply to mating surfaces of cylinder block and timing chain cover.</li> </ul>
Sealant 1207B 99000-31140	<ul style="list-style-type: none"> <li>● To apply to mating surface of cylinder block, cylinder head and timing chain cover.</li> </ul>
Sealant 1215 99000-31110	<ul style="list-style-type: none"> <li>● To apply to the thread of the bolt of water outlet pipe.</li> </ul>
Thread lock 1322 99000-32110	<ul style="list-style-type: none"> <li>● To flywheel (M/T) or drive plate (A/T) bolts.</li> </ul>

## TIGHTENING TORQUE SPECIFICATIONS

FASTENING PARTS		TIGHTENING TORQUE		
		N-m	kg-m	lb-ft
Oil pressure switch		14	1.4	10.5
Exhaust No.1 pipe bolts		50	5.0	36.5
Cylinder head cover nuts		11	1.1	8.0
Oil pump strainer bolts				
Oil pan bolts and nuts				
Drain plug		35	3.5	25.5
Oil pump relief valve retainer		29	2.9	21.0
Oil pump case bolts		12	1.2	9.0
Oil pump bolts		27	2.7	19.5
Oil pump sprocket cover bolts		11	1.1	8.0
Timing chain cover bolts and nut				
Crankshaft pulley bolt		150	15.0	108.5
A/C compressor bracket bolts		55	5.5	40.0
Generator belt idler pulley nuts		45	4.5	33.0
Generator belt tensioner bolts		25	2.5	18.0
Camshaft timing sprocket bolts		80	8.0	57.5
Timing chain tensioner adjuster No.2	Bolts	11	1.1	8.0
	Nut	45	4.5	33.0
Timing chain tensioner nut		25	2.5	18.0
Timing chain tensioner adjuster No.1 bolts		11	1.1	8.0
Timing chain guide No.1 bolts				
Camshaft housing bolts				
Cylinder head bolts	(M6)			
	(M10)	105	10.5	76.0
Connecting rod bearing cap nuts		45	4.5	33.0
Engine mounting nuts		50	5.0	36.5
Bolt and nuts fastening T/M and cylinder block		85	8.5	61.5
Torque converter bolts (A/T)		65	6.5	47.0
Transmission stiffener bolts		50	5.0	36.5
Crankcase bolts	(M8)	27	2.7	19.5
	(M10)	60	6.0	43.5
Flywheel bolts (Drive plate bolts for A/T)		70	7.0	51.0
Engine side mounting bracket bolts		50	5.0	36.5
Engine mounting bracket bolts (body side)		85	8.5	61.5

# SECTION 6B

## ENGINE COOLING

### CONTENTS

6B

<b>GENERAL DESCRIPTION</b> .....	6B- 2
Cooling System Circulation .....	6B- 2
Thermostat .....	6B- 4
Cooling Fan Clutch .....	6B- 4
Coolant .....	6B- 5
<b>DIAGNOSIS</b> .....	6B- 6
<b>MAINTENANCE</b> .....	6B- 6
Coolant Level Check .....	6B- 6
Cooling System Service .....	6B- 7
Cooling System Flush and Refill .....	6B- 7
Cooling Fan Belt Tension Check and Adjustment .....	6B- 9
<b>ON-VEHICLE SERVICE</b> .....	6B-11
Coolant Draining .....	6B-11
Cooling Water Pipes or Hoses .....	6B-11
Thermostat .....	6B-13
Cooling Fan Belt .....	6B-14
Cooling Fan and Fan Clutch .....	6B-16
Radiator .....	6B-17
Water Pump .....	6B-18
Engine Coolant Temperature (ECT) Sensor .....	Refer to 6E1 (G16 and J20 engines) 6E2 (H25 engine)
<b>REQUIRED SERVICE MATERIAL</b> .....	6B-23
<b>TIGHTENING TORQU SPECIFICATIONS</b> .....	6B-23

## GENERAL DESCRIPTION


The cooling system consists of the radiator cap, radiator, coolant reservoir, hoses, water pump, cooling fan, and thermostat. The radiator is of tube-and-fin type.

### WARNING:

- Do not remove radiator cap to check engine coolant level; check coolant visually at the see-through coolant reservoir.
- Coolant should be added only to reservoir as necessary.
- As long as there is pressure in the cooling system, the temperature can be considerably higher than the boiling temperature of the solution in the radiator without causing the solution to boil. Removal of the radiator cap while engine is hot and pressure is high will cause the solution to boil instantaneously and possibly with explosive force, spewing the solution over engine, fenders and person removing cap. If the solution contains flammable anti-freeze such as alcohol (not recommended for use at any time), there is also the possibility of causing a serious fire.


## COOLING SYSTEM CIRCULATION

- 1) While the engine is warmed up (thermostat closed), coolant circulates as follows.

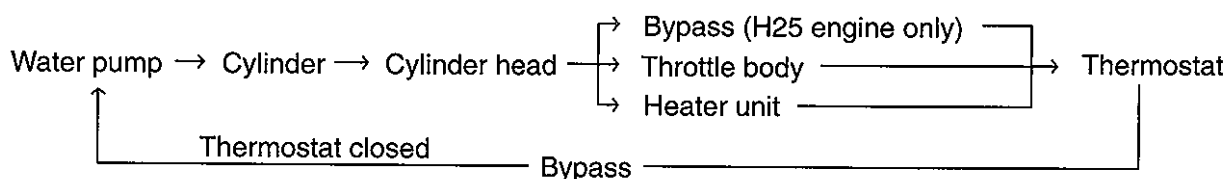


- 2) When coolant is warmed up to normal temperature and the thermostat opens, coolant passes through the radiator core to be cooled as well as the above flow circuit.

[G16 engine]

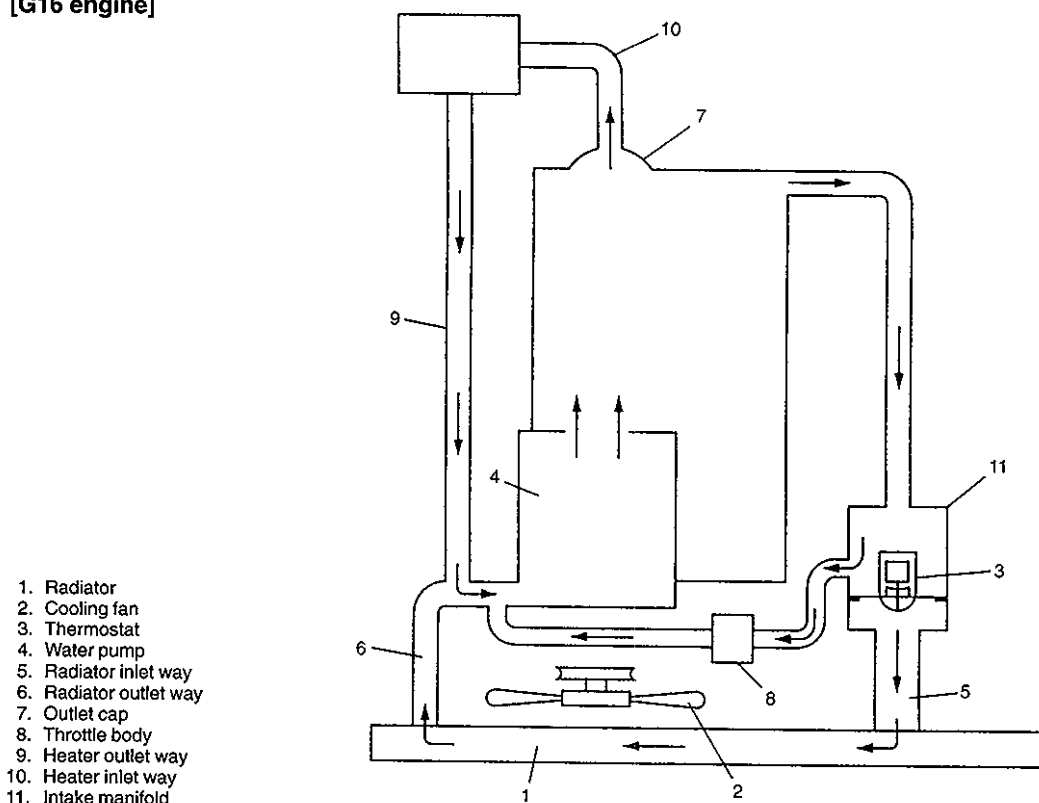




[J20 engine]

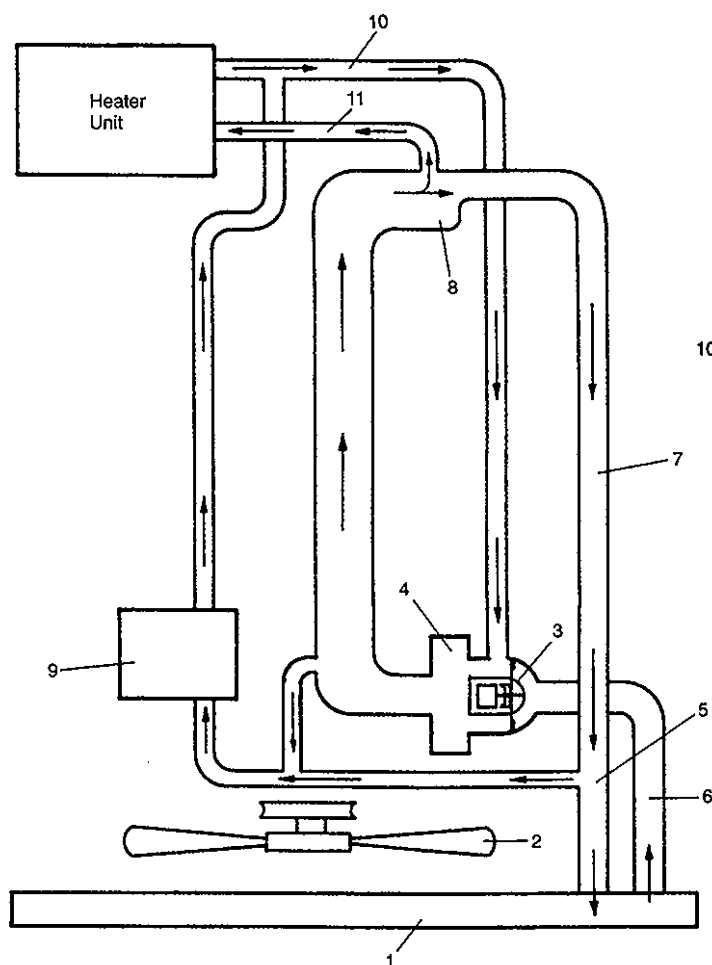


[H25 engine]

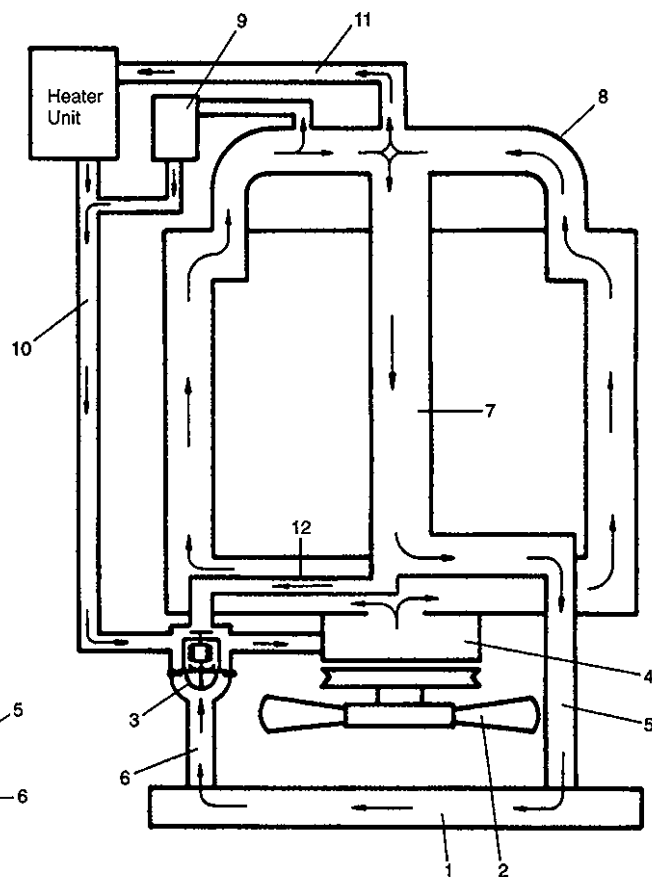


1. Radiator
2. Cooling fan
3. Thermostat
4. Water pump
5. Radiator inlet way
6. Radiator outlet way
7. Outlet pipe
8. Outlet cap
9. Throttle body
10. Heater outlet way
11. Heater inlet way
12. Bypass

[G16 &amp; J20 engines]

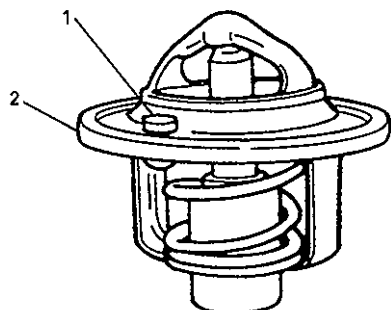

[H25 engine]

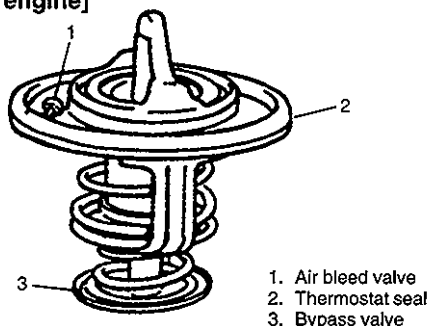

- 1. Air bleed valve
- 2. Thermostat seal
- 3. Bypass valve

## THERMOSTAT

Temp. at which valve begins to open	J20 and H25 engines : $82 \pm 2^{\circ}\text{C}$ ( $179 \pm 3.6^{\circ}\text{F}$ ) G16 engine : $88 \pm 2^{\circ}\text{C}$ ( $190 \pm 3.6^{\circ}\text{F}$ )
Temp. at which valve becomes fully open	J20 and H25 engines : $95^{\circ}\text{C}$ ( $203^{\circ}\text{F}$ ) G16 engine : $100^{\circ}\text{C}$ ( $212^{\circ}\text{F}$ )
Valve lift	J20 and H25 engines : More than 8 mm at $95^{\circ}\text{C}$ G16 engine : More than 8 mm at $100^{\circ}\text{C}$

## COOLING FAN CLUTCH

Fluid is enclosed in the cooling fan clutch and at its center front, there is a bimetal whose thermal reaction and the engine speed control the cooling fan speed.

The relation between the temperature detected by the fan clutch and operation of the fan clutch is as follows.



While the fan clutch detects a temperature lower than  $50^{\circ}\text{C}$ , it remains OFF and the fan revolution speed is constant (400 to 900 r/min. (rpm) : J20 and H25 engines, 600 to 1,300 r/min. (rpm) : G16 engine) regardless of the engine speed. As the temperature reaches  $50^{\circ}\text{C}$  to  $70^{\circ}\text{C}$ , the fan clutch turns ON gradually and the fan revolution speed increases.

A temperature exceeding  $70^{\circ}\text{C}$  causes the fan clutch to turn ON and the fan revolution speed to increase in proportion with the engine speed.

Once the engine speed exceeds 4,000 r/min. (rpm), however, the fan revolution speed becomes constant (2,350 to 2,650 r/min. (rpm) : J20 and H25 engines, 2,800 to 3,100 r/min. (rpm) : G16 engine).

### NOTE:

**Do not disassemble fan clutch.**

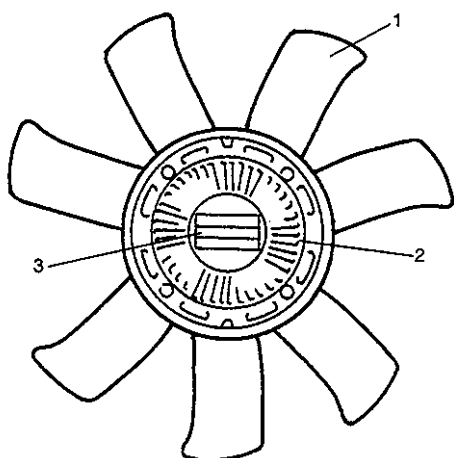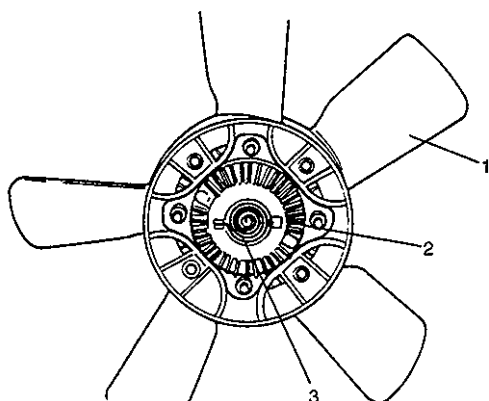

- 1. Cooling fan
- 2. Fan clutch
- 3. Bimetal

ANTI-FREEZE PROPORTIONING CHART				
Freezing temperature		°C	-16	-36
		°F	3	-33
Antifreeze/Anti-corrosion coolant concentration		%	30	50
Ratio of compound to cooling water	G16 engine	ltr.	1.7/3.8	2.8/2.8
		US pt.	3.5/8.1	5.8/5.8
		Imp. pt.	2.9/6.8	4.9/4.9
	J20 engine	ltr.	2.0/4.5	3.3/3.3
		US pt.	4.1/9.6	6.9/6.9
		Imp. pt.	3.4/8.0	5.7/5.7
	H25 engine	ltr.	2.4/5.6	4.0/4.0
		US pt.	5.1/11.8	8.5/8.5
		Imp. pt.	4.2/9.9	7.1/7.1
COOLANT CAPACITY				
G16 engine	Engine, radiator and heater		4.6 liters (9.7/8.1 US/Imp. pt.)	
	Reservoir		0.9 liters (1.9/1.6 US/Imp. pt.)	
	Total		5.5 liters (11.6/9,7 US/Imp. pt.)	
J20 engine	Engine, radiator and heater		5.6 liters (11.8/9.8 US/Imp. pt.)	
	Reservoir		0.9 liters (1.9/1.6 US/Imp. pt.)	
	Total		6.5 liters (13.7/11.4 US/Imp. pt.)	
H25 engine	Engine, radiator and heater		7.1 liters (15.0/12.5 US/Imp. pt.)	
	Reservoir		0.9 liters (1.9/1.6 US/Imp. pt.)	
	Total		8.0 liters (16.9/14.1 US/Imp. pt.)	

## COOLANT

The coolant recovery system is standard. The coolant in the radiator expands with heat, and the overflow is collected in the reservoir. When the system cools down, the coolant is drawn back into the radiator.

The cooling system has been filled at the factory with a quality coolant that is a 50/50 mixture of water and ethylene glycol antifreeze.

This 50/50 mixture coolant solution provides freezing protection to  $-36^{\circ}\text{C}$  ( $-33^{\circ}\text{F}$ ).

- Maintain cooling system freeze protection at  $-36^{\circ}\text{C}$  ( $-33^{\circ}\text{F}$ ) to ensure protection against corrosion and loss of coolant from boiling.  
This should be done even if freezing temperatures are not expected.
- Add ethylene glycol base coolant when coolant has to be added because of coolant loss or to provide added protection against freezing at temperature lower than  $-36^{\circ}\text{C}$  ( $-33^{\circ}\text{F}$ ).

### NOTE:

- Alcohol or methanol base coolant or plain water alone should not be used in cooling system at any time as damage to cooling system could occur.
- Even in a market where no freezing temperature is anticipated, mixture of 70% water and 30% ethylene glycol antifreeze (Antifreeze/Anticorrosion coolant) should be used for the purpose of corrosion protection and lubrication.
- "Hard water", if used, will foul up the cooling circuit by scale formation. Tap water available from city water supply is the best available water, in a practical sense, for the cooling system. Distilled water is ideal but is a luxury in most cases.


## DIAGNOSIS

Condition	Possible Cause	Correction
Engine overheats	<ul style="list-style-type: none"> <li>• Loose or broken water pump belt</li> <li>• Not enough coolant</li> <li>• Faulty thermostat</li> <li>• Faulty water pump</li> <li>• Dirty or bent radiator fins</li> <li>• Coolant leakage on cooling system</li> <li>• Defective cooling fan clutch or thermo switch</li> <li>• Plugged radiator</li> <li>• Faulty radiator cap</li> </ul>	<p>Adjust or replace. Check coolant level and add as necessary. Replace. Replace. Clean or remedy. Repair. Check and replace as necessary.</p> <p>Check and replace radiator as necessary. Replace.</p>

## MAINTENANCE

### COOLANT LEVEL CHECK

To check level, lift hood and look at "see-through" coolant reservoir. It is not necessary to remove radiator cap to check coolant level.

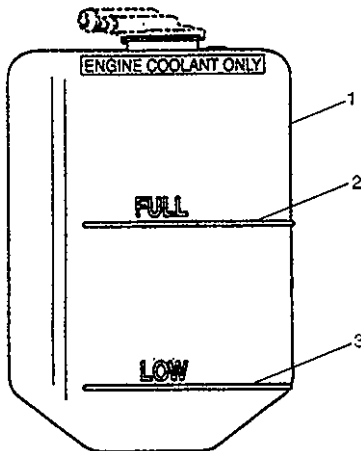

#### WARNING:

To help avoid danger of being burned:

- Do not remove reservoir cap while coolant is "boiling", and
- Do not remove radiator cap while engine and radiator are still hot.

Scalding fluid and steam can be blown out under pressure if either cap is taken off too soon.

When engine is cool, check coolant level in reservoir.

A normal coolant level should be between "FULL" and "LOW" marks on reservoir.


If coolant level is below "LOW" mark, remove reservoir cap and add proper coolant to reservoir to bring coolant level up to "FULL" mark. Then, reinstall cap.

#### NOTE:

- If recommended quality antifreeze is used, there is no need to add extra inhibitors or additives that claim to improve system.

They may be harmful to proper operation of system.

- When installing reservoir cap, align arrow marks on reservoir and cap.

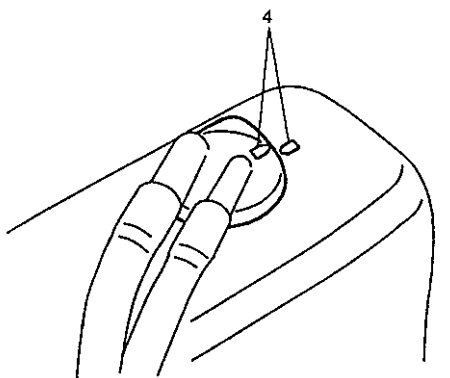

1. Reservoir
2. FULL level mark
3. LOW level mark
4. Arrow mark

## COOLING SYSTEM SERVICE


### WARNING:

To help avoid danger of being burned, do not remove radiator cap while engine and radiator are still hot.

Scalding fluid and steam can be blown out under pressure if cap is taken off too soon.

Cooling system should be serviced as follows.

- 1) Check cooling system for leakage or damage.
- 2) Wash radiator cap and filler neck with clean water by removing radiator cap when engine is cold.
- 3) Check coolant for proper level and freeze protection.
- 4) Using a pressure tester, check system and radiator cap for proper pressure holding capacity 110 kPa (1.1 kg/cm<sup>2</sup>, 15.6 psi). If replacement of cap is required, use proper cap specified for this vehicle.

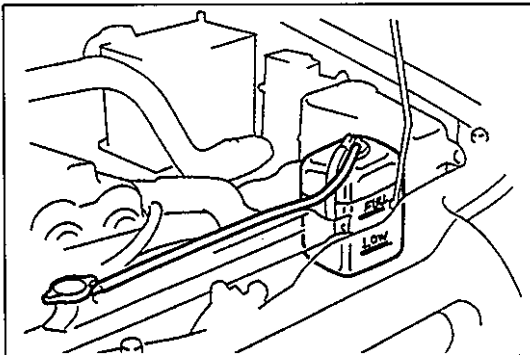

### NOTE:

After installing radiator cap to radiator, make sure that its ear is aligned with reservoir hose as shown in figure. If not, turn cap more to align its ear with hose.

- 5) Make sure that hose clamps are tightened securely and inspect all hoses.  
Replace hoses whenever cracked, swollen or otherwise deteriorated.
- 6) Clean frontal area of radiator core.

## COOLING SYSTEM FLUSH AND REFILL


- 1) Remove radiator cap when engine is cool.  
Turn cap slowly to the left until it reaches a "stop" (Do not press down while turning it).  
Wait until pressure is relieved (indicated by a hissing sound) then press down on cap and continue to turn it to the left.

### WARNING:


To help avoid danger of being burned, do not remove radiator cap while engine and radiator are still hot.

Scalding fluid and steam can be blown out under pressure if cap is taken off too soon.

- 2) With radiator cap removed, run engine until upper radiator hose is hot (this shows that thermostat is open and coolant is flowing through system).

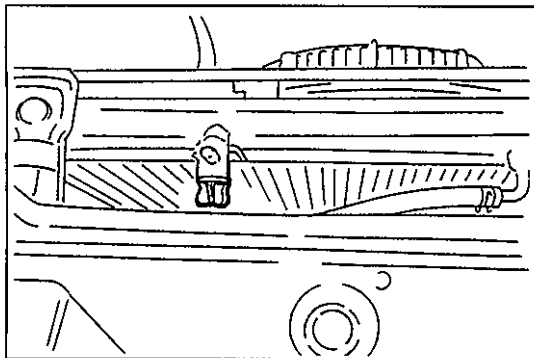

- 3) Stop engine and open radiator drain plug to drain coolant.
- 4) Close drain plug. Add water until system is filled and run engine until upper radiator hose is hot again.
- 5) Repeat steps 3) and 4) several times until drained liquid is nearly colorless.
- 6) Drain system and then close radiator drain plug tightly.

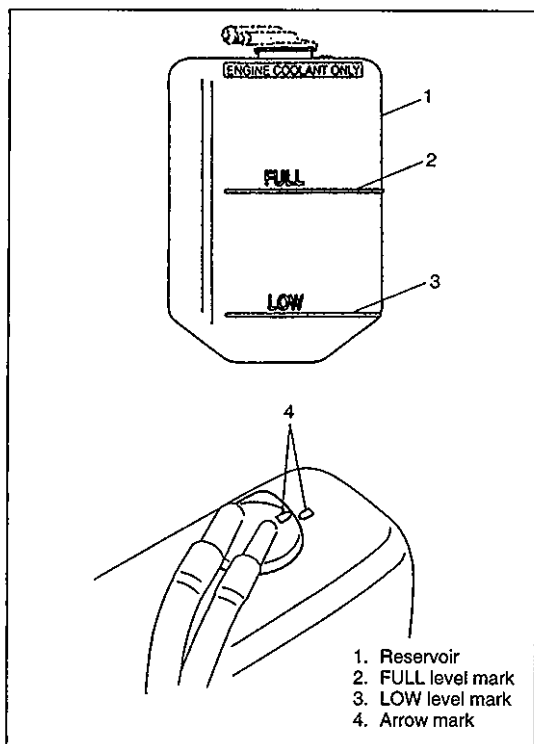


- 7) Disconnect hose from reservoir. Remove reservoir and pour out any fluid. Scrub and clean inside of reservoir with soap and water. Flush it well with clean water and drain. Reinstall reservoir and hose.

- 8) Add 50/50 mixture of good quality ethylene glycol antifreeze and water to radiator and tank.


Fill radiator to the base of radiator filler neck and reservoir to "FULL" level mark. Reinstall reservoir cap, aligning the arrow marks on the reservoir and cap.

- 9) Run engine, with radiator cap removed, until radiator upper hose is hot.
- 10) With engine idling, add coolant to radiator until level reaches the bottom of filler neck. Install radiator cap, making sure that the ear of cap lines up with reservoir hose.

[G16 engine]

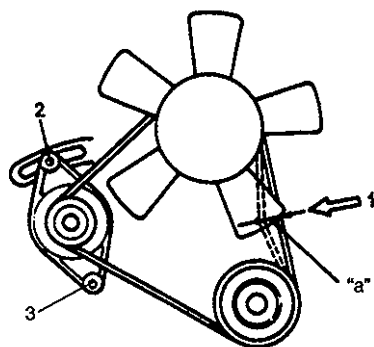

[H25 engine]

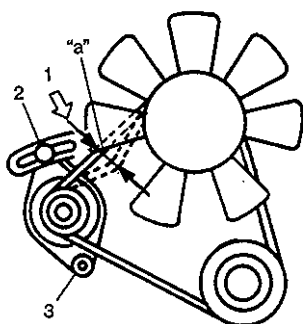

- 1. 10 kg (22 lbs)
- 2. Adjusting bolt
- 3. Pivot bolt
- "a": Belt tension

## COOLING FAN BELT TENSION CHECK AND ADJUSTMENT

### WARNING:

Disconnect negative cable at battery before checking and adjusting belt tension.


### [G16 and H25 engines]

- 1) Inspect belt for cracks, cuts, deformation, wear and cleanliness. If it is necessary to replace belt, refer to page 6B-14 for procedure.
- 2) Check belt for tension. Belt is in proper tension when it deflects 6 to 8 mm (0.24 – 0.32 in.) under thumb pressure (about 10 kg or 22 lb.).


**Belt tension "a":** 6 – 8 mm (0.24 – 0.32 in.) (G16 engine)  
 9 – 11 mm (0.35 – 0.43 in.) (H25 engine)  
 as deflection/10 kg (22 lbs)

### NOTE:

When replacing belt with a new one, adjust belt tension to 5 – 7 mm (0.20 – 0.27 in.) (G16 engine) or 7 – 9 mm (0.27 – 0.35 in.) (H25 engine).

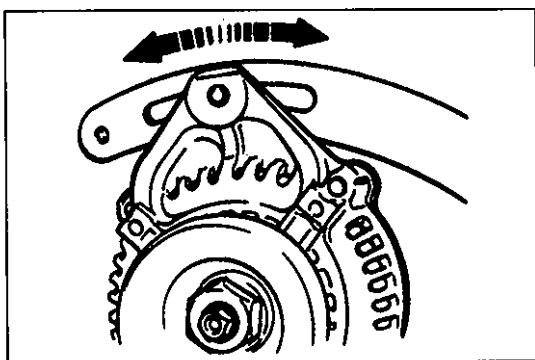

- 3) If belt is too tight or too loose, adjust it to proper tension by displacing generator position.
- 4) Tighten generator adjusting bolt and pivot bolt.
- 5) Connect negative cable at battery terminal.

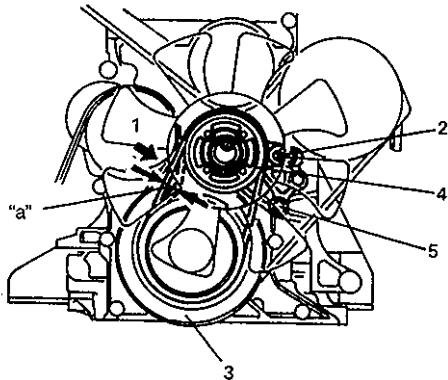**[J20 engine]**

- |                      |                   |
|----------------------|-------------------|
| 1. 10 kg (22 lbs)    | 4. Fan pulley     |
| 2. Adjusting bolt    | 5. Pivot bolt     |
| 3. Crankshaft pulley | "a": Belt tension |

**[J20 engine]**

- 1) Inspect belt for cracks, cuts, deformation, wear and cleanliness. If it is necessary to replace belt, refer to page 6B-14 for procedure.
- 2) Check belt for tension. Belt is in proper tension when it deflects 5 to 7 mm (0.20 – 0.27 in.) under thumb pressure (about 10 kg or 22 lb.).

**Belt tension "a": 5 – 7 mm (0.20 – 0.27 in.)  
as deflection/10 kg (22 lbs)**

**NOTE:**



**When replacing belt with a new one, adjust belt tension to 4 – 5 mm (0.16 – 0.20 in.).**

- 3) If belt is too tight or too loose, adjust it as follows:
  - (1) Loosen adjusting bolt and pivot bolt.
  - (2) Tighten adjusting bolt during Keeping fan belt in proper tension by tightening tension bolt with wrench as shown in figure.
  - (3) Tighten adjusting bolt and pivot bolt to specified torque.

**Tightening torque**

**(a): 45 N·m (4.5 kg-m, 32.5 lb-ft)**

- 4) Connect negative cable at battery terminal.

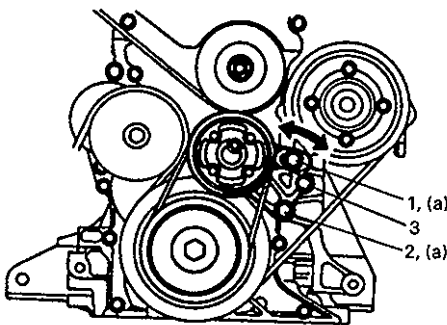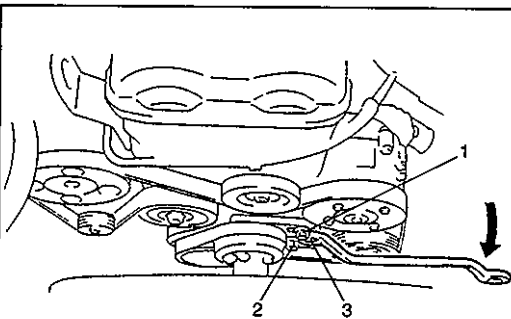


- |                   |               |                 |
|-------------------|---------------|-----------------|
| 1. Adjusting bolt | 2. Pivot bolt | 3. Tension bolt |
|-------------------|---------------|-----------------|



## ON-VEHICLE SERVICE

### WARNING:

- Check to make sure that engine coolant temperature is cold before removing any part of cooling system.
- Also be sure to disconnect negative cable from battery terminal before removing any part.

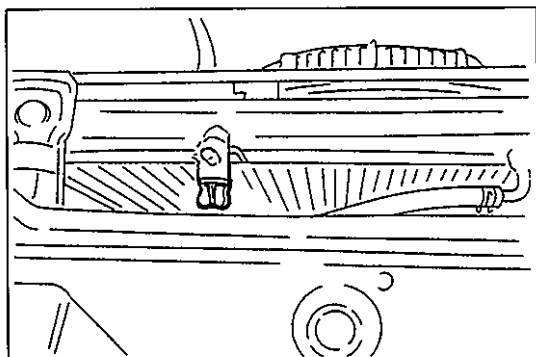

## COOLANT DRAINING

- 1) Remove radiator cap.
- 2) Loosen drain plug on radiator to drain coolant.
- 3) After draining coolant, be sure to tighten drain plug securely.
- 4) Fill cooling system.  
Refer to "COOLANT" and steps 8) to 10) of "COOLING SYSTEM FLUSH AND REFILL" in this section.

## COOLING WATER PIPES OR HOSES

[G16 and J20 engines]

### REMOVAL

- 1) Drain cooling system.
- 2) To remove these pipes or hoses, loosen screw on each pipe or hose clip and pull hose end off.

### INSTALLATION



Install removed parts in reverse order of removal procedure, noting the following.

- Tighten each clamp bolt securely.
- When installing water outlet pipe to cylinder head, apply sealant to pipe bolt thread and then tighten it (J20 engine only).

### Sealant

"A": 99000-31110 (SUZUKI BOND No. 1215)


- Refill cooling system with proper coolant, referring to description on "COOLANT" and steps 8) to 10) of "COOLING SYSTEM FLUSH AND REFILL" in this section.
- Check each part for leakage.

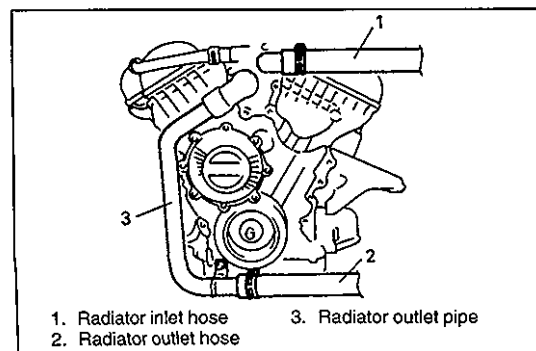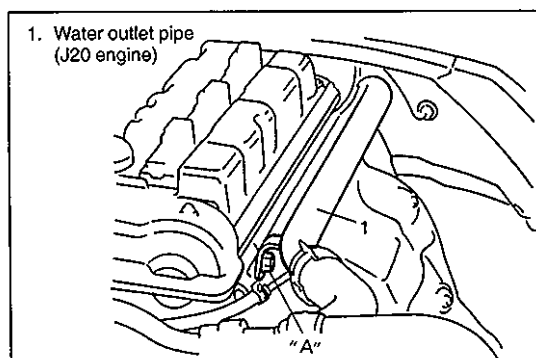


[H25 engine]

### REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain coolant.
- 3) Remove radiator inlet, outlet hoses and radiator outlet pipe.

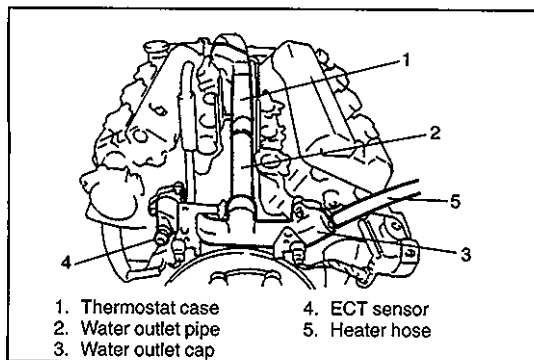

- 4) Remove throttle body and intake manifold.  
Refer to Section 6A2 for removal.
- 5) Disconnect coolant temperature sensor (ECT sensor) coupler.
- 6) Disconnect heater inlet hose from water outlet cap.

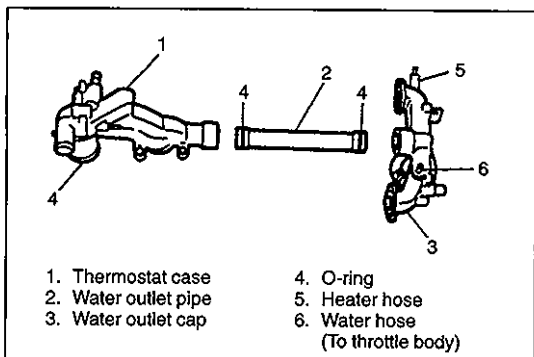


- 7) Remove water outlet cap from cylinder heads.
- 8) Remove water outlet pipe from thermostat case.
- 9) Remove thermostat case from cylinder block.

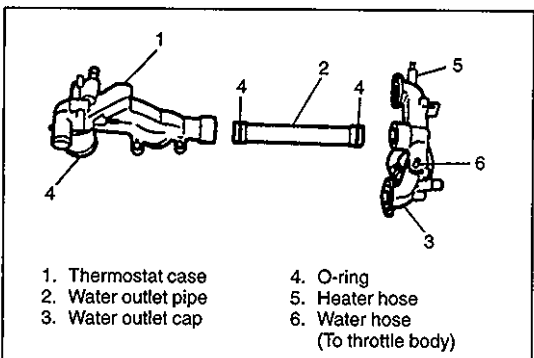


## INSTALLATION

Install removed parts in reverse order of removal procedure, noting the following.

- 1) Install thermostat case to cylinder block with new O-ring.
- 2) Install water outlet pipe to thermostat case with new O-rings.
- 3) Install water outlet cap to cylinder heads with new gaskets.

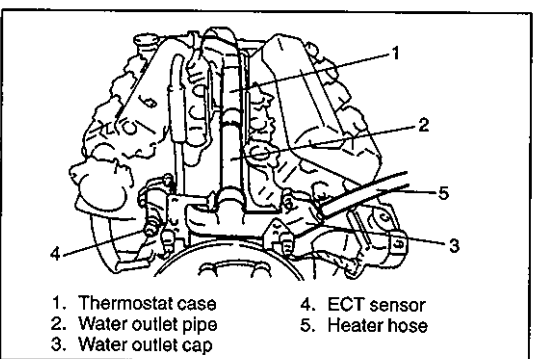


- 4) Connect heater hose to water outlet cap.
- 5) Connect ECT sensor coupler.

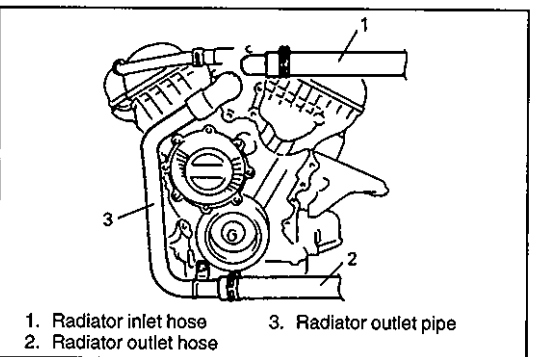


- 6) Install throttle body and intake manifold.  
Refer to Section 6A2 for installation.
- 7) Install radiator outlet pipe to thermostat case with new O-ring.
- 8) Install radiator inlet and outlet hoses.
- 9) Refill cooling system with proper coolant, referring to description on "COOLANT" and steps 8) to 10) of "COOLING SYSTEM FLUSH AND REFILL" in this section.


[G16 engine]

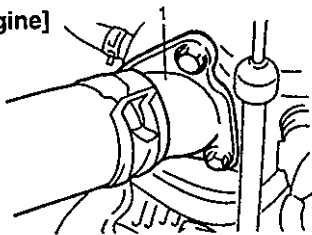

[J20 engine]

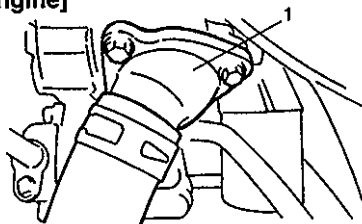

[H25 engine]

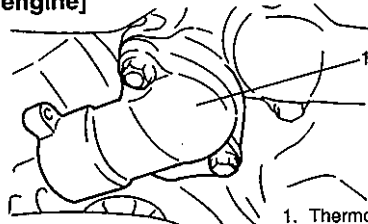

1. Thermostat cap


## THERMOSTAT

### REMOVAL

- 1) Drain coolant and tighten drain plug.
- 2) Remove fan shroud with cooling fan after disconnecting radiator inlet hose from radiator (H25 engine only).
- 3) Remove thermostat cap.
- 4) Remove thermostat.


### INSPECTION

- 1) Make sure that air bleed valve of thermostat is clean. Should this valve be clogged, engine would tend to overheat.
- 2) Check to make sure that valve seat is free from foreign matters which would prevent valve from seating tight.
- 3) Check thermostat seal and O-ring for breakage, deterioration or any other damage.

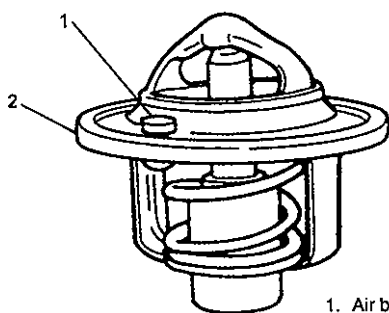


1. Air bleed valve  
2. Thermostat seal

- 4) Check thermostatic movement of wax pellet as follows:
  - (1) Immerse thermostat in water, and heat water gradually.
  - (2) Check that valve starts to open at specific temperature.
  - (3) If valve starts to open at a temperature substantially below or above specific temperature, thermostat unit should be replaced with a new one. Such a unit, if reused, will bring about overcooling or overheating tendency.

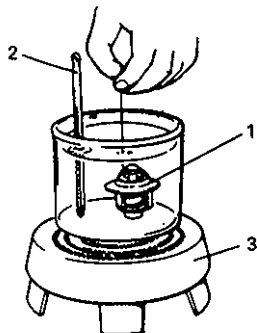


1. Thermostat  
2. Thermometer  
3. Heater

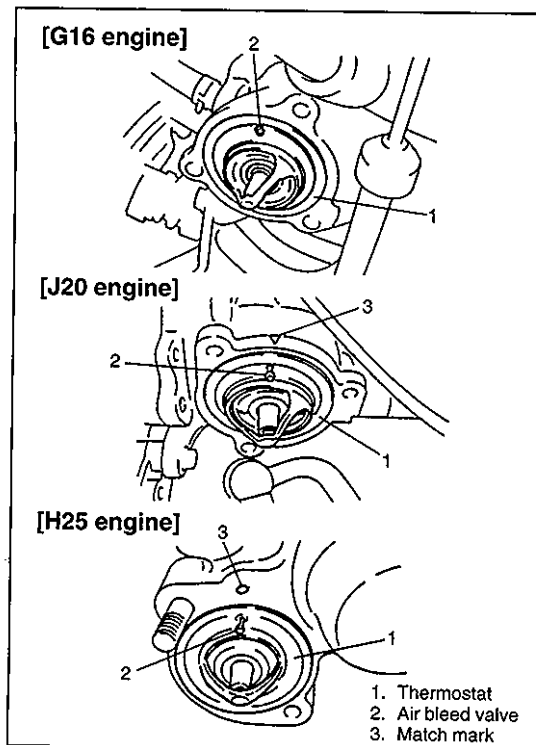

## INSTALLATION

- 1) When positioning thermostat and O-ring on thermostat case, be sure to position it so that
  - air bleed valve comes at top (G16 engine)
  - air bleed valve comes at match mark and into the recession of thermostat case (J20 and H25 engines).
- 2) Install thermostat cap to intake manifold (G16 engine), water pump (J20 engine) or thermostat case (H25 engine).
- 3) Install cooling fan and fan shroud and connect radiator inlet hose to radiator (H25 engine only).
- 4) Fill cooling system. Refer to "COOLANT" and steps 8) to 10) of "COOLING SYSTEM FLUSH AND REFILL" in this section.
- 5) Connect negative cable at battery.
- 6) After installation, check each part for leakage.

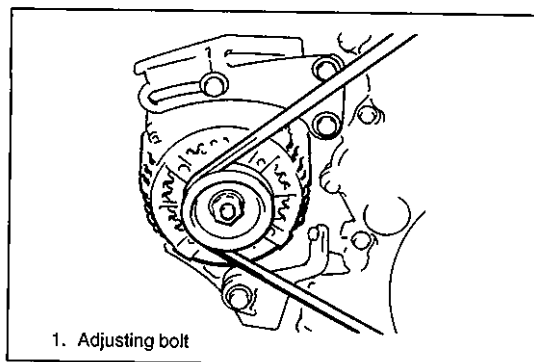

## COOLING FAN BELT

[G16 and H25 engines]

### REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Loosen P/S pump drive belt adjusting bolt and then remove P/S pump belt.
- 3) Loosen adjusting bolt and pivot bolt.
- 4) Slacken belt by displacing generator and then remove it.

### INSTALLATION

- 1) Install belt to water pump pulley, crankshaft pulley and generator pulley. Install P/S pump drive belt.
- 2) Adjust belt tension as specified.  
For Adjustment of P/S pump drive belt tension, refer to Section 0B of this manual.
- 3) Tighten adjusting bolt and pivot bolt.
- 4) Connect negative cable at battery.

## COOLING FAN BELT TENSION INSPECTION

Inspect belt and check belt tension. Refer to "COOLING FAN BELT TENSION CHECK AND ADJUSTMENT" in this section.

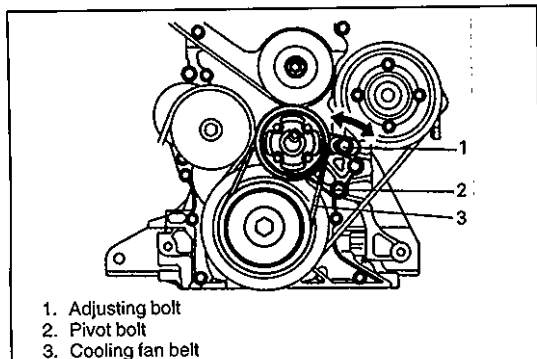**[J20 engine]****REMOVAL**


- 1) Disconnect negative cable at battery.
- 2) Loosen adjusting bolt and pivot bolt.
- 3) Slacken belt by displacing fan pulley.
- 4) Remove cooling fan. Just detach the fan/clutch from fan pulley.
- 5) Remove cooling fan belt.

**INSTALLATION**

- 1) Install belt to fan pulley and crankshaft pulley.
- 2) Install cooling fan. Refer to "COOLING FAN AND FAN CLUTCH" in this section.
- 3) Adjust belt tension as specified. Refer to "COOLING FAN BELT TENSION CHECK AND ADJUSTMENT" in this section.
- 4) Tighten adjusting bolt and pivot bolt.
- 5) Connect negative cable at battery.

**COOLING FAN BELT TENSION INSPECTION**



Inspect belt and check belt tension. Refer to "COOLING FAN BELT TENSION CHECK AND ADJUSTMENT".

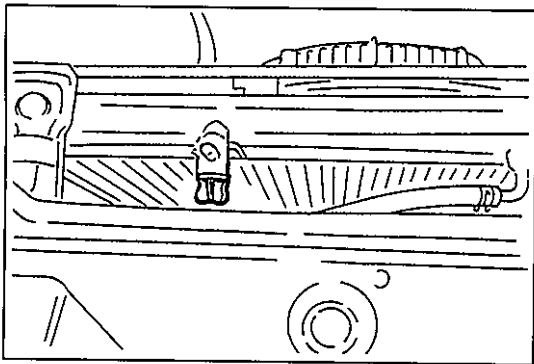

## COOLING FAN AND FAN CLUTCH

### REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain coolant.
- 3) Disconnect radiator inlet hose from radiator.
- 4) Loosen cooling fan/clutch nuts.
- 5) Remove P/S oil tank stay bolts from radiator stay (G16 and H25 engines only).
- 6) Remove radiator shroud securing clips.
- 7) Then remove cooling fan/clutch and radiator shroud.

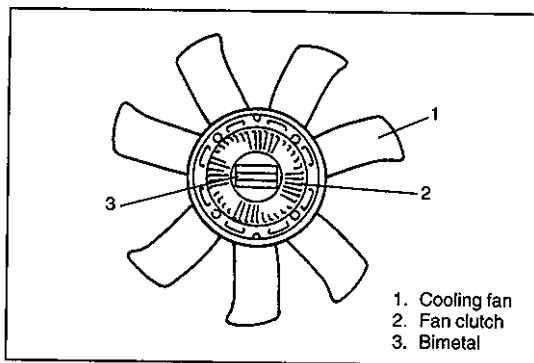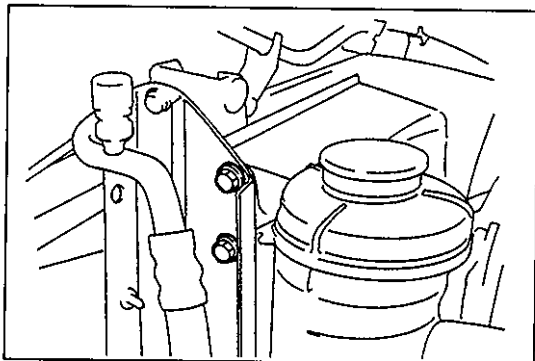

### INSPECTION

Inspect fluid coupling for oil leakage.

If necessary, replace fan clutch assembly. Do not disassemble clutch assembly.

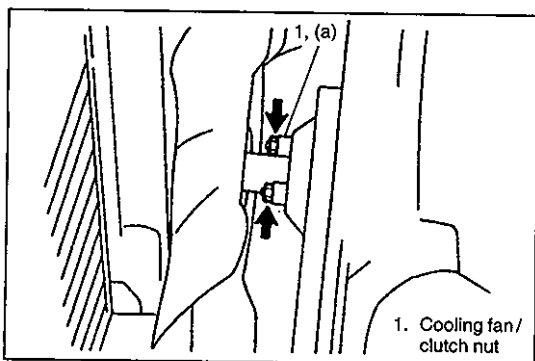

### INSTALLATION


Install removed parts in reverse order of removal procedure. After installation, adjust belt tension for specification and tighten each bolt and nut securely.

#### Tightening Torque

- (a): 11 N·m (1.1 kg-m, 8.0 lb-ft) (G16 and J20 engines)  
(a): 25 N·m (2.5 kg-m, 18.0 lb-ft) (H25 engine)

#### NOTE:


- Refill cooling system with proper coolant referring to "COOLANT" and steps 8) to 10) of "COOLING SYSTEM FLUSH AND REFILL" in this section.
- After installation, check each joint for leakage.

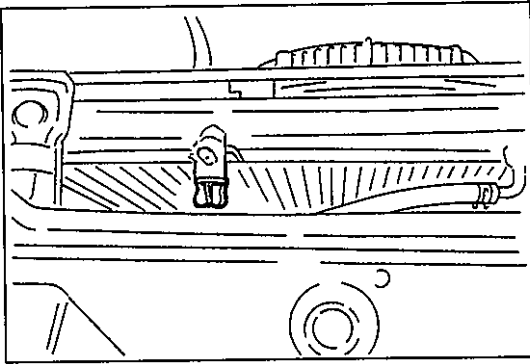


## RADIATOR

### REMOVAL


- 1) Disconnect negative cable at battery.
- 2) Drain cooling system by loosening drain plug of radiator.

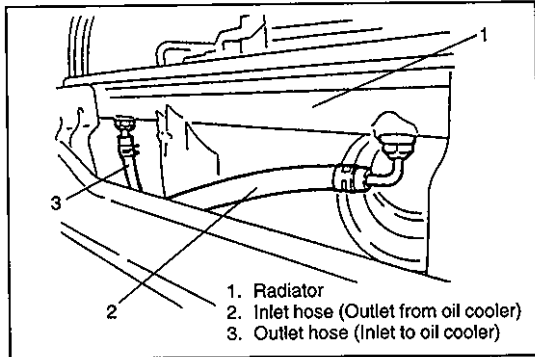


- 3) When servicing vehicle equipped with A/T (Automatic Transmission), place oil pan under radiator and disconnect A/T fluid hoses from radiator.

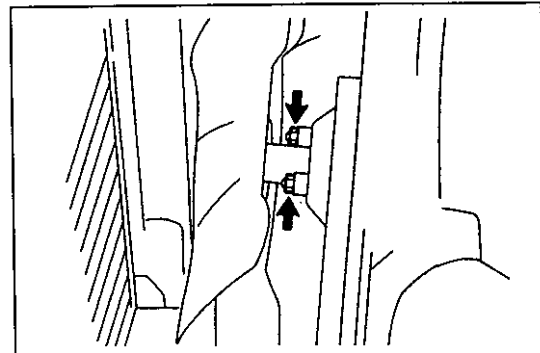

- 4) Loosen cooling fan/clutch nuts.
- 5) Disconnect radiator inlet hose from radiator.

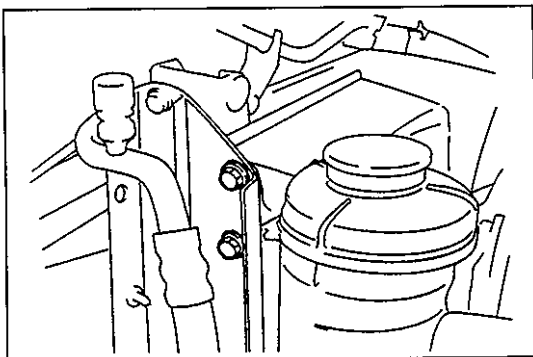


- 6) Remove P/S oil tank stay bolts from radiator stay.
- 7) Remove radiator shroud securing clips.
- 8) Then remove cooling fan/clutch and radiator shroud.

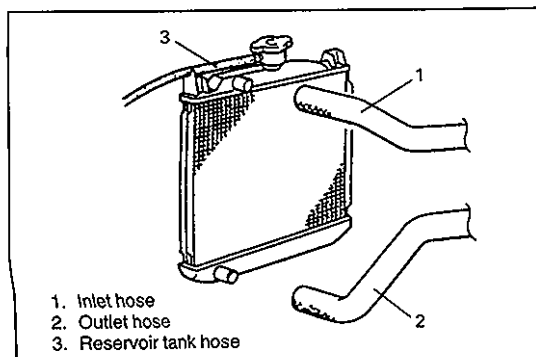

- 9) Disconnect water hose and reservoir hose from radiator.
- 10) Remove radiator.

**INSPECTION**

Check radiator for leakage or damage. Straighten bent fins, if any.

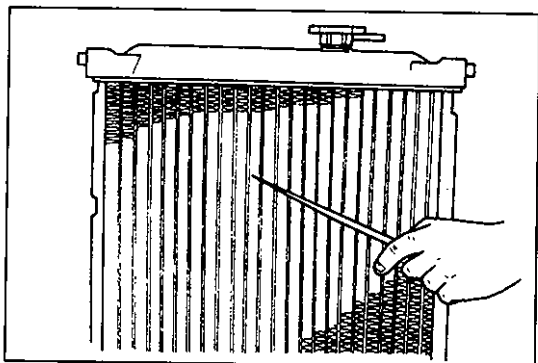**CLEAN**

Clean frontal area of radiator cores.

**INSTALLATION**

Reverse removal procedures.

**NOTE:**


- Refill cooling system with proper coolant referring to "COOLANT" and steps 8) to 10) of "COOLING SYSTEM FLUSH AND REFILL" in this section.
- Adjust cooling fan belt tension to specification. Refer to "COOLING FAN BELT TENSION CHECK AND ADJUSTMENT" in this section.
- With A/T (Automatic Transmission) equipped vehicle, check A/T fluid level, referring to SECTION 7B1.
- After installation, check each joint for leakage.

**WATER PUMP**


[G16 engine]

**REMOVAL**

- 1) Disconnect negative cable at battery.
- 2) Drain cooling system.
- 3) Remove timing belt and tensioner according to procedure described in item "TIMING BELT AND BELT TENSIONER" of SECTION 6A1.
- 4) Remove rubber seal between oil pump and water pump.
- 5) Remove oil level gauge guide with oil level gauge.

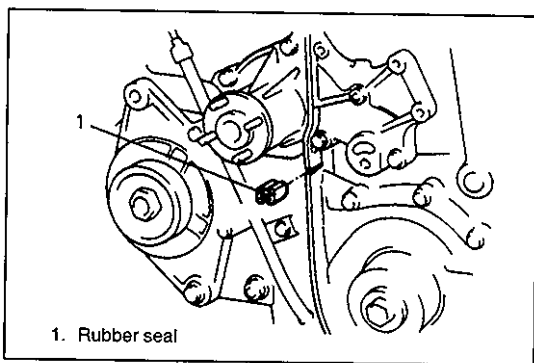


1. Rubber seal

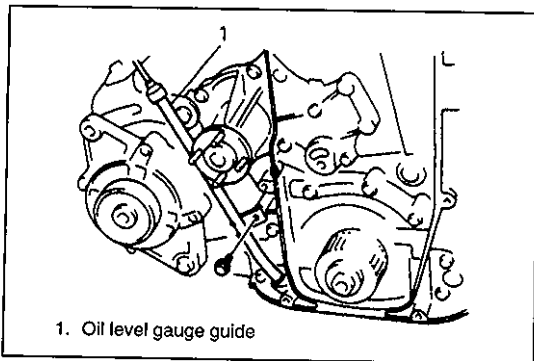


1. Oil level gauge guide



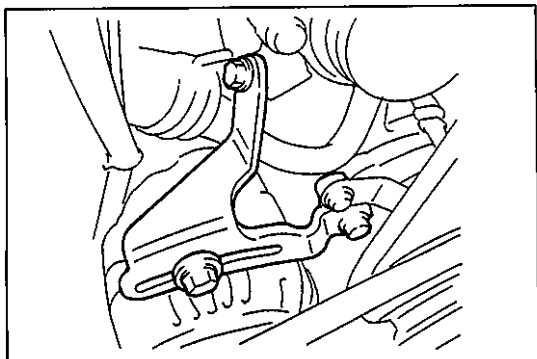

6) Remove generator adjusting arm.

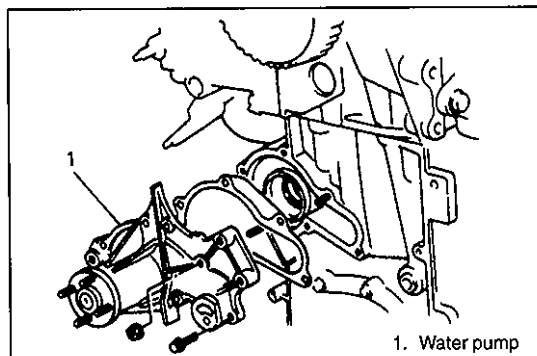


7) Remove water pump assembly.

**NOTE:**

**Do not disassemble water pump.**


**If any repair is required on pump, replace it as assembly.**

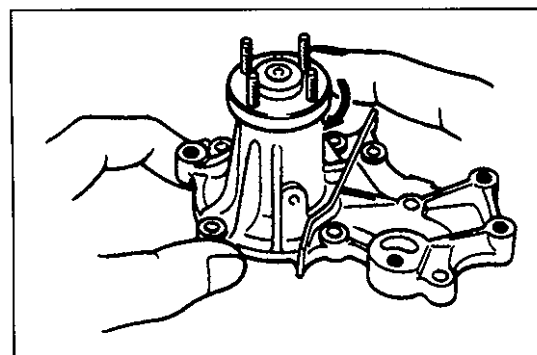

**INSPECTION**

Rotate water pump by hand to check for smooth operation.

If pump does not rotate smoothly or makes abnormal noise, replace it.

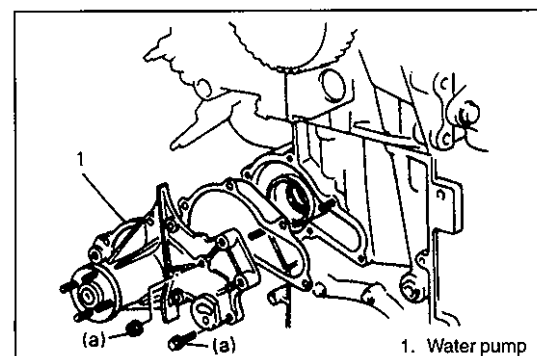


**INSTALLATION**

1) Install new pump gasket to cylinder block.

2) Install water pump to cylinder block.


**Tightening Torque**

**(a): 12 N·m (1.2 kg-m, 8.5 lb-ft)**

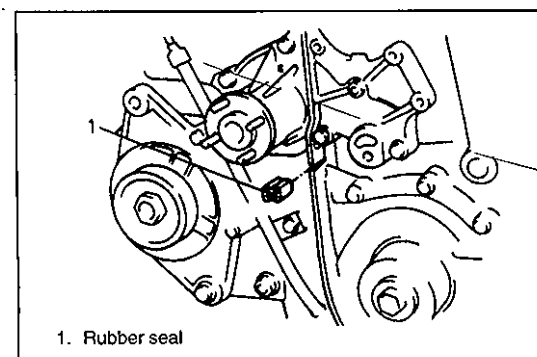


3) After installing water pump, install rubber seal between water pump and oil pump.

4) Install belt tensioner, timing belt and timing belt outside cover according to procedure described in item "TIMING BELT AND BELT TENSIONER" of SECTION 6A1.

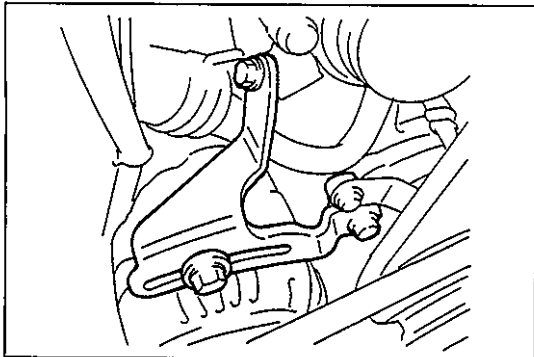

5) Install generator adjusting arm.

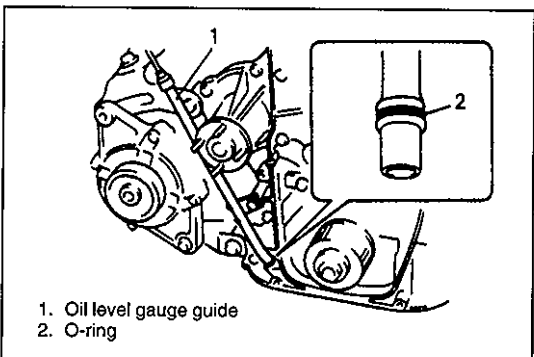


- 6) With engine oil applied to O-ring, install oil level gauge guide.  
7) Install crankshaft pulley, water pump pulley, pump drive belt, cooling fan/clutch and fan shroud.

#### **Tightening Torque**

**Cooling fan/clutch nuts: 11 N·m (1.1 kg-m, 8.0 lb-ft)**

**Crankshaft pulley No.2 bolts: 16 N·m (1.6 kg-m, 11.5 lb-ft)**


- 8) Adjust cooling fan belt tension as previously outlined.  
9) Connect negative cable at battery.  
10) Fill coolant.  
11) After installation, check each part for leakage.

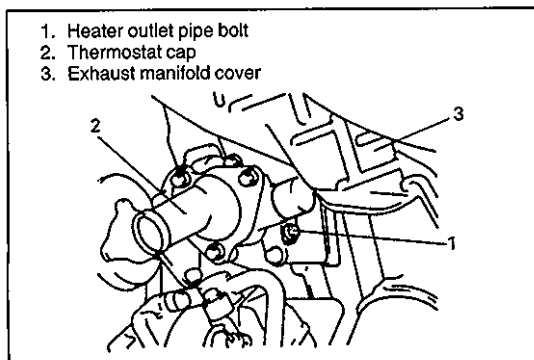**[J20 engine]****REMOVAL**

- 1) Disconnect negative cable at battery.
- 2) Drain coolant.
- 3) Remove radiator outlet hose from thermostat cap.
- 4) Remove heater outlet pipe bolt.
- 5) Remove generator belt by loosening tensioner pulley.  
Refer to Section 6H of this manual.
- 6) Remove water pump assembly by removing its 4 bolts.

**NOTE:**

**Do not lose dowel pin when removing water pump.**

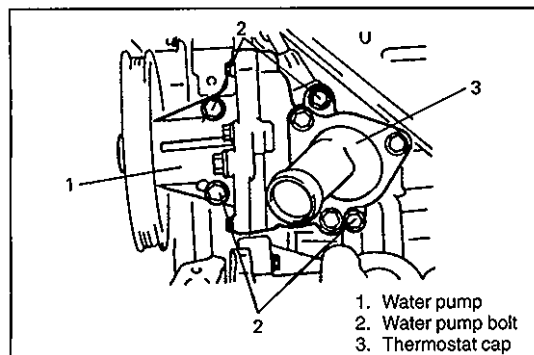**INSPECTION****NOTE:**



**Do not disassemble water pump.**

**If any repair is required on pump, replace it as assembly.**

- 1) Rotate water pump by hand to check for smooth operation. If pump does not rotate smoothly or makes abnormal noise, replace it.
- 2) Inspect water pump impeller for damage.  
Replace as necessary.

**NOTE:**


**Do not disassemble water pump to check the water pump impeller.**

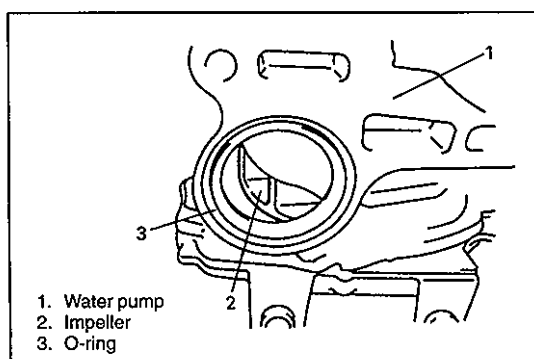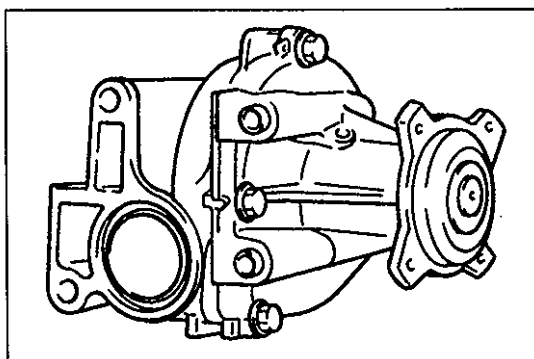
**INSTALLATION**

- 1) Install new O-ring to water pump.

**NOTE:**

**Do not forget to install dowel pins on water pump side before mounting water pump to engine block.**

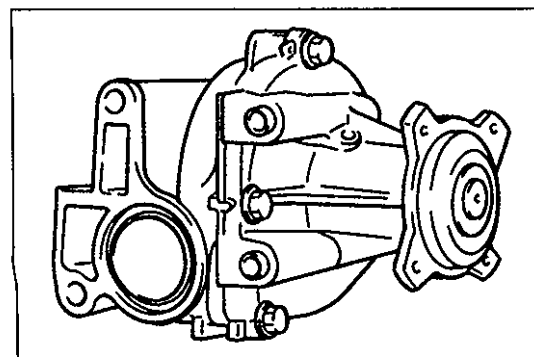

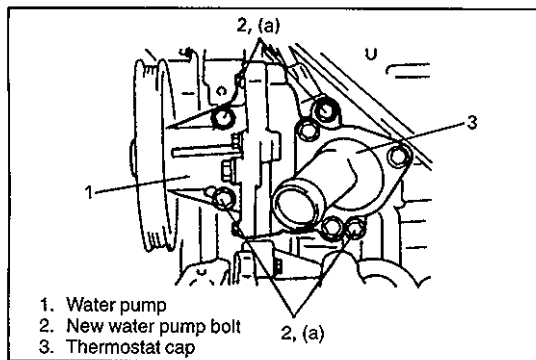


- 2) Install water pump by using new bolts to cylinder block and tighten to specified torque.

**NOTE:**

Use **NEW** bolts (total of 4) to install water pump to engine block. Failure to do so may result water leakage.

**Tightening torque**


(a): 27 N·m (2.7 kg-m, 19.5 lb-ft)

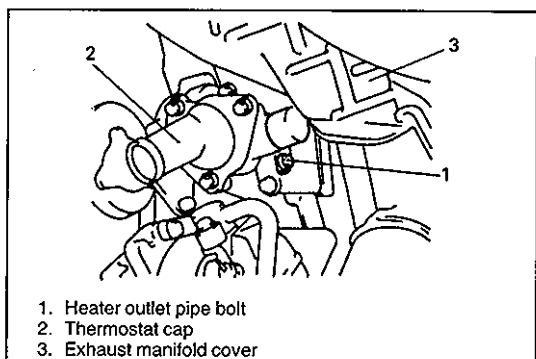


- 3) Install heater outlet pipe bolt.
- 4) Install generator belt. Refer to Section 6H of this manual.
- 5) Install radiator outlet hose to thermostat cap.
- 6) Fill coolant.
- 7) Connect negative cable at battery.

**[H25 engine]****REMOVAL**

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove timing chain cover.  
Refer to Section 6A2 for removal.

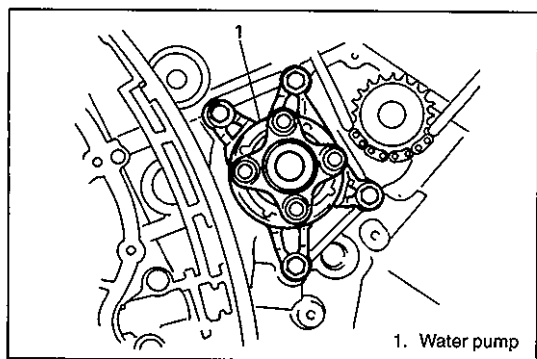


- 5) Remove water pump assembly.

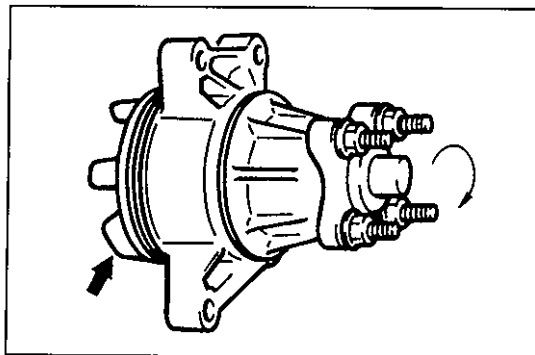**INSPECTION****NOTE:**

Do not disassemble water pump.

If any repair is required on pump, replace it as assembly.

- 1) Rotate water pump by hand to check for smooth operation. If pump does not rotate smoothly or makes abnormal noise, replace it.
- 2) Inspect water pump impeller for damage.  
Replace as necessary.

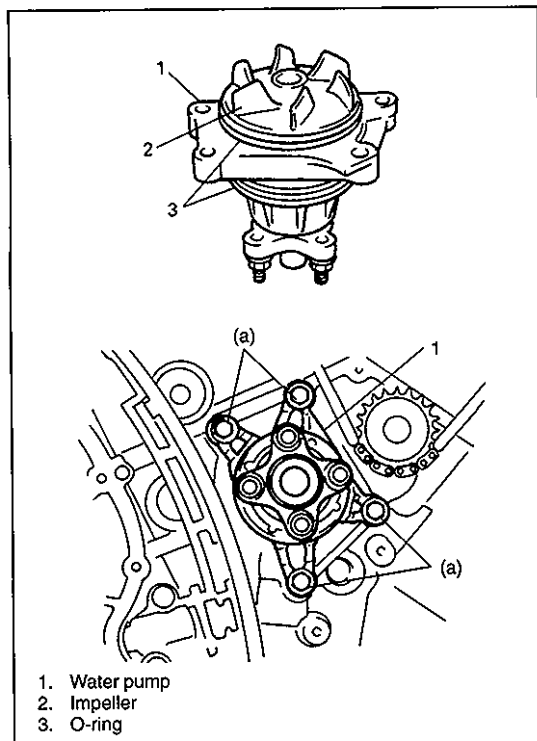

## INSTALLATION

- 1) Install new O-rings to water pump.
- 2) Install water pump to cylinder block.

### Tightening torque

(a): 27 N·m (2.7 kg-m, 19.5 lb-ft)

- 3) Install timing chain cover.  
Refer to SECTION 6A2 for installation.
- 4) Install oil pan, front differential housing, P/S system, cooling system, intake manifold with throttle body and other parts.
- 5) Refill cooling system with coolant, front differential with gear oil, P/S system with specified fluid and engine with engine oil.
- 6) Check wheel alignment referring to SECTION 3A.
- 7) Verify that there is no fuel leakage, water leakage and oil leakage at each connection.
- 8) Connect negative cable at battery.

## REQUIRED SERVICE MATERIAL

MATERIALS	USE
Ethylene glycol base coolant (Anti-freeze/Anti-corrosion coolant)	Additive to engine cooling system for improving cooling efficiency and for protection against rusting.

MATERIALS	RECOMMENDED SUZUKI PRODUCT	USE
Sealant	SUZUKI BOND NO. 1215 (99000-31110)	Water outlet pipe bolt

## TIGHTENING TORQUE SPECIFICATIONS

Fastening parts	Tightening torque		
	N·m	kg-m	lb-ft
Cooling fan pulley adjusting and pivot bolts (J20 engine)	45	4.5	32.5
Cooling fan/clutch nuts	(G16 and J20 engines)	11	1.1
	(H25 engine)	25	2.5
Water pump bolts	(G16 engine)	12	1.2
	(J20 and H25 engines)	27	2.7
Crankshaft pulley No.2 bolts (G16 engine)	16	1.6	11.5

## SECTION 6C

# ENGINE FUEL

### CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6C-1
Fuel System .....	6C-1
<b>DIAGNOSIS</b>	
Diagnosis Chart .....	Refer to SECTION 6
<b>ON-VEHICLE SERVICE</b> .....	6C-2
Precautions .....	Refer to SECTION 0A and 6
Fuel Pump .....	6C-3


Fuel Filter .....	6C-3
Fuel Lines .....	6C-4
Fuel Filler Cap .....	6C-5
Fuel Tank .....	6C-5
<b>TIGHTENING TORQUE SPECIFICATION</b> .....	6C-8

### GENERAL DESCRIPTION

#### FUEL SYSTEM

The main components of the fuel system are fuel tank, fuel pump, fuel filter and fuel level gauge and it includes three lines, fuel feed line, fuel return line and fuel vapor line.

For the details of fuel flow and fuel vapor flow, refer to SECTION 6E1 (G16 and J20 engines) or 6E2 (H25 engine).

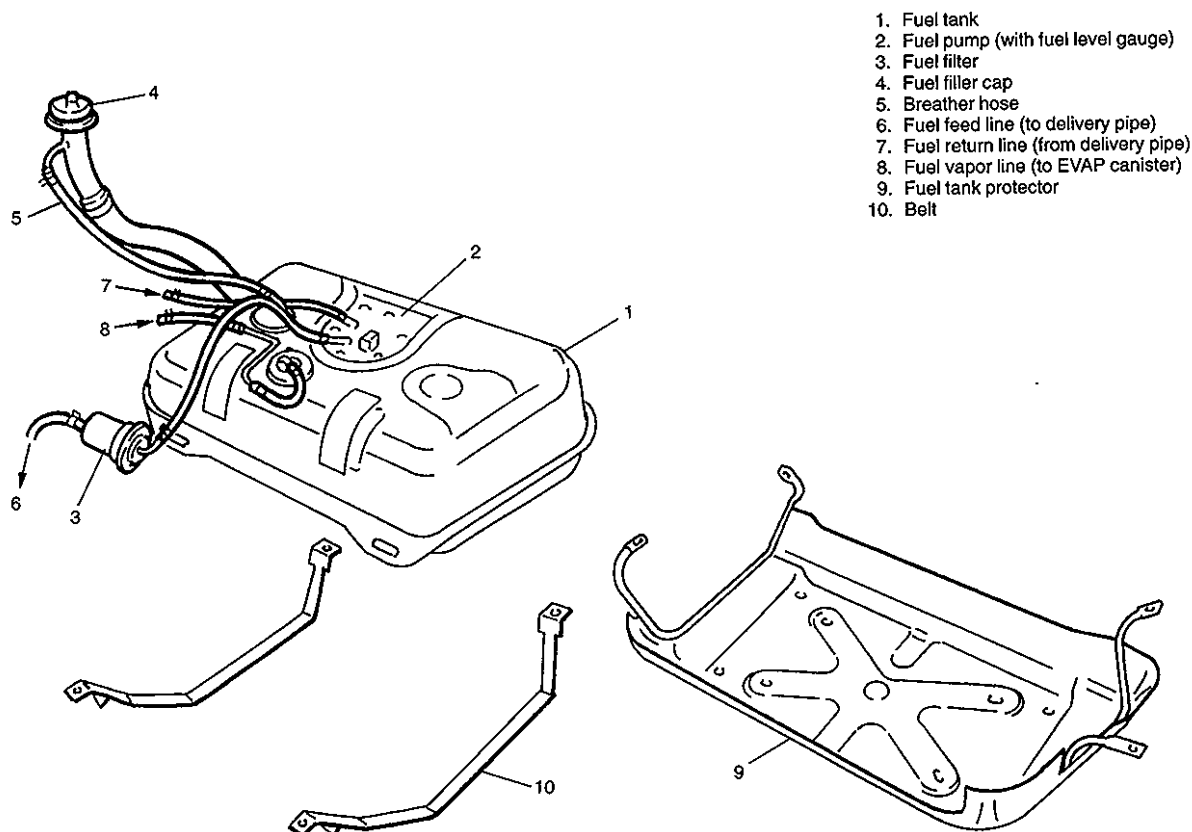

## DIAGNOSIS

### DIAGNOSIS CHART

Refer to SECTION 6.

## ON-VEHICLE SERVICE

### PRECAUTIONS

#### WARNING:


Before attempting service of any type on fuel system, following cautions should be always observed.

- Disconnect negative cable at battery.
- **DO NOT** smoke, and place "NO SMOKING" signs near work area.
- Be sure to have CO<sub>2</sub> fire extinguisher handy.
- Be sure to perform work in a well-ventilated area and away from any open flames (such as gas hot heater).
- Wear safety glasses.
- To release fuel vapor pressure in fuel tank, remove fuel filler cap from fuel filler neck and then reinstall it.
- As fuel feed line is still under high fuel pressure even after engine was stopped, loosening or disconnecting fuel feed line directly may cause dangerous spout of fuel to occur where loosened or disconnected. Before loosening or disconnecting fuel feed line, make sure to release fuel pressure according to procedure described in SECTION 6.
- A small amount of fuel may be released after the fuel line is disconnected.


In order to reduce the chance of personal injury, cover the fitting to be disconnected with a shop cloth. Put that cloth in an approved container when disconnection is completed.

- Note that fuel hose connection varies with each type of pipe. Be sure to connect and clamp each hose correctly referring to the following.
- When performing any work that requires to lift up vehicle, check fuel hose clamp for rust.
- For other information, refer to Precautions in SECTION 0A and SECTION 6 of this manual.


With short pipe, fit hose as far as it reaches pipe joint as shown.

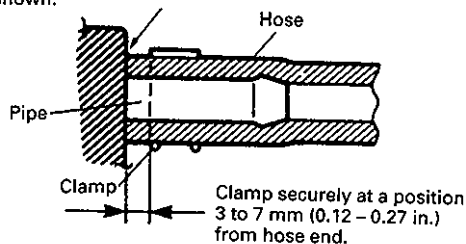


With following type pipe, fit hose as far as its peripheral projection as shown.

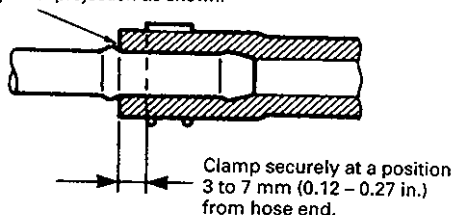


With bent pipe, fit hose as far its bent part as shown or till pipe is about 20 to 30 mm (0.79 - 1.18 in.) into the hose.

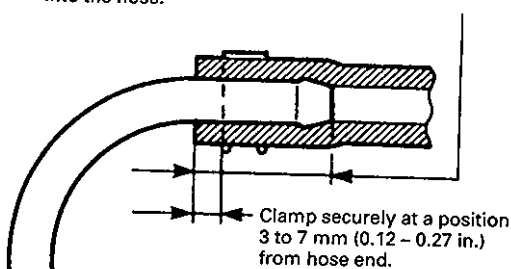

With straight pipe, fit hose till pipe is about 20 to 30 mm (0.79 - 1.18 in.) in the hose.

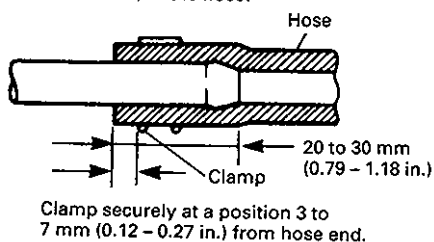

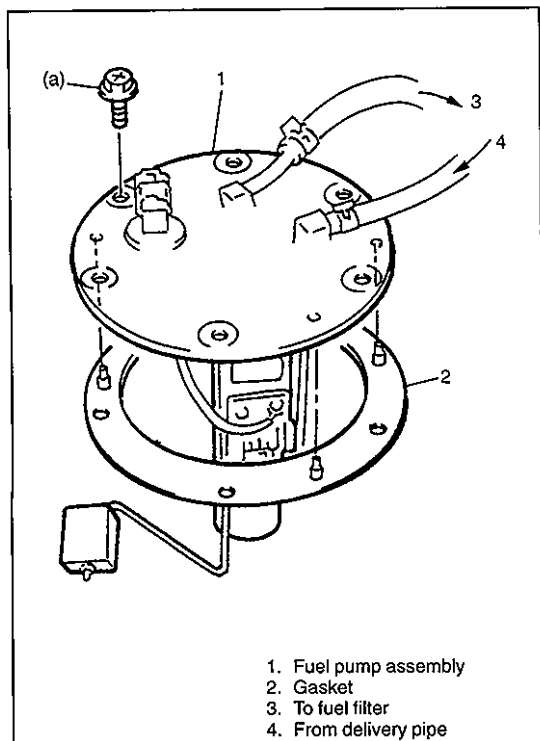

## FUEL PUMP

### REMOVAL

- 1) Remove fuel tank. Refer to "FUEL TANK" in this section.
- 2) Remove fuel pump assembly from fuel tank.

### INSPECTION

Check fuel pump filter for evidence of dirt and contamination. If present, clean and check for presence of dirt in fuel tank.

### INSTALLATION

Reverse removal procedure for installation noting the following.

- Use new gasket.
- Tighten fuel pump bolts to specified torque.

### Tightening Torque

(a): 4.9 N·m (0.49 kg-m, 3.5 lb-ft)

## FUEL FILTER

### REMOVAL

- 1) Relieve fuel pressure in fuel feed line referring to SECTION 6.

#### CAUTION:


**This work must not be done when engine is hot. If done so, it may cause adverse effect to catalyst.**

- 2) Disconnect negative cable at battery.
- 3) Hoist vehicle.
- 4) Disconnect inlet and outlet hoses from fuel filter.


#### WARNING:

**A small amount of fuel may be released after fuel line is disconnected. In order to reduce the chance of personal injury, cover the fitting to be disconnected with a shop cloth. Be sure to put that cloth in an approved container when disconnection is completed.**

- 5) Remove fuel filter from chassis frame.

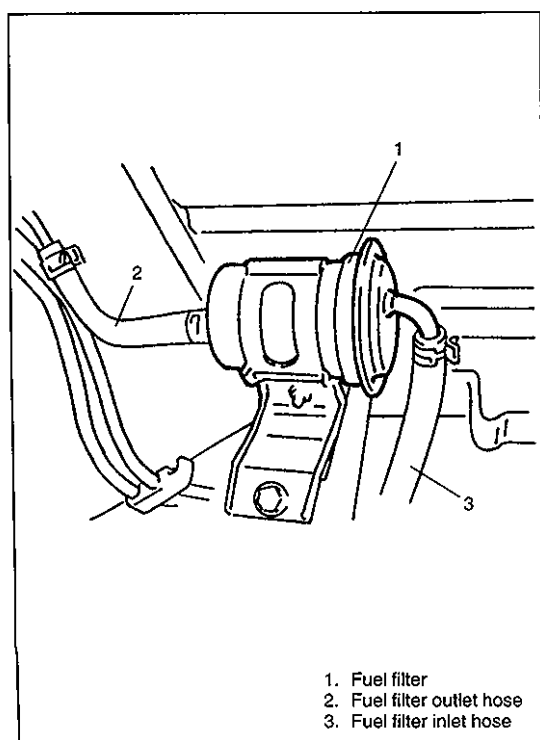




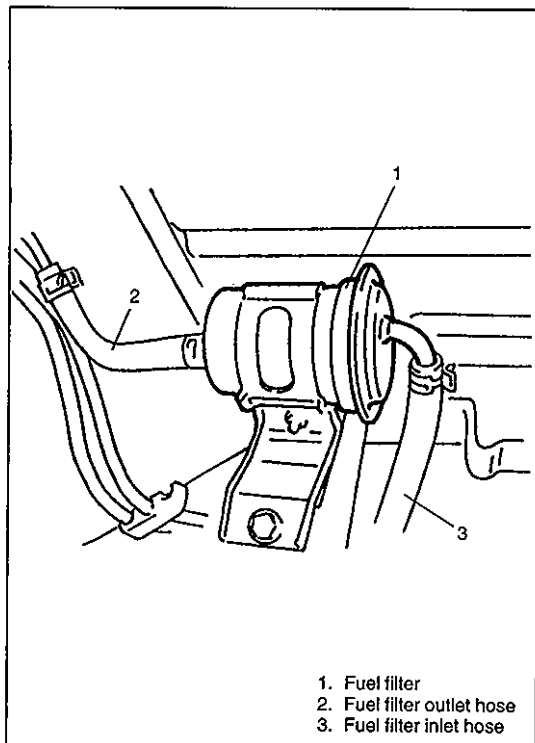

## INSTALLATION

Reverse removal procedure noting the following.


Upon completion of installation, verify that there is no fuel leakage at each connection according to procedure described in SECTION 6.

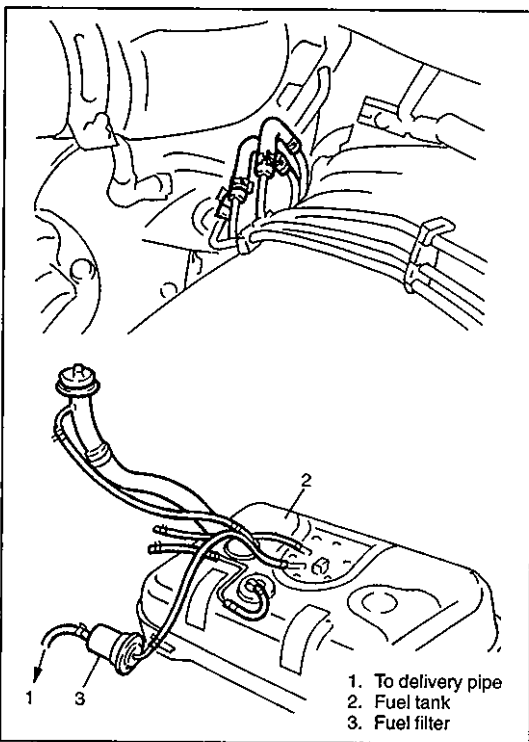

## FUEL LINES


Due to the fact that fuel feed line is under high pressure, this system requires special consideration for service.

The feed pipe uses screw couplings and hose clamps.

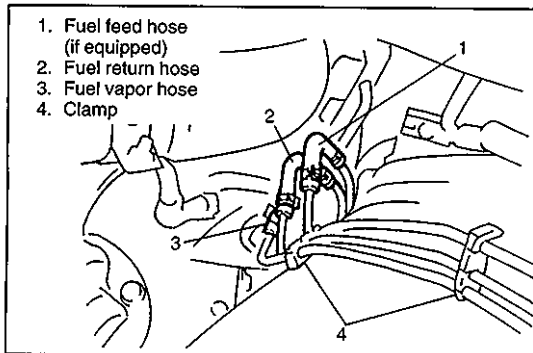

## INSPECTION

Visually inspect fuel lines for evidence of fuel leakage, hose cracking and deterioration, or damage. Make sure all clamps are secure. Replace parts as needed.

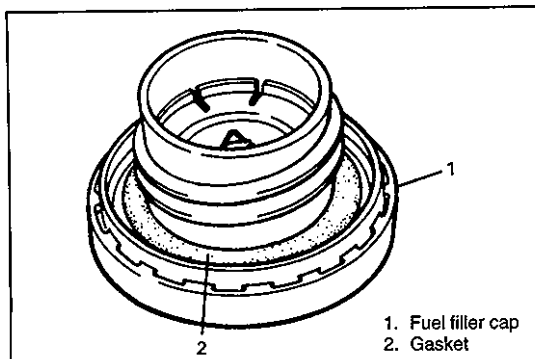

## FUEL FILLER CAP

Remove cap, and check gasket for even filler neck imprint, and deterioration or any damage.

If gasket is in malcondition, replace cap.

### NOTE:

If cap requires replacement, only a cap with the same features should be used. Failure to use correct cap can result in serious malfunction of the system.

## FUEL TANK


### REMOVAL

- 1) Relieve fuel pressure in fuel feed line referring to SECTION 6.

### CAUTION:

This work must not be done when engine is hot. If done so, it may cause adverse effect to catalyst.


- 2) Disconnect negative cable at battery.

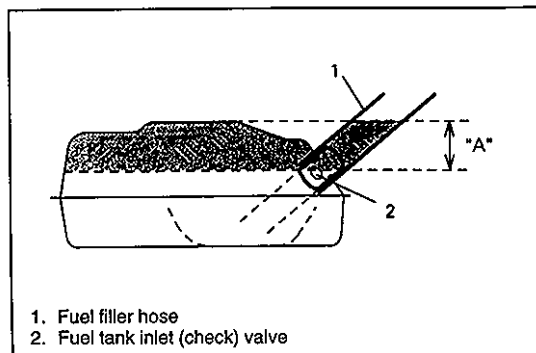

- 3) Insert hose of a hand operated pump into fuel filler hose and drain fuel in space "A" in the figure (drain fuel through it till fuel stops).

### CAUTION:

Do not force hose of a hand operated pump into fuel tank. Doing so can damage inlet valve.

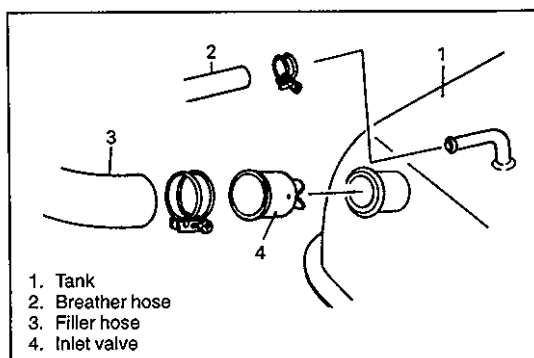


- 4) Remove fuel tank filler hose protector. Disconnect filler hose from fuel tank and breather hose from fuel filler neck.
- 5) Remove fuel tank inlet valve. Use care not to damage inlet valve when removing.


- 6) Drain fuel tank by pumping fuel out through fuel tank filler. Use hand operated pump device to drain fuel tank.

### CAUTION:

Never drain or store fuel in an open container due to possibility of fire or explosion.

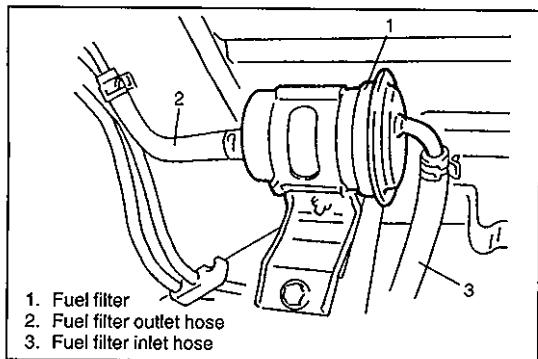


7) Disconnect fuel filter inlet hose from filter.

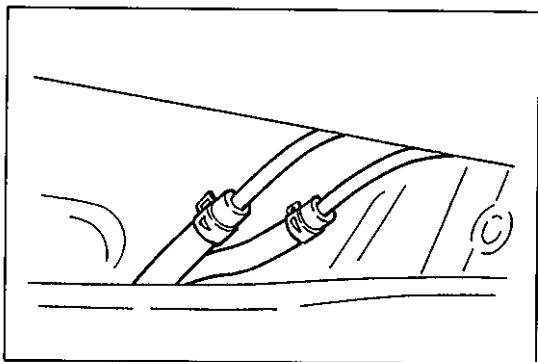

8) Disconnect fuel vapor hose and return hose from pipes.

9) Remove fuel tank protector (if equipped) from vehicle.

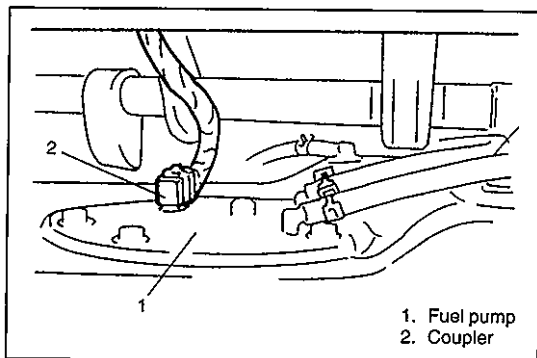

10) Lower fuel tank gradually while holding it horizontally and pull out coupler at fuel pump.

### INSPECTION

After removing fuel tank, check hoses and pipes connected to fuel tank for leaks, loose connections, deterioration or damage. Also check fuel pump and level gauge gaskets for leaks, visually inspect fuel tank for leaks and damage.

Replace any damaged or malconditioned parts.


## FUEL TANK PURGING PROCEDURE

### CAUTION:

This purging procedure will NOT remove all fuel vapor. Do not attempt any repair on tank where heat or flame is required, as an explosion resulting in personal injury could occur.


The following procedure is used for purging the fuel tank.

- 1) After removing fuel tank, remove all hoses and fuel pump assembly from fuel tank.
- 2) Drain all remaining fuel from tank.
- 3) Move tank to flushing area.
- 4) Fill tank with warm water or tap water, and agitate vigorously and drain. Repeat this washing until inside of tank is clean.  
Replace tank if its inside is rusty.
- 5) Completely flush out remaining water after washing.

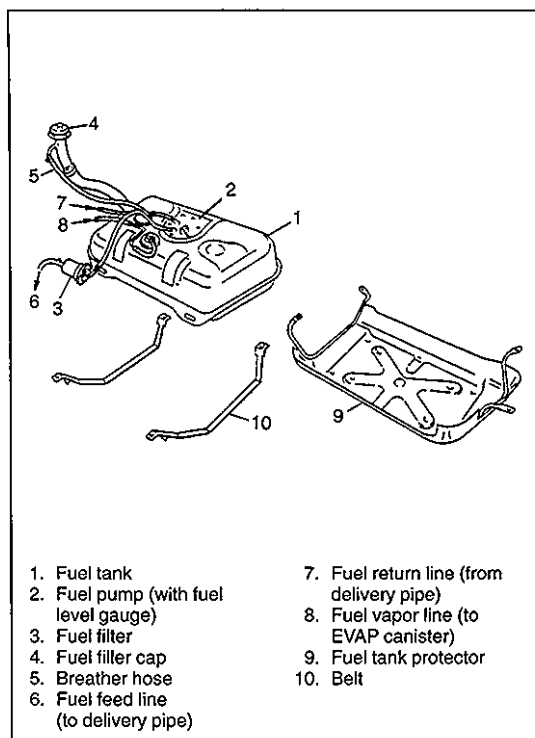


## INSTALLATION

- 1) Install fuel pump assembly to fuel tank. Refer to "FUEL PUMP" in this section.
- 2) Connect fuel hoses to fuel tank, fuel pump assembly.  
After connecting, clamp hoses securely, Refer to p. 6C-2.
- 3) Install inlet valve to fuel tank.  
If deformed or damaged in any other way, replace with a new one.
- 4) Install fuel tank by using fuel tank belts and then install protector (if equipped) to vehicle.
- 5) Connect fuel filler hose to fuel tank and breather hose to fuel filler neck. Clamp them securely.
- 6) Install fuel filler hose protector.

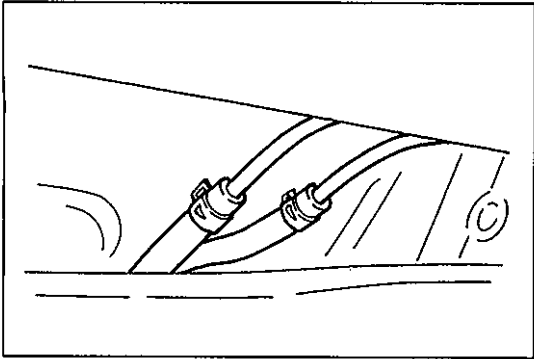

- 7) Connect fuel vapor hose and return hose to fuel pipe.  
Clamp them securely.

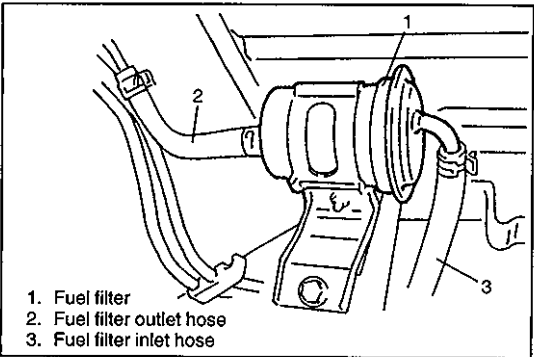

- 8) Connect fuel filter inlet hose to fuel filter.

- 9) Connect fuel pump assembly coupler.  
10) Connect negative cable to battery.  
11) Upon completion of installation, check fuel system for leakage.

TIGHTENING TORQUE SPECIFICATION

Fastening parts	Tightening torque		
	N·m	kg-m	lb-ft
Fuel pump bolt	4.9	0.49	3.5

## SECTION 6E1

# ENGINE AND EMISSION CONTROL SYSTEM (SEQUENTIAL MULTIPOINT FUEL INJECTION FOR G16/J20 ENGINE)

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System:

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components and Wiring Location View" under "General Description" in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and "Service Precautions" under "On-Vehicle Service" in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the "LOCK" position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

**NOTE:**

Whether following systems (parts) are used in the particular vehicle or not depends on specifications. Be sure to bear this in mind when performing service work.

- EGR valve
- Heated oxygen sensor or CO adjusting resistor
- Three way catalytic converter

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6E1- 3	Code No.13 Heated Oxygen	
<b>AIR INTAKE SYSTEM</b> .....	6E1- 8	Sensor Circuit .....	6E1-34
<b>FUEL DELIVERY SYSTEM</b> .....	6E1- 9	Code No.14 ECT Sensor Circuit .....	6E1-36
<b>ELECTRONIC CONTROL SYSTEM</b> .....	6E1-11	Code No.15 ECT Sensor Circuit .....	6E1-38
<b>DIAGNOSIS</b> .....	6E1-23	Code No.21 TP Sensor Circuit .....	6E1-39
On-Board Diagnostic System .....	6E1-23	Code No.22 TP Sensor Circuit .....	6E1-40
Precautions in Diagnosing Troubles .....	6E1-23	Code No.23 IAT Sensor Circuit .....	6E1-41
Malfunction Indicator Lamp (MIL) Check ..	6E1-24	Code No.25 IAT Sensor Circuit .....	6E1-43
DTC Check .....	6E1-24	Code No.24 VSS (Vehicle Speed Sensor)	
DTC Clearance .....	6E1-26	Circuit .....	6E1-44
DTC Table .....	6E1-27	Code No.33 MAF Sensor Circuit .....	6E1-46
A-1 MIL Circuit Check		Code No.34 MAF Sensor Circuit .....	6E1-47
(MIL does not light) .....	6E1-29	Code No.42 CMP Sensor Circuit (G16) ..	6E1-48
A-2 MIL Circuit Check (MIL flashes) .....	6E1-30	Code No.42 CMP Sensor Circuit (J20) ..	6E1-50
A-3 MIL Circuit Check		Code No.51 EGR Valve (if equipped) ....	6E1-52
(MIL remains ON) .....	6E1-31	DTC Confirmation Procedure .....	6E1-53
A-4 ECM (PCM) Power and Ground		B-1 Fuel Pump Circuit Check .....	6E1-54
Circuit Check .....	6E1-32		

B-2 Fuel Injector Circuit Check .....	6E1-55	Fuel Injector (On-vehicle inspection, Removal, Inspection and Installation)	6E1- 85
B-3 Fuel Pressure Check .....	6E1-56	<b>ELECTRONIC CONTROL SYSTEM</b> ....	6E1- 89
B-4 Idle Air Control System Check .....	6E1-58	ECM/PCM (Removal and Installation) .	6E1- 89
B-5 EVAP Control System Check .....	6E1-60	MAF Sensor (Inspection, Removal and Installation) .....	6E1- 90
B-6 EGR System Check (if equipped) ...	6E1-61	IAT Sensor .....	6E1- 92
B-7 A/C Signal Circuit Check .....	6E1-62	TP Sensor (Inspection, Adjustment, Removal and Installation) .....	6E1- 93
B-8 A/C Condenser Fan Motor Relay Control System Check .....	6E1-63	ECT Sensor (Removal, Inspection and Installation) .....	6E1- 94
Inspection of PCM (ECM) and Its Circuit .	6E1-65	HO2S (Removal and Installation) .....	6E1- 95
<b>ON-VEHICLE SERVICE</b> .....	6E1-74	Vehicle Speed Sensor (Inspection) ....	6E1- 96
General .....	6E1-75	Camshaft Position Sensor .....	6E1- 97
Accelerator Cable Adjustment .....	6E1-75	Main Relay (Inspection) .....	6E1- 98
A/T Throttle Cable Adjustment (4 A/T)...	6E1-75	Fuel Pump Relay (Inspection) .....	6E1- 99
Idle Speed Inspection .....	6E1-76	Fuel Cut Operation (Inspection) .....	6E1- 99
Idle Mixture Inspection/Adjustment .....	6E1-78	<b>EMISSION CONTROL SYSTEM</b> .....	6E1-100
<b>AIR INTAKE SYSTEM</b> .....	6E1-79	EGR System (if equipped) .....	6E1-100
Throttle Body (On-vehicle inspection, Removal, Cleaning and Installation) ....	6E1-79	Evaporative Emission Control System .	6E1-102
Idle Air Control Valve (Removal and Installation) .....	6E1-81	PCV System .....	6E1-104
<b>FUEL DELIVERY SYSTEM</b> .....	6E1-82	<b>TIGHTENING TORQUE</b>	
Fuel Pressure Inspection .....	6E1-82	<b>SPECIFICATIONS</b> .....	6E1-105
Fuel Pump (On-vehicle inspection, Removal, Inspection and Installation) ..	6E1-83	<b>SPECIAL TOOLS</b> .....	6E1-105
Fuel Pressure Regulator (Removal and Installation) .....	6E1-84		

## GENERAL DESCRIPTION

The engine and emission control system has 4 major sub-systems: air intake system, fuel delivery system, electronic control system and emission control system.

Air intake system includes air cleaner, mass air flow sensor, throttle body, idle air control valve and intake manifold.


Fuel delivery system includes fuel pump, delivery pipe, fuel pressure regulator, fuel injectors, etc.

Electronic control system includes ECM (PCM), various sensors and controlled devices.

Emission control system includes EGR, EVAP and PCV systems.




## G16 ENGINE

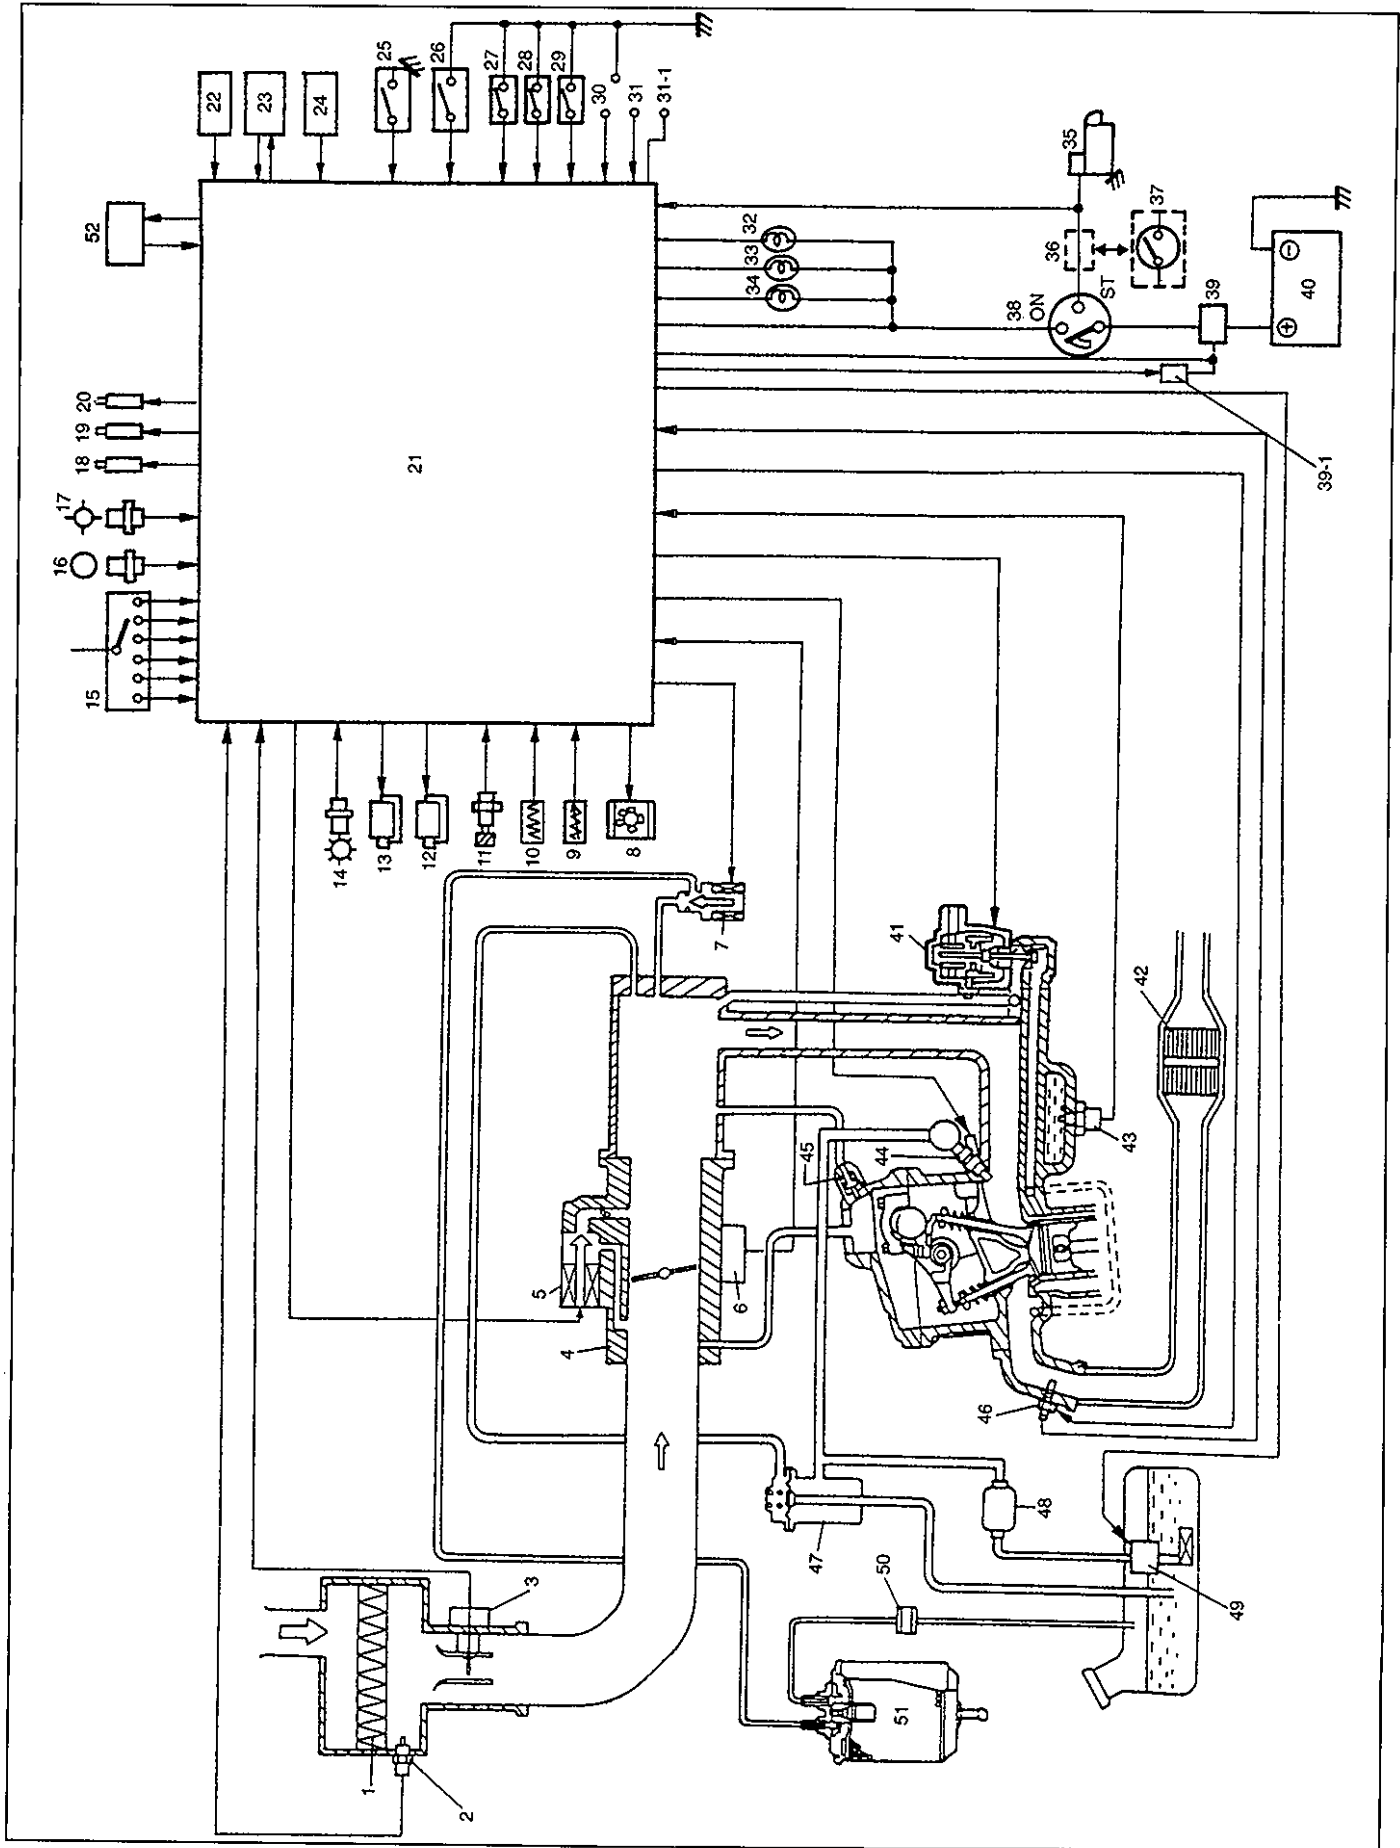

1. Air cleaner
2. Intake air temp. sensor
3. Mass air flow sensor
4. Throttle body
5. Idle air control valve
6. Throttle position sensor
7. EVAP canister purge valve
8. A/C condenser fan motor through relay (if equipped)
9. CO adjusting resistor (if equipped)
10. Ignition timing adjusting resistor
11. Vehicle speed sensor
12. Ignition coil assembly for No.1 and No.4 spark plugs
13. Ignition coil assembly for No.2 and No.3 spark plugs
14. Camshaft position sensor
15. Transmission range switch (sensor) (A/T)
16. A/T input speed sensor
17. A/T vehicle (output) speed sensor
18. Shift solenoid valve A (A/T)
19. Shift solenoid valve B (A/T)
20. TCC solenoid valve (A/T)
21. ECM/PCM (Engine control module/ Powertrain control module)
22. ABS control module (if equipped)
23. A/C amplifier (if equipped)
24. Electric load (s)
  - Heater blower motor (if equipped)
  - Rear defogger (if equipped)
  - Lighting
25. Power steering pressure switch (if equipped)
26. Stop lamp switch (A/T)
27. Power/Normal change switch (A/T)
28. O/D cut switch (A/T)
29. 4WD low switch (A/T)
30. Diag. switch terminal
31. Test switch terminal
- 31-1. Duty output terminal
32. Malfunction indicator lamp ("CHECK ENGINE" lamp)
33. "O/D OFF" lamp
34. "POWER" lamp
35. Starter
36. M/T
37. Park/Neutral position switch in TR switch (A/T)
38. Main switch
39. Main fuse
- 39-1. Main relay
40. Battery
41. EGR valve (if equipped)
42. Three way catalytic converter (if equipped)
43. Engine coolant temp. sensor
44. Fuel injectors
45. PCV valve
46. Heated oxygen sensor (if equipped)
47. Fuel pressure regulator
48. Fuel filter
49. Fuel pump
50. Tank pressure control valve
51. EVAP canister
52. Data link connector/Immobilizer control module (if equipped)

## J20 ENGINE

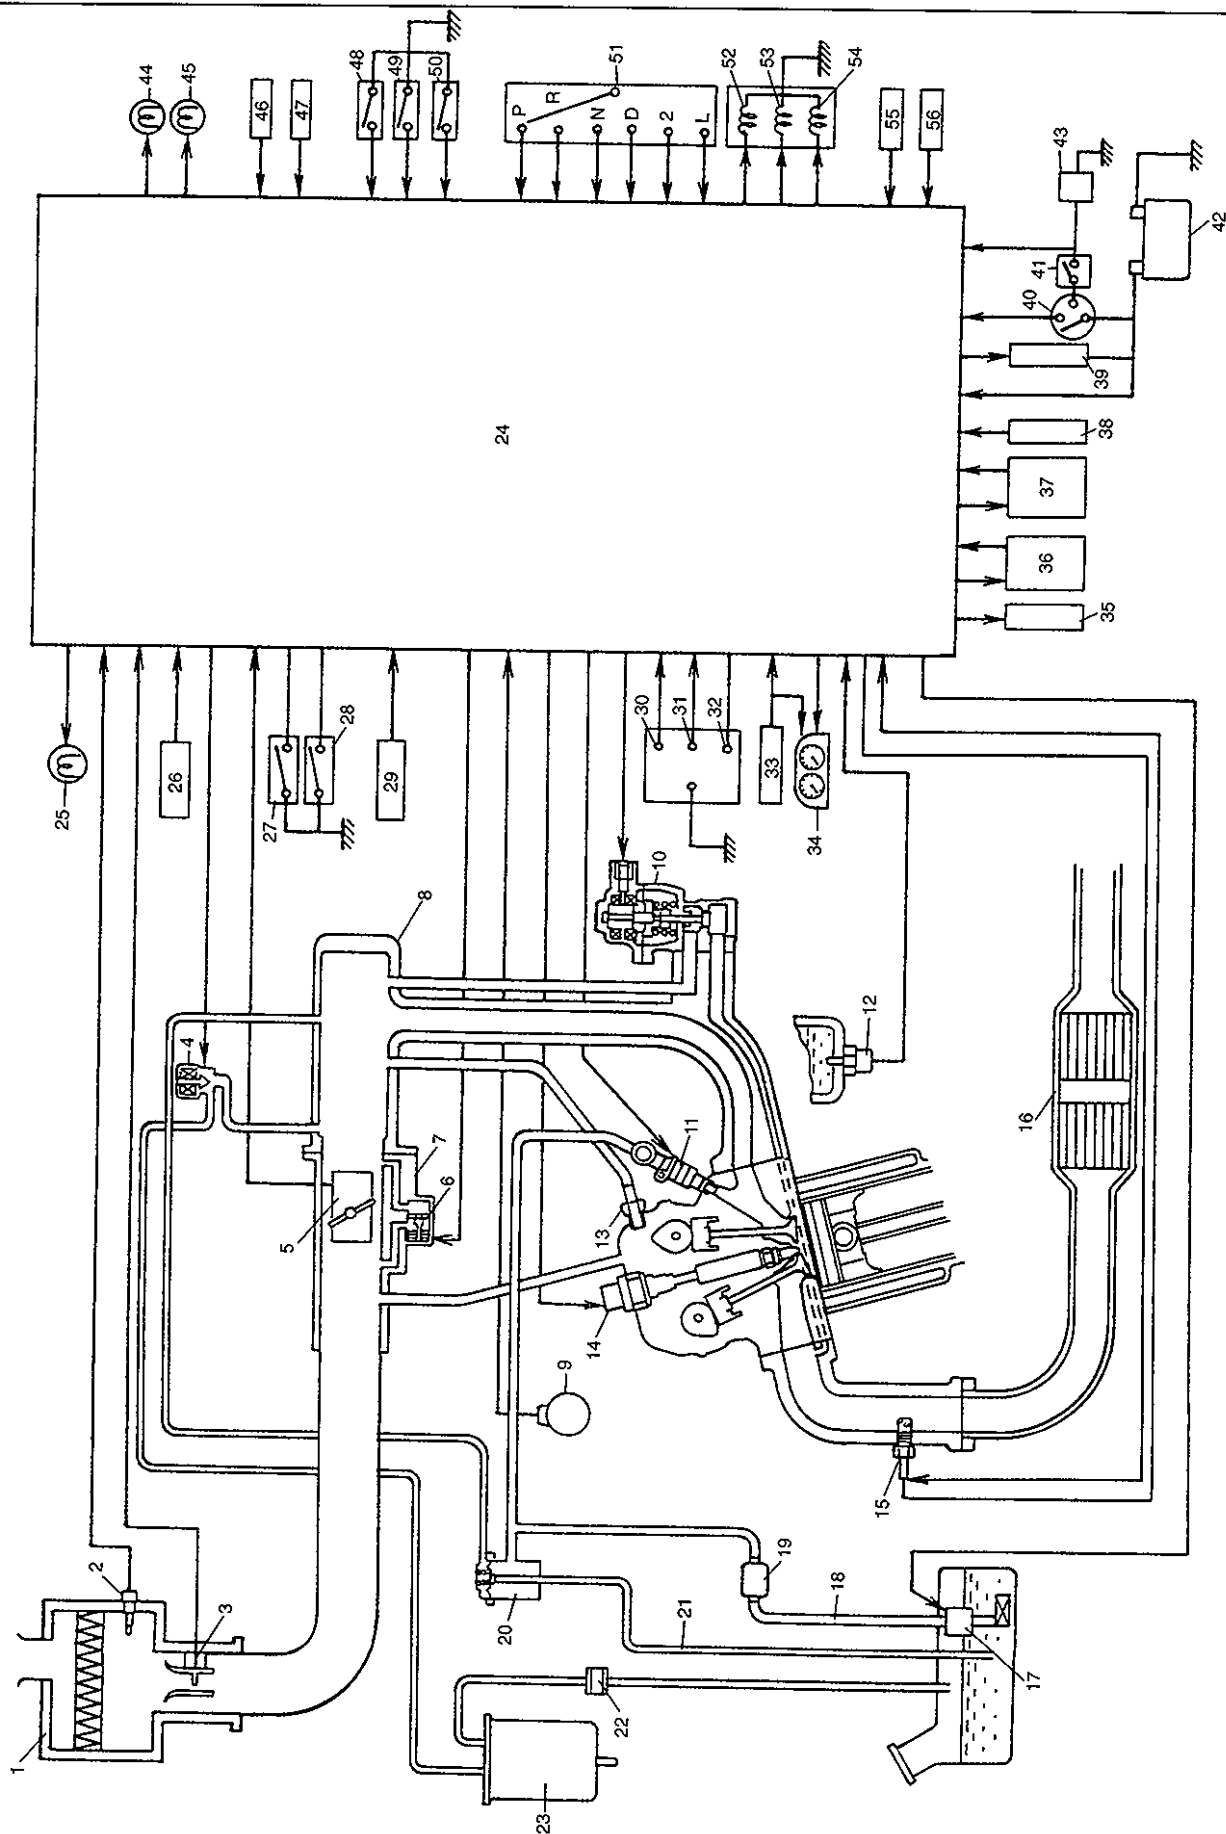

1. Air cleaner		
2. Intake air temp. sensor		
3. Mass air flow sensor		
4. EVAP canister purge valve		
5. Throttle position sensor		
6. Idle air control valve		
7. Throttle body		
8. Intake manifold		
9. Camshaft position sensor		
10. EGR valve (if equipped)		
11. Fuel injector		
12. Engine coolant temp. sensor		
13. PCV valve		
14. Ignition coil assembly		
15. Heated oxygen sensor (if equipped)		
16. Three way catalytic converter (if equipped)		
17. Fuel pump		
18. Fuel feed line		
19. Fuel filter		
20. Fuel pressure regulator		
21. Fuel return line		
22. Tank pressure control valve		
23. EVAP canister		
24. ECM/PCM (Engine control module/Powertrain control module)		
25. Malfunction indicator lamp ("CHECK ENGINE" light)		
26. Electric loads		
– Rear defogger (if equipped)		
– Lighting (M/T)		
27. Power steering pressure switch (if equipped)		
28. Heater blower fan switch		
29. CO adjusting resistor (if equipped)		
30. Diag. Switch terminal		
31. Test switch terminal		
32. Duty output terminal		
33. Vehicle speed sensor		
34. Combination meter		
35. A/C condenser fan relay (if equipped)		
36. A/C amplifier (if equipped)		
37. Data link connector/Immobilizer control module (if equipped)		
38. ABS control module (if equipped)		
39. Main relay		
40. Main switch		
41. Park/Neutral position switch in TR switch		(A/T)
42. Battery		
43. Starter magnetic switch		
44. "O/D OFF" lamp		(A/T)
45. "POWER" lamp		(A/T)
46. Lighting switch		(A/T)
47. Stop lamp switch		(A/T)
48. O/D cut switch		(A/T)
49. POWER/NORMAL change switch		(A/T)
50. 4WD low switch		(A/T)
51. Transmission range switch		(A/T)
52. Solenoid valve A		(A/T)
53. Solenoid valve B		(A/T)
54. TCC solenoid valve		(A/T)
55. A/T input speed sensor		(A/T)
56. A/T vehicle (output) speed sensor		(A/T)


## AIR INTAKE SYSTEM

The main components of the air intake system are air cleaner, mass air flow sensor, air cleaner outlet hose, throttle body, idle air control valve and intake manifold.


The air (by the amount corresponding to the throttle valve opening and engine speed) is filtered by the air cleaner, passes through the throttle body, is distributed by the intake manifold and finally drawn into each combustion chamber.

When the idle air control valve is opened according to the signal from PCM (ECM), the air bypasses the throttle valve through bypass passage and is finally drawn into the intake manifold.

### G16 ENGINE

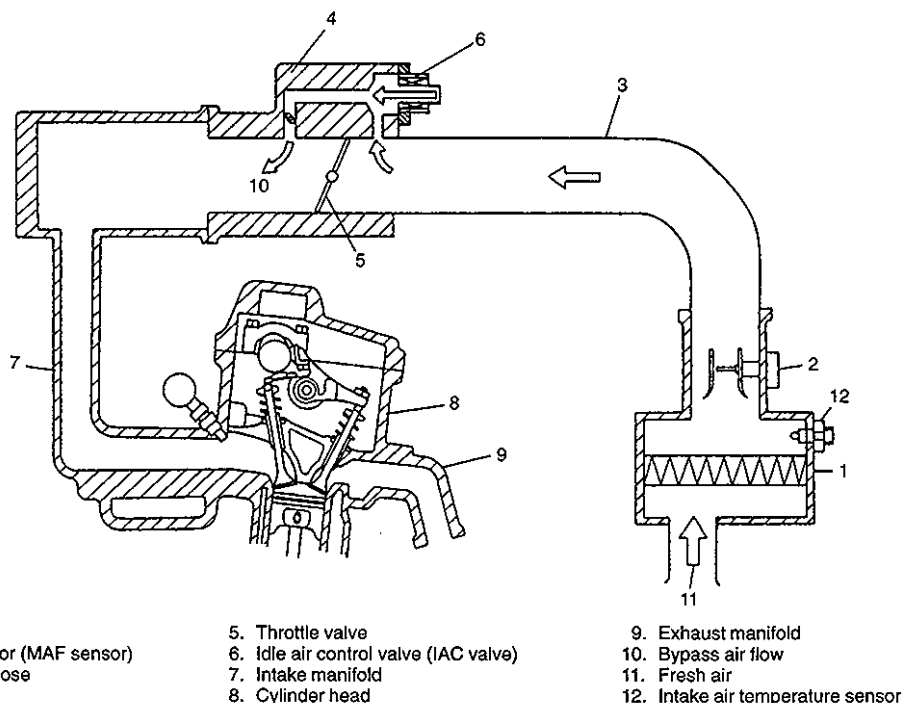

### J20 ENGINE

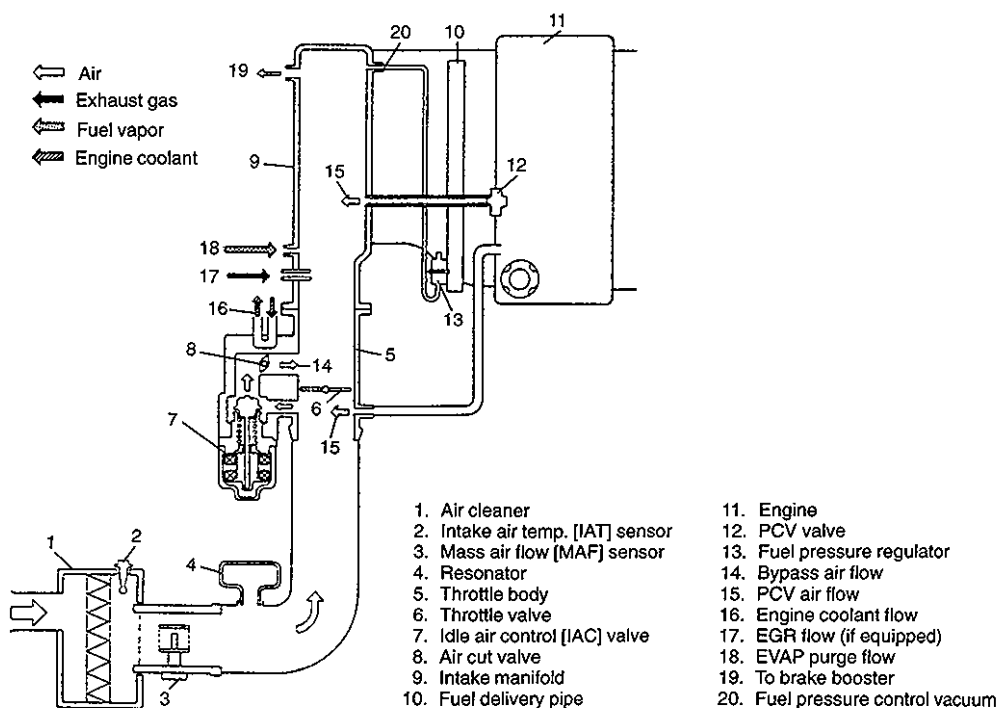

## FUEL DELIVERY SYSTEM

The fuel delivery system consists of the fuel tank, fuel pump, fuel filter, fuel pressure regulator, delivery pipe and fuel injectors.


The fuel in the fuel tank is pumped up by the fuel pump, filtered by the fuel filter and fed under pressure to each injector through the delivery pipe.

As the fuel pressure applied to the injector (the fuel pressure in the fuel feed line) is always kept a certain


amount higher than the pressure in the intake manifold by the fuel pressure regulator, the fuel is injected into the intake port of the cylinder head when the injector opens according to the injection signal from PCM (ECM).

The fuel relieved by the fuel pressure regulator returns through the fuel return line to the fuel tank.

**G16 ENGINE**

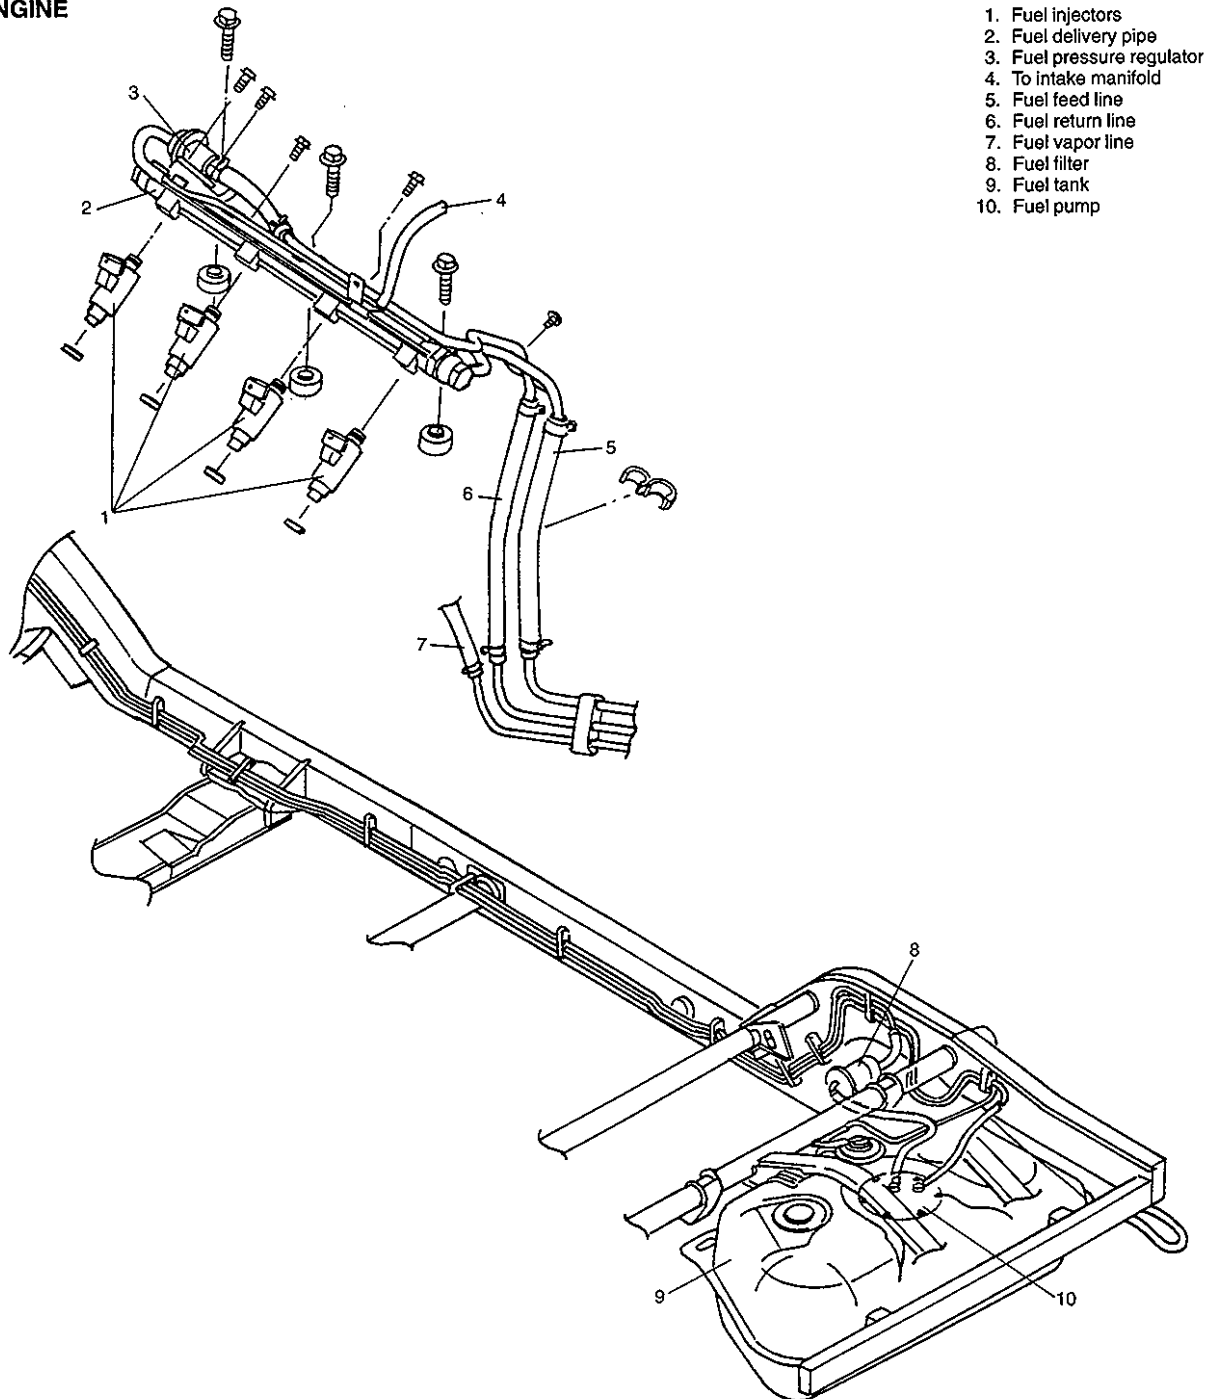

## J20 ENGINE

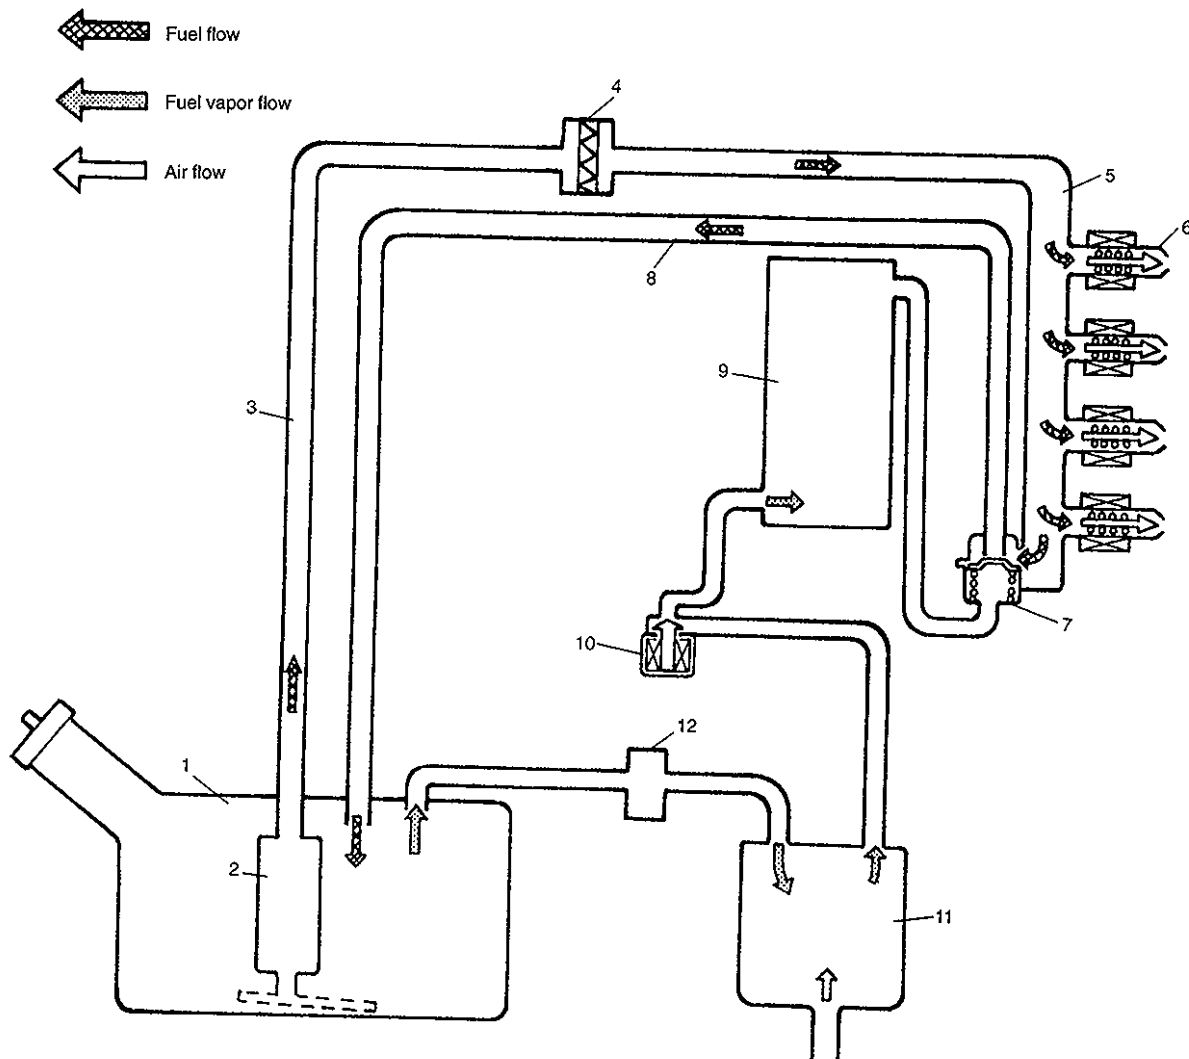

- |                       |                               |                                 |
|-----------------------|-------------------------------|---------------------------------|
| 1. Fuel tank          | 6. Fuel injectors             | 11. EVAP canister               |
| 2. Fuel pump          | 7. Fuel pressure regulator    | 12. Tank pressure control valve |
| 3. Fuel feed line     | 8. Fuel return line           |                                 |
| 4. Fuel filter        | 9. Intake manifold surge tank |                                 |
| 5. Fuel delivery pipe | 10. EVAP canister purge valve |                                 |

## ELECTRONIC CONTROL SYSTEM

The electronic control system consists of 1) various sensors which detect the state of engine and driving conditions, 2) ECM (PCM) which controls various devices according to the signals from the sensors and 3) various controlled devices.


Functionally, it is divided into the following sub systems:

- Fuel injection control system
- Heated oxygen sensor heater control system (if equipped)

- Idle air control system
- Fuel pump control system
- Evaporative emission control system
- Ignition control system
- EGR system (if equipped)

Also, with 4 A/T model, PCM controls A/T.

### G16 ENGINE

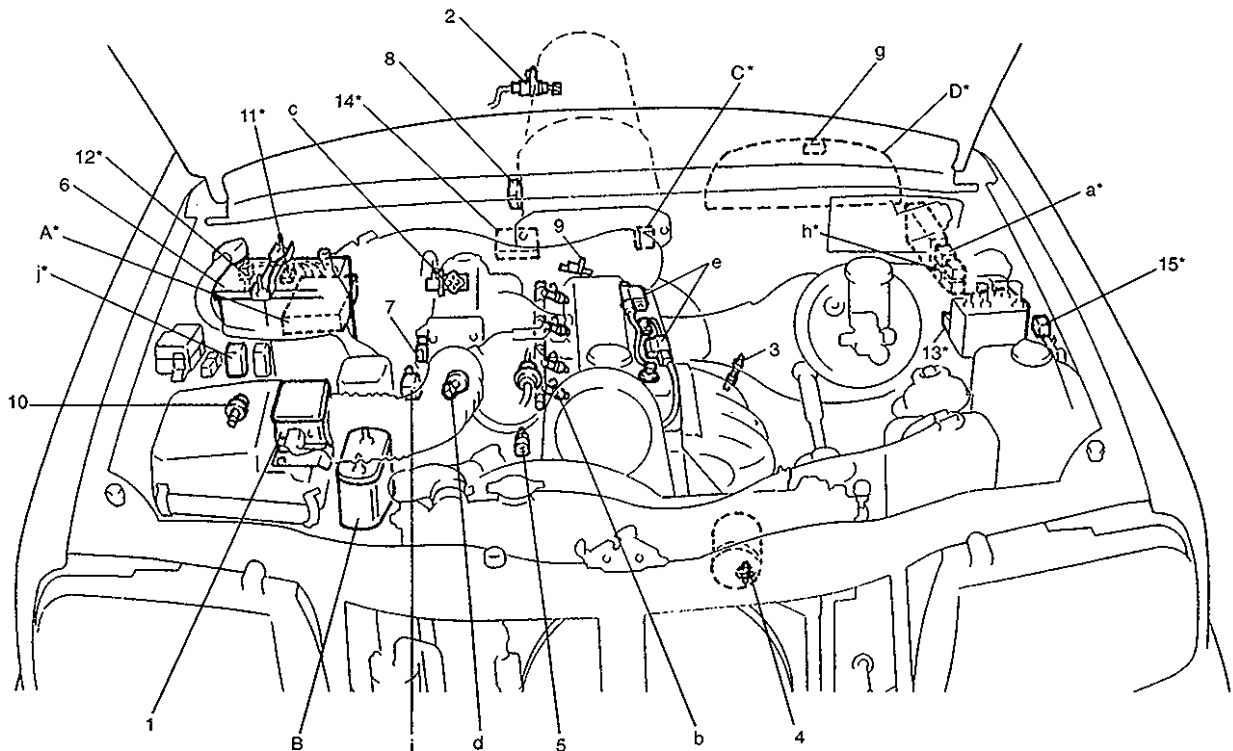

#### INFORMATION SENSORS

1. MAF sensor
2. VSS
3. Heated oxygen sensor (if equipped)
4. Power steering pressure switch (if equipped)
5. ECT sensor
6. Battery
7. TP sensor
8. Transmission range switch (A/T only)
9. Camshaft position sensor (CMP sensor)
10. IAT sensor
11. Ignition timing adjusting resistor
12. CO adjusting resistor (if equipped)
13. ABS control module (if equipped)
14. A/C amplifier (if equipped)
15. Monitor connector

#### CONTROLLED DEVICES

- a : Fuel pump relay
- b : Injectors
- c : EGR valve (if equipped)
- d : Idle air control valve
- e : Ignition coil assemblies
- g : Malfunction indicator lamp ("CHECK ENGINE" light)
- h : Main relay
- i : EVAP canister purge valve
- j : A/C condenser fan motor relay (if equipped)

#### OTHERS


- A : PCM/ECM
- B : EVAP canister
- C : Data link connector
- D : Combination meter

#### NOTE:

Above figure shows left-hand steering vehicle. For right-hand steering vehicle, parts with (\*) are installed at the other side.



## J20 ENGINE

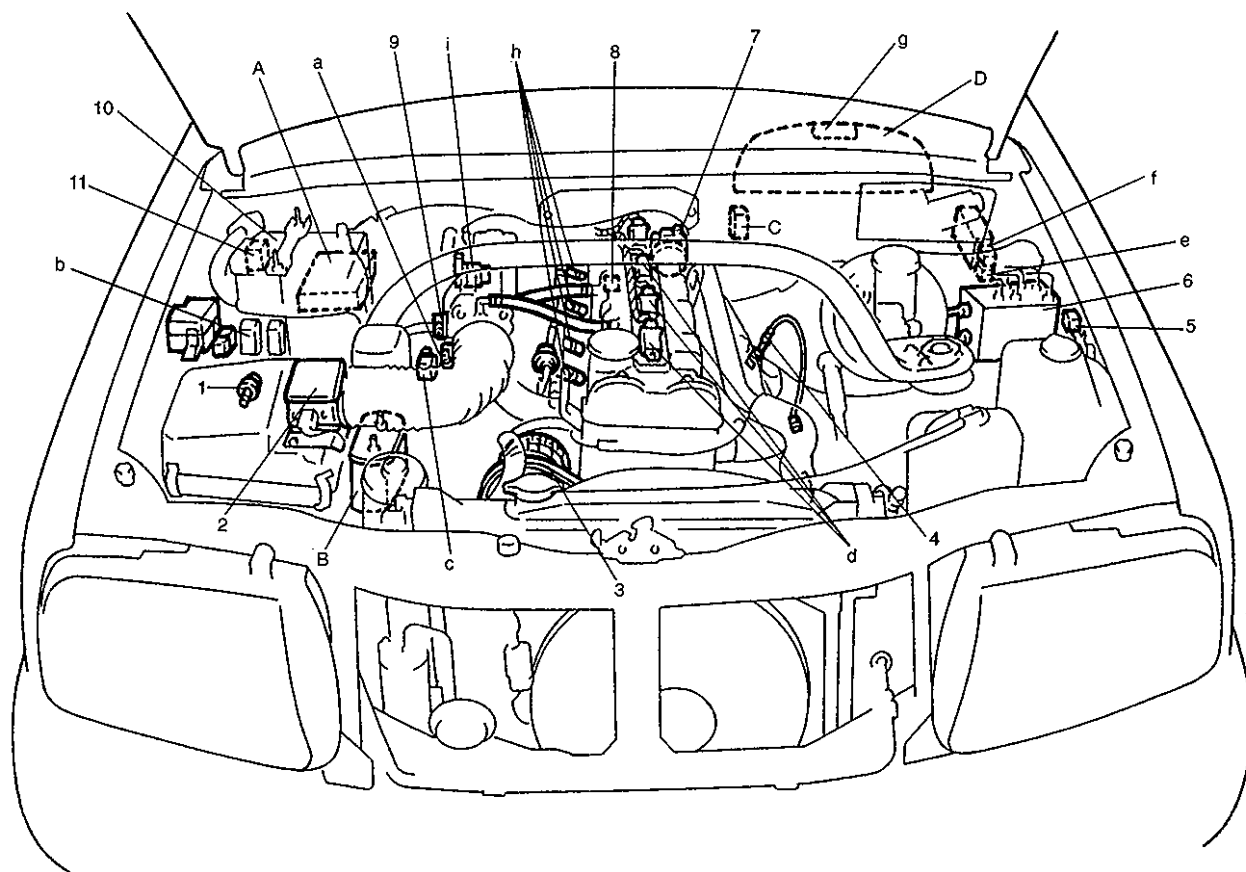

## INFORMATION SENSORS

1. IAT sensor
2. MAF sensor
3. Power steering pressure switch  
(if equipped)
4. Heated oxygen sensor (if equipped)
5. Monitor connector
6. ABS control module (if equipped)
7. Camshaft position sensor (CMP sensor)
8. ECT sensor
9. TP sensor
10. Battery
11. CO adjusting resistor (if equipped)

## CONTROLLED DEVICES


- a : Idle air control valve
- b : A/C condenser fan motor relay  
(if equipped)
- c : EVAP canister purge valve
- d : Ignition coil assemblies
- e : Main relay
- f : Fuel pump relay
- g : Malfunction indicator lamp  
("CHECK ENGINE" light)
- h : Injectors
- i : EGR valve (if equipped)

## OTHERS


- A : ECM (PCM)
- B : EVAP canister
- C : Data link connector
- D : Combination meter

**NOTE:**


Above figure shows left-hand steering vehicle. For right-hand steering vehicle, parts with (\*) are installed at the other side.

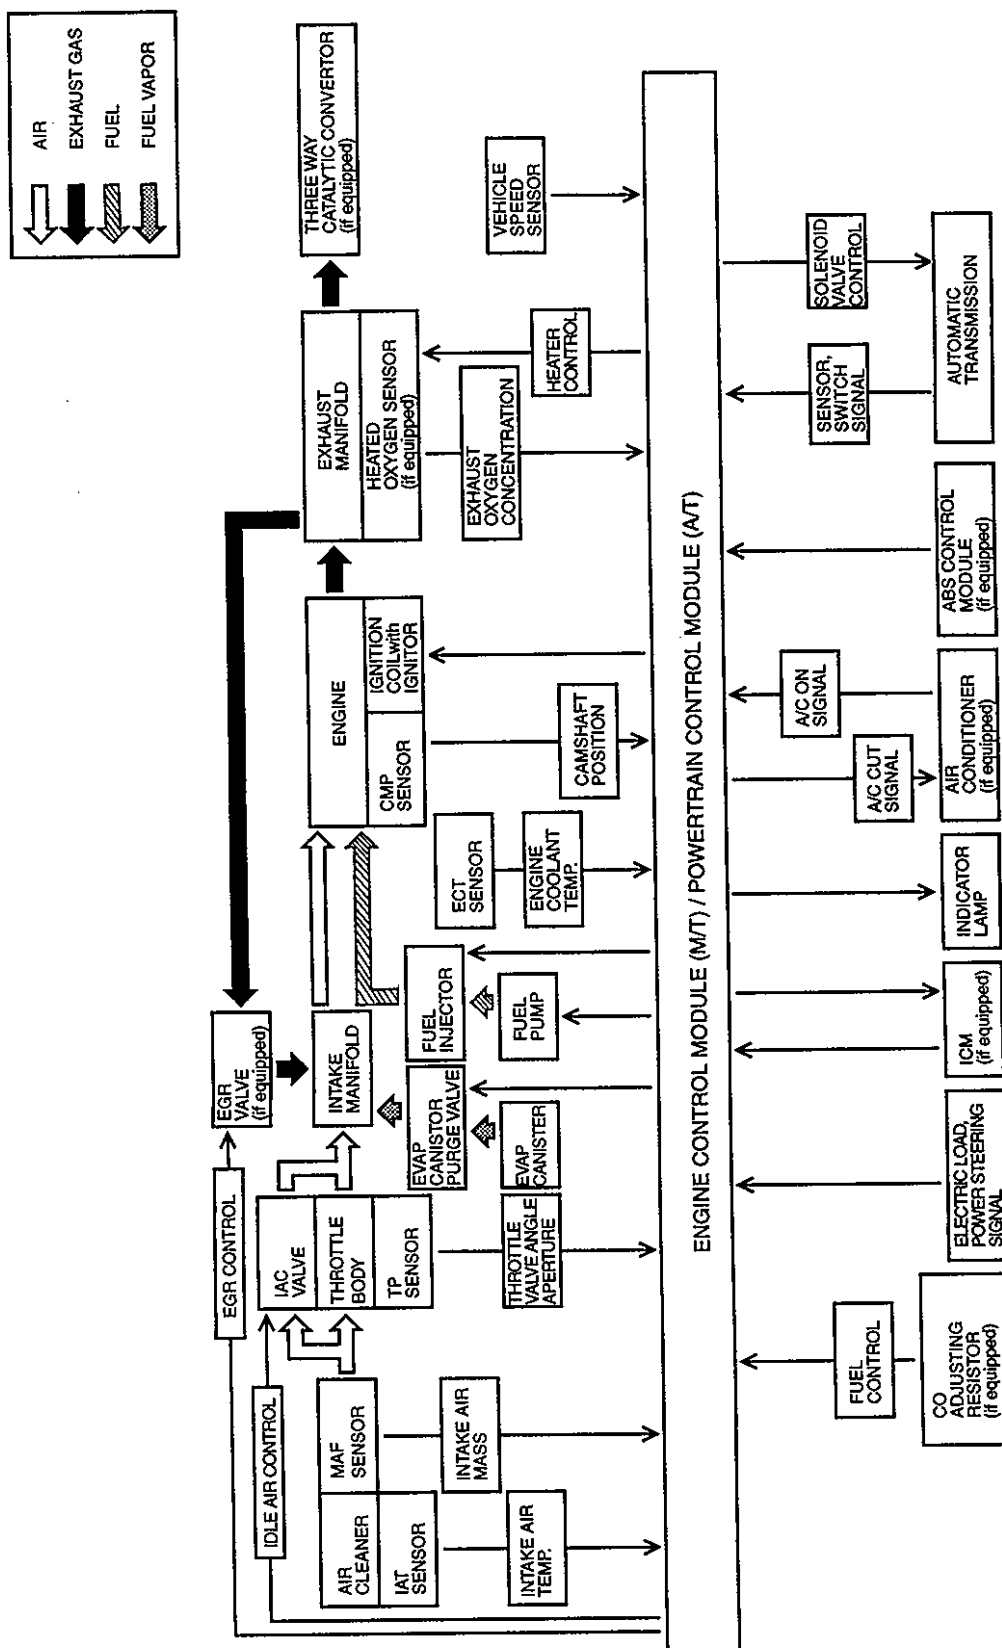

## M/T Vehicle with G16 Engine

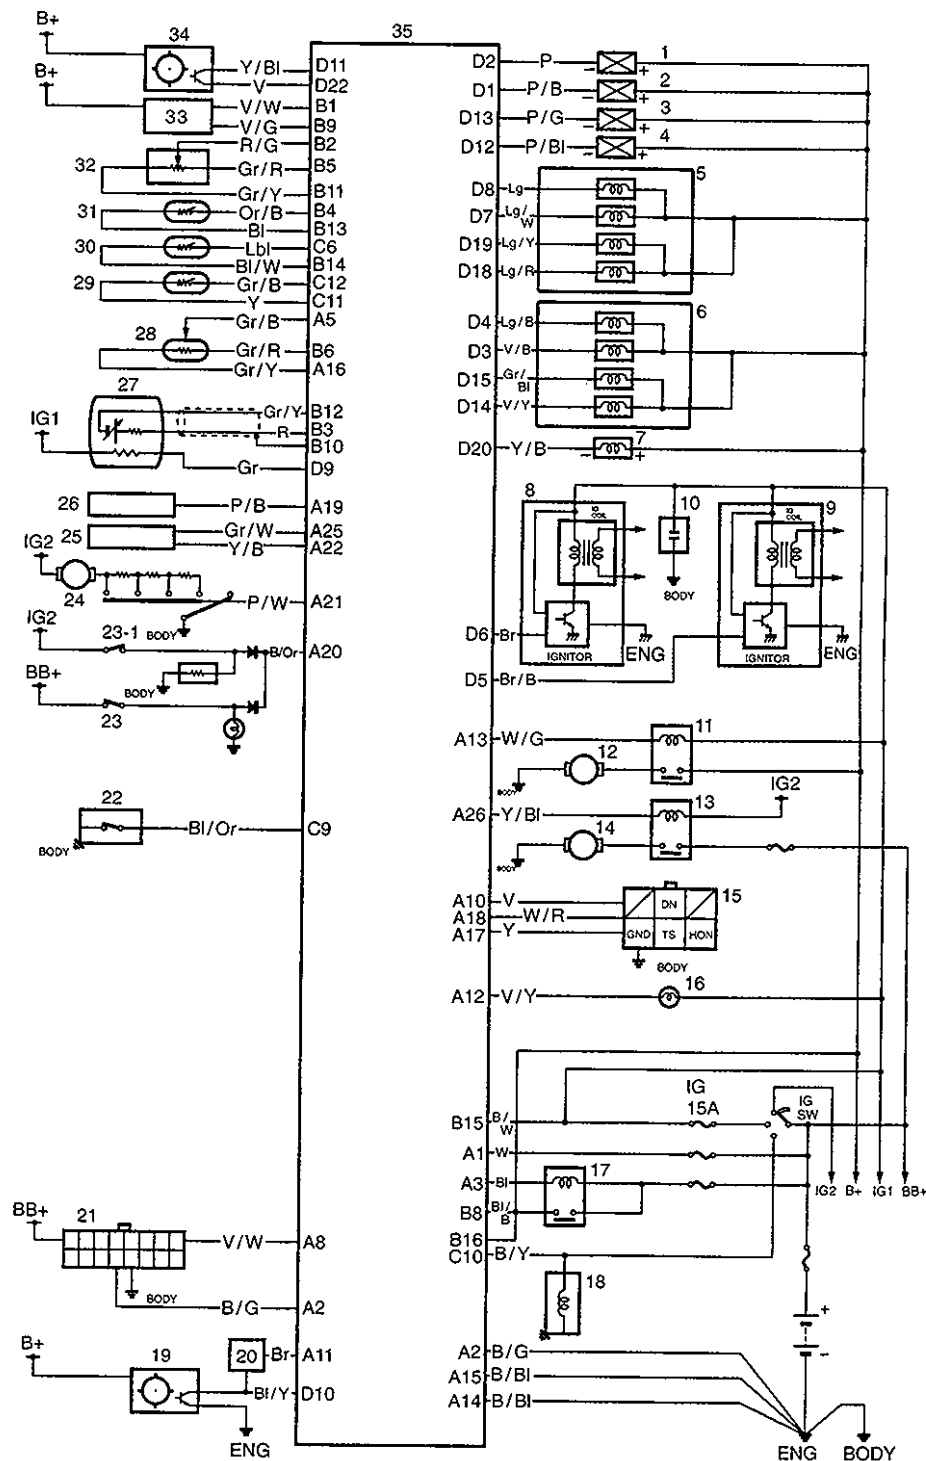


TERMINAL ARRANGEMENT OF ECM CONNECTOR (VIEWED FROM HARNESS SIDE)

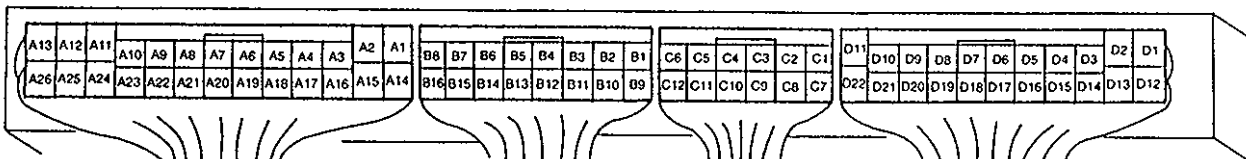


1. Fuel injector No.1
2. Fuel injector No.2
3. Fuel injector No.3
4. Fuel injector No.4
5. EGR valve (if equipped)
6. Idle air control (IAC) valve
7. EVAP canister purge valve
8. Ignition coil assembly for No.1 and No.4 spark plugs
9. Ignition coil assembly for No.2 and No.3 spark plugs
10. Capacitor (noise suppressor)
11. Fuel pump relay
12. Fuel pump
13. A/C condenser fan relay (if equipped)
14. A/C condenser fan motor (if equipped)
15. Monitor connector
16. "CHECK ENGINE" lamp (Malfunction indicator lamp)
17. Main relay
18. Starter magnetic switch
19. Vehicle speed sensor
20. Speedometer
21. Data link connector
22. Power steering pressure switch
23. Lighting switch
- 23-1. Rear defogger switch (if equipped)
24. Heater blower motor (if equipped)
25. A/C amplifier (if equipped)
26. ABS control module (if equipped)
27. Heated oxygen sensor, HO2S (if equipped)
28. CO adjusting resistor (if equipped)
29. Ignition timing adjusting resistor
30. Intake air temp. (IAT) sensor
31. Engine coolant temp. (ECT) sensor
32. Throttle position (TP) sensor
33. Mass air flow (MAF) sensor
34. Camshaft position (CMP) sensor
35. Engine control module

TERMINAL	CIRCUIT	TERMINAL	CIRCUIT
A1	Power source for back up	C1 ~ C5	—
A2	Ground	C6	Intake air temp. sensor
A3	Main relay	C7	—
A4	—	C8	—
A5	CO adjusting resistor (if equipped)	C9	Power steering pressure switch
A6	—	C10	Engine start signal
A7	—	C11	Ground for ignition timing adjusting resistor
A8	Data link connector	C12	Ignition timing adjusting resistor
A9	—		
A10	Duty output terminal		
A11	Tachometer		
A12	"CHECK ENGINE" lamp	D1	Fuel injector No.2
A13	Fuel pump relay	D2	Fuel injector No.1
A14	Ground	D3	IAC valve (stepper motor coil 2)
A15	Ground	D4	IAC valve (stepper motor coil 1)
A16	CO adjusting resistor (—) (if equipped)	D5	Ignition coil assembly for No.2 and No.3 spark plugs
A17	Diag. switch terminal	D6	Ignition coil assembly for No.1 and No.4 spark plugs
A18	Test switch terminal	D7	EGR valve (stepper motor coil 2, if equipped)
A19	ABS control module (if equipped)	D8	EGR valve (stepper motor coil 1, if equipped)
A20	Rear defogger switch and lighting switch (if equipped)	D9	Heater of HO2S (if equipped)
A21	Heater blower switch	D10	Vehicle speed sensor
A22	A/C signal (if equipped)	D11	CMP sensor (+)
A23	—	D12	Fuel injector No.4
A24	—	D13	Fuel injector No.3
A25	A/C cut signal (if equipped)	D14	IAC valve (stepper motor coil 4)
A26	A/C fan motor relay (if equipped)	D15	IAC valve (stepper motor coil 3)
		D16	—
B1	Mass air flow sensor	D17	—
B2	Throttle position sensor	D18	EGR valve (stepper motor coil 4, if equipped)
B3	Heated oxygen sensor, HO2S (if equipped)	D19	EGR valve (stepper motor coil 3, if equipped)
B4	Engine coolant temp. sensor	D20	EVAP canister purge valve
B5	Power source for TP sensor	D21	—
B6	Power source for CO adjusting resistor (if equipped)	D22	CMP sensor (—)
B7	—		
B8	Power source		
B9	Ground for MAF sensor		
B10	Ground for HO2S shield wire (if equipped)		
B11	Ground for TP sensor		
B12	Ground for HO2S (if equipped)		
B13	Ground for ECT sensor		
B14	Ground for IAT sensor		
B15	Ignition switch		
B16	Power source		

## A/T Vehicle with G16 Engine

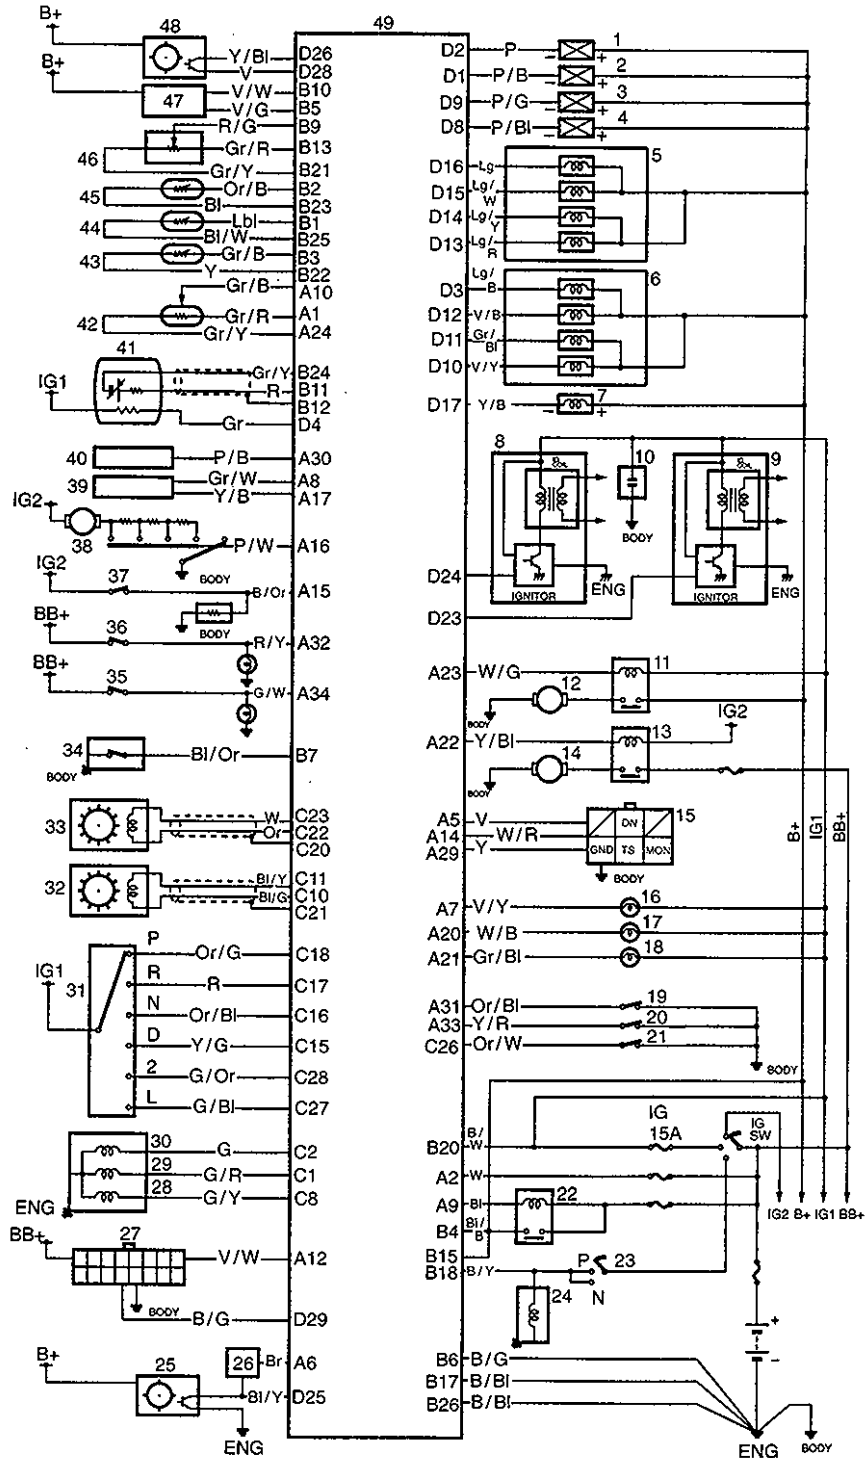


TERMINAL ARRANGEMENT OF PCM CONNECTOR (VIEWED FROM HARNESS SIDE)

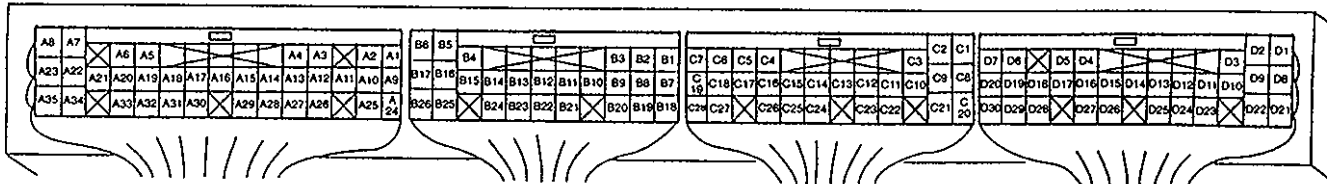


1. Fuel injector No.1
2. Fuel injector No.2
3. Fuel injector No.3
4. Fuel injector No.4
5. EGR valve (if equipped)
6. Idle air control (IAC) valve
7. EVAP canister purge valve
8. Ignition coil assembly for No.1 and No.4 spark plugs
9. Ignition coil assembly for No.2 and No.3 spark plugs
10. Capacitor (noise suppressor)
11. Fuel pump relay
12. Fuel pump
13. A/C condenser fan relay (if equipped)
14. A/C condenser fan motor (if equipped)
15. Monitor connector
16. "CHECK ENGINE" lamp (Malfunction indicator lamp)
17. "O/D OFF" lamp
18. "POWER" lamp
19. Power/Normal change switch
20. O/D cut switch
21. 4WD low switch
22. Main relay
23. Transmission range switch (Park/Neutral Position Switch)
24. Starter magnetic switch
25. Vehicle speed sensor
26. Combination meter
27. Data link connector
28. TCC solenoid
29. Shift solenoid-B
30. Shift solenoid-A
31. Transmission range switch (sensor)
32. A/T input speed sensor
33. A/T vehicle (output) speed sensor
34. Power steering pressure switch
35. Stop lamp switch (Brake pedal switch)
36. Lighting switch
37. Rear defogger switch (if equipped)
38. Heater blower motor (if equipped)
39. A/C amplifier (if equipped)
40. ABS control module (if equipped)
41. Heated oxygen sensor (if equipped)
42. CO adjusting resistor (if equipped)
43. Ignition timing adjusting resistor
44. Intake air temp. sensor
45. Engine coolant temp. sensor
46. Throttle position sensor
47. Mass air flow sensor
48. Camshaft position sensor
49. Powertrain control module

TERMINAL	CIRCUIT	TERMINAL	CIRCUIT
A1	Power source for CO adjusting resistor (if equipped)	B22	Ground for ignition timing adjusting resistor
A2	Power source for back up	B23	Ground for ECT sensor
A3, A4	—	B24	Ground for HO2S (if equipped)
A5	Duty output terminal	B25	Ground for IAT sensor
A6	Tachometer	B26	Ground
A7	"CHECK ENGINE" lamp		
A8	A/C cut signal (if equipped)	C1	Shift solenoid-B
A9	Main relay	C2	Shift solenoid-A
A10	CO adjusting resistor (if equipped)	C3 ~ C7	—
A11	—	C8	TCC solenoid
A12	Data link connector	C9	—
A13	—	C10	A/T input speed sensor (-)
A14	Test switch terminal	C11	A/T input speed sensor (+)
A15	Rear defogger switch (if equipped)	C12-C14	—
A16	Heater blower switch	C15	Transmission range switch "D"
A17	A/C signal (if equipped)	C16	Transmission range switch "N"
A18, A19	—	C17	Transmission range switch "R"
A20	"O/D OFF" lamp	C18	Transmission range switch "P"
A21	"POWER" lamp	C19	—
A22	A/C fan motor relay (if equipped)	C20	Shield wire ground for A/T output speed sensor
A23	Fuel pump relay	C21	Shield wire ground for A/T input speed sensor
A24	CO adjusting resistor (-) (if equipped)	C22	A/T output speed sensor (-)
A25 ~ A28	—	C23	A/T output speed sensor (+)
A29	Diag. switch terminal	C24-C25	—
A30	ABS control module (if equipped)	C26	4WD low switch
A31	Power/Normal change switch	C27	Transmission range switch "L"
A32	Lighting switch	C28	Transmission range switch "2"
A33	O/D cut switch		
A34	Stop lamp switch (Brake pedal switch)	D1	Fuel injector No.2
A35	—	D2	Fuel injector No.1
B1	Intake air temp. sensor	D3	IAC valve (stepper motor coil 1)
B2	Engine coolant temp. sensor	D4	Heater of HO2S (if equipped)
B3	Ignition timing adjusting resistor	D5-D7	—
B4	Power source	D8	Fuel injector No.4
B5	Ground for MAF sensor	D9	Fuel injector No.3
B6	Ground	D10	IAC valve (stepper motor coil 4)
B7	Power steering pressure switch	D11	IAC valve (stepper motor coil 3)
B8	—	D12	IAC valve (stepper motor coil 2)
B9	Throttle position (TP) sensor	D13	EGR valve (stepper motor coil 4, if equipped)
B10	Mass air flow (MAF) sensor	D14	EGR valve (stepper motor coil 3, if equipped)
B11	Heated oxygen sensor (if equipped)	D15	EGR valve (stepper motor coil 2, if equipped)
B12	Ground for HO2S shield wire (if equipped)	D16	EGR valve (stepper motor coil 1, if equipped)
B13	Power source for TP sensor	D17	EVAP canister purge valve
B14	—	D18-D22	—
B15	Power source	D23	Ignition coil assembly for No.2 and No.3 spark plugs
B16	—	D24	Ignition coil assembly for No.1 and No.4 spark plugs
B17	Ground	D25	Vehicle speed sensor
B18	Engine start signal	D26	CMP sensor (+)
B19	—	D27	—
B20	Ignition switch	D28	CMP sensor (-)
B21	Ground for TP sensor	D29	Ground for DLC
		D30	—

## M/T Vehicle with J20 Engine

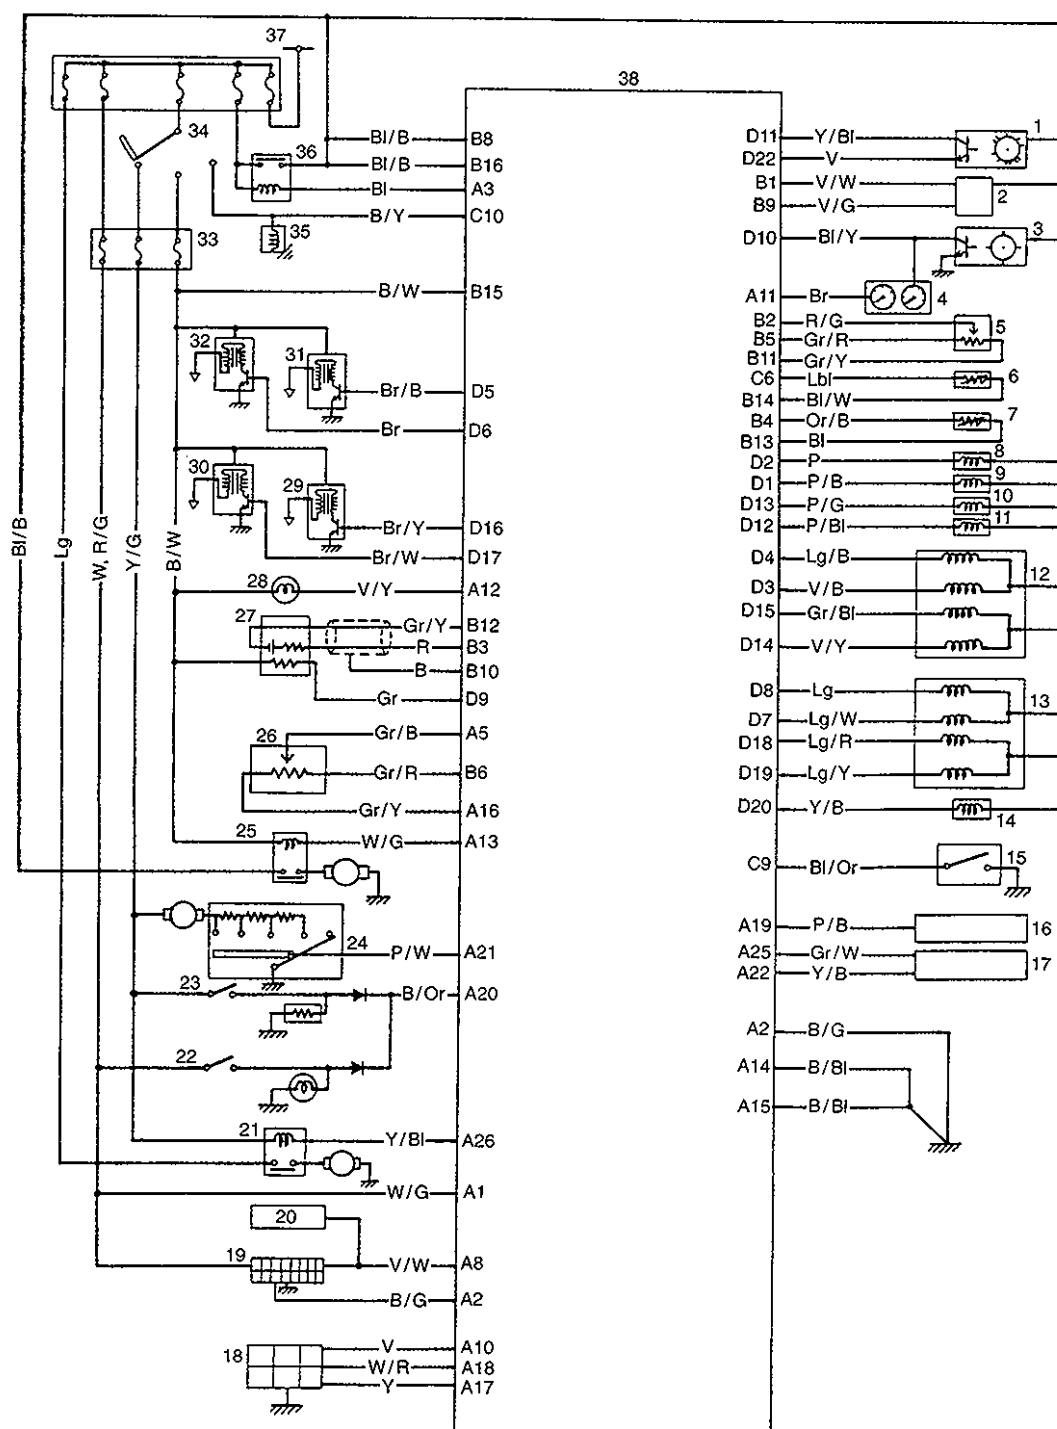

TERMINAL ARRANGEMENT OF ECM CONNECTOR (VIEWED FROM HARNESS SIDE)

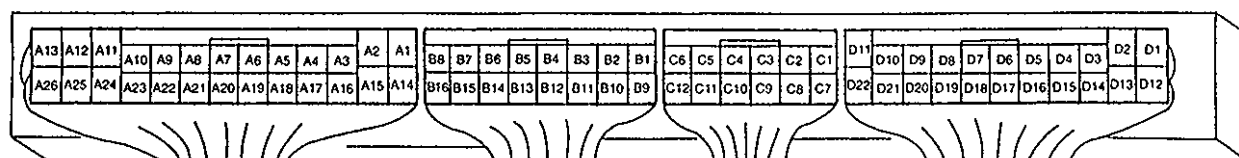


1. Camshaft position [CMP] sensor
2. Mass air flow [MAF] sensor
3. Vehicle speed sensor [VSS]
4. Combination meter
5. Throttle position [TP] sensor
6. Intake air temp. [IAT] sensor
7. Engine coolant temp. [ECT] sensor
8. Fuel injector No.1
9. Fuel injector No.2
10. Fuel injector No.3
11. Fuel injector No.4
12. Idle air control [IAC] valve
13. EGR valve (if equipped)
14. EVAP canister purge valve
15. Power steering pressure [PSP] switch
16. ABS control module (if equipped)
17. A/C amplifier (if equipped)
18. Monitor connector
19. Data link connector
20. Immobilizer control module (if equipped)
21. A/C condenser fan relay (if equipped)
22. Lighting switch
23. Rear defogger switch (if equipped)
24. Heater blower switch
25. Fuel pump relay
26. CO adjusting resistor (if equipped)
27. Heated oxygen sensor (if equipped)
28. "CHECK ENGINE" lamp (Malfunction indicator lamp)
29. Ignition coil assembly for No.4
30. Ignition coil assembly for No.3
31. Ignition coil assembly for No.2
32. Ignition coil assembly for No.1
33. Fuse box
34. Ignition switch
35. Starter magnetic switch
36. Main relay
37. Battery positive voltage
38. Engine control module


TERMINAL	CIRCUIT	TERMINAL	CIRCUIT
A1	Power source for back up	C1 ~ C5	—
A2	Ground	C6	Intake air temp. sensor
A3	Main relay	C7	—
A4	—	C8	—
A5	CO adjusting resistor (if equipped)	C9	Power steering pressure switch
A6	—	C10	Engine start signal
A7	—	C11	—
A8	Data link connector	C12	—
A9	—		
A10	Duty output terminal	D1	Fuel injector No.2
A11	Tachometer	D2	Fuel injector No.1
A12	"CHECK ENGINE" lamp	D3	IAC valve (stepper motor coil 2)
A13	Fuel pump relay	D4	IAC valve (stepper motor coil 1)
A14	Ground	D5	Ignition coil assembly for No.2
A15	Ground	D6	Ignition coil assembly for No.1
A16	CO adjusting resistor (—) (if equipped)	D7	EGR valve (stepper motor coil 2, if equipped)
A17	Diag. switch terminal	D8	EGR valve (stepper motor coil 1, if equipped)
A18	Test switch terminal	D9	Heater of HO2S (if equipped)
A19	ABS control module (if equipped)	D10	Vehicle speed sensor
A20	Rear defogger switch and lighting switch (if equipped)	D11	CMP sensor (+)
A21	Heater blower switch	D12	Fuel injector No.4
A22	A/C signal (if equipped)	D13	Fuel injector No.3
A23	—	D14	IAC valve (stepper motor coil 4)
A24	—	D15	IAC valve (stepper motor coil 3)
A25	A/C cut signal (if equipped)	D16	Ignition coil assembly No. 4
A26	A/C fan motor relay (if equipped)	D17	Ignition coil assembly No. 3
		D18	EGR valve (stepper motor coil 4, if equipped)
B1	Mass air flow sensor	D19	EGR valve (stepper motor coil 3, if equipped)
B2	Throttle position sensor	D20	EVAP canister purge valve
B3	Heated oxygen sensor, HO2S (if equipped)	D21	—
B4	Engine coolant temp. sensor	D22	CMP sensor (—)
B5	Power source for TP sensor		
B6	Power source for CO adjusting resistor (if equipped)		
B7	—		
B8	Power source		
B9	Ground for MAF sensor		
B10	Ground for HO2S shield wire (if equipped)		
B11	Ground for TP sensor		
B12	Ground for HO2S (if equipped)		
B13	Ground for ECT sensor		
B14	Ground for IAT sensor		
B15	Ignition switch		
B16	Power source		



## A/T Vehicle with J20 Engine

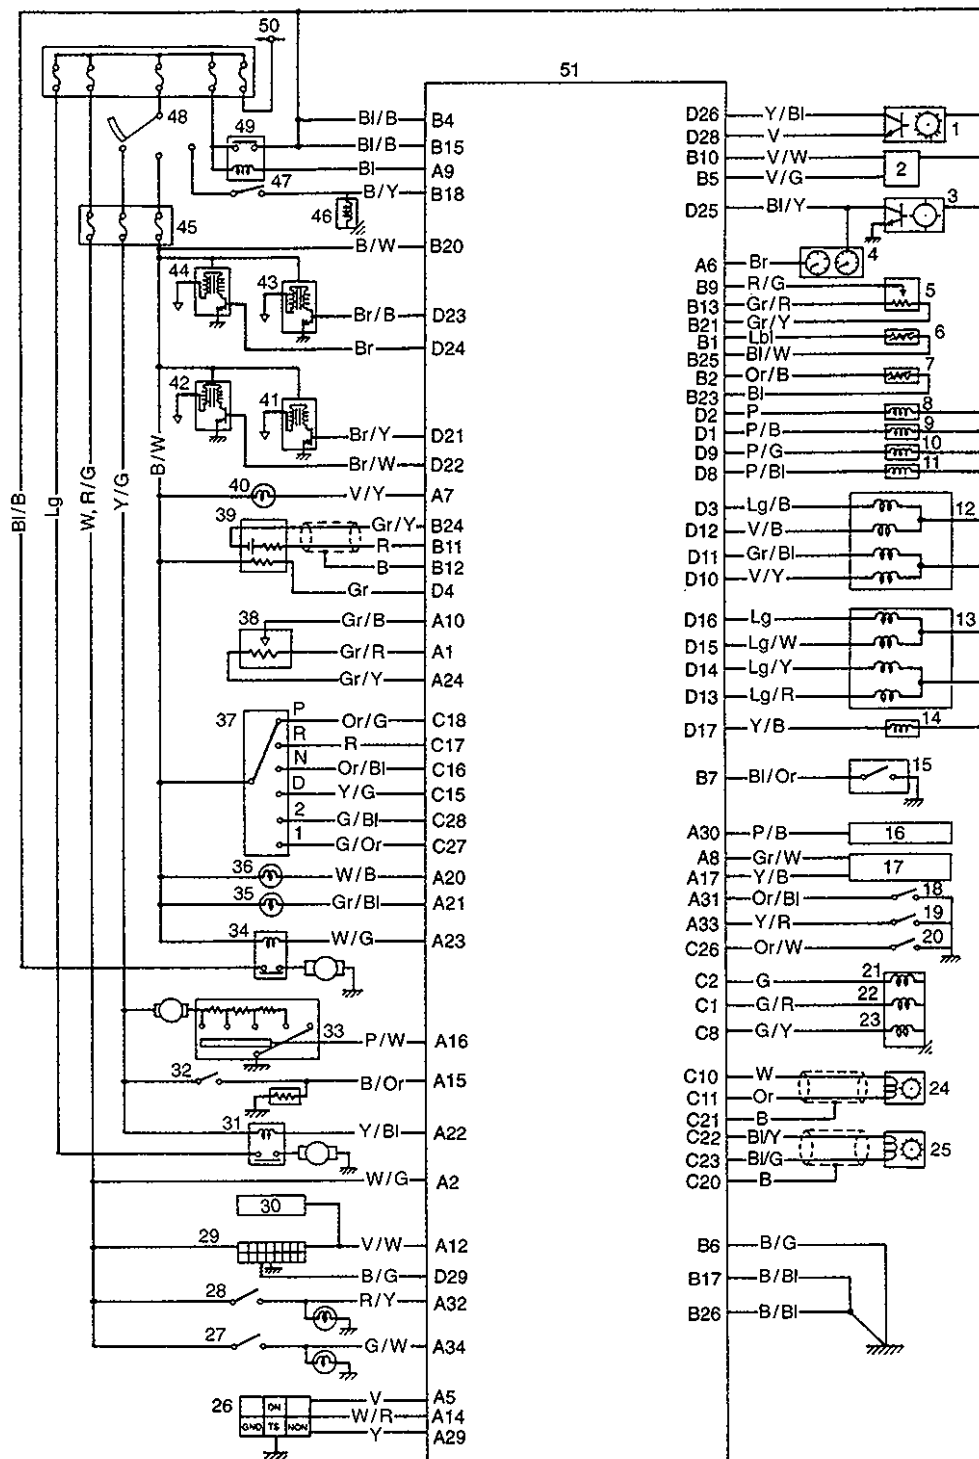

TERMINAL ARRANGEMENT OF PCM CONNECTOR (VIEWED FROM HARNESS SIDE)

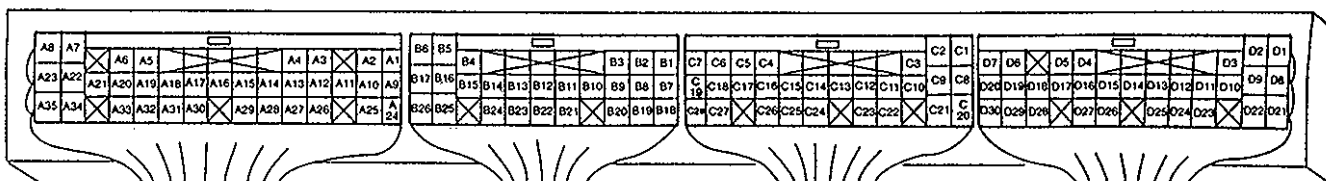

1. Camshaft position [CMP] sensor
2. Mass air flow [MAF] sensor
3. Vehicle speed sensor [VSS]
4. Combination meter
5. Throttle position [TP] sensor
6. Intake air temp. [IAT] sensor
7. Engine coolant temp. [ECT] sensor
8. Fuel injector No.1
9. Fuel injector No.2
10. Fuel injector No.3
11. Fuel injector No.4
12. Idle air control [IAC] valve
13. EGR valve (if equipped)
14. EVAP canister purge valve
15. Power steering pressure [PSP] switch
16. ABS control module (if equipped)
17. A/C amplifier (if equipped)
18. POWER/NORMAL change switch
19. O/D cut switch
20. 4WD low switch
21. Shift solenoid A
22. Shift solenoid B
23. TCC solenoid
24. A/T vehicle (output) speed sensor
25. A/T input speed sensor
26. Monitor connector
27. Stop lamp switch
28. Lighting switch
29. Data link connector
30. Immobilizer control module (if equipped)
31. A/C condenser fan relay (if equipped)
- Lighting switch
32. Rear defogger switch (if equipped)
33. Heater blower switch
34. Fuel pump relay
35. "POWER" lamp
36. "O/D OFF" lamp
37. Transmission range switch (sensor)
38. CO adjusting resistor (if equipped)
39. Heated oxygen sensor (if equipped)
40. "CHECK ENGINE" lamp (Malfunction indicator lamp)
41. Ignition coil assembly for No.4
42. Ignition coil assembly for No.3
43. Ignition coil assembly for No.2
44. Ignition coil assembly for No.1
45. Fuse box
46. Starter magnetic switch
47. Transmission range switch (Park/Neutral Position Switch)
48. Ignition switch
49. Main relay
50. Battery positive voltage
51. Powertrain control module


TERMINAL	CIRCUIT	TERMINAL	CIRCUIT
A1	Power source for CO adjusting resistor (if equipped)	B22	—
A2	Power source for back up	B23	Ground for ECT sensor
A3, A4	—	B24	Ground for HO2S (if equipped)
A5	Duty output terminal	B25	Ground for IAT sensor
A6	Tachometer	B26	Ground
A7	"CHECK ENGINE" lamp	C1	Shift solenoid-B
A8	A/C cut signal (if equipped)	C2	Shift solenoid-A
A9	Main relay	C3 ~ C7	—
A10	CO adjusting resistor (if equipped)	C8	TCC solenoid
A11	—	C9	—
A12	Data link connector	C10	A/T input speed sensor (-)
A13	—	C11	A/T input speed sensor (+)
A14	Test switch terminal	C12-C14	—
A15	Rear defogger switch	C15	Transmission range switch "D"
A16	Heater blower switch	C16	Transmission range switch "N"
A17	A/C signal (if equipped)	C17	Transmission range switch "R"
A18, A19	—	C18	Transmission range switch "P"
A20	"O/D OFF" lamp	C19	—
A21	"POWER" lamp	C20	Shield wire ground for A/T output speed sensor
A22	A/C fan motor relay (if equipped)	C21	Shield wire ground for A/T input speed sensor
A23	Fuel pump relay	C22	A/T output speed sensor (-)
A24	CO adjusting resistor (-) (if equipped)	C23	A/T output speed sensor (+)
A25 ~ A28	—	C24-C25	—
A29	Diag. switch terminal	C26	4WD low switch
A30	ABS control module (if equipped)	C27	Transmission range switch "L"
A31	Power/Normal change switch	C28	Transmission range switch "2"
A32	Lighting switch	D1	Fuel injector No.2
A33	O/D cut switch	D2	Fuel injector No.1
A34	Stop lamp switch (Brake pedal switch)	D3	IAC valve (stepper motor coil 1)
A35	—	D4	Heater of HO2S (if equipped)
B1	Intake air temp. sensor	D5-D7	—
B2	Engine coolant temp. sensor	D8	Fuel injector No.4
B3	—	D9	Fuel injector No.3
B4	Power source	D10	IAC valve (stepper motor coil 4)
B5	Ground for MAF sensor	D11	IAC valve (stepper motor coil 3)
B6	Ground	D12	IAC valve (stepper motor coil 2)
B7	Power steering pressure switch	D13	EGR valve (stepper motor coil 4, if equipped)
B8	—	D14	EGR valve (stepper motor coil 3, if equipped)
B9	Throttle position (TP) sensor	D15	EGR valve (stepper motor coil 2, if equipped)
B10	Mass air flow (MAF) sensor	D16	EGR valve (stepper motor coil 1, if equipped)
B11	Heated oxygen sensor (if equipped)	D17	EVAP canister purge valve
B12	Ground for HO2S shield wire (if equipped)	D18-D20	—
B13	Power source for TP sensor	D21	Ignition coil assembly for No. 4
B14	—	D22	Ignition coil assembly for No. 3
B15	Power source	D23	Ignition coil assembly for No. 2
B16	—	D24	Ignition coil assembly for No. 1
B17	Ground	D25	Vehicle speed sensor
B18	Engine start signal	D26	CMP sensor (+)
B19	—	D27	—
B20	Ignition switch	D28	CMP sensor (-)
B21	Ground for TP sensor	D29	Ground for DLC
		D30	—



## DIAGNOSIS

The engine and emission control system in this vehicle are controlled by ECM/PCM. ECM/PCM has an On-Board Diagnostic system which detects a malfunction in this system.

When diagnosing troubles, be sure to have full understanding of the outline of "On-Board Diagnostic System" and each item in "Precaution in Diagnosing Trouble" and execute diagnosis according to "Engine Diagnostic Flow Table" in section 6.

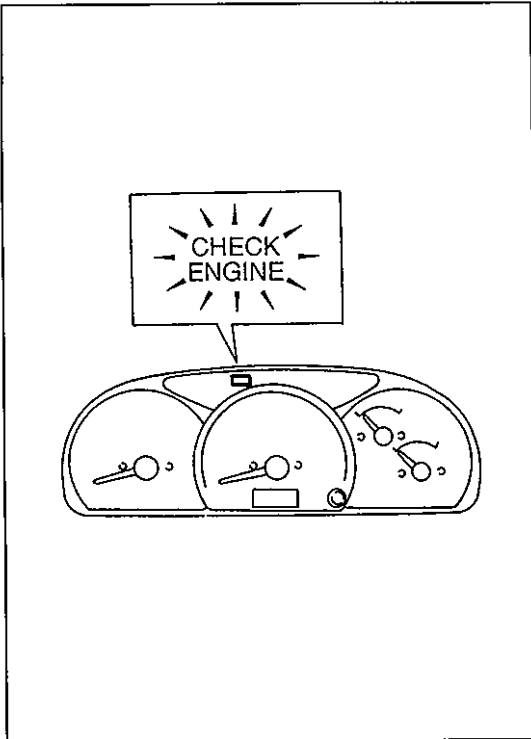

### ON-BOARD DIAGNOSTIC SYSTEM

ECM/PCM performs on-board diagnosis (self-diagnosis) on the system and operates "CHECK ENGINE" lamp (malfunction indicator lamp) as follows.

- Malfunction indicator lamp ("CHECK ENGINE" light) lights when the ignition switch is turned ON (but the engine at stop) regardless of the condition of Engine and emission control system. This is only to check the malfunction indicator lamp ("CHECK ENGINE" light) bulb and its circuit.
- If the areas monitored by ECM/PCM is free from any trouble after the engine start (while engine is running), malfunction indicator lamp ("CHECK ENGINE" light) turns OFF.
- When ECM/PCM detects a trouble which has occurred in the areas, it makes malfunction indicator lamp ("CHECK ENGINE" light) turn ON while the engine is running to warn the driver of such occurrence of trouble and at the same time it stores the exact trouble area in ECM/PCM back-up memory.

### PRECAUTIONS IN DIAGNOSING TROUBLES


- Before identifying diagnostic trouble code, don't disconnect couplers from ECM/PCM, battery cable from battery, ECM/PCM ground wire harness from engine. Such disconnection will erase memorized trouble in ECM/PCM memory.
- Be sure to read "Precautions for Electrical Circuit Service" in Section 0A before inspection and observe what is written there.
- ECM/PCM replacement
 

When substituting a known-good ECM/PCM, check for following conditions. Neglecting this check may cause damage to known-good ECM/PCM.

  - Resistance value of all relays, actuators is as specified respectively.
  - TP sensor and fuel tank pressure sensor (if equipped) are in good condition and none of power circuits of these sensors is shorted to ground.

## MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) CHECK

- 1) Turn ON ignition switch (but engine at stop) and check that malfunction indicator lamp ("CHECK ENGINE" lamp) lights.  
If lamp does not light up, go to "Diagnostic Flow Table A-1" in this section.  
If lamp flashes, go to "Diagnostic Flow Table A-2" in this section.
- 2) Start engine and check that malfunction indicator lamp ("CHECK ENGINE" lamp) turns OFF.  
If lamp remains ON, go to "Diagnostic Trouble Code Check Not Using SUZUKI Scan Tool (Tech-1)" in this section.

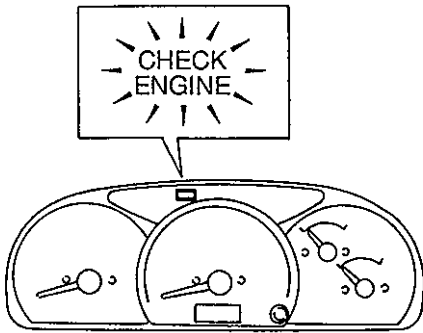



## DIAGNOSTIC TROUBLE CODE (DTC) CHECK [Using SUZUKI scan tool (Tech 1)]

### NOTE:

It is not possible to read DTCs of immobilizer control system by using Tech-1. If immobilizer control system is suspected to be defective (engine fails to start and "CHECK ENGINE" lamp flashes at ignition switch ON), check DTCs by using "CHECK ENGINE" lamp.

- 1) Check malfunction indicator lamp ("CHECK ENGINE" lamp) referring to "Malfunction Indicator Lamp ("CHECK ENGINE" lamp) Check" in this section.

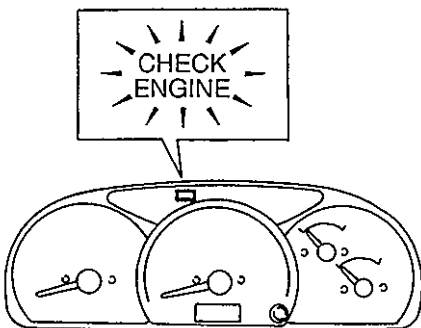

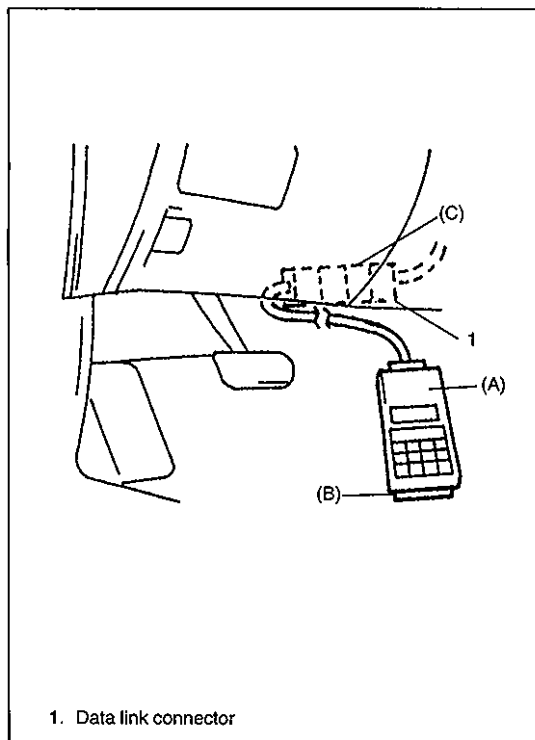

- 2) Turn ignition switch OFF.
- 3) After setting cartridge to Tech 1, connect it to data link connector (DLC) located on underside of instrument panel at driver's seat side.

#### Special Tool

(A): 09931-76011 (Tech 1)


(B): Mass storage cartridge

(C): 09931-96020 (16/12 pin DLC adapter)

- 4) Turn ignition switch ON.
- 5) Read DTC according to instructions displayed on Tech 1 and print it or write it down. Refer to Tech 1 operator's manual for further details.

If communication between Tech 1 and ECM/PCM is not possible, check if Tech 1 is communicable by connecting it to ECM/PCM in another vehicle. If communication is possible in this case, Tech 1 is in good condition. Then check data link connector and serial data line (circuit) in the vehicle with which communication was not possible.

- 6) After completing the check, turn ignition switch OFF and disconnect Tech 1 from data link connector (DLC).

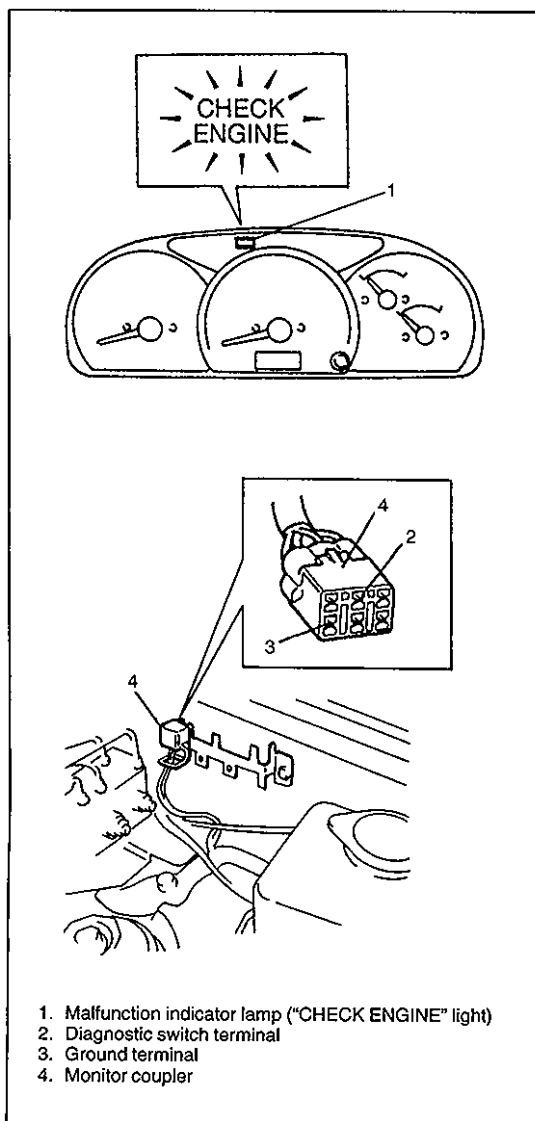

#### [Not using SUZUKI scan tool (Tech 1)]

- 1) Check malfunction indicator lamp ("CHECK ENGINE" light) referring to "Malfunction Indicator Lamp ("CHECK ENGINE" light) Check" in this section.
- 2) Using service wire, ground diagnosis switch terminal in monitor coupler.
- 3) Read DTC from flashing pattern of malfunction indicator lamp ("CHECK ENGINE" light). Refer to "Diagnostic Trouble Code Table".

If lamp remains ON, go to "Diagnostic Flow Table A-3".

#### NOTE:

- If abnormality or malfunction lies in two or more areas, malfunction indicator lamp ("CHECK ENGINE" light) indicates applicable codes three times each.

And flashing of these codes is repeated as long as diagnosis terminal is grounded and ignition switch is held at ON position.

- Take a note of diagnostic trouble code indicated first.

- 4) After completing the check, turn ignition switch OFF and disconnect service wire from monitor coupler.

**DIAGNOSTIC TROUBLE CODE (DTC) CLEARANCE****[Using SUZUKI scan tool (Tech 1)]**

- 1) Turn ignition switch OFF.
- 2) Connect Tech 1 to data link connector (DLC) in the same manner as when making this connection for DTC check.
- 3) Turn ignition switch ON.
- 4) Erase DTC according to instructions displayed on Tech 1.  
Refer to Tech 1 operator's manual for further details.
- 5) After completing the clearance, turn ignition switch OFF and disconnect Tech 1 from data link connector (DLC).

**[Not using SUZUKI scan tool (Tech 1)]**


- 1) Turn OFF ignition switch.
- 2) Disconnect battery negative cable for specified time below to erase diagnostic trouble code stored in ECM/PCM memory and reconnect it.

**Time required to erase DTC:**

Ambient temperature	Time to cut power to ECM/PCM
Over 0°C (32°F)	30 sec. or longer
Under 0°C (32°F)	Not specifiable. Select a place with higher than 0°C (32°F) temperature.

# DIAGNOSTIC TROUBLE CODE TABLE (M/T AND A/T)



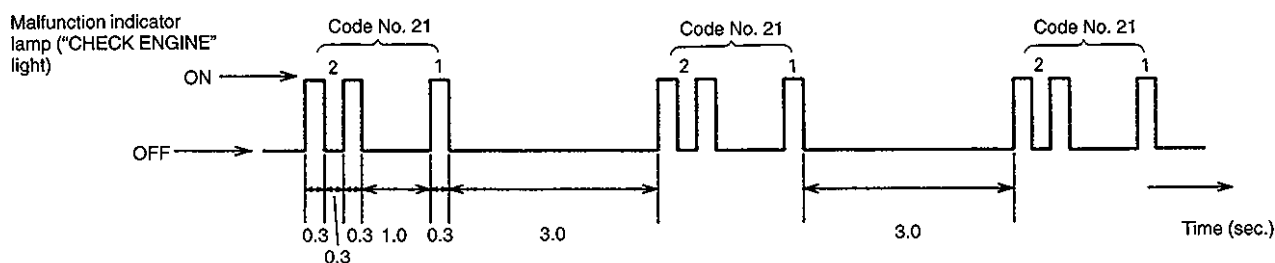






EXAMPLE: When throttle position sensor is defective (Code No. 21)







DIAGNOSTIC TROUBLE CODE NO.	MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LIGHT) FLASHING PATTERN	DIAGNOSTIC ITEM	DIAGNOSIS
13		Heated oxygen sensor (if equipped)	Diagnose trouble according to "DIAGNOSTIC FLOW TABLE" corresponding to each code No.
14		Engine coolant temperature sensor	
15			
21		Throttle position sensor	
22			
23		Intake air temperature sensor	
25			
24		Vehicle speed sensor	
33		Mass air flow sensor	
34			
42		Camshaft position sensor	
51		EGR valve (stepper motor, if equipped)	
12		Normal	This code appears when none of the other codes (above codes) are identified.



**DIAGNOSTIC TROUBLE CODE TABLE (A/T ONLY)**


DIAGNOSTIC TROUBLE CODE NO.	MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LIGHT) FLASHING PATTERN	DIAGNOSTIC ITEM	DIAGNOSIS
61		Shift solenoid A	Refer to SECTION 7B1 "AUTOMATIC TRANSMISSION".
62			
63		Shift solenoid B	
64			
65		TCC solenoid	
66			
72		Transmission range switch	
75		A/T Vehicle speed sensor	
76		A/T Input speed sensor	

**DIAGNOSTIC TROUBLE CODE TABLE  
(FOR VEHICLE EQUIPPED WITH IMMOBILIZER CONTROL SYSTEM ONLY)**

DIAGNOSTIC TROUBLE CODE NO.	MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LIGHT) FLASHING PATTERN	DIAGNOSTIC ITEM	DIAGNOSIS
81		ECM/ICM (PCM/ICM) code	Refer to "IMMOBILIZER CONTROL SYSTEM" section.
84			
82		ECM/PCM	
83		Serial data link	

## A-1 MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) CIRCUIT CHECK

(MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) DOESN'T LIGHT AT IGNITION SWITCH ON)

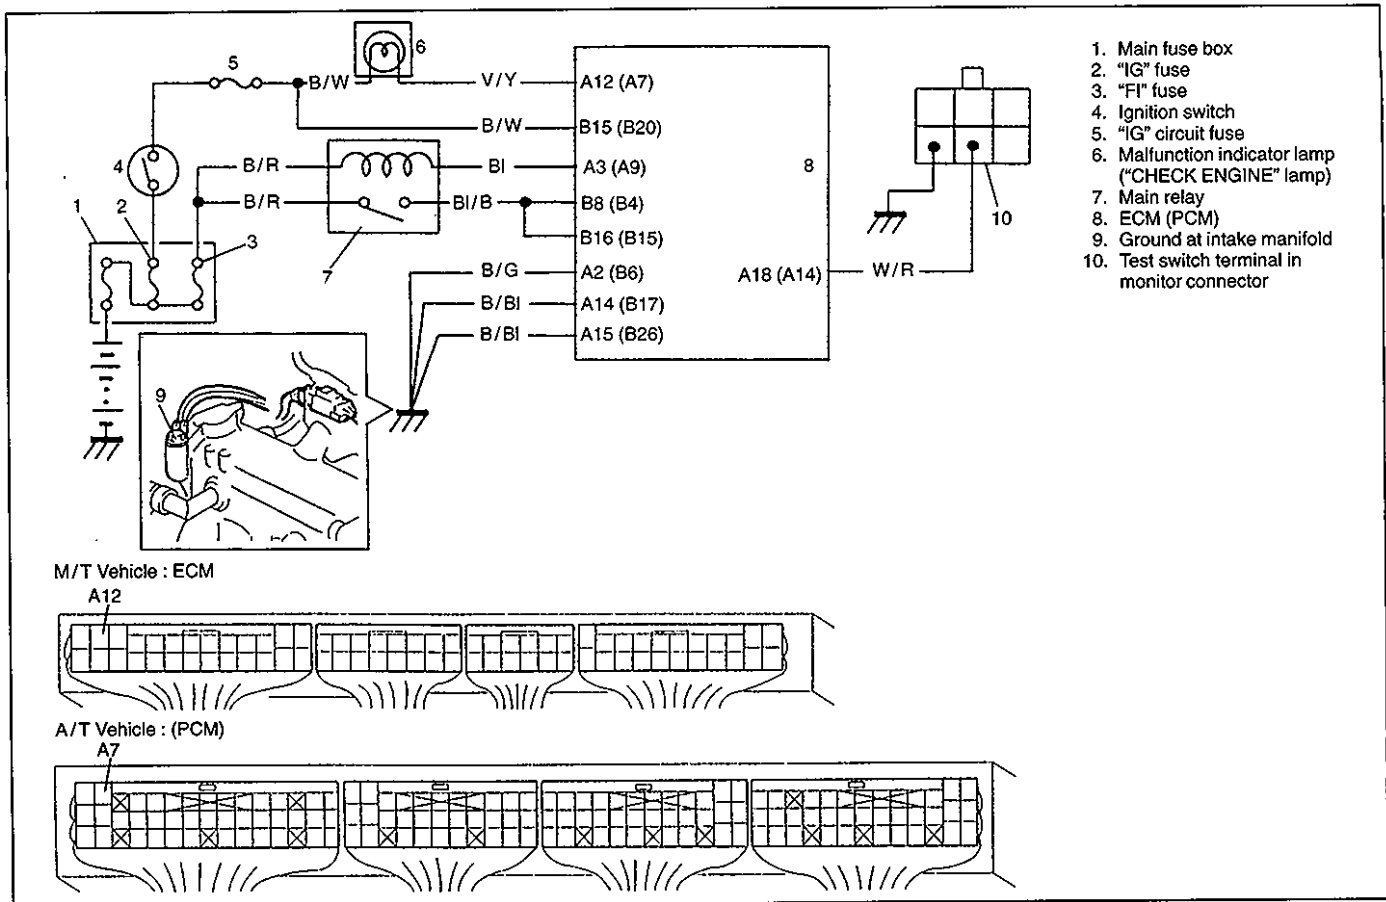


### NOTE:

If malfunction indicator lamp ("CHECK ENGINE" lamp) lights for 2 to 3 seconds and remains OFF after that at ignition switch ON, check test switch circuit for short to ground.


STEP	ACTION	YES	NO
1	MIL ("CHECK ENGINE" Lamp) Power Supply Check 1) Turn ignition switch ON. Do other indicator/warning lights in combination meter come ON?	Go to Step 2.	"IG" fuse blown, main fuse blown, ignition switch malfunction, "B/W" circuit between "IG" fuse and combination meter or poor coupler connection at combination meter.
2	ECM (PCM) Power and Ground Circuit Check Does engine start?	Go to Step 3.	Go to TABLE A-4 ECM (PCM) POWER AND GROUND CIRCUIT CHECK. If engine is not cranked, go to DIAGNOSIS in SECTION 6G or 6G1.
3	MIL ("CHECK ENGINE" Lamp) Circuit Check 1) Turn ignition switch OFF and disconnect connectors from ECM (PCM). 2) Check for proper connection to ECM (PCM) at terminal A12 (A7). 3) If OK, then using service wire, ground terminal A12 (A7) in connector disconnected. Does MIL ("CHECK ENGINE" lamp) turn on at ignition switch ON?	Substitute a known-good ECM (PCM) and recheck.	Bulb burned out or "V/Y" wire circuit open.

**A-2 MALFUNCTION INDICATOR LAMP ("CHECK" ENGINE LAMP) CIRCUIT CHECK**


(MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) FLASHES AT IGNITION SWITCH ON)

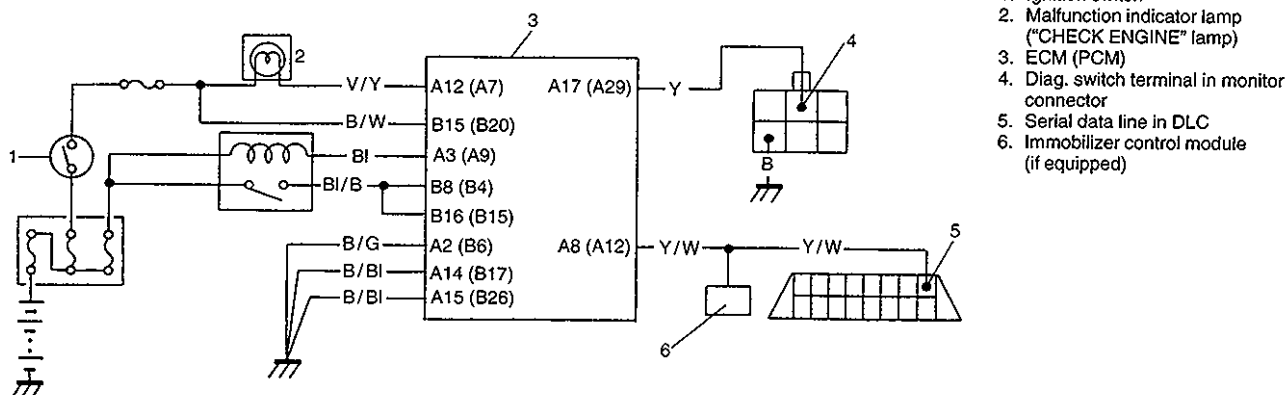

M/T Vehicle : ECM

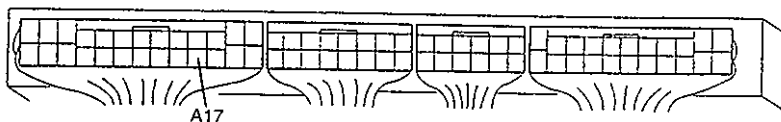


A/T Vehicle : (PCM)

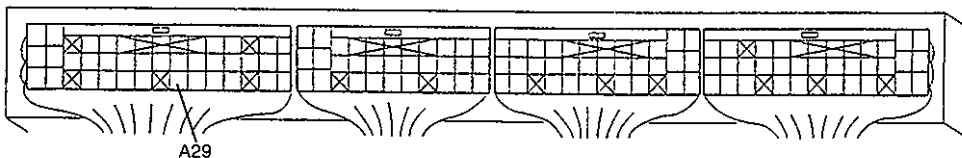


STEP	ACTION	YES	NO
1	"CHECK ENGINE" Lamp Flashing Pattern Check 1) Turn ignition switch ON. Does lamp flashing pattern indicate diagnostic trouble code?	Go to Step 2.	Go to "Diagnosis" in section 8G.
2	Diag. Switch Circuit Check Is diag. switch terminal connected to ground via service wire?	System is in good condition.	"Y" circuit shorted to ground. If circuit is OK substitute a known-good ECM (PCM) and recheck.

**A-3 MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) CIRCUIT CHECK**


(MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) DOES NOT FLASH OR JUST REMAINS ON EVEN WITH GROUNDING DIAGNOSIS SWITCH TERMINAL.

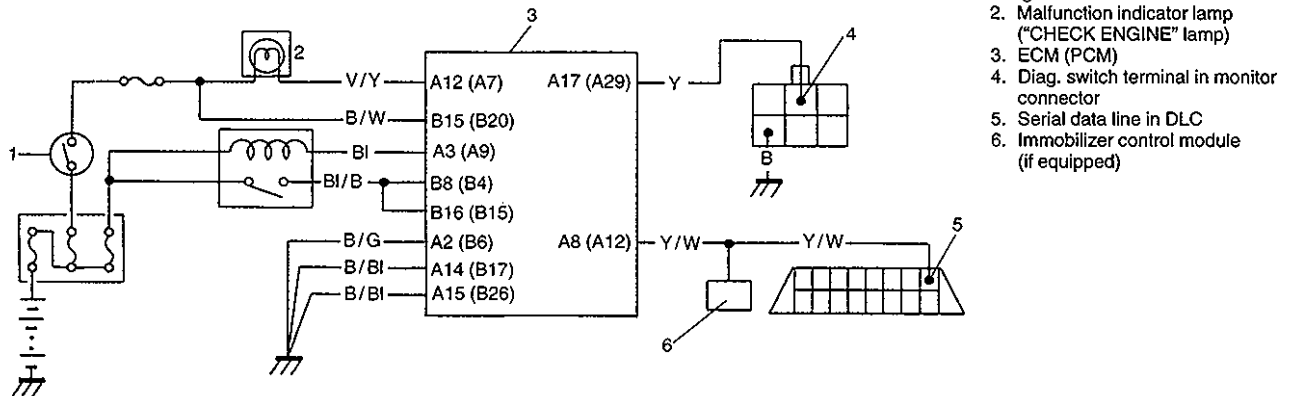

M/T Vehicle : ECM

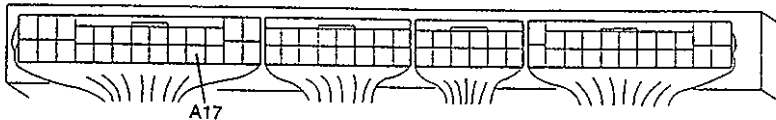


A/T Vehicle : (PCM)

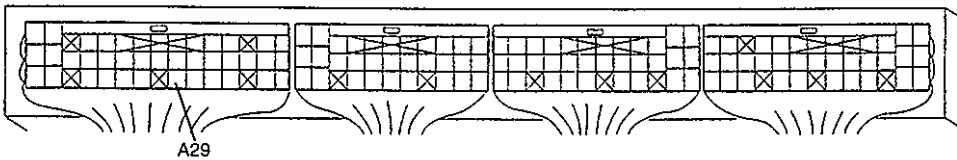

STEP	ACTION	YES	NO
1	MIL ("CHECK ENGINE" Lamp) Circuit Check 1) Turn ignition switch OFF and disconnect connectors from ECM (PCM). Does MIL ("CHECK ENGINE" lamp) turn ON at ignition switch ON?	"V/Y" circuit shorted to ground.	Go to Step 2.
2	ECM/PCM connection check 1) Turn ignition switch OFF. Is connector (A17 (A29) connection) connected to ECM/PCM properly?	Go to Step 3.	Poor connector connection.
3	Diag. switch Terminal Circuit Check 1) Connect connectors to ECM (PCM). 2) Using service wire, ground A17 (A29) terminal with connectors connected to ECM (PCM). 3) Turn ignition switch ON. Does MIL ("CHECK ENGINE" lamp) flash?	"Y" or "B" circuit open.	Substitute a known-good ECM (PCM) and recheck.


**A-4 ECM (PCM) POWER AND GROUND CIRCUIT CHECK**

(MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LIGHT) DOESN'T LIGHT AT IGNITION SWITCH ON AND ENGINE DOESN'T START THOUGH IT IS CRANKED UP.)

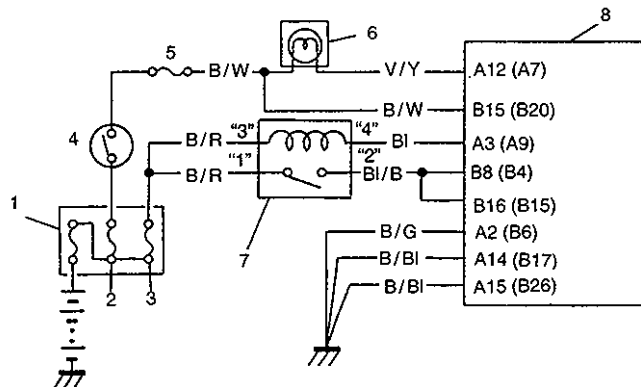


1. Main fuse box
2. "IG" fuse
3. "FI" fuse
4. Ignition switch
5. "IG" circuit fuse
6. Malfunction indicator lamp ("CHECK ENGINE" lamp)
7. Main relay
8. ECM (PCM)

M/T Vehicle : ECM

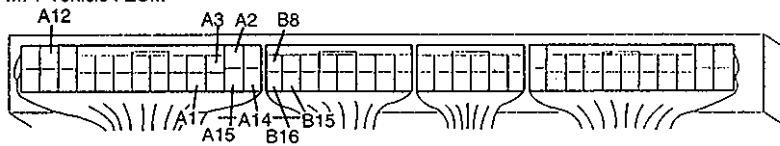

A/T Vehicle : (PCM)

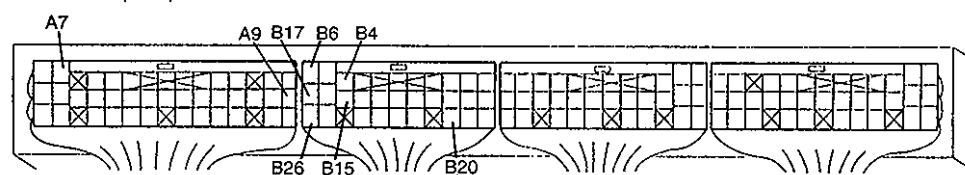


STEP	ACTION	YES	NO
1	<b>Main Relay Opening Sound Check</b> Is operating sound of main relay heard at ignition switch ON?	Go to Step 5.	Go to Step 2.
2	<b>Fuse Check</b> Is main "FI" fuse in good condition?	Go to Step 3.	Check for short in circuits connected to this fuse.
3	<b>Main Relay Check</b> 1) Turn OFF ignition switch and remove main relay. 2) Check for proper connection to main relay at terminal 3 and 4. 3) If OK, check main relay for resistance and operation referring to "Main Relay Inspection" in this section. Is check result satisfactory?	Go to Step 4.	Replace main relay.
4	<b>ECM (PCM) Power Circuit Check</b> 1) Turn OFF ignition switch, disconnect connectors from ECM (PCM) and install main relay. 2) Check for proper connection to ECM (PCM) at terminals B15, A3, B8 and B16 (B20, A9, B4 and B15). 3) If OK, then measure voltage between terminal B15 (B20) and ground, A3 (A9) and ground with ignition switch ON. Is each voltage 10 – 14 V?	Go to Step 5.	"B/W", "BI" or "B/R" circuit open.


STEP	ACTION	YES	NO
5	ECM (PCM) Power Circuit Check 1) Using service wire, ground terminal A3 (A9) and measure voltage between terminal B8 (B4) and ground at ignition switch ON. Is it 10 – 14 V?	Check ground circuits “B/G” and “B/BI” for open. If OK, then substitute a known-good ECM (PCM) and recheck.	Go to Step 6.
6	Is operating sound of main relay heard in Step 1?	Go to Step 7.	“B/R” or “BI/B” wire open.
7	Main Relay Check 1) Check main relay according to procedure in Step 3. Is main relay in good condition?	“B/R” or “BI/B” wire open.	Replace main relay.

**CODE NO.13 HEATED OXYGEN  
SENSOR CIRCUIT**(OXYGEN SENSOR OUTPUT  
VOLTAGE LOW)**NOTE:**


- Before diagnosing trouble according to flow table given below, check to make sure that following system and parts other than electronic control system are in good condition.
  - Air cleaner (clogged)
  - Vacuum leaks (air inhaling)
  - Spark plugs (contamination, gap)
  - Ignition coil assembly
  - Ignition timing
  - Engine compression
  - Any other system and parts which might affect A/F mixture or combustion.
- If code No.13 and another code No. are indicated together, the later has priority. Therefore, check and correct what is represented by that code No. first and then proceed to the following check.
- Be sure to use a voltmeter with high impedance ( $M\Omega/V$  minimum) or digital type voltmeter for accurate measurement.

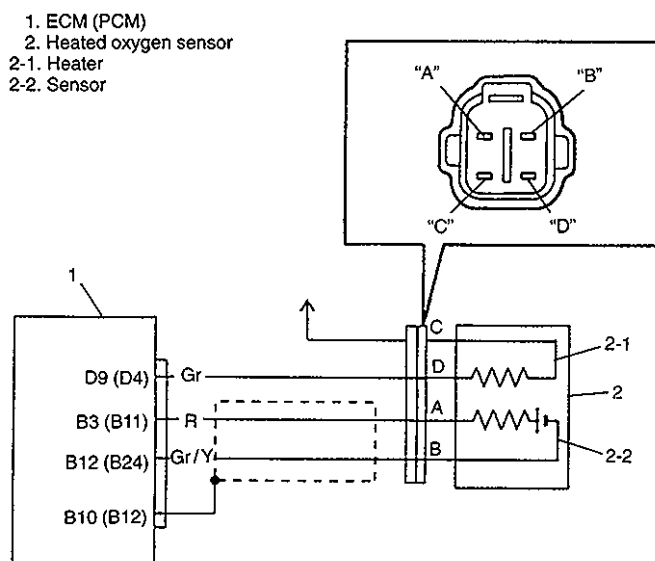

M/T Vehicle : ECM

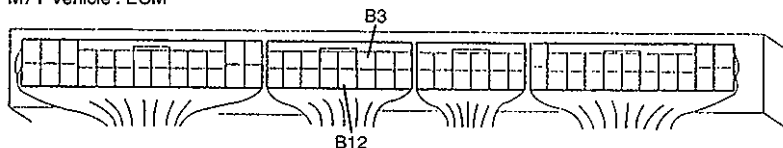

A/T Vehicle : (PCM)

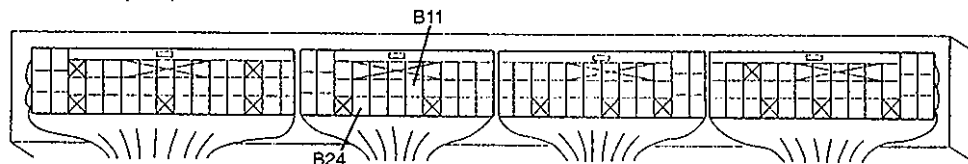

STEP	ACTION	YES	NO
1	1) Remove ECM (PCM) cover. 2) Warm up engine to normal operating temperature. 3) Connect voltmeter between B3 (B11) terminal of ECM (PCM) coupler and body ground. 4) Maintain engine speed at 2000 rpm and after 60 seconds, check voltmeter. Does the voltage deflect between above and below 0.45 V repeatedly?	Heated oxygen sensor and its circuit (closed loop system, A/F ratio feed back system) are in good condition. Intermittent trouble or faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in SECTION 0A.	Go to Step 2.
2	Does the voltage remain unchanged at 0.45 V above?	"R" circuit shorted to power circuit or rich A/F mixture. If circuit is OK, check MAF sensor, ECT sensor, fuel pressure, injectors and their circuit. If all above are OK, check ECM (PCM) and its circuit, referring to p.6E1-65.	Go to Step 3 on the next page.

STEP	ACTION	YES	NO
3	1) Maintain engine speed at 2000 rpm for 60 seconds. 2) Check voltmeter while repeating racing engine. Does it indicate 0.45 V or more even once?	Poor B3 (B11) connection or lean A/F mixture. If connection is OK, check MAF sensor, ECT sensor, fuel pressure, injectors and their circuit. If all above are OK, check ECM (PCM) and its circuit, referring to p.6E1-65.	"R" circuit open/short, "Gr/Y" circuit open or oxygen sensor malfunction. If wire and connection are OK, replace oxygen sensor and recheck.

**NOTE:**


Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.




**CODE NO.14 ECT SENSOR CIRCUIT**

(LOW TEMPERATURE INDICATED, SIGNAL VOLTAGE HIGH)


1. ECM (PCM)
2. ECT sensor and gauge
- 2-1. ECT sensor
- 2-2. ECT gauge
3. To combination meter

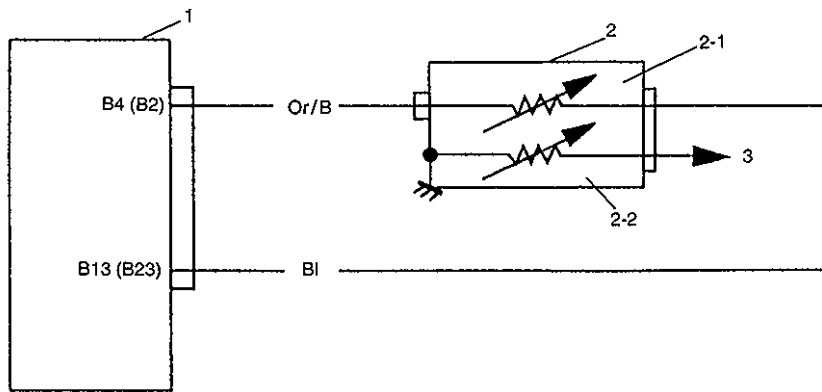

M/T Vehicle : ECM

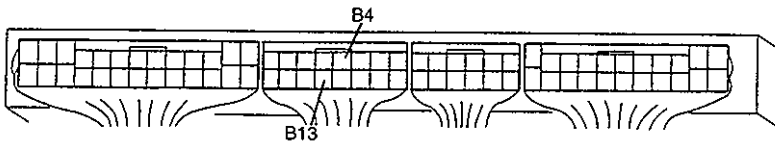

A/T Vehicle : (PCM)

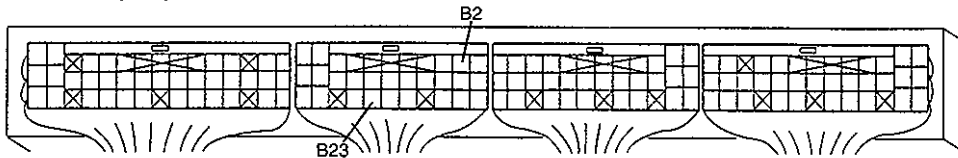

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect ECT sensor coupler. 2) With ignition switch ON, check voltage at "Or/B" wire terminal of ECT sensor coupler. Is it about 4 – 5 V?	Go to Step 2.	"Or/B" wire open, poor B4 (B2) connection or "Or/B" wire shorted to power circuit. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
2	1) Using service wire, connect "Or/B" and "BI" wire terminal of ECT sensor coupler. 2) Check voltage at "Or/B" wire terminal of ECT sensor coupler with ignition switch ON. Is it below 0.15 V?	Go to Step 3.	"BI" wire open or poor B13 (B23) connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
3	1) Check ECT sensor referring to "ECT Sensor Inspection" in this section. Is check result as specified?	Poor ECT sensor-to-coupler connection. If connections are OK, intermittent trouble or faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in Section 0A.	Faulty ECT sensor.

Fig. for STEP 1

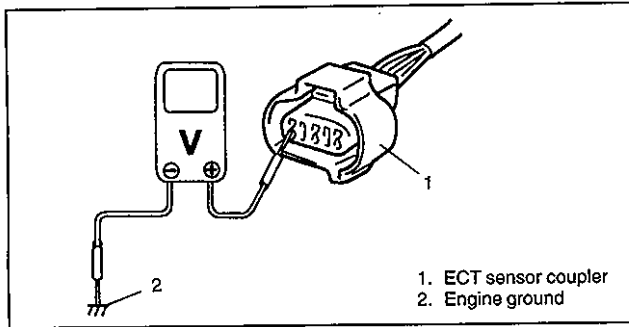
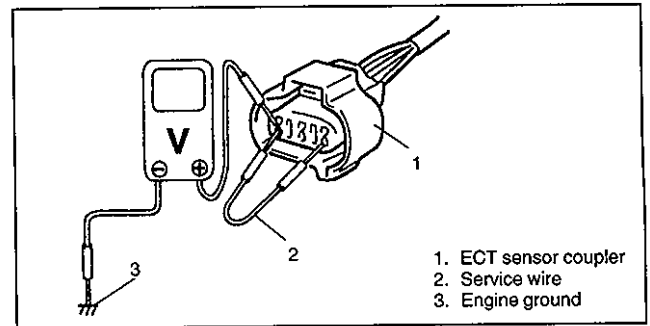
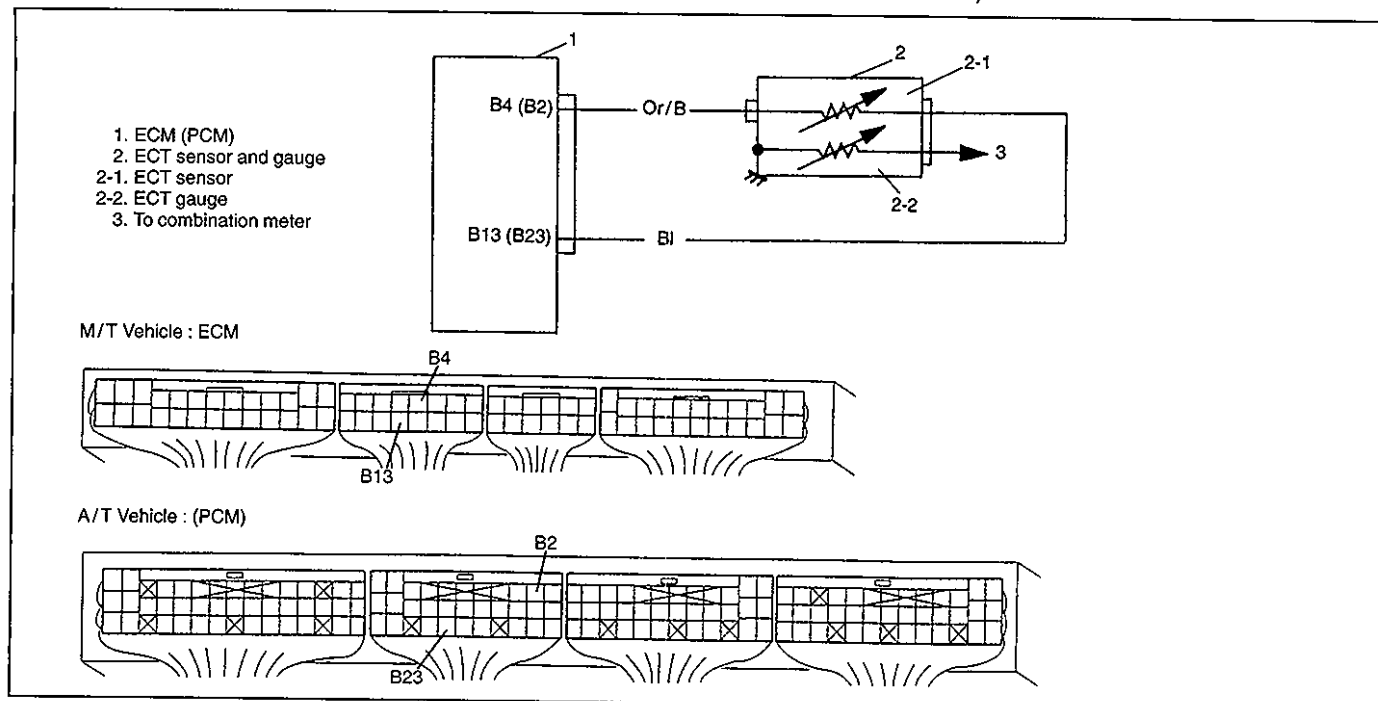


Fig. for STEP 2


**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.

**CODE NO.15 ECT SENSOR CIRCUIT**(HIGH TEMPERATURE INDICATED, SIGNAL  
CIRCUIT VOLTAGE LOW)

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect ECT sensor coupler. 2) With ignition switch ON, check voltage between "Or/B" wire terminal of ECT sensor coupler and ground. Is it about 4 – 5 V?	Go to Step 2.	"Or/B" wire shorted to "BI" wire or ground circuit. If wire is OK, substitute a known-good ECM (PCM) and recheck.
2	1) Check ECT sensor, referring to "ECT Sensor Inspection" in this section. Is check result as specified?	Poor ECT sensor coupler connection. If connection is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	Faulty ECT sensor.


Fig. for STEP 1

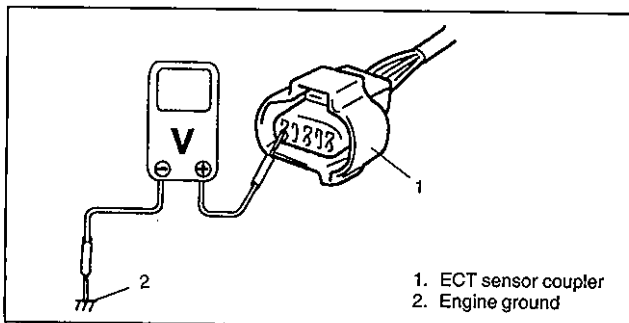**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.


**CODE NO.21 TP SENSOR CIRCUIT**

(SIGNAL VOLTAGE HIGH)

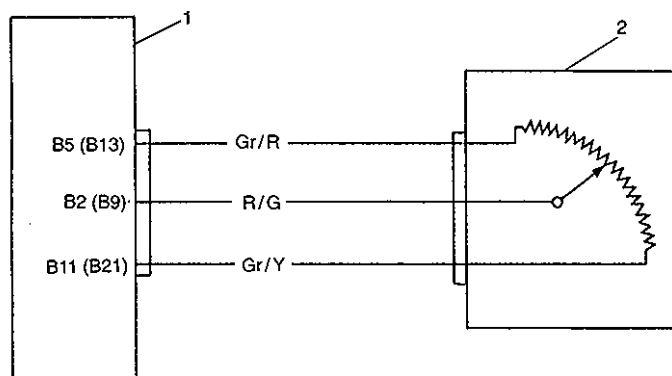


1. ECM (PCM)  
2. TP sensor

M/T Vehicle : ECM

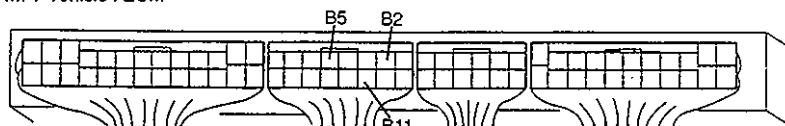

A/T Vehicle : (PCM)

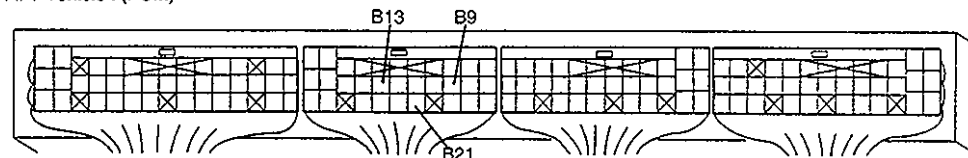


STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect TP sensor coupler. 2) Check voltage between "Gr/R" wire terminal and "Gr/Y" wire terminal of disconnected TP sensor coupler with ignition switch ON. Is it about 4 – 5 V?	Go to Step 2.	"Gr/Y" wire open, poor B11 (B21) connections, or "Gr/R" wire shorted to power circuit.
2	1) Check TP sensor referring to "TP Sensor Inspection" in this section. Is check result as specified?	"R/G" wire shorted to power circuit. If wire is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	TP sensor malfunction.

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.


**CODE NO.22 TP SENSOR CIRCUIT**

(SIGNAL VOLTAGE LOW)

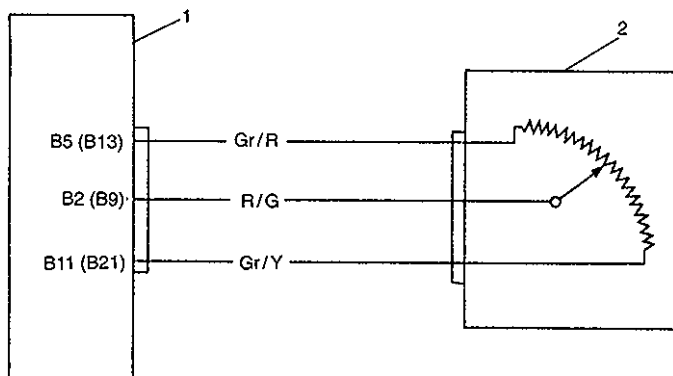


1. ECM (PCM)  
2. TP sensor

M/T Vehicle : ECM

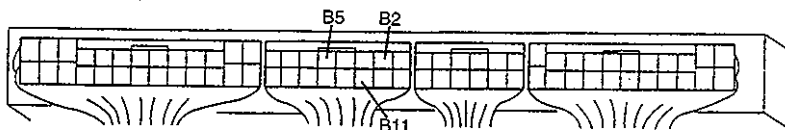


A/T Vehicle : (PCM)

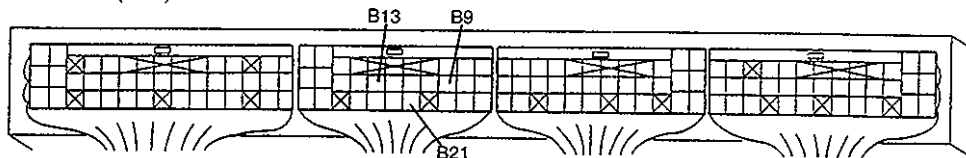

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect TP sensor coupler. 2) Check voltage between "Gr/R" wire terminal and "Gr/Y" wire terminal of disconnected TP sensor coupler with ignition switch ON. Is it about 4 – 5 V?	Go to Step 2.	"Gr/R" wire open, "Gr/R" wire shorted to ground circuit or poor B5 (B13) connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
2	1) Check TP sensor referring to "TP Sensor Inspection" in this section. Is check result as specified?	"R/G" wire open/shorted to ground or poor B2 (B9) connection. If wire and connection are OK, intermittent trouble or faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in section 0A.	Faulty TP sensor.


**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.

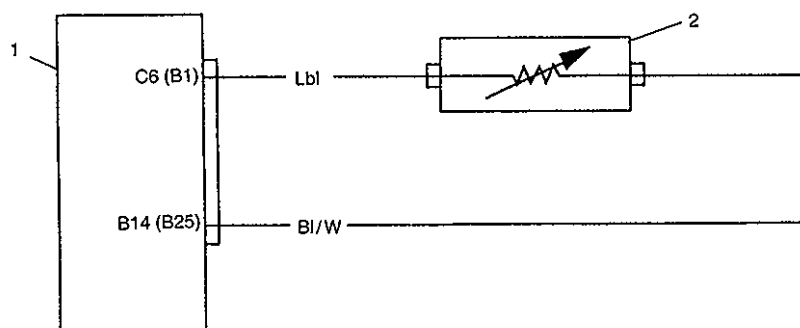
**CODE NO.23 IAT SENSOR CIRCUIT**(LOW TEMPERATURE INDICATED, SIGNAL  
VOLTAGE HIGH)

1. ECM (PCM)  
2. IAT sensor

M/T Vehicle : ECM

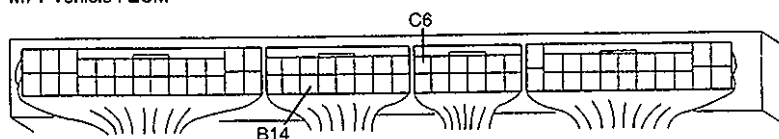

A/T Vehicle : (PCM)

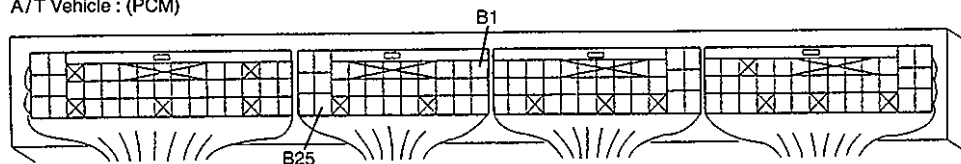

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect IAT sensor coupler. 2) With ignition switch ON, check voltage between "Lb1" wire terminal of IAT sensor coupler and ground. Is it about 4 – 5 V?	Go to Step 2.	"Lb1" wire open, poor C6 (B1) connection or "Lb1" wire shorted to power circuit. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
2	1) Using service wire, connect two terminals in IAT sensor coupler. 2) Check voltage between "Lb1" wire terminal of IAT sensor coupler and ground with ignition switch ON. Is it below 0.15 V?	Go to Step 3.	"BI/W" wire open or poor B14 (B25) connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
3	1) Check IAT sensor referring to "IAT Sensor Inspection" in this section. Is check result as specified?	Poor IAT sensor coupler connection. If connections are OK, intermittent trouble of faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in section 0A.	Faulty IAT sensor.

Fig. for STEP 1


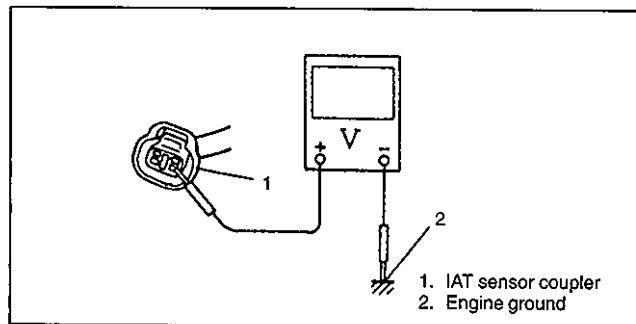


Fig. for STEP 2

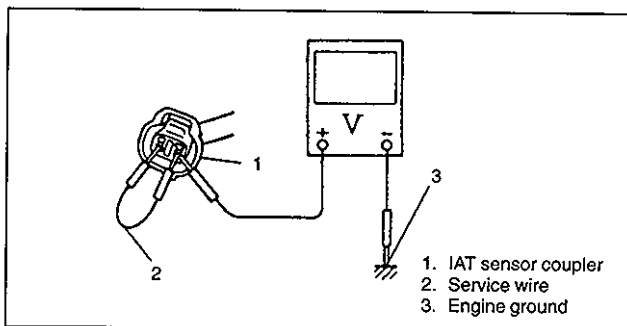


**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.


**CODE NO.25 IAT SENSOR CIRCUIT**

(HIGH TEMPERATURE INDICATED, SIGNAL VOLTAGE LOW)

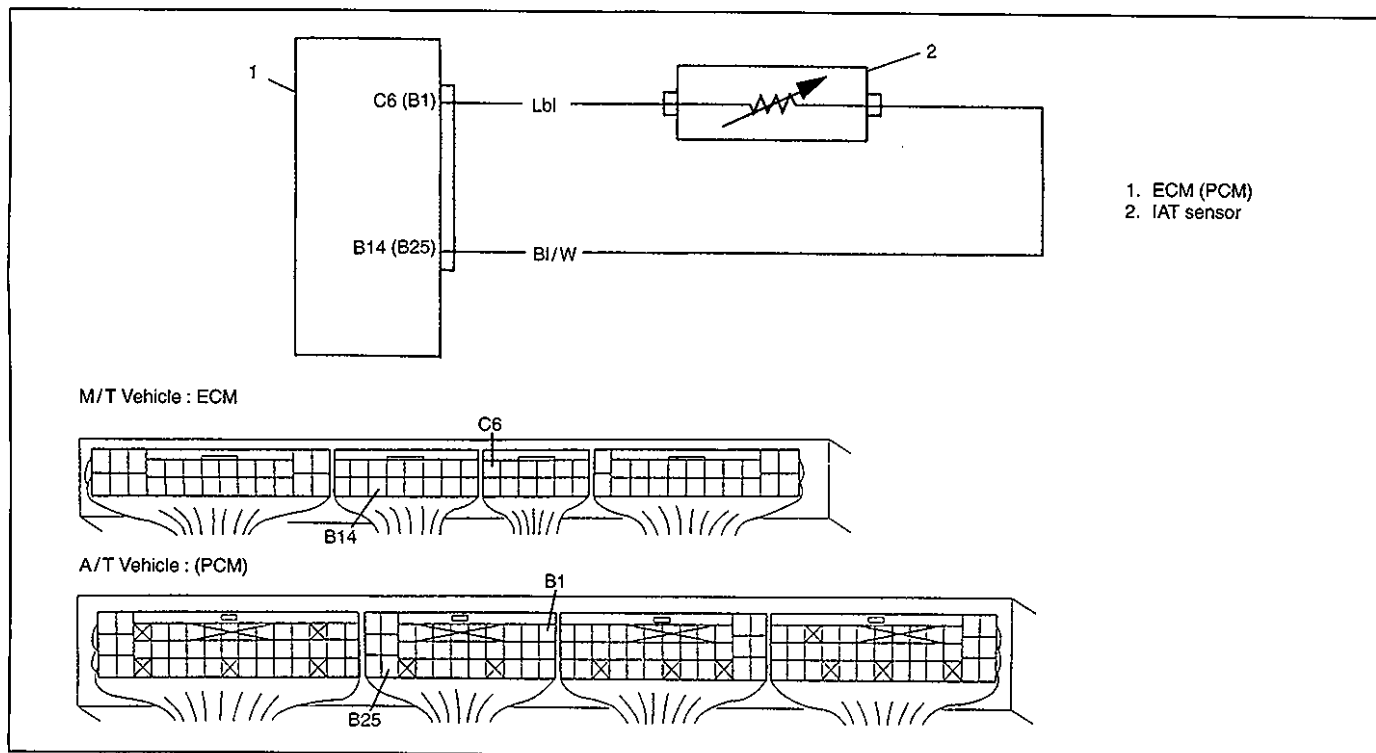

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect IAT sensor coupler. 2) With ignition switch ON, is voltage applied to "Lb1" wire terminal of IAT sensor coupler 4 V or more?	Go to Step 2.	"Lb1" wire shorted to "BI/W" wire or ground circuit. If wire is OK, substitute a known-good ECM (PCM) and recheck.
2	1) Check IAT sensor referring to "IAT Sensor Inspection" in this section. Is check result as specified?	Poor IAT sensor coupler connection. If connection is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	Faulty IAT sensor.

Fig. for STEP 1

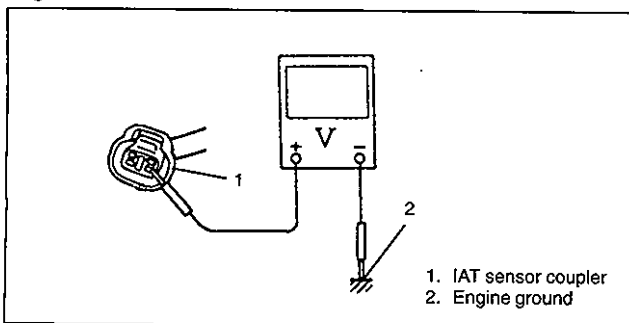
**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure referring to p.6E1-53 to confirm that the trouble has been corrected.




**CODE NO.24 VSS CIRCUIT**


(VEHICLE SPEED SIGNAL NOT INPUTTED ALTHOUGH FUEL IS KEPT CUT FOR LONGER THAN 5 SECONDS)

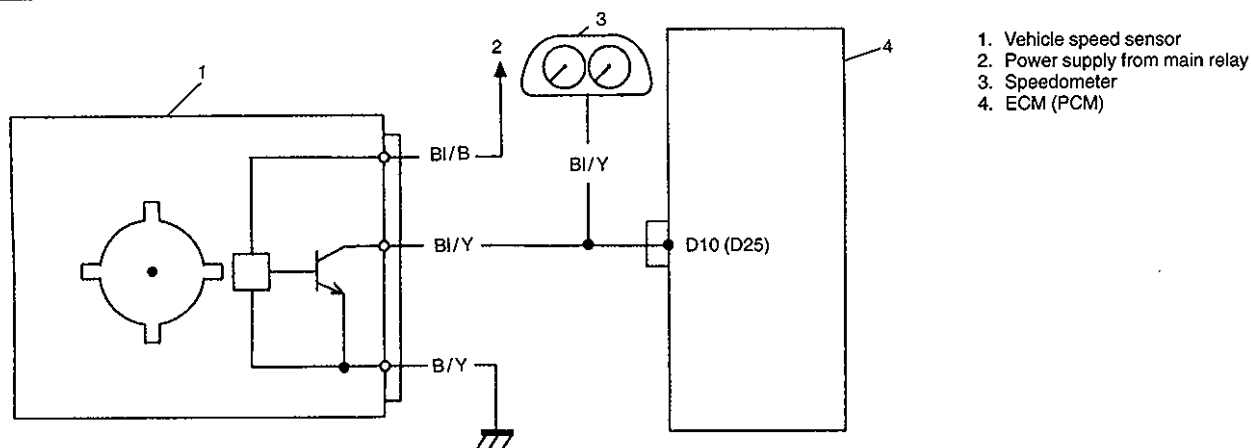

M/T Vehicle : ECM

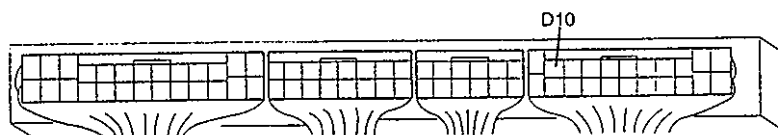

A/T Vehicle : (PCM)

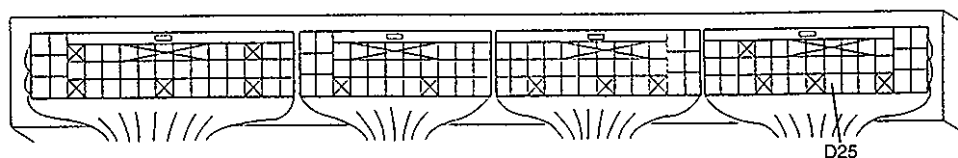

STEP	ACTION	YES	NO
1	Does speedometer indicate vehicle speed?	Faulty "BI/Y" wire or poor "D10" ("D25") connection. If wire and connection are OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	Go to Step 2.
2	1) With ignition switch OFF, disconnect VSS coupler. 2) With ignition switch ON, check voltage between "BI/B" wire terminal and "B/Y" wire terminal of VSS coupler. Is voltage about 10 – 14 V?	Go to Step 3.	"BI/B" or "B/Y" wire open or short.

STEP	ACTION	YES	NO
3	1) Under the same condition in Step 2, check voltage between "BI/Y" and "B/Y" terminals of VSS coupler. Is voltage 4 V or more?	Go to Step 4.	Go to Step 5.
4	1) Remove VSS referring to "Transfer" section. 2) Check VSS drive and driven gears for damage and excessive wear. Is it in good condition?	Poor VSS connection or VSS malfunction. If connection is OK, substitute a known-good VSS and recheck.	Malfunction of VSS drive or driven gear.
5	1) Remove combination meter from instrument panel referring to section 8C. 2) Turn ignition switch ON, check voltage between "BI/Y" and "B/Y" terminals of VSS coupler. Is voltage about 4 – 5 V?	Speedometer malfunction.	"BI/Y" wire open/short or faulty ECM (PCM). If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.

Fig. for Step 2




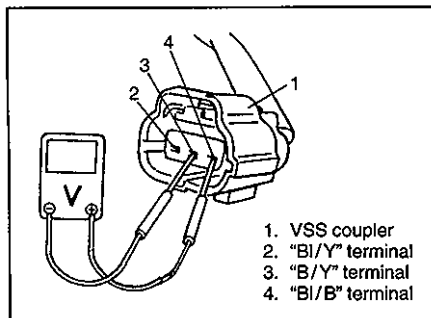


Fig. for Step 4

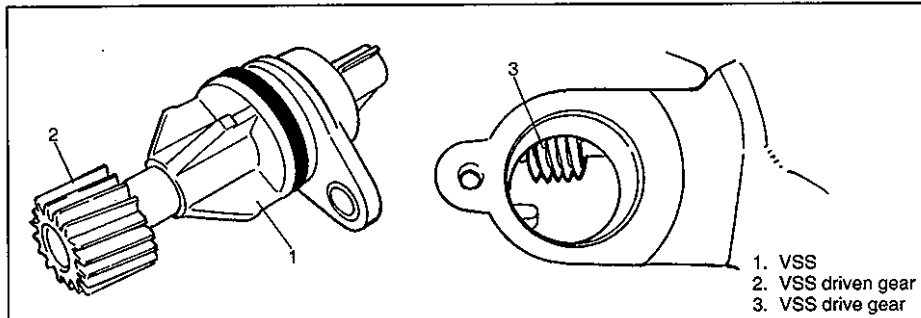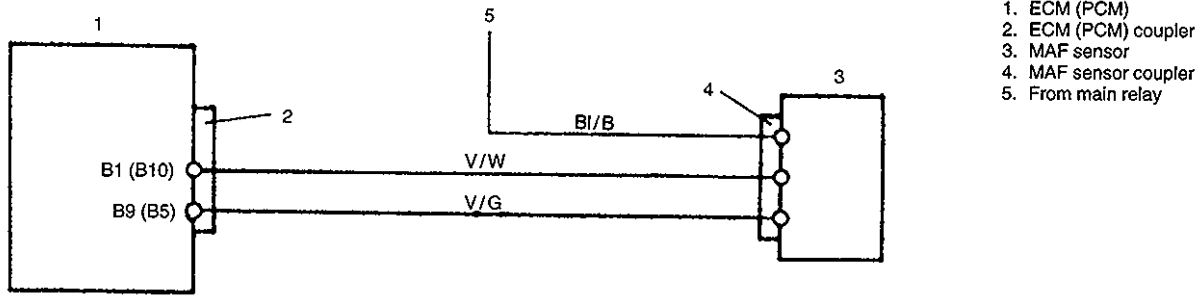


**CODE NO.33 MAF (MASS AIR FLOW)  
SENSOR CIRCUIT**(LARGE SIGNAL CURRENT FLOW, SIGNAL  
VOLTAGE HIGH)

M/T Vehicle : ECM

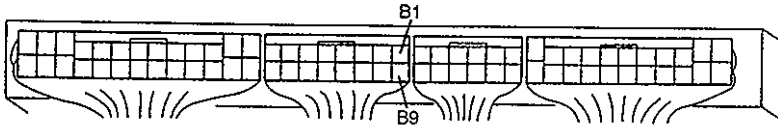


A/T Vehicle : (PCM)

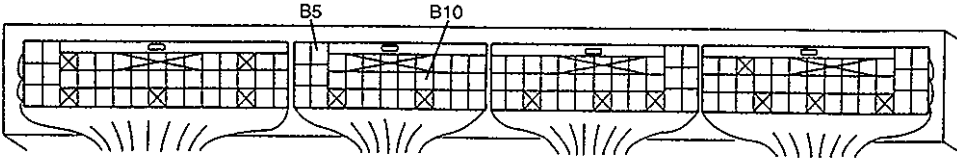

STEP	ACTION	YES	NO
1	1) Remove ECM (PCM) cover. 2) With ignition switch ON, check voltage between "B1" ("B10") terminal and "B9" ("B5") terminal. Is voltage 1.0 – 1.6 V?	Go to Step 2.	"V/G" wire open, poor B9 (B5) connection, "V/W" wire shorted to power circuit or faulty MAF sensor. If wires are OK, substitute a known-good MAF sensor and recheck.
2	1) Start engine and check voltage between "B1" ("B10") terminal and "B9" ("B5") terminal. Does voltage rise within 5 V range when engine speed is increased?	Intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	Substitute a known-good MAF sensor and recheck.


**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.

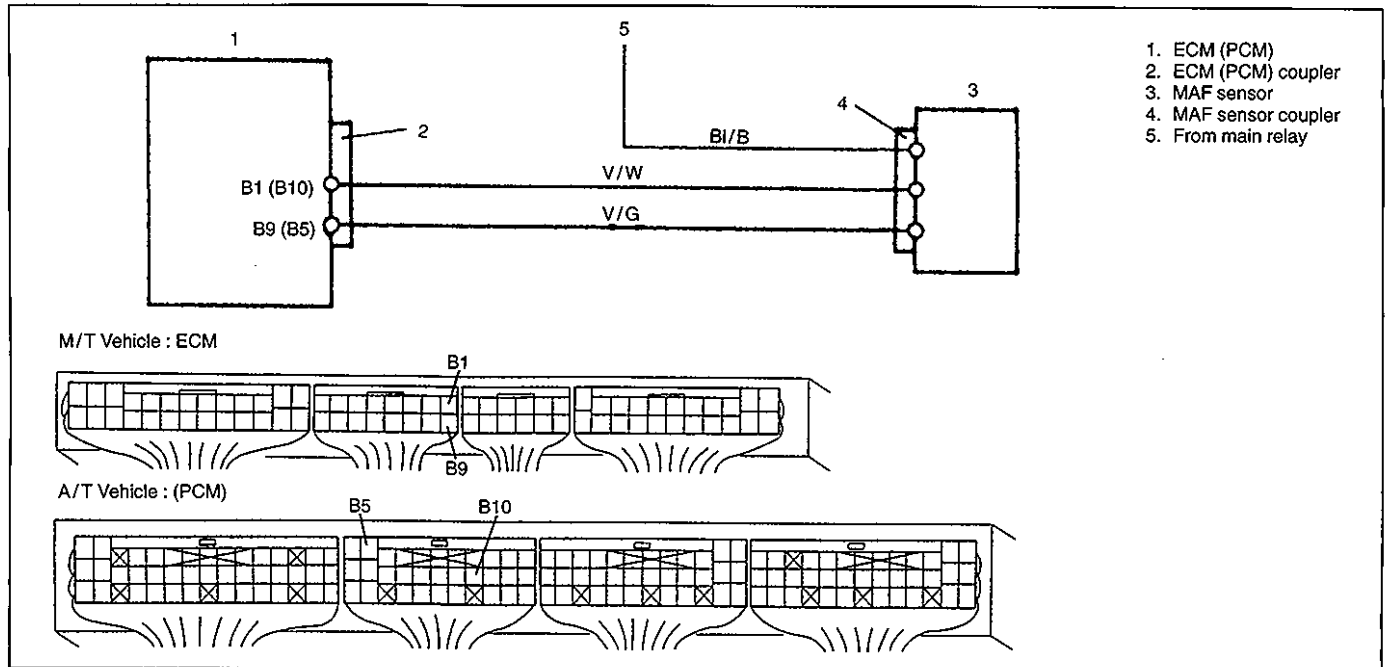**CODE NO.34 MAF(MASS AIR FLOW)  
SENSOR CIRCUIT**(SMALL SIGNAL CURRENT FLOW, SIGNAL  
VOLTAGE LOW)

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect MAF sensor coupler. 2) With ignition switch ON, check voltage between "BI/B" terminal of MAF sensor coupler and ground. Is voltage 10 – 14 V?	Go to Step 2.	"BI/B" wire open or poor connection.
2	1) With ignition switch OFF, connect MAF sensor coupler. 2) Remove ECM (PCM) cover. 3) With ignition switch ON, check voltage between "B1" ("B10") terminal and "B9" ("B5") terminal of ECM (PCM) coupler. Is voltage 1.0 – 1.6 V?	Poor "B1" ("B10") connection. If connection is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	"V/W" wire open/short, poor MAF sensor coupler connection or faulty MAF sensor. If wire and connection are OK, substitute a known-good MAF sensor and recheck.


Fig. for STEP 1

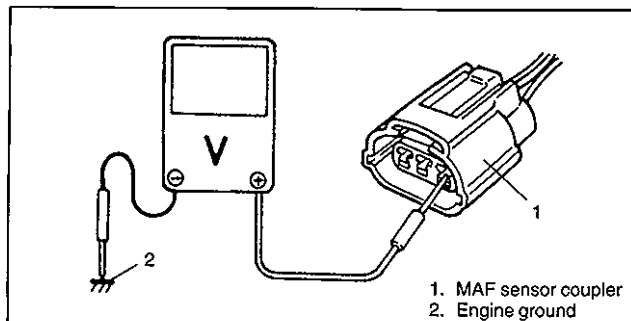**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.


# CODE NO.42 CMP SENSOR (CAMSHAFT POSITION SENSOR) CIRCUIT (SENSOR SIGNAL NOT INPUTTED FOR 3 SECONDS AT ENGINE CRANKING) FOR G16 ENGINE

## G16 ENGINE

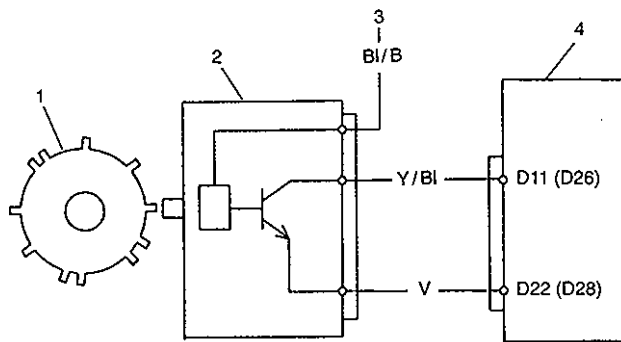


1. Signal rotor on camshaft
2. CMP sensor
3. To main relay
4. ECM (PCM)

M/T Vehicle : ECM

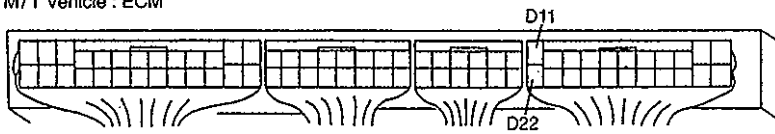

A/T Vehicle : (PCM)

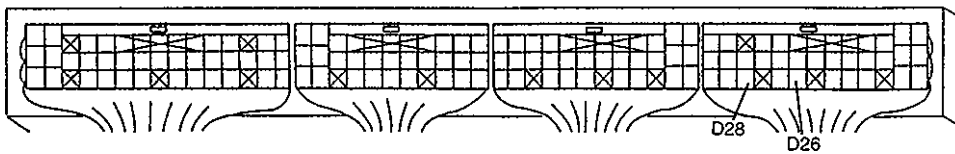

STEP	ACTION	YES	NO
1	Is engine cranked?	Go to Step 2.	Go to section 6G or 6G1.
2	Check CMP Sensor and connector for proper installation. Is CMP sensor installed properly and connector connected securely?	Go to Step 3.	Correct.
3	Check Wire Harness and Connection. 1) Disconnect connector from CMP sensor. 2) Check for proper connection to CMP sensor at each terminal. 3) If OK, turn ignition switch ON and check for voltage between "BI/B" and "V" terminals of sensor connector disconnected. Is voltage 10 – 14 V?	Go to Step 4.	"BI/B" or "V" wire open, short or poor connection.
4	Check for voltage between "Y/BI" and "V" terminals of sensor connector disconnected. Is voltage 4 – 5 V?	Go to Step 5.	"Y/BI" wire open, short or poor connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.

STEP	ACTION	YES	NO
5	<p>Check CMP Sensor for Operation.</p> <ol style="list-style-type: none"> <li>1) Remove CMP sensor from sensor case.</li> <li>2) Remove metal particles on end face of CMP sensor, if any.</li> <li>3) Connect connector to CMP sensor. Disconnect connectors from ignition coil assemblies and fuel injectors.</li> <li>4) Turn ignition switch ON.</li> <li>5) Check for voltage at terminal D11 (D26) of connector connected to ECM (PCM) by passing magnetic substance (iron) while keeping approximately 1 mm (0.03 in.) gap with respect to end face of CMP sensor.</li> </ol> <p>Does voltage vary from low (0 – 1 V) to high (4 – 6 V) or from high to low?</p>	Go to Step 6.	Replace CMP sensor.
6	<p>Check signal rotor for the following, using mirror.</p> <ul style="list-style-type: none"> <li>• Damage</li> <li>• No foreign material attached</li> </ul> <p>Is it in good condition?</p>	Intermittent trouble or faulty ECM (PCM). Check for intermittent referring to "Intermittent and Poor Connection" in section 0A.	Clean rotor teeth or replace camshaft.

Fig. for Step 3

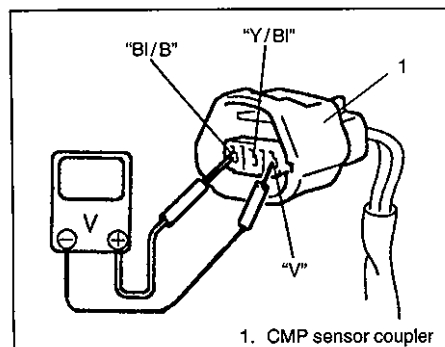


Fig. for Step 5

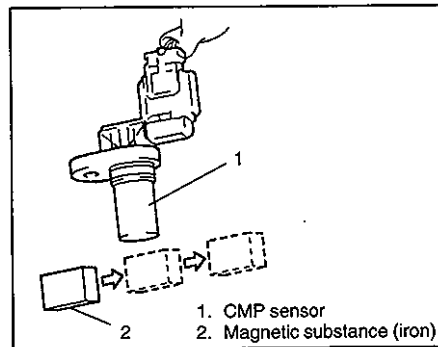
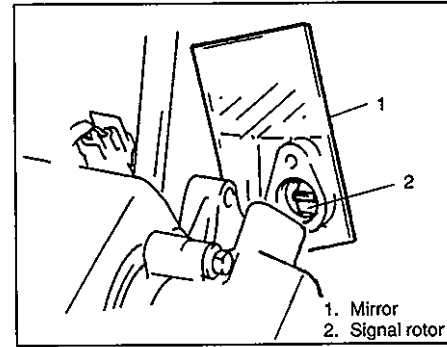



Fig. for Step 6

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.

# CODE NO.42 CMP SENSOR (CAMSHAFT POSITION SENSOR) CIRCUIT FOR J20 ENGINE

(SENSOR SIGNAL NOT INPUTTED FOR 3 SECONDS AT ENGINE CRANKING)

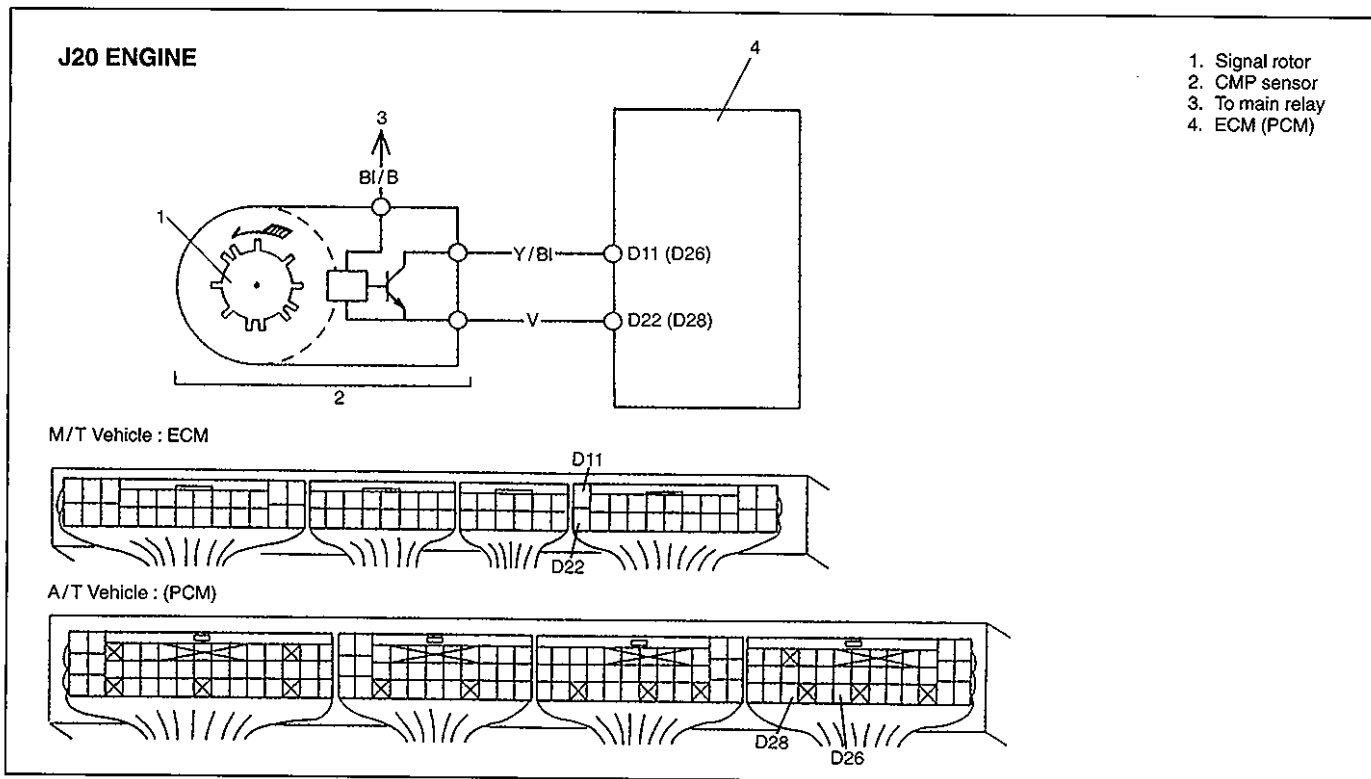

STEP	ACTION	YES	NO
1	Is engine cranked?	Go to Step 2.	Go to section 6G or 6G1.
2	Check CMP Sensor and connector for proper installation. Is CMP sensor installed properly and connector connected securely?	Go to Step 3.	Correct.
3	Check Wire Harness and Connection. 1) Disconnect connector from CMP sensor. 2) Check for proper connection to CMP sensor at each terminal. 3) If OK, turn ignition switch ON and check for voltage between "BI/B" and "V" terminals of sensor connector disconnected. Is voltage 10 – 14 V?	Go to Step 4.	"BI/B" or "V" wire open, short or poor connection.
4	Check for voltage between "Y/BI" and "V" terminals of sensor connector disconnected. Is voltage 4 – 5 V?	Go to Step 5.	"Y/BI" wire open, short or poor connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.

STEP	ACTION	YES	NO
5	Check CMP Sensor for Operation. 1) Remove CMP sensor. 2) Connect connector to CMP sensor. Disconnect connectors from ignition coil assemblies and fuel injectors. 3) Turn ignition switch ON. 4) Check for voltage between D11 (D26) and D22 (D28) of connector connected to ECM (PCM) by rotating CMP sensor coupling. Does voltage vary from low (0 – 1 V) to high (4 – 6 V) or from high to low?	Go to Step 6.	Replace CMP sensor.
6	Check Signal Rotor. 1) Remove rotor cover from CMP sensor. 2) Check signal rotor for the following. <ul style="list-style-type: none"> <li>• Damage</li> <li>• No foreign material attached</li> </ul> Is it in good condition?	Intermittent trouble or faulty ECM (PCM). Check for intermittent referring to "Intermittent and Poor Connection" in section 0A.	Clean rotor teeth or replace CMP sensor.

Fig. for Step 2

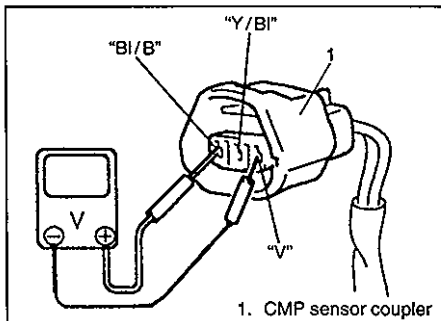


Fig. for Step 5


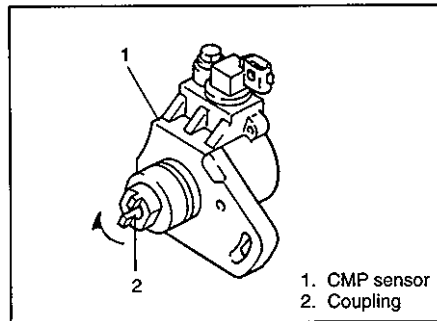


Fig. for Step 6


**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.

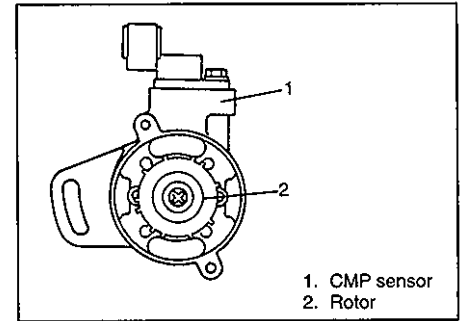

**CODE NO.51 EGR VALVE (IF EQUIPPED)**

(STEPPER MOTOR OR ITS CIRCUIT OPEN OR SHORT)

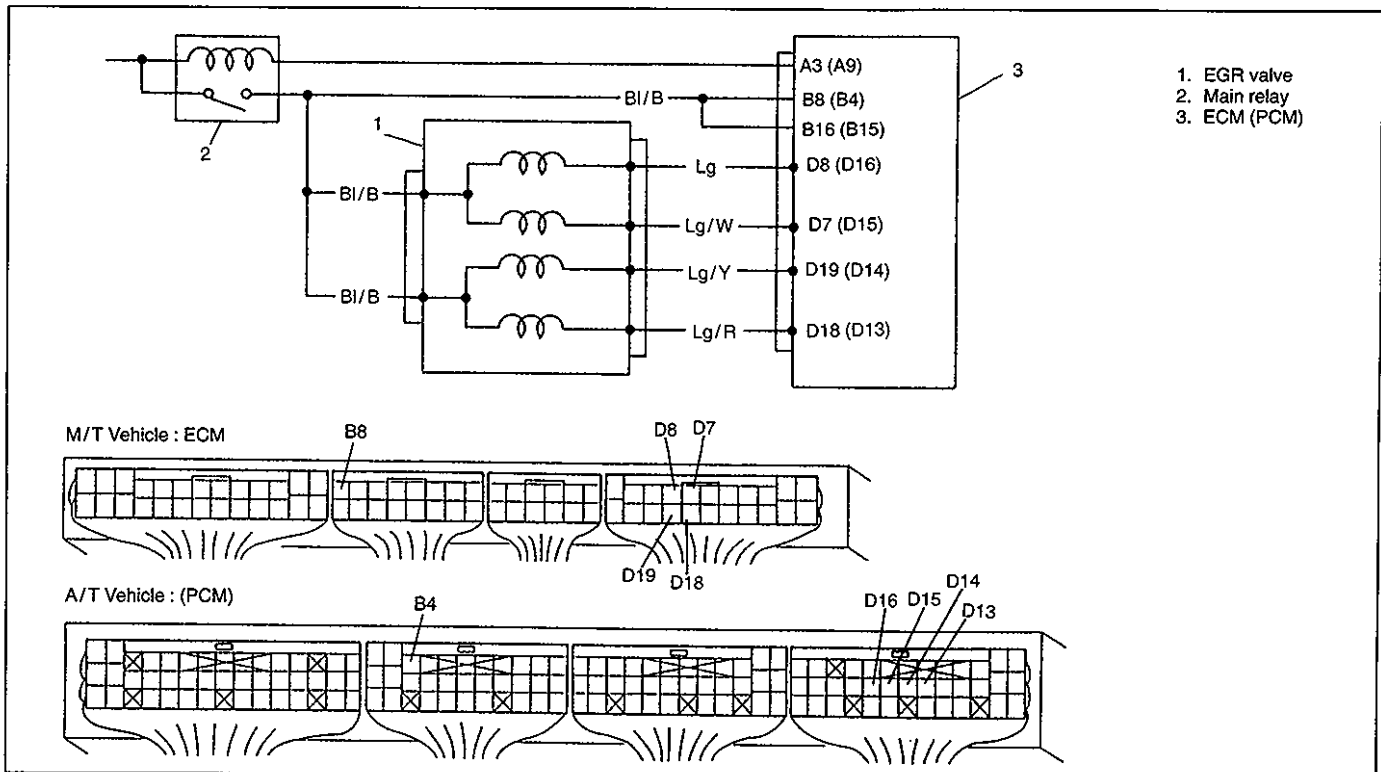

STEP	ACTION	YES	NO										
1	<p>EGR Valve Check</p> <p>1) With ignition switch OFF, disconnect connector from EGR valve.</p> <p>2) Check for proper connection to EGR valve at each terminal.</p> <p>3) If OK, check EGR valve for resistance referring to "EGR Valve Inspection" in this section.</p> <p>Is check result as specified?</p>	Go to Step 2.	EGR valve malfunction.										
2	<p>Wire Harness Check</p> <p>1) Connect connector to EGR valve.</p> <p>2) Remove ECM/PCM cover and disconnect connector from ECM (PCM).</p> <p>3) Check for proper connection to ECM (PCM) at system related terminals.</p> <p>4) If OK, check for resistance between following terminals of ECM (PCM) connector disconnected.</p> <table><tr><td>D8 (D16) – B8 (B4)</td><td rowspan="4">20 – 24 Ω at 20°C, 68°F</td></tr><tr><td>D7 (D15) – B8 (B4)</td></tr><tr><td>D19 (D14) – B8 (B4)</td></tr><tr><td>D18 (D13) – B8 (B4)</td></tr></table> <table><tr><td>D8 (D16) – ground</td><td rowspan="4">Infinity (∞)</td></tr><tr><td>D7 (D15) – ground</td></tr><tr><td>D19 (D14) – ground</td></tr><tr><td>D18 (D13) – ground</td></tr></table> <p>Is check result as specified?</p>	D8 (D16) – B8 (B4)	20 – 24 Ω at 20°C, 68°F	D7 (D15) – B8 (B4)	D19 (D14) – B8 (B4)	D18 (D13) – B8 (B4)	D8 (D16) – ground	Infinity (∞)	D7 (D15) – ground	D19 (D14) – ground	D18 (D13) – ground	Intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	"BI/B", "Lg", "Lg/W" "Lg/Y" or "Lg/R" circuit open or shorted to ground.
D8 (D16) – B8 (B4)	20 – 24 Ω at 20°C, 68°F												
D7 (D15) – B8 (B4)													
D19 (D14) – B8 (B4)													
D18 (D13) – B8 (B4)													
D8 (D16) – ground	Infinity (∞)												
D7 (D15) – ground													
D19 (D14) – ground													
D18 (D13) – ground													

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E1-53 to confirm that the trouble has been corrected.

## DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

### WARNING:

- When performing a road test, select a place where there is not traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

- 1) Clear DTC stored in ECM memory referring to "DTC Clearance" in this section.
- 2) Perform DTC confirmation test under the following conditions.
- 3) Check DTC referring "DTC Check" in this section.


### Test Condition for Code No.14, 15, 21, 22, 23, 25, 33, 34, 51

Turn ignition switch ON for 8 seconds or more.

### Test Condition for Code No.42


Crank engine for 3 sec.

### Driving Test Condition for Code No.24

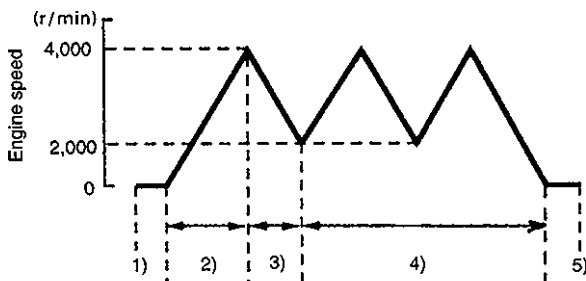

- 1) Start engine and warm up engine to normal operating temperature.
- 2) Increase engine speed to 4,000 r/min. in 3rd gear in case of M/T model and in "2" range in case of A/T model.
- 3) Release accelerator pedal and with engine brake applied, keep vehicle coasting for 7 to 10 seconds till engine speed reaches 2,000 r/min.
- 4) Repeat above steps 2) and 3) 3 times or more.
- 5) Stop vehicle.


### Driving Test Condition for Code No.13

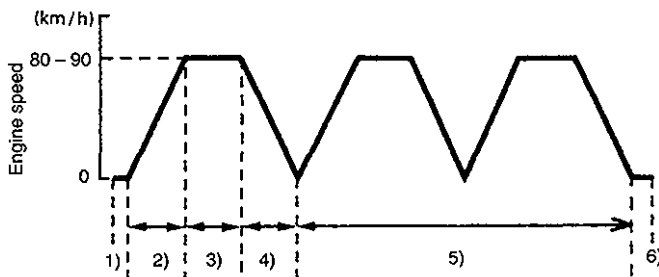

- 1) Start engine and warm up engine to normal operating temperature.
- 2) Increase vehicle speed to 50 to 55 mile/h (80 – 90 km/h) in 5th gear of M/T or in 4th of "D" range of A/T.
- 3) Keep driving at above vehicle speed for 30 to 40 seconds.
- 4) Release accelerator pedal and with engine brake applied, keep vehicle coasting for 15 to 20 seconds.
- 5) Repeat above steps 2) to 4) 3 times or more.
- 6) Stop vehicle.


### NOTE:

If the above driving test can not be performed, check oxygen sensor for voltage referring to Step 1 of Code No.13 Diag. Flow Table and confirm that heated oxygen sensor and its circuit (Closed Loop System) are in good condition.

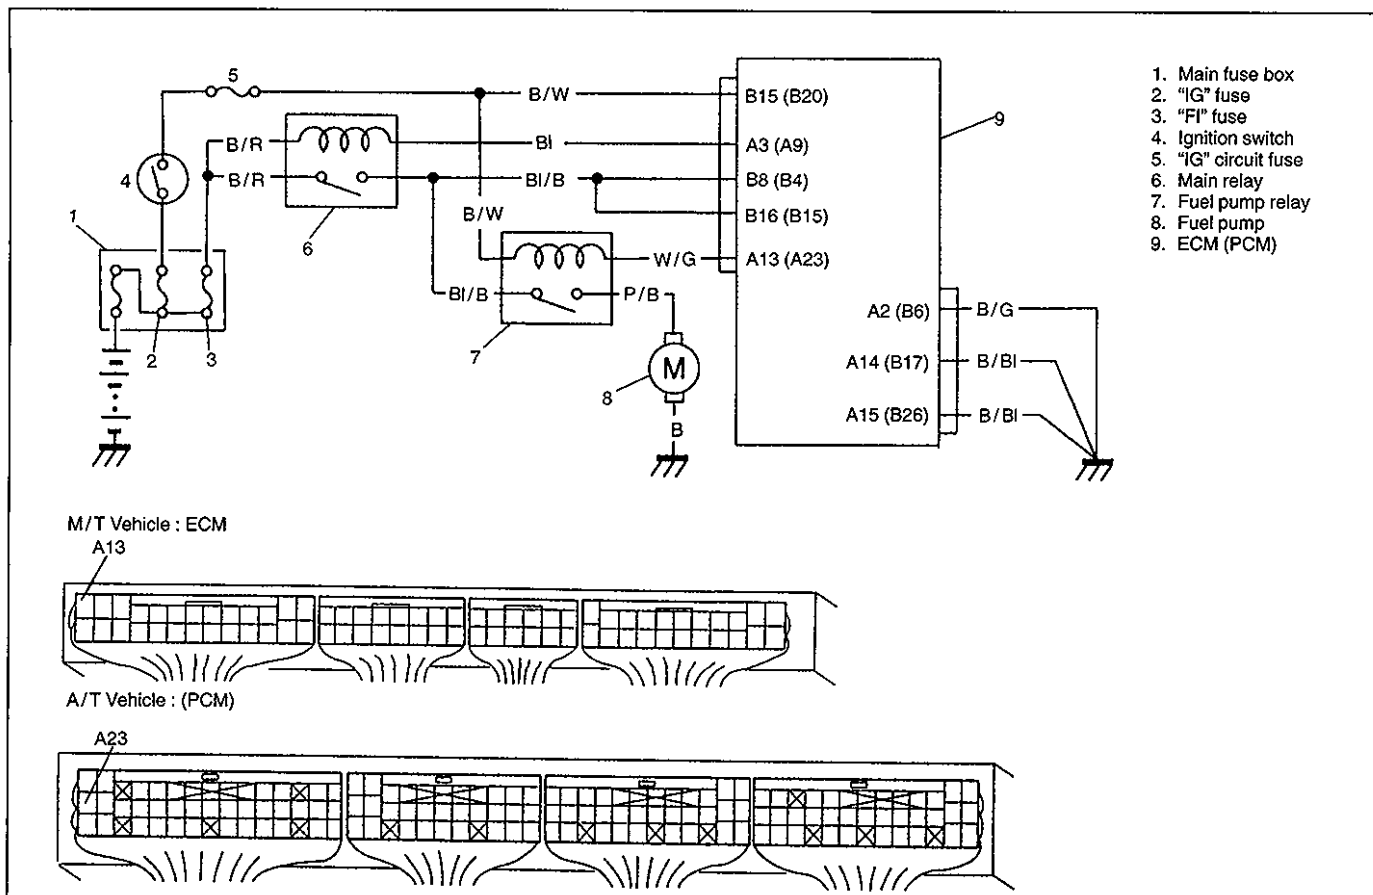
**B-1 FUEL PUMP CIRCUIT CHECK**

STEP	ACTION	YES	NO
1	Is fuel pump heard to operate 3 seconds after ignition switch ON?	Fuel pump and its circuit are in good condition.	Go to Step 2.
2	1) With ignition switch OFF, remove fuel pump relay from relay box. 2) Using service wire, connect two terminals of relay connector as shown in figure. Is fuel pump heard to operate with ignition switch ON?	Go to Step 3.	"P/B" or "B" wire open, poor fuel pump relay-to-coupler connection or faulty fuel pump.
3	1) Check fuel pump relay, referring to p.6E1-99. Is it in good condition?	Poor fuel pump relay-to-coupler connection, "W/G" wire open or poor A13 (A23) connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.	Faulty fuel pump relay.

Fig. for Step 2

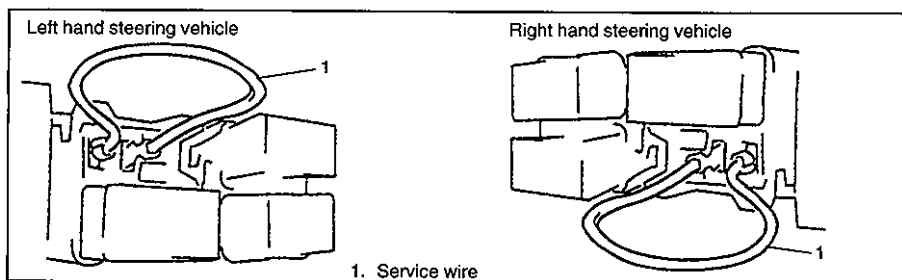


## B-2 FUEL INJECTOR CIRCUIT CHECK

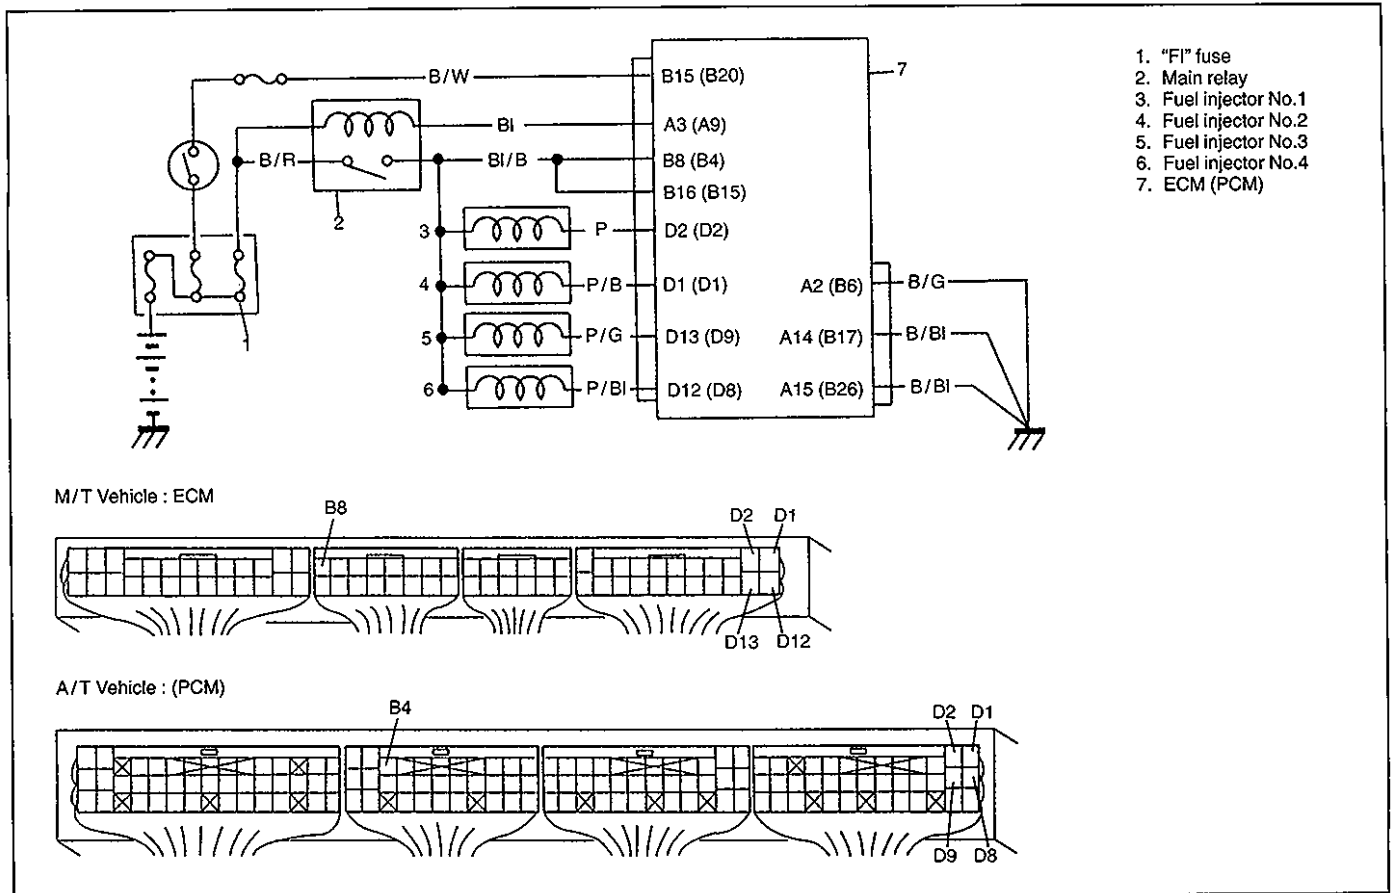

### INSPECTION

STEP	ACTION	YES	NO
1	Check Injector for Operating Sound. Using sound scope, check each injector for operating sound at engine cranking. Do all 4 injectors make operating sound?	Go to Step 2.	Go to Step 3.
2	Wire Harness Check 1) Remove ECM (PCM) cover and disconnect connectors from ECM (PCM). 2) Check for resistance between following terminals of ECM (PCM) connector disconnected. D1 (D1) - B8 (B4) — 13 - 16 Ω at D2 (D2) - B8 (B4) — 20°C, 68°F D12 (D8) - B8 (B4) — D13 (D9) - B8 (B4) — Is check result as specified?	Fuel injector circuit is in good condition.	"P", "P/B", "P/G" and "P/BI" shorted each other.
3	Does none of 4 injectors make operating sound at Step 1?	Go to Step 4.	Check coupler connection and wire harness of injector not making operating sound and injector itself (Refer to "Fuel Injector Inspection" in this section).
4	Check power circuit of injectors for open and short. Is it normal?	Check all 4 injectors for resistance respectively. If resistance is OK, substitute a known-good ECM (PCM) and recheck.	Power circuit open or short.

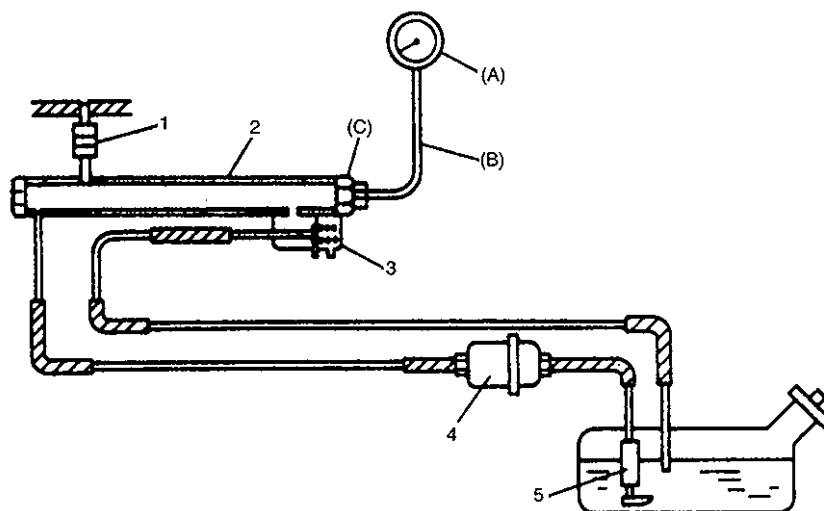**B-3 FUEL PRESSURE CHECK**

1. Injector
2. Delivery pipe
3. Fuel pressure regulator
4. Fuel filter
5. Fuel pump


(A): Gauge  
(B): Hose  
(C): Attachment

**NOTE:**


Before using following flow table, check to make sure that battery voltage is higher than 11 V. If battery voltage is low, pressure becomes lower than specification even if fuel pump and line are in good condition.

STEP	ACTION	YES	NO
1	1) Install fuel pressure gauge, referring to p.6E1-82. 2) Operate fuel pump, referring to p.6E1-82. Is fuel pressure then 250 – 300 kPa (2.5 – 3.0 kg/cm <sup>2</sup> , 35.6 – 42.7 psi)?	Go to Step 2.	Go to Step 5.
2	Is 180 kPa (1.8 kg/cm <sup>2</sup> , 25.6 psi) or higher fuel pressure retained for 1 minute after fuel pump is stopped at Step 1?	Go to Step 3.	Go to Step 4.
3	1) Start engine and warm it up to normal operating temperature. 2) Keep it running at specified idle speed. Is fuel pressure then within 210 – 260 kPa (2.1 – 2.6 kg/cm <sup>2</sup> , 29.8 – 37.0 psi)?	Normal fuel pressure.	Clogged vacuum passage for fuel pressure regulator or faulty fuel pressure regulator.
4	Is there fuel leakage from fuel feed line hose, pipe or joint?	Fuel leakage from hose, pipe or joint.	Go to Step 10 on the next page.
5	Was fuel pressure higher than spec. in Step 1?	Go to Step 6.	Go to Step 7.
6	1) Disconnect fuel return hose from fuel pipe and connect new hose to it. 2) Put the other end of new return hose into approved gasoline container. 3) Operate fuel pump. Is specified fuel pressure obtained then?	Restricted fuel return hose or pipe.	Faulty fuel pressure regulator.
7	Was no fuel pressure applied in Step 1?	Go to Step 8 on the next page.	Go to Step 9 on the next page. <b>(Low pressure is measured.)</b>


STEP	ACTION	YES	NO
8	With fuel pump operated and fuel return hose blocked by pinching it, is fuel pressure applied?	Faulty fuel pressure regulator.	Shortage of fuel or fuel pump or its circuit defective (Refer to Table B-1 "Fuel Pump Circuit Inspection").
9	1) Operate fuel pump. 2) With fuel return hose blocked by pinching it, check fuel pressure. Is it 450 kPa (4.5 kg/cm <sup>2</sup> , 64.0 psi) or more?	Faulty fuel pressure regulator.	Clogged fuel filter, restricted fuel feed hose or pipe, faulty fuel pump or fuel leakage from hose connection in fuel tank.
10	1) Disconnect fuel return hose from fuel pipe and connect new hose to it. 2) Put the other end of new return hose into approved gasoline container. 3) Check again if specified fuel pressure is retained. While doing so, does fuel come out return hose?	Faulty fuel pressure regulator.	Fuel leakage from injector, faulty fuel pump (faulty check valve in fuel pump) or fuel leakage from fuel pressure regulator diaphragm.

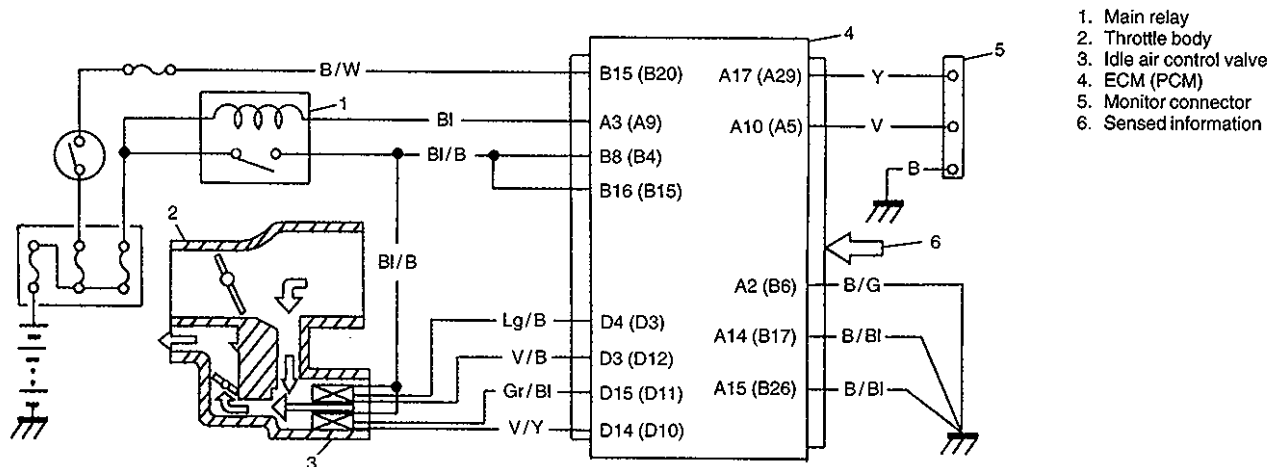**B-4 IDLE AIR CONTROL SYSTEM CHECK**

M/T Vehicle : ECM

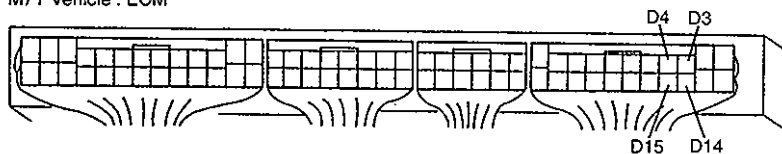


A/T Vehicle : (PCM)

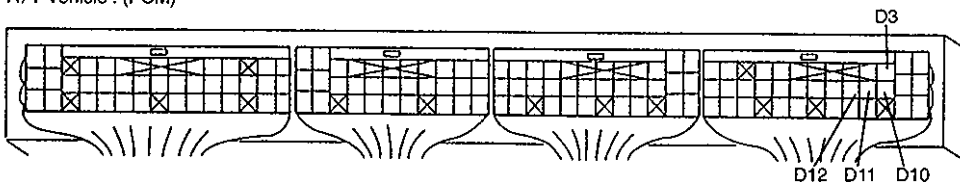


STEP	ACTION	YES	NO
1	Check engine idle speed referring to "Idle Speed Inspection" in this section. Is idle speed within specification?	Go to Step 2.	Go to Step 3.
2	Is engine idle speed kept at specified speed even when electric load(s) (wiper, heater, lights) is applied and/or power steering wheel is turned to right or left as far as it stops?	System is in good condition.	Go to Step 3.

STEP	ACTION	YES	NO
3	Check IAC valve referring to "IAC Valve Inspection" in this section. Is check result as specified?	Check for following: <ul style="list-style-type: none"> <li>- Vacuum leaks</li> <li>- Air inhaling</li> <li>- EVAP canister purge control system</li> <li>- Accessory engine load</li> <li>- Stuck of PCV valve</li> <li>- Clog of idle air passage</li> <li>- MAF sensor</li> <li>- TP sensor</li> <li>- ECT sensor</li> <li>- EGR valve malfunction if equipped (leakage from valve seat)</li> <li>- A/C signal (p.6E1-62)</li> <li>- Transmission range switch signal (A/T. p.6E1-70)</li> <li>- ABS signal circuit if equipped (p. 6E1-66 or 6E1-69)</li> </ul>	IAC valve malfunction, "BI/B", "Lg/B", "V/B", "Gr/BI" or "V/Y" wire open or short or poor coupler connection. If all above are OK, substitute a known-good ECM (PCM) and recheck.

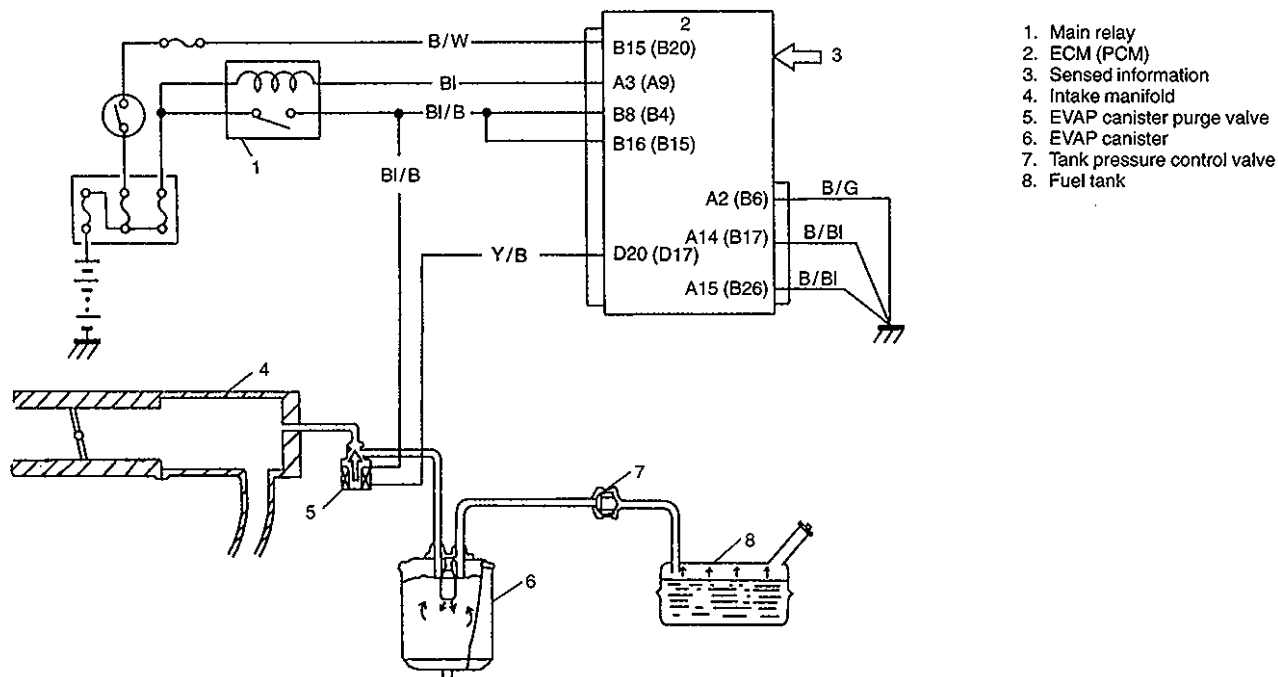


**B-5 EVAPORATIVE EMISSION CONTROL SYSTEM CHECK**


M/T Vehicle : ECM

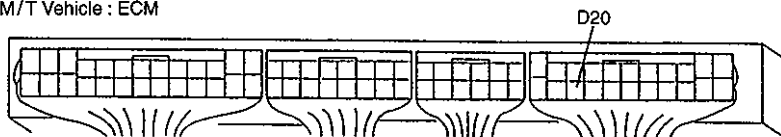


A/T Vehicle : (PCM)

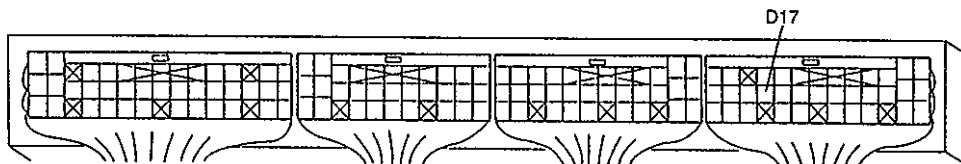


STEP	ACTION	YES	NO
1	1) Check EVAP canister purge system for operation, referring to p.6E1-102. Is it in good condition?	EVAP canister purge system is in good condition. Check EVAP canister, tank pressure control valve and fuel filler cap.	Go to Step 2.
2	1) Check vacuum passage, hoses and EVAP canister purge solenoid valve, referring to p.6E1-102. Are they in good condition?	<ul style="list-style-type: none"> <li>• "Y/B" wire open</li> <li>• "Y/B" wire shorted to ground</li> <li>• Poor EVAP canister purge solenoid valve coupler connection</li> <li>• Poor D20 (D17) terminal connection.</li> </ul> If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.	<ul style="list-style-type: none"> <li>• Vacuum passage clogged</li> <li>• Vacuum leakage</li> <li>• Faulty EVAP canister purge solenoid valve</li> </ul>

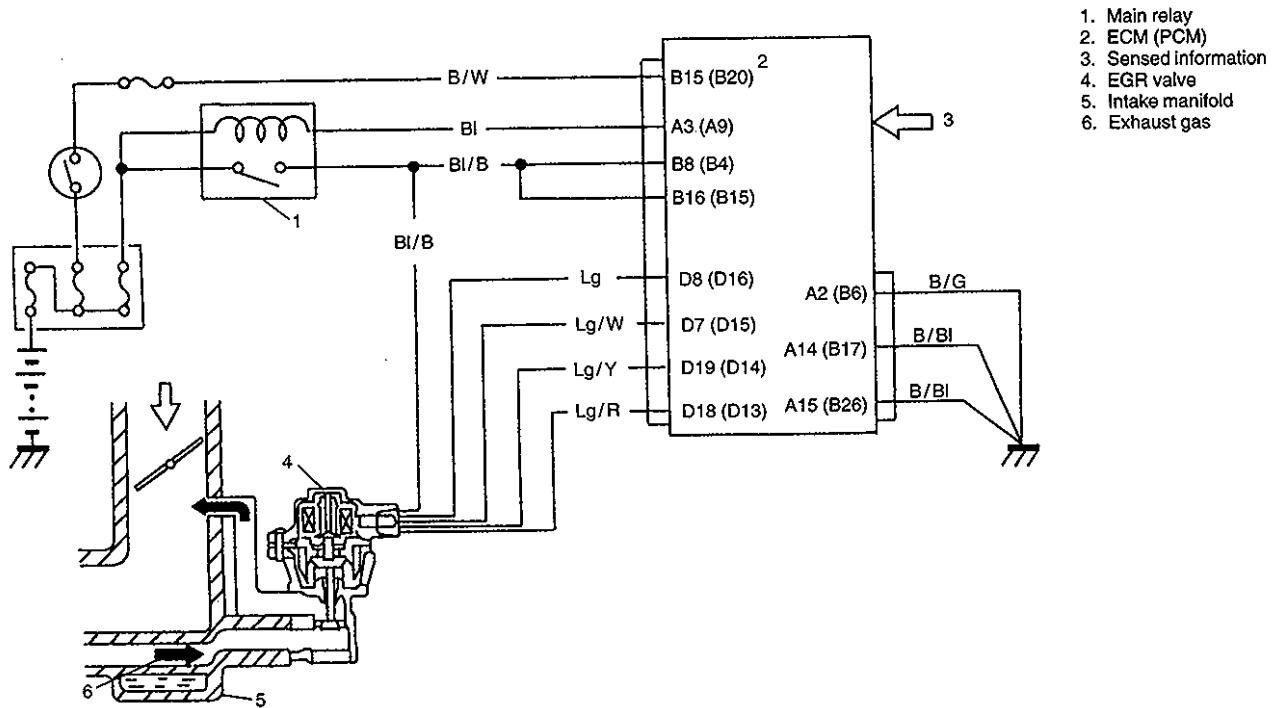**B-6 EGR SYSTEM CHECK (IF EQUIPPED)**


M/T Vehicle : ECM

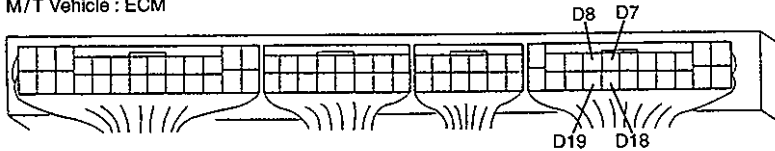


A/T Vehicle : (PCM)

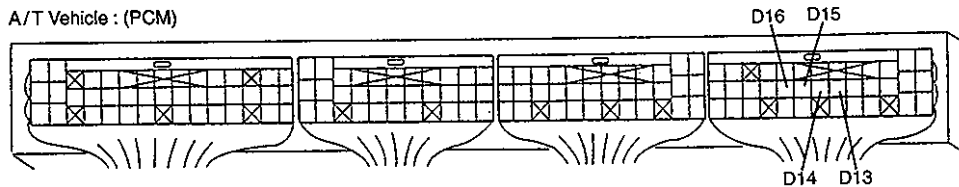

STEP	ACTION	YES	NO
1	1) Check DTC referring to "DTC Check" in this section. Is there any malfunction DTC?	Go to applicable DTC Diag. Flow Table.	Go to Step 2.
2	1) Check EGR system referring to "EGR System Inspection" in this section. Is check result as specified?	EGR system is in good condition.	Clogged EGR pipe, stuck or faulty EGR valve.

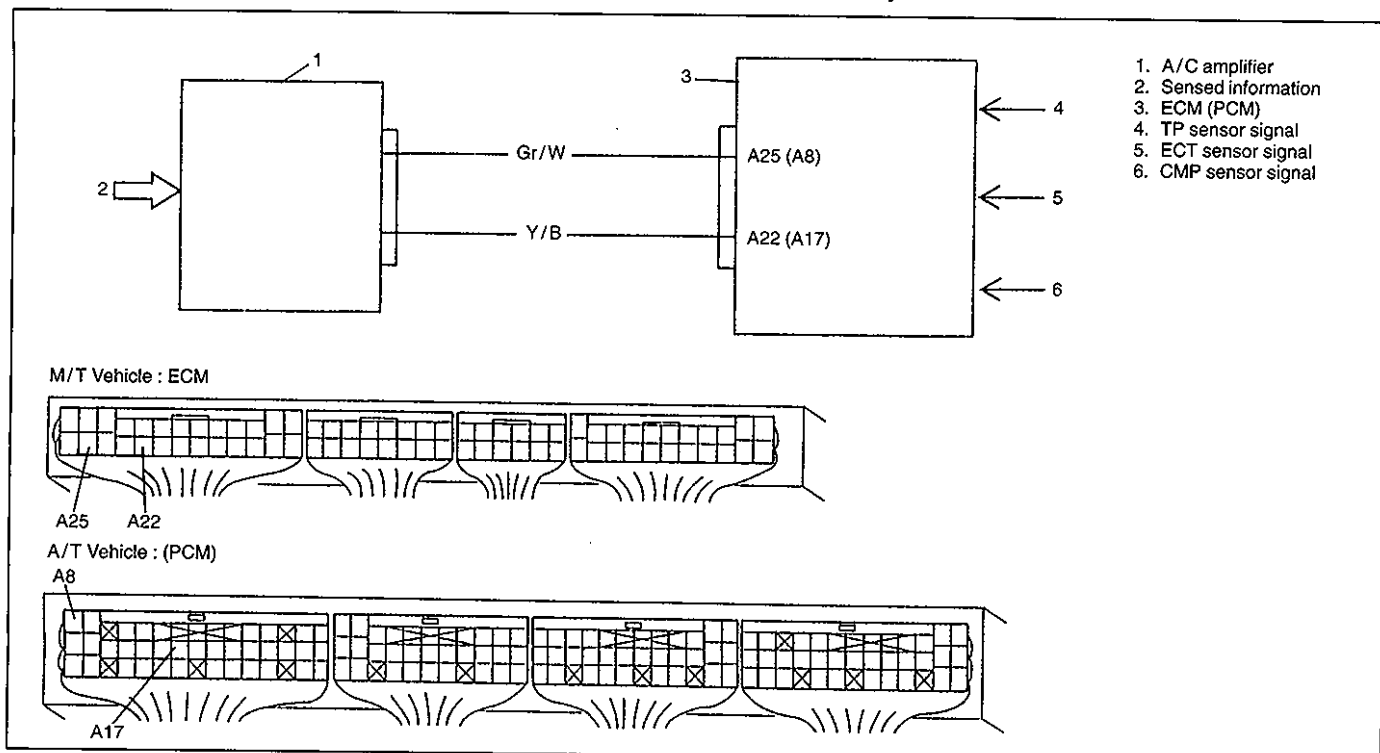**TABLE B-7 A/C SIGNAL CIRCUITS CHECK (IF EQUIPPED)**

STEP	ACTION	YES	NO
1	Check A/C Signal Circuit. 1) Check voltage at terminal A22 (A17) with ignition switch ON. A/C switch and/or heater blower switch OFF (A/C is not operating): 10 – 14 V Both A/C switch and heater blower switch ON: 0 – 1.5 V Are check result as specified?	Go to Step 2.	"Y/B" circuit open or short, Evaporative temperature is below 1°C (34°F) or faulty A/C system.
2	Check A/C Cut Signal Circuit. 1) Check voltage at terminal A25 (A8). While engine running and A/C switch and/or heater blower switch OFF (A/C is not operating): 0 – 1.5 V While engine running at idle speed and both A/C switch and heater blower switch ON (A/C is operating): 10 – 14 V Are check result as specified?	A/C control signal circuits are in good condition.	"Gr/W" circuit open or short, Poor performance of ECT sensor, TP sensor, Engine start signal inputted or A/C amplifier malfunction. If none of the above exists, substitute a known-good ECM (PCM) and recheck.

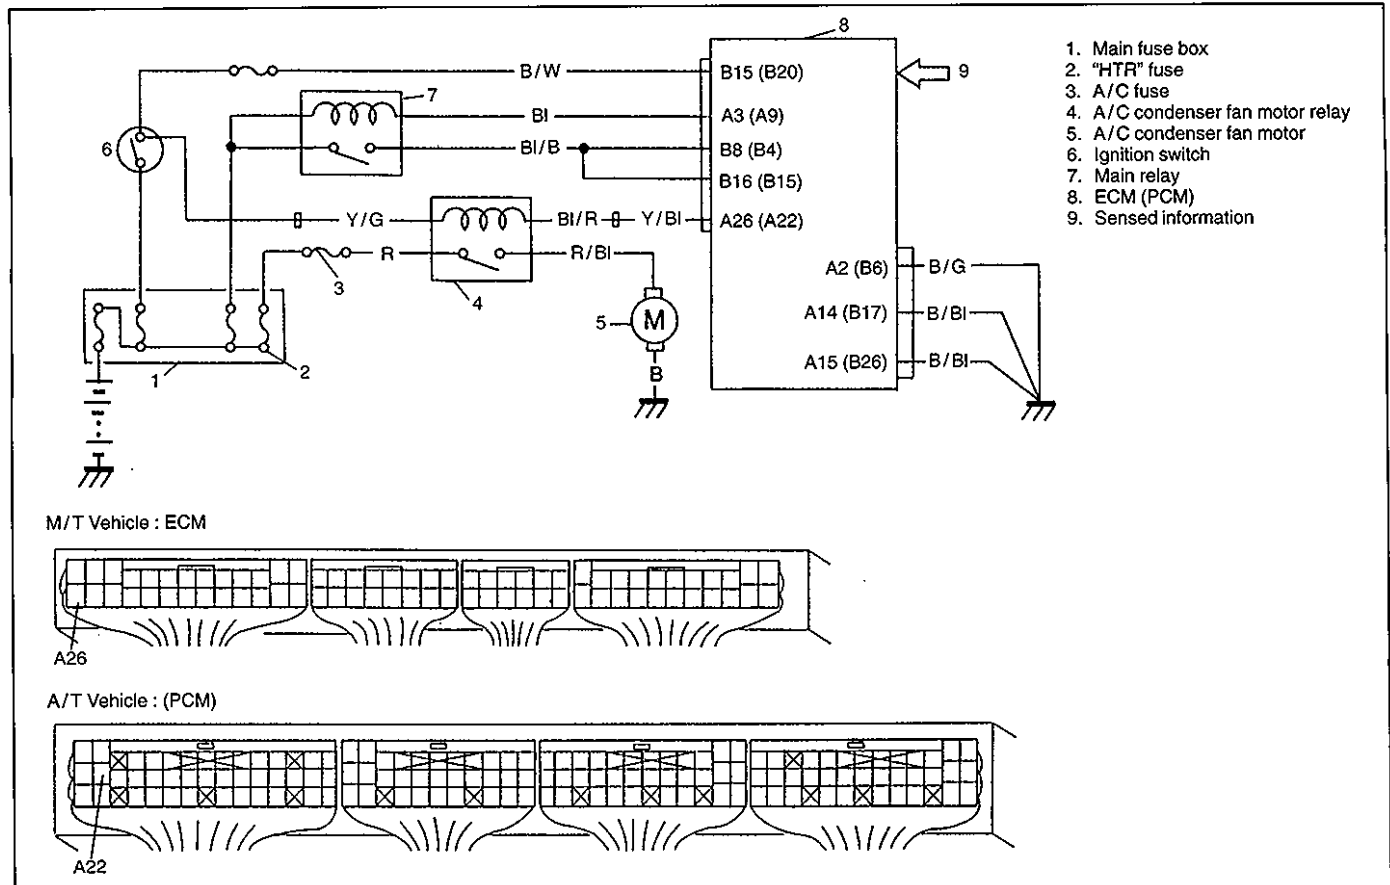**TABLE B-8 A/C CONDENSER FAN MOTOR RELAY CONTROL SYSTEM CHECK  
(IF EQUIPPED)****WARNING:**

Keep hands, tools, and clothing away from A/C condenser fan to help prevent personal injury. This fan is electric and can come on whether or not the engine is running. The fan can start automatically in response to the ECT sensor with the ignition switch in the "ON" position.

STEP	ACTION	YES	NO
1	1) Check DTC referring to "DTC Check" in this section. Is there any malfunction DTC?	Go to applicable DTC Diag. Flow Table.	Go to Step 2.
2	1) Check A/C condenser fan for operation. A/C condenser fan should be operated under following condition A or B only. A: When engine is running and A/C is operating. B: When engine coolant temp. is 113°C, 235°F or more with ignition switch ON. Is check result as specified?	This system is in good condition.	Go to Step 3.

STEP	ACTION	YES	NO
3	1) Remove ECM (PCM) cover. 2) Check voltage between A26 (A22) terminal of ECM (PCM) connected coupler and ground. Other than conditions A and B in Step 2: 10 – 14 V Under condition A or B in Step 2: 0 – 1 V Is check result as specified?	Fuse blown, "R" or "R/BI" circuit open, malfunction of condenser fan motor or relay.	"Y/G" circuit open, "BI/R" or "Y/BI" circuit open or short, or relay malfunction. If above are OK, substitute a known-good ECM (PCM) and recheck.

## INSPECTION OF PCM (ECM) AND ITS CIRCUITS

PCM (ECM) and its circuits can be checked at PCM (ECM) wiring couplers by measuring voltage and resistance.

### CAUTION:


PCM/ECM cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to PCM (ECM) with couplers disconnected from it.

### Voltage Check


- 1) Remove PCM (ECM) cover from bracket referring to PCM (ECM) REMOVAL.
- 2) Check voltage at each terminal of couplers connected.

### NOTE:


As each terminal voltage is affected by the battery voltage, confirm that it is 11 V or more when ignition switch is ON.

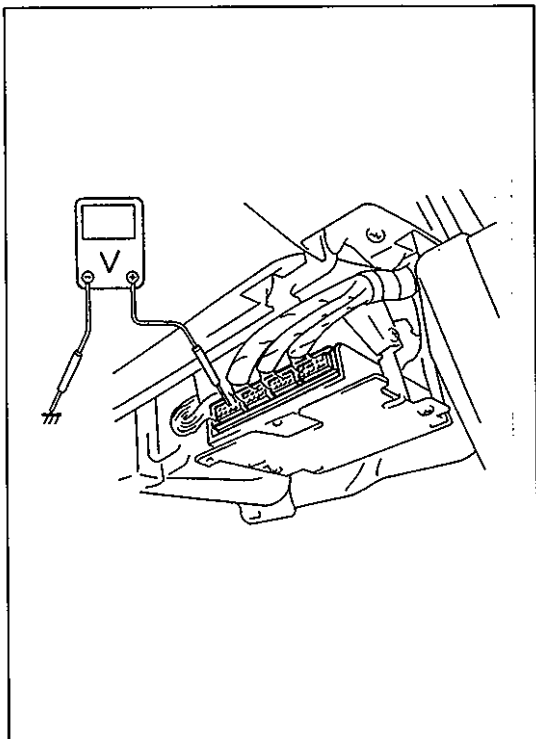

M/T Vehicle

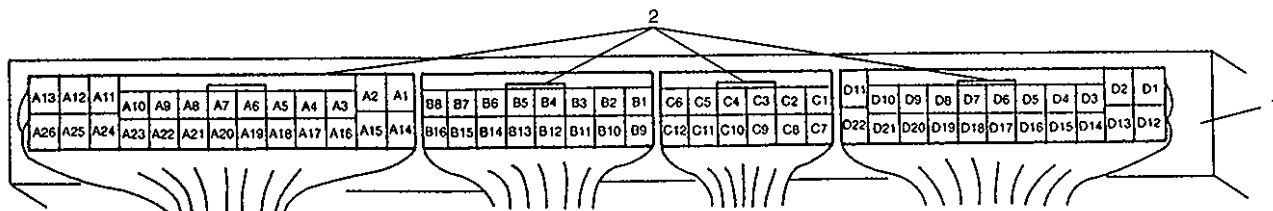

A/T Vehicle

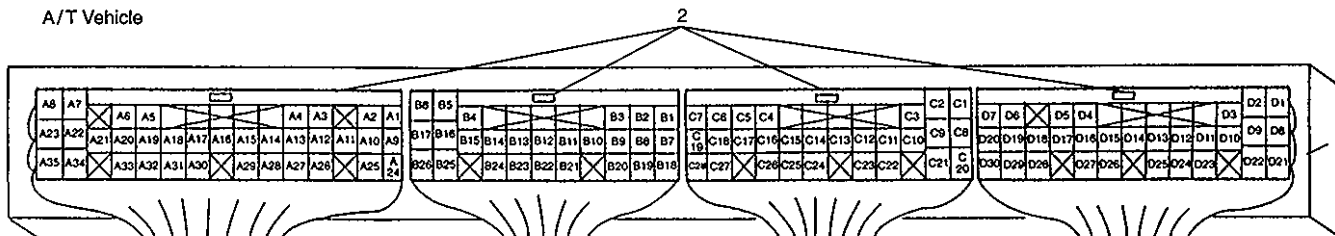

1. PCM (ECM)
2. PCM (ECM) connector  
(Viewed from harness side)

## M/T VEHICLE

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
A1	Power source for back up	10 – 14 V	Ignition switch ON and OFF
A2	Ground	—	—
A3	Main relay	0 – 2 V	Ignition switch ON or for 4 sec. after ignition switch OFF
A4	—	—	—
A5	CO adjusting resistor (if equipped)	—	—
A6/A7	—	—	—
A8	Data link connector	4 – 5 V	Ignition switch ON
A9	—	—	—
A10	Duty output terminal	0 – 1 V	Ignition switch ON
A11	Tachometer	0 – 1 V	Ignition switch ON, engine stops
A12	Malfunction indicator lamp ("CHECK ENGINE" lamp)	0 – 2.5 V	Ignition switch ON and engine stops
		10 – 14 V	Engine running
A13	Fuel pump relay	0 – 2.5 V	For 3 sec. after ignition switch ON or while engine running
		10 – 14 V	After 3 sec. from ignition switch ON with engine stopped
A14/A15	Ground	—	—
A16	CO adjusting resistor (–) (if equipped)	—	—
A17	Diag. switch terminal	10 – 14 V	Ignition switch ON
A18	Test switch terminal	10 – 14 V	Ignition switch ON
A19	ABS control module (if equipped)	10 – 14 V	Ignition switch ON
A20	Rear defogger switch (if equipped) and lighting switch	0 – 1 V	Rear defogger switch and lighting switch OFF
		10 – 14 V	Ignition switch ON Rear defogger switch or lighting switch ON
A21	Heater blower switch	10 – 14 V	Ignition switch ON, heater blower switch OFF
		0 – 1 V	Ignition switch ON, heater blower switch ON
A22	A/C signal (if equipped)	10 – 14 V	Ignition switch ON, A/C switch or heater blower switch OFF
		0 – 1 V	Ignition switch ON, A/C switch ON and heater blower switch ON
A23/A24	—	—	—
A25	A/C cut signal (if equipped)	0 – 1.5 V	A/C is not operating
		10 – 14 V	A/C is operating
A26	A/C condenser fan motor relay (if equipped)	10 – 14 V	Ignition switch ON. Engine coolant temp.: less than 113°C, 235°F
B1	Mass air flow sensor	1.0 – 1.6 V	Ignition switch ON and engine stops
		1.7 – 2.0 V	With engine running at idle speed
B2	Throttle position sensor	0.5 – 1.2 V	Ignition switch ON. Throttle valve at idle position
		3.4 – 4.7 V	Ignition switch ON. Throttle valve at full open position
B3	Heated oxygen sensor (if equipped)	Deflects between over and under 0.45 V	While engine running at 2,000 r/min. for 1 min. or longer after warmed up

## M/T VEHICLE

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
B4	Engine coolant temp. sensor	0.5 – 0.9 V	Ignition switch ON, Engine coolant temp. 80°C, 176°F
B5	Power source for TP sensor	4.75 – 5.25 V	Ignition switch ON
B6	Power source for CO adjusting resistor (if equipped)	4.75 – 5.25 V	Ignition switch ON
B7	—	—	—
B8	Power source	10 – 14 V	Ignition switch ON
B9	Ground for MAF sensor	—	—
B10	Ground for HO2S shield wire (if equipped)	—	—
B11	Ground for TP sensor	—	—
B12	Ground for HO2S (if equipped)	—	—
B13	Ground for ECT sensor	—	—
B14	Ground for IAT sensor	—	—
B15	Ignition switch	10 – 14 V	Ignition switch ON
B16	Power source	10 – 14 V	Ignition switch ON
C1-C5	—	—	—
C6	Intake air temp. sensor	2.2 – 3.0 V	Ignition switch ON, Sensor ambient temp. 20°C, 68°F
C7/C8	—	—	—
C9	Power steering pressure switch	10 – 14 V	Ignition switch ON
		0 – 1 V	With engine running at idle speed, turning steering wheel to the right or left as far as it stops
C10	Engine start signal	6 – 14 V	While engine cranking
		0 V	Other than above
C11	Ground for ignition timing adjusting resistor (–) (G16 engine only)	—	—
C12	Ignition timing adjusting resistor (G16 engine only)	—	—
D1	Fuel injector No.2	10 – 14 V	Ignition switch ON
D2	Fuel injector No.1		
D3	IAC valve (stepper motor coil 2)	—	—
D4	IAC valve (stepper motor coil 1)	—	
D5	Ignition coil assembly for No.2 and No.3 spark plugs (G16 engine) Ignition coil assembly for No.2 (J20 engine)	0 – 1 V	Ignition switch ON
D6	Ignition coil assembly for No.1 and No.4 spark plugs (G16 engine) Ignition coil assembly for No.1 (J20 engine)	0 – 1 V	
D7	EGR valve (stepper motor coil 2, if equipped)	10 – 14 V	Ignition switch ON
D8	EGR valve (stepper motor coil 1, if equipped)	0 – 1 V	
D9	Heater of HO2S (if equipped)	10 – 14 V	Ignition switch ON
		0 – 2 V	At specified idle speed after engine warmed up



**M/T VEHICLE**

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
D10	Vehicle speed sensor	Deflects between 0-1 V and over 4 V	Ignition switch ON, rear right tire turned slowly with rear left tire locked
D11	Camshaft position sensor (+)	Deflects between 0-1 V and 4-6 V	Ignition switch ON, crankshaft turned slowly
D12	Fuel injector No.4	10 – 14 V	Ignition switch ON
D13	Fuel injector No.3		
D14	IAC valve (stepper motor coil 4)	—	—
D15	IAC valve (stepper motor coil 3)	—	
D16	Ignition coil assembly for No. 4 (J20 engine only)	0 – 1 V	Ignition switch ON
D17	Ignition coil assembly for No. 3 (J20 engine only)		
D18	EGR valve (stepper motor coil 4, if equipped)	0 – 1 V	Ignition switch ON
D19	EGR valve (stepper motor coil 3, if equipped)	10 – 14 V	
D20	EVAP canister purge valve	10 – 14 V	Ignition switch ON
D21	—	—	—
D22	Camshaft position sensor (–)	—	—

**A/T VEHICLE**

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
A1	Power source for CO adjusting resistor (if equipped)	4.75 – 5.25 V	Ignition switch ON
A2	Power source for back up	10 – 14 V	Ignition switch ON and OFF
A3/A4	—	—	—
A5	Duty output terminal	0 – 1 V	Ignition switch ON
A6	Tachometer	0 – 1 V	Ignition switch ON, engine stops
A7	Malfunction indicator lamp ("CHECK ENGINE" lamp)	0 – 2.5 V	Ignition switch ON, engine stops
		10 – 14 V	Engine running
A8	A/C cut signal (if equipped)	0 – 1.5 V	A/C is not operating
		10 – 14 V	A/C is operating
A9	Main relay	10 – 14 V	Ignition switch OFF
		0 – 2 V	Ignition switch ON or for 4 seconds after ignition switch OFF.
A10	CO adjusting resistor (if equipped)	—	—
A11	—	—	—
A12	Data link connector	4 – 5 V	Ignition switch ON
A13	—	—	—
A14	Test switch terminal	10 – 14 V	Ignition switch ON
A15	Rear defogger switch (if equipped)	0 – 1.5 V	Rear defogger switch OFF
		10 – 14 V	Ignition switch ON, rear defogger switch ON
A16	Heater blower switch	10 – 14 V	Ignition switch ON, heater blower switch OFF
		0 – 1.5 V	Ignition switch ON, heater blower switch ON
A17	A/C signal (if equipped)	10 – 14 V	Ignition switch ON, A/C switch or heater blower switch OFF
		0 – 1 V	Ignition switch ON, A/C switch ON and heater blower switch ON
A18/A19	—	—	—

## A/T VEHICLE


TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
A20	"O/D OFF" lamp	0 – 1 V	For 4 sec. after ignition switch ON or overdrive cut switch ON
		10 – 14 V	After 4 sec. from ignition switch ON and overdrive cut switch OFF
A21	"POWER" lamp	0 – 1 V	Ignition switch ON, P/N change switch: POWER mode
		10 – 14 V	Ignition switch ON, P/N change switch: NORMAL mode
A22	A/C condenser fan motor relay (if equipped)	10 – 14 V	Ignition switch ON, Engine coolant temp.: less than 113°C, 235°F
A23	Fuel pump relay	0 – 2.5 V	For 3 sec. after ignition switch ON or while engine running
		10 – 14 V	After 3 sec. from ignition switch ON with engine stopped
A24	CO adjusting resistor (–) (if equipped)	—	—
A25-A28	—	—	—
A29	Diag. switch terminal	10 – 14 V	Ignition switch ON
A30	ABS control module (if equipped)	10 – 14 V	Ignition switch ON
A31	Power/Normal change switch	0 – 1 V	Ignition switch ON, P/N change switch: POWER mode
		10 – 14 V	Ignition switch ON, P/N change switch: NORMAL mode
A32	Lighting switch	0 – 1 V	Ignition switch ON, lighting switch OFF
		10 – 14 V	Ignition switch ON, lighting switch ON
A33	Overdrive cut switch	10 – 14 V	Ignition switch ON, overdrive cut switch OFF
		0 – 1 V	Ignition switch ON, overdrive cut switch ON
A34	Stop lamp switch	0 – 1 V	Brake pedal released (switch OFF), Ignition switch ON
		10 – 14 V	Brake pedal depressed (switch ON), Ignition switch ON
A35	—	—	—
B1	Intake air temp. sensor	2.2 – 3.0 V	Ignition switch ON, Sensor ambient temp.: 20°C, 68°F
B2	Engine coolant temp. sensor	0.5 – 0.9 V	Ignition switch ON, Engine coolant temp.: 80°C, 176°F
B3	Ignition timing adjusting resistor (G16 engine only)	—	—
B4	Power source	10 – 14 V	Ignition switch ON
B5	Ground for MAF sensor	—	—
B6	Ground	—	—
B7	Power steering pressure switch	10 – 14 V	Ignition switch ON
		0 – 1 V	With engine running at idle speed, turning steering wheel to the right or left as far as it stops
B8	—	—	—
B9	Throttle position sensor	0.5 – 1.2 V	Ignition switch ON, Throttle valve at idle position
		3.4 – 4.7 V	Ignition switch ON, Throttle valve at full open position
B10	Mass air flow sensor	1.0 – 1.6 V	Ignition switch ON and engine stops
		1.7 – 2.0 V	With engine running at idle speed
B11	Heated oxygen sensor (if equipped)	Deflects between over and under 0.45 V	While engine running at 2,000 r/min. for 1 min. or longer after warmed up

## A/T VEHICLE

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
B12	Ground for HO2S (if equipped)	—	—
B13	Power source for TP sensor	4.75 – 5.25 V	Ignition switch ON
B14	—	—	—
B15	Power source	10 – 14 V	Ignition switch ON
B16	—	—	—
B17	Ground	—	—
B18	Engine start signal	6 – 14 V	While engine cranking
		0 – 1 V	Other than above
B19	—	—	—
B20	Ignition switch	10 – 14 V	Ignition switch ON
B21	Ground for TP sensor	—	—
B22	Ground for ignition timing adjusting resistor (G16 engine only)	—	—
B23	Ground for ECT sensor	—	—
B24	Ground for HO2S (if equipped)	—	—
B25	Ground for IAT sensor	—	—
B26	Ground	—	—
C1	Shift solenoid B	0 – 1 V	Ignition switch ON
C2	Shift solenoid A	10 – 14 V	Ignition switch ON
C3 ~ C7	—	—	—
C8	TCC solenoid	0 – 1 V	Ignition switch ON
C9	—	—	—
C10	A/T input speed sensor (–)	About 2.5 V	Ignition switch ON
C11	A/T input speed sensor (+)	About 2.5 V	Ignition switch ON
C12 ~ C14	—	—	—
C15	Transmission range switch “D”	10 – 14 V	Ignition switch ON, selector lever: “D” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “D” range
C16	Transmission range switch “N”	10 – 14 V	Ignition switch ON, selector lever: “N” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “N” range
C17	Transmission range switch “R”	10 – 14 V	Ignition switch ON, selector lever: “R” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “R” range
C18	Transmission range switch “P”	10 – 14 V	Ignition switch ON, selector lever: “P” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “P” range
C19	—	—	—
C20	Shield wire ground for A/T output speed sensor	—	—
C21	Shield wire ground for A/T input speed sensor	—	—

## A/T VEHICLE

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
C22	A/T output speed sensor (-)	About 2.5 V	Ignition switch ON
C23	A/T output speed sensor (+)	About 2.5 V	Ignition switch ON
C24/C25	————	————	————
C26	4WD low switch	0 – 1 V	Ignition switch ON, Transfer lever: 4WD low range
		10 – 14 V	Ignition switch ON, Transfer lever: 4H or 2H range
C27	Transmission range switch “L”	10 – 14 V	Ignition switch ON, selector lever: “L” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “L” range
C28	Transmission range switch “2”	10 – 14 V	Ignition switch ON, selector lever: “2” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “2” range
D1	Fuel injector No.2	10 – 14 V	Ignition switch ON
D2	Fuel injector No.1		
D3	IAC valve (stepper motor coil 1)	————	————
D4	Heater of HO2S (if equipped)	10 – 14 V	Ignition switch ON
		0 – 2 V	At specified idle speed after engine warmed up
D5 ~ D7	————	————	————
D8	Fuel injector No.4	10 – 14 V	Ignition switch ON
D9	Fuel injector No.3		
D10	IAC valve (stepper motor coil 4)	————	————
D11	IAC valve (stepper motor coil 3)	————	
D12	IAC valve (stepper motor coil 2)	————	
D13	EGR valve (stepper motor coil 4, if equipped)	0 – 1 V	Ignition switch ON
D14	EGR valve (stepper motor coil 3, if equipped)	10 – 14 V	
D15	EGR valve (stepper motor coil 2, if equipped)	10 – 14 V	
D16	EGR valve (stepper motor coil 1, if equipped)	0 – 1 V	
D17	EVAP canister purge valve	10 – 14 V	Ignition switch ON
D18 ~ D20	————	————	————
D21	Ignition coil assembly for No.4 (J20 engine only)	0 – 1 V	Ignition switch ON
D22	Ignition coil assembly for No.3 (J20 engine only)		
D23	Ignition coil assembly for No.2 and No.3 spark plugs (G16 engine) Ignition coil assembly for No.2 (J20 engine)	0 – 1 V	Ignition switch ON
D24	Ignition coil assembly for No.1 and No.4 spark plugs (G16 engine) Ignition coil assembly for No.1 (J20 engine)	0 – 1 V	
D25	Vehicle speed sensor	Deflects between 0 – 1 V and over 4 V	Ignition switch ON, Rear right tire turned slowly with rear left tire locked
D26	Camshaft position sensor (+)	Deflects between 0 – 1 V and 4 – 6 V	Ignition switch ON, crankshaft turned slowly
D27	————	————	————
D28	Camshaft position sensor (-)	————	————
D29	Ground for DLC	————	————
D30	————	————	————

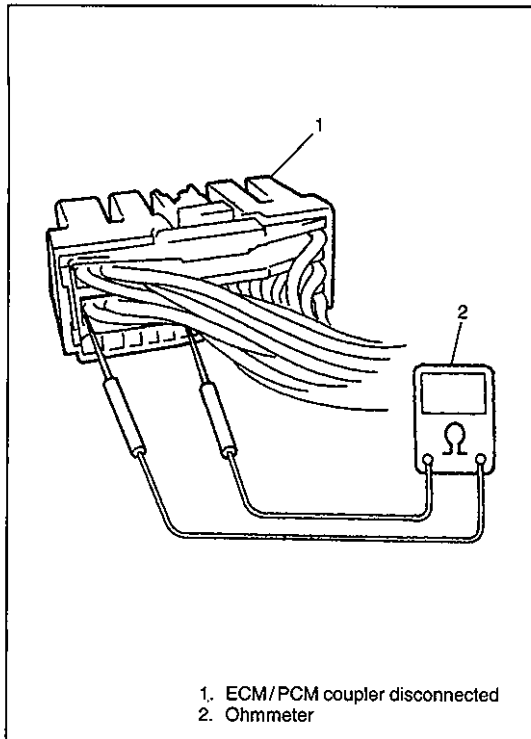

### Resistance Check

1) Disconnect couplers from ECM/PCM with ignition switch OFF.

#### CAUTION:

Never touch terminals of ECM/PCM itself or connect voltmeter or ohmmeter.

2) Check resistance between each pair of terminals of disconnected couplers as listed in following table.

#### CAUTION:

- Be sure to connect ohmmeter probe from wire harness side of coupler.
- Be sure to turn OFF ignition switch for this check.
- Resistance in table represents that when parts temperature is 20°C (68°F).

### M/T VEHICLE


TERMINALS	CIRCUIT	STANDARD RESISTANCE	CONDITION
A3 – A1	Main relay	70 – 110 Ω	—
A13 – B15	Fuel pump relay	70 – 110 Ω	—
A26 – B15	A/C fan motor relay (if equipped)	75 – 110 Ω	Battery disconnected and ignition switch ON
D1 – B8	Fuel injector No.2	13 – 16 Ω	—
D2 – B8	Fuel injector No.1		
D3 – B8	IAC valve (stepper motor coil 2)	35 – 43 Ω	—
D4 – B8	IAC valve (stepper motor coil 1)		
D7 – B8	EGR valve (stepper motor coil 2, if equipped)	20 – 24 Ω	—
D8 – B8	EGR valve (stepper motor coil 1, if equipped)		
D9 – B15	Heater of HO2S (if equipped)	11.7 – 14.3 Ω	—
D12 – B8	Fuel injector No.4	13 – 16 Ω	—
D13 – B8	Fuel injector No.3		
D14 – B8	IAC valve (stepper motor coil 4)	35 – 43 Ω	—
D15 – B8	IAC valve (stepper motor coil 3)		
D18 – B8	EGR valve (stepper motor coil 4, if equipped)	20 – 24 Ω	—
D19 – B8	EGR valve (stepper motor coil 3, if equipped)		
D20 – B8	EVAP canister purge valve	28 – 35 Ω	—
A2 – Body ground	Ground	Continuity	—
A14 – Body ground	Ground	Continuity	—
A15 – Body ground	Ground	Continuity	—

**A/T VEHICLE**


TERMINALS	CIRCUIT	STANDARD RESISTANCE	CONDITION
A9 – A2	Main relay	70 – 110 $\Omega$	—
A22 – B20	A/C fan motor relay (if equipped)	75 – 110 $\Omega$	Battery disconnected and ignition switch ON
A23 – B20	Fuel pump relay	70 – 110 $\Omega$	—
B6 – Body ground	Ground	Continuity	—
B17 – Body ground	Ground	Continuity	—
B26 – Body ground	Ground	Continuity	—
C1 – Body ground	Shift solenoid B	11 – 15 $\Omega$	—
C2 – Body ground	Shift solenoid A		
C8 – Body ground	TCC solenoid		
D1 – B4	Fuel injector No.2	13 – 16 $\Omega$	—
D2 – B4	Fuel injector No.1		
D3 – B4	IAC valve (stepper motor coil 1)	35 – 43 $\Omega$	—
D4 – B20	Heater of HO2S (if equipped)	11.7 – 14.3 $\Omega$	—
D8 – B4	Fuel injector No.4	13 – 16 $\Omega$	—
D9 – B4	Fuel injector No.3		
D10 – B4	IAC valve (stepper motor coil 4)	35 – 43 $\Omega$	—
D11 – B4	IAC valve (stepper motor coil 3)		
D12 – B4	IAC valve (stepper motor coil 2)		
D13 – B4	EGR valve (stepper motor coil 4, if equipped)	20 – 24 $\Omega$	—
D14 – B4	EGR valve (stepper motor coil 3, if equipped)		
D15 – B4	EGR valve (stepper motor coil 2, if equipped)		
D16 – B4	EGR valve (stepper motor coil 1, if equipped)		
D17 – B4	EVAP canister purge valve	28 – 35 $\Omega$	—

## ON-VEHICLE SERVICE

### G16 ENGINE

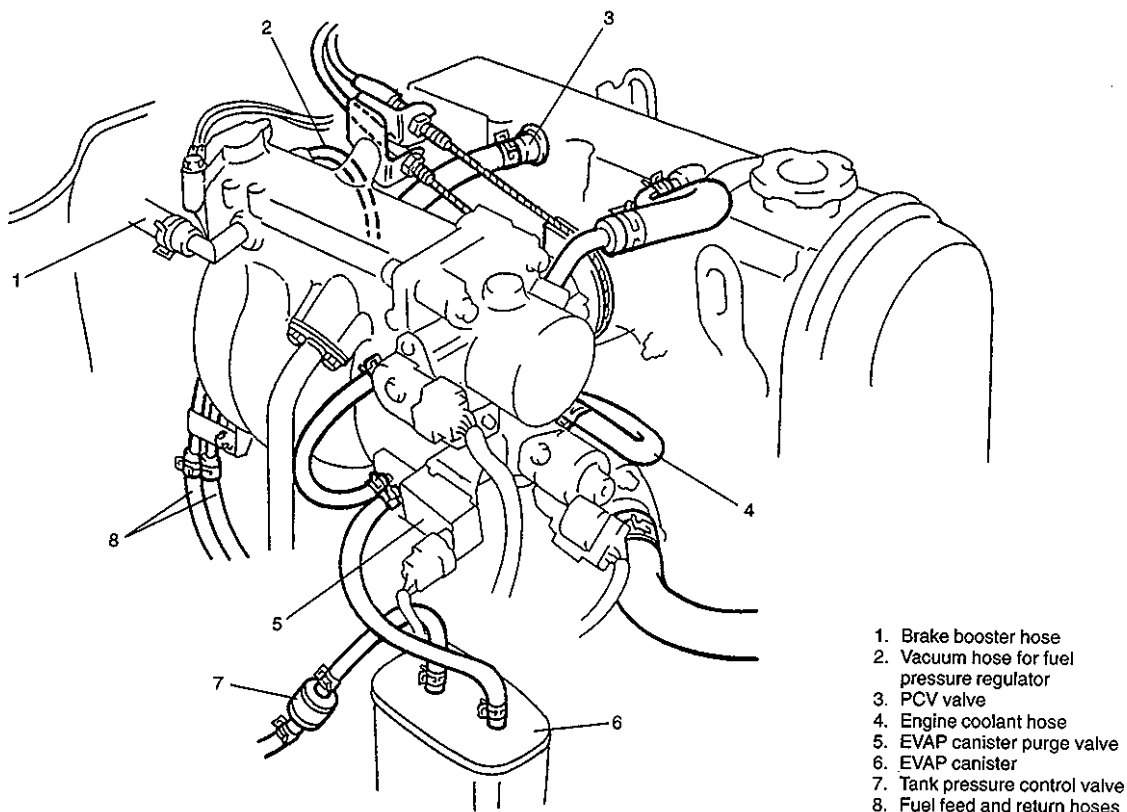


### J20 ENGINE

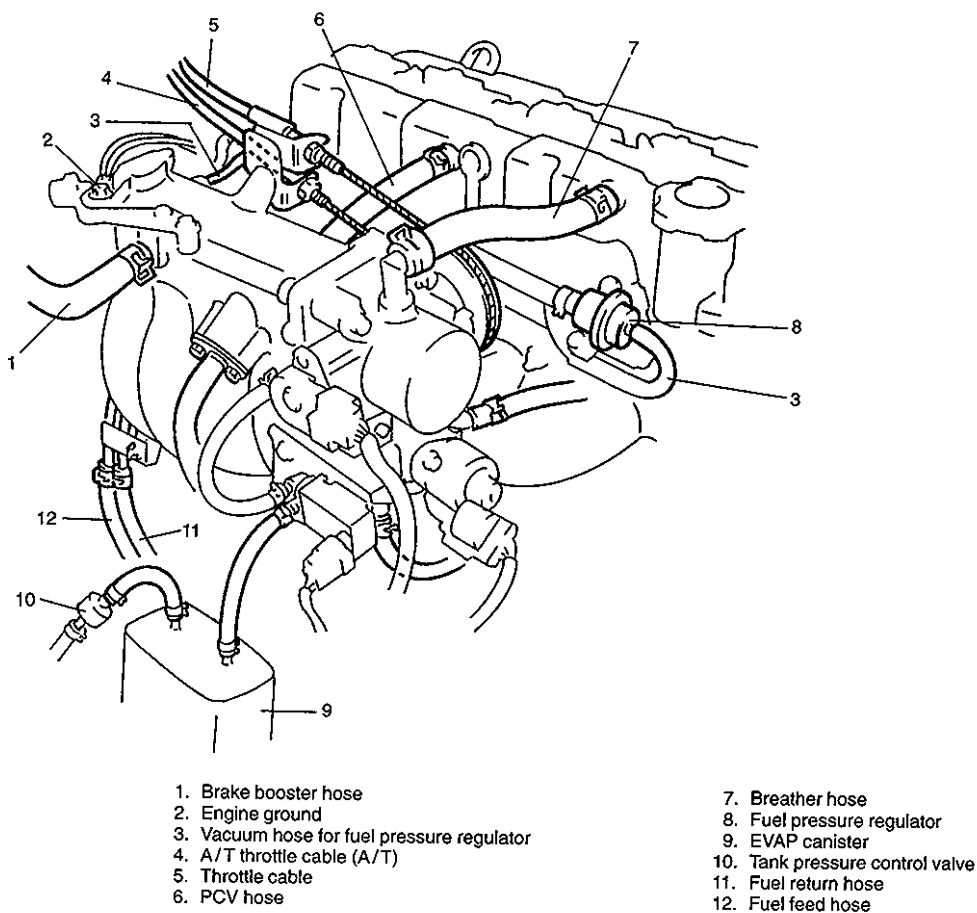

## GENERAL

When hoses are disconnected and system components are removed for service, reinstall components properly, and route and connect hoses correctly after service. Refer to figure on previous page for proper routing of hoses.

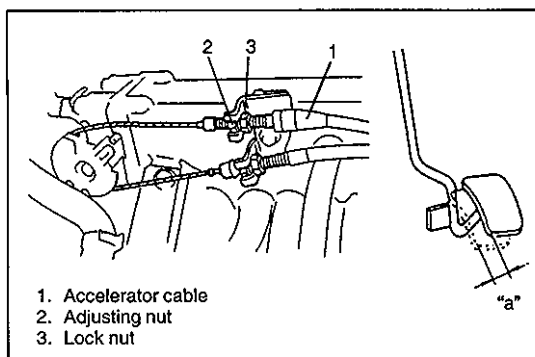


## ACCELERATOR CABLE ADJUSTMENT

- 1) With throttle valve closed, check accelerator pedal play which should be within following specification.

**Pedal play "a": 2 – 7 mm (0.08 – 0.27 in.)**


If measured value is out of specification, adjust it to specification with cable adjusting nut.

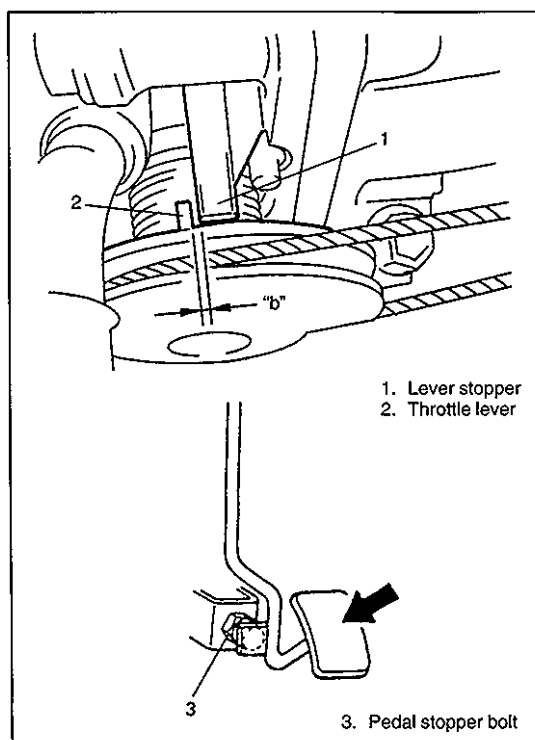

- 2) With accelerator pedal depressed fully, check clearance between throttle lever and lever stopper (throttle body) which should be within following specification.

**Clearance "b" : 0.5 – 2.0 mm (0.02 – 0.07 in.)  
(With pedal depressed fully)**

If measured value is out of specification, adjust it to specification by changing height of pedal stopper bolt.

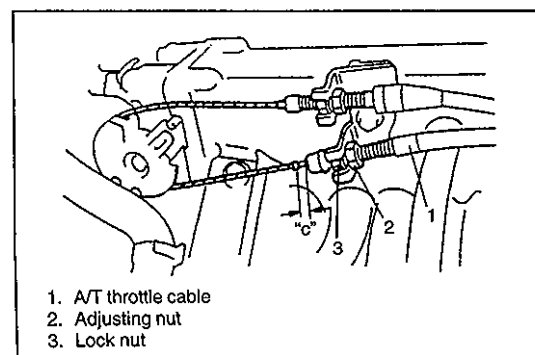

## A/T THROTTLE CABLE ADJUSTMENT (4 A/T)

- 1) Make sure that accelerator cable is adjusted as specified.
- 2) Check clearance "c". If it is out of specification, adjust it by turning cable adjusting nut.

**Clearance "c": 0.8 – 1.5 mm (0.03 – 0.06 in.)**

- 3) Tighten lock nut securely.



**IDLE SPEED INSPECTION**


Before idle speed check, make sure of the following.

- Lead wires and hoses of engine/emission control systems are connected securely.
- Accelerator cable has some play, that is, it is not tight.
- Valve lash is checked and adjusted according to maintenance schedule.
- Ignition timing is within specification.
- All accessories (wipers, heater, lights, A/C, etc.) are out of service.
- Air cleaner has been properly installed and is in good condition.
- ECM (PCM) does not detect any malfunction DTC.

After above items are all confirmed, check idle speed and IAC duty as follows.

**NOTE:**

**Before starting engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T vehicle), and set parking brake and block drive wheels.**

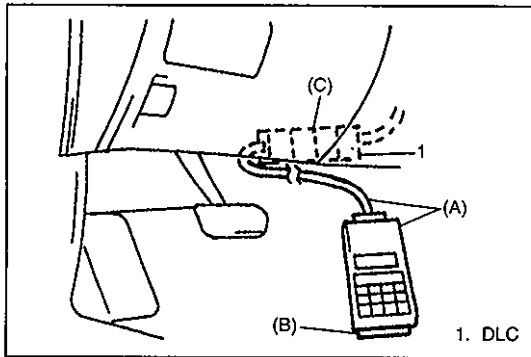

[Using SUZUKI scan tool, Tech 1]

- 1) Connect SUZUKI scan tool to DLC with ignition switch OFF.

**Special Tool**

**(A): SUZUKI scan tool, Tech 1**

**(B): Mass storage cartridge**

**(C): 16/12 pin adapter**

- 2) Warm up engine to normal operating temperature.

- 3) Check idle speed by using SUZUKI scan tool.

	A/C OFF	A/C ON
Engine idle speed	750 ± 50 r/min.	850 ± 50 r/min. for G16 800 ± 50 r/min. for J20

If idle speed is out of specifications, check idle air control system referring to "Diagnostic Flow Table B-4 IDLE AIR CONTROL SYSTEM CHECK" in this section.

- 4) Check that specified engine idle speed is obtained with A/C ON if vehicle is equipped with A/C.  
If not, check A/C ON signal circuit and idle air control system.

[Not using SUZUKI scan tool]

- 1) Warm up engine to normal operating temperature.
- 2) Stop engine.
- 3) Set tachometer.
- 4) Start engine and warm it up completely.
- 5) Check idle speed. If idle speed is out of specifications, check idle air control system referring to "Diagnostic Flow Table B-4 IDLE AIR CONTROL SYSTEM CHECK" in this section.

	A/C OFF	A/C ON
Engine idle speed	750 ± 50 r/min.	850 ± 50 r/min. for G16 800 ± 50 r/min. for J20

- 6) Check that specified engine idle speed is obtained with A/C ON if vehicle is equipped with A/C.  
If not, check A/C ON signal circuit and idle air control system.

**IDLE MIXTURE INSPECTION/ADJUSTMENT****(VEHICLE WITHOUT HEATED OXYGEN SENSOR)**


All vehicles not equipped with heated oxygen sensor are shipped with their CO% factory adjusted as follows.

Engine idle mixture (CO%)	0.8 – 1.3 % at specified idle speed
---------------------------	-------------------------------------

Idle mixture adjustment should never be changed from the original factory setting. However, if during diagnosis, the check indicates idle mixture to be the cause of a driver performance complaint or emission failure, the idle mixture can be adjusted using the following procedures.

**NOTE:**

**For this inspection and adjustment, exhaust gas tester (CO meter) and engine tachometer are necessary.**


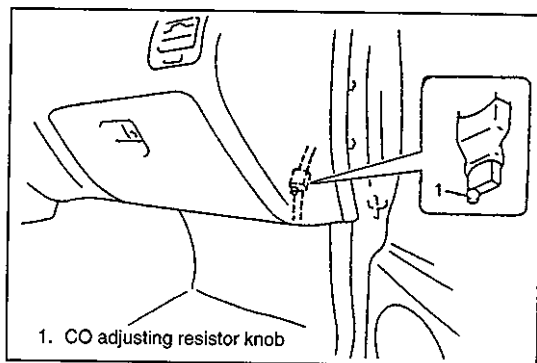


- 1) Check idle speed according to "Idle Speed Inspection" section.
- 2) Using exhaust gas tester, check that idle mixture CO% is within above specification. If it is out of specification, adjust it to specification by turning resistor knob.

- 3) If idle mixture has been adjusted, confirm that idle speed is within specification.


## AIR INTAKE SYSTEM

### THROTTLE BODY

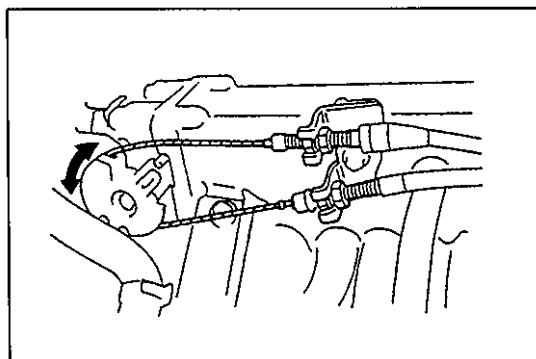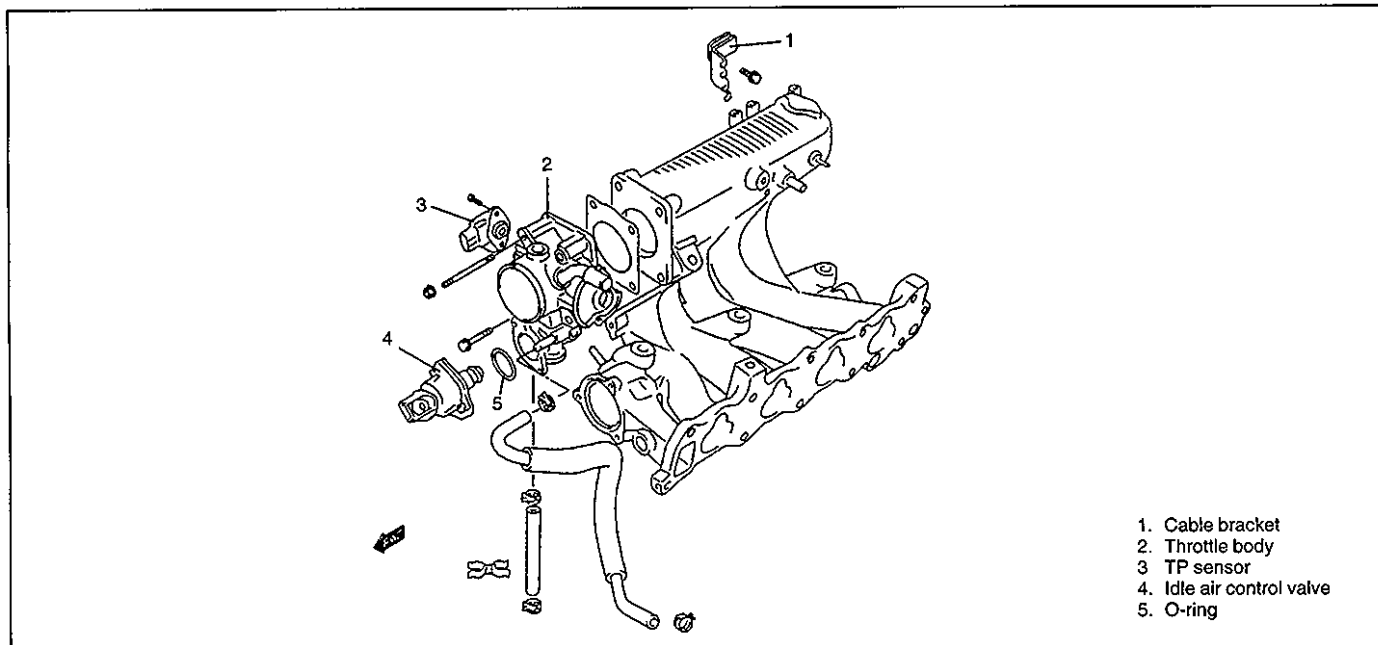


#### On-Vehicle Inspection

- Check that throttle valve lever moves smoothly.

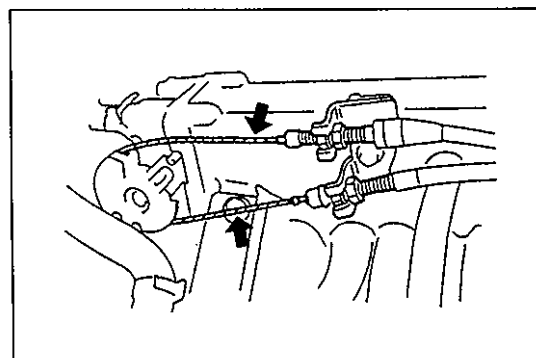

#### Removal

- 1) Disconnect negative cable at battery.
- 2) Drain cooling system.
- 3) Disconnect accelerator cable and/or A/T throttle cable from throttle body.
- 4) Remove air cleaner outlet hose.
- 5) Disconnect electric coupler from TP sensor and IAC valve.
- 6) Disconnect coolant hoses from throttle body.
- 7) Remove throttle body from intake manifold.

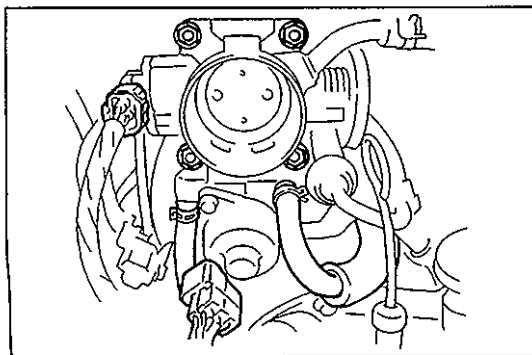


## Cleaning

- 1) Remove IAC valve from throttle body.
- 2) Clean throttle body bore and bypass air passages by blowing compressed air.

### CAUTION:

- Do not blow compressed air through bypass air passage with IAC valve installed to throttle body. This will cause IAC valve to malfunction.
- TP sensor, idle air control valve or other components containing rubber must not be placed in a solvent or cleaner bath.

A chemical reaction will cause these parts to swell, harden or get distorted.

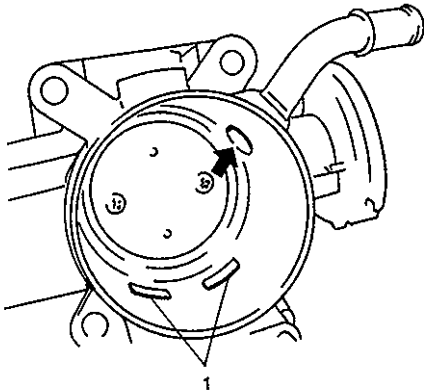


1. Bypass air passage


## Installation

- 1) Clean mating surfaces and install throttle body gasket to intake manifold.


Use new gasket.

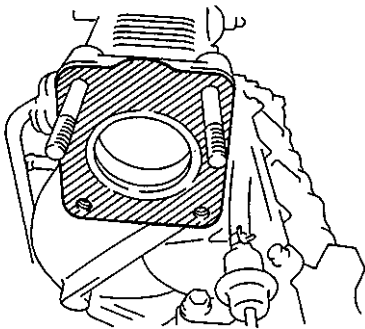


- 2) Install throttle body to intake manifold and tighten bolts and nuts to specified torque.
- 3) Connect coolant hoses to throttle body.
- 4) Connect couplers to TP sensor and IAC valve securely.
- 5) Install air cleaner outlet hose.

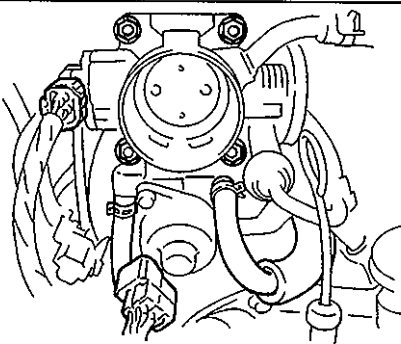

- 6) Connect accelerator cable and A/T throttle cable, and adjust each cable play to specification.
- 7) Refill cooling system.
- 8) Connect negative cable at battery.

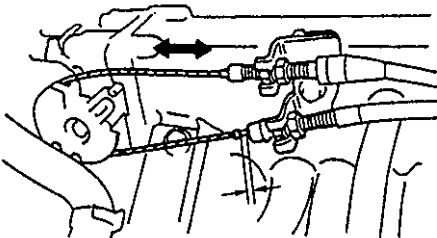

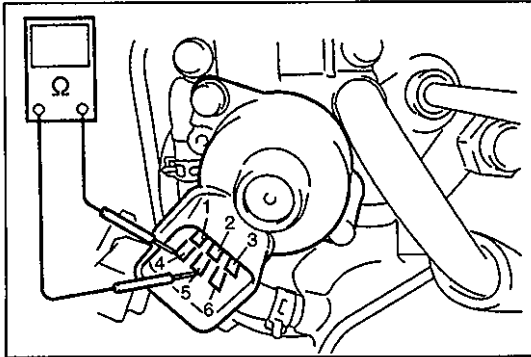

## IDLE AIR CONTROL VALVE (IAC VALVE)

### Inspection

- 1) Disconnect connector from IAC valve.
- 2) Check each coil of IAC valve for resistance.

Terminals	Resistance
Between "1" and "2"	35 – 43 $\Omega$
"3" and "2"	
"4" and "5"	
"6" and "5"	


If resistances is out of specification, replace.

- 3) Remove air cleaner outlet hose and remove IAC valve from throttle body.
- 4) Connect connector to IAC valve.
- 5) Check that plunger of IAC valve moves once and then stops as soon as ignition switch is turned OFF after cranking engine for 2 sec.

### NOTE:

**This check should be performed by two people, one person operates ignition switch while the other checks plunger operation.**

If plunger of IAC valve does not operate at all, check wire harnesses for open and short. If wire harnesses are in good condition, replace IAC valve and recheck.

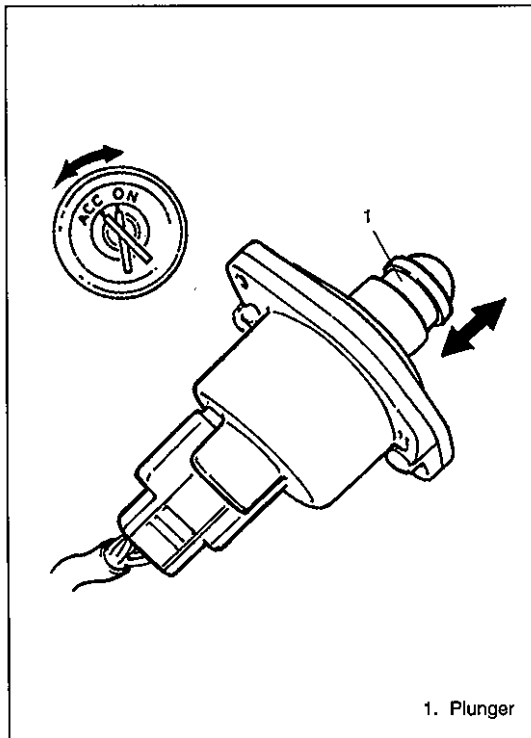

### Removal

- 1) Disconnect negative cable from battery.
- 2) Disconnect connector from IAC valve.
- 3) Remove IAC valve from throttle body.


### Installation

- 1) Install new O-ring to throttle body.
- 2) Install IAC valve to throttle body.  
Tighten IAC valve screws to specified torque.

### Tightening Torque

(a): 3.5 N·m (0.35 kg-m, 2.5 lb-ft)


- 3) Connect IAC valve connector securely.
- 4) Connect negative cable to battery.

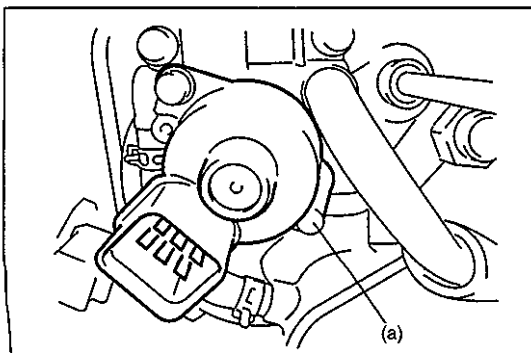

## FUEL DELIVERY SYSTEM

### FUEL PRESSURE INSPECTION

- 1) Relieve fuel pressure in fuel feed line referring to p. 6-4.

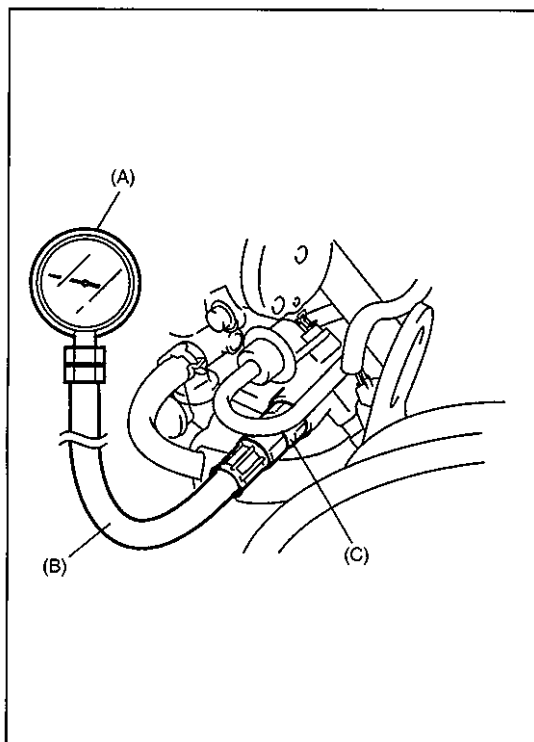

- 2) Using backup wrench, loosen plug bolt on fuel delivery pipe and remove it. Connect special tools (fuel pressure gauge) to delivery pipe.

#### CAUTION:

A small amount of fuel may be released when plug bolt is loosened. Place container under the bolt or cover bolt hole with a shop cloth so that released fuel is caught in container or absorbed in cloth. Place that cloth in an approved container.

#### Special Tool

(A): 09912-58441

(B): 09912-58431

(C): 09919-46010

- 3) Check that battery voltage is above 11V.

CONDITION	FUEL PRESSURE
With fuel pump operating and engine stopped	250 – 300 KPa 2.5 – 3.0 kg/cm <sup>2</sup> 35.6 – 42.7 psi
At specified idle speed	210 – 260 KPa 2.1 – 2.6 kg/cm <sup>2</sup> 29.8 – 37.0 psi
With 1 min. after engine (fuel pump) stop (Pressure reduces as time passes)	over 180 kPa 1.8 kg/cm <sup>2</sup> 25.6 psi


- 4) Turn ignition switch ON to operate fuel pump and after 3 seconds turn it OFF. Repeat this 3 or 4 times and then check fuel pressure.

- 5) Start engine.

- 6) Measure fuel pressure at idling.

If measured pressure doesn't satisfy specification, refer to "Diagnostic Flow Table B-3" and check each possibly defective part. Replace if found defective.


- 7) After checking fuel pressure, remove fuel pressure gauge.

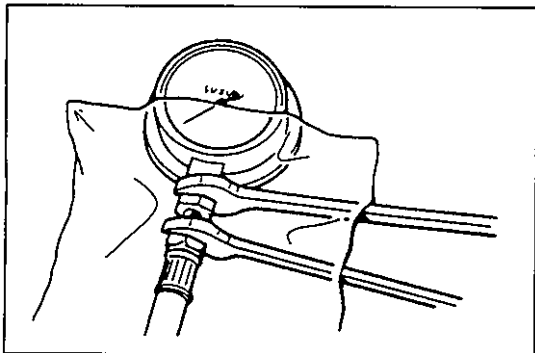

#### CAUTION:

As fuel feed line is still under high fuel pressure, make sure to release fuel pressure according to following procedures.

- Place fuel container under joint.
- Cover joint with rag and loosen joint nut slowly to release fuel pressure gradually.

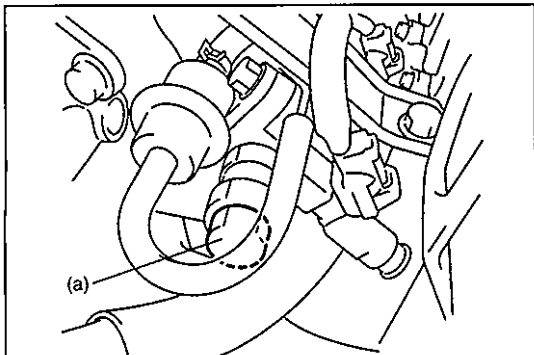

- 8) Install plug bolt to fuel delivery pipe.  
Use new gasket.  
Tighten it to specified torque, using backup wrench.

#### Tightening Torque

(a): 30 N·m (3.0 kg-m, 22.0 lb-ft)


- 9) With engine "OFF" and ignition switch "ON", check for fuel leaks.

## FUEL PUMP


### On-Vehicle Inspection

#### CAUTION:

When fuel filler cap is removed in any procedure, work must be done in a well-ventilated area, keep away from any open flames and without smoking.

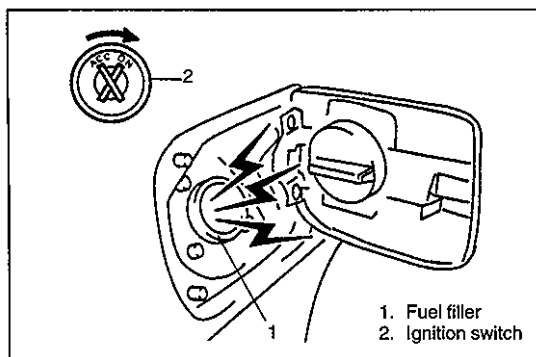

- 1) Remove filler cap and turn ON ignition switch. Then fuel pump operating sound be heard from fuel filler for about 3 seconds and stop. Be sure to reinstall fuel filler cap after checking.  
If above check result is not satisfactory, advance to "Diagnostic Flow Table B-1" in this section.

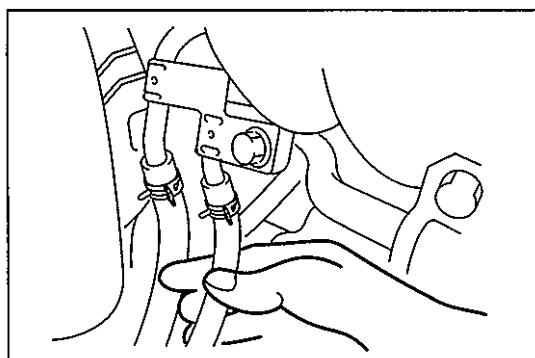

- 2) Fuel pressure should be felt at fuel return hose for 3 seconds after ignition switch ON.  
If fuel pressure is not felt, advance to "Diagnostic Flow Table B-3" in this section.

### Removal

- 1) Remove fuel tank from body according to procedure described in section 6C and remove fuel pump from fuel tank.


### Inspection

Check fuel pump filter for evidence of dirt and contamination. If present, clean and check for presence of dirt in fuel tank.



### Installation

- 1) Install fuel pump to its bracket.
- 2) Install fuel pump to fuel tank and then install fuel tank to body according to procedure described in "Fuel System" section.

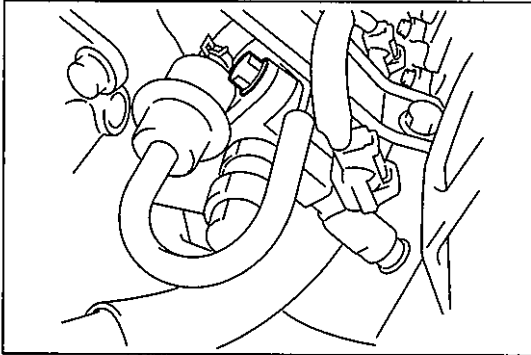

### FUEL PRESSURE REGULATOR

#### Removal

- 1) Relieve fuel pressure according to procedure described on p. 6-4.
- 2) Disconnect battery negative cable from battery.
- 3) Disconnect vacuum hose from fuel pressure regulator.


- 4) Remove fuel pressure regulator from fuel delivery pipe.

#### CAUTION:

A small amount of fuel may be released when it is from delivery pipe.

Place a shop cloth under delivery pipe so that released fuel is absorbed in it.


- 5) Disconnect fuel return hose from fuel pressure regulator.

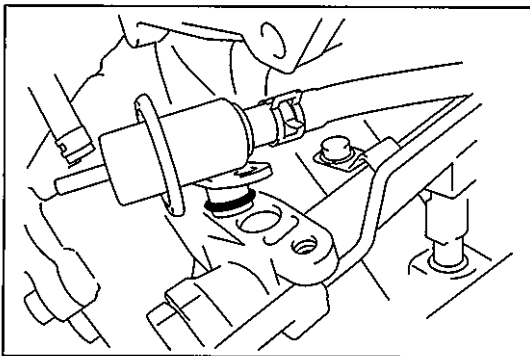

#### Installation

For installation, reverse removal procedure and note following precautions.

- Use new O-ring.
- Apply thin coat of gasoline to O-ring to facilitate installation.

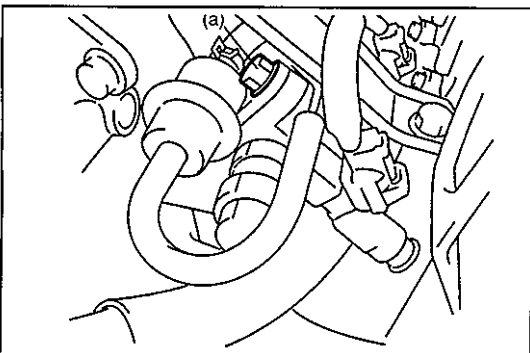


- Tighten fuel pressure regulator bolts to specified torque.

#### Tightening Torque

(a): 10 N·m (1.0 kg-m, 7.5 lb-ft)


- With engine "OFF" and ignition switch "ON", check for fuel leaks around fuel line connection.

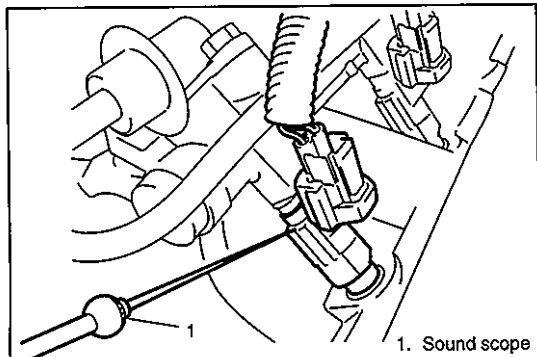

## FUEL INJECTOR

### On-Vehicle Inspection

- 1) Using sound scope or such, check operating sound of injector when engine is running or cranking.  
Cycle of operating sound should vary according to engine speed.  
If no sound or an unusual sound is heard, check injector circuit (wire or coupler) or injector.

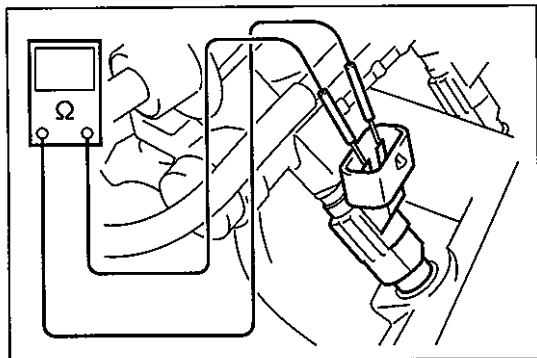


- 2) Disconnect coupler from injector, connect ohmmeter between terminals of injector and check resistance.

**Resistance of injector: 13 – 16  $\Omega$  at 20°C, 68 °F**


If resistance is out of specification, replace.

- 3) Connect coupler to injector securely.

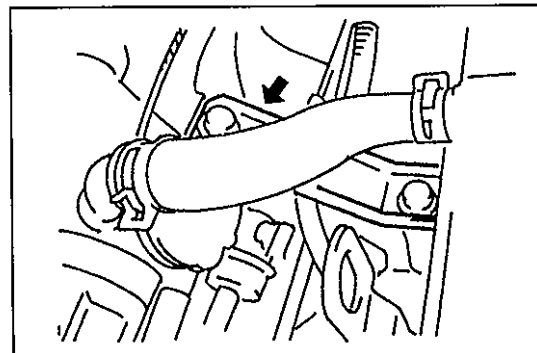


### Removal


- 1) Relieve fuel pressure according to procedure described on p. 6-4.
- 2) Disconnect battery negative cable at battery.
- 3) Detach intake manifold stiffener (front) from intake manifold.

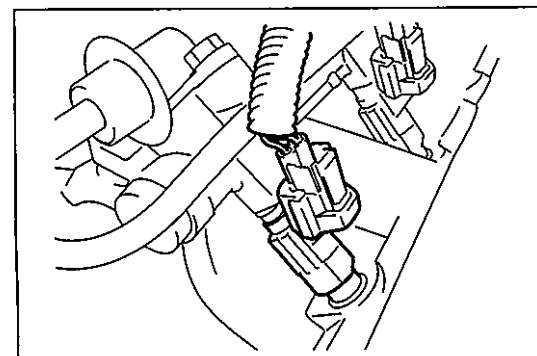

- 4) Disconnect coupler from each injector.

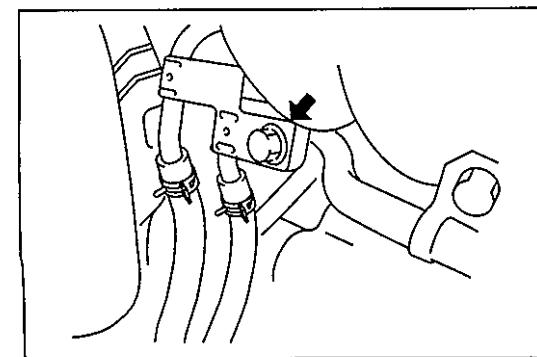

- 5) Remove clamp bolt for fuel feed pipe and return pipe.

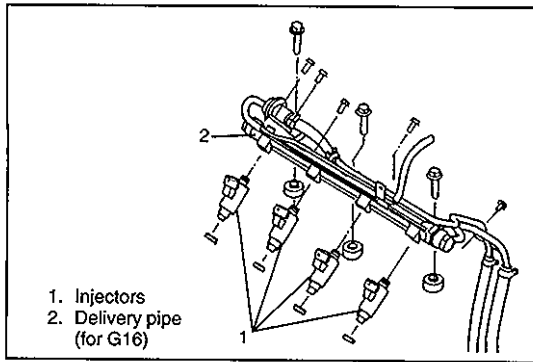

- 6) Remove fuel delivery pipe bolts.
- 7) Remove fuel injector(s) from delivery pipe and intake manifold or cylinder head.


**WARNING:**

A small amount of fuel may be released when fuel injector is removed. In order to reduce the chance of personal injury, cover them with a shop cloth.

**Inspection**

**WARNING:**

As fuel is injected in this inspection, perform in a well ventilated area and away from open flames. Use special care to prevent sparking when connecting and disconnecting test lead to and from battery.

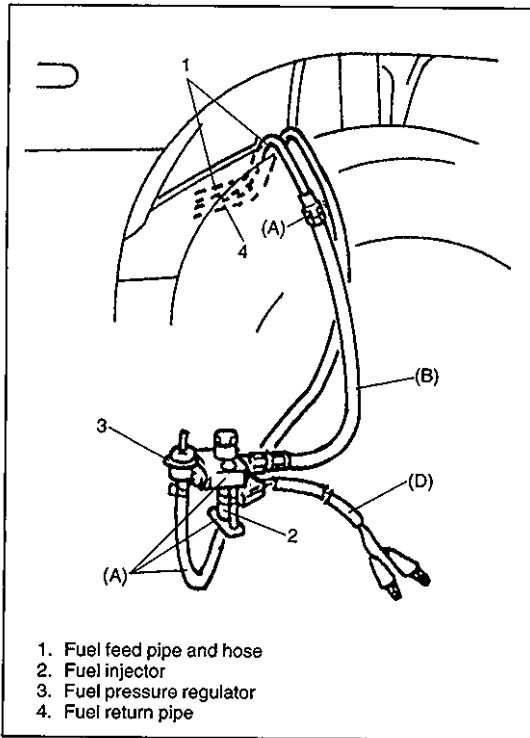

- 1) Install injector and fuel pressure regulator to special tool (injector checking tool).

**Special Tool**

(A): 09912-58421

- 2) Connect special tools (hoses and attachment) to hose and pipe of vehicle.


**Special Tool**

(B): 09912-58431

- 3) Connect special tool (test lead) to injector.

**Special Tool**

(D): 09930-88530

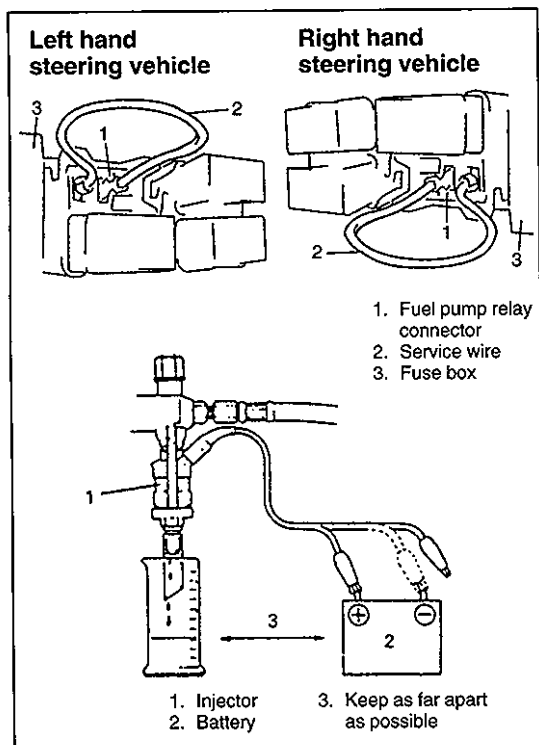

- 4) Install suitable vinyl tube onto injector nozzle to prevent fuel from splashing out when injecting.
- 5) Put graduated cylinder under injector as shown.
- 6) Remove fuel pump relay.
- 7) To operate fuel pump and apply fuel pressure to injector, using wire harness as thick as the one used for fuel pump circuit, connect two terminals of relay connector as shown in figure.

**CAUTION:**

**Check to make sure that connection is made between correct terminals. Wrong connection can cause damage to PCM(ECM), wire harness, etc.**


Turn ignition switch ON.

- 8) Apply battery voltage to injector for 15 seconds and measure injected fuel volume with graduated cylinder. Test each injector two or three times. If not within specification, replace injector.

**Injected fuel volume:**

**42 – 52 cc/15 sec. (1.42/1.48 – 1.75/1.83 US/Imp. oz/15 sec.) for G16 engine.**

**55 – 62 cc/15 sec. (1.94/2.09 – 2.18/2.36 US/Imp. oz/15 sec.) for J20 engine.**

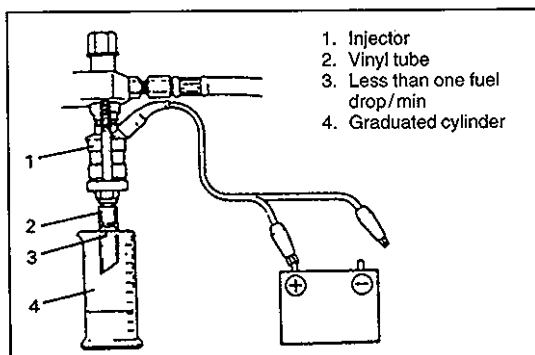



- 9) Check fuel leakage from injector nozzle. Do not operate injector for this check (but fuel pump should be at work). If fuel leaks more than following specifications, replace.

**Fuel leakage: Less than 1 drop/min.**

**Installation**

- 1) Replace injector O-ring with new one using care not to damage it. Install grommet to injector.
- 2) Check if insulator is scored or damaged. If it is, replace with new one. Install insulators and cushions to intake manifold or cylinder head.

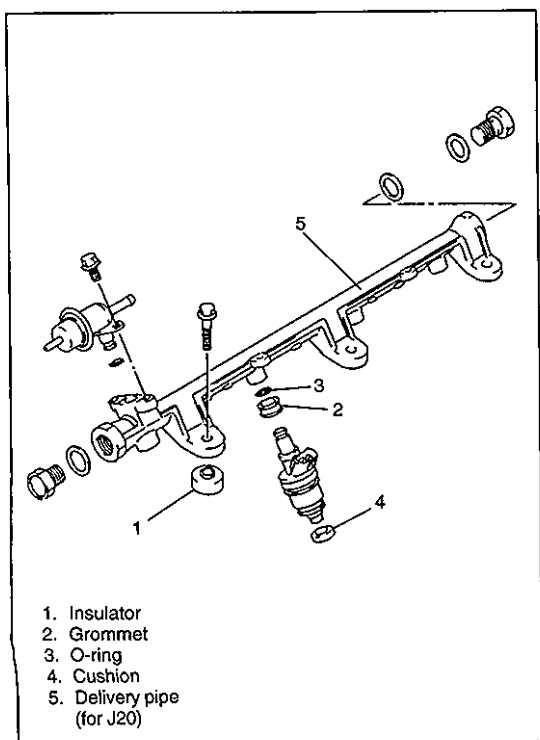

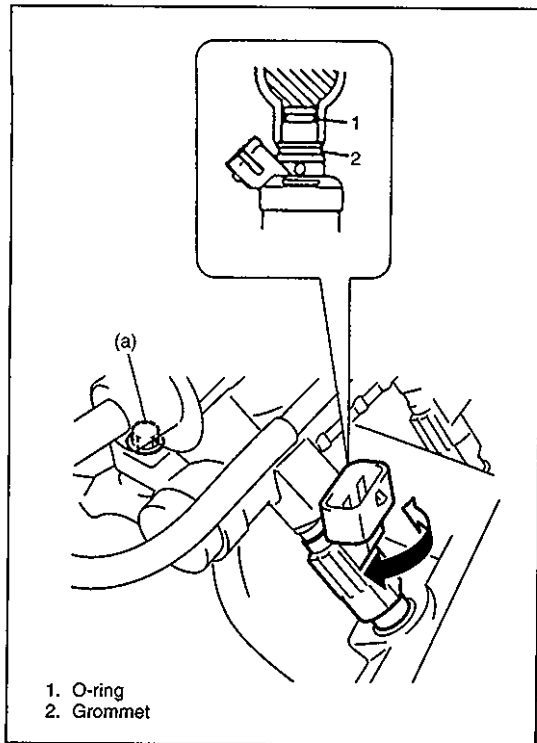

- 3) Apply thin coat of fuel to O-rings and then install injectors into delivery pipe and intake manifold or cylinder head. Make sure that injectors rotate smoothly. If not, probable cause is incorrect installation of O-ring. Replace O-ring with new one.
- 4) Tighten delivery pipe bolts and make sure that injectors rotate smoothly.

#### **Tightening Torque**

**(a): 23 N·m (2.3 kg-m, 17.0 lb-ft)**



- 5) Connect couplers to injectors securely.
- 6) Install intake manifold stiffener (front) to intake manifold.
- 7) Install clamp bolts for fuel feed pipe and return pipe.
- 8) Connect battery negative cable.
- 9) With engine "OFF" and ignition switch "ON", check for fuel leaks around fuel line connection.

## ELECTRONIC CONTROL SYSTEM

### ENGINE CONTROL MODULE (ECM)/POWERTRAIN CONTROL MODULE (PCM)

**CAUTION:**


As ECM/PCM consists of precision parts, be careful not to expose it to excessive shock.

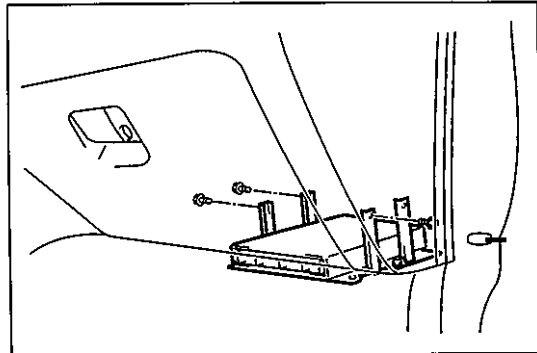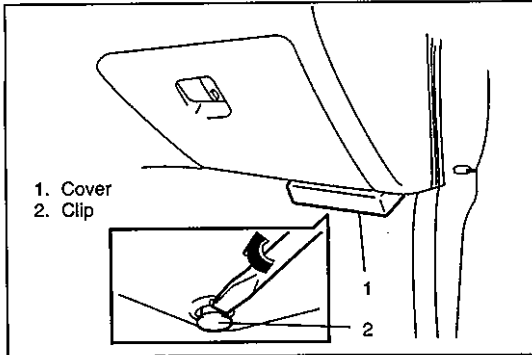**Removal**

- 1) Disconnect battery negative cable from battery.
- 2) Disable air bag system (if equipped) referring to "Disabling the Air Bag System" in Air Bag System section.
- 3) Remove ECM/PCM cover from bracket.
- 4) Disconnect connectors from ECM/PCM.
- 5) Remove ECM/PCM with bracket.

**Installation**

- 1) Install ECM/PCM with bracket to vehicle.
- 2) Connect connectors to ECM/PCM securely.
- 3) Install ECM/PCM cover to bracket.
- 4) Enable air bag system (if equipped) referring to "Enabling Air Bag System" in Air Bag system section.
- 5) Connect negative cable to battery.

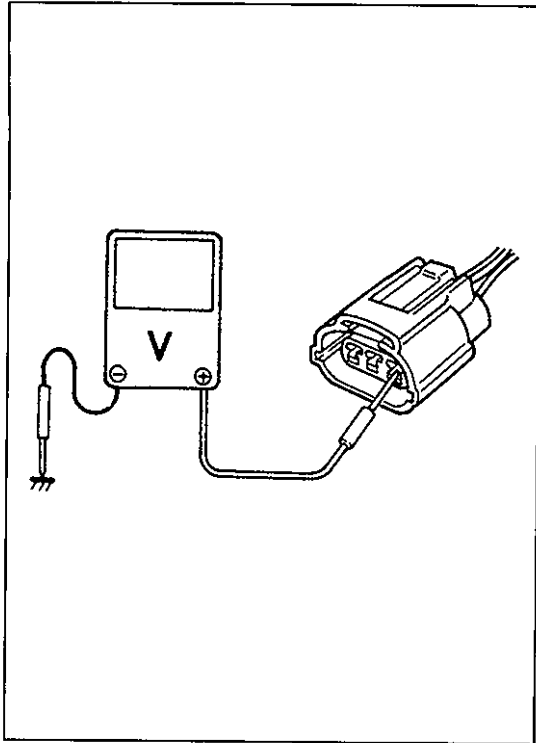

## MASS AIR FLOW SENSOR (MAF SENSOR)


### Inspection

#### NOTE:


Use voltmeter with high-impedance (10 k $\Omega$ /V minimum) or digital type voltmeter.

- 1) Connect voltmeter to "B + " terminal of MAF sensor coupler disconnected and ground.
- 2) Turn ignition switch ON and check that voltage is battery voltage.

If not, check if wire harness is open or connection is poor.

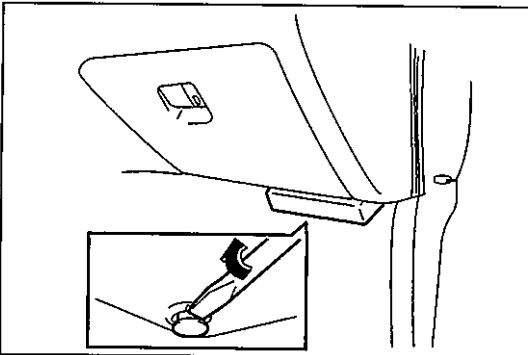

- 3) Turn ignition switch OFF and remove ECM/PCM cover from bracket.

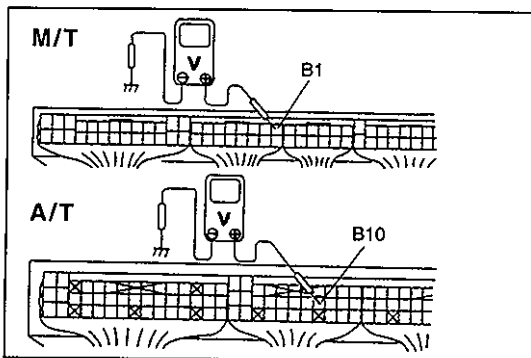


- 4) Connect MAF sensor coupler to MAF sensor.
- 5) Turn ignition switch ON and check voltage at MAF sensor output terminal.

**Voltage: 1.0 – 1.6V**

- 6) Start engine and check that voltage is lower than 5V and it rises as engine speed increases.


(Reference data: 1.7 – 2.0V at specified idle speed)

If check result is not as specified above, cause may lie in wire harness, coupler connection, MAF sensor or ECM/PCM.

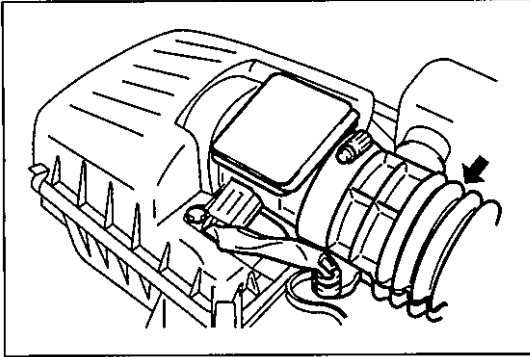

### Removal

- 1) Disconnect negative cable at battery and coupler from MAF sensor.
- 2) Remove air cleaner outlet hose from throttle body and MAF sensor.

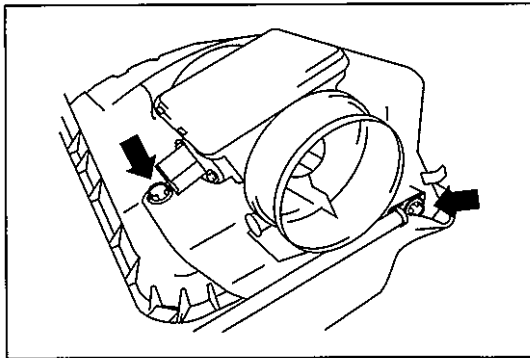


- 3) Remove MAF sensor from air cleaner case.

### NOTE:

**Don't disassemble MAF sensor.**

### CAUTION:

- Do not expose MAF sensor to any shock.
  - Do not blow compressed air by using air gun or the like.
  - Do not put finger or any other object into MAF sensor.
- Malfunction may occur.**

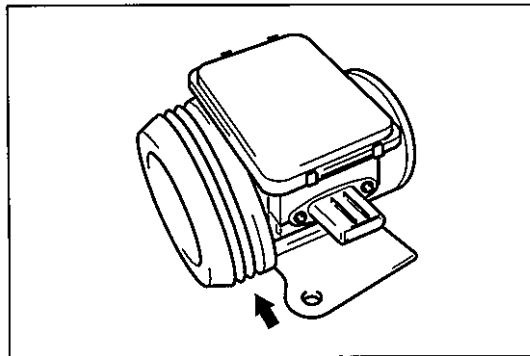

### Installation

- 1) Check MAF sensor seal for deterioration and damage.
- 2) Install MAF sensor to air cleaner case.
- 3) Install air cleaner outlet hose.
- 4) Connect MAF sensor coupler securely.
- 5) Connect battery negative cable to battery.



## INTAKE AIR TEMPERATURE (IAT) SENSOR


### Removal

- 1) Disconnect negative cable from battery.
- 2) Disconnect IAT sensor coupler.
- 3) Remove IAT sensor from air cleaner case.

### Inspection


Immerse temperature sensing part of IAT sensor in water (or ice) and measure resistance between sensor terminals while heating water gradually.


If measured resistance doesn't show such characteristic as shown in figure, replace IAT sensor.

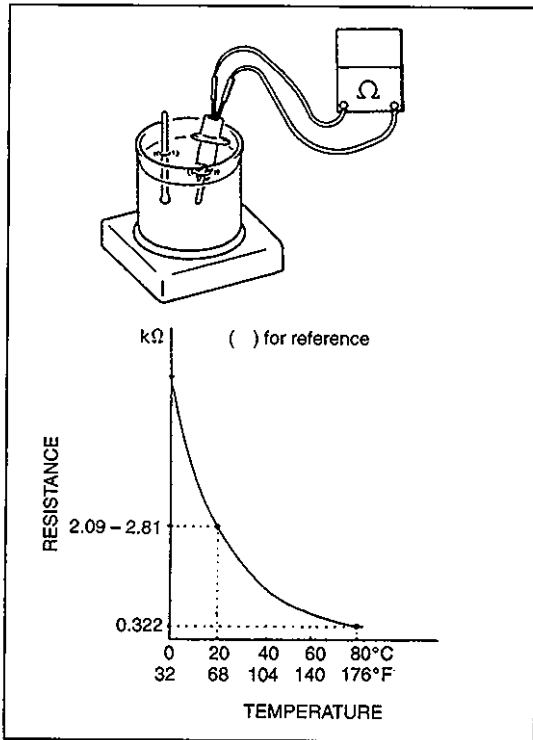

### Installation

- 1) Clean mating surface of sensor and seal on air cleaner case.
- 2) Install IAT sensor into seal.
- 3) Connect connector to IAT sensor securely.

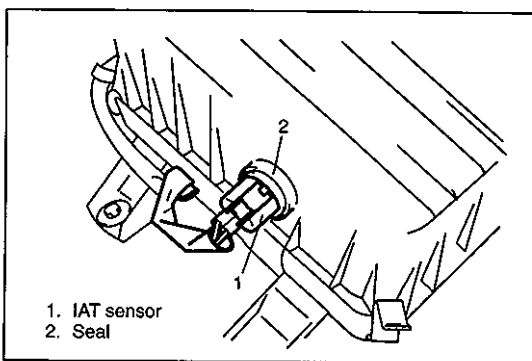

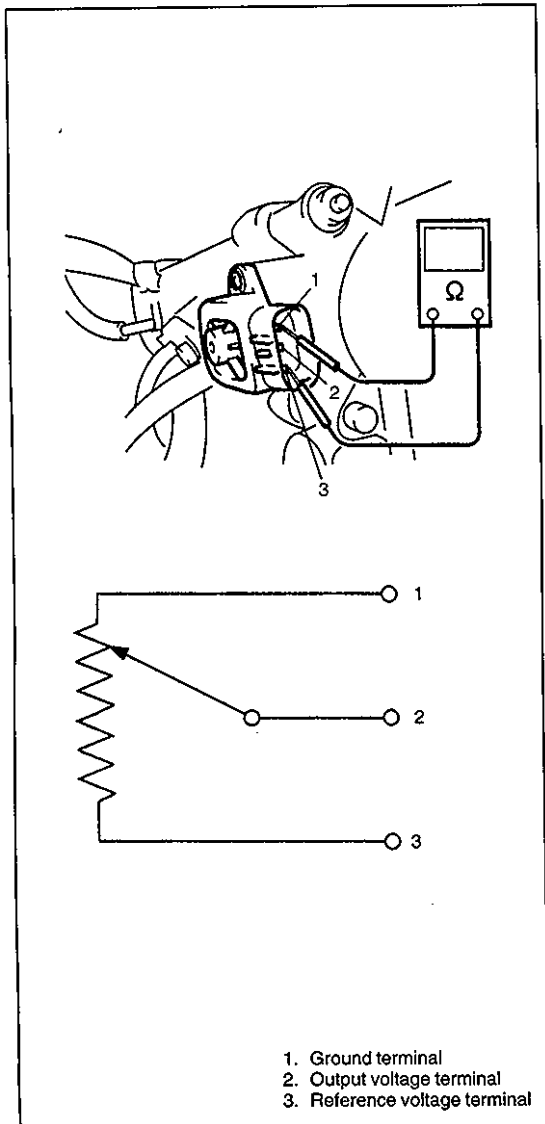

## THROTTLE POSITION SENSOR (TP SENSOR)

### Inspection

- 1) Disconnect negative cable at battery and coupler from TP sensor.
- 2) Using ohmmeter, check resistance between terminals under each condition given in table below.

TERMINALS	RESISTANCE
Between 1 and 3 terminals	4.0 – 6.0 k $\Omega$
Between 1 and 2 terminals	0.02 – 6.0 k $\Omega$ , varying linearly according to throttle valve opening

If check result is not satisfactory, replace TP sensor.

- 3) Connect TP sensor coupler securely.
- 4) Connect negative cable to battery.

### Removal

- 1) Disconnect battery negative cable at battery.
- 2) Disconnect coupler from TP sensor.
- 3) Remove TP sensor from throttle body.

### Installation


- 1) Install TP sensor to throttle body.

Fit TP sensor to throttle body in such way that its holes are a little away from TP sensor screw holes as shown in left figure and turn TP sensor clockwise so that those holes align.


#### Tightening Torque

(a): 3.5 N·m (0.35 kg-m, 2.5 lb-ft)


- 2) Connect coupler to TP sensor securely.
- 3) Connect battery negative cable to battery.

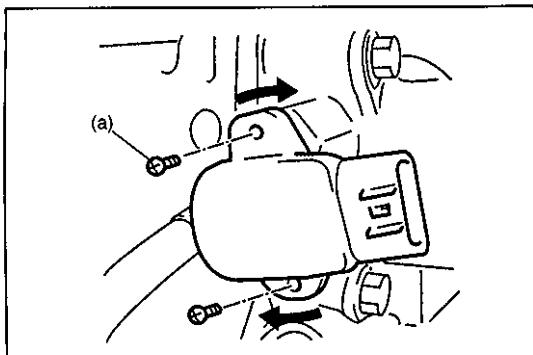

G16 Engine

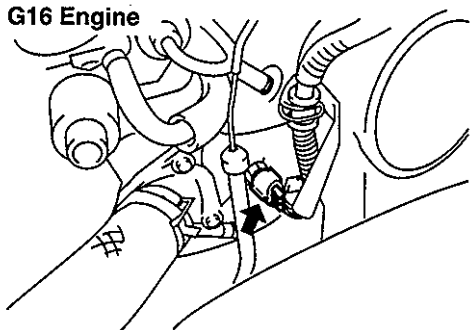

J20 Engine

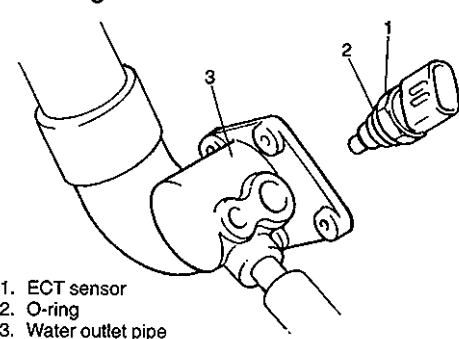

1. ECT sensor
2. O-ring
3. Water outlet pipe

## ENGINE COOLANT TEMPERATURE SENSOR (ECT SENSOR)



### Removal


- 1) Disconnect negative cable from battery.
- 2) Drain cooling system.
- 3) Disconnect coupler from ECT sensor.
- 4) Remove ECT sensor from intake manifold or water outlet cap.

### Inspection

Immerse temperature sensing part of ECT sensor in water and measure resistance between sensor terminals while heating water gradually.

If measured resistance doesn't show such characteristic as shown, replace ECT sensor.

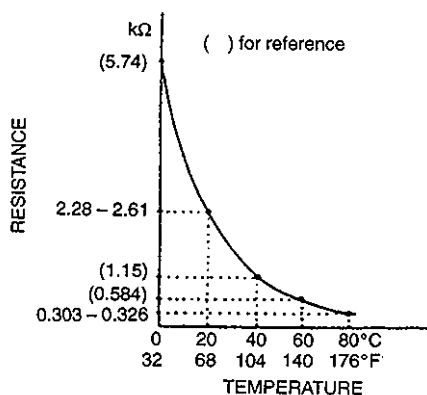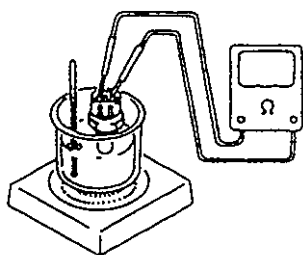

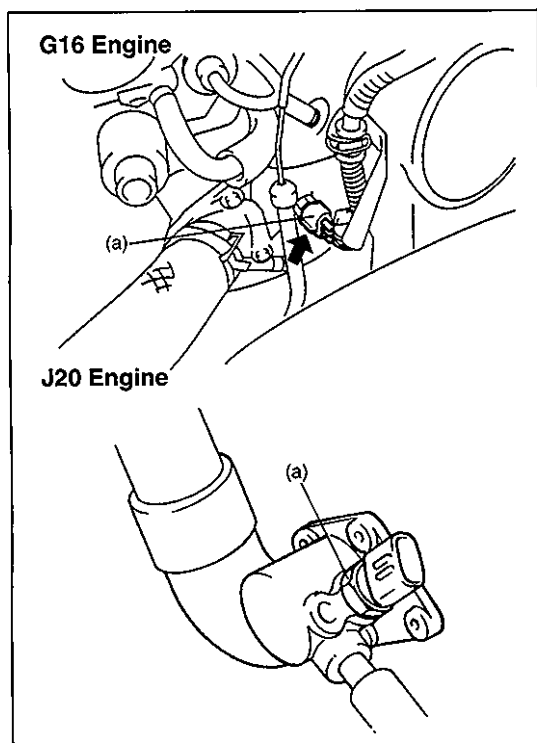

## Installation

Reverse removal procedure noting the following.

- Clean mating surfaces of sensor and intake manifold.
- Check O-ring for damage and replace if necessary.
- Tighten ECT sensor to specified torque.

## Tightening Torque


(a): 15 N·m (1.5 kg-m, 11.0 lb-ft)

- Connect coupler to sensor securely.
- Refill cooling system.

## HEATED OXYGEN SENSOR (HO2S) IF EQUIPPED

### Oxygen Sensor Inspection

Inspect oxygen sensor and its circuit referring to flow table of diagnostic trouble code No. 13 in this section. If malfunction is found, replace.

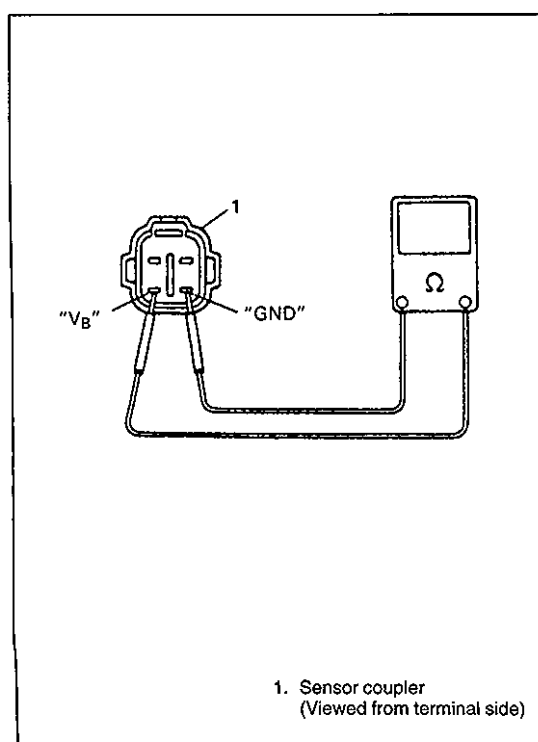

### Oxygen Sensor Heater Inspection

- 1) Disconnect oxygen sensor coupler.
- 2) Using ohmmeter, measure resistance between terminals "V<sub>B</sub>" and "GND" of sensor coupler.

#### NOTE:


Temperature of sensor affects resistance value largely.  
Make sure that sensor heater is at correct temperature.

#### Resistance of oxygen sensor heater:

11.7 – 14.3 Ω (at 20°C, 68°F)

If found faulty, replace oxygen sensor.

- 3) Connect oxygen sensor coupler securely.

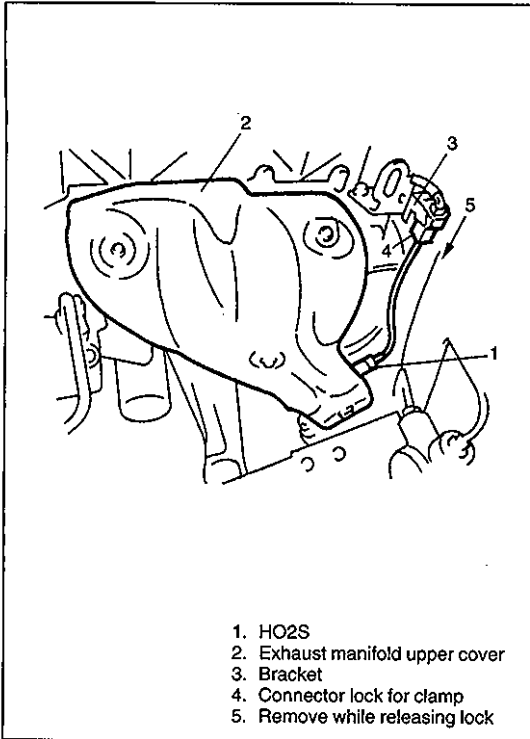

## Removal


### WARNING:

To avoid danger of being burned, do not touch exhaust system when system is hot. Oxygen sensor removal should be performed when system is cool.

- 1) Disconnect negative cable from battery.
- 2) Remove connector from bracket and disconnect coupler of oxygen sensor.
- 3) Remove exhaust manifold upper cover.
- 4) Remove oxygen sensor from exhaust manifold.

### NOTE:

Be careful not to expose it to excessive shock.

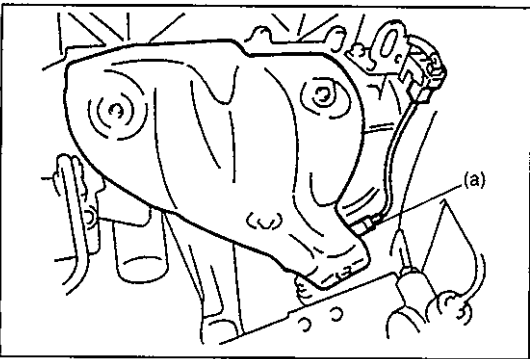

## Installation

Reverse removal procedure noting the following.

- Tighten oxygen sensor to specified torque.

### Tightening Torque

(a): 45 N·m (4.5 kg-m, 32.5 lb-ft)

- Connect coupler of oxygen sensor and fit connector to bracket.
- After installing oxygen sensor, start engine and check that no exhaust gas leakage exists.


## VEHICLE SPEED SENSOR (VSS)


### On-Vehicle Inspection

- 1) Hoist vehicle.
- 2) Release parking brake lever, set transmission in neutral and transfer in "2H".
- 3) Remove ECM/PCM cover.
- 4) Connector voltmeter between VSS terminal of ECM/PCM connector and body ground.
- 5) Turn ignition switch ON and turn rear right tire slowly with rear left tire locked.

Voltmeter should indicate deflection between 0 – 1 V and 8 – 14 V a few times while tire is turned one revolution.

If check result is not satisfactory, proceed to flow table of diagnostic trouble code No.24 in this section.

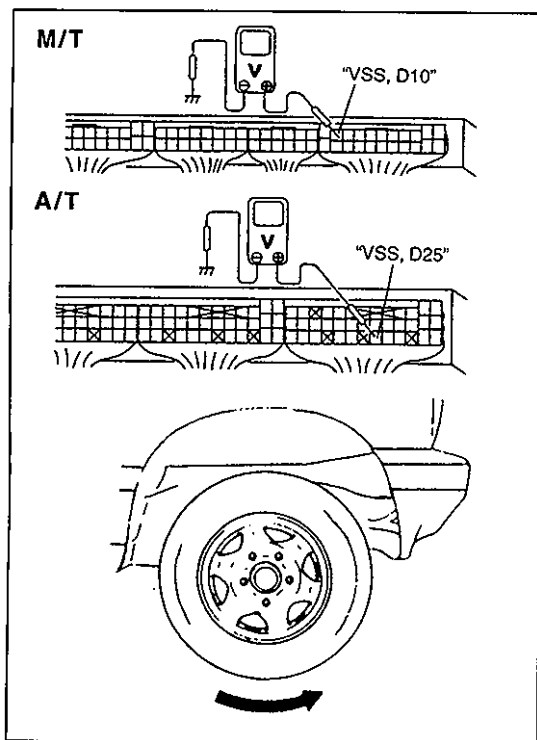

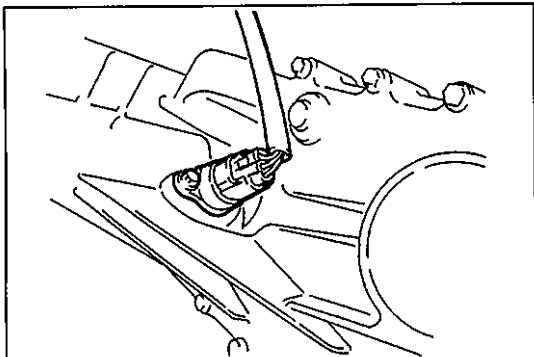

### Removal, Inspection and Installation

Refer to "VSS Removal, Inspection or Installation" in "Transfer" section.

### CAMSHAFT POSITION SENSOR (CMP SENSOR)

#### On-Vehicle Inspection

Check CMP sensor and its circuits referring to flow table of diagnostic trouble code No.42 in this section.


If malfunction is found, replace.

#### Removal and Installation (J20 Engine)

Refer to "CMP Sensor Removal/Installation" in section 6F2.

#### Removal (G16 Engine)

- 1) Disconnect negative cable from battery.
- 2) Disconnect connector from CMP sensor.
- 3) Remove CMP sensor from sensor case.

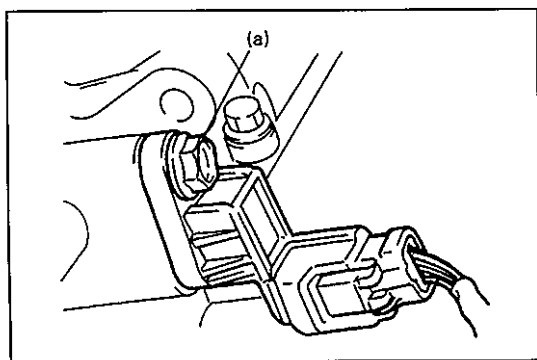


#### Installation (G16 Engine)

- 1) Check that O-ring is free from damage.
- 2) Check that CMP sensor and signal rotor tooth are free from any metal particles and damage.
- 3) Install CMP sensor to sensor case.

#### Tightening Torque

(a): 9 N·m (0.9 kg-m, 6.5 lb-ft)


- 4) Connect connector to it securely.
- 5) Connect negative cable to battery.

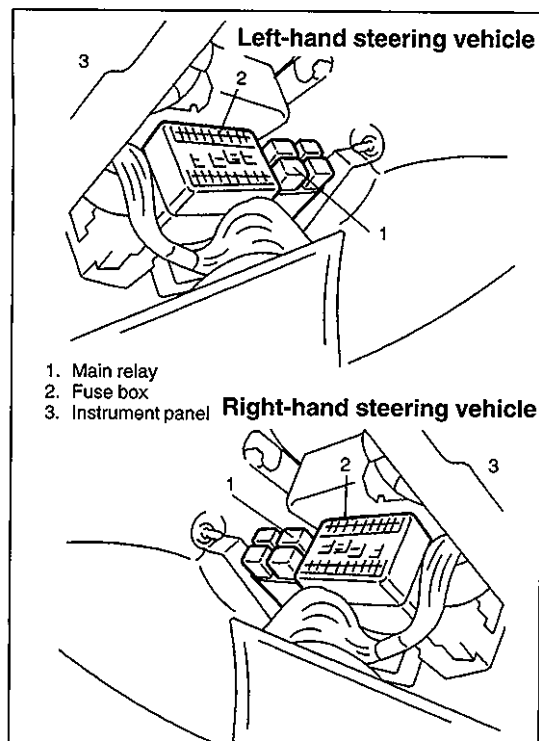

## MAIN RELAY

### Inspection


- 1) Disconnect negative cable at battery.
- 2) Remove main relay from relay box.

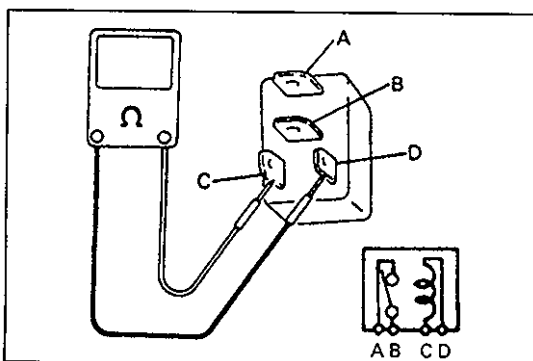


- 3) Check resistance between each two terminals as in table below.

TERMINALS	RESISTANCE
Between A and B	$\infty$ (Infinity)
Between C and D	70 – 110 $\Omega$ at 20°C, 68°F

If check results are as specified, proceed to next operation check. If not, replace.

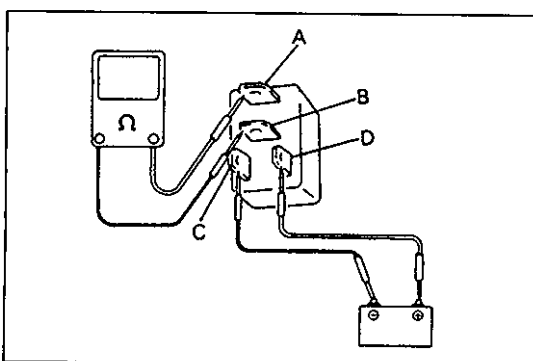


- 4) Check that there is continuity between terminals "A" and "B" when battery is connected to terminals "C" and "D".  
If malfunction is found, replace.

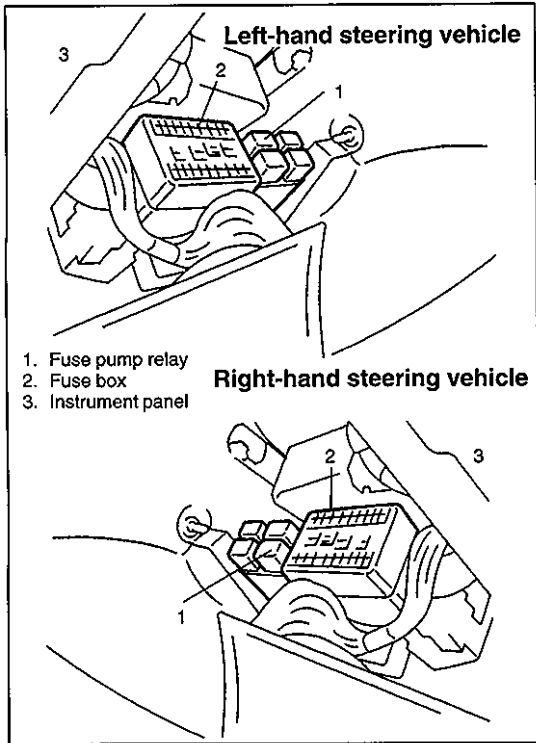

## FUEL PUMP RELAY

### Inspection

- 1) Disconnect negative cable at battery.
- 2) Remove fuel pump relay from relay box.
- 3) Structure of fuel pump relay is the same as that of main relay.  
Check its resistance and operation using the same procedure as that for main relay.  
If malfunction is found, replace.

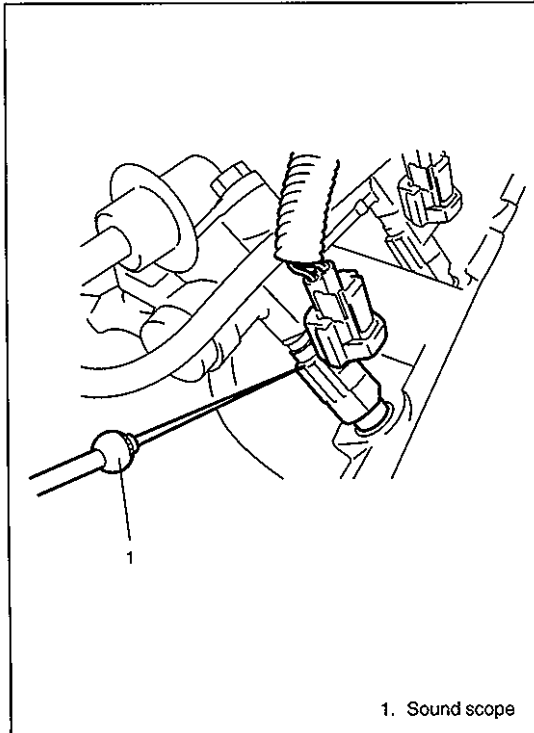

## FUEL CUT OPERATION

### Inspection

#### NOTE:

Before inspection, check to make sure that gear shift lever is in Neutral position (with A/T model, selector lever in "P" range) and that parking brake lever is pulled all the way up.

- 1) Warm up engine to normal operating temperature.
- 2) While listening to sound of injector by using sound scope or such, increase engine speed to higher than 3,000 r/min.
- 3) Check to make sure that sound to indicate operation of injector stops when throttle valve is closed instantly and it is heard again when engine speed is reduced to less than about 2,000 r/min.



## EMISSION CONTROL SYSTEM

### EGR SYSTEM (IF EQUIPPED)

#### System Inspection [Using SUZUKI scan tool (Tech 1)]

- 1) Connect Tech 1 to data link connector (DLC) with ignition switch OFF.

#### Special tool

(A): SUZUKI scan tool, Tech 1



(B): Mass storage cartridge

(C): 16/12 pin DLC adapter

#### NOTE:

For operation procedure of cartridge, refer to its cartridge operator's manual.

- 2) Start engine and warm up it to normal operating temperature.

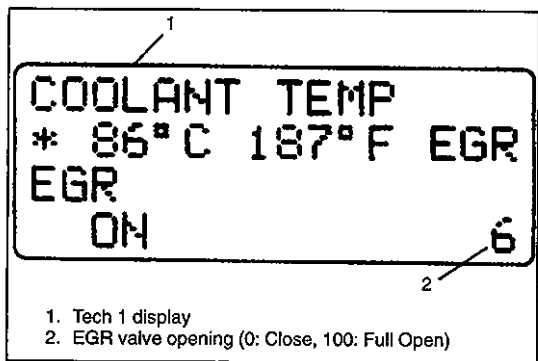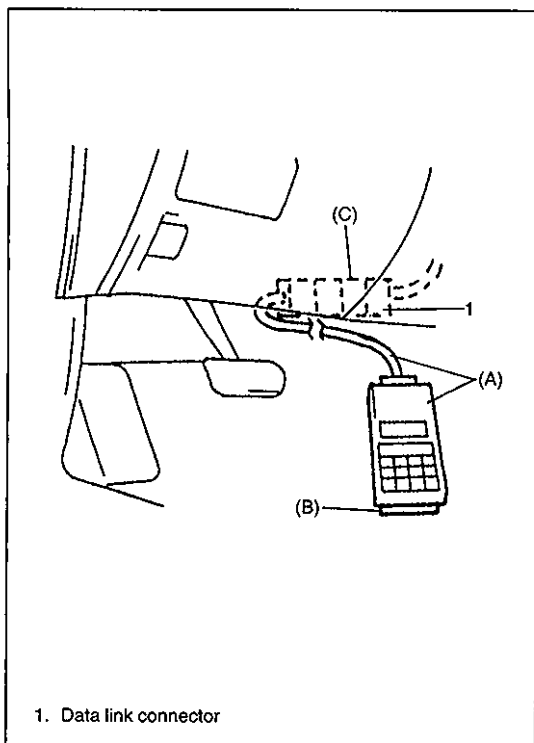



- 3) With engine idling (without depressing accelerator pedal), open EGR valve by using "MISC. TEST" mode.

In this state, according as EGR valve opening increases engine idle speed drops. If not, possible cause is clogged EGR gas passage, stuck or faulty EGR valve.

#### Removal

- 1) Disconnect negative cable at battery.
- 2) Disconnect EGR valve coupler.
- 3) Remove EGR valve and gasket from intake manifold.

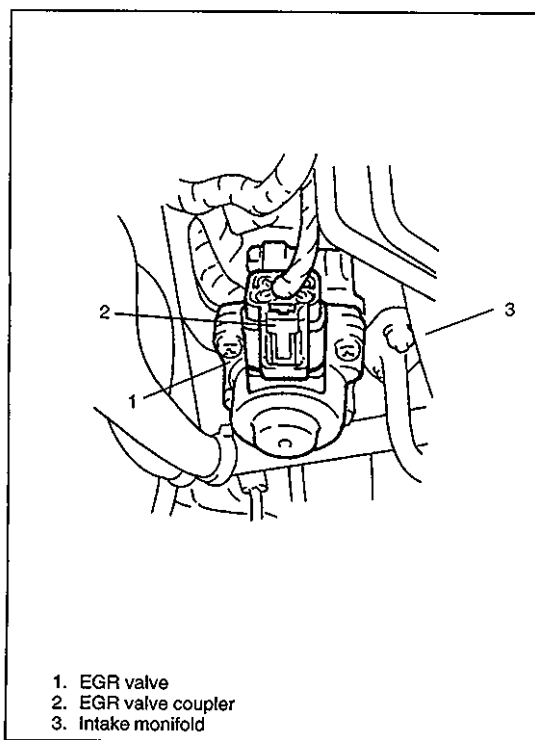

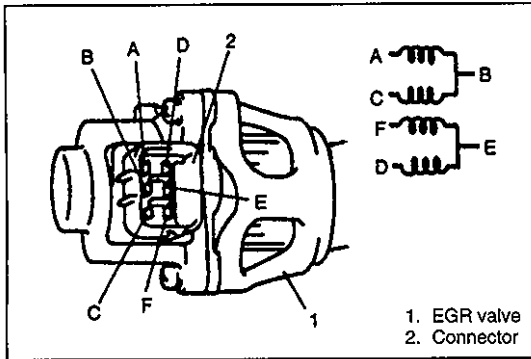

### Inspection

- 1) Check resistance between following terminals of EGR valve in each pair.

Terminals	Standard resistance
A - B C - B F - E D - E	20 - 24 $\Omega$ at 20°C, 68°F
B - valve body E - valve body	infinity ( $\infty$ )

If found faulty, replace EGR valve assembly


- 2) Remove carbon from EGR valve gas passage.

### NOTE:

**Do not use any sharp-edged tool to remove carbon.**  
**Be careful not to damage or bend EGR valve, valve seat and rod.**

- 3) Inspect valve, valve seat and rod for fault, cracks, bend or other damage.


If found faulty, replace EGR valve assembly.

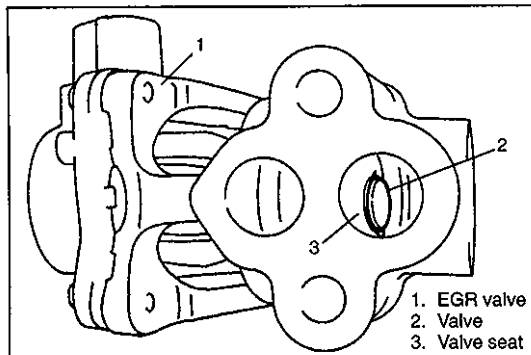


### Installation

Reverse removal procedure noting following.

- Clean mating surface of valve and intake manifold.
- Use new gasket.

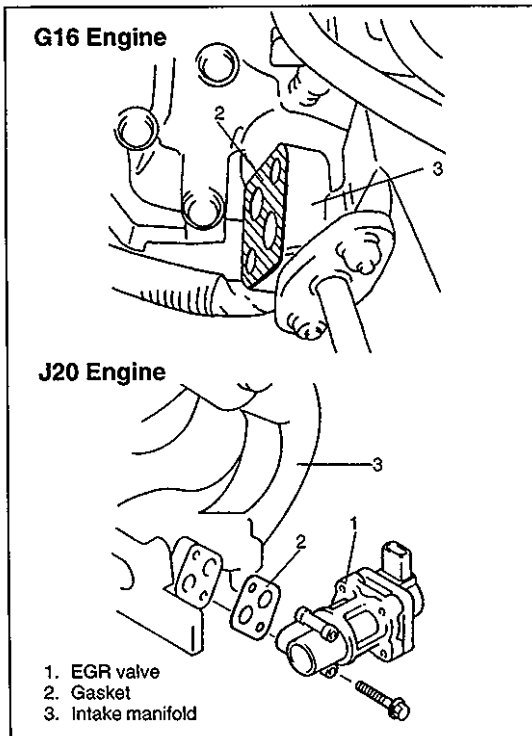

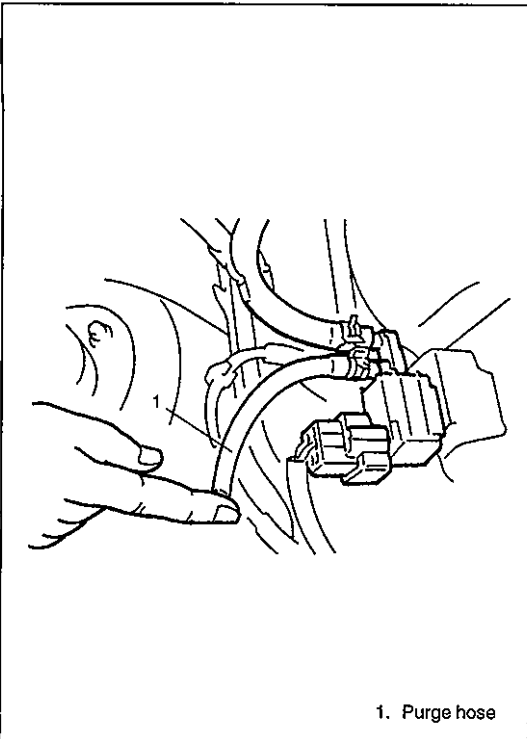

## EVAPORATIVE EMISSION CONTROL SYSTEM


### Evap Canister Purge System Check

- 1) Warm up engine to normal operating temperature.
- 2) Stop engine and hoist vehicle so that all wheels rotate freely.
- 3) Start engine, release parking brake lever, set transfer in "2H" and M/T in "5th" or A/T in "D".

#### WARNING:

**Make sure that transfer is set to "2H" range position for this check. If it is set to "4H" or "4L" position, front wheel turn at high speed and a very dangerous situation may occur.**


- 4) Disconnect purge hose from EVAP canister.
- 5) Place finger against the end of disconnected hose and check that vacuum is not felt there when engine is running at idle speed.
- 6) Also check that vacuum is felt when throttle valve is opened and vehicle speed (speedometer indication) is higher than 40 km/h.

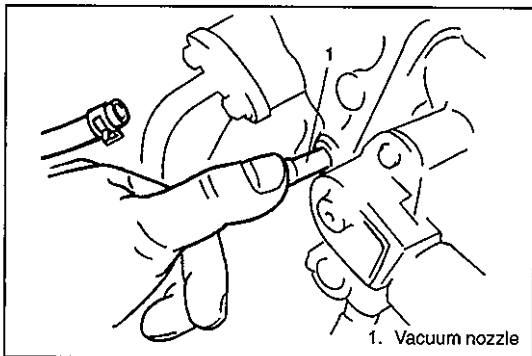

### Vacuum Passage Inspection


Start engine and run it at idle speed. With finger placed against vacuum nozzle, check that vacuum is applied.

If it is not applied, clean vacuum passage by blowing compressed air.

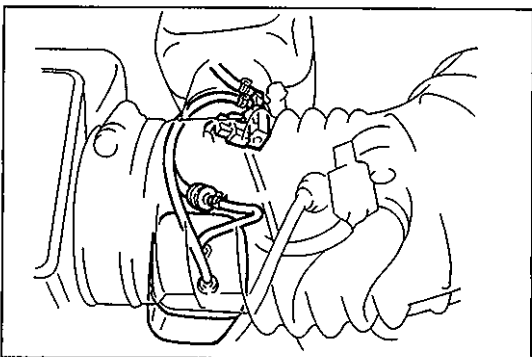

### Vacuum Hose Inspection

Check hoses for connection, leakage, clog and deterioration. Replace as necessary.

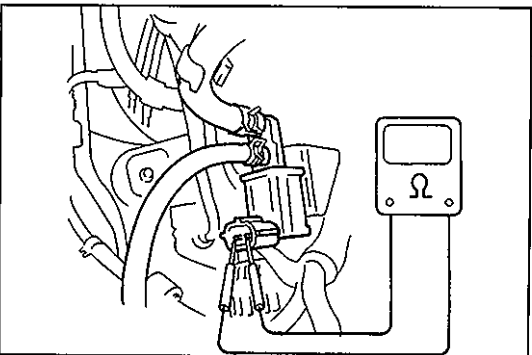



### EVAP Canister Purge Valve Inspection

- 1) With ignition switch OFF, disconnect coupler from canister purge valve.
- 2) Check resistance between two terminals of EVAP canister purge valve.

#### Resistance of EVAP canister purge valve:

**28 – 35  $\Omega$  at 20°C (68°F)**

If resistance is as specified, proceed to next operation check. If not, replace.

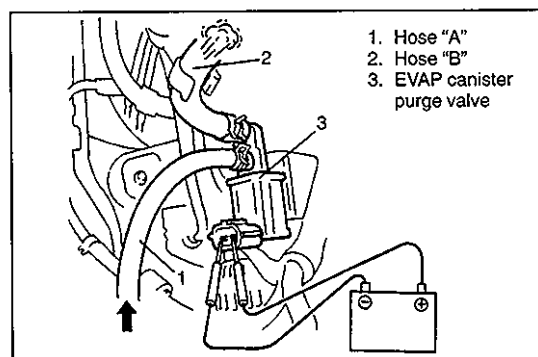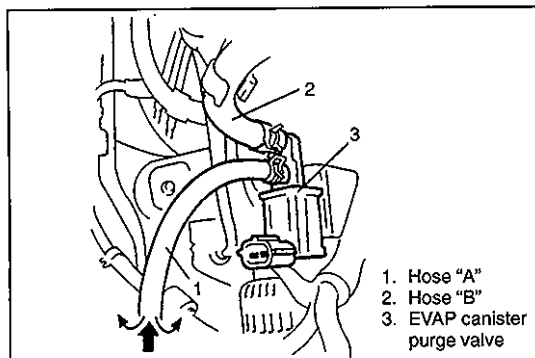

- 3) Disconnect vacuum hoses from intake manifold and its EVAP canister.
- 4) With coupler disconnected, blow into hose "A". Air should not come out of hose "B".


- 5) Connect 12V-battery to EVAP canister purge valve terminals. In this state, blow hose "A". Air should come out of hose "B".

**WARNING:**

**Do not suck the air through valve. Fuel vapor inside valve is harmful.**

If check result is not as described, replace EVAP canister purge valve.

- 6) Connect vacuum hoses.
- 7) Connect EVAP canister purge valve coupler securely.

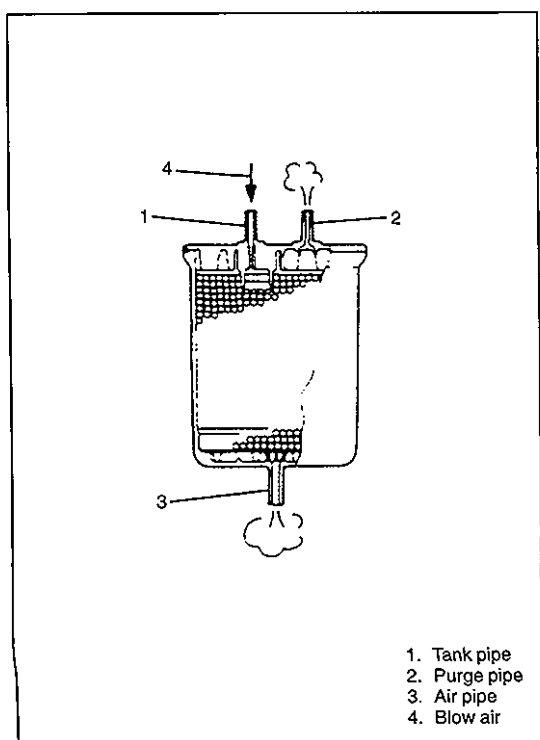


### EVAP Canister Inspection

**WARNING:**

**DO NOT SUCK nozzles on EVAP canister. Fuel vapor inside EVAP canister is harmful.**

- 1) Disconnect vacuum hoses from EVAP canister and remove EVAP canister.
- 2) When air is blown into tank pipe, there should be no restriction of flow through purge pipe and air pipe.  
If operation differs from above description, EVAP canister must be replaced.
- 3) Install EVAP canister and connect hoses to canister.

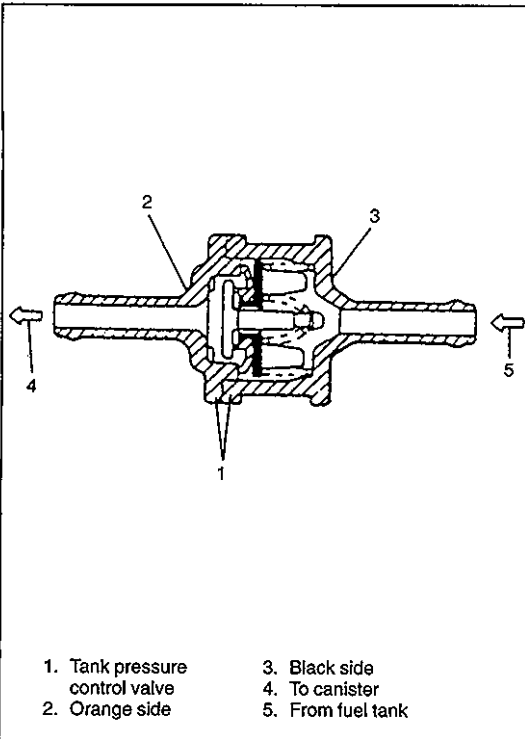

### Tank Pressure Control Valve Inspection

- 1) Remove tank pressure control valve installed around EVAP canister.
- 2) Air should pass through valve smoothly from fuel tank side (black side of tank pressure control valve) to orange side when blown hard.
- 3) From orange side, even when blown softly, air should come out of black side.
- 4) If air doesn't pass through valve in step 2) or hard blow is required in step 3), replace tank pressure control valve.

#### WARNING:

**DO NOT SUCK** air through tank pressure control valve. Fuel vapor inside the valve is harmful.

- 5) Install tank pressure control valve.

#### NOTE:

**When connecting tank pressure control valve between hoses, refer to figure at the left for installing direction.**


### PCV SYSTEM

#### NOTE:

**Be sure to check that there is no obstruction in PCV valve or its hoses before checking engine idle speed/IAC duty for obstructed PCV valve or hose hampers its accurate checking.**


#### PCV HOSE

Check hoses for connection, leakage, clog, and deterioration. Replace as necessary.

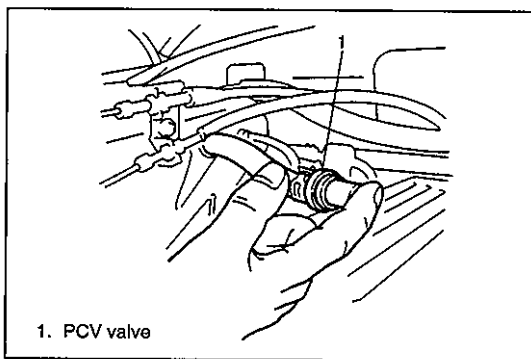

#### PCV VALVE


- 1) Disconnect PCV valve from cylinder head cover and plug head cover hole.
- 2) Run engine at idle.
- 3) Place your finger over end of PCV valve to check for vacuum. If there is no vacuum, check for clogged valve. Replace as necessary.
- 4) After checking vacuum, stop engine and remove PCV valve. Shake valve and listen for the rattle of check needle inside the valve. If valve does not rattle, replace valve.
- 5) After checking, connect PCV valve, PCV hose and clamp securely.

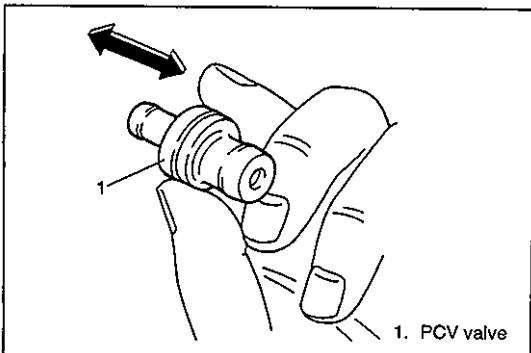


## TIGHTENING TORQUE SPECIFICATIONS

Fastening parts	Tightening torque		
	N·m	kg·m	lb·ft
Delivery pipe plug bolt	30	3.0	22.0
Delivery pipe bolts	23	2.3	17.0
Camshaft position sensor bolt (G16 engine)	9	0.9	6.5
Heated oxygen sensor	45	4.5	32.5
Fuel pressure regulator bolts	10	1.0	7.5
Engine coolant temp. (ECT) sensor	15	1.5	11.0


## SPECIAL TOOLS

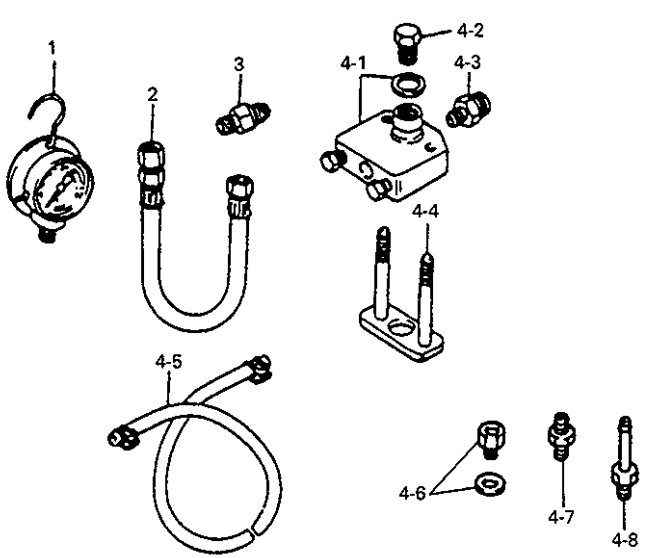


1. Pressure gauge  
09912-58441
2. Pressure hose  
09912-58431
3. Attachment  
09919-46010
4. Checking tool set  
09912-58421
- 4-1. Tool body & washer
- 4-2. Body plug
- 4-3. Body attachment
- 4-4. Holder
- 4-5. Return hose & clamp
- 4-6. Body attachment-2 & washer
- 4-7. Hose attachment-1
- 4-8. Hose attachment-2

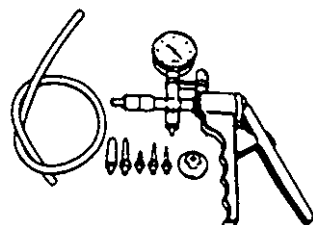


09917-47910  
Vacuum pump gauge

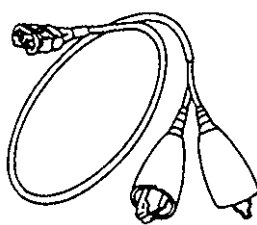


09930-88530  
Injector test lead

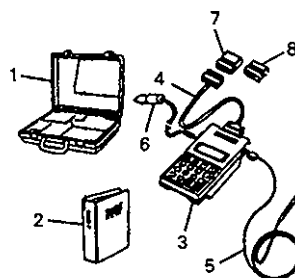

09931-76011  
Tech 1 (scan tool) kit

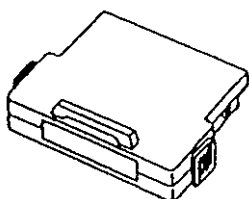

Mass storage cartridge

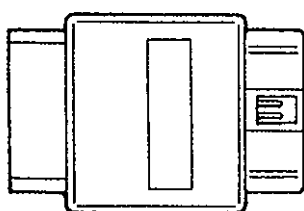

09931-96020  
16/12 pin DLC adaptor

## SECTION 6E2

# ENGINE AND EMISSION CONTROL SYSTEM (SEQUENTIAL MULTIPOINT FUEL INJECTION FOR H25 ENGINE)

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components and Wiring Location View" under "General Description" in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and "Service Precautions" under "On-Vehicle Service" in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the "LOCK" position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

**NOTE:**

Whether following systems (parts) are used in the particular vehicle or not depends on specifications. Be sure to bear this in mind when performing service work.

- EGR valve
- Heated oxygen sensor or CO adjusting resistor
- Three way catalytic converter

For the descriptions (items) not found in this section, refer to section "6E1" of this manual.

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6E2- 3	A-3 MIL Circuit Check (MIL remains ON) .....	6E2-19
<b>AIR INTAKE SYSTEM</b> .....	6E2- 6	A-4 ECM (PCM) Power and Ground Circuit Check .....	6E2-20
<b>FUEL DELIVERY SYSTEM</b> .....	6E2- 7	Code No.13, No.26 Heated Oxygen Sensor Circuit .....	6E2-22
<b>ELECTRONIC CONTROL SYSTEM</b> .....	6E2- 8	Code No.14 ECT Sensor Circuit .....	6E2-24
<b>ENGINE &amp; EMISSION CONTROL</b>		Code No.15 ECT Sensor Circuit .....	6E2-26
INPUT/OUTPUT TABLE .....	6E2-12	Code No.21 TP Sensor Circuit .....	6E2-27
<b>DIAGNOSIS</b> .....	6E2-13	Code No.22 TP Sensor Circuit .....	6E2-28
On-Board Diagnostic System .....	6E2-13	Code No.23 IAT Sensor Circuit .....	6E2-29
Precautions in Diagnosing Troubles .....	6E2-13	Code No.25 IAT Sensor Circuit .....	6E2-31
Malfunction Indicator Lamp (MIL) Check ..	6E2-14	Code No.24 VSS (Vehicle Speed Sensor) Circuit .....	6E2-32
DTC Check .....	6E2-14	Code No.33 MAF Sensor Circuit .....	6E2-34
DTC Clearance .....	6E2-14	Code No.34 MAF Sensor Circuit .....	6E2-35
DTC Table .....	6E2-15	Code No.37 ABS Circuit .....	6E2-36
A-1 MIL Circuit Check (MIL does not light) .....	6E2-17		
A-2 MIL Circuit Check (MIL flashes) .....	6E2-18		

Code No.42 CMP Sensor Circuit .....	6E2-37	Fuel Pressure Inspection .....	6E2-72
Code No.46 IAC System .....	6E2-39	Fuel Pump (On-vehicle inspection, Removal, Inspection and Installation) ..	6E2-73
Code No.51 EGR Valve (if equipped) ....	6E2-41	Fuel Pressure Regulator (Removal and Installation) .....	6E2-74
Code No.52 Fuel System .....	6E2-42	Fuel Injector (On-vehicle inspection, Removal, Inspection and Installation)	6E2-75
DTC Confirmation Procedure .....	6E2-43	<b>ELECTRONIC CONTROL SYSTEM</b> ....	6E2-80
B-1 Fuel Pump Circuit Check .....	6E2-44	ECM/PCM (Removal and Installation) .	6E2-80
B-2 Fuel Injector Circuit Check .....	6E2-45	MAF Sensor (Inspection, Removal and Installation) .....	6E2-80
B-3 Fuel Pressure Check .....	6E2-46	IAT Sensor .....	6E2-81
B-4 Idle Air Control System Check .....	6E2-48	TP Sensor (Inspection, Adjustment, Removal and Installation) .....	6E2-82
B-5 EVAP Control System Check .....	6E2-50	ECT Sensor (Removal, Inspection and Installation) .....	6E2-84
B-6 EGR System Check (if equipped) ...	6E2-51	HO2S (Removal and Installation) .....	6E2-85
B-7 A/C Signal Circuit Check.....	6E2-52	Vehicle Speed Sensor (Inspection) ....	6E2-86
B-8 A/C Condenser Fan Motor Relay Control System Check .....	6E2-53	Camshaft Position Sensor .....	6E2-86
Inspection of ECM (PCM) and Its Circuit .	6E2-55	Main Relay (Inspection) .....	6E2-86
<b>ON-VEHICLE SERVICE</b> .....	6E2-62	Fuel Pump Relay (Inspection) .....	6E2-86
General .....	6E2-63	Fuel Cut Operation (Inspection) .....	6E2-86
Accelerator Cable Adjustment .....	6E2-63	<b>EMISSION CONTROL SYSTEM</b> .....	6E2-87
A/T Throttle Cable Adjustment (A/T VEHICLE) .....	6E2-63	EGR System (if equipped) .....	6E2-87
Idle Speed/Idle Air Control Duty Inspection .....	6E2-64	Evaporative Emission Control System .	6E2-88
Idle Mixture Inspection/Adjustment.....	6E2-66	PCV System .....	6E2-88
<b>AIR INTAKE SYSTEM</b> .....	6E2-67	<b>TIGHTENING TORQUE</b>	
Throttle Body (On-vehicle inspection, Removal, Cleaning and Installation) ....	6E2-67	<b>SPECIFICATIONS</b> .....	6E2-89
Idle Air Control Valve (Removal and Installation) .....	6E2-70	<b>SPECIAL TOOLS</b> .....	6E2-89
<b>FUEL DELIVERY SYSTEM</b> .....	6E2-72		



## GENERAL DESCRIPTION


The engine and emission control system has 4 major sub-systems: air intake system, fuel delivery system, electronic control system and emission control system.

Air intake system includes air cleaner, mass air flow sensor, throttle body, idle air control valve and intake manifold.

Fuel delivery system includes fuel pump, delivery pipe, fuel pressure regulator, fuel injectors, etc.

Electronic control system includes ECM (PCM), various sensors and controlled devices.

Emission control system includes EGR, EVAP and PCV systems.

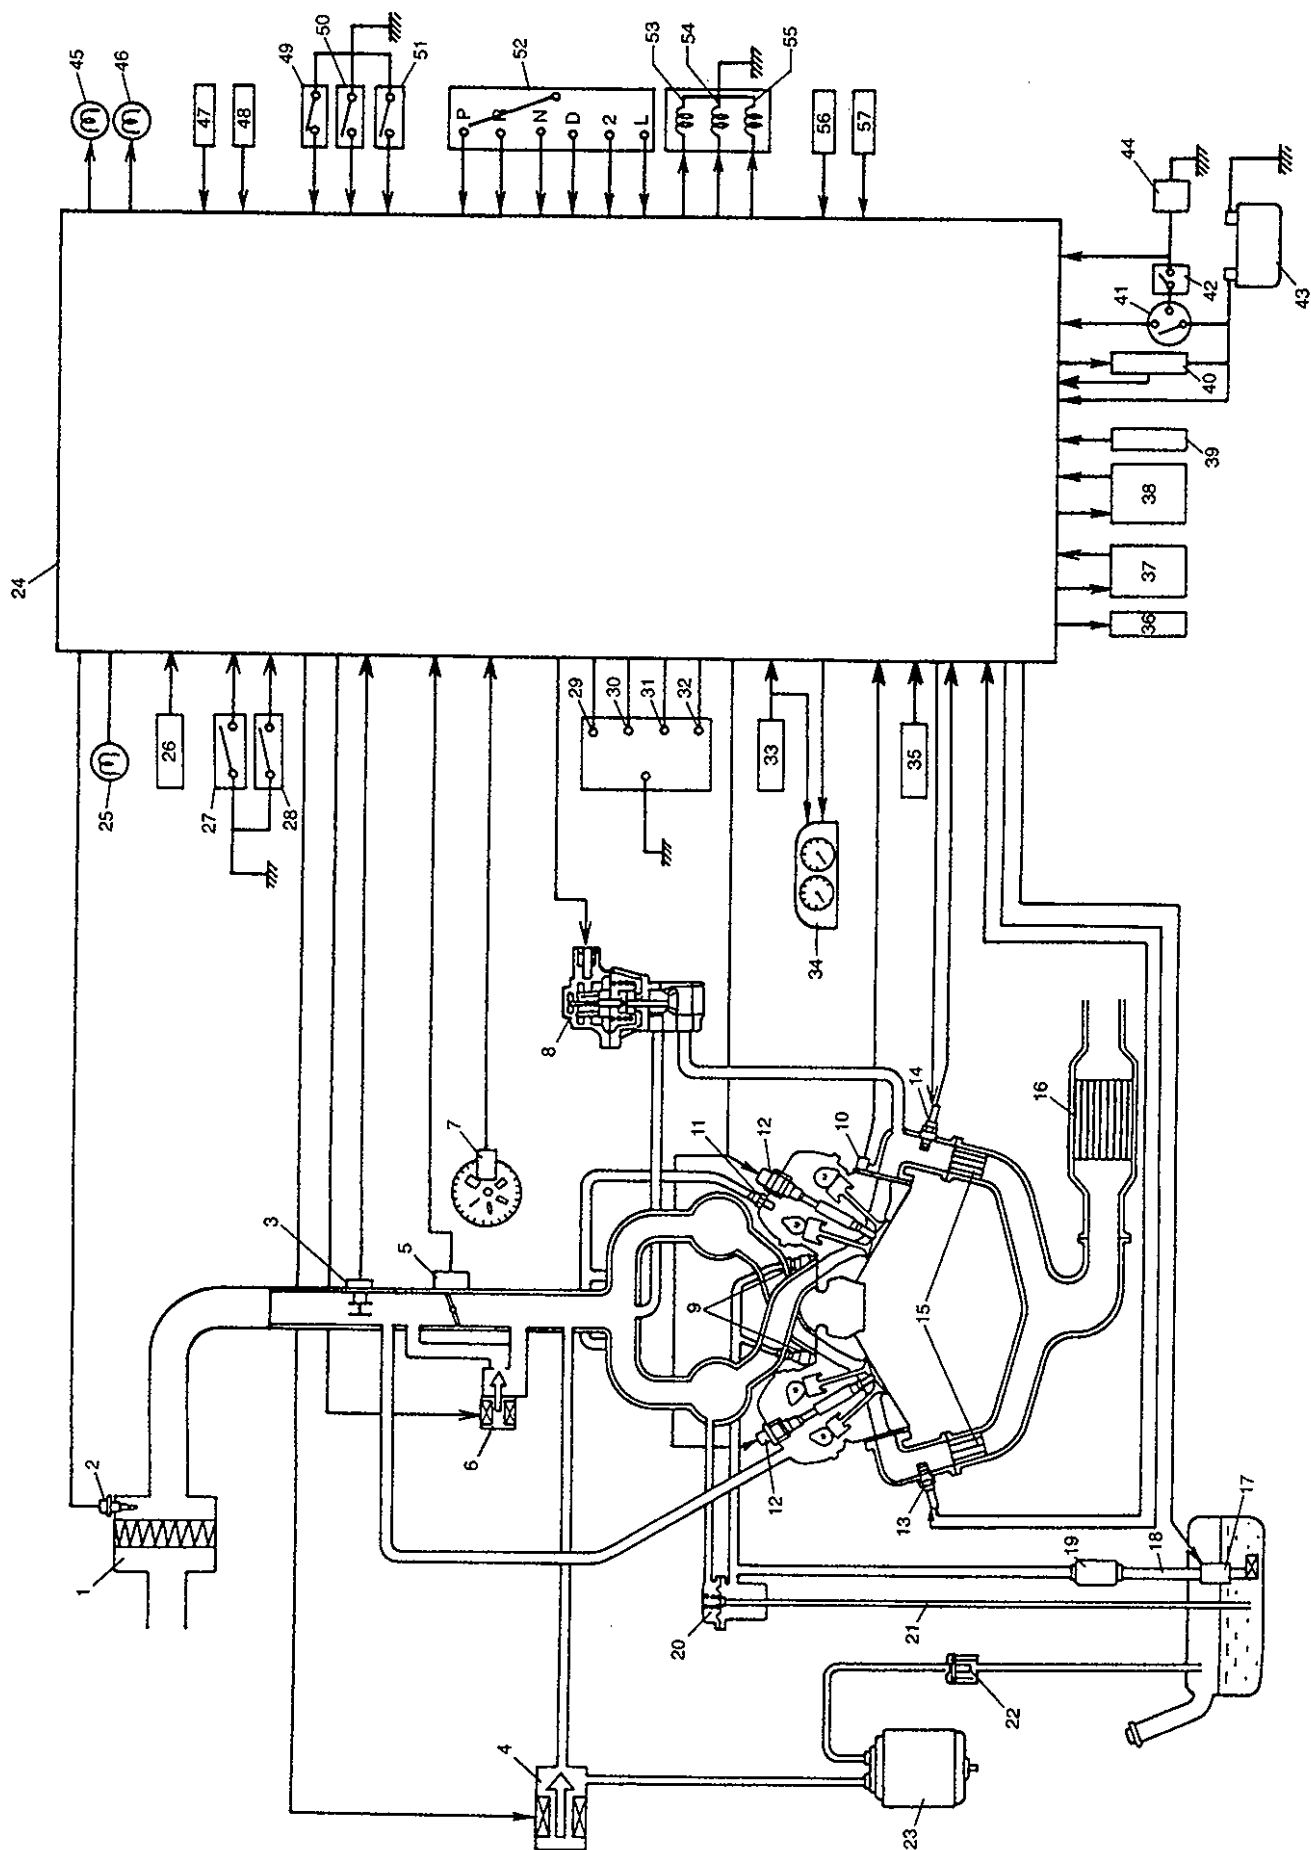


1. Air cleaner		
2. Intake air temp. sensor		
3. Mass air flow sensor		
4. EVAP canister purge valve		
5. Throttle position sensor		
6. Idle air control valve		
7. Camshaft position sensor		
8. EGR valve (if equipped)		
9. Fuel injector		
10. Engine coolant temp. sensor		
11. PCV valve		
12. Ignition coil assembly		
13. Right (No. 2) bank heated oxygen sensor (if equipped)		
14. Left (No. 1) bank heated oxygen sensor (if equipped)		
15. Warm-up three way catalytic converter (if equipped)		
16. Three way catalytic converter (if equipped)		
17. Fuel pump		
18. Fuel feed line		
19. Fuel filter		
20. Fuel pressure regulator		
21. Fuel return line		
22. Tank pressure control valve		
23. EVAP canister		
24. ECM/PCM (Engine control module/Powertrain control module)		
25. Malfunction indicator lamp ("CHECK ENGINE" light)		
26. Electric loads		
– Rear defogger (if equipped)		
– Lighting (M/T)		
27. Power steering pressure switch (if equipped)		
28. Heater blower fan switch		
29. Diag. switch terminal		
30. Test switch terminal		
31. Monitor terminal		
32. Output duty select terminal		
33. Vehicle speed sensor		
34. Combination meter		
35. CO adjusting resistor (if equipped)		
36. A/C condenser fan relay (if equipped)		
37. A/C controller (if equipped)		
38. Data link connector/Immobilizer control module (if equipped)		
39. ABS control module (if equipped)		
40. Main relay		
41. Ignition switch		
42. Park/Neutral position switch in TR switch		(A/T)
43. Battery		
44. Starter magnetic switch		
45. "O/D OFF" lamp		(A/T)
46. "POWER" lamp		(A/T)
47. Lighting switch		(A/T)
48. Stop lamp switch		(A/T)
49. O/D cut switch		(A/T)
50. POWER/NORMAL change switch		(A/T)
51. 4WD low switch		(A/T)
52. Transmission range switch		(A/T)
53. Solenoid valve A		(A/T)
54. Solenoid valve B		(A/T)
55. TCC solenoid valve		(A/T)
56. A/T input speed sensor		(A/T)
57. A/T vehicle (output) speed sensor		(A/T)

## AIR INTAKE SYSTEM

The main components of the air intake system are air cleaner, mass air flow sensor, air cleaner intake air pipe, throttle body, intake collector, idle air control valve and intake manifold.

The air (by the amount corresponding to the throttle valve opening and engine speed) is filtered by the air cleaner, passes through the throttle body, is distributed by the intake manifold and finally drawn into each combustion chamber.

When the idle air control valve is opened according to the signal from ECM (PCM), the air bypasses the throttle valve through bypass passage and is finally drawn into the intake manifold.

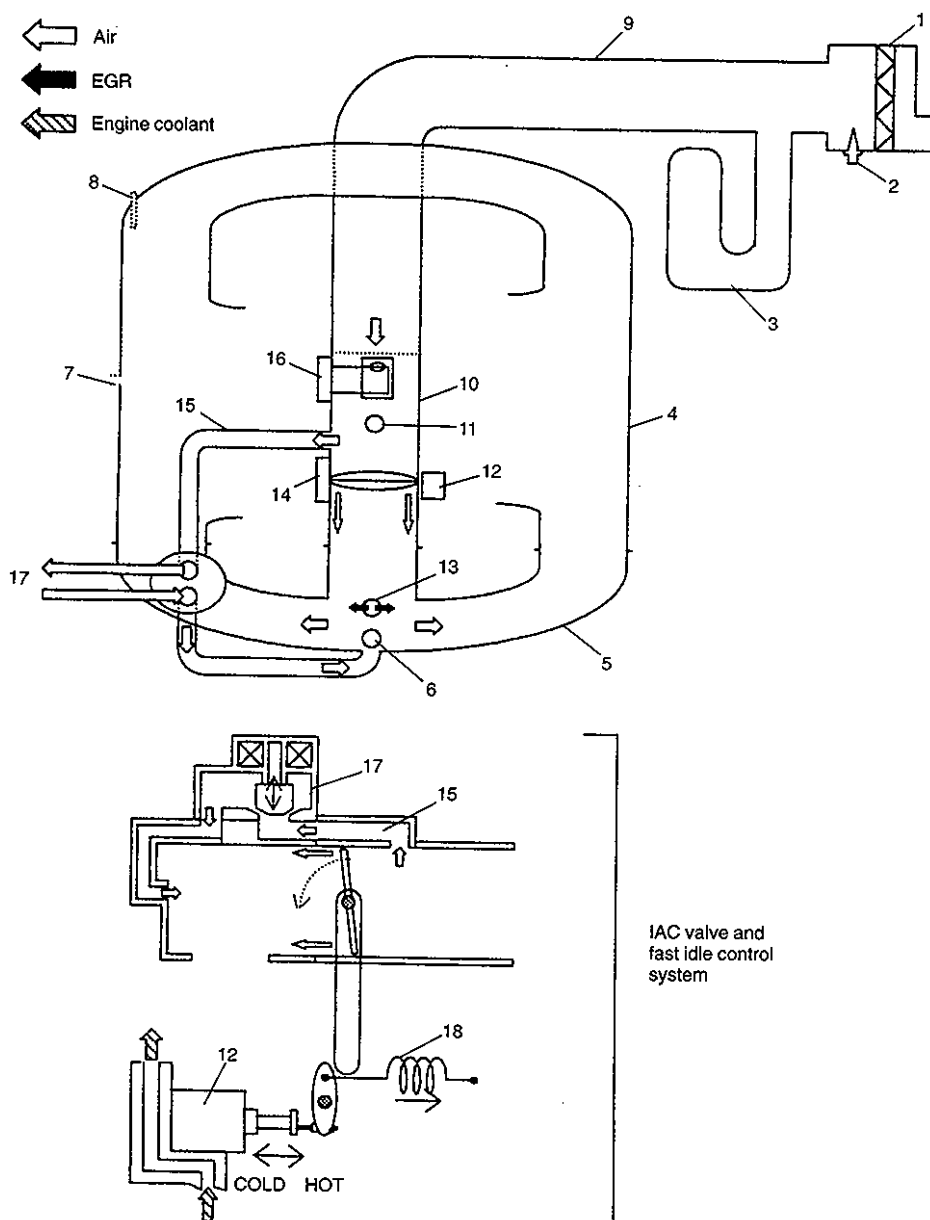

IAC valve and  
fast idle control  
system

- |                     |                                    |                |
|---------------------|------------------------------------|----------------|
| 1. Air cleaner      | 8. Fuel pressure<br>regulator hose | 13. EGR valve  |
| 2. IAT sensor       | 9. Intake air pipe                 | 14. TP sensor  |
| 3. Resonator        | 10. Throttle body                  | 15. IAC hose   |
| 4. Intake manifold  | 11. Breather hose                  | 16. MAF sensor |
| 5. Intake collector | 12. Fast idle up thermo wax        | 17. IAC valve  |
| 6. PCV hose         |                                    | 18. Spring     |
| 7. Brake booster    |                                    |                |

## FUEL DELIVERY SYSTEM



The fuel delivery system consists of the fuel tank, fuel pump, fuel filter, fuel pressure regulator, delivery pipe and fuel injectors.

The fuel in the fuel tank is pumped up by the fuel pump, filtered by the fuel filter and fed under pressure to each injector through the delivery pipe.

As the fuel pressure applied to the injector (the fuel pressure in the fuel feed line) is always kept a certain

amount higher than the pressure in the intake manifold by the fuel pressure regulator, the fuel is injected into the intake port of the cylinder head when the injector opens according to the injection signal from ECM (PCM).

The fuel relieved by the fuel pressure regulator returns through the fuel return line to the fuel tank.

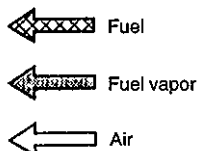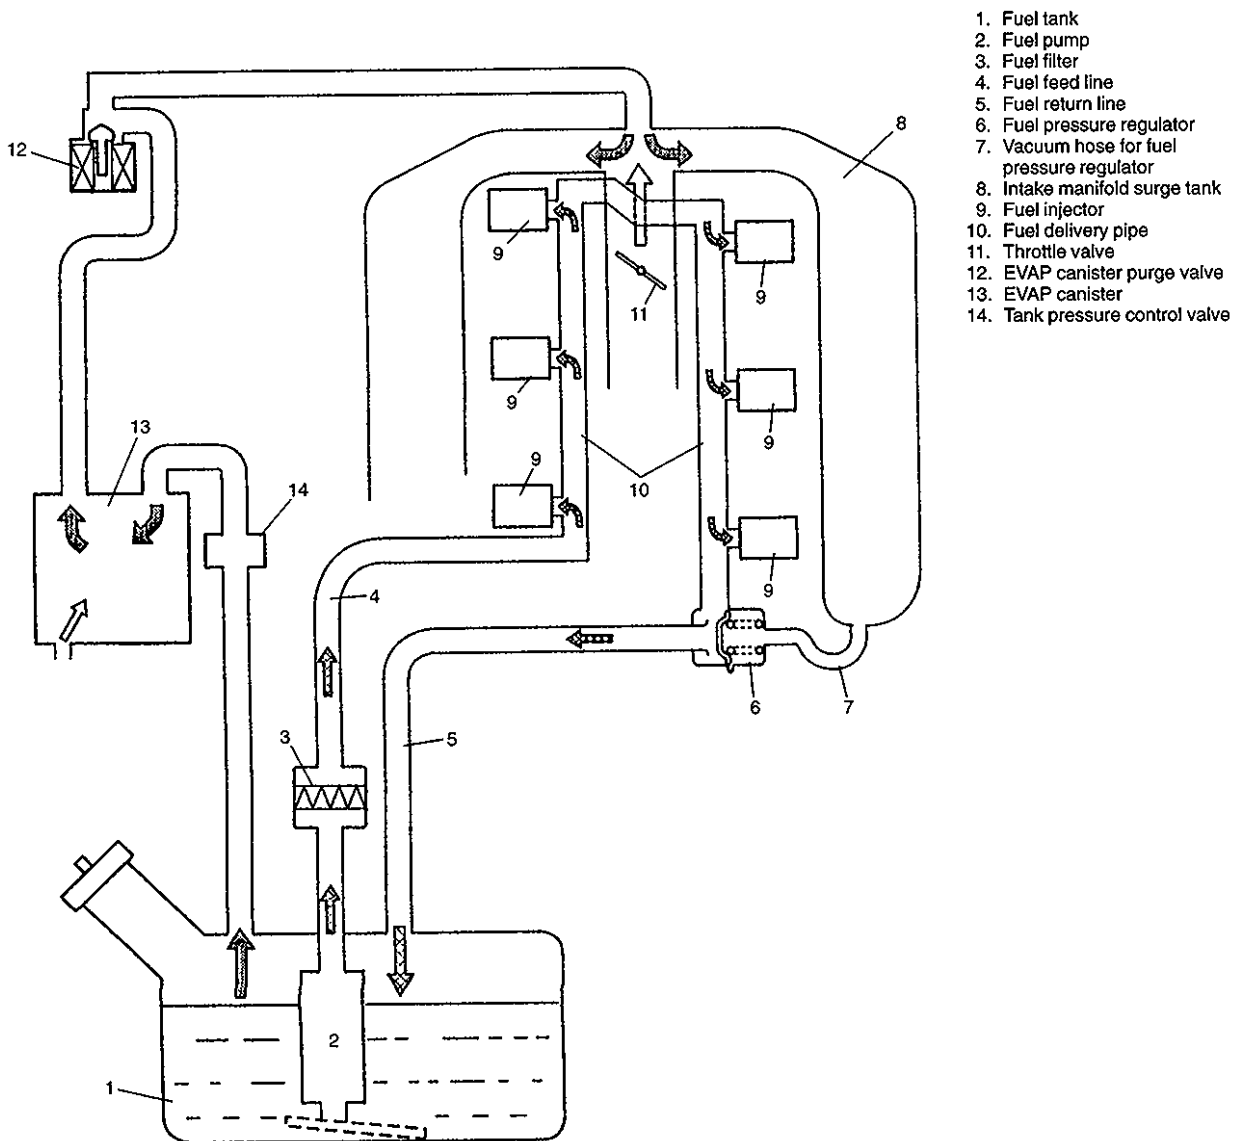

1. Fuel tank
2. Fuel pump
3. Fuel filter
4. Fuel feed line
5. Fuel return line
6. Fuel pressure regulator
7. Vacuum hose for fuel pressure regulator
8. Intake manifold surge tank
9. Fuel injector
10. Fuel delivery pipe
11. Throttle valve
12. EVAP canister purge valve
13. EVAP canister
14. Tank pressure control valve

## ELECTRONIC CONTROL SYSTEM


The electronic control system consists of 1) various sensors which detect the state of engine and driving conditions, 2) ECM (PCM) which controls various devices according to the signals from the sensors and 3) various controlled devices.

Functionally, it is divided into the following sub systems:

- Fuel injection control system
- Heated oxygen sensor heater control system (if equipped)

- Idle air control system
- Fuel pump control system
- Evaporative emission control system
- Ignition control system
- EGR system (if equipped)

Also, with A/T model, PCM controls A/T.

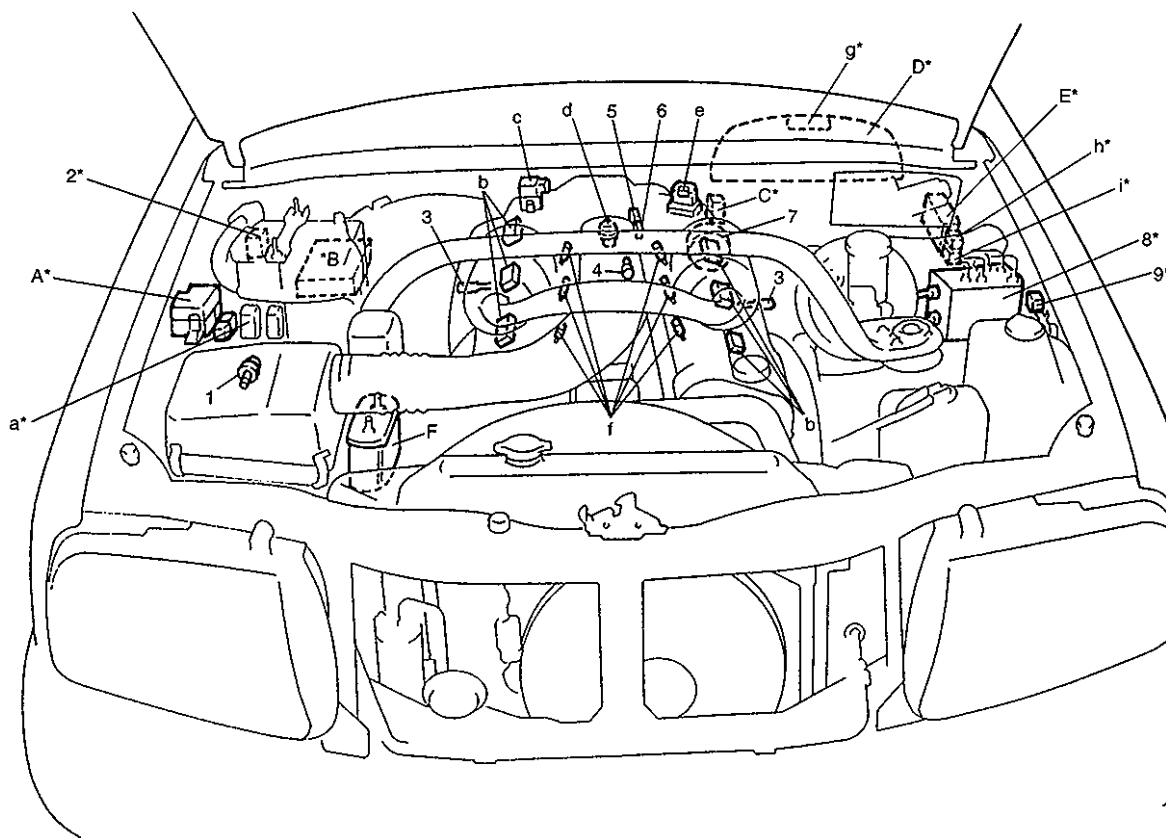

### INFORMATION SENSORS

1. IAT sensor
2. CO adjusting resistor (if equipped)
3. Heated oxygen sensor (if equipped)
4. ECT sensor
5. TP sensor
6. MAF sensor
7. Camshaft position sensor (CMP sensor)
8. ABS control module (if equipped)
9. Monitor connector

### CONTROLLED DEVICES


- a : A/C condenser fan motor relay (if equipped)  
 b : Ignition coil assemblies  
 c : EVAP canister purge valve  
 d : EGR valve (if equipped)  
 e : Idle air control valve  
 f : Injectors  
 g : Malfunction indicator lamp ("CHECK ENGINE" light)  
 h : Fuel pump relay  
 i : Main relay


### OTHERS

- A : Main fuse box  
 B : ECM (PCM)  
 C : Data link connector  
 D : Combination meter  
 E : Fuse box  
 F : EVAP canister

### NOTE:

Above figure shows left-hand steering vehicle. For right-hand steering vehicle, parts with (\*) are installed at the other side.

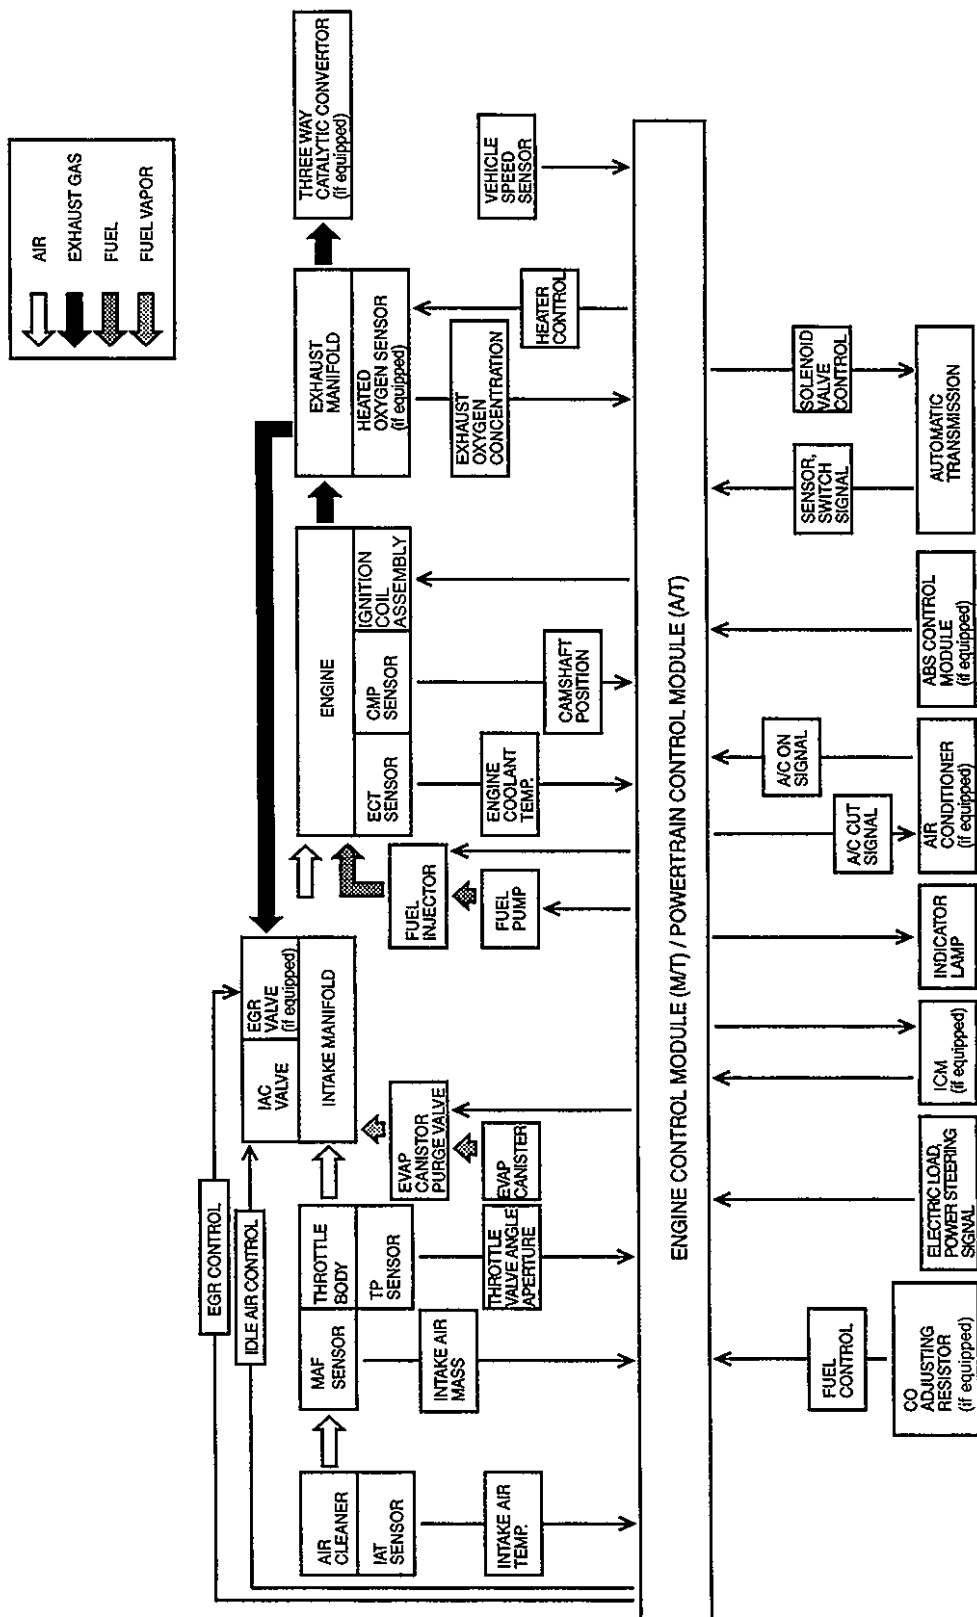

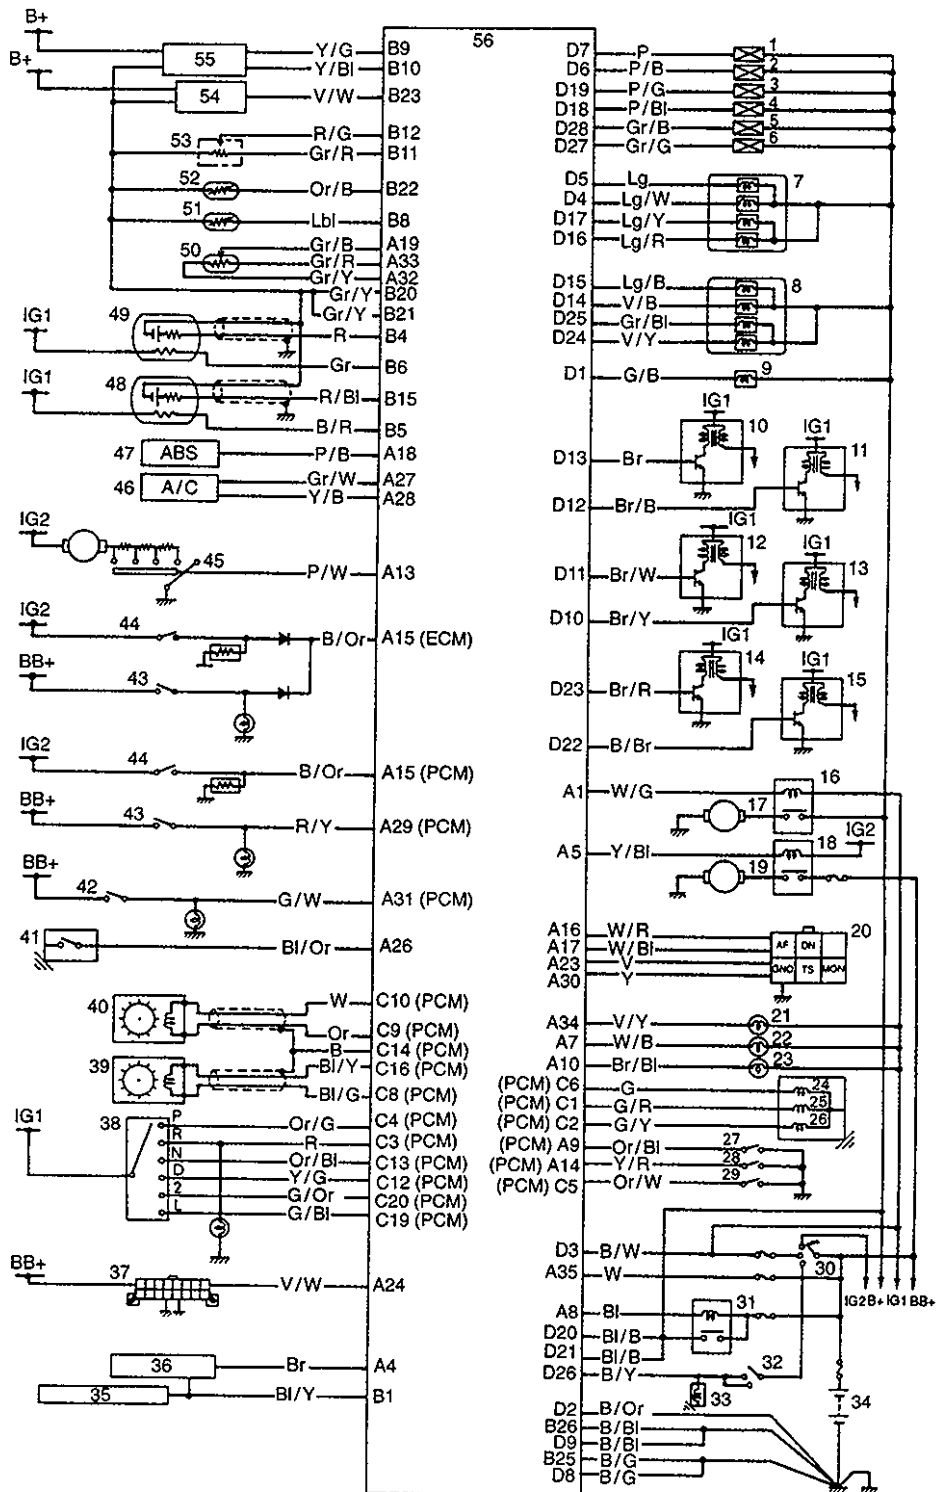

TERMINAL ARRANGEMENT OF ECM (PCM) CONNECTOR (VIEWED FROM HARNESS SIDE)

A 8	A 7	A 6	A 5	A 4	A 3	A 2	A 1	B 8	B 5	B 4	B 3	B 2	B 1	C 4	C 3	C 2	C 1	D 7	D 6	D 5	D 4	D 3	D 2	D 1
A 23	A 22	A 21	A 20	A 19	A 18	A 17	A 16	A 15	A 14	A 13	A 12	A 11	A 10	A 9	A 8	A 7	A 6	D 19	D 18	D 17	D 16	D 15	D 14	D 13
A 35	A 34	A 33	A 32	A 31	A 30	A 29	A 28	A 27	A 26	A 25	A 24	A 23	A 22	A 21	A 20	A 19	A 18	D 28	D 27	D 26	D 25	D 24	D 23	D 22
A 35	A 34	A 33	A 32	A 31	A 30	A 29	A 28	A 27	A 26	A 25	A 24	A 23	A 22	A 21	A 20	A 19	A 18	D 28	D 27	D 26	D 25	D 24	D 23	D 22



1. Fuel injector No.1
2. Fuel injector No.2
3. Fuel injector No.3
4. Fuel injector No.4
5. Fuel injector No.5
6. Fuel injector No.6
7. EGR valve (if equipped)
8. Idle air control (IAC) valve
9. EVAP canister purge valve
10. Ignition coil assembly for No.1 spark plug
11. Ignition coil assembly for No.2 spark plug
12. Ignition coil assembly for No.3 spark plug
13. Ignition coil assembly for No.4 spark plug
14. Ignition coil assembly for No.5 spark plug
15. Ignition coil assembly for No.6 spark plug
16. Fuel pump relay
17. Fuel pump
18. A/C condenser fan relay (if equipped)
19. A/C condenser fan motor (if equipped)
20. Monitor connector
21. "CHECK ENGINE" lamp (Malfunction indicator lamp)
22. "O/D OFF" lamp
23. "POWER" lamp
24. Shift solenoid-A
25. Shift solenoid-B
26. TCC solenoid
27. Power/Normal change switch
28. O/D cut switch
29. 4WD low switch
30. Ignition switch
31. Main relay
32. Transmission range switch (Park/Neutral Position switch)
33. Starter magnetic switch
34. Battery
35. Vehicle speed sensor
36. Combination meter
37. Data link connector
38. Transmission range switch (Sensor)
39. A/T input speed sensor
40. A/T vehicle (output) speed sensor
41. Power steering pressure switch
42. Stop lamp switch (Brake pedal switch)
43. Lighting switch
44. Rear defogger switch (if equipped)
45. Heater blower switch
46. A/C amplifier (if equipped)
47. ABS control module (if equipped)
48. Left (No.1) bank heated oxygen sensor (if equipped)
49. Right (No.2) bank heated oxygen sensor (if equipped)
50. CO adjusting resistor (if equipped)
51. Intake air temp. sensor
52. Engine coolant temp. sensor
53. Throttle position sensor
54. Mass air flow sensor
55. Camshaft position sensor
56. ECM (PCM)


TERMINAL	CIRCUIT	TERMINAL	CIRCUIT
A1	Fuel pump relay	B26	Ground
A2/A3	—		
A4	Tachometer	C1	Shift solenoid B (A/T VEHICLE)
A5	A/C condenser fan motor relay (if equipped)	C2	TCC solenoid (A/T VEHICLE)
A7	"O/D OFF" lamp (A/T VEHICLE)	C3	Transmission range switch "R" (A/T VEHICLE)
A8	Main relay	C4	Transmission range switch "P" (A/T VEHICLE)
A9	Power/Normal change switch (A/T VEHICLE)	C5	4WD low switch (A/T VEHICLE)
A10	"POWER" lamp (A/T VEHICLE)	C6	Shift solenoid A
A11/A12	—	C7	—
A13	Heater blower switch	C8	A/T input speed sensor (A/T VEHICLE)
A14	Overdrive cut switch	C9	A/T vehicle (output) speed sensor (A/T VEHICLE)
A15	Rear defogger switch (if equipped) and lighting switch (M/T VEHICLE)	C10	A/T vehicle (output) speed sensor (A/T VEHICLE)
	Rear defogger switch (if equipped, A/T VEHICLE)	C11	—
A16	Test switch terminal	C12	Transmission range switch "D" (A/T VEHICLE)
A17	Output duty select terminal	C13	Transmission range switch "N" (A/T VEHICLE)
A18	ABS control module (if equipped)	C14	Shield wire ground for A/T input speed sensor and A/T vehicle (output) speed sensor (A/T VEHICLE)
A19	CO adjusting resistor (if equipped)		
A20-A22	—	C15	—
A23	Duty output terminal	C16	A/T input speed sensor (A/T VEHICLE)
A24	Data link connector	C17/C18	—
A25	—	C19	Transmission range switch "L" (A/T VEHICLE)
A26	Power steering pressure switch	C20	Transmission range switch "2" (A/T VEHICLE)
A27	A/C cut signal (if equipped)		
A28	A/C signal (if equipped)		
A29	Lighting switch (A/T VEHICLE)		
A30	Diag. switch terminal		
A31	Stop lamp switch (A/T VEHICLE)	D1	EVAP canister purge valve
A32	CO adjusting resistor (—) (if equipped)	D2	Ground
A33	Power source for CO adjusting resistor (if equipped)	D3	Ignition switch
		D4	EGR valve (stepper motor coil 2, if equipped)
A34	Malfunction indicator lamp ("CHECK ENGINE" lamp)	D5	EGR valve (stepper motor coil 1, if equipped)
A35	Power source for back up	D6	Fuel injector No.2
		D7	Fuel injector No.1
B1	Vehicle speed sensor	D8	Ground
B2/B3	—	D9	Ground
B4	Left (No.1) bank heated oxygen sensor (if equipped)	D10	Ignition coil assembly for No.4
B5	Heater of right (No.2) bank HO2S (if equipped)	D11	Ignition coil assembly for No.3
B6	Heater of left (No.1) bank HO2S (if equipped)	D12	Ignition coil assembly for No.2
B7	—	D13	Ignition coil assembly for No.1
		D14	IAC valve (stepper motor coil 2)
B8	Intake air temp. sensor	D15	IAC valve (stepper motor coil 1)
B9	Camshaft position sensor (POS)	D16	EGR valve (stepper motor coil 4, if equipped)
B10	Camshaft position sensor (REF)		
B11	Power source for TP sensor	D17	EGR valve (stepper motor coil 3, if equipped)
B12	Throttle position sensor	D18	Fuel injector No.4
B13/B14	—	D19	Fuel injector No.3
		D20/D21	Power source
B15	Right (No.2) bank heated oxygen sensor (if equipped)	D22	Ignition coil assembly for No.6
B16-B19	—	D23	Ignition coil assembly for No.5
B20/B21	Ground	D24	IAC valve (stepper motor coil 4)
B22	Engine coolant temp. sensor	D25	IAC valve (stepper motor coil 3)
B23	Mass air flow sensor	D26	Engine start signal
B24	—	D27	Fuel injector No.6
B25	Ground	D28	Fuel injector No.5

Function	Input / Output		CMP sensor	MAF sensor	TP sensor	ECT sensor	IAT sensor	HO2S (if equipped)	CO adjust resistor (w/o HO2S)	VSS	Blower fan switch	Rear defogger switch	PSP switch	DLC	Diagnosis switch terminal	Test switch terminal	Ignition switch	Starter switch	ABS control module (if equipped)	A/C amplifier (if equipped)	TR switch (AT VEHICLE)	Light switch	Brake switch (AT VEHICLE)
	Input	Output																					
Main relay control	Main relay																○						
Fuel pump control	Fuel pump relay		○														○	○					
Injection control	Injectors		○	○	○	○		○									○	○					
Idle air control	IAC valve		○	○	○	○	○			○	○	○	○	○					○	○	○	○	○
Ignition control	Ignition coil with igniter		○	○		○	○							○		○		○					
MIL control	MIL		○												○								
EVAP purge control	EVAP canister purge valve		○	○	○	○				○													
EGR control	EGR valve (if equipped)		○	○	○	○	○			○				○									
HO2S heater control	HO2S (if equipped)		○	○																			
A/C control	A/C amplifier (if equipped)		○		○	○												○		○			
A/C condensor fan control	A/C condensor fan relay (if equipped)					○														○			

## DIAGNOSIS

The engine and emission control system in this vehicle are controlled by ECM(PCM). ECM (PCM) has an On-Board Diagnostic system which detects a malfunction in this system.

When diagnosing troubles, be sure to have full understanding of the outline of "On-Board Diagnostic System" and each item in "Precaution in Diagnosing Trouble" and execute diagnosis according to "Engine Diagnostic Flow Table" in section 6.

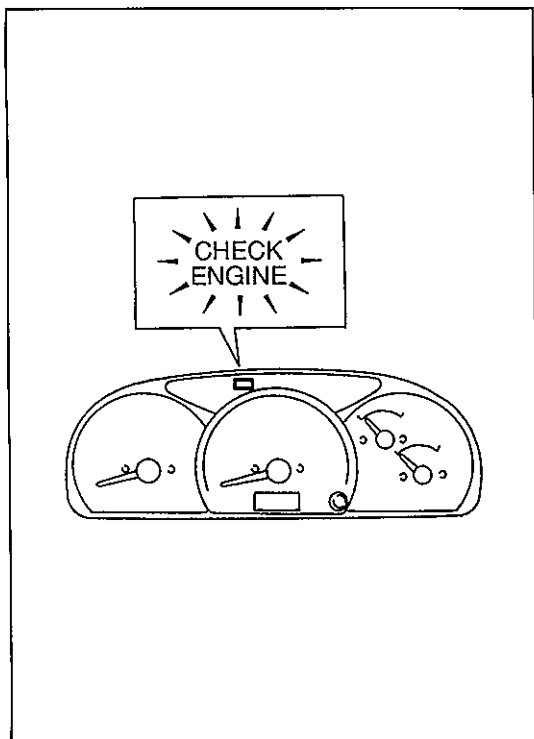

### ON-BOARD DIAGNOSTIC SYSTEM

ECM (PCM) performs on-board diagnosis (self-diagnosis) on the system and operates "CHECK ENGINE" lamp (malfunction indicator lamp) as follows.

- Malfunction indicator lamp ("CHECK ENGINE" light) lights when the ignition switch is turned ON (but the engine at stop) regardless of the condition of Engine and emission control system. This is only to check the malfunction indicator lamp ("CHECK ENGINE" light) bulb and its circuit.
- If the areas monitored by ECM (PCM) is free from any trouble after the engine start (while engine is running), malfunction indicator lamp ("CHECK ENGINE" light) turns OFF.
- When ECM (PCM) detects a trouble which has occurred in the areas, it makes malfunction indicator lamp ("CHECK ENGINE" light) turn ON while the engine is running to warn the driver of such occurrence of trouble and at the same time it stores the exact trouble area in ECM (PCM) back-up memory.

### PRECAUTIONS IN DIAGNOSING TROUBLES

- Before identifying diagnostic trouble code, don't disconnect couplers from ECM (PCM), battery cable from battery, ECM (PCM) ground wire harness from engine. Such disconnection will erase memorized trouble in ECM (PCM) memory.
- Be sure to read "Precautions for Electrical Circuit Service" in Section 0A before inspection and observe what is written there.
- ECM (PCM) replacement  
When substituting a known-good ECM (PCM), check for following conditions. Neglecting this check may cause damage to known-good ECM (PCM).
  - Resistance value of all relays, actuators is as specified respectively.
  - TP sensor is in good condition and none of power circuits of TP sensor is shorted to ground.

**MALFUNCTION INDICATOR LAMP (“CHECK ENGINE”  
LAMP) CHECK**

Refer to section 6E1.

**DIAGNOSTIC TROUBLE CODE (DTC) CHECK**


Refer to section 6E1.

**DIAGNOSTIC TROUBLE CODE (DTC) CLEARANCE**


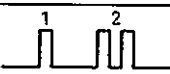
Refer to section 6E1.

## DIAGNOSTIC TROUBLE CODE TABLE (M/T AND A/T)

EXAMPLE: When throttle position sensor is defective (Code No. 21)

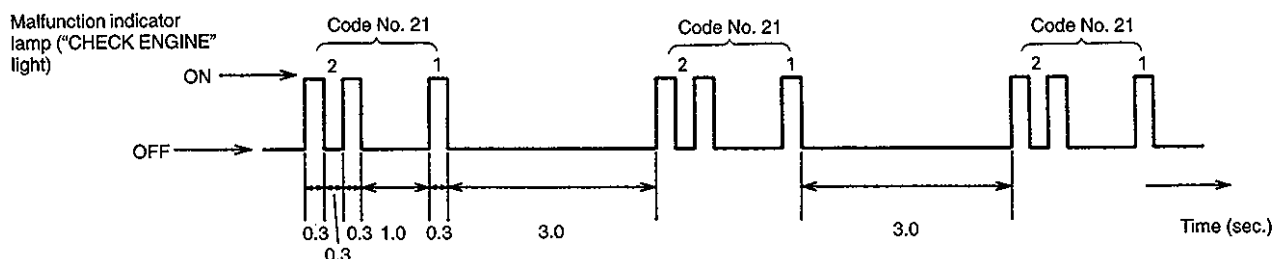

DIAGNOSTIC TROUBLE CODE NO.	MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LIGHT) FLASHING PATTERN	DIAGNOSTIC ITEM	DIAGNOSIS
13		Left (No.1) bank heated oxygen sensor (if equipped)	Diagnose trouble according to "DIAGNOSTIC FLOW TABLE" corresponding to each code No.
26		Right (No.2) bank heated oxygen sensor (if equipped)	
14		Engine coolant temperature sensor	
15			
21		Throttle position sensor	
22			
23		Intake air temperature sensor	
25			
24		Vehicle speed sensor	
33		Mass air flow sensor	
34			
*37		ABS	
42		Camshaft position sensor	
46		IAC valve	
51		EGR valve (stepper motor, if equipped)	


DIAGNOSTIC TROUBLE CODE NO.	MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LIGHT) FLASHING PATTERN	DIAGNOSTIC ITEM	DIAGNOSIS
52		Fuel system (vehicle with heated oxygen sensor only)	Diagnose trouble according to "DIAGNOSTIC FLOW TABLE" corresponding to each code No.
12		Normal	This code appears when none of the other codes (above codes) are identified.

**NOTE:**


For DTC 37 with \*, malfunction indicator lamp does not light even if it is detected.

## A-1 MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) CIRCUIT CHECK

(MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) DOESN'T LIGHT AT IGNITION SWITCH ON)

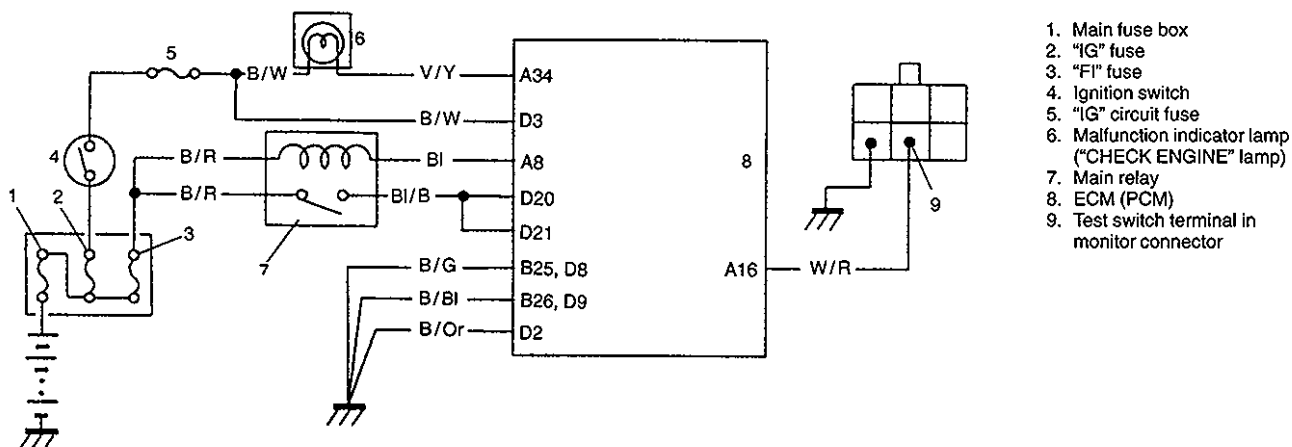

TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)

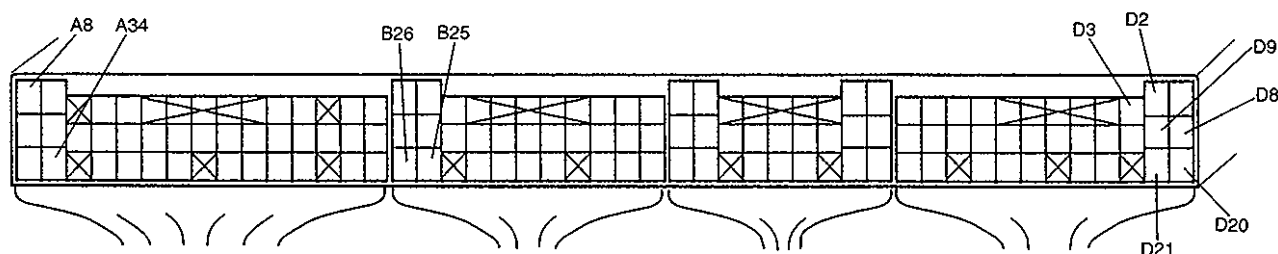



### NOTE:

If malfunction indicator lamp ("CHECK ENGINE" lamp) lights for 2 to 3 seconds and remains OFF after that at ignition switch ON, check test switch circuit for short to ground.

STEP	ACTION	YES	NO
1	MIL ("CHECK ENGINE" lamp) Power Supply Check 1) Turn ignition switch ON. Do other indicator/warning lights in combination meter come ON?	Go to Step 2.	"IG" fuse blown, main fuse blown, ignition switch malfunction, "B/W" circuit between "IG" fuse and combination meter or poor coupler connection at combination meter.
2	ECM (PCM) Power and Ground Circuit Check Does engine start?	Go to Step 3.	Go to TABLE A-4 ECM (PCM) POWER AND GROUND CIRCUIT CHECK. If engine is not cranked, go to DIAGNOSIS in SECTION 6G or 6G1.
3	MIL ("CHECK ENGINE" lamp) Circuit Check 1) Turn ignition switch OFF and disconnect connectors from ECM (PCM). 2) Check for proper connection to ECM (PCM) at terminal A34. 3) If OK, then using service wire, ground terminal A34 in connector disconnected. Does MIL ("CHECK ENGINE" lamp) turn on at ignition switch ON?	Substitute a known-good ECM (PCM) and recheck.	Bulb burned out or "V/Y" wire circuit open.

**A-2 MALFUNCTION INDICATOR LAMP (“CHECK” ENGINE LAMP) CIRCUIT CHECK**

(MALFUNCTION INDICATOR LAMP (“CHECK ENGINE” LAMP) FLASHES AT IGNITION SWITCH ON)

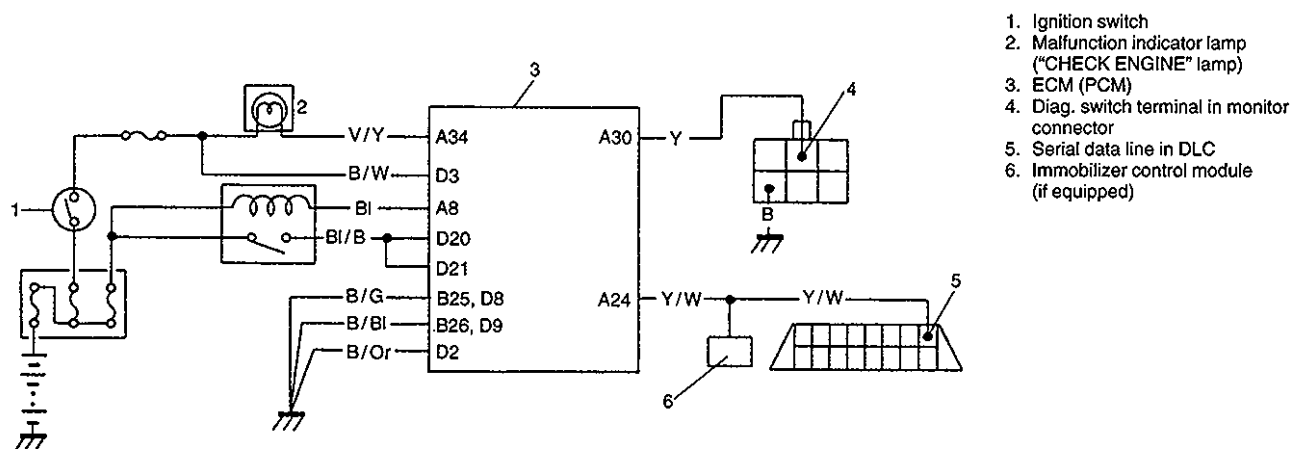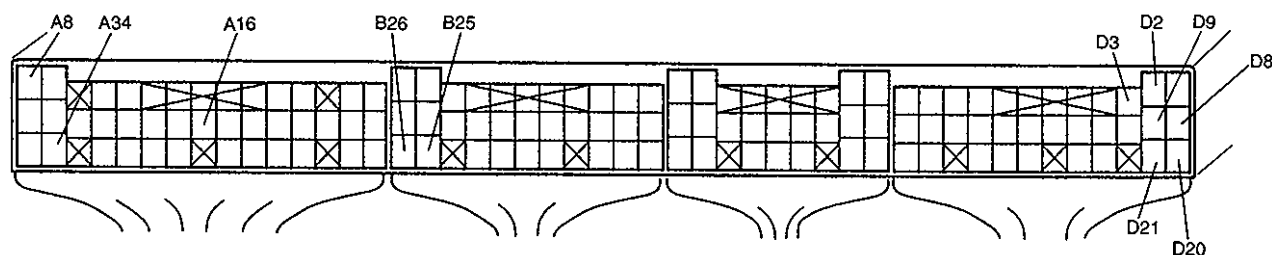
**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	<b>“CHECK ENGINE” lamp Flashing Pattern Check</b> 1) Turn ignition switch ON. Does lamp flashing pattern indicate diagnostic trouble code?	Go to Step 2.	Go to “Diagnosis” in section 8G.
2	<b>Diag. Switch Circuit Check</b> Is diag. switch terminal connected to ground via service wire?	System is in good condition.	“Y” circuit shorted to ground. If circuit is OK substitute a known-good ECM(PCM) and recheck.




**A-3 MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) CIRCUIT CHECK**

(MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LAMP) DOES NOT FLASH OR JUST REMAINS ON EVEN WITH GROUNDING DIAGNOSIS SWITCH TERMINAL.)

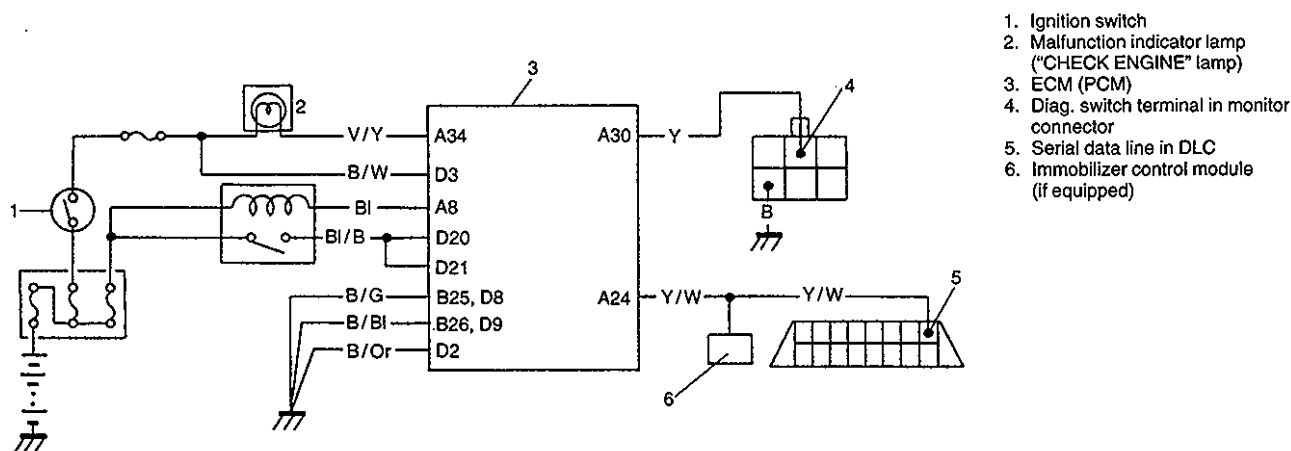


**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

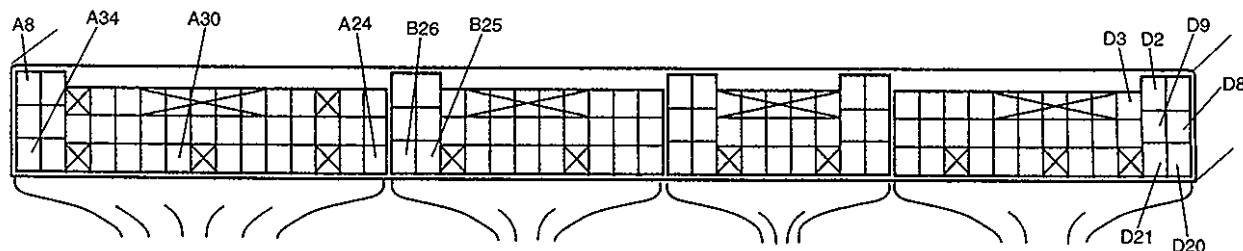


STEP	ACTION	YES	NO
1	MIL ("CHECK ENGINE" lamp) Circuit Check 1) Turn ignition switch OFF and disconnect connectors from ECM (PCM). Does MIL ("CHECK ENGINE" lamp) turn ON at ignition switch ON?	"V/Y" circuit shorted to ground.	Go to Step 2.
2	ECM (PCM) Connection Check 1) Turn ignition switch OFF. Is connector (A30 connection) connected to ECM (PCM) properly?	Go to Step 3.	Poor connector connection.
3	Diag. switch Terminal Circuit Check 1) Connect connectors to ECM (PCM). 2) Using service wire, ground A30 terminal with connectors connected to ECM (PCM). 3) Turn ignition switch ON. Does MIL ("CHECK ENGINE" lamp) flash?	"Y" or "B" circuit open.	Substitute a known-good ECM (PCM) and recheck.

**A-4 ECM (PCM) POWER AND GROUND CIRCUIT CHECK**

(MALFUNCTION INDICATOR LAMP ("CHECK ENGINE" LIGHT) DOESN'T LIGHT AT IGNITION SWITCH ON AND ENGINE DOESN'T START THOUGH IT IS CRANKED UP.)

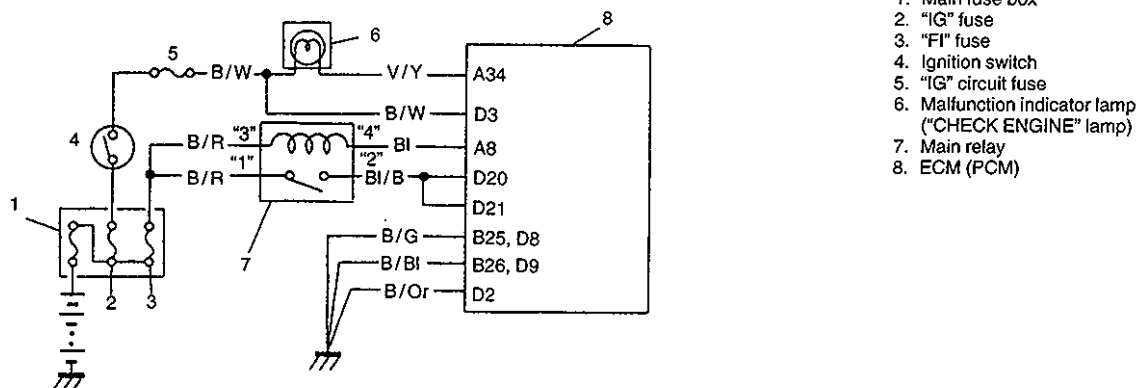


**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

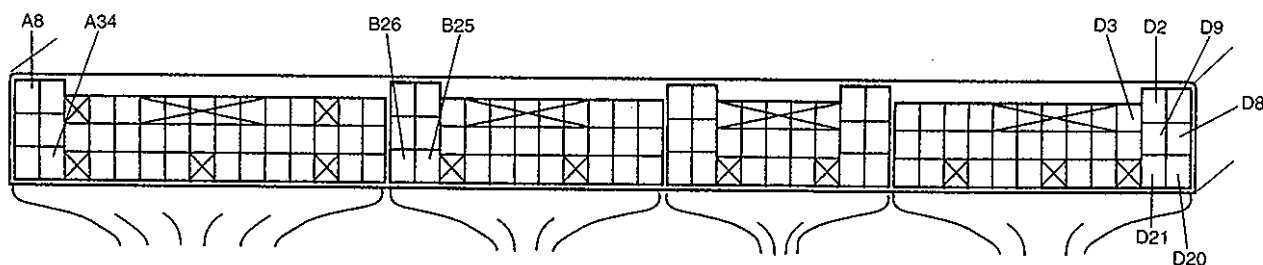

STEP	ACTION	YES	NO
1	<b>Main Relay Opening Sound Check</b> Is operating sound of main relay heard at ignition switch ON?	Go to Step 5.	Go to Step 2.
2	<b>Fuse Check</b> Is main "FI" fuse in good condition?	Go to Step 3.	Check for short in circuits connected to this fuse.
3	<b>Main Relay Check</b> 1) Turn OFF ignition switch and remove main relay. 2) Check for proper connection to main relay at terminal 3 and 4. 3) If OK, check main relay for resistance and operation referring to "Main Relay Inspection" in section 6E1. Is check result satisfactory?	Go to Step 4.	Replace main relay.
4	<b>ECM (PCM) Power Circuit Check</b> 1) Turn OFF ignition switch, disconnect connectors from ECM (PCM) and install main relay. 2) Check for proper connection to ECM (PCM) at terminals D3, A8, D20 and D21. 3) If OK, then measure voltage between terminal D3 and ground, A8 and ground with ignition switch ON. Is each voltage 10 – 14 V?	Go to Step 5.	"B/W", "BI" or "B/R" circuit open.

STEP	ACTION	YES	NO
5	ECM Power Circuit Check 1) Using service wire, ground terminal A8 and measure voltage between terminal D20 and ground at ignition switch ON. Is it 10 – 14 V?	Check ground circuits “B/G”, “B/Or” and “B/Bl” for open. If OK, then substitute a known-good ECM (PCM) and recheck.	Go to Step 6.
6	Is operating sound of main relay heard in Step 1?	Go to Step 7.	“B/R” or “Bl” wire open.
7	Main Relay Check 1) Check main relay according to procedure in Step 3. Is main relay in good condition?	“B/R” or “Bl” wire open.	Replace main relay.


# **CODE NO.13 LEFT (NO.1) BANK HEATED OXYGEN SENSOR CIRCUIT AND/OR CODE NO.26 RIGHT (NO.2) BANK HEATED OXYGEN SENSOR CIRCUIT (IF EQUIPPED)**

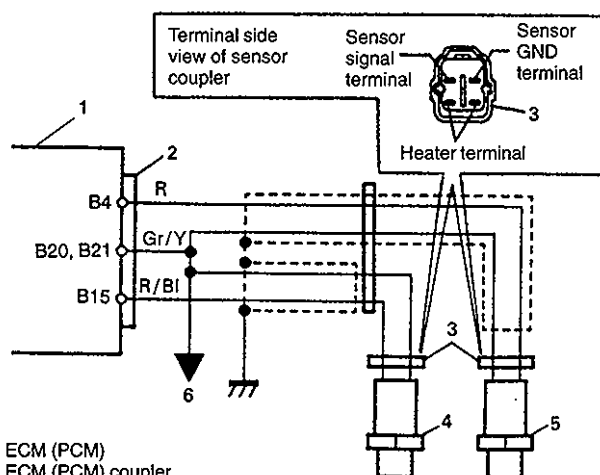

## **NOTE:**

- Before diagnosing trouble according to flow table given below, check to make sure that following system and parts other than Electronic Fuel Injection system are in good condition.
  - Air cleaner (clogged)
  - Vacuum leaks (air inhaling)
  - Spark plugs (contamination, gap)
  - Ignition coil
  - Ignition timing
  - Engine compression
  - Any other system and parts which might affect A/F mixture or combustion.
- If code No.13 (26) and another code No. are indicated together, the later has priority. Therefore, check and correct what is represented by that code No. first and then proceed to the following check.
- Be sure to use a voltmeter with high impedance ( $M\Omega/V$  minimum) or digital type voltmeter for accurate measurement.

## **TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

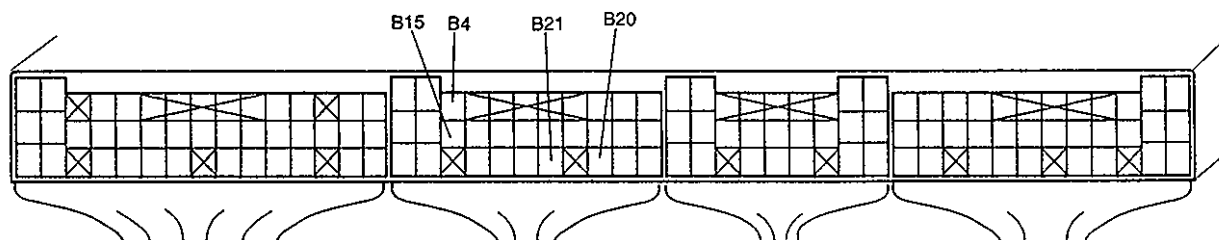

STEP	ACTION	YES	NO
1	1) Remove ECM (PCM) cover. 2) Warm up engine to normal operating temperature. 3) Connect voltmeter between B4 (LEFT (No.1) BANK) or B15 (RIGHT (No.2) BANK) terminal of ECM (PCM) coupler and body ground. 4) Maintain engine speed at 2000 rpm and after 60 seconds, check voltmeter. Does the voltage deflect between above and below 0.5 V repeatedly?	Heated oxygen sensor and its circuit (closed loop system, A/F ratio feed back system) are in good condition. Intermittent trouble or faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in SECTION 0A.	Go to Step 2.
2	Does the voltage remain unchanged at 0.5 V above?	"R" (LEFT (No.1) BANK) or "R/BI" (RIGHT (No.2) BANK) circuit shorted to power circuit or rich A/F mixture. If circuit is OK, check MAF sensor, ECT sensor, fuel pressure, injectors and their circuit. If all above are OK, check ECM (PCM) and its circuit, referring to p.6E2-55.	Go to Step 3.

STEP	ACTION	YES	NO
3	1) Maintain engine speed at 2000 rpm for 60 seconds. 2) Check voltmeter while repeating racing engine. Does it indicate 0.5 V or more even once?	Poor B4 (Left (No.1) BANK) or B15 (RIGHT (No.2) BANK) connection or lean A/F mixture. If connection is OK, check MAF sensor, ECT sensor, fuel pressure, injectors and their circuit. If all above are OK, substitute a known-good ECM (PCM) and recheck.	"R" (LEFT (No.1) BANK) or "R/BI" (RIGHT (No.2) BANK) circuit open/short, "Gr/Y" circuit open or oxygen sensor malfunction. If wire and connection are OK, replace oxygen sensor and recheck.



**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.14 ECT SENSOR CIRCUIT**

(LOW TEMPERATURE INDICATED, SIGNAL VOLTAGE HIGH)

- 1. ECM (PCM)
- 2. ECT sensor and gauge
- 2-1. ECT sensor
- 2-2. ECT gauge
- 3. To combination meter

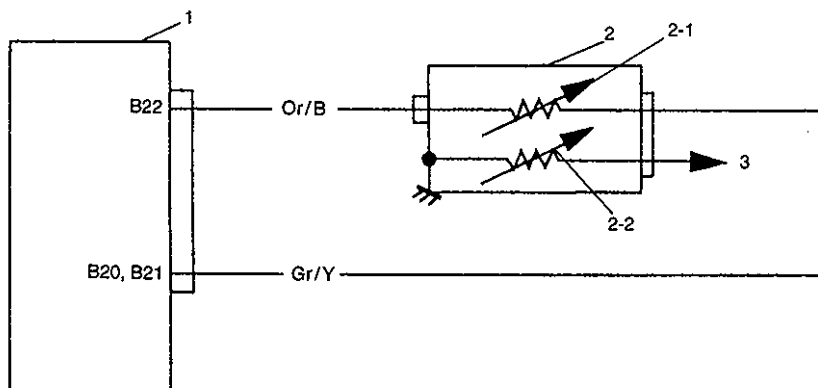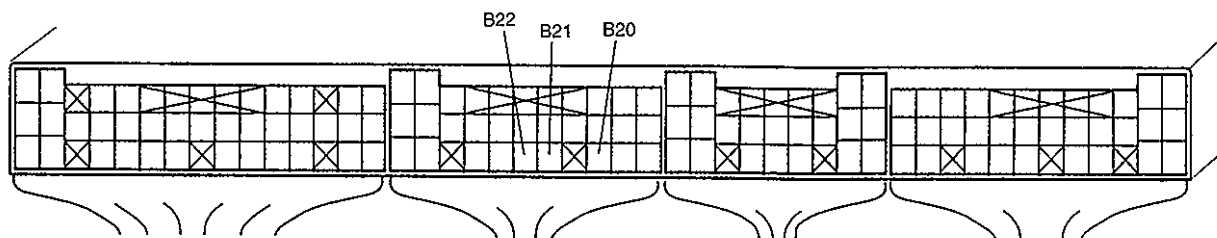**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect ECT sensor coupler. 2) With ignition switch ON, check voltage at "Or/B" wire terminal of ECT sensor coupler. Is it about 4 – 5 V?	Go to Step 2.	"Or/B" wire open, poor B22 connection or "Or/B" wire shorted to power circuit. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
2	1) Using service wire, connect "Or/B" and "Bl" wire terminal of ECT sensor coupler. 2) Check voltage at "Or/B" wire terminal of ECT sensor coupler with ignition switch ON. Is it below 0.15 V?	Go to Step 3.	"Gr/Y" wire open or poor B20 and B21 connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
3	1) Check ECT sensor referring to "ECT Sensor Inspection" in section 6E1. Is check result as specified?	Poor ECT sensor-to-coupler connection. If connections are OK, intermittent trouble or faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in Section 0A.	Faulty ECT sensor.

Fig. for STEP 1

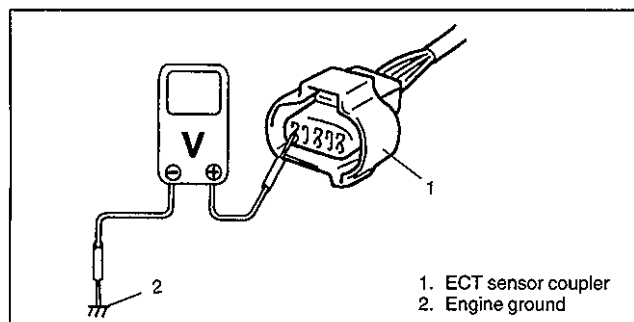
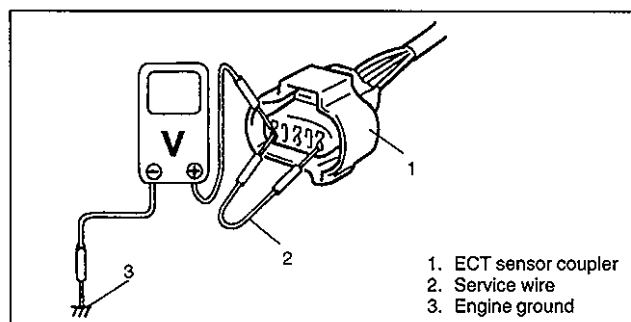
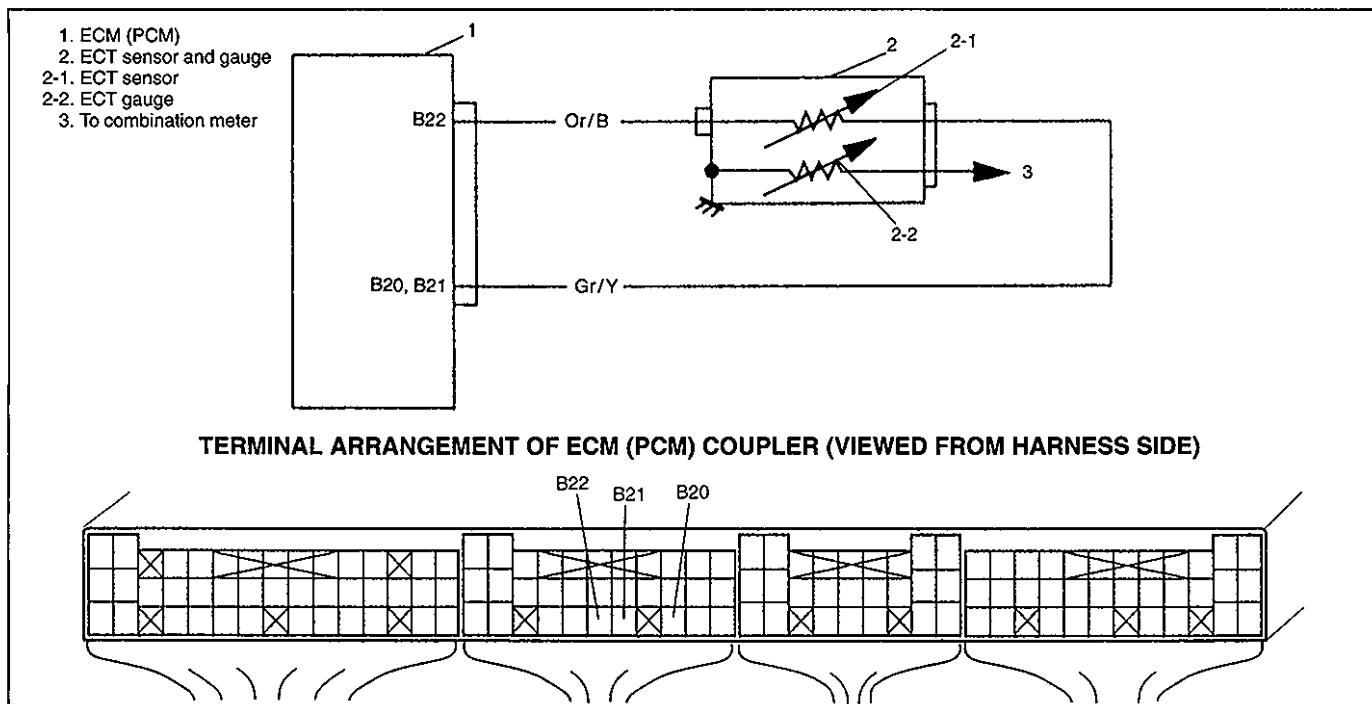


Fig. for STEP 2


**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.15 ECT SENSOR CIRCUIT**(HIGH TEMPERATURE INDICATED, SIGNAL  
CIRCUIT VOLTAGE LOW)

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect ECT sensor coupler. 2) With ignition switch ON, check voltage between "Or/B" wire terminal of ECT sensor coupler and ground. Is it about 4 – 5 V?	Go to Step 2.	"Or/B" wire shorted to "Gr/Y" wire or ground circuit. If wire is OK, substitute a known-good ECM (PCM) and recheck.
2	1) Check ECT sensor, referring to "ECT Sensor Inspection" in section 6E1. Is check result as specified?	Poor ECT sensor coupler connection. If connection is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	Faulty ECT sensor.

Fig. for STEP 1


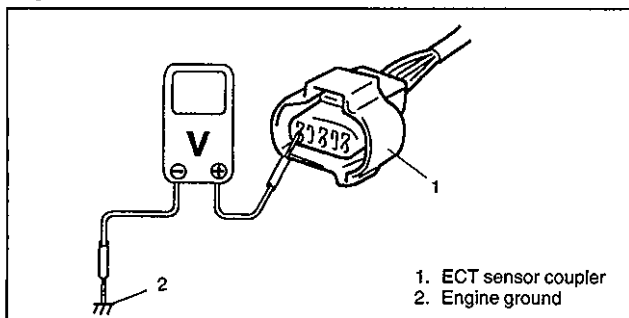


**NOTE:**  
Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.



**CODE NO.21 TP SENSOR CIRCUIT**

(SIGNAL VOLTAGE HIGH)

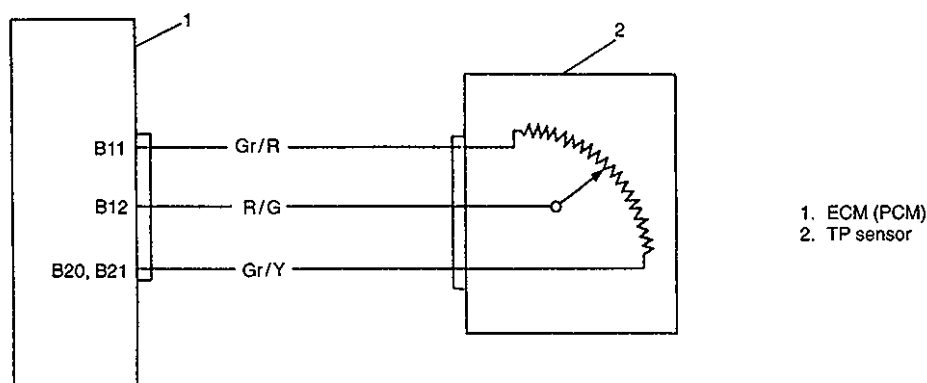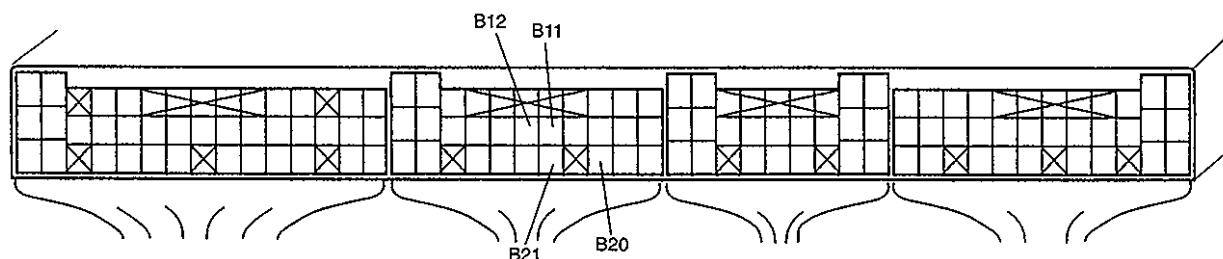**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**



STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect TP sensor coupler. 2) Check voltage between "Gr/R" wire terminal and "Gr/Y" wire terminal of disconnected TP sensor coupler with ignition switch ON. Is it about 4 – 5 V?	Go to Step 2.	"Gr/Y" wire open, poor B20 and B21 connections, or "Gr/R" wire shorted to power circuit.
2	1) Check TP sensor referring to "TP Sensor Inspection" in this section. Is check result as specified?	"R/G" wire shorted to power circuit. If wire is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	Faulty TP sensor.

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.22 TP SENSOR CIRCUIT**



(SIGNAL VOLTAGE LOW)

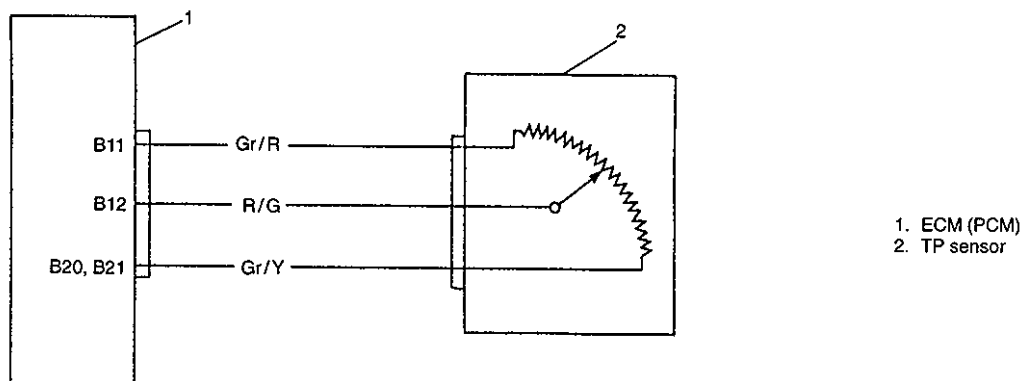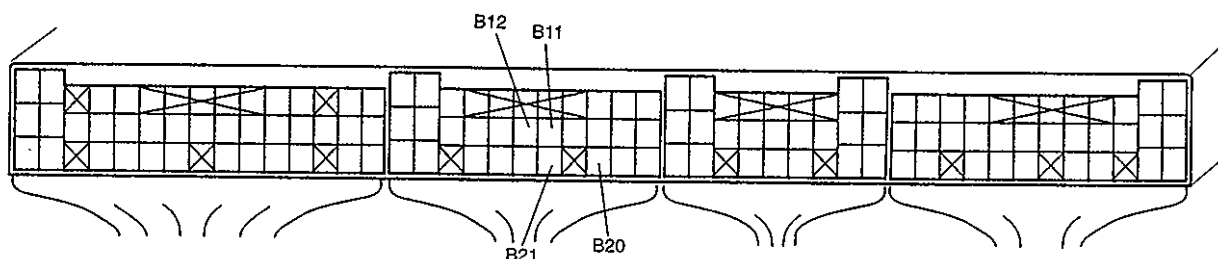**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect TP sensor coupler. 2) Check voltage between "Gr/R" wire terminal and "Gr/Y" wire terminal of disconnected TP sensor coupler with ignition switch ON. Is it about 4 – 5 V?	Go to Step 2.	"Gr/R" wire open, "Gr/R" wire shorted to ground circuit or poor B11 connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
2	1) Check TP sensor referring to "TP Sensor Inspection" in this section. Is check result as specified?	"R/G" wire open/shorted to ground or poor B12 connection. If wire and connection are OK, intermittent trouble or faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in section 0A.	Faulty TP sensor.

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

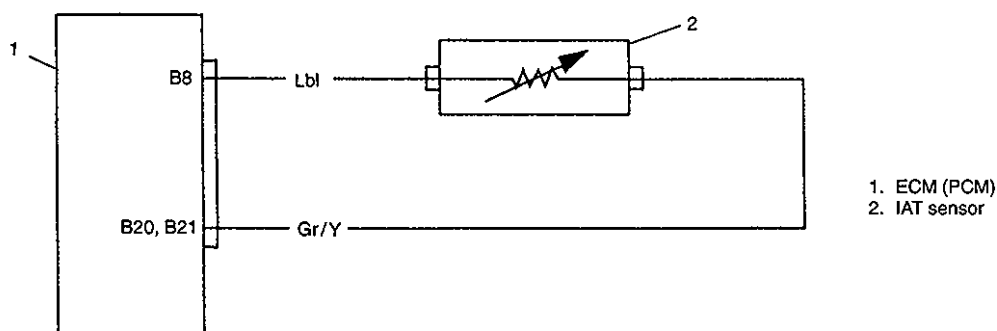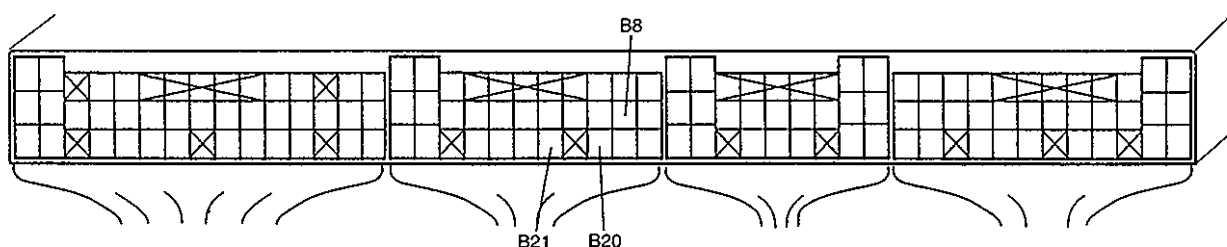**CODE NO.23 IAT SENSOR CIRCUIT**(LOW TEMPERATURE INDICATED, SIGNAL  
VOLTAGE HIGH)**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect IAT sensor coupler. 2) With ignition switch ON, check voltage between "Lb1" wire terminal of IAT sensor coupler and ground. Is it about 4 – 5 V?	Go to Step 2.	"Lb1" wire open, poor B8 connection or "Lb1" wire shorted to power circuit. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
2	1) Using service wire, connect two terminals in IAT sensor coupler. 2) Check voltage between "Lb1" wire terminal of IAT sensor coupler and ground with ignition switch ON. Is it below 0.15 V?	Go to Step 3.	"Gr/Y" wire open or poor B20 and B21 connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.
3	1) Check IAT sensor referring to "IAT Sensor Inspection" in section 6E1. Is check result as specified?	Poor IAT sensor coupler connection. If connection is OK, intermittent trouble of faulty ECM (PCM). Recheck, referring to "Intermittent and Poor Connection" in section 0A.	Faulty IAT sensor.

Fig. for STEP 1


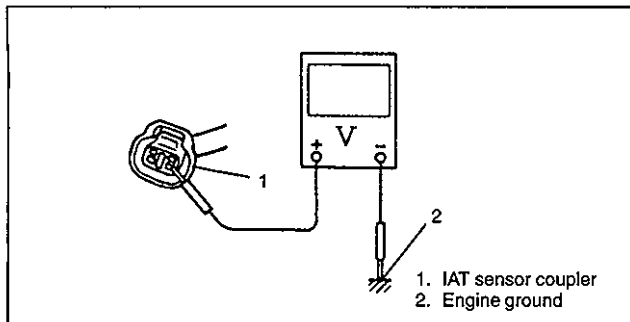


Fig. for STEP 2

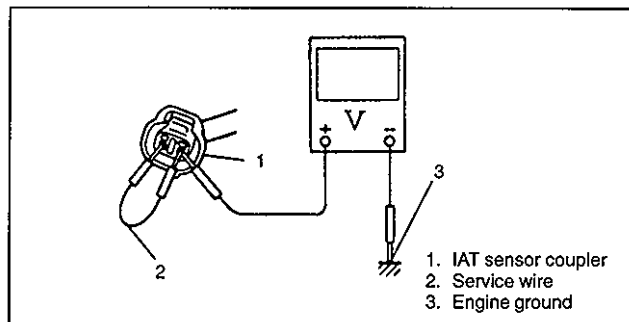


**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.


**CODE NO.25 IAT SENSOR CIRCUIT**

(HIGH TEMPERATURE INDICATED, SIGNAL VOLTAGE LOW)

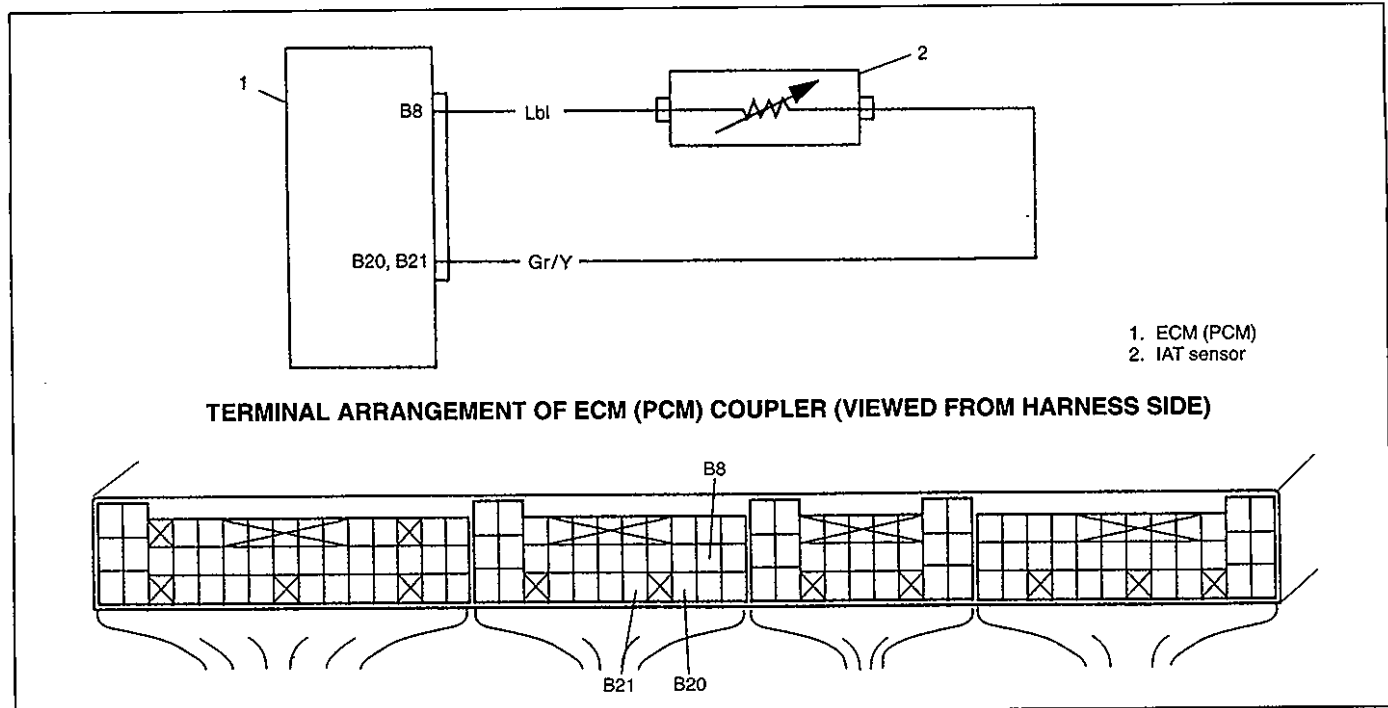

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect IAT sensor coupler. 2) With ignition switch ON, is voltage between "LbI" wire terminal of IAT sensor coupler and ground 4 V or more?	Go to Step 2.	"LbI" wire shorted to "Gr/Y" wire or ground circuit. If wire is OK, substitute a known-good ECM (PCM) and recheck.
2	1) Check IAT sensor referring to "IAT Sensor Inspection" in section 6E1. Is check result as specified?	Poor IAT sensor coupler connection. If connection is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in section 0A.	Faulty IAT sensor.



Fig. for STEP 1

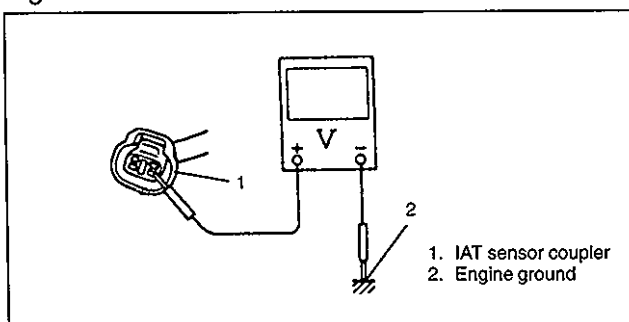**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.24 VSS CIRCUIT**

(VEHICLE SPEED SIGNAL NOT INPUTTED ALTHOUGH FUEL IS KEPT CUT FOR LONGER THAN 5 SECONDS)

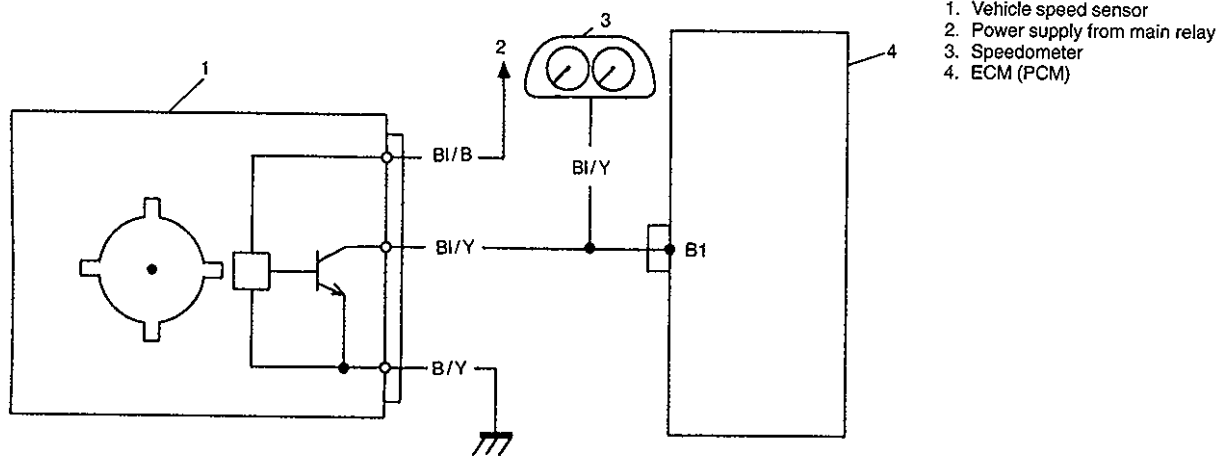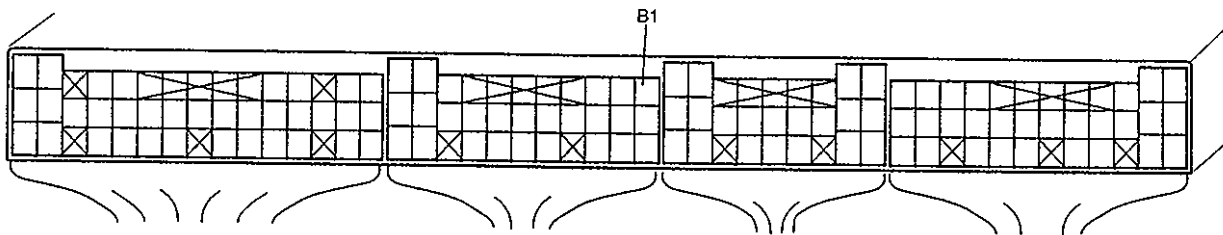**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	Does speedometer indicate vehicle speed?	Faulty "BI/Y" wire or poor B1 connection. If wire and connection are OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in SECTION 0A.	Go to Step 2.
2	1) With ignition switch OFF, disconnect VSS coupler. 2) With ignition switch ON, check voltage between "BI/B" wire terminal and "B/Y" wire terminal of VSS coupler. Is voltage about 10 – 14 V?	Go to Step 3.	"BI/B" or "B/Y" wire open or short.

STEP	ACTION	YES	NO
3	1) Under the same condition in Step 2, check voltage between "BI/Y" and "B/Y" terminals of VSS coupler. Is voltage 4 V or more?	Go to Step 4.	Go to Step 5.
4	1) Remove VSS referring to "Transfer" section. 2) Check VSS drive and driven gears for damage and excessive wear. Is it in good condition?	Poor VSS connection or VSS malfunction. If connection is OK, substitute a known-good VSS and recheck.	Malfunction of VSS drive or driven gear.
5	1) Remove combination meter from instrument panel referring to section 8C. 2) Turn ignition switch ON, check voltage between "BI/Y" and "B/Y" terminals of VSS coupler. Is voltage about 4 – 5 V?	Speedometer malfunction.	"BI/Y" wire open/short or faulty ECM (PCM). If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.

Fig. for Step 2

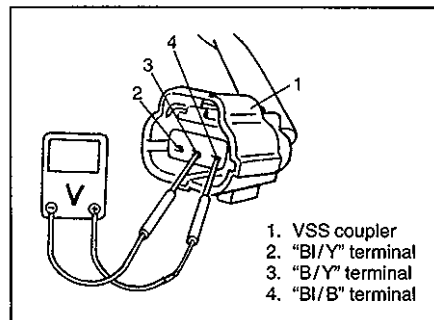
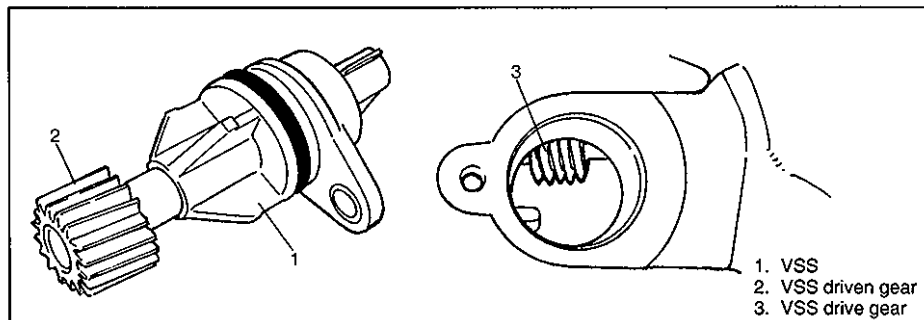
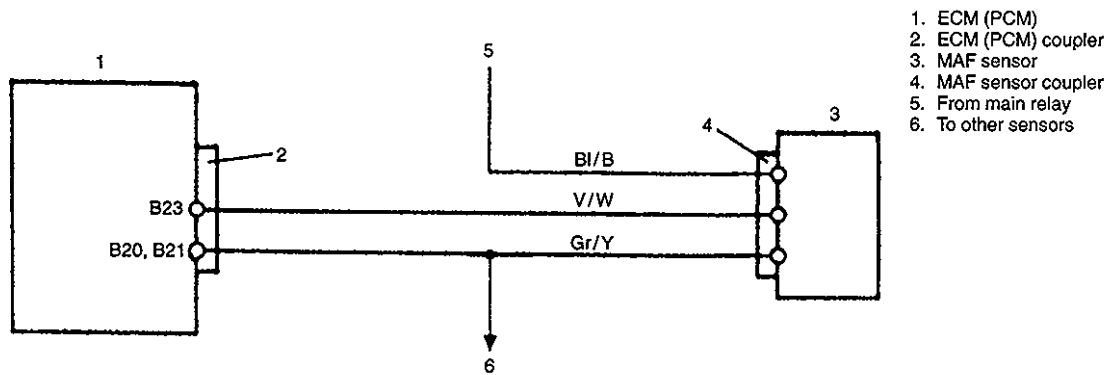
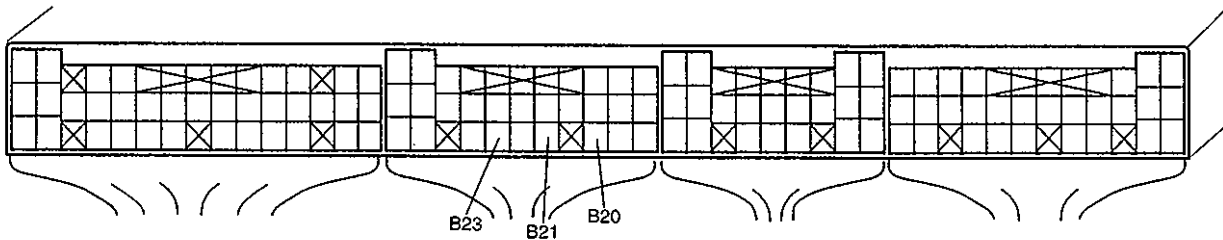


Fig. for Step 4

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure referring to p.6E2-43 to confirm that the trouble has been corrected.


**CODE NO.33 MAF (MASS AIR FLOW)  
SENSOR CIRCUIT**(LARGE SIGNAL CURRENT FLOW, SIGNAL  
VOLTAGE HIGH)**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	1) Remove ECM (PCM) cover. 2) With ignition switch ON, check voltage between B23 terminal and B20 terminal. Is voltage 0.5 – 1.0 V?	Go to Step 2.	"Gr/Y" wire open, poor B20 and B21 connection, "V/W" wire shorted to power circuit or faulty MAF sensor. If wires are OK, substitute a known-good MAF sensor and recheck.
2	1) Start engine and check voltage between B23 terminal and B20 terminal. Does voltage rise within 5 V range when engine speed is increased?	Intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in SECTION 0A.	Substitute a known-good MAF sensor and recheck.

**NOTE:**


Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

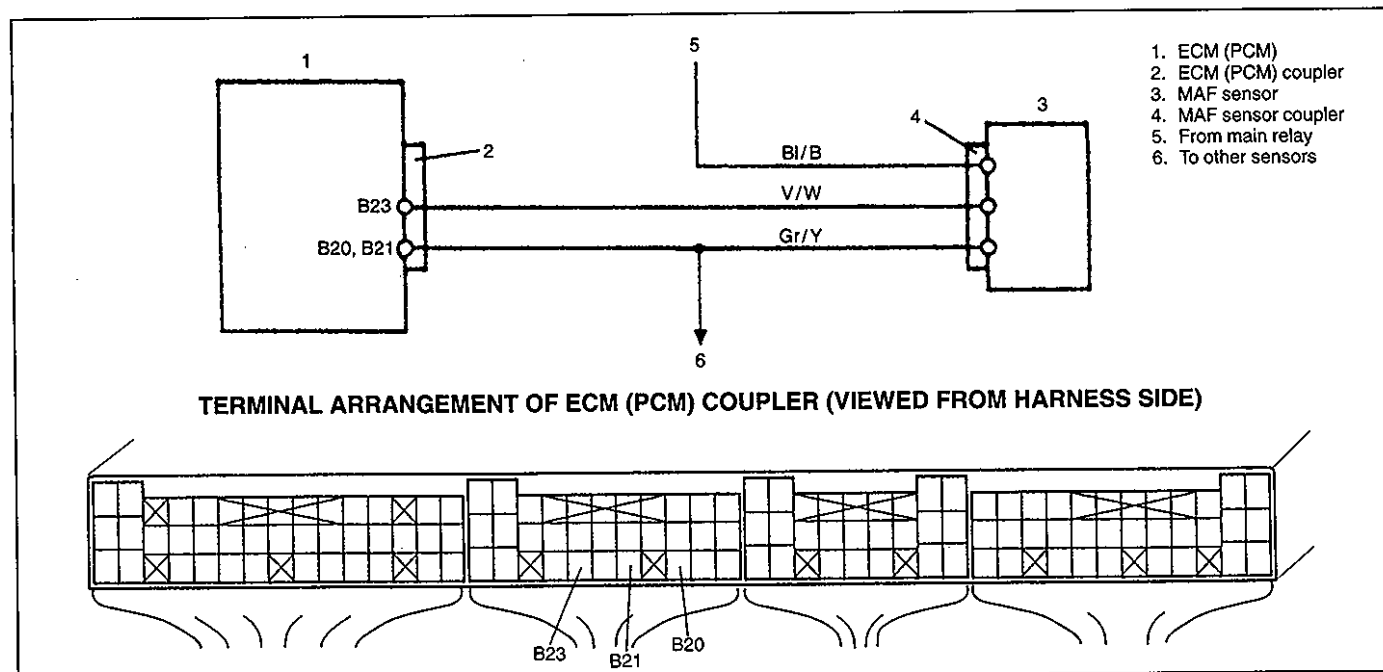

**CODE NO.34 MAF(MASS AIR FLOW)  
SENSOR CIRCUIT**(SMALL SIGNAL CURRENT FLOW, SIGNAL  
VOLTAGE LOW)

STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect MAF sensor coupler. 2) With ignition switch ON, check voltage between "BI/B" terminal of MAF sensor coupler and ground. Is voltage 10 – 14 V?	Go to Step 2.	"BI/B" wire open or short.
2	1) With ignition switch OFF, connect MAF sensor coupler. 2) Remove ECM (PCM) cover. 3) With ignition switch ON, check voltage between B23 terminal and B20 terminal of ECM (PCM) coupler. Is voltage 0.5 – 1.0 V?	Poor B23 connection. If connection is OK, intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in SECTION 0A.	"V/W" wire open/short, poor MAF sensor coupler connection or faulty MAF sensor. If wire and connection are OK, substitute a known-good MAF sensor and recheck.



Fig. for STEP 1

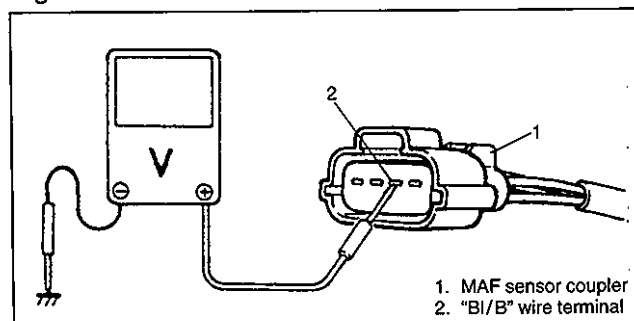**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.37 ABS CIRCUIT**(ABS OPERATION SIGNAL DETECTED AS SOON AS  
ENGINE STARTED)

1. ABS control module
2. ECM (PCM)

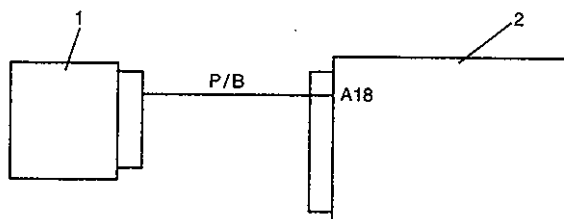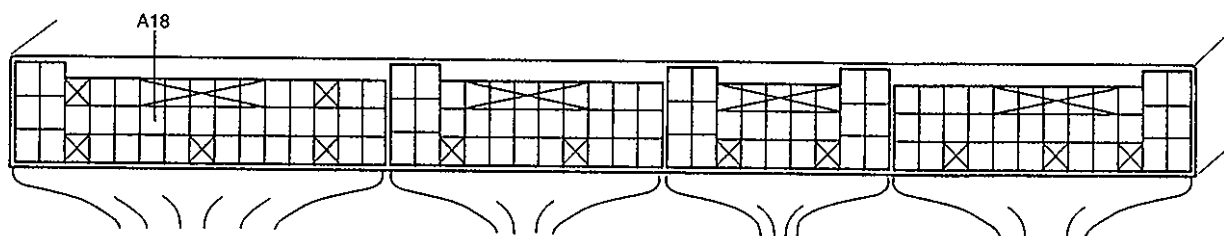**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**


STEP	ACTION	YES	NO
1	1) Disconnect ECM (PCM) connector. 2) Check continuity between A18 terminal and body ground. Is there continuity?	"P/B" wire shorted to ground. If wire is OK, substitute a known-good ABS control module and recheck.	Go to Step 2.
2	1) Connect ECM (PCM) connector. 2) With ignition switch ON, check voltage between A18 terminal and ground. Is voltage 10 – 14 V?	Intermittent trouble. If OK, substitute a known-good ECM (PCM) and recheck.	Substitute a known-good ECM (PCM) and recheck.

**NOTE:**


Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.42 CMP SENSOR (CAMSHAFT POSITION SENSOR) CIRCUIT**


(REF SIGNAL NOT INPUTTED FOR 3 SECONDS AT ENGINE CRANKING AND/OR POS SIGNAL NOT AT ENGINE RUNNING)

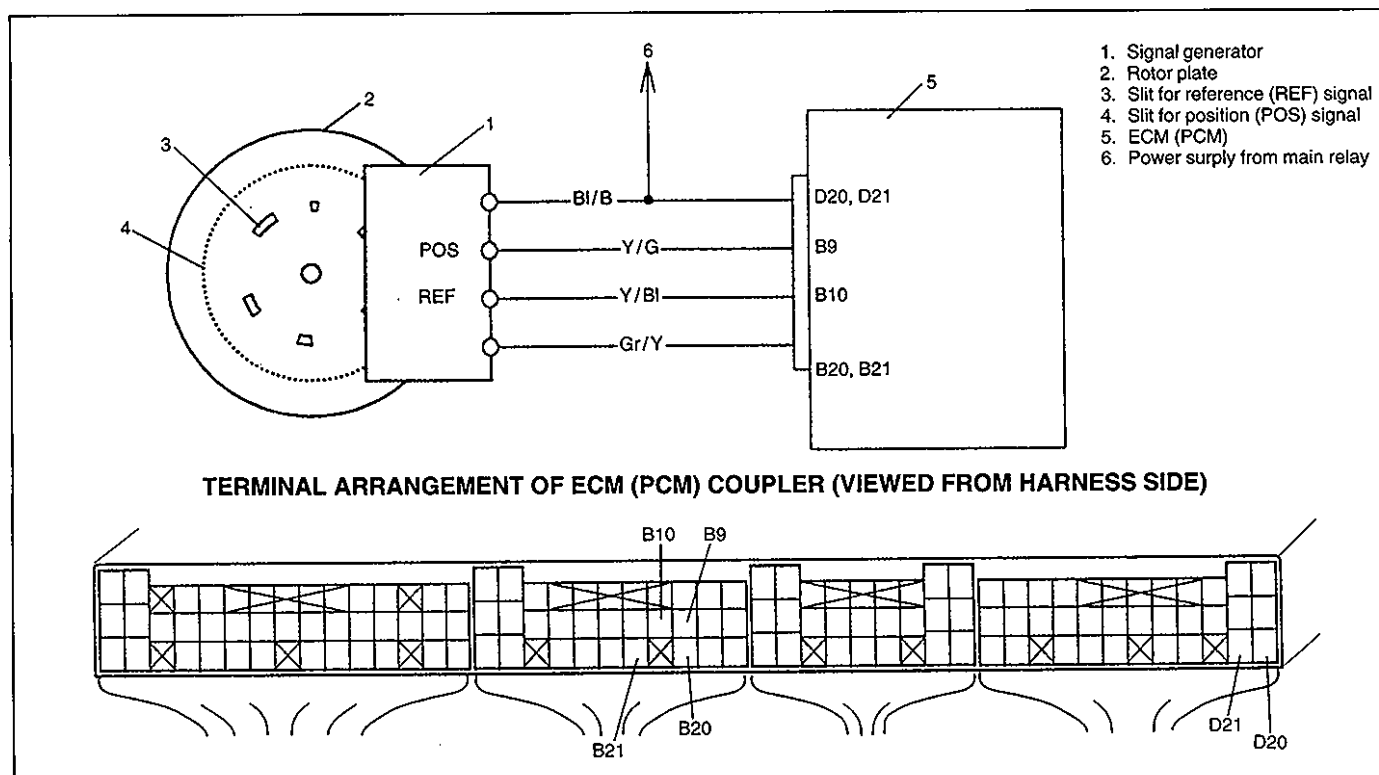


STEP	ACTION	YES	NO
1	1) With ignition switch OFF, disconnect CMP sensor connector. 2) With ignition switch ON, check voltage between "BI/B" wire terminal and "Gr/Y" wire terminal of disconnected CMP sensor connector. Is voltage 10 – 14 V?	Go to Step 2.	"BI/B" wire or "Gr/Y" wire open.
2	1) Connect CMP sensor connector. Disconnect connectors from ignition coil assemblies and fuel injectors. 2) With ignition switch ON and crankshaft turned slowly, check voltage between B10 terminal of ECM (PCM) connector and B20 terminal. Does voltmeter indicator deflect between 0 – 1 V and 4 – 6 V 6 times while crankshaft turned two revolutions?	Go to Step 3.	"Y/BI" wire open or shorted to ground circuit. If wire is in good condition, substitute a known-good ECM (PCM) and recheck.
3	1) With ignition switch ON and crankshaft turned slowly, check voltage between B9 terminal of ECM (PCM) connector and B20 terminal. Does voltmeter indicator deflect between 0 – 1 V and 4 – 6 V?	Poor B20 and B21 terminal connection or B9 and B10 terminal connection of ECM (PCM) connector. If connections are OK, substitute a known-good ECM (PCM) and recheck.	"Y/G" wire open or shorted to ground circuit. If wire is in good condition, substitute a known-good ECM (PCM) and recheck.

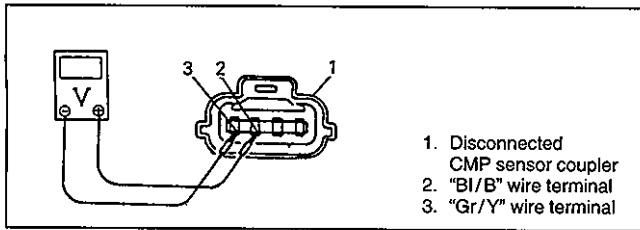

REFERENCE:  
Voltage wave form between B10 terminal and GND

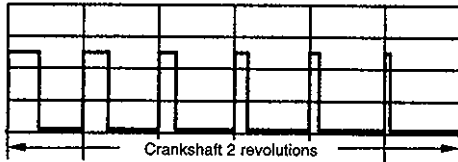


REFERENCE:  
Voltage wave form between B9 terminal and GND  
Crankshaft 2 revolutions

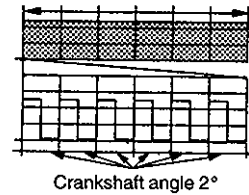

**NOTE:**  
Upon completion of inspection and repair work, perform DTC Confirmation Procedure referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.46 IAC SYSTEM**


(IAC VALVE CIRCUIT OPEN, SHORT OR AIR LEAKAGE)

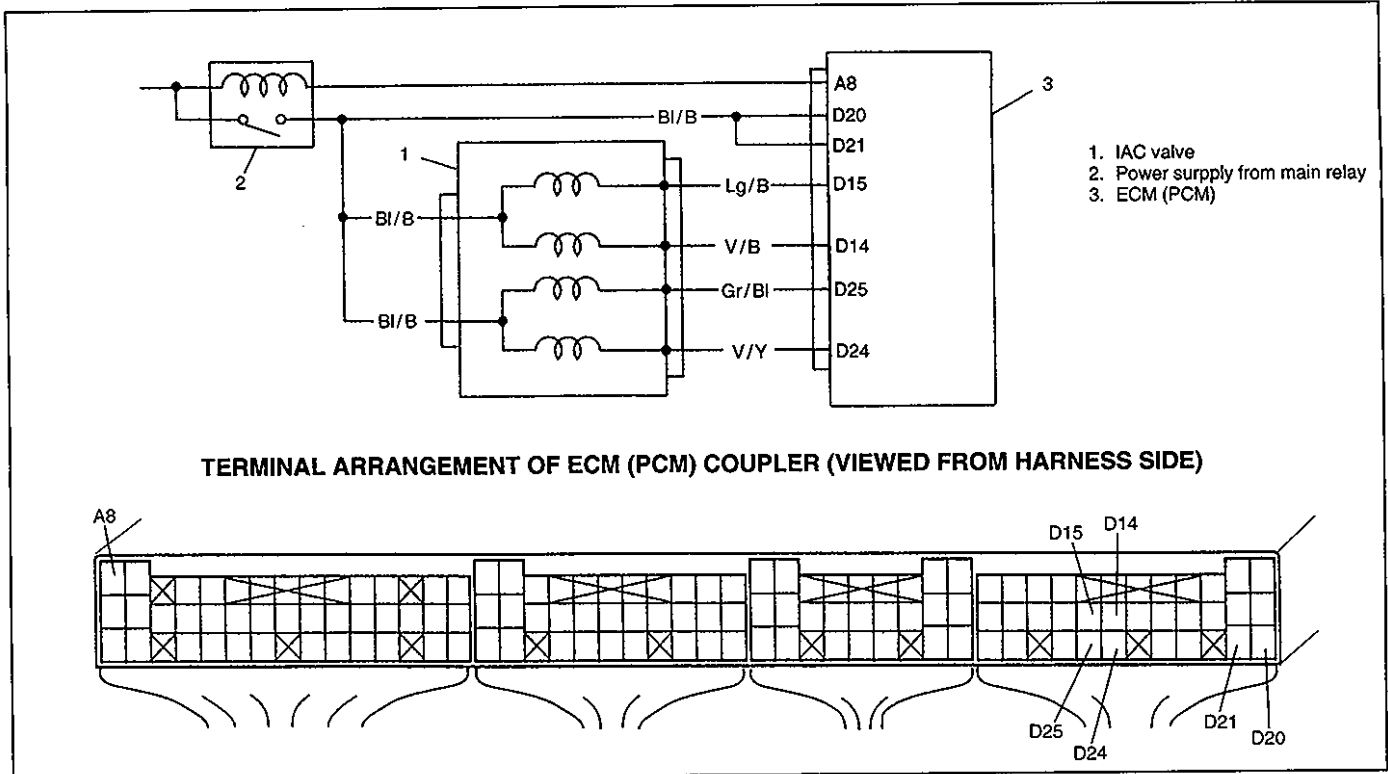

STEP	ACTION	YES	NO
1	1) Clear DTC referring to section 6E1. 2) Check IAC valve referring to "IAC valve Inspection" in this section. Is IAC valve in good condition?	Go to Step 2.	Go to Step 4.
2	Check engine idle speed and IAC duty referring to "Idle Speed/IAC Duty Inspection" in this section. Is idle speed/IAC duty within specification?	Go to Step 3.	Check Idle Air Control System referring to Table B-4 "Idle Air Control System Check" in this section.
3	Check MAF sensor referring to "Mass Air Flow Sensor Inspection" in this section. Is MAF sensor in good condition?	Intermittent trouble. If OK, substitute a known-good ECM (PCM) and recheck.	Faulty MAF sensor.

STEP	ACTION	YES	NO
4	1) With ignition switch OFF, disconnect IAC connector. 2) With ignition switch ON, check voltage between "b", "e" terminals and ground. (Refer to Fig for Step 4) Is voltage 10 – 14 V?	Go to Step 5.	"Bl/B" wire open or shorted to ground circuit.
5	1) With ignition switch OFF, connect connector to IAC valve. 2) Remove ECM (PCM) cover and disconnect ECM (PCM) connectors. 3) Check resistance between "D14" and "D15", "D24" and "D25". Is resistance 40 – 48 $\Omega$ ?	Go to Step 6.	"V/B", "Lg/B", "V/Y" or "Gr/Bl" wire open or short. If wire is OK, substitute a known-good IAC valve and recheck.
6	1) Check resistance between "D14" and ground "D15" and ground "D24" and ground "D25" and ground Is each resistance infinity?	Go to Step 7.	"V/B", "Lg/B", "V/Y" or "Gr/Bl" wire shorted to ground circuit. If wire is OK, substitute a known-good IAC valve and recheck.
7	1) Connect ECM (PCM) connectors. 2) Disconnect IAC valve connector. 3) With ignition switch ON, check voltage between D14 – ground D15 – ground D24 – ground D25 – ground Is voltage 10 – 14 V?	"V/B", "Lg/B", "V/Y", or "Gr/Bl" wire shorted to power circuit.	Substitute a known-good ECM (PCM) and recheck.



Fig. for STEP 4

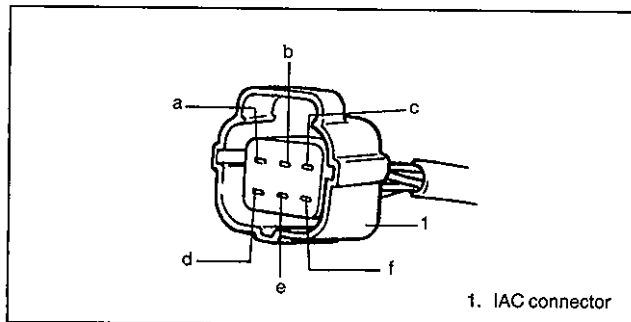**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.51 EGR VALVE (IF EQUIPPED)**

(STEPPER MOTOR OR ITS CIRCUIT OPEN OR SHORT)

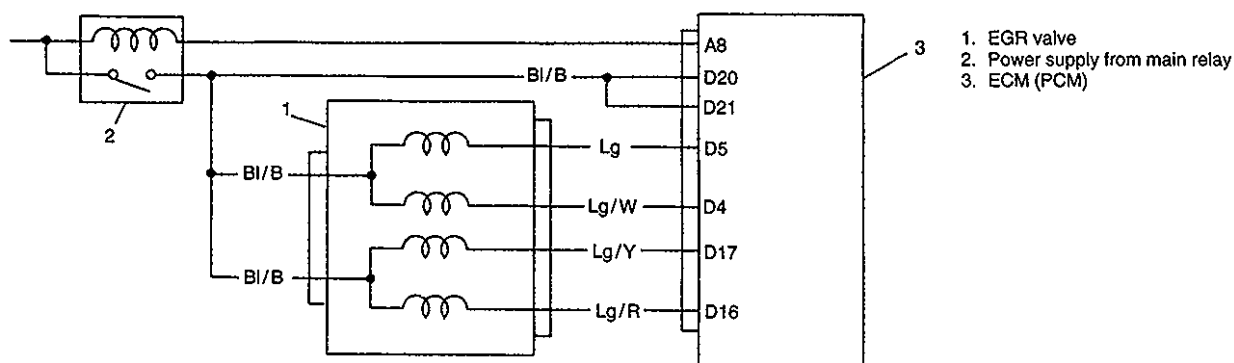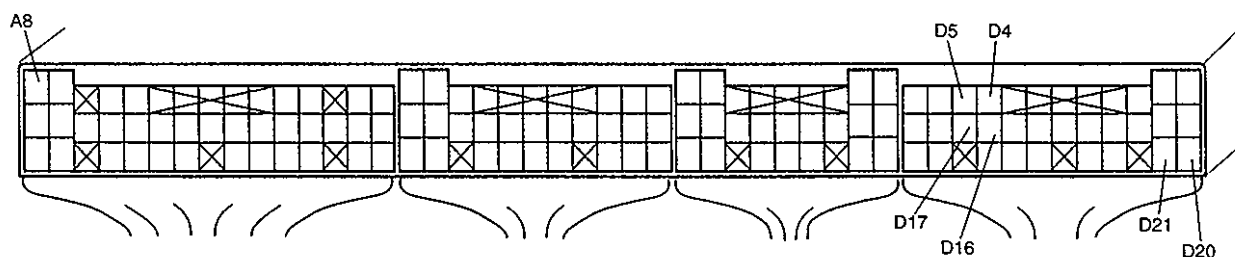**TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	<b>EGR Valve Check</b> 1) With ignition switch OFF, disconnect connector from EGR valve. 2) Check for proper connection to EGR valve at each terminal. 3) If OK, check EGR valve for resistance referring to "EGR Valve Inspection" in section 6E1. Is check result as specified?	Go to Step 2.	EGR valve malfunction.
2	<b>Wire Harness Check</b> 1) Connect connector to EGR valve. 2) Remove ECM (PCM) cover and disconnect connector from ECM (PCM). 3) Check for proper connection to ECM (PCM) at system related terminals. 4) If OK, check for resistance between following terminals of ECM (PCM) connector disconnected. <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;">             D5 - D20              D4 - D20              D17 - D20              D16 - D20           </div> <div style="margin-left: 10px;"> <math>\left. \begin{array}{l} \text{---} \\ \text{---} \\ \text{---} \\ \text{---} \end{array} \right\} \begin{array}{l} 20 - 24 \Omega \text{ at} \\ 20^{\circ}\text{C}, 68^{\circ}\text{F} \end{array}</math> </div> </div> <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;">             D5 - ground              D4 - ground              D17 - ground              D16 - ground           </div> <div style="margin-left: 10px;"> <math>\left. \begin{array}{l} \text{---} \\ \text{---} \\ \text{---} \\ \text{---} \end{array} \right\} \text{Infinity } (\infty)</math> </div> </div> Is check result as specified?	Intermittent trouble or faulty ECM (PCM). Recheck referring to "Intermittent and Poor Connection" in SECTION 0A.	"BI/B", "Lg", "Lg/W" "Lg/Y" or "Lg/R" circuit open or shorted to ground.

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.

**CODE NO.52 FUEL SYSTEM  
(IF EQUIPPED WITH  
OXYGEN SENSOR)**(FUEL LEAKAGE FROM FUEL INJECTOR, OXYGEN SENSOR  
OUTPUT VOLTAGE DOES NOT REDUCE WHEN FUEL IS CUT)

STEP	ACTION	YES	NO
1	1) Check all injectors referring to "Fuel Injector Inspection" in this section. Are all injectors in good condition?	Go to Step 2.	Faulty injector(s).
2	1) Check heated oxygen sensors referring to "Heated Oxygen Sensor Inspection" in this section. Are heated oxygen sensors in good condition?	Intermittent trouble. If OK, substitute a known- good ECM (PCM) and recheck.	Refer to "Heated Oxygen Sensor Inspection".

**NOTE:**

Upon completion of inspection and repair work, perform DTC Confirmation Procedure, referring to p.6E2-43 to confirm that the trouble has been corrected.



## DIAGNOSTIC TROUBLE CODE (DTC) CONFIRMATION PROCEDURE

### WARNING:

- When performing a road test, select a place where there is not traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

- 1) Clear DTC stored in ECM (PCM) memory referring to "DTC Clearance" in section 6E1.
- 2) Perform DTC confirmation test under the following conditions.
- 3) Check DTC referring "DTC Check" in section 6E1.

### Test Condition for Code No.14, 15, 21, 22, 23, 25, 33, 34, 51

Turn ignition switch ON for 5 seconds or more.


### Test Condition for Code No.37

Running engine for 60 seconds.

### Test Condition for Code No.42


Crank engine for 3 sec.

### Driving Test Condition for Code No.24, 46, 52

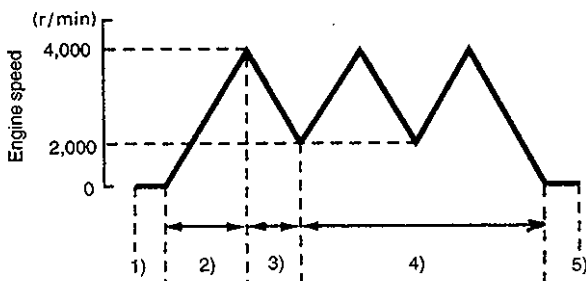

- 1) Start engine and warm up engine to normal operating temperature.
- 2) Increase engine speed to 4,000 r/min. in 3rd gear in case of M/T model and in "2" range in case of A/T model.
- 3) Release accelerator pedal and with engine brake applied, keep vehicle coasting for 7 to 10 seconds till engine speed reaches 2,000 r/min.
- 4) Repeat above steps 2) and 3) 3 times or more.
- 5) Stop vehicle and then engine.



### Driving Test Condition for Code No.13, 26

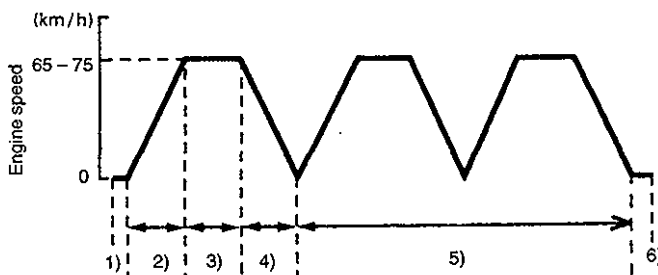


- 1) Start engine and warm up engine to normal operating temperature.
- 2) Increase vehicle speed to 40 to 45 mile/h (65 - 75 km/h).
- 3) Keep driving at above vehicle speed for 70 to 80 seconds (M/T: 5th, A/T: O/D).
- 4) Repeat above steps 2) to 3) 2 times or more.
- 5) Stop vehicle and then engine.

### NOTE:


If the above driving test can not be performed, check oxygen sensor for voltage referring to Step 1 of Code No.13, No.26 Diag. Flow Table and confirm that heated oxygen sensor and its circuit (Closed Loop System) are in good condition.

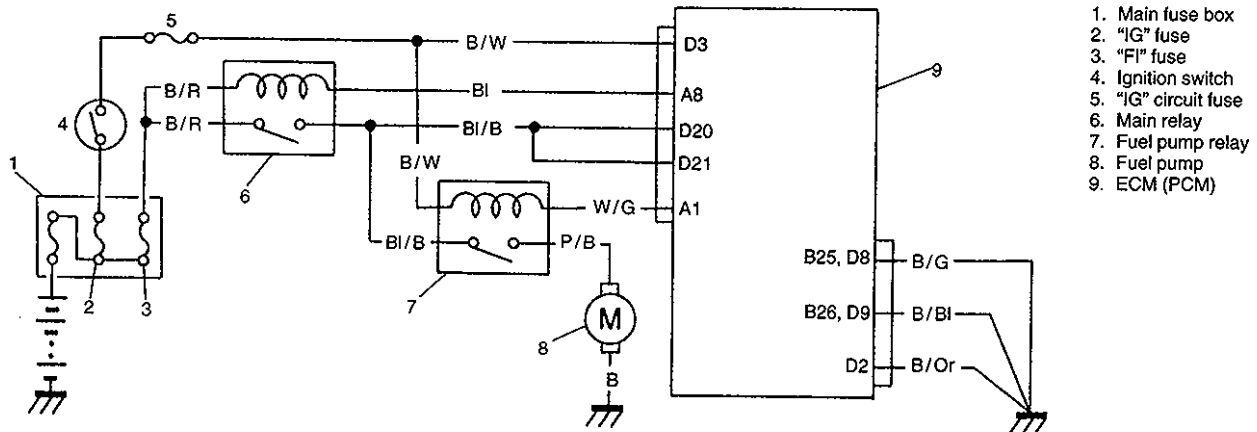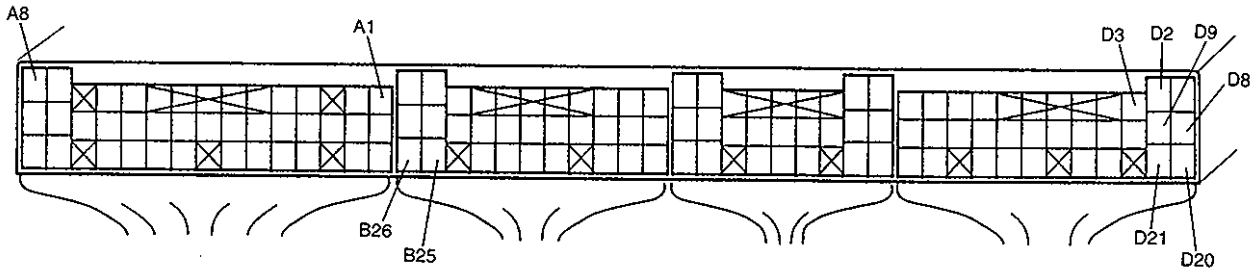**B-1 FUEL PUMP CIRCUIT CHECK****TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	Is fuel pump heard to operate 3 seconds after ignition switch ON?	Fuel pump and its circuit are in good condition.	Go to Step 2.
2	1) With ignition switch OFF, remove fuel pump relay from relay box. 2) Using service wire, connect two terminals of relay connector as shown in figure. Is fuel pump heard to operate with ignition switch ON?	Go to Step 3.	"P/B" or "B" wire open, poor fuel pump relay-to-coupler connection or faulty fuel pump.
3	1) Check fuel pump relay, referring to section 6E1. Is it in good condition?	Poor fuel pump relay-to-coupler connection, "W/G" wire open or poor A1 connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.	Faulty fuel pump relay.

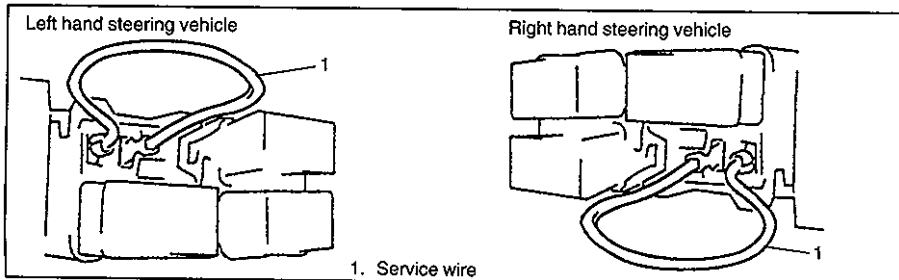**Fig. for Step 2**


## B-2 FUEL INJECTOR CIRCUIT CHECK

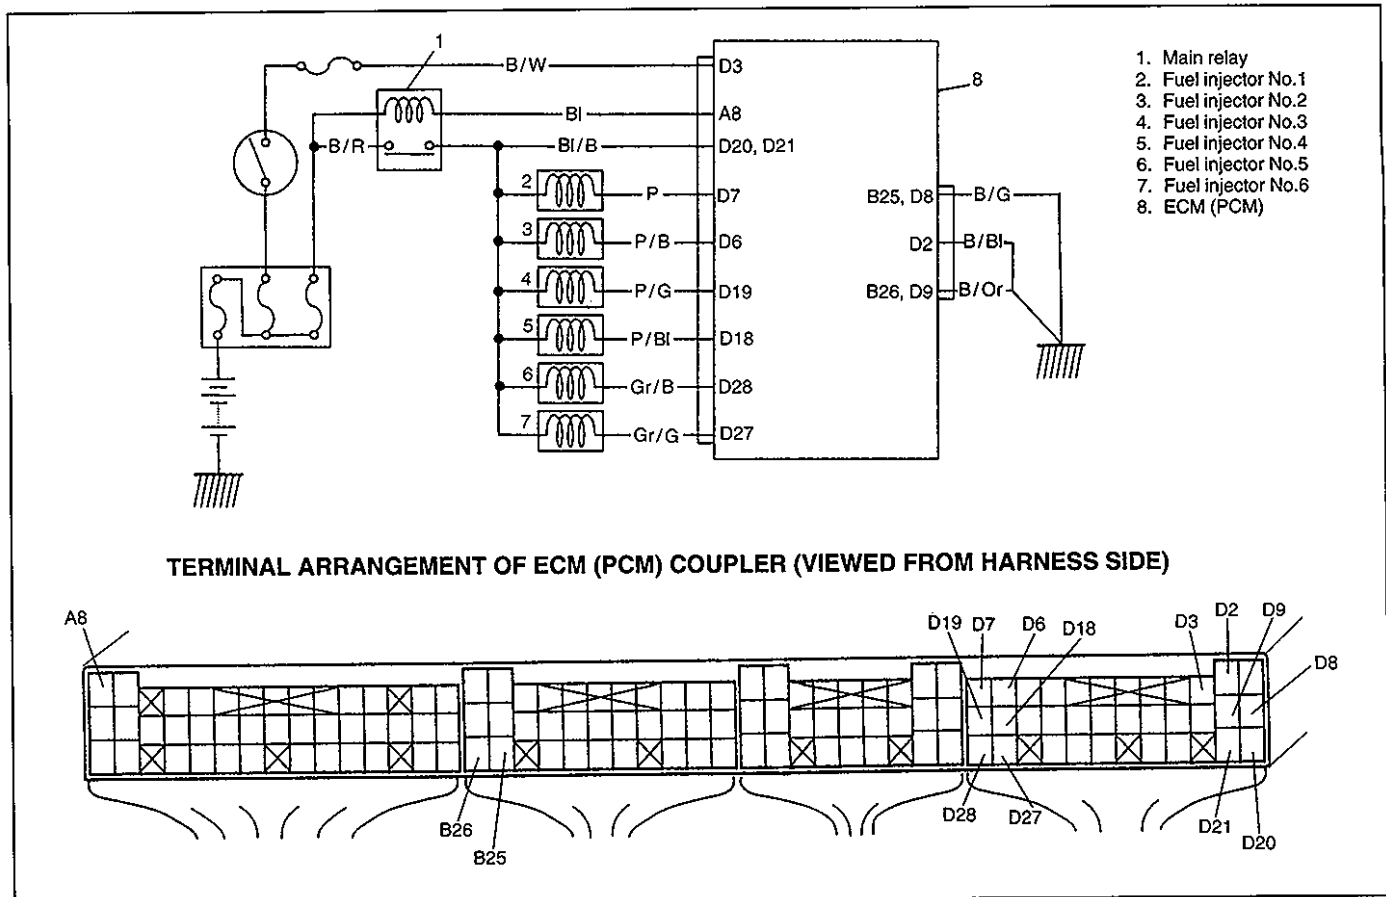

## INSPECTION

STEP	ACTION	YES	NO
1	Check Injector for Operating Sound. Using sound scope, check each injector for operating sound at engine cranking. Do all 6 injectors make operating sound?	Go to Step 2.	Go to Step 3.
2	Wire Harness Check 1) Remove ECM (PCM) cover and disconnect connectors from ECM (PCM). 2) Check for resistance between following terminals of ECM (PCM) connector disconnected. <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> D6 - D20  D7 - D20  D18 - D20  D19 - D20  D27 - D20  D28 - D20 </div> <div> 10 - 14 <math>\Omega</math> at  20°C, 68°F </div> </div> Is check result as specified?	Fuel injector circuit is in good condition.	Faulty wire harness.
3	Does none of 6 injectors make operating sound at Step 1?	Go to Step 4.	Check coupler connection and wire harness of injector not making operating sound and injector itself (Refer to "Fuel Injector Inspection" in this section).
4	Check power circuit of injectors for open and short. Is it normal?	Check all 6 injectors for resistance respectively. If resistance is OK, substitute a known-good ECM (PCM) and recheck.	Power circuit open or short.

## B-3 FUEL PRESSURE CHECK

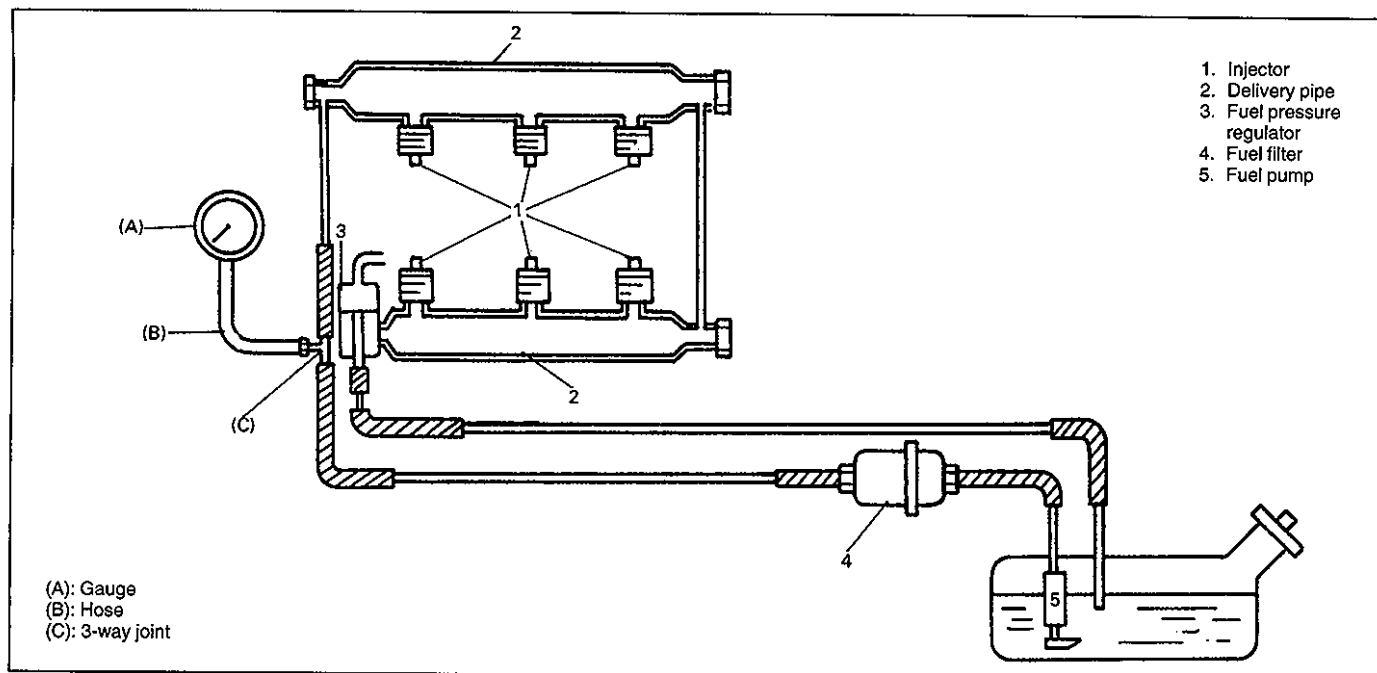
**NOTE:**

Before using following flow table, check to make sure that battery voltage is higher than 11 V. If battery voltage is low, pressure becomes lower than specification even if fuel pump and line are in good condition.


STEP	ACTION	YES	NO
1	1) Install fuel pressure gauge, referring to p.6E2-72. 2) Operate fuel pump, referring to p.6E2-72. Is fuel pressure then 270 – 310 kPa (2.7 – 3.1 kg/cm <sup>2</sup> , 38.4 – 44.0 psi)?	Go to Step 2.	Go to Step 5.
2	Is 200 kPa (2.0 kg/cm <sup>2</sup> , 28.4 psi) or higher fuel pressure retained for 1 minute after fuel pump is stopped at Step 1?	Go to Step 3.	Go to Step 4.
3	1) Start engine and warm it up to normal operating temperature. 2) Keep it running at specified idle speed. Is fuel pressure then within 210 – 260 kPa (2.1 – 2.6 kg/cm <sup>2</sup> , 29.8 – 37.0 psi)?	Normal fuel pressure.	Clogged vacuum passage for fuel pressure regulator or faulty fuel pressure regulator.
4	Is there fuel leakage from fuel feed line hose, pipe or joint?	Fuel leakage from hose, pipe or joint.	Go to Step 10 on the next page.
5	Was fuel pressure higher than spec. in Step 1?	Go to Step 6.	Go to Step 7.
6	1) Disconnect fuel return hose from fuel pipe and connect new hose to it. 2) Put the other end of new return hose into approved gasoline container. 3) Operate fuel pump. Is specified fuel pressure obtained then?	Restricted fuel return hose or pipe.	Faulty fuel pressure regulator.
7	Was no fuel pressure applied in Step 1?	Go to Step 8.	Go to Step 9. (Low pressure is measured.)

STEP	ACTION	YES	NO
8	With fuel pump operated and fuel return hose blocked by pinching it, is fuel pressure applied?	Faulty fuel pressure regulator.	Shortage of fuel or fuel pump or its circuit defective (Refer to Table B-1 "Fuel Pump Circuit Inspection").
9	1) Operate fuel pump. 2) With fuel return hose blocked by pinching it, check fuel pressure. Is it 450 kPa (4.5 kg/cm <sup>2</sup> , 64.0 psi) or more?	Faulty fuel pressure regulator.	Clogged fuel filter, restricted fuel feed hose or pipe, faulty fuel pump or fuel leakage from hose connection in fuel tank.
10	1) Disconnect fuel return hose from fuel pipe and connect new hose to it. 2) Put the other end of new return hose into approved gasoline container. 3) Check again if specified fuel pressure is retained. While doing so, does fuel come out return hose?	Faulty fuel pressure regulator.	Fuel leakage from injector, faulty fuel pump (faulty check valve in fuel pump) or fuel leakage from fuel pressure regulator diaphragm.

## B-4 IDLE AIR CONTROL SYSTEM CHECK


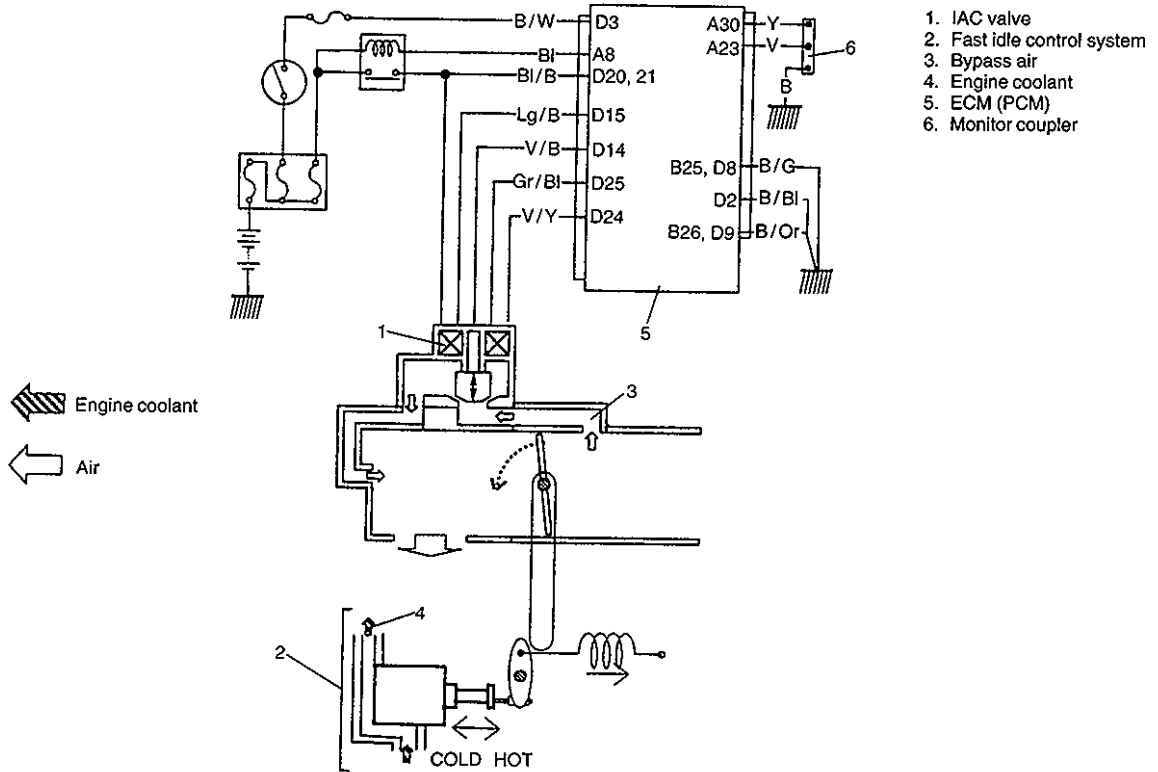


TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)

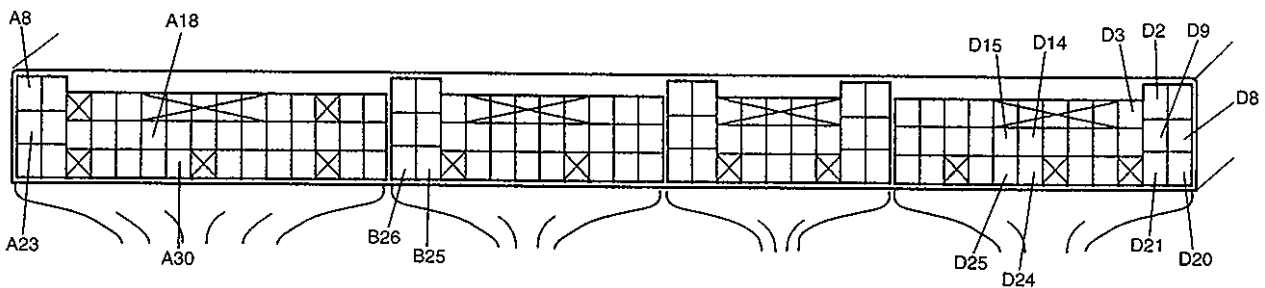


STEP	ACTION	YES	NO
1	Check engine idle speed and IAC duty referring to "Idle Speed/IAC Duty Inspection" in this section. Is idle speed/IAC duty within specification?	Go to Step 2.	Go to Step 3.
2	Is engine idle speed kept specified speed even with headlights turned ON?	System is in good condition.	Go to Step 3.
3	Check IAC valve referring to "IAC Valve Inspection" in this section. Is check result as specified?	Go to Step 4.	IAC valve malfunction, "BI/B", "Lg/B", "V/B", "Gr/BI" or "V/Y" wire open or short or poor coupler connection. If all above are OK, substitute a known-good ECM (PCM) and recheck.

STEP	ACTION	YES	NO
4	Was idle speed within specification in Step 1?	Check for following: – Vacuum leakage – Air inhaling – Fast idle control system – EVAP canister purge control system – Accessory engine load – Stuck of PCV valve – Clog of idle air passage – MAF sensor – TP sensor – ECT sensor – EGR valve malfunction if equipped (leakage from valve seat) – A/C signal (p.6E2-52) – Transmission range switch signal section 7B1.	Go to Step 5.
5	Was idle speed higher than specification in Step 1?	Go to Step 6.	Go to Step 9.
6	Check A/C (input) signal circuit referring to Step 1 of Table B-7 "A/C Signal Circuit Check", if equipped. (A/C signal can be also checked by using Tech-1.) Is it in good condition?	Go to Step 7.	A/C signal circuit open or short, or A/C system malfunction.
7	Check ABS signal circuit for voltage if equipped. 1) Turn ignition switch ON. 2) Check voltage between A18 terminal of ECM (PCM) connector connected and body ground. Is voltage 10 – 14 V?	Go to Step 8.	ABS signal circuit shorted to ground or ABS malfunction
8	Was IAC duty less than about 10 % (or more than about 90% for OFF duty meter) in Step 1 of this table?	Check abnormal air inhaling from intake manifold, throttle body, fast idle control system, PCV valve and EVAP canister purge control system.	Check TP sensor (closed throttle position) and ECT sensor for performance. If sensors are OK, substitute a known-good ECM (PCM) and recheck.
9	Check transmission range switch signal referring to section 7B1. Is check result satisfactory?	Go to Step 10.	Transmission range switch malfunction or its circuits open or short.
10	Was IAC duty more than about 50 % (or less than 50 % for OFF duty meter) in Step 1 of this table?	Check parts or system which can cause engine low idle. – EGR valve malfunction if equipped. (leakage from valve seat) – Accessory engine load – Clog of idle air passage – Etc.	Substitute a known-good ECM (PCM) and recheck.

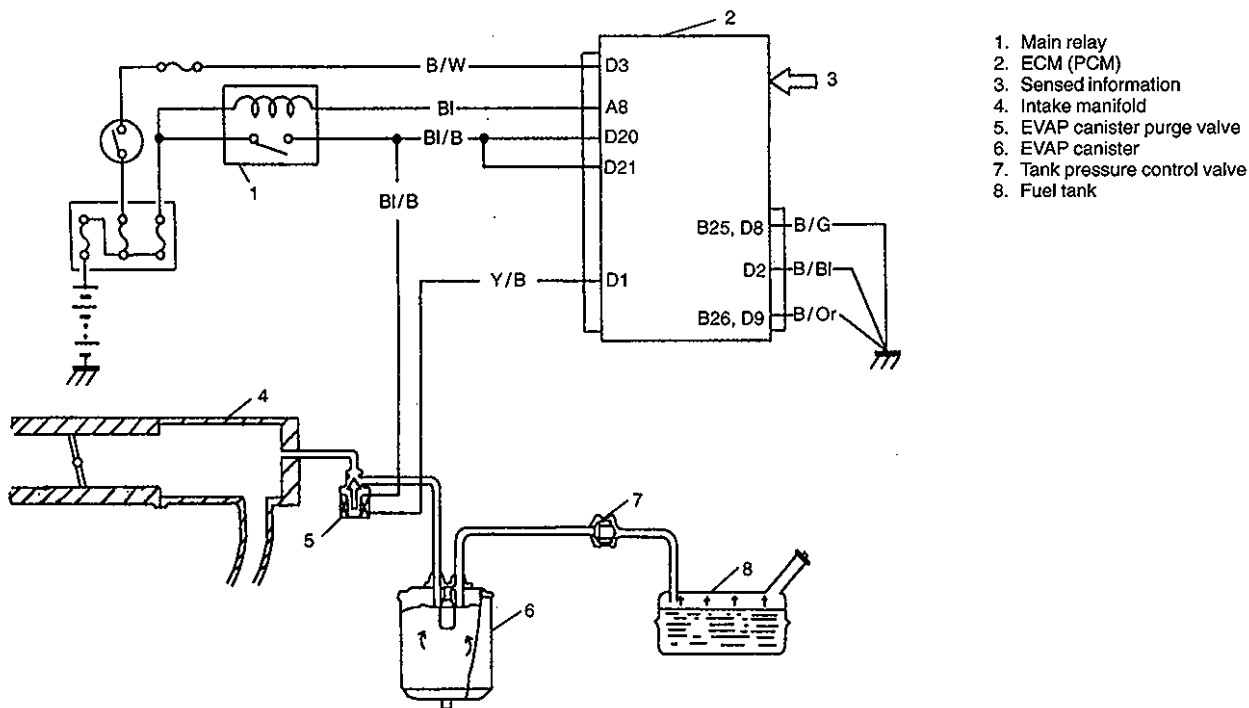
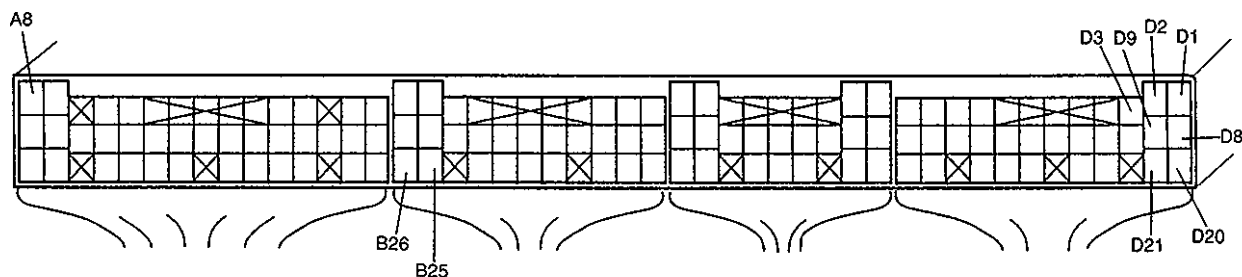
**B-5 EVAPORATIVE EMISSION CONTROL SYSTEM CHECK****TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	1) Check EVAP canister purge system for operation, referring to p.6E2-88. Is it in good condition?	EVAP canister purge system is in good condition. Check EVAP canister, tank pressure control valve and fuel filler cap.	Go to Step 2.
2	1) Check vacuum passage, hoses and EVAP canister purge solenoid valve, referring to p.6E2-88. Are they in good condition?	<ul style="list-style-type: none"> <li>• "Y/B" wire open</li> <li>• "Y/B" wire shorted to ground</li> <li>• Poor EVAP canister purge solenoid valve coupler connection</li> <li>• Poor D1 terminal connection. If wire and connection are OK, substitute a known-good ECM (PCM) and recheck.</li> </ul>	<ul style="list-style-type: none"> <li>• Vacuum passage clogged</li> <li>• Vacuum leakage</li> <li>• Faulty EVAP canister purge solenoid valve</li> </ul>

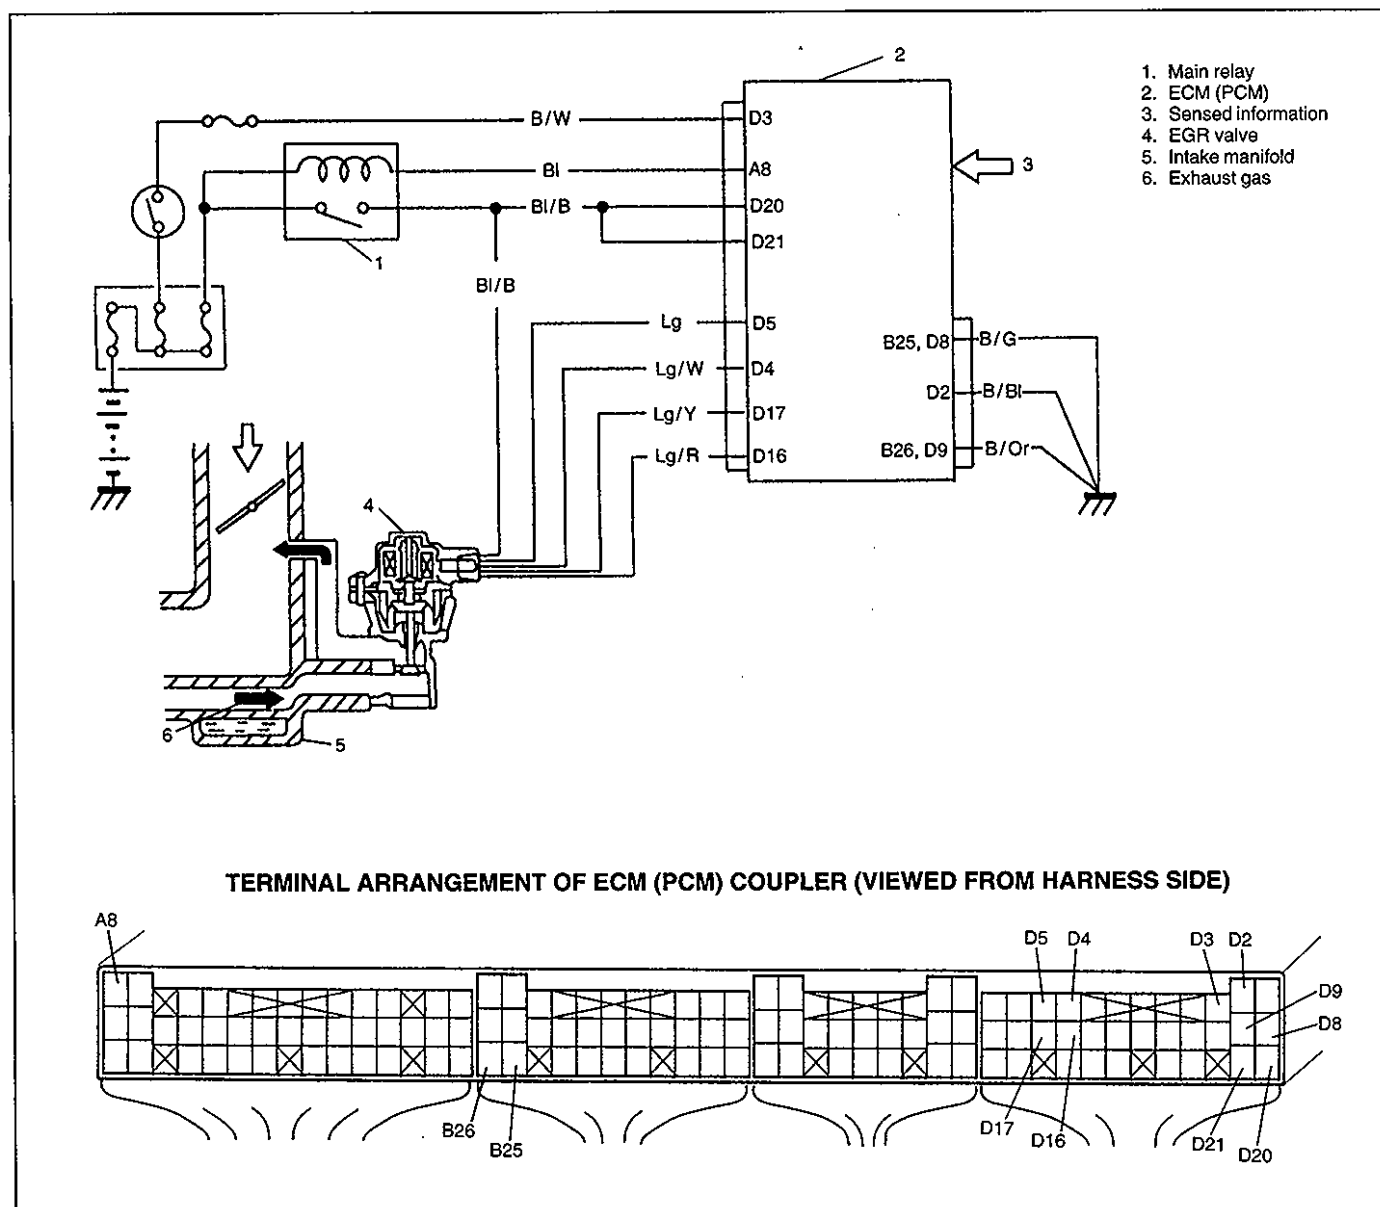


**B-6 EGR SYSTEM CHECK (IF EQUIPPED)**

STEP	ACTION	YES	NO
1	1) Check DTC referring to "DTC Check" in section 6E1. Is there any malfunction DTC?	Go to applicable DTC Diag. Flow Table.	Go to Step 2.
2	1) Check EGR system referring to "EGR System Inspection" in section 6E1. Is check result as specified?	EGR system is in good condition.	Clogged EGR pipe, stuck or faulty EGR valve.

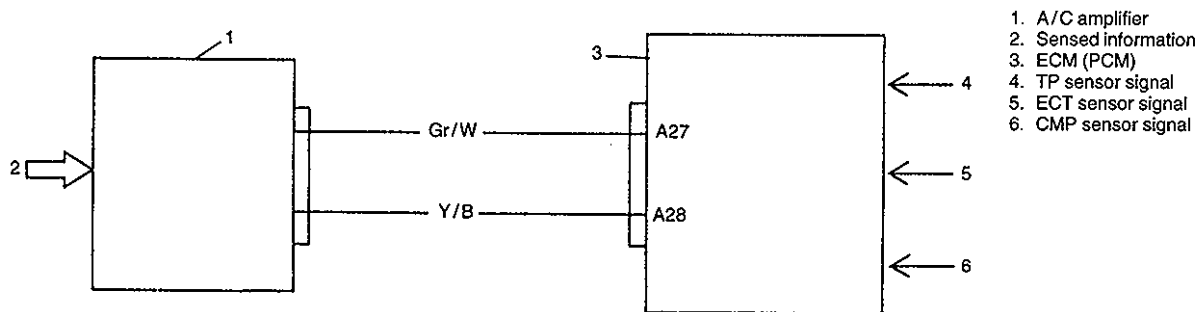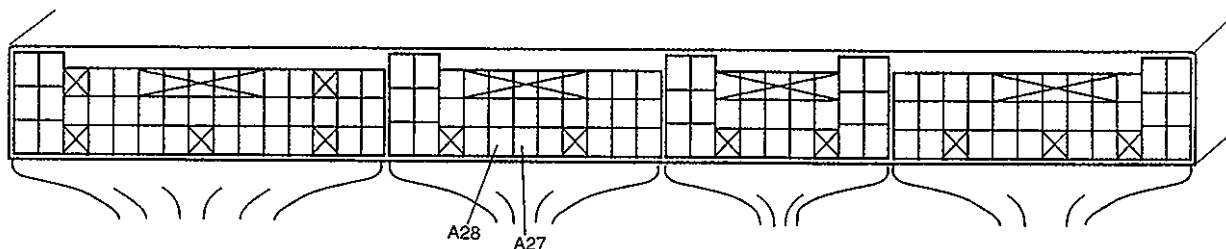**TABLE B-7 A/C SIGNAL CIRCUITS CHECK (IF EQUIPPED)****TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)**

STEP	ACTION	YES	NO
1	Check A/C Signal Circuit. 1) Check voltage at terminal A28 with ignition switch ON. A/C switch and/or heater blower switch OFF (A/C is not operating): 10 – 14 V Both A/C switch and heater blower switch ON: 0 – 1.5 V Are check result as specified?	Go to Step 2.	“Y/B” circuit open or short, Evaporative temperature is below 1°C (34°F) or faulty A/C system.
2	Check A/C Cut Signal Circuit. 1) Check voltage at terminal A27. While engine running and A/C switch and/or heater blower switch OFF (A/C is not operating): 0 – 1.5 V While engine running at idle speed and both A/C switch and heater blower switch ON (A/C is operating): 10 – 14 V Are check result as specified?	A/C control signal circuits are in good condition.	“Gr/W” circuit open or short, Poor performance of ECT sensor, TP sensor, Engine start signal inputted or A/C amplifier malfunction. If none of the above exists, substitute a known-good ECM (PCM) and recheck.

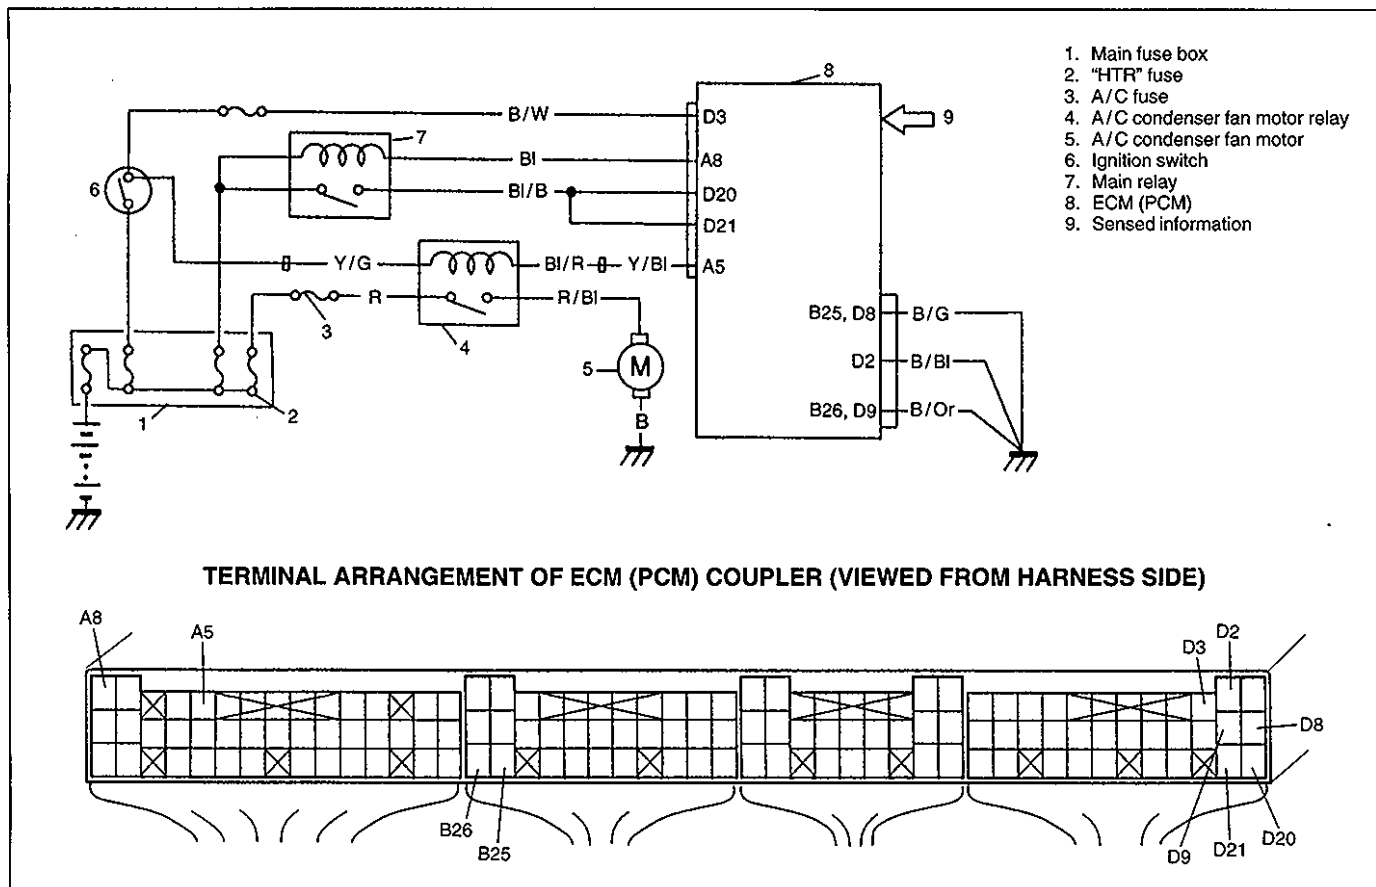**TABLE B-8 A/C CONDENSER FAN MOTOR RELAY CONTROL SYSTEM CHECK  
(IF EQUIPPED)****WARNING:**

Keep hands, tools, and clothing away from A/C condenser fan to help prevent personal injury. This fan is electric and can come on whether or not the engine is running. The fan can start automatically in response to the ECT sensor with the ignition switch in the "ON" position.

STEP	ACTION	YES	NO
1	1) Check DTC referring to "DTC Check" in section 6E1. Is there any malfunction DTC?	Go to applicable DTC Diag. Flow Table.	Go to Step 2.
2	1) Check A/C condenser fan for operation. A/C condenser fan should be operated under following condition A or B only. A: When engine is running and A/C is operating. B: When engine coolant temp. is 113°C, 235°F or more with ignition switch ON. Is check result as specified?	This system is in good condition.	Go to Step 3.

STEP	ACTION	YES	NO
3	1) Remove ECM (PCM) cover. 2) Check voltage between A5 terminal of ECM (PCM) connected coupler and ground. Other than conditions A and B in Step 2: 10 – 14 V Under condition A or B in Step 2: 0 – 1 V Is check result as specified?	Fuse blown, "R" or "R/BI" circuit open, malfunction of condenser fan motor or relay.	"Y/G" circuit open, "BI/R" or "Y/BI" circuit open or short, or relay malfunction. If above are OK, substitute a known-good ECM (PCM) and recheck.




TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
A1	Fuel pump relay	0 – 2.5 V	For 3 sec. after ignition switch ON or while engine running
		10 – 14 V	After 3 sec. from ignition switch ON with engine stopped
A2/A3	_____	_____	_____
A4	Tachometer	0 – 1 V	Ignition switch ON, engine stops
A5	A/C condenser fan motor relay (if equipped)	10 – 14 V	Ignition switch ON, Engine coolant temp.: (less than 113°C, 235°F)
A6	_____	_____	_____
A7	"O/D OFF" lamp (A/T VEHICLE)	0 – 1 V	For 4 sec. after ignition switch ON or overdrive cut switch ON
		10 – 14 V	After 4 sec. from ignition switch ON and overdrive cut switch OFF
A8	Main relay	10 – 14 V	Ignition switch OFF
		0 – 2 V	Ignition switch ON
A9	Power/Normal change switch (A/T VEHICLE)	0 – 1 V	Ignition switch ON, P/N change switch: POWER mode
		10 – 14 V	Ignition switch ON, P/N change switch: NORMAL mode
A10	"POWER" lamp (A/T VEHICLE)	0 – 1 V	Ignition switch ON, P/N change switch: POWER mode
		10 – 14 V	Ignition switch ON, P/N change switch: NORMAL mode
A11/A12	_____	_____	_____
A13	Heater blower switch	10 – 14 V	Ignition switch ON, heater blower switch OFF
		0 – 1.5 V	Ignition switch ON, heater blower switch ON
A14	Overdrive cut switch	10 – 14 V	Ignition switch ON, overdrive cut switch OFF
		0 – 1 V	Ignition switch ON, overdrive cut switch ON
A15	Rear defogger switch (if equipped) and lighting switch (M/T VEHICLE)	0 – 1 V	Rear defogger switch and lighting switch OFF
		10 – 14 V	Ignition switch ON Rear defogger switch or lighting switch ON
	Rear defogger switch (if equipped, A/T VEHICLE)	0 – 1.5 V	Rear defogger switch OFF
		10 – 14 V	Ignition switch ON, rear defogger switch ON
A16	Test switch terminal	10 – 14 V	Ignition switch ON
A17	Output duty select terminal	10 – 14 V	Ignition switch ON
A18	ABS control module (if equipped)	10 – 14 V	Ignition switch ON
A19	CO adjusting resistor (if equipped)	_____	_____
A20 – A22	_____	_____	_____
A23	Duty output terminal	0 – 1 V	Ignition switch ON
A24	Data link connector	4 – 5 V	Ignition switch ON
A25	_____	_____	_____
A26	Power steering pressure switch	10 – 14 V	Ignition switch ON
		0 – 1 V	With engine running at idle speed, turning steering wheel to the right or left as far as it stops

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
A27	A/C cut signal (if equipped)	0 – 1.5 V	A/C is not operating
		10 – 14 V	A/C is operating
A28	A/C signal (if equipped)	10 – 14 V	Ignition switch ON, A/C switch or heater blower switch OFF
		0 – 1 V	Ignition switch ON, A/C switch ON and heater blower switch ON
A29	Lighting switch (A/T VEHICLE)	0 – 1 V	Ignition switch ON, lighting switch OFF
		10 – 14 V	Ignition switch ON, lighting switch ON
A30	Diag. switch terminal	10 – 14 V	Ignition switch ON
A31	Stop lamp switch (A/T VEHICLE)	0 – 1 V	Brake pedal released (switch OFF), Ignition switch ON
		10 – 14 V	Brake pedal depressed (switch ON), Ignition switch ON
A32	CO adjusting resistor (–) (if equipped)	—	—
A33	Power source for CO adjusting resistor (if equipped)	4.75 – 5.25 V	Ignition switch ON
A34	Malfunction indicator lamp (“CHECK ENGINE” lamp)	0 – 2.5 V	Ignition switch ON, engine stops
		10 – 14 V	Engine running
A35	Power source for back up	10 – 14 V	Ignition switch ON and OFF
B1	Vehicle speed sensor	Deflects between 0 and over 4 V	Ignition switch ON, Rear right tire turned slowly with rear left tire locked
B2/B3	—	—	—
B4	Left (No.1) bank heated oxygen sensor (if equipped)	Deflects between over and under 0.5 V	While engine running at 2,000 r/min. for 1 min. or longer after warmed up
B5	Heater of right (No.2) bank HO2S (if equipped)	10 – 14 V	Ignition switch ON
		Deflects between 0 – 1 V and 10 – 14 V	At specified idle speed after engine warmed up
B6	Heater of left (No.1) bank HO2S (if equipped)	10 – 14 V	Ignition switch ON
		Deflects between 0 – 1 V and 10 – 14 V	At specified idle speed after engine warmed up
B7	—	—	—
B8	Intake air temp. sensor	2.2 – 3.0 V	Ignition switch ON, Sensor ambient temp.: 20°C, 68°F
B9	Camshaft position sensor (POS)	Deflects between 0 – 1 V and 4 – 6 V	Ignition switch ON, Crankshaft turned slowly
B10	Camshaft position sensor (REF)	Deflects between 0 – 1 V and 4 – 6 V	Ignition switch ON, Camshaft turned slowly
B11	Power source for TP sensor	4.75 – 5.25 V	Ignition switch ON
B12	Throttle position sensor	0.35 – 0.65 V	Ignition switch ON, Throttle valve at idle position
		3.5 – 4.5 V	Ignition switch ON, Throttle valve at full open position
B13/B14	—	—	—
B15	Right (No.2) bank heated oxygen sensor (if equipped)	Deflects between over and under 0.5 V	While engine running at 2000 r/min. for 1 min. or longer after warmed up
B16-B19	—	—	—
B20/B21	Ground	—	—
B22	Engine coolant temp. sensor	0.5 – 0.9 V	Ignition switch ON, Engine coolant temp.: 80°C, 176°F

TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
B23	Mass air flow sensor	0.5 – 1.0 V	Ignition switch ON and engine stops
		1.5 – 1.8 V	With engine running at idle speed
B24	_____	_____	_____
B25	Ground	_____	_____
B26	Ground	_____	_____
C1	Shift solenoid B (A/T VEHICLE)	0 – 1 V	Ignition switch ON
C2	TCC solenoid (A/T VEHICLE)	0 – 1 V	Ignition switch ON
C3	Transmission range switch “R” (A/T VEHICLE)	10 – 14 V	Ignition switch ON, selector lever: “R” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “R” range
C4	Transmission range switch “P” (A/T VEHICLE)	10 – 14 V	Ignition switch ON, selector lever: “P” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “P” range
C5	4WD low switch (A/T VEHICLE)	0 – 1 V	Ignition switch ON, Transfer lower: 4WD low range
		10 – 14 V	Ignition switch ON, Transfer lever: 4H or 2H range
C6	Shift solenoid A	10 – 14 V	Ignition switch ON
C7	_____	_____	_____
C8	A/T input speed sensor (A/T VEHICLE)	_____	_____
C9	A/T vehicle (output) speed sensor (A/T VEHICLE)	_____	_____
C10	A/T vehicle (output) speed sensor (A/T VEHICLE)	_____	_____
C11	_____	_____	_____
C12	Transmission range switch “D” (A/T VEHICLE)	10 – 14 V	Ignition switch ON, selector lever: “D” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “D” range
C13	Transmission range switch “N” (A/T VEHICLE)	10 – 14 V	Ignition switch ON, selector lever: “N” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “N” range
C14	Shield wire ground for A/T input speed sensor and A/T vehicle (output) speed sensor (A/T VEHICLE)	_____	_____
C15	_____	_____	_____
C16	A/T input speed sensor (A/T VEHICLE)	_____	_____
C17/C18	_____	_____	_____
C19	Transmission range switch “L” (A/T VEHICLE)	10 – 14 V	Ignition switch ON, selector lever: “L” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “L” range
C20	Transmission range switch “2” (A/T VEHICLE)	10 – 14 V	Ignition switch ON, selector lever: “2” range
		0 – 1 V	Ignition switch ON, selector lever: Other than “2” range
D1	EVAP canister purge valve	10 – 14 V	Ignition switch ON
D2	Ground	_____	_____
D3	Ignition switch	10 – 14 V	Ignition switch ON



TERMINAL	CIRCUIT	NORMAL VOLTAGE	CONDITION
D4	EGR valve (stepper motor coil 2, if equipped)	10 – 14 V	Ignition switch ON
D5	EGR valve (stepper motor coil 1, if equipped)	0 – 1 V	
D6	Fuel injector No.2	10 – 14 V	Ignition switch ON
D7	Fuel injector No.1		
D8	Ground	—	—
D9	Ground	—	—
D10	Ignition coil assembly for No.4	—	—
D11	Ignition coil assembly for No.3	—	—
D12	Ignition coil assembly for No.2	—	—
D13	Ignition coil assembly for No.1	—	—
D14	IAC valve (stepper motor coil 2)	—	—
D15	IAC valve (stepper motor coil 1)	—	—
D16	EGR valve (stepper motor coil 4, if equipped)	0 – 1 V	Ignition switch ON
D17	EGR valve (stepper motor coil 3, if equipped)	10 – 14 V	
D18	Fuel injector No.4	10 – 14 V	Ignition switch ON
D19	Fuel injector No.3		
D20/D21	Power source	10 – 14 V	Ignition switch ON
D22	Ignition coil assembly for No.6	—	—
D23	Ignition coil assembly for No.5	—	—
D24	IAC valve (stepper motor coil 4)	—	—
D25	IAC valve (stepper motor coil 3)	—	—
D26	Engine start signal	6 – 14 V	While engine cranking
		0 – 1 V	Other than above
D27	Fuel injector No.6	10 – 14 V	Ignition switch ON
D28	Fuel injector No.5		

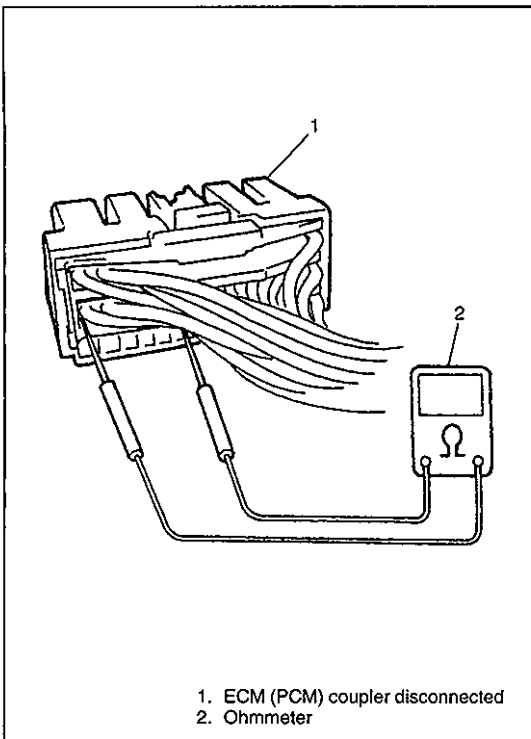

### Resistance Check

- 1) Disconnect couplers from ECM (PCM) with ignition switch OFF.

#### CAUTION:

Never touch terminals of ECM (PCM) itself or connect voltmeter or ohmmeter.

- 2) Check resistance between each pair of terminals of disconnected couplers as listed in following table.


#### CAUTION:

- Be sure to connect ohmmeter probe from wire harness side of coupler.
- Be sure to turn OFF ignition switch for this check.
- Resistance in table represents that when parts temperature is 20°C (68°F).

TERMINALS	CIRCUIT	STANDARD RESISTANCE	CONDITION
A1 – D3	Fuel pump relay	70 – 110 Ω	—
A5 – D3	A/C fan motor relay (if equipped)	75 – 110 Ω	Battery disconnected and ignition switch ON
A8 – A35	Main relay	70 – 110 Ω	—
B5 – D3	Heater of right bank HO2S (if equipped)	5 – 7 Ω	—
B6 – D3	Heater of left bank HO2S (if equipped)	5 – 7 Ω	—
B25 – Body ground	Ground	Continuity	—
B26 – Body ground	Ground	Continuity	—
C1 – Body ground	Shift solenoid B (A/T VEHICLE)	11 – 15 Ω	—
C2 – Body ground	TCC solenoid (A/T VEHICLE)	11 – 15 Ω	—
C6 – Body ground	Shift solenoid A (A/T VEHICLE)	11 – 15 Ω	—
D1 – D20	EVAP canister purge valve	33 – 39 Ω	—
D2 – Body ground	Ground	Continuity	—
D4 – D20	EGR valve (steering motor coil 2, if equipped)	20 – 24 Ω	—
D5 – D20	EGR valve (stepper motor coil 1, if equipped)	20 – 24 Ω	—
D6 – D20	Fuel injector No.2	7 – 10 Ω	—
D7 – D20	Fuel injector No.1	7 – 10 Ω	—
D8 – Body ground	Ground	Continuity	—
D9 – Body ground	Ground	Continuity	—
D14 – D20	IAC valve (stepper motor coil 2)	21 – 23 Ω	—
D15 – D20	IAC valve (stepper motor coil 1)	21 – 23 Ω	—
D16 – D20	EGR valve (stepper motor coil 4, if equipped)	20 – 24 Ω	—
D17 – D20	EGR valve (stepper motor coil 3, if equipped)	20 – 24 Ω	—
D18 – D20	Fuel injector No.4	10 – 14 Ω	—
D19 – D20	Fuel injector No.3	10 – 14 Ω	—

TERMINALS	CIRCUIT	STANDARD RESISTANCE	CONDITION
D24 – D20	IAC valve (stepper motor coil 4)	21 – 23 $\Omega$	—
D25 – D20	IAC valve (stepper motor coil 3)	21 – 23 $\Omega$	—
D27 – D20	Fuel injector No.6	10 – 14 $\Omega$	—
D28 – D20	Fuel injector No.5	10 – 14 $\Omega$	—

## ON-VEHICLE SERVICE

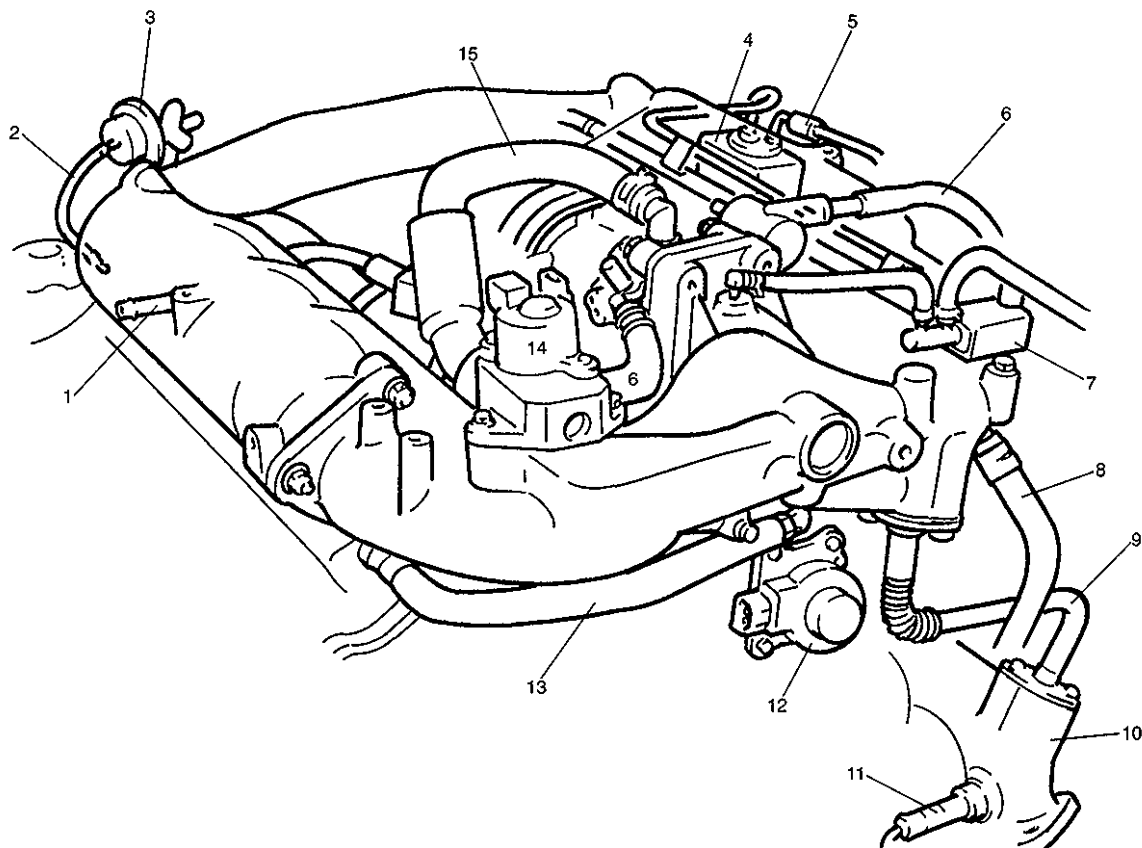


1. Brake booster hose pipe
2. Vacuum hose for fuel pressure regulator
3. Fuel pressure regulator
4. EVAP canister
5. Tank pressure control valve
6. Engine coolant hose

7. EVAP canister purge valve
8. Breather hose
9. EGR pipe
10. Exhaust manifold
11. Heated oxygen sensor (if equipped)
12. EGR valve (if equipped)

13. PCV hose
14. IAC valve
15. IAC hose

## GENERAL

When hoses are disconnected and system components are removed for service, reinstall components properly, and route and connect hoses correctly after service. Refer to figure on previous page for proper routing of hoses.

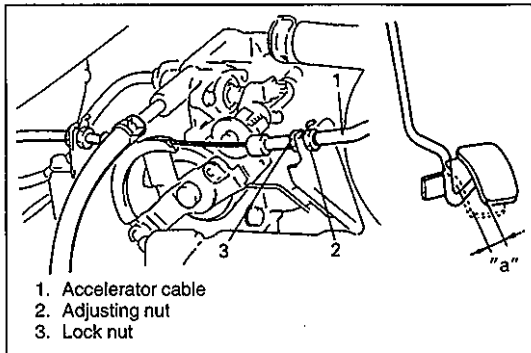


## ACCELERATOR CABLE ADJUSTMENT

- 1) Warm up engine to normal operating temperature. And check to make sure that fast idle control cam is off cam follower lever, if not check fast idle control system referring to "Throttle Body Inspection" in this section.
- 2) With accelerator pedal depressed fully, check clearance between throttle lever and lever stopper (throttle body) which should be within following specification.

**Pedal play "a": 2 – 7 mm (0.08 – 0.27 in.)**


If measured value is out of specification, adjust it to specification with cable adjusting nut.

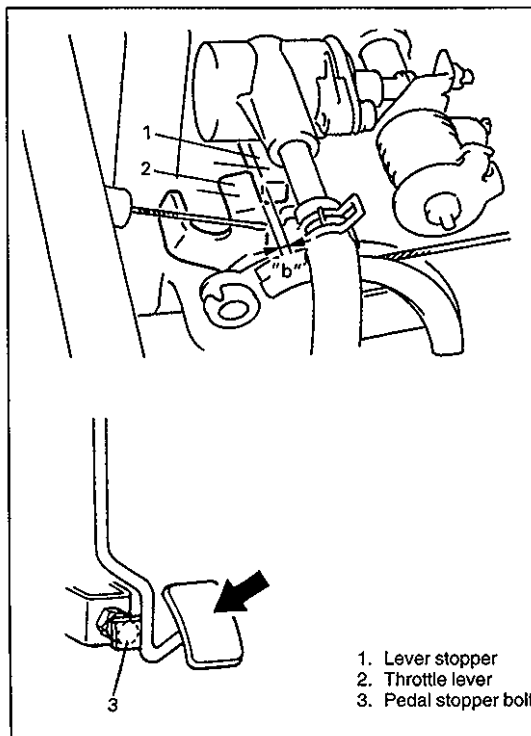

- 3) With accelerator pedal depressed fully, check clearance between throttle lever and lever stopper (throttle body) which should be within following specification.

**Clearance "b" : 0.5 – 2.0 mm (0.02 – 0.07 in.)  
(With pedal depressed fully)**

If measured value is out of specification, adjust it to specification by changing height of pedal stopper bolt.

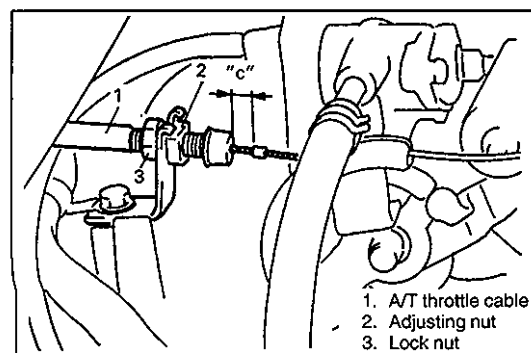

## A/T THROTTLE CABLE ADJUSTMENT (A/T VEHICLE)

- 1) Make sure that accelerator cable is adjusted as specified.
- 2) With throttle valve closed, check clearance "c" which should be within following specification.

**Clearance "c": 0.8 – 1.5 mm (0.03 – 0.06 in.)**

If it is out of specification, adjust it by turning cable adjusting nut.

**IDLE SPEED/IDLE AIR CONTROL (IAC) DUTY INSPECTION**


Before idle speed/IAC duty check, make sure of the following.

- Lead wires and hoses of engine/emission control systems are connected securely.
- Accelerator cable is adjusted.
- Ignition timing is within specification.
- All accessories (wipers, heater, lights, A/C, etc.) are out of service.
- Air cleaner has been properly installed and is in good condition.
- ECM (PCM) does not detect any malfunction DTC.

After above items are all confirmed, check idle speed and IAC duty as follows.

**NOTE:**

**Before starting engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T vehicle), and set parking brake and block drive wheels.**

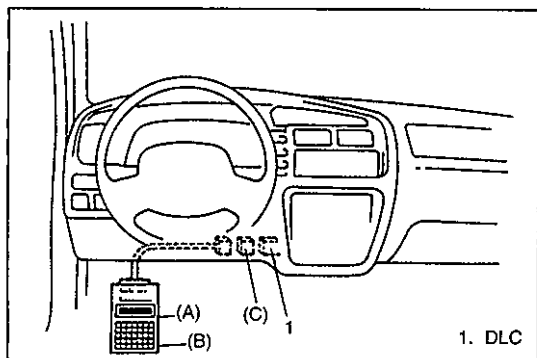

[Using SUZUKI scan tool, Tech 1]

- 1) Connect SUZUKI scan tool to DLC with ignition switch OFF.

**Special Tool**

**(A): SUZUKI scan tool, Tech 1**

**(B): Mass storage cartridge**


**(C): 16/12 pin adapter**

- 2) Warm up engine to normal operating temperature.
- 3) Check IAC duty and idle speed by using "IAC CAL" mode of SUZUKI scan tool.

	A/C OFF	A/C ON
Engine idle speed:	750 ± 50 r/min.	800 ± 50 r/min.
IAC duty at specified idle speed:	10 – 50 %	

If duty and/or idle speed is out of specifications, check idle air control system referring to Diagnostic Flow Table B-4 "IDLE AIR CONTROL SYSTEM CHECK" in this section.

- 4) Check that specified engine idle speed is obtained with A/C ON if vehicle is equipped with A/C.  
If not, check A/C ON signal circuit and idle air control system.

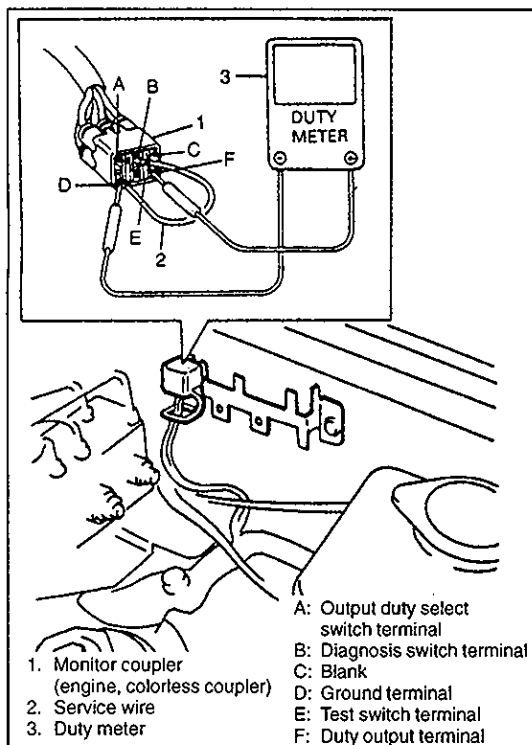

[Not using SUZUKI scan tool]

**NOTE:**

If ECM (PCM) parts No. ends with "0", ECM (PCM) does not output IAC duty through duty output terminal in monitor coupler. First of all, check label on ECM (PCM) for part No. if so, check IAC duty by using Tech 1.

- 1) Disconnect scan tool from DLC if connected.
- 2) Warm up engine to normal operating temperature.
- 3) Stop engine and connect duty meter between duty output terminal and ground terminal of monitor connector.
- 4) Using service wire, ground diagnosis switch terminal in monitor connector.
- 5) Set tachometer.
- 6) Start engine and warm it up completely.
- 7) Check IAC duty and idle speed. If duty and/or idle speed is out of specifications, check idle air control system referring to Diagnostic Flow Table B-4 "IDLE AIR CONTROL SYSTEM CHECK" in this section.

	A/C OFF	A/C ON
Engine idle speed:	750 ± 50 r/min.	800 ± 50 r/min.
IAC duty at specified idle speed:	10 – 50 % (1.4 – 7.0V when battery voltage is 14V)	—

**NOTE:**

IAC duty can be checked roughly by using voltmeter. IAC duty to voltage relation is as follows.

ON DUTY METER INDICATION (%)	OFF DUTY METER INDICATION (%)	VOLTMETER INDICATION (V)
0	100	0
50	50	0.5 × VB
100	0	VB

- "OFF DUTY METER" is such duty meter that indicates approx. 100% when terminal voltage is approx. "0V".
  - "VB" represents battery voltage while engine of vehicle being checked is running.
- 8) Remove service wire from monitor connector.
  - 9) Install cap to monitor connector.
  - 10) Check that specified engine idle speed is obtained with A/C ON if vehicle is equipped with A/C.  
If not, check A/C ON signal circuit and idle air control system.

## **IDLE MIXTURE INSPECTION/ADJUSTMENT (VEHICLE WITHOUT HEATED OXYGEN SENSOR)**


All vehicles not equipped with heated oxygen sensor are shipped with their CO% factory adjusted as follows.

Engine idle mixture (CO %)	0.8 – 1.3 % at specified idle speed
-------------------------------	-------------------------------------

Idle mixture adjustment should never be changed from the original factory setting. However, if during diagnosis, the check indicates idle mixture to be the cause of a driver performance complaint or emission failure, the idle mixture can be adjusted using the following procedures.

### **NOTE:**

**For this inspection and adjustment, exhaust gas tester (CO meter) and engine tachometer are necessary.**


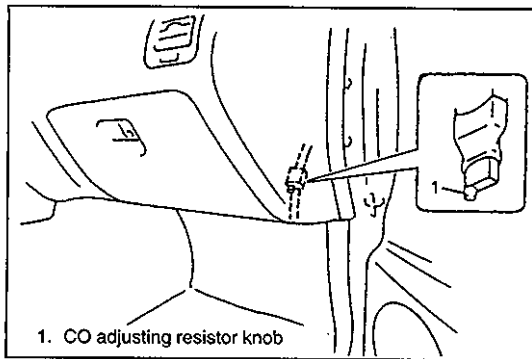


- 1) Check idle speed according to "Idle Speed/Idle Air Control Duty Inspection" section.
- 2) Using exhaust gas tester, check that idle mixture CO% is within above specification. If it is out of specification, adjust it to specification by turning resistor knob.
- 3) If idle mixture has been adjusted, confirm that idle speed/IAC duty is within specification.



## AIR INTAKE SYSTEM


### THROTTLE BODY

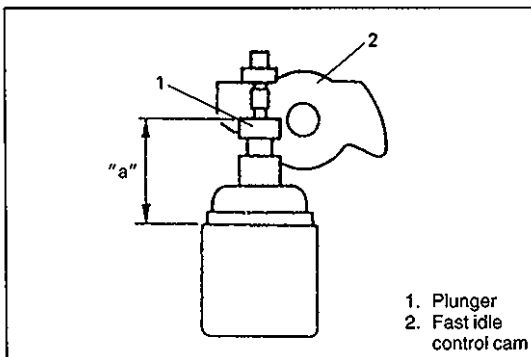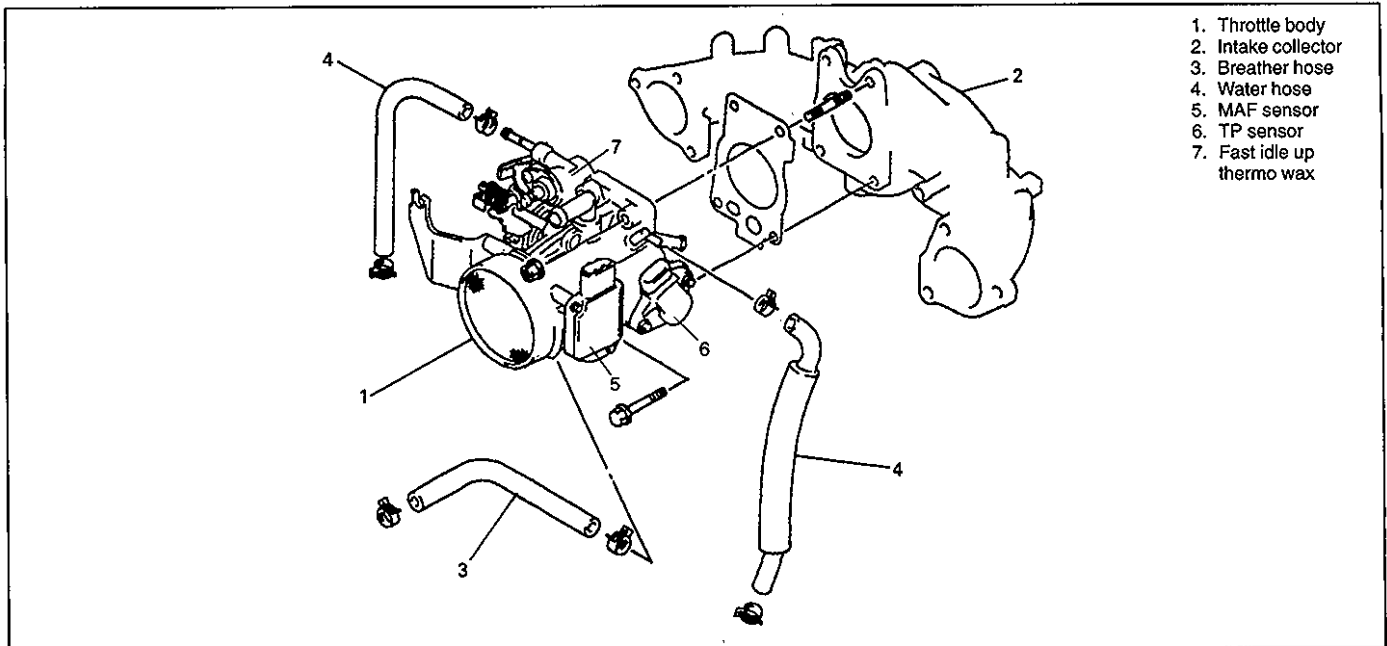

#### On-Vehicle Inspection


- 1) Check that throttle valve lever moves smoothly.
- 2) Measure plunger protrusion "a" at engine coolant temp. is 25°C (77°F).

"a": 26.6 – 27.4 mm (1.048 – 1.078 in.)

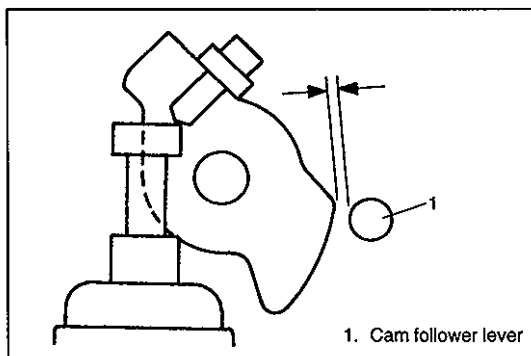


- 3) Warm up engine and check to make sure that fast control cam is off cam follower lever at engine coolant temp. is 52 – 68°C (126 – 154°F).

If check result in step 2) or 3) is out of specification, replace throttle body assembly.

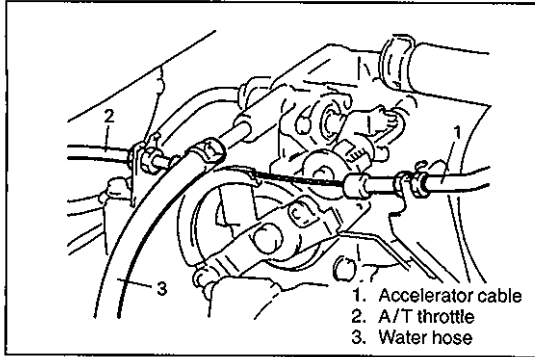


## Removal


- 1) Disconnect negative cable at battery.
- 2) Drain cooling system.
- 3) Remove strut tower bar.
- 4) Disconnect accelerator cable and or A/T throttle cable from throttle body.
- 5) Disconnect water hose from throttle body.

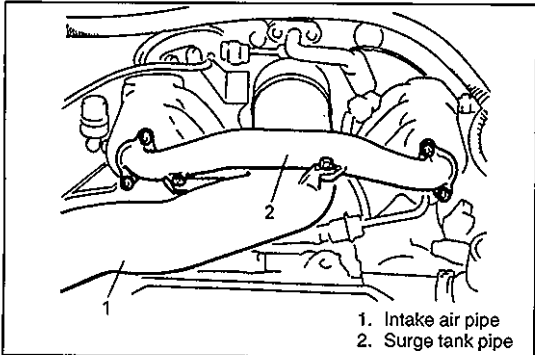


- 6) Remove intake air pipe and surge tank pipe.

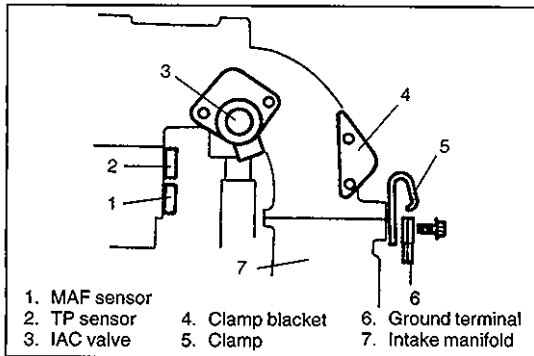

- 7) Disconnect connector of injector wire.
- 8) Disconnect connectors of TP sensor, MAF sensor and IAC valve.
- 9) Disconnect ground terminal from intake manifold.
- 10) Remove clamp bracket from intake collector.

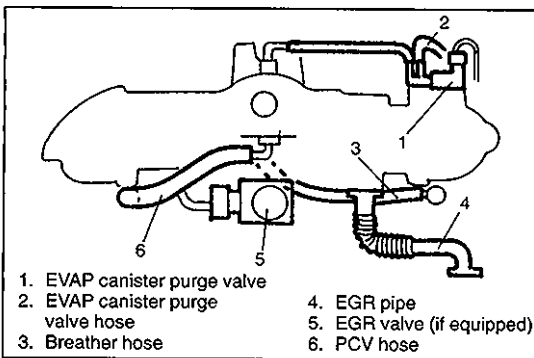


- 11) Disconnect connectors of EVAP canister purge valve and EGR valve (if equipped).
- 12) Disconnect PCV hose, breather hose and EVAP canister purge valve hose.
- 13) Remove EGR pipe.

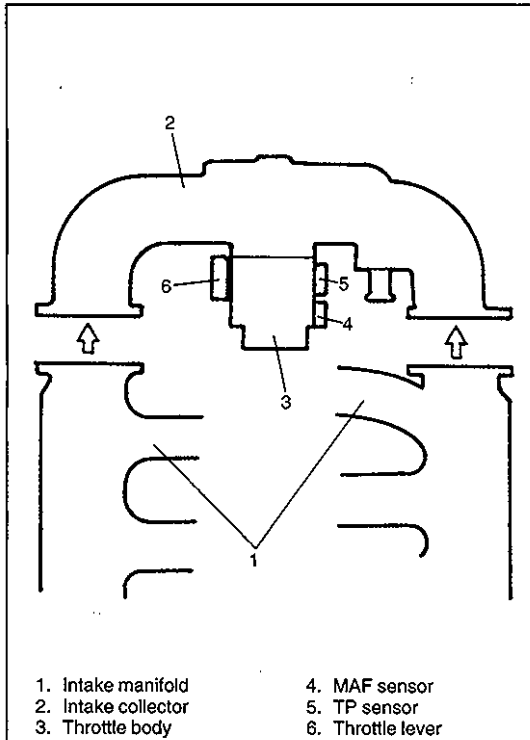

- 14) Remove throttle body and intake collector from intake manifold.
- 15) Disconnect hoses of IAC valve and PCV from throttle body.
- 16) Remove throttle body from intake collector.


#### NOTE:


- MAF sensor, TP sensor, or other components containing rubber must not be placed in a solvent or cleaner bath. A chemical reaction will cause these parts to swell, harden or get distorted.
- Don't put drills or wires into passages for cleaning. It causes damages in passages.

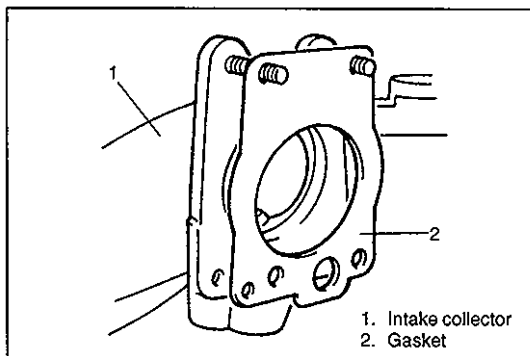

#### Installation

- 1) Clean mating surfaces and install throttle body gasket to intake collector with new gasket.
- 2) Install throttle body to intake collector and tighten bolts.
- 3) Connect IAC valve hose and PCV hose.
- 4) Install throttle body and intake collector to intake manifold with new intake collector gaskets.
- 5) Install EGR pipe with new gaskets.
- 6) Connect PCV hose, breather hose and EVAP canister purge valve hose.
- 7) Connect connectors of EVAP canister purge valve and EGR valve.  
Fix wire harness with clamps.
- 8) Install clamp bracket to intake collector.
- 9) Connect ground terminal to intake manifold.
- 10) Connect connectors of TP sensor, MAF sensor and IAC valve.
- 11) Connect connector of injector wire.
- 12) Install surge tank pipe to intake manifold with new gaskets and intake air pipe to throttle body.
- 13) Connect engine coolant hoses to throttle body.
- 14) Connect accelerator cable and A/T throttle cable (A/T).
- 15) Install strut tower bar and tighten bolts.
- 16) Refill cooling system.
- 17) Connect negative cable at battery.
- 18) Adjust accelerator cable and A/T throttle cable, refer to "ACCELERATOR CABLE ADJUSTMENT" and "A/T THROTTLE CABLE ADJUSTMENT" in this section.

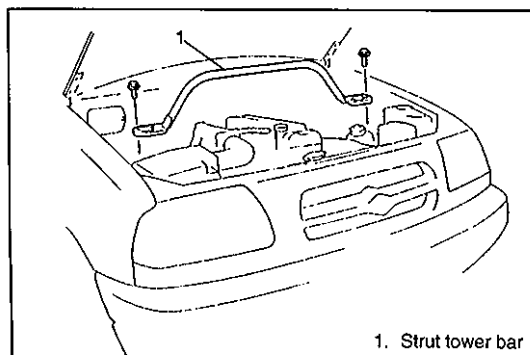

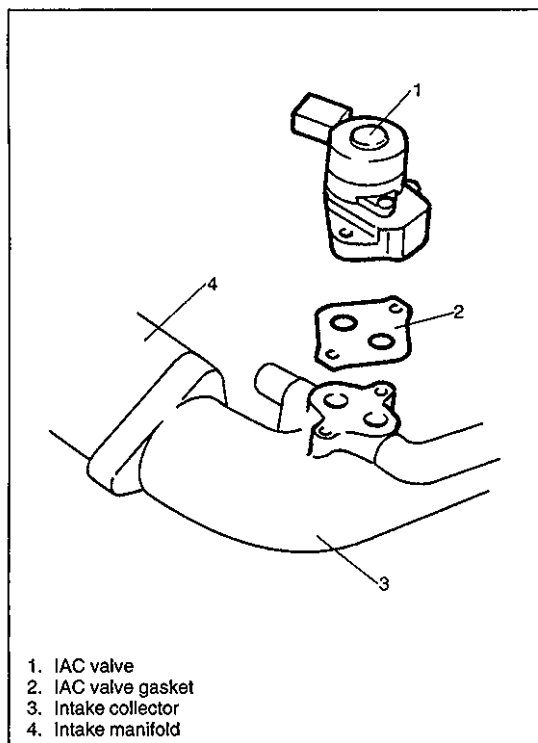

## IDLE AIR CONTROL VALVE (IAC VALVE)

### Removal

- 1) Disconnect battery negative cable at battery.
- 2) Disconnect IAC valve connector.
- 3) Remove IAC valve from intake collector.

### On-Vehicle Inspection

- 1) Disconnect connector from IAC valve.
- 2) Check each coil of IAC valve for resistance.

Terminals	Resistance
Between "a" and "b"	20 – 24 $\Omega$ at 20°C, 68°F
"b" and "c"	
"d" and "e"	
"e" and "f"	


If resistances is out of specification, replace.


- 3) Remove IAC valve from intake collector.
- 4) Connect connector to IAC valve.
- 5) Check that plunger of IAC valve moves once and then stops as soon as ignition switch is turned OFF.

### NOTE:

**This check should be performed by two people, one person operates ignition switch while the other checks plunger operation.**

If plunger of IAC valve does not operate at all, check wire harnesses for open and short. If wire harnesses are in good condition, replace IAC valve and recheck.

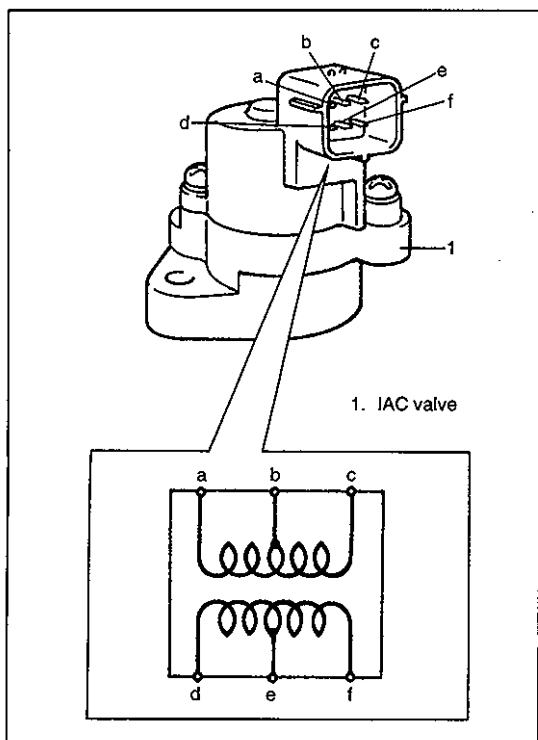


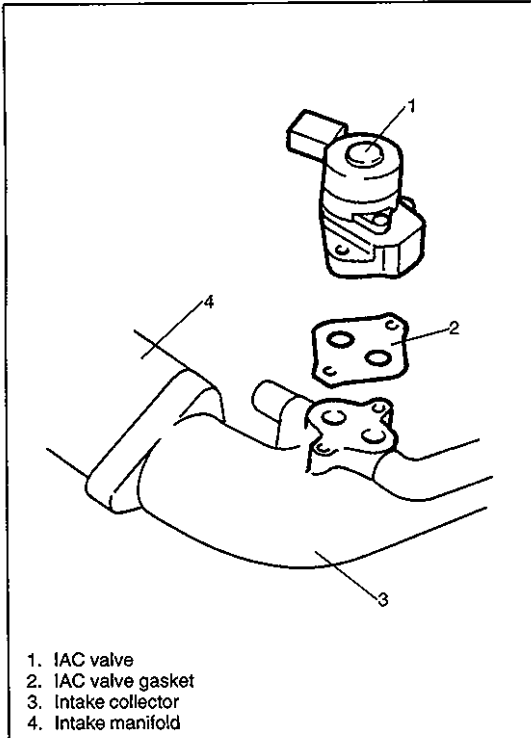

### Installation

For installation, reverse removal procedure and note following precautions.

- Use new gaskets.

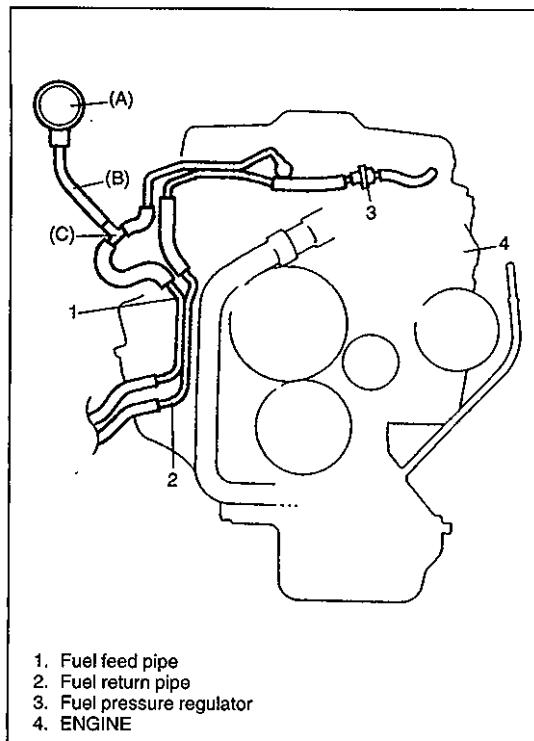

## FUEL DELIVERY SYSTEM

### Fuel Pressure Inspection

- 1) Relieve fuel pressure in fuel feed line referring to "Fuel Pressure Relief Procedure" in "ENGINE GENERAL INFORMATION" section.
- 2) Disconnect fuel feed hose from delivery fuel feed pipe.

#### CAUTION:

A small amount of fuel may be released when fuel feed hose is removed. Place container under the fuel feed hose or fuel feed pipe with a shop cloth so that released fuel is caught in container or absorbed in cloth. Place that cloth in an approved container.

- 3) Connect special tools and hose between fuel feed hose and fuel feed pipe as shown in figure, and clamp hose securely to ensure no leaks occur during checking.

#### Special Tool

(A): 09912-58441

(B): 09912-58431

(C): 09912-58490

- 4) Check that battery voltage is above 11 V.

CONDITION	FUEL PRESSURE
With fuel pump operating and engine stopped	270 – 310 KPa 2.7 – 3.1 kg/cm <sup>2</sup> 38.4 – 44.0 psi
At specified idle speed	210 – 260 KPa 2.1 – 2.6 kg/cm <sup>2</sup> 29.8 – 37.0 psi
With 1 min. after engine (fuel pump) stop (Pressure reduces as time passes)	over 200 kPa 2.0 kg/cm <sup>2</sup> 28.4 psi


- 5) Turn ignition switch ON to operate fuel pump and after 3 seconds turn it OFF. Repeat this 3 or 4 times and then check fuel pressure.
- 6) Start engine.
- 7) Measure fuel pressure at idling.  
If measure pressure doesn't satisfy specification, refer to "Diagnostic Flow Table B-3" and check each possibly defective part. Replace if found defective.

- 8) After checking fuel pressure, remove fuel pressure gauge.

#### CAUTION:

As fuel feed line is still under high fuel pressure, make sure to release fuel pressure according to following procedures.

- Place fuel container under joint.
- Cover joint with rag and loosen joint nut slowly to release fuel pressure gradually.

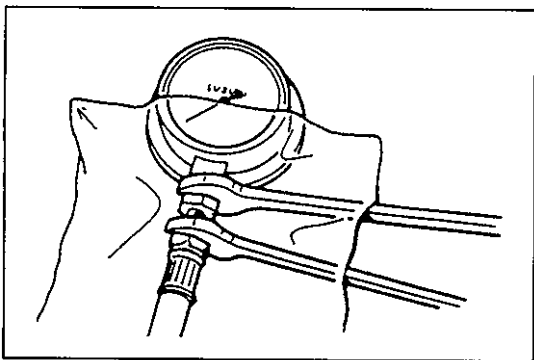


- 9) Remove fuel pressure gauge, hose and 3-way joint.
- 10) Connect fuel feed hose and clamp it securely.
- 11) With engine "OFF" and ignition switch "ON", check for fuel leaks.

## FUEL PUMP

### On-Vehicle Inspection


#### CAUTION:

When fuel filler cap is removed in any procedure, work must be done in a well-ventilated area, keep away from any open flames and without smoking.

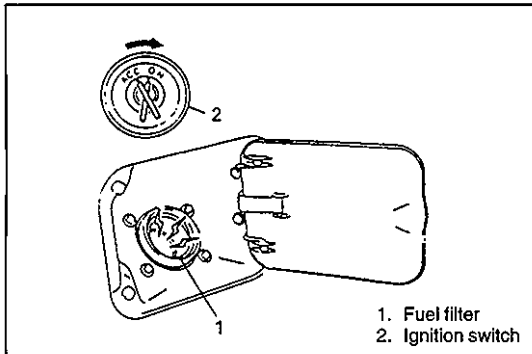

- 1) Remove filler cap and turn ON ignition switch. Then fuel pump operating sound should be heard from fuel filler for about 3 seconds and stop. Be sure to reinstall fuel filler cap after checking.

If above check result is not satisfactory, advance to "Diagnostic Flow Table B-1".

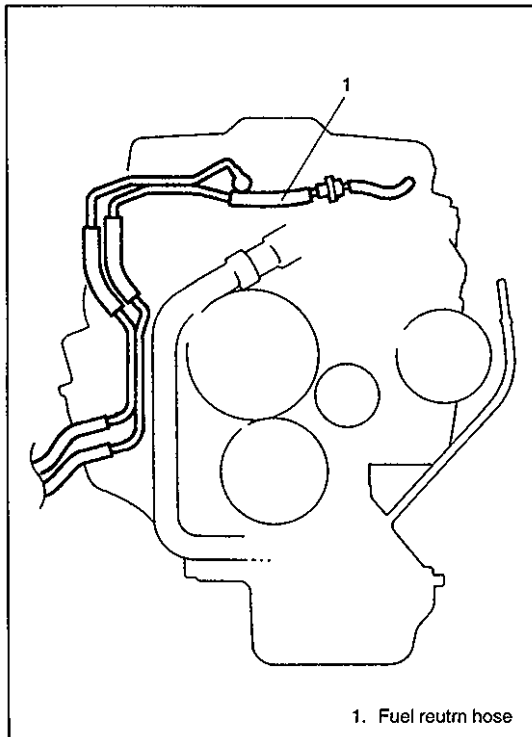

- 2) Fuel pressure should be felt at fuel return hose for 3 seconds after ignition switch ON.

If fuel pressure is not felt, advance to "Diagnostic Flow Table B-3".

### Removal

- 1) Remove fuel tank from body according to procedure described in section 6C and remove fuel pump from fuel tank.


### Inspection

Check fuel pump filter for evidence of dirt and contamination. If present, clean and check for presence of dirt in fuel tank.

### Installation

- 1) Install fuel pump to fuel tank and then install fuel tank to body according to procedure described in section 6C.

1. Vacuum hose

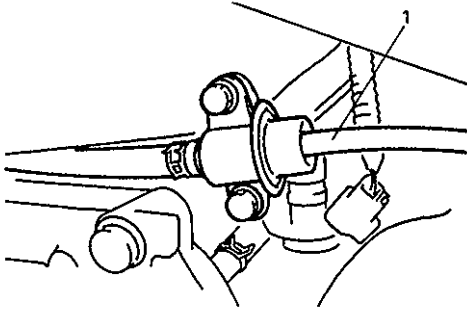

## FUEL PRESSURE REGULATOR

### Removal

- 1) Relieve fuel pressure according to procedure described on p. 6-4.
- 2) Disconnect battery negative cable from battery.
- 3) Disconnect vacuum hose from fuel pressure regulator.

- 4) Remove fuel pressure regulator from fuel delivery pipe.

#### CAUTION:


A small amount of fuel may be released when it is from delivery pipe.

Place a shop cloth under delivery pipe so that released fuel is absorbed in it.


- 5) Disconnect fuel return hose from fuel pressure regulator.

#### CAUTION:

A small amount of fuel may be released when hose is disconnected. Cover hose to be disconnected with a shop cloth.

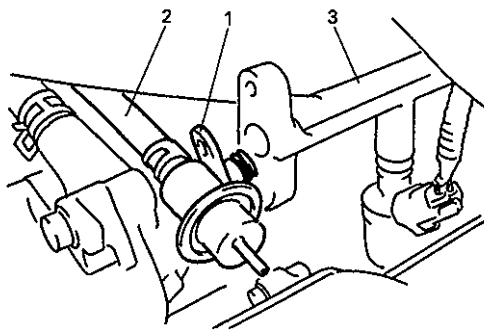

1. Fuel pressure regulator  
2. Fuel return hose  
3. Delivery pipe

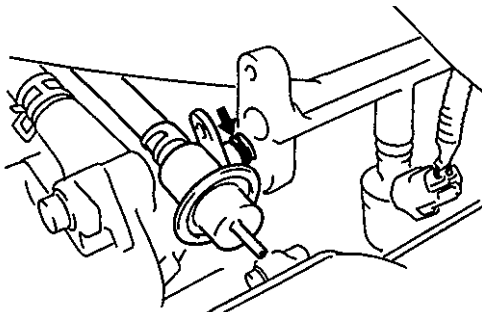

### Installation

For installation, reverse removal procedure and note following precautions.


- Use new O-ring.
- Apply thin coat of gasoline to O-ring to facilitate installation.

- Tighten fuel pressure regulator bolts to specified torque.

#### Tightening Torque


(a): 10 N·m (1.0 kg-m, 7.5 lb-ft)

- With engine "OFF" and ignition switch "ON", check for fuel leaks around fuel line connection.

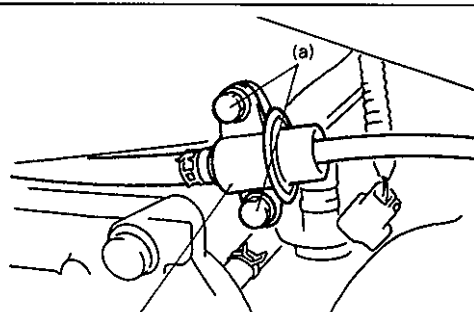

1. Fuel pressure regulator




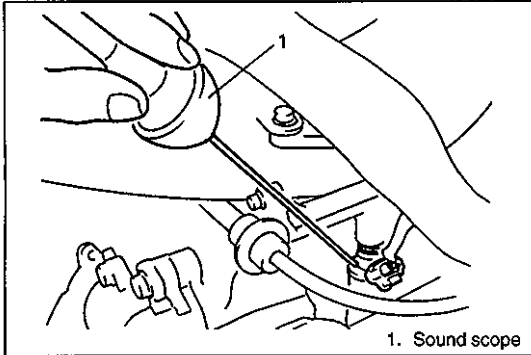

## FUEL INJECTOR

### On-Vehicle Inspection

- 1) Using sound scope or such, check operating sound of injector when engine is running or cranking.  
Cycle of operating sound should vary according to engine speed.  
If no sound or an unusual sound is heard, check injector circuit (wire or coupler) or injector.

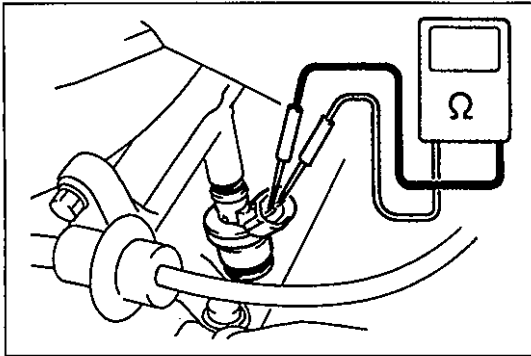

- 2) Disconnect connector from injector, connect ohmmeter between terminals of injector and check resistance.


**Resistance of injector: 10 – 14 Ω**

If resistance is out of specification, replace.

- 3) Connect connector to injector securely.

### Removal

- 1) Relieve fuel pressure according to procedure described on p. 6 – 4.
- 2) Remove throttle body intake collector, refer to "THROTTLE BODY REMOVAL" in this section.

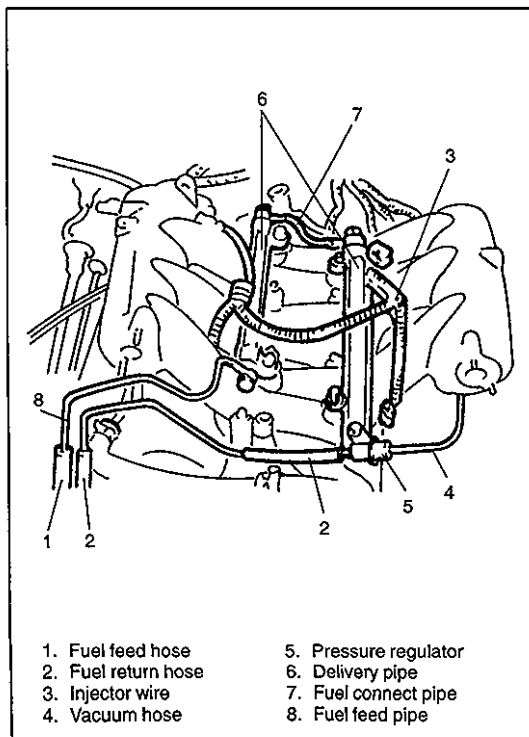


- 3) Disconnect fuel feed hose and fuel return hose.
- 4) Disconnect vacuum hose and fuel return hose from fuel pressure regulator.
- 5) Remove fuel feed pipe and fuel connect pipe from delivery pipes (right and left).

#### CAUTION:

A small amount of fuel may be released when it is from delivery pipe.

Place a shop cloth under delivery pipe so that released fuel is absorbed in it.

- 6) Disconnect connector from each injector.

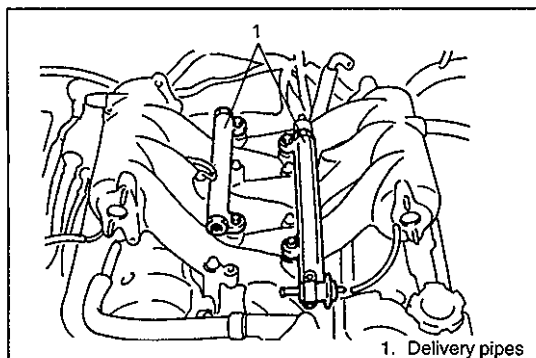


- 7) Remove delivery pipes (right and left) from intake manifold.
- 8) Remove fuel injector(s).

### Inspection

#### WARNING:

As fuel is injected in this inspection, perform in a well ventilated area and away from open flames.  
Use special care to prevent sparking when connecting and disconnecting test lead to and from battery.

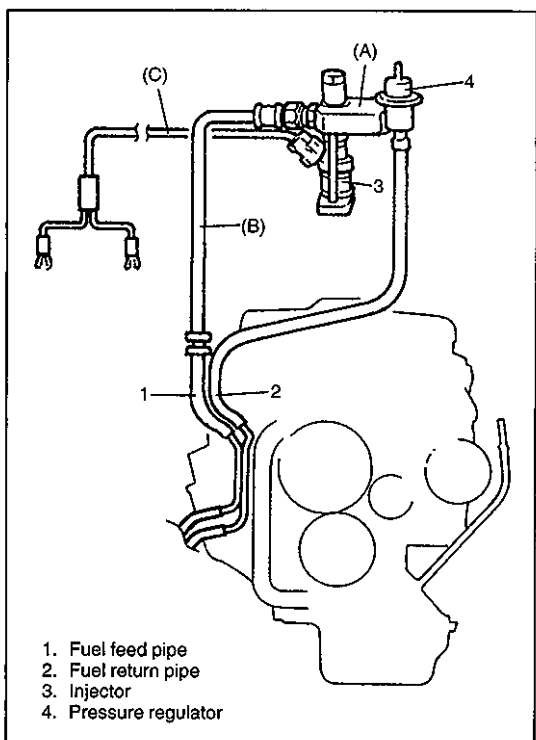

- 1) Install injector and fuel pressure regulator to special tool (injector checking tool).

#### NOTE:

Remove grommet from injector, then install injector to special tool and tighten bolts by hand.

#### Special Tool

(A): 09912-58421

- 2) Connect special tools (hoses and attachment) to pipes of vehicle.


#### Special Tool

(B): 09912-58431

- 3) Connect special tool (test lead) to injector.

#### Special Tool


(C): 09930-88521

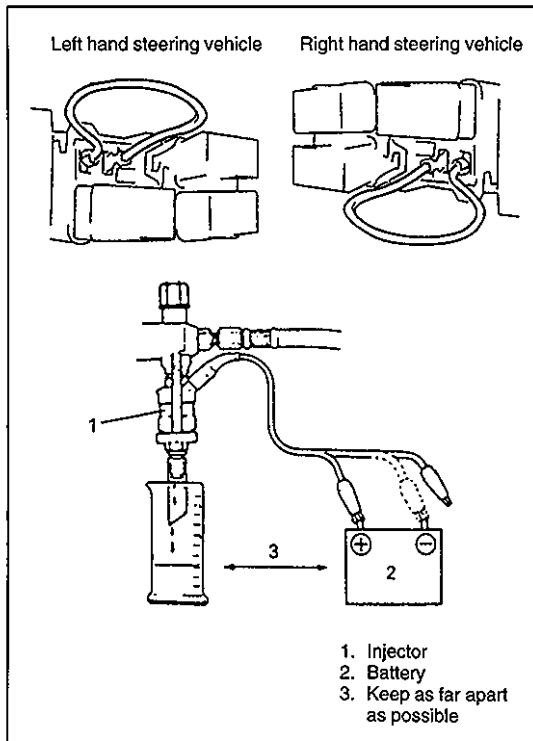

- 4) Install suitable vinyl tube onto injector nozzle to prevent fuel from splashing out when injecting.
- 5) Put graduated cylinder under injector as shown.
- 6) Disconnect fuel pump relay.
- 7) To operate fuel pump and apply fuel pressure to injector, using wire harness as thick as the one used for fuel pump circuit, connect two terminals of relay connector as shown in figure.
- 8) Apply battery voltage to injector for 15 seconds and measure injected fuel volume with graduated cylinder.  
Test each injector two or three times.  
If not within specification, replace injector.


#### Injected fuel volume:

**64 – 70 cc/15 sec. (2.16/2.25 – 2.37/2.47 US/Imp. oz/15 sec.)**

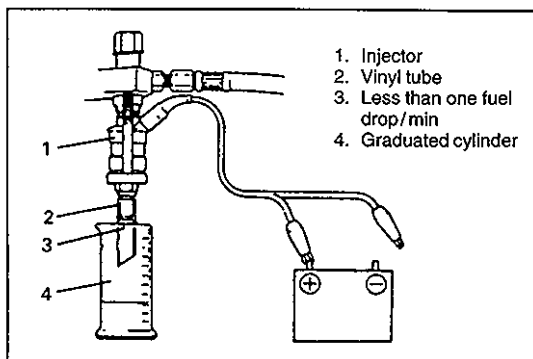


- 9) Check fuel leakage from injector nozzle. Do not operate injector for this check (but fuel pump should be at work). If fuel leaks more than following specifications, replace.

**Fuel leakage: Less than 1 drop/min.**

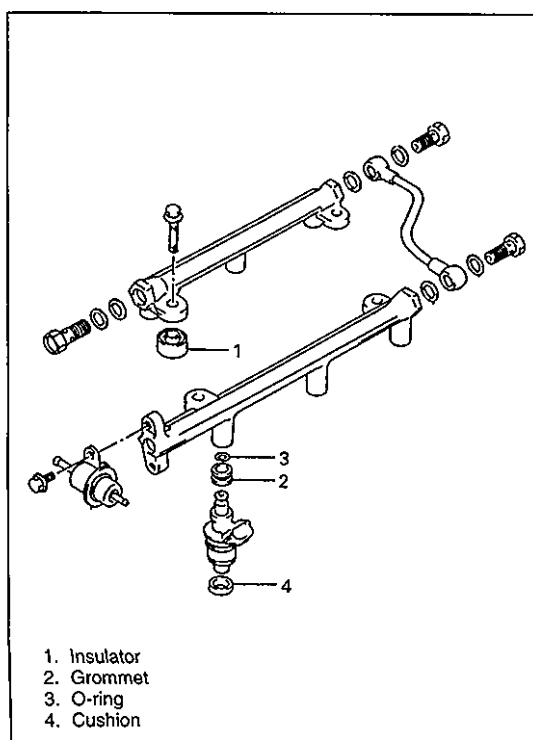


#### Installation


- 1) Replace injector O-ring with new one using care not to damage it. Install grommet to injector.

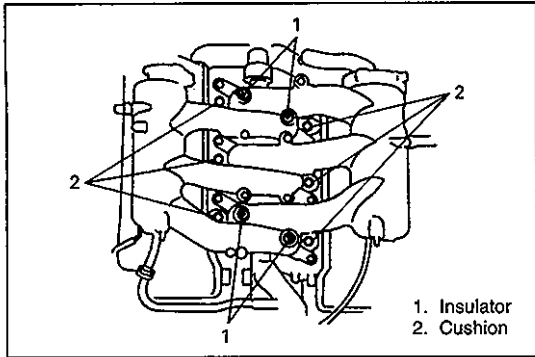

- 2) Check if insulator is scored or damaged. If it is, replace with new one.  
Install insulators and cushions to intake manifold.

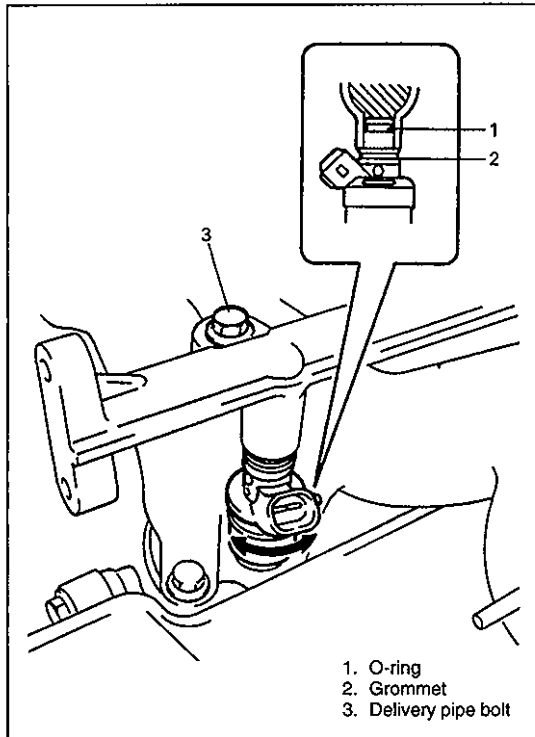

- 3) Apply thin coat of fuel to O-rings and then install injectors into delivery pipes (right and left) and intake manifold.  
Make sure that injectors rotate smoothly. If not, probable cause is incorrect installation of O-ring. Replace O-ring with new one.
- 4) Tighten delivery pipe bolts and make sure that injectors rotate smoothly.

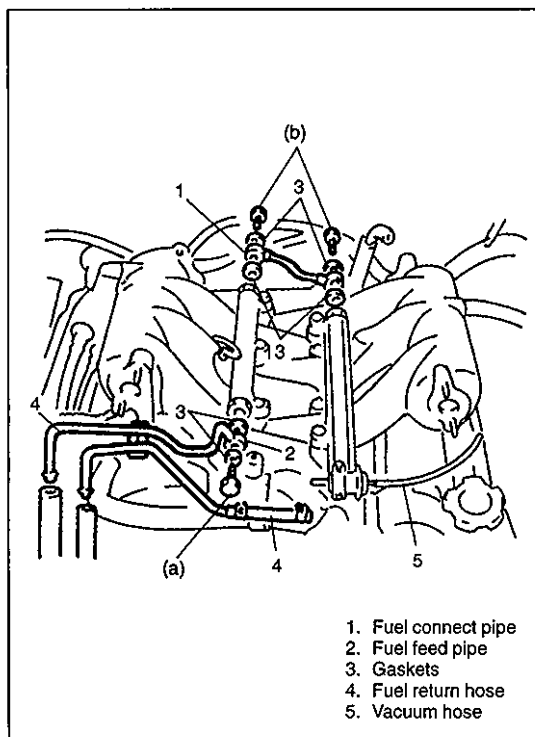

- 5) Install fuel connect pipe and tighten union bolts to specified torque with new gaskets.

#### Tightening Torque


(b): 30 N·m (3.0 kg-m, 22.0 lb-ft)

- 6) Install fuel feed pipe and tighten unionbolt to specified torque with new gaskets.

#### Tightening Torque

(a): 30 N·m (3.0 kg-m, 22.0 lb-ft)

- 7) Connect vacuum hose and fuel return hose to fuel pressure regulator.

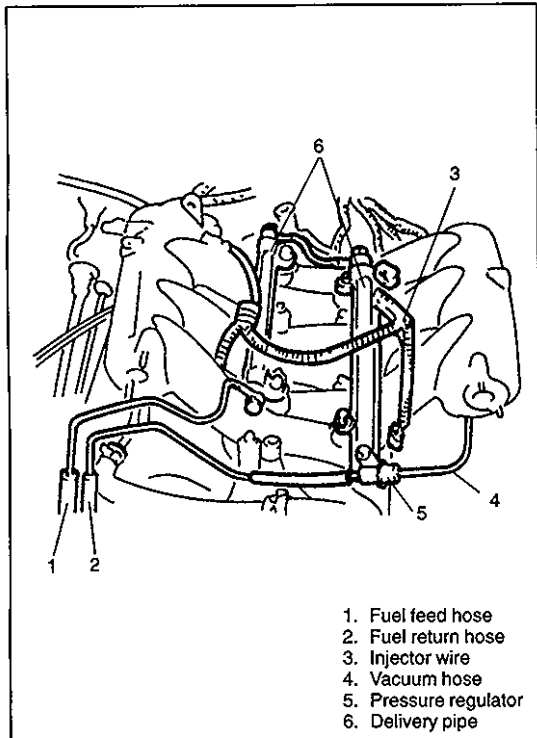


- 8) Connect fuel feed hose and fuel return hose.
- 9) Connect connectors to injectors.
- 10) Install throttle body and intake collector, refer to "THROTTLE BODY INSTALLATION" in this section.
- 11) With engine "OFF" and ignition switch "ON", check for fuel leaks around fuel line connection.

## ELECTRONIC CONTROL SYSTEM

### ENGINE CONTROL MODULE (ECM)/POWERTRAIN CONTROL MODULE (PCM)

#### Removal/Installation

Refer to section 6E1.

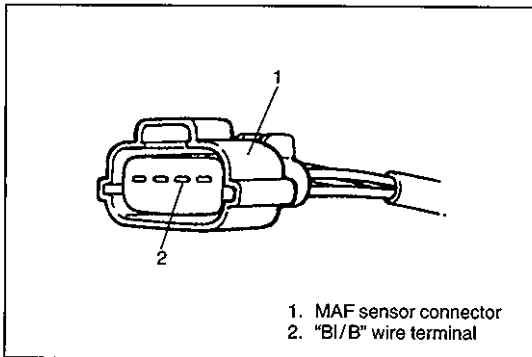

#### MASS AIR FLOW SENSOR (MAF SENSOR)

##### Inspection

##### NOTE:

Use voltmeter with high-impedance (10 k $\Omega$ /V minimum) or digital type voltmeter.

- 1) Remove ECM (PCM) cover from brakcet.
- 2) With ignition switch OFF, disconnect MAF sensor connector.
- 3) Connect voltmeter to "BI/B" wire terminal of MAF sensor connector disconnected and ground.
- 4) Turn ignition switch ON and check that voltage is battery voltage. If not, check if wire harness is open or connection is poor.
- 5) Turn ignition switch OFF and connect MAF sensor connector to MAF sensor.


- 6) Turn ignition switch ON and check voltage between B23 and B20 terminal.


**Standard voltage: 0.5 – 1.0 V**

- 7) Start engine and check that voltage is lower than 5V and it rises as engine speed increases.  
(Reference data: 1.5 – 1.8 V at specified idle speed)

If check result is not as specified above, cause may lie in wire harness, coupler connection, MAF sensor or ECM (PCM).

TERMINAL ARRANGEMENT OF ECM (PCM) COUPLER (VIEWED FROM HARNESS SIDE)

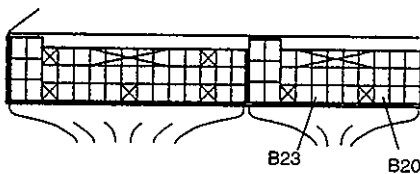

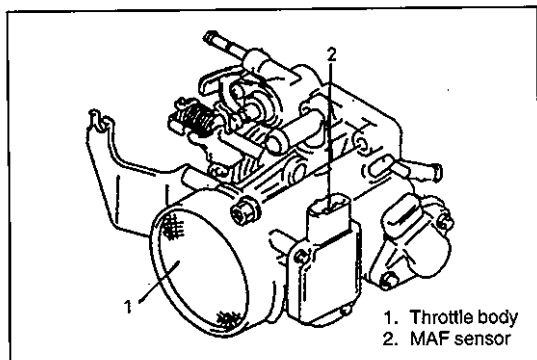

### Removal

- 1) Disconnect negative cable at battery and coupler from MAF sensor.
- 2) Remove throttle body, referring to "THROTTLE BODY REMOVAL" in this section.

### NOTE:

**Don't remove MAF sensor.**

### CAUTION:

- Do not expose MAF sensor (throttle body) to any shock.
- Do not blow compressed air by using air gun or the like.
- Do not put finger or any other object into MAF sensor and keep away from net. Malfunction may occur.

### Installation

- 1) Install throttle body, referring to "THROTTLE BODY INSTALLATION" in this section.

## INTAKE AIR TEMPERATURE (IAT) SENSOR

### Removal/Inspection/Installation

Refer to section 6E1.

**THROTTLE POSITION SENSOR (TP SENSOR)****Inspection**

- 1) Warm up engine and stop it when its temperature has reached normal operating temperature (Check to make sure that they have some clearance between fast idle cam and cam follow lever.).
- 2) Disconnect negative cable at battery and coupler from TP sensor.
- 3) Using ohmmeter, check resistance between terminals under each condition given in table below.

TERMINALS	RESISTANCE
Between 1 and 3 terminals	4 – 6 k $\Omega$
Between 2 and 3 terminals	0 – 4.6 k $\Omega$ , varying linearly according to throttle valve opening

If check result is not satisfactory, replace TP sensor.



- 4) Connect TP sensor coupler securely.
- 5) Connect negative cable to battery.

**Removal**

- 1) Disconnect battery negative cable at battery.
- 2) Disconnect connector from TP sensor.
- 3) Remove TP sensor from throttle body.

**Installation**

- 1) To install sensor, place it onto throttle body so that sensor pickup lever can engage with throttle body lever.
- 2) Hand-tighten TP sensor screws.

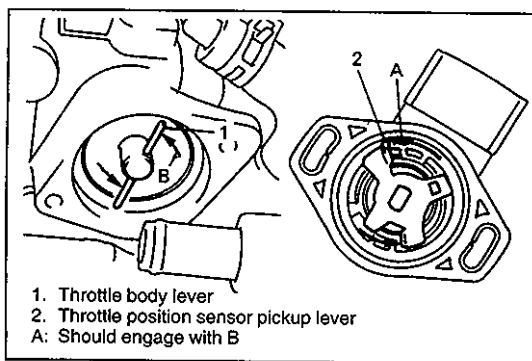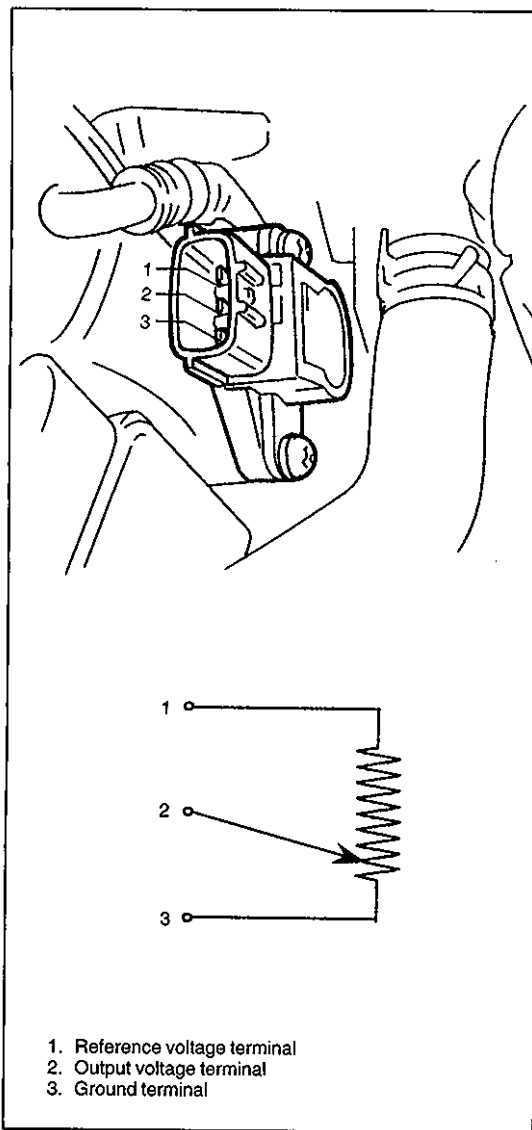


- 3) Connect connector to TP sensor securely.
- 4) Connect battery negative cable to battery.
- 5) Adjust installation angle of TP sensor according to procedure described in item "Adjustment".



### Adjustment

- 1) Warm up engine to normal operating temperature.
- 2) Check to make sure that fast idle cam and cam follower lever are not in contact with each other. If they are, check fast idle control system.

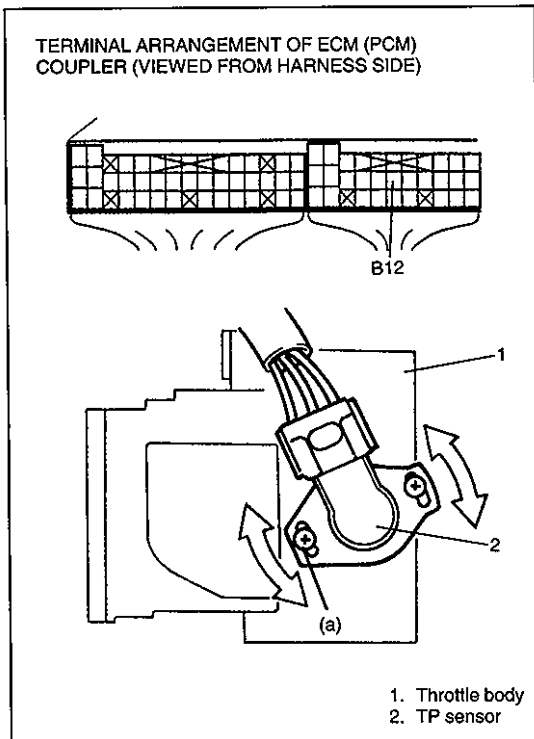

- 3) Loosen TP sensor screws.
- 4) Remove ECM (PCM) cover from bracket.
- 5) Turn TP sensor clockwise or counterclockwise and tighten TP sensor screw at a position where voltage as specified below is obtained at coupler terminal B12.

#### NOTE:

If tech 1 and cartridge are available, make an adjustment by using tech 1 while observing TP sensor voltage.

**TP sensor voltage when throttle is fully close:  $0.50 \pm 0.15$  [V]**


#### Tightening Torque

(a): 2.5 N·m (0.25 kg-m, 1.8 lb-ft)

- 6) Check to make sure that when throttle is fully open TP sensor voltage is as shown below.

**TP sensor voltage when throttle is fully open:  $4.0 \pm 0.5$  [V]**

- 7) Install ECM (PCM) cover.
- 8) Disconnect negative cable at battery for 30 sec. or more and connect negative cable at battery.

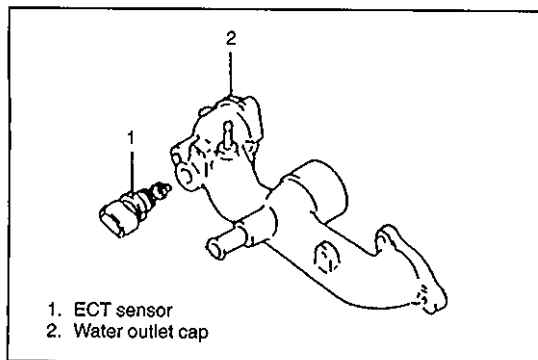


## ENGINE COOLANT TEMPERATURE SENSOR (ECT SENSOR)

### Removal

- 1) Disconnect negative cable from battery.
- 2) Drain cooling system.
- 3) Disconnect coupler from ECT sensor.
- 4) Remove ECT sensor from water outlet cap.

### Inspection

Refer to section 6E1.

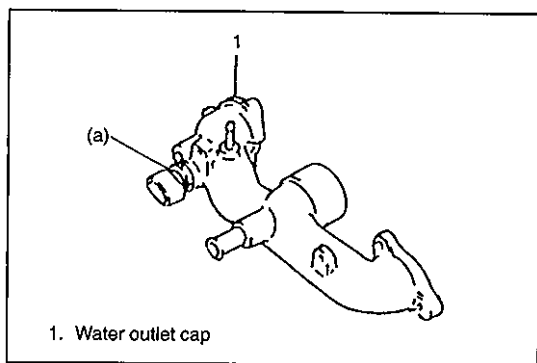

### Installation

Reverse removal procedure noting the following.

- Clean mating surfaces of sensor and water outlet cap.
- Use new O-ring.
- Tighten ECT sensor to specified torque.

### Tightening Torque


(a): 15 N·m (1.5 kg-m, 11.0 lb-ft)

- Connect coupler to sensor securely.
- Refill cooling system.

## HEATED OXYGEN SENSOR (if equipped)

### Sensor Inspection

Inspect oxygen sensor and its circuit referring to flow table of diagnostic trouble code No.13 (No.26) in Diagnosis section.

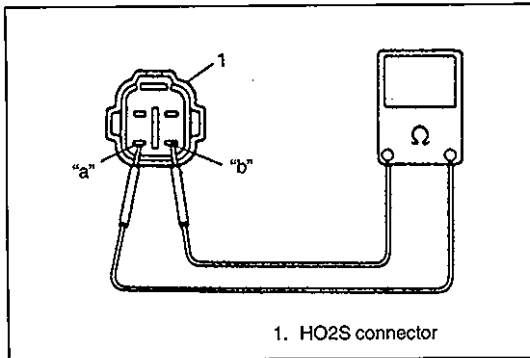

### Oxygen Sensor Heater Inspection

- 1) Disconnect sensor connector.
- 2) Using ohmmeter, measure resistance between terminals "a" and "b" of sensor connector.

#### NOTE:

Temperature of sensor affects resistance value largely. Make sure that sensor heater is at correct temperature.

Resistance of oxygen sensor heater:  
5 – 7  $\Omega$  at 20°C, 68°F

If found faulty, replace oxygen sensor.

- 3) Connect sensor coupler securely.

### Removal


#### WARNING:

To avoid danger of being burned, do not touch exhaust system when system is hot. Oxygen sensor removal should be performed when system is cool.

- 1) Disconnect negative cable from battery.
- 2) Disconnect coupler of oxygen sensor (s).
- 3) Remove oxygen sensor (s) from exhaust manifold (s).

#### NOTE:

Be careful not to expose it to excessive shock.

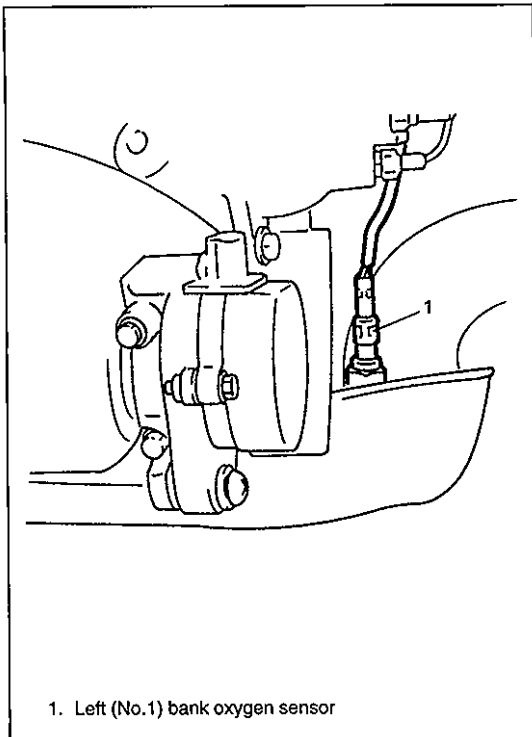

### Installation


Reverse removal procedure noting the followings.

- Tighten oxygen sensor (s) to specified torque.

#### Tightening Torque

(a): 45 N·m (4.5 kg-m, 32.5 lb-ft)

- Connect connector of oxygen sensor (s) and clamp wire harness securely.
- After installing oxygen sensor (s), start engine and check that no exhaust gas leakage exists.

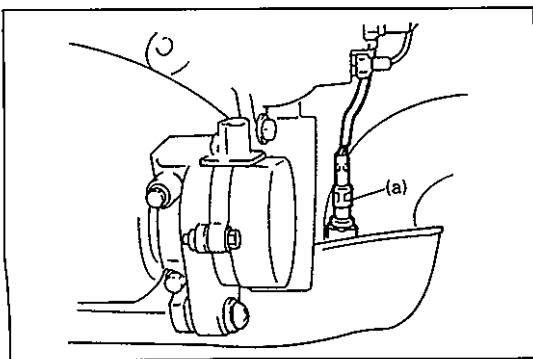

## **VEHICLE SPEED SENSOR (VSS)**

### **Inspection/Removal/Installation**

Refer to section 6E1.

## **CAMSHAFT POSITION SENSOR (CMP SENSOR)**

### **On-Vehicle Inspection**

Refer to flow table of "CMP Sensor Circuit Check" in "Diagnosis" section.

### **Removal/Installation**

Refer to section 6F2.

## **MAIN RELAY**

### **Inspection**

Refer to section 6E1.

## **FUEL PUMP RELAY**

### **Inspection**

Refer to section 6E1.

## **FUEL CUT OPERATION**

### **Inspection**


Refer to section 6E1.

## EMISSION CONTROL SYSTEM

### EGR SYSTEM (IF EQUIPPED)

#### System Inspection [Using SUZUKI scan tool (Tech 1)]

Refer to section 6E1.

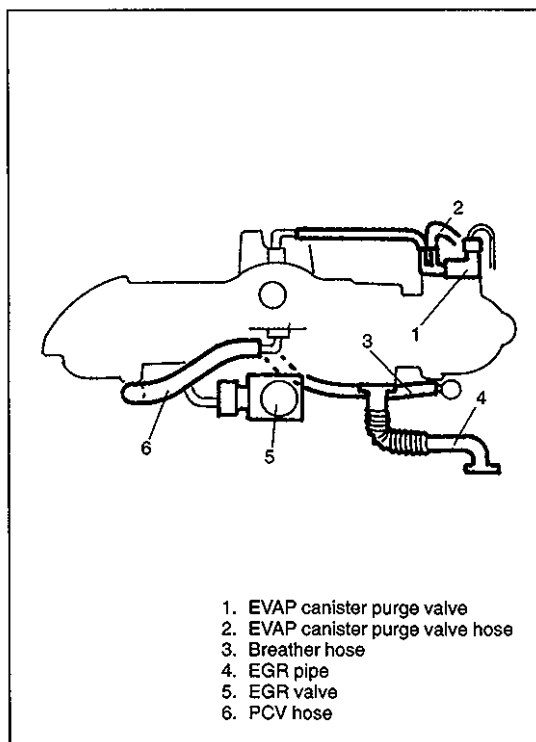

#### Removal

- 1) Disconnect negative cable at battery.
- 2) Disconnect EGR valve coupler.
- 3) Remove EGR valve and gasket from intake collector.

#### Installation

Reverse removal procedure noting following.


- Clean mating surface of valve and intake collector.
- Use new gasket.

## EVAPORATIVE EMISSION CONTROL SYSTEM

### EVAP Canister Purge Inspection

- 1) Warm up engine to normal operating temperature and keep idling 5 min. or more.
- 2) Disconnect purge hose from EVAP canister when engine is running at idle speed.
- 3) Place finger against the end of disconnected hose and check that vacuum is not felt but vibration is felt there when engine is running at idle speed.
- 4) Also check that vacuum is felt when engine speed is increased to higher than about 2,000 r/min.

If check result is not satisfactory, check vacuum passage, hoses, EVAP canister purge valve, wire harness and ECM (PCM).

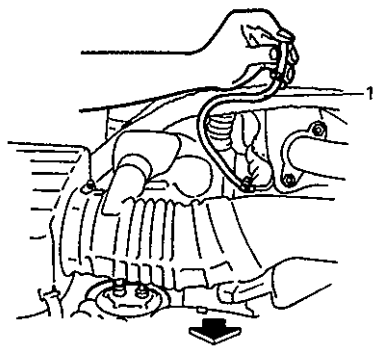

1. Purge hose

### EVAP Canister Purge Valve Inspection


### EVAP Canister Inspection

### Tank Pressure Control Valve Inspection

Refer to section 6E1.

## PCV SYSTEM

Refer to section 6E1.

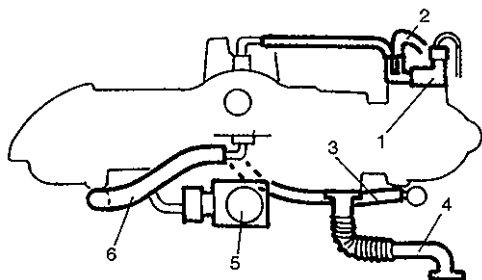


1. EVAP canister purge valve
2. EVAP canister purge valve hose
3. Breather hose
4. EGR pipe
5. EGR valve
6. PCV hose


## TIGHTENING TORQUE SPECIFICATIONS

Fastening parts	Tightening torque		
	N·m	kg-m	lb-ft
Heated oxygen sensor	45	4.5	32.5
Fuel pressure regulator bolts	10	1.0	7.5
Fuel pipe union bolts	30	3.0	22.0
Engine coolant temp. sensor	15	1.5	11.0


## SPECIAL TOOLS

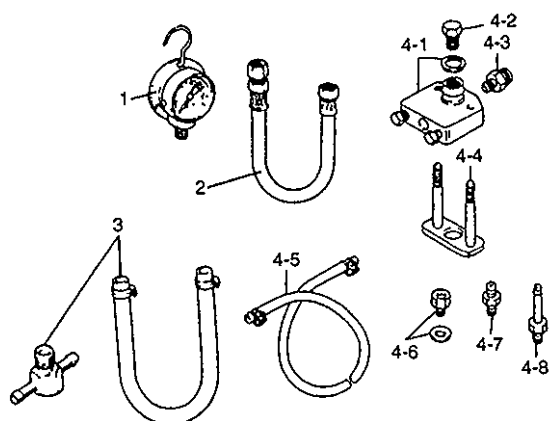


1. Pressure gauge  
09912-58441
2. Pressure hose  
09912-58431
3. 3-way joint & hose  
09912-58490
4. Checking tool set  
09912-58421
- 4-1. Tool body & washer
- 4-2. Body plug
- 4-3. Body attachment-1
- 4-4. Holder
- 4-5. Return hose & clamp
- 4-6. Body attachment-2 & washer
- 4-7. Hose attachment-1
- 4-8. Hose attachment-2

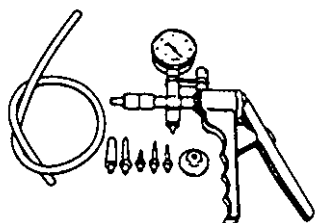


09917-47910  
Vacuum pump gauge

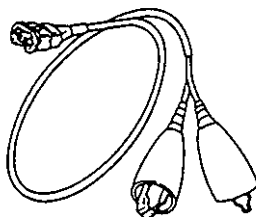


09930-88521  
Injector test lead

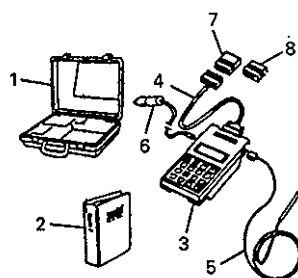

09931-76011  
Tech 1 (scan tool) kit

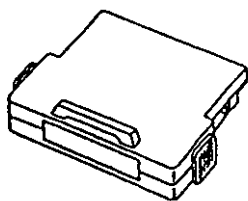

Mass storage cartridge

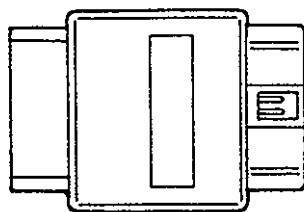

09931-96020  
16/12 pin DLC adaptor

## SECTION 6F1

# IGNITION SYSTEM (FOR G16 ENGINE)

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components and Wiring Location View" under "General Description" in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and "Service Precautions" under "On-Vehicle Service" in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the "LOCK" position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6F1- 2
System wiring .....	6F1- 2
Components .....	6F1- 3
<b>DIAGNOSIS</b> .....	6F1- 3
Diagnostic flow table .....	6F1- 4
Ignition spark check .....	6F1- 5
Ignition timing check and adjustment .....	6F1- 6
<b>ON-VEHICLE SERVICE</b> .....	6F1- 8
High-tension cord .....	6F1- 8
Ignition coil assembly (igniter and ignition coil) .....	6F1- 9
Spark plug .....	6F1-10
Ignition resistor .....	6F1-10
CMP sensor .....	6F1-11
Noise suppressor .....	6F1-11
<b>TIGHTENING TORQUE SPECIFICATION</b> .....	6F1-12
<b>SPECIAL TOOLS</b> .....	6F1-12



## GENERAL DESCRIPTION

The ignition system is a distributorless ignition system. Its consists of the parts as described below and has an electronic ignition system.

- ECM (or PCM)

It detects the engine condition through the signals from the sensors, determines the most suitable ignition timing and time for electricity to flow to the primary coil and sends a signal to the igniter (in ignition coil assembly).

- Ignition coil assembly (including an igniter and an ignition coil)

The ignition coil assembly has a built-in igniter and ignition coil which turns ON and OFF the primary current of the ignition coil according to the signal from ECM (or PCM). When the ignition coil primary current is turned OFF, a high voltage is induced in the secondary wiring.

- Ignition resistor

ECM (or PCM) uses this resistor to correct initial ignition timing. Therefore, fine adjustment of initial ignition timing is possible by replacing it.


- Spark plug , high-tension cord and noise suppressor

- CMP sensor, TP sensor, ECT sensor and MAP sensor

For their details, refer to SECTION 6E1.

Although this distributorless ignition system does not have a distributor, it has two ignition coil assemblies (one is for No.1 and No.4 spark plugs and the other is for No.2 and No.3 spark plugs). When an ignition signal is sent from ECM (or PCM) to the igniter in the ignition coil assembly for No.1 and No.4 spark plugs, a high voltage is induced in the secondary coil. Then, it is fed to No.1 spark plug through high-tension cords and to No.4 spark plug directly from ignition coil assembly to cause both of these plugs to spark simultaneously. Likewise, when an ignition signal is sent from ECM (or PCM) to the ignition coil assembly for No.2 and No.3 spark plugs, a high voltage is induced in the secondary coil. Then, it is fed to No.3 spark plug through high-tension cords and to No.2 spark plug directly from ignition coil assembly to cause both No.2 and No.3 spark plugs to spark simultaneously.


## SYSTEM WIRING

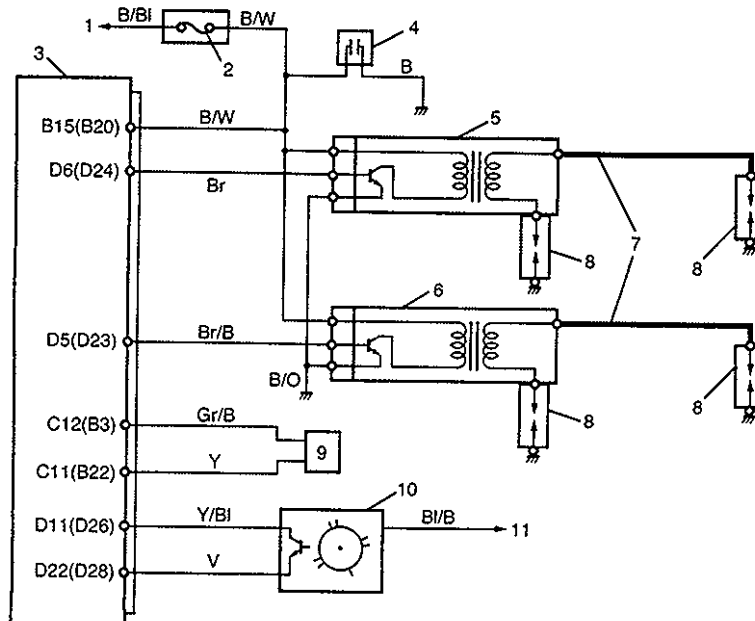

1. To ignition switch
2. "IG-COIL METER" fuse
3. ECM (or PCM)
4. Noise suppressor
5. Ignition coil assembly (igniter and ignition coil) for No.1 and No.4 cylinders
6. Ignition coil assembly (igniter and ignition coil) for No.2 and No.3 cylinders

7. High-tension cord
8. Spark plug
9. Ignition resistor
10. CMP sensor
11. To main relay

## COMPONENTS

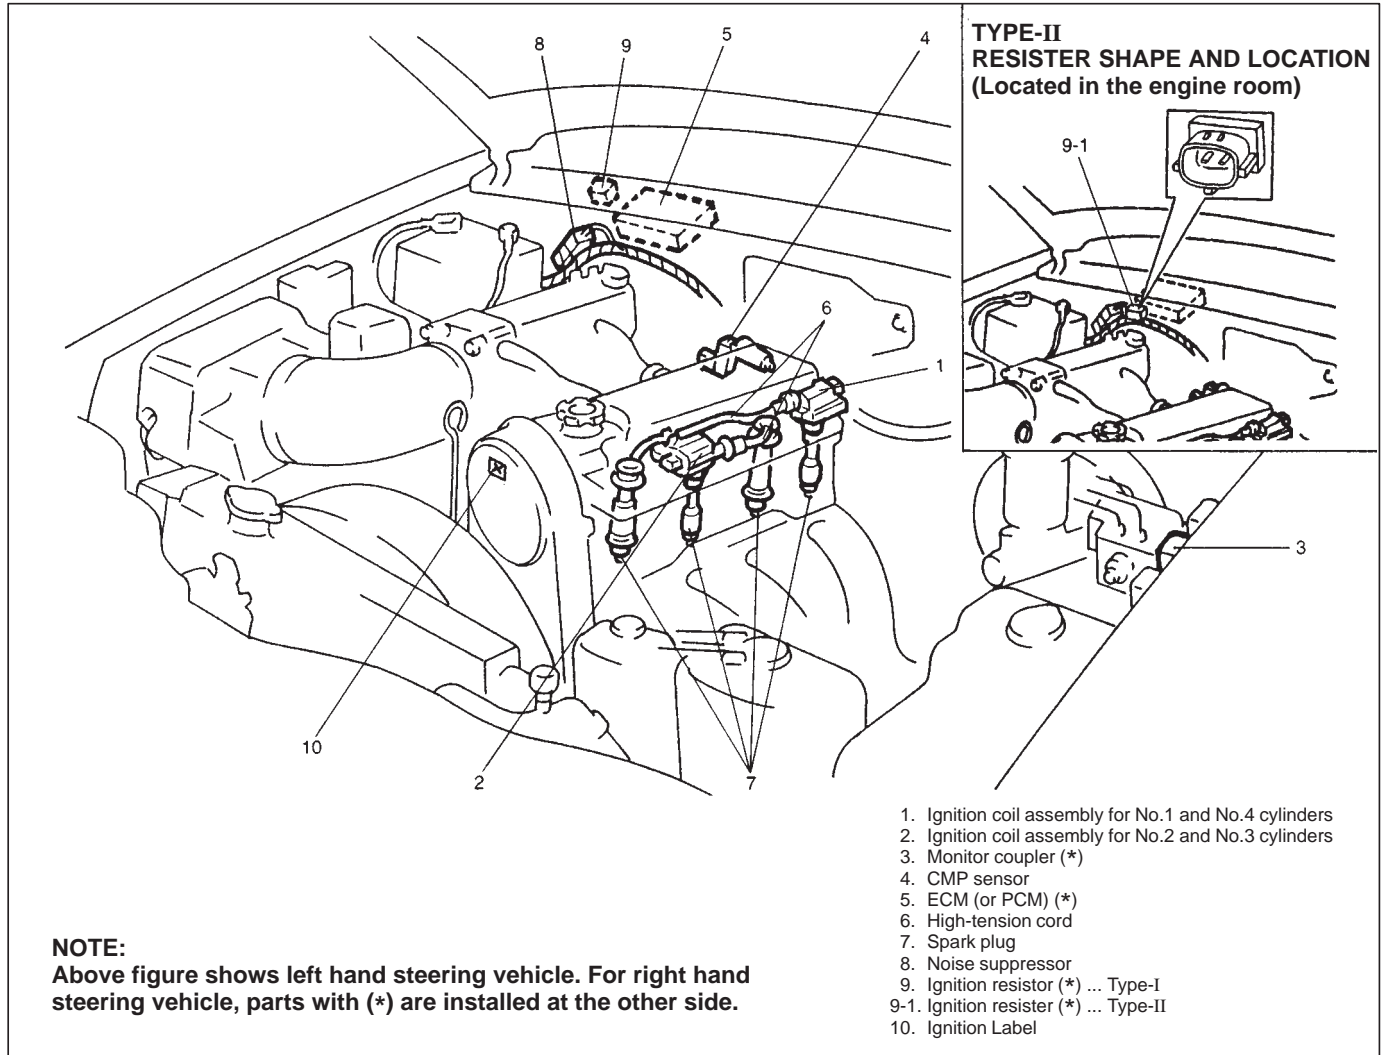


## DIAGNOSIS

Condition	Possible Cause	Correction
Engine cranks, but will not start or hard to start	<b>No spark</b> <ul style="list-style-type: none"> <li>● Blown fuse for ignition coil</li> <li>● Loose connection or disconnection of lead wire or high-tension cord(s)</li> <li>● Faulty high-tension cord(s)</li> <li>● Faulty spark plug(s)</li> <li>● Faulty ignition coil assembly (s)</li> <li>● Faulty CMP sensor</li> <li>● Faulty ECM (or PCM)</li> </ul>	Replace. Connect securely.  Replace. Adjust, clean or replace. Replace. Clean, tighten or replace. Replace.
Poor fuel economy or engine performance	<ul style="list-style-type: none"> <li>● Incorrect ignition timing</li> <li>● Faulty high-tension cord(s)</li> <li>● Faulty spark plug(s)</li> <li>● Faulty ignition coil assembly (s)</li> <li>● Faulty CMP sensor</li> <li>● Faulty ECM (or PCM)</li> </ul>	Adjust. Replace. Adjust, clean or replace. Replace. Clean, tighten or replace. Replace.

## DIAGNOSTIC FLOW TABLE

STEP	ACTION	YES	NO
1	Was "Engine Diagnostic Flow Table" in SECTION 6 performed ?	Go to Step 2.	Go to "Engine Diagnostic Flow Table" in SECTION 6.
2	Ignition Spark Test 1) Check all spark plug for condition and type, referring to "Spark Plug" in this section. 2) If OK, perform ignition spark test, referring to "Ignition Spark Check" in this section. Is spark emitted from all spark plugs?	Go to Step 11 on the next page.	Go to Step 3.
3	Diagnostic Trouble Code (DTC) Check 1) Check DTC stored in ECM (or PCM), referring to "Diagnostic Trouble Code (DTC) Check" in SECTION 6E1. Is DTC stored?	Go to applicable flow table corresponding to that code No. in SECTION 6E1.	Go to Step 4.
4	Electrical Connection Check 1) Check ignition coil assemblies for electrical connection. Are they connected securely?	Go to Step 5.	Connect securely.
5	High-tension Cord Check 1) Check high-tension cord for resistance, referring to "High-tension Cord" in this section. Is check result satisfactory?	Go to Step 6.	Replace high-tension cord(s).
6	Ignition Coil Assembly Power Supply And Ground Circuit Check 1) Check ignition coil assembly power supply ("B/O" wire) circuit for open and short. Are circuits in good condition?	Go to Step 7.	Repair or replace.
7	Ignition Coil Assembly Check 1) Check ignition coil assembly for resistance, referring to "Ignition Coil Assembly" in this section. Is check result satisfactory?	Go to Step 8.	Replace ignition coil assembly.
8	A Known-good Ignition Coil Assembly Substitution 1) Substitute a known-good ignition coil assembly and then repeat STEP 2. Is check result of STEP 2 satisfactory?	Replace ignition coil assembly.	Go to Step 9.
9	CMP Sensor Check 1) Check CMP sensor and signal rotor, referring to STEP 5 and 6 of "Diagnostic Flow Table Code 42" in SECTION 6E1. Is check result satisfactory?	Go to Step 10 on the next page.	Tighten CMP sensor bolt, replace CMP sensor.

STEP	ACTION	YES	NO
10	Ignition Trigger Signal Circuit Check 1) Check ignition trigger signal ("Br" and "Br/B" wire) circuit for open, short and poor connection. Are circuits in good condition?	Go to Step 11.	Repair or replace.
11	Ignition Timing Check 1) Check initial ignition timing and ignition timing advance, referring to "Ignition Timing Check And Adjustment" in this section. Is check result satisfactory?	Substitute a known-good ECM (or PCM) and then repeat STEP 2.	Go to Step 12.
12	Ignition Timing Adjustment And Recheck 1) Adjustment initial ignition timing and ignition timing advance, referring to "Ignition Timing Check And Adjustment" in this section. 2) Recheck initial ignition timing and ignition timing advance, referring to "Ignition Timing Check And Adjustment" in this section. Is check result satisfactory?	System is in good condition.	Repair or replace. Check CMP sensor, input signals related to ignition system and exhaust camshaft installation.

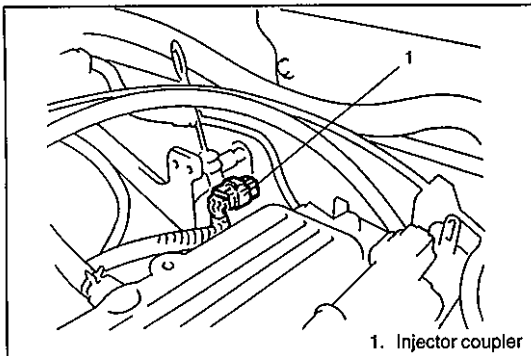

## IGNITION SPARK CHECK

- 1) Disconnect injector coupler.

### WARNING:

**Without disconnection of injector coupler, combustible gas may come out from spark plug holes during this test and may get ignited in engine room.**


- 2) Remove spark plug and check it for condition and type, referring to "Spark Plug" under "On-Vehicle Service" later in this section.
- 3) If OK, connect ignition coil coupler to ignition coil assembly and connect spark plug to ignition coil assembly or high-tension cord. Ground spark plug.
- 4) Crank engine and check if each spark plug sparks.  
If no spark is emitted, inspect the related parts as described under "Diagnosis" earlier in this section.
- 5) After checking, install spark plug and ignition coil, referring to "Spark Plug" and "Ignition Coil Assembly" under "On-Vehicle Service" later in this section.
- 6) Connect injector coupler.

## IGNITION TIMING CHECK AND ADJUSTMENT

### NOTE:

Before starting engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Make sure that all of electrical loads except ignition are switched off.

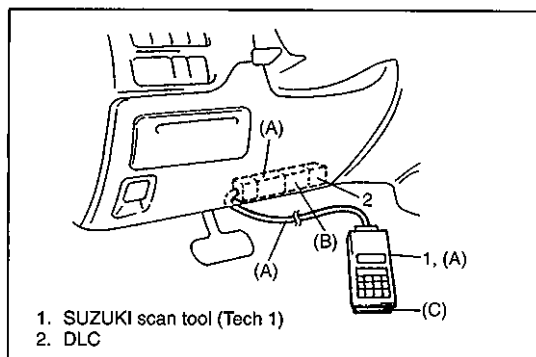

- 3) Check to be sure that idle speed is within specification. (Refer to SECTION 6E1.)
- 4) [Using SUZUKI scan tool (Tech 1)]  
Connect SUZUKI scan tool (Tech 1) to DLC with ignition switch OFF, restart engine and fix ignition timing by using fixed spark mode of SUZUKI scan tool (Tech 1).

### Special Tool


(A): 09931-76011 (Tech 1)

(B): 09931-96020 (16/12 pin DLC adapter)

(C): Mass storage cartridge

[Not using SUZUKI scan tool (Tech 1)]

- i) Remove monitor coupler cap.
- ii) Ground test switch terminal in monitor coupler by using service wire so that ignition timing is fixed on initial one.

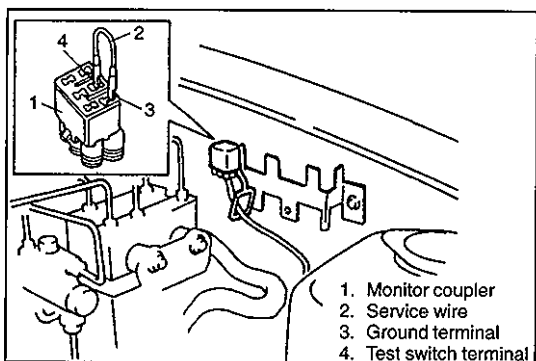

- 5) Set timing light to high-tension cord for No.1 cylinder.
- 6) Using timing light, check that timing is within specification.



### Initial ignition timing of viewpoint

(test switch terminal grounded):  $5 \pm 1^\circ$  BTDC


Ignition order: 1-3-4-2

### Special Tool

(A): 09930-76420

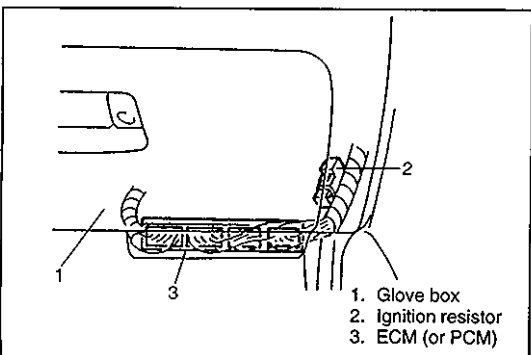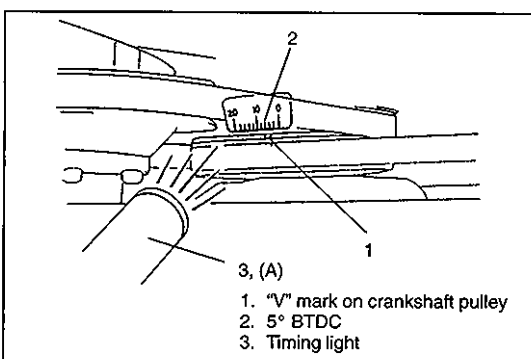

- 7) If ignition timing is out of specification, check resistance of ignition resistor, referring to "Ignition Resistor" under "On-Vehicle Service" later in this section.

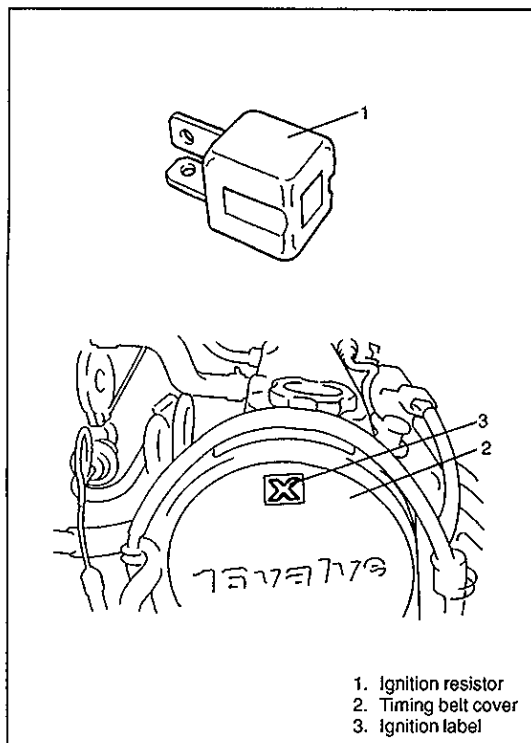

- 8) If check result is not satisfactory, change ignition resistor and recheck that initial ignition timing is within specification. For example, if the vehicle being serviced has an ignition resistor with an "X" or "N" mark, initial ignition timing can be changed by replacing it with the following ignition resistor.

Characters printed on the ignition resistor	1	2	3	4
Difference in advance degrees as compared with those of "X" or "N" (before replacement)	-5°	-4°	-3°	-2°

5	X or N	6	7	8	9	10	11
-1°	0°	1°	2°	3°	4°	5°	6°

**NOTE:**

If ignition resistor has been replaced, be sure to also replace ignition label attached to timing belt cover with the one that has the same symbol as that marked on ignition resistor.


- 9) [Using SUZUKI scan tool (Tech 1)]  
After checking and/or adjusting, end fixed spark mode of SUZUKI scan tool (Tech 1).  
[Not using SUZUKI scan tool (Tech 1)]  
After checking and/or adjusting, disconnect service wire from monitor coupler.

**CAUTION:**

Driving with test switch terminal grounded will cause damage to catalyst. Be sure to disconnect service wire after adjustment.

**NOTE:**

In this state, ignition timing may vary more or less of initial ignition timing but it is nothing abnormal.

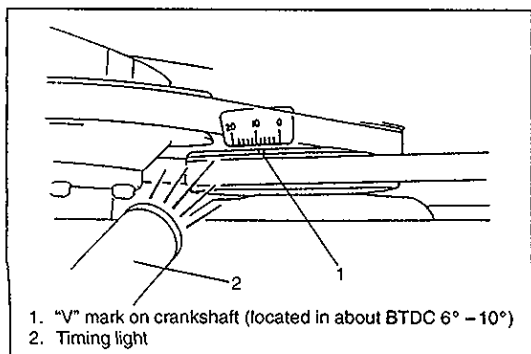

- 10) With engine idling (closed throttle position and vehicle stopped), check that ignition timing is about BTDC 6° - 10° (shown in the figure). Also, check that increasing engine speed advances ignition timing. If above check results are not satisfactory, check TP sensor, test switch terminal circuit and ECM (or PCM).

## ON-VEHICLE SERVICE


### HIGH-TENSION CORD

#### REMOVAL

- 1) Remove high-tension cord from ignition coil assembly while gripping its cap.
- 2) Pull out high-tension cord from spark plug while gripping its cap.

#### CAUTION:

- Removal of high-tension cords together with clamps will be recommended so as not to damage their inside wire (resistive conductor).
- For the same reason, pull out each connection by gripping cap portion.

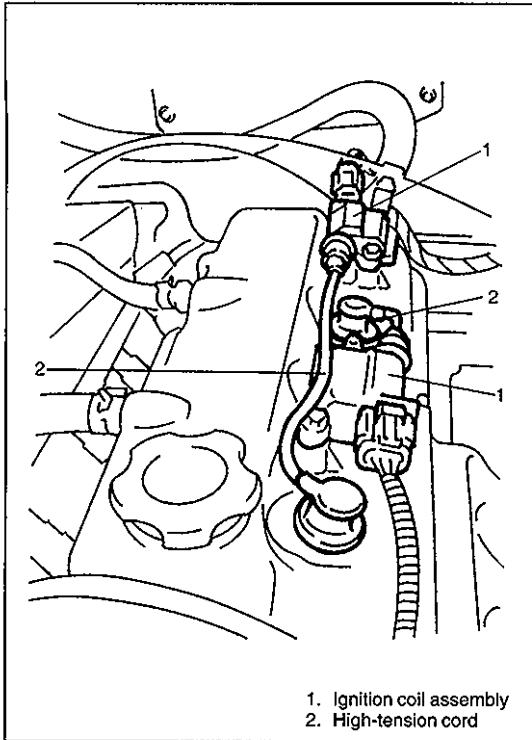


#### INSPECTION

Measure resistance of high-tension cord by using ohmmeter.

**High-tension cord resistance: 4 – 10 kΩ/m (1.2 – 3.0 kΩ/ft)**

If resistance exceeds specification, replace high-tension cord(s).

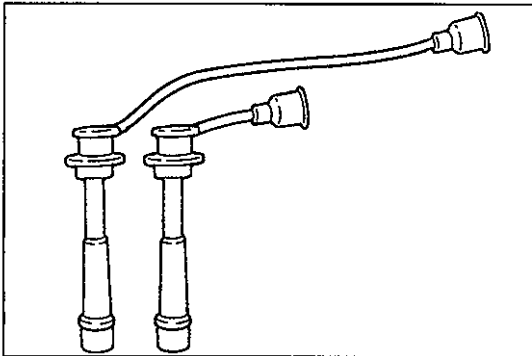



#### INSTALLATION

- 1) Install high-tension cord to spark plug and ignition coil assembly while gripping its cap.

#### CAUTION:

- Never attempt to use metal conductor high-tension cord(s) as replacing parts.
- Insert each cap portion fully when installing high-tension cords.

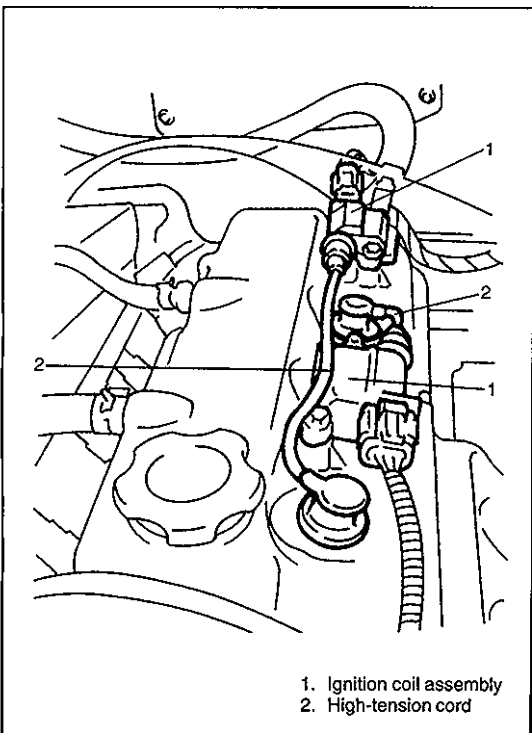

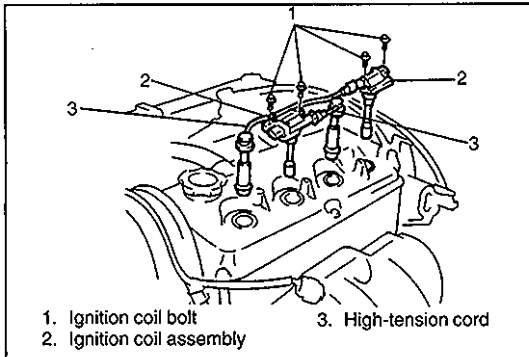

## IGNITION COIL ASSEMBLY (IGNITER AND IGNITION COIL)

### REMOVAL

- 1) Disconnect ignition coil coupler.
- 2) Disconnect high-tension cord from ignition coil assembly.
- 3) Remove ignition coil bolt, and then pull out ignition coil assembly.

### INSPECTION

Check resistance between terminals as follows by using analog type ohmmeter.


"a" – "b" : 7.5 – 14 k $\Omega$  (at 20°C, 68°F)

"B" – "G" : Neither 0  $\Omega$  or  $\infty$  (infinity)

"+" – "B" : Not 0  $\Omega$


"+" – "G" : Not 0  $\Omega$

If check result is not satisfactory, replace ignition coil assembly.

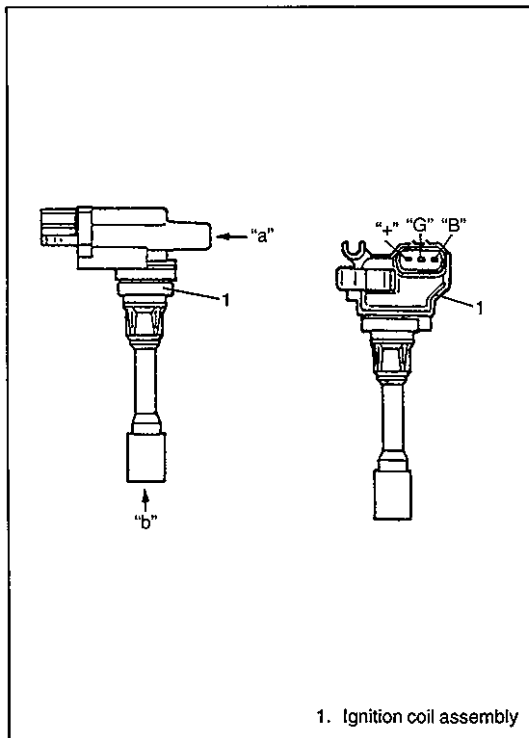


### INSTALLATION

- 1) Install ignition coil assembly.
- 2) Tighten ignition coil bolt, and then connect ignition coil coupler.
- 3) Install high-tension cord to ignition coil assembly while gripping its cap.

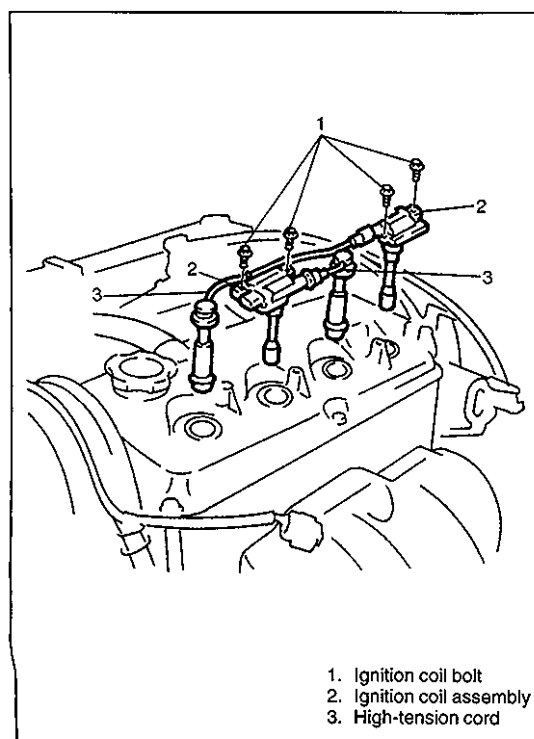



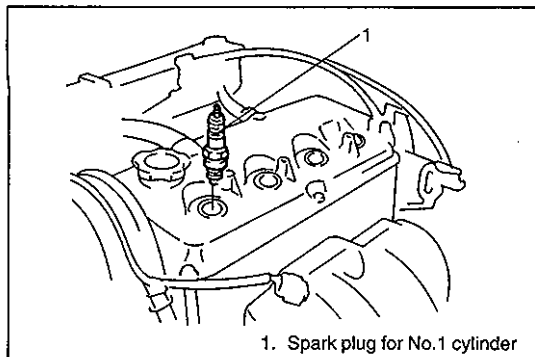

## SPARK PLUG

### REMOVAL

- 1) Pull out high-tension cord while gripping its cap.
- 2) Remove ignition coil assembly, referring to "Ignition Coil Assembly" under "On-Vehicle Service" earlier in this section.
- 3) Remove spark plug

### INSPECTION

Inspect them for:



- Electrode wear
- Carbon deposits
- Insulator damage

If any abnormality is found, adjust air gap, clean with spark plug cleaner or replace them with specified new plug.

**Spark plug air gap "a": 1.0 – 1.1 mm (0.039 – 0.043 in.)**

**Spark plug type: NGK BKR6E-11**

**DENSO K20PR-U11**

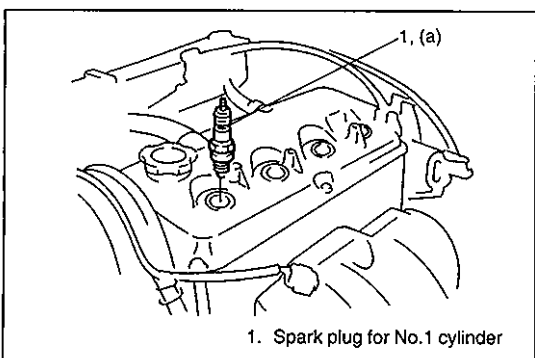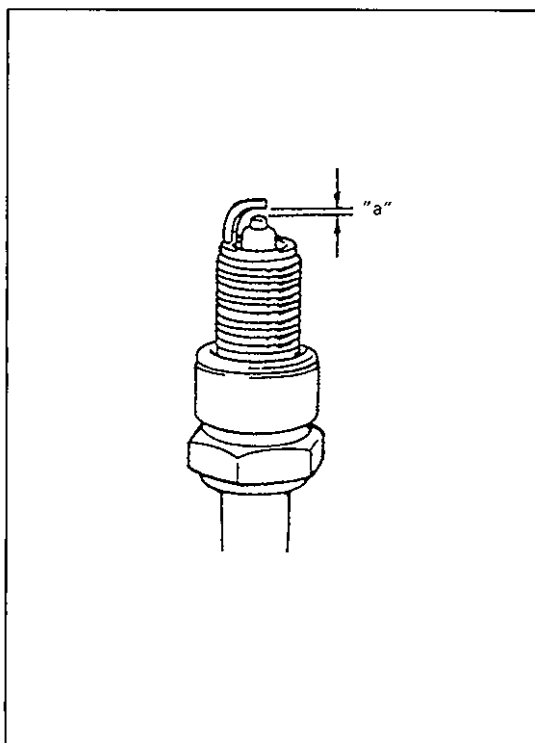

### INSTALLATION

- 1) Install spark plug and tighten them to specified torque.

#### Tightening Torque


**(a): 25 N·m (2.5 kg-m, 18.0 lb-ft)**


- 2) Install ignition coil assembly, referring to "Ignition Coil Assembly" under "On-Vehicle Service" earlier in this section.
- 3) Install high-tension cord while gripping its cap.

## IGNITION RESISTOR

### REMOVAL

- 1) With ignition switch OFF, remove ECM (or PCM), referring to "ECM (or PCM)" under "On-Vehicle Service" in SECTION 6E1.
- 2) Remove ignition resistor.

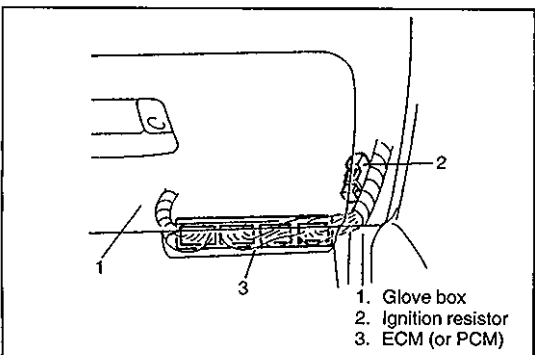

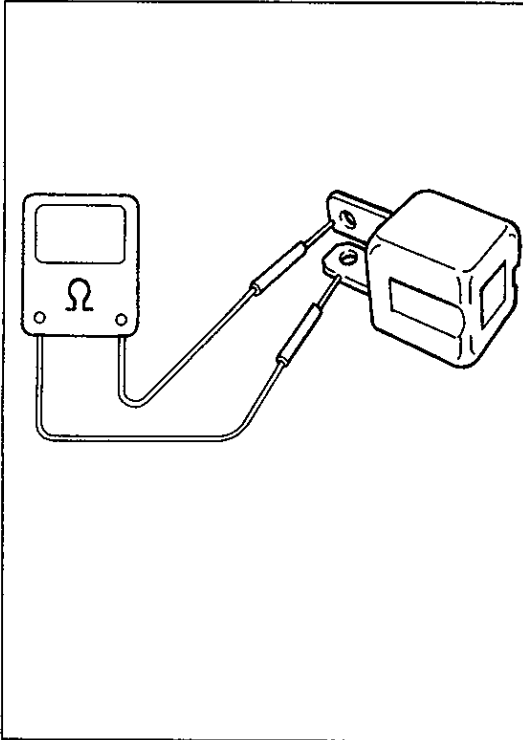

## INSPECTION

Measure resistance of ignition resistor by using ohmmeter.

### NOTE:


Depending on number marked on ignition resistor, resistor value varies as follows.

1:	0 Ω	6:	980 – 1020 Ω
2:	80 – 84 Ω	7:	1.35 – 1.53 kΩ
3:	157 – 163 Ω	8:	2.16 – 2.24 kΩ
4:	265 – 274 Ω	9:	3.53 – 3.67 kΩ
5:	421 – 439 Ω	10:	6.08 – 6.32 kΩ
X or N:	666 – 694 Ω	11:	11.8 – 12.2 kΩ

If check result is not satisfactory, replace ignition resistor.


## INSTALLATION

For installation, reverse removal procedure.

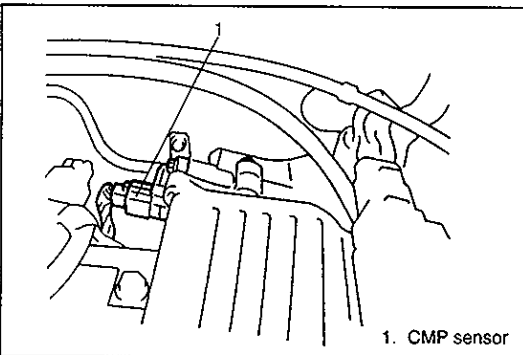

## CMP SENSOR


Refer to "CMP Sensor" under "On-Vehicle Service" in SECTION 6E1 for removal, inspection and installation.

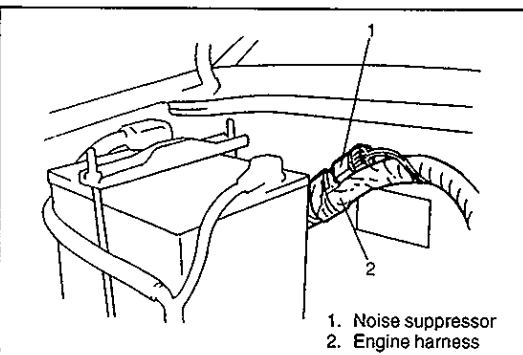

## NOISE SUPPRESSOR

### REMOVAL

- 1) Disconnect coupler of noise suppressor.
- 2) Remove noise suppressor.

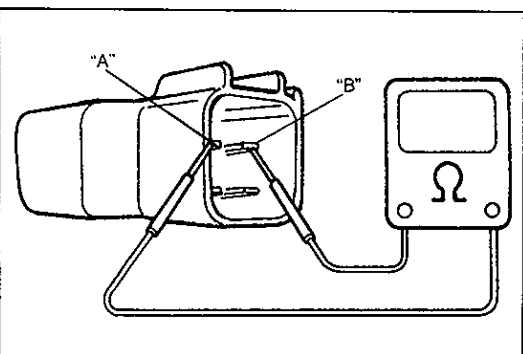

## INSPECTION

Using ohmmeter, check to be sure that capacitor (condenser) in noise suppressor is not conductive.

If check result is not satisfactory, replace noise suppressor.


## INSTALLATION

For installation, reverse removal procedure.


## TIGHTENING TORQUE SPECIFICATION

Fastening portion	Tightening torque		
	N·m	kg·m	lb·ft
Spark Plug	25	2.5	18.0

## SPECIAL TOOLS

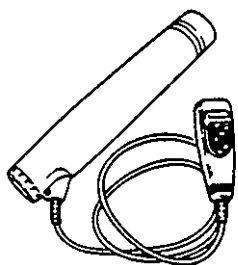


09930-76420  
Timing light (Dry cell type)

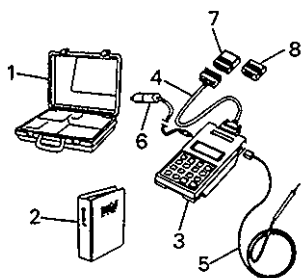


09931-76011  
Tech 1 (scan tool) kit

1. Storage case
2. Operator's manual
3. Tech 1A
4. DLC cable
5. Test lead/probe
6. Power source cable
7. DLC cable adapter
8. Self-test adapter

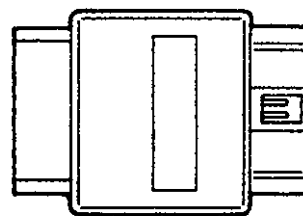

09931-96020  
16/12 pin DLC adapter

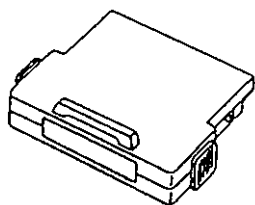

Mass storage cartridge

## SECTION 6F2

# IGNITION SYSTEM

## (FOR J20 AND H25 ENGINE)

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to “Air Bag System Components and Wiring Location View” under “General Description” in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and “Service Precautions” under “On-Vehicle Service” in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the “LOCK” position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6F2- 2
System wiring .....	6F2- 2
Components .....	6F2- 3
<b>DIAGNOSIS</b> .....	6F2- 4
Diagnostic flow table .....	6F2- 4
Ignition spark check .....	6F2- 5
Ignition timing check and adjustment .....	6F2- 6
<b>ON-VEHICLE SERVICE</b> .....	6F2- 9
Ignition coil assembly (igniter and ignition coil) .....	6F2- 9
Spark plug .....	6F2- 9
CMP sensor .....	6F2-10
Noise suppressor .....	6F2-12
<b>TIGHTENING TORQUE SPECIFICATIONS</b> .....	6F2-13
<b>SPECIAL TOOLS</b> .....	6F2-13

## GENERAL DESCRIPTION

The ignition system is a direct ignition system. It consists of the parts as described below and has an electronic ignition control system.

- ECM (or PCM)

It detects the engine condition through the signals from the sensors, determines the most suitable ignition timing and time for electricity to flow to the primary coil and sends a signal to the igniter (in ignition coil assembly).

- Ignition coil assembly (including an igniter and an ignition coil)

The ignition coil assembly has a built-in igniter and ignition coil which turns ON and OFF the primary current of the ignition coil according to the signal from ECM (or PCM). When the ignition coil primary current is turned OFF, a high voltage is induced in the secondary wiring. One ignition coil is in charge of ignition of one cylinder only.

- Spark plug and noise suppressor


- CMP sensor, TP sensor, ECT sensor and MAF sensor

For their details, refer to SECTION 6E1 (For J20 engine) or 6E2 (For H25 engine).


This ignition system does not have a distributor and high-tension cords but each cylinder has an ignition coil assembly (igniter and ignition coil) and the secondary voltage which occurred in the ignition coil is sent to the spark plug directly. Also, the signal(s) are sent from the CMP sensor to ECM (or PCM) so as to control each ignition coil independently through the igniter (in ignition coil assembly).

## SYSTEM WIRING

For J20 engine

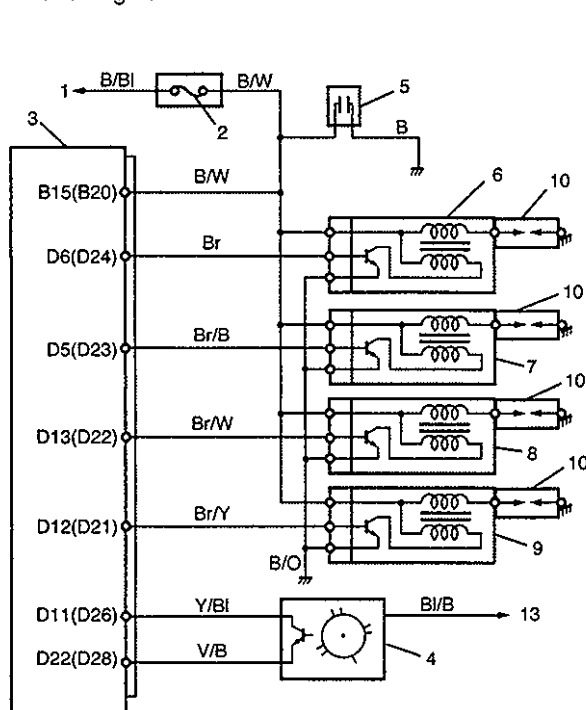

For H25 engine

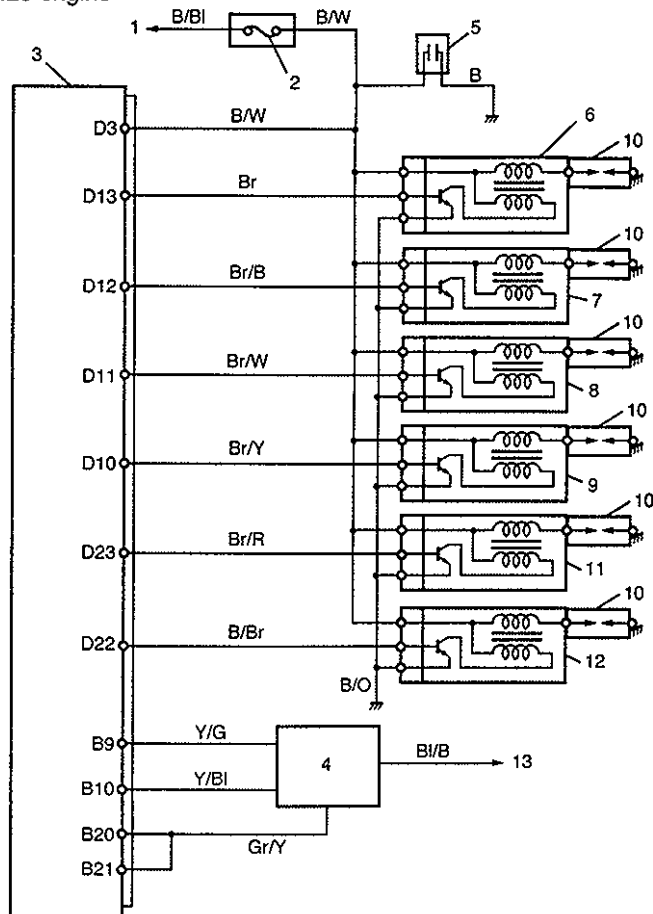

**NOTE:**

For terminal numbers in above wiring diagram, refer to SECTION 6E1 in the case of J20 type engine and SECTION 6E2 in the case of H25 type engine.


1. To ignition switch
2. "IG-COIL METER" fuse
3. ECM (or PCM)
4. CMP sensor
5. Noise suppressor

6. Ignition coil assembly (For No.1 cylinder)
7. Ignition coil assembly (For No.2 cylinder)
8. Ignition coil assembly (For No.3 cylinder)
9. Ignition coil assembly (For No.4 cylinder)
10. Spark plug


11. Ignition coil assembly (For No.5 cylinder)
12. Ignition coil assembly (For No.6 cylinder)
13. To main relay

# COMPONENTS

For J20 engine

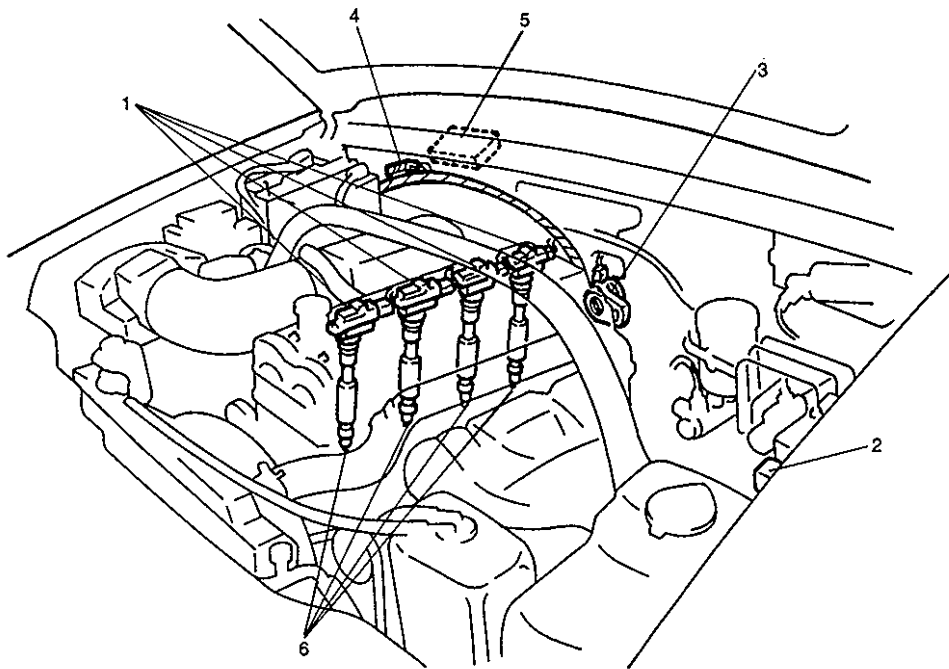

For H25 engine

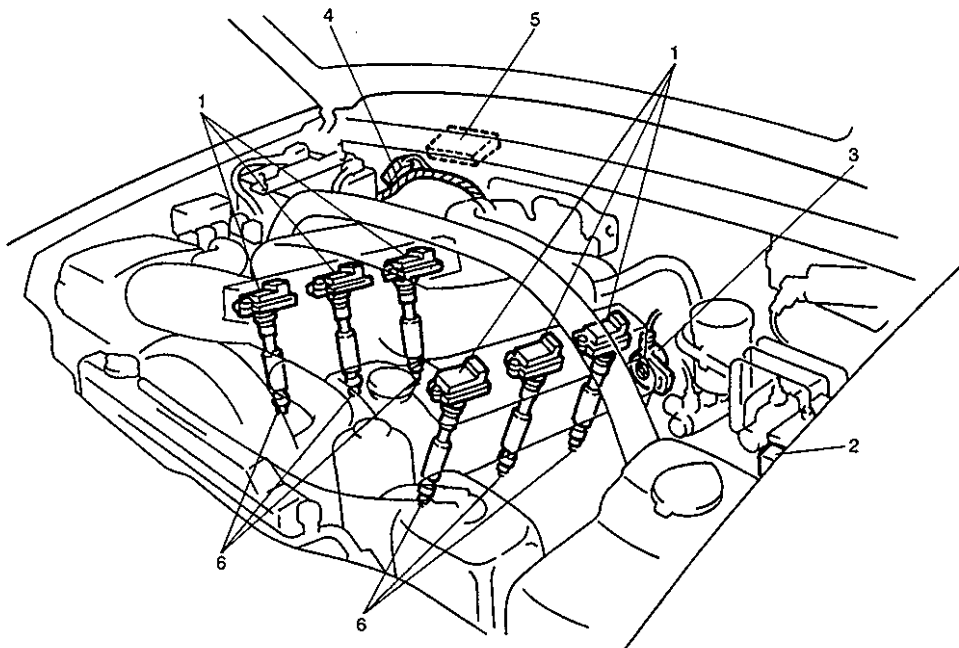

**NOTE:**

Above figure shows left hand steering vehicle.  
For right hand steering vehicle, parts with (\*) are  
installed at the other side.

1. Ignition coil assembly (igniter and ignition coil)
2. Monitor coupler (\*)
3. CMP sensor
4. Noise suppressor
5. ECM (or PCM) (\*)
6. Spark plug

## DIAGNOSIS


Condition	Possible Cause	Correction
<b>Engine cranks, but will not start or hard to start</b>	<b>No spark</b> <ul style="list-style-type: none"> <li>● Blown fuse for ignition coil assembly</li> <li>● Loose connection or disconnection of or lead wire</li> <li>● Faulty spark plug(s)</li> <li>● Faulty ignition coil assembly (s)</li> <li>● Faulty CMP sensor</li> <li>● Faulty ECM (or PCM)</li> <li>● Maladjusted ignition timing</li> </ul>	Replace Connect securely  Adjust, clean or replace Replace Replace Replace Adjust
<b>Poor fuel economy or engine performance</b>	<ul style="list-style-type: none"> <li>● Incorrect ignition timing</li> <li>● Faulty spark plug(s)</li> <li>● Faulty ignition coil assembly (s)</li> <li>● Faulty CMP sensor</li> <li>● Faulty ECM (or PCM)</li> </ul>	Adjust Adjust, clean or replace Replace Replace Replace

## DIAGNOSTIC FLOW TABLE


STEP	ACTION	YES	NO
1	Was "Engine Diagnostic Flow Table" in SECTION 6 performed?	Go to Step 2.	Go to "Engine Diagnostic Flow Table" in SECTION 6.
2	Ignition Spark Test 1) Check all spark plug for condition and type, referring to "Spark Plug" in this section. 2) If OK, perform ignition spark test, referring to "Ignition Spark Check" in this section. Is spark emitted from all spark plugs?	Go to Step 9 on the next page.	Go to Step 3.
3	Diagnostic Trouble Code (DTC) Check 1) Check DTC stored in ECM (or PCM), referring to "Diagnostic Trouble Code (DTC) Check" in SECTION 6E1 or 6E2. Is DTC stored?	Go to applicable flow table corresponding to that code No. in SECTION 6E1 or 6E2.	Go to Step 4.
4	Electrical Connection Check 1) Check ignition coil assemblies for electrical connection. Are they connected securely?	Go to Step 5.	Connect securely.
5	Ignition Coil Assembly Power Supply And Ground Circuit Check 1) Check ignition coil assembly power supply ("B/W" wire) circuit for open and short. Are circuits in good condition?	Go to Step 6 on the next page.	Repair or replace.

STEP	ACTION	YES	NO
6	A Known-good Ignition Coil Assembly Substitution 1) Substitute a known-good ignition coil assembly and then repeat Step 2. Is check result of Step 2 satisfactory?	Replace ignition coil assembly.	Go to Step 7.
7	CMP Sensor Check 1) Check CMP sensor. For J20 engine Refer to Step 5 and 6 of "Diagnostic Flow Table Code 42" in SECTION 6E1. For H25 engine Refer to Step 2 and 3 of "Diagnostic Flow Table Code 42" in SECTION 6E2. Is check result satisfactory?	Go to Step 8.	Tighten CMP sensor bolt, replace CMP sensor.
8	Ignition Trigger Signal Circuit Check 1) Check ignition trigger signal ("Br", "Br/B", "Br/Y", "Br/W", ("Br/R") and ("B/Br") wires) circuits for open, short and poor connection. Are circuits in good condition?	Substitute a known-good ECM (or PCM) and then repeat Step 2 on the previous page.	Repair or replace.
9	Ignition Timing Check 1) Check initial ignition timing and ignition timing advance, referring to "Ignition Timing Check And Adjustment" in this section. Is check result satisfactory?	System is in good condition.	Check CMP sensor, input signals related to ignition system and (LH bank) exhaust camshaft installation.

For J20 engine

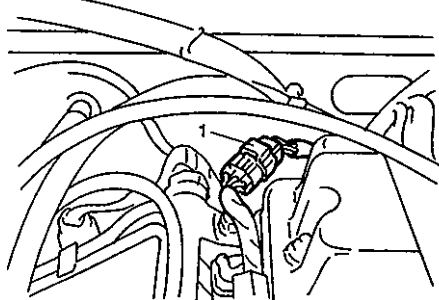

For H25 engine

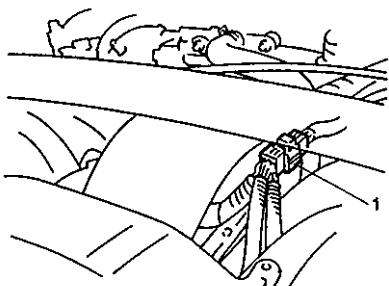

1. Injector coupler

## IGNITION SPARK CHECK


- 1) For H25 engine, remove surge tank cover.
- 2) Disconnect injector coupler.

### WARNING:


Without disconnection of injector coupler, combustible gas may come out from spark plug holes during this test and may get ignited in engine room.



For J20 engine

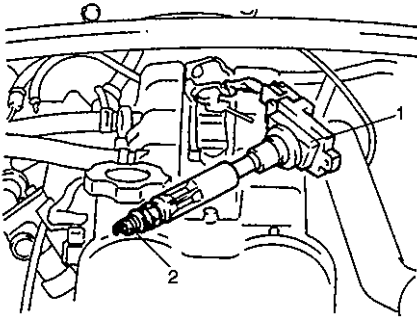

For H25 engine

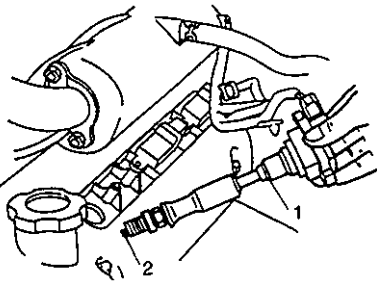
1. Ignition coil assembly  
2. Spark plug


- 3) Remove spark plug and check it for condition and type, referring to "Spark Plug" under "On-Vehicle Service" later in this section.
- 4) If OK, connect ignition coil coupler to ignition coil assembly and connect spark plug to ignition coil assembly. Ground spark plug.
- 5) Crank engine and check if each spark plug sparks.  
If no spark is emitted, inspect the related parts as described under "Diagnosis" earlier in this section.
- 6) After checking, install spark plug, referring to "Spark Plug" under "On-Vehicle Service" later in this section.
- 7) Connect injector coupler.
- 8) For H25 engine, install surge tank cover.

## IGNITION TIMING CHECK AND ADJUSTMENT

### NOTE:

Before starting engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake.


- 1) Start engine and warm it up to normal operating temperature.
- 2) Make sure that all of electrical loads except ignition are switched off.
- 3) Check to be sure that idle speed is within specification.  
Refer to SECTION 6E1 (for J20 engine) or 6E2 (for H25 engine).

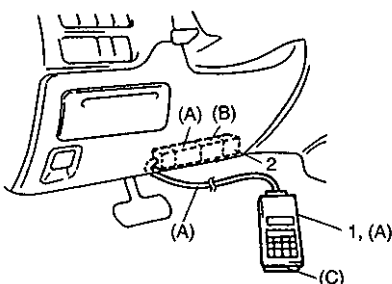
1. SUZUKI scan tool (Tech 1)  
2. DLC

- 4) [Using SUZUKI scan tool (Tech 1)]  
Connect SUZUKI scan tool (Tech 1) to DLC with ignition switch OFF, restart engine and fix ignition timing by using fixed spark mode of SUZUKI scan tool (Tech 1).


### Special Tool

- (A): 09931-76011 (Tech 1)  
(B): 09931-96020 (16/12 pin DLC adapter)  
(C): Mass storage cartridge

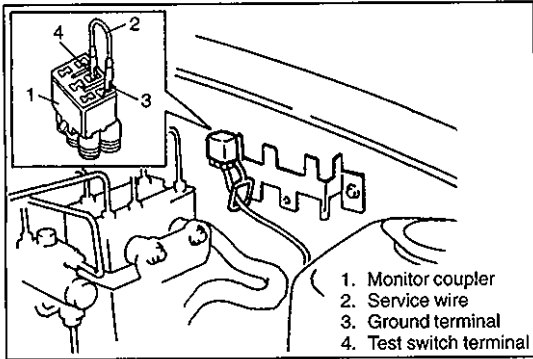

[Not using SUZUKI scan tool (Tech 1)]

- i) Remove monitor coupler cap.
- ii) Ground test switch terminal in monitor coupler by using service wire so that ignition timing is fixed on initial one.

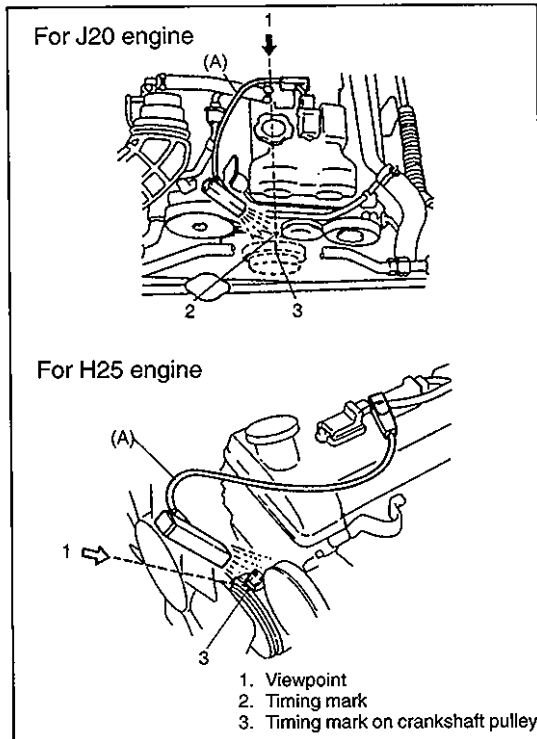

- 5) Set timing light to ignition harness for No.1 cylinder.
- 6) Using timing light, check that timing observed from viewpoint is within specification.

#### Initial ignition timing of viewpoint

(test switch terminal grounded):  $5 \pm 1^\circ$  BTDC

For J20 engine


Ignition order: 1-3-4-2

For H25 engine

Ignition order: 1-6-5-4-3-2

#### Special Tool

(A): 09930-76420

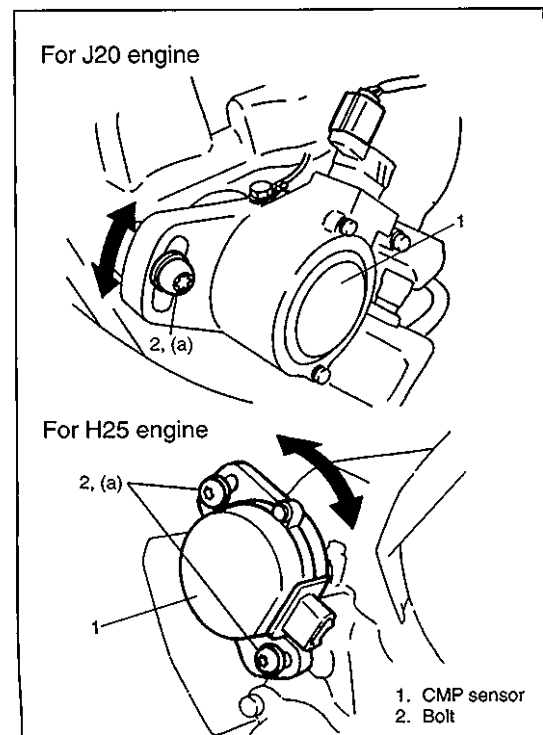

- 7) If ignition timing is out of specification, loosen flange bolt(s), adjust timing by turning CMP sensor while engine is running, and then tighten bolt(s).

#### Tightening Torque

(a): 15 N·m (1.5 kg-m, 11.0 lb-ft)

- 8) After tightening bolt(s), recheck that ignition timing is within specification.

## 9) [Using SUZUKI scan tool (Tech 1)]

After checking and/or adjusting, end fixed spark mode of SUZUKI scan tool (Tech 1).

[Not using SUZUKI scan tool (Tech 1)]


After checking and/or adjusting, disconnect service wire from monitor coupler.

**CAUTION:**

Driving with test switch terminal grounded will cause damage to catalyst. Be sure to disconnect service wire after adjustment.

**NOTE:**


In this state, ignition timing may vary more or less of initial ignition timing but it is nothing abnormal.

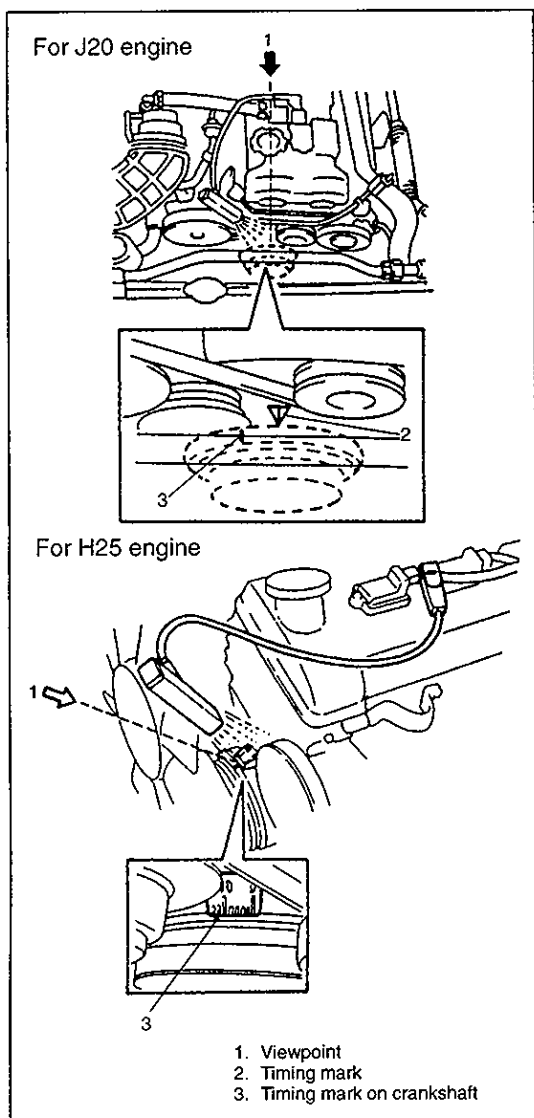


- 10) With engine idling (throttle valve closed and vehicle stopped), check that ignition timing is about BTDC  $12^{\circ}$  –  $16^{\circ}$  for J20 engine or BTDC  $11^{\circ}$  –  $15^{\circ}$  for H25 engine (shown in the figure). Also, check that increasing engine speed advances ignition timing.

If above check results are not satisfactory, check TP sensor, test switch terminal circuit and ECM (or PCM).

For J20 engine

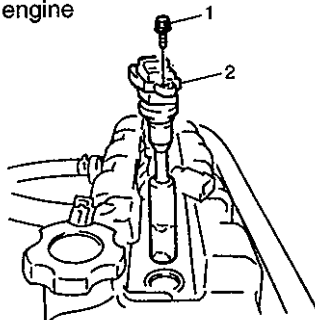

For H25 engine

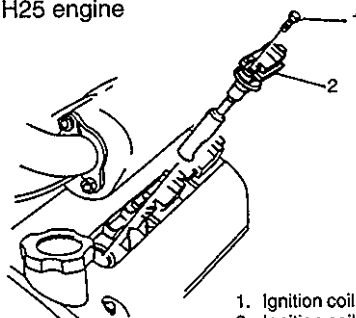

1. Ignition coil bolt
2. Ignition coil assembly

## ON-VEHICLE SERVICE

### IGNITION COIL ASSEMBLY (IGNITER AND IGNITION COIL)


#### REMOVAL

- 1) For H25 engine, remove ignition coil cover.
- 2) Disconnect ignition coil coupler.
- 3) Remove ignition coil bolt, and then pull out ignition coil assembly.


#### INSTALLATION

Install in reverse order of removal.

For J20 engine

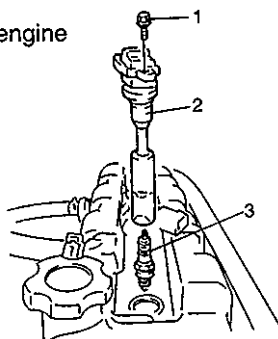

For H25 engine

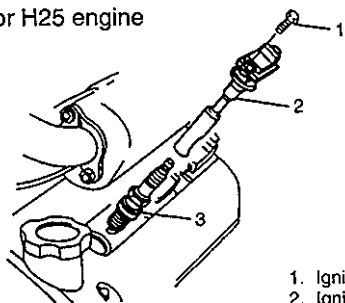

1. Ignition coil bolt
2. Ignition coil
3. Spark plug

### SPARK PLUG

#### REMOVAL

- 1) For H25 engine, remove ignition coil cover.
- 2) Disconnect ignition coil coupler.
- 3) Remove ignition coil bolt, and then pull out ignition coil assembly.
- 4) Remove spark plug.


#### INSPECTION

Inspect them for electrode wear, carbon deposits and Insulator damage.


If any abnormality is found, adjust air gap, clean with spark plug cleaner or replace them with specified new plug.

Spark plug type: NGK BKR6E-11  
DENSO K20PR-U11


Spark plug air gap "a": 1.0 – 1.1 mm (0.039 – 0.043 in.)

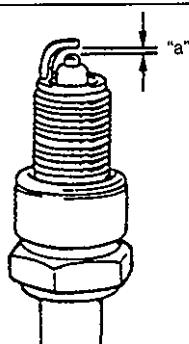

For J20 engine

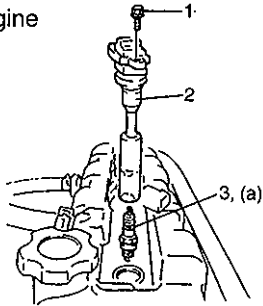

For H25 engine

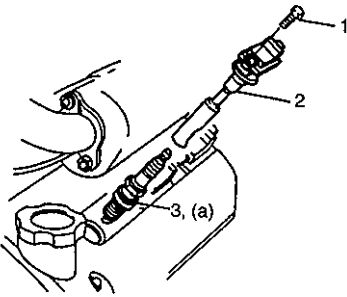

- 1. Ignition coil bolt
- 2. Ignition coil assembly
- 3. Spark plug

## INSTALLATION


1) Install spark plug and tighten them to specified torque.

### Tightening Torque


(a): 25 N·m (2.5 kg-m, 18.0 lb-ft)

- 2) Install ignition coil assembly securely.
- 3) Tighten ignition coil bolt, and then connect ignition coil coupler.
- 4) For H25 engine, install ignition coil cover.

For J20 engine

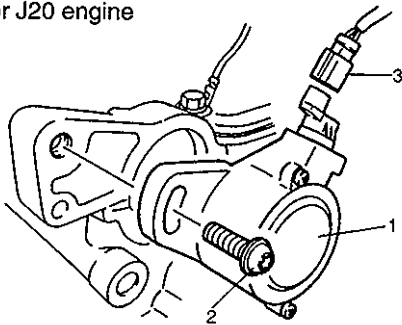

For H25 engine

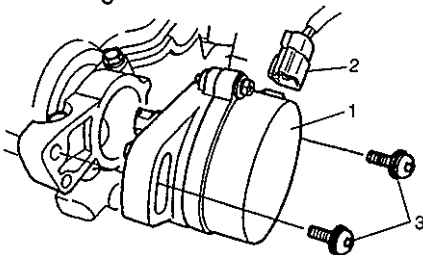

- 1. CMP sensor
- 2. CMP sensor coupler
- 3. Bolt

## CMP SENSOR

### CAUTION:

Disassembly is prohibited. If anything faulty is found, replace as an assembly unit.

## REMOVAL


- 1) Disconnect CMP sensor coupler.
- 2) Remove CMP sensor by removing bolt(s).

## INSTALLATION

### NOTE:

After installing CMP sensor, adjust ignition timing. (Refer to "Ignition Timing Check And Adjustment" in this section).


- 1) Install a new O-ring with engine oil applied to CMP sensor.

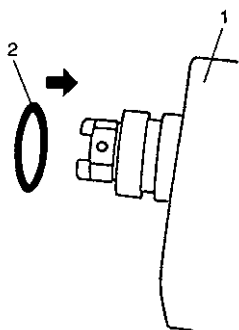

- 1. CMP sensor
- 2. O-ring

2) Install CMP sensor to camshaft.

Fit the dog of CMP sensor coupling into the slots of camshaft, when installing. The dogs of CMP sensor coupling are offset. Therefore, if the dogs can not be fitted into the slots, turn the CMP sensor shaft by 180 degree and try again.

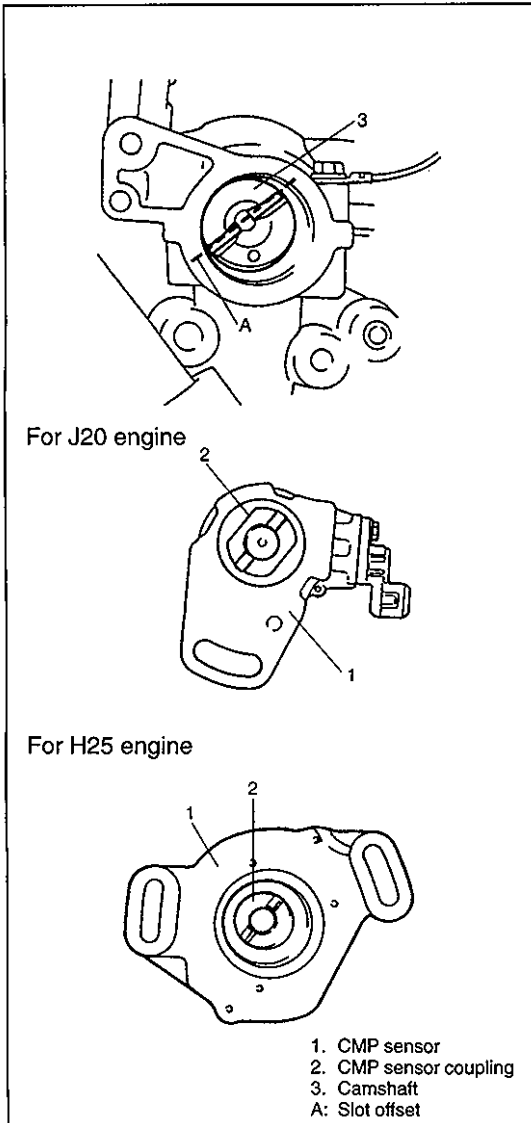


3) Tighten CMP sensor bolts.


**Tightening Torque**

**(a): 15 N·m (1.5 kg-m, 11.0 lb-ft)**


4) Connect CMP sensor coupler.

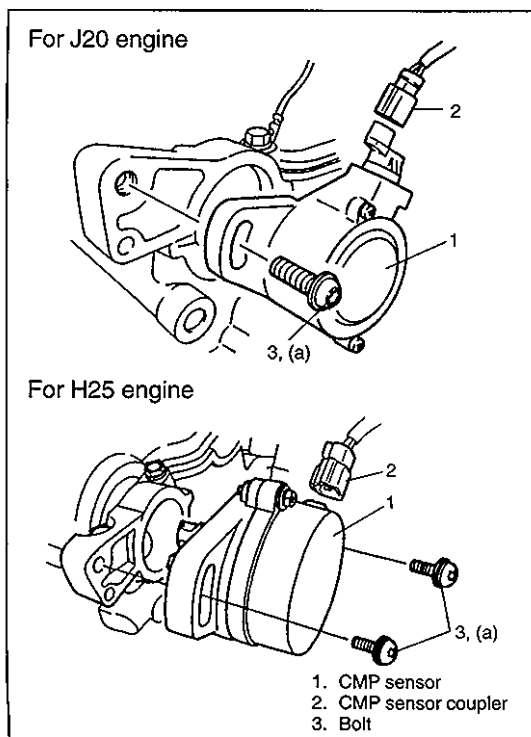

For J20 engine

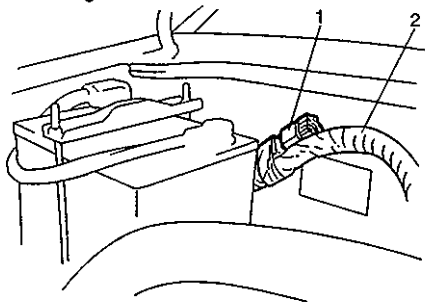

For H25 engine

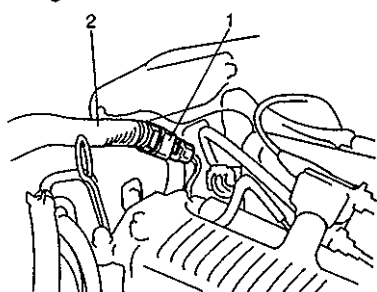

- 1. Noise suppressor
- 2. Engine harness

## NOISE SUPPRESSOR


### REMOVAL

- 1) Disconnect coupler of noise suppressor.
- 2) Remove noise suppressor.

### INSPECTION

Using ohmmeter, check to be sure that capacitor (condenser) in noise suppressor is not conductive.

If check result is not satisfactory, replace noise suppressor.

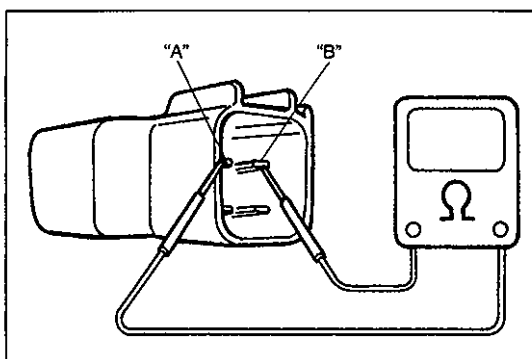





### INSTALLATION

For installation, reverse removal procedure.

## TIGHTENING TORQUE SPECIFICATIONS

Fastening portion	Tightening Torque		
	N·m	kg-m	lb-ft
Spark Plug	25	2.5	18.0
CMP sensor bolt	15	1.5	11.0

## SPECIAL TOOLS

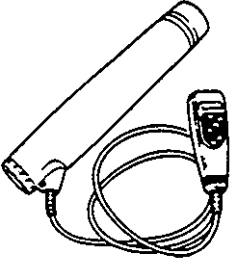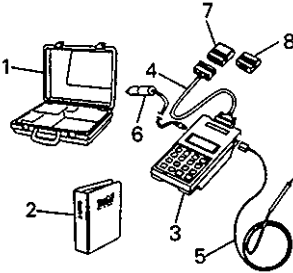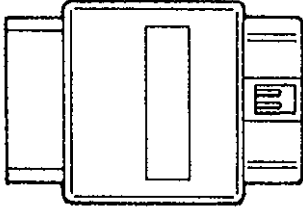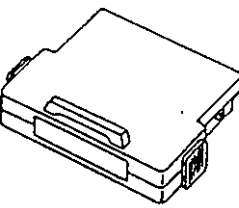 <p>09930-76420 Timing light (Dry cell type)</p>	 <ol style="list-style-type: none"> <li>1. Storage case</li> <li>2. Operator's manual</li> <li>3. Tech 1A</li> <li>4. DLC cable</li> <li>5. Test lead/probe</li> <li>6. Power source cable</li> <li>7. DLC cable adapter</li> <li>8. Self-test adapter</li> </ol> <p>09931-76011 Tech 1 (scan tool) kit</p>	 <p>09931-96020 16/12 pin DLC adapter</p>
 <p>Mass storage cartridge</p>		



## SECTION 6G

## CRANKING SYSTEM

(0.9 kW and 1.2 kW Reduction Type)

**NOTE:**

Starting motor vary depending on specifications, etc.

Therefore, be sure to check model and specification of the vehicle being serviced before replacing parts.

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6G- 2
Cranking Circuit .....	6G- 2
Starting Motor Circuit .....	6G- 2
Starting Motor .....	6G- 3
<b>DIAGNOSIS</b> .....	6G- 4
<b>UNIT REPAIR OVERHAUL</b> .....	6G- 6
Dismounting and Remounting .....	6G- 6
Disassembly .....	6G- 6
Reassembly .....	6G-10
Inspection .....	6G-12
Performance Test .....	6G-16
Pull-in test .....	6G-16
Hold-in test .....	6G-16
Plunger and pinion return test .....	6G-16
No-load performance test .....	6G-16
<b>SPECIFICATIONS</b> .....	6G-17
<b>REQUIRED SERVICE MATERIAL</b> .....	6G-18
<b>SPECIAL TOOL</b> .....	6G-18

## GENERAL DESCRIPTION


### CRANKING CIRCUIT

The cranking circuit consists of the battery, starting motor, ignition switch, and related electrical wiring. These components are connected electrically.

Only the starting motor will be covered in this section.

### STARTING MOTOR CIRCUIT

- The magnetic switch coils are magnetized when the ignition switch is closed.
- The resulting plunger and pinion drive lever movement causes the pinion to engage the engine flywheel gear and the magnetic switch main contacts to close, and cranking takes place.
- When the engine starts, the pinion over-running clutch protects the armature from excessive speed until the switch is opened, at which time the return spring causes the pinion to disengage.

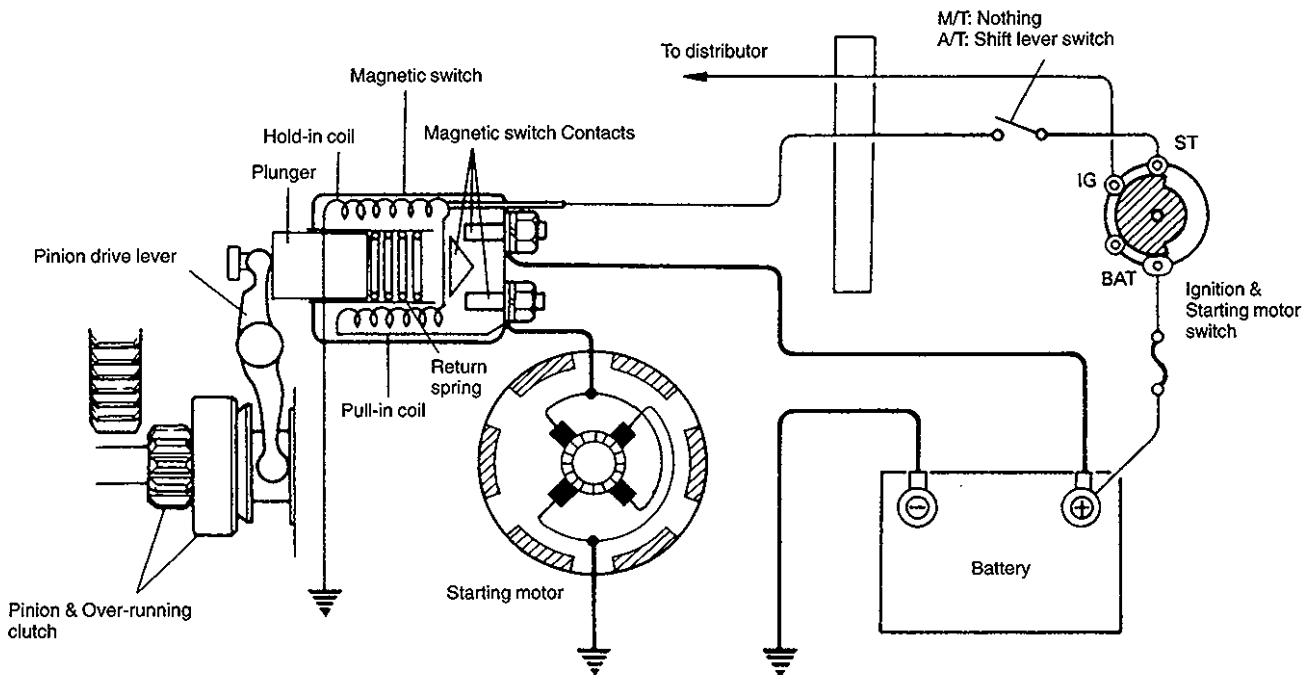


## STARTING MOTOR

The starting motor consists of parts shown in below and has permanent magnets mounted in starting motor yoke (frame).

The magnetic switch assembly and parts in the starting motor are enclosed in the housings so that they will be protected against possible dirt and water splash.

### NOTE:

- Make sure to apply grease before assembly where so indicated "A" in the figure below.
- Spare parts have been lubricated.

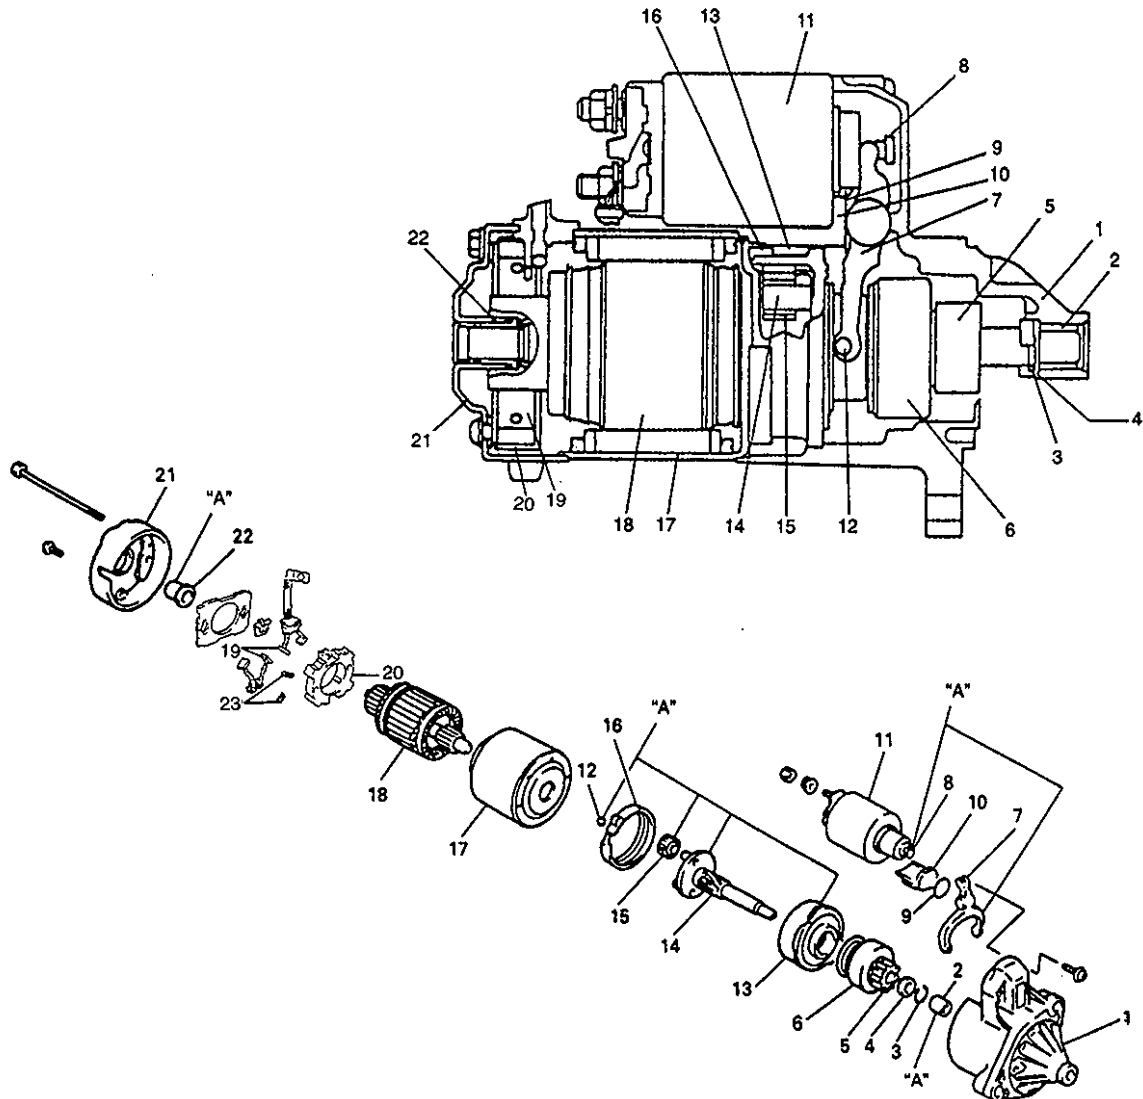

"A": Apply grease (99000-25010)

- |                        |                             |                  |
|------------------------|-----------------------------|------------------|
| 1. Front housing       | 9. Plate                    | 17. Yoke         |
| 2. Bush                | 10. Seal rubber             | 18. Armature     |
| 3. Snap ring           | 11. Magnetic switch         | 19. Brush        |
| 4. Pinion stop ring    | 12. Ball                    | 20. Brush holder |
| 5. Pinion gear         | 13. Internal gear           | 21. Rear bracket |
| 6. Over-running clutch | 14. Planetary carrier shaft | 22. Rear bush    |
| 7. Lever               | 15. Planetary gear          | 23. Brush spring |
| 8. Plunger             | 16. Packing                 |                  |

## DIAGNOSIS

Possible symptoms due to starting system trouble would be as follows:

- Starting motor does not run (or runs slowly)
- Starting motor runs but fails to crank engine
- Abnormal noise is heard

Proper diagnosis must be made to determine exactly where the cause of each trouble lies.....in battery, wiring harness, (including starting motor switch), starting motor or engine.

Do not remove motor just because starting motor does not run. Check following items and narrow down scope of possible causes.


- 1) Condition of trouble
- 2) Tightness of battery terminals (including ground cable connection on engine side) and starting motor terminals
- 3) Discharge of battery
- 4) Mounting of starting motor

Condition	Possible Cause	Correction
<b>Motor not running</b>	<b>No operating sound of magnetic switch</b> <ul style="list-style-type: none"> <li>● Shift lever switch is not in P or N, or not adjusted (A/T)</li> <li>● Battery run down</li> <li>● Battery voltage too low due to battery deterioration</li> <li>● Poor contact in battery terminal connection</li> <li>● Loose grounding cable connection</li> <li>● Fuse set loose or blown off</li> <li>● Poor contacting action of ignition switch and magnetic switch</li> <li>● Lead wire coupler loose in place</li> <li>● Open-circuit between ignition switch and magnetic switch</li> <li>● Open-circuit in pull-in coil</li> <li>● Brushes are seating poorly or worn down</li> <li>● Poor sliding or plunger and/or pinion</li> </ul>	Shift in P or N, or adjust switch. Recharge battery. Replace battery. Retighten or replace. Retighten. Tighten or replace. Replace. Retighten. Repair. Replace magnetic switch. Repair or replace. Repair.
	<b>Operating sound of magnetic switch heard</b> <ul style="list-style-type: none"> <li>● Battery run down</li> <li>● Battery voltage too low due to battery deterioration</li> <li>● Loose battery cable connections</li> <li>● Burnt main contact point, or poor contacting action of magnetic switch</li> <li>● Brushes are seating poorly or worn down</li> <li>● Weakened brush spring</li> </ul>	Recharge battery. Replace battery. Retighten. Replace magnetic switch. Repair or replace. Replace.

Condition	Possible Cause	Correction
<b>Motor not running</b>	<ul style="list-style-type: none"> <li>● Burnt commutator</li> <li>● Layer short-circuit of armature</li> <li>● Crankshaft rotation obstructed</li> </ul>	Replace armature. Replace. Repair.
<b>Starting motor running but too slow (small torque)</b>	<b>If battery and wiring are satisfactory, inspect starting motor</b> <ul style="list-style-type: none"> <li>● Insufficient contact of magnetic switch main contacts</li> <li>● Layer short-circuit of armature</li> <li>● Disconnected, burnt or worn commutator</li> <li>● Worn brushes</li> <li>● Weakened brush springs</li> <li>● Burnt or abnormally worn end bush</li> </ul>	Replace magnetic switch. Replace. Repair commutator or replace armature. Replace brush. Replace spring. Replace bush.
<b>Starting motor running, but not cranking engine</b>	<ul style="list-style-type: none"> <li>● Worn pinion tip</li> <li>● Poor sliding of over-running clutch</li> <li>● Over-running clutch slipping</li> <li>● Worn teeth of ring gear</li> </ul>	Replace over-running clutch. Repair. Replace over-running clutch. Replace flywheel (M/T) or drive plate (A/T).
<b>Noise</b>	<ul style="list-style-type: none"> <li>● Abnormally worn bush</li> <li>● Worn pinion or worn teeth of ring gear</li> <li>● Poor sliding of pinion (failure in return movement)</li> <li>● Worn internal or planetary gear teeth</li> <li>● Lack of oil in each part</li> </ul>	Replace bush. Replace over-running clutch, flywheel (M/T) or drive plate (A/T). Repair or replace. Replace. Lubricate.
<b>Starting motor does not stop running</b>	<ul style="list-style-type: none"> <li>● Fused contact points of magnetic switch</li> <li>● Short-circuit between turns of magnetic switch coil (layer short-circuit)</li> <li>● Failure of returning action in ignition switch</li> </ul>	Replace magnetic switch. Replace magnetic switch. Replace.


## UNIT REPAIR OVERHAUL

### DISMOUNTING AND REMOUNTING

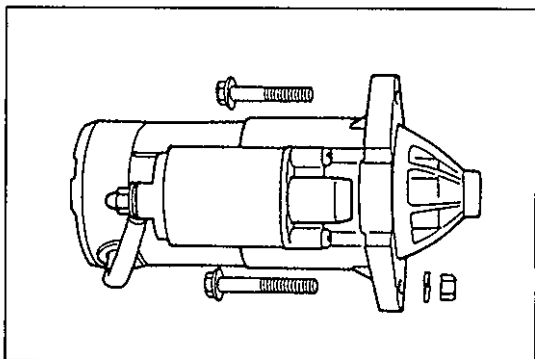

Use following procedure to remove starter:


- 1) Disconnect negative battery lead at battery.
- 2) Disconnect magnetic switch lead wire and battery cable from starting motor terminals.
- 3) Remove two starting motor mount bolts.
- 4) Remove starting motor.
- 5) To install, reverse the above procedure.

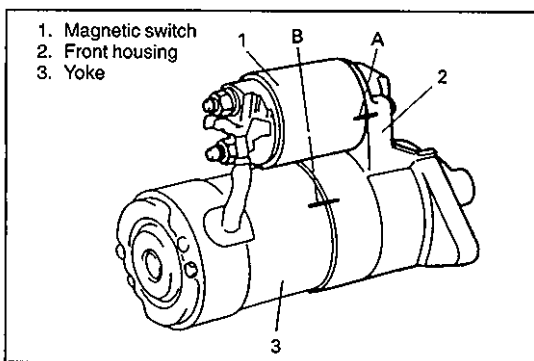


### DISASSEMBLY

#### NOTE:

- Before disassembling starting motor, be sure to put match marks at two locations (A & B) as shown in figure left so that any possible mistake can be avoided.
- Do not clamp yoke in a vise or strike it with a hammer during repair operations.

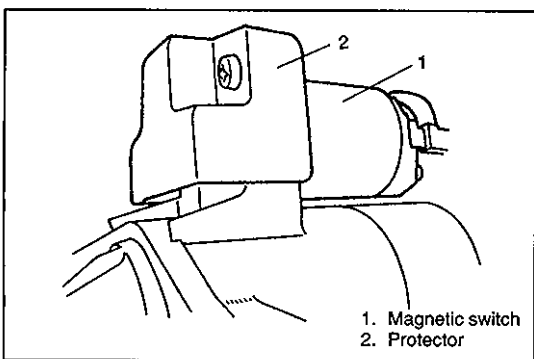


- 1) Remove protector (if equipped) and magnetic switch.

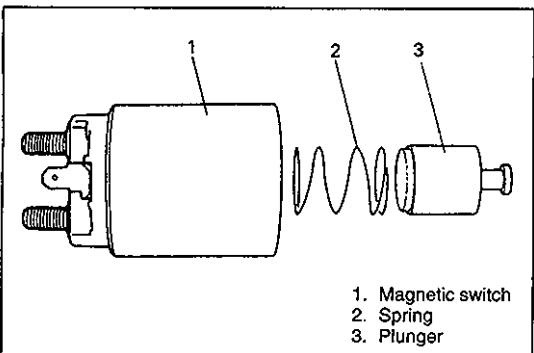


#### NOTE:


Don't disassemble this switch. If defective, replace as a complete assembly.

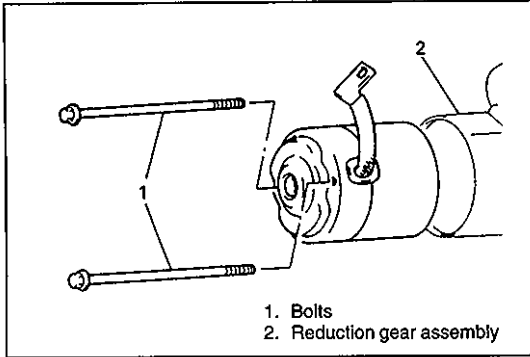


- 2) Remove bolts shown in left figure, then separate reduction gear assembly from starting motor assembly.

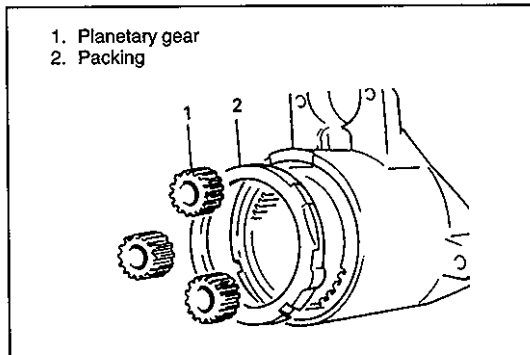


- 3) To overhaul reduction gear assembly, remove packing and planetary gears.

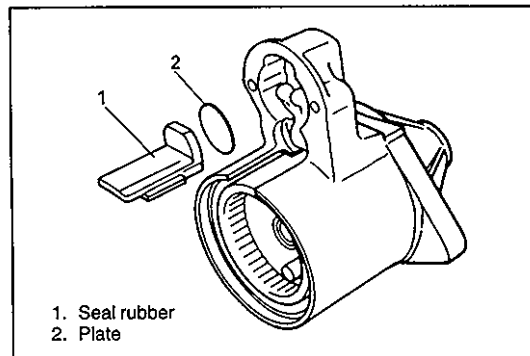


- 4) Remove seal rubber and plate.

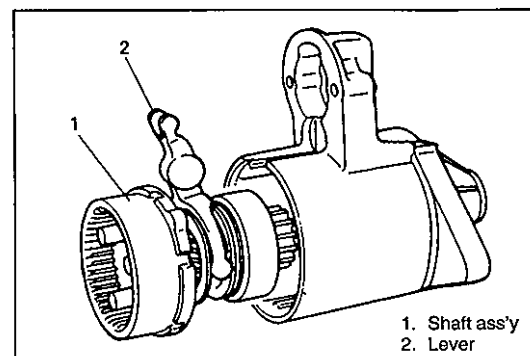

- 5) Remove shaft assembly with lever.

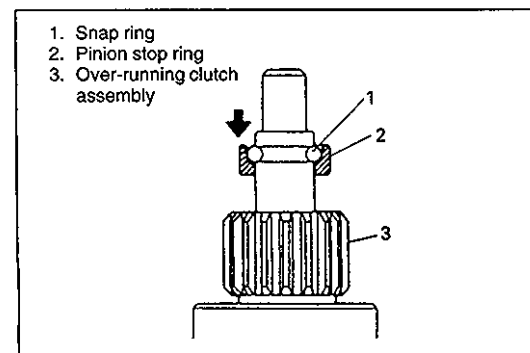


- 6) Loosen pinion stop ring fixed by snap ring.

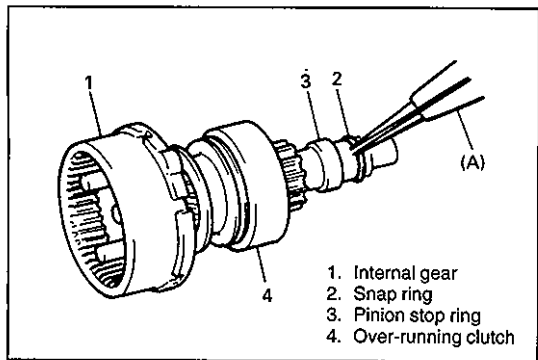


- 7) Remove snap ring, then pull out pinion stop ring and over-running clutch and internal gear.


**Special Tool**  
(A): 09900-06107

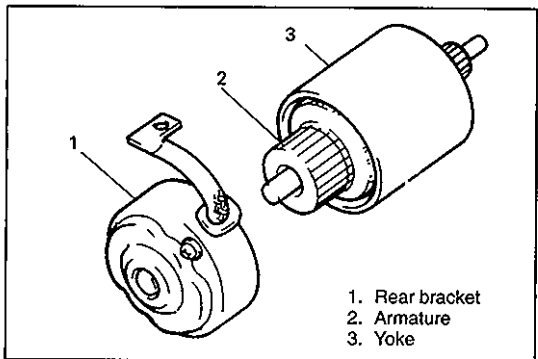

- 8) Remove rear bracket and brush holder.

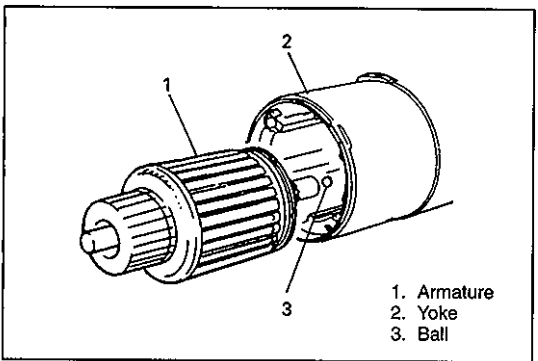


- 9) Remove armature from yoke and then ball from the end of armature shaft.

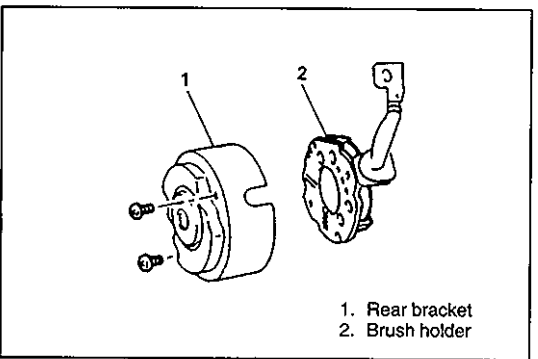


- 10) Remove brush holder from rear bracket.



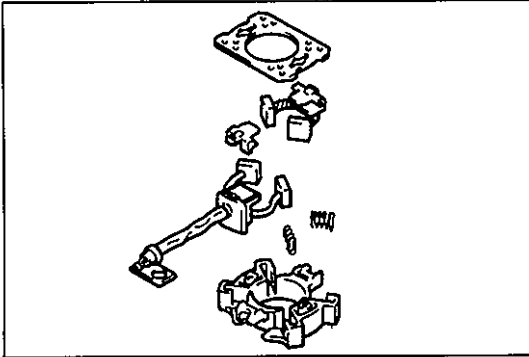

11) Remove brush springs and brushes.

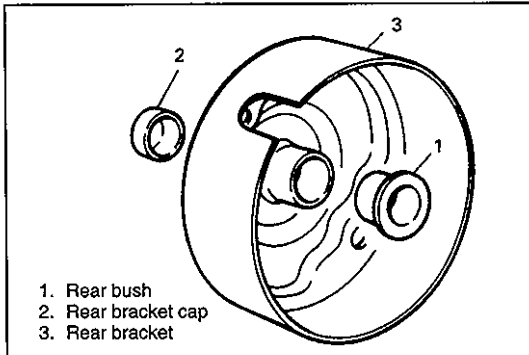


12) Remove rear bracket cap, and then remove rear bush, as required.


## REASSEMBLY

### CAUTION:


New oilless bearing have been lubricated when they are supplied as spare parts. **DO NOT** wash with grease dissolving solvent nor lubricate them with other lubricant.

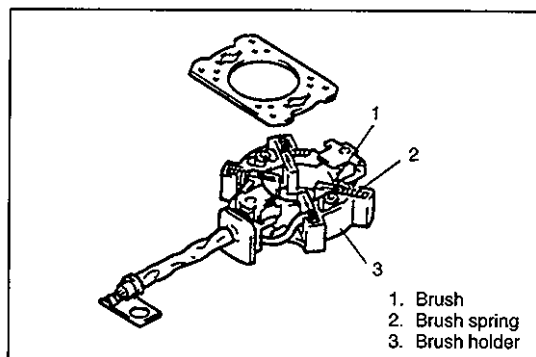


- 1) Inspect component parts (Refer to page 6G-12) and replace with new ones as necessary.
- 2) Apply grease (Refer to page 6G-3).
- 3) Install armature to yoke.
- 4) Install brushes and brush springs to brush holder.
- 5) Install brush holder to armature while pushing 4 brushes outward.

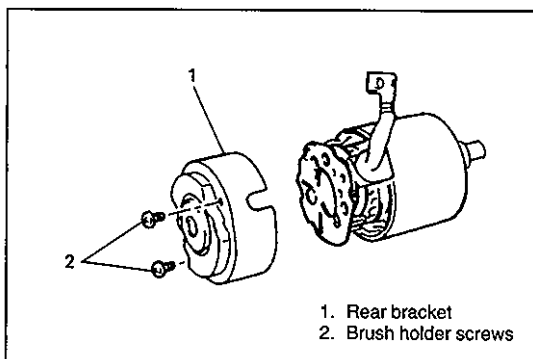


- 6) Install rear bush and then rear bracket cap.
- 7) Install rear bracket.
- 8) Tighten brush holder screws.

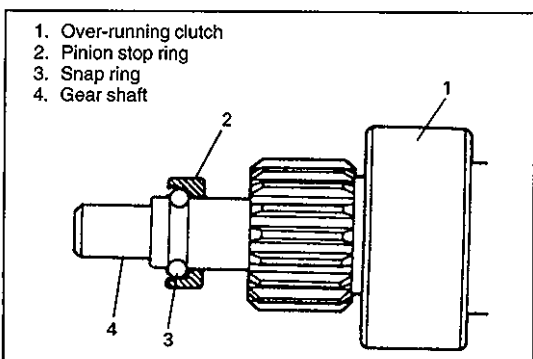


- 9) Install over-running clutch assembly to gear shaft, using care for installing direction of pinion stop ring.

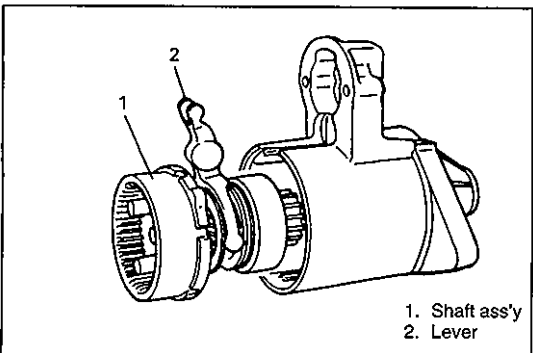


- 10) Insert shaft ass'y into front housing with lever positioned as shown left figure.

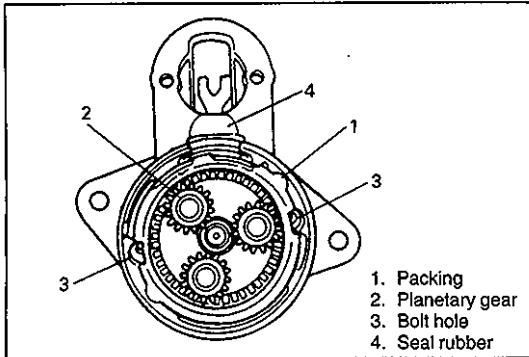


- 11) Install packing so that cuts in packing align with holes for through bolts in front housing.
- 12) Install plate and seal rubber to front housing.

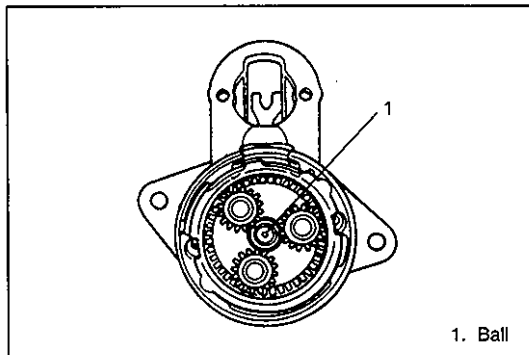


- 13) Apply grease to ball and install ball into shaft hole.

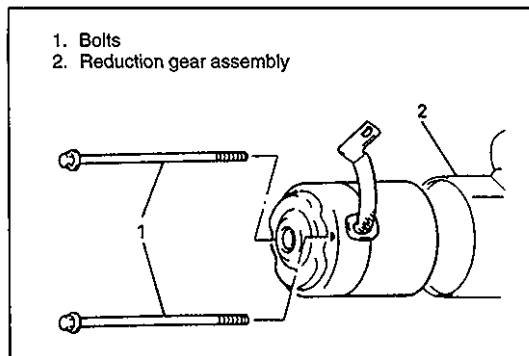

- 14) Install yoke, armature, brush holder and rear bracket to front housing by aligning match marks provided before removal.
- 15) Tighten through bolts.

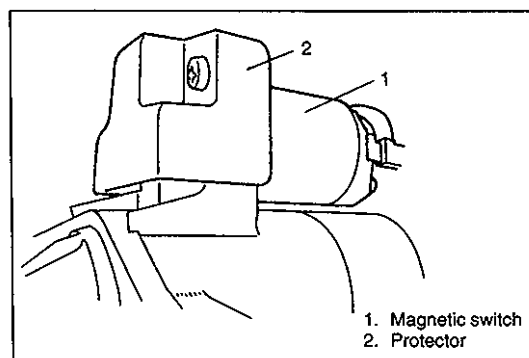


- 16) Install magnetic switch assembly and protector (if equipped). Connect wire (switch to motor) to switch terminal.
- 17) Upon completion of assembly, carry out PERFORMANCE TEST. (Refer to page 6G-16.)

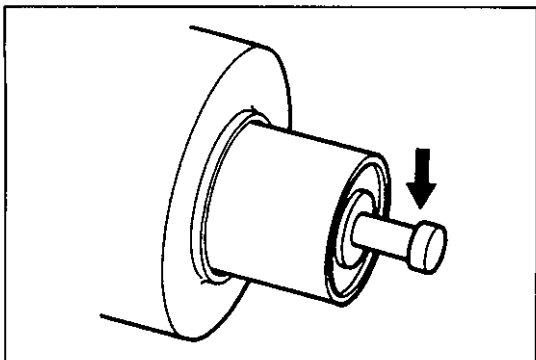

## INSPECTION


### 1. PLUNGER

Inspect plunger for wear. Replace if necessary.

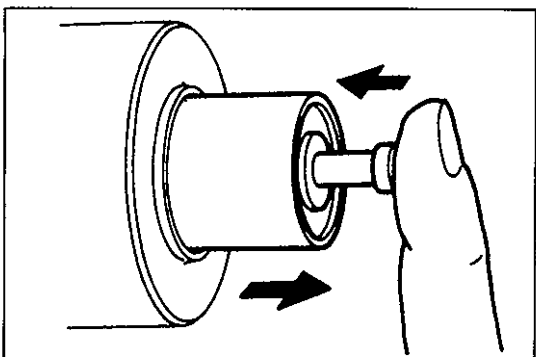


### 2. MAGNETIC SWITCH

Push in plunger and release it. The plunger should return quickly to its original position. Replace if necessary.

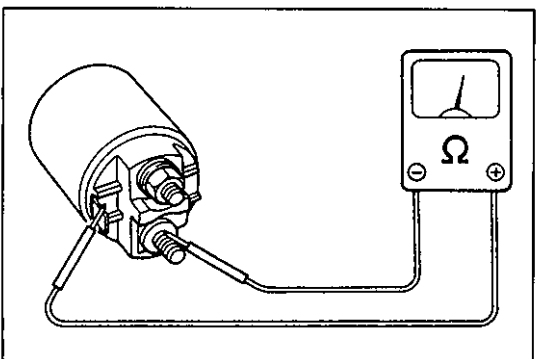


#### ● Pull-In Coil Open Circuit Test

Check for continuity across magnetic switch 'S' terminal and 'M' terminal. If no continuity exists, coil is open and should be replaced.

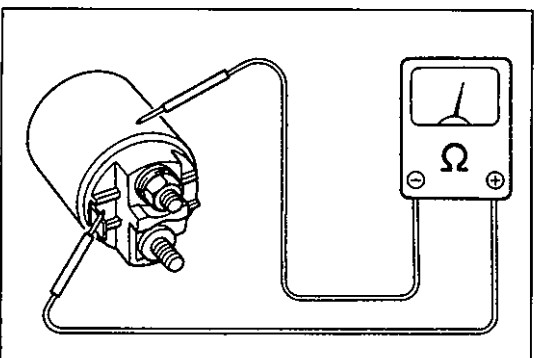


#### ● Hold-In Coil Open Circuit Test

Check for continuity across magnetic switch 'S' terminal and coil case. If no continuity exists, coil is open and should be replaced.

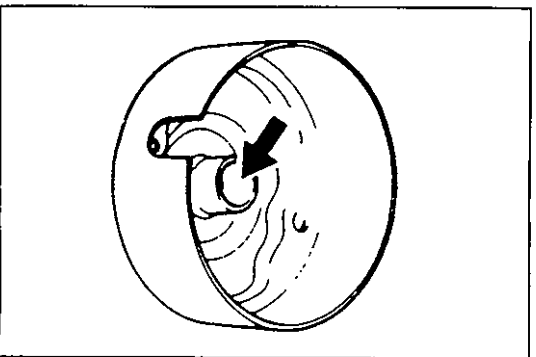

### 3. ARMATURE SHAFT BUSH

Inspect bush for wear or damage. Replace if necessary.

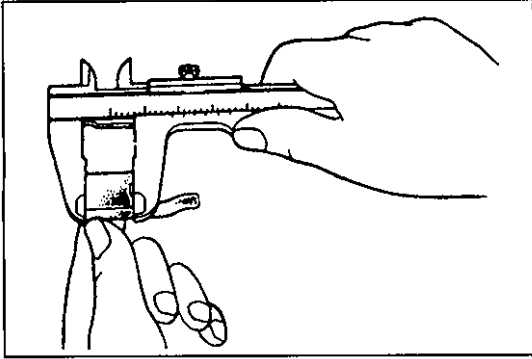

#### 4. BRUSH

- Check brushes for wear.

Measure length of brushes and if below limit, replace brush.


##### Brush length

Standard	12.3 mm (0.44 in.)
Limit	7 mm (0.28 in.)

- Install brushes to each brush holder and check for smooth movement.


#### 5. SPRING

Inspect brush springs for wear, damage or other abnormal conditions. Replace if necessary.

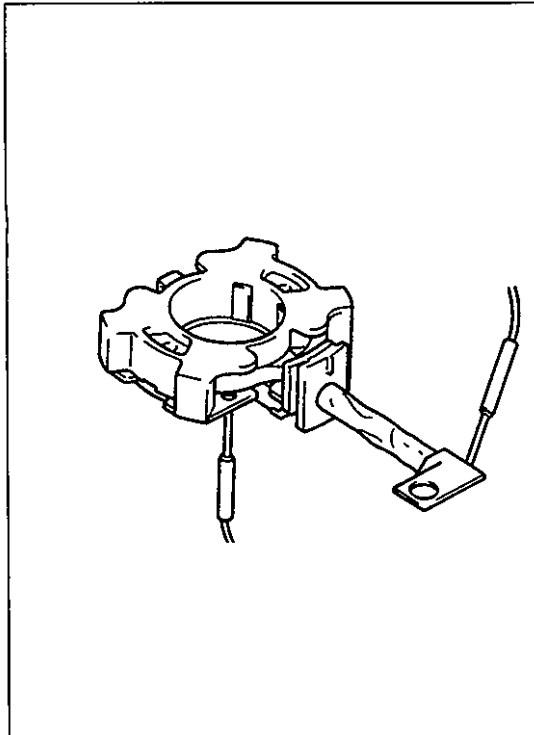


#### 6. BRUSH HOLDER

- Check movement of brush in brush holder. If brush movement within brush holder is sluggish, check brush holder for distortion and sliding faces for contamination. Clean or correct as necessary.
- Check for continuity across brush positive terminal and grounded brush holder. If continuity exists, brush holder is grounded due to defective insulation and should be replaced.

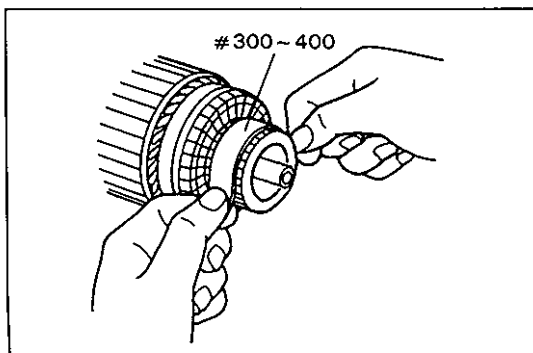

#### 7. ARMATURE

- Inspect commutator for dirt or burn. Correct with sandpaper or lathe, if necessary.

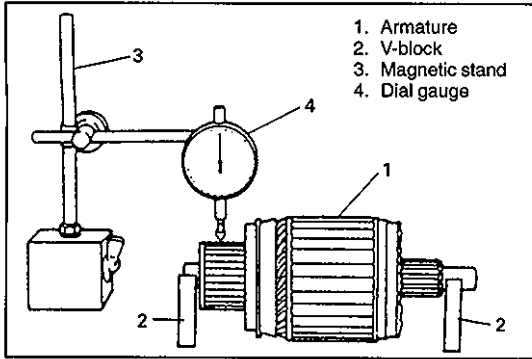

- Check commutator for uneven wear with armature supported on V-blocks. If deflection of dial gauge pointer exceeds limit, repair or replace.

#### NOTE:

Below specification presupposes that armature is free from bend. Bent armature must be replaced.

#### Commutator out of round

Standard : 0.05 mm (0.002 in.) or less


Limit : 0.4 mm (0.015 in.)

- Inspect commutator for wear. If diameter is below limit, replace armature.

#### Commutator outside diameter

Standard : 29.4 mm (1.16 in.)

Limit : 28.8 mm (1.13 in.)

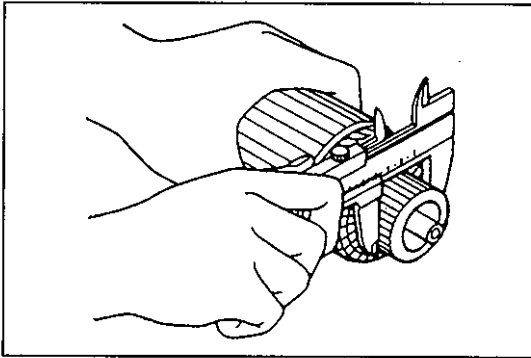


- Inspect commutator for insulator depth. Correct or replace if below limit.

#### Commutator insulator depth "a"


Standard : 0.4 – 0.6 mm (0.015 – 0.023 in.)


Limit : 0.2 mm (0.008 in.)

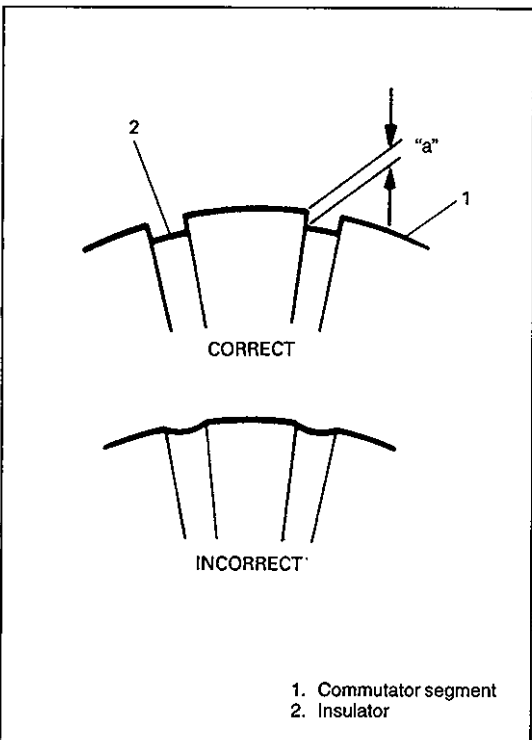

#### ● Ground Test


Check commutator and armature core. If there is continuity, armature is grounded and must be replaced.

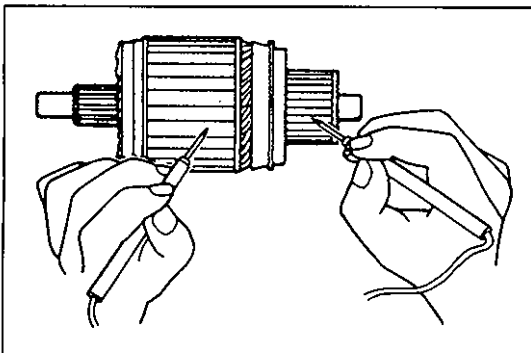

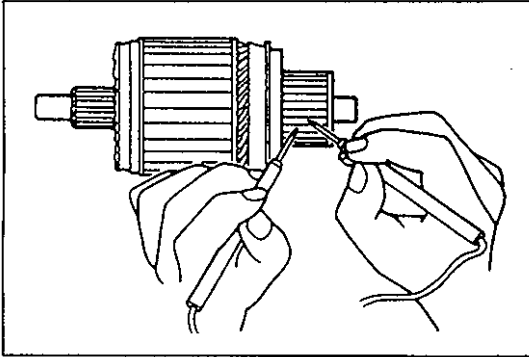


### ● Open Circuit Test

Check for continuity between segments. If there is no continuity at any test point, there is an open circuit and armature must be replaced.

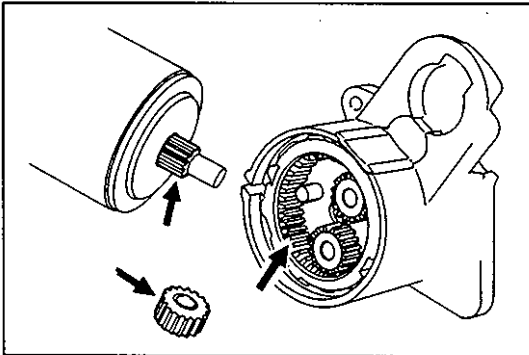


### 8. GEARS

Inspect internal gear and planetary gears for wear, damage or other abnormal conditions. Replace if necessary.

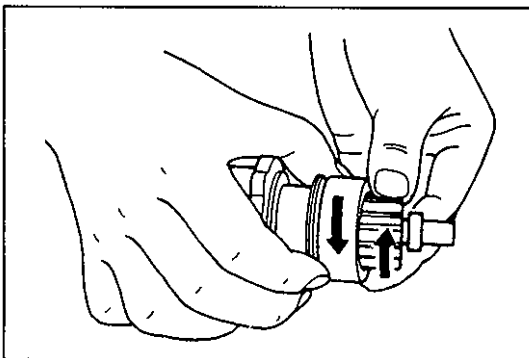


### 9. PINION AND OVER-RUNNING CLUTCH

- Inspect pinion for wear, damage or other abnormal conditions. Check that clutch locks up when turned in direction of drive and rotates smoothly in reverse direction. Replace if necessary.

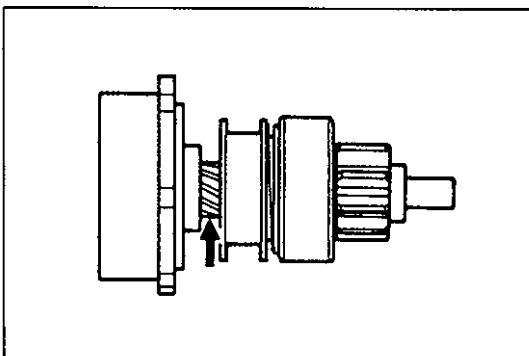

- Inspect spline teeth for wear or damage. Replace if necessary. Inspect pinion for smooth movement.

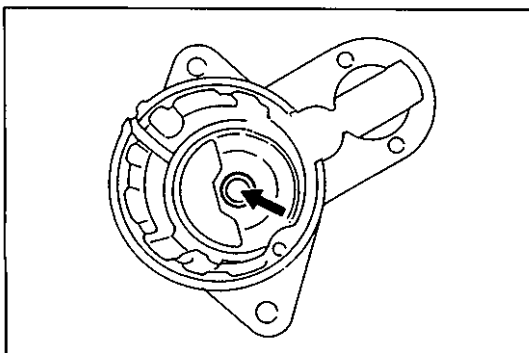

### 10. FRONT HOUSING BUSH

Inspect bush for wear or damage. Replace if necessary.

## PERFORMANCE TEST

### CAUTION:


Each test must be performed within 3 – 5 seconds to avoid coil from burning.

#### 1) Pull-In Test

Connect battery to magnetic switch as shown.  
Check that plunger and pinion move outward.  
If plunger and pinion don't move, replace magnetic switch.


### NOTE:

Before testing, disconnect lead wire from terminal M.

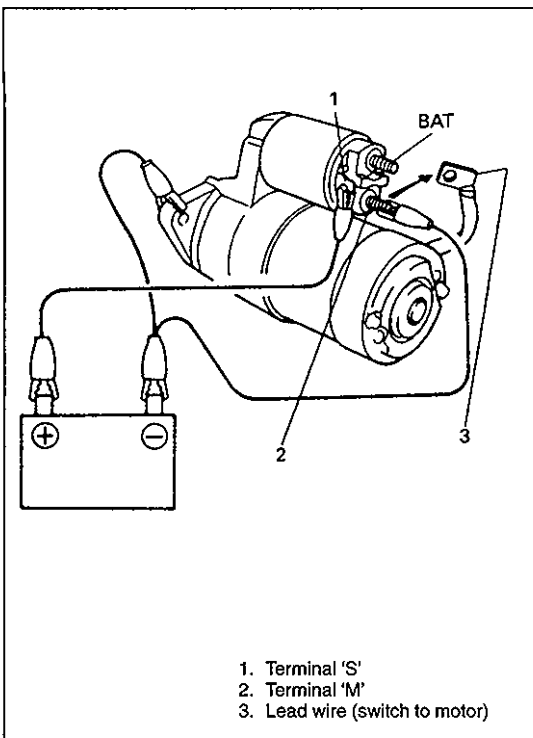


#### 2) Hold-In Test

While connected as above with plunger out, disconnect negative lead from terminal 'M'.  
Check that plunger and pinion remain out.  
If plunger and pinion return inward, replace magnetic switch.

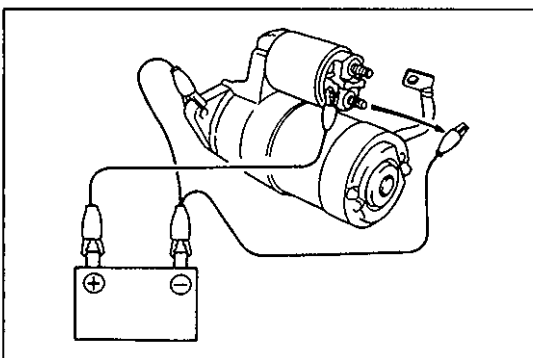

#### 3) Plunger and Pinion Return Test

Disconnect negative lead from switch body.  
Check that plunger and pinion return inward.  
If plunger and pinion don't return, disassemble and inspect starting motor.

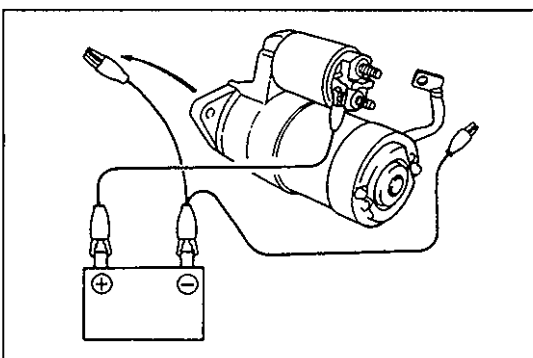


#### 4) No-Load Performance Test

- Connect battery and ammeter to starter as shown.
- Check that starter rotates smoothly and steadily with pinion moving out. Check that ammeter indicates specified current.

**Specified current: 90A MAX. at 11V**

### NOTE:

Use wires as thick as possible and tighten each terminal fully.

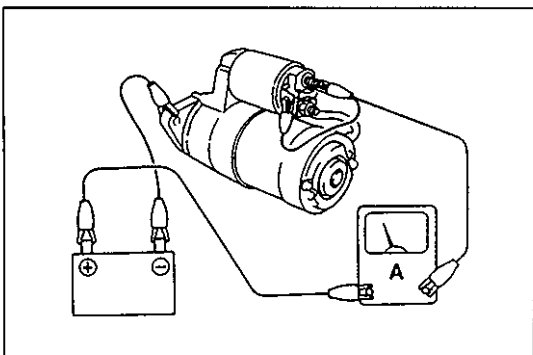



## SPECIFICATIONS

### 1.2 kW type

			1.2 kW type
Voltage			12 volts
Output			1.2 kW
Rating			30 seconds
Direction of rotation			Clockwise as viewed from pinion side
Brush length			12.3 mm (0.44 in.)
Number of pinion teeth			8
Performance		Condition	Guarantee
Around at 20 °C (68 °F)	No load characteristic	11.0 V	90 A maximum 2,500 rpm minimum
	Load characteristic	7.5 V 300 A	10.5 N·m (1.05 kg-m, 7.59 lb-ft) minimum 880 rpm minimum
	Locked characteristic	4.0 V	760 A maximum 19.5 N·m (1.95 kg-m, 14.1 lb-ft) minimum
	Magnetic switch operating voltage		8 volts maximum


### 0.9 kW type

Voltage			12 volts
Output			0.9 kW
Rating			30 seconds
Direction of rotation			Clockwise as viewed from pinion side
Brush length			12.3 mm (0.44 in.)
Number of pinion teeth			8
Performance		Condition	Guarantee
Around at 20 °C (68 °F)	No load characteristic	11.0 V	90 A maximum 2,800 rpm minimum
	Load characteristic	8 V 200 A	4.8 N·m (0.48 kg-m, 3.5 lb-ft) minimum 1,260 rpm minimum
	Locked characteristic	3.5 V	550 A maximum 12.2 N·m (1.22 kg-m, 8.9 lb-ft) minimum
	Magnetic switch operating voltage		8 volts maximum

REQUIRED SERVICE MATERIAL

MATERIAL	RECOMMENDED SUZUKI PRODUCT	USE
Lithium grease	SUZUKI SUPER GREASE A (99000-25010)	<ul style="list-style-type: none"> <li>● Front and rear bush.</li> <li>● Plunger.</li> <li>● Pinion drive lever.</li> <li>● Internal gear.</li> <li>● Planetary carrier shaft.</li> <li>● Planetary gear</li> <li>● Ball</li> </ul>

SPECIAL TOOL

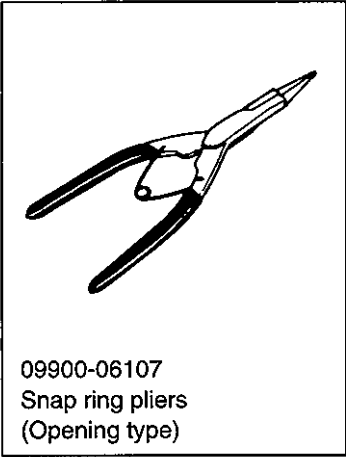

SECTION 6G1

CRANKING SYSTEM  
(0.9 kW No-Reduction Type)

CONTENTS


<b>GENERAL DESCRIPTION</b> .....	6G1-2	Inspection .....	6G1- 8
Cranking Circuit .....	6G1-2	Performance Test .....	6G1-12
Starting Motor .....	6G1-2	Pull-in test .....	6G1-12
<b>DIAGNOSIS</b> .....	6G1-4	Hold-in test .....	6G1-12
<b>UNIT REPAIR OVERHAUL</b> .....	6G1-6	Check pinion return .....	6G1-12
Dismounting .....	6G1-6	No-load performance test .....	6G1-12
Remounting .....	6G1-6	<b>SPECIFICATIONS</b> .....	6G1-13
Disassembly .....	6G1-7	<b>REQUIRED SERVICE MATERIAL</b> .....	6G1-13
Reassembly .....	6G1-8	<b>SPECIAL TOOL</b> .....	6G1-13

## GENERAL DESCRIPTION

### CRANKING CIRCUIT

The cranking circuit consists of the battery, starting motor, ignition switch, and related electrical wiring. These components are connected electrically as shown below.

Only the starting motor will be covered in this section.

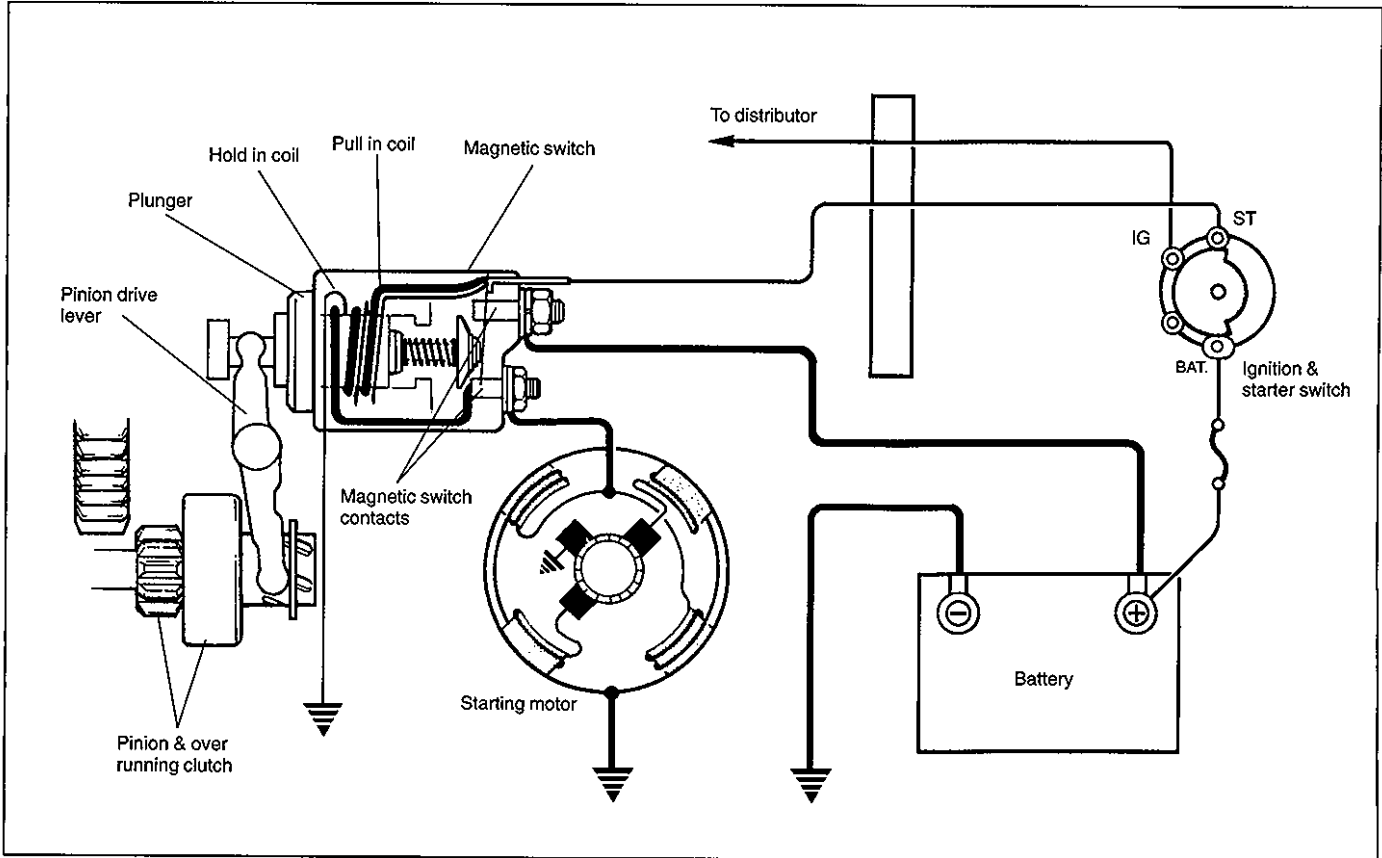


### STARTING MOTOR

The starting motor consist of parts shown following page and has field coils mounted in starting motor yoke (frame). The magnetic switch assembly and parts in the starting motor are enclosed in the housings so that they will be protected against possible dirt and water splash.


In the circuit shown above, the magnetic (motor) switch coils are magnetized when the ignition switch is closed. The resulting plunger and pinion drive lever movement causes the pinion to engage the engine flywheel gear and the magnetic switch main contacts to close, and cranking takes place. When the engine starts, the pinion overrunning clutch protects the armature from excessive speed until the switch is opened, at which time the return spring causes the pinion to disengage.

#### NOTE:

- Starting motor does not require lubrication except during overhaul.
- Make sure to apply grease before assembly where so indicated "A" in the figure below.

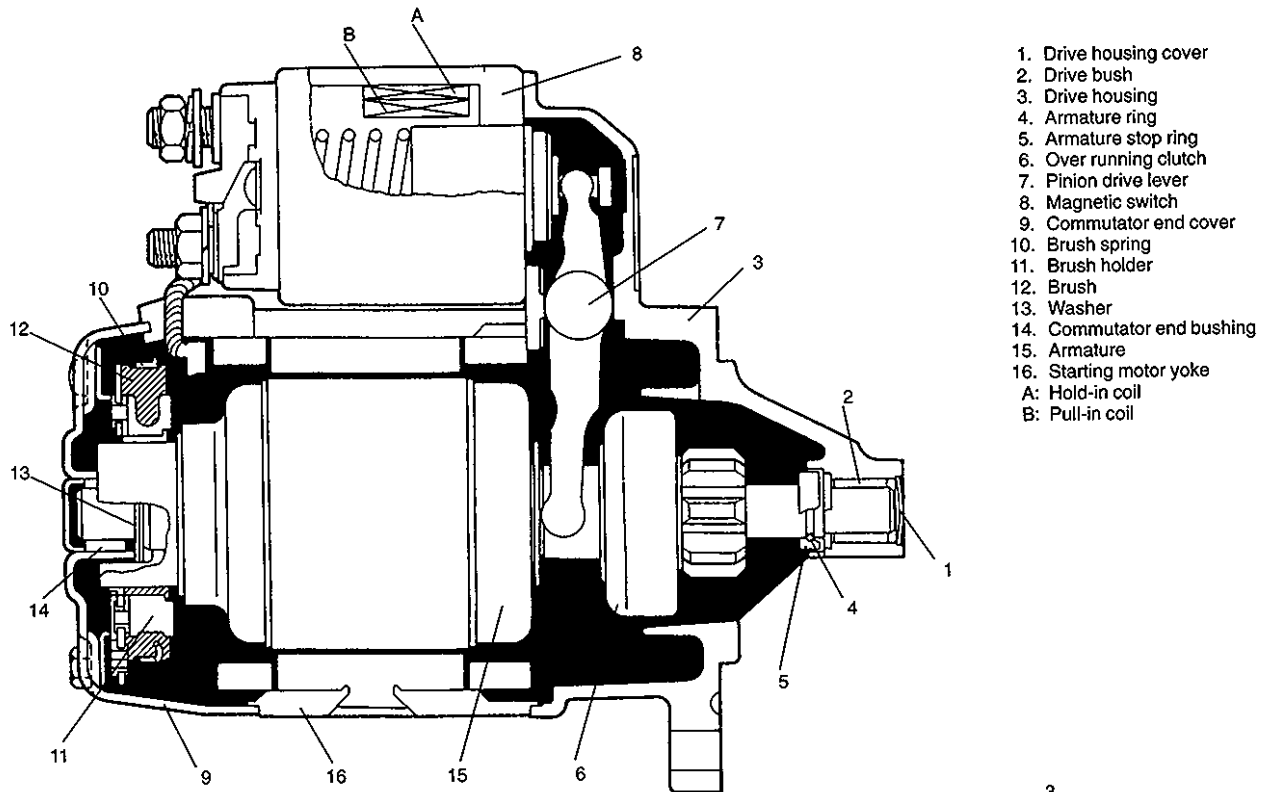

"A" : Apply grease (99000-25010)

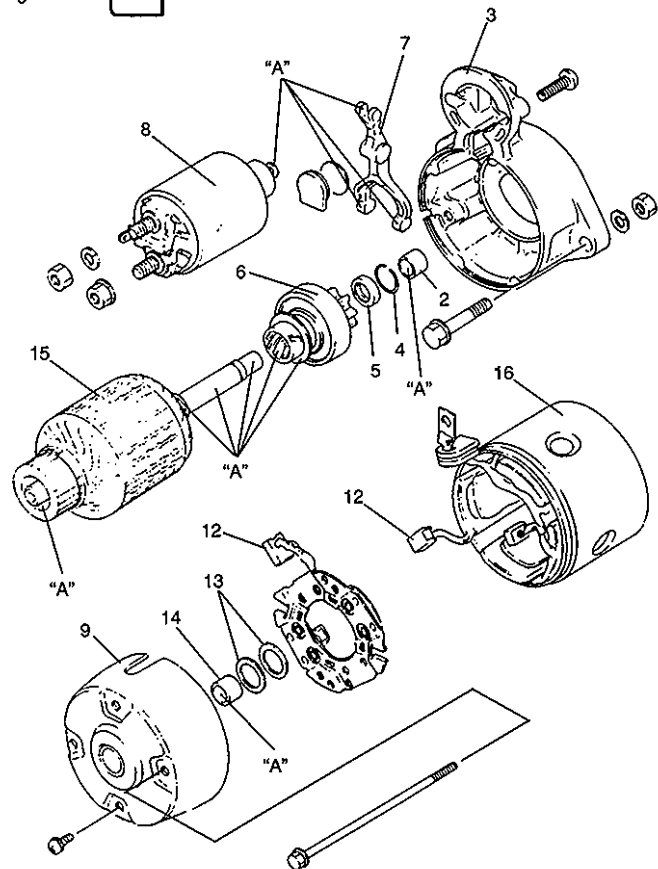

## DIAGNOSIS

Possible symptoms due to starting system trouble would be as follows:

- Starting motor does not run (or runs slowly)
- Starting motor runs but fails to crank engine
- Abnormal noise is heard

Proper diagnosis must be made to determine exactly where the cause of each trouble lies ..... in battery, wiring harness, (including ignition and starter switch), starting motor or engine.


Do not remove motor just because starting motor does not run. Check following items and narrow down scope of possible causes.

- 1) Condition of trouble
- 2) Tightness of battery terminals (including ground cable connection on engine side) and starting motor terminals
- 3) Discharge of battery
- 4) Mounting of starting motor

Condition	Possible Cause	Correction
<b>Motor not running</b>	<b>No operating sound of magnetic switch</b> <ul style="list-style-type: none"> <li>• Battery run down</li> <li>• Battery voltage too low due to battery deterioration</li> <li>• Poor contact in battery terminal connection</li> <li>• Loose grounding cable connection</li> <li>• Fuse set loose or blown off</li> <li>• Poor contacting action of ignition switch and magnetic switch</li> <li>• Lead wire coupler loose in place</li> <li>• Open-circuit between ignition switch and magnetic switch</li> <li>• Open-circuit in pull-in coil</li> <li>• Poor sliding of plunger and/or pinion</li> <li>• Shift lever switch is not in P or N, or not adjusted (A/T)</li> <li>• Brushes are seating poorly or worn down</li> </ul>	Recharge battery. Replace battery.  Retighten or replace.  Retighten. Tighten or replace. Replace.  Retighten. Repair.  Replace magnetic switch. Repair. Shift in P or N, or adjust switch.  Repair or replace.
	<b>Operating sound of magnetic switch heard</b> <ul style="list-style-type: none"> <li>• Battery run down</li> <li>• Battery voltage too low due to battery deterioration</li> <li>• Loose battery cable connections</li> <li>• Burnt main contact point, or poor contacting action of magnetic switch</li> <li>• Brushes are seating poorly or worn down</li> <li>• Weakened brush spring</li> <li>• Burnt commutator</li> <li>• Poor grounding of field coil</li> <li>• Layer short-circuit of armature</li> <li>• Crankshaft rotation obstructed</li> </ul>	Recharge battery. Replace battery.  Retighten. Replace magnetic switch.  Repair or replace.  Replace. Replace armature. Repair. Replace. Repair.

Condition	Possible Cause	Correction
<b>Starting motor running but too slow (small torque)</b>	<b>If battery and wiring are satisfactory, inspect starting motor</b> <ul style="list-style-type: none"> <li>● Insufficient contact of magnetic switch main contacts</li> <li>● Layer short-circuit of armature</li> <li>● Disconnected, burnt or worn commutator</li> <li>● Poor grounding of field coil</li> <li>● Worn brushes</li> <li>● Weakened brush springs</li> <li>● Burnt or abnormally worn end bush</li> </ul>	Replace magnetic switch.  Replace. Repair or replace.  Repair. Replace brush. Replace spring. Replace bush.
<b>Starting motor running, but not cranking engine</b>	<ul style="list-style-type: none"> <li>● Worn pinion tip</li> <li>● Poor sliding of over-running clutch</li> <li>● Over-running clutch slipping</li> <li>● Worn teeth of ring gear</li> </ul>	Replace over-running clutch. Repair. Replace over-running clutch. Replace flywheel (M/T) or drive plate (A/T).
<b>Noise</b>	<ul style="list-style-type: none"> <li>● Abnormally worn bush</li> <li>● Worn pinion or worn teeth of ring gear</li> <li>● Poor sliding of pinion (failure in return movement)</li> <li>● Lack of grease in each part</li> </ul>	Replace bush. Replace over-running clutch or flywheel (M/T), drive plate (A/T). Repair or replace.  Lubricate.
<b>Starting motor does not stop running</b>	<ul style="list-style-type: none"> <li>● Fused contact points of magnetic switch</li> <li>● Short-circuit between turns of magnetic switch coil (layer short-circuit)</li> <li>● Failure of returning action in ignition switch</li> </ul>	Replace magnetic switch.  Replace magnetic switch.  Replace.

## UNIT REPAIR OVERHAUL

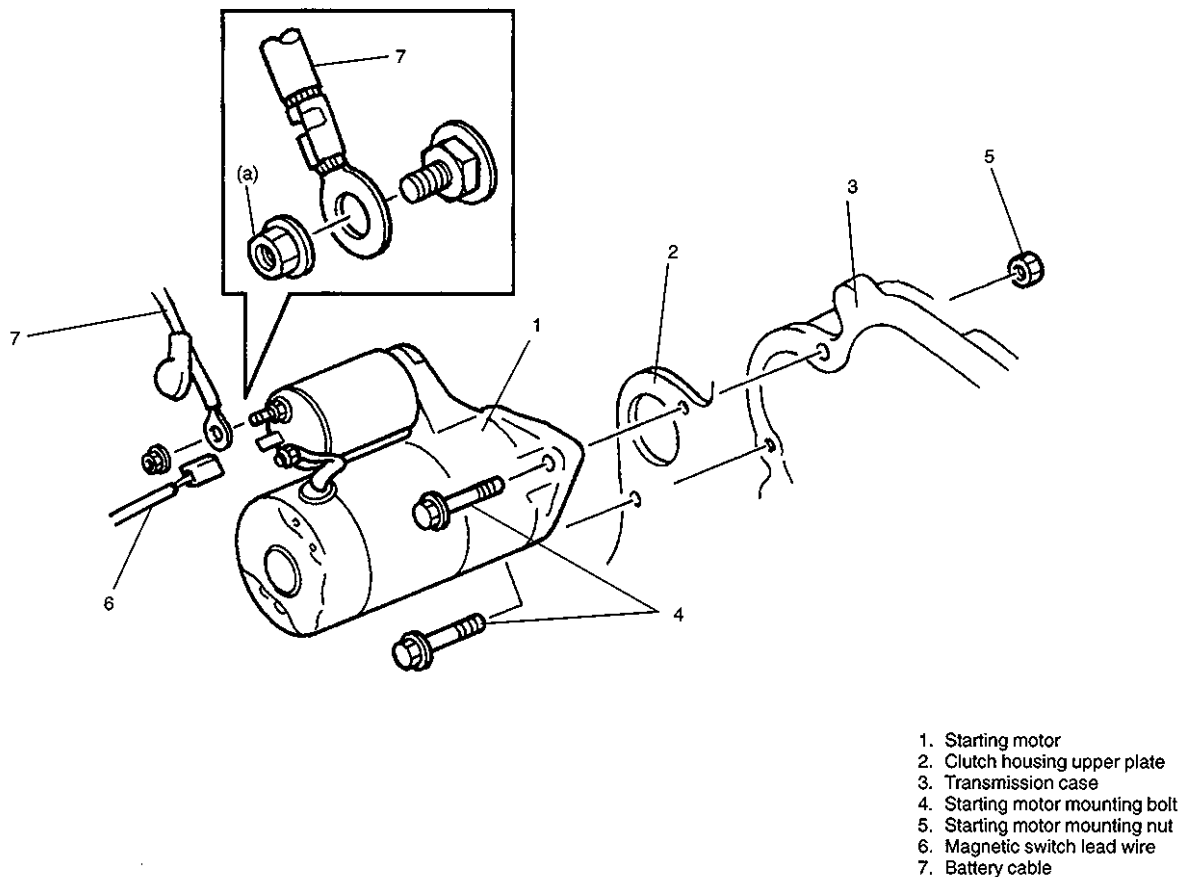

### DISMOUNTING

- 1) Disconnect negative battery lead at battery.
- 2) Disconnect magnetic switch lead wire and battery cable from starting motor.
- 3) Remove starting motor mounting bolts and nut.
- 4) Remove starting motor.


### REMOUNTING

Reverse the dismounting procedure.

#### Tightening Torque

(a): 11 N·m (1.1 kg-m, 8.0 lb-ft)




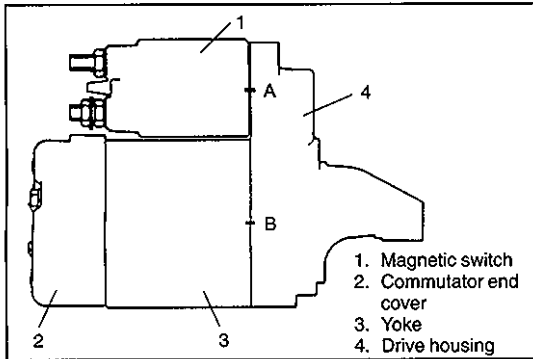


## DISASSEMBLY

### NOTE:

- Before disassembling starting motor, be sure to put match marks at two locations (A and B) as shown in the left figure so that any possible mistakes can be avoided.
- Do not clamp yoke in a vise or strike it with a hammer during disassembling and reassembling.

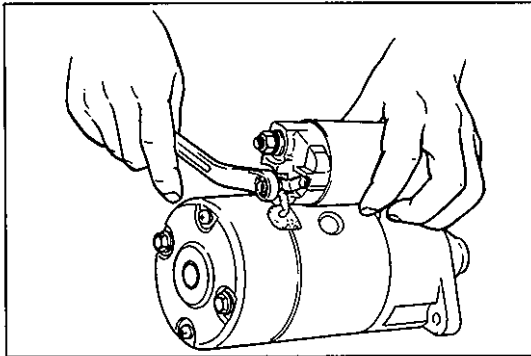


- 1) Remove nut securing the end of field coil lead to terminal on the head of magnetic switch.

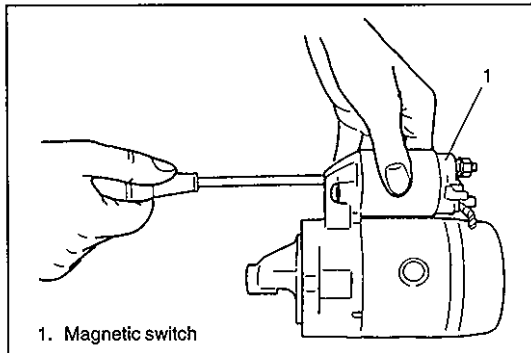


- 2) Take off magnetic switch from starting motor body by removing 2 mounting screws.

### NOTE:


**Don't disassemble this switch. If defective, replace as a complete assembly.**

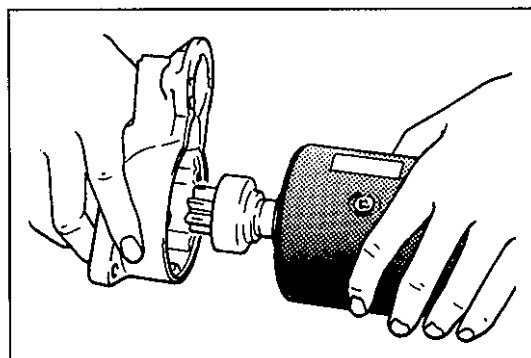

- 3) Loosen 2 bolts and 2 screws to remove commutator end cover.
- 4) Separate drive housing and armature from yoke.

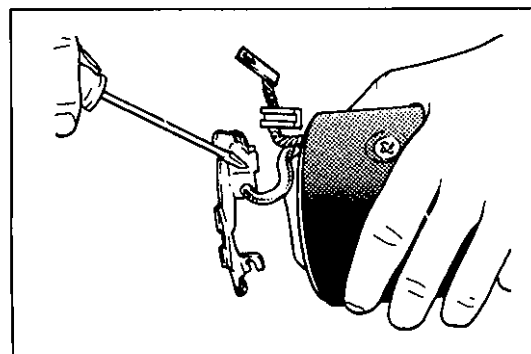

- 5) Draw brushes out of holder.

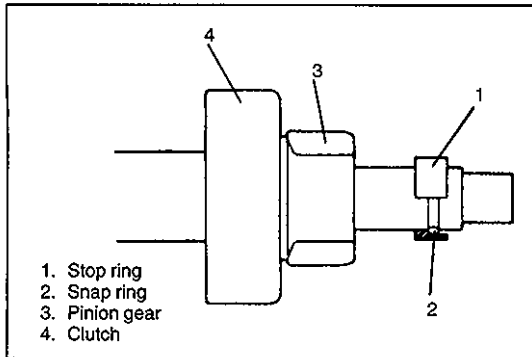


- 6) Draw off over running clutch, as follows:
- (1) Draw stop ring toward clutch side.
  - (2) Remove armature ring and side off clutch.

## REASSEMBLY

Assemble in reverse order of Disassembly, noting the following.


- 1) Apply grease. (Refer to page 6G1-3.)
- 2) Install pinion drive lever into drive housing, referring to 6G1-3 especially for its direction.
- 3) Upon completion of assembly, carry out "PERFORMANCE TEST". (Refer to page 6G1-12.)
- 4) Tighten battery cable nut to specified torque. (Refer to page 6G1-6)

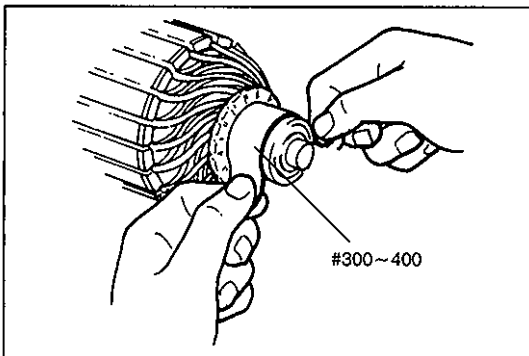

## INSPECTION

### 1. ARMATURE

- Inspect commutator for dirt or burn. Correct with sandpaper or lathe, if necessary.

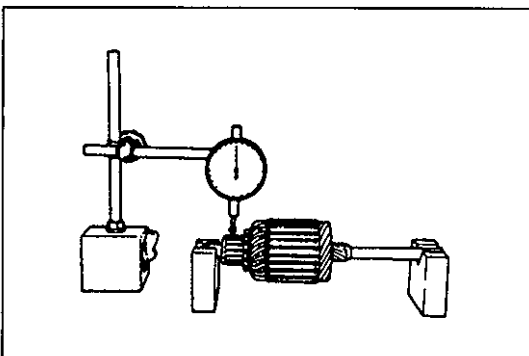

- Check commutator for uneven wear. If deflection of dial gauge pointer exceeds limit, repair or replace.


#### NOTE:

Below specification presupposes that armature is free from bend. Bent shaft must be replaced.

#### Commutator out round

Standard: 0.05 mm (0.0019 in.) or less

Limit: 0.4 mm (0.015 in.)

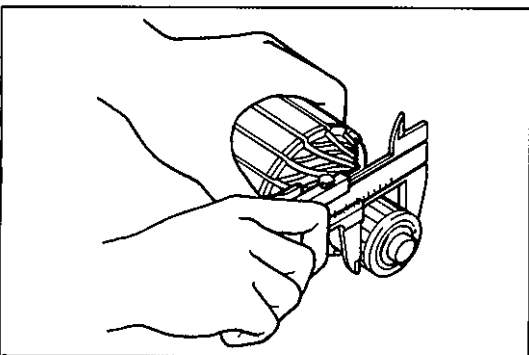


- Inspect commutator for wear.  
If below limit, replace armature.

#### Commutator outside diameter

Standard: 32.0 mm (1.26 in.)

Limit: 31.4 mm (1.24 in.)

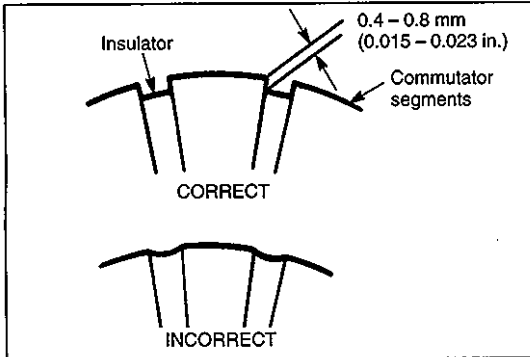


- Inspect commutator for insulator depth. Correct or replace if below limit.

#### Commutator mica depth


**Standard:** 0.4 – 0.6 mm (0.015 – 0.023 in.)

**Limit:** 0.2 mm (0.0078 in.)

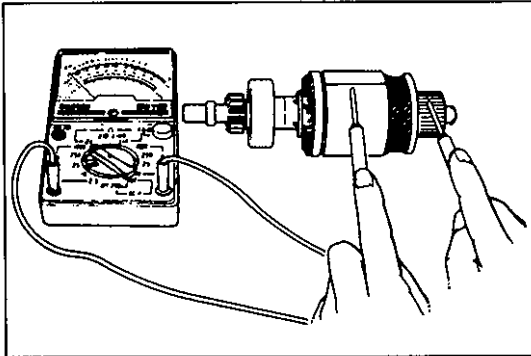


#### • Ground test

Check commutator and armature core. If there is continuity, armature is grounded and must be replaced.

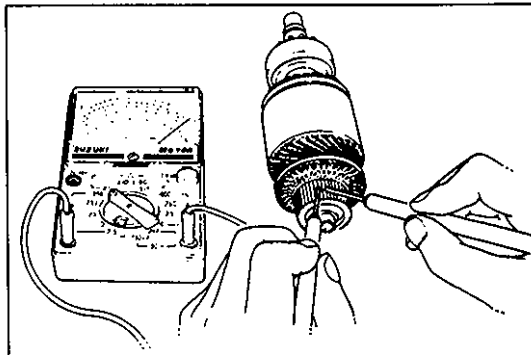

#### • Open circuit test

Check for continuity between segments. If there is no continuity at any point, there is an open circuit and armature must be replaced.

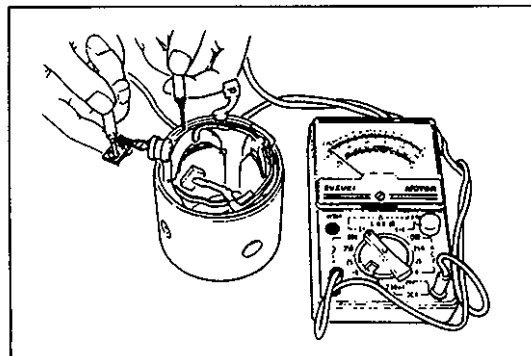


## 2. FIELD COIL

### Ground test

Check continuity between brush and bare surface.

If there is continuity, field windings are grounded.

The yoke ass'y must be replaced.

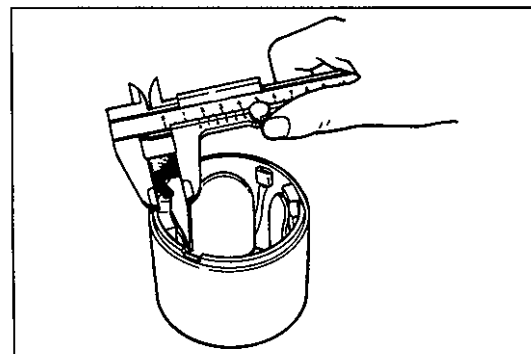


## 3. BRUSH

Check brushes for wear. If below limit, replace brush.

### Brush length

**Standard:** 17.0 mm (0.67 in.)

**Limit:** 11.5 mm (0.45 in.)

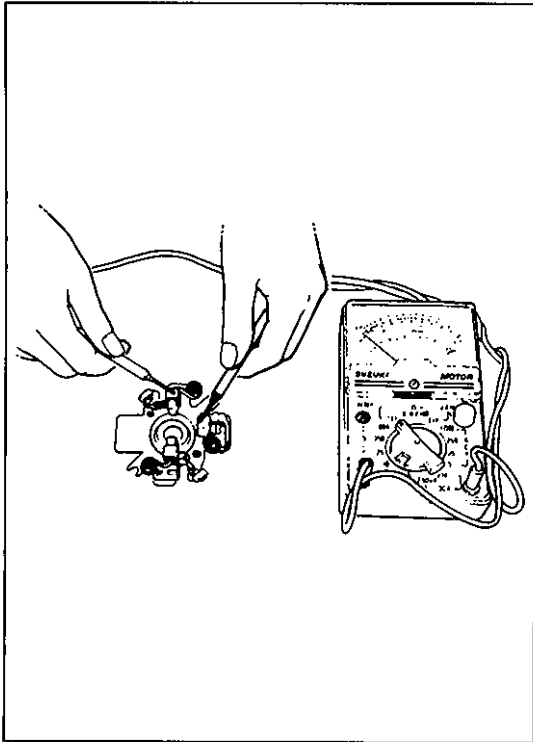


#### 4. BRUSH HOLDER

Check movement of brush in brush holder. If brush movement within brush holder is sluggish, check brush holder for distortion and sliding faces for correct contamination.

Clean or correct as necessary.

Clean for continuity across insulated brush holder (positive side) and grounded brush holder (negative side).

If continuity exists, brush holder is grounded due to defective insulation and should be replaced.

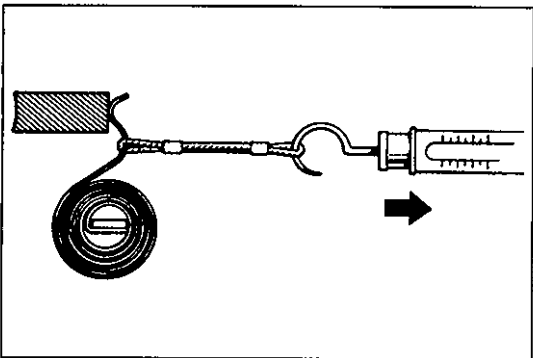


#### 5. SPRING

Inspect brush spring for wear, damage or other abnormal conditions. Replace if necessary.

##### Brush spring tension


Standard: 1.95 kg (4.3 lb)

Limit: 0.9 kg (1.98 lb)

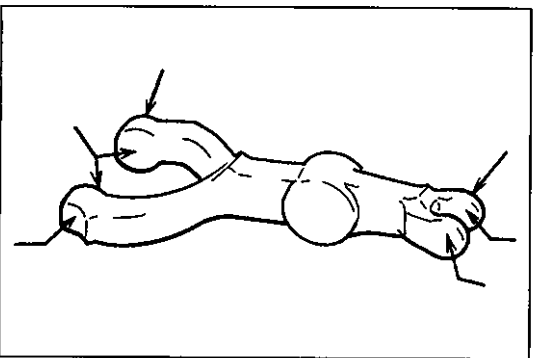


#### 6. DRIVE LEVER

Inspect drive lever for wear. Replace if necessary.

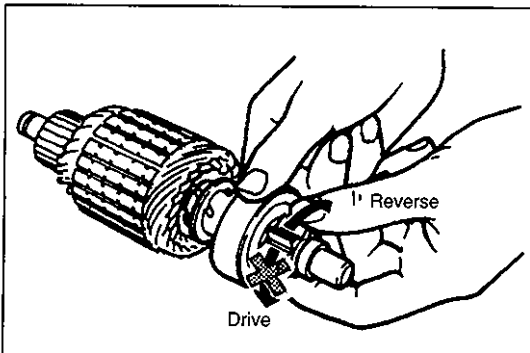


#### 7. PINION AND OVER-RUNNING CLUTCH

- Inspect pinion for wear, damage or other abnormal conditions. Check that clutch locks up when turned in direction of drive and rotates smoothly in reverse direction. Replace if necessary.

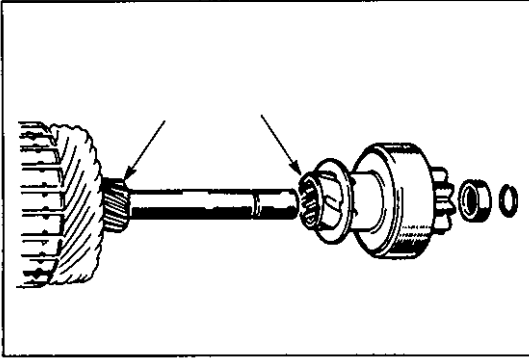


- Inspect spline teeth for wear or damage. Replace if necessary. Inspect pinion for smooth movement.

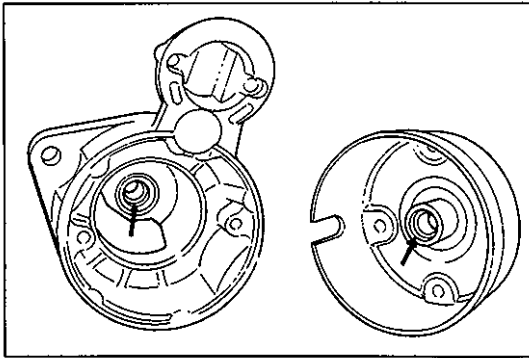


#### 8. ARMATURE SHAFT BUSH

- Inspect bushes for wear or damage. Replace if necessary.

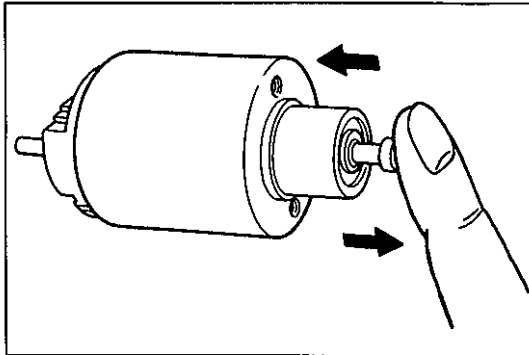


#### 9. MAGNETIC SWITCH

- Push in plunger and release it. Plunger should return quickly to its original position. Replace if necessary.

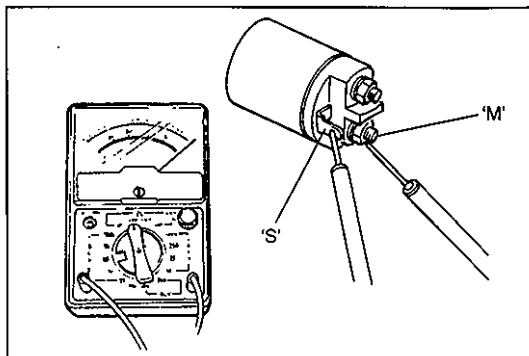

#### • Pull-in coil open circuit test

- Check for continuity across magnetic switch 'S' terminal and 'M' terminal. If no continuity exists, coil is open and should be replaced.

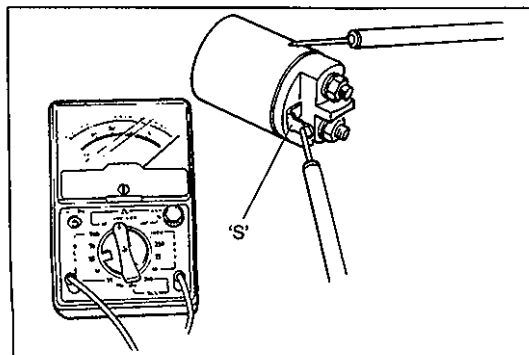


#### • Hold-in coil open circuit test

- Check for continuity across magnetic switch 'S' terminal and coil case. If no continuity exists, coil is open and should be replaced.

## PERFORMANCE TEST

### CAUTION:

These tests must be performed within 3 - 5 seconds to avoid coil from burning.

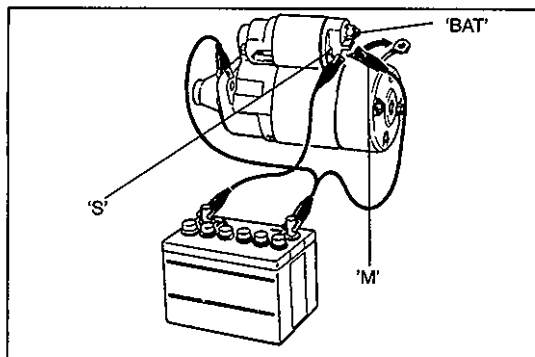


#### ● PULL-IN TEST

Connect battery to magnetic switch as shown.  
Check that pinion moves outward.  
If pinion does not move, replace magnetic switch.


#### NOTE:

Before testing, disconnect field coil lead from Terminal 'M'.

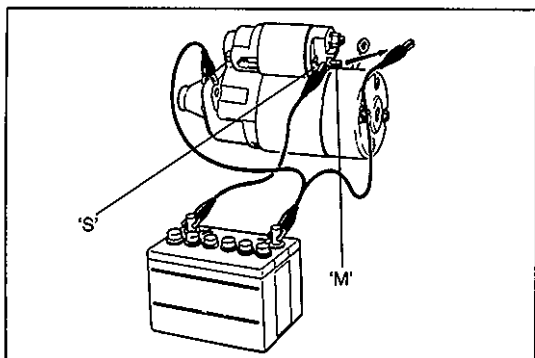


#### ● HOLD-IN TEST

While connected as left figure with pinion out, disconnect negative lead from terminal 'M'.  
Check that pinion remains out.  
If pinion returns inward, replace magnetic switch.

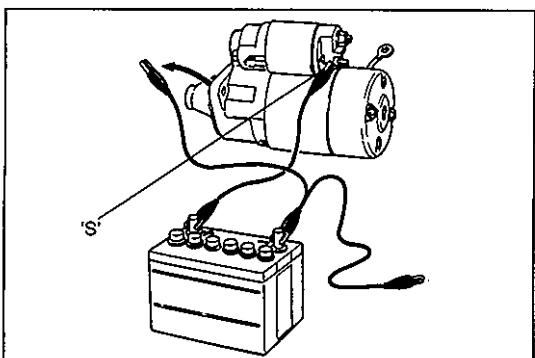

#### ● CHECK PINION RETURN

Disconnect negative lead from magnetic switch body.  
Check that pinion returns inward.  
If pinion does not return, replace magnetic switch.

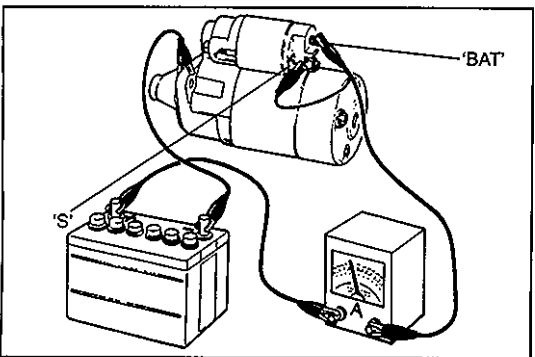

#### ● NO-LOAD PERFORMANCE TEST

- Connect battery and ammeter to starter as shown.
- Check that starter rotates smoothly and steadily with pinion moving out. Check that ammeter reads specified current.

**Specified current: Less than 60 A at 11.5 V**


## SPECIFICATIONS

Voltage		12 volts	
Output		0.9 kW	
Rating		30 seconds	
Direction of rotation		Clockwise as viewed from pinion side	
Brush length		17.0 mm (0.67 in.)	
Number of pinion teeth		8	
Performance		Condition	Guarantee
Around at 20°C (68°F)	No load characteristic	11.5V	60 A maximum 6600 rpm minimum
	Load characteristic	9 V 150 A	2.8 N·m (0.28 kg-m, 2.0 lb-ft) 1900 rpm minimum
	Locked rotor current	5 V	500 A maximum 11.3 N·m (1.13 kg-m, 8.2 lb-ft) minimum
	Magnetic switch operating voltage		8 volts maximum

## REQUIRED SERVICE MATERIAL

MATERIAL	RECOMMENDED SUZUKI PRODUCT	USE
Lithium grease	SUZUKI SUPER GREASE A (99000-25010)	<ul style="list-style-type: none"> <li>• Armature shaft.</li> <li>• Over-running clutch.</li> <li>• Commutator end cap.</li> <li>• Drive lever.</li> </ul>

## SPECIAL TOOL

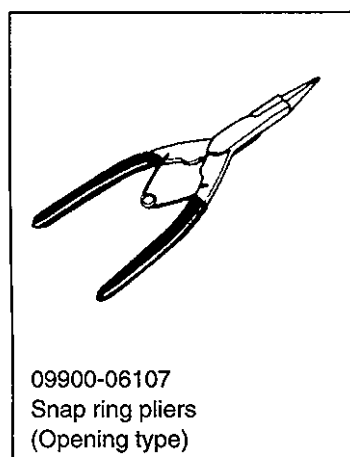

## SECTION 6H

## CHARGING SYSTEM

**WARNING:**

For vehicles equipped with Supplemental Restraint (Air Bag) System


- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components and Wiring Location View" under "General Description" in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and "Service Precautions" under "On-Vehicle Service" in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the "LOCK" position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).

H9

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6H- 2
BATTERY .....	6H- 2
GENERATOR .....	6H- 4
<b>DIAGNOSIS</b> .....	6H- 6
BATTERY .....	6H- 6
GENERATOR .....	6H- 8
<b>ON-VEHICLE SERVICE</b> .....	6H-11
BATTERY .....	6H-11
Jump Starting in Case of Emergency .....	6H-11
Dismounting .....	6H-12
Handling .....	6H-12
Remounting .....	6H-12
GENERATOR .....	6H-13
Generator Belt .....	6H-13
<b>UNIT REPAIR OVERHAUL</b> .....	6H-14
GENERATOR .....	6H-14
Dismounting .....	6H-14
Remounting .....	6H-15
Disassembly .....	6H-16
Inspection .....	6H-22
Replace Brush .....	6H-26
Reassembly .....	6H-27
<b>SPECIFICATIONS</b> .....	6H-31
BATTERY .....	6H-31
GENERATOR .....	6H-31
<b>TIGHTENING TORQUE SPECIFICATIONS</b> .....	6H-31



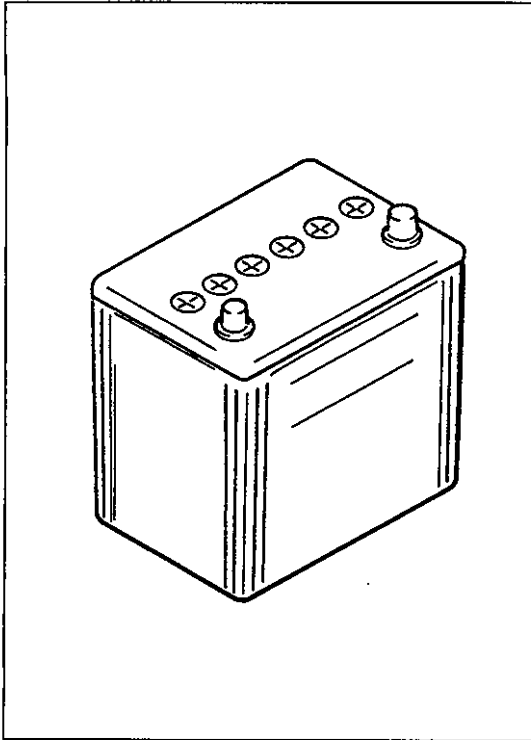

## GENERAL DESCRIPTION

### BATTERY

The battery has three major functions in the electrical system.

- It is a source of electrical energy for cranking the engine.
- It acts as a voltage stabilizer for the electrical system.
- It can, for a limited time, provide energy when the electrical load exceeds the output of the generator.

### CARRIER AND HOLD-DOWN

The battery carrier should be in good condition so that it will support the battery securely and keep it level.

Before installing the battery, the battery carrier and hold-down clamp should be clean and free from corrosion and make certain there are no parts in carrier.

To prevent the battery from shaking in its carrier, the hold-down bolts should be tight enough but not over-tightened.

### ELECTROLYTE FREEZING

The freezing point of electrolyte depends on its specific gravity. Since freezing may ruin a battery, it should be protected against freezing by keeping it in a fully charged condition. If a battery is frozen accidentally, it should not be charged until it is warmed.

### SULFATION

If the battery is allowed to stand for a long period in discharged condition, the lead sulfate becomes converted into a hard, crystalline substance, which will not easily turn back to the active material again during the subsequent recharging. "Sulfation" means the result as well as the process of that reaction.

Such a battery can be revived by very slow charging and may be restored to usable condition but its capacity is lower than before.

DIAGNOSIS	OK	CHARGING NECESSARY	LOW LEVEL ELECTROLYTE REPLACE BATTERY
INDICATOR	Green dot 	Dark 	Clear 
GRAVITY BALL			

### BUILT-IN INDICATOR (IF EQUIPPED)

The battery has a built-in temperature compensated indicator in the top of the battery. This indicator is to be used with the following diagnostic procedure. When checking the indicator, make sure that the battery has a clean top. A light may be needed in some poorly-lit areas.

Three types of indication available under normal operation are as follows.

#### 1. Green Dot

Battery is sufficiently charged for testing.

#### 2. Dark

Battery must be charged before testing.

If there is a cranking complaint, battery should be tested as described in Diagnosis section. Charging and electrical systems should also be checked at this time.

#### 3. Clear or Light Yellow

This means that fluid level is below the bottom of hydrometer. Its possible cause is excessive or prolonged charging, a broken case, excessive tipping or normal battery deterioration.

When the battery is found in such condition, it is possible that high charging voltage is caused by the faulty charging system and therefore, charging and electrical systems need to be checked. If there is a trouble in cranking and its cause lies in the battery, it should be replaced.

## CARE OF BATTERY

### WARNING:

- Never expose battery to open flame or electric spark because of battery generate gas which is flammable and explosive.
- Do not allow battery fluid to contact eyes, skin, fabrics, or painted surfaces as fluid is a corrosive acid. Flush any contacted area with water immediately and thoroughly.
- Batteries should always be kept out of reach of children.

- 1) The battery is a very reliable component, but needs periodical attentions.

- Keep the battery carrier clean
- Prevent rust formation on the terminal posts
- Keep the electrolyte up to the upper level uniformly in all cells.

When keeping battery on vehicle over a long period of time, follow instructions given below.

- Weekly, start the engine and run it until it reaches normal operating temperature with engine speed of 2000 to 3000 rpm. Make sure all electric switches are off before storing the vehicle.
- Recharge the battery twice a month to prevent it from discharging excessively. This is especially important when ambient temperature is low.

The battery discharges even when it is not used, while vehicles are being stored. Battery electrolyte can freeze and battery case can crack at cold ambient condition if battery is not properly charged.

- 2) Keep the battery cable connections clean.

The cable connections, particularly at the positive (+) terminal post, tend to become corroded. The product of corrosion, or rust, on the mating faces of conductors resists the flow of current.

Clean the terminals and fittings periodically to ensure good metal-to-metal contact, and grease the connections after each cleaning to protect them against rusting.

- 3) Be always in the know as to the state of charge of the battery.

The simplest way to tell the state of charge is to carry out a hydrometer test. The hydrometer is an instrument for measuring the specific gravity (S.G.) of the battery electrolyte. The S.G. of the electrolyte is indicative of the state of charge. Refer to "DIAGNOSIS" of BATTERY in this section.

## GENERATOR

The generator is a small and high performance type with an IC regulator incorporated. The internal components are connected electrically as shown below figure.


The generator features are as follows:

- Solid state regulator is mounted inside the generator.
- All regulator components are enclosed into a solid mold.
- This unit along with the brush holder assembly is attached to the rear housing.
- The IC regulator uses integrated circuits and controls the voltage produced by the generator, and the voltage setting cannot be adjusted.
- The generator rotor bearings contain enough grease to eliminate the need for periodic lubrication. Two brushes carry current through the two slip rings to the field coil mounted on the rotor, and under normal conditions will provide long period of attention-free service.
- The stator windings are assembled on the inside of a laminated core that forms part of the generator frame.
- A condenser mounted in the rear housing suppresses radio noise.


### NOTE:

The generator used in each vehicle is one of the following three types, depending on specification.

[60 A type]


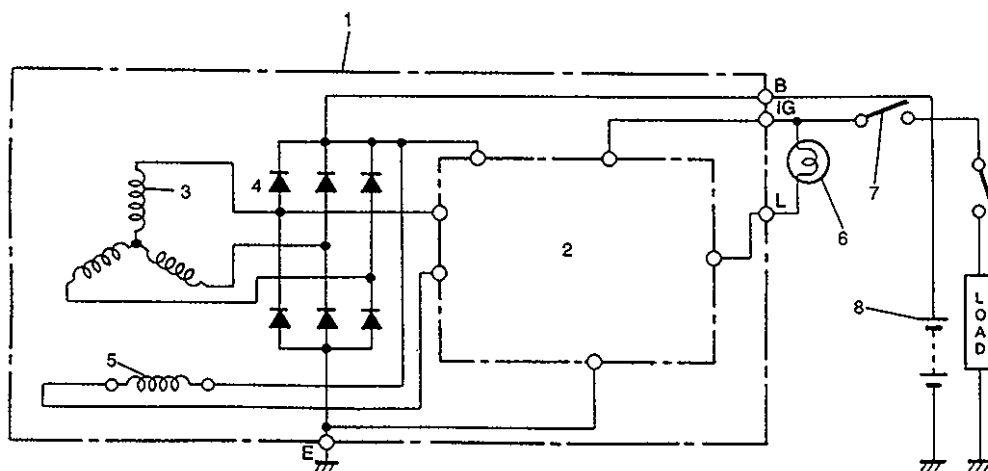


[70 A and 85 A types]


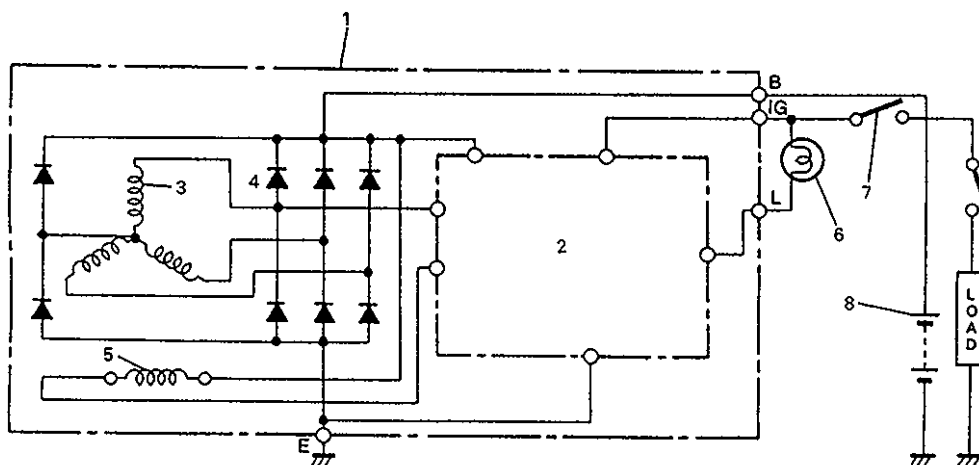


- |                                   |                            |
|-----------------------------------|----------------------------|
| 1. Generator with regulator ass'y | 5. Field coil (rotor coil) |
| 2. I.C. regulator                 | 6. Charge indicator light  |
| 3. Stator coil                    | 7. Main switch             |
| 4. Diode                          | 8. Battery                 |



## [60 A type]

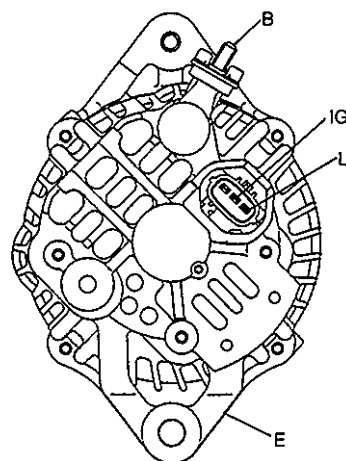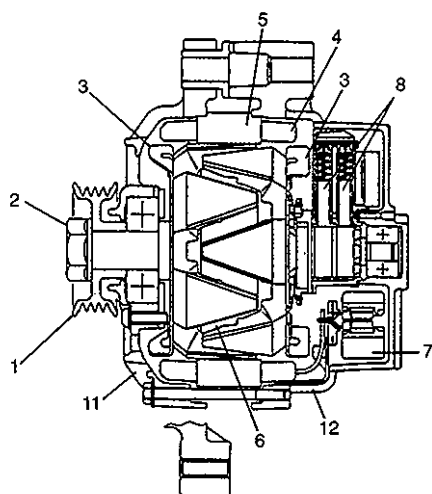

## [70 A type]

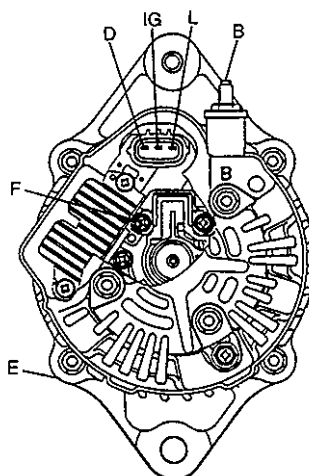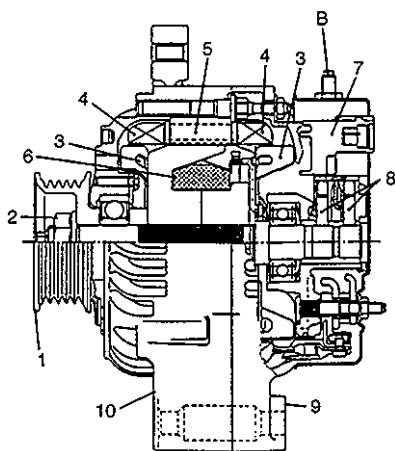

## [85 A type]

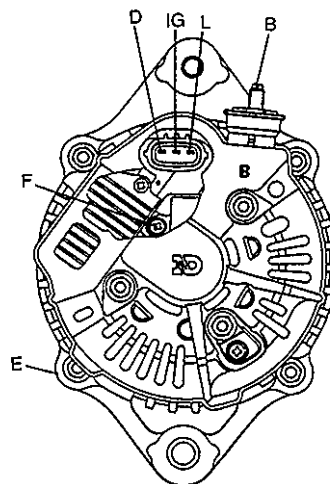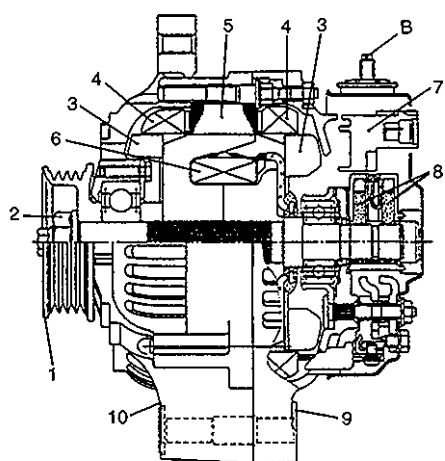

1. Pulley
2. Pulley nut
3. Rotor fan
4. Stator coil
5. Stator core
6. Field coil

7. Regulator
8. Brush
9. Rear end frame
10. Drive end frame
11. Front housing
12. Rear housing

- B : Generator output (Battery terminal)  
 D : Dummy terminal  
 E : Ground  
 F : Field coil terminal  
 IG : Ignition terminal  
 L : Lamp terminal

## **DIAGNOSIS**

### **BATTERY**


#### **COMMON CAUSES OF FAILURE**

A battery is not designed to last indefinitely; however, with proper care, it will provide many years of service. If the battery performs satisfactorily during test but fails to operate properly for no apparent reason, the following are some factors that may point to the cause of trouble:

- Accessories left on overnight or for an extended period without the generator operating.
- Slow average driving speeds for short periods.
- Electrical load exceeding generator output particularly with addition of aftermarket equipment.
- Defects in charging system such as high resistance, slipping drive belt, loose generator output terminal, faulty generator or voltage regulator. Refer to "GENERATOR" in this "DIAGNOSIS" section.
- Battery abuse, including failure to keep battery cable terminals clean and tight or loose battery hold down.
- Mechanical problems in electrical system such as shorted or pinched wires.

#### **VISUAL INSPECTION**

Check for obvious damage, such as cracked or broken case or cover, that could permit loss of electrolyte. If obvious damage is noted, replace battery. Determine cause of damage and correct as needed.

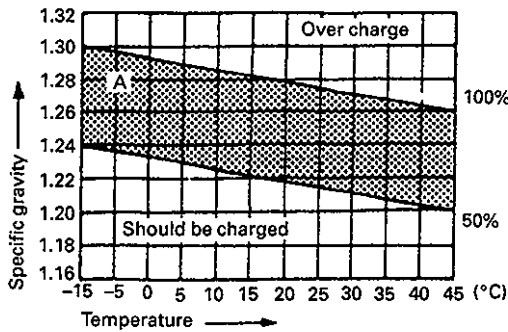

## HYDROMETER TEST

The direct method of checking the battery for state of charge is to carry out a high rate discharge test, which involves a special precise voltmeter and an expensive instrument used in the service shops, but not recommendable to the user of the vehicle.

At 20 °C of battery temperature (electrolyte temperature):

- The battery is in **FULLY CHARGED STATE** if the electrolyte S.G. is 1.280.
- The battery is in **HALF CHARGED STATE** if the S.G. is 1.220.
- The battery is in **NEARLY DISCHARGED STATE** if the S.G. is 1.150 and is in danger of freezing.

As the S.G. varies with the temperature, if battery temperature is not at 20°C (68°F), you have to correct your S.G. reading (taken with your hydrometer) to the value at 20°C (68°F) and apply the corrected S.G. value to the three-point guide stated value.

For the manner of correction, refer to the graph showing the relation between S.G. value and temperature at the left.


### How to use the temperature-corrected state-of-charge graph

Suppose your S.G. reading is 1.28 and the battery temperature is -5 °C (23°F). Locate the intersection of the -5 °C line and the 1.28 S.G. line.


The intersection is within the "A" zone (shaded area in the graph) and that means **CHARGED STATE**.

To know how much the battery is charged, draw a line parallel to the zone demarcation line and extend it to the right till it meets with the percentage scale. In the present example, the line meets at about 85% point on the percentage scale. Therefore, the battery is charged up to the 85% level.


[60 A type]

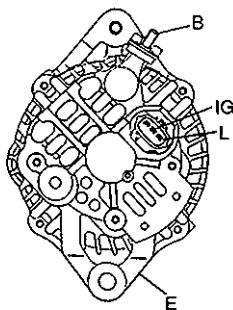

[70 A type]

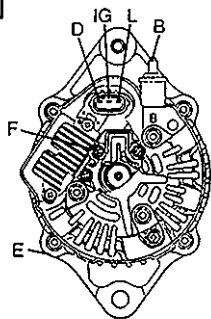

[85 A type]

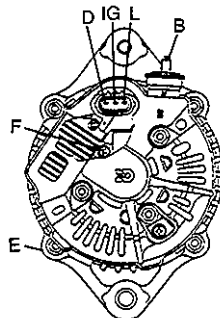

B : Generator output  
(Battery terminal)  
D : Dummy terminal  
E : Ground  
F : Field coil terminal  
IG : Ignition terminal  
L : Lamp terminal

## GENERATOR

### CAUTION:

- Do not mistake polarities of IG terminal and L terminal.
- Do not create a short circuit between IG and L terminals. Always connect these terminals through a lamp.
- Do not connect any load between L and E.
- When connecting a charger or a booster battery to vehicle battery, refer to this section describing battery charging.

Trouble in charging system will show up as one or more of following conditions:

- 1) Faulty indicator lamp operation.
- 2) An undercharged battery as evidenced by slow cranking or indicator dark.
- 3) An overcharged battery as evidenced by excessive spewing of electrolyte from vents.

Noise from generator may be caused by a loose drive pulley, loose mounting bolts, worn or dirty bearings, defective diode, or defective stator.


## FAULTY INDICATOR LAMP OPERATION

PROBLEM	POSSIBLE CAUSE	CORRECTION
Charge light does not light with ignition ON and engine off	<ul style="list-style-type: none"> <li>• Fuse blown</li> <li>• Light burned out</li> <li>• Wiring connection loose</li> <li>• IC regulator faulty (60 A type only)</li> <li>• IC regulator or field coil faulty (70 A and 85 A types only)</li> <li>• Poor contact between brush and slip ring (70 A and 85 A types only)</li> </ul>	Check fuse. Replace light. Tighten loose connection. Check generator Check generator.  Repair or replace.
Charge light does not go out with engine running (battery requires frequent recharging)	<ul style="list-style-type: none"> <li>• Drive belt loose or worn</li> <li>• IC regulator or generator faulty</li> <li>• Wiring faulty</li> </ul>	Adjust or replace drive belt. Check charging system. Repair wiring.

## UNDERCHARGED BATTERY

This condition, as evidenced by slow cranking or indicator clear with red dot can be caused by one or more of the following conditions even though indicator lamp may be operating normal. Following procedure also applies to cars with voltmeter and ammeter.

- 1) Make sure that undercharged condition has not been caused by accessories left on for extended period of time.
- 2) Check drive belt for proper tension.
- 3) If battery defect is suspected, refer to BATTERY section.
- 4) Inspect wiring for defects. Check all connections for tightness and cleanliness, battery cable connections at battery, starting motor and ignition ground cable.
- 5) Connect voltmeter and ammeter as shown in left figure.

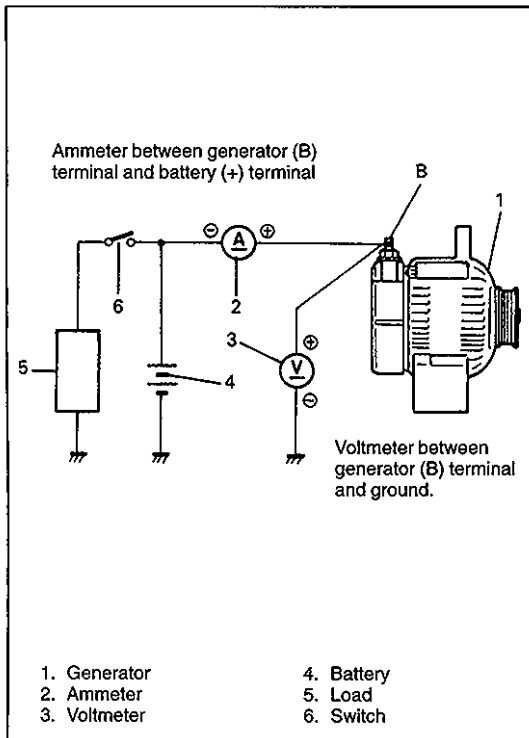

### Voltmeter

Set between generator B terminal and ground.

### Ammeter


Set between generator B terminal and battery (+) terminal.

### NOTE:


Use fully charged battery.

- 6) Measure current and voltage.

### [60 A type]

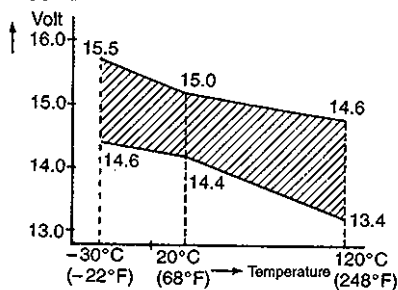

### [70 A and 85 A types]

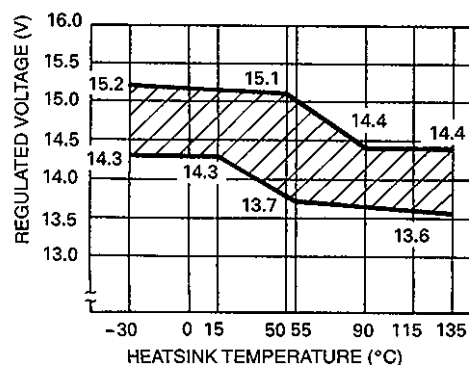

## No-load Check

- 1) Run engine from idling up to 2,000 rpm and read meters.

### NOTE:

Turn off switches of all accessories (wiper, heater etc.).

Standard current: 10 A maximum

Standard voltage: 14.4 – 15.0 V (at 20°C, 85°F) 60 A type

14.1 – 15.2 V (at 20°C, 68°F) 70 A and 85 A types

### NOTE:

Consideration should be taken that voltage will differ somewhat with regulator case temperature as shown in left figure.



**Higher Voltage**

If voltage is higher than standard value, check ground of brushes. If brushes are not grounded, replace IC regulator.

**Lower Voltage****[60 A type]**

If voltage is below or in standard value, increase engine speed up to 2000 – 2500 rpm soon after starting engine, and read maximum value on ammeter immediately.

If current is less than 42 A, repair or replace generator.

**[70 A and 85 A types]**

If voltage is lower than standard value, proceed to following check.


- 2) Ground F terminal and start engine, then measure voltage at B terminal as shown in left figure.

- Voltage is higher than standard value



It is considered that generator itself is good but IC regulator has been damaged, replace IC regulator.

- Voltage is lower than standard value

Generator itself has problem, check the generator.

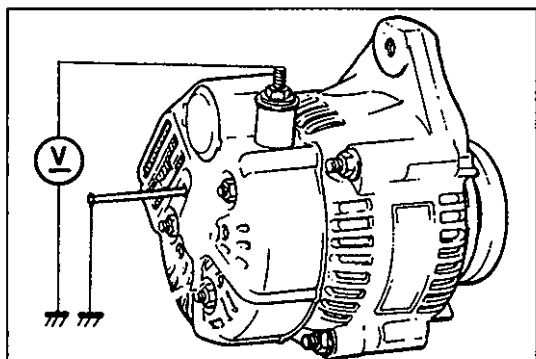**Load Check [70 A and 85 A types only]**

- 1) Run engine at 2,000 rpm and turn on head light and heater motor.
- 2) Measure current and if it is less than 20 A (70A type) or 30 A (85 A type) repair or replace generator.

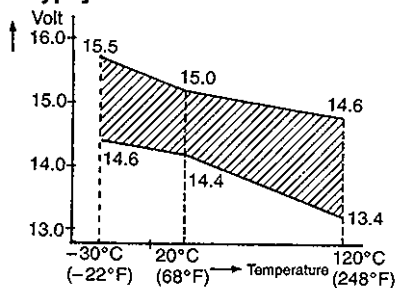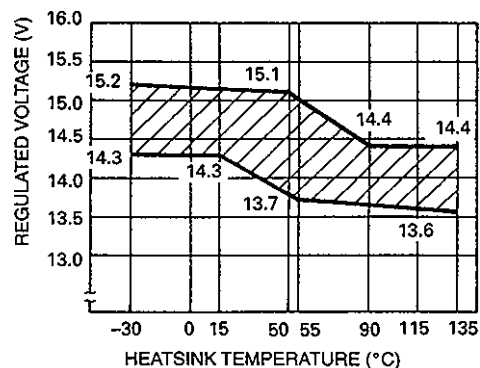**[60 A type]****[70 A and 85 A types]****OVERCHARGED BATTERY**

- 1) To determine battery condition, refer to BATTERY section.
- 2) If obvious overcharge condition exists as evidenced by excessive spewing of electrolyte, measure generator B terminal voltage at engine 2000 rpm.
- 3) If measured voltage is higher than upper limit value, proceed to disassembly section of generator service.
- 4) Check ground of brushes. If brushes are not grounded, replace IC regulator. Then check field coil for grounds and shorts, referring to "INSPECTION" section.

## ON-VEHICLE SERVICE

### BATTERY

#### JUMP STARTING IN CASE OF EMERGENCY WITH AUXILIARY (BOOSTER) BATTERY

**CAUTION:**

If vehicle is manual transmission model and has a catalytic converter, do not push or tow it to start. Damage to its emission system and/or to other parts may result.

Both booster and discharged battery should be treated carefully when using jumper cables. Follow procedure outlined below, being careful not to cause sparks.

**WARNING:**

- Departure from these conditions or procedure described below could result in:
  - (1) Serious personal injury (particularly to eyes) or property damage from such causes as battery explosion, battery acid, or electrical burns.
  - (2) Damage to electronic components of either vehicle.
- Remove rings, watches, and other jewelry. Wear approved eye protection.
- Be careful so that metal tools or jumper cables do not contact positive battery terminal (or metal in contact with it) and any other metal on vehicle, because a short circuit could occur.

- 1) Set parking brake and place automatic transmission in PARK (NEUTRAL on manual transmission). Turn off ignition, turn off lights and all other electrical loads.
- 2) Check electrolyte level. If it is below low level line, add distilled water.
- 3) Attach end of one jumper cable to positive terminal of booster battery and the other end of the same cable to positive terminal of discharged battery. (Use 12-volt battery only to jump start engine).
- 4) Attach one end of the remaining negative cable to negative terminal of booster battery, and the other end to a solid engine ground (such as exhaust manifold) at least 45 cm (18 in.) away from battery of vehicle being started.


**WARNING:**

Do not connect negative cable directly to negative terminal of dead battery.

- 5) Start engine of vehicle with booster battery and turn off electrical accessories. Then Start engine of the vehicle with discharged battery.
- 6) Disconnect jumper cables in the exact reverse order.

**WITH CHARGING EQUIPMENT****CAUTION:**

When jump starting engine with charging equipment, be sure equipment used is 12-volt and negative ground. Do not use 24-volt charging equipment. Using such equipment can cause serious damage to electrical system or electronic parts.

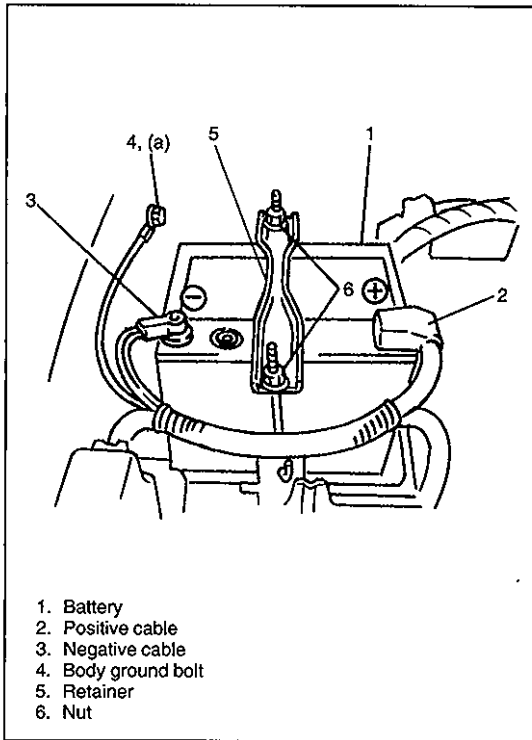**DISMOUNTING**

- 1) Disconnect negative cable.
- 2) Disconnect positive cable.
- 3) Remove retainer.
- 4) Remove battery.

**HANDLING**

When handling battery, following safety precautions should be followed:

- Hydrogen gas is produced by battery. A flame or spark near battery may cause the gas to ignite.
- Battery fluid is highly acidic. Avoid spilling on clothing or other fabric. Any spilled electrolyte should be flushed with large quantity of water and cleaned immediately.

**REMOUNTING**



- 1) Reverse removal procedure.
- 2) Torque battery cables to specification.

**NOTE:**

Check to be sure that ground cable has enough clearance to hood panel by terminal.

**Tightening Torque**

(a): 8.0 N·m (0.8 kg-m, 6.0 lb-ft)

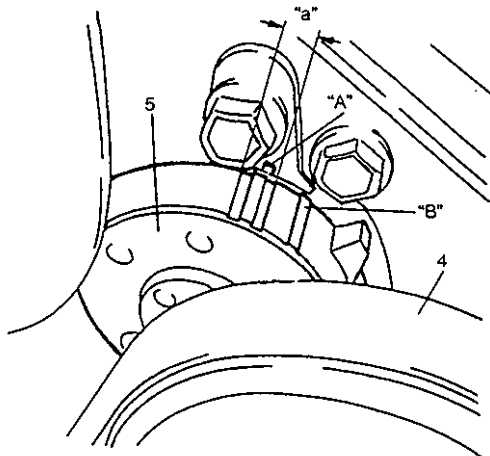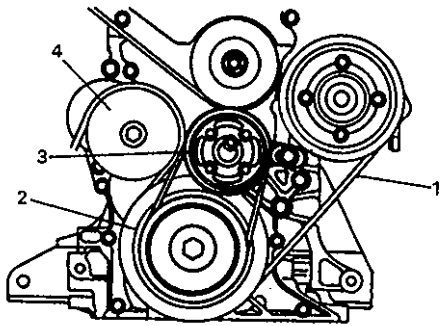

1. Generator belt
2. Crankshaft pulley
3. Radiator fan pulley
4. Tension pulley
5. Tensioner

## GENERATOR

### GENERATOR BELT

[G16 and H25 engines]

Refer to "COOLING FAN BELT" in SECTION 6B "ENGINE COOLING".

[J20 engine]

### INSPECTION

- Inspect belt for cracks, cuts, deformation, wear and cleanliness. If any of above conditions are found replace generator belt.
- Check to make sure that tension indicators are as follows in the left figure by using mirror.
  - (a) If the tension indicator "B" is found to the left of the indicator "A", replace the generator belt.
  - (b) If new generator belt has been installed, indicator "A" should be within "a" of the left figure. If it isn't, it means that belt is not installed properly. Reinstall it properly.

### REMOVAL

#### WARNING:

**Disconnect negative cable at battery before removing and installing generator belt.**


- 1) Loosen tensioner by turning the tensioner pulley clock wise.
- 2) While holding the tensioner and belt loose, remove generator belt.

### INSTALLATION

- 1) Loosen tensioner by turning the tensioner pulley clockwise.
- 2) While holding the tensioner, install generator belt.

#### NOTE:

- Make sure that the belt fits each pulley's groove properly.
- After installing generator belt, perform checks described above and make sure that tension indicator is within standard range.

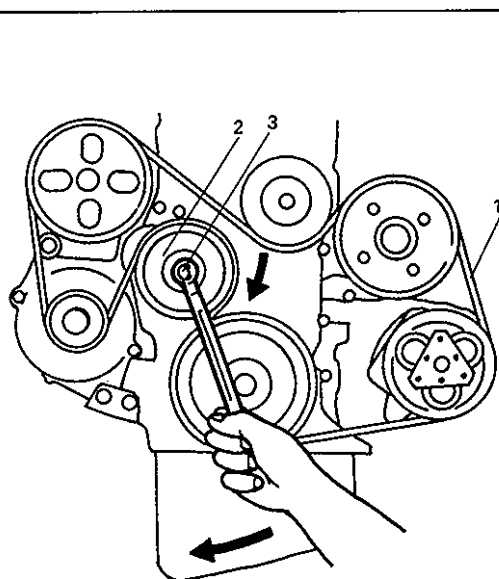

1. Generator belt
2. Tensioner
3. Tensioner bolt

# UNIT REPAIR OVERHAUL

## GENERATOR

### DISMOUNTING

1) Disconnect negative (–) cable at battery.





2) Remove air cleaner outlet hose.


3) Remove canister from its bracket.

4) Disconnect “B” terminal wire and coupler from generator.

5) Remove generator belt. Refer to SECTION 6B “ENGINE COOLING” (G16 and H25 engines) or “GENERATOR BELT” (J20 engine) in this section.

6) Remove generator.

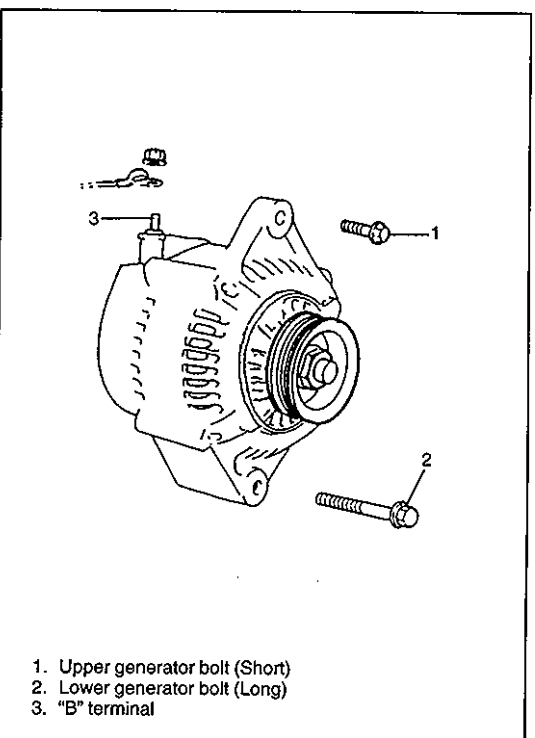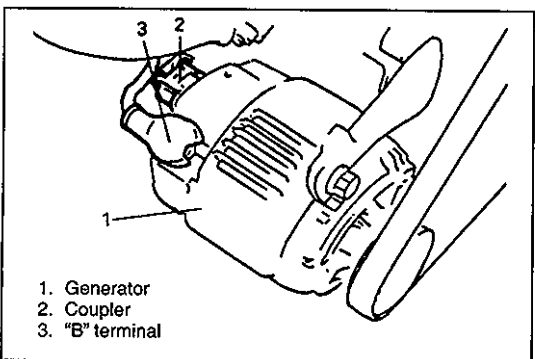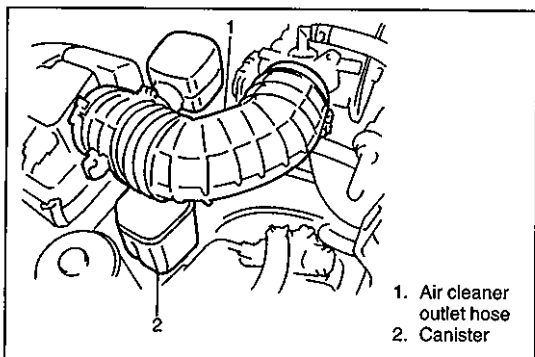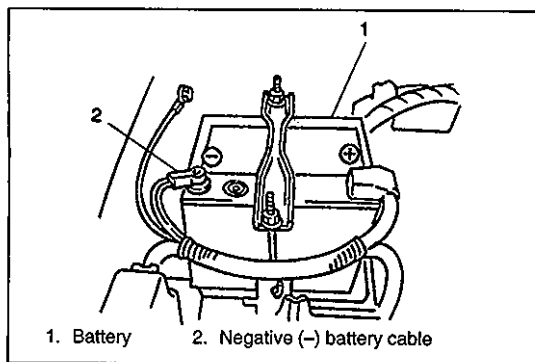

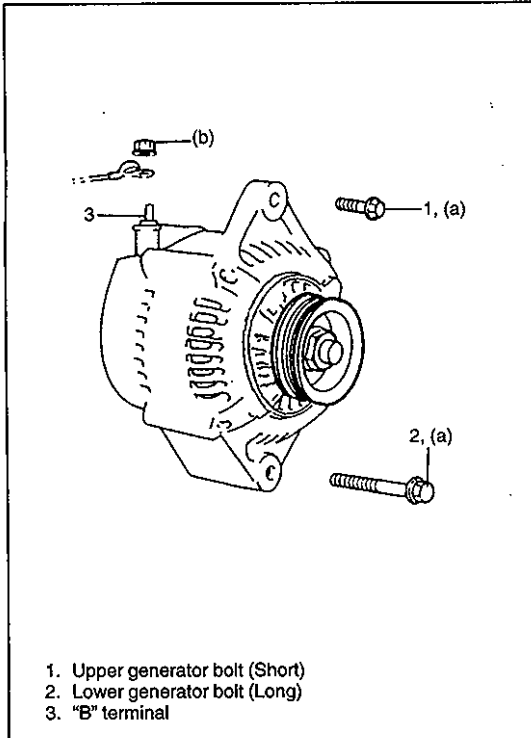

## REMOUNTING

- 1) Mount generator on the generator bracket.
- 2) Tighten generator bolts.

### Tightening Torque

**(a): 23 N·m (2.3 kg-m, 16.5 lb-ft)**



- 3) Install generator (cooling fan) belt. Refer to SECTION 6B "ENGINE COOLING" (G16 and H25 engines) or "GENERATOR BELT" (J20 engine) in this section.
- 4) Install cooling fan belt (J20 engine only). Refer to SECTION 6B "ENGINE COOLING".
- 5) Connect "B" terminal wire and coupler to generator.

### Tightening Torque


**(b): 8.0 N·m (0.8 kg-m, 6.0 lb-ft)**

- 6) Install canister.
- 7) Install air cleaner outlet hose.
- 8) Connect negative (–) cable at battery.


# DISASSEMBLY [60 A type]

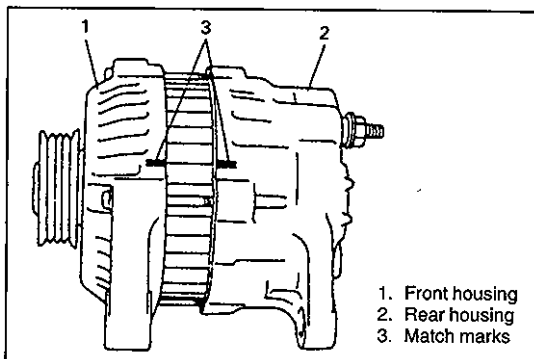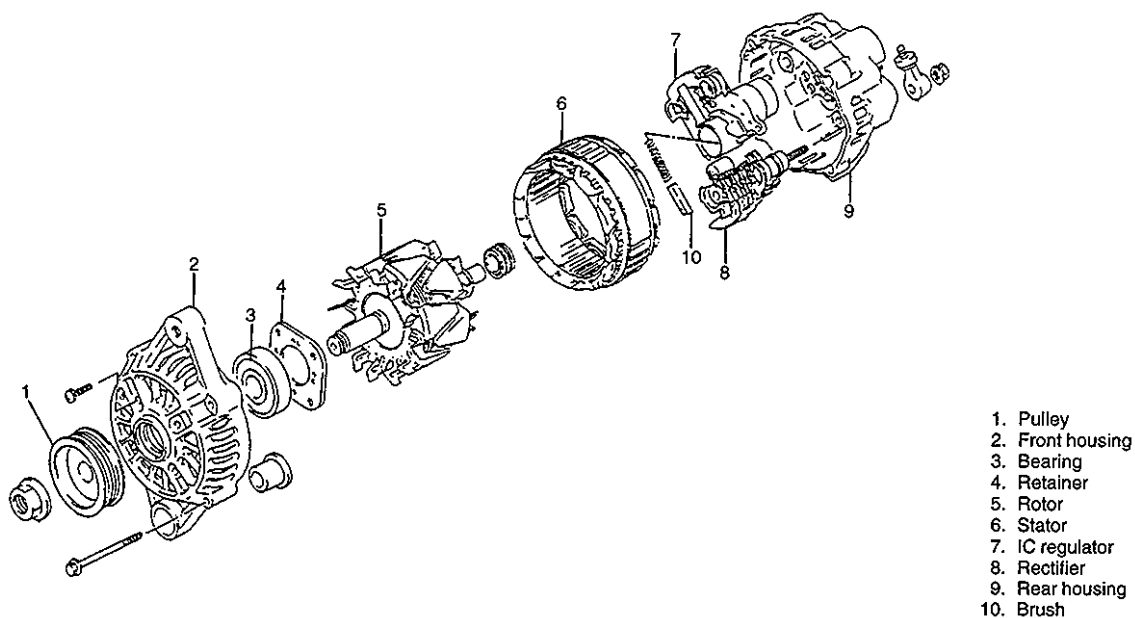


1) For easier reinstallation, provide match marks on both front and rear housings as shown in left figure before separating them.

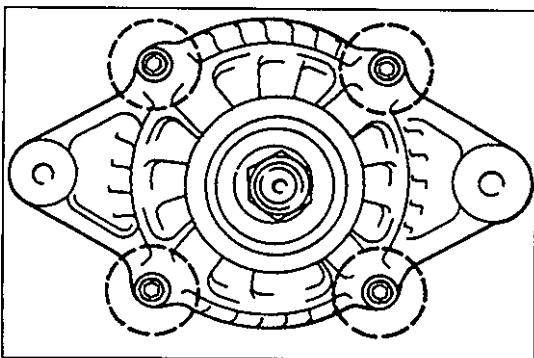

2) Remove housing bolts from generator.

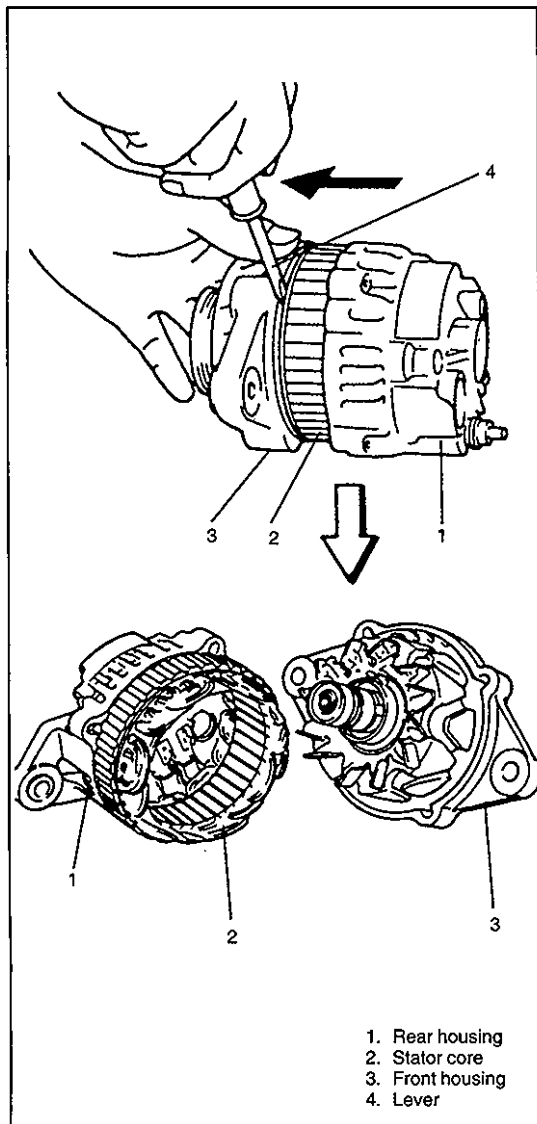

- 3) With lever inserted between stator core and front housing, separate generator into front and rear sides.

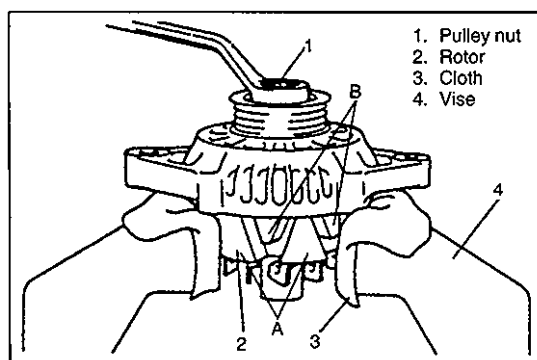


- 4) Loosen pulley nut by using vise and take off pulley.

**NOTE:**


- When using vise, put clean cloth between rotor and vise so as not to cause damage to rotor.
- Be sure to hold the location A. Do not hold the location B as it does not have enough structural strength.

- 5) Remove rotor from front housing.

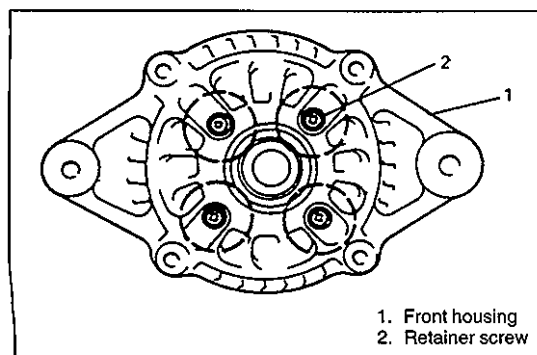


- 6) When removing front bearing, remove bearing retainer screws and retainer.




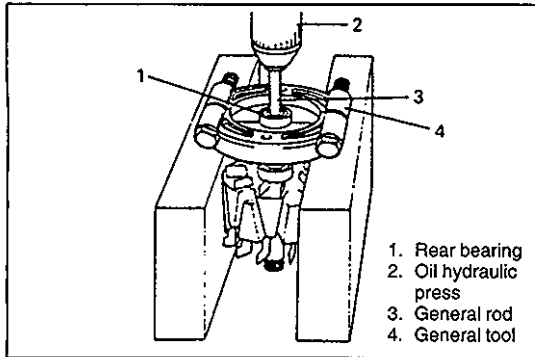


7) When removing rear bearing, use oil hydraulic press.

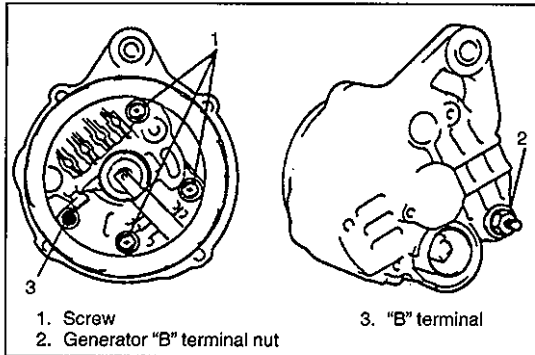

8) Remove three screws and generator "B" terminal nut.

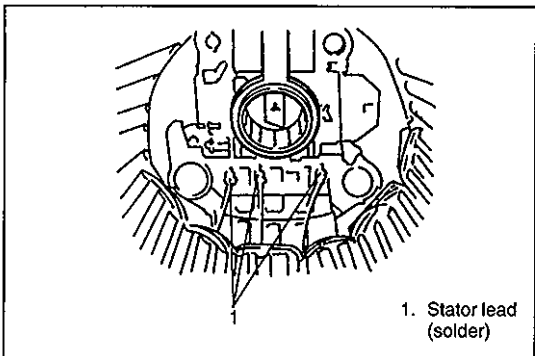


9) Unsolder stator leads and remove stator from rear housing and regulator assembly.

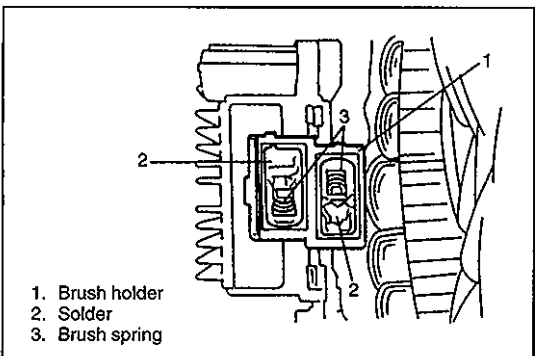

10) To remove brush, remove holder cover from brush holder and then disconnect brush wire from regulator terminal by using soldering iron.


## DISASSEMBLY [70 A and 85 A types]

## [70A type]

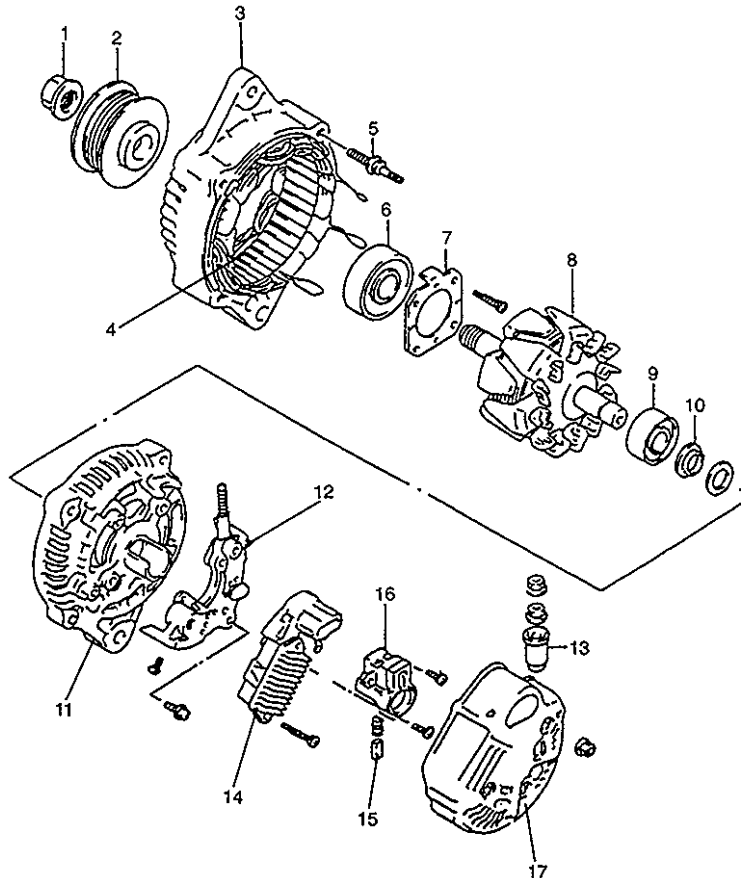


1. Pulley nut
2. Pulley
3. Drive end frame
4. Stator
5. Stud bolt
6. Drive end bearing
7. Bearing retainer
8. Rotor
9. End housing bearing
10. Bearing cover
11. Rear end frame
12. Rectifier
13. Insulator
14. Regulator
15. Brush
16. Brush holder
17. Rear end cover


## [85 A type]

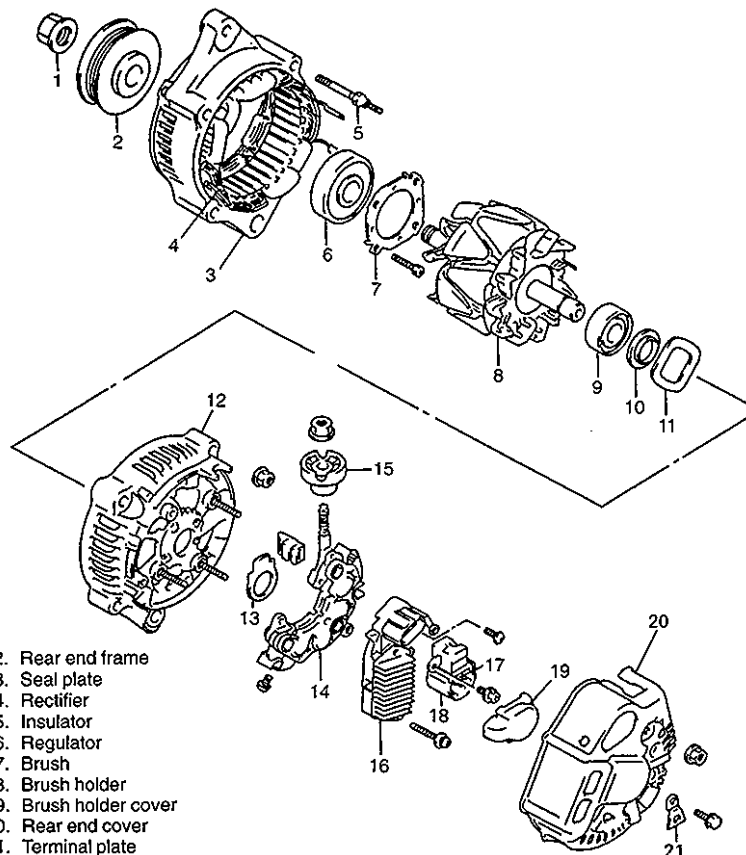


- |                        |                        |
|------------------------|------------------------|
| 1. Pulley nut          | 12. Rear end frame     |
| 2. Pulley              | 13. Seal plate         |
| 3. Drive end frame     | 14. Rectifier          |
| 4. Stator              | 15. Insulator          |
| 5. Stud bolt           | 16. Regulator          |
| 6. Drive end bearing   | 17. Brush              |
| 7. Bearing retainer    | 18. Brush holder       |
| 8. Rotor               | 19. Brush holder cover |
| 9. End housing bearing | 20. Rear end cover     |
| 10. Bearing cover      | 21. Terminal plate     |
| 11. Wave washer        |                        |

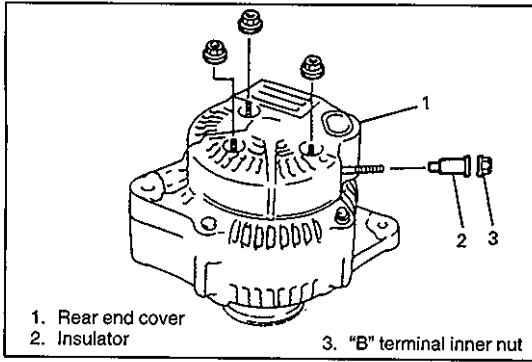


- 1) Remove "B" terminal inner nut and insulator.
- 2) Remove rear end cover.

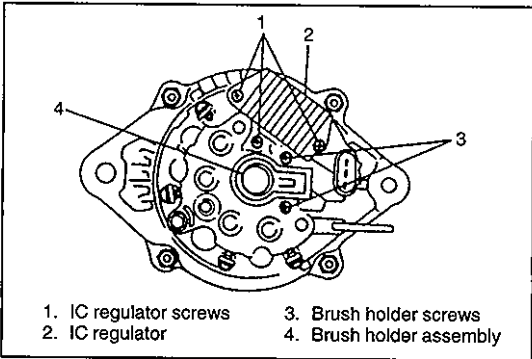


- 3) Remove 2 screws and pull out brush holder assembly.
- 4) Remove 3 screws and IC regulator.
- 5) Remove brush holder cover from brush holder.

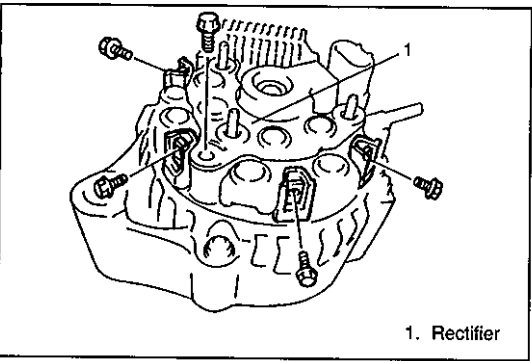

- 6) Remove 4 screws, 1 bolt and rectifier.

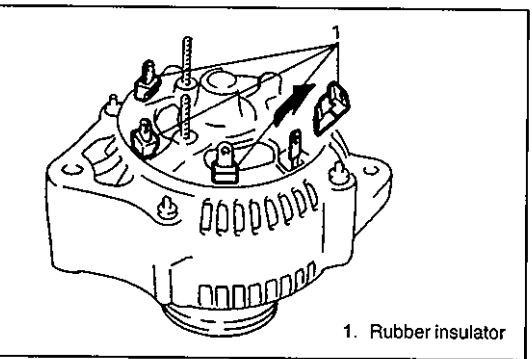


- 7) Remove 4 rubber insulators (85 A type only).

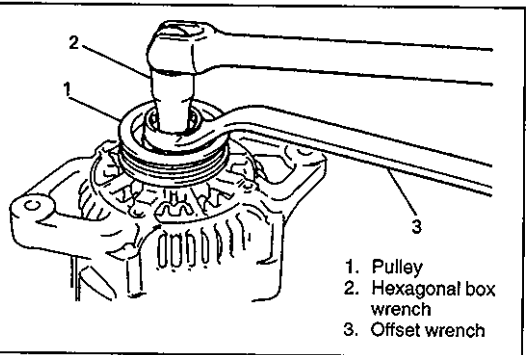

- 8) Hold shaft by using hexagonal box wrench and remove pulley nut, and then pull out pulley.

**CAUTION:**


- To hold shaft, use hexagonal box. Duodecimal box may cause slipping and consequential shaft or tool damage.
- Do not attempt to hold pulley by using vise or pipe wrench so as not to distort it.

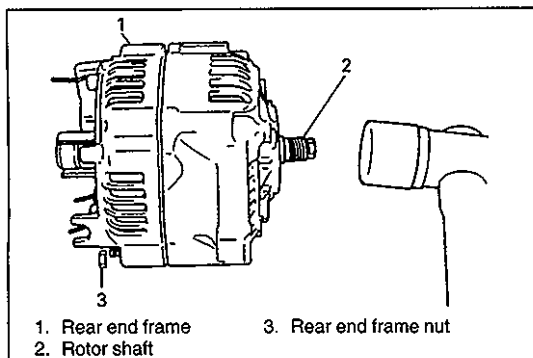

- 9) Remove 4 rear end frame nuts.
- 10) Drive out rear end frame with rotor tapping shaft lightly by using plastic hammer.
- 11) Separate rear end frame from rotor evenly by using plastic hammer.

**CAUTION:**


**Do not hit shaft at slip ring side, when separating rotor and rear end frame.**

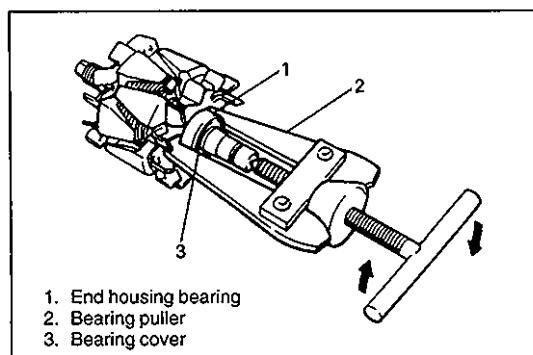

- 12) If required, use bearing puller to remove end housing bearing and bearing cover.

**CAUTION:**

**Care must be exercised so as not to distort cooling fan blade while applying puller.**

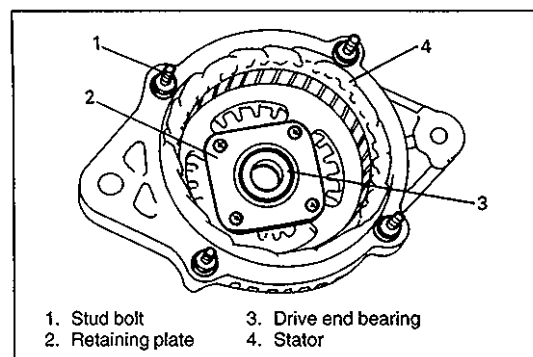


- 13) If required, remove 4 screws, retainer plate and then drive out drive end bearing.

- 14) If required, remove stud bolts and then pull out stator.

**NOTE:**

**Heating drive end frame may facilitate removal of stator.**

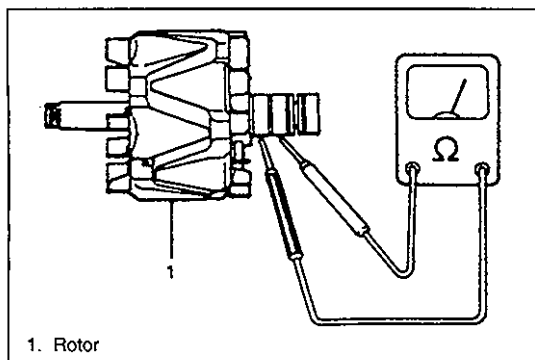


## INSPECTION [60 A type]


### Rotor

- 1) Using ohmmeter, check for continuity between slip rings of rotor. If there is no continuity, replace rotor.

**Standard resistance: 2.5 – 2.9 Ω**

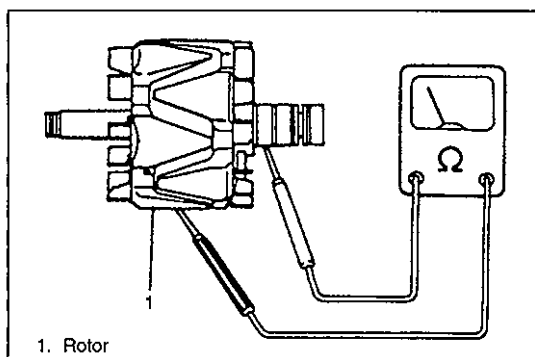


- 2) Using ohmmeter, check that there is no continuity between slip ring and rotor core. If there is continuity, replace rotor.
- 3) Check slip rings for roughness or scoring. If rough or scored, replace rotor.

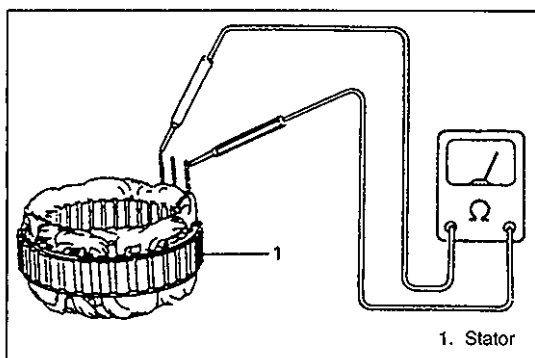


### Stator

- 1) Using ohmmeter, check all leads for continuity. If there is no continuity, replace stator.

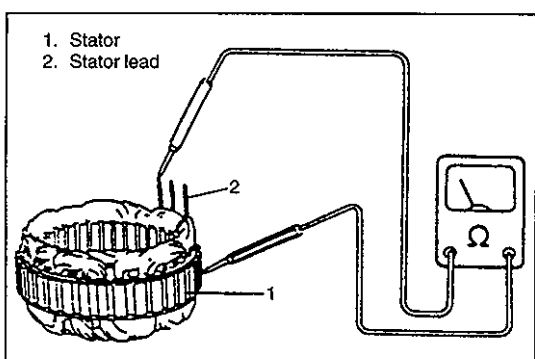

- 2) Using ohmmeter, check that there is no continuity between coil leads and stator core. If there is continuity, replace stator.

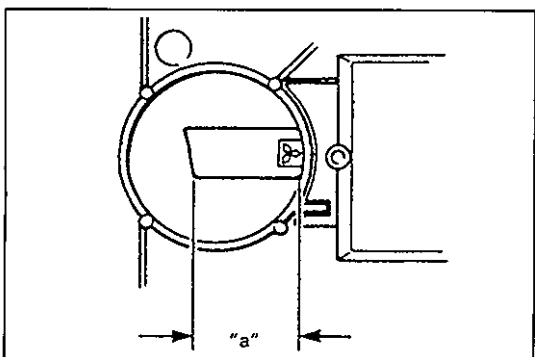


### Brush and brush holder

Check each brush for wear by measuring its length.  
If brush is found worn down to service limit, replace brush.

#### Brush length "a"


**Standard: 16 mm (0.63 in.)**

**Service limit: 2 mm (0.08 in.)**

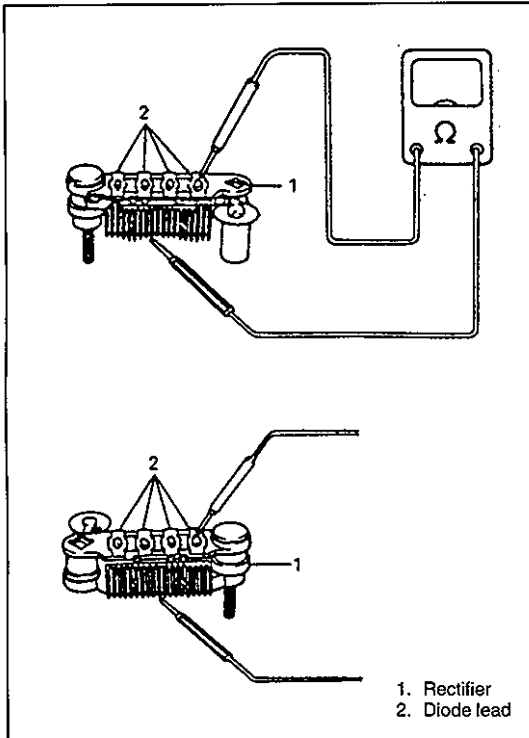

### Rectifier


- 1) Using ohmmeter, check continuity between each of upper and lower rectifier bodies and each diode lead. Check both directions by reversing probes of ohmmeter and there should be only one-way continuity in each case. If check result is not satisfactory, replace rectifier.
- 2) In the same manner as described in above step 1), check that there is only one-way continuity between both leads of diode trio.

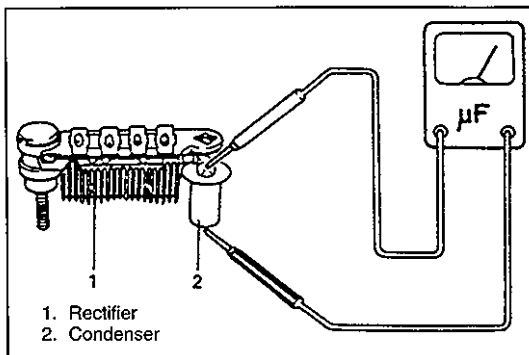

### Condenser

Check condenser capacity.

**Condenser capacity: 0.5  $\mu F$**

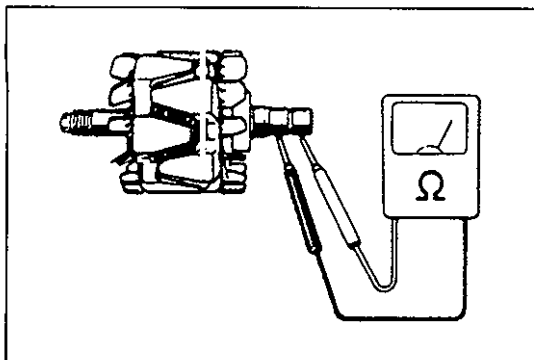


## INSPECTION [70 A and 85 A types]


### Rotor

- Using ohmmeter, check for continuity between slip rings of rotor. If there is no continuity, replace rotor.

**Standard resistance: About 2.9  $\Omega$**

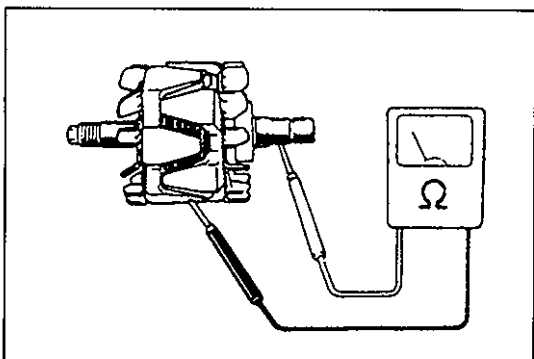

- Using ohmmeter, check that there is no continuity between slip ring and rotor. If there is continuity, replace rotor.

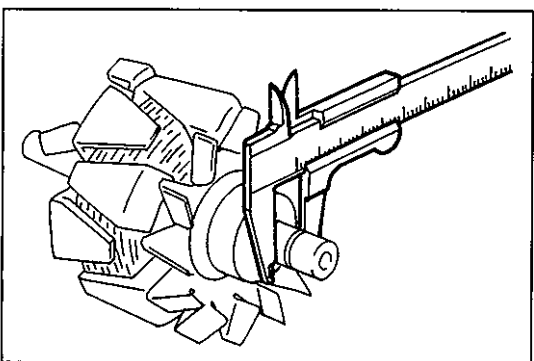


- Check slip rings for roughness or scoring. If rough or scored, replace rotor.

Using a vernier caliper, measure the slip ring diameter.

**Standard diameter: 14.2 – 14.4 mm (0.557 – 0.567 in.)**


**Minimum diameter: 12.8 mm (0.504 in.)**

If the diameter is less than minimum, replace the rotor.

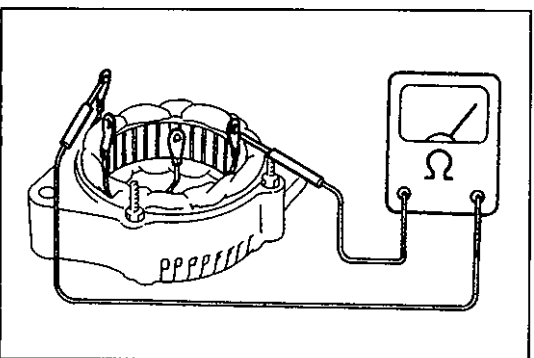


### Stator

- Using ohmmeter, check all leads for continuity. If there is no continuity, replace stator.

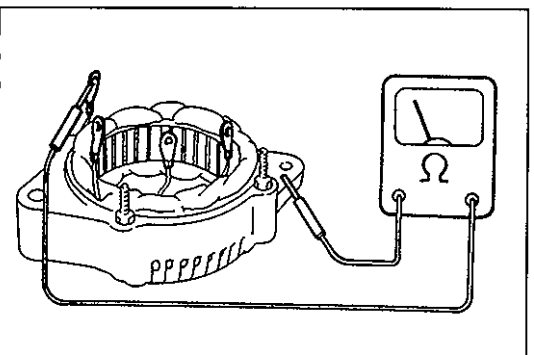

- Using ohmmeter, check that there is no continuity between coil leads and stator core. If there is continuity, replace stator.

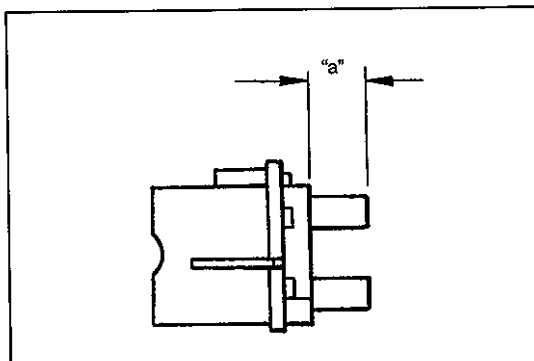


### Brush and brush holder

Check each brush for wear by measuring its length as shown. If brush is found worn down to service limit, replace brush. Refer to "Replace Brush" in this section.

#### Exposed brush length "a"

Standard: 10.5 mm (0.413 in.)

Limit : 4.5 mm (0.351 in.)

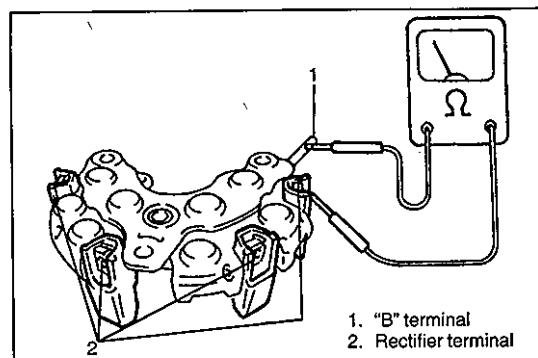


### Rectifier

#### • Positive Rectifier

- 1) Using an ohmmeter, connect one tester probe to the "B" terminal and the other to each rectifier terminal.
- 2) Reverse the polarity of the tester probes and repeat step 1).
- 3) Check that one shows continuity and the other shows no continuity.


If there is continuity, replace the rectifier.

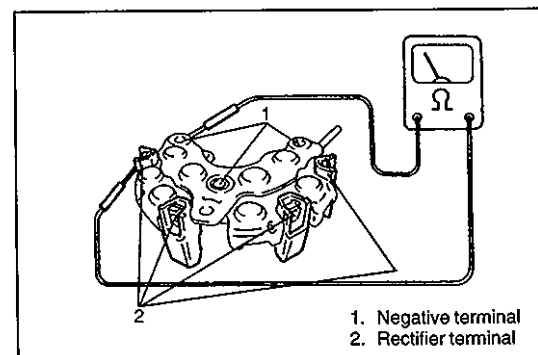

#### • Negative Rectifier


- 1) Using an ohmmeter, connect one tester probe to each negative terminal and the other to each rectifier terminal.
- 2) Reverse the polarity of the tester probes and repeat step 1).
- 3) Check that one shows continuity and the other shows no continuity.

If there is continuity, replace the rectifier.

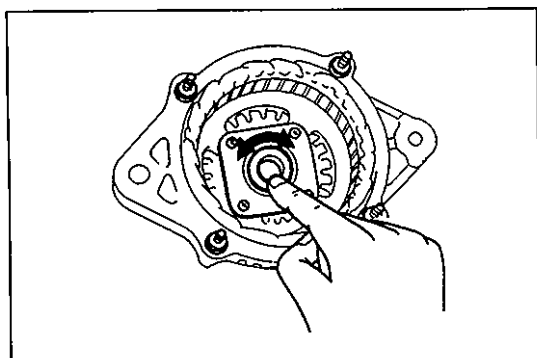


### Bearing

- Check that drive and bearing is not rough or worn.

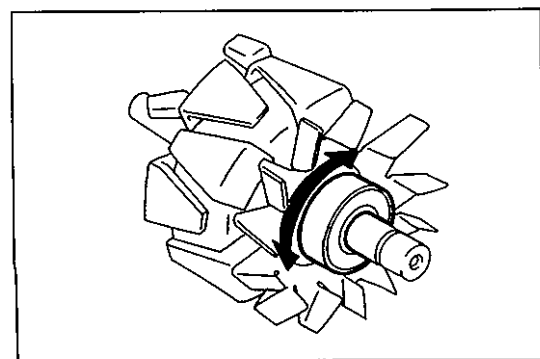

- Check that end housing bearing is not rough or worn.



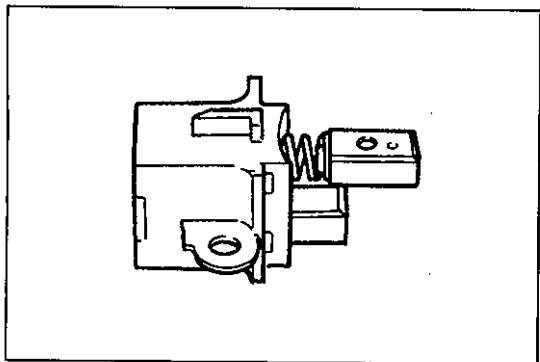

## REPLACE BRUSH

### [60 A type]


Refer to "DISASSEMBLY" and "REASSEMBLY" of 60 A type.


### [70 A and 85 A types]

- 1) Remove rear end cover and then brush holder.
- 2) Unsolder and remove the brush and spring.
- 3) Run the wire of a new brush through the spring and the hole in the brush holder, and insert the spring and brush into the brush holder.
- 4) Solder the brush wire to the brush holder at specified exposed length.

**Exposed length "a": 10.5 mm (0.413 in.)**

- 5) Check that the brush moves smoothly in the brush holder.
- 6) Cut off the excess wire.
- 7) Apply insulation paint to the soldered area.

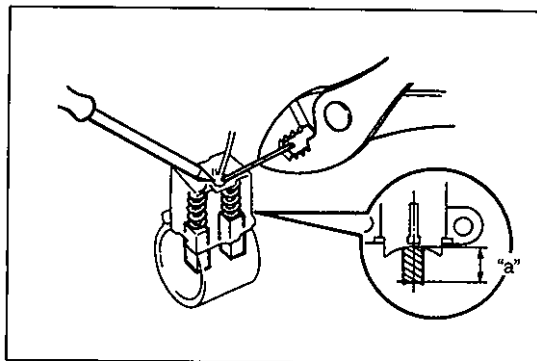


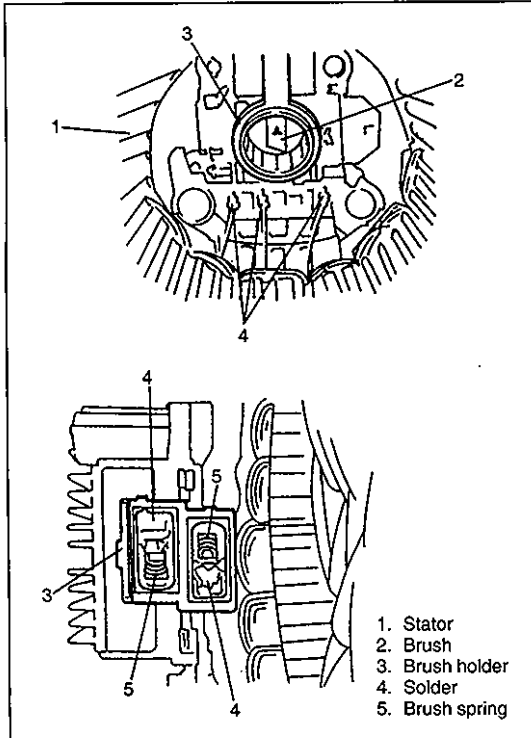

## REASSEMBLY [60 A type]

Assemble in reverse order of DISASSEMBLY, noting the following.

- 1) Be sure to install brushes in the proper direction and solder brush wires and stator leads.

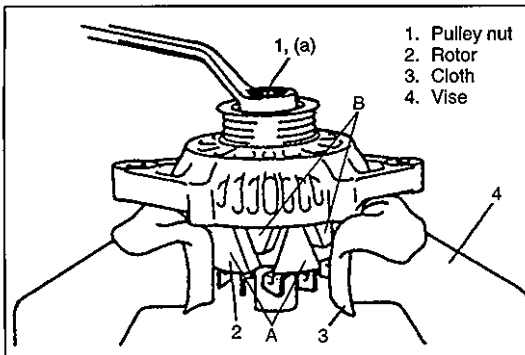


- 2) Tighten generator pulley nut to specified torque.

### Tightening Torque

(a): 118 N·m (11.8 kg·m, 85.5 lb·ft)

#### NOTE:

- When using vise, put clean cloth between rotor and vise so as not to cause damage to rotor.
- Be sure to hold the location A. Do not hold the location B as it does not have enough structural strength.

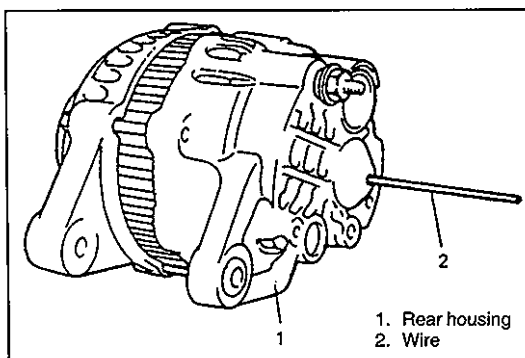


- 3) Push brushes into brush holder, then support brushes by inserting appropriate wire from hole of rear housing.

#### NOTE:


- After installing rotor, remove wire.
- Check to make sure that match marks on front and rear housing are aligned.
- Do not apply grease to rear (rotor) bearing. Remove oil completely if found in bearing box of rear housing.

- 4) After assembling generator, make sure that rotor turns smoothly.

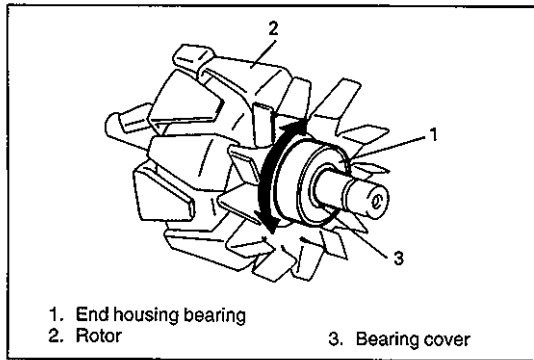

### REASSEMBLY [70 A and 85 A types]

- 1) If end housing bearing is removed, install it.
- 2) Check end housing bearing turns smoothly.

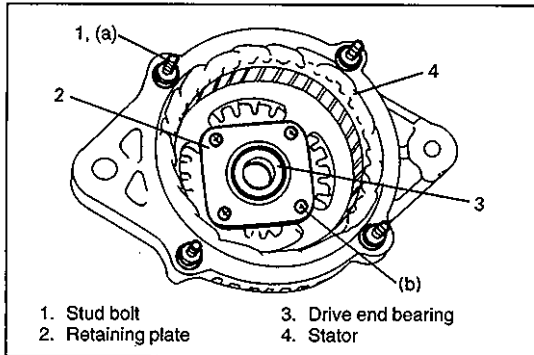


- 3) If stator is removed, install stator and tighten stud bolts.
- 4) If drive end bearing is removed, install it.
- 5) Check drive end bearing turns smoothly.


#### Tightening Torque

(a): 8.8 N·m (0.88 kg-m, 6.5 lb-ft)

(b): 2.6 N·m (0.26 kg-m, 2.0 lb-ft)

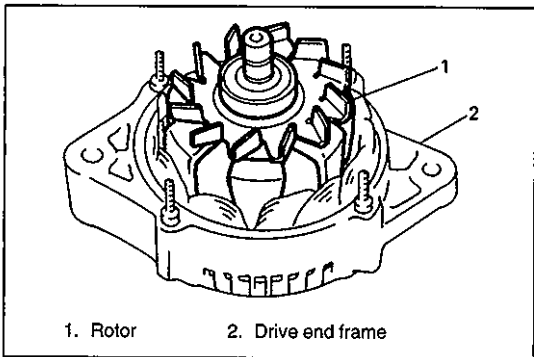


- 6) Place drive end frame on pulley, and then install rotor to drive end frame.

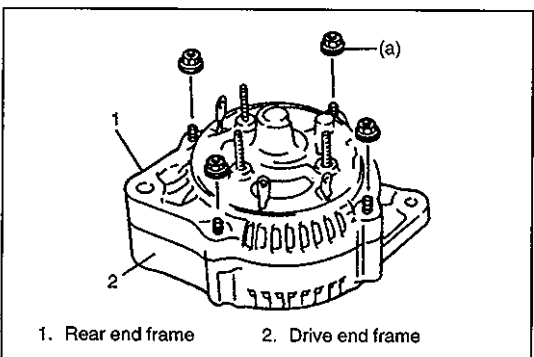

- 7) Install rear end frame to drive end frame.
- 8) Tighten 4 nuts to specified torque.

#### Tightening Torque


(a): 4.5 N·m (0.45 kg-m, 3.5 lb-ft)

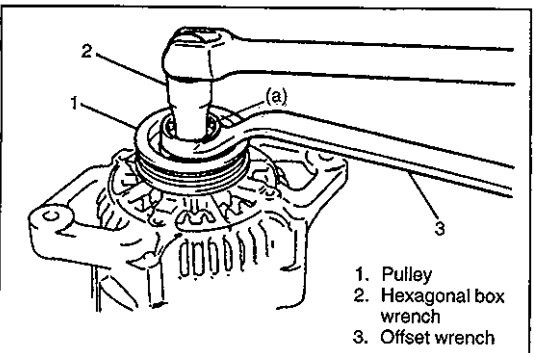


- 9) Install pulley and tighten pulley nut with holding shaft by using hexagonal box wrench to specified torque.

#### Tightening Torque

(a): 111 N·m (11.1 kg-m, 80.5 lb-ft)

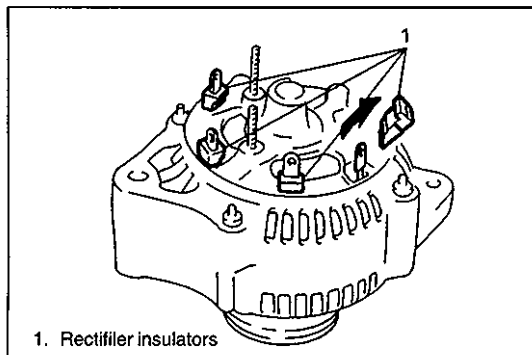

10) Install 4 rubber insulators.

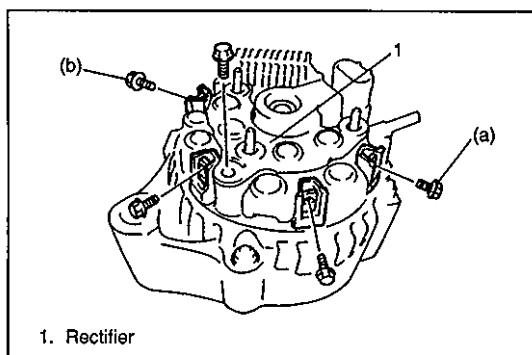

11) Install rectifier.


**CAUTION:**

When installing rectifier, check to confirm that stator leads have enough clearance with cooling fan blades.


**Tightening Torque**

(a): 2.0 N·m (0.2 kg-m, 1.5 lb-ft)

(b): 3.9 N·m (0.39 kg-m, 3.0 lb-ft)

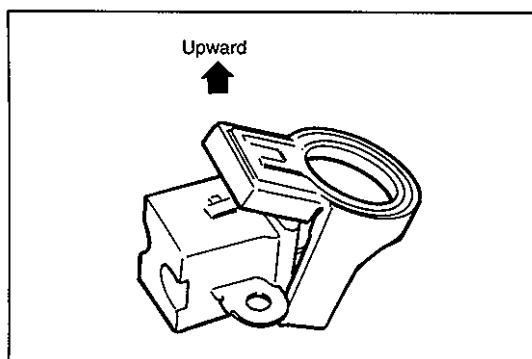

12) Install brush holder cover to brush holder.

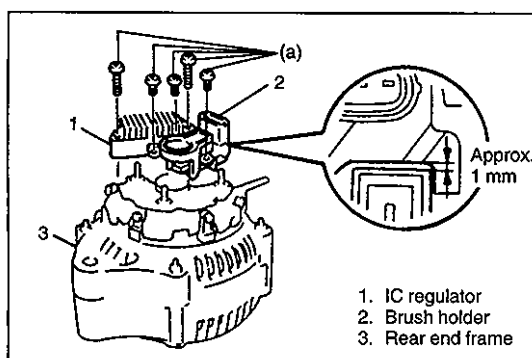


13) Place the IC regulator together with the brush holder horizontally on the rear end frame.

14) Install the 5 screws until there is a clearance of approx. 1 mm (0.04 in.) between the brush holder and connector.

**Tightening Torque**

(a): 2.0 N·m (0.2 kg-m, 1.5 lb-ft)

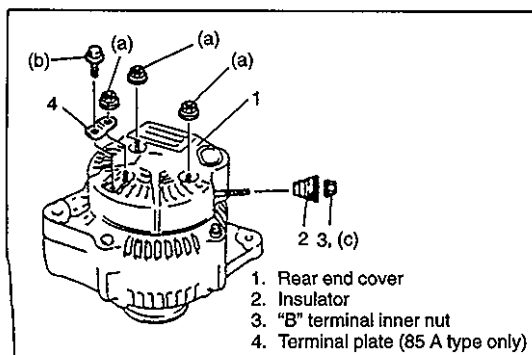

15) Install rear end cover and terminal plate.

**Tightening Torque**


(a): 4.5 N·m (0.45 kg-m, 3.5 lb-ft)

(b): 3.8 N·m (0.38 kg-m, 3.0 lb-ft) (85 A type only)

16) Install insulator and tighten "B" terminal inner nut to specified torque.

**Tightening Torque**

(c): 4.2 N·m (0.42 kg-m, 3.0 lb-ft)

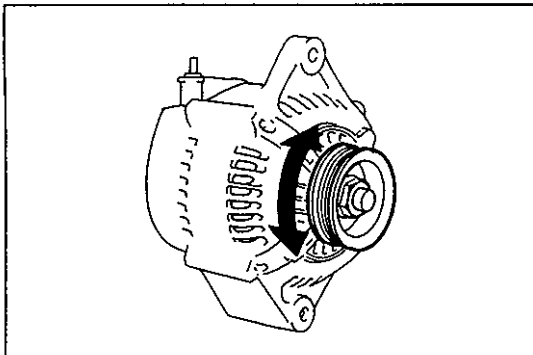

17) Make sure that rotor turns smoothly.

## SPECIFICATIONS

### BATTERY

**NOTE:**

The battery used in each vehicle is one of the following four types, depending on specification.

Battery type	38B20L	55B24L (S)	55D23L	75D23L
Rated capacity AH/5HR, 12 Volts	28	36	48	54
Electrolyte L (US/Imp. pt)	2.8 (5.92/4.93)	3.1 (6.55/5.46)	3.9 (8.24/6.86)	3.9 (8.24/6.86)
Electrolyte S.G.	1.28 when fully charged at 20°C (68°F)			

### GENERATOR

**NOTE:**

The generator used in each vehicle is one of the following three types, depending on specification.

Type	60 A type	70 A type	85 A type
Rated voltage	12 V		
Nominal output	60 A	70 A	85 A
Permissible max. speed	18000 r/min.		
No-load speed	1300 r/min (rpm)	1250 r/min (rpm)	950 r/min (rpm)
Setting voltage	14.4 to 15.0 V	13.6 to 14.4 V	
Permissible ambient temperature	−30 to 90°C (−22 to 194°F)		
Polarity	Negative ground		
Rotation	Clockwise viewed from pulley side		

## TIGHTENING TORQUE SPECIFICATIONS

Fastening	Tightening torque		
	N-m	kg-m	lb-ft
● Body ground bolt	8	0.8	6.0
● Generator mounting bolts and nut	23	2.3	16.5
● "B" terminal inner nut	4.2	0.42	3.0
● "B" terminal outer nut	8	0.8	6.0
● Pulley nut	60 A type	118	11.8
	70 A and 85 A types	111	11.1
● Rear end frame nuts	4.5	0.45	3.5
● Rear end cover nuts			
● Rectifier "B" bolt	3.9	0.39	3.0
● Stator stud bolts	8.8	0.88	6.5
● Drive end bearing plate screws	2.6	0.26	2.0
● Rectifier screws	2.0	0.20	1.5
● Regulator and brush holder screws			
● Terminal plate bolt	3.8	0.38	3.0

## SECTION 6K

# EXHAUST SYSTEM

### NOTE:

Whether being equipped with three-way catalytic converter or not depends on regulations of each country.

### CAUTION:

Be sure to use **UNLEADED FUEL** for the catalytic converter equipped vehicle. Use of **LEADED FUEL** will affect performance of the catalytic converter adversely to a great extent.

## CONTENTS

<b>GENERAL DESCRIPTION</b> .....	6K-1
<b>MAINTENANCE</b> .....	6K-2
<b>ON-VEHICLE SERVICE</b> .....	6K-3


## GENERAL DESCRIPTION

The exhaust system of the vehicle consists of the exhaust manifold, exhaust No.1 pipe, exhaust No.2 pipe, muffler, seals, gasket, etc. The three way catalytic converter is an emission control device added to the exhaust system to lower the level of Hydrocarbon (HC), Carbon Monoxide (CO) and Oxides of Nitrogen (NOx) pollutants in the exhaust gas.

### NOTE:

Whether following systems (parts) are used in the particular vehicle or not depends on specifications. Be sure to bear this in mind when performing service work.


- EGR control system
- EVAP canister, EVAP canister purge valve and vacuum hose
- Heated oxygen sensor or CO adjusting resistor
- Three way catalytic converter

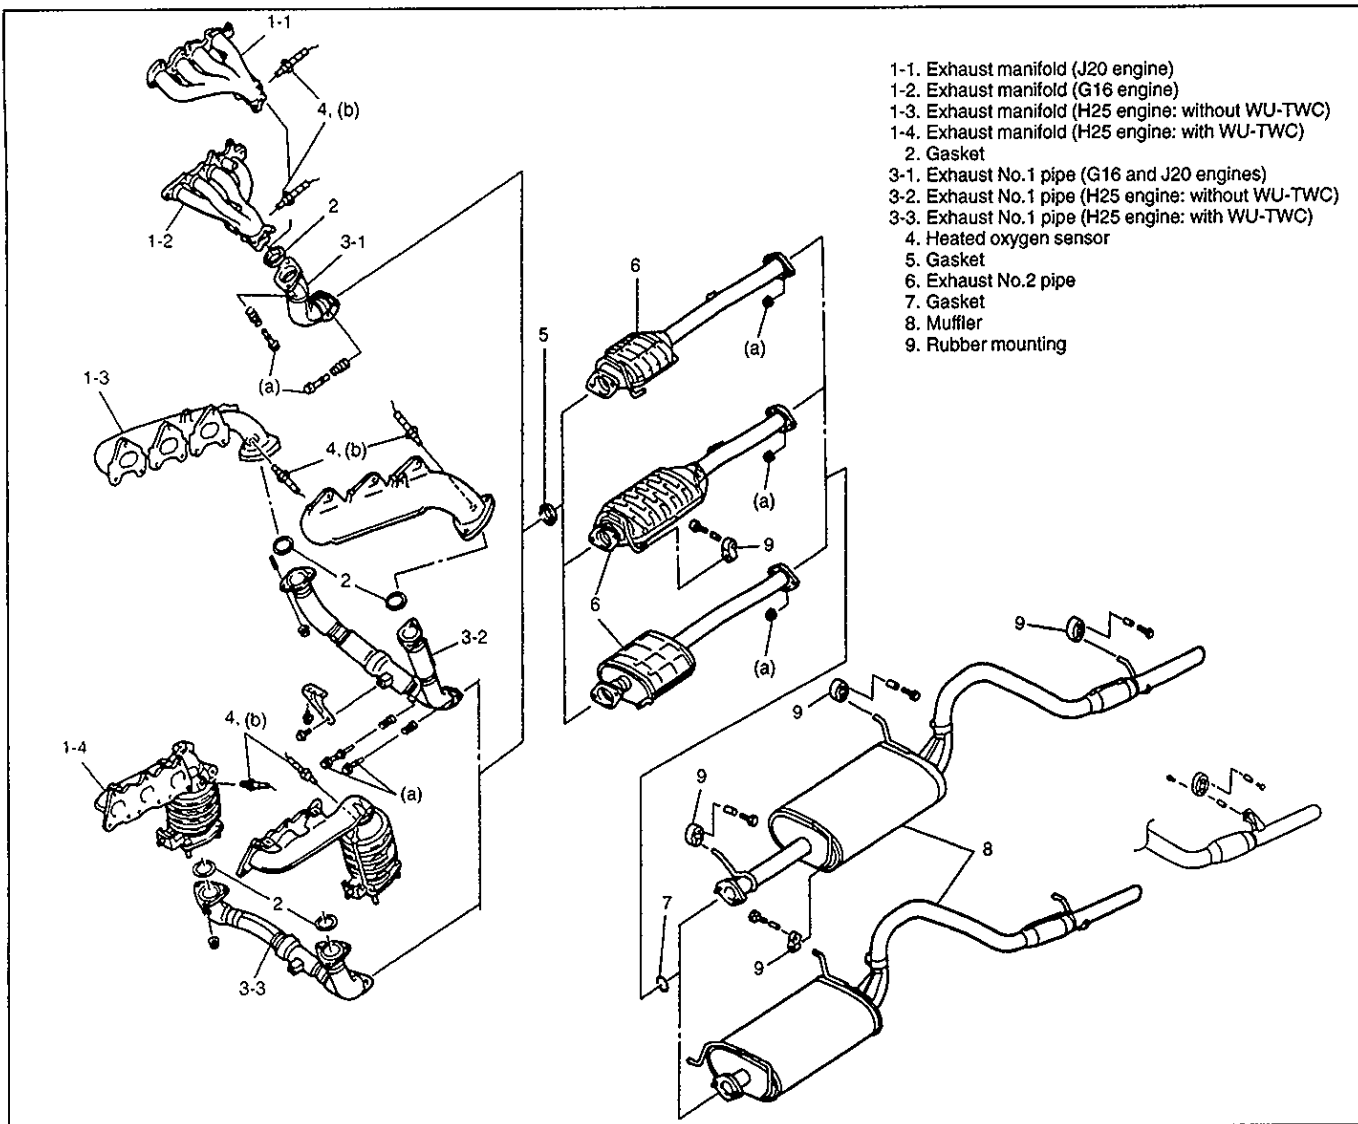

## MAINTENANCE

### WARNING:


To avoid the danger of being burned, do not touch the exhaust system when the system is hot. Any service on the exhaust system should be performed when the system is cool.

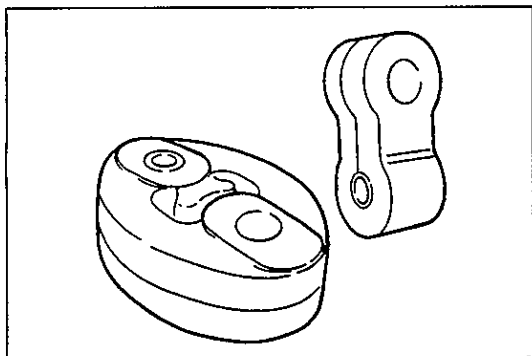

At every interval of periodic maintenance service, and when vehicle is raised for other service, check exhaust system as follows:

- Check rubber mountings for damage, deterioration, and out of position.



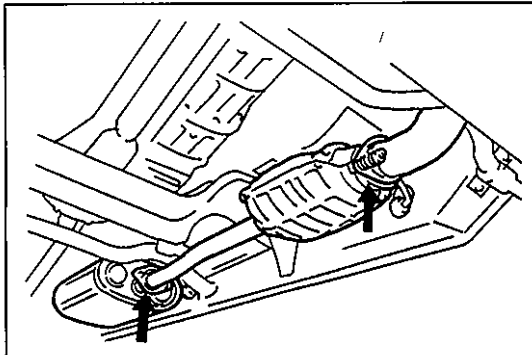

- Check exhaust system for leakage, loose connection, dent and damage.  
If bolts or nuts are loosened, tighten them to specified torque. Refer to "ON-VEHICLE SERVICE" for torque data.
- Check nearby body areas damaged, missing, or mispositioned part, open seam, hole connection or any other defect which could permit exhaust fumes to seep into vehicle.
- Make sure that exhaust system components have enough clearance from underbody to avoid overheating and possible damage to passenger compartment carpet.
- Any defect should be fixed at once.

## ON-VEHICLE SERVICE

### WARNING:

To avoid the danger of being burned, do not touch the exhaust system when the system is hot. Any service on the exhaust system should be performed when the system is cool.

### Tightening Torque

(a): 50 N·m (5.0 kg-m, 36.5 lb-ft)

(b): 45 N·m (4.5 kg-m, 32.5 lb-ft)

### EXHAUST MANIFOLD

Refer to Section 6A1 (G16 engine), 6A2 (H25 engine) or 6A4 (J20 engine) for removal and installation procedures. Before installation, check gasket and seal for deterioration or damage. Replace them as necessary.

### MUFFLER

### CAUTION:

As muffler center pipe has three way catalytic converter in it, it should not be exposed to any impulse. Be careful not to drop it or hit it against something.

Refer to figure of previous page for removal and installation.













Prepared by  
**SUZUKI MOTOR CORPORATION**

Overseas Service Department

1st Ed. Jan., 1998  
3rd Ed. Oct., 2001

Printed in Japan



**SUZUKI MOTOR CORPORATION**



\* 9 9 5 0 0 - 6 5 D 0 0 - 0 1 E \*