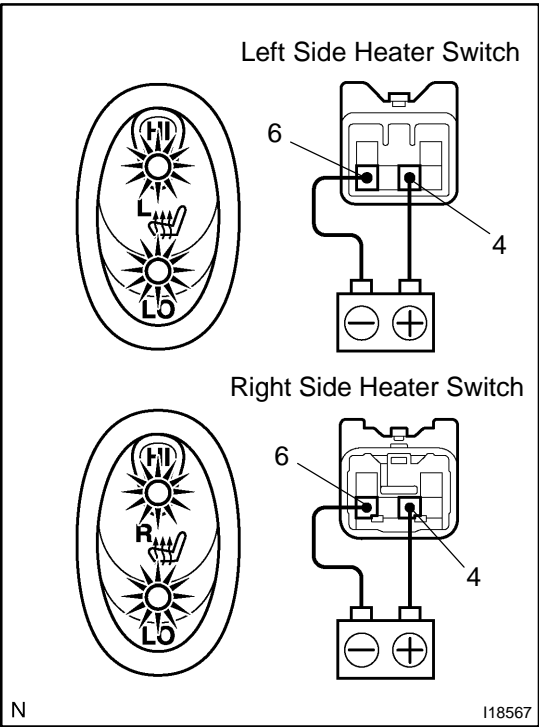


INSPECTION

1. INSPECT SEAT HEATER SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
HI	3 – 4, 5 – 6	Continuity
LO	4 – 5	Continuity
Illumination circuit	1 – 2	Continuity

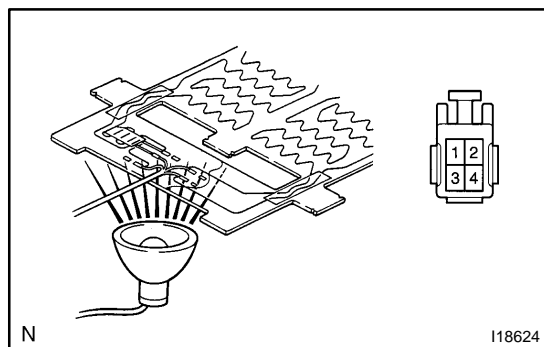
If the continuity is not as specified, replace the switch.



2. INSPECT SEAT HEATER INDICATOR LIGHT OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 4 and the negative (–) lead to terminal 6.
- (b) Push the seat heater switch on the HI position and check that the HI indicator light turns on.
- (c) Push the seat heater switch on the LO position and check that the LO indicator light turns on.

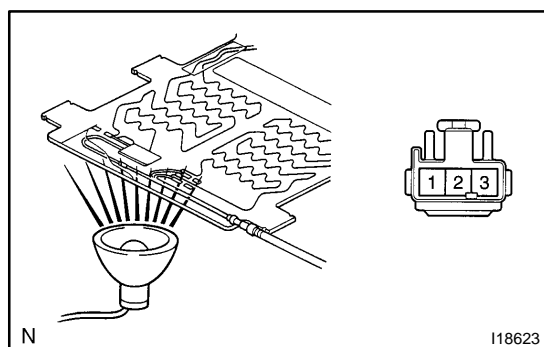
If operation is not as specified, replace the switch.

**3. INSPECT SEAT CUSHION HEATER CONTINUITY**

- Heat the thermostat with a light.
- Inspect the seat cushion heater continuity between the terminals, as shown in the illustration.

Tester Connection	Condition	Specified Condition
2 – 4	Constant	Continuity
1 – 3	Seat heater temperature below 30°C (80°F)	Continuity
1 – 3	Seat heater temperature above 40°C (104°F)	No continuity

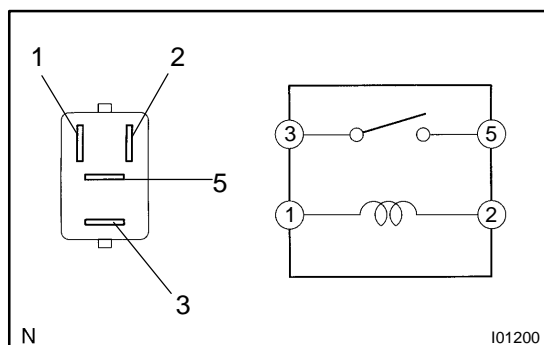
If the continuity is not as specified, replace the seat cushion pad.

**4. INSPECT SEATBACK HEATER CONTINUITY**

- Heat the thermostat with a light.
- Inspect the seatback heater continuity between terminals, as shown in the illustration.

Tester Connection	Condition	Specified Condition
2 – 3	Constant	Continuity
1 – 2, 1 – 3	Seat heater temperature below 30°C (86°F)	Continuity
1 – 2, 1 – 3	Seat heater temperature above 50°C (122°F)	No continuity

If the continuity is not as specified, replace the seatback pad.

**5. INSPECT SEAT HEATER RELAY CONTINUITY**

Tester Connection	Specified Condition
3 – 5	No continuity
3 – 5	Continuity (When battery voltage is applied to terminals 1 and 2)

If the continuity is not as specified, replace the relay.