SECTION EC
ENGINE CONTROL SYSTEM

CONTENTS

CR (WITH EURO-OBD)

CR (WITHOUT EURO-OBD)

INDEX FOR DTC

PFP:00024

Alphabetical Index

EBS00O2P

Check if the vehicle is a model with Euro-OBD (E-OBD) system or not by the “Type approval number” on the identification plate. Refer to GI-44, "IDENTIFICATION INFORMATION" .

NOTE:
If DTC U1000 or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-130, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

Items (CONSULT-II screen terms)	DTC*1		Trip	MI lighting up	Reference page
	CONSULT-II GST*2	ECM*3			
ABSL PRES SEN/CIRC	P0107	0107	2	×	EC-148
ABSL PRES SEN/CIRC	P0108	0108	2	×	EC-148
APP SEN 1/CIRC	P0227	0227	1	×	EC-242
APP SEN 1/CIRC	P0228	0228	1	×	EC-242
APP SEN 1/CIRC	P2122	2122	1	×	EC-402
APP SEN 1/CIRC	P2123	2123	1	×	EC-402
APP SEN 2/CIRC	P1227	1227	1	×	EC-376
APP SEN 2/CIRC	P1228	1228	1	×	EC-376
APP SEN 2/CIRC	P2127	2127	1	×	EC-411
APP SEN 2/CIRC	P2128	2128	1	×	EC-411
APP SENSOR	P0226	0226	1	×	EC-233
APP SENSOR	P2138	2138	1	×	EC-426
ATF TEMP SEN/CIRC	P0710	0710	2	×	AT-120
A/T 1ST GR FNCTN	P0731	0731	2	×	AT-135
A/T 2ND GR FNCTN	P0732	0732	2	×	AT-141
A/T 3RD GR FNCTN	P0733	0733	2	×	AT-147
A/T 4TH GR FNCTN	P0734	0734	2	×	AT-153
BRAKE SW/CIRCUIT	P1805	1805	2	—	EC-395
CAN COMM CIRCUIT	U1000	1000*5	1	×	EC-130
CAN COMM CIRCUIT	U1001	1001*5	2	—	EC-130
CKP SEN/CIRCUIT	P0335	0335	2	×	EC-261
CMP SEN/CIRC-B1	P0340	0340	2	×	EC-267
CTP LEARNING	P1225	1225	2	—	EC-372
CTP LEARNING	P1226	1226	2	—	EC-374
CYL 1 MISFIRE	P0301	0301	2	×	EC-251
CYL 2 MISFIRE	P0302	0302	2	×	EC-251
CYL 3 MISFIRE	P0303	0303	2	×	EC-251
CYL 4 MISFIRE	P0304	0304	2	×	EC-251
ECM	P0605	0605	1 or 2	× or —	EC-286
ECM BACK UP/CIRC	P1065	1065	2	×	EC-289
ECT SEN/CIRCUIT	P0117	0117	1	×	EC-158
ECT SEN/CIRCUIT	P0118	0118	1	×	EC-158
ENGINE SPEED SIG	P0725	0725	2	×	AT-131
ENG OVER TEMP	P1217	1217	1	×	EC-352
ETC ACTR	P1121	1121	1	×	EC-297

Items (CONSULT-II screen terms)	DTC*1		Trip	MI lighting up	Reference page
	CONSULT-II GST*2	ECM*3			
ETC FUNCTION/CIRC	P1122	1122	1	×	EC-299
ETC MOT	P1128	1128	1	×	EC-310
ETC MOT PWR	P1124	1124	1	×	EC-305
ETC MOT PWR	P1126	1126	1	×	EC-305
FUEL SYS-LEAN-B1	P0171	0171	2	×	EC-208
FUEL SYS-RICH-B1	P0172	0172	2	×	EC-215
HO2S1 (B1)	P0132	0132	2	×	EC-169
HO2S1 (B1)	P0133	0133	2	×	EC-175
HO2S1 (B1)	P0134	0134	2	×	EC-185
HO2S1 (B1)	P1143	1143	2	×	EC-315
HO2S1 (B1)	P1144	1144	2	×	EC-321
HO2S1 HTR (B1)	P0031	0031	2	×	EC-136
HO2S1 HTR (B1)	P0032	0032	2	×	EC-136
HO2S2 (B1)	P0138	0138	2	×	EC-192
HO2S2 (B1)	P0139	0139	2	×	EC-199
HO2S2 (B1)	P1146	1146	2	×	EC-327
HO2S2 (B1)	P1147	1147	2	×	EC-337
HO2S2 HTR (B1)	P0037	0037	2	×	EC-142
HO2S2 HTR (B1)	P0038	0038	2	×	EC-142
IAT SEN/CIRCUIT	P0112	0112	2	×	EC-153
IAT SEN/CIRCUIT	P0113	0113	2	×	EC-153
INTAKE ERROR	P1171	1171	1	×	EC-346
INT/V TIM CONT-B1	P0011	0011	2	—	EC-133
INT/V TIM V/CIR-B1	P1111	1111	2	×	EC-293
KNOCK SEN/CIRC-B1	P0327	0327	2	—	EC-257
KNOCK SEN/CIRC-B1	P0328	0328	2	—	EC-257
L/PRESS SOL/CIRC	P0745	0745	2	×	AT-166
MULTI CYL MISFIRE	P0300	0300	2	×	EC-251
NATS MALFUNCTION	P1610 - P1615	1610 - 1615	2	—	EC-60
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	No DTC	Flashing*4	—	Flashing*4	EC-61
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	**P0000**	**0000**	—	—	**—**
O/R CLTCH SOL/CIRC	P1760	1760	2	×	AT-188
PNP SW/CIRC	P0705	0705	2	×	AT-114
P-N POS SW/CIRCUIT	P1706	1706	2	×	EC-389
PURG VOLUME CONT/V	P0444	0444	2	×	EC-278
SFT SOL A/CIRC	P0750	0750	1	×	AT-173
SFT SOL B/CIRC	P0755	0755	1	×	AT-178
SENSOR POWER/CIRC	P1229	1229	1	×	EC-385
TCC SOLENOID/CIRC	P0740	0740	2	×	AT-161
TCS C/U FUNCTN	P1211	1211	2	—	EC-350

Items (CONSULT-II screen terms)	DTC*1		Trip	MI lighting up	Reference page
	CONSULT-II GST*2	ECM*3			
TCS/CIRC	P1212	1212	2	—	EC-351
TP SEN/CIRC A/T	P1705	1705	1	×	AT-183
TP SEN 1/CIRC	P0222	0222	1	×	EC-227
TP SEN 1/CIRC	P0223	0223	1	×	EC-227
TP SEN 2/CIRC	P0122	0122	1	×	EC-163
TP SEN 2/CIRC	P0123	0123	1	×	EC-163
TP SEN 2/CIRC	P1223	1223	1	×	EC-366
TP SEN 2/CIRC	P1224	1224	1	×	EC-366
TP SENSOR	P0221	0221	1	×	EC-221
TP SENSOR	P2135	2135	1	×	EC-420
TW CATALYST SYS-B1	P0420	0420	2	×	EC-273
VEH SPD SEN/CIRC	P0720	0720	2	×	AT-126
VEH SPEED SEN/CIRC	P0500	0500	2	×	EC-284

*1: 1st trip DTC No. is the same as DTC No.
*2: This number is prescribed by ISO 15031-5.
*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.
*4: When engine is running.
*5: The troubleshooting for this DTC needs CONSULT-II.

DTC No. Index

EBS00O2Q

NOTE:
If DTC U1000 or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-130, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

DTC*1		Items (CONSULT-II screen terms)	Trip	MI lighting up	Reference page
CONSULT-II GST*2	ECM*3				
No DTC	Flashing*4	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—	Flashing*4	EC-61
U1000	1000*5	CAN COMM CIRCUIT	1	×	EC-130
U1001	1001*5	CAN COMM CIRCUIT	2	—	EC-130
P0000	**0000**	**NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.**	—	—	**—**
P0011	0011	INT/V TIM CONT-B1	2	—	EC-133
P0031	0031	HO2S1 HTR (B1)	2	×	EC-136
P0032	0032	HO2S1 HTR (B1)	2	×	EC-136
P0037	0037	HO2S2 HTR (B1)	2	×	EC-142
P0038	0038	HO2S2 HTR (B1)	2	×	EC-142
P0107	0107	ABSL PRES SEN/CIRC	2	×	EC-148
P0108	0108	ABSL PRES SEN/CIRC	2	×	EC-148
P0112	0112	IAT SEN/CIRCUIT	2	×	EC-153
P0113	0113	IAT SEN/CIRCUIT	2	×	EC-153
P0117	0117	ECT SEN/CIRCUIT	1	×	EC-158
P0118	0118	ECT SEN/CIRCUIT	1	×	EC-158
P0122	0122	TP SEN 2/CIRC	1	×	EC-163

DTC*1		Items (CONSULT-II screen terms)	Trip	MI lighting up	Reference page
CONSULT-II GST*2	ECM*3				
P0123	0123	TP SEN 2/CIRC	1	×	EC-163
P0132	0132	HO2S1 (B1)	2	×	EC-169
P0133	0133	HO2S1 (B1)	2	×	EC-175
P0134	0134	HO2S1 (B1)	2	×	EC-185
P0138	0138	HO2S2 (B1)	2	×	EC-192
P0139	0139	HO2S2 (B1)	2	×	EC-199
P0171	0171	FUEL SYS-LEAN-B1	2	×	EC-208
P0172	0172	FUEL SYS-RICH-B1	2	×	EC-215
P0221	0221	TP SENSOR	1	×	EC-221
P0222	0222	TP SEN 1/CIRC	1	×	EC-227
P0223	0223	TP SEN 1/CIRC	1	×	EC-227
P0226	0226	APP SENSOR*6	1	×	EC-233
P0227	0227	APP SEN 1/CIRC*6	1	×	EC-242
P0228	0228	APP SEN 1/CIRC*6	1	×	EC-242
P0300	0300	MULTI CYL MISFIRE	2	×	EC-251
P0301	0301	CYL 1 MISFIRE	2	×	EC-251
P0302	0302	CYL 2 MISFIRE	2	×	EC-251
P0303	0303	CYL 3 MISFIRE	2	×	EC-251
P0304	0304	CYL 4 MISFIRE	2	×	EC-251
P0327	0327	KNOCK SEN/CIRC-B1	2	—	EC-257
P0328	0328	KNOCK SEN/CIRC-B1	2	—	EC-257
P0335	0335	CKP SEN/CIRCUIT	2	×	EC-261
P0340	0340	CMP SEN/CIRC-B1	2	×	EC-267
P0420	0420	TW CATALYST SYS-B1	2	×	EC-273
P0444	0444	PURG VOLUME CONT/V	2	×	EC-278
P0500	0500	VEH SPEED SEN/CIRC	2	×	EC-284
P0605	0605	ECM	1 or 2	× or —	EC-286
P0705	0705	PNP SW/CIRC	2	×	AT-114
P0710	0710	ATF TEMP SEN/CIRC	2	×	AT-120
P0720	0720	VEH SPD SEN/CIRC	2	×	AT-126
P0725	0725	ENGINE SPEED SIG	2	×	AT-131
P0731	0731	A/T 1ST GR FNCTN	2	×	AT-135
P0732	0732	A/T 2ND GR FNCTN	2	×	AT-141
P0733	0733	A/T 3RD GR FNCTN	2	×	AT-147
P0734	0734	A/T 4TH GR FNCTN	2	×	AT-153
P0740	0740	TCC SOLENOID/CIRC	2	×	AT-161
P0745	0745	L/PRESS SOL/CIRC	2	×	AT-166
P0750	0750	SFT SOL A/CIRC	1	×	AT-173
P0755	0755	SFT SOL B/CIRC	1	×	AT-178
P1065	1065	ECM BACK UP/CIRC	2	×	EC-289
P1111	1111	INT/V TIM V/CIR-B1	2	×	EC-293
P1121	1121	ETC ACTR	1	×	EC-297

DTC*1		Items (CONSULT-II screen terms)	Trip	MI lighting up	Reference page
CONSULT-II GST*2	ECM*3				
P1122	1122	ETC FUNCTION/CIRC	1	×	EC-299
P1124	1124	ETC MOT PWR	1	×	EC-305
P1126	1126	ETC MOT PWR	1	×	EC-305
P1128	1128	ETC MOT	1	×	EC-310
P1143	1143	HO2S1 (B1)	2	×	EC-315
P1144	1144	HO2S1 (B1)	2	×	EC-321
P1146	1146	HO2S2 (B1)	2	×	EC-327
P1147	1147	HO2S2 (B1)	2	×	EC-337
P1171	1171	INTAKE ERROR	1	×	EC-346
P1211	1211	TCS C/U FUNCTN	2	—	EC-350
P1212	1212	TCS/CIRC	2	—	EC-351
P1217	1217	ENG OVER TEMP	1	×	EC-352
P1223	1223	TP SEN 2/CIRC*6	1	×	EC-366
P1224	1224	TP SEN 2/CIRC*6	1	×	EC-366
P1225	1225	CTP LEARNING	2	—	EC-372
P1226	1226	CTP LEARNING	2	—	EC-374
P1227	1227	APP SEN 2/CIRC*6	1	×	EC-376
P1228	1228	APP SEN 2/CIRC*6	1	×	EC-376
P1229	1229	SENSOR POWER/CIRC	1	×	EC-385
P1610 - P1615	1610 - 1615	NATS MALFUNCTION	2	—	EC-60
P1705	1705	TP SEN/CIRC A/T	1	×	AT-183
P1706	1706	P-N POS SW/CIRCUIT	2	×	EC-389
P1760	1760	O/R CLTCH SOL/CIRC	2	×	AT-188
P1805	1805	BRAKE SW/CIRCUIT	2	—	EC-395
P2122	2122	APP SEN 1/CIRC	1	×	EC-402
P2123	2123	APP SEN 1/CIRC	1	×	EC-402
P2127	2127	APP SEN 2/CIRC	1	×	EC-411
P2128	2128	APP SEN 2/CIRC	1	×	EC-411
P2135	2135	TP SENSOR	1	×	EC-420
P2138	2138	APP SENSOR	1	×	EC-426

*1: 1st trip DTC No. is the same as DTC No.
*2: This number is prescribed by ISO 15031-5.
*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.
*4: When engine is running.
*5: The troubleshooting for this DTC needs CONSULT-II.

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EBS00OS5

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

Maintenance Information

EBS011US

If any of following part is replaced, always replace with new* one.
If it's not (or fail to do so), the electrical system may not be operated properly.
*: New one means a virgin control unit that has never been energized on-board.

RHD MODELS

- BCM (Models without Intelligent Key system)
- Intelligent Key unit (Models with Intelligent Key system)
- ECM
- IPDM E/R
- Combination meter
- EPS control unit

LHD MODELS

- BCM (Models without Intelligent Key system)
- Intelligent Key unit (Models with Intelligent Key system)
- ECM

On Board Diagnostic (OBD) System of Engine and A/T

EBS00O2S

The ECM has an on board diagnostic system. It will light up the malfunction indicator (MI) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- **Be sure to turn the ignition switch OFF and disconnect the battery ground cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MI to light up.**
- **Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MI to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)**
- **Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG-99, "HARNESS CONNECTOR" .**
- **Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MI to light up due to the short circuit.**
- **Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MI to light up due to the malfunction of the fuel injection system, etc.**
- **Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.**

Precaution

EBS00O2T

- **Always use a 12 volt battery as power source.**
- **Do not attempt to disconnect battery cables while engine is running.**
- **Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect battery ground cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned off.**
- **Before removing parts, turn ignition switch OFF and then disconnect battery ground cable.**

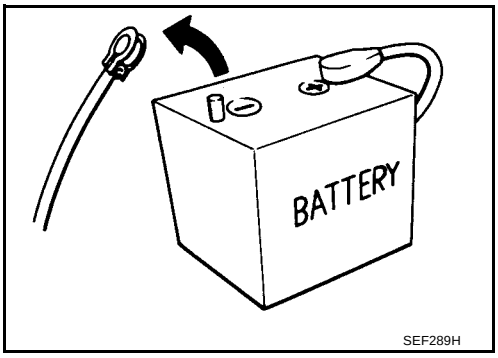

SEF289H

- **Do not disassemble ECM.**
- **If battery cable is disconnected, the memory will return to the initial ECM values.**
  The ECM will now start to self-control at its initial values. Engine operation can vary slightly when the cable is disconnected. However, this is not an indication of a malfunction. Do not replace parts because of a slight variation.

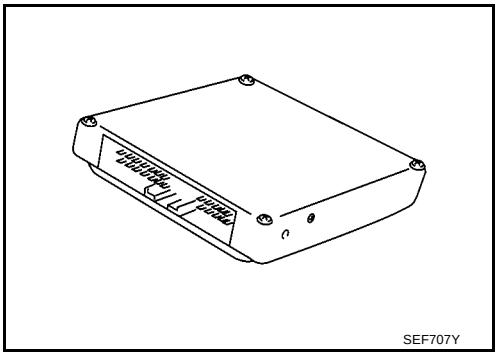
SEF707Y

- **When connecting ECM harness connector, fasten it securely with levers as far as they will go as shown in the figure.**

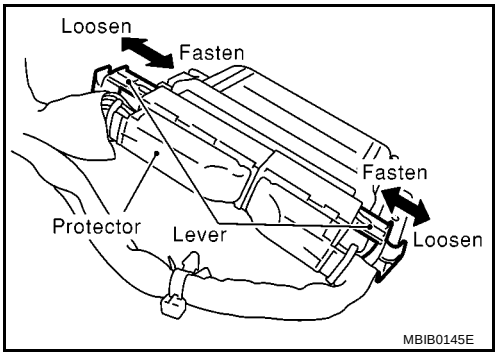

MBIB0145E

- **When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).**
  Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- **Securely connect ECM harness connectors.**
  A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- **Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.**
- **Keep engine control system parts and harness dry.**

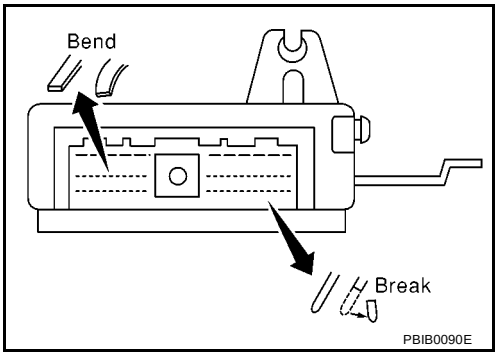

PBIB0090E

- **Before replacing ECM, perform ECM Terminals and Reference Value inspection and make sure ECM functions properly. Refer to EC-94, "ECM Terminals and Reference Value" .**
- **Handle manifold absolute pressure sensor carefully to avoid damage.**
- **Do not clean air clear element with any type of detergent.**
- **Do not disassemble electric throttle control actuator.**
- **Even a slight leak in the air intake system can cause serious incidents.**
- **Do not shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).**
- **After performing each TROUBLE DIAGNOSIS, perform DTC Confirmation Procedure or Overall Function Check.**
  The DTC should not be displayed in the DTC Confirmation Procedure if the repair is completed. The Overall Function Check should be a good result if the repair is completed.

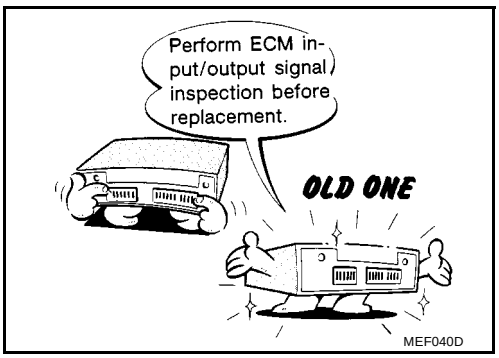

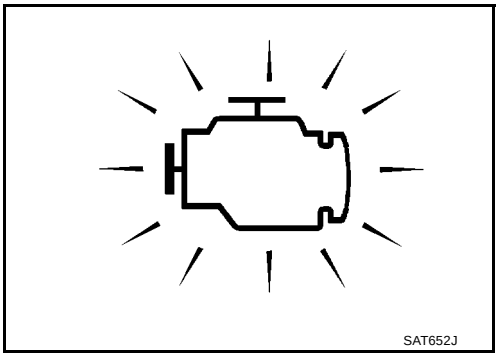

- **When measuring ECM signals with a circuit tester, connect a break-out box (SST) and Y-cable adapter (SST) between the ECM and ECM harness connector.**
- **When measuring ECM signals with a circuit tester, never allow the two tester probes to contact.**
  Accidental contact of probes will cause a short circuit and damage the ECM power transistor.
- **Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.**

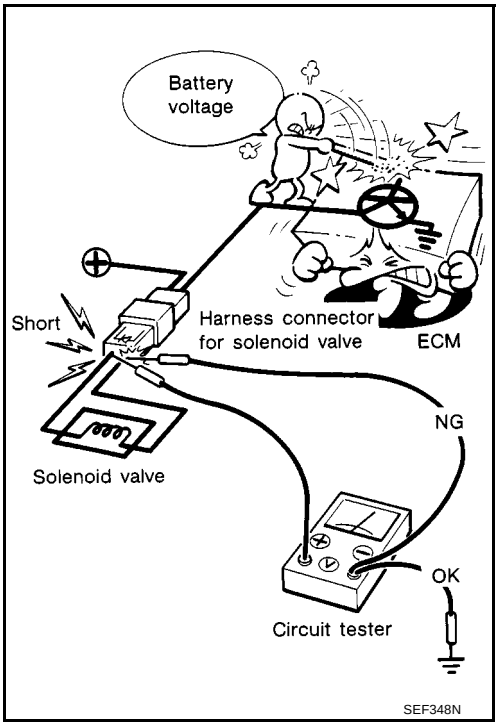

- **Do not operate fuel pump when there is no fuel in lines.**
- **Tighten fuel hose clamps to the specified torque.**

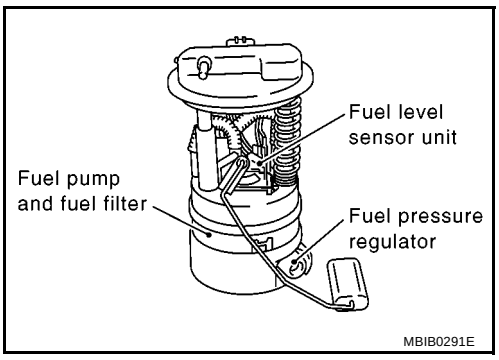

- **Do not depress accelerator pedal when starting.**
- **Immediately after starting, do not rev up engine unnecessarily.**
- **Do not rev up engine just prior to shutdown.**

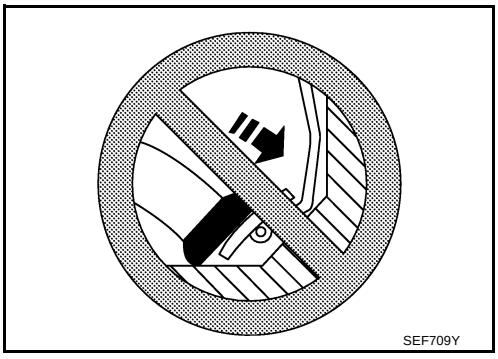
SEF709Y

- **When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.**
  - **Keep the antenna as far as possible from the electronic control units.**
  - **Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls.**
    Do not let them run parallel for a long distance.
  - **Adjust the antenna and feeder line so that the standing-wave radio can be kept smaller.**
  - **Be sure to ground the radio to vehicle body.**

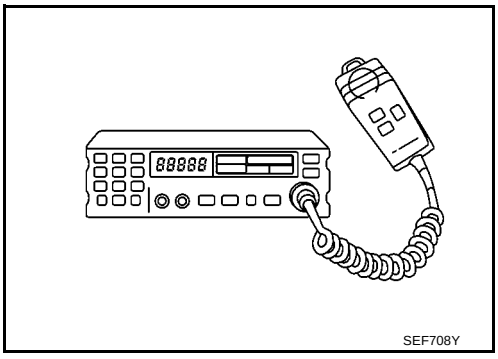
SEF708Y

Wiring Diagrams and Trouble Diagnosis

EBS00O2U

When you read wiring diagrams, refer to the following:

- GI-14, "How to Read Wiring Diagrams"
- PG-4, "POWER SUPPLY ROUTING" for power distribution circuit

When you perform trouble diagnosis, refer to the following:

- GI-11, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"
- GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident"

PREPARATION

PFP:00002

Special Service Tools

EBS00O2V

Tool number Tool name	Description	
KV10117100 Heated oxygen sensor wrench	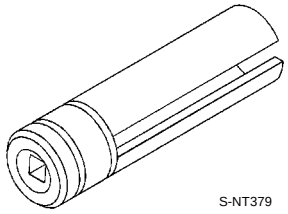 S-NT379	Loosening or tightening heated oxygen sensors with 22 mm (0.87 in) hexagon nut
KV10114400 Heated oxygen sensor wrench	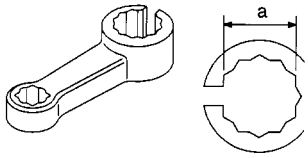 S-NT636	Loosening or tightening heated oxygen sensors **a: 22 mm (0.87 in)**
KV109E0010 Break-out box	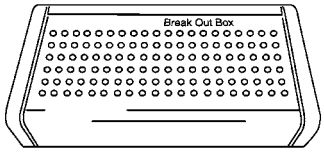 NT825	Measuring ECM signals with a circuit tester
KV109E0080 Y-cable adapter	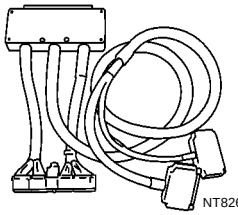 NT826	Measuring ECM signals with a circuit tester

Commercial Service Tools

EBS00O2W

Tool name	Description	
Quick connector release	 PBIC0198E	Removing fuel tube quick connectors in engine room (Available in SEC. 164 of PARTS CATALOG: Part No. 16441 6N210)
Fuel filler cap adapter	 S-NT653	Checking fuel tank vacuum relief valve opening pressure

Tool name	Description	
Socket wrench	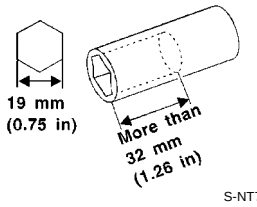 S-NT705	Removing and installing engine coolant temperature sensor
Oxygen sensor thread cleaner ie: (J-43897-18) (J-43897-12)	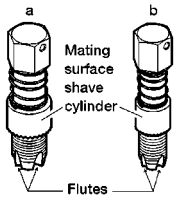 AEM488	Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown below. **a: 18 mm diameter with pitch 1.5 mm for Zirconia Oxygen Sensor** **b: 12 mm diameter with pitch 1.25 mm for Titania Oxygen Sensor**
Anti-seize lubricant i.e.: (Permatex™ 133AR or equivalent meeting MIL specification MIL-A-907)	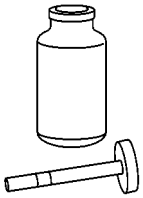 S-NT779	Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads.

ENGINE CONTROL SYSTEM

PFP:23710

System Diagram

EBS00O2X

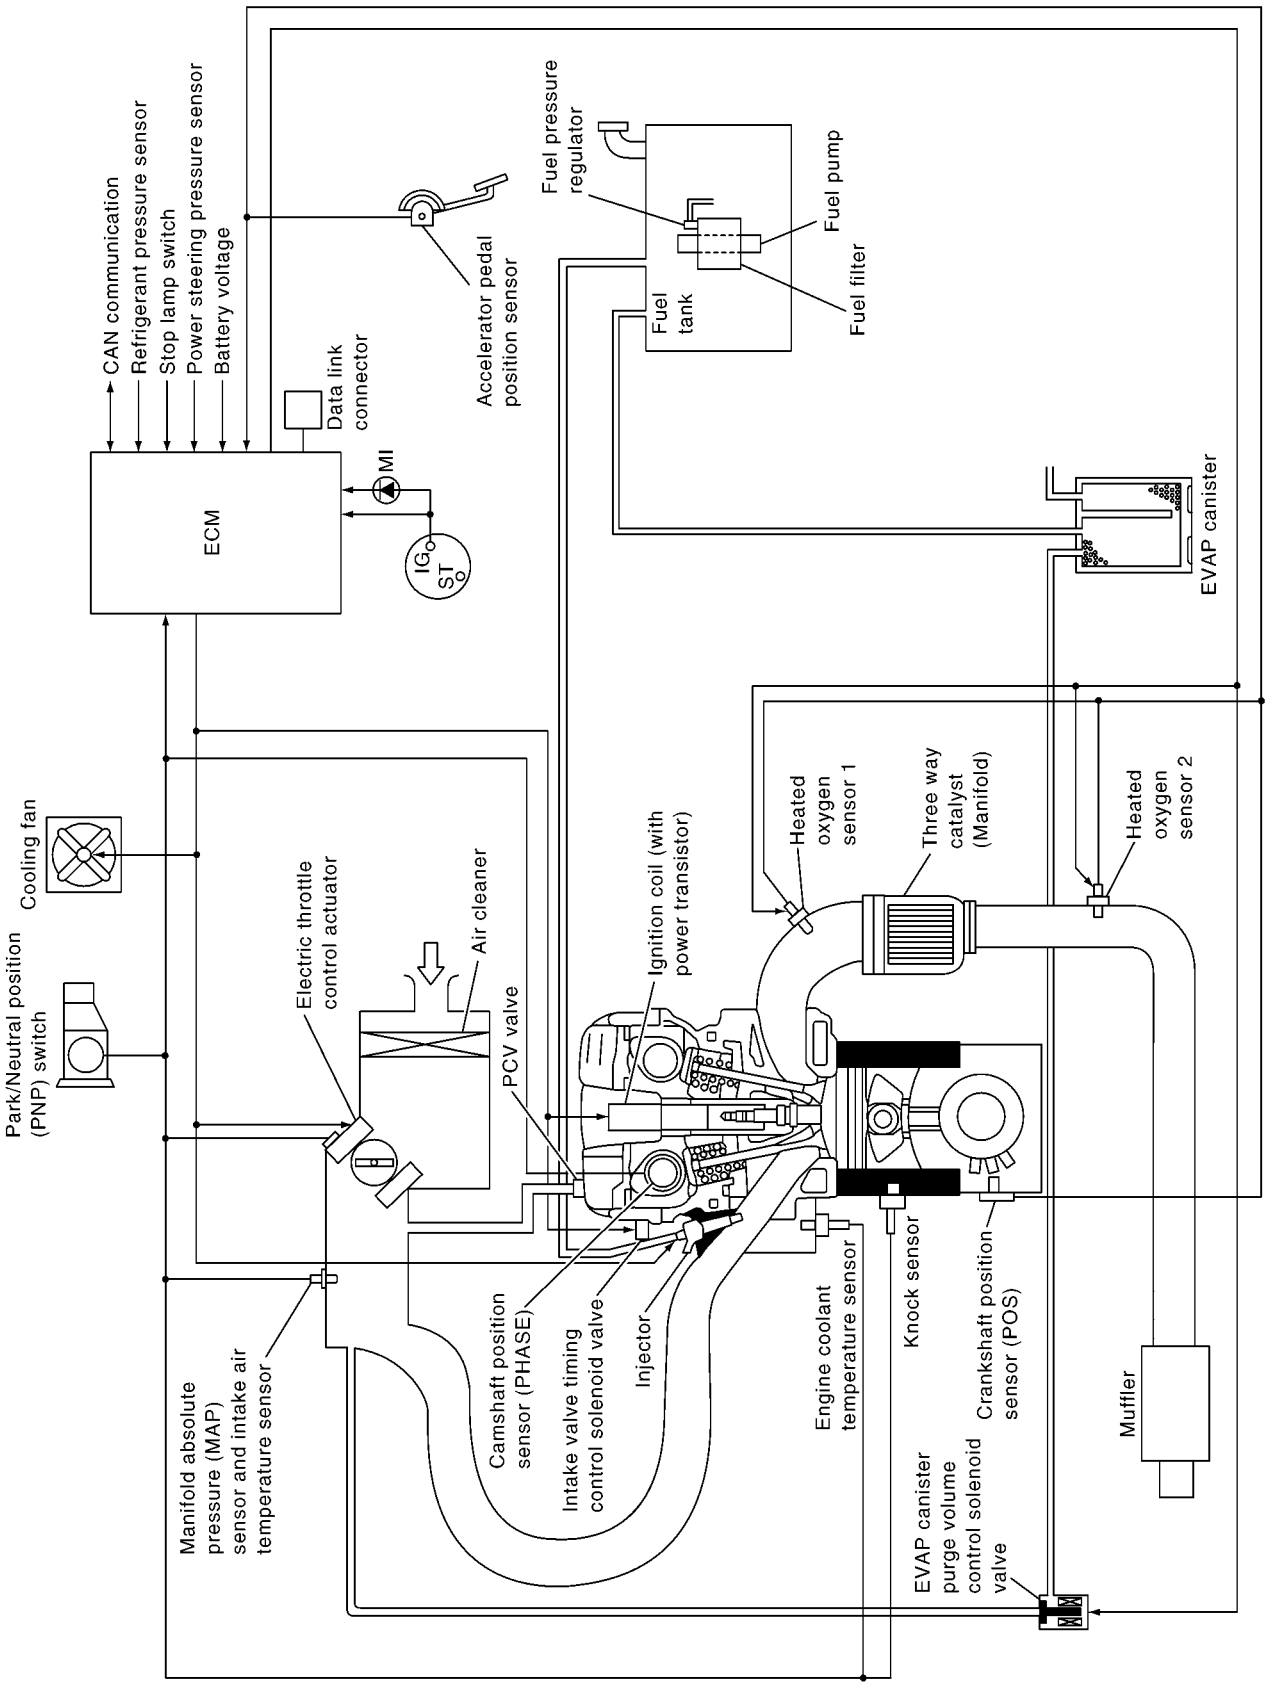

MBIB0266E

Vacuum Hose Drawing

EBS00O2Y

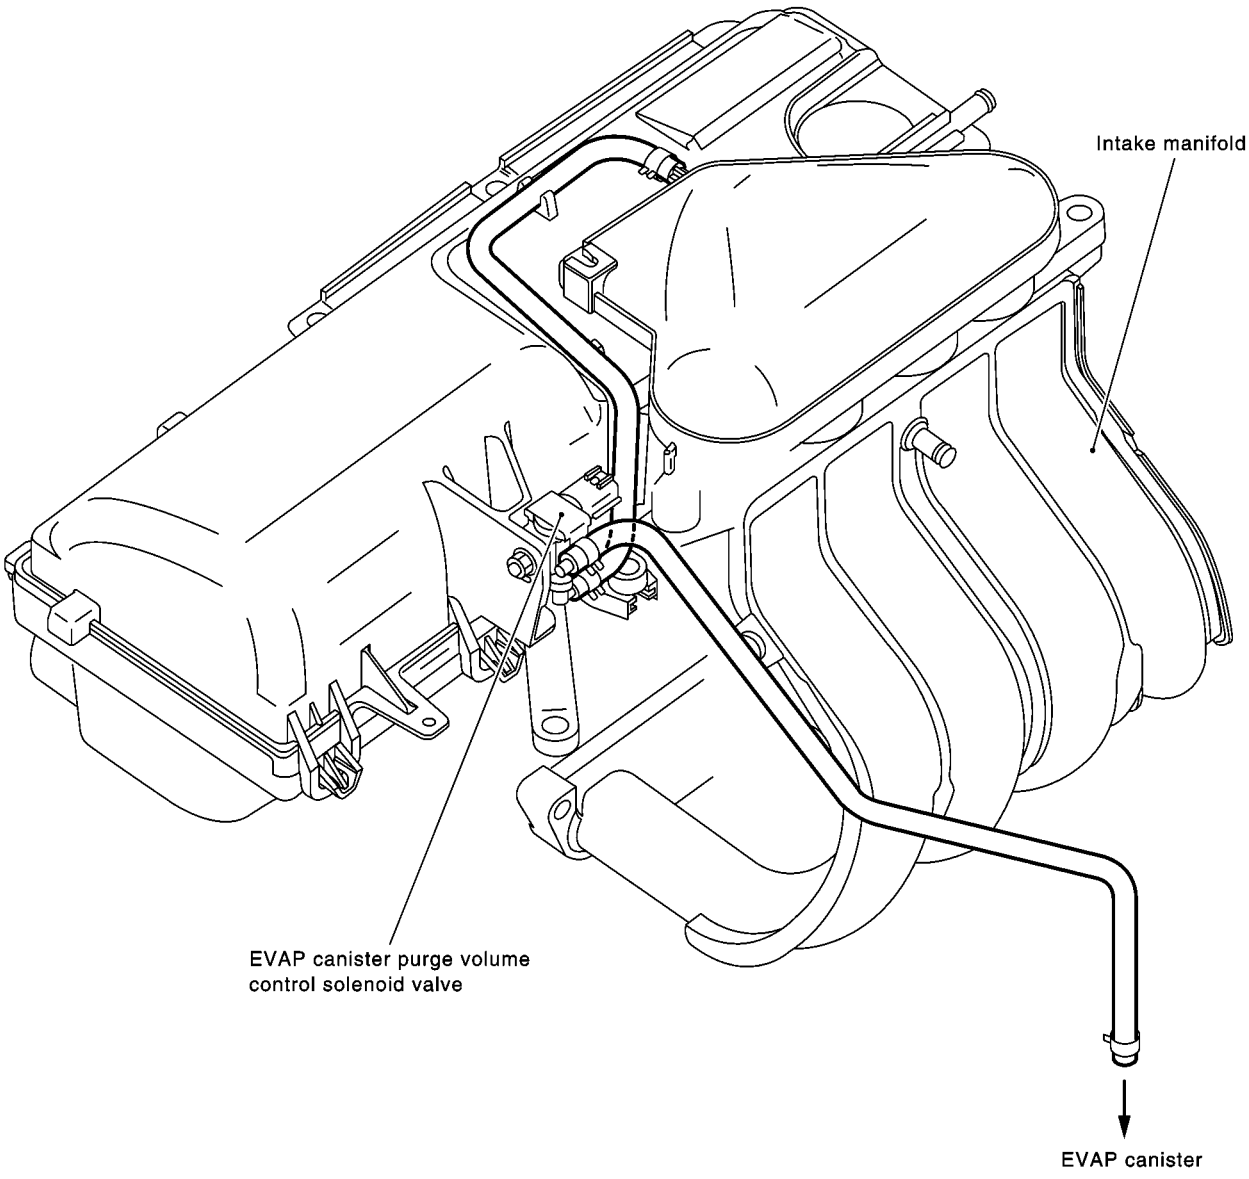

NOTE: Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

MBIB0265E

Refer to EC-22, "System Diagram" for Vacuum Control System.

System Chart

EBS00O2Z

Input (Sensor)	ECM Function	Output (Actuator)
● Camshaft position sensor (PHASE) ● Crankshaft position sensor (POS) ● Manifold absolute pressure sensor ● Engine coolant temperature sensor ● Heated oxygen sensor 1 ● Throttle position sensor ● Accelerator pedal position sensor ● Park/neutral position (PNP) switch ● Intake air temperature sensor ● Ignition switch ● Battery voltage ● Knock sensor ● Refrigerant pressure sensor ● Stop lamp switch ● Heated oxygen sensor 2*1 ● TCM (Transmission control module) ● ABS actuator and electric unit (control unit)*2 ● Air conditioner switch*2 ● Vehicle speed signal*2 ● Electrical load signal*2	Fuel injection & mixture ratio control	Fuel injectors
	Electronic ignition system	Power transistor
	Fuel pump control	Fuel pump relay
	Idle speed control	Electric throttle control actuator
	On board diagnostic system	MI (On the instrument panel)
	Heated oxygen sensor 1 heater control	Heated oxygen sensor 1 heater
	Heated oxygen sensor 2 heater control	Heated oxygen sensor 2 heater
	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
	Air conditioning cut control	Air conditioner relay*3
	Cooling fan control	Cooling fan relays*3

*1: This sensor is not used to control the engine system under normal conditions.
*2: This input signal is sent to the ECM through CAN communication line.
*3: This output signal is sent from the ECM through CAN communication line.

Multiport Fuel Injection (MFI) System

EBS00O30

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*3 and piston position	Fuel injection & mixture ratio control	Fuel injectors
Manifold absolute pressure sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Heated oxygen sensor 1	Density of oxygen in exhaust gas		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Park/neutral position (PNP) switch	Gear position		
Knock sensor	Engine knocking condition		
Battery	Battery voltage*3		
Heated oxygen sensor 2*1	Density of oxygen in exhaust gas		
Vehicle speed signal*2	Vehicle speed		
Air conditioner switch*2	Air conditioner operation		

*1: This sensor is not used to control the engine system under normal conditions.
*2: This signal is sent to the ECM through CAN communication line.
*3: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined

by input signals (for engine speed and intake air volume) from the crankshaft position sensor, the manifold absolute pressure sensor and intake air temperature sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.

<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from N to D (A/T models)
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation

MIXTURE RATIO FEEDBACK CONTROL (CLOSED LOOP CONTROL)

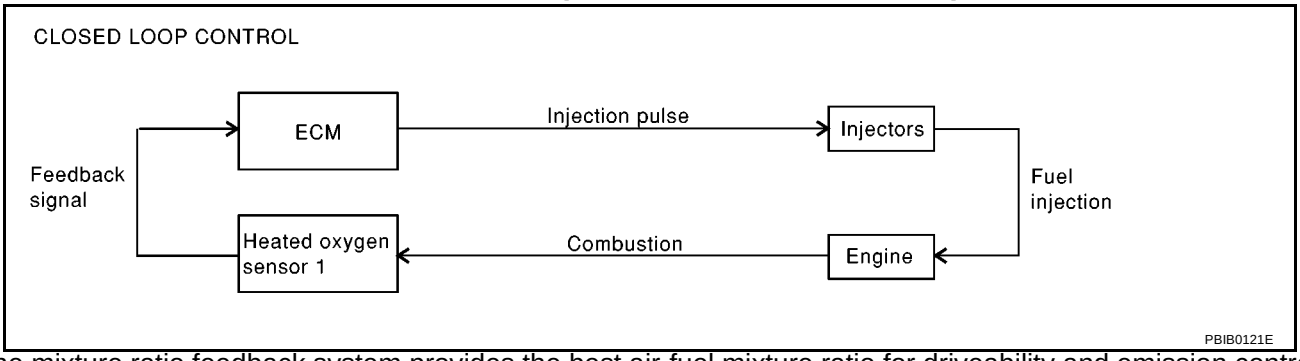

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst (manifold) can then better reduce CO, HC and NOx emissions. This system uses heated oxygen sensor 1 in the exhaust manifold to monitor whether the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about heated oxygen sensor 1, refer to EC-169 . This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of heated oxygen sensor 1 shift, the air-fuel ratio is controlled to stoichiometric by the signal from heated oxygen sensor 2.

Open Loop Control

The open loop system condition refers to when the ECM detects any of the following conditions.
Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of heated oxygen sensor 1 or its circuit
- Insufficient activation of heated oxygen sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from N to D (A/T models)
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from heated oxygen sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as orig-

inally designed. Both manufacturing differences (i.e., manifold absolute pressure sensor silicon diaphragm) and characteristic changes during operation (i.e., injector clogging) directly affect mixture ratio.
Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of “injection pulse duration” to automatically compensate for the difference between the two ratios.
“Fuel trim” refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.
“Short term fuel trim” is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from heated oxygen sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.
“Long term fuel trim” is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

FUEL INJECTION TIMING

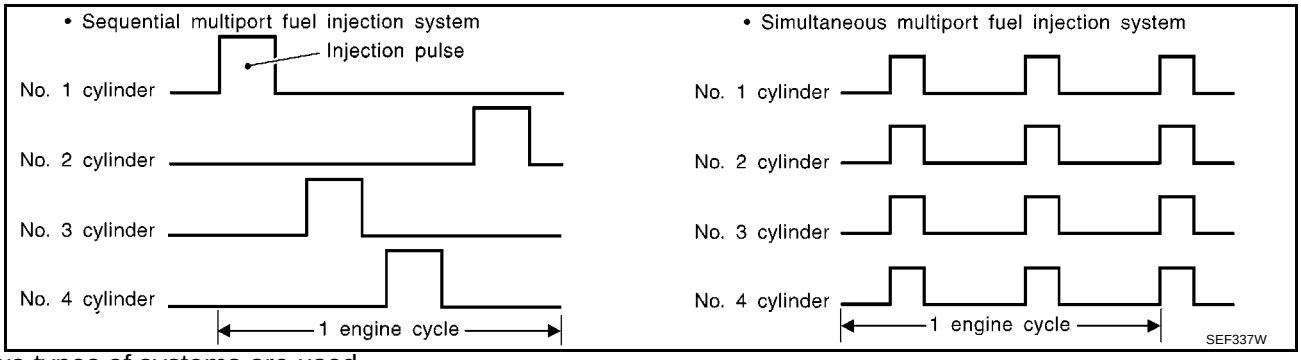

Two types of systems are used.

Sequential Multiport Fuel Injection System

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Simultaneous Multiport Fuel Injection System

Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.
The four injectors will then receive the signals two times for each engine cycle.
This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

Electronic Ignition (EI) System

EBS00O31

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*2 and piston position	Ignition timing control	Power transistor
manifold absolute pressure sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Knock sensor	Engine knocking		
Park/neutral position (PNP) switch	Gear position		
Battery	Battery voltage*2		
Vehicle speed signal*1	Vehicle speed		

*1: This signal is sent to the ECM through CAN communication line.
*2: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM. This data forms the map shown.
The ECM receives information such as the injection pulse width and camshaft position sensor signal. Computing this information, ignition signals are transmitted to the power transistor.
e.g., N: 1,800 rpm, Tp: 1.50 msec
A °BTDC
During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

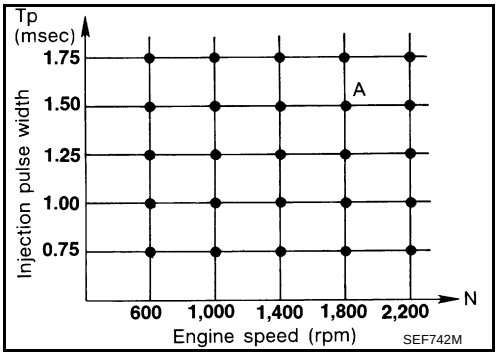

- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Air Conditioning Cut Control

EBS00O32

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Air conditioner switch*1	Air conditioner ON signal	Air conditioner cut control	Air conditioner relay
Throttle position sensor	Throttle valve opening angle		
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*2		
Engine coolant temperature sensor	Engine coolant temperature		
Refrigerant pressure sensor	Refrigerant pressure		
Vehicle speed signal*1	Vehicle speed		
Battery	Battery voltage*2		

*1: This signal is sent to the ECM through CAN communication line.
*2: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

This system improves engine operation when the air conditioner is used.
Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When engine speed is excessively low.
- When refrigerant pressure is excessively low or high.

Fuel Cut Control (at No Load and High Engine Speed)

EBS00O33

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Park/neutral position (PNP) switch	Neutral position	Fuel cut control	Fuel injectors
Accelerator pedal position sensor	Accelerator pedal position		
Engine coolant temperature sensor	Engine coolant temperature		
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed		
Vehicle speed signal*1	Vehicle speed		

*1: This signal is sent to the ECM through CAN communication line.

SYSTEM DESCRIPTION

If the engine speed is above 2,500 rpm with no load (for example, the shift position is neutral and engine speed is over 2,500 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.
Fuel cut will operate until the engine speed reaches 2,000 rpm, then fuel cut is cancelled.

NOTE:
This function is different from deceleration control listed under EC-24, "Multiport Fuel Injection (MFI) System" .

CAN Communication

EBS00O34

SYSTEM DESCRIPTION

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN COMMUNICATION UNIT

Body type	3door/5door															
Axle	2WD															
Engine	CR10DE/CR12DE/CR14DE								CR12DE/CR14DE							
Handle	LHD/RHD															
Brake control	ABS system								ESP system							
Transmission	A/T				M/T				A/T				M/T			
Intelligent Key system	Applicable		Not applicable		Applicable		Not applicable		Applicable		Not applicable		Applicable		Not applicable	
CAN communication unit																
ECM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Data link connector	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Combination meter	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Intelligent Key unit	×	×			×	×			×	×			×	×		
Drive computer	×		×		×		×		×		×		×		×	
EPS control unit	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
TCM	×	×	×	×					×	×	×	×				
IPDM E/R	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
CAN communication type	EC-30, "TYPE 1/ TYPE 2"				EC-33, "TYPE 3/ TYPE 4"				EC-35, "TYPE 5/ TYPE 6"				EC-38, "TYPE 7/ TYPE 8"			

×: Applicable

TYPE 1/TYPE 2

System diagram

- Type 1

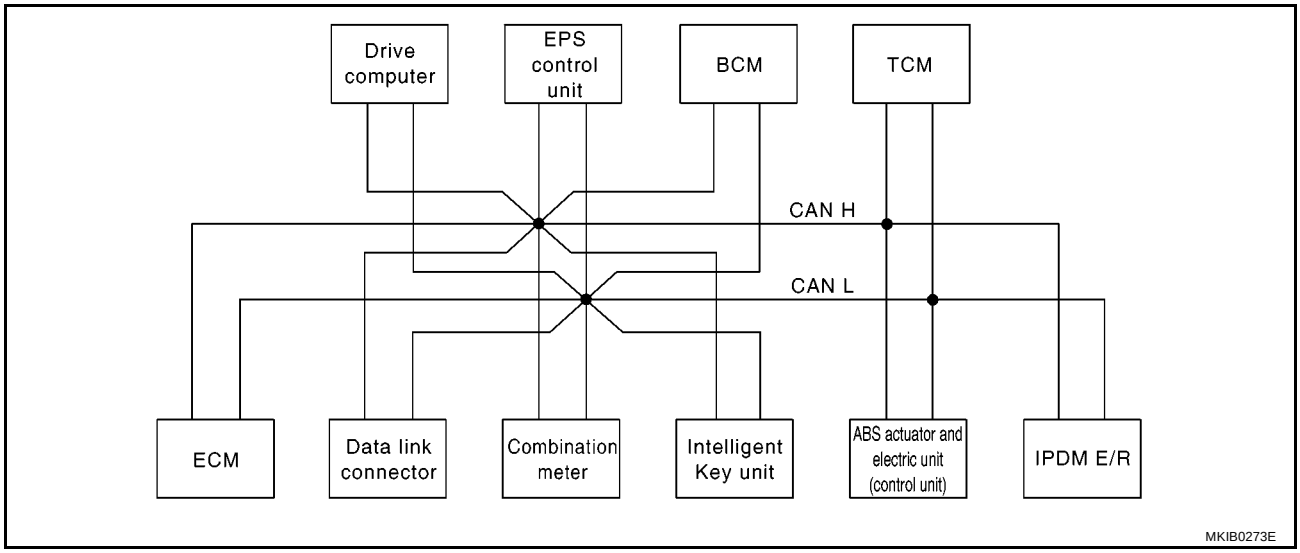

- Type 2

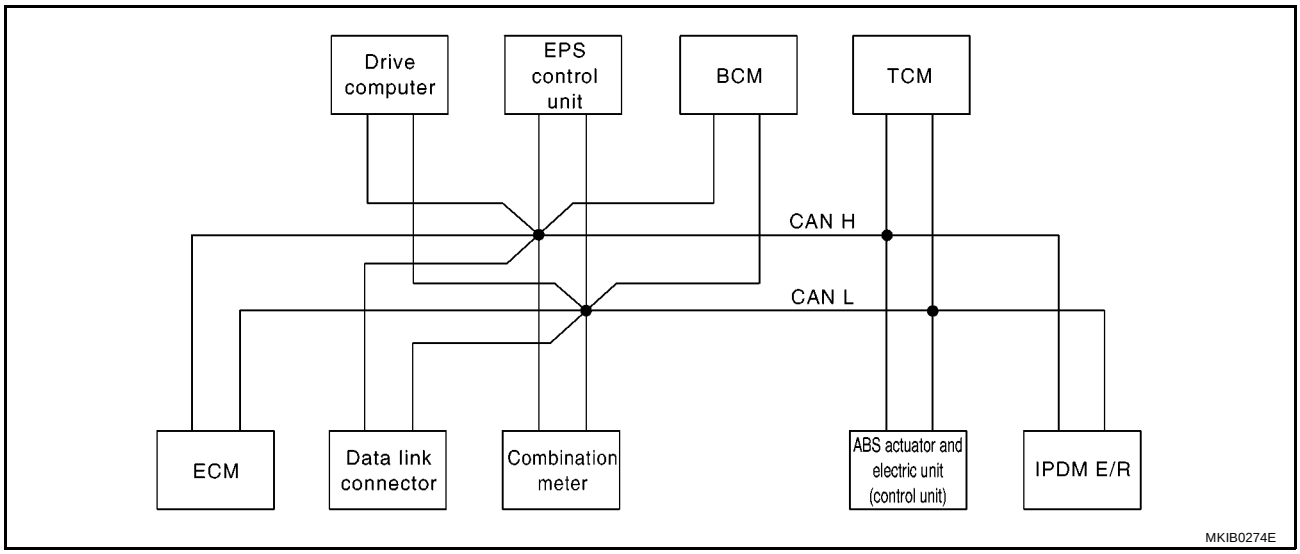

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
Engine speed signal	T	R		R	R				
Engine coolant temperature sig-nal	T	R							
A/T self-diagnosis signal	R							T	
Output shaft revolution signal	R							T	
Accelerator pedal position signal	T							R	
Closed throttle position signal	T							R	
Wide open throttle position sig-nal	T							R	

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
A/T shift position signal		R						T	
Stop lamp switch signal		T						R	
O/D OFF indicator lamp signal		R						T	
Engine and A/T integrated control signal	T							R	
	R							T	
Fuel consumption monitor signal	T	R							
Oil pressure switch signal		R		R					T
A/C compressor request signal	T								R
Heater fan switch signal	R					T			
Cooling fan speed request signal	T								R
Cooling fan speed status signal	R								T
Position lights request signal		R		R		T			R
Position light status signal	R								T
Low beam request signal						T			R
Low beam status signal	R								T
High beam request signal		R				T			R
High beam status signal	R								T
Day time light request signal						T			R
Vehicle speed signal	R	R			R		T		
	R	T	R	R	R	R			
Sleep/wake up signal		R	R			T			R
Door switch signal		R	R	R		T			R
Turn indicator signal		R				T			
Buzzer output signal		R				T			
		R	T						
MI signal	T	R		R					
Front wiper request signal						T			R
Front wiper stop position signal						R			T
Rear window defogger switch signal						T			R
Rear window defogger control signal	R								T
Drive computer signal		T		R					
EPS warning lamp signal		R		R	T				
ABS warning lamp signal		R		R			T		
ABS operation signal	R						T		
Brake warning lamp signal		R		R			T		
Buck-up lamp signal					R	T			
Fuel low warning signal		T		R					
Battery charge malfunction signal		T		R					

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
Air bag system warning signal		T		R					
Brake fluid level warning signal		T		R					
Engine coolant temperature warning signal		T		R					
Front fog lamp request signal		R				T			R
Rear fog lamp status signal		R				T			
Headlamp washer request signal						T			R
Door lock/unlock request signal			R			T			
Door lock/unlock status signal			R			T			
KEY indicator signal		R	T						
LOCK indicator signal		R	T						

TYPE 3/TYPE 4

System diagram

- Type 3

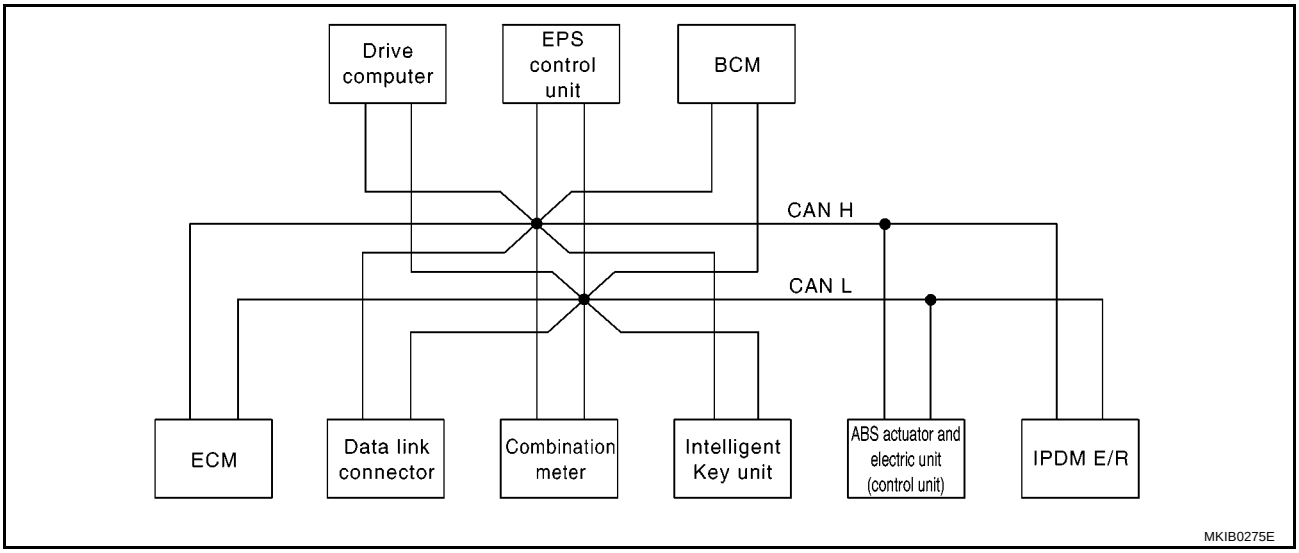

- Type 4

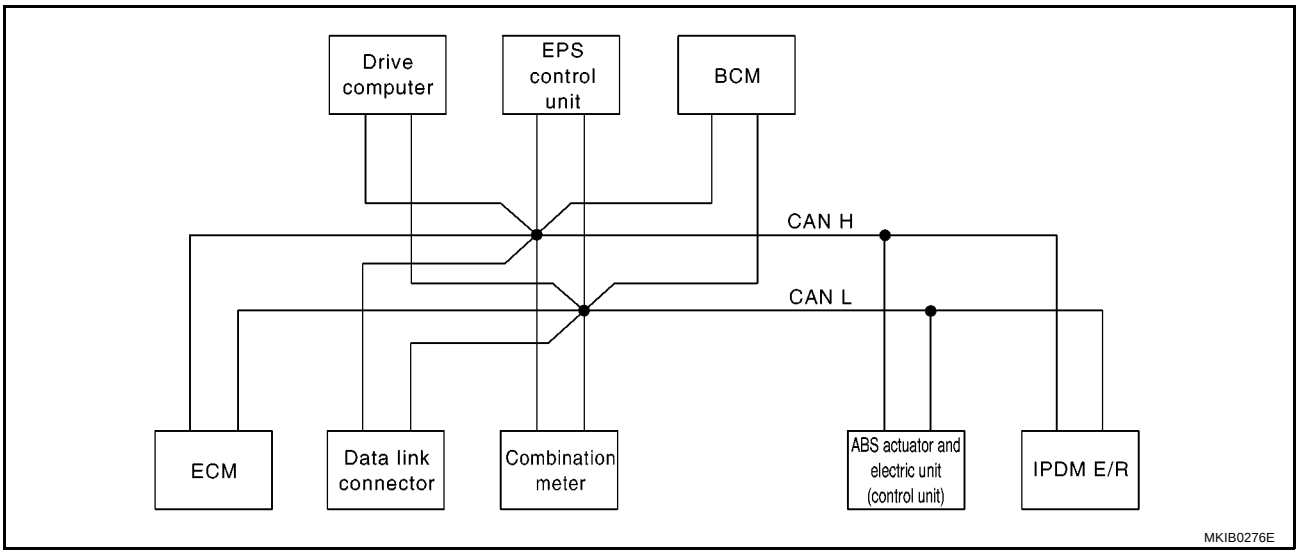

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R	R			
Engine coolant temperature signal	T	R						
Fuel consumption monitor signal	T	R						
Oil pressure switch signal		R		R				T
A/C compressor request signal	T							R
Heater fan switch signal	R					T		
Cooling fan speed request signal	T							R
Cooling fan speed status signal	R							T
Position lights request signal		R		R		T		R

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Position light status signal	R							T
Low beam request signal						T		R
Low beam status signal	R							T
High beam request signal		R				T		R
High beam status signal	R							T
Day time light request signal						T		R
Vehicle speed signal	R	R			R		T	
	R	T	R	R	R	R		
Sleep/wake up signal		R	R			T		R
Door switch signal		R	R	R		T		R
Turn indicator signal		R				T		
Buzzer output signal		R				T		
		R	T					
MI signal	T	R		R				
Front wiper request signal						T		R
Front wiper stop position signal						R		T
Rear window defogger switch signal						T		R
Rear window defogger control signal	R							T
Drive computer signal		T		R				
EPS warning indicator signal		R		R	T			
ABS warning lamp signal		R		R			T	
ABS operation signal	R			R			T	
Brake warning lamp signal		R					T	
Buck-up lamp signal					R	T		
Fuel low warning signal		T		R				
Battery charge malfunction signal		T		R				
Air bag system warning signal		T		R				
Brake fluid level warning signal		T		R				
Engine coolant temperature warning signal		T		R				
Front fog lamp request signal		R				T		R
Rear fog lamp status signal		R				T		
Headlamp washer request signal						T		R
Door lock/unlock request signal			R			T		
Door lock/unlock status signal			R			T		
KEY indicator signal		R	T					
LOCK indicator signal		R	T					

TYPE 5/TYPE 6

System diagram

- Type 5

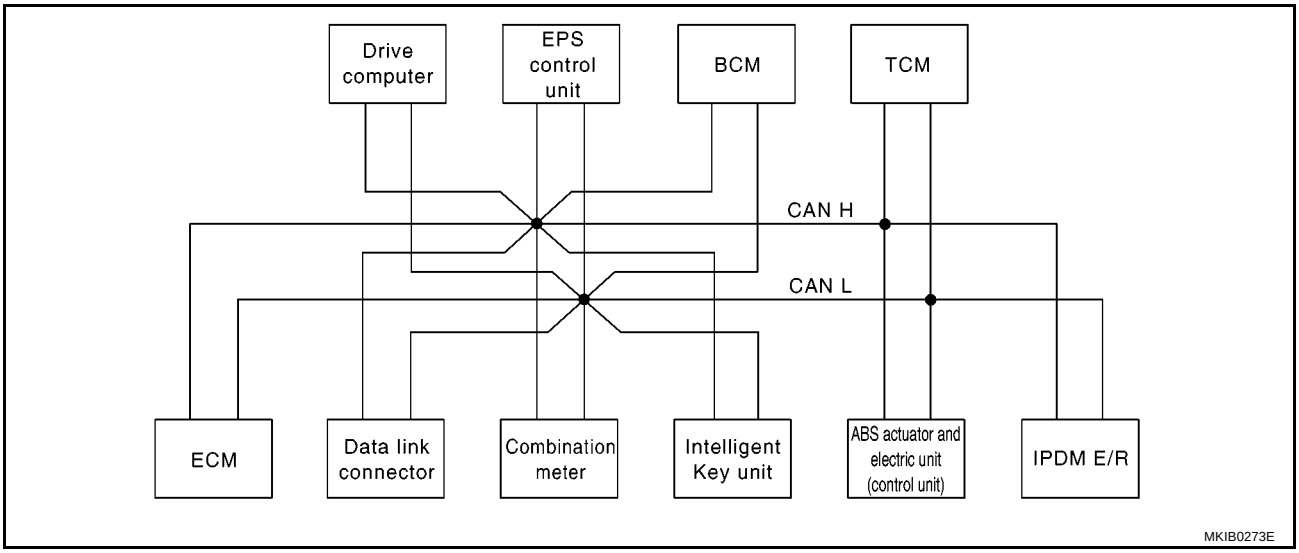

- Type 6

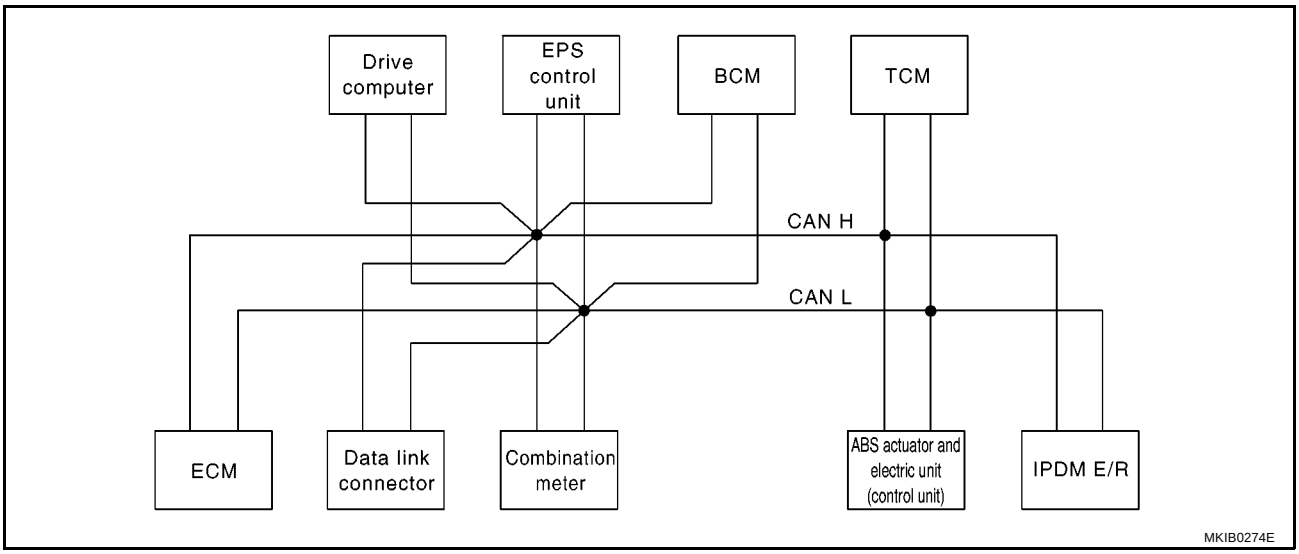

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
Engine speed signal	T	R		R	R		R		
Engine coolant temperature signal	T	R							
A/T self-diagnosis signal	R							T	
Output shaft revolution signal	R							T	
Accelerator pedal position signal	T						R	R	
Closed throttle position signal	T							R	
Wide open throttle position signal	T						R	R	

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
A/T shift position signal		R						T	
A/T shift schedule change demand signal							T	R	
Stop lamp switch signal		T						R	
O/D OFF indicator lamp signal		R						T	
Engine and A/T integrated control signal	T							R	
	R							T	
Fuel consumption monitor signal	T	R							
Oil pressure switch signal		R		R					T
A/C compressor request signal	T								R
A/C switch signal	R								T
Heater fan switch signal	R					T			
Cooling fan speed request signal	T								R
Cooling fan speed status signal	R								T
Position lights request signal		R		R		T			R
Position light status signal	R								T
Low beam request signal						T			R
Low beam status signal	R								T
High beam request signal		R				T			R
High beam status signal	R								T
Day time light request signal						T			R
Vehicle speed signal	R	R			R		T		
	R	T	R	R	R	R			
Sleep/wake up signal		R	R			T			R
Door switch signal		R	R	R		T			R
Turn indicator signal		R				T			
Buzzer output signal		R				T			
		R	T						
MI signal	T	R		R					
Front wiper request signal						T			R
Front wiper stop position signal						R			T
Rear window defogger switch signal						T			R
Rear window defogger control signal	R								T
Drive computer signal		T		R					
EPS warning lamp signal		R		R	T				
ABS warning lamp signal		R		R			T		
ESP warning lamp signal		R		R			T		
ESP OFF indicator signal		R					T		
SLIP indicator lamp signal		R					T		

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
ESP operation signal	R						T		
TCS operation signal	R						T		
ABS operation signal	R						T		
Steering angle signal					T		R		
Brake warning lamp signal		R					T		
Buck-up lamp signal					R	T			
Fuel low warning signal		T		R					
Battery charge malfunction signal		T		R					
Air bag system warning signal		T		R					
Brake fluid level warning signal		T		R					
Engine coolant temperature warning signal		T		R					
Front fog lamp request signal		R				T			R
Rear fog lamp status signal		R				T			
Headlamp washer request signal						T			R
Door lock/unlock request signal			R			T			
Door lock/unlock status signal			R			T			
KEY indicator signal		R	T						
LOCK indicator signal		R	T						

TYPE 7/TYPE 8

System diagram

- Type 7

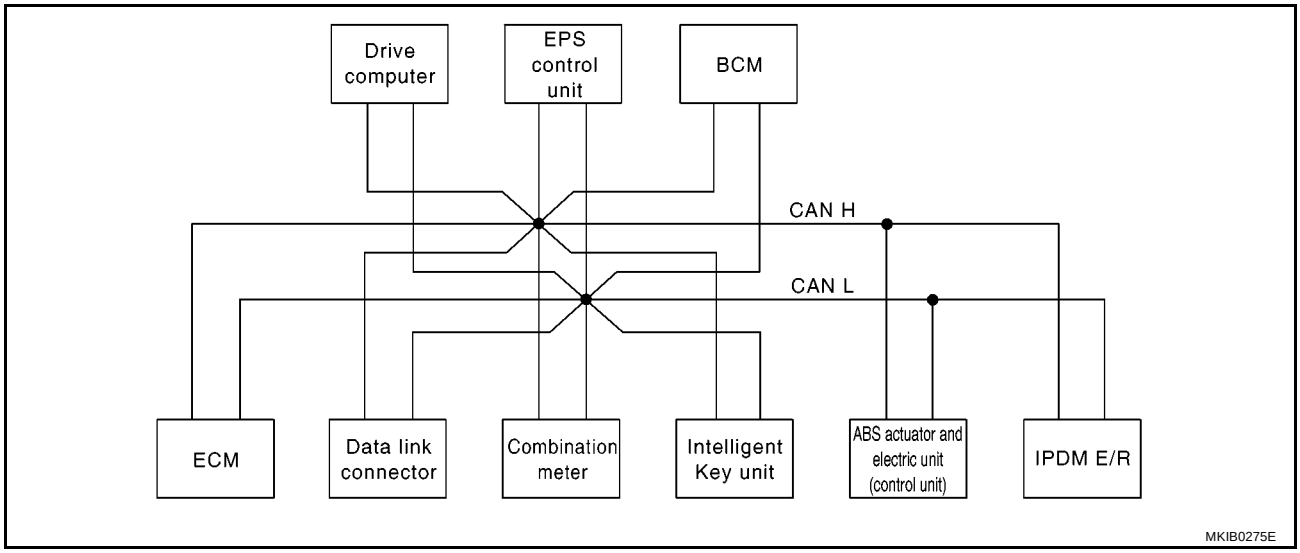

- Type 8

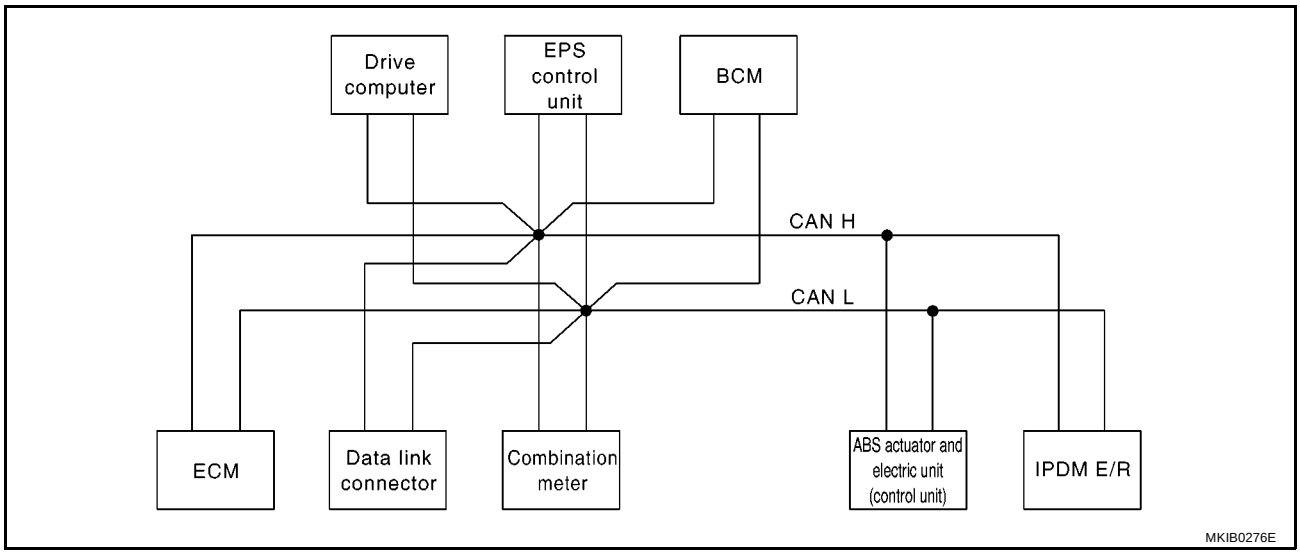

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R	R		R	
Engine coolant temperature signal	T	R						
Fuel consumption monitor signal	T	R						
Accelerator pedal position signal	T						R	
Oil pressure switch signal		R		R				T
A/C compressor request signal	T							R
A/C switch signal	R							T
Heater fan switch signal	R					T		
Cooling fan speed request signal	T							R

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Cooling fan speed status signal	R							T
Position lights request signal		R		R		T		R
Position light status signal	R							T
Low beam request signal						T		R
Low beam status signal	R							T
High beam request signal		R				T		R
High beam status signal	R							T
Day time light request signal						T		R
Vehicle speed signal	R	R			R		T	
	R	T	R	R	R	R		
Sleep/wake up signal		R	R			T		R
Door switch signal		R	R	R		T		R
Turn indicator signal		R				T		
Buzzer output signal		R				T		
		R	T					
MI signal	T	R		R				
Front wiper request signal						T		R
Front wiper stop position signal						R		T
Rear window defogger switch signal						T		R
Rear window defogger control signal	R							T
Drive computer signal		T		R				
EPS warning indicator signal		R		R	T			
ABS warning lamp signal		R		R			T	
ESP warning lamp signal		R		R			T	
ESP OFF indicator signal		R					T	
SLIP indicator lamp signal		R					T	
ESP operation signal	R						T	
TCS operation signal	R						T	
ABS operation signal	R						T	
Steering angle signal					T		R	
Brake warning lamp signal		R					T	
Buck-up lamp signal					R	T		
Fuel low warning signal		T		R				
Battery charge malfunction signal		T		R				
Air bag system warning signal		T		R				
Brake fluid level warning signal		T		R				
Engine coolant temperature warning signal		T		R				
Front fog lamp request signal		R				T		R
Rear fog lamp status signal		R				T		
Headlamp washer request signal						T		R

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Door lock/unlock request signal			R			T		
Door lock/unlock status signal			R			T		
KEY indicator signal		R	T					
LOCK indicator signal		R	T					

BASIC SERVICE PROCEDURE

PFP:00018

Idle Speed and Ignition Timing Check

EBS00O35

IDLE SPEED

With CONSULT-II

Check idle speed in “DATA MONITOR” mode with CONSULT-II.

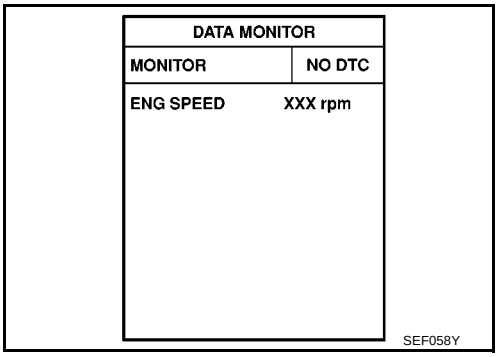

With GST

Check idle speed in “MODE 1" with GST.

IGNITION TIMING

1. Slide the harness protector of ignition coil No.1 to clear the wires.
2. Attach timing light to the wires as shown in the figure.

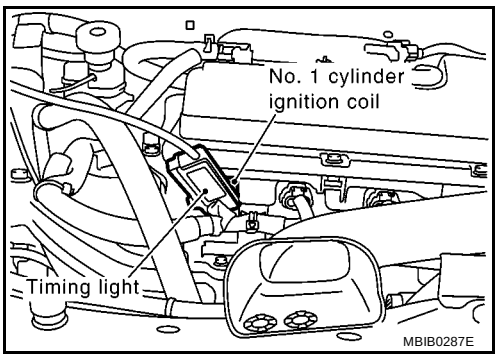

3. Check ignition timing.

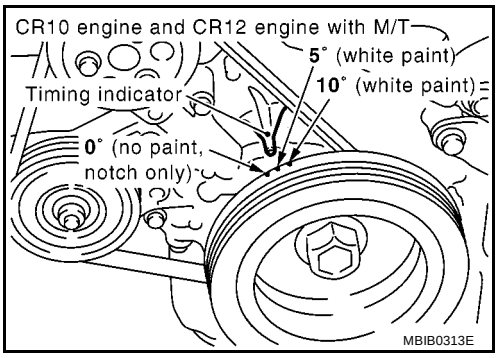

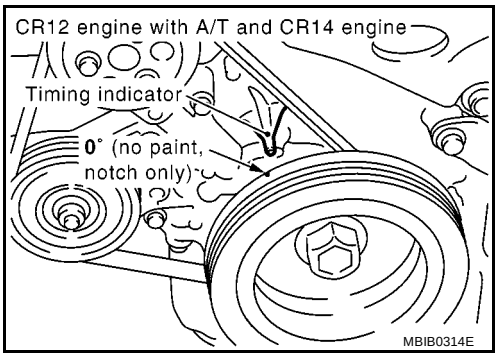

Accelerator Pedal Released Position Learning

EBS00O36

DESCRIPTION

Accelerator Pedal Released Position Learning is an operation to learn the fully released position of the accelerator pedal by monitoring the accelerator pedal position sensor output signal. It must be performed each time harness connector of accelerator pedal position sensor or ECM is disconnected.

OPERATION PROCEDURE

1. Make sure that accelerator pedal is fully released.
2. Turn ignition switch ON and wait at least 2 seconds.
3. Turn ignition switch OFF wait at least 10 seconds.
4. Turn ignition switch ON and wait at least 2 seconds.
5. Turn ignition switch OFF wait at least 10 seconds.

Throttle Valve Closed Position Learning

EBS00O37

DESCRIPTION

Throttle Valve Closed Position Learning is an operation to learn the fully closed position of the throttle valve by monitoring the throttle position sensor output signal. It must be performed each time harness connector of electric throttle control actuator or ECM is disconnected.

OPERATION PROCEDURE

1. Make sure that accelerator pedal is fully released.
2. Turn ignition switch ON.
3. Turn ignition switch OFF and wait at least 10 seconds.
   Make sure that throttle valve moves during above 10 seconds by confirming the operating sound.

Idle Air Volume Learning

EBS00O38

DESCRIPTION

Idle Air Volume Learning is an operation to learn the idle air volume that keeps each engine within the specific range. It must be performed under any of the following conditions:

- Each time electric throttle control actuator or ECM is replaced.
- Idle speed or ignition timing is out of specification.

PREPARATION

Before performing Idle Air Volume Learning, make sure that all of the following conditions are satisfied.
Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9V (At idle)
- Engine coolant temperature: 70 - 95°C (158 - 203°F)
- PNP switch: ON
- Electric load switch: OFF
  (Air conditioner, headlamp, rear window defogger)
  On vehicles equipped with daytime light systems, set lighting switch to the 1st position to light only small lamps.
- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up
  For A/T models with CONSULT-II, drive vehicle until “FLUID TEMP SE” in “DATA MONITOR” mode of “A/T” system indicates less than 0.9V.
  For A/T models without CONSULT-II and M/T models, drive vehicle for 10 minutes.

OPERATION PROCEDURE

With CONSULT-II

1. Perform EC-42, "Accelerator Pedal Released Position Learning" .
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic PREPARATION (previously mentioned) are in good order.

5. Select “IDLE AIR VOL LEARN” in “WORK SUPPORT” mode.

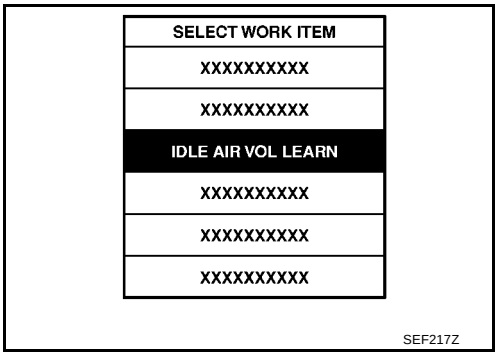

6. Touch “START” and wait 20 seconds.

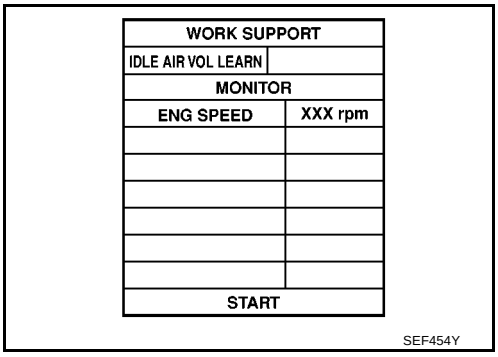

7. Make sure that “CMPLT” is displayed on CONSULT-II screen. If “CMPLT” is not displayed, Idle Air Volume Learning will not be carried out successfully. In this case, find the cause of the incident by referring to the Diagnostic Procedure below.
8. Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications.

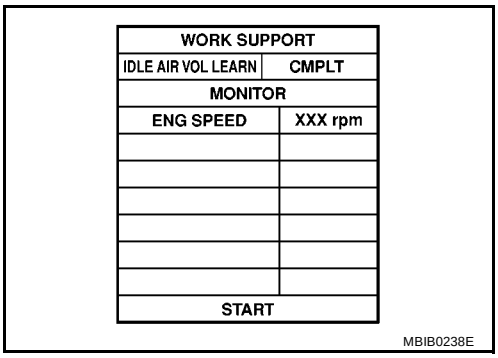

ITEM	SPECIFICATION
Idle speed	M/T: 650±50 rpm A/T: 700±50 rpm (in P or N position)
Ignition timing	M/T: 5±2° BTDC A/T: 5±2° BTDC (in P or N position)

Without CONSULT-II

NOTE:

- **It is better to count the time accurately with a clock.**
- **It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.**

1. Perform EC-42, "Accelerator Pedal Released Position Learning" .
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic PREPARATION (previously mentioned) are in good order.
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
7. Repeat the following procedure quickly five times within 5 seconds.

a. Fully depress the accelerator pedal.
b. Fully release the accelerator pedal.

8. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 20 seconds until the MI stops blinking and turned ON.
9. Fully release the accelerator pedal within 3 seconds after the MI turned ON.
10. Start engine and let it idle.

11. Wait 20 seconds.

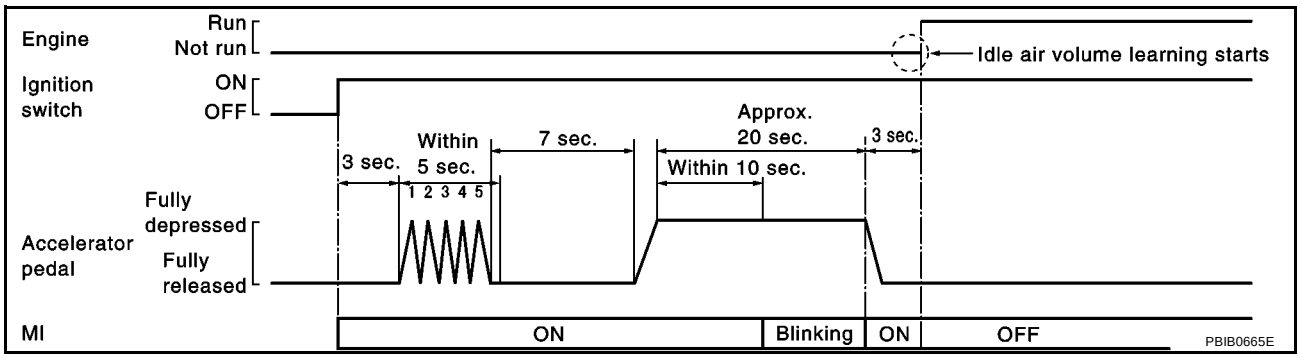

12. Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications.

ITEM	SPECIFICATION
Idle speed	M/T: 650±50 rpm A/T: 700±50 rpm (in P or N position)
Ignition timing	M/T: 5±2° BTDC A/T: 5±2° BTDC (in P or N position)

13. If idle speed and ignition timing are not within the specification, Idle Air Volume Learning will not be carried out successfully. In this case, find the cause of the incident by referring to the Diagnostic Procedure below.

DIAGNOSTIC PROCEDURE

If idle air volume learning cannot be performed successfully, proceed as follows:

1. **Check that throttle valve is fully closed.**
2. **Check PCV valve operation.**
3. **Check that downstream of throttle valve is free from air leakage.**
4. **When the above three items check out OK, engine component parts and their installation condition are questionable. Check and eliminate the cause of the incident.**
   It is useful to perform EC-119, "TROUBLE DIAGNOSIS - SPECIFICATION VALUE" .
5. **If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform Idle air volume learning all over again:**
   - **Engine stalls.**
   - **Erroneous idle.**

Fuel Pressure Check

EBS00O39

FUEL PRESSURE RELEASE

With CONSULT-II

1. Turn ignition switch ON.
2. Perform “FUEL PRESSURE RELEASE” in “WORK SUPPORT” mode with CONSULT-II.
3. Start engine.
4. After engine stalls, crank it 2 or 3 times to release all fuel pressure.
5. Turn ignition switch OFF.

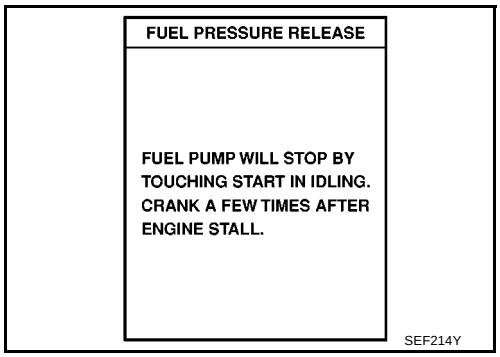

Without CONSULT-II

1. Remove fuel pump fuse located in IPDM E/R.
2. Start engine.
3. After engine stalls, crank it 2 or 3 times to release all fuel pressure.
4. Turn ignition switch OFF.
5. Reinstall fuel pump fuse after servicing fuel system.

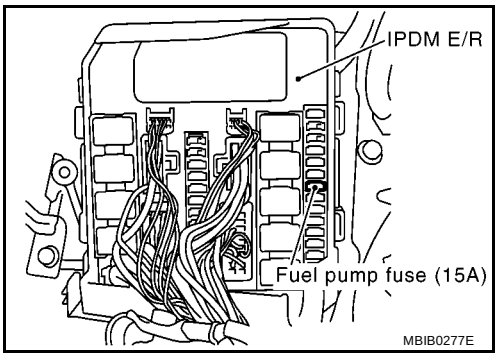

FUEL PRESSURE CHECK

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

NOTE:

Prepare pans or saucers under the disconnected fuel line because the fuel may spill out. The fuel pressure cannot be completely released because CR engine models do not have fuel return system.

CAUTION:

- **The fuel hose connection method used when taking fuel pressure check must not be used for other purposes.**
- **Be careful not to scratch or put debris around connection area when servicing, so that the quick connector maintains sealability with O-rings inside.**
- **When installing fuel hose quick connector, refer to EM-16, "AIR CLEANER AND AIR DUCT" .**

1. Release fuel pressure to zero. Refer to EC-44, "FUEL PRESSURE RELEASE" .
2. Prepare fuel hose and fuel hose clamp for fuel pressure check, and connect fuel pressure gauge.
   - Use suitable fuel hose for fuel pressure check (genuine NISSAN fuel hose without quick connector).
   - To avoid unnecessary force or tension to hose, use moderately long fuel hose for fuel pressure check.
   - Do not use the fuel hose for checking fuel pressure with damage or cracks on it.
   - Use Pressure Gauge to check fuel pressure.
3. Remove fuel hose. Refer to EM-16, "AIR CLEANER AND AIR DUCT" .
   - Do not twist or kink fuel hose because it is plastic hose.
   - Do not remove fuel hose from quick connector.
   - Keep the original fuel hose to be free from intrusion of dust or foreign substances with a suitable cover.
4. Install the fuel pressure gauge as shown in the figure.
   - Wipe off oil or dirt from hose insertion part using cloth moistened with gasoline.
   - Apply proper amount of gasoline between top of the fuel tube and No.1 spool.
   - Insert fuel hose for fuel pressure check until it touches the No.1 spool on fuel tube.
   - Use NISSAN genuine hose clamp (part number: 16439 N4710 or 16439 40U00).
   - When reconnecting fuel line, always use new clamps.
   - When reconnecting fuel hose, check the original fuel hose for damage and abnormality.
   - Use a torque driver to tighten clamps.

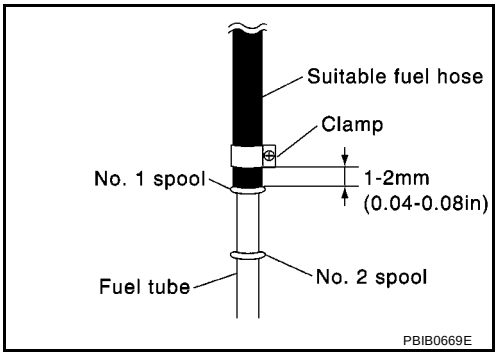

- Install hose clamp to the position within 1 - 2 mm (0.04 - 0.08 in).

Tightening torque:

1 - 1.5 N·m (0.1 - 0.15 kg-m, 9 - 13 in-lb)

- Make sure that clamp screw does not contact adjacent parts.

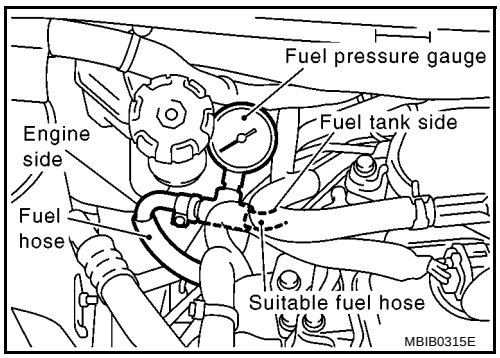

5. After connecting fuel hose for fuel pressure check, pull the hose with a force of approximately 98 N (10 kg, 22 lb) to confirm fuel tube does not come off.
6. Turn ignition switch ON, and check for fuel leakage.
7. Start engine and check for fuel leakage.
8. Read the indication of fuel pressure gauge.
   - Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.
   - During fuel pressure check, confirm for fuel leakage from fuel connection every 3 minutes.

At idling: Approximately 350 kPa (3.5 bar, 3.57 kg/cm^2 , 51 psi)

9. If result is unsatisfactory, go to next step.
10. Check the following.
    - Fuel hoses and fuel tubes for clogging
    - Fuel filter for clogging
    - Fuel pump
    - Fuel pressure regulator for clogging

    If OK, replace fuel pressure regulator.
    If NG, repair or replace.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

Introduction

EBS00O3A

The ECM has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Emission-related diagnostic information	ISO Standard
Diagnostic Trouble Code (DTC)	Mode 3 of ISO 15031-5
Freeze Frame data	Mode 2 of ISO 15031-5
System Readiness Test (SRT) code	Mode 1 of ISO 15031-5
1st Trip Diagnostic Trouble Code (1st Trip DTC)	Mode 7 of ISO 15031-5
1st Trip Freeze Frame data	
Test values and Test limits	Mode 6 of ISO 15031-5
Calibration ID	Mode 9 of ISO 15031-5

The above information can be checked using procedures listed in the table below.

×: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data	SRT code	Test value
CONSULT-II	×	×	×	×	×	—
GST	×	×*1	×	—	×	×
ECM	×	×*2	—	—	—	—

*1: 1st trip DTCs for self-diagnoses concerning SRT items cannot be shown on the GST display.
*2: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

The malfunction indicator (MI) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode. (Refer to EC-75 .)

Two Trip Detection Logic

EBS00O3B

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MI will not light up at this stage. <1st trip>
If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MI lights up. The MI lights up at the same time when the DTC is stored. <2nd trip>
The “trip” in the “Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to light up or blink the MI, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

×: Applicable —: Not applicable

Items	MI				DTC		1st trip DTC	
	1st trip		2nd trip		1st trip displaying	2nd trip displaying	1st trip displaying	2nd trip displaying
	Blinking	Lighting up	Blinking	Lighting up				
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 is being detected	×	—	—	—	—	—	×	—
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 is being detected	—	—	×	—	—	×	—	—
One trip detection diagnoses (Refer to EC-11)	—	×	—	—	×	—	—	—
Except above	—	—	—	×	—	×	×	—

When there is an open circuit on MI circuit, the ECM can not warn the driver by lighting MI up when there is a malfunction on engine control system.
Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system has malfunction and MI circuit is open by means of operating fail-safe function.

The fail-safe function also operate when above diagnoses except MI circuit are detected, and demands the driver to repair the malfunction.

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,500 rpm due to the fuel cut

Emission-related Diagnostic Information

EBS00O3C

EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test Valve/ Test Limit (GST only)	1st trip DTC	Reference page
	CONSULT-II GST*2	ECM*3				
CAN COMM CIRCUIT	U1000	1000*5	—	—	—	EC-130
CAN COMM CIRCUIT	U1001	1001*5	—	—	×	EC-130
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	**P0000**	**0000**	—	—	—	—
INT/V TIM CONT-B1	P0011	0011	—	—	×	EC-133
HO2S1 HTR (B1)	P0031	0031	×	×	×*4	EC-136
HO2S1 HTR (B1)	P0032	0032	×	×	×*4	EC-136
HO2S2 HTR (B1)	P0037	0037	×	×	×*4	EC-142
HO2S2 HTR (B1)	P0038	0038	×	×	×*4	EC-142
ABSL PRES SEN/CIRC	P0107	0107	—	—	×	EC-148
ABSL PRES SEN/CIRC	P0108	0108	—	—	×	EC-148
IAT SEN/CIRCUIT	P0112	0112	—	—	×	EC-153
IAT SEN/CIRCUIT	P0113	0113	—	—	×	EC-153
ECT SEN/CIRCUIT	P0117	0117	—	—	—	EC-158
ECT SEN/CIRCUIT	P0118	0118	—	—	—	EC-158
TP SEN 2/CIRC	P0122	0122	—	—	—	EC-163
TP SEN 2/CIRC	P0123	0123	—	—	—	EC-163
HO2S1 (B1)	P0132	0132	×	×	×*4	EC-169
HO2S1 (B1)	P0133	0133	×	×	×*4	EC-175
HO2S1 (B1)	P0134	0134	×	×	×*4	EC-185
HO2S2 (B1)	P0138	0138	×	×	×*4	EC-192
HO2S2 (B1)	P0139	0139	×	×	×*4	EC-199
FUEL SYS-LEAN-B1	P0171	0171	—	—	×	EC-208
FUEL SYS-RICH-B1	P0172	0172	—	—	×	EC-215
TP SENSOR*6	P0221	0221	—	—	—	EC-221
TP SEN 1/CIRC	P0222	0222	—	—	—	EC-227
TP SEN 1/CIRC	P0223	0223	—	—	—	EC-227
APP SENSOR*6	P0226	0226	—	—	—	EC-233
APP SEN 1/CIRC *6	P0227	0227	—	—	—	EC-242
APP SEN 1/CIRC *6	P0228	0228	—	—	—	EC-242
MULTI CYL MISFIRE	P0300	0300	—	—	×	EC-251
CYL 1 MISFIRE	P0301	0301	—	—	×	EC-251
CYL 2 MISFIRE	P0302	0302	—	—	×	EC-251
CYL 3 MISFIRE	P0303	0303	—	—	×	EC-251
CYL 4 MISFIRE	P0304	0304	—	—	×	EC-251

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test Valve/ Test Limit (GST only)	1st trip DTC	Reference page
	CONSULT-II GST*2	ECM*3				
KNOCK SEN/CIRC-B1	P0327	0327	—	—	×	EC-257
KNOCK SEN/CIRC-B1	P0328	0328	—	—	×	EC-257
CKP SEN/CIRCUIT	P0335	0335	—	—	×	EC-261
CMP SEN/CIRC-B1	P0340	0340	—	—	×	EC-267
TW CATALYST SYS-B1	P0420	0420	×	×	×*4	EC-273
PURG VOLUME CONT/V	P0444	0444	—	—	×	EC-278
VEH SPEED SEN/CIRC	P0500	0500	—	—	×	EC-284
ECM	P0605	0605	—	—	—	EC-286
PNP SW/CIRC	P0705	0705	—	—	×	AT-114
ATF TEMP SEN/SIRC	P0710	0710	—	—	×	AT-120
VEH SPD SEN/CIRC	P0720	0720	—	—	×	AT-126
ENGINE SPEED SIG	P0725	0725	—	—	×	AT-131
A/T 1ST GR FNCTN	P0731	0731	—	—	×	AT-135
A/T 2ND GR FNCTN	P0732	0732	—	—	×	AT-141
A/T 3RD GR FNCTN	P0733	0733	—	—	×	AT-147
A/T 4TH GR FNCTN	P0734	0734	—	—	×	AT-153
TCC SOLENOID/CIRC	P0740	0740	—	—	×	AT-161
L/PRESS SOL/CIRC	P0745	0745	—	—	×	AT-166
SFT SOL A/CIRC	P0750	0750	—	—	—	AT-173
SFT SOL B/CIRC	P0755	0755	—	—	—	AT-178
ECM BACK UP/CIRC	P1065	1065	—	—	×	EC-289
INT/V TIM V/CIR-B1	P1111	1111	—	—	×	EC-293
ETC ACTR	P1121	1121	—	—	—	EC-297
ETC FUNCTION/CIRC	P1122	1122	—	—	—	EC-299
ETC MOT PWR	P1124	1124	—	—	—	EC-305
ETC MOT PWR	P1126	1126	—	—	—	EC-305
ETC MOT	P1128	1128	—	—	—	EC-310
HO2S1 (B1)	P1143	1143	×	×	×*4	EC-315
HO2S1 (B1)	P1144	1144	×	×	×*4	EC-321
HO2S2 (B1)	P1146	1146	×	×	×*4	EC-327
HO2S2 (B1)	P1147	1147	×	×	×*4	EC-337
INTAKE ERROR	P1171	1171	—	—	—	EC-346
TCS C/U FUNCTN	P1211	1211	—	—	×	EC-350
TCS/CIRC	P1212	1212	—	—	×	EC-351
ENG OVER TEMP	P1217	1217	—	—	—	EC-352
TP SEN 2/CIRC	P1223	1223	—	—	—	EC-366
TP SEN 2/CIRC	P1224	1224	—	—	—	EC-366
CTP LEARNING	P1225	1225	—	—	×	EC-372
CTP LEARNING	P1226	1226	—	—	×	EC-374
APP SEN 2/CIRC	P1227	1227	—	—	—	EC-376
APP SEN 2/CIRC	P1228	1228	—	—	—	EC-376
SENSOR POWER/CIRC	P1229	1229	—	—	—	EC-385

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test Valve/ Test Limit (GST only)	1st trip DTC	Reference page
	CONSULT-II GST*2	ECM*3				
NATS MALFUNCTION	P1610 - P1615	1610 - 1615	—	—	×	EC-60
TP SEN/CIRC A/T	P1705	1705	—	—	—	AT-183
P-N POS SW/CIRCUIT	P1706	1706	—	—	×	EC-389
O/R CLTCH SOL/CIRC	P1760	1760	—	—	×	AT-188
BRAKE SW/CIRCUIT	P1805	1805	—	—	×	EC-395
APP SEN 1/CIRC	P2122	2122	—	—	—	EC-402
APP SEN 1/CIRC	P2123	2123	—	—	—	EC-402
APP SEN 2/CIRC	P2127	2127	—	—	—	EC-411
APP SEN 2/CIRC	P2128	2128	—	—	—	EC-411
TP SENSOR	P2135	2135	—	—	—	EC-420
APP SENSOR	P2138	2138	—	—	—	EC-426

*1: 1st trip DTC No. is the same as DTC No.
*2: This number is prescribed by ISO 15031-5.
*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.
*4: This is not displayed with GST.
*5: The troubleshooting for this DTC needs CONSULT-II.

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed.
If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MI will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MI lights up. In other words, the DTC is stored in the ECM memory and the MI lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MI during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.
Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
For malfunctions in which 1st trip DTCs are displayed, refer to EC-48, "EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS" . These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT-II.
1st trip DTC is specified in Mode 7 of ISO 15031-5. 1st trip DTC detection occurs without lighting up the MI and therefore does not warn the driver of a malfunction. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.
When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in Work Flow procedure Step II, refer to EC-70, "WORK FLOW" . Then perform DTC Confirmation Procedure or Overall Function Check to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

How to Read DTC and 1st Trip DTC

DTC and 1st trip DTC can be read by the following methods.

With CONSULT-II

With GST

CONSULT-II or GST (Generic Scan Tool) Examples: P0340, P0740, P0745, etc.
These DTCs are prescribed by ISO 15031-5.
(CONSULT-II also displays the malfunctioning component or system.)

No Tools

The number of blinks of the MI in the Diagnostic Test Mode II (Self-Diagnostic Results) indicates the DTC. Example: 0102, 0340 etc.

These DTCs are controlled by NISSAN.

- **1st trip DTC No. is the same as DTC No.**
- **Output of a DTC indicates a malfunction. However, GST or the Diagnostic Test Mode II do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-II can identify malfunction status as shown below. Therefore, using CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.
If the DTC is being detected currently, the time data will be [0].
If a 1st trip DTC is stored in the ECM, the time data will be [1t].

DTC display

SELF DIAG RESULTS	
DTC RESULTS	TIME
CKP SEN/CIRCUIT [P0335]	0

1st trip DTC display

SELF DIAG RESULTS	
DTC RESULTS	TIME
CKP SEN/CIRCUIT [P0335]	1t

PBIB0911E

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, base fuel schedule and intake air temperature at the moment a malfunction is detected.
Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, see EC-105, "Freeze Frame Data and 1st Trip Freeze Frame Data" .
Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MI on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0304 Fuel Injection System Function — DTC: P0171, P0172
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.
Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .

SYSTEM READINESS TEST (SRT) CODE

System Readiness Test (SRT) code is specified in Mode 1 of ISO 15031-5.

As part of an enhanced emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.
If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating “INCMP”, use the information in this Service Manual to set the SRT to “CMPLT”.
In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate “CMPLT” for each application system. Once set as “CMPLT”, the SRT status remains “CMPLT” until the self-diagnosis memory is erased.
Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate “INCMP” for these items.

NOTE:
The SRT will also indicate “INCMP” if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.
If, during the state emissions inspection, the SRT indicates “CMPLT” for all test items, the inspector will continue with the emissions test. However, if the SRT indicates “INCMP” for one or more of the SRT items the vehicle is returned to the customer untested.

NOTE:
If MI is ON during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates “CMPLT” for all test items. Therefore, it is important to check SRT (“CMPLT”) and DTC (No DTCs) before the inspection.

SRT Item

The table below shows required self-diagnostic items to set the SRT to “CMPLT”.

SRT item (CONSULT-II indication)	Performance Priority*	Required self-diagnostic items to set the SRT to “CMPLT”	Corresponding DTC No.
CATALYST	2	Three way catalyst function	P0420
HO2S	1	Heated oxygen sensor 1	P0132
		Heated oxygen sensor 1	P0133
		Heated oxygen sensor 1	P0134
		Heated oxygen sensor 1	P1143
		Heated oxygen sensor 1	P1144
		Heated oxygen sensor 2	P0138
		Heated oxygen sensor 2	P0139
		Heated oxygen sensor 2	P1146
		Heated oxygen sensor 2	P1147
HO2S HTR	1	Heated oxygen sensor 1 heater	P0031, P0032
		Heated oxygen sensor 2 heater	P0037, P0038

*: If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT-II.

SRT Set Timing

SRT is set as “CMPLT” after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

Self-diagnosis result		Example				
		Diagnosis	Ignition cycle ← ON →	OFF ← ON →	OFF ← ON →	OFF ← ON →
All OK	Case 1	P0400	OK (1)	— (1)	OK (2)	— (2)
		P0402	OK (1)	— (1)	— (1)	OK (2)
		P1402	OK (1)	OK (2)	— (2)	— (2)
		SRT of EGR	“CMPLT”	“CMPLT”	“CMPLT”	“CMPLT”
	Case 2	P0400	OK (1)	— (1)	— (1)	— (1)
		P0402	— (0)	— (0)	OK (1)	— (1)
		P1402	OK (1)	OK (2)	— (2)	— (2)
		SRT of EGR	“INCMP”	“INCMP”	“CMPLT”	“CMPLT”
NG exists	Case 3	P0400	OK	OK	—	—
		P0402	—	—	—	—
		P1402	NG	—	NG	NG (Consecutive NG)
		(1st trip) DTC	1st trip DTC	—	1st trip DTC	DTC (= MI “ON”)
		SRT of EGR	“INCMP”	“INCMP”	“INCMP”	“CMPLT”

OK: Self-diagnosis is carried out and the result is OK.
NG: Self-diagnosis is carried out and the result is NG.
—: Self-diagnosis is not carried out.

When all SRT related self-diagnoses showed OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate “CMPLT”. → Case 1 above
When all SRT related self-diagnoses showed OK results through several different cycles, the SRT will indicate “CMPLT” at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses showed NG results in 2 consecutive cycles, the SRT will also indicate “CMPLT”. → Case 3 above
The table above shows that the minimum number of cycles for setting SRT as “INCMP” is one (1) for each self-diagnosis (Case 1 & 2) or two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary for each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate “CMPLT” at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires “CMPLT” of the SRT only with OK self-diagnosis results.
- When, during SRT driving pattern, 1st trip DTC (NG) is detected prior to “CMPLT” of SRT, the self-diagnosis memory must be erased from ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate “INCMP”.

  NOTE:
  SRT can be set as “CMPLT” together with the DTC (s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates “CMPLT”.

SRT Service Procedure

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating “INCMP”, review the flowchart diagnostic sequence on the next page.

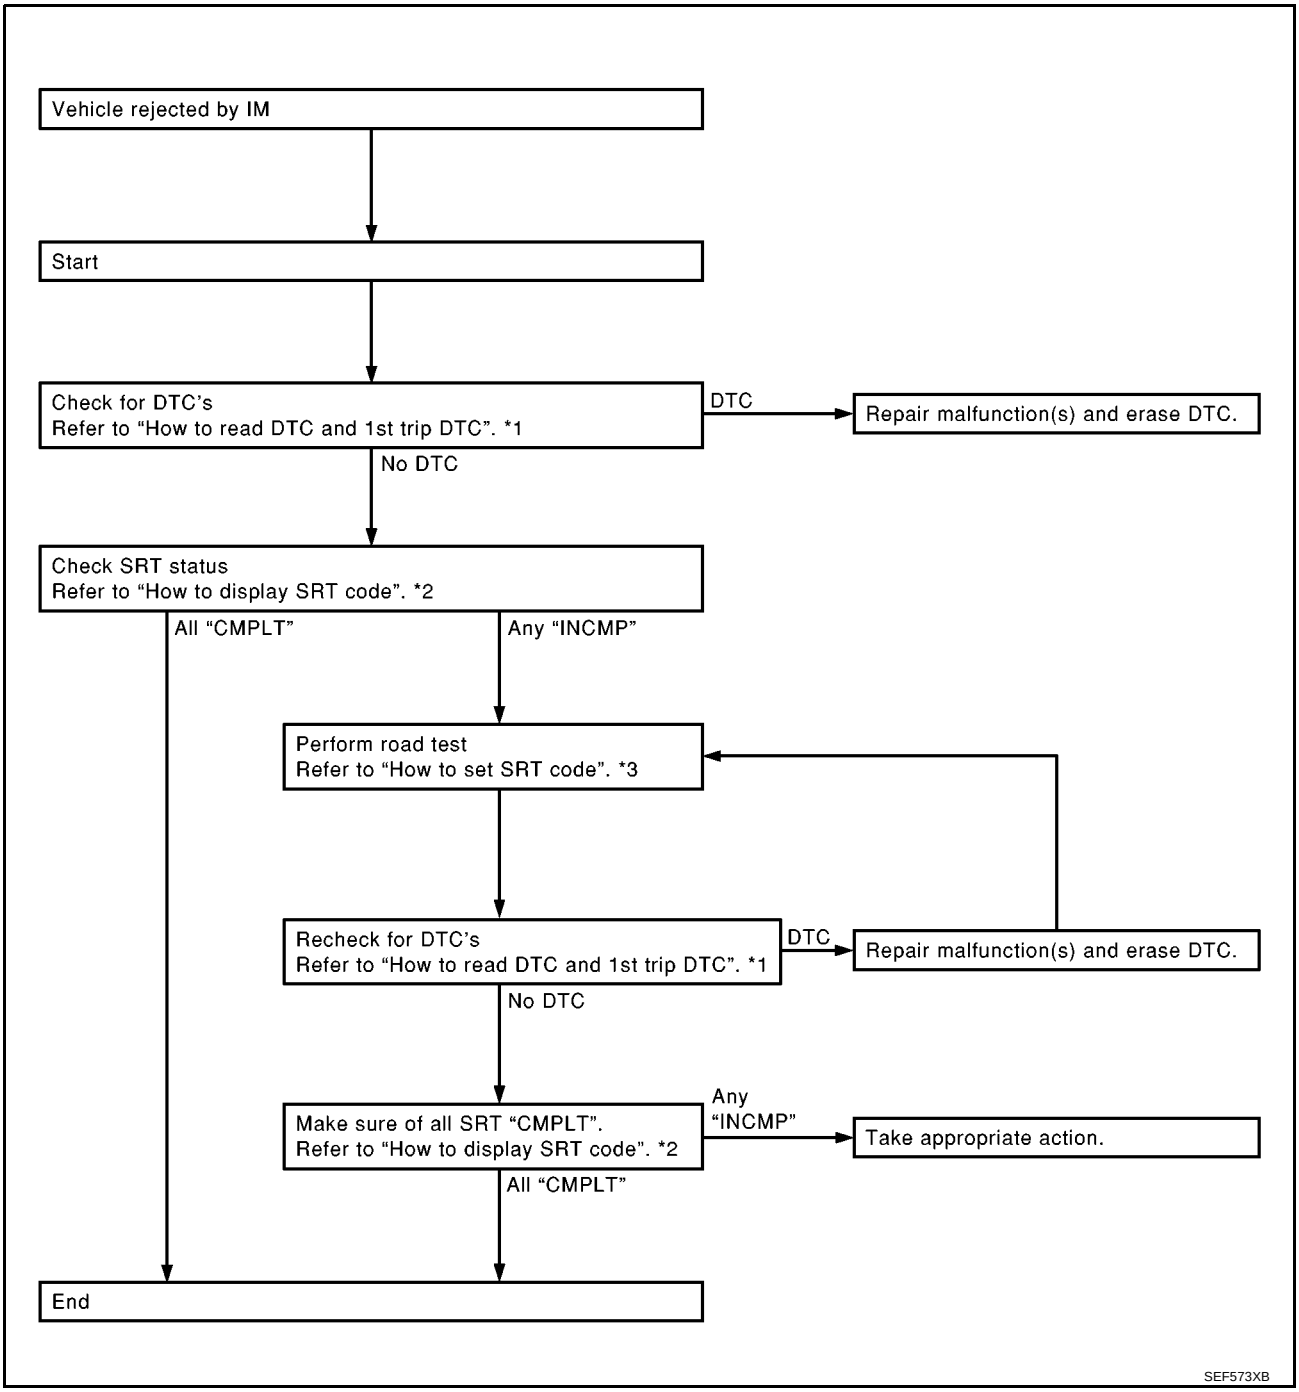

*1 EC-50 *2 EC-55 *3 EC-56

How to Display SRT Code

WITH CONSULT-II

Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-II.

For items whose SRT codes are set, a "CMPLT" is displayed on the CONSULT-II screen; for items whose SRT codes are not set, "INCMP" is displayed.

A sample of CONSULT-II display for SRT code is shown at right.

"INCMP" means the self-diagnosis is incomplete and SRT is not set.

"CMPLT" means the self-diagnosis is complete and SRT is set.

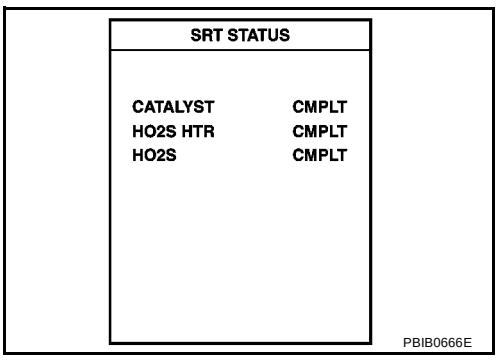

WITH GST

Selecting Mode 1 with GST (Generic Scan Tool)

How to Set SRT Code

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions.

WITH CONSULT-II

Perform corresponding DTC Confirmation Procedure one by one based on Performance Priority in the table on EC-53 .

WITHOUT CONSULT-II

The most efficient driving pattern in which SRT codes can be properly set is explained on the next page. The driving pattern should be performed one or more times to set all SRT codes.

Driving Pattern

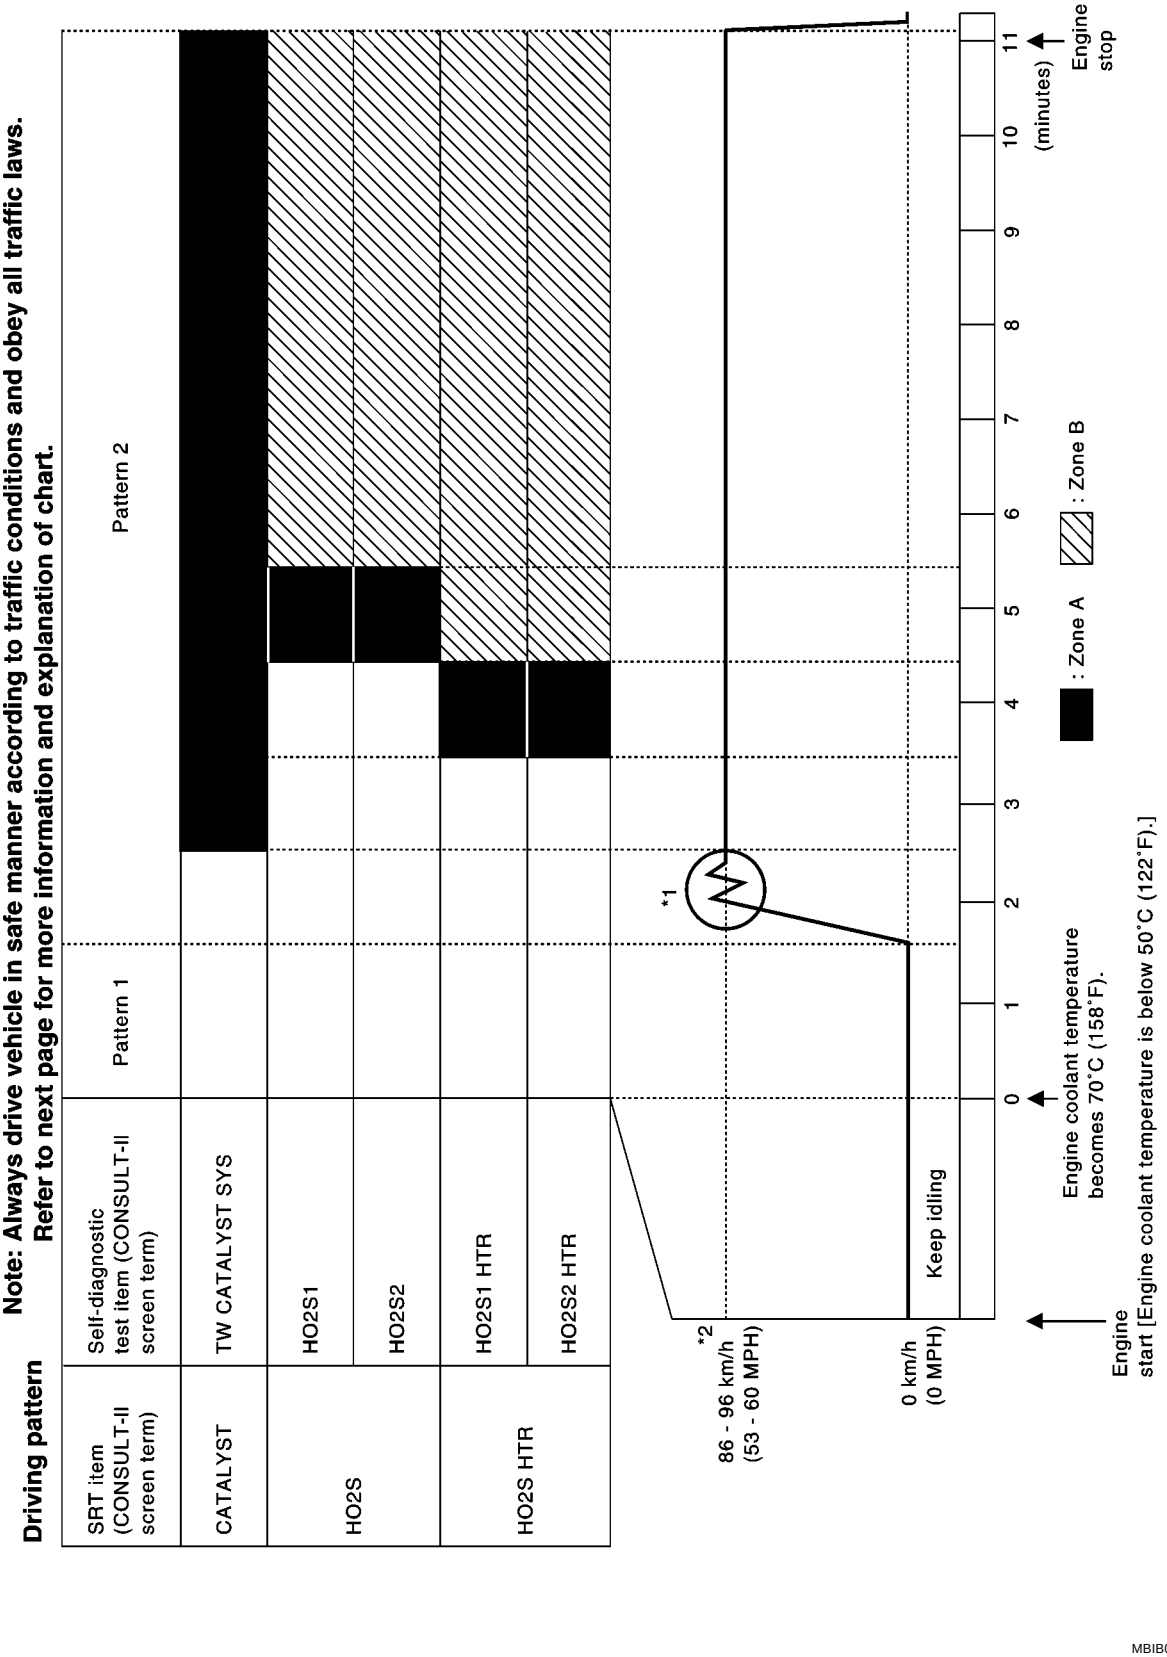

MBIB0241E

- The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.
  Zone A refers to the range where the time, required for the diagnosis under normal conditions*, is the shortest.
  Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within zone A.

*: Normal conditions refer to the following:

- Sea level
- Flat road
- Ambient air temperature: 20 - 30°C (68 - 86°F)
- Diagnosis is performed as quickly as possible under normal conditions.
  Under different conditions [For example: ambient air temperature other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.

Pattern 1:

- **The engine is started at the engine coolant temperature of −10 to 35°C (14 to 95°F) (where the voltage between the ECM terminal 72 and ground is 3.0 - 4.3V).**
- **The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminal 72 and ground is lower than 1.4V).**

Pattern 2:

- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.

*1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.
*2: Checking the vehicle speed with GST is advised.

TEST VALUE AND TEST LIMIT (GST ONLY — NOT APPLICABLE TO CONSULT-II)

The following is the information specified in Mode 6 of ISO 15031-5.
The test value is a parameter used to determine whether a system/circuit diagnostic test is OK or NG while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.
Items for which these data (test value and test limit) are displayed are the same as SRT code items.
These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

×: Applicable —: Not applicable

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
CATALYST	Three way catalyst function	01H	01H	Max.	×
HO2S	Heated oxygen sensor 1	09H	04H	Max.	×
		0AH	84H	Min.	×
		0BH	04H	Max.	×
		0CH	04H	Max.	×
		0DH	04H	Max.	×
	Heated oxygen sensor 2	19H	86H	Min.	×
		1AH	86H	Min.	×
		1BH	06H	Max.	×
		1CH	06H	Max.	×
HO2S HTR	Heated oxygen sensor 1 heater	29H	08H	Max.	×
		2AH	88H	Min.	×
	Heated oxygen sensor 2 heater	2DH	0AH	Max.	×
		2EH	8AH	Min.	×

HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION

How to Erase DTC

With CONSULT-II

The emission related diagnostic information in the ECM can be erased by selecting “ERASE” in the “SELF-DIAG RESULTS” mode with CONSULT-II.
If DTCs are displayed for both ECM and TCM (Transmission control module), they need to be erased individually from the ECM and TCM (Transmission control module).

NOTE:
If the DTC is not for A/T related items (see EC-11), skip steps 2 through 4.

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Turn CONSULT-II ON and touch “A/T”.
3. Touch “SELF-DIAG RESULTS”.
4. Touch “ERASE”. [The DTC in the TCM (Transmission control module) will be erased.] Then touch “BACK” twice.
5. Touch “ENGINE”.
6. Touch “SELF-DIAG RESULTS”.
7. Touch “ERASE”. (The DTC in the ECM will be erased.)

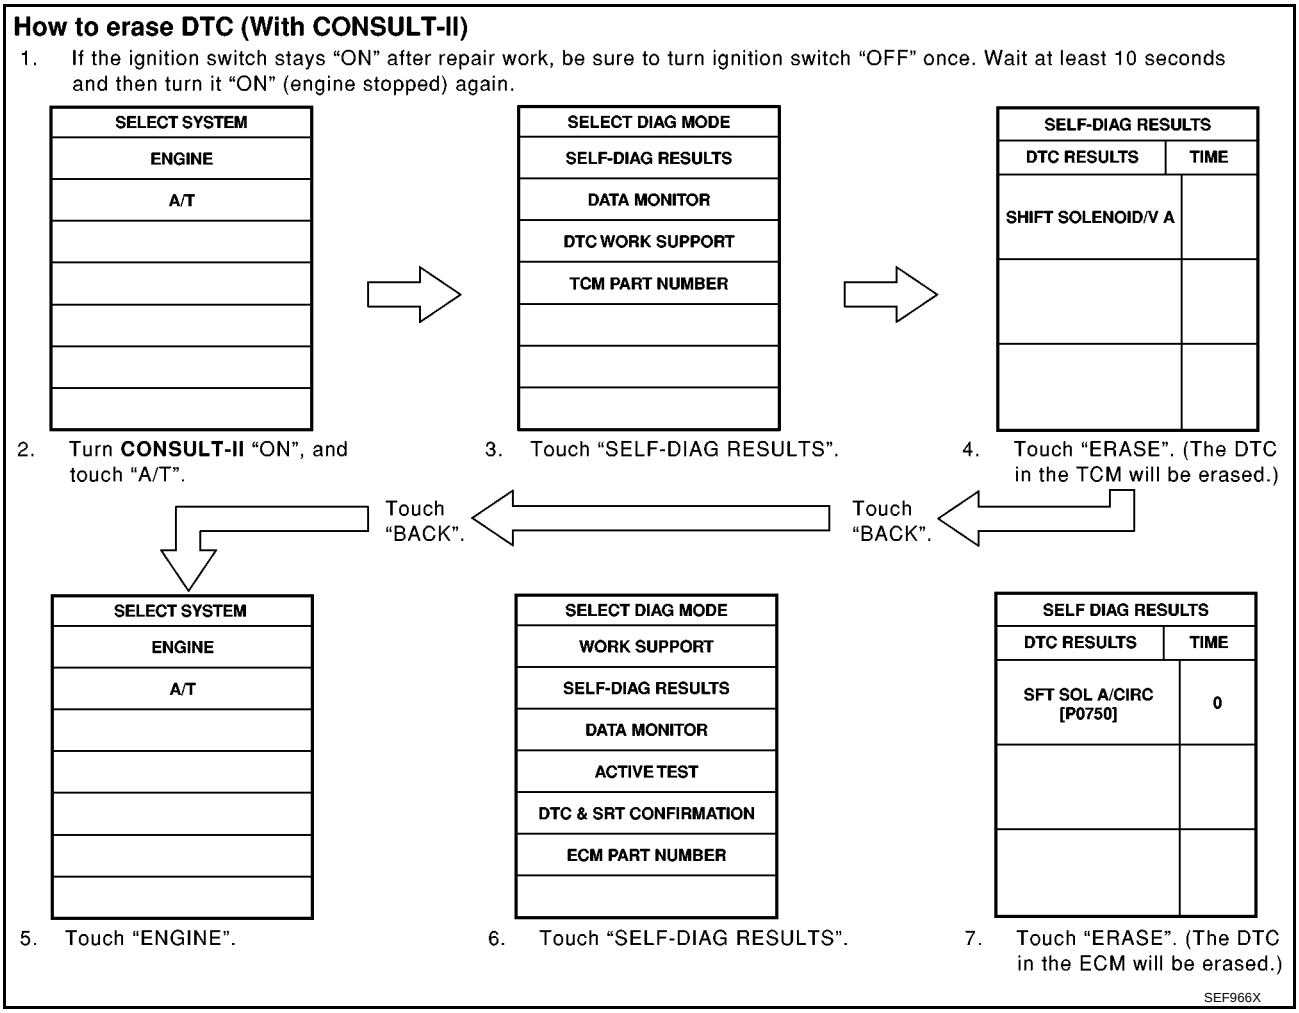

With GST

The emission related diagnostic information in the ECM can be erased by selecting Mode 4 with GST.

NOTE:
If the DTC is not for A/T related items (see EC-11), skip step 2.

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.

2. Perform SELF-DIAGNOSTIC PROCEDURE (Without CONSULT-II) in A/T section titled TROUBLE DIAGNOSIS, Self-diagnosis. (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Select Mode 4 with GST (Generic Scan Tool).

No Tools

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once.
2. Wait at least 10 seconds and then turn it ON (engine stopped) again.
3. Change the diagnostic test mode from Mode II to Mode I by depressing the accelerator pedal. Refer to EC-62, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .

- **If the battery is disconnected, the emission-related diagnostic information will be lost within 24 hours.**
- **The following data are cleared when the ECM memory is erased.**

– Diagnostic trouble codes
– 1st trip diagnostic trouble codes
– Freeze frame data
– 1st trip freeze frame data
– System readiness test (SRT) codes
– Test values
– Others

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

NATS (Nissan Anti-theft System)

EBS00O3D

- **If the security indicator lights up with the ignition switch in the ON position or "NATS MALFUNCTION" is displayed on "SELF-DIAG RESULTS" screen, perform self-diagnostic results mode with CONSULT-II using NATS program card. Refer to BL-223, "NATS(Nissan Anti-Theft System)" .**
- **Confirm no self-diagnostic results of NATS is displayed before touching "ERASE" in "SELF-DIAG RESULTS" mode with CONSULT-II.**
- **When replacing ECM, initialization of NATS system and registration of all NATS ignition key IDs must be carried out with CONSULT-II using NATS program card.**
  Therefore, be sure to receive all keys from vehicle owner.
  Regarding the procedures of NATS initialization and NATS ignition key ID registration, refer to CONSULT-II operation manual, NATS.

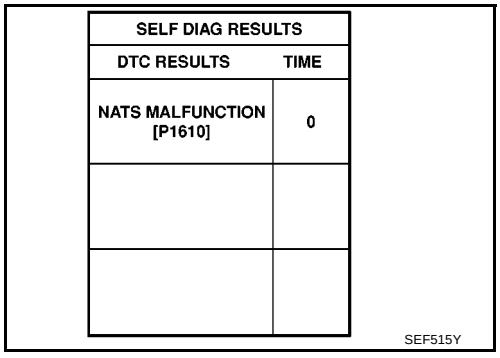

Malfunction Indicator (MI)

EBS00O3E

DESCRIPTION

The MI is located on the instrument panel.

1. The MI will light up when the ignition switch is turned ON without the engine running. This is a bulb check.

- If the MI does not light up, refer to DI-65, "WARNING LAMPS" or see EC-462 .

2. When the engine is started, the MI should go off.
   If the MI remains on, the on board diagnostic system has detected an engine system malfunction.

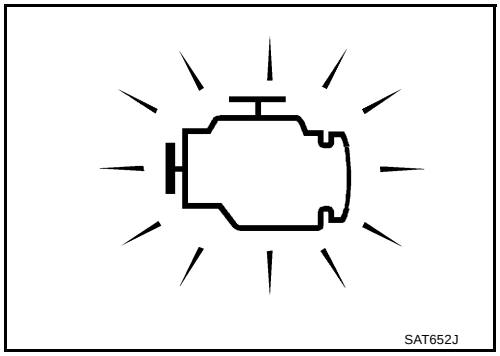

ON BOARD DIAGNOSTIC SYSTEM FUNCTION

The on board diagnostic system has the following four functions.

Diagnostic Test Mode	KEY and ENG. Status	Function	Explanation of Function
Mode I	Ignition switch in ON position  Engine stopped 	BULB CHECK	This function checks the MI bulb for damage (blown, open circuit, etc.). If the MI does not come on, check MI circuit.
	Engine running 	MALFUNCTION WARNING	This is a usual driving condition. When a malfunction is detected twice in two consecutive driving cycles (two trip detection logic), the MI will light up to inform the driver that a malfunction has been detected. The following malfunctions will light up or blink the MI in the 1st trip. ● Misfire (Possible three way catalyst damage) ● One trip detection diagnoses
Mode II	Ignition switch in ON position  Engine stopped 	SELF-DIAGNOSTIC RESULTS	This function allows DTCs and 1st trip DTCs to be read.
	Engine running 	HEATED OXYGEN SENSOR 1 MONITOR	This function allows the fuel mixture condition (lean or rich), monitored by heated oxygen sensor 1, to be read.

When there is an open circuit on MI circuit, the ECM can not warn the driver by lighting MI up when there is malfunction on engine control system.
Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system has a malfunction and MI circuit is open by means of operating fail-safe function.
The fail-safe function also operate when above diagnoses except MI circuit are detected, and demands the driver to repair the a malfunction.

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,500 rpm due to the fuel cut

MI Flashing without DTC

If the ECM is in Diagnostic Test Mode II, MI may flash when engine is running. In this case, check ECM diagnostic test mode. EC-62, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .
How to switch the diagnostic test (function) modes, and details of the above functions are described later, EC-62, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .
The following emission-related diagnostic information is cleared when the ECM memory is erased.

- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values
- Others

HOW TO SWITCH DIAGNOSTIC TEST MODE

NOTE:

- **It is better to count the time accurately with a clock.**
- **It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.**
- **Always ECM returns to Diagnostic Test Mode I after ignition switch is turned OFF.**

How to Set Diagnostic Test Mode II (Self-diagnostic Results)

1. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
2. Repeat the following procedure quickly five times within 5 seconds.

a. Fully depress the accelerator pedal.

b. Fully release the accelerator pedal.

3. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 10 seconds until the MI starts blinking.
4. Fully release the accelerator pedal.
   ECM has entered to Diagnostic Test Mode II (Self-diagnostic results).

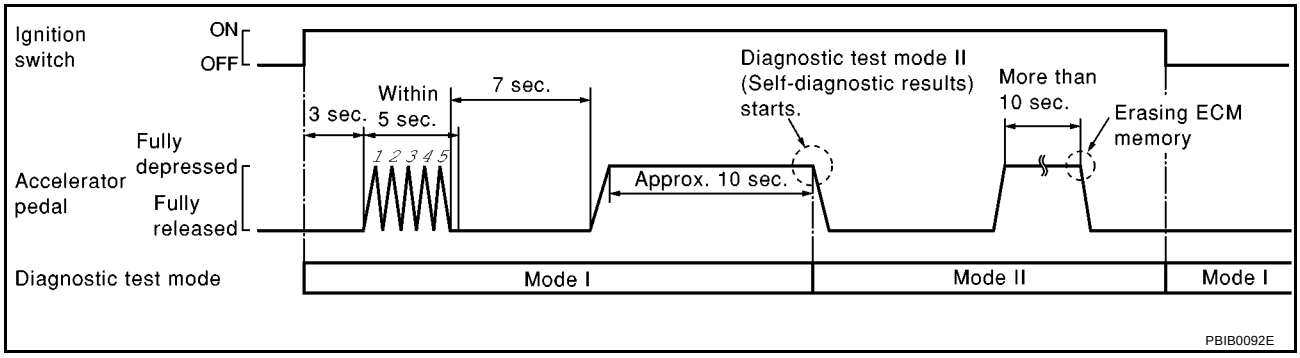

How to Set Diagnostic Test Mode II (Heated Oxygen Sensor 1 Monitor)

1. Set the ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to EC-62, "How to Set Diagnostic Test Mode II (Self-diagnostic Results)" .
2. Start Engine.
   ECM has entered to Diagnostic Test Mode II (Heated oxygen sensor 1 monitor).

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

1. Set ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to EC-62, "How to Erase Diagnostic Test Mode II (Self-diagnostic Results)" .
2. Fully depress the accelerator pedal and keep it for more than 10 seconds.
   The emission-related diagnostic information has been erased from the backup memory in the ECM.
3. Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.

DIAGNOSTIC TEST MODE I — BULB CHECK

In this mode, the MI on the instrument panel should stay ON. If it remains OFF, check the bulb. Refer to DI-65, "WARNING LAMPS" or see EC-462 .

DIAGNOSTIC TEST MODE I — MALFUNCTION WARNING

MI	Condition
ON	When the malfunction is detected.
OFF	No malfunction.

- These DTC numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS)

DIAGNOSTIC TEST MODE II — SELF-DIAGNOSTIC RESULTS

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MI as shown below. The DTC and 1st trip DTC are displayed at the same time. If the MI does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MI illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified

codes can be identified by using the CONSULT-II or GST. A DTC will be used as an example for how to read a code.

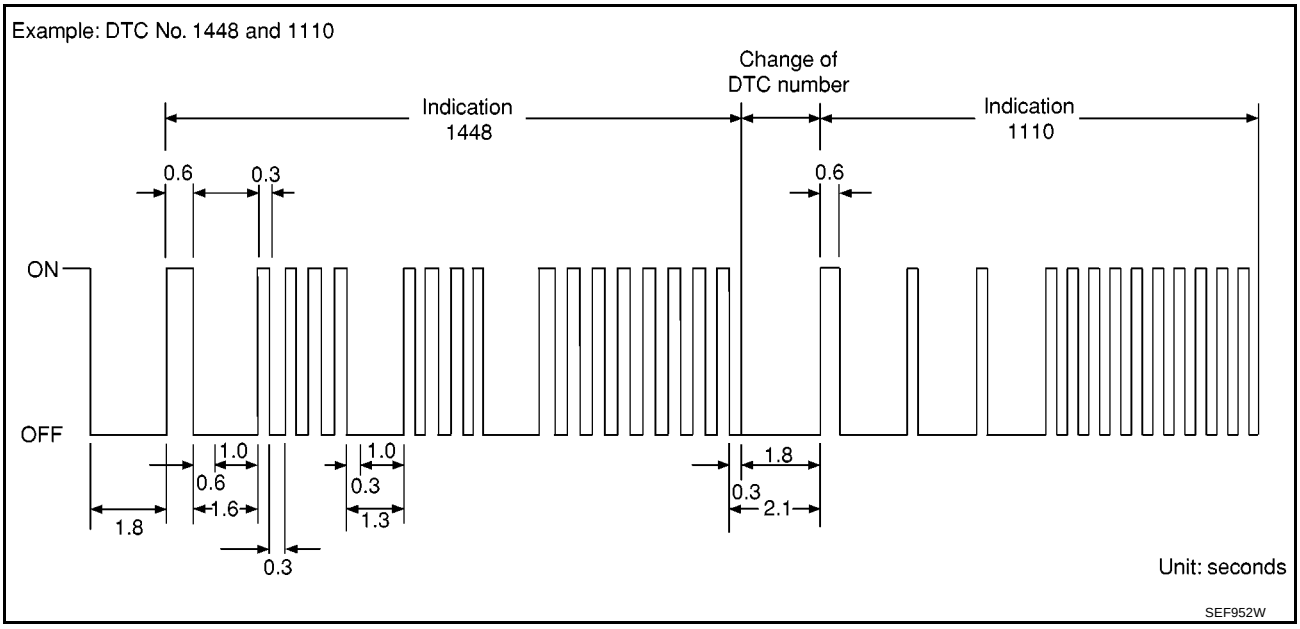

A particular trouble code can be identified by the number of four-digit numeral flashes. The “zero” is indicated by the number of ten flashes. The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-second) - OFF (0.6-second) cycle.
The 100th-digit numeral and lower digit numerals consist of a 0.3-second ON and 0.3-second OFF cycle.
A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.
A change from one trouble code to another occurs at an interval of 1.8-second OFF.
In this way, all the detected malfunctions are classified by their DTC numbers. The DTC 0000 refers to no malfunction. (See EC-11, "INDEX FOR DTC")

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

The DTC can be erased from the back up memory in the ECM by depressing accelerator pedal. Refer to EC-62, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .

- **If the battery is disconnected, the DTC will be lost from the backup memory within 24 hours.**
- **Be careful not to erase the stored memory before starting trouble diagnoses.**

DIAGNOSTIC TEST MODE II — HEATED OXYGEN SENSOR 1 MONITOR

In this mode, the MI displays the condition of the fuel mixture (lean or rich) which is monitored by the heated oxygen sensor 1.

MI	Fuel mixture condition in the exhaust gas	Air-fuel ratio feedback control condition
ON	Lean	Closed loop system
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop system

*: Maintains conditions just before switching to open loop.

To check the heated oxygen sensor 1 function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.
Next run engine at about 2,000 rpm for about 2 minutes under no load conditions. Then make sure that the MI comes ON more than 5 times within 10 seconds with engine running at 2,000 rpm under no load.

OBD System Operation Chart

EBS00O3F

RELATIONSHIP BETWEEN MI, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MI will come on. For details, refer to EC-47, "Two Trip Detection Logic" .

- The MI will go off after the vehicle is driven 3 times with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The “TIME” in “SELF-DIAGNOSTIC RESULTS” mode of CONSULT-II will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in OK for the 2nd trip.

SUMMARY CHART

Items	Fuel Injection System	Misfire	Other
MI (goes off)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1 , *2	*1 , *2	1 (pattern B)

For details about patterns “B” and “C” under “Fuel Injection System” and “Misfire”, see EC-66 .
For details about patterns “A” and “B” under “Other”, see EC-68 .
*1: Clear timing is at the moment OK is detected.
*2: Clear timing is when the same malfunction is detected in the 2nd trip.

RELATIONSHIP BETWEEN MI, DTC, 1ST TRIP DTC AND DRIVING PATTERNS FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

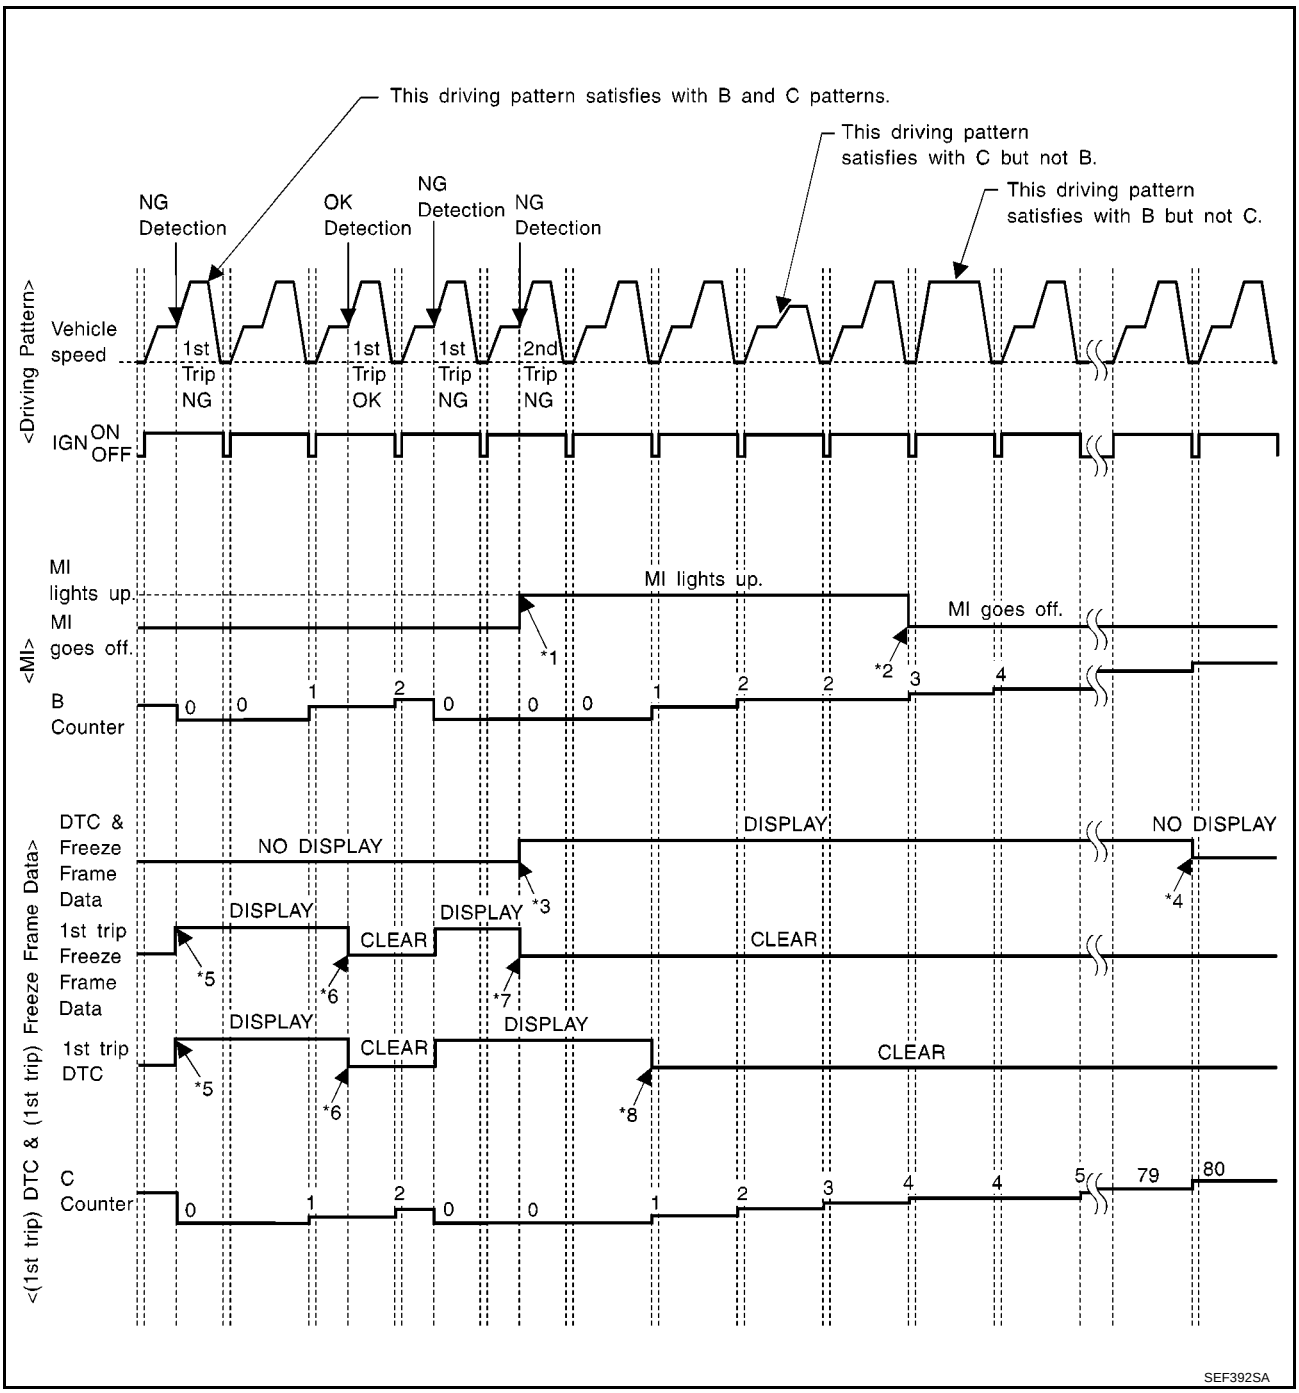

*1: When the same malfunction is detected in two consecutive trips, MI will light up.

*2: MI will go off after vehicle is driven 3 times (pattern B) without any malfunctions.

*3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

*5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.

*6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.

*7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

*8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.

EXPLANATION FOR DRIVING PATTERNS FOR “MISFIRE <EXHAUST QUALITY DETERIORATION>”, “FUEL INJECTION SYSTEM”

<Driving Pattern B>

Driving pattern B means the vehicle operation as follows:
All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunction.
- The MI will go off when the B counter reaches 3. (*2 in OBD SYSTEM OPERATION CHART)

<Driving Pattern C>

Driving pattern C means the vehicle operation as follows:

1. The following conditions should be satisfied at the same time:
   Engine speed: (Engine speed in the freeze frame data) ±375 rpm
   Calculated load value: (Calculated load value in the freeze frame data) x (1±0.1) [%]
   Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).

Example:
If the stored freeze frame data is as follows:
Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)
To be satisfied with driving pattern C, the vehicle should run under the following conditions:
Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70°C (158°F)

- The C counter will be cleared when the malfunction is detected regardless of vehicle conditions above.
- The C counter will be counted up when vehicle conditions above is satisfied without the same malfunction.
- The DTC will not be displayed after C counter reaches 80.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

RELATIONSHIP BETWEEN MI, DTC, 1ST TRIP DTC AND DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

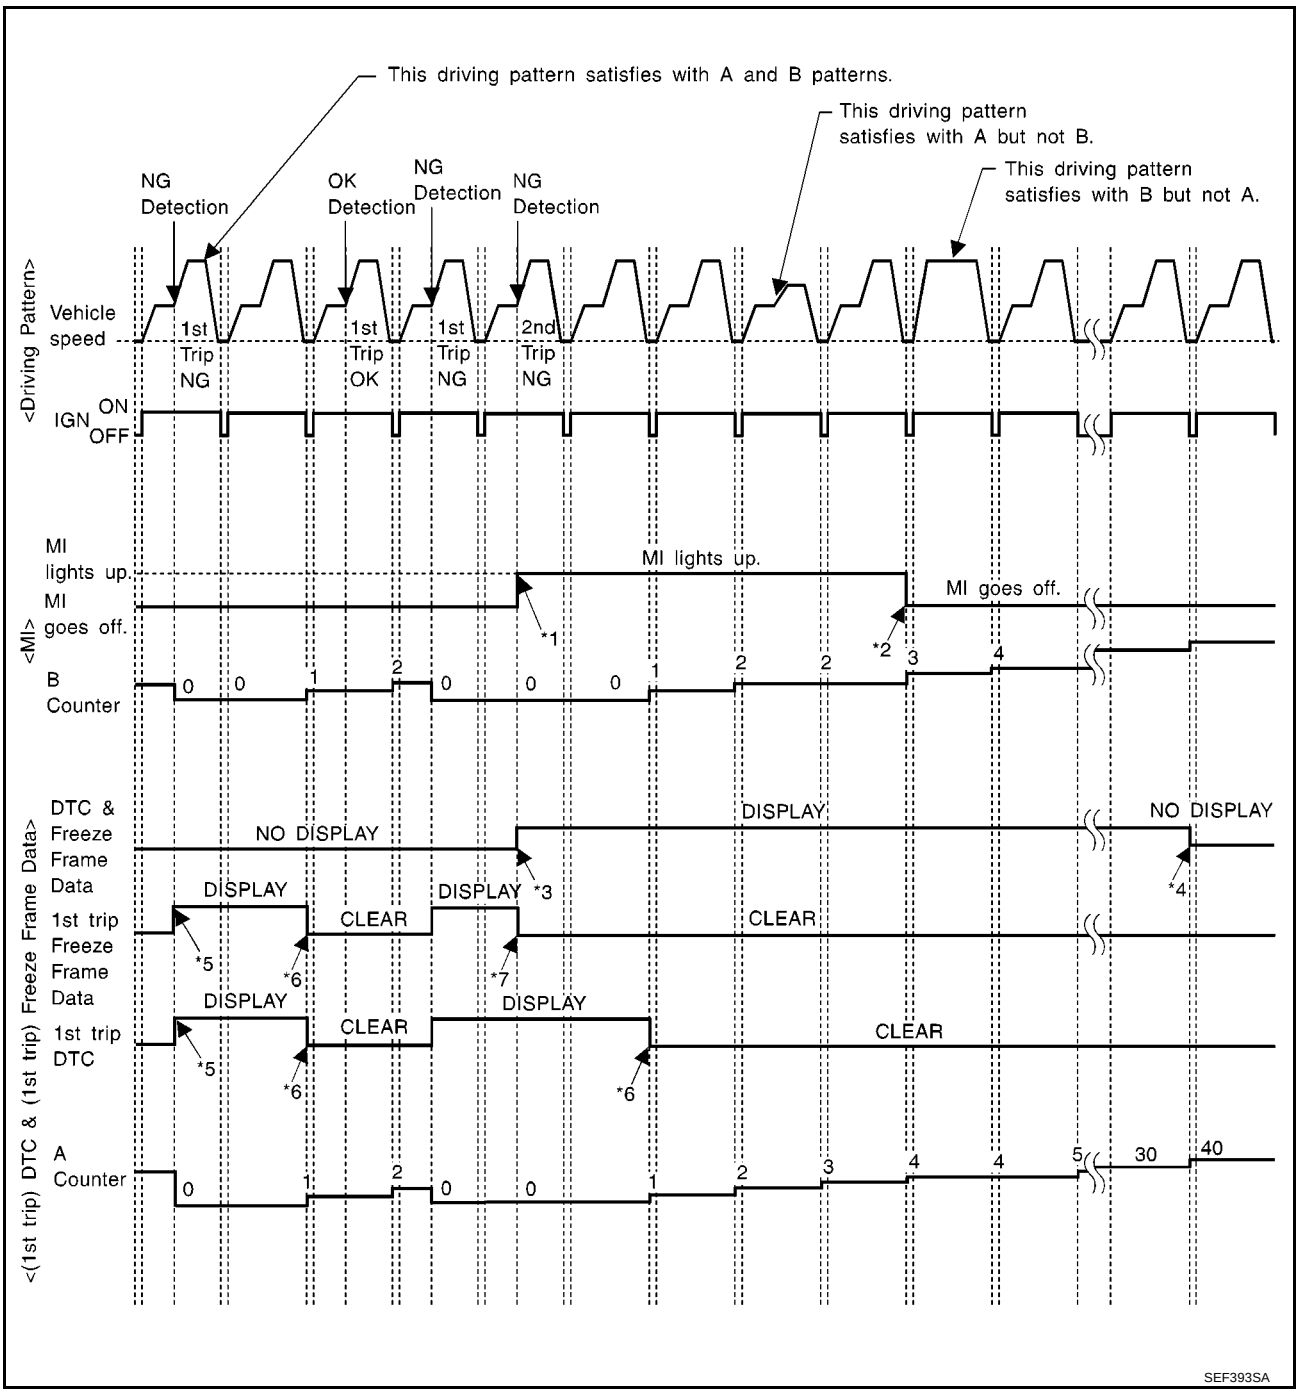

*1: When the same malfunction is detected in two consecutive trips, MI will light up.

*2: MI will go off after vehicle is driven 3 times (pattern B) without any malfunctions.

*3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

*5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.

*6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.

*7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

<Driving Pattern A>

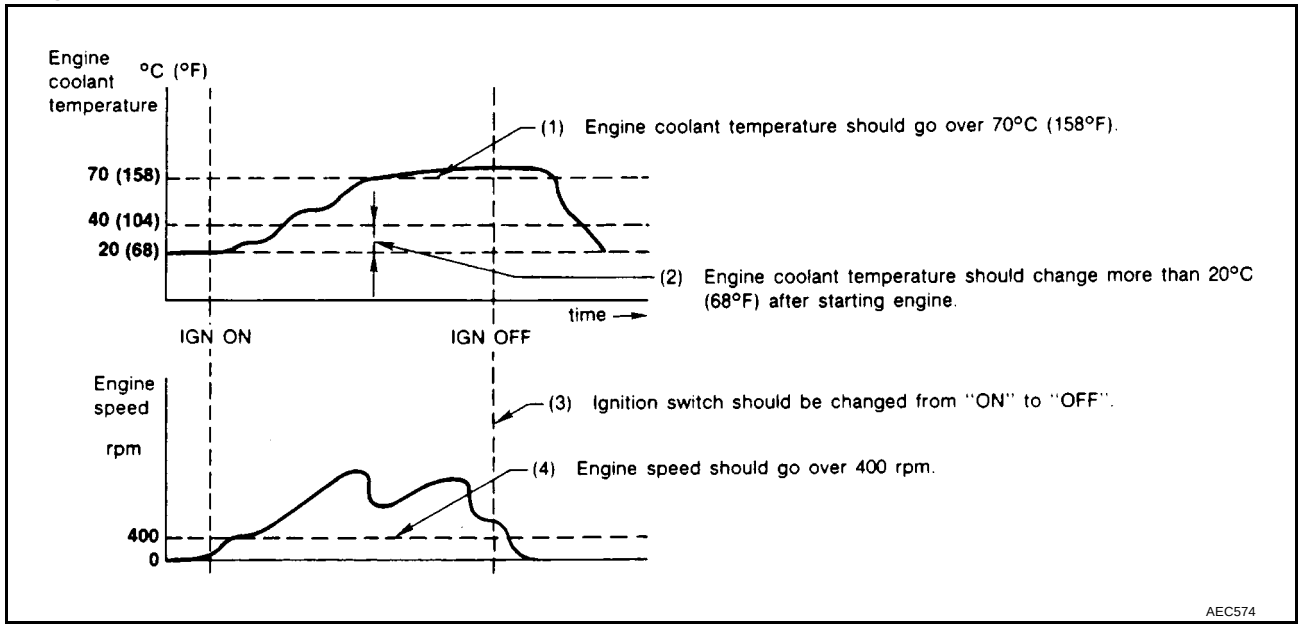

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.

<Driving Pattern B>

Driving pattern B means the vehicle operation as follows:
All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MI will go off when the B counter reaches 3 (*2 in OBD SYSTEM OPERATION CHART).

TROUBLE DIAGNOSIS

PFP:00004

Trouble Diagnosis Introduction

EBS00O3G

INTRODUCTION

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no malfunctions such as vacuum leaks, fouled spark plugs, or other malfunctions with the engine. It is much more difficult to diagnose an incident that occurs intermittently rather than continuously. Most intermittent incidents are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the incidents. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the Work Flow on EC-70 .

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such incidents, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A Diagnostic Worksheet like the example on EC-73 should be used.

Start your diagnosis by looking for conventional malfunctions first. This will help troubleshoot driveability malfunctions on an electronically controlled engine vehicle.

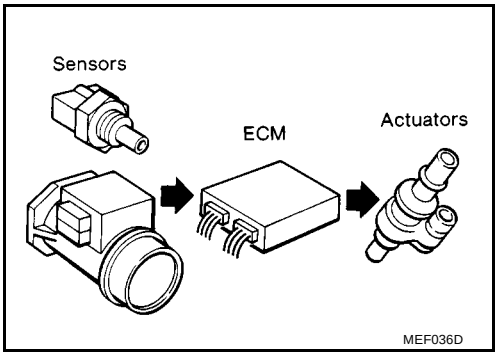

MEF036D

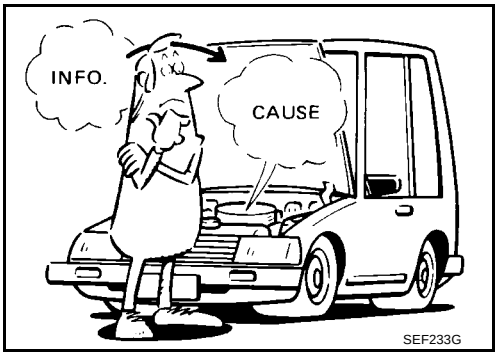

SEF233G

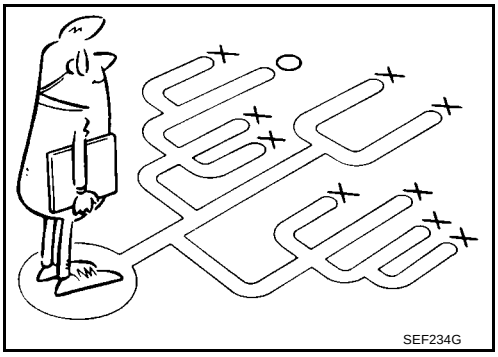
SEF234G

WORK FLOW
Flow Chart

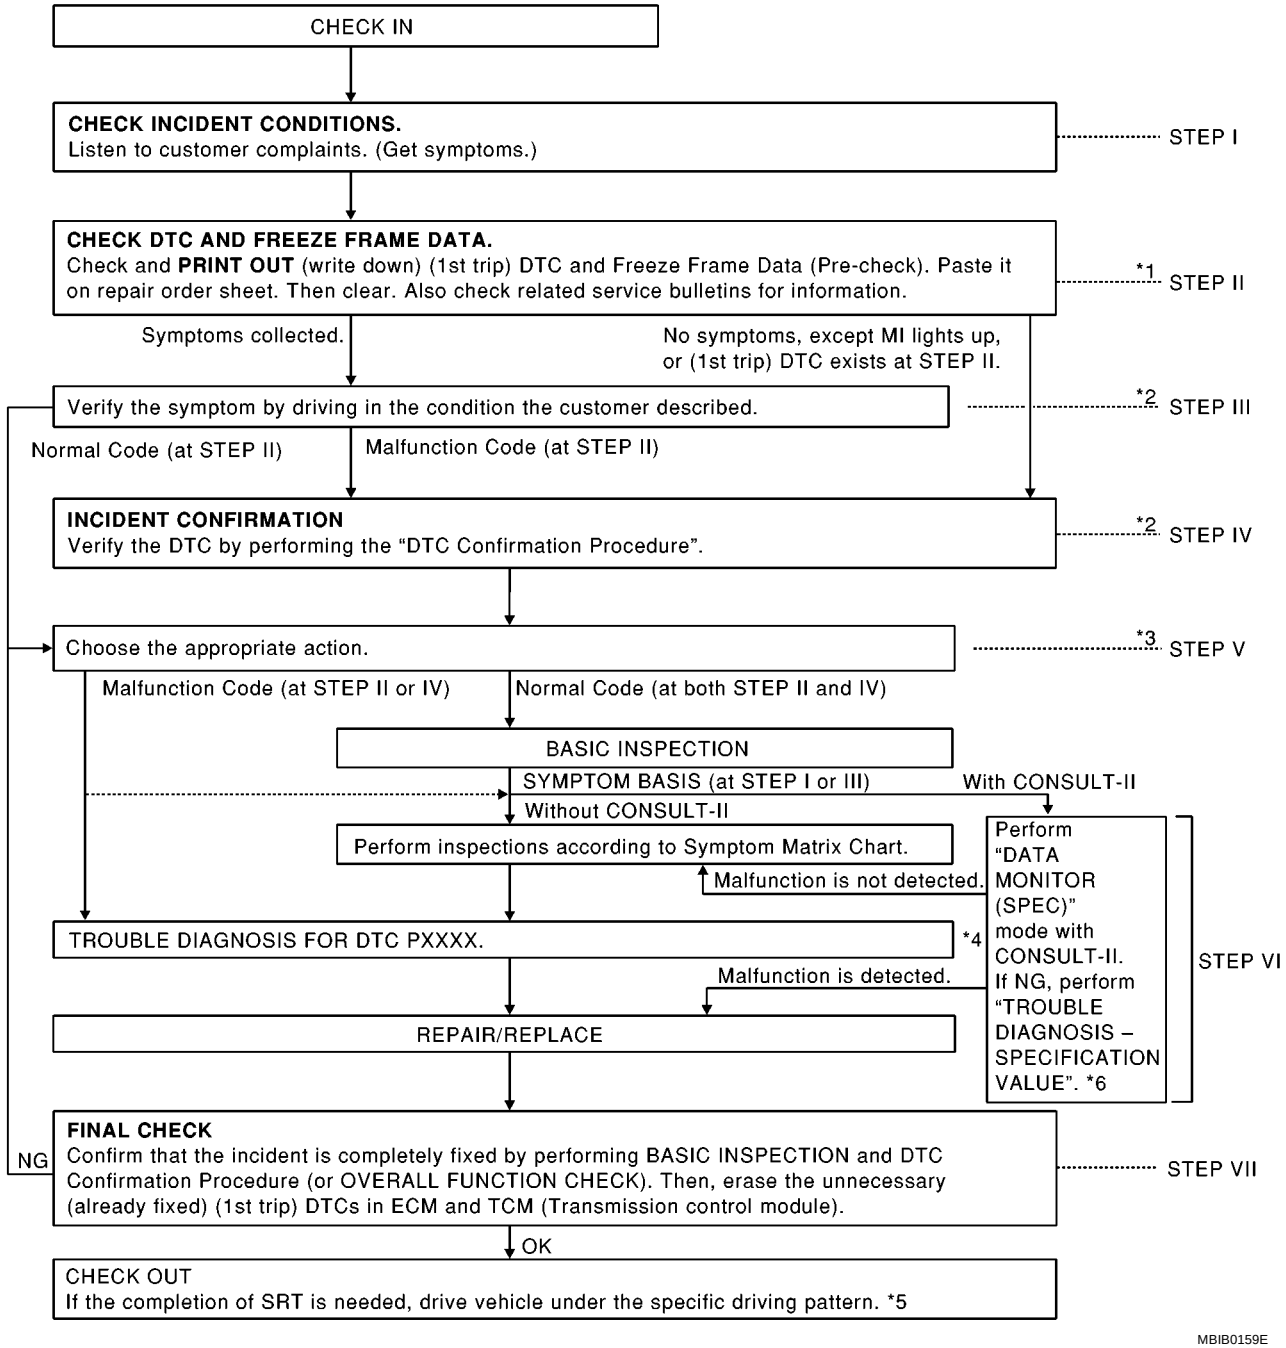

MBIB0159E

*1 If time data of "SELF-DIAG RESULTS" is other than [0] or [1t], perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

*2 If the incident cannot be verified, perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

*3 If the on board diagnostic system cannot be performed, check main power supply and ground circuit. Refer to EC-125, "POWER SUPPLY CIRCUIT FOR ECM" .

*4 If malfunctioning part cannot be detected, perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

*5 EC-57

*6 EC-119

Description for Work Flow

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the DIAGNOSTIC WORK SHEET, EC-72 .
STEP II	Before confirming the concern, check and write down (print out using CONSULT-II or GST) the (1st trip) DTC and the (1st trip) freeze frame data, then erase the DTC and the data. (Refer to EC-59 .) The (1st trip) DTC and the (1st trip) freeze frame data can be used when duplicating the incident at STEP III & IV. If the incident cannot be verified, perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" . Study the relationship between the cause, specified by (1st trip) DTC, and the symptom described by the customer. (The Symptom Matrix Chart will be useful. See EC-82 .) Also check related service bulletins for information.
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The DIAGNOSTIC WORK SHEET and the freeze frame data are useful to verify the incident. Connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" . If the malfunction code is detected, skip STEP IV and perform STEP V.
STEP IV	Try to detect the (1st trip) DTC by driving in (or performing) the DTC Confirmation Procedure. Check and read the (1st trip) DTC and (1st trip) freeze frame data by using CONSULT-II or GST. During the (1st trip) DTC verification, be sure to connect CONSULT-II to the vehicle in “DATA MONITOR (AUTO TRIG)” mode and check real time diagnosis results. If the incident cannot be verified, perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" . In case the DTC Confirmation Procedure is not available, perform the Overall Function Check instead. The (1st trip) DTC cannot be displayed by this check, however, this simplified check is an effective alternative. The NG result of the Overall Function Check is the same as the (1st trip) DTC detection.
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed to the BASIC INSPECTION. (Refer to EC-77 .) If COSULT-II is available, perform “DATA MONITOR (SPEC)” mode with CONSULT-II and proceed to the TOROUBLE DIAGNOSIS – SPECIFICATION VALUE. (Refer to EC-119 .) (If malfunction is detected, proceed to PERAIR/REPLACE.) Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-82 .)
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) Harness Layouts. Gently shake the related connectors, components or wiring harness with CONSULT-II set in “DATA MONITOR (AUTO TRIG)” mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT-II. Refer to EC-94 , EC-113 . The Diagnostic Procedure in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to Circuit Inspection in GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" . Repair or replace the malfunction parts. If malfunctioning part cannot be detected, perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the DTC Confirmation Procedure and confirm the normal code [DTC No. P0000] is detected. If the incident is still detected in the final check, perform STEP VI by using a method different from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) (1st trip) DTC in ECM and TCM (Transmission control module). (Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" and AT-37, "HOW TO ERASE DTC" .)

DIAGNOSTIC WORKSHEET

Description

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.
In general, each customer feels differently about a incident. It is important to fully understand the symptoms or conditions for a customer complaint.
Utilize a diagnostic worksheet like the one on the next page in order to organize all the information for troubleshooting.
Some conditions may cause the MI to come on steady or blink and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere.

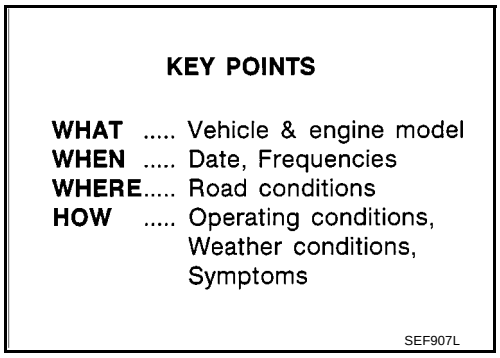

Worksheet Sample

Customer name MR/MS		Model & Year	VIN
Engine #		Trans.	Mileage
Incident Date		Manuf. Date	In Service Date
Fuel and fuel filler cap		☐ Vehicle ran out of fuel causing misfire ☐ Fuel filler cap was left off or incorrectly screwed on.	
Symptoms	☐ Startability	☐ Impossible to start ☐ No combustion ☐ Partial combustion ☐ Partial combustion affected by throttle position ☐ Partial combustion NOT affected by throttle position ☐ Possible but hard to start ☐ Others [ ]	
	☐ Idling	☐ No fast idle ☐ Unstable ☐ High idle ☐ Low idle ☐ Others [ ]	
	☐ Driveability	☐ Stumble ☐ Surge ☐ Knock ☐ Lack of power ☐ Intake backfire ☐ Exhaust backfire ☐ Others [ ]	
	☐ Engine stall	☐ At the time of start ☐ While idling ☐ While accelerating ☐ While decelerating ☐ Just after stopping ☐ While loading	
Incident occurrence		☐ Just after delivery ☐ Recently ☐ In the morning ☐ At night ☐ In the daytime	
Frequency		☐ All the time ☐ Under certain conditions ☐ Sometimes	
Weather conditions		☐ Not affected	
	Weather	☐ Fine ☐ Raining ☐ Snowing ☐ Others [ ]	
	Temperature	☐ Hot ☐ Warm ☐ Cool ☐ Cold ☐ Humid °F	
Engine conditions		☐ Cold ☐ During warm-up ☐ After warm-up Engine speed 0 2,000 4,000 6,000 8,000 rpm	
Road conditions		☐ In town ☐ In suburbs ☐ Highway ☐ Off road (up/down)	
Driving conditions		☐ Not affected ☐ At starting ☐ While idling ☐ At racing ☐ While accelerating ☐ While cruising ☐ While decelerating ☐ While turning (RH/LH) Vehicle speed 0 10 20 30 40 50 60 MPH	
Malfunction indicator lamp		☐ Turned on ☐ Not turned on	

MTBL0017

DTC Inspection Priority Chart

EBS00O3H

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC U1000 and/or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000 and U1001. Refer to EC-130, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

Priority	Detected items (DTC)
1	● U1000 U1001 CAN communication line ● P0107 P0108 Manifold absolute pressure sensor ● P0112 P0113 Intake air temperature sensor ● P0117 P0118 Engine coolant temperature sensor ● P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor ● P0221 P0222 P0223 P1223 P1224 P1225 P1226 Throttle position sensor ● P0226 P0227 P0228 P1227 P1228 Accelerator pedal position sensor ● P0327 P0328 Knock sensor ● P0335 Crankshaft position sensor (POS) ● P0340 Camshaft position sensor (PHASE) ● P0500 Vehicle speed sensor ● P0605 ECM ● P0705 Park/Neutral position (PNP) switch ● P1171 Intake error ● P1229 Sensor power supply ● P1610-P1615 NATS ● P1706 Park/Neutral position (PNP) switch ● P2122 P2123 P2127 P2128 P2138 Accelerator pedal position sensor
2	● P0031 P0032 Heated oxygen sensor 1 heater ● P0037 P0038 Heated oxygen sensor 2 heater ● P0132 P0133 P0134 P1143 P1144 Heated oxygen sensor 1 ● P0138 P0139 P1146 P1147 Heated oxygen sensor 2 ● P0444 EVAP canister purge volume control solenoid valve ● P0710 P0720 P0725 P0731 P0732 P0733 P0734 P0740 P0745 P0750 P0755 P1705 P1760 A/T related sensors, solenoid valves and switches ● P1065 ECM power supply ● P1111 Intake valve timing control solenoid valve ● P1122 Electric throttle control function ● P1124 P1126 Throttle control motor relay ● P1128 Throttle control mother ● P1805 Brake switch
3	● P0011 Intake valve timing control ● P0171 P0172 Fuel injection system function ● P0300 - P0304 Misfire ● P0420 Three way catalyst function ● P1121 Electric throttle control actuator ● P1211 ESP control unit ● P1212 ESP communication line ● P1217 Engine over temperature (OVERHEAT)

Fail-safe Chart

EBS00O3I

- When the DTC listed bellow is detected, the ECM enters fail-safe mode and the MI lights up.

DTC No.	Detected items	Engine operating condition in fail-safe mode
P0107 P0108	Manifold absolute pressure sensor circuit	Engine speed will not rise more than 2,500 rpm due to the fuel cut.
P0112 P0113	Intake air temperature sensor circuit	Intake air temperature is deter mined as 30° (86°F).
P0117 P0118	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch ON or START. CONSULT-II displays the engine coolant temperature decided by ECM.
		Condition: Just as ignition switch is turned ON or Start — Engine coolant temperature decided (CONSULT-II display): 40°C (104°F)
		Condition: More than approx. 4 minutes after ignition ON or Start — Engine coolant temperature decided (CONSULT-II display): 80°C (176°F)
		Condition: Except as shown above — Engine coolant temperature decided (CONSULT-II display): 40 - 80°C (104 - 176°F) (Depends on the time)
		When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running.
P0122 P0123 P0222 P0223 P2135	Throttle position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.
P0221 P0222 P0223 P1223 P1224	Throttle position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.
P0226 P0227 P0228 P1227 P1228	Accelerator pedal position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.
P1121	Electric throttle control actuator	(When electric throttle control actuator does not function properly due to the return spring malfunction:) ECM controls the electric throttle control actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm.
		(When throttle valve opening angle in fail-safe mode is not in specified range:) ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.
		(When ECM detects the throttle valve is stuck open:) While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P position, and engine speed will not exceed 1,000 rpm or more.
P1122	Electric throttle control function	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P1124 P1126	Throttle control motor relay	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P1128	Throttle control motor	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P1171	Intake air	When accelerator pedal is depressed, engine speed will not rise more than 2,500 rpm due to fuel cut.

DTC No.	Detected items	Engine operating condition in fail-safe mode
P1229	Sensor power supply	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P2122 P2123 P2127 P2128 P2138	Accelerator pedal position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

- When there is an open circuit on MI circuit, the ECM can not warn the driver by lighting MI up when there is a malfunction on engine control system.
  Therefore, when electrical controlled throttle and part of ECM related diagnoses is continuously detected as NG for 5 trips, ECM warns the driver that engine control system has a malfunction and MI circuit is open by means of operating fail-safe function.
  The fail-safe function also operate when above diagnoses except MI circuit are detected, and demands the driver to repair the malfunction.

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,500 rpm due to the fuel cut

Basic Inspection

EBS00O3J

1. INSPECTION START

1. Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.
2. Open engine hood and check the following:
   - Harness connectors for improper connections
   - Wiring harness for improper connections, pinches and cut
   - Vacuum hoses for splits, kinks and improper connections
   - Hoses and ducts for leaks
   - Air cleaner clogging
   - Gasket

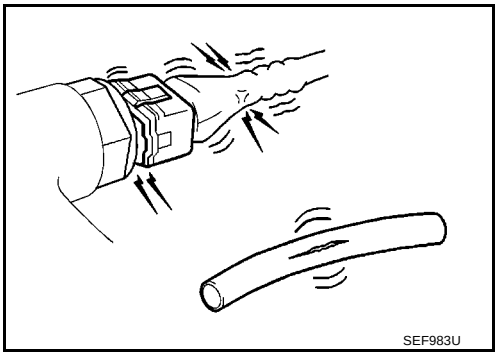
SEF983U

3. Confirm that electrical or mechanical loads are not applied.
   - Headlamp switch is OFF.
   - Air conditioner switch is OFF.
   - Rear window defogger switch is OFF.
   - Steering wheel is in the straight-ahead position, etc.
4. Start engine and warm it up until engine coolant temperature indicator points the middle of gauge.
   Ensure engine stays below 1,000 rpm.

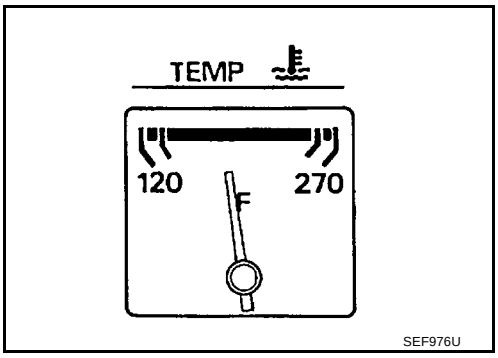

SEF976U

5. Run engine at about 2,000 rpm for about 2 minutes under no load.
6. Make sure that no DTC is displayed with CONSULT-II or GST.

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

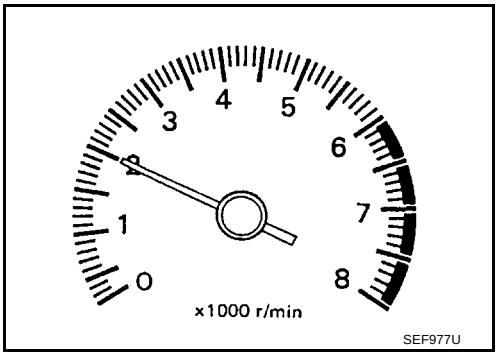

SEF977U

2. REPAIR OR REPLACE

Repair or replace components as necessary according to corresponding Diagnostic Procedure.

>> GO TO 3

3. CHECK TARGET IDLE SPEED

With CONSULT-II

1. Run engine at about 2,000 rpm for about 2 minutes under no load.
2. Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.

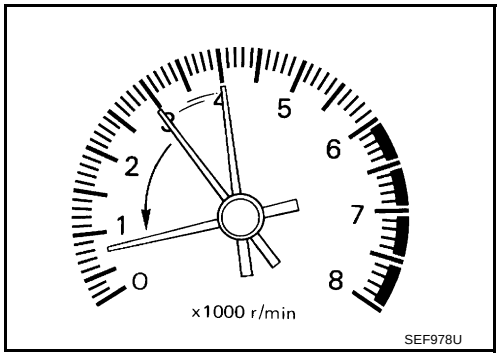

3. Read idle speed in “DATA MONITOR” mode with CONSULT-II.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

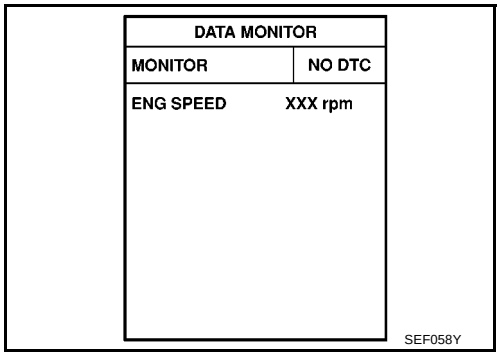

Without CONSULT-II

1. Run engine at about 2,000 rpm for about 2 minutes under no load.
2. Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.
3. Check idle speed.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

OK or NG

OK >> GO TO 10.
NG >> GO TO 4.

4. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

1. Stop engine.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .

>> GO TO 5.

5. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-42, "Throttle Valve Closed Position Learning" .

>> GO TO 6.

6. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-42, "Idle Air Volume Learning" .
Is Idle Air Volume Learning carried out successfully?

Yes or No

Yes >> GO TO 7.
No >> 1. Follow the instruction of Idle Air Volume Learning.
2. GO TO 4.

7. CHECK TARGET IDLE SPEED AGAIN

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Read idle speed in “DATA MONITOR” mode with CONSULT-II.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Check idle speed.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

OK or NG

OK >> GO TO 10.
NG >> GO TO 8.

8. DETECT MALFUNCTIONING PART

Check the following.

- Check camshaft position sensor (PHASE) and circuit. Refer to EC-267 .
- Check crankshaft position sensor (POS) and circuit. Refer to EC-261 .

OK or NG

OK >> GO TO 9.
NG >> 1. Repair or replace.
2. GO TO 4.

9. CHECK ECM FUNCTION

1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to EC-60 .

>> GO TO 4.

10. CHECK IGNITION TIMING

1. Run engine at idle.
2. Check ignition timing with a timing light.

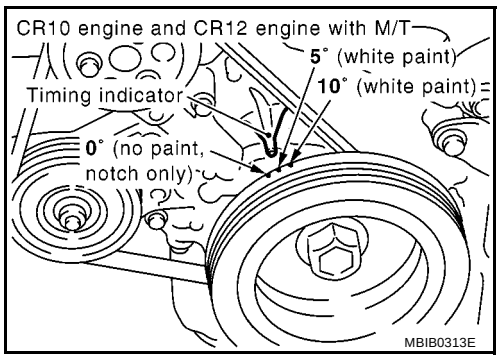

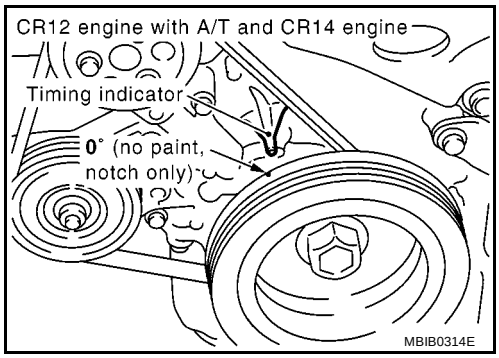

M/T: 5 ± 2° BTDC
A/T: 5 ± 2° BTDC (in P or N position)

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 11.

11. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

1. Stop engine.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .

>> GO TO 12.

12. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-42, "Throttle Valve Closed Position Learning" .

>> GO TO 13.

13. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-42, "Idle Air Volume Learning" .
Is Idle Air Volume Learning carried out successfully?

Yes or No

Yes >> GO TO 14.
No >> 1. Follow the instruction of Idle Air Volume Learning.
2. GO TO 4.

14. CHECK TARGET IDLE SPEED AGAIN

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Read idle speed in “DATA MONITOR” mode with CONSULT-II.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Check idle speed.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

OK or NG

OK >> GO TO 15.
NG >> GO TO 17.

15. CHECK IGNITION TIMING AGAIN

1. Run engine at idle.
2. Check ignition timing with a timing light.

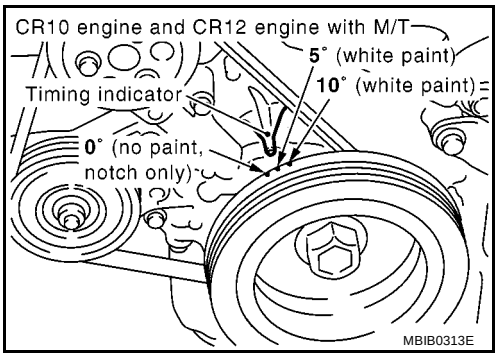

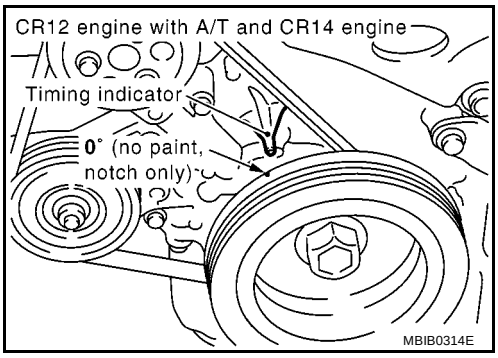

M/T: 5 ± 2° BTDC
A/T: 5 ± 2° BTDC (in P or N position)

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 16.

16. CHECK TIMING CHAIN INSTALLATION

Check timing chain installation. Refer to EM-48, "TIMING CHAIN" .

OK or NG

OK >> GO TO 17.
NG >> 1. Repair the timing chain installation.
2. GO TO 4.

17. DETECT MALFUNCTIONING PART

Check the following.

- Check camshaft position sensor (PHASE) and circuit. Refer to EC-267 .
- Check crankshaft position sensor (POS) and circuit. Refer to EC-261 .

OK or NG

OK >> GO TO 18.
NG >> 1. Repair or replace.
2. GO TO 4.

18. CHECK ECM FUNCTION

1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to EC-60 .

>> GO TO 4.

Symptom Matrix Chart

EBS00O3K

SYSTEM — BASIC ENGINE CONTROL SYSTEM

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-450
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-45
	Injector circuit	1	1	2	3	2		2	2			2			EC-444
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-464

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-468
	Incorrect idle speed adjustment	3	3				1	1	1	1		1			EC-77
	Electric throttle control actuator	1	1	2	3	3	2	2	2	2		2		2	EC-297, EC-299, EC-305, EC-310
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-77
	Ignition circuit	1	1	2	2	2		2	2			2			EC-435
Main power supply and ground circuit		2	2	3	3	3		3	3		2	3			EC-125
Manifold absolute pressure sensor circuit		1	1	2	2	2		2	2			2			EC-148
Engine coolant temperature sensor circuit		1	1	2	2	2	3	2	2	3	1	2			EC-158
Throttle position sensor circuit			1	2		2	2	2	2	2		2			EC-163, EC-221, EC-227, EC-366, EC-372, EC-374, EC-385, EC-420
Accelerator pedal position sensor circuit				3	2	1	2			2					EC-233, EC-242, EC-376, EC-402, EC-411, EC-426
Heated oxygen sensor 1 circuit			1	2	3	2		2	2			2			EC-169, EC-175, EC-185, EC-315, EC-321
Knock sensor circuit				2	2							3			EC-257
Crankshaft position sensor (POS) circuit		2	2												EC-261
Camshaft position sensor (PHASE) circuit		2	2												EC-267
Vehicle speed signal circuit			2	3		3						3			EC-284
ECM		2	2	3	3	3	3	3	3	3	3	3			EC-286, EC-289
Intake valve timing control solenoid valve circuit		3	3	2		1	3	2	2	3		3			EC-293

	SYMPTOM													Reference page
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
PNP switch circuit			3		3	3	3	3	3		3			EC-389
Refrigerant pressure sensor circuit		2				3	3	3	3		4			EC-455
Electrical load signal circuit						3	3	3	3					EC-460
Air conditioner circuit	2	2	3	3	3	3	3	3	3		3		2	ATC-17, MTC-17
ABS actuator and electric unit (control unit)			4											BRC-8 or BRC-61

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

SYSTEM — ENGINE MECHANICAL & OTHER

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel tank	5	5												FL-8
	Fuel piping			5	5	5		5	5			5			FL-3, EM-30
	Vapor lock														—
	Valve deposit	5		5	5	5		5	5			5			—
	Poor fuel (Heavy weight gasoline, Low octane)														—

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Air	Air duct		5	5		5		5	5			5			EM-16
	Air cleaner														
	Air leakage from air duct (Manifold absolute pressure sensor —electric throttle control actuator)	5			5		5			5					
	Electric throttle control actuator														
	Air leakage from intake manifold/ Collector/Gasket														EM-20
Cranking	Battery	1	1	1		1		1	1			1		1	SC-5
	Alternator circuit														SC-15
	Starter circuit	3													SC-39
	Signal plate/Flywheel/Drive plate	6													EM-73
	PNP switch	4													AT-114
Engine	Cylinder head	5	5	5	5	5		5	5			5			EM-59
	Cylinder head gasket										4		3		
	Cylinder block	6	6	6	6	6		6	6			6	4		EM-73
	Piston														
	Piston ring														
	Connecting rod														
	Bearing														
	Crankshaft														
Valve mechanism	Timing chain	5	5	5	5	5		5	5			5			EM-48
	Camshaft														EM-36
	Intake valve timing control														EM-48
	Intake valve												3		EM-59
	Exhaust valve														
Exhaust	Exhaust manifold/Tube/Muffler/ Gasket	5	5	5	5	5		5	5			5			EM-22, EX-3
	Three way catalyst														
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	5	5	5	5	5		5	5			5	2		EM-24, LU-6 , LU-7 , LU-3
	Oil level (Low)/Filthy oil														LU-4

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Cooling	Radiator/Hose/Radiator filler cap	5	5	5	5	5		5	5		2	5			CO-11
	Thermostat									5					CO-23
	Water pump														CO-21
	Water gallery														CO-7
	Cooling fan									5					CO-11
	Coolant level (low)/Contaminated coolant														CO-8
NATS (Nissan Anti-theft System)		1	1												EC-60 or BL-223

1 - 6: The numbers refer to the order of inspection.

Engine Control Component Parts Location

EBS00O3L

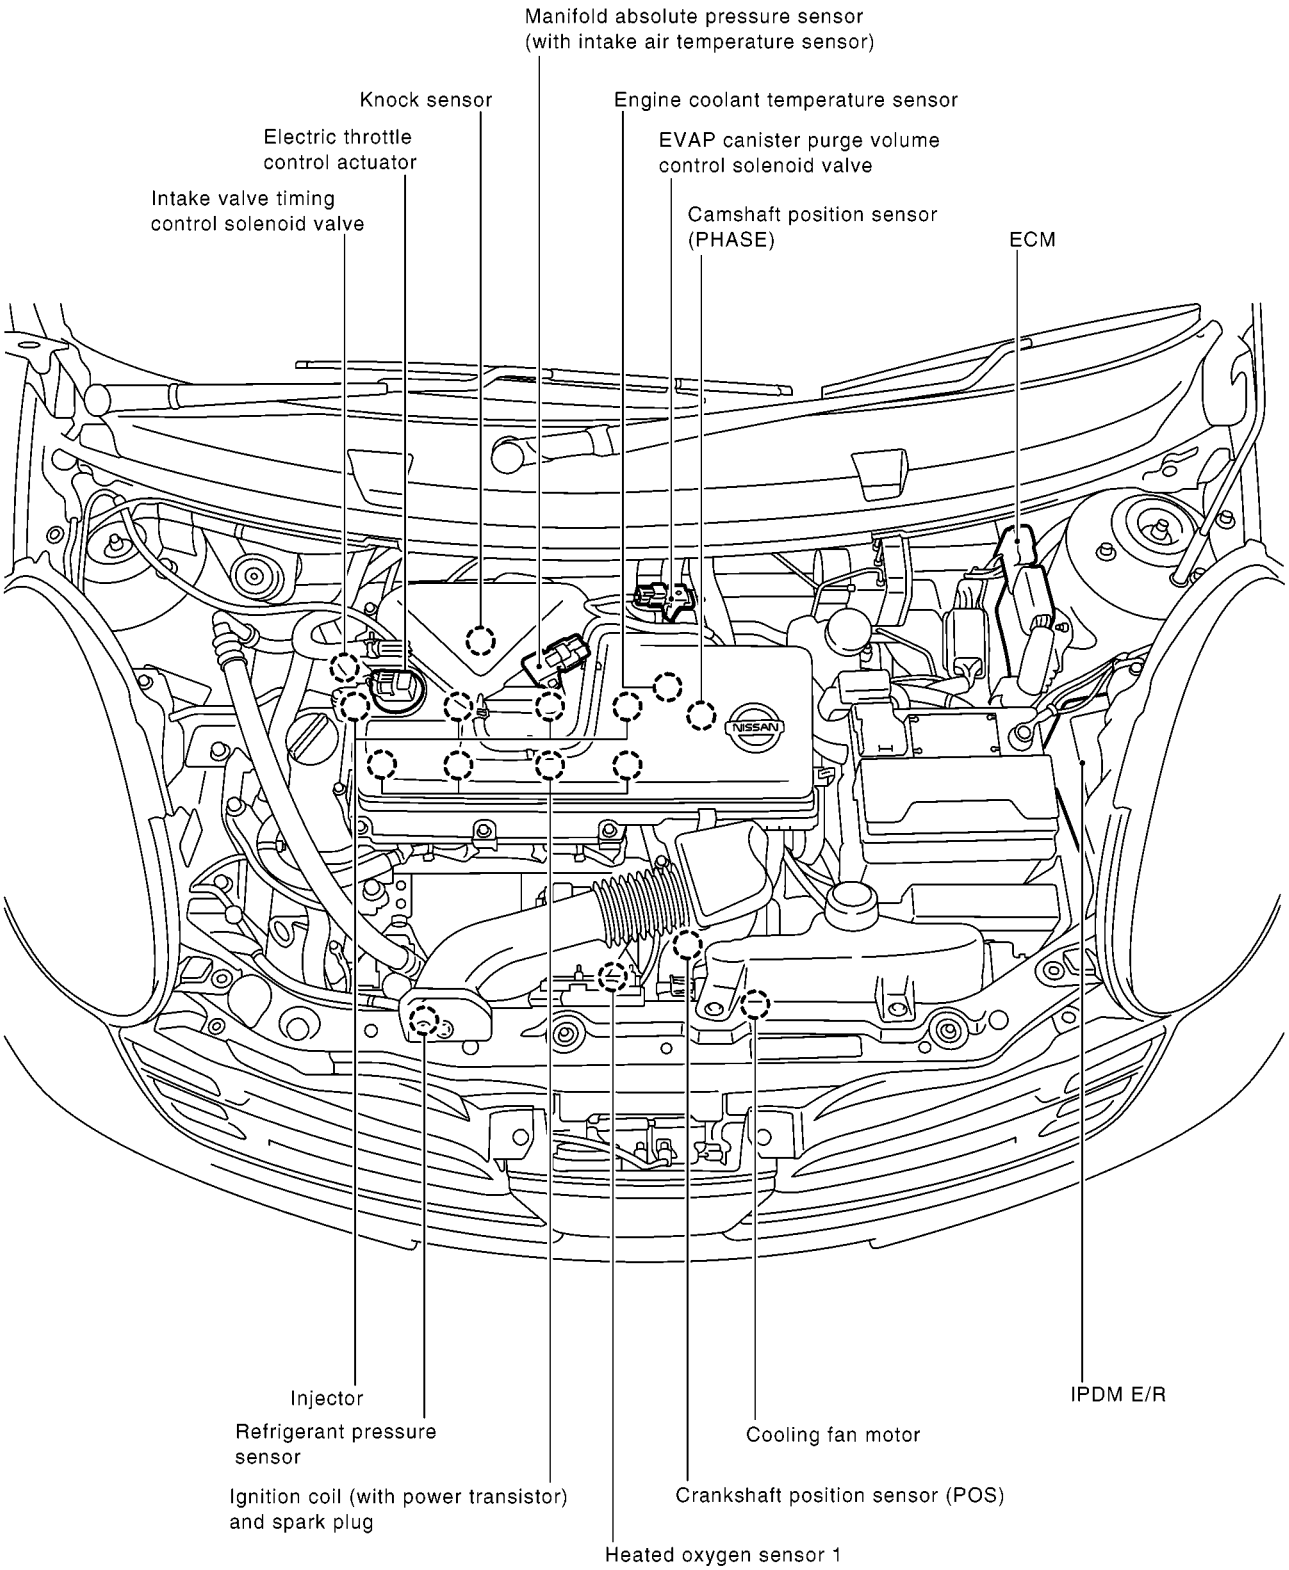

MBIB1069E

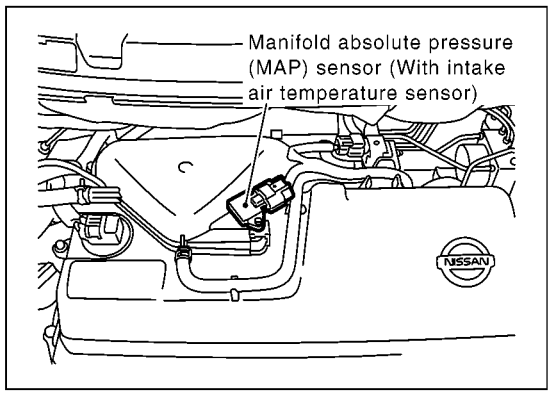
Manifold absolute pressure (MAP) sensor (With intake air temperature sensor)
NISSAN

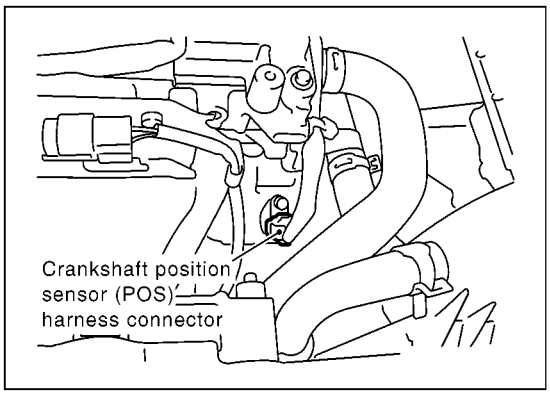
Crankshaft position sensor (POS) harness connector

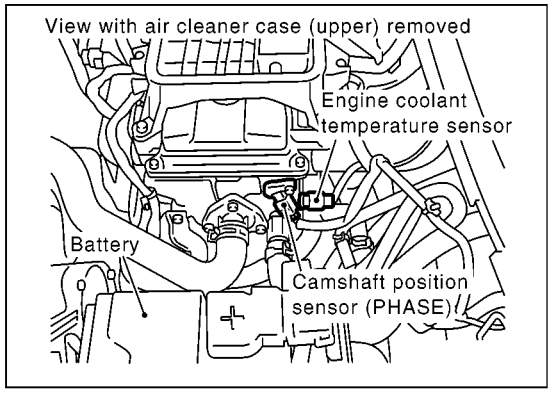
View with air cleaner case (upper) removed
Engine coolant temperature sensor
Battery
Camshaft position sensor (PHASE)

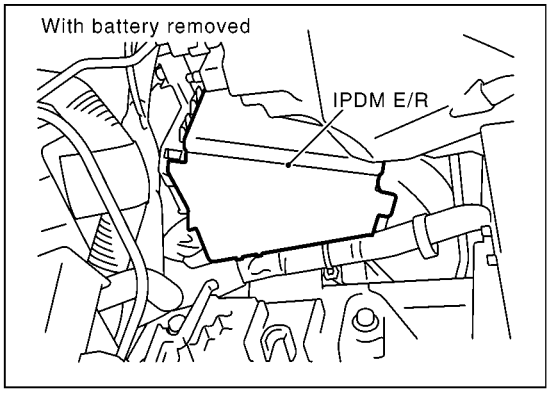
With battery removed
IPDM E/R

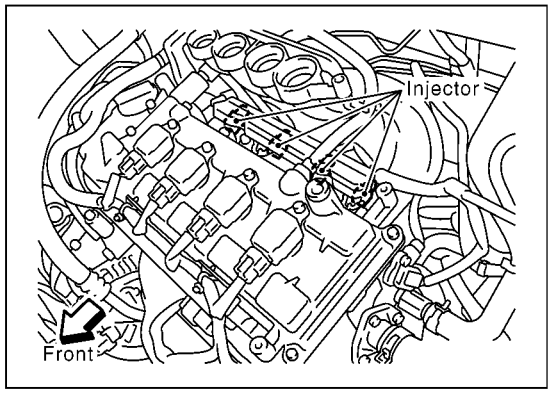
Injector
Front

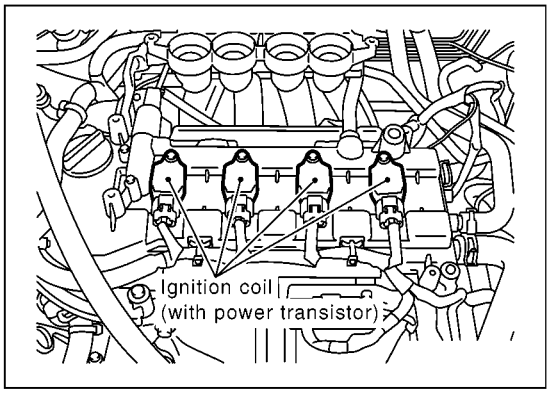
Ignition coil (with power transistor)

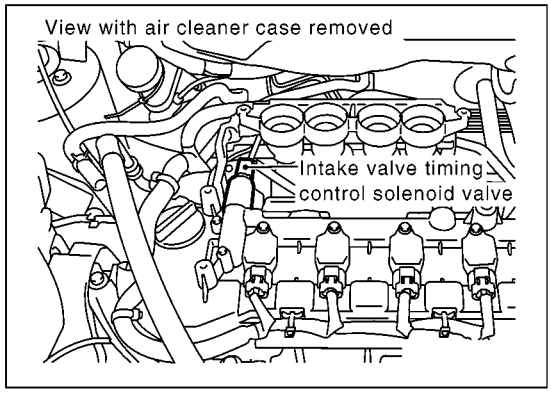
View with air cleaner case removed
Intake valve timing control solenoid valve

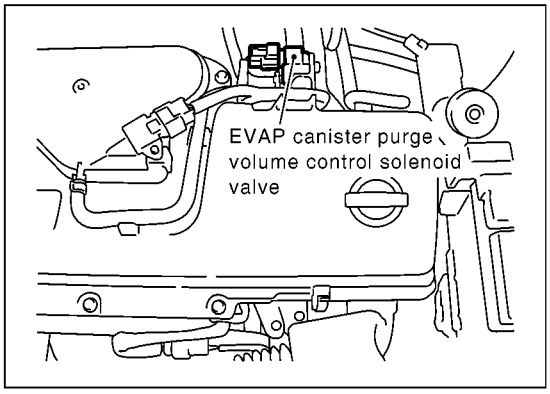
EVAP canister purge volume control solenoid valve

MBIB1070E

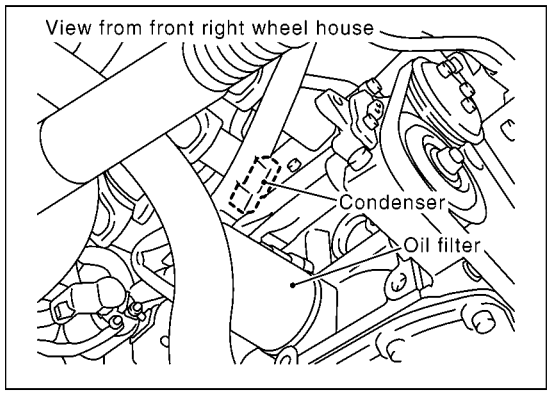
View from front right wheel house
Condenser
Oil filter

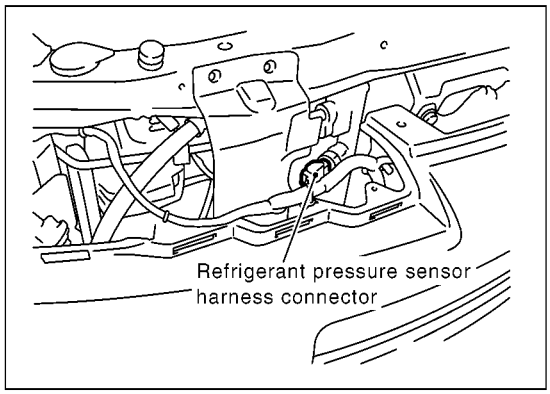
Refrigerant pressure sensor
harness connector

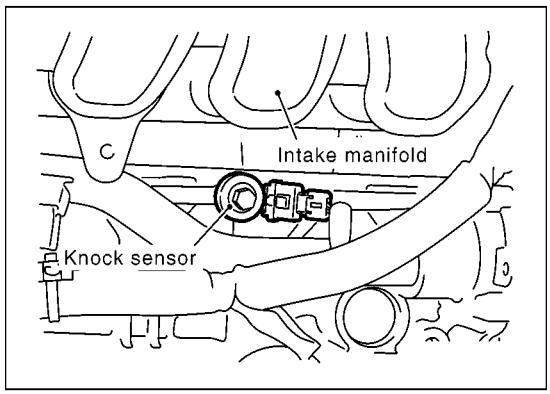
Intake manifold
Knock sensor

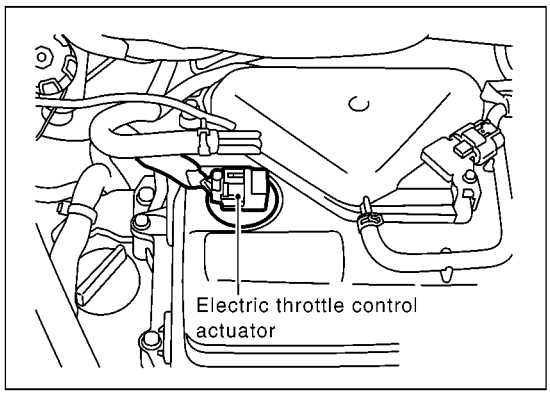
Electric throttle control
actuator

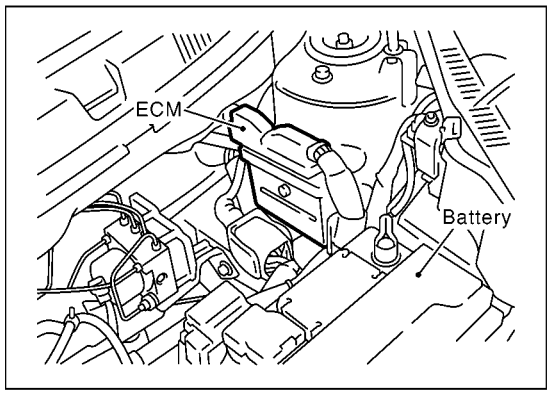
ECM
Battery

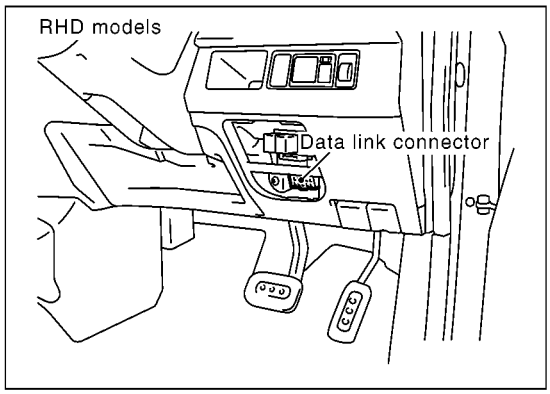
RHD models
Data link connector

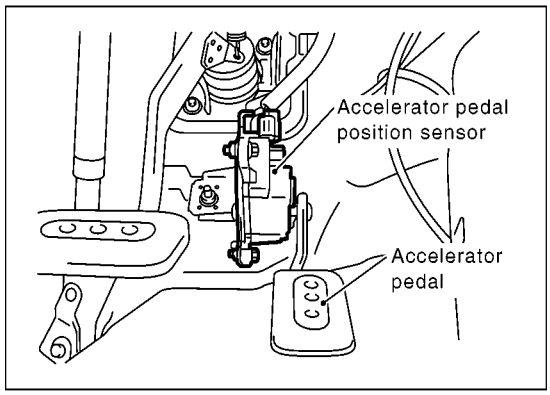
Accelerator pedal
position sensor
Accelerator
pedal

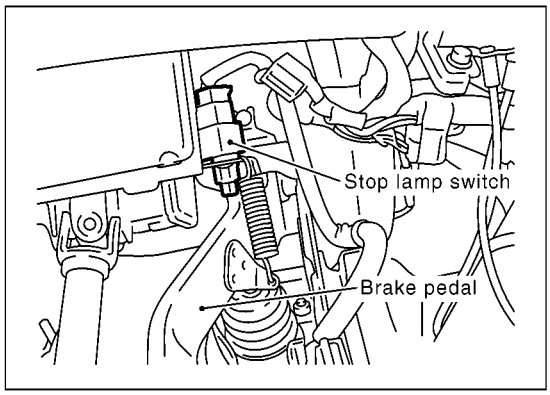
Stop lamp switch
Brake pedal

MBIB1071E

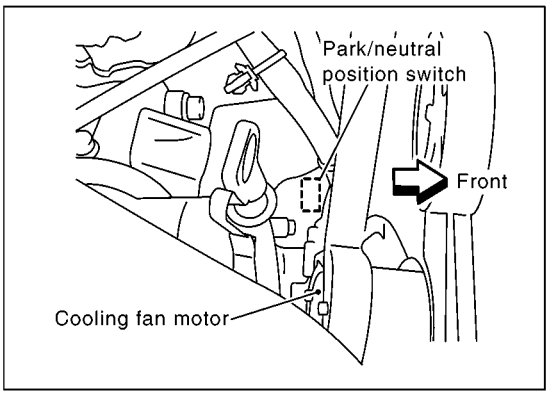
Park/neutral
position switch
Front
Cooling fan motor

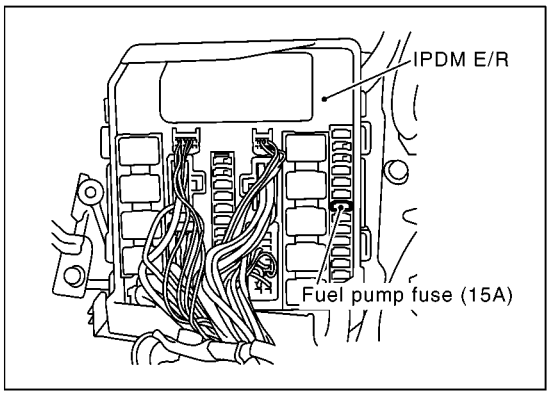
IPDM E/R
Fuel pump fuse (15A)

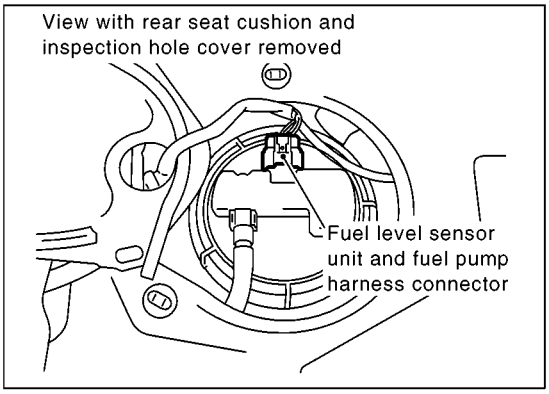
View with rear seat cushion and
inspection hole cover removed
Fuel level sensor
unit and fuel pump
harness connector

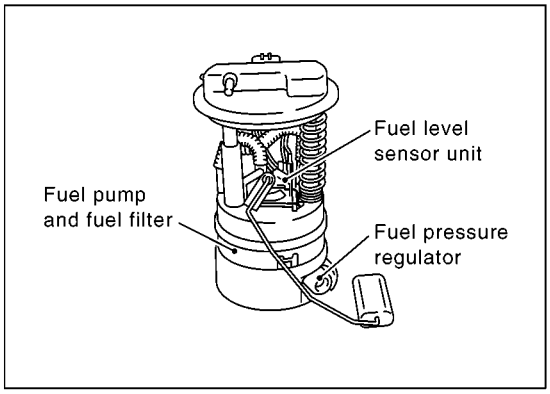
Fuel level
sensor unit
Fuel pump
and fuel filter
Fuel pressure
regulator

MBIB0318E

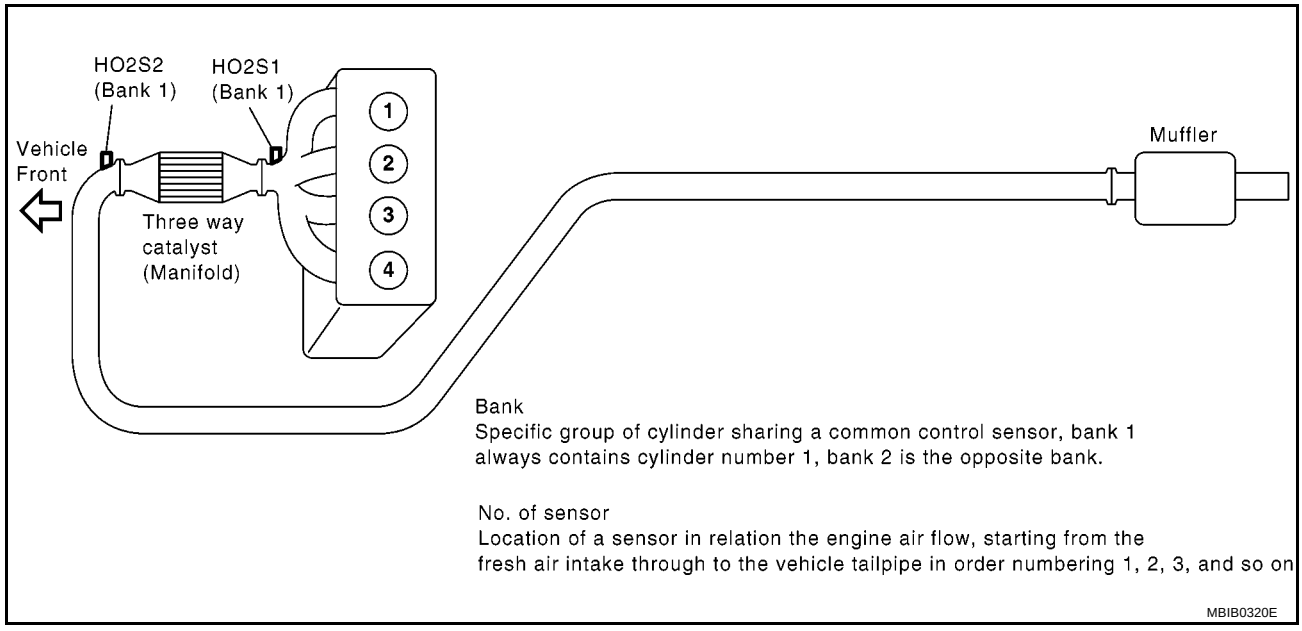
HO2S2
(Bank 1)
HO2S1
(Bank 1)
Vehicle
Front
Three way
catalyst
(Manifold)
1
2
3
4
Muffler
Bank
Specific group of cylinder sharing a common control sensor, bank 1
always contains cylinder number 1, bank 2 is the opposite bank.
No. of sensor
Location of a sensor in relation the engine air flow, starting from the
fresh air intake through to the vehicle tailpipe in order numbering 1, 2, 3, and so on
MBIB0320E

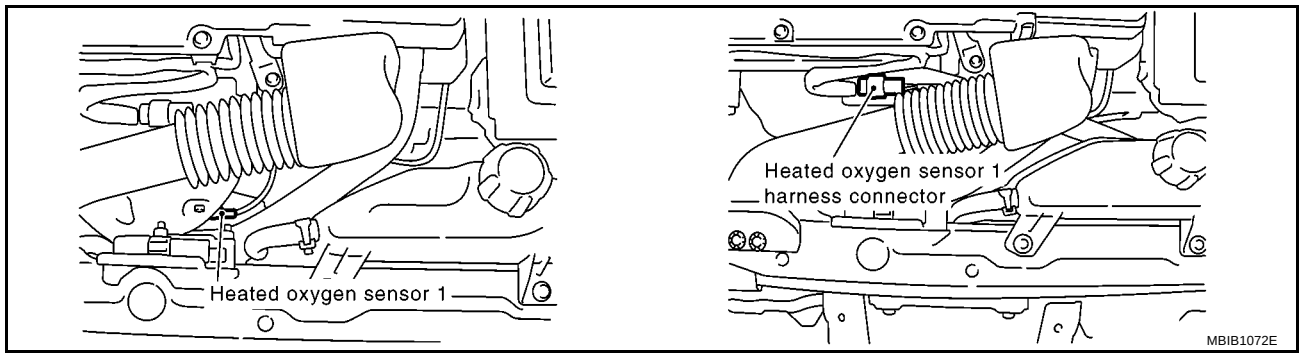
Heated oxygen sensor 1
Heated oxygen sensor 1
harness connector
MBIB1072E

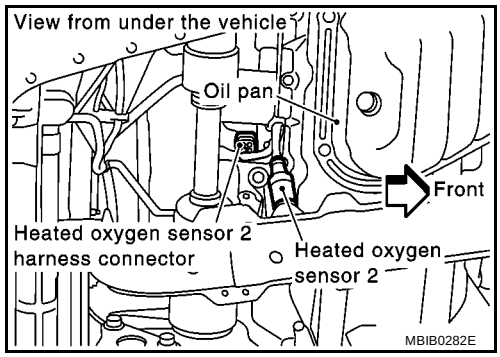
View from under the vehicle
Oil pan
Front
Heated oxygen sensor 2
harness connector
Heated oxygen
sensor 2
MBIB0282E

Circuit Diagram

EBS00O3M

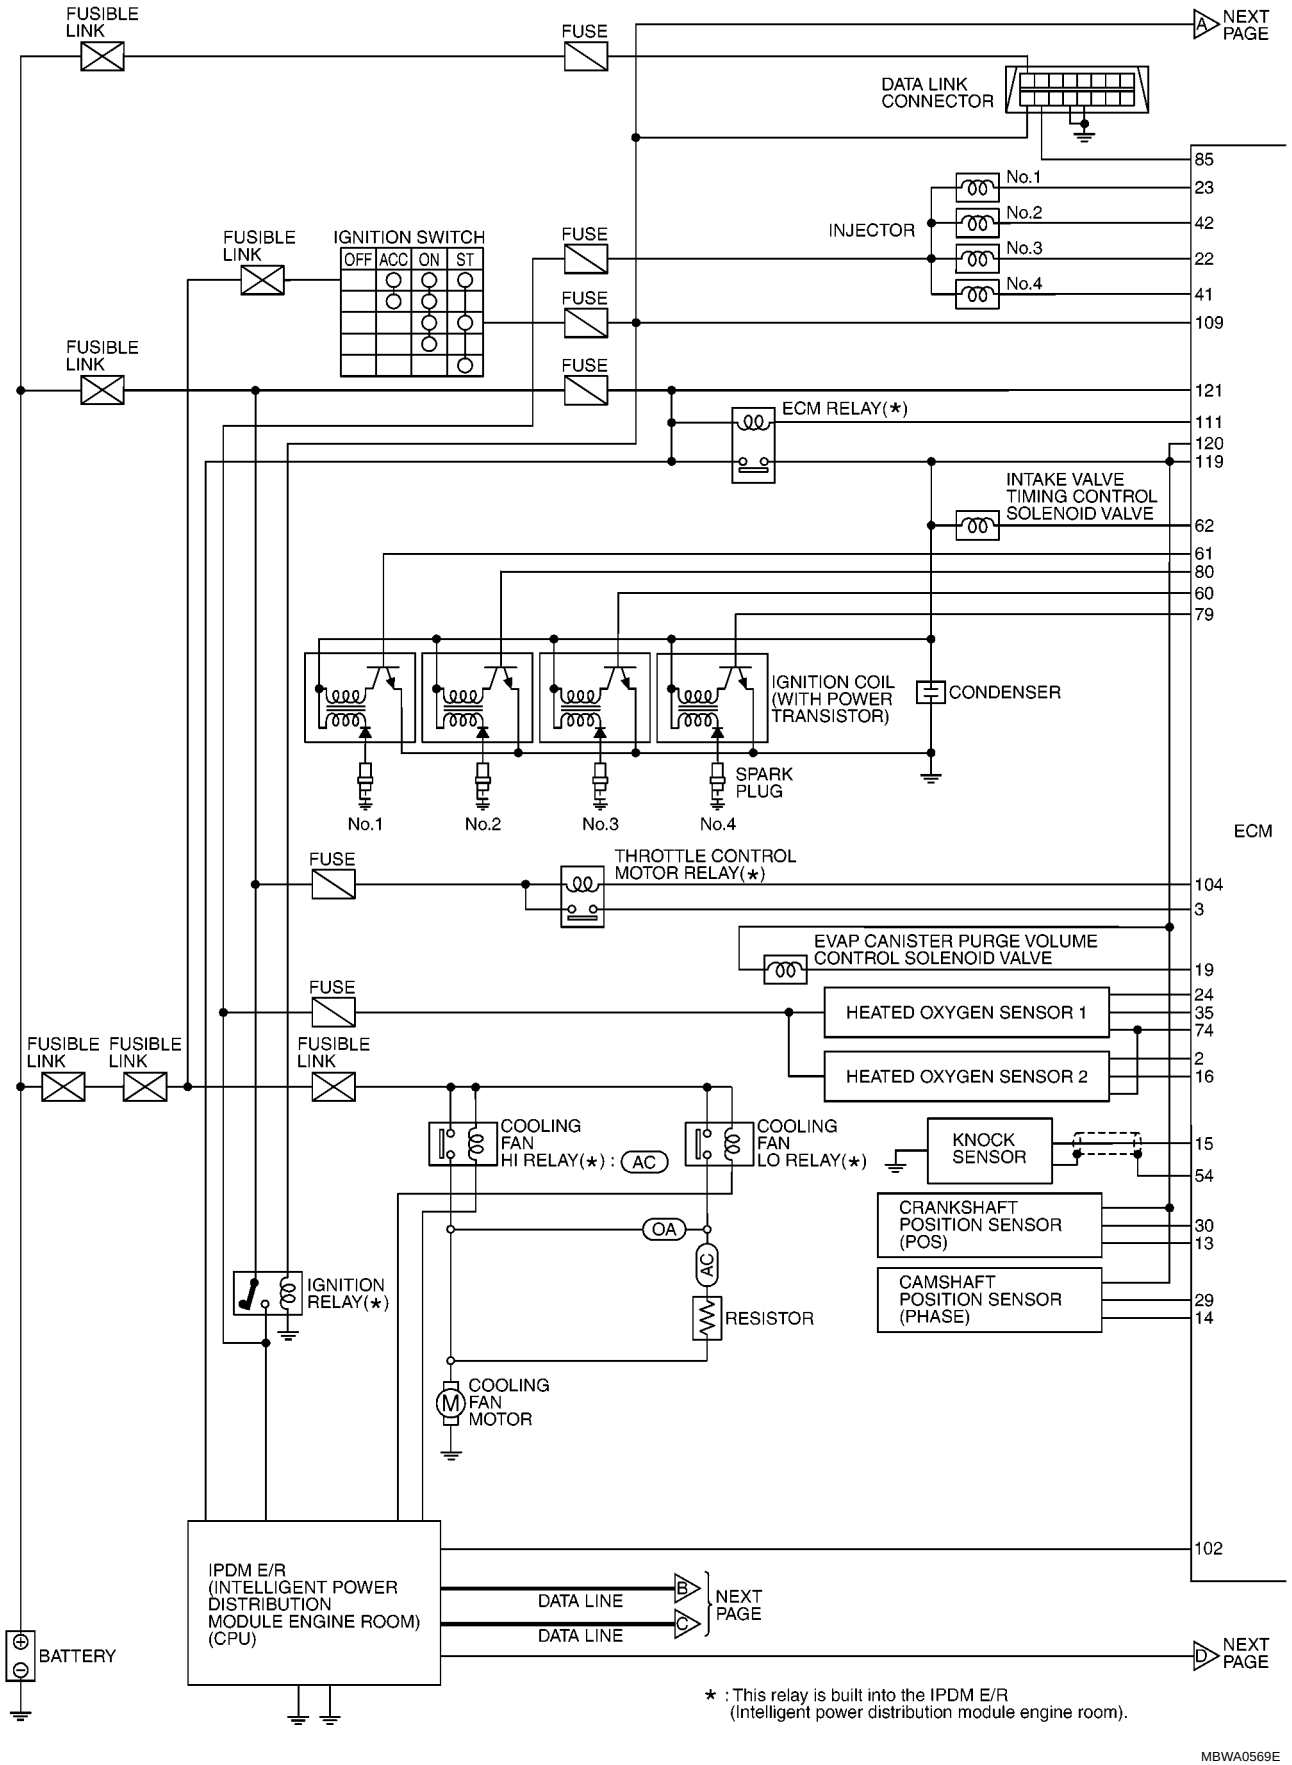

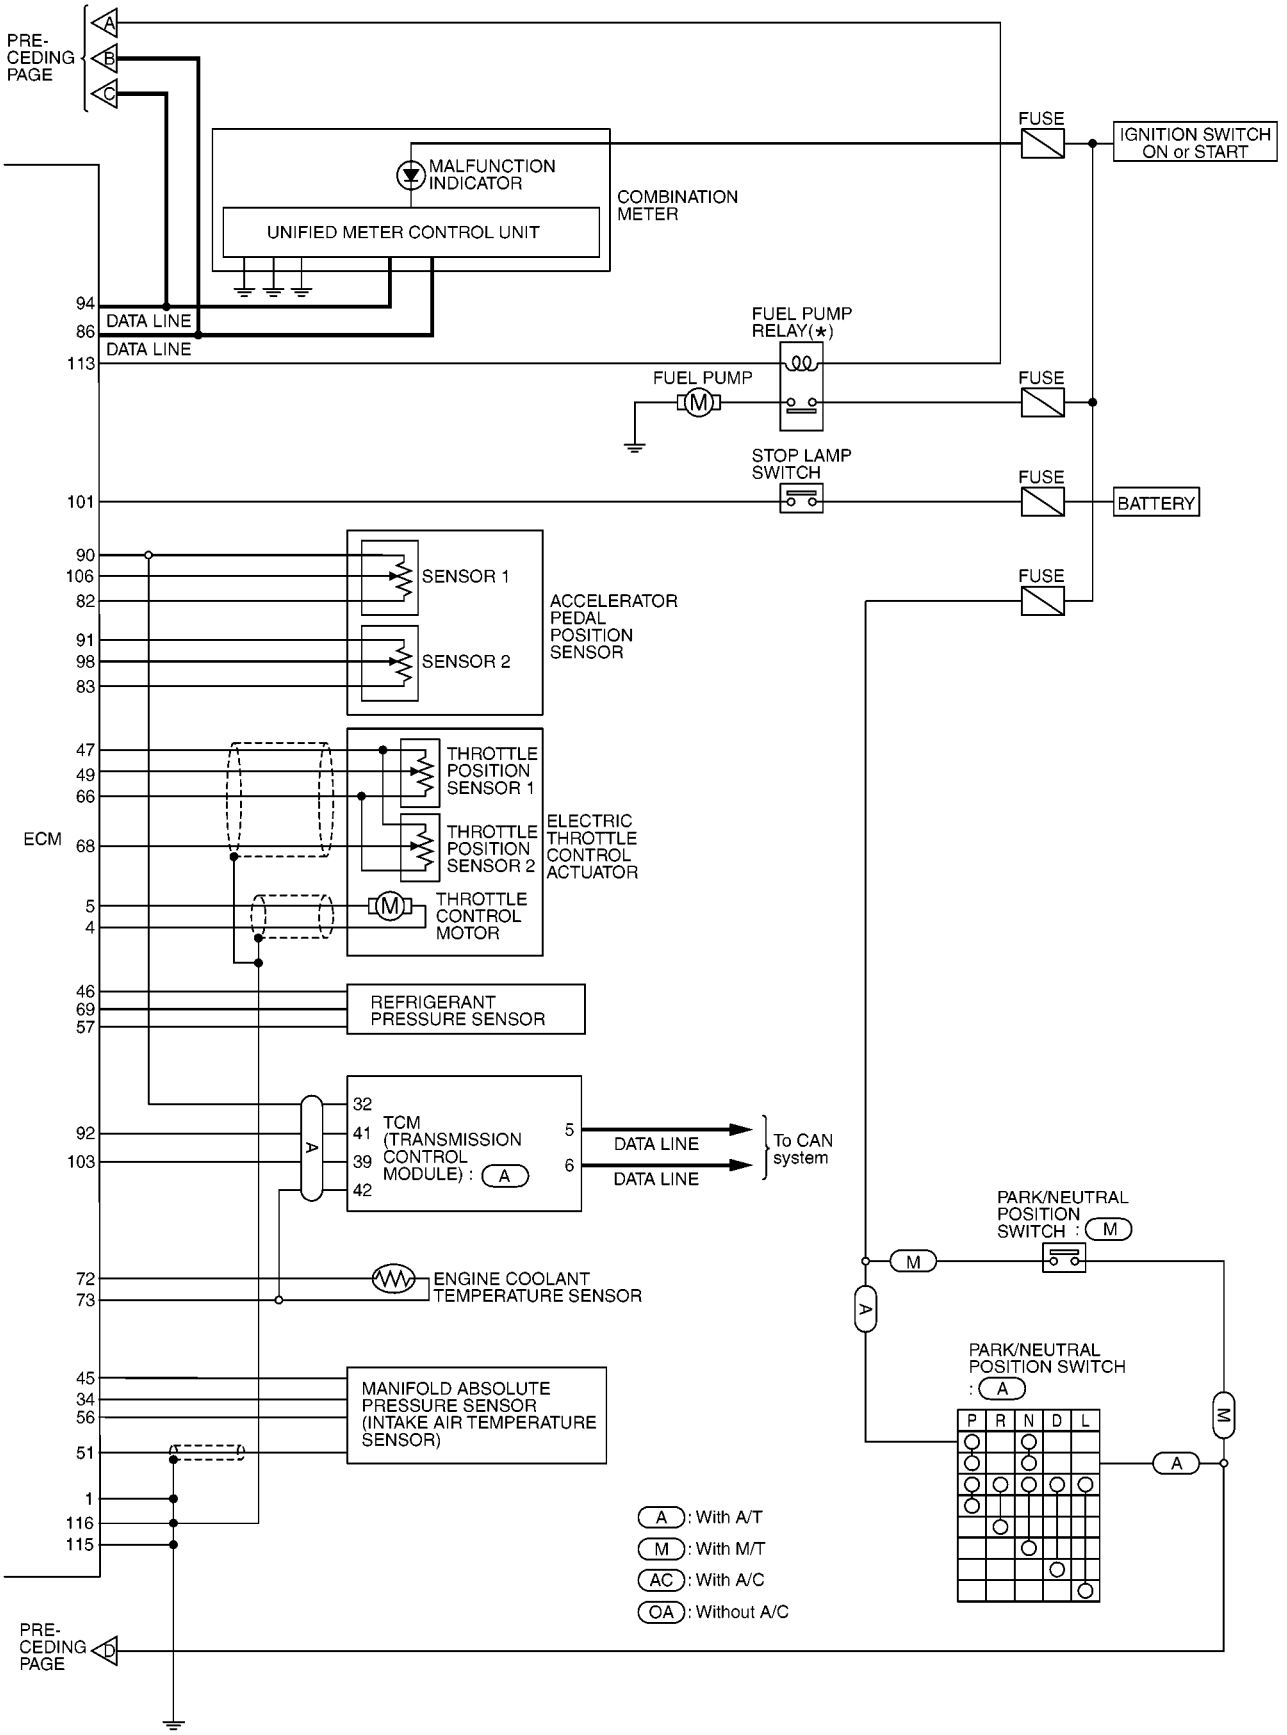
PRE-CEDING PAGE
A
B
C
MALFUNCTION INDICATOR
UNIFIED METER CONTROL UNIT
COMBINATION METER
FUSE
IGNITION SWITCH ON or START
94
86
113
DATA LINE
DATA LINE
FUEL PUMP RELAY(★)
FUEL PUMP
FUSE
STOP LAMP SWITCH
FUSE
BATTERY
101
90
106
82
SENSOR 1
91
98
83
SENSOR 2
ACCELERATOR PEDAL POSITION SENSOR
FUSE
47
49
66
THROTTLE POSITION SENSOR 1
ECM
68
THROTTLE POSITION SENSOR 2
5
4
THROTTLE CONTROL MOTOR
ELECTRIC THROTTLE CONTROL ACTUATOR
46
69
57
REFRIGERANT PRESSURE SENSOR
32
41
39
42
TCM (TRANSMISSION CONTROL MODULE) : A
92
103
5
6
DATA LINE
DATA LINE
To CAN system
PARK/NEUTRAL POSITION SWITCH : M
M
A
72
73
ENGINE COOLANT TEMPERATURE SENSOR
PARK/NEUTRAL POSITION SWITCH : A
P R N D L
45
34
56
51
MANIFOLD ABSOLUTE PRESSURE SENSOR (INTAKE AIR TEMPERATURE SENSOR)
1
116
115
A : With A/T
M : With M/T
AC : With A/C
OA : Without A/C
PRE-CEDING PAGE
D

MBWA0266E

ECM Harness Connector Terminal Layout

EBS00O3N

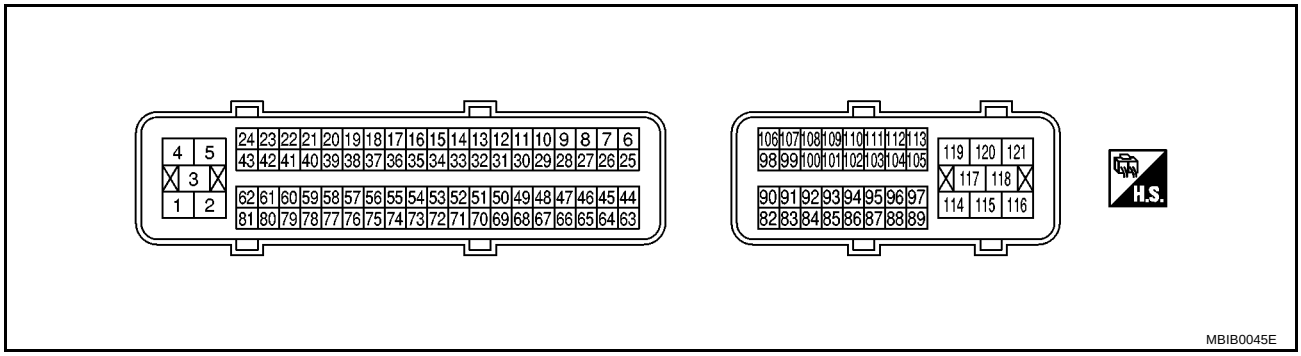

ECM Terminals and Reference Value

EBS00O3O

PREPARATION

1. ECM is located left hand side of the engine room.
2. Remove ECM harness protector.

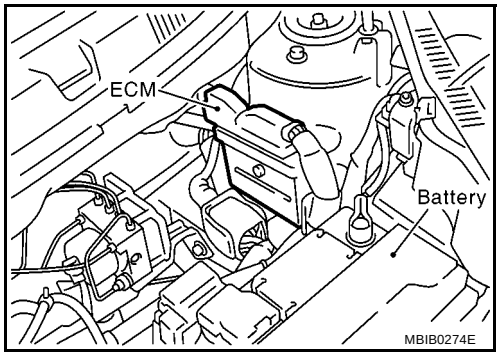

3. When disconnecting ECM harness connector, loosen it with levers as far as they will go as shown at right.
4. Connect a break-out box (SST) and Y-cable adapter (SST) between the ECM and ECM harness connector.
   - Use extreme care not to touch 2 pins at one time.
   - Data is for comparison and may not be exact.

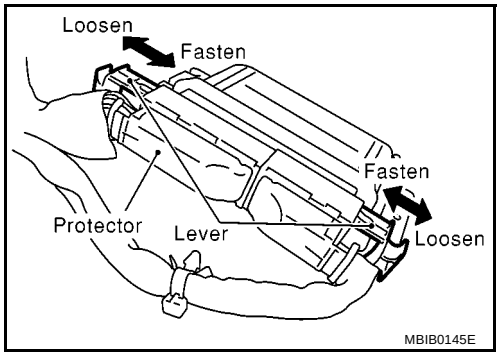

ECM INSPECTION TABLE

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	B	ECM ground	**[Engine is running]** ● Idle speed	Engine ground

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
2	GY	Heated oxygen sensor 2 heater	**[Engine is running]** ● Engine speed is below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - 1.0V
			[Ignition switch ON] ● Engine stopped **[Engine is running]** ● Engine speed is above 3,600 rpm (A/T models), 3,800 rpm (M/T models)	BATTERY VOLTAGE (11 - 14V)
3	LG	Throttle control motor relay power supply	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
4	L	Throttle control motor (Close)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Released	0 - 14V★ 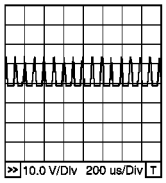 PBIB0534E
5	P	Throttle control motor (Open)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	0 - 14V★ 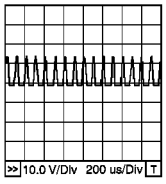 PBIB0533E
13	Y	Crankshaft position sensor (POS)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	Approximately 3.0V★ 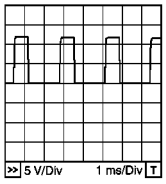 PBIB0527E
			[Engine is running] ● Engine speed is 2,000 rpm	Approximately 3.0V★ 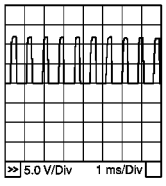 PBIB0528E

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
14	R	Camshaft position sensor (PHASE)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	1.0 - 4.0V★ 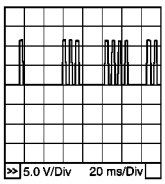 PBIB0525E
			[Engine is running] ● Engine speed is 2,000 rpm.	1.0 - 4.0V★ 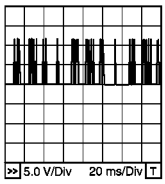 PBIB0526E
15	W	Knock sensor	**[Engine is running]** ● Idle speed	Approximately 2.5V
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● **Warm-up condition** ● Engine speed is below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - Approximately 1.0V
19	LG	EVAP canister purge volume control solenoid valve	**[Engine is running]** ● Idle speed	BATTERY VOLTAGE (11 - 14V)★ 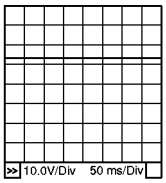 PBIB0050E
			[Engine is running] ● Engine speed is about 2,000 rpm (More than 100 seconds after starting engine)	Approximately 10V★ 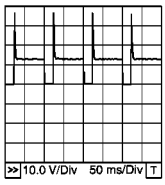 PBIB0520E

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22 23 41 42	OR L R GY	Injector No. 3 Injector No. 1 Injector No. 4 Injector No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	BATTERY VOLTAGE (11 - 14V)★ 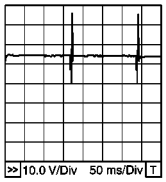 PBIB0529E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14V)★ 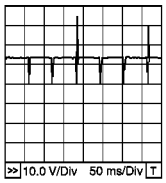 PBIB0530E
24	Y	Heated oxygen sensor 1 heater	**[Engine is running]** ● **Warm-up condition** ● Engine speed is below 3,600 rpm.	Approximately 7.0V★ 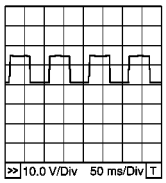 PBIB0519E
			[Engine is running] ● Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)
29	B	Sensor ground (Camshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
30	B	Sensor ground (Crankshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
34	OR	Intake air temperature sensor	**[Engine is running]**	Approximately 0 - 4.8V Output voltage varies with intake air temperature.
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
45	L	Sensor power supply	**[Ignition switch ON]**	Approximately 5V
46	W	Sensor power supply (Refrigerant pressure sensor)	**[Ignition switch ON]**	Approximately 5V
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
51	W	Manifold absolute pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 1.5V
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	Approximately 1.2V
54	—	Sensor ground (Knock sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
56	B	Sensor ground (Manifold absolute pressure sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
57	Y	Sensor ground (Refrigerant pressure sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
60 61 79 80	Y PU G BR	Ignition signal No. 3 Ignition signal No. 1 Ignition signal No. 4 Ignition signal No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	0 - 0.1V★ 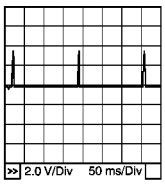 PBIB0521E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - 0.2V★ 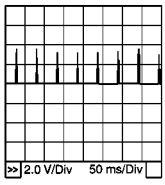 PBIB0522E

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	LG	Intake valve timing control solenoid valve	**[Engine is running]** ● **Warm-up condition** ● Idle speed	BATTERY VOLTAGE (11 - 14V)★
			[Engine is running] ● **Warm-up condition** ● When revving engine up to 2,000 rpm quickly	Approximately 4V - BATTERY VOLTAGE (11 - 14V)★ 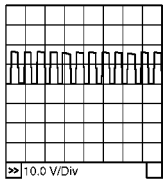 PBIB1790E
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V
69	BR	Refrigerant pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Both A/C switch and blower switch are ON (Compressor operates.)	1.0 - 4.0V
72	P	Engine coolant temperature sensor	**[Engine is running]**	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature.
73	B	Sensor ground (Engine coolant temperature sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
85	LG	DATA link connector	**[Ignition switch ON]** ● CONSULT-II or GST is disconnected.	BATTERY VOLTAGE (11 - 14V)
86	W	CAN communication line	**[Ignition switch ON]**	1.0 - 2.5V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
92	GY	Throttle position sensor signal output (A/T models)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position is D (A/T models) ● Accelerator pedal: Fully released	Approximately 0.5V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Accelerator pedal: Fully depressed	Approximately 4.2V
94	R	CAN communication line	**[Ignition switch ON]**	2.5 - 4.0V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
101	W	Stop lamp switch	**[Ignition switch ON]** ● Brake pedal: Fully released	Approximately 0V
			[Ignition switch ON] ● Brake pedal: Depressed	BATTERY VOLTAGE (11 - 14V)
102	GY	PNP switch	**[Ignition switch ON]** ● Gear position: P or N (A/T models), Neutral (M/T models)	Approximately 0V
			[Ignition switch ON] ● Except the above gear position	BATTERY VOLTAGE (11 - 14V)
103	L/OR	Tachometer signal output (A/T models)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	10 - 11V★ 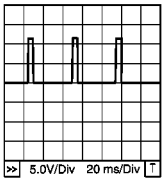 MBIB0053E
			[Engine is running] ● Engine speed is 2,000 rpm	10 - 11V★ 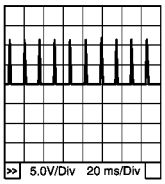 MBIB0054E
104	G	Throttle control motor relay	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON]	0 - 1.0V

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V
109	PU	Ignition switch	**[Ignition switch OFF]**	0V
			[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
111	P	ECM relay (Self shut-off)	**[Engine is running]** **[Ignition switch OFF]** ● For a few seconds after turning ignition switch OFF	0 - 1.0V
			[Ignition switch OFF] ● More than a few seconds passed after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
113	R	Fuel pump relay	**[Ignition switch ON]** ● For 1 second after turning ignition switch ON **[Engine is running]**	0 - 1.0V
			[Ignition switch ON] ● More than 1 second after turning ignition switch ON	BATTERY VOLTAGE (11 - 14V)
115 116	B B	ECM ground	**[Engine is running]** ● Idle speed	Engine ground
119 120	G G	Power supply for ECM	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
121	BR	Power supply for ECM (Back-up)	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

CONSULT-II Function (ENGINE)

EBS00O3P

FUNCTION

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-II unit.
Self-diagnostic results	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*
Data monitor	Input/Output data in the ECM can be read.
Data monitor (SPEC)	Input/Output of the specification for Basic fuel schedule, A/F feedback control value and the other data monitor items can be read.
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.
Active test	Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
Function test	This mode is used to inform customers when their vehicle condition requires periodic maintenance.
DTC & SRT confirmation	The status of system monitoring tests and the self-diagnosis status/result can be confirmed.
ECM part number	ECM part number can be read.

*: The following emission-related diagnostic information is cleared when the ECM memory is erased.

- Diagnostic trouble codes

- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values
- Others

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

		Item	DIAGNOSTIC TEST MODE						
			WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONI-TOR	DATA MONI-TOR (SPEC)	ACTIVE TEST	DTC & SRT CONFIRMATION	
				DTC*1	FREEZE FRAME DATA*2				SRT STATUS	DTC WORK SUP-PORT
ENGINE CONTROL COMPONENT PARTS	INPUT	Crankshaft position sensor (POS)		×	×	×	×			
		Camshaft position sensor (PHASE)		×		×	×			
		Manifold absolute pressure sensor		×		×	×			
		Engine coolant temperature sensor		×	×	×	×	×		
		Heated oxygen sensor 1		×		×	×		×	×
		Heated oxygen sensor 2		×		×	×		×	×
		Vehicle speed signal		×	×	×	×			
		Accelerator pedal position sensor		×		×	×			
		Throttle position sensor		×		×	×			
		Intake air temperature sensor		×		×	×			
		Knock sensor		×						
		Refrigerant pressure sensor				×	×			
		Closed throttle position switch (accelerator pedal position sensor signal)				×	×			
		Air conditioner switch				×	×			
		Park/neutral position (PNP) switch		×		×	×			
		Stop lamp switch		×		×	×			
		Battery voltage				×	×			
		Electrical load signal				×	×			
ENGINE CONTROL COMPONENT PARTS	OUTPUT	Injectors				×	×	×		
		Power transistor (Ignition timing)				×	×	×		
		Throttle control motor relay		×		×	×			
		Throttle control motor		×						
		EVAP canister purge volume control solenoid valve		×		×	×	×		
		Air conditioner relay				×	×			
		Fuel pump relay	×			×	×	×		
		Cooling fan relay		×		×	×	×		
		Heated oxygen sensor 1 heater		×		×	×		×	
		Heated oxygen sensor 2 heater		×		×	×		×	
		Intake valve timing control solenoid valve		×		×	×	×		
		Calculated load value			×	×	×			

X: Applicable

*1: This item includes 1st trip DTCs.
*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT-II screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to EC-51 .

INSPECTION PROCEDURE

CAUTION:

If CONSULT-II is used with no connection to CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. Turn ignition switch OFF.
2. Connect “CONSULT-II” and “CONSULT-II CONVERTER” to data link connector, which is located under drivers side dash panel.
3. Turn ignition switch ON.

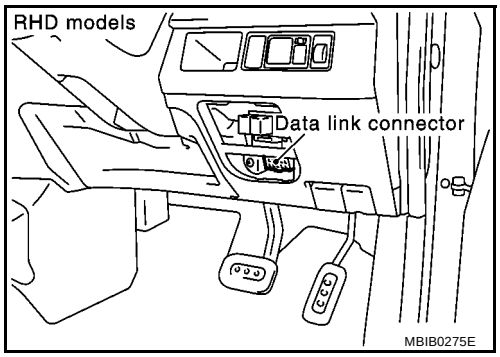

4. Touch “START(NISSAN BASED VHCL)”.

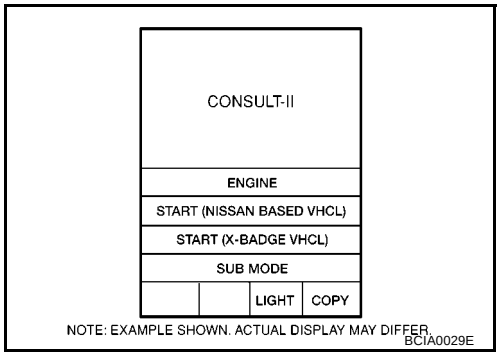

5. Touch “ENGINE”.
   If “ENGINE” is not indicated, go to GI-36, "CONSULT-II Data Link Connector (DLC) Circuit" .

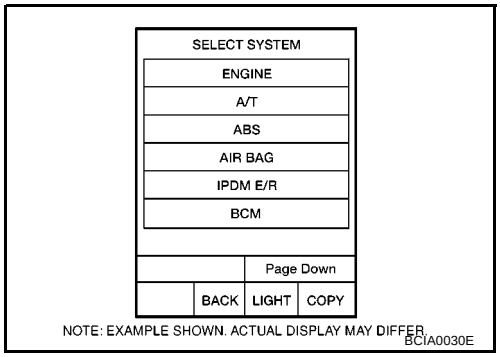

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual.

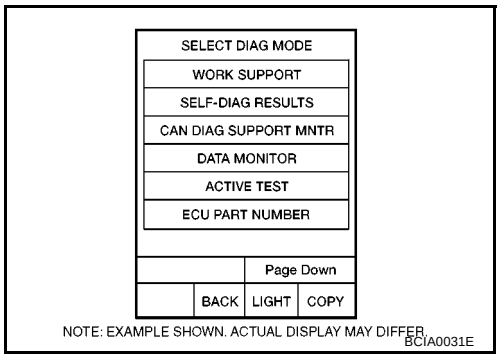

WORK SUPPORT MODE

Work Item

WORK ITEM	CONDITION	USAGE
FUEL PRESSURE RELEASE	● FUEL PUMP WILL STOP BY TOUCHING “START” DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS.	When releasing fuel pressure from fuel line
IDLE AIR VOL LEARN	● THE IDLE AIR VOLUME THAT KEEPS THE ENGINE WITHIN THE SPECIFIED RANGE IS MEMORIZED IN ECM.	When learning the idle air volume
SELF-LEARNING CONT	● THE COEFFICIENT OF SELF-LEARNING CONTROL MIXTURE RATIO RETURNS TO THE ORIGINAL COEFFICIENT.	When clearing the coefficient of self-learning control value
TARGET IGN TIM ADJ*	● IDLE CONDITION	When adjusting target ignition timing
TARGET IDLE RPM ADJ*	● IDLE CONDITION	When setting target idle speed

*: This function is not necessary in the usual service procedure.

SELF-DIAG RESULTS MODE

Self Diagnostic Item

Regarding items of DTC and 1st trip DTC, refer to EC-11, "INDEX FOR DTC" .

Freeze Frame Data and 1st Trip Freeze Frame Data

Freeze frame data item*	Description
DIAG TROUBLE CODE [PXXXX]	● The engine control component part/control system has a trouble code, it is displayed as “PXXXX”. (Refer to EC-11, "INDEX FOR DTC" .)
FUEL SYS-B1	● Fuel injection system status at the moment a malfunction is detected is displayed. ● One mode in the following is displayed. Mode2: Open loop due to detected system malfunction Mode3: Open loop due to driving conditions (power enrichment, deceleration enleanment) Mode4: Closed loop - using oxygen sensor(s) as feedback for fuel control Mode5: Open loop - has not yet satisfied condition to go to closed loop
CAL/LD VALUE [%]	● The calculated load value at the moment a malfunction is detected is displayed.
COOLANT TEMP [°C] or [°F]	● The engine coolant temperature at the moment a malfunction is detected is displayed.
L-FUEL TRM-B1 [%]	● “Long-term fuel trim” at the moment a malfunction is detected is displayed. ● The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.
S-FUEL TRM-B1 [%]	● “Short-term fuel trim” at the moment a malfunction is detected is displayed. ● The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.
ENGINE SPEED [rpm]	● The engine speed at the moment a malfunction is detected is displayed.
VEHICL SPEED [km/h] or [mph]	● The vehicle speed at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [msec]	● The base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	● The intake air temperature at the moment a malfunction is detected is displayed.

*: The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE
Monitored Item

×: Applicable

Monitored item [Unit]	ECM INPUT SIG-NALS	MAIN SIG-NALS	Description	Remarks
ENG SPEED [rpm]	×	×	● Indicates the engine speed computed from the signals of the crankshaft position sensor (POS) and camshaft position sensor (PHASE).	● Accuracy becomes poor if engine speed drops below the idle rpm. ● If the signal is interrupted while the engine is running, an abnormal value may be indicated.
COOLAN TEMP/S [°C] or [°F]	×	×	● The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed.	● When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
HO2S1 (B1) [V]	×	×	● The signal voltage of the heated oxygen sensor 1 is displayed.	
HO2S2 (B1) [V]	×		● The signal voltage of the heated oxygen sensor 2 is displayed.	
HO2S1 MNTR (B1) [RICH/LEAN]	×	×	● Display of heated oxygen sensor 1 signal during air-fuel ratio feedback control: RICH ... means the mixture became “rich”, and control is being affected toward a leaner mixture. LEAN ... means the mixture became “lean”, and control is being affected toward a rich mixture.	● After turning ON the ignition switch, “RICH” is displayed until air-fuel mixture ratio feedback control begins. ● When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.
HO2S2 MNTR (B1) [RICH/LEAN]	×		● Display of heated oxygen sensor 2 signal: RICH ... means the amount of oxygen after three way catalyst is relatively small. LEAN ... means the amount of oxygen after three way catalyst is relatively large.	● When the engine is stopped, a certain value is indicated.
A/F ALPHA-B1 [%]		×	● The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.	● When the engine is stopped, a certain value is indicated. ● This data also includes the data for the air-fuel ratio learning control.
VHCL SPEED SE [km/h] or [mph]	×	×	● The vehicle speed computed from the vehicle speed signal is displayed.	
BATTERY VOLT [V]	×	×	● The power supply voltage of ECM is displayed.	
B/FUEL SCHDL [msec]		×	● “Base fuel schedule” indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	
ACCEL SEN 1 [V]	×	×	● The accelerator pedal position sensor signal voltage is displayed.	
ACCEL SEN 2 [V]	×			
THRTL SEN 1 [V]	×	×	● The throttle position sensor signal voltage is displayed.	
THRTL SEN 2 [V]	×			
INT/A TEMP SE [°C] or [°F]	×	×	● The intake air temperature (determined by the signal voltage of the intake air temperature sensor) is indicated.	
TURBO BST SEN [V]	×		● The signal voltage of the manifold absolute pressure sensor is displayed.	

Monitored item [Unit]	ECM INPUT SIGNALS	MAIN SIGNALS	Description	Remarks
START SIGNAL [ON/OFF]	×	×	● Indicates start signal status [ON/OFF] computed by the ECM according to the signals of engine speed and battery voltage.	● After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL POS [ON/OFF]	×	×	● Indicates idle position [ON/OFF] computed by the ECM according to the accelerator pedal position sensor signal.	
AIR COND SIG [ON/OFF]	×	×	● Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal.	
P/N POSI SW [ON/OFF]	×	×	● Indicates [ON/OFF] condition from the park/neutral position (PNP) switch signal.	
PW/ST SIGNAL [ON/OFF]	×	×	● [ON/OFF] condition of the power steering oil pressure switch as determined by the power steering oil pressure signal is indicated.	
LOAD SIGNAL [ON/OFF]	×	×	● Indicates [ON/OFF] condition from the electrical load signal. ON ... Rear window defogger switch is ON and/or lighting switch is in 2nd position. OFF ... Both rear window defogger switch and lighting switch are OFF.	
IGNITION SW [ON/OFF]	×		● Indicates [ON/OFF] condition from ignition switch.	
HEATER FAN SW [ON/OFF]	×		● Indicates [ON/OFF] condition from the heater fan switch signal.	
BRAKE SW [ON/OFF]	×		● Indicates [ON/OFF] condition from the stop lamp switch signal.	
INJ PULSE-B1 [msec]		×	● Indicates the actual fuel injection pulse width compensated by ECM according to the input signals.	● When the engine is stopped, a certain computed value is indicated.
IGN TIMING [BTDC]		×	● Indicates the ignition timing computed by ECM according to the input signals.	● When the engine is stopped, a certain value is indicated.
CAL/LD VALUE [%]			● “Calculated load value” indicates the value of the current airflow divided by peak airflow.	
MASS AIRFLOW [g·m/s]			● Indicates the mass air flow computed by ECM according to the signal voltage of manifold absolute pressure sensor.	
PURG VOL C/V [%]			● Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. ● The opening becomes larger as the value increases.	
INT/V TIM (B1) [°CA]			● Indicates [°CA] of intake camshaft advanced angle.	
INT/V SOL (B1) [%]			● The control value of the intake valve timing control solenoid valve (determined by ECM according to the input signals) is indicated. ● The advance angle becomes larger as the value increases.	

Monitored item [Unit]	ECM INPUT SIG-NALS	MAIN SIG-NALS	Description	Remarks
AIR COND RLY [ON/OFF]		×	● The air conditioner relay control condition (determined by ECM according to the input signals) is indicated.	
FUEL PUMP RLY [ON/OFF]		×	● Indicates the fuel pump relay control condition determined by ECM according to the input signals.	
THRTL RELAY [ON/OFF]		×	● Indicates the throttle control motor relay control condition determined by the ECM according to the input signals.	
COOLING FAN [HI/LOW/OFF]		×	● Indicates the condition of the cooling fan (determined by ECM according to the input signals). HI ... High speed operation LOW ... Low speed operation OFF ... Stop	
HO2S1 HTR (B1) [ON/OFF]			● Indicates [ON/OFF] condition of heated oxygen sensor 1 heater determined by ECM according to the input signals.	
HO2S2 HTR (B1) [ON/OFF]			● Indicates [ON/OFF] condition of heated oxygen sensor 2 heater determined by ECM according to the input signals.	
IDL A/V LEARN [YET/CMPLT]			● Display the condition of idle air volume learning YET ... Idle air volume learning has not been performed yet. CMPLT ... Idle air volume learning has already been performed successfully.	
TRVL AFTER MIL [km] or [mile]			● Distance traveled while MI is activated.	
O2 SEN HTR DTY [%]			● Indicates the heated oxygen sensor 1 heater control valve computed by the ECM according to the input signals.	
AC PRESS SEN [V]	×		● The signal voltage from the refrigerant pressure sensor is displayed.	
Voltage [V]			● Voltage, frequency, duty cycle or pulse width measured by the probe.	● Only “#” is displayed if item is unable to be measured. ● Figures with “#”s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.
Frequency [msec], [Hz] or [%]				
DUTY-HI				
DUTY-LOW				
PLS WIDTH-HI				
PLS WIDTH-LOW				

NOTE:

- Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

DATA MONITOR (SPEC) MODE

Monitored Item

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
ENG SPEED [rpm]	×		● Indicates the engine speed computed from the signal of the crankshaft position sensor (POS).	
B/FUEL SCHDL [msec]			● “Base fuel schedule” indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	● When engine is running specification range is indicated.
A/F ALPHA-B1 [%]		×	● The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.	● When engine is running specification range is indicated. ● This data also includes the data for the air-fuel ratio learning control.

NOTE:
- Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

Test Item

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	● Engine: Return to the original trouble condition ● Change the amount of fuel injection using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Harness and connectors ● Fuel injectors ● Heated oxygen sensor 1
IGNITION TIMING	● Engine: Return to the original trouble condition ● Timing light: Set ● Retard the ignition timing using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Perform Idle Air Volume Learning.
POWER BALANCE	● Engine: After warming up, idle the engine. ● A/C switch: OFF ● Shift lever: N ● Cut off each injector signal one at a time using CONSULT-II.	Engine runs rough or dies.	● Harness and connectors ● Compression ● Fuel injectors ● Power transistor ● Spark plugs ● Ignition coils
COOLING FAN*1	● Ignition switch: ON ● Turn the cooling fan ON and OFF with CONSULT-II.	Cooling fan moves and stops.	● Harness and connectors ● Cooling fan relay ● Cooling fan motor
ENG COOLANT TEMP	● Engine: Return to the original trouble condition ● Change the engine coolant temperature using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Harness and connectors ● Engine coolant temperature sensor ● Fuel injectors
FUEL PUMP RELAY	● Ignition switch: ON (Engine stopped) ● Turn the fuel pump relay ON and OFF using CONSULT-II and listen to operating sound.	Fuel pump relay makes the operating sound.	● Harness and connectors ● Fuel pump relay

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
PURG VOL CONT/V	● Engine: After warming up, run engine at 1,500 rpm. ● Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT-II.	Engine speed changes according to the opening percent.	● Harness and connectors ● Solenoid valve
V/T ASSIGN ANGLE	● Engine: Return to the original trouble condition ● Change intake valve timing using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Harness and connectors ● Intake valve timing control solenoid valve

*1:Leaving cooling fan OFF with CONSULT-II while engine is running may cause the engine to overheat.

DTC & SRT CONFIRMATION MODE

SRT STATUS Mode

For details, refer to EC-51, "SYSTEM READINESS TEST (SRT) CODE" .

SRT Work Support Mode

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

DTC Work Support Mode

Test mode	Test item	Condition	Reference page
HO2S1	HO2S1 (B1) P0133	Refer to corresponding trouble diagnosis for DTC.	EC-175
	HO2S1 (B1) P0134		EC-185
	HO2S1 (B1) P1143		EC-315
	HO2S1 (B1) P1144		EC-321
H02S2	HO2S2 (B1) P0139		EC-199
	HO2S2 (B1) P1146		EC-327
	HO2S2 (B1) P1147		EC-337

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (RECORDING VEHICLE DATA)

Description

CONSULT-II has two kinds of triggers and they can be selected by touching “SETTING” in “DATA MONITOR” mode.

1. “AUTO TRIG” (Automatic trigger):
   - The malfunction will be identified on the CONSULT-II screen in real time.
     In other words, DTC/1st trip DTC and malfunction item will be displayed if the malfunction is detected by ECM.
     At the moment a malfunction is detected by ECM, “MONITOR” in “DATA MONITOR” screen is changed to “Recording Data ... xx%” as shown in the figure, and the data after the malfunction detection is recorded. Then when the percentage reached 100%, “REAL-TIME DIAG” screen is displayed. If “STOP” is touched on the screen during “Recording Data ... xx%”, “REAL-TIME DIAG” screen is also displayed.
     The recording time after the malfunction detection and the

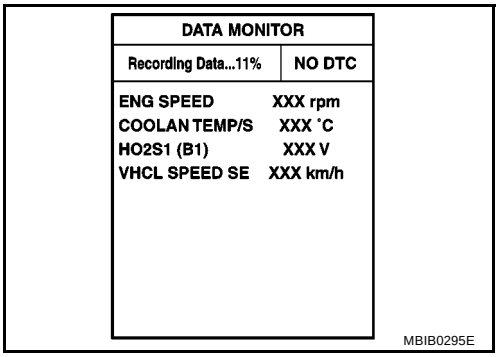

recording speed can be changed by “TRIGGER POINT” and “Recording Speed”. Refer to CONSULT-II OPERATION MANUAL.

2. “MANU TRIG” (Manual trigger):
   - DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.
     DATA MONITOR can be performed continuously even though a malfunction is detected.

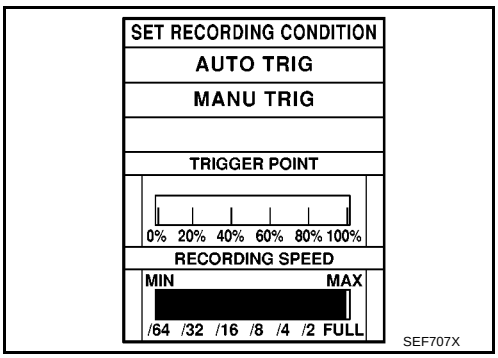

Operation

1. “AUTO TRIG”
   - While trying to detect the DTC/1st trip DTC by performing the DTC Confirmation Procedure, be sure to select to “DATA MONITOR (AUTO TRIG)” mode. You can confirm the malfunction at the moment it is detected.
   - While narrowing down the possible causes, CONSULT-II should be set in “DATA MONITOR (AUTO TRIG)” mode, especially in case the incident is intermittent.
     When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the DTC Confirmation Procedure, the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to Incident Simulation Tests in GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" .)
2. “MANU TRIG”
   - If the malfunction is displayed as soon as “DATA MONITOR” is selected, reset CONSULT-II to “MANU TRIG”. By selecting “MANU TRIG” you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

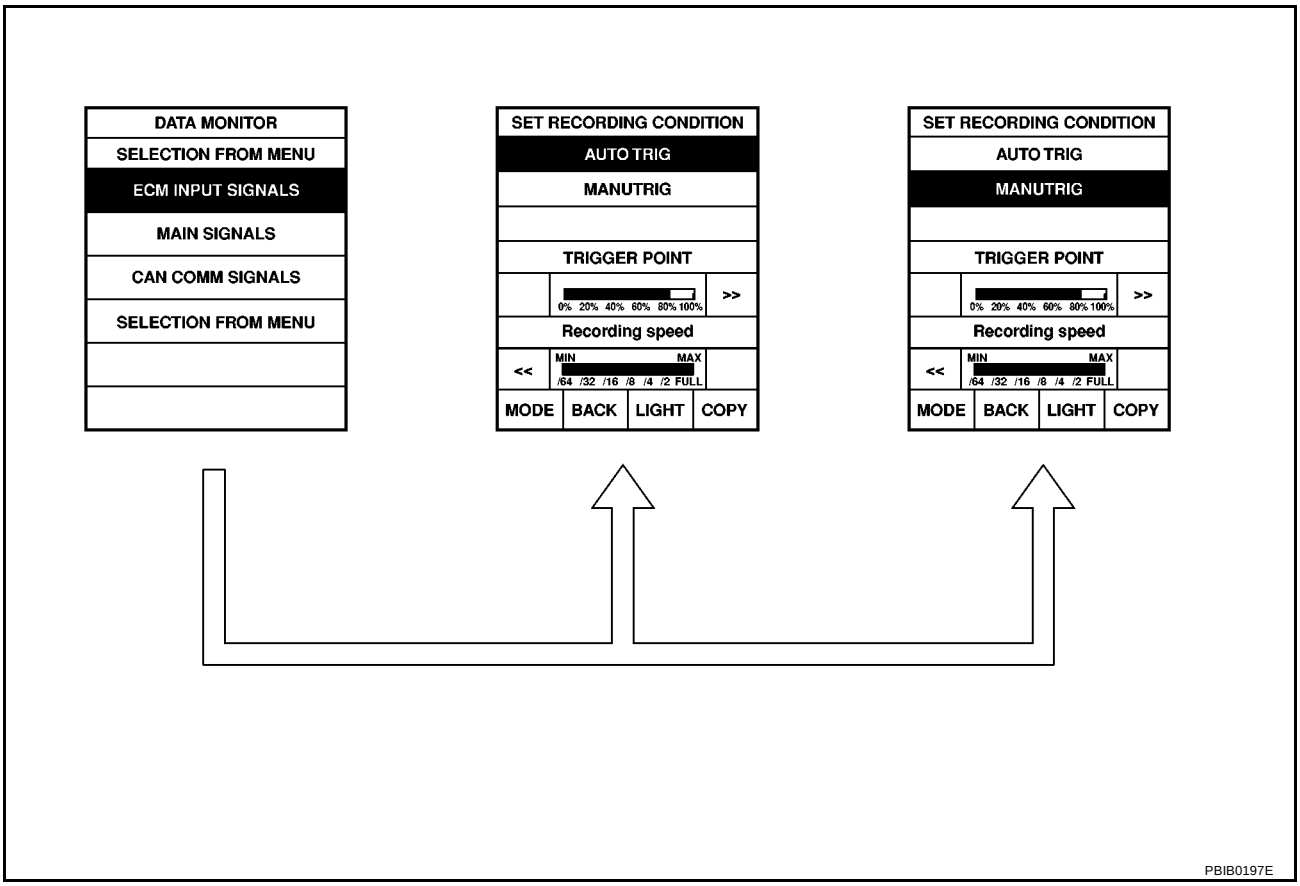

Generic Scan Tool (GST) Function

EBS00O3Q

DESCRIPTION

Generic Scan Tool (OBDII scan tool) complying with ISO 15031 has 8 different functions explained below.
ISO9141 is used as the protocol.
The name GST or Generic Scan Tool is used in this service manual.

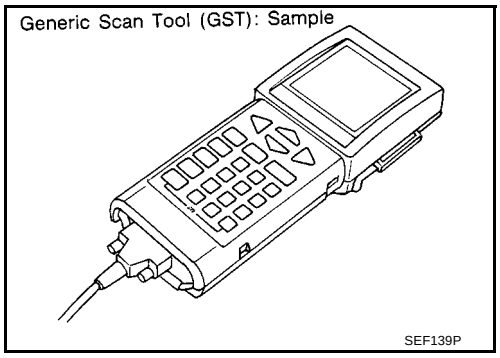

FUNCTION

Diagnostic test mode		Function
MODE 1	READINESS TESTS	This mode gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information.
MODE 2	(FREEZE DATA)	This mode gains access to emission-related data value which were stored by ECM during the freeze frame. For details, refer to EC-51, "FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA" .
MODE 3	DTCs	This mode gains access to emission-related power train trouble codes which were stored by ECM.
MODE 4	CLEAR DIAG INFO	This mode can clear all emission-related diagnostic information. This includes: ● Clear number of diagnostic trouble codes (MODE 1) ● Clear diagnostic trouble codes (MODE 3) ● Clear trouble code for freeze frame data (MODE 1) ● Clear freeze frame data (MODE 2) ● Reset status of system monitoring test (MODE 1) ● Clear on board monitoring test results (MODE 6 and 7)
MODE 6	(ON BOARD TESTS)	This mode accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored.
MODE 7	(ON BOARD TESTS)	This mode enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions.
MODE 8	—	This mode is not applicable on this vehicle.
MODE 9	(CALIBRATION ID)	This mode enables the off-board test device to request specific vehicle information such as Vehicle Identification Number (VIN) and Calibration IDs.

INSPECTION PROCEDURE

1. Turn ignition switch OFF.
2. Connect GST to data link connector, which is located under drivers side dash panel near the fuse box cover.
3. Turn ignition switch ON.

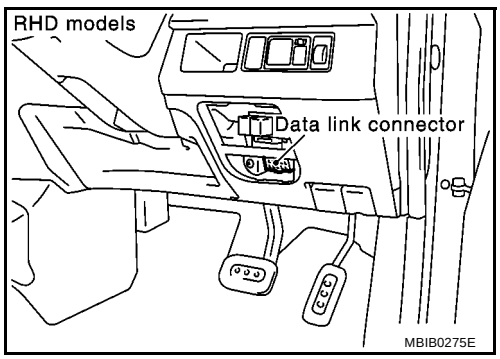

4. Enter the program according to instruction on the screen or in the operation manual.

(*: Regarding GST screens in this section, sample screens are shown.)

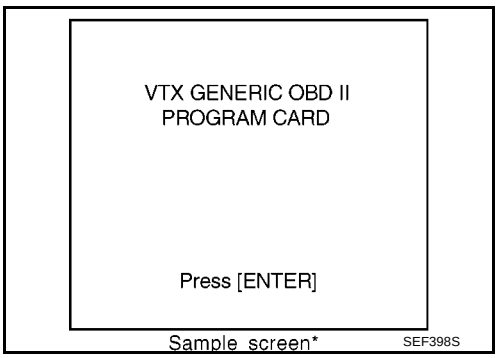

Sample screen* SEF398S

5. Perform each diagnostic mode according to each service procedure.

For further information, see the GST Operation Manual of the tool maker.

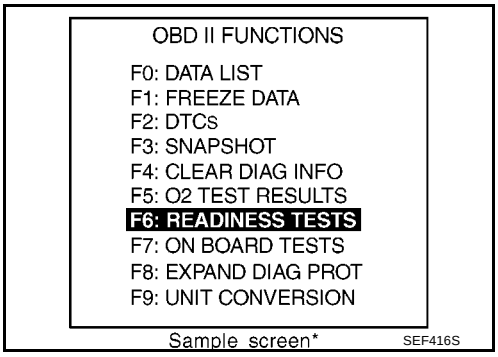

Sample screen* SEF416S

CONSULT-II Reference Value in Data Monitor Mode

EBS00O3R

Remarks:
- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
  * Specification data may not be directly related to their components signals/values/operations.
  i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.

MONITOR ITEM	CONDITION		SPECIFICATION
ENG SPEED	● Tachometer: Connect ● Run engine and compare CONSULT-II value with the tachometer indication.		Almost the same speed as the tachometer indication.
B/FUEL SCHDL	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	2.5 - 3.5 msec
		2,000 rpm	2.5 - 3.5 msec
A/F ALPHA-B1	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	54% - 155%
COOLAN TEMP/S	● Engine: After warming up		More than 70°C (158°F)
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 MNTR (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	LEAN ←→ RICH
VEH SPEED SE	● Turn drive wheels and compare CONSULT-II value with the speedometer indication.		Almost the same speed as the speedometer indication.
BATTERY VOLT	● Ignition switch: ON (Engine stopped)		11 - 14V
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
THRTL SEN1 THRTL SEN2*1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	More than 0.36V
	● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully depressed	Less than 4.75V
TURBO BST SEN	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	At idle	Approximately 1.5V
		At 2,500 rpm	Approximately 1.2V
START SIGNAL	● Ignition switch: ON → START → ON		OFF → ON → OFF
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF
AIR COND SIG	● Engine: After warming up, idle the engine	Air conditioner switch: OFF	OFF
		Air conditioner switch: ON (Compressor operates.)	ON
P/N POSI SW	● Ignition switch: ON	Shift lever: P or N (A/T models) Neutral (M/T models)	ON
		Shift lever: Except above	OFF
PW/ST SIGNAL	● Engine: After warming up, idle the engine	Steering wheel is in neutral position. (Forward direction)	OFF
		Steering wheel is turned.	ON
LOAD SIGNAL	● Ignition switch: ON	Rear window defogger switch is ON and/or lighting switch is in 2nd.	ON
		Rear window defogger switch is OFF and lighting switch is OFF.	OFF
IGNITION SW	● Ignition switch: ON → OFF → ON		ON → OFF → ON
HEATER FAN SW	● Engine: After warming up, idle the engine	Heater fan is operating.	ON
		Heater fan is not operating	OFF
BRAKE SW	● Ignition switch: ON	Brake pedal: Fully released	OFF
		Brake pedal: Slightly depressed	ON

MONITOR ITEM	CONDITION		SPECIFICATION
INJ PULSE-B1	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	2.0 - 3.0 msec
		2,000 rpm	1.9 - 2.9 msec
IGN TIMING	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	0° - 10° BTDC
		2,000 rpm	25° - 45° BTDC
CAL/LD VALUE	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	10% - 35%
		2,500 rpm	10% - 35%
MASS AIRFLOW	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	1.0 - 4.0 g·m/s
		2,500 rpm	4.0 - 10.0 g·m/s
PURG VOL C/V	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	0%
		2,000 rpm	20 - 30%
INT/V TIM (B1)	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	–5° - 5°CA
		When revving up to 2,000 rpm quickly	Approx. 0° - 20°CA
INT/V SOL (B1)	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	0% - 2%
		When revving up to 2,000 rpm quickly	Approx. 0% - 50%
AIR COND RLY	● Engine: After warming up, idle the engine	Air conditioner switch: OFF	OFF
		Air conditioner switch: ON (Compressor operates)	ON
FUEL PUMP RLY	● For 1 second after turning ignition switch ON ● Engine running or cranking		ON
	● Except above conditions		OFF
THRTL RELAY	● Ignition switch: ON		ON

MONITOR ITEM	CONDITION		SPECIFICATION
COOLING FAN	● Engine: After warming up, idle the engine ● Air conditioner switch: OFF	Engine coolant temperature is 94°C (201°F) or less	OFF
		Engine coolant temperature is between 95°C (203°F) and 104°C (210°F)	LOW*2
		Engine coolant temperature is 105°C (212°F) or more	HIGH*2
HO2S1 HTR (B1)	● Engine: After warming up ● Engine speed: Below 3,600 rpm		ON
	● Engine speed: Above 3,600 rpm		OFF
HO2S2 HTR (B1)	● Engine speed is below 3,800 rpm (M/T models), 3,600 rpm (A/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.		ON
	● Engine speed: Above 3,800 rpm (M/T models), 3,600 rpm (A/T models)		OFF
TRVL AFTER MIL	● Ignition switch: ON	Vehicle has traveled after MI has turned ON.	0 - 65,535 km (0 - 40,723 mile)
O2SEN HTR DTY	● Engine coolant temperature when engine started: More than 80°C (176°F) ● Engine speed: below 3,600 rpm		Approx. 50%
AC PRESS SEN	● Ignition switch: ON (Engine stopped)		Approx. 0V
	● Engine: Idle ● Air conditioner switch: OFF		1.0 - 4.0V

*1 : Accelerator pedal position sensor 2 signal and throttle position sensor 2 signal are converted by ECM internally. Thus, they differ from ECM terminals voltage signal.
*2: Models without air conditioner, cooling fan operates only ON and OFF operation, but CONSULT-II display will change OFF, LOW and HI depends on engine coolant temperature.

Major Sensor Reference Graph in Data Monitor Mode

EBS00O3S

The following are the major sensor reference graphs in “DATA MONITOR” mode.

CLSD THL POS, ACCEL SEN 1, THRTL SEN 1

Below is the data for “CLSD THL POS”, “ACCEL SEN 1” and “THRTL SEN 1” when depressing the accelerator pedal with the ignition switch ON and with selector lever in D position (A/T models) or with shift lever in 1st position (M/T models).
The signal of “ACCEL SEN 1” and “THRTL SEN 1” should rise gradually without any intermittent drop or rise after “CLSD THL POS” is changed from “ON” to “OFF”.

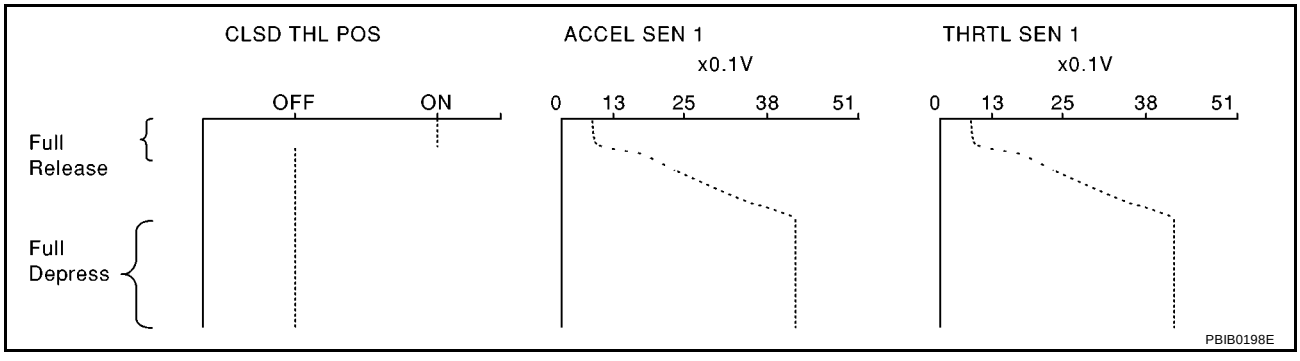

ENG SPEED, THRTL SEN 1, HO2S2 (B1), HO2S1 (B1), INJ PULSE-B1

Below is the data for “ENG SPEED”, “THRTL SEN 1”, “HO2S2 (B1)”, “HO2S1 (B1)” and “INJ PULSE-B1” when revving engine quickly up to 4,800 rpm under no load after warming up engine sufficiently.

Each value is for reference, the exact value may vary.

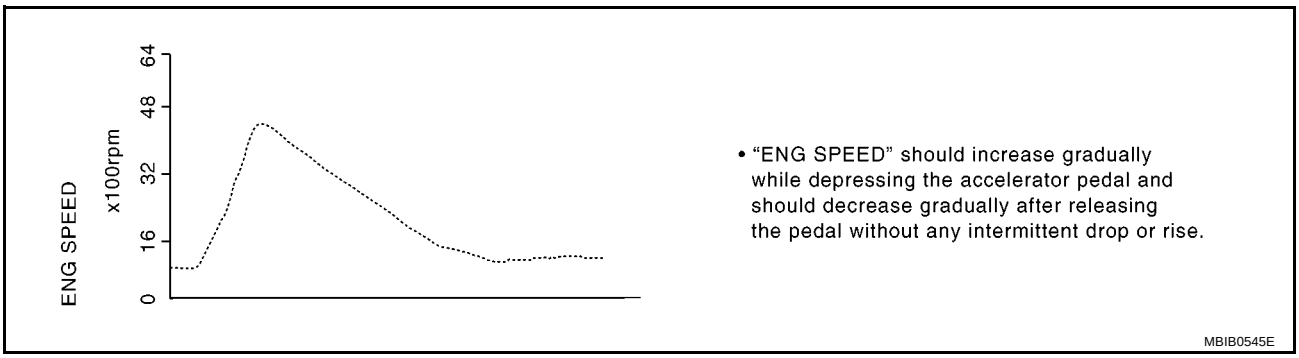

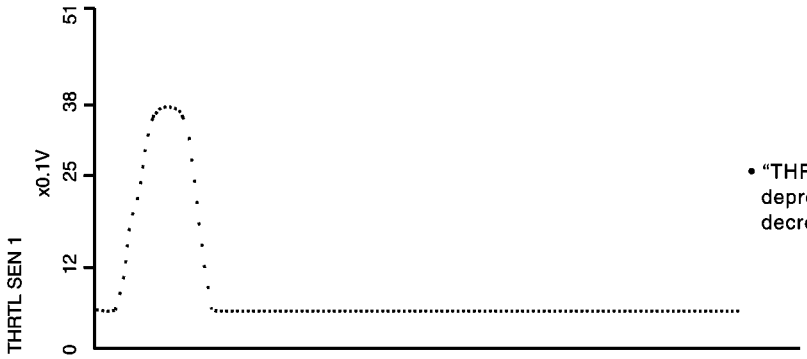

• "THRTL SEN 1" should increase while depressing the accelerator pedal and should decrease while releasing it.

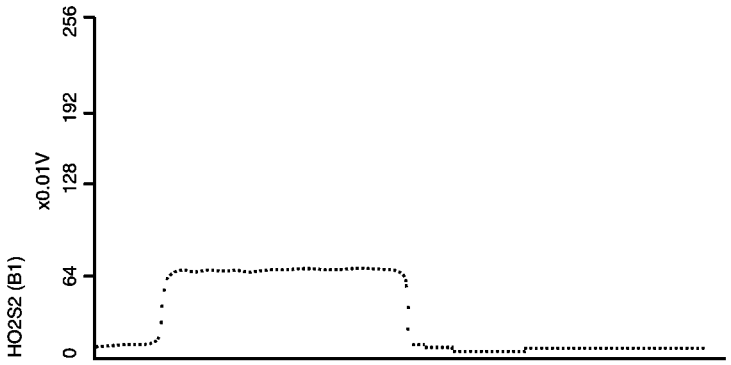

• "HO2S2 (B1)" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

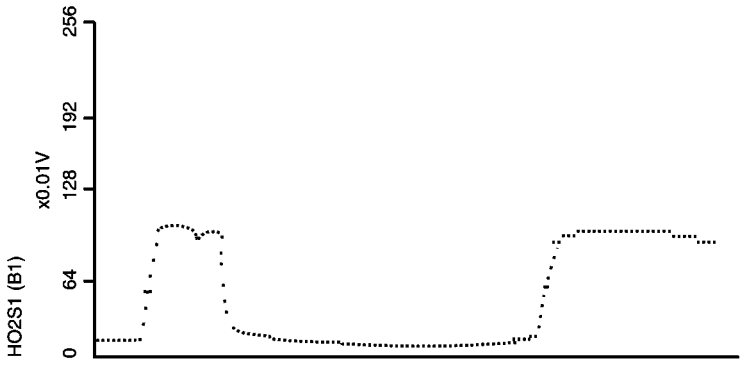

• "HO2S1 (B1)" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

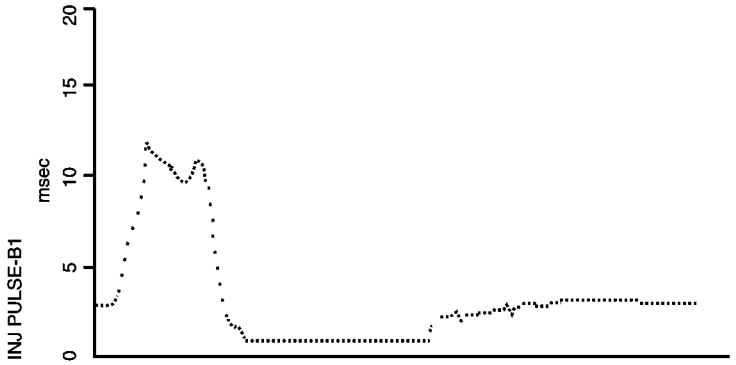

• "INJ PULSE-B1" should increase when depressing the accelerator pedal and should decrease when the pedal is released.

PBIB0668E

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

PFP:00031

Description

EBS00O3T

The specification (SP) value indicates the tolerance of the value that is displayed in “DATA MONITOR (SPEC)” mode of CONSULT-II during normal operation of the Engine Control System. When the value in “DATA MONITOR (SPEC)” mode is within the SP value, the Engine Control System is confirmed OK. When the value in “DATA MONITOR (SPEC)” mode is NOT within the SP value, the Engine Control System may have one or more malfunctions.
The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MI.
The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1 (The mean value of air-fuel ratio feedback correction factor per cycle)

Testing Condition

EBS00O3U

- Vehicle driven distance: More than 5,000 km (3,017 miles)
- Barometric pressure: 98.3 - 104.3 kPa (0.983 - 1.043 bar, 1.003 - 1.064 kg/cm^2 , 14.25 - 15.12 psi)
- Atmospheric temperature: 20 - 30°C (68 - 86°F)
- Engine coolant temperature: 75 - 95°C (167 - 203°F)
- Transmission: Warmed-up*1
- Electrical load: Not applied*2
- Engine speed: Idle

*1: For A/T models, after the engine is warmed up to normal operating temperature, drive vehicle until “FLUID TEMP SE” (A/T fluid temperature sensor signal) indicates more than 60°C (140°F).
For M/T models, after the engine is warmed up to normal operating temperature, drive vehicle for 5 minutes.
*2: Rear window defogger switch, air conditioner switch, lighting switch are “OFF”. Steering wheel is straight ahead.

Inspection Procedure

EBS00O3V

NOTE:
Perform “DATA MONITOR (SPEC)” mode in maximum scale display.

1. Perform EC-77, "Basic Inspection" .
2. Confirm that the testing conditions indicated above are met.
3. Select “B/FUEL SCHDL” and “A/F ALPHA-B1” in “DATA MONITOR (SPEC)” mode with CONSULT-II.
4. Make sure that monitor items are within the SP value.
5. If NG, go to EC-120, "Diagnostic Procedure" .

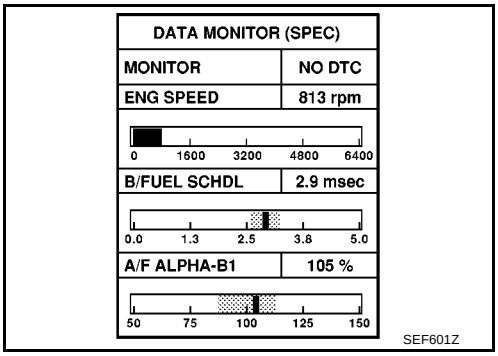

Diagnostic Procedure

EBS00O3W

CHECK A/F ALPHA–B1

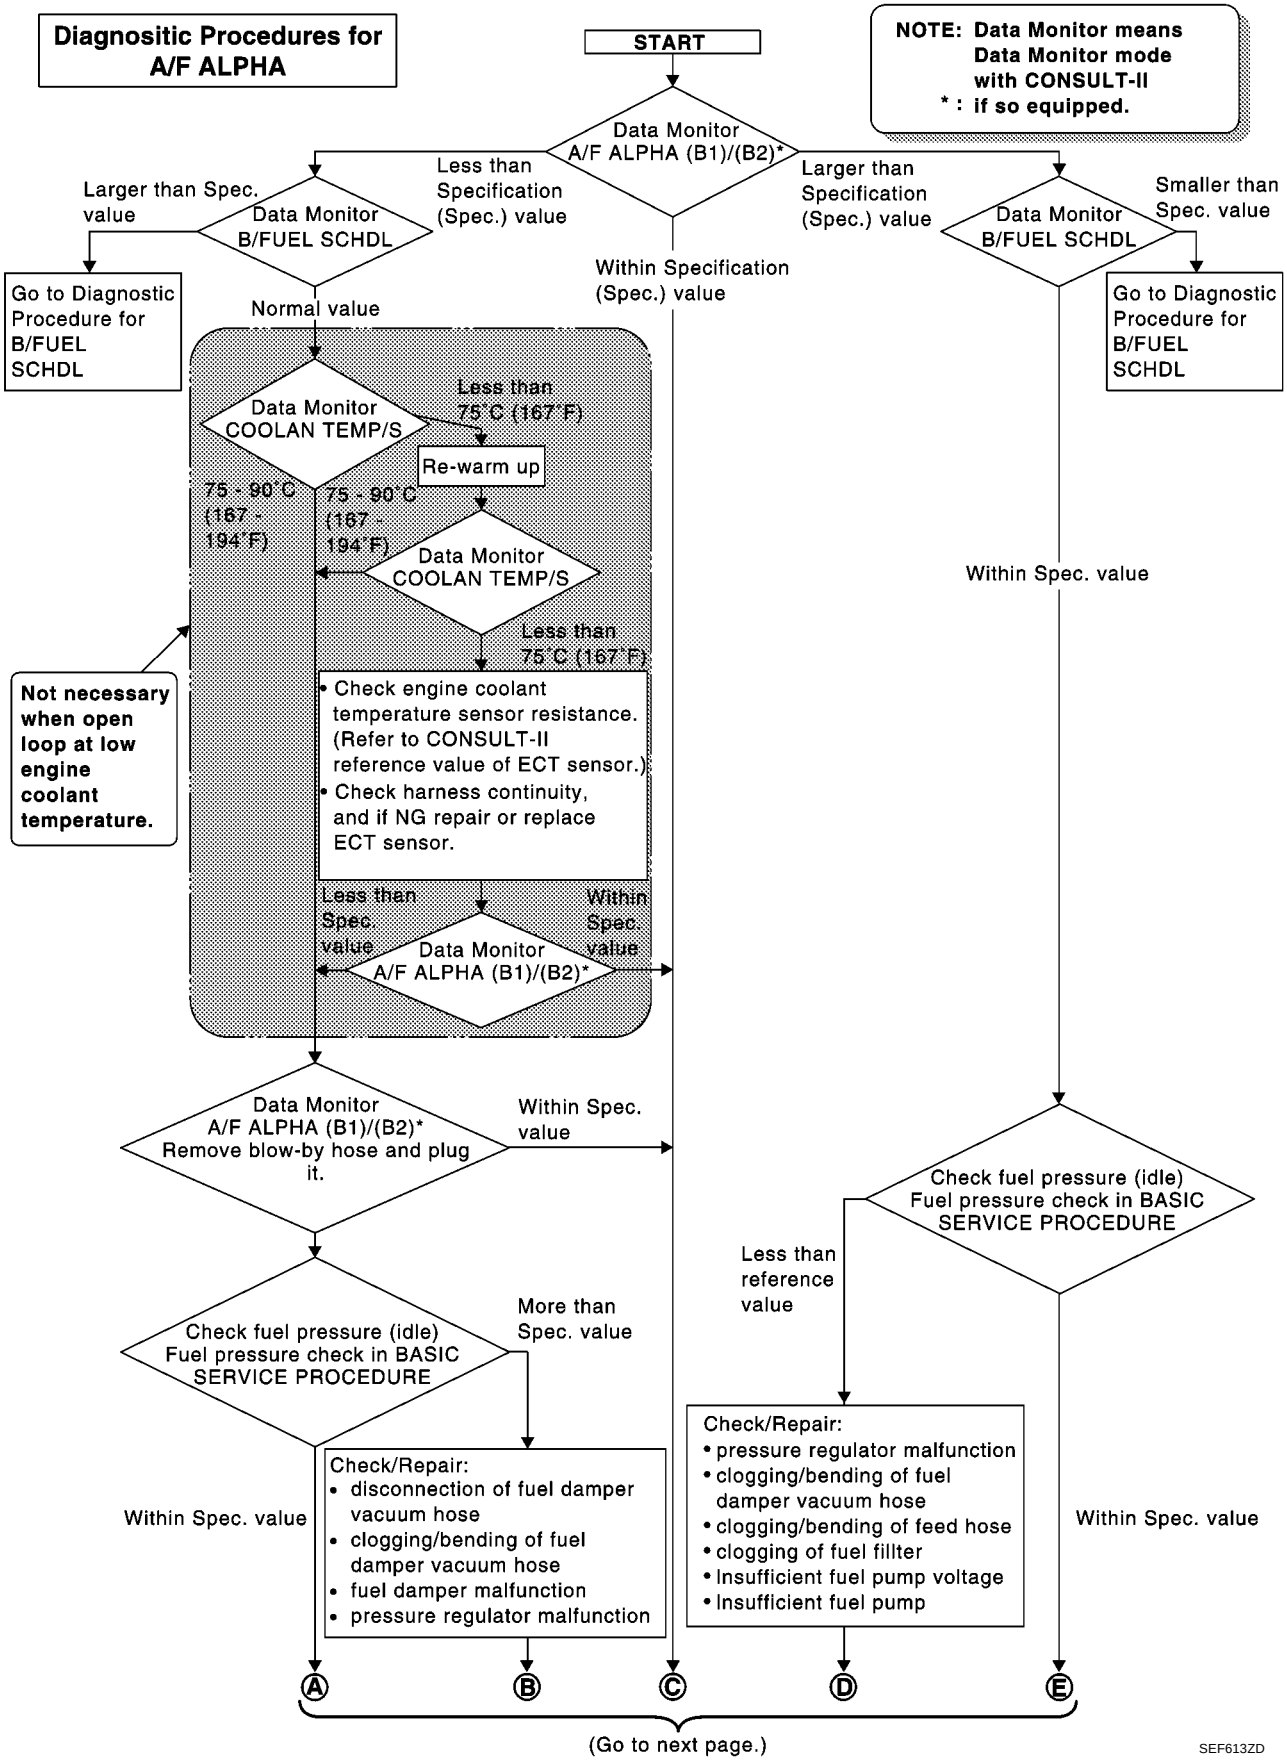

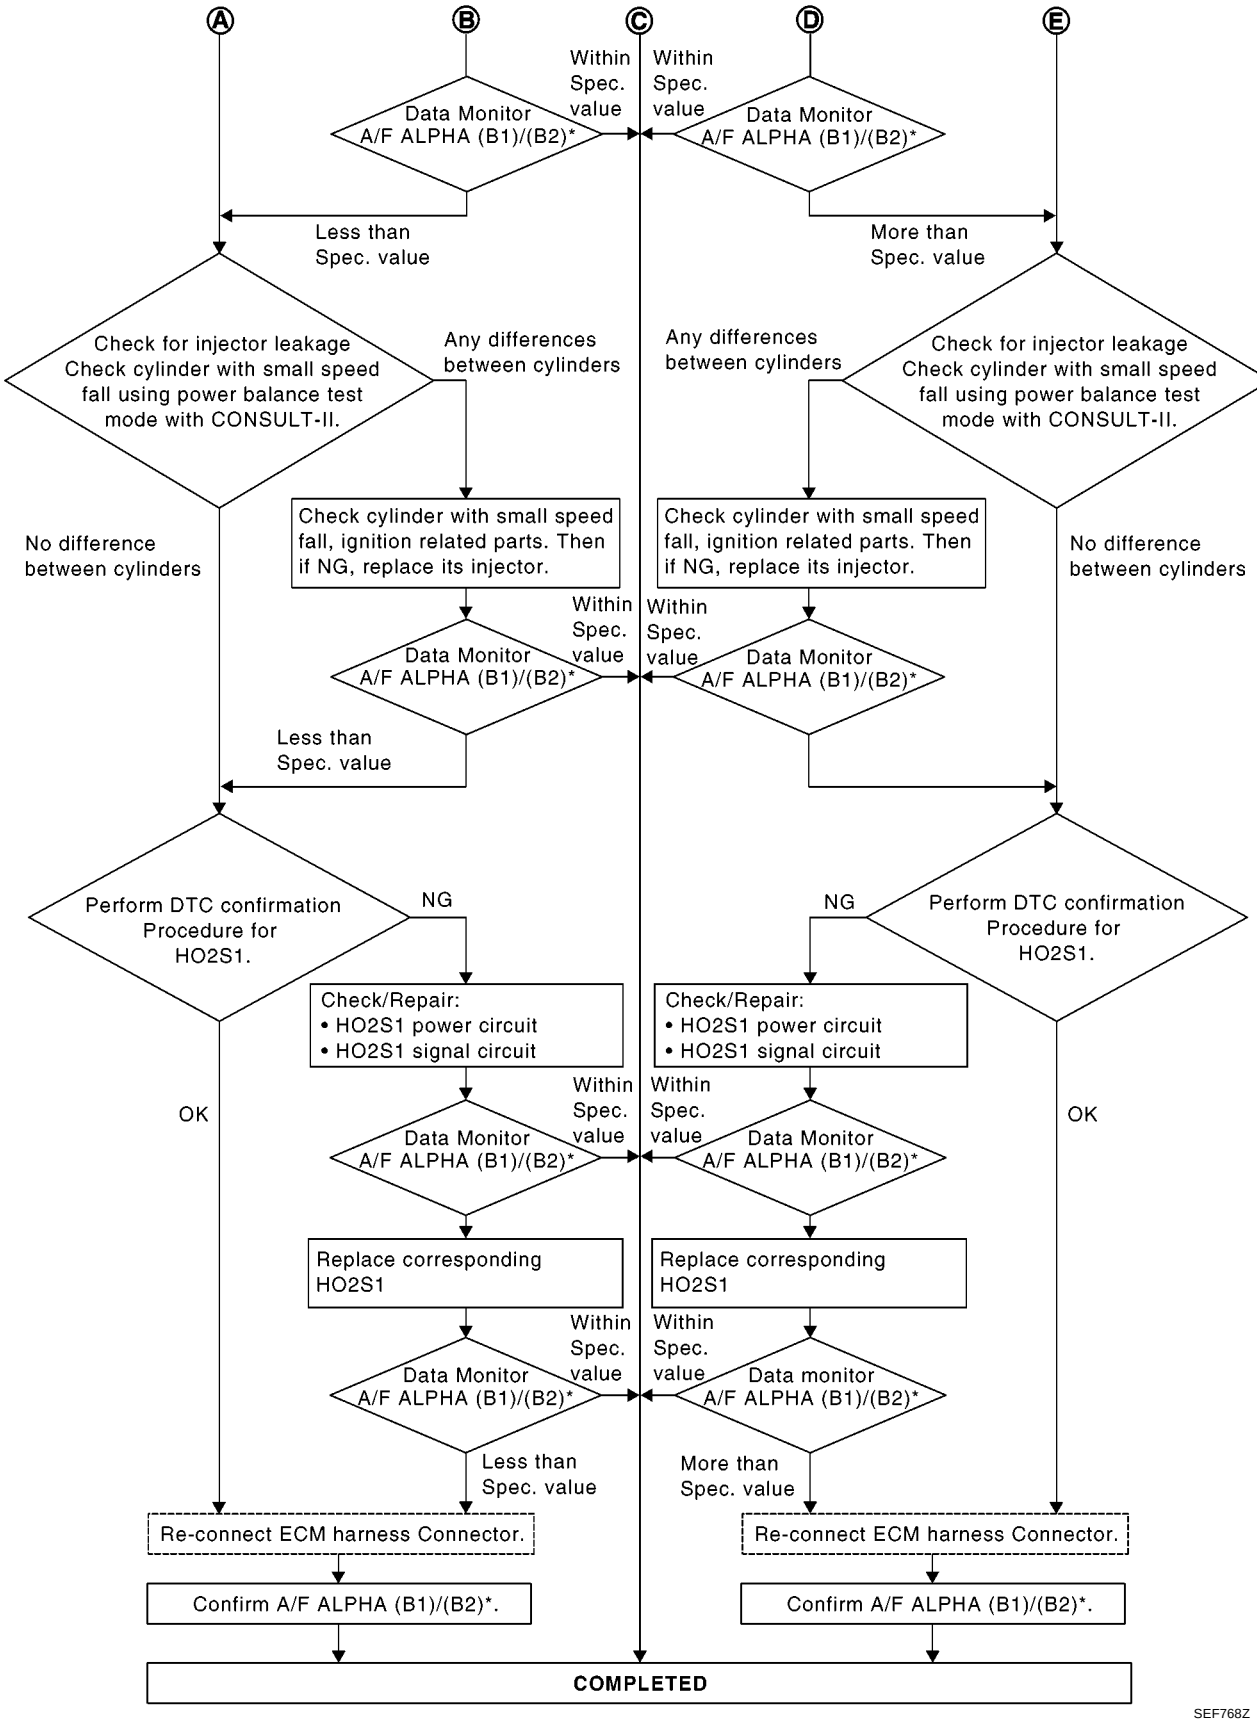
Ⓐ
Ⓑ
Ⓒ
Ⓓ
Ⓔ
Within Spec. value
Data Monitor A/F ALPHA (B1)/(B2)*
Less than Spec. value
More than Spec. value
Check for injector leakage Check cylinder with small speed fall using power balance test mode with CONSULT-II.
Any differences between cylinders
No difference between cylinders
Check cylinder with small speed fall, ignition related parts. Then if NG, replace its injector.
Perform DTC confirmation Procedure for HO2S1.
NG
OK
Check/Repair:
• HO2S1 power circuit
• HO2S1 signal circuit
Replace corresponding HO2S1
Data monitor A/F ALPHA (B1)/(B2)*
Re-connect ECM harness Connector.
Confirm A/F ALPHA (B1)/(B2)*.
COMPLETED
SEF768Z

CHECK B/FUEL SCHDL

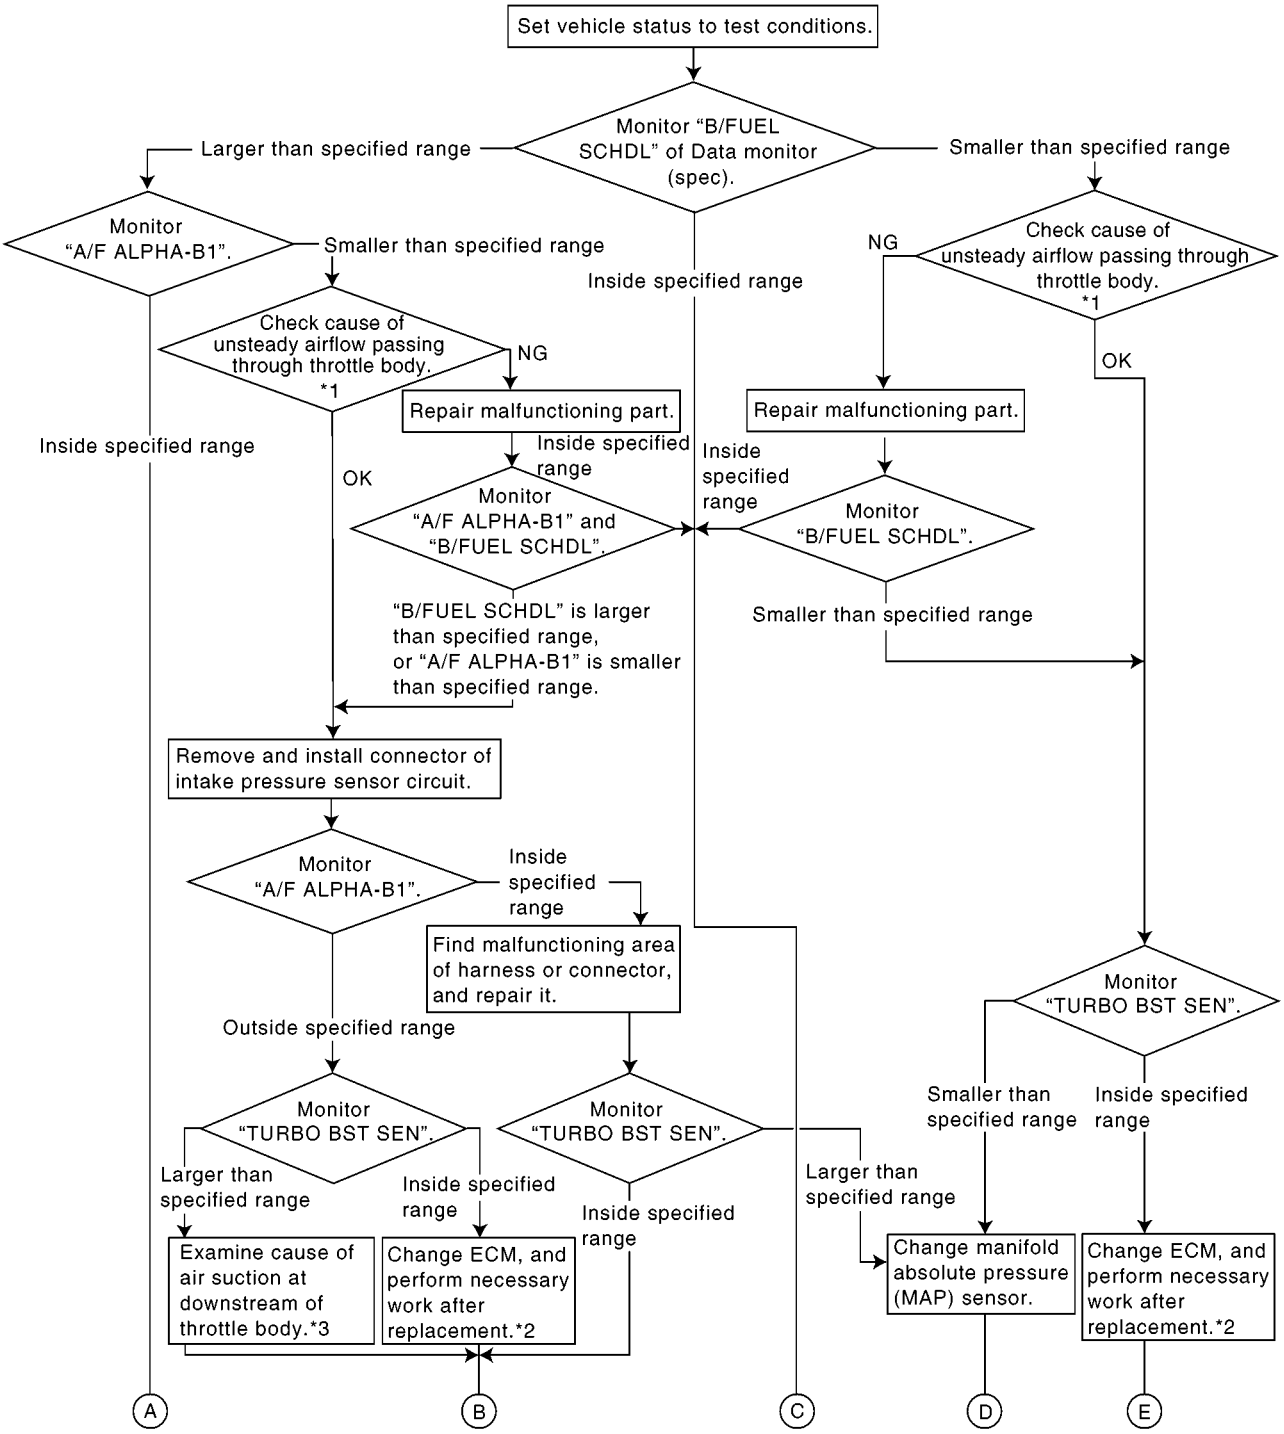

*1
Inspection Location
- Crushed air duct
- Improper sealing of air cleaner element
- Unevenly dirty air cleaner element
- Different specification of intake air system part

etc.

*2
Refer to ECM Removal and Installation procedure in Service Manual.

*3
Inspection Location
- Disconnection, looseness, or cracks of air duct
- Looseness of oil filler cap
- Disconnection of oil level gauge
- Open sticking, breakage, hose disconnection, or cracks of blow-by gas control valve
- Disconnection or cracks of EVAP canister purge hose, open sticking of EVAP canister purge volume control valve
- Improper sealing of rocker cover gasket
- Disconnection, looseness, or cracks of hoses, such as vacuum hose, connecting to intake air system parts.
- Improper sealing of intake air system part gasket

etc.

PBIA1516E

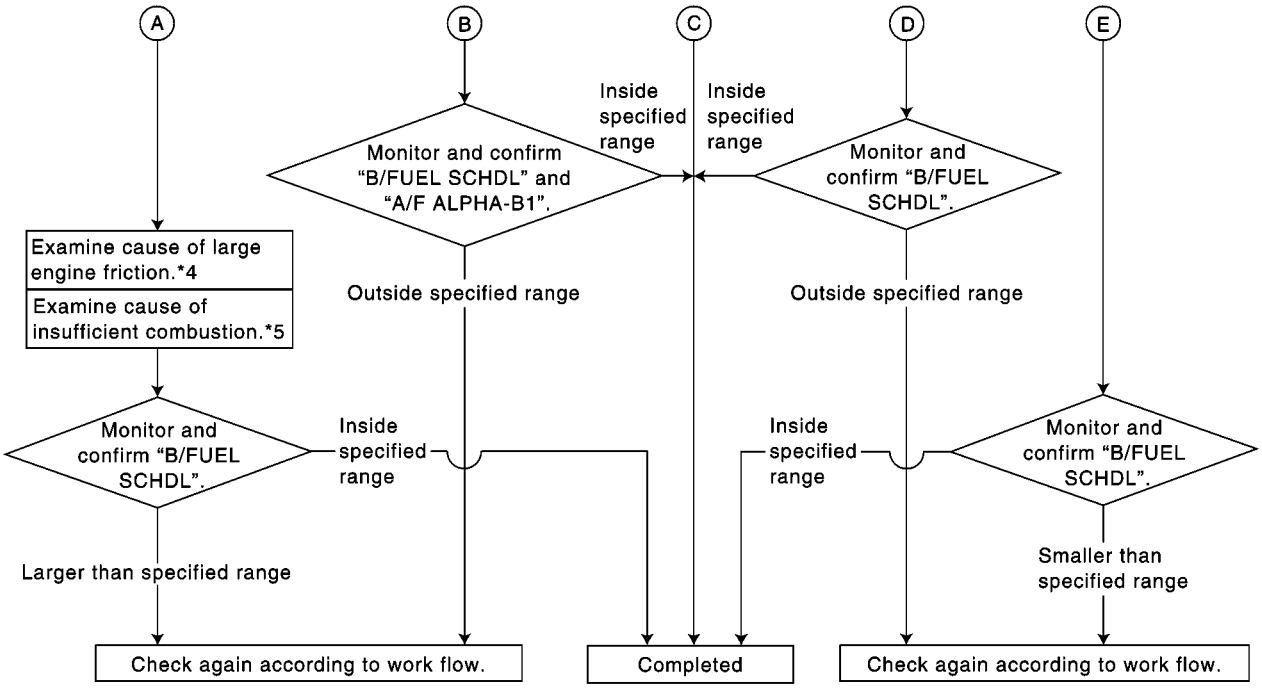

*4
Inspection Location
- Overhigh engine oil level
- Engine oil viscosity
- Over-tensioned belt of power steering, alternator, and air conditioner compressor, unusual noise, or binding of pulley
- Unusual noise of engine
- Unusual noise of gear change

etc.

*5
Inspection Location
- EGR valve sticking
- Improper valve clearance
- Malfunction of intake valve timing control function
- Improper installation of camshaft sprocket

etc.

MBIB0658E

TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT

PFP:00006

Description

EBS00O3X

Intermittent incidents (I/I) may occur. In many cases, the malfunction resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on (1st trip) DTC visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific malfunctioning area.

Common I/I Report Situations

STEP in Work Flow	Situation
II	The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than “0” or “[1t]”.
III	The symptom described by the customer does not recur.
IV	(1st trip) DTC does not appear during the DTC Confirmation Procedure.
VI	The Diagnostic Procedure for PXXXX does not indicate the malfunctioning area.

Diagnostic Procedure

EBS00O3Y

1. INSPECTION START

Erase (1st trip) DTCs. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .

>> GO TO 2.

2. CHECK GROUND TERMINALS

Check ground terminals for corroding or loose connection.
Refer to GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" , “Incident Simulation Tests”, “Ground Inspection”.

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. SEARCH FOR ELECTRICAL INCIDENT

Perform GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" , “Incident Simulation Tests”.

OK or NG

OK >> **INSPECTION END**
NG >> Repair or replace.

POWER SUPPLY CIRCUIT FOR ECM

PFP:24110

Wiring Diagram

EBS00O3Z

EC-MAIN-01

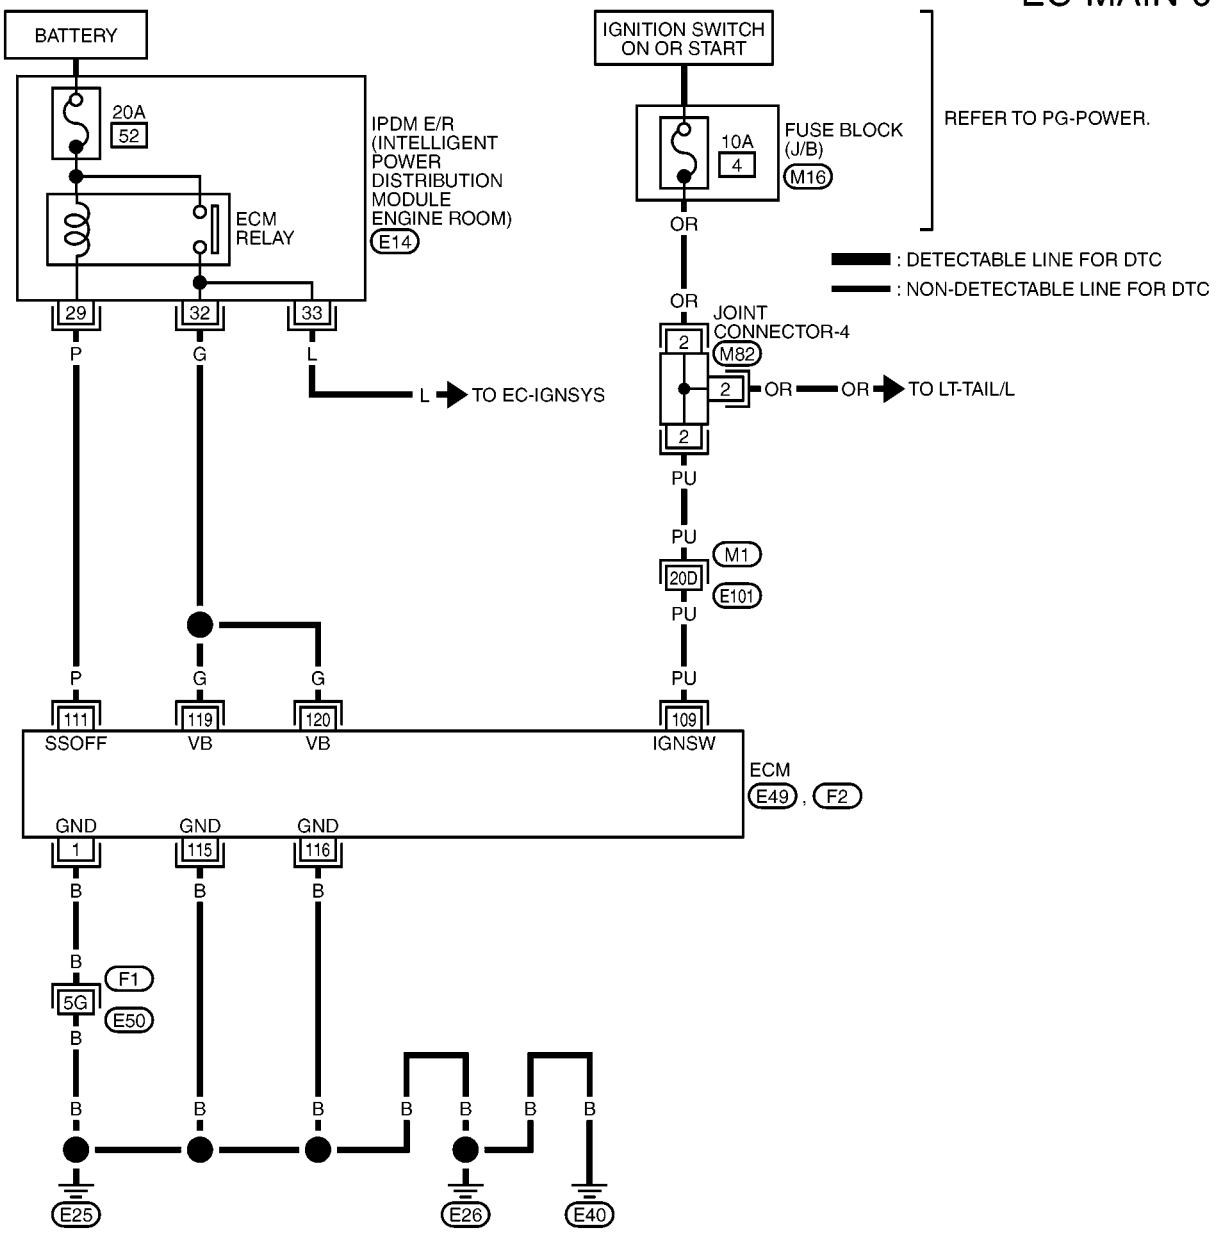

REFER TO THE FOLLOWING.
M1 , F1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)

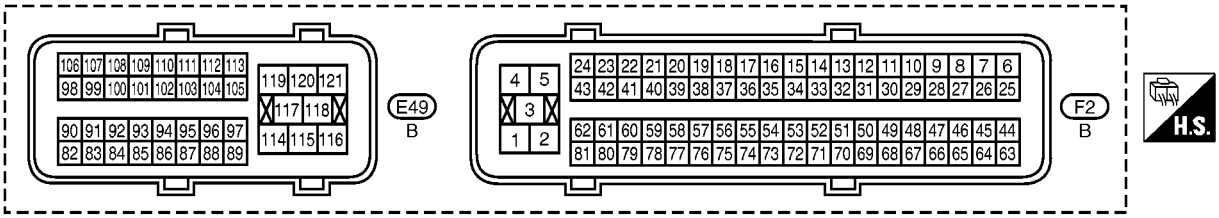

MBWA0570E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1 115 116	B B B	ECM ground	**[Engine is running]** ● Idle speed	Engine ground
109	PU	Ignition switch	**[Ignition switch OFF]**	0V
			[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
111	P	ECM relay (Self shut-off)	**[Engine is running]** **[Ignition switch OFF]** ● For a few seconds after turning ignition switch OFF	0 - 1.0V
			[Ignition switch OFF] ● More than a few seconds passed after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
119 120	G G	Power supply for ECM	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00O40

1. INSPECTION START

Start engine.

Is engine running?

Yes or No

Yes >> GO TO 8.
No >> GO TO 2.

2. CHECK ECM POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF and then ON.
2. Check voltage between ECM terminal 109 and ground with CONSULT-II or tester.

Voltage: Battery voltage

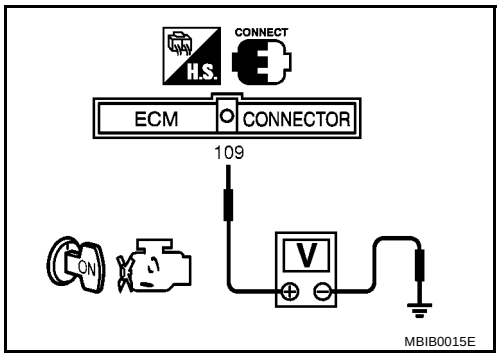

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101
- Fuse block (J/B) connector M16
- Joint connector-4
- 10A fuse
- Harness for open or short between ECM and fuse

>> Repair harness or connectors.

4. CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-I

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminals 1, 115, 116 and engine ground. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- Harness for open or short between ECM and engine ground

>> Repair open circuit or short to power in harness or connectors.

6. CHECK ECM POWER SUPPLY CIRCUIT-II

1. Reconnect ECM harness connector.
2. Turn ignition switch ON.
3. Check voltage between IPDE E/R harness connector E14 terminal 33 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> Go to EC-435, "IGNITION SIGNAL" .
NG >> GO TO 7.

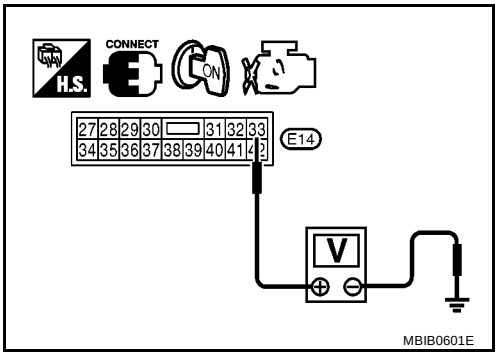

7. CHECK ECM POWER SUPPLY CIRCUIT-III

1. Turn ignition switch ON and then OFF.
2. Check voltage between ECM terminals 119, 120 and ground with CONSULT-II or tester.

Voltage: After turning ignition switch OFF, battery voltage will exist for a few seconds, then drop approximately 0V.

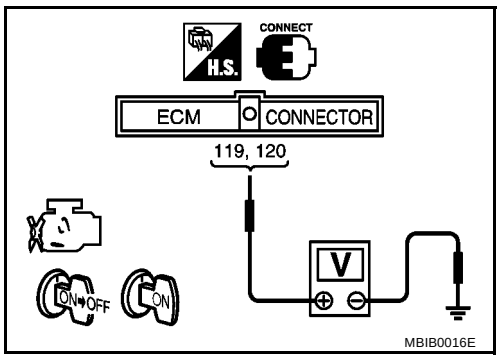

OK or NG

OK >> GO TO 13.
NG (Battery voltage does not exist.)>>GO TO 8.
NG (Battery voltage exists for more than a few seconds.)>>GO TO 13.

8. CHECK ECM POWER SUPPLY CIRCUIT-IV

1. Turn ignition switch OFF.
2. Check voltage between ECM terminal 111 and ground with CONSULT-II or tester.

Voltage: Battery voltage

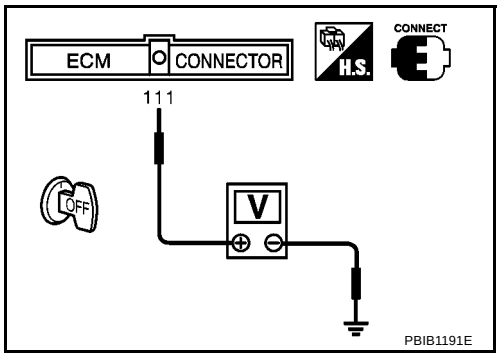

OK or NG

OK >> GO TO 11.
NG >> GO TO 9.

9. CHECK ECM POWER SUPPLY CIRCUIT-V

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector.
3. Check harness continuity between ECM terminal 111 and IPDM E/R terminal 29. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 10.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK 20A FUSE

1. Disconnect 20A fuse from IPDM E/R.
2. Check 20A fuse.

OK or NG

OK >> GO TO 13.
NG >> Replace 20A fuse.

11. CHECK ECM POWER SUPPLY CIRCUIT-VI

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector.
3. Check harness continuity between ECM terminals 119, 120 and IPDM E/R terminal 32. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 12.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

12. CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminals 1, 115, 116 and engine ground. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to power.

OK or NG

OK >> GO TO 13.
NG >> Repair open circuit or short to power in harness or connectors.

13. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R.
NG >> Repair open circuit or short to power in harness or connectors.

DTC U1000, U1001 CAN COMMUNICATION LINE

PFP:23710

Description

EBS00O42

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

EBS00O43

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U1000*1 1000*1	CAN communication line	● ECM cannot communicate to other control units. ● ECM cannot communicate for more than the specified time.	● Harness or connectors (CAN communication line is open or shorted.)
U1001*2 1001*2			

*1:This self-diagnosis has the one trip detection logic.
*2:The MI will not light up for this self-diagnosis.

DTC Confirmation Procedure

EBS00O44

1. Turn ignition switch ON and wait at least 3 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. If 1st trip DTC or DTC is detected, go to EC-132, "Diagnostic Procedure" .

Wiring Diagram

EBS00O45

EC-CAN-01

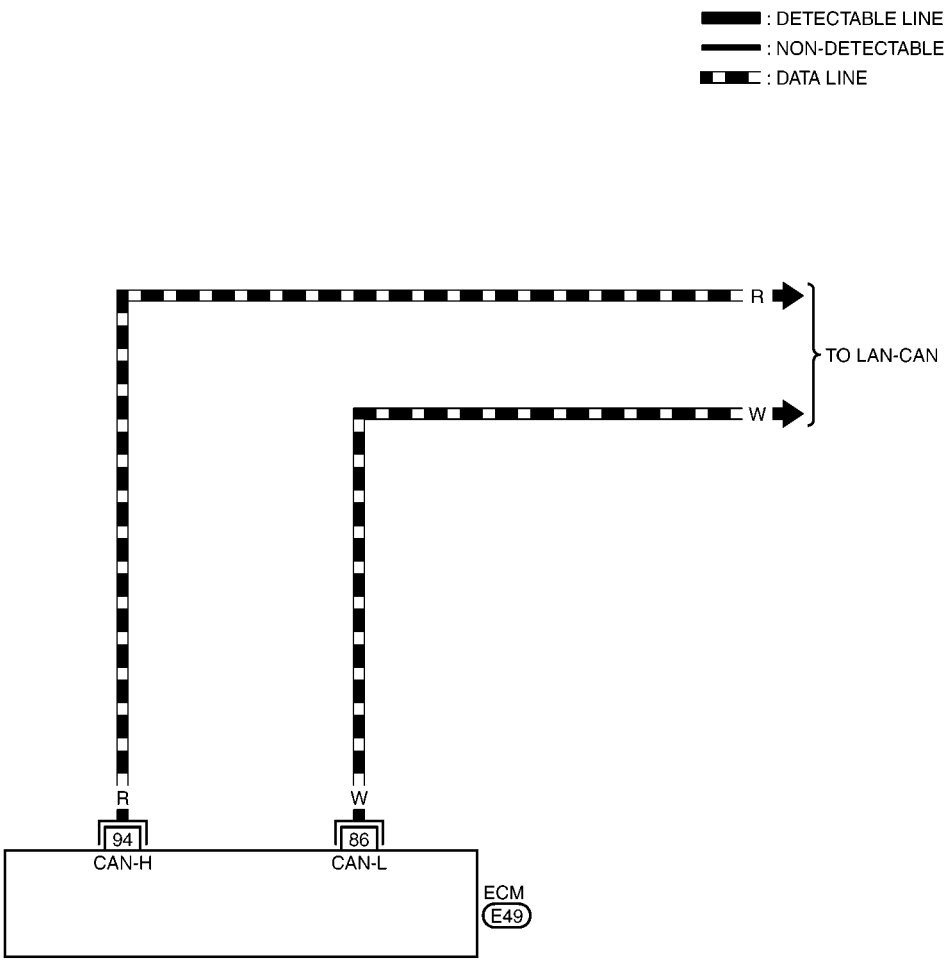

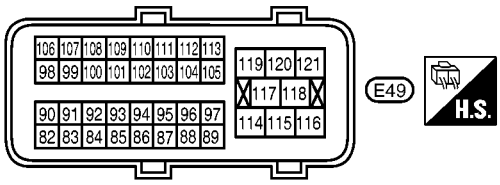

MBWA0268E

Diagnostic Procedure

EBS00O46

Go to LAN-4, "Precautions When Using CONSULT-II" .

DTC P0011 IVT CONTROL

PFP:23796

Description

EBS00O47

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS)	Engine speed	Intake valve timing control	Intake valve timing control solenoid valve
Camshaft position sensor (PHASE)			
Engine coolant temperature sensor	Engine coolant temperature		
Vehicle speed signal*	Vehicle speed		

*: This signal is sent to the ECM through CAN communication line.

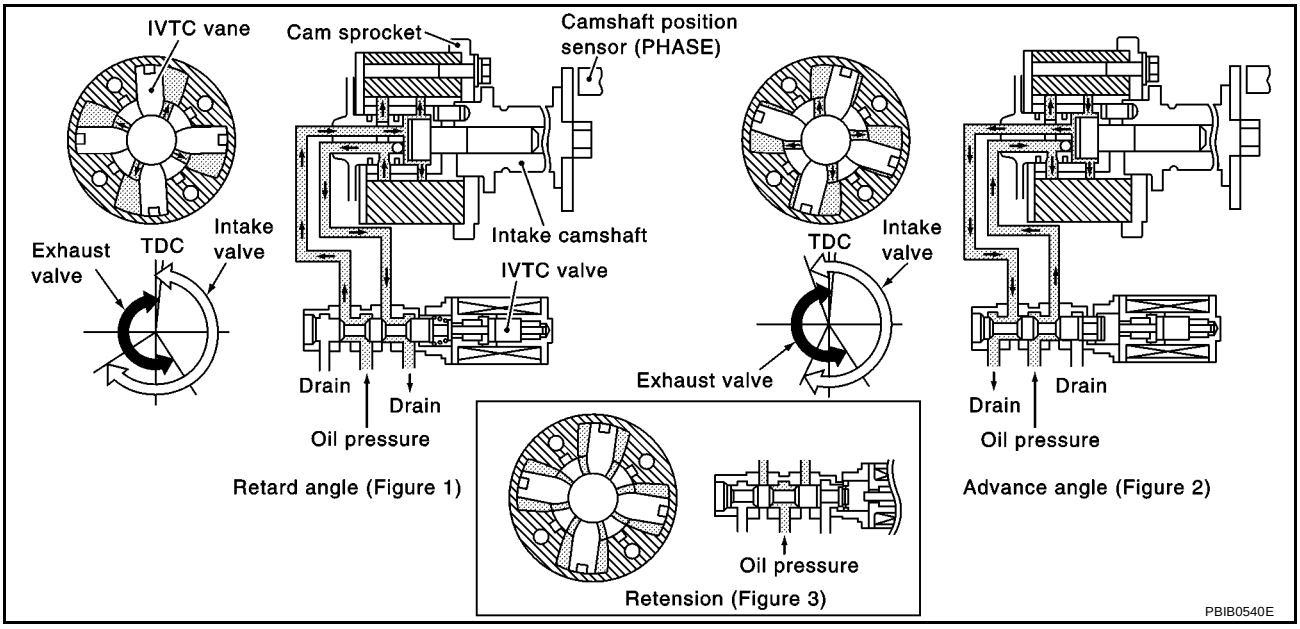

This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intake valve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolant temperature. Then, the ECM sends ON/OFF pulse duty signals to the intake valve timing control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

CONSULT-II Reference Value in Data Monitor Mode

EBS00O48

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
INT/V TIM (B1)	● Engine: After warming up ● Shift lever: N (A/T), Neutral (M/T) ● Air conditioner switch: OFF ● No load	Idle	–5° - 5°CA
		When revving up to 2,000 rpm quickly	Approx. 0° - 20°CA
INT/V SOL (B1)	● Engine: After warming up ● Shift lever: N (A/T), Neutral (M/T) ● Air conditioner switch: OFF ● No load	Idle	0% - 2%
		When revving up to 2,000 rpm quickly	Approx. 0% - 50%

On Board Diagnosis Logic

EBS00O49

The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	Detecting condition	Possible cause
P0011 0011	Intake valve timing control performance	There is a gap between angle of target and phase-control angle degree.	● Crankshaft position sensor (POS) ● Camshaft position sensor (PHASE) ● Accumulation of debris to the signal pick-up portion of the camshaft

FAIL-SAFE MODE

ECM enters fail-safe mode when the malfunction is detected.

Detected items	Engine operating condition in fail-safe mode
Intake valve timing control	The signal is not energized to the solenoid valve and the valve control does not function

DTC Confirmation Procedure

EBS00O4A

CAUTION:
Always drive at a safe speed.

NOTE:

- **If DTC P0011 is displayed with DTC P1111, first perform trouble diagnosis for DTC P1111. See EC-293 .**
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is between 10V and 16V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Maintain the following conditions for at least 20 consecutive seconds.

ENG SPEED	1,700 - 3,175 rpm (A constant rotation is maintained.)
COOLANT TEMPS	70 - 105°C (148 - 221°F)
Selector lever	1st or 2nd position
Driving location uphill	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)

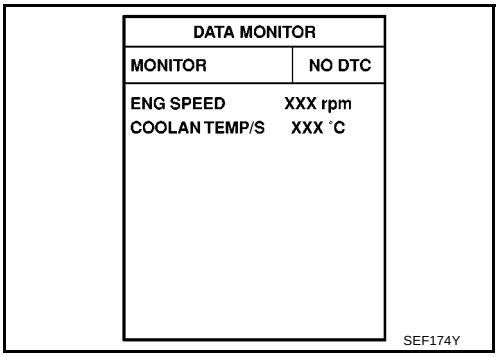

4. If 1st trip DTC is detected, go to EC-135, "Diagnostic Procedure" .

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Diagnostic Procedure

EBS00O4B

1. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-265, "Component Inspection" .

OK or NG

OK >> GO TO 2.
NG >> Replace crankshaft position sensor (POS).

2. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-271, "Component Inspection" .

OK or NG

OK >> GO TO 3.
NG >> Replace camshaft position sensor (PHASE).

3. CHECK CAMSHAFT (INTAKE)

Check the following.

- Accumulation of debris to the signal plate of camshaft rear end
- Chipping signal plate of camshaft rear end

OK or NG

OK >> GO TO 4.
NG >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

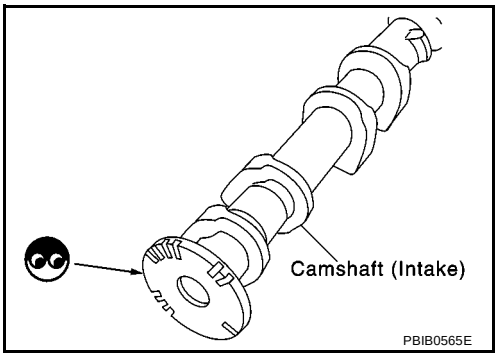

4. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .
For wiring diagram refer to CKP sensor (POS) EC-262 and CMP sensor (PHASE) EC-268 .

>> **INSPECTION END**

DTC P0031, P0032 HO2S1 HEATER

PFP:22690

Description

EBS00O4C

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 1 heater control	Heated oxygen sensor 1 heater
Engine coolant temperature sensor	Engine coolant temperature		

The ECM performs ON/OFF duty control of the heated oxygen sensor 1 heater corresponding to the engine speed and engine coolant temperature. The duty percent varies with engine coolant temperature when engine is started.

OPERATION

Engine speed rpm	Heated oxygen sensor 1 heater
Above 3,600	OFF
Below 3,600 after warming up	ON

CONSULT-II Reference Value in Data Monitor Mode

EBS00O4D

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 HTR (B1)	● Engine: After warming up ● Engine speed: Below 3,600 rpm	ON
	● Engine speed: Above 3,600 rpm	OFF

On Board Diagnosis Logic

EBS00O4E

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0031 0031	Heated oxygen sensor 1 heater control circuit low	The current amperage in the heated oxygen sensor 1 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 1 heater.)	● Harness or connectors (The heated oxygen sensor 1 heater circuit is open or shorted.) ● Heater oxygen sensor 1 heater
P0032 0032	Heated oxygen sensor 1 heater control circuit high	The current amperage in the heated oxygen sensor 1 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 1 heater.)	● Harness or connectors (The heated oxygen sensor 1 heater circuit is shorted.) ● Heater oxygen sensor 1 heater

DTC Confirmation Procedure

EBS00O4F

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.

3. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
4. Start engine and run it for at least 6 seconds at idle speed.
5. If 1st trip DTC is detected, go to EC-139, "Diagnostic Procedure" .

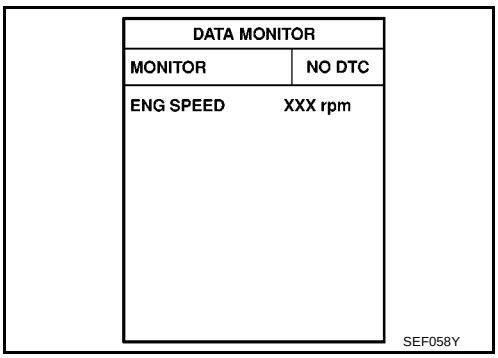

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and run it for at least 6 seconds at idle speed.
4. Turn ignition switch OFF and wait at least 10 seconds.
5. Start engine and run it for at least 6 seconds at idle speed.
6. Select “MODE 3” with GST.
7. If DTC is detected, go to EC-139, "Diagnostic Procedure" .

- **When using GST, DTC Confirmation Procedure should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

Wiring Diagram

EBS00O4G

EC-HO2S1H-01

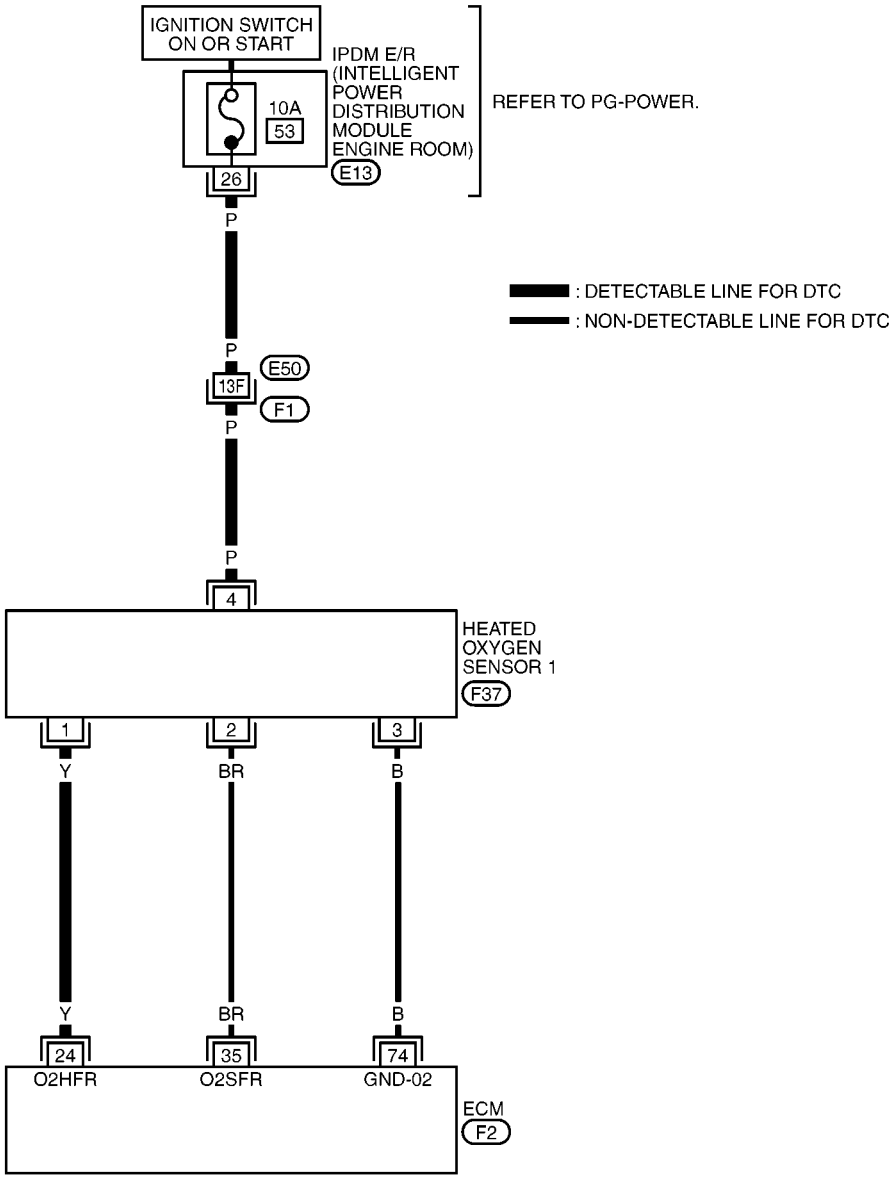

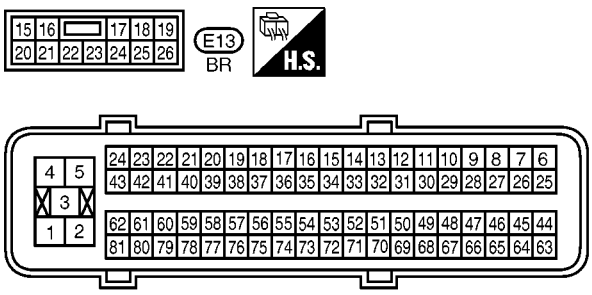

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0269E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
24	Y	Heated oxygen sensor 1 heater	**[Engine is running]** ● **Warm-up condition.** ● Engine speed is below 3,600 rpm.	Approximately 7.0V★ 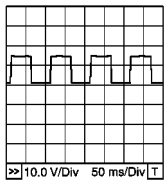 PBIB0519E
			[Engine is running] ● Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00O4H

1. CHECK HO2S1 POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 harness connector.
3. Turn ignition switch ON.

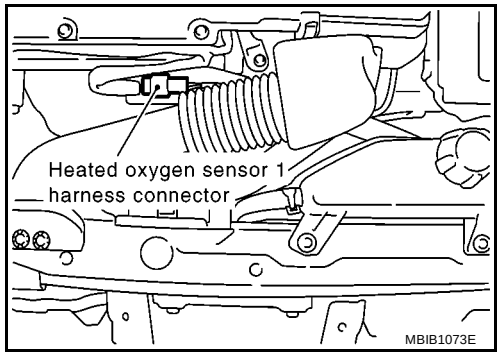

4. Check voltage between HO2S1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

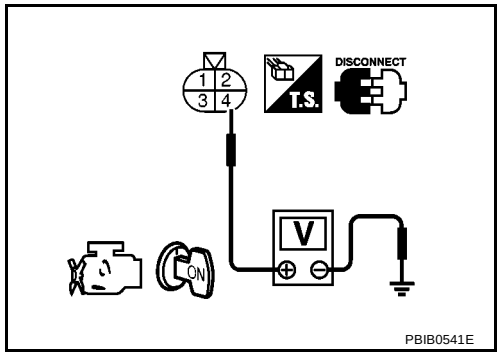

2. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R connector E13
- 10A fuse
- Harness for open or short between heated oxygen sensor 1 and fuse

>> Repair harness or connectors.

3. CHECK HO2S1 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 24 and HO2S1 terminal 1.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HEATED OXYGEN SENSOR 1 HEATER

Refer to EC-141, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace malfunctioning heated oxygen sensor 1.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O4I

HEATED OXYGEN SENSOR 1 HEATER

1. Check resistance between HO2S1 terminals as follows.

Terminal No.	Resistance
1 and 4	3.3 - 4.0 Ω at 25°C (77°F)
2 and 1, 3, 4	∞ Ω (Continuity should not exist)
3 and 1, 2, 4	

2. If NG, replace heated oxygen sensor 1.

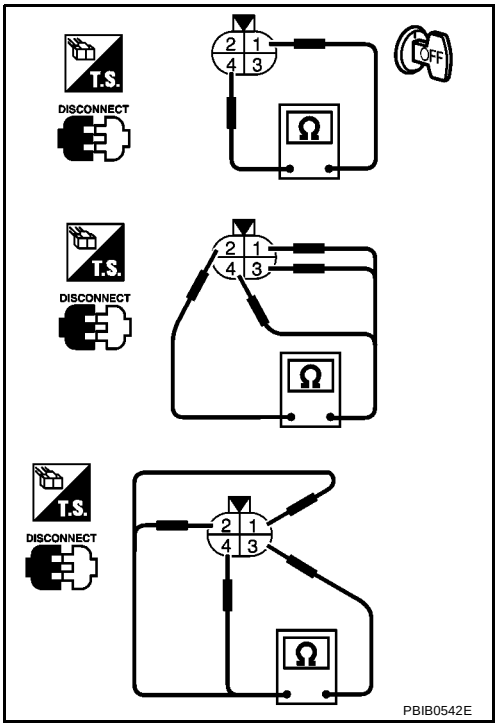

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00O4J

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P0037, P0038 HO2S2 HEATER

PFP:226A0

Description

EBS00O4K

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Camshaft position sensor (PHASE)	Engine speed	Heated oxygen sensor 2 heater control	Heated oxygen sensor 2 heater
Crankshaft position sensor (POS)			
Engine coolant temperature sensor	Engine coolant temperature		
Manifold absolute pressure (MAP) sensor	Amount of intake air		

OPERATION

Engine speed rpm	Heated oxygen sensor 2 heater
Above 3,600 (A/T models), 3,800 (M/T models)	OFF
Below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. ● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	ON

CONSULT-II Reference Value in Data Monitor Mode

EBS00O4L

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S2 HTR (B1)	● Engine speed is Below 3,600 rpm (A/T models) 3,800 rpm (M/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed at between 3,500 to 4,000 rpm for 1 minute and at idle for 1 minute under no load	ON
	● Engine speed: Above 3,600 rpm (A/T models), 3,800 rpm (M/T models)	OFF

On Board Diagnosis Logic

EBS00O4M

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0037 0037	Heated oxygen sensor 2 heater control circuit low	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	● Harness or connectors (The heated oxygen sensor 2 heater circuit is open or shorted.) ● Heater oxygen sensor 2 heater
P0038 0038	Heated oxygen sensor 2 heater control circuit high	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	● Harness or connectors (The heated oxygen sensor 2 heater circuit is shorted.) ● Heater oxygen sensor 2 heater

DTC Confirmation Procedure

EBS00O4N

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.
6. If 1st trip DTC is detected, go to EC-145, "Diagnostic Procedure" .

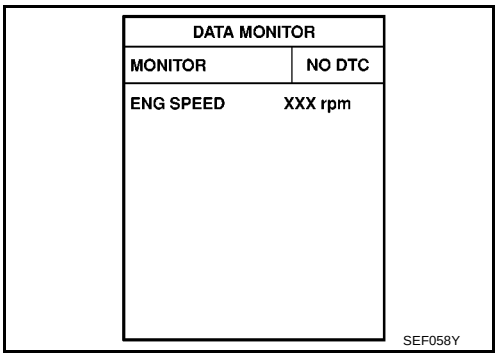

WITH GST

1. Start engine and warm it up the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
7. Let engine idle for 1 minute.
8. Select “MODE 3” with GST.
9. If DTC is detected, go to EC-145, "Diagnostic Procedure" .

- **When using GST, DTC Confirmation Procedure should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

Wiring Diagram

EBS00O4O

EC-HO2S2H-01

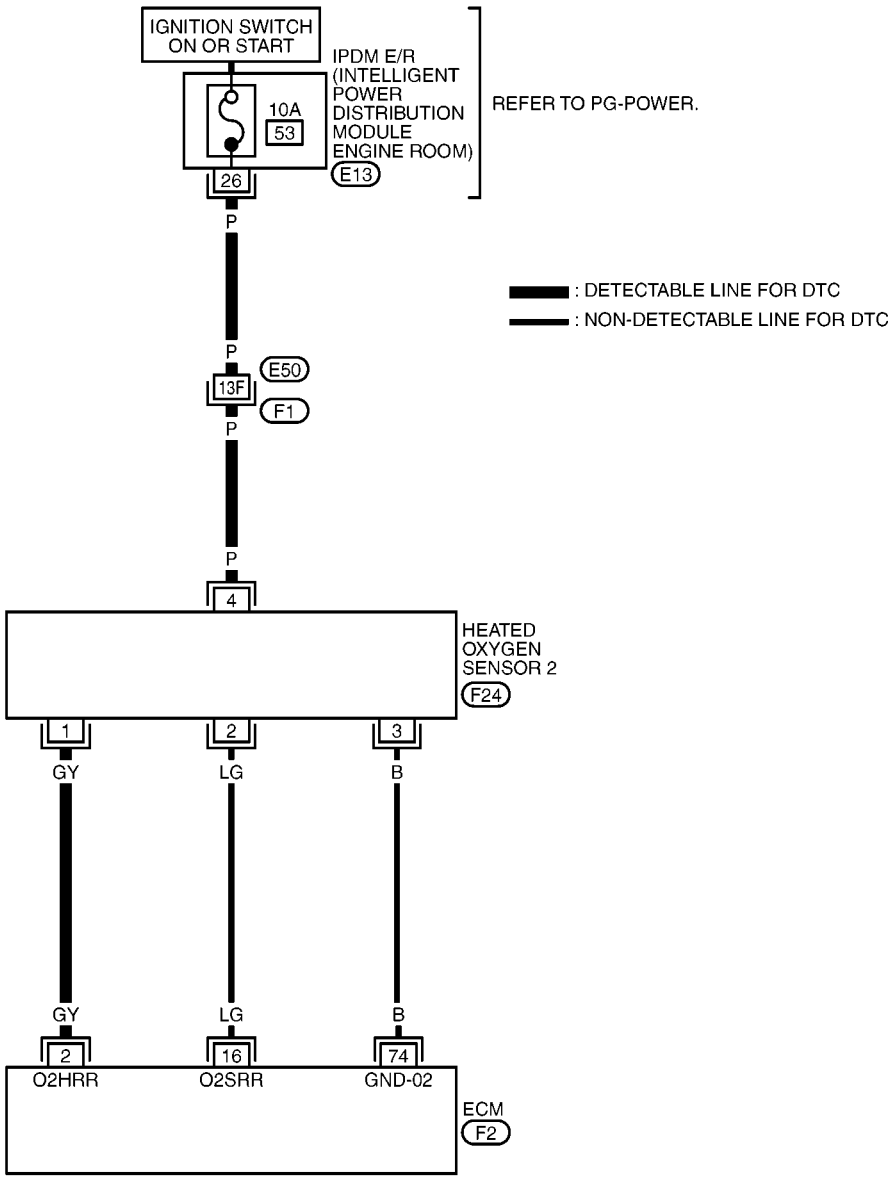

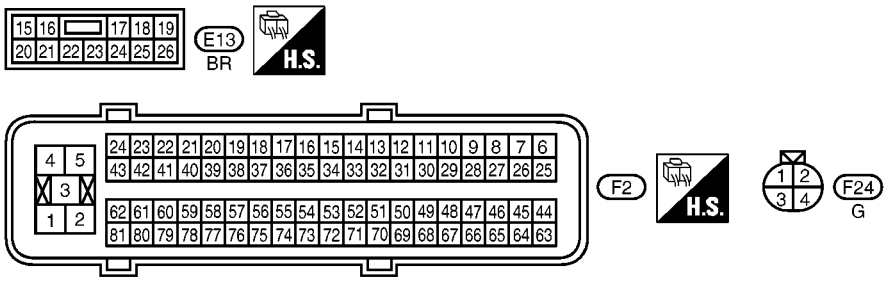

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0270E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
2	GY	Heated oxygen sensor 2 heater	**[Engine is running]** ● Engine speed is below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - 1.0V
			[Ignition switch "ON"] ● Engine stopped **[Engine is running]** ● Engine speed is above 3,600 rpm (A/T models), 3,800 rpm (M/T models).	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00O4P

1. CHECK HO2S2 POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Turn ignition switch ON.

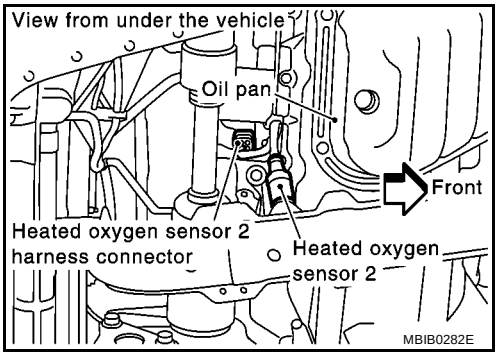

4. Check voltage between HO2S2 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

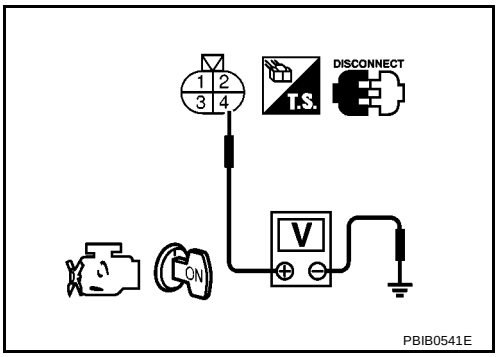

2. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R connector E13
- 10A fuse
- Harness for open or short between heated oxygen sensor 2 and fuse

>> Repair harness or connectors.

3. CHECK HO2S2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 2 and HO2S2 terminal 1.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HEATED OXYGEN SENSOR 2 HEATER

Refer to EC-147, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace malfunctioning heated oxygen sensor 2.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O4Q

HEATED OXYGEN SENSOR 2 HEATER

1. Check resistance between HO2S2 terminals as follows.

Terminal No.	Resistance
1 and 4	3.3 - 4.0 Ω at 25°C (77°F)
2 and 1, 3, 4	∞ Ω (Continuity should not exist)
3 and 1, 2, 4	

2. If NG, replace heated oxygen sensor 2.

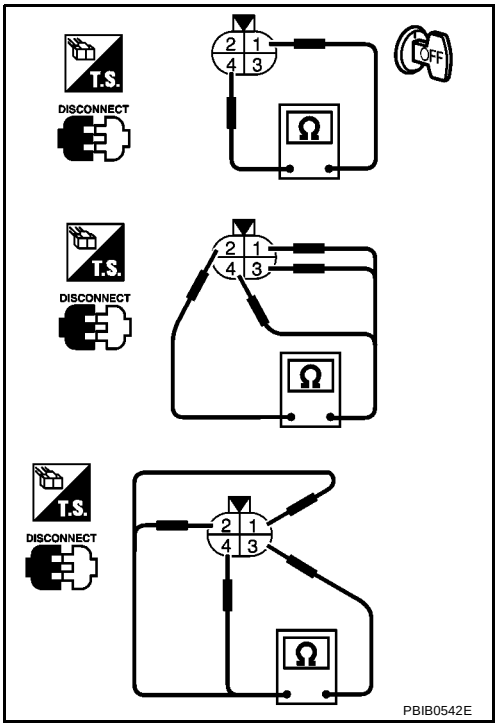

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00O4R

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

DTC P0107, P0108 MANIFOLD ABSOLUTE PRESSURE SENSOR

PFP:22365

Component Description

EBS00OE1

The manifold absolute pressure (MAP) sensor is placed intake manifold corrector. It detects intake manifold pressure and sends the voltage signal to the ECM, ECM uses the signal to compute intake air volume value.
The sensor uses a silicon diaphragm which is sensitive to the change in pressure. As the pressure increase, the voltage rises.

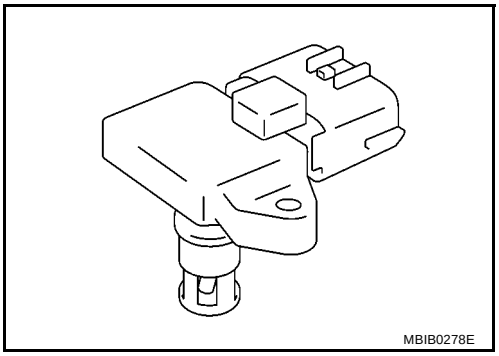
MBIB0278E

On Board Diagnosis Logic

EBS00OE2

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0107 0107	Manifold absolute pressure sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Manifold absolute pressure sensor
P0108 0108	Manifold absolute pressure sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted) ● Manifold absolute pressure sensor ● Intake air leaks

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and MI lights up.

Detected items	Engine operating condition in fail-safe mode
Manifold absolute pressure sensor circuit	Engine speed will not rise more than 2,500 rpm due to the fuel cut.

DTC Confirmation Procedure

EBS00OE3

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If the 1st trip DTC is detected, go to EC-150, "Diagnostic Procedure" .

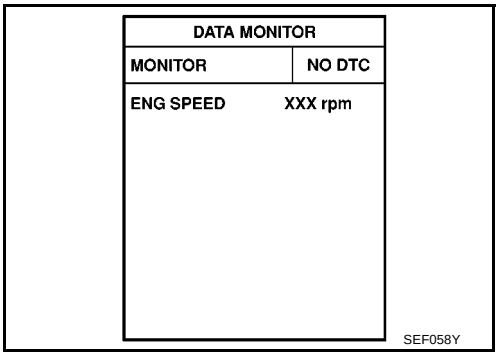

SEF058Y

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00OE4

EC-AP/SEN-01

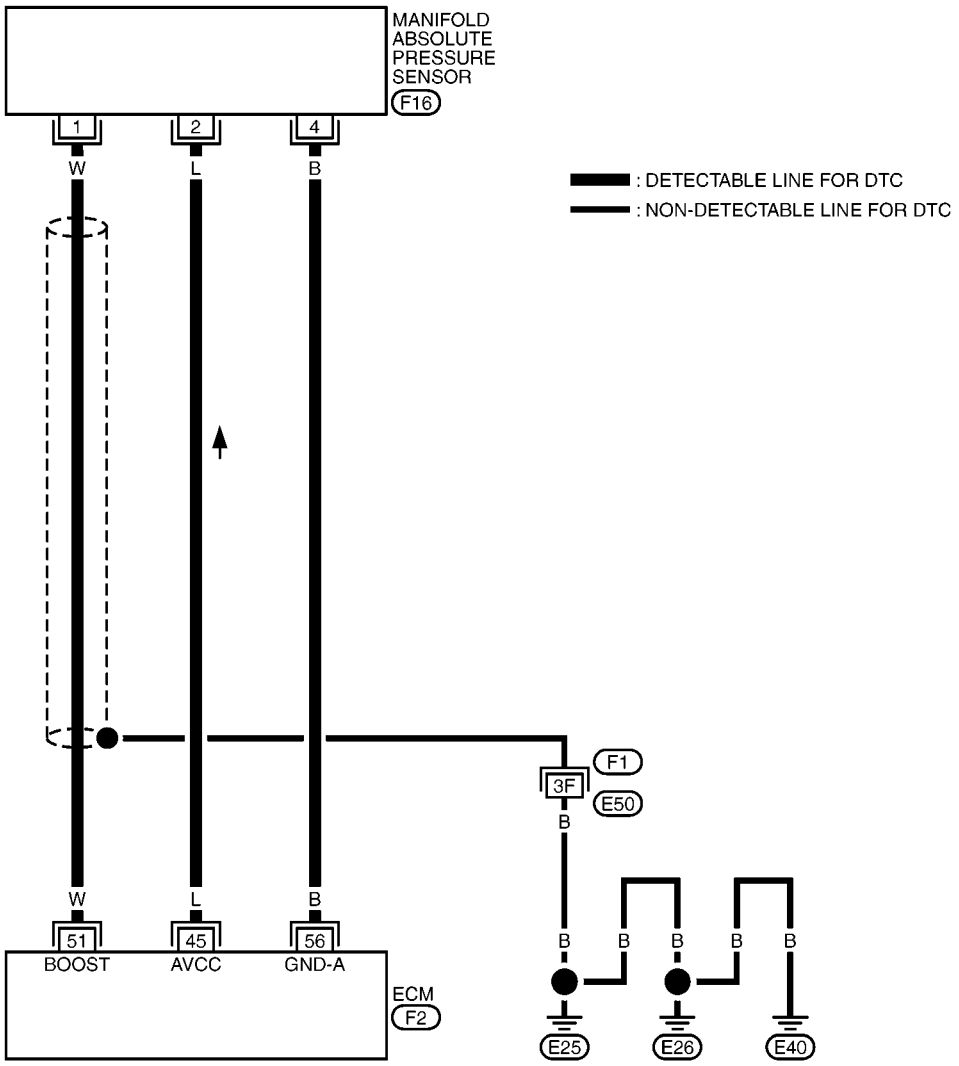

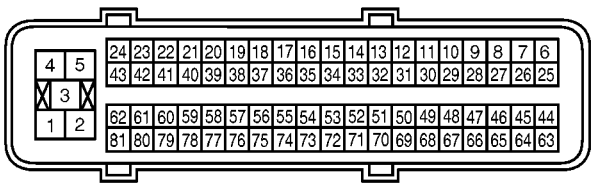

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0304E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
51	W	Manifold absolute pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 1.5V
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	Approximately 1.2V

Diagnostic Procedure

EBS00OE5

1. CHECK MAP SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect manifold absolute pressure sensor harness connector.
3. Turn ignition switch ON.

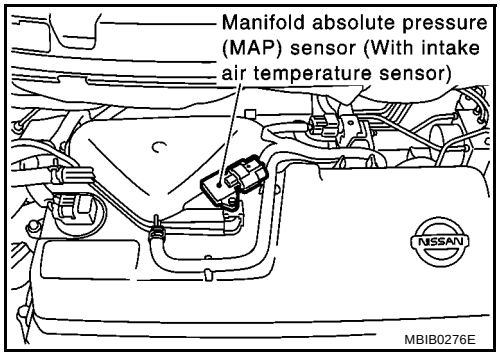

4. Check voltage between MAP sensor terminal 2 and ground.

Voltage: Approximately 5V

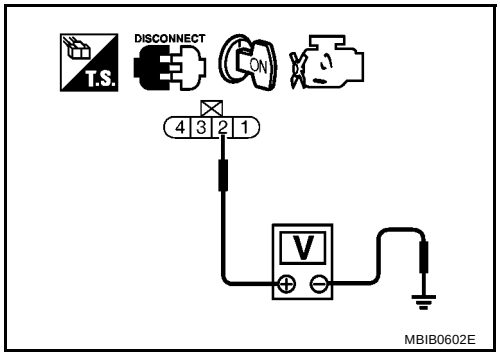

OK or NG

OK >> GO TO 2.
NG >> Repair harness or connectors.

2. CHECK MAP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between MAP sensor terminal 4 and ECM terminal 56
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK MAP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between MAP sensor terminal 1 and ECM terminal 51.
   Refer to Wiring Diagram

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK MAP SENSOR

Refer to EC-151, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace manifold absolute pressure sensor.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OE6

MANIFOLD ABSOLUTE PRESSURE SENSOR

1. Reconnect all harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Turn ignition switch OFF, wait at least 5 seconds and then turn ON.
4. Check voltage between ECM terminal 51 (manifold absolute pressure sensor signal) and ground.

   NOTE:
   - To avoid the affection of intake manifold vacuum, check the voltage 1 or more minutes past after engine is stopped.
   - Because the sensor is absolute pressure sensor, output value may differ depends on atmospheric pressure and altitude.

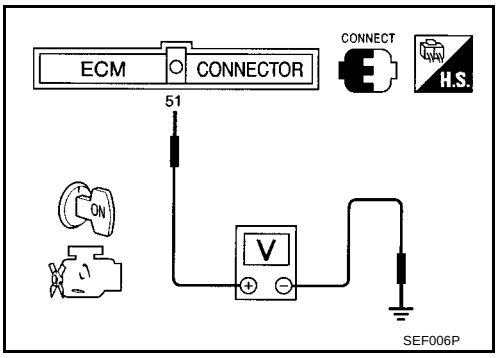

5. Measure the atmospheric pressure.

   NOTE:
   As atmospheric pressure describe on synoptic chart is value at sea level, please compensate the actual pressure with the following chart.

Altitude	Compensated pressure
0m	0hPa
200m	-24hPa
400m	-47hPa
600m	-70hPa
800m	-92hPa
1,000m	-114hPa
1,500m	-168hPa
2,000m	-218hPa

6. Check the manifold absolute pressure sensor value corresponds to the atmospheric pressure.

Atmospheric pressure	Voltage
800hPa	3.2 - 3.6v
850hPa	3.4 - 3.8v
900hPa	3.7 - 4.1v
960hPa	3.9 - 4.3v
1,000hPa	4.1 - 4.5v
1,050hPa	4.3 - 4.7v

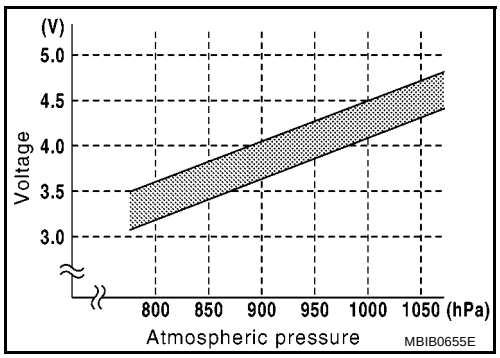

7. Start engine and let it idle.
8. Check the voltage between ECM terminal 51 and ground at idling and confirm the voltage difference between engine is stopped and at idling is within following chart.

Intake manifold vacuum	Voltage difference
-40kPa (-300mmHg)	1.6 - 2.0v
-53.3kPa (-400mmHg)	2.2 - 2.6v
-66.7kPa (-500mm)	2.8 - 3.2v
-80kPa (-600mmHg)	3.4 - 3.8v

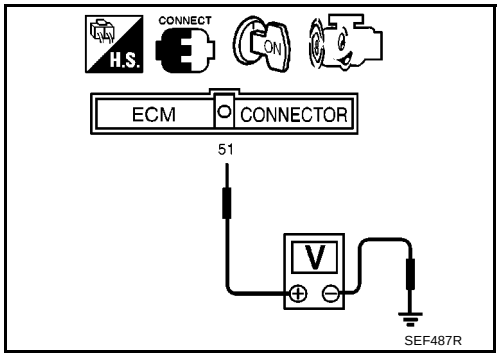

Removal and Installation

EBS00OE7

MANIFOLD ABSOLUTE PRESSURE SENSOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0112, P0113 IAT SENSOR

PFP:22630

Component Description

EBS00O50

The intake air temperature sensor is built into manifold absolute pressure sensor. The sensor detects intake air temperature and transmits a signal to the ECM.
The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

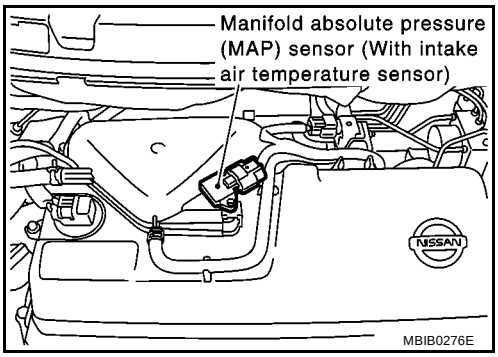

<Reference data>

Intake air temperature °C (°F)	Voltage* V	Resistance kΩ
–10 (14)	4.43	7.9 - 9.3
25 (77)	3.32	1.9 - 2.1
80 (176)	1.23	0.31 - 0.37

*: These data are reference values and are measured between ECM terminal 34 (Intake air temperature sensor) and ground.

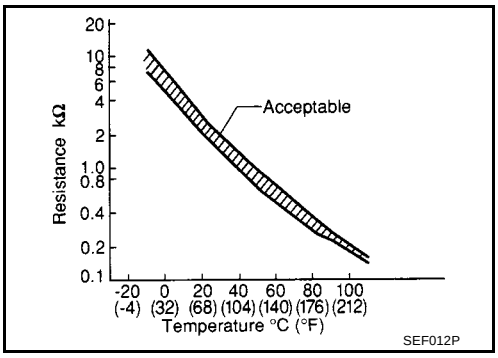

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

EBS00O51

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0112 0112	Intake air temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Intake air temperature sensor
P0113 0113	Intake air temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and MI lights up.

Detected items	Engine operating condition in fail-safe mode
Intake air temperature sensor circuit	Intake air temperature is determined as 30°C (86°F).

DTC Confirmation Procedure

EBS00O52

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.

2. Select “DATA MONITOR” mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If 1st trip DTC is detected, go to EC-156, "Diagnostic Procedure"
.

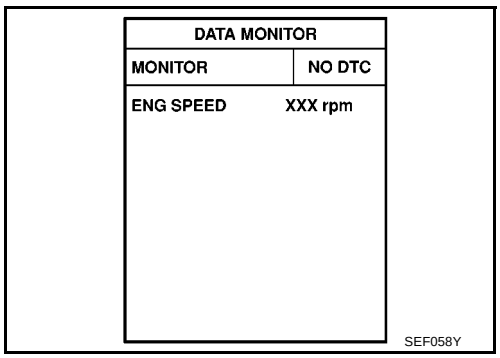

WITH GST

Follow the procedure “With CONSULT-II” above.

Wiring Diagram

EBS00O53

EC-IATS-01

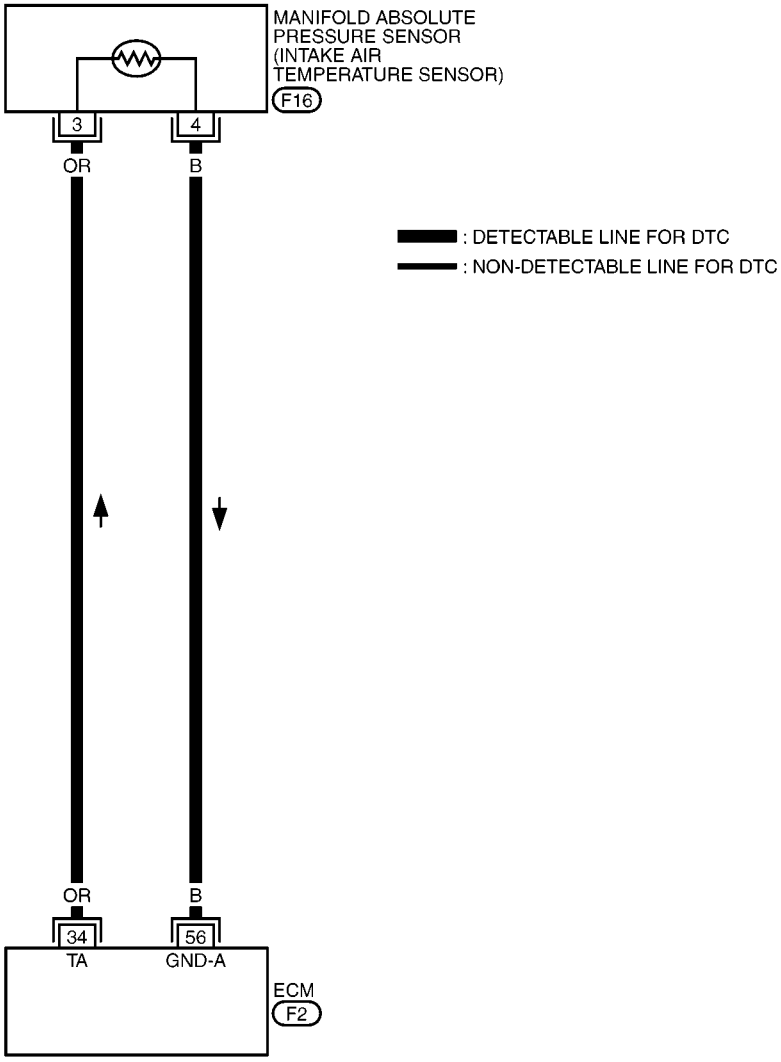

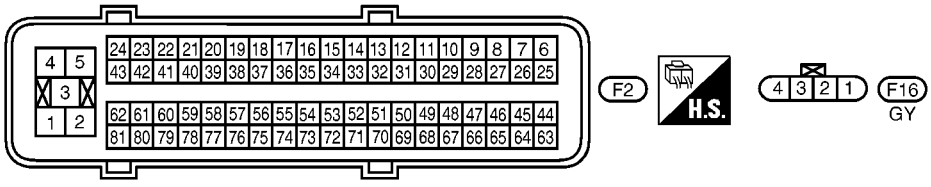

MBWA0462E

Diagnostic Procedure

EBS00O54

1. CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect manifold absolute pressure sensor (intake air temperature sensor is built-into) harness connector.
3. Turn ignition switch ON.

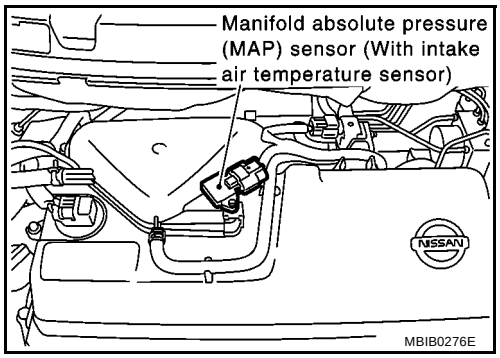

4. Check voltage between MAP sensor terminal 3 and ground.

Voltage: Approximately 5V

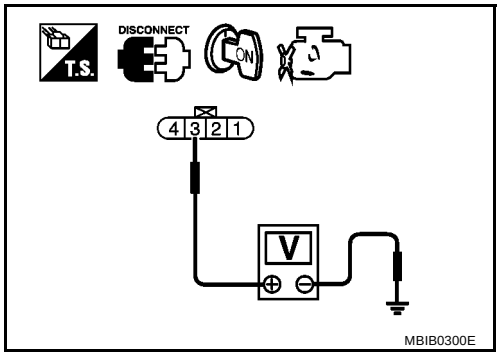

OK or NG

OK >> GO TO 2.
NG >> Repair harness or connectors.

2. CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between MAP sensor terminal 4 and ECM terminal 56.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-157, "Component Inspection" .

OK or NG

OK >> GO TO 4.
NG >> Replace manifold absolute pressure sensor (with intake air temperature sensor).

4. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O55

INTAKE AIR TEMPERATURE SENSOR

1. Check resistance between manifold absolute pressure sensor terminals 3 and 4 under the following conditions.

Intake air temperature °C (°F)	Resistance kΩ
25 (77)	1.9 - 2.1

2. If NG, replace manifold absolute pressure sensor (with intake air temperature sensor).

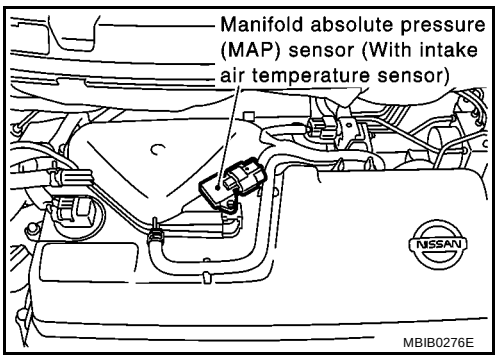

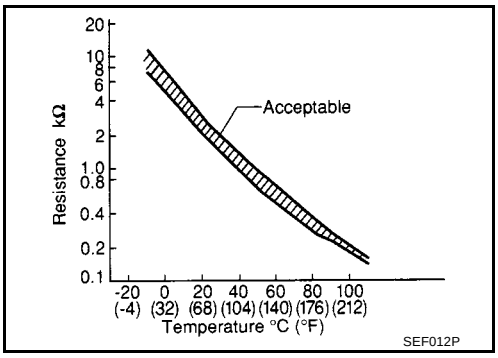

Removal and Installation

EBS00O56

MANIFOLD ABSOLUTE PRESSURE SENSOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0117, P0118 ECT SENSOR

PFP:22630

Component Description

EBS00O57

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

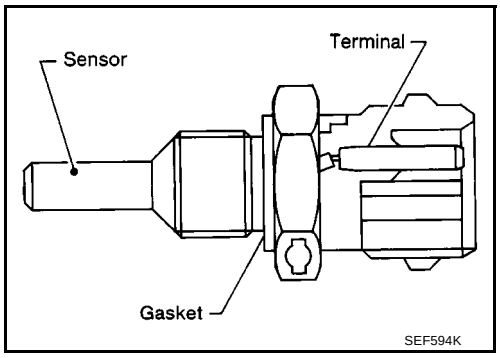

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
–10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 72 (Engine coolant temperature sensor) and ground.

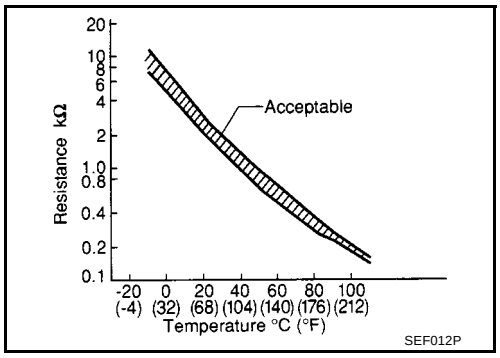

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

EBS00O58

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble Diagnosis Name	DTC Detecting Condition	Possible Cause
P0117 0117	Engine coolant temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Engine coolant temperature sensor
P0118 0118	Engine coolant temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

FAIL-SAFE MODE

When this malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Detected items	Engine operating condition in fail-safe mode	
Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch ON or "START". CONSULT-II displays the engine coolant temperature decided by ECM.	
	Condition	Engine coolant temperature decided (CONSULT-II display)
	Just as ignition switch is turned ON or Start	40°C (104°F)
	More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
	When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running.	

DTC Confirmation Procedure

EBS00O59

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If DTC is detected, go to EC-161, "Diagnostic Procedure" .

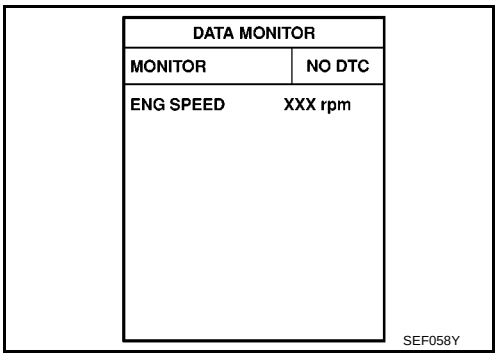

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O5A

EC-ECTS-01

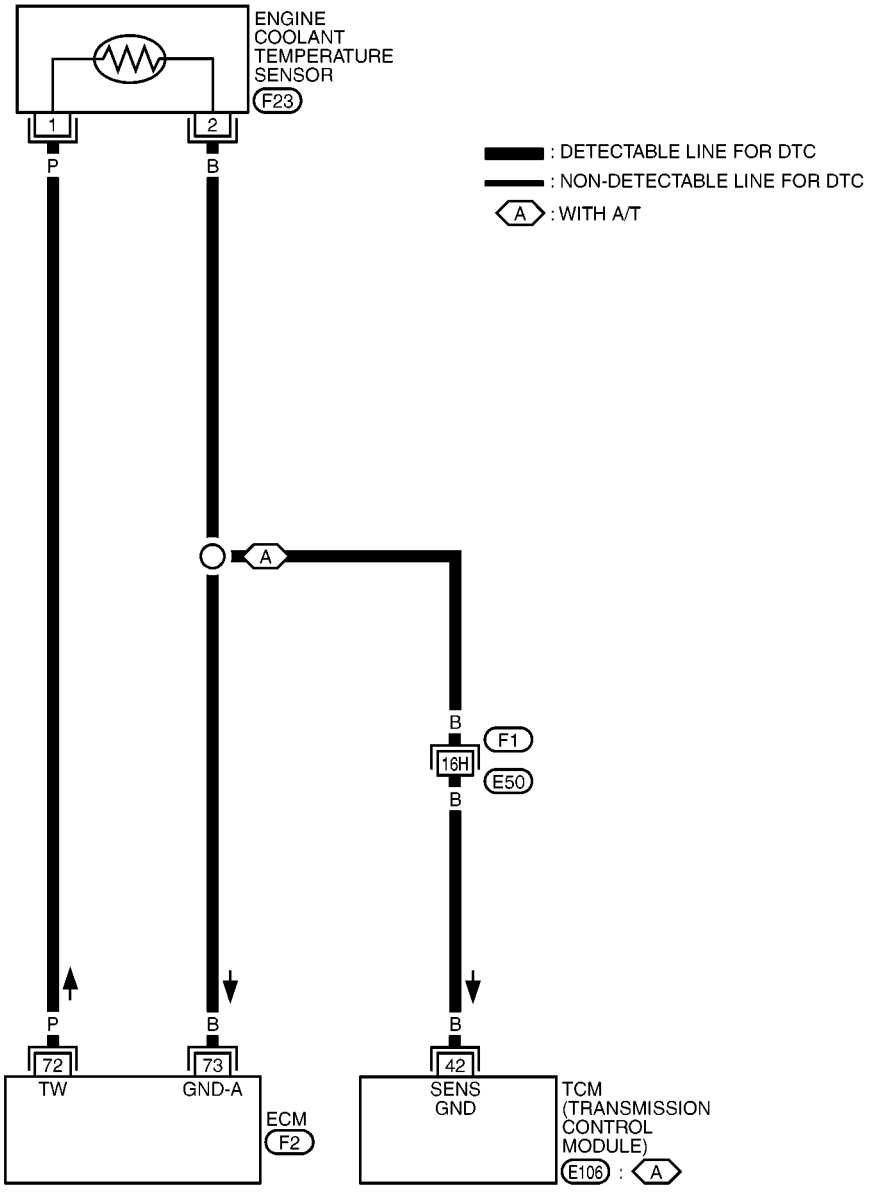

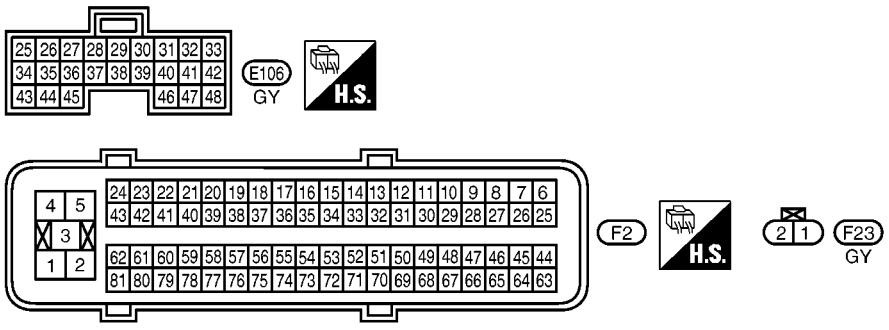

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0271E

Diagnostic Procedure

EBS00O5B

1. CHECK ECT SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect engine coolant temperature (ECT) sensor harness connector.
3. Turn ignition switch ON.

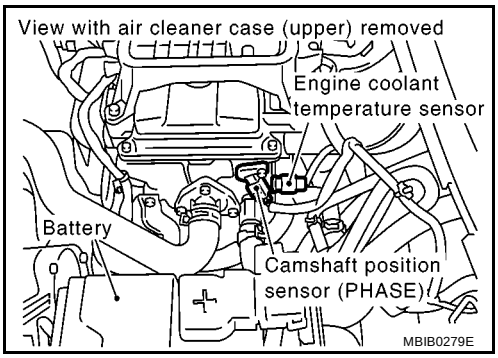

4. Check voltage between ECT sensor terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

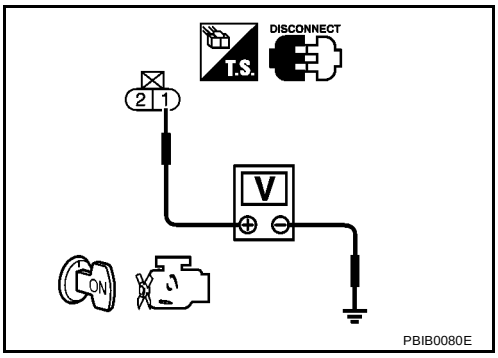

OK or NG

OK >> GO TO 2.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

2. CHECK ECT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect TCM harness connector.
4. Check harness continuity between ECT sensor terminal 2 and ECM terminal 73, TCM terminal 42. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between engine coolant temperature sensor and ECM
- Harness for open or short between engine coolant temperature sensor and TCM

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-162, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace engine coolant temperature sensor.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O5C

ENGINE COOLANT TEMPERATURE SENSOR

1. Check resistance between engine coolant temperature sensor terminals 1 and 2 as shown in the figure.

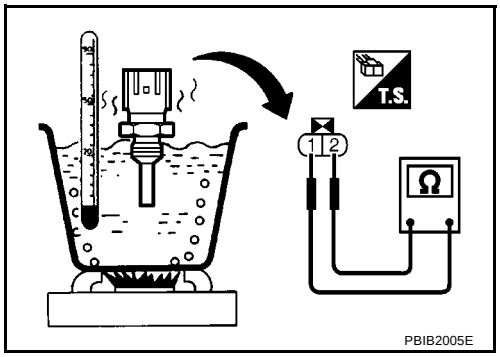

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 72 (Engine coolant temperature sensor) and ground.

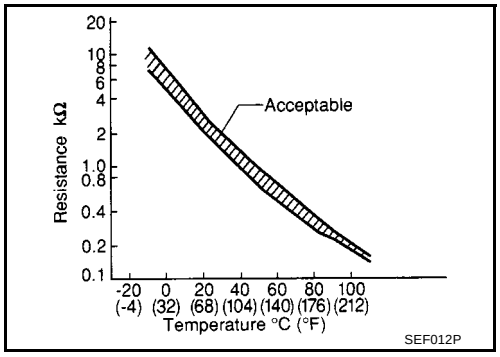

2. If NG, replace engine coolant temperature sensor.

Removal and Installation

EBS00O5D

ENGINE COOLANT TEMPERATURE SENSOR

Refer to CO-23, "THERMOSTAT" .

DTC P0122, P0123 TP SENSOR

PFP:16119

Component Description

EBS010BT

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

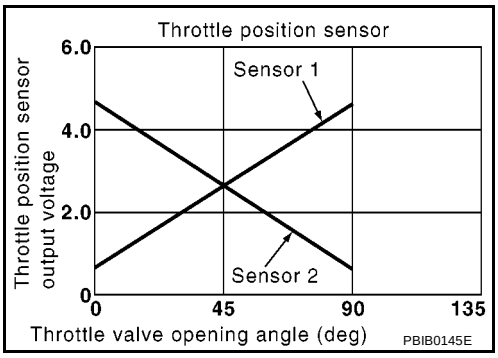

CONSULT-II Reference Value in Data Monitor Mode

EBS010BU

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS010BV

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0122 0122	Throttle position sensor 2 circuit low input	An excessively low voltage from the TP sensor 2 is sent to ECM.	● Harness or connectors (The TP sensor 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 2)
P0123 0123	Throttle position sensor 2 circuit high input	An excessively high voltage from the TP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010BW

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-166, "Diagnostic Procedure" .

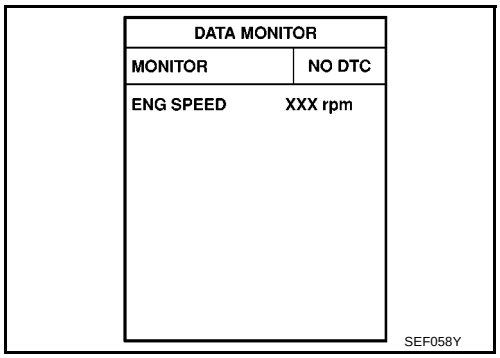

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS010BX

EC-TPS2-01

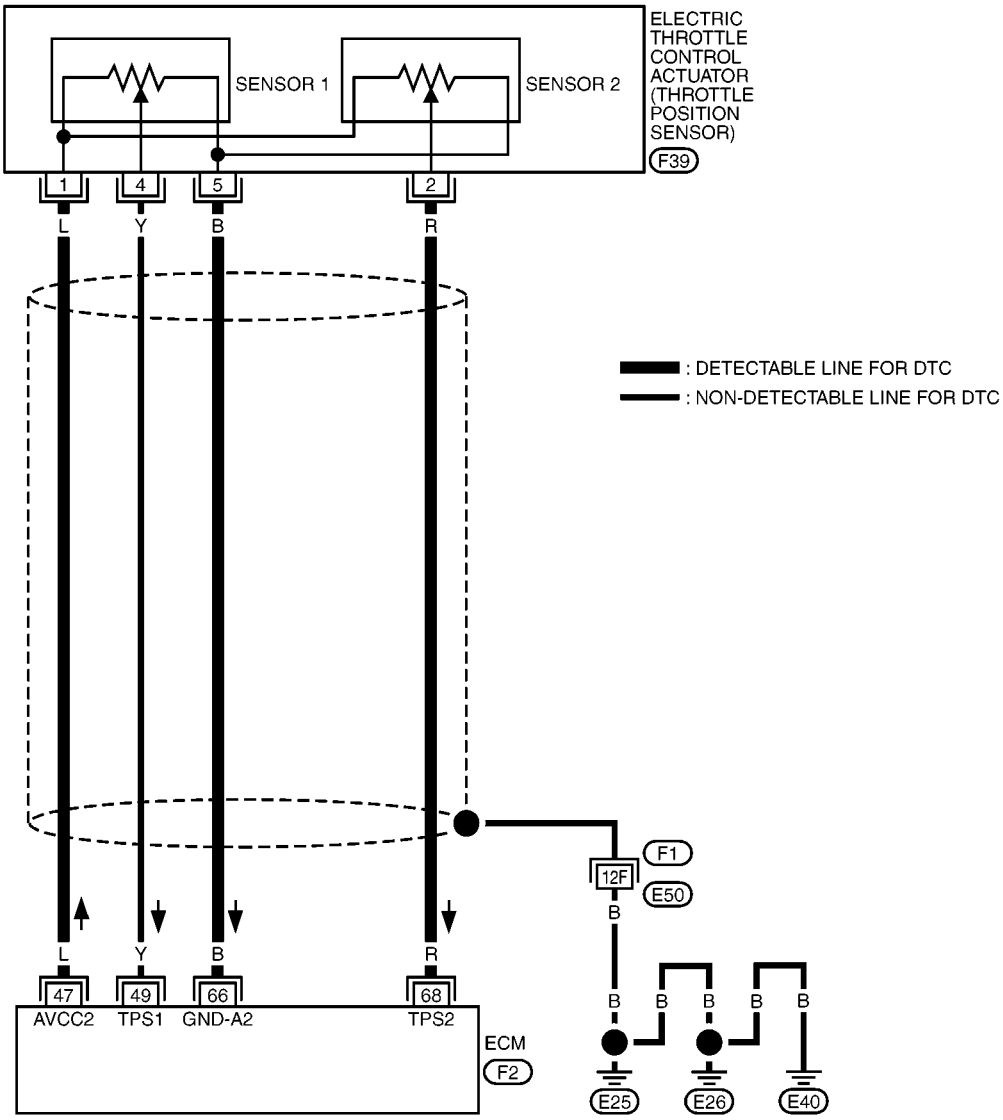

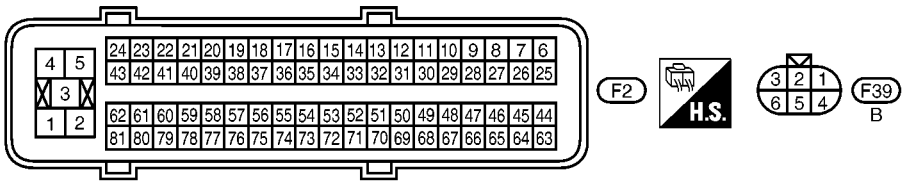

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0291E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS010BY

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

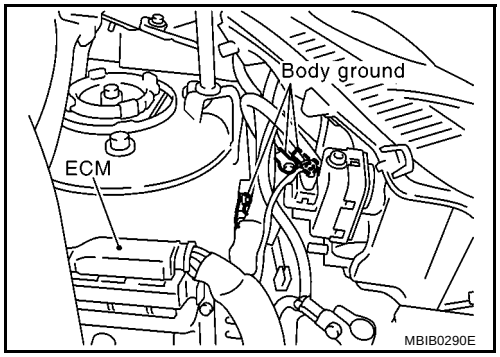

2. CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

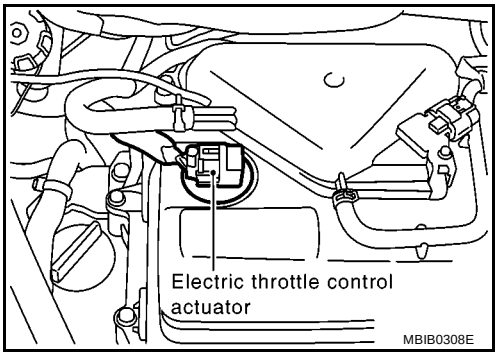

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

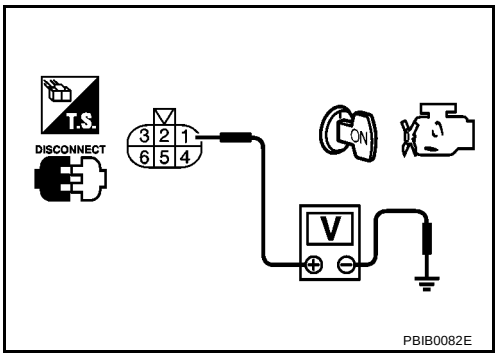

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-168, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010BZ

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

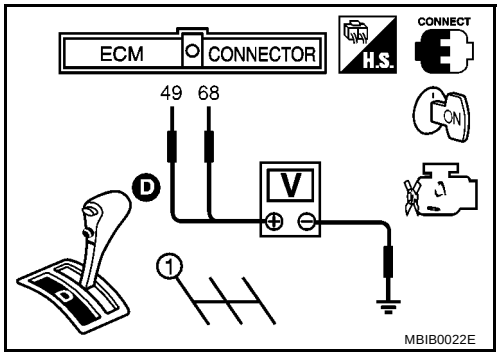

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-42, "Throttle Valve Closed Position Learning" .
8. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS010C0

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0132 HO2S1

PFP:22690

Component Description

EBS00O5E

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

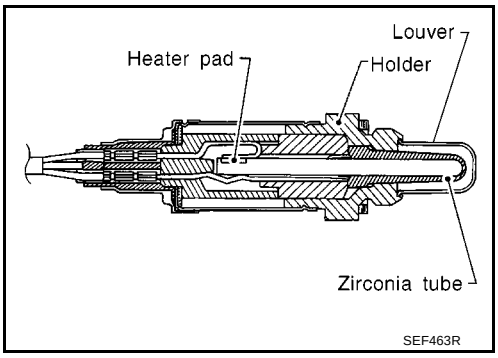

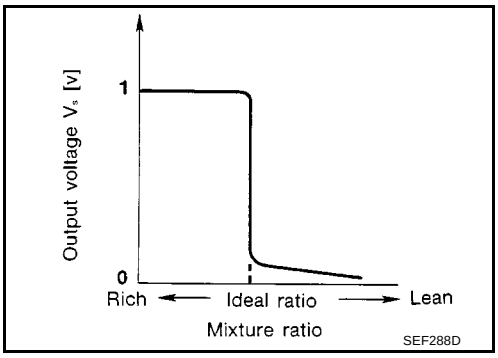

CONSULT-II Reference Value in Data Monitor Mode

EBS00O5F

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

On Board Diagnosis Logic

EBS00O5G

To judge the malfunction, the diagnosis checks that the heated oxygen sensor 1 output is not inordinately high.

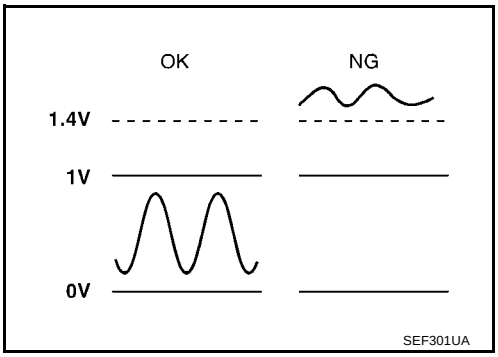

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0132 0132	Heated oxygen sensor 1 circuit high voltage	An excessively high voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1

DTC Confirmation Procedure

EBS00O5H

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON.
4. Select “DATA MONITOR” mode with CONSULT-II.
5. Restart engine and let it idle for 2 minutes.
6. If 1st trip DTC is detected, go to EC-172, "Diagnostic Procedure" .

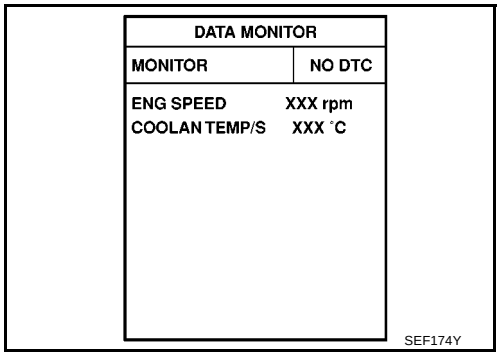

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Restart engine and let it idle for 2 minutes.
4. Turn ignition switch OFF and wait at least 10 seconds.
5. Restart engine and let it idle for 2 minutes.
6. Select “MODE 3” with GST.
7. If DTC is detected, go to EC-172, "Diagnostic Procedure" .

- **When using GST, DTC Confirmation Procedure should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

Wiring Diagram

EBS00O5I

EC-HO2S1-01

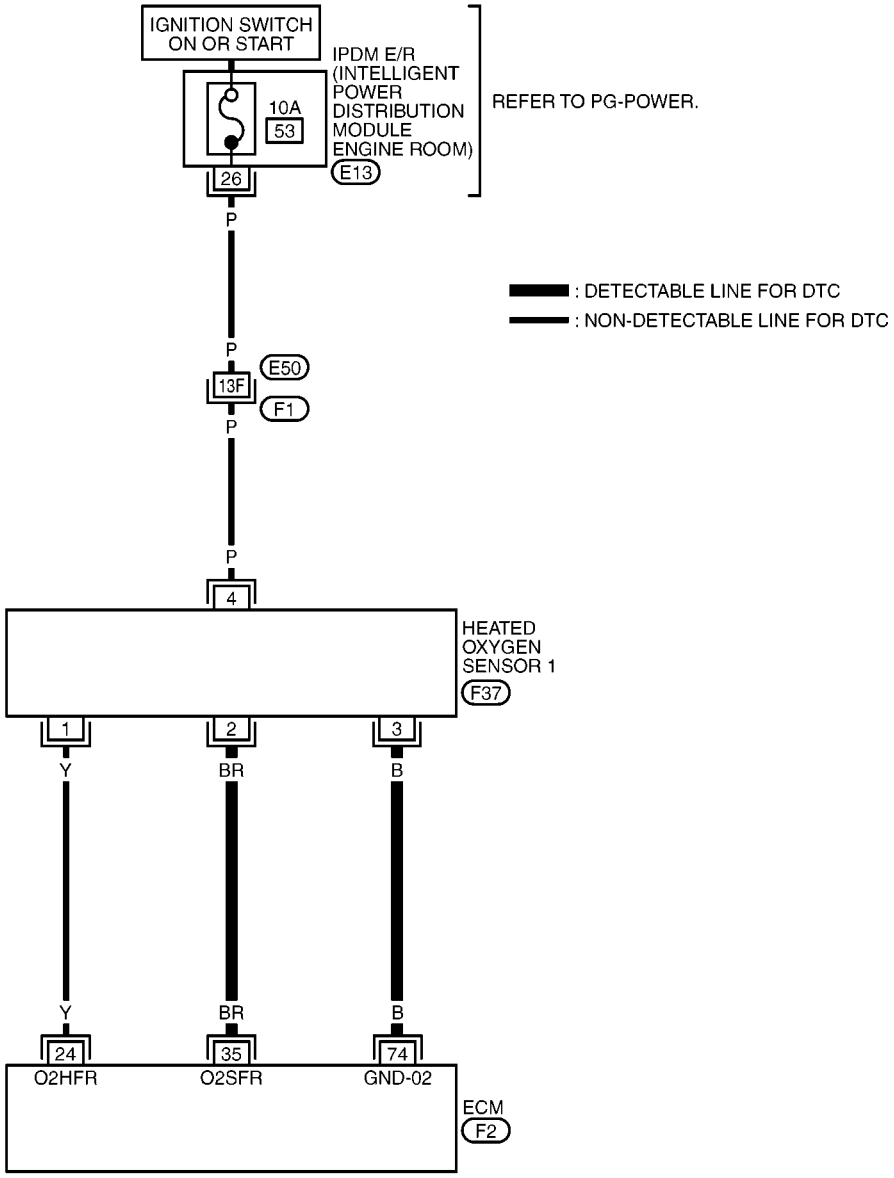

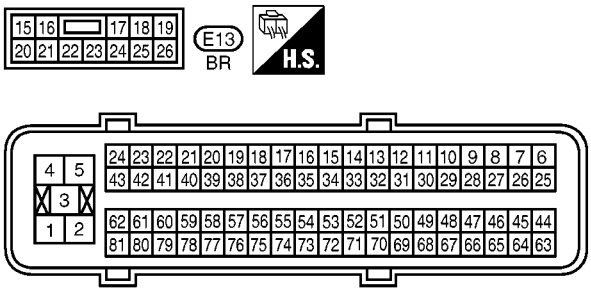

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0272E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00O5J

1. RETIGHTEN HEATED OXYGEN SENSOR 1

1. Turn ignition switch OFF.
2. Loosen and retighten heated oxygen sensor 1.

Tightening torque: 40 - 60 N·m (4.1 - 6.2 kg-m, 30 - 44 ft-lb)

>> GO TO 2.

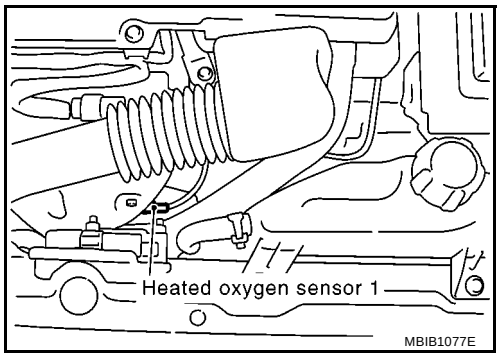

2. CHECK HO2S1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Disconnect heated oxygen sensor 1 harness connector.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 74 and HO2S1 terminal 3.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

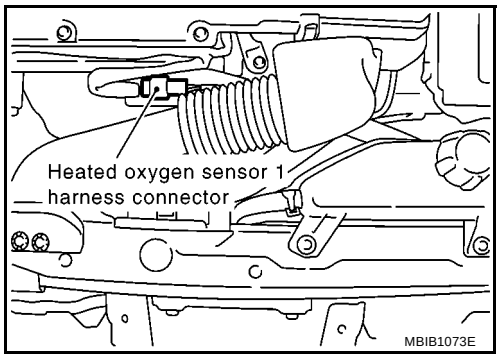

3. CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2. Refer to Wiring Diagram.

Continuity should exist.

3. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

4. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S1 CONNECTOR FOR WATER

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 harness connector
3. Check connectors for water

Water should not exist.

OK or NG

OK >> GO TO 5.
NG >> Repair or replace harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-173, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace malfunctioning heated oxygen sensor 1.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O5K

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.
3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

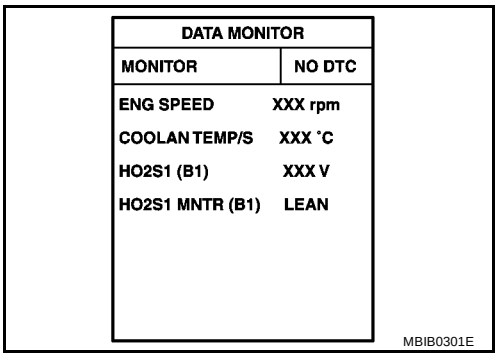

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown at right.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

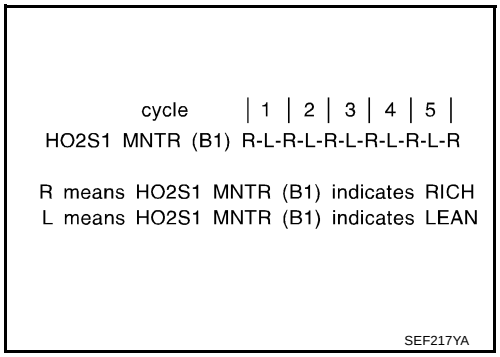

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

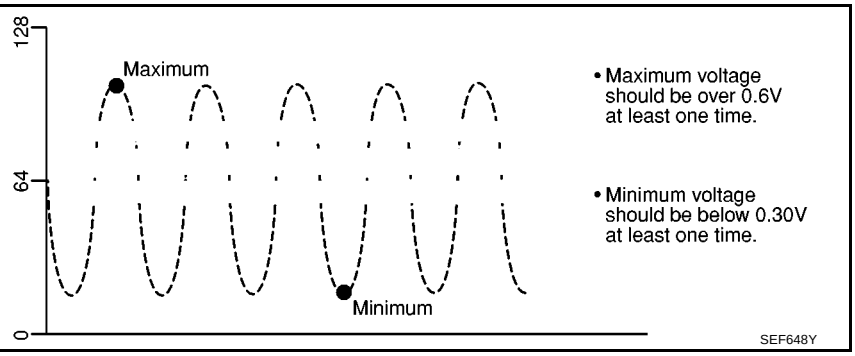

CAUTION:
- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

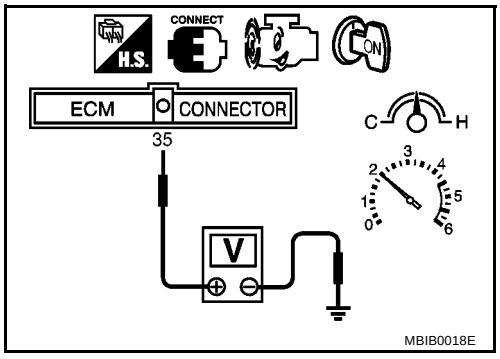

CAUTION:
- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00O5L

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P0133 HO2S1

PFP:22690

Component Description

EBS00O5M

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

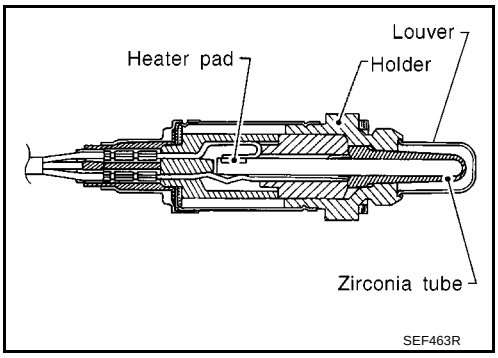

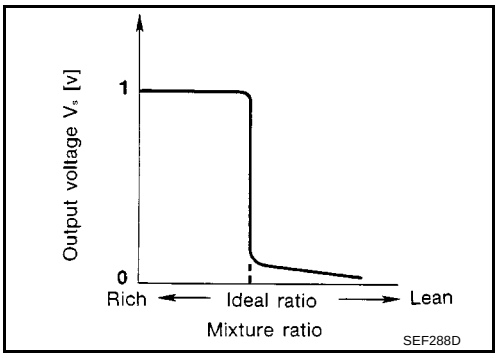

CONSULT-II Reference Value in Data Monitor Mode

EBS00O5N

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

On Board Diagnosis Logic

EBS00O5O

To judge the malfunction of heated oxygen sensor 1, this diagnosis measures response time of heated oxygen sensor 1 signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and heated oxygen sensor 1 temperature index. Judgment is based on whether the compensated time (heated oxygen sensor 1 cycling time index) is inordinately long or not.

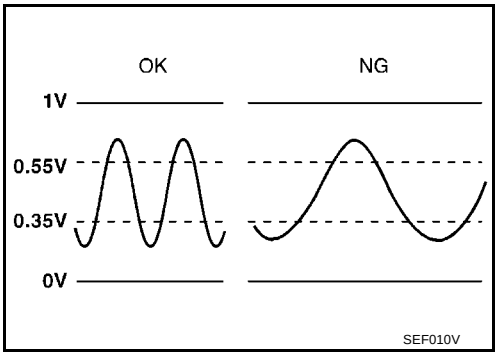

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0133 0133	Heated oxygen sensor 1 circuit slow response	The response of the voltage signal from the sensor takes more than the specified time.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1 ● Heated oxygen sensor 1 heater ● Fuel pressure ● Injectors ● Intake air leaks ● Exhaust gas leaks ● Manifold absolute pressure sensor

DTC Confirmation Procedure

EBS00O5P

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- **Always perform at a temperature above −10°C (14°F).**
- **Before performing the following procedure, confirm that battery voltage is more than 11V at idle.**

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine and wait at least 10 seconds.
3. Turn ignition switch ON and select “HO2S1 (B1) P0133” of “HO2S1” in “DTC WORK SUPPORT” mode with CONSULT-II.
4. Touch “START”.
5. Start engine and let it idle for at least 3 minutes.

   NOTE:
   Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 5.

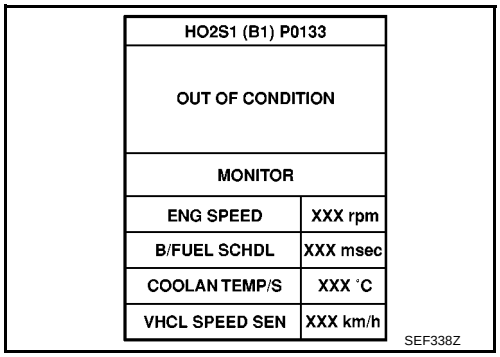

6. When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 40 to 60 seconds.)

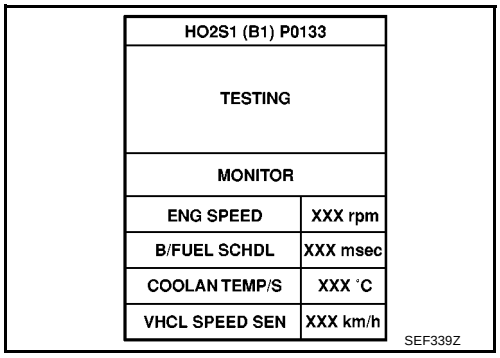

ENG SPEED	2,750 - 4,350 rpm (M/T models with CR 10 engine) 2,450 - 3,950 rpm (M/T models with CR 12 engine) 2,550 - 4,100 rpm (M/T models with CR 14 engine) 2,100 - 3,300 rpm (A/T models with CR 12 engine) 2,100 - 3,400 rpm (A/T models with CR 14 engine)
Vehicle speed	More than 80 km/h (50 MPH)
B/FUEL SCHDL	3.3 - 6.5 msec
Selector lever	Suitable position

If “TESTING” is not displayed after 5 minutes, retry from step 2.

7. Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”. If “NG” is displayed, refer to EC-179, "Diagnostic Procedure" .

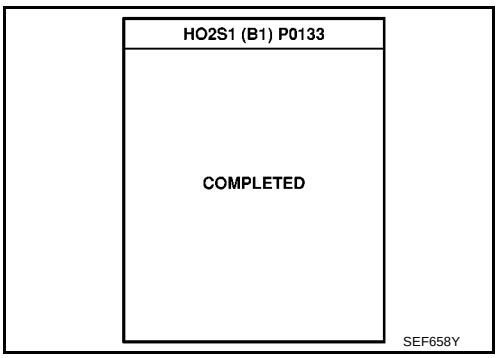

Overall Function Check

EBS00O5Q

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.

- The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.

1 time: **0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V**

2 times: **0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V**

4. If NG, go to EC-179, "Diagnostic Procedure" .

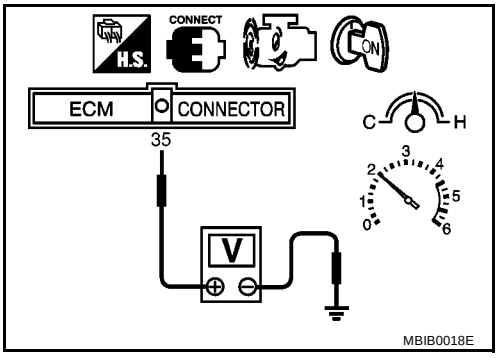

Wiring Diagram

EBS00O5R

EC-HO2S1-01

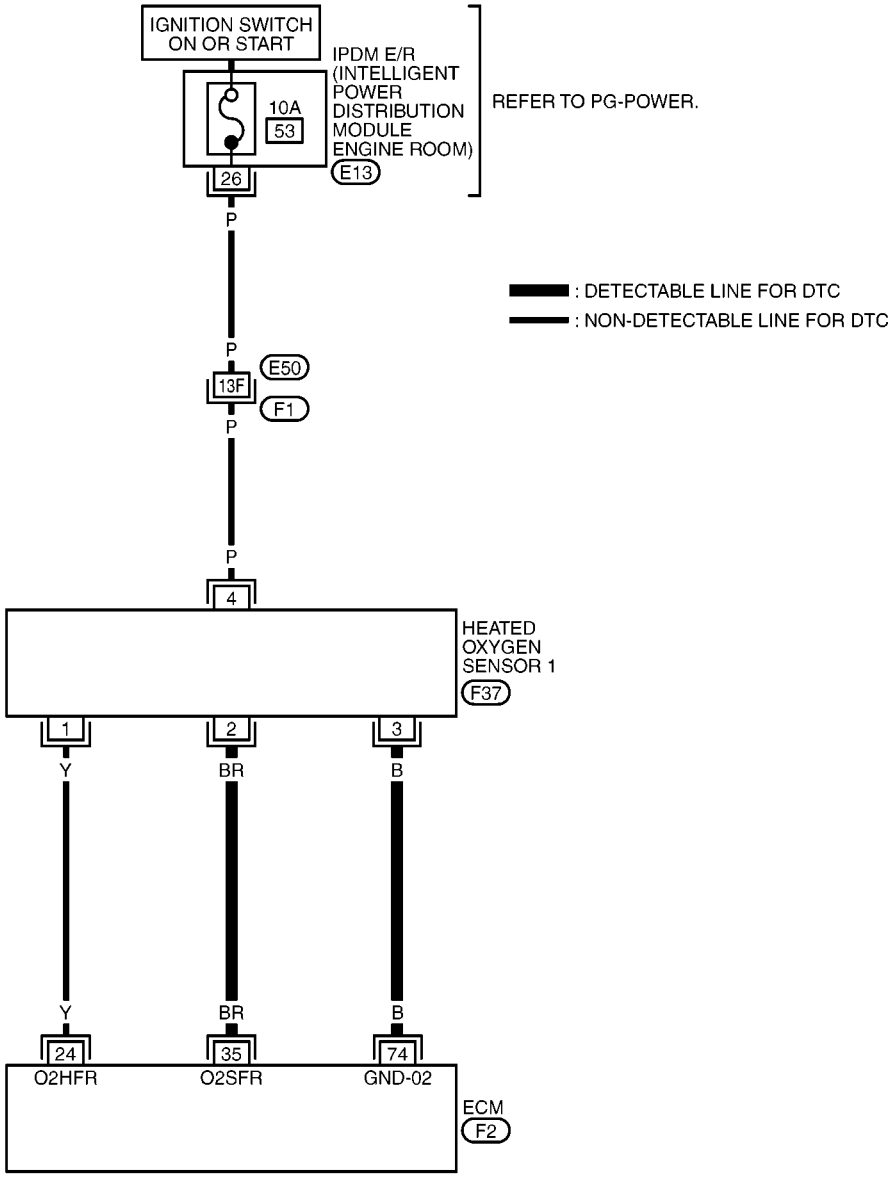

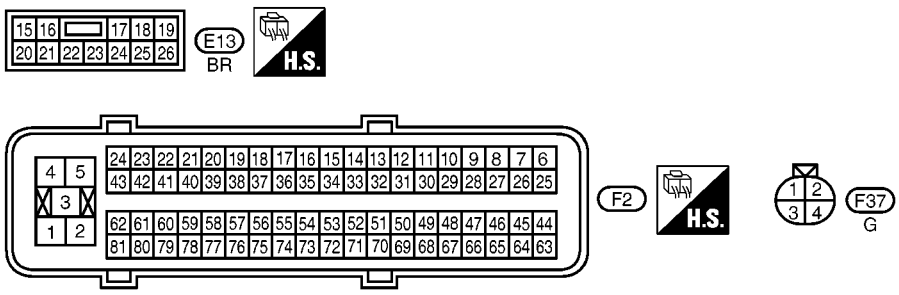

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0272E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00O5S

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

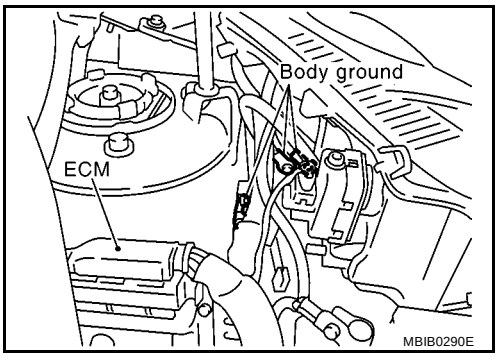

2. RETIGHTEN HEATED OXYGEN SENSOR 1

Loosen and retighten heated oxygen sensor 1.

Tightening torque: 40 - 60 N·m (4.1 - 6.2 kg-m, 30 - 44 ft-lb)

>> GO TO 3.

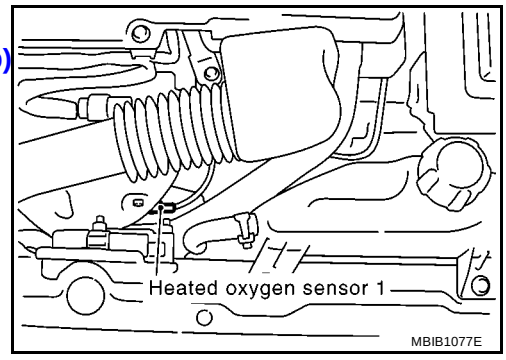

3. CHECK FOR EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before three way catalyst (Manifold).

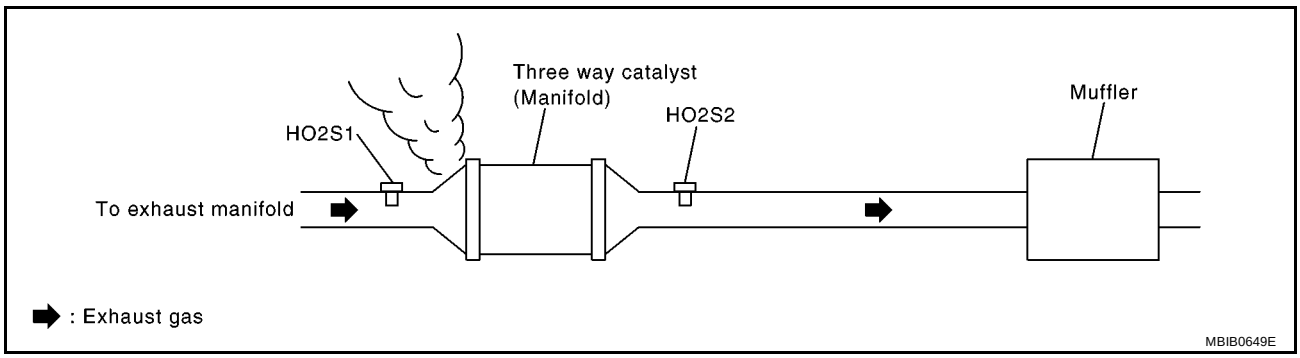

OK or NG

OK >> GO TO 4.
NG >> Repair or replace.

4. CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the manifold absolute pressure sensor.

OK or NG

OK >> GO TO 5.
NG >> Repair or replace.

5. CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching “CLEAR”.
4. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 or P0172 detected?
   Is it difficult to start engine?

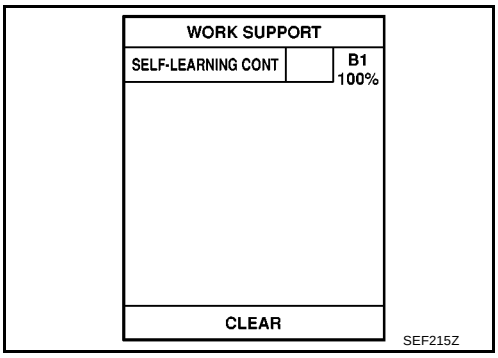

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect manifold absolute pressure sensor harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Make sure that DTC P0107 is displayed.
6. Erase the DTC memory. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 or P0172 detected?
   Is it difficult to start engine?

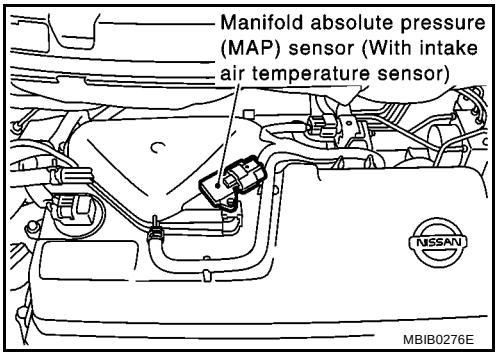

Yes or No

Yes >> Perform trouble diagnosis for DTC P0171 or DTC P0172 (Refer to EC-208 or EC-215).
No >> GO TO 6.

6. CHECK HO2S1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S1 terminal 3. Refer to Wiring Diagram.

   Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 7.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

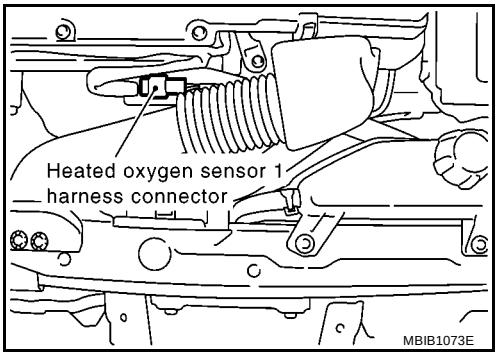

7. CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 8.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK HEATED OXYGEN SENSOR 1 HEATER

Refer to EC-141, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace malfunctioning heated oxygen sensor 1.

9. CHECK MANIFOLD ABSOLUTE PRESSURE SENSOR

Refer to EC-151, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> Replace manifold absolute pressure sensor.

10. CHECK PCV VALVE

Refer to EC-468, "Component Inspection" .

OK or NG

OK >> GO TO 11.
NG >> Replace PCV valve.

11. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-182, "Component Inspection" .

OK or NG

OK >> GO TO 12.
NG >> Replace heated oxygen sensor 1.

12. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O5T

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.

3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S1 MNTR (B1)	LEAN

SEF646Y

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown at right.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

cycle	1	2	3	4	5
HO2S1 MNTR (B1)	R-L	R-L	R-L	R-L	R-L

R means HO2S1 MNTR (B1) indicates RICH
L means HO2S1 MNTR (B1) indicates LEAN

SEF217YA

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

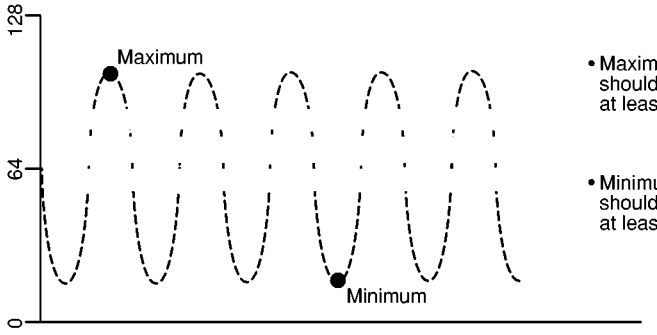

SEF648Y

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

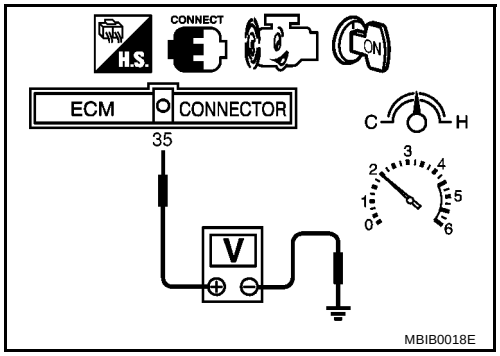

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00O5U

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P0134 HO2S1

PFP:22690

Component Description

EBS00O5V

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

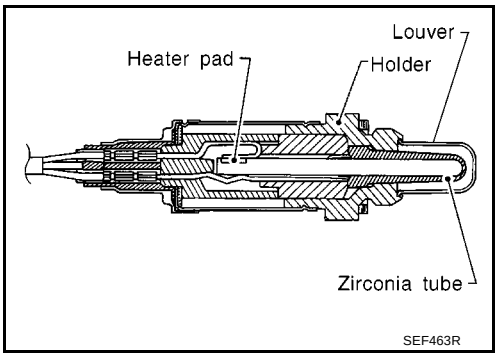

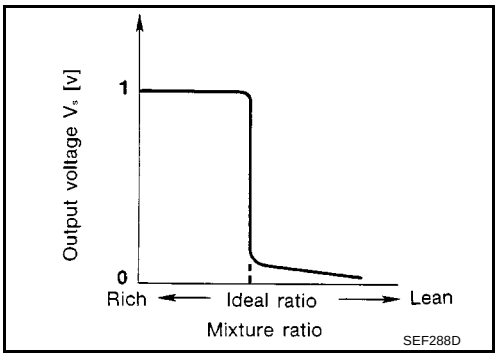

CONSULT-II Reference Value in Data Monitor Mode

EBS00O5W

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

On Board Diagnosis Logic

EBS00O5X

Under the condition in which the heated oxygen sensor 1 signal is not input, the ECM circuits will read a continuous approximately 0.3V. Therefore, for this diagnosis, the time that output voltage is within 200 to 400 mV range is monitored, and the diagnosis checks that this time is not inordinately long.

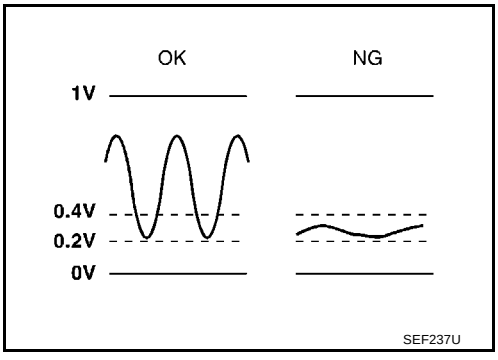

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0134 0134	Heated oxygen sensor 1 circuit no activity detected	The voltage from the sensor is constantly approx. 0.3V.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1

DTC Confirmation Procedure

EBS00O5Y

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “HO2S1 (B1) P0134” of “HO2S1” in “DTC WORK SUPPORT” mode with CONSULT-II.
3. Touch “START”.
4. Let it idle for at least 3 minutes.

   NOTE:
   Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 4.

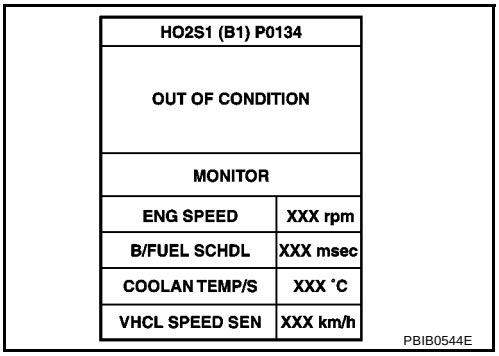

5. When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 10 to 60 seconds.)

ENG SPEED	2,400 - 4,700 rpm (M/T models with CR10 engine) 2,150 - 4,250 rpm (M/T models with CR12 engine) 2,200 - 4,400 rpm (M/T models with CR14 engine) 1,650 - 3,650 rpm (A/T models)
Vehicle speed	More than 64 km/h (40 MPH)
B/FUEL SCHDL	2.9 - 7.2 msec
Selector lever	Suitable position

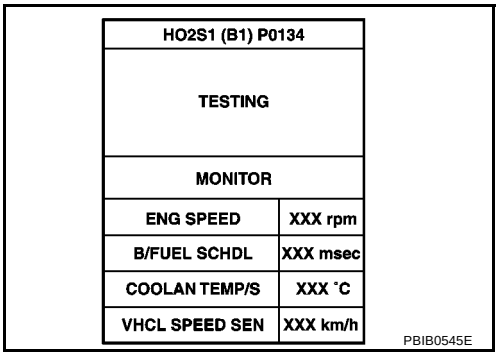

If “TESTING” is not displayed after 5 minutes, retry from step 2.

6. Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”. If “NG” is displayed, refer to EC-189, "Diagnostic Procedure" .

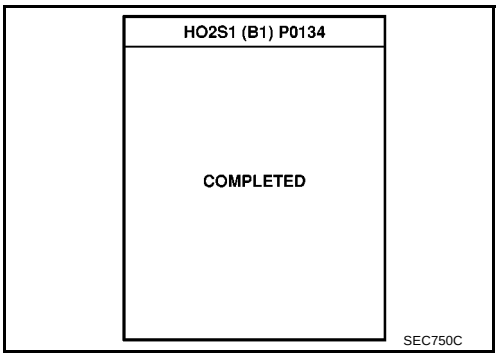

Overall Function Check

EBS00O5Z

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.

- The voltage does not remain in the range of 0.2 to 0.4V.

4. If NG, go to EC-189, "Diagnostic Procedure" .

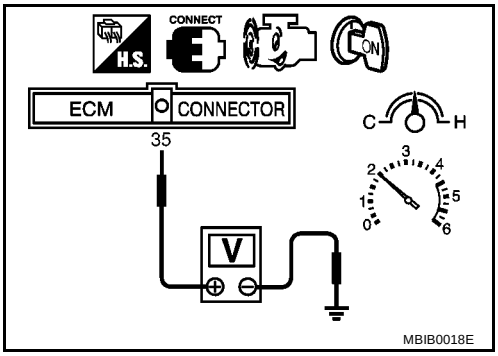

Wiring Diagram

EBS00O60

EC-HO2S1-01

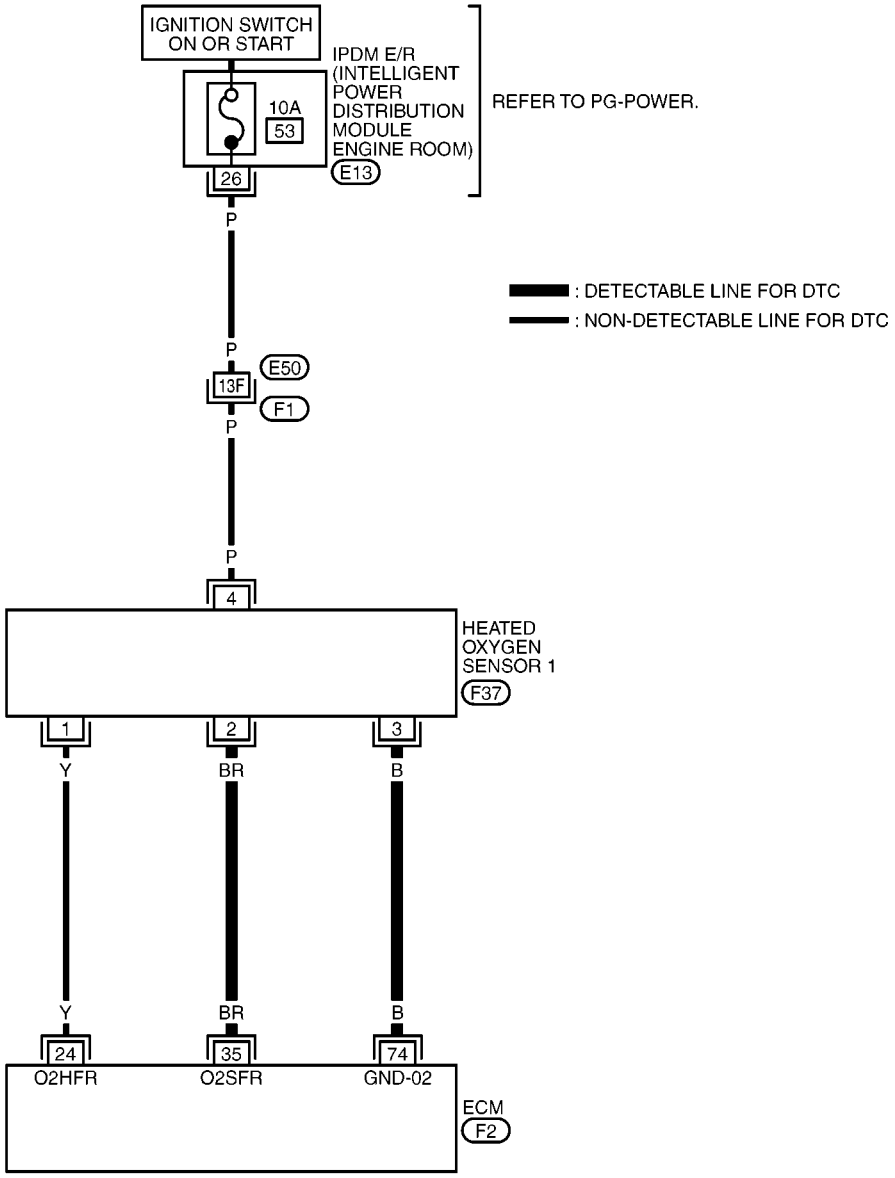

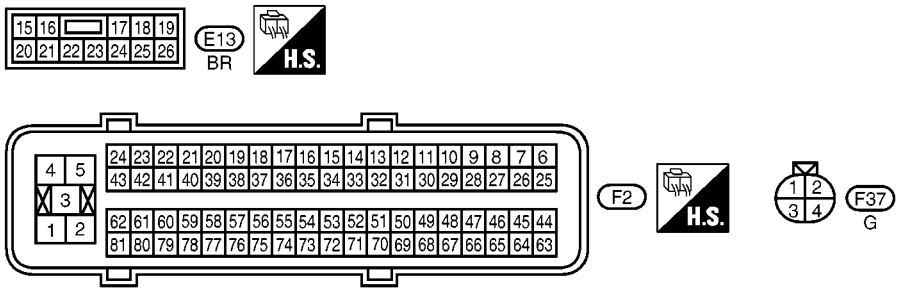

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0272E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00O61

1. INSPECTION START

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

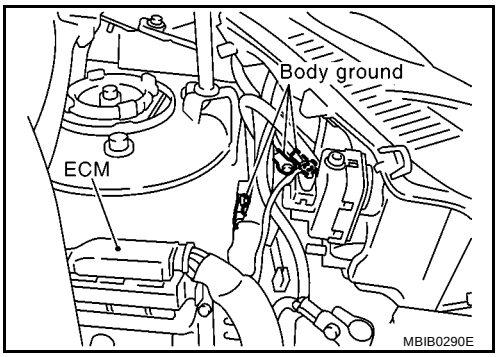

2. CHECK HO2S1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Disconnect heated oxygen sensor 1 harness connector.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 74 and HO2S1 terminal 3. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

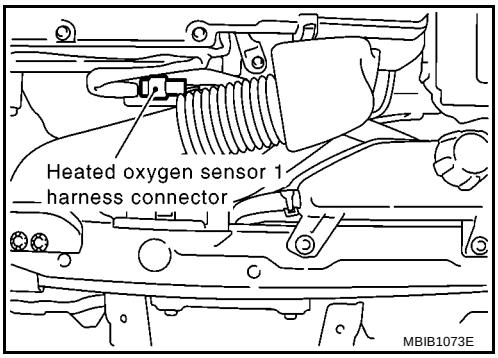

3. CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-190, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace heated oxygen sensor 1.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O62

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.
3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

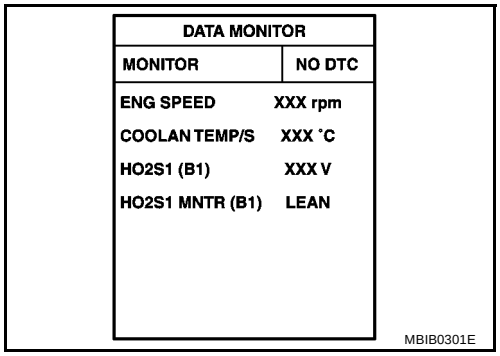

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown at right.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

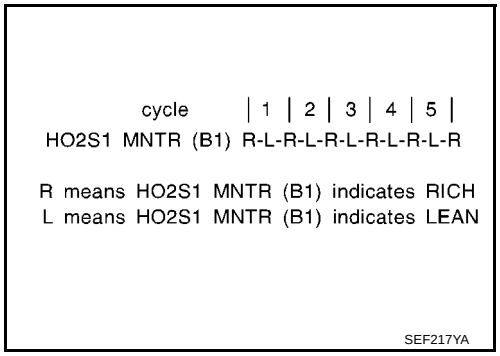

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

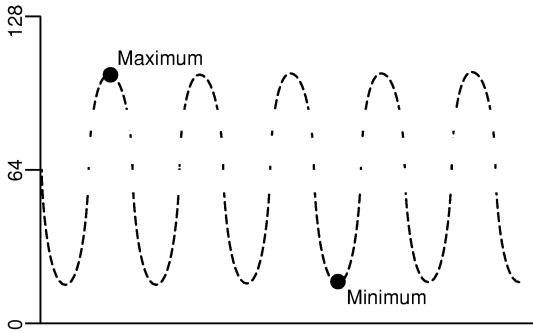

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

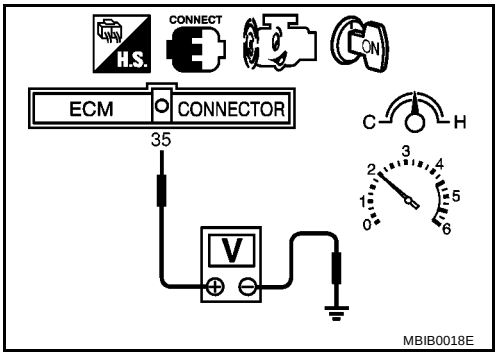

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00O63

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P0138 HO2S2

PFP:226A0

Component Description

EBS00O64

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas.
Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.
This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.
Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

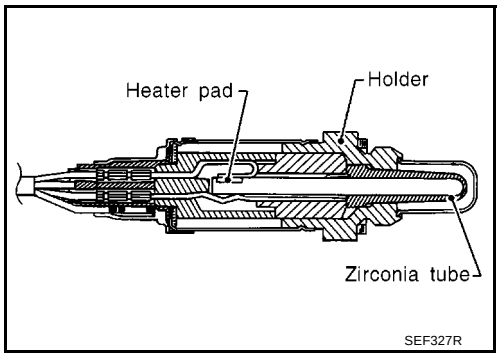

CONSULT-II Reference Value in Data Monitor Mode

EBS00O65

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ←→ RICH

On Board Diagnosis Logic

EBS00O66

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

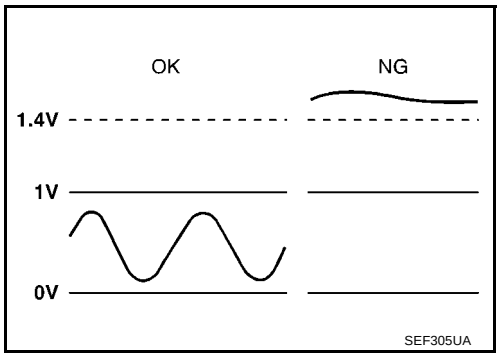

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0138 0138	Heated oxygen sensor 2 circuit high voltage	An excessively high voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 2

DTC Confirmation Procedure

EBS00O67

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 2 minutes.
6. If 1st trip DTC is detected, go to EC-195, "Diagnostic Procedure" .

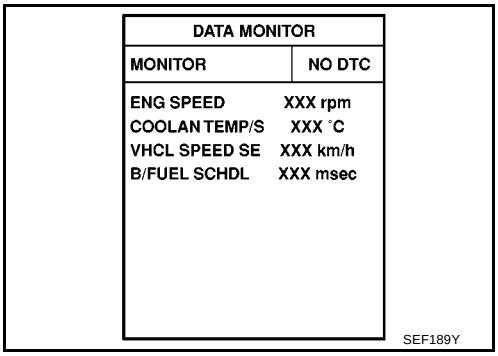

WITH GST

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 2 minutes.
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
7. Let engine idle for 2 minutes.
8. Select “MODE 3” with GST.
9. If NG, go to EC-195, "Diagnostic Procedure" .

- **When using GST, DTC Confirmation Procedure should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

Wiring Diagram

EBS00O69

EC-HO2S2-01

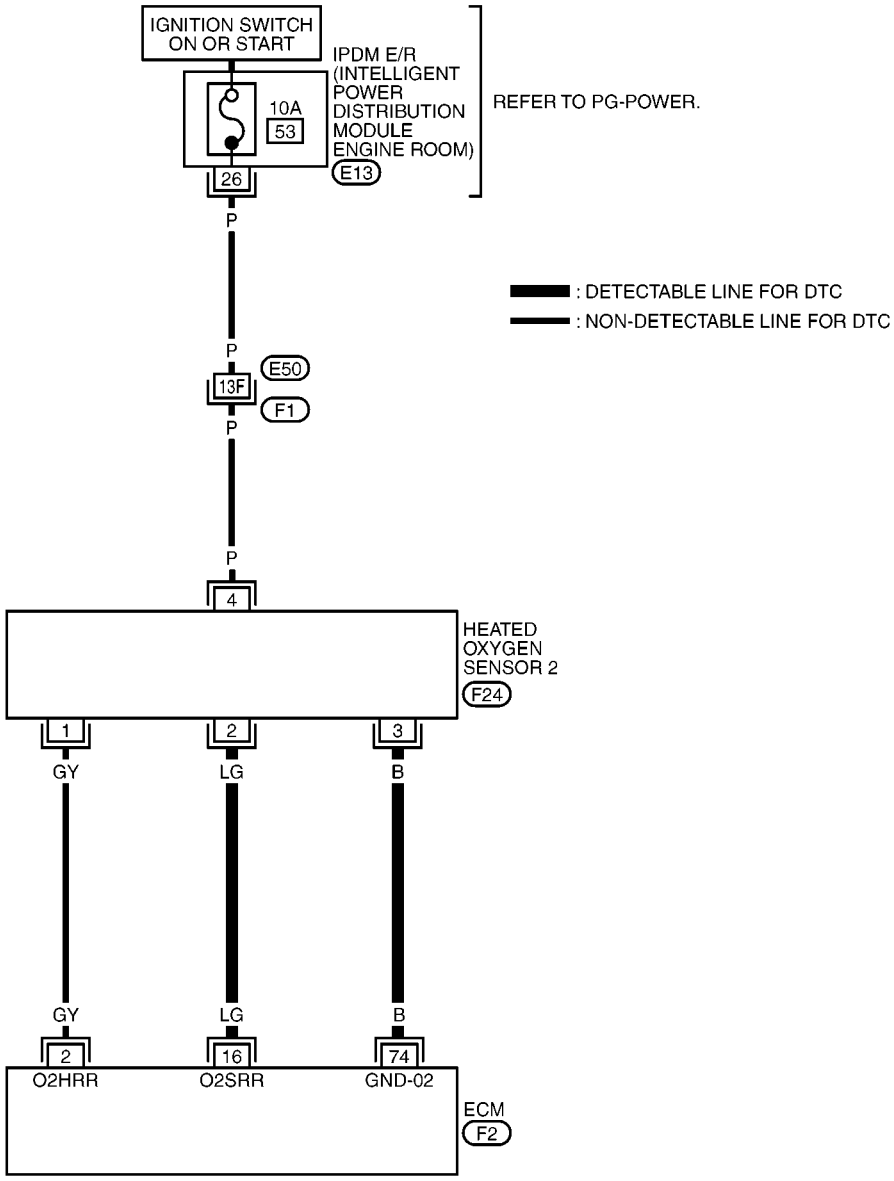

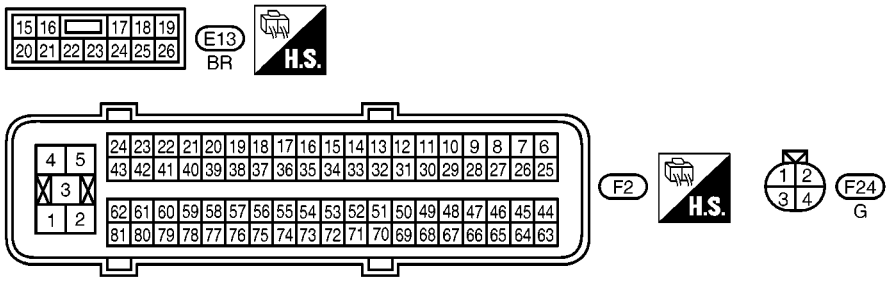

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0273E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● **Warm-up condition** ● Revving engine from idle to 3,000 rpm quickly after the following conditions are met. ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - Approximately 1.0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00O6A

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

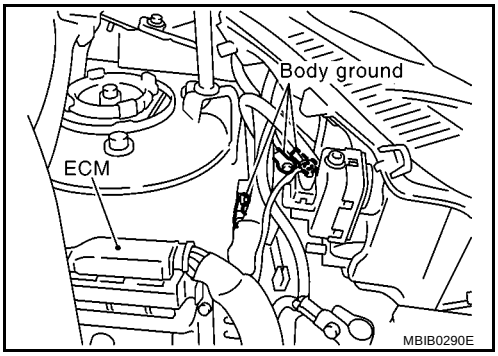

2. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S2 terminal 3.
   Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

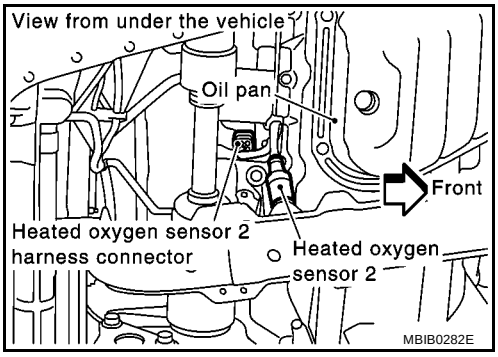

3. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 16 and HO2S2 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 16 or HO2S2 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-196, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace heated oxygen sensor 2.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O6B

HEATED OXYGEN SENSOR 2

With CONSULT-II

1. Turn ignition switch ON and select ″DATA MONITOR″ mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.

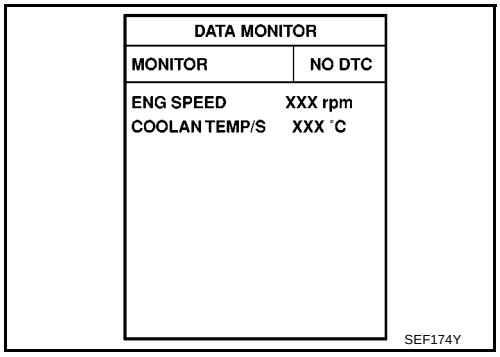

6. Select “FUEL INJECTION” in “ACTIVE TEST” mode, and select “HO2S2(B1)” as the monitor item with CONSULT-II.

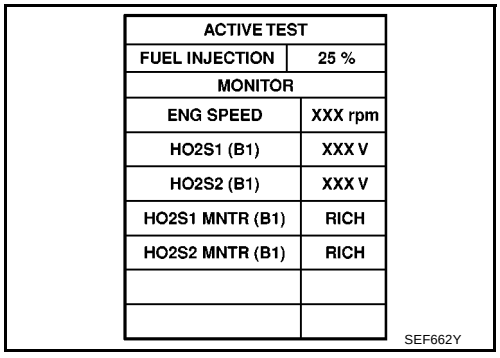

7. Check “HO2S2 (B1)” at idle speed when adjusting “FUEL INJECTION” to ±25%.

[CR10 engine models]

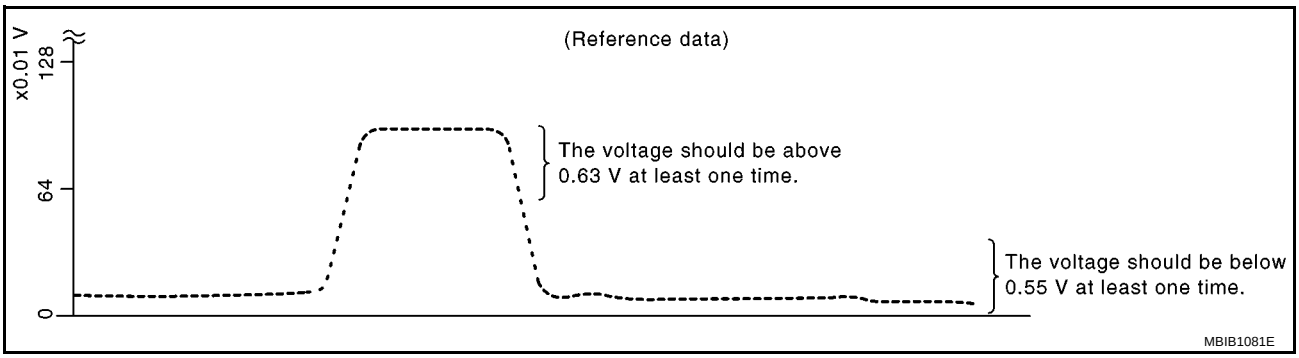

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.55V at least once when the "FUEL INJECTION" is −25%.

[A/T models with CR14 engine without ESP]

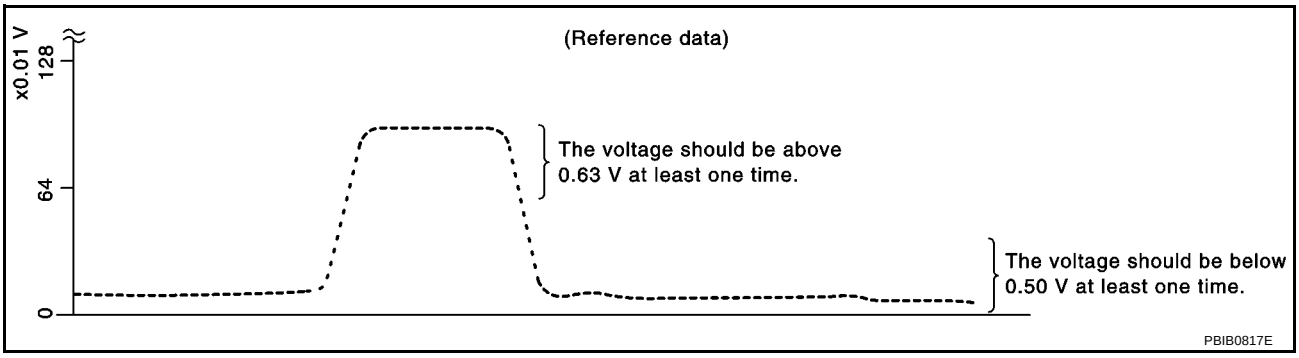

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.50V at least once when the "FUEL INJECTION" is −25%.

[Except above models]

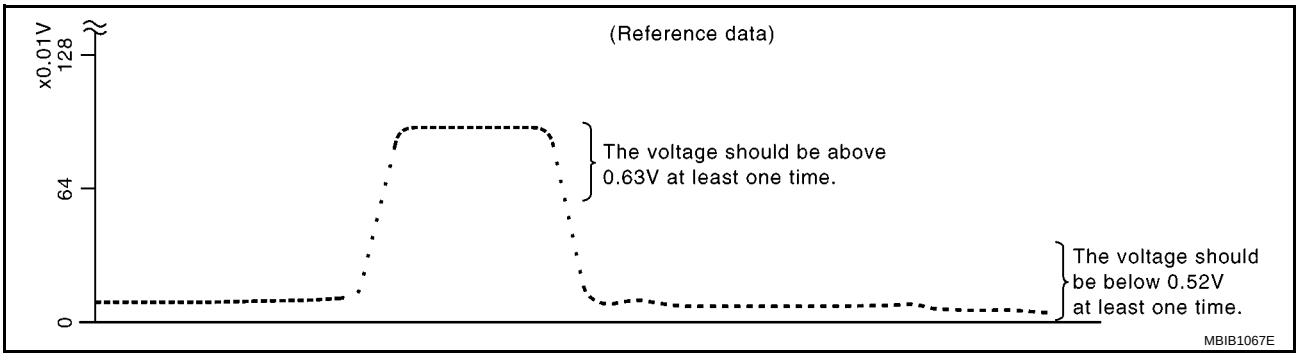

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.52V at least once when the "FUEL INJECTION" is −25%.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

⊗ Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.

6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.63V at least once during this procedure.
If the voltage is above 0.63V at step 6, step 7 is not necessary.
7. Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
The voltage should be below 0.55V (CR10 engine models), 0.50V (A/T models with CR14 engine without ESP), 0.52V (Other models) at least once during this procedure.
8. If NG, replace heated oxygen sensor 2.

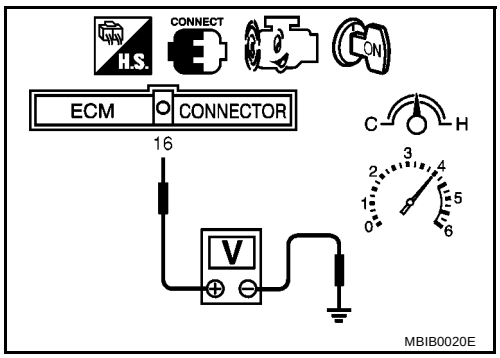

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00O6C

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

DTC P0139 HO2S2

PFP:226A0

Component Description

EBS00O6D

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas.
Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.
This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.
Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

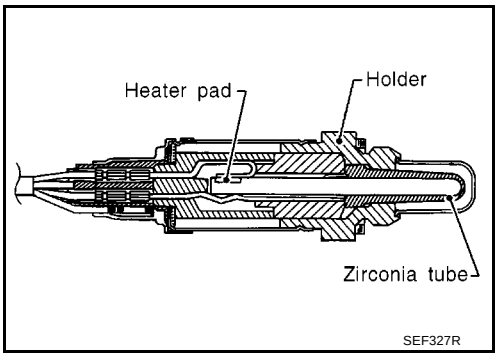

CONSULT-II Reference Value in Data Monitor Mode

EBS00O6E

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ←→ RICH

On Board Diagnosis Logic

EBS00O6F

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the switching response of the sensor's voltage is faster than specified during the various driving condition such as fuel-cut.

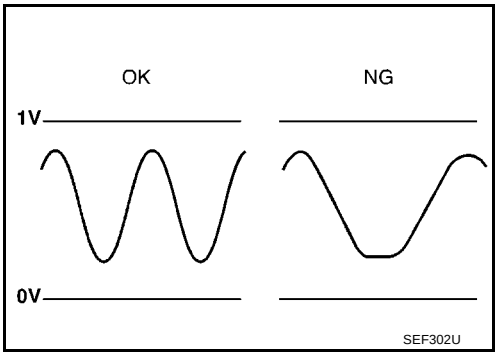

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0139 0139	Heated oxygen sensor 2 circuit slow response	It takes more time for the sensor to respond between rich and lean than the specified time.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 2 ● Fuel pressure ● Injectors ● Intake air leaks

DTC Confirmation Procedure

EBS00O6G

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
- **"COMPLETED" will appear on CONSULT-II screen when all tests "COND1", "COND2" and "COND3" are completed.**
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Never stop engine during this procedure. If the engine is stopped, retry this procedure from step 2 in Procedure for COND1.

WITH CONSULT-II

Procedure for COND1

For the best results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°(32 to 86°F).

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle 1 minute.
5. Select "HO2S2 (B1) P0139" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
6. Touch "START".
7. Start engine and let it idle for at least 30 seconds.
8. Rev engine up to 2,000 rpm 2 or 3 times quickly under no load.
   If "COMPLETED" appears on CONSULT-II screen, go to step 2 in "Procedure for COND3".
   If "COMPLETED" does not appear on CONSULT-II screen, go to the following step.
9. When the following conditions are met, "TESTING" will be displayed at "COND1" on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 60 seconds.)

ENG SPEED	More than 1,000 rpm
B/FUEL SCHDL	More than 1.0 msec
COOLANT TEMP/S	70 - 105 °C (158 - 221°F)
Selector level	Suitable position

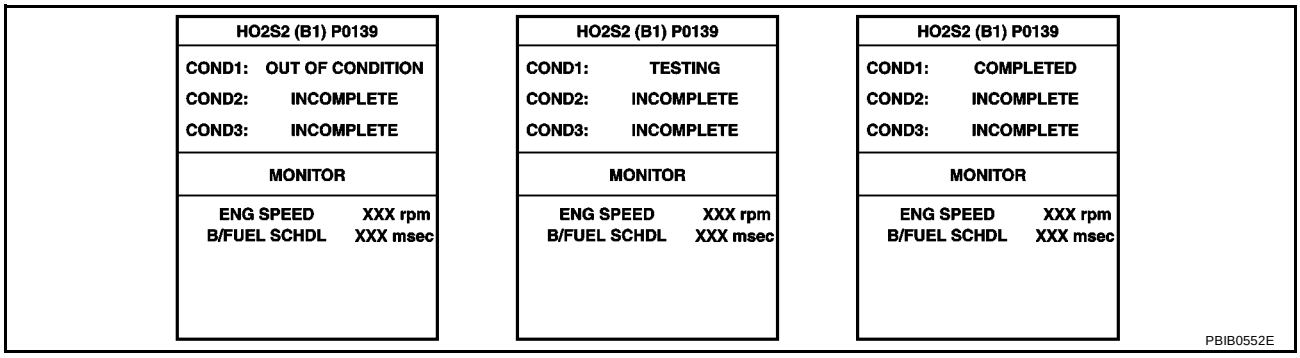

NOTE:
- **If "TESTING" is not displayed after 5 minutes, retry from step 2 in Procedure for COND1.**
- **If "COMPLETED" already appears at "COND2" on CONSULT-II screen before Procedure for COND2 is conducted, it is unnecessary to conduct step 1 in Procedure for COND2.**

Procedure for COND2

1. While driving, release accelerator pedal completely from the above condition [step 9] until “INCOMPLETE” at “COND2” on CONSULT-II screen has turned to “COMPLETED”. (It will take approximately 4 seconds.)

NOTE:
If “COMPLETED” already appears at “COND3” on CONSULT-II screen before Procedure for COND3 is conducted, it is unnecessary to conduct step 1 in Procedure for COND3.

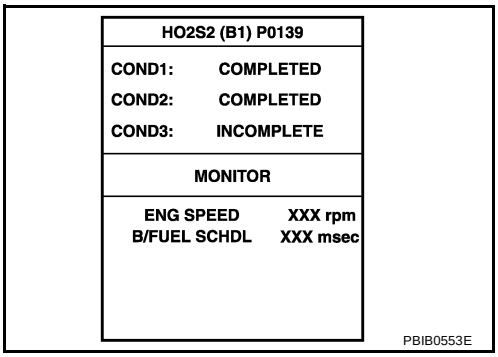

Procedure for COND3

1. Stop vehicle and let it idle until “INCOMPLETE” of “COND3” on CONSULT-II screen has turned to “COMPLETED”. (It will take a maximum of approximately 6 minutes.)
2. Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”.
   If “NG” is displayed, refer to EC-203, "Diagnostic Procedure" .
   If “CAN NOT BE DIAGNOSED” is displayed, perform the following.

a. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
b. Turn ignition switch ON and select “COOLANTEMP/S” in “DATA MONITOR” mode with CONSULT-II.
c. Start engine and warm it up while monitoring “COOLANTEMP/S” indication on CONSULT-II.
d. When “COOLANTEMP/S” indication reaches to 70°(158°F), go to procedure for COND1 step 3.

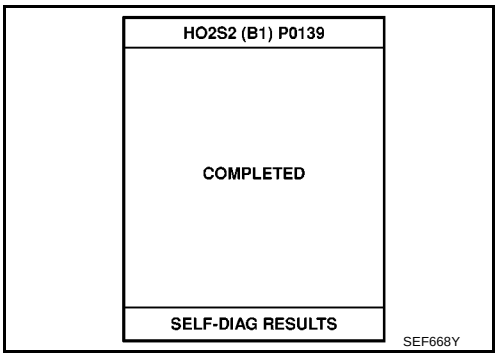

Overall Function Check

EBS00O6H

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.
6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
   (Depress and release accelerator pedal as soon as possible.)
   A change of voltage should be more than 0.06V for 1 second during this procedure.
   If the voltage can be confirmed in step 6, step 7 is not necessary.
7. Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
   A change of voltage should be more than 0.06V for 1 second during this procedure.
8. If NG, go to EC-203, "Diagnostic Procedure" .

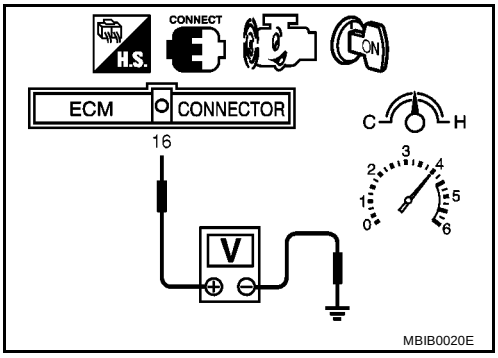

Wiring Diagram

EBS00O6I

EC-HO2S2-01

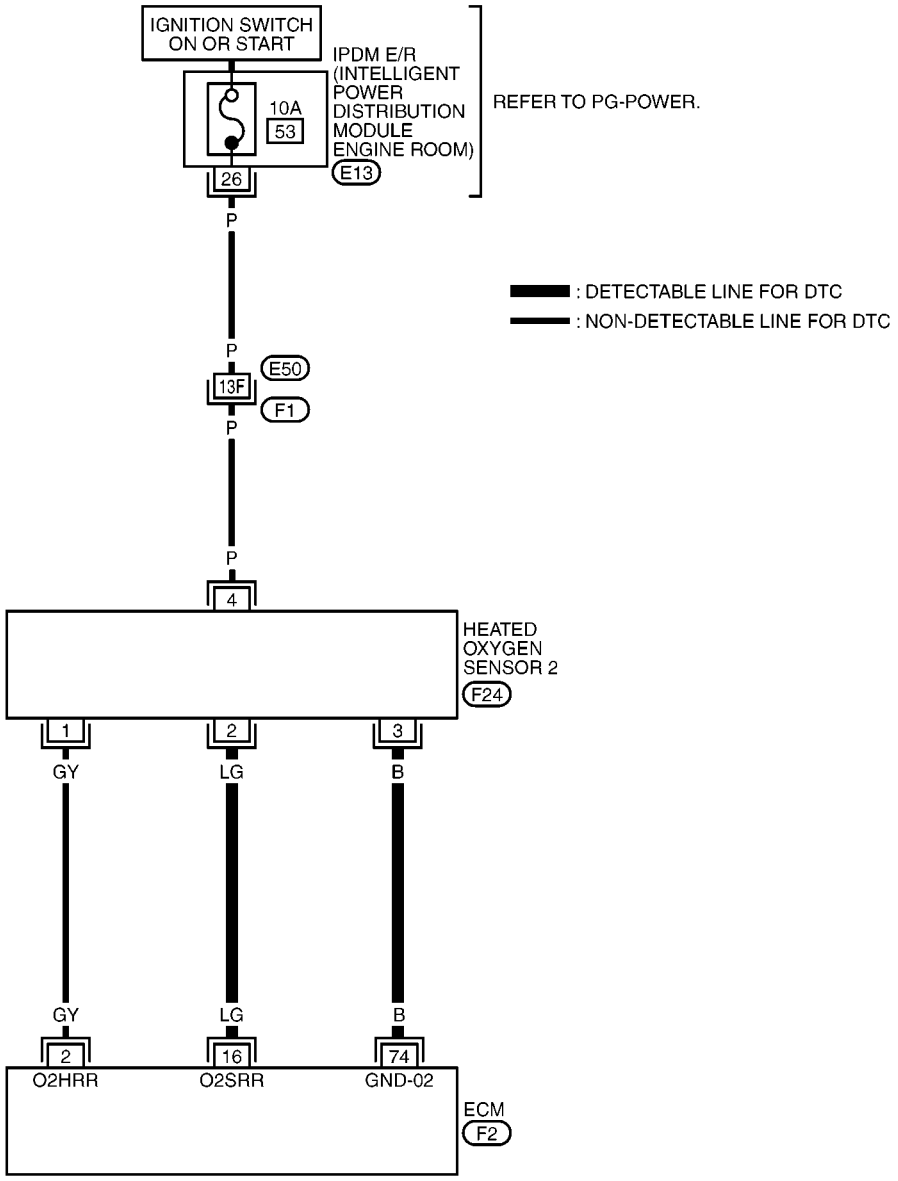

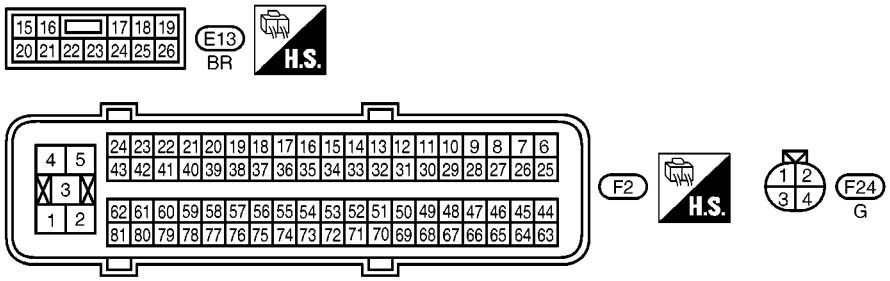

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0273E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● **Warm-up condition** ● Revving engine from idle to 3,000 rpm quickly after the following conditions are met. ● Keeping the engine speed at between 3,500 to 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - Approximately 1.0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00O6J

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

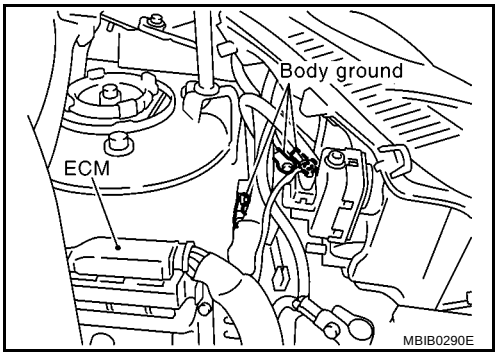

2. CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching “CLEAR”.
4. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 or P0172 detected?
   Is it difficult to start engine?

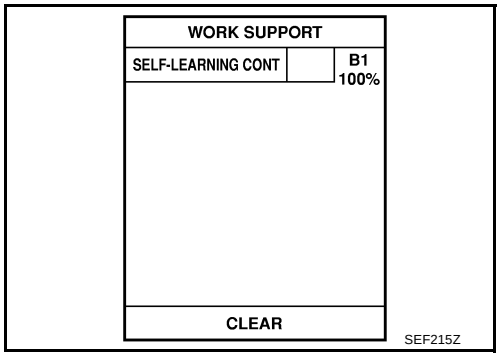

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect manifold absolute pressure sensor harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Make sure that DTC P0107 is displayed.
6. Erase the DTC memory. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 or P0172 detected?
   Is it difficult to start engine?

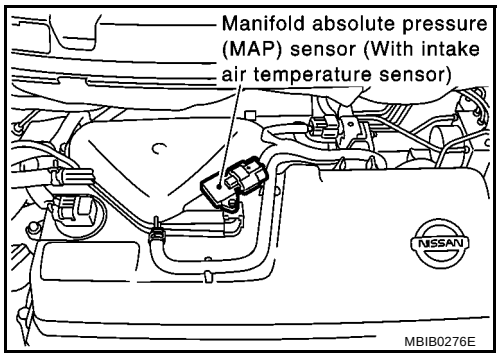

Yes or No

Yes >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to EC-208 or EC-215 .
No >> GO TO 3.

3. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S2 terminal 3.
   Refer to Wiring Diagram.

   Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

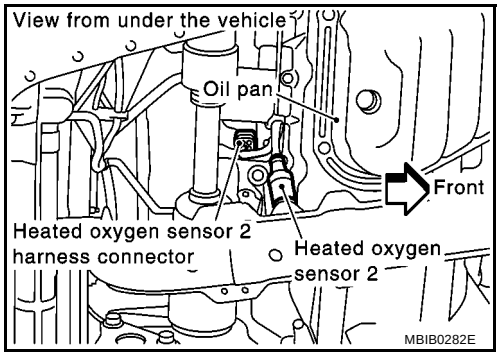

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 16 and HO2S2 terminal 2. Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 16 or HO2S2 terminal 2 and ground. Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-205, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O6K

HEATED OXYGEN SENSOR 2

With CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.

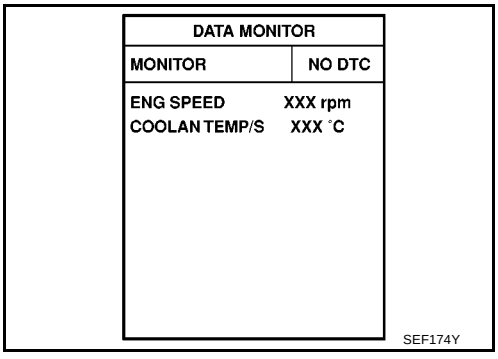

6. Select “FUEL INJECTION” in “ACTIVE TEST” mode, and select “HO2S2 (B1)” as the monitor item with CONSULT-II.

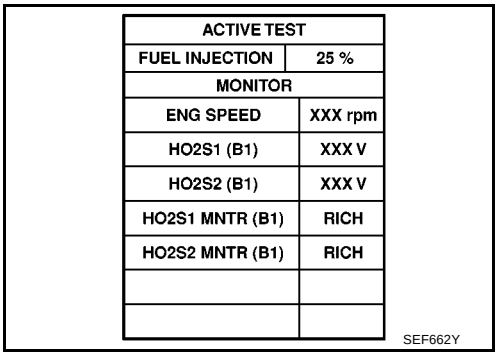

7. Check “HO2S2 (B1)” at idle speed when adjusting “FUEL INJECTION” to ±25%.

[CR10 engine models]

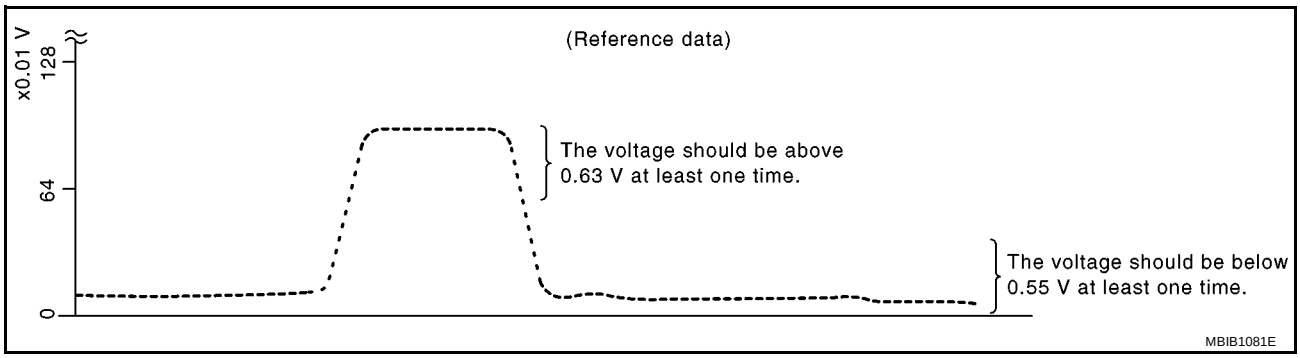

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.55V at least once when the "FUEL INJECTION" is −25%.

[A/T models with CR14 engine without ESP]

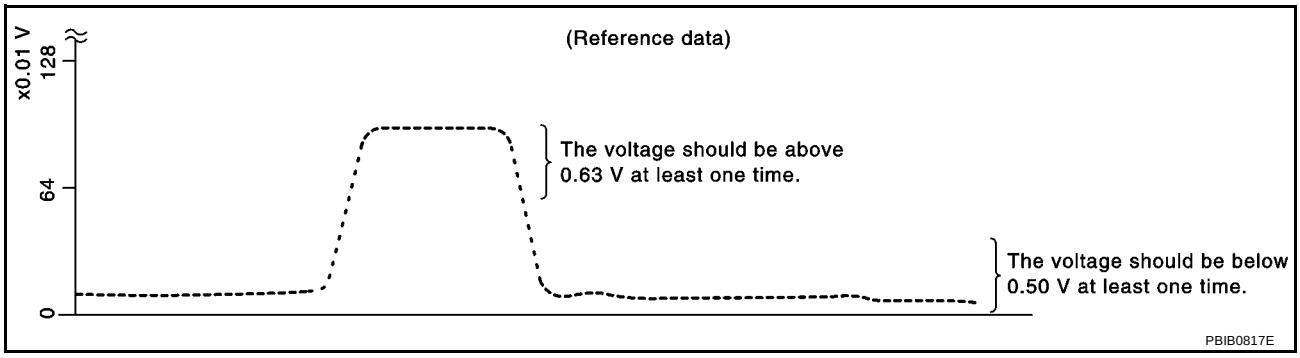

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.50V at least once when the "FUEL INJECTION" is −25%.

[Except above models]

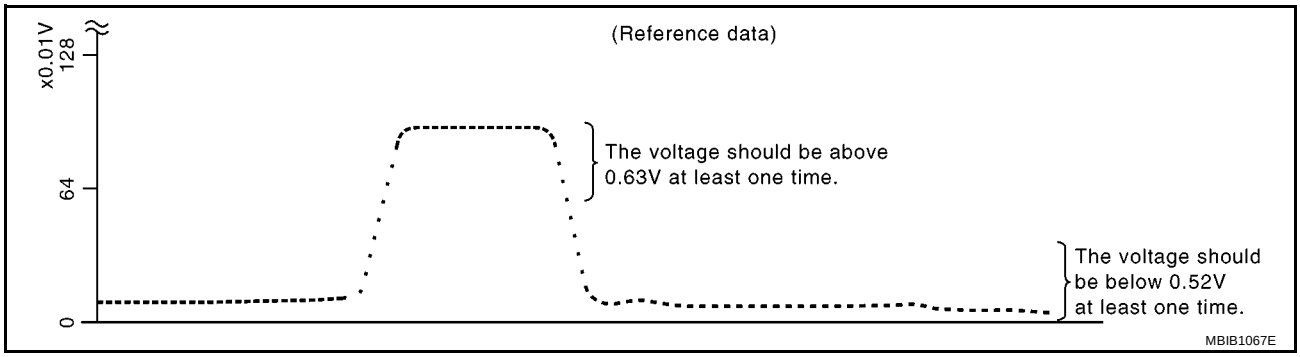

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.52V at least once when the "FUEL INJECTION" is −25%.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

⊗ Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.

6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.63V at least once during this procedure.
If the voltage is above 0.63V at step 6, step 7 is not necessary.
7. Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
The voltage should be below 0.55V (CR10 engine models), 0.50V (A/T models with CR14 engine without ESP), 0.52V (Other models) at least once during this procedure.
8. If NG, replace heated oxygen sensor 2.

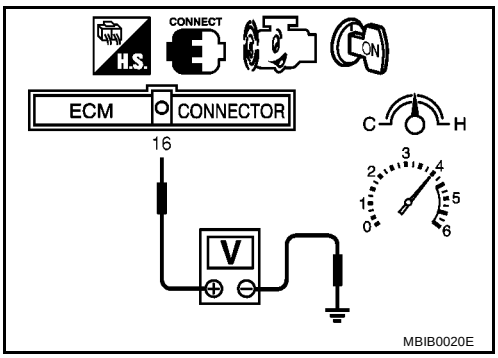

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00O6L

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

DTC P0171 FUEL INJECTION SYSTEM FUNCTION

PFP:16600

On Board Diagnosis Logic

EBS00O6M

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the heated oxygen sensor 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.
In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MI (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Heated oxygen sensors 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injectors

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0171 0171	Fuel injection system too lean	● Fuel injection system does not operate properly. ● The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)	● Intake air leaks ● Heated oxygen sensor 1 ● Injectors ● Exhaust gas leaks ● Incorrect fuel pressure ● Lack of fuel ● Manifold absolute pressure sensor ● Incorrect PCV hose connection

DTC Confirmation Procedure

EBS00O6N

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON and select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
4. Clear the self-learning control coefficient by touching “CLEAR”.
5. Select “DATA MONITOR” mode with CONSULT-II.
6. Start engine again and let it idle for at least 10 minutes.
   The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to EC-211, "Diagnostic Procedure" .
7. If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
8. Crank engine while depressing accelerator pedal. If engine starts, go to EC-211, "Diagnostic Procedure" . If engine does not start, check exhaust and intake air leak visually.

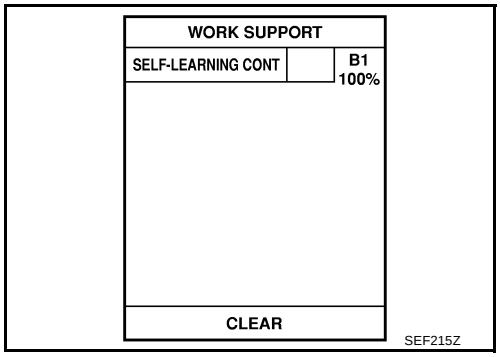

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Disconnect manifold absolute pressure sensor harness connector. Then restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Select “MODE 3” with GST. Make sure DTC P0107 is detected.
6. Select “MODE 4” with GST and erase the DTC P0107.
7. Start engine again and let it idle for at least 10 minutes.
8. Select “MODE 7” with GST. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to EC-211, "Diagnostic Procedure" .

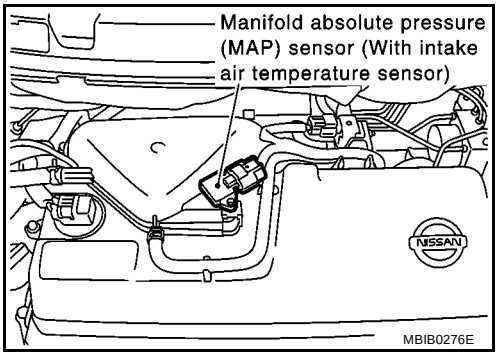

9. If it is difficult to start engine at step 7, the fuel injection system has a malfunction.
10. Crank engine while depressing accelerator pedal. If engine starts, go to EC-211, "Diagnostic Procedure" . If engine does not start, check exhaust and intake air leak visually.

Wiring Diagram

EBS00O6O

EC-FUEL-01

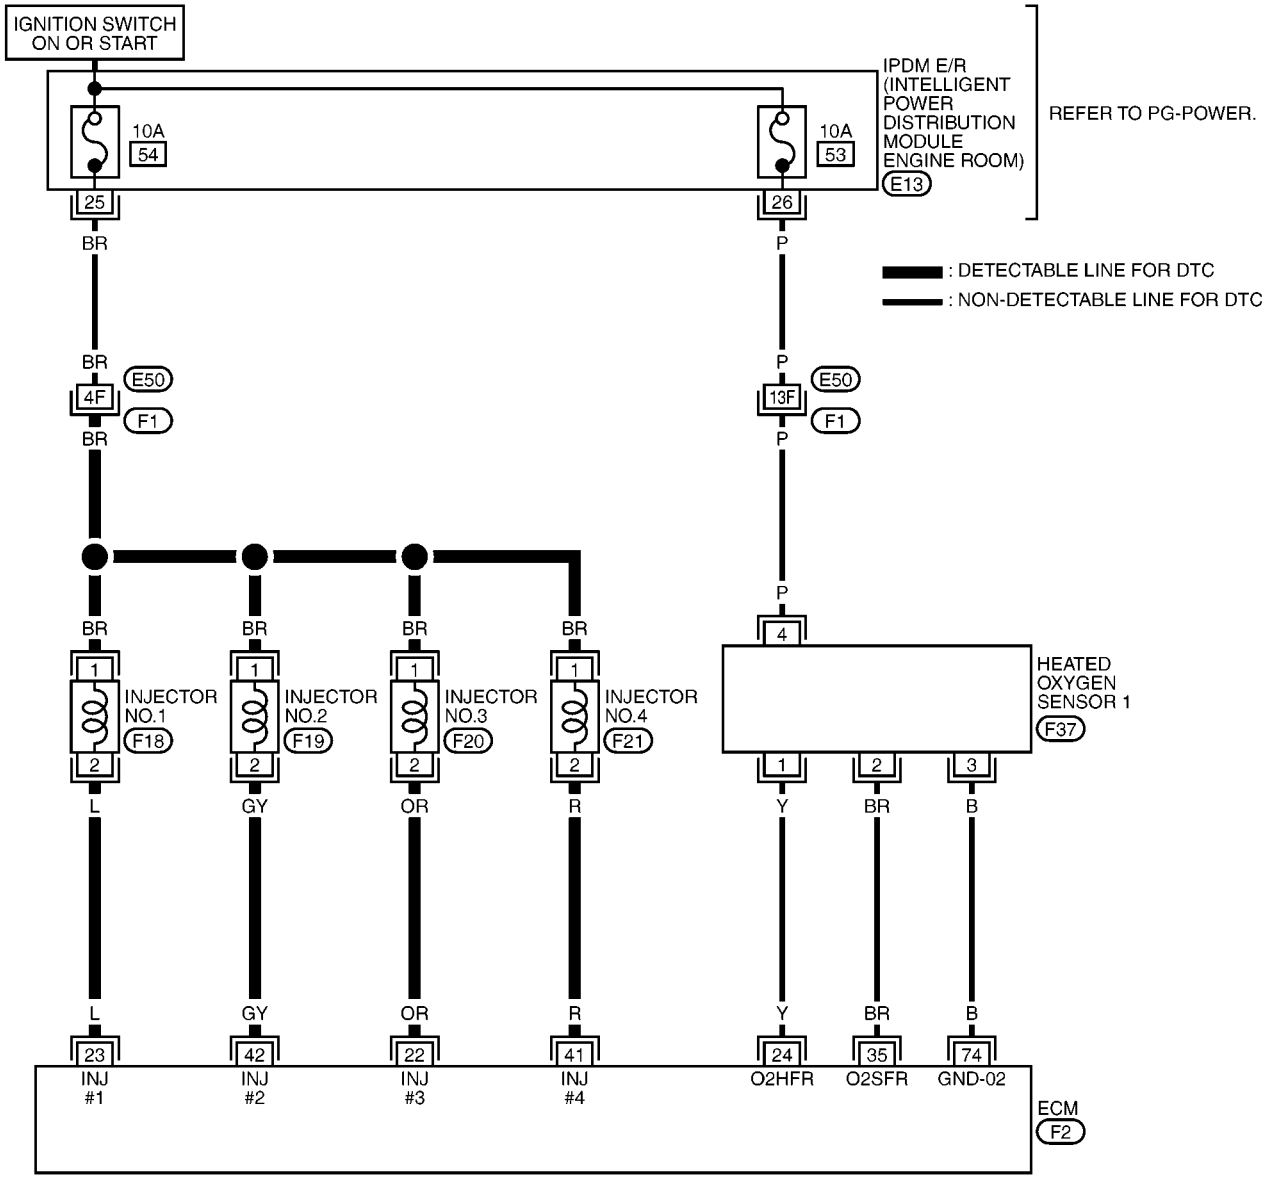

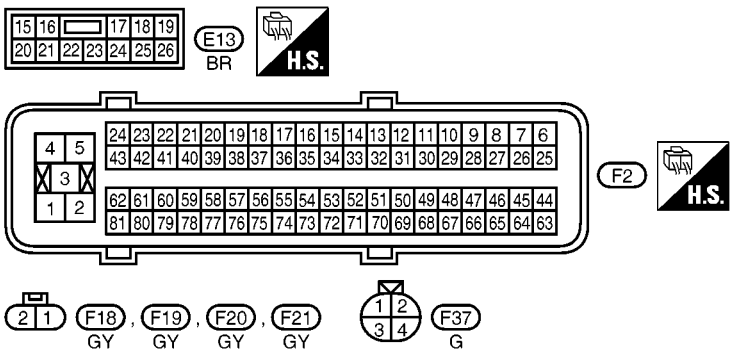

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0274E

Diagnostic Procedure

EBS00O6P

1. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before three way catalyst (manifold).

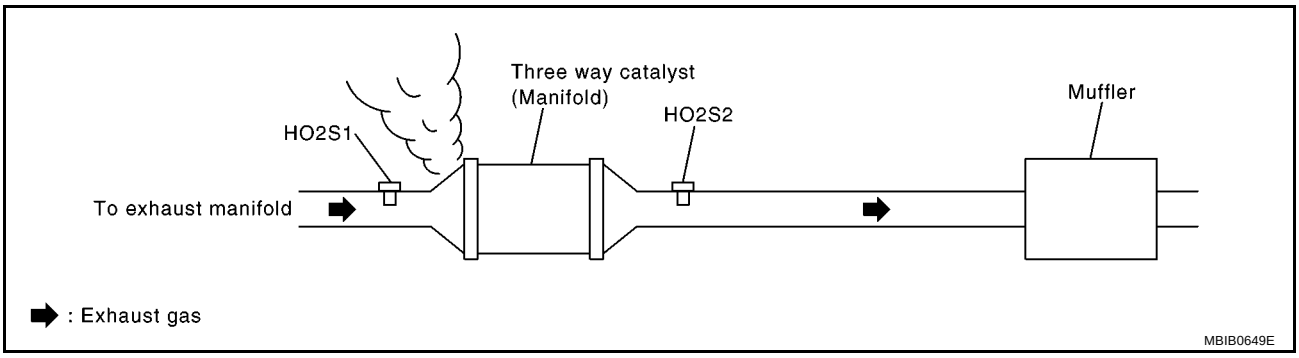

OK or NG

OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK FOR INTAKE AIR LEAK AND PCV HOSE

1. Listen for an intake air leak after the manifold absolute pressure sensor.
2. Check PCV hose connection.

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. CHECK HEATED OXYGEN SENSOR 1 CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 (HO2S1) harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

5. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

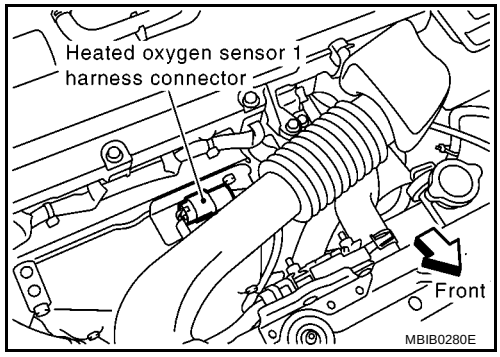

6. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL PRESSURE

1. Release fuel pressure to zero. Refer to EC-44, "FUEL PRESSURE RELEASE" .
2. Install fuel pressure gauge and check fuel pressure. Refer to EC-45, "FUEL PRESSURE CHECK" .

At idling: Approximately 350 kPa (3.5 bar, 3.57 kg/cm^2 , 51 psi)

OK or NG

OK >> GO TO 5.
NG >> Follow the construction of “FUEL PRESSURE CHECK” (EC-44).

5. CHECK MANIFOLD ABSOLUTE PRESSUR SENSOR

With CONSULT-II

1. Install all removed parts.
2. Check manifold absolute pressure sensor signal with CONSULT-II.

Approximately 1.5V: at idling
Approximately 1.2V: at 2,500 rpm

With GST

1. Install all removed parts.
2. Check manifold absolute pressure sensor signal in MODE 1 with GST.

Approximately 1.5V: at idling
Approximately 1.2V: at 2,500 rpm

OK or NG

OK >> GO TO 6.
NG >> Check connectors for rusted terminals or loose connections in the manifold absolute pressure sensor circuit or engine grounds. Refer to EC-148, "DTC P0107, P0108 MANIFOLD ABSOLUTE PRESSURE SENSOR" .

6. CHECK FUNCTION OF INJECTORS

With CONSULT-II

1. Start engine.
2. Perform “POWER BALANCE” in “ACTIVE TEST” mode with CONSULT-II.
3. Make sure that each circuit produces a momentary engine speed drop.

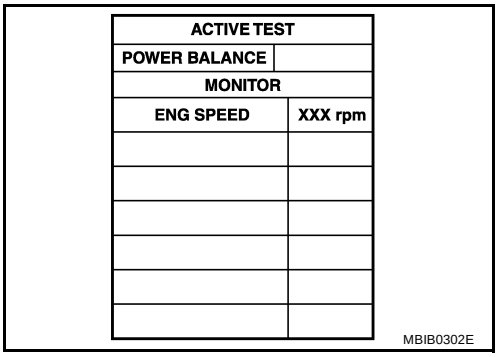

Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.

Clicking noise should be heard.

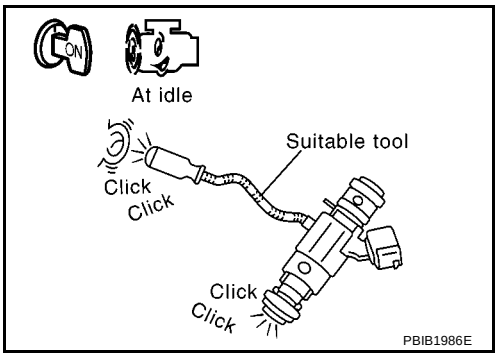

OK or NG

OK >> GO TO 7.
NG >> Perform trouble diagnosis for “INJECTORS”, EC-444, "INJECTOR CIRCUIT" .

7. CHECK INJECTOR

1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
2. Turn ignition switch OFF.
3. Remove injector gallery assembly. Refer to EM-30, "FUEL INJECTOR AND FUEL TUBE" .
   Keep fuel hose and all injectors connected to injector gallery.
   The injector harness connectors should remain connected.
4. Disconnect all ignition coil harness connectors.
5. Prepare pans or saucers under each injector.
6. Crank engine for about 3 seconds. Make sure that fuel sprays out from injectors.

Fuel should be sprayed evenly for each injector.

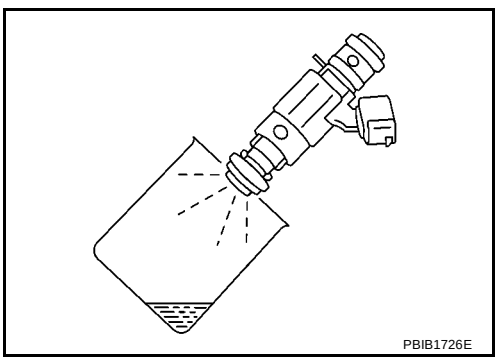

OK or NG

OK >> GO TO 8.
NG >> Replace injectors from which fuel does not spray out. Always replace O-ring with new ones.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P0172 FUEL INJECTION SYSTEM FUNCTION

PFP:16600

On Board Diagnosis Logic

EBS00O6Q

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the heated oxygen sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.
In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MI (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Heated oxygen sensors 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injectors

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0172 0172	Fuel injection system too rich	● Fuel injection system does not operate properly. ● The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)	● Heated oxygen sensor 1 ● Injectors ● Exhaust gas leaks ● Incorrect fuel pressure ● Manifold absolute pressure sensor

DTC Confirmation Procedure

EBS00O6R

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON and select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
4. Clear the self-learning control coefficient by touching “CLEAR”.
5. Select “DATA MONITOR” mode with CONSULT-II.
6. Start engine again and let it idle for at least 10 minutes.
   The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to EC-218, "Diagnostic Procedure" .
7. If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
8. Crank engine while depressing accelerator pedal.
   If engine starts, go to EC-218, "Diagnostic Procedure" . If engine does not start, remove ignition plugs and check for fouling, etc.

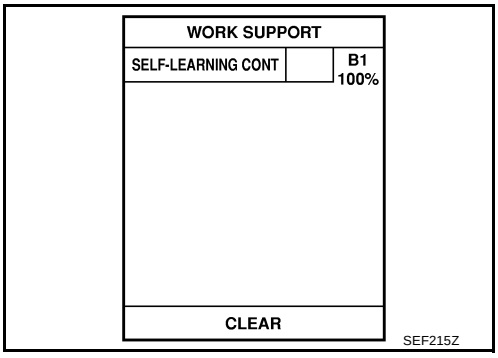

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Disconnect manifold absolute pressure sensor harness connector. Then restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Select “MODE 3” with GST. Make sure DTC P0107 is detected.
6. Select “MODE 4” with GST and erase the DTC P0107.
7. Start engine again and let it idle for at least 10 minutes.
8. Select “MODE 7” with GST. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to EC-218, "Diagnostic Procedure" .

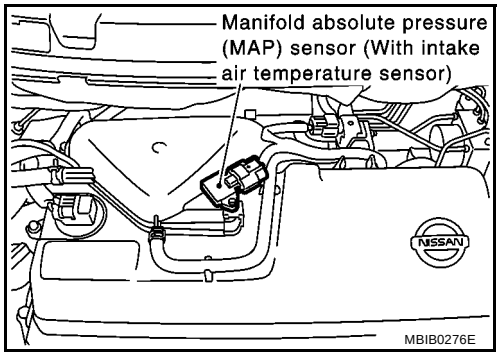

9. If it is difficult to start engine at step 7, the fuel injection system has a malfunction.
10. Crank engine while depressing accelerator pedal.
    If engine starts, go to EC-218, "Diagnostic Procedure" . If engine does not start, remove ignition plugs and check for fouling, etc.

Wiring Diagram

EBS00O6S

EC-FUEL-01

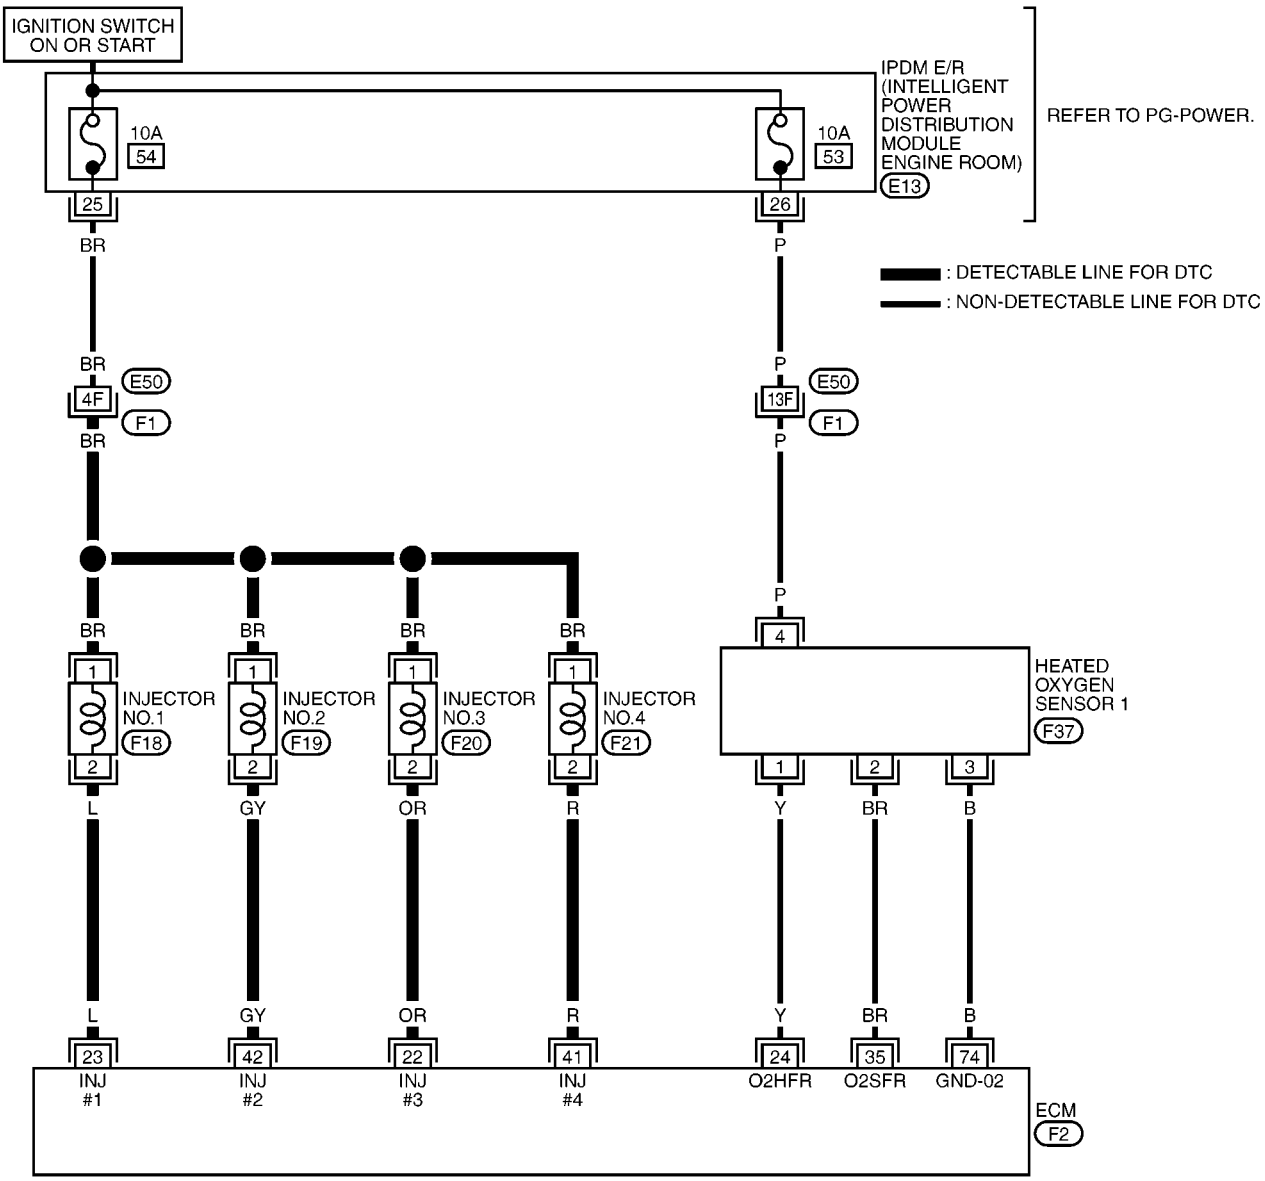

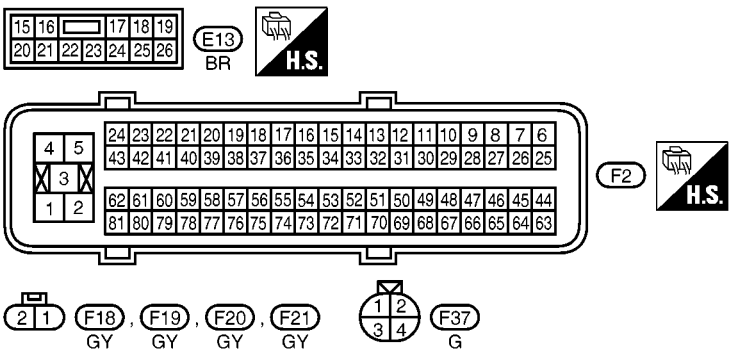

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0274E

Diagnostic Procedure

EBS00O6T

1. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before three way catalyst (manifold).

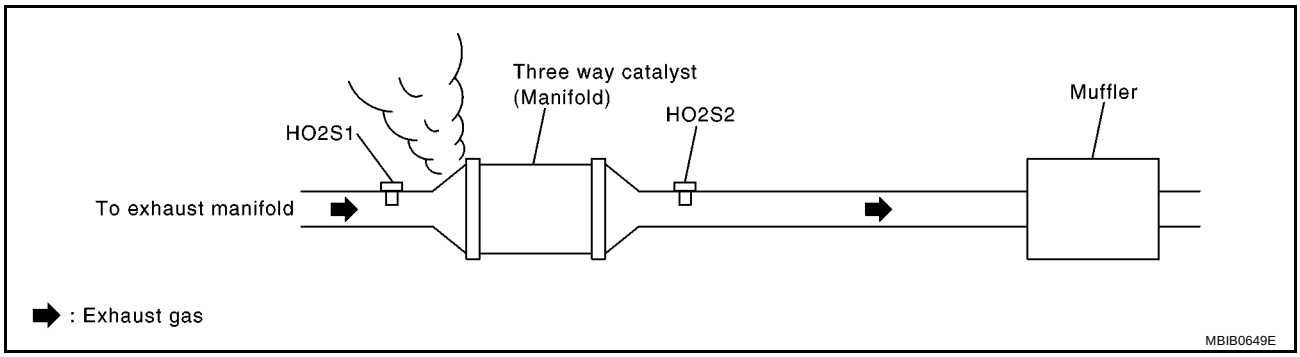

OK or NG

OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the manifold absolute pressure sensor.

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. CHECK HEATED OXYGEN SENSOR 1 CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 (HO2S1) harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

5. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

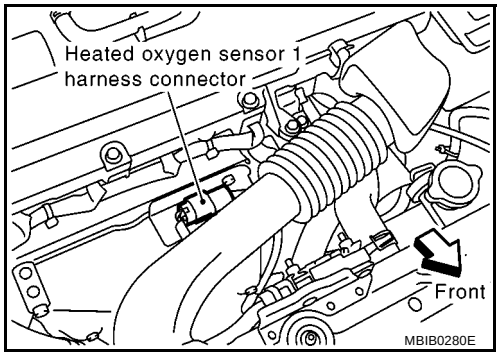

6. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL PRESSURE

1. Release fuel pressure to zero. Refer to EC-44, "FUEL PRESSURE RELEASE" .
2. Install fuel pressure gauge and check fuel pressure. Refer to EC-45, "FUEL PRESSURE CHECK" .

   At idling: 350 kPa (3.5 bar, 3.57 kg/cm2, 51 psi)

OK or NG

OK >> GO TO 5.
NG >> Follow the construction of “FUEL PRESSURE CHECK”.

5. CHECK MANIFOLD ABSOLUTE PRESSUR SENSOR

With CONSULT-II

1. Install all removed parts.
2. Check manifold absolute pressure sensor signal with CONSULT-II.

Approximately 1.5V: at idling
Approximately 1.2V: at 2,500 rpm

With GST

1. Install all removed parts.
2. Check manifold absolute pressure sensor signal in MODE 1 with GST.

Approximately 1.5V: at idling
Approximately 1.2V: at 2,500 rpm

OK or NG

OK >> GO TO 6.
NG >> Check connectors for rusted terminals or loose connections in the manifold absolute pressure sensor circuit or engine grounds. Refer to EC-148, "DTC P0107, P0108 MANIFOLD ABSOLUTE PRESSURE SENSOR" .

6. CHECK FUNCTION OF INJECTORS

With CONSULT-II

1. Start engine.
2. Perform “POWER BALANCE” in “ACTIVE TEST” mode with CONSULT-II.
3. Make sure that each circuit produces a momentary engine speed drop.

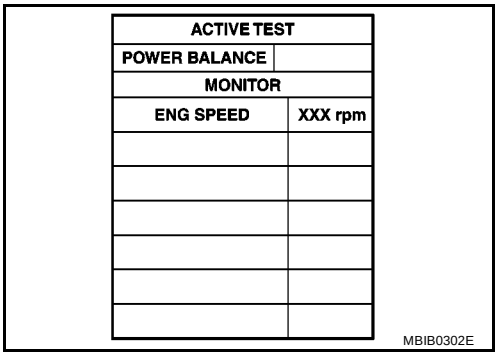

Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.

Clicking noise should be heard.

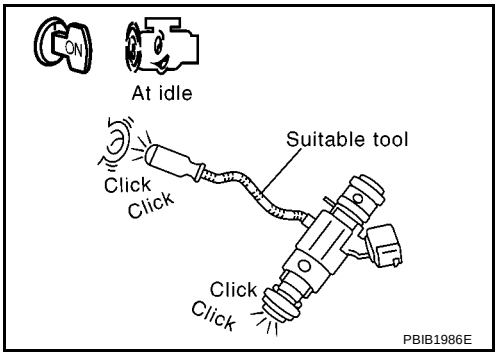

OK or NG

OK >> GO TO 7.
NG >> Perform trouble diagnosis for INJECTORS, refer to EC-444, "INJECTOR CIRCUIT" .

7. CHECK INJECTOR

1. Remove injector assembly. Refer to EM-30, "FUEL INJECTOR AND FUEL TUBE" .
   Keep fuel hose and all injectors connected to injector gallery.
2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
3. Disconnect injector harness connectors.
4. Disconnect all ignition coil harness connectors.
5. Prepare pans or saucers under each injectors.
6. Crank engine for about 3 seconds.
   Make sure fuel does not drip from injector.

OK or NG

OK (Does not drip.)>>GO TO 8.
NG (Drips.)>>Replace the injectors from which fuel is dripping. Always replace O-ring with new one.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P0221 TP SENSOR

PFP:16119

Component Description

EBS00O6U

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

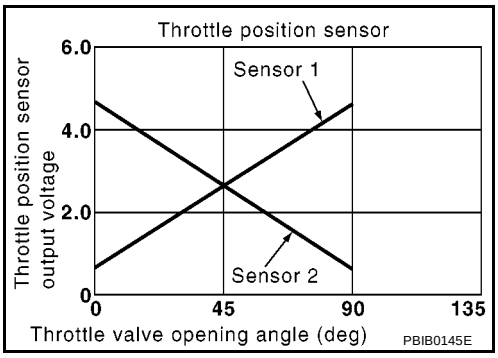

CONSULT-II Reference Value in Data Monitor Mode

EBS00O6V

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00O6W

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0221 0221	Throttle position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	● Harness or connector (The TP sensor 1 and 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 1 and 2)

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00O6X

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-224, "Diagnostic Procedure" .

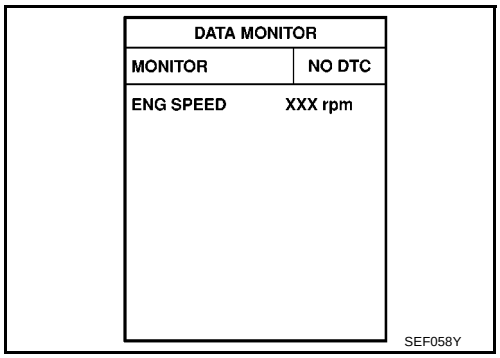

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O6Y

EC-TPS3-01

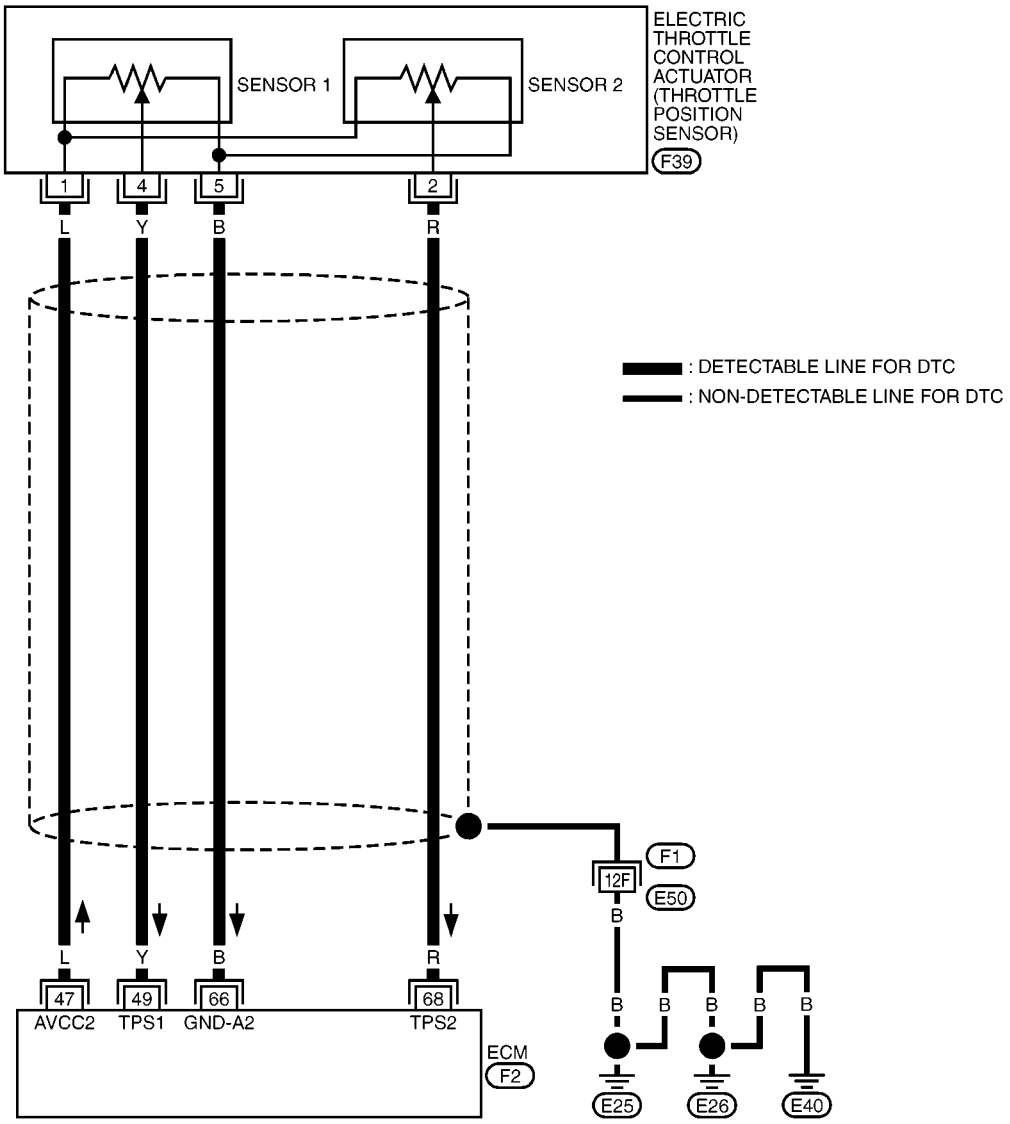

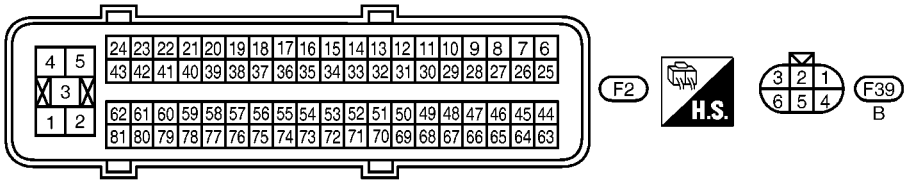

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0275E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS00O6Z

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

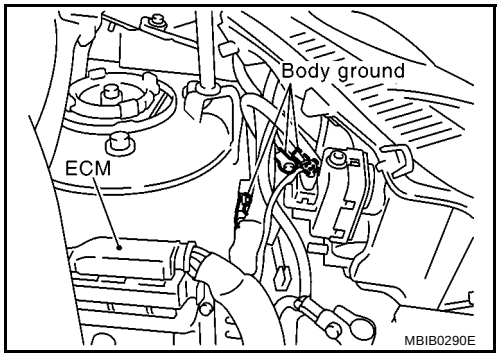

2. CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

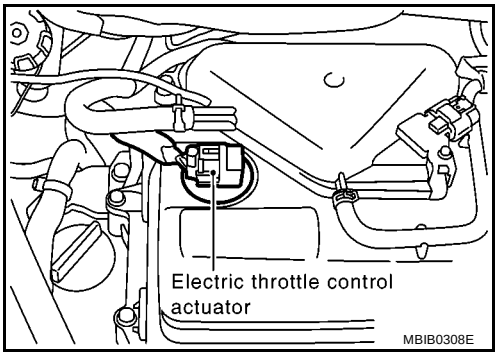

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

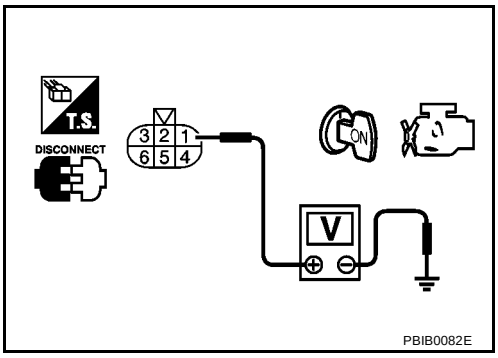

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 49 and electric throttle control actuator terminal 4, ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-226, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O70

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

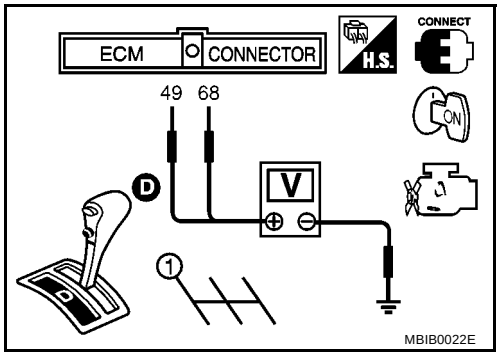

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-42, "Throttle Valve Closed Position Learning" .
8. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00O71

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0222, P0223 TP SENSOR

PFP:16119

Component Description

EBS00O72

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

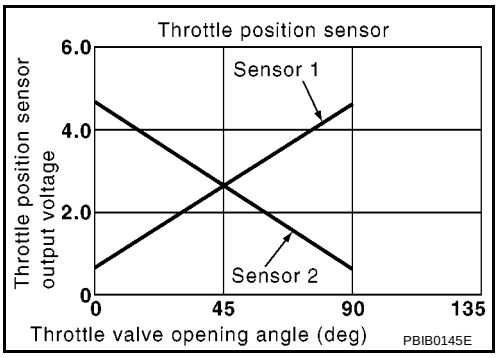

CONSULT-II Reference Value in Data Monitor Mode

EBS00O73

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00O74

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0222 0222	Throttle position sensor 1 circuit low input	An excessively low voltage from the TP sensor 1 is sent to ECM.	● Harness or connectors (The TP sensor 1 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 1)
P0223 0223	Throttle position sensor 1 circuit high input	An excessively high voltage from the TP sensor 1 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00O75

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-230, "Diagnostic Procedure" .

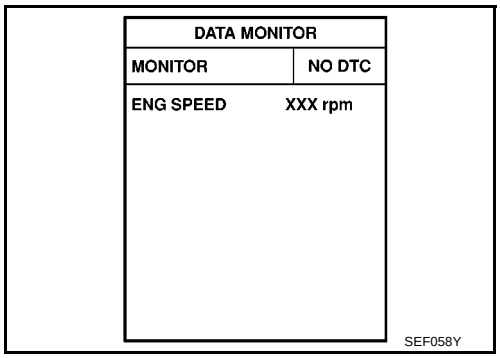

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O76

EC-TPS1-01

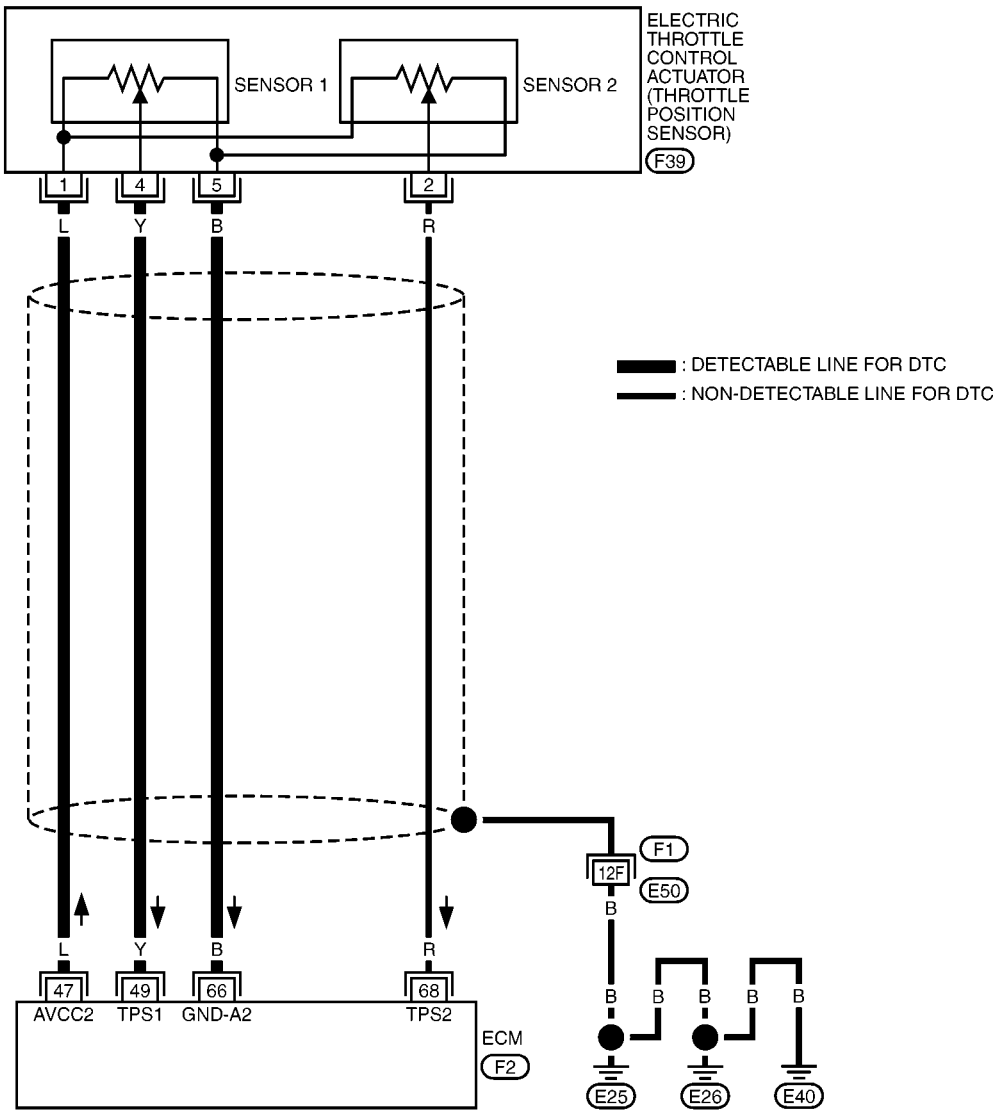

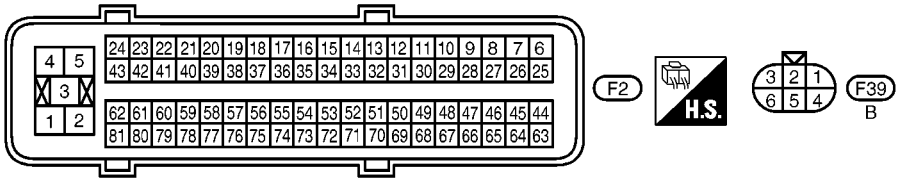

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0276E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS00O77

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

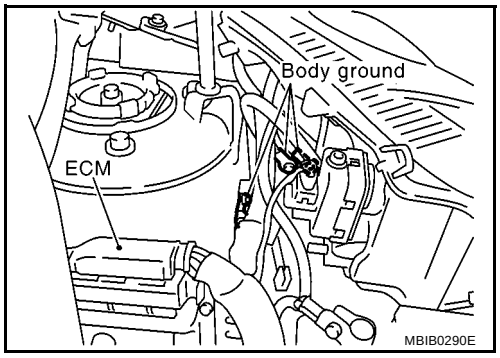

2. CHECK THROTTLE POSITION SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

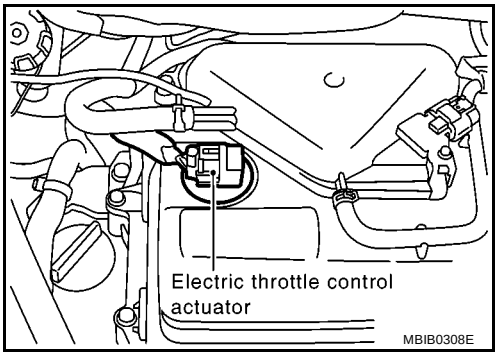

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

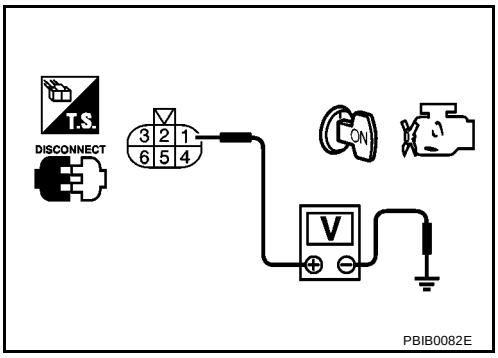

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 49 and electric throttle control actuator terminal 4. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-232, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O78

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

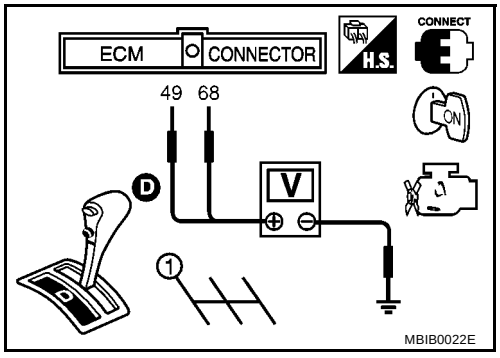

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-42, "Throttle Valve Closed Position Learning" .
8. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00O79

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0226 APP SENSOR

PFP:18002

Component Description

EBS00O7A

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

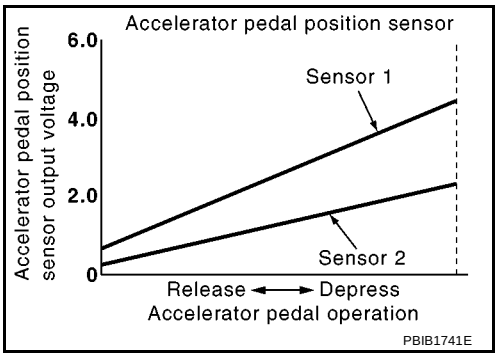

CONSULT-II Reference Value in Data Monitor Mode

EBS00O7B

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS00O7C

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0226 0226	Accelerator pedal position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	● Harness or connector (The APP sensor 1 and 2 circuit is open or shorted.) ● Accelerator pedal position sensor 1 and 2

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00O7D

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-238, "Diagnostic Procedure" .

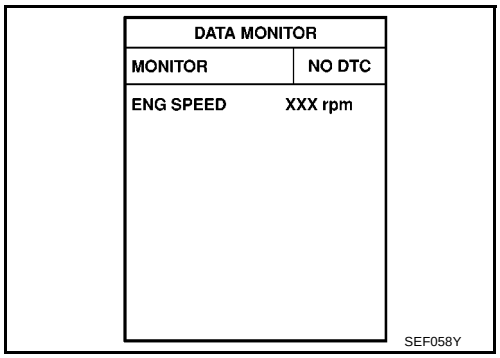

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram
LHD MODELS

EBS00O7E

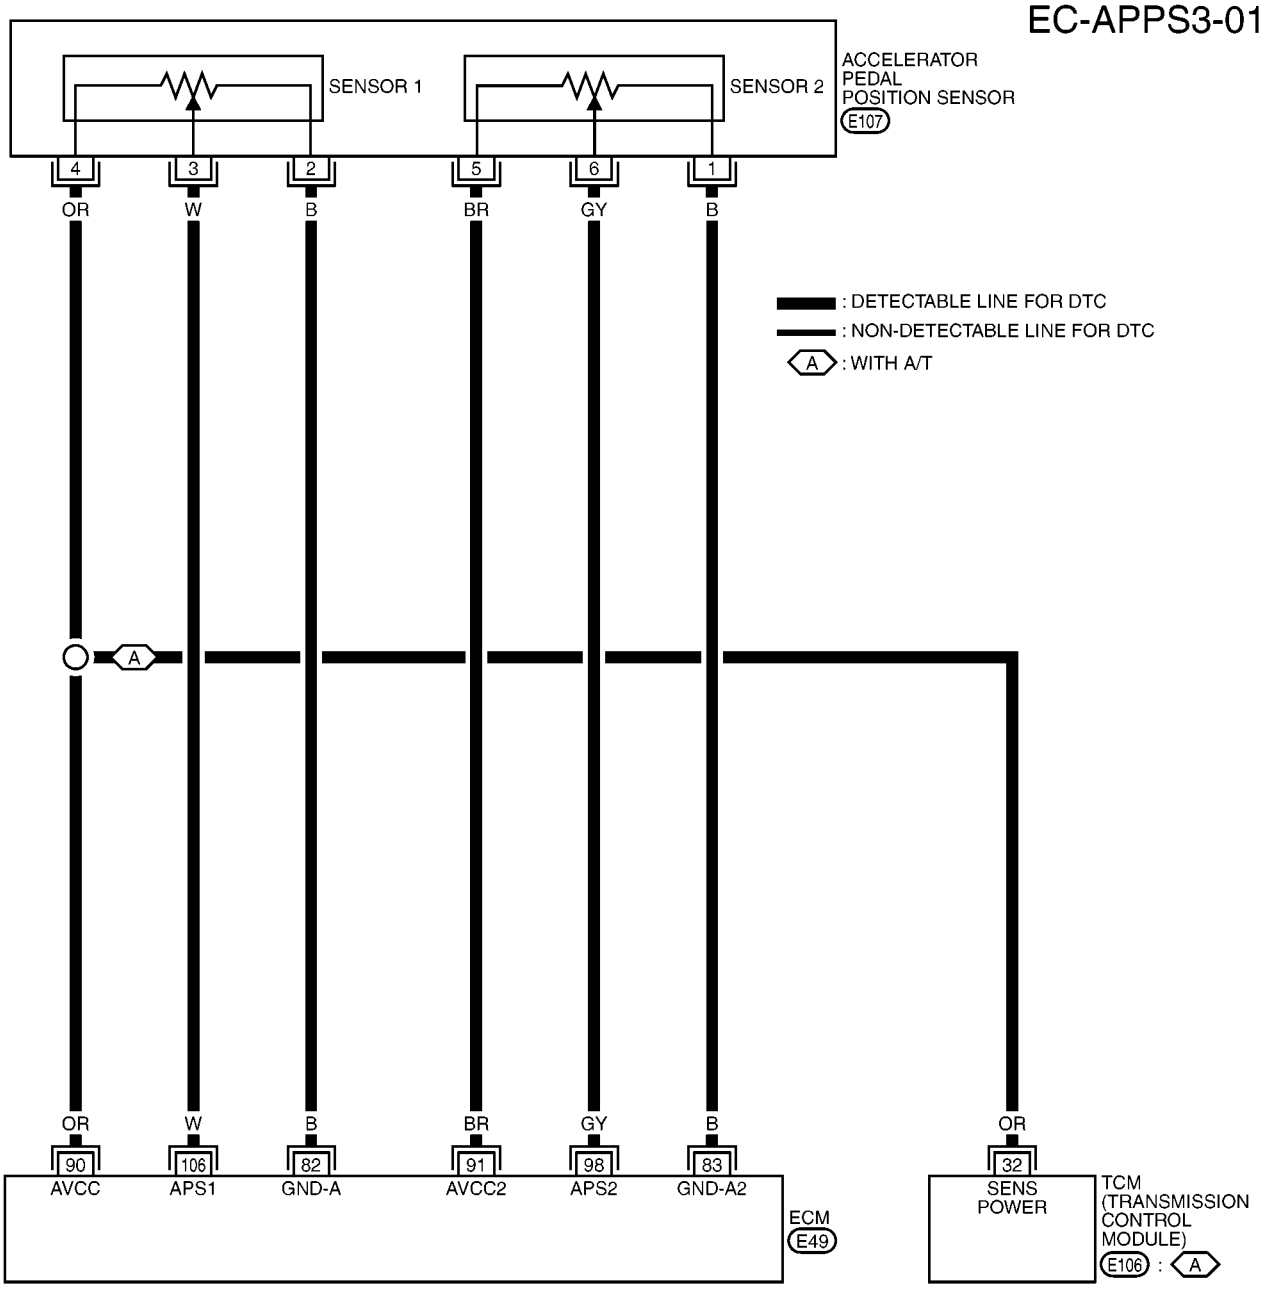

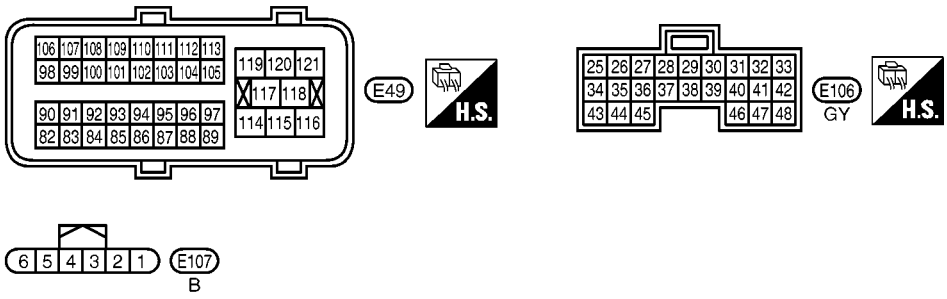

MBWA0277E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS3-02

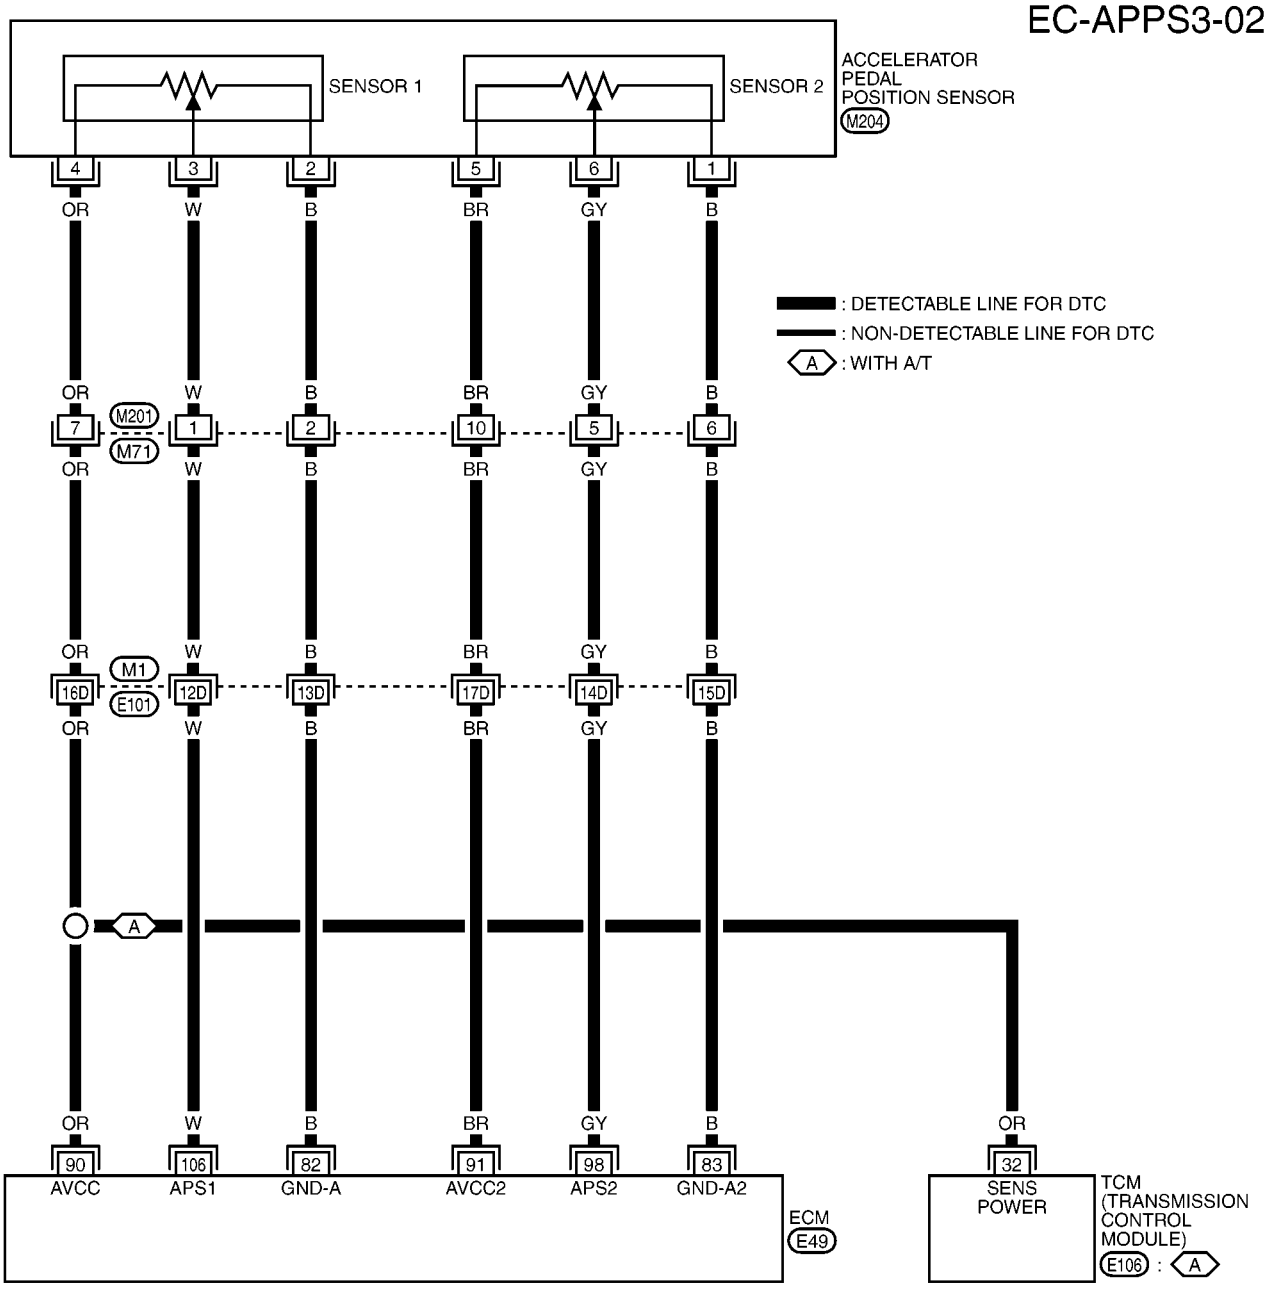

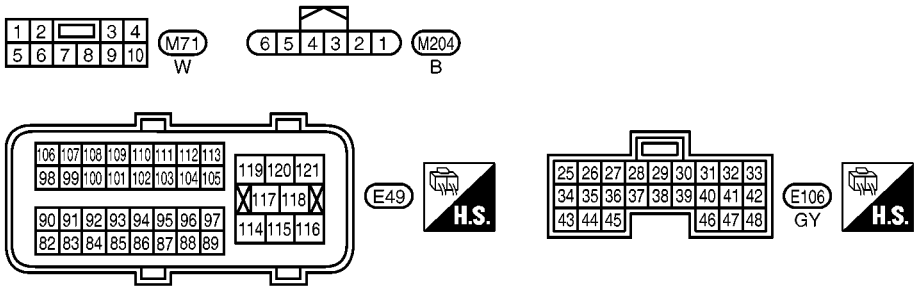

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0278E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS00O7F

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

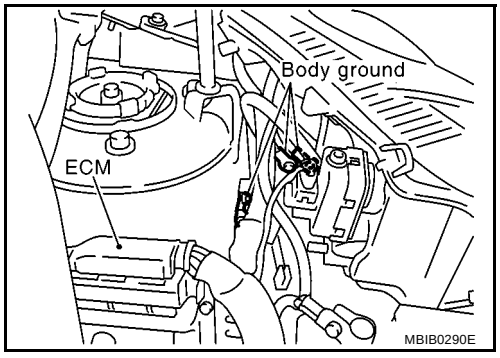

2. CHECK APP SENSOR POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

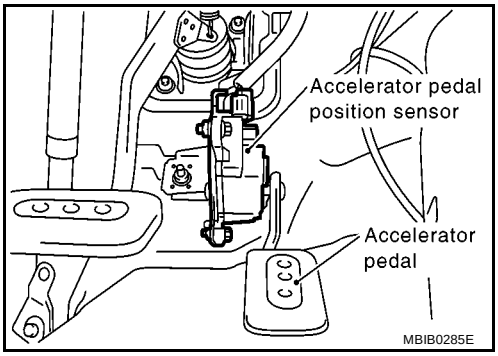

3. Check voltage between APP sensor terminals 4, 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

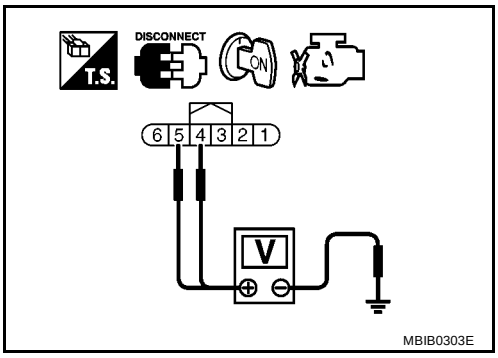

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2, ECM terminal 83 and APP sensor terminal 1.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3, ECM terminal 98 and APP sensor terminal 6.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-241, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .
3. Perform EC-42, "Throttle Valve Closed Position Learning" .
4. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O7G

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.
3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

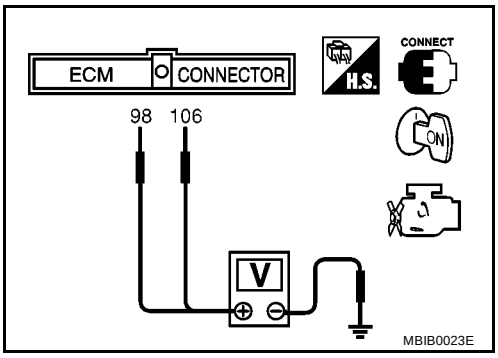

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-42, "Accelerator Pedal Released Position Learning" .
6. Perform EC-42, "Throttle Valve Closed Position Learning" .
7. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00O7H

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P0227, P0228 APP SENSOR

PFP:18002

Component Description

EBS00O7I

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

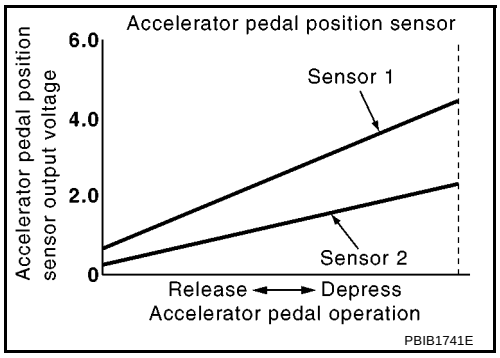

CONSULT-II Reference Value in Data Monitor Mode

EBS00O7J

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS00O7K

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0227 0227	Accelerator pedal position sensor 1 circuit low input	An excessively low voltage from the APP sensor 1 is sent to ECM.	● Harness or connectors (The APP sensor 1 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 1)
P0228 0228	Accelerator pedal position sensor 1 circuit high input	An excessively high voltage from the APP sensor 1 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00O7L

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-247, "Diagnostic Procedure" .

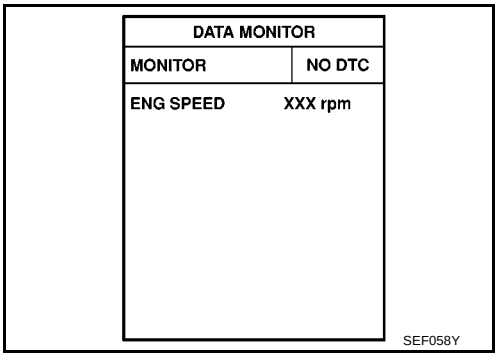

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram
LHD MODELS

EBS00O7M

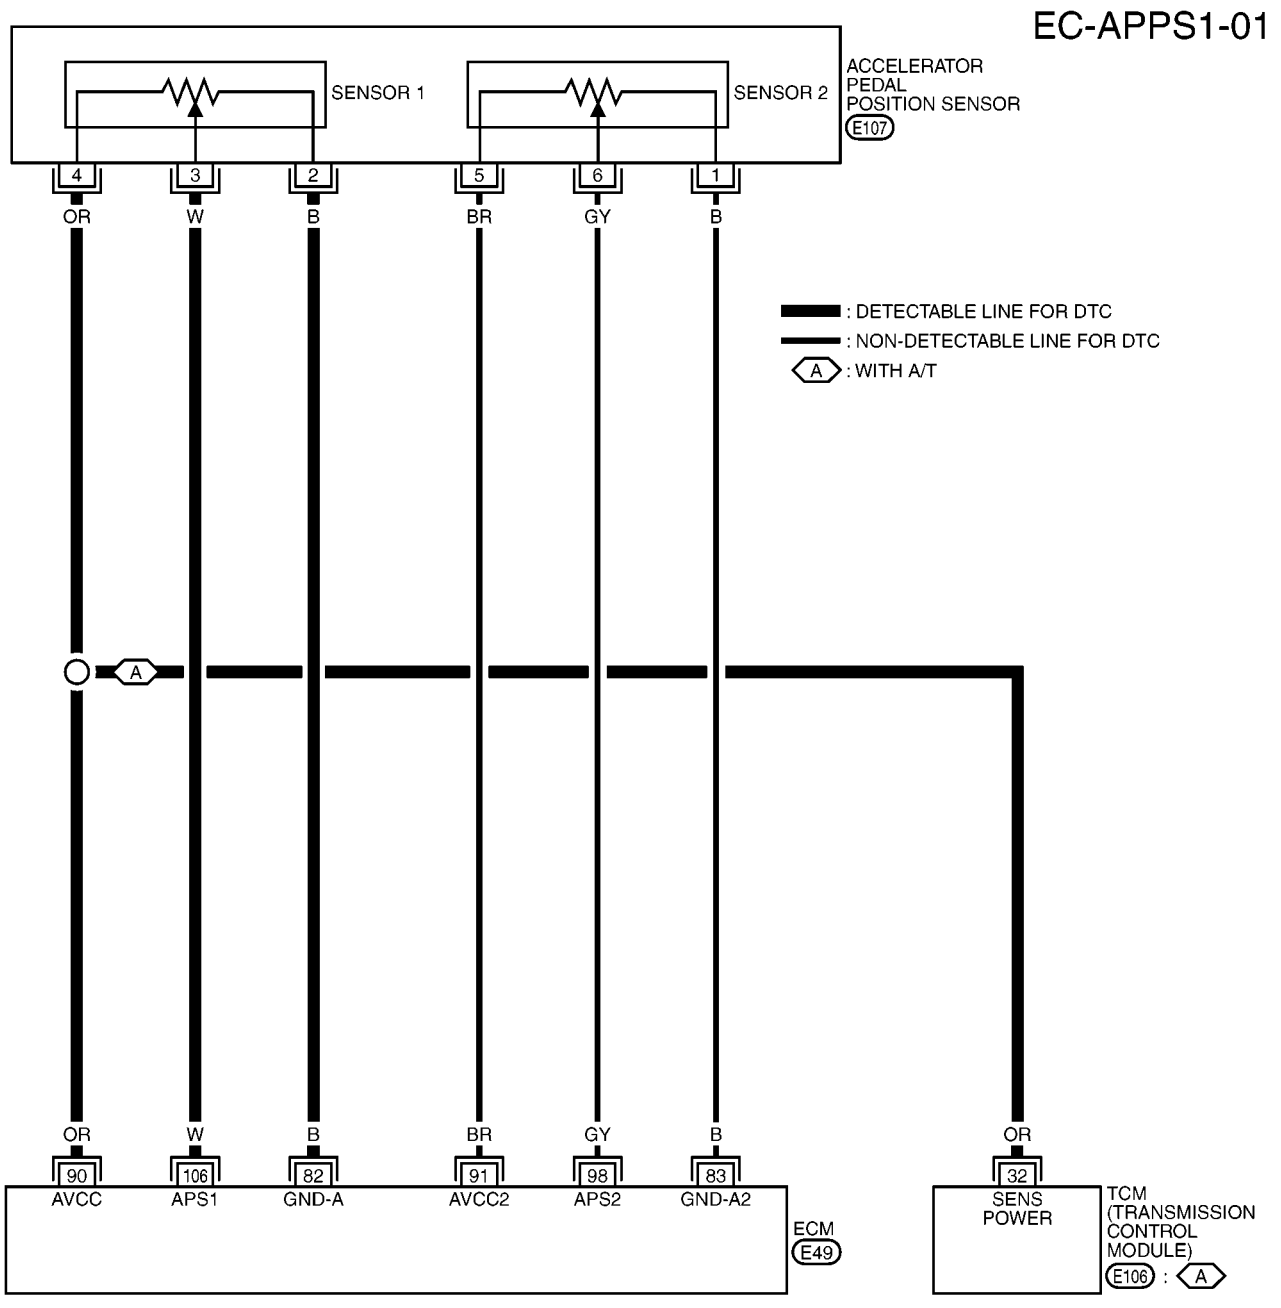

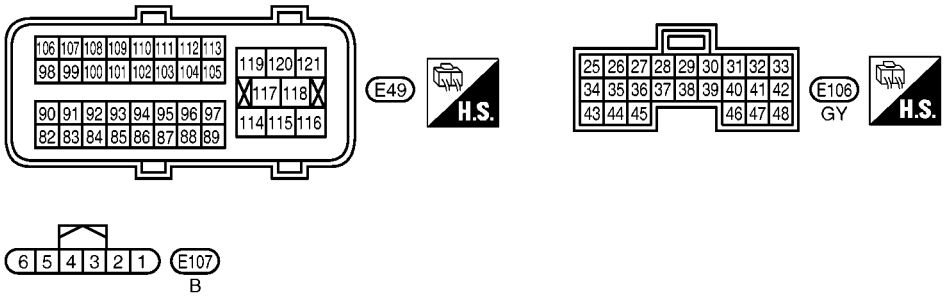

MBWA0279E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS1-02

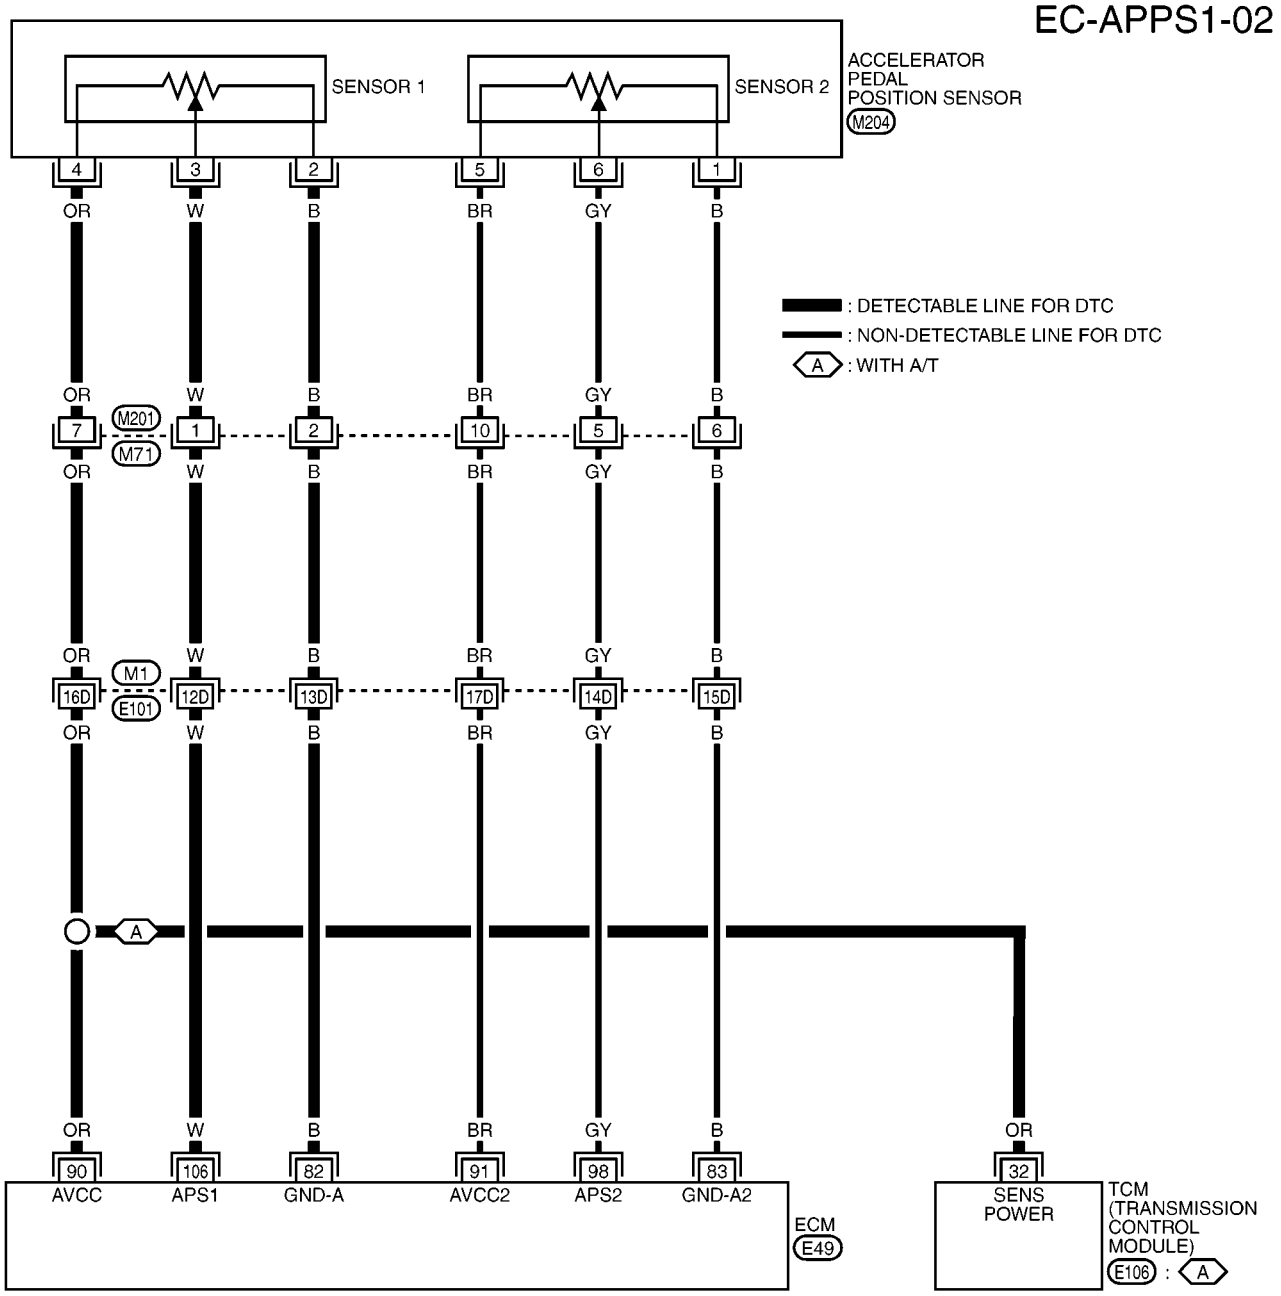

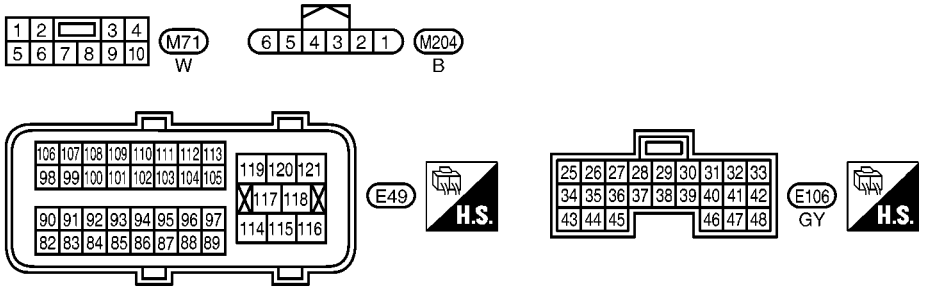

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0280E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS00O7N

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

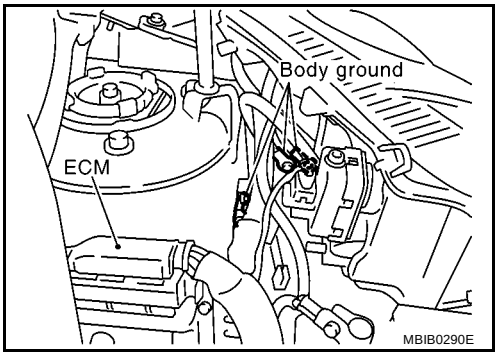

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

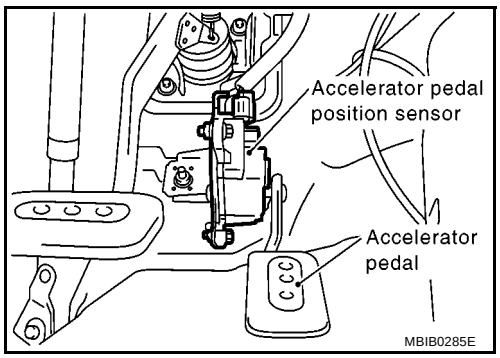

3. Check voltage between APP sensor terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

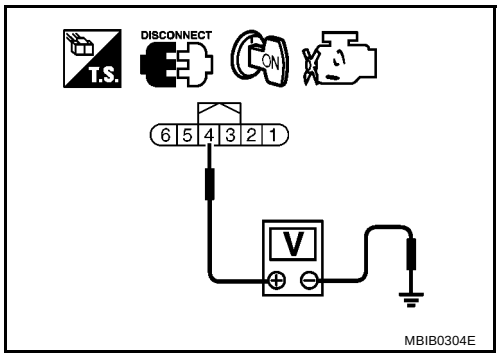

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-249, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .
3. Perform EC-42, "Throttle Valve Closed Position Learning" .
4. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O7O

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

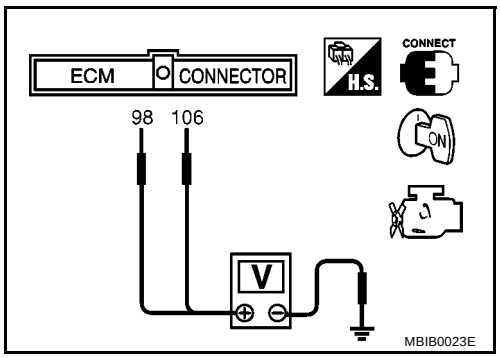

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-42, "Accelerator Pedal Released Position Learning" .
6. Perform EC-42, "Throttle Valve Closed Position Learning" .
7. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00O7P

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

PFP:00000

On Board Diagnosis Logic

EBS00O7Q

When a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the crankshaft position (CKP) sensor (POS) signal to vary, ECM can determine that a misfire is occurring.

Sensor	Input Signal to ECM	ECM Function
Crankshaft position sensor (POS)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

1. One Trip Detection Logic (Three Way Catalyst Damage)
   On the first trip that a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MI will blink.
   When a misfire condition occurs, the ECM monitors the CKP sensor (POS) signal every 200 engine revolutions for a change.
   When the misfire condition decreases to a level that will not damage the TWC, the MI will turn off.
   If another misfire condition occurs that can damage the TWC on a second trip, the MI will blink.
   When the misfire condition decreases to a level that will not damage the TWC, the MI will remain on.
   If another misfire condition occurs that can damage the TWC, the MI will begin to blink again.
2. Two Trip Detection Logic (Exhaust quality deterioration)
   For misfire conditions that will not damage the TWC (but will affect vehicle emissions), the MI will only light when the misfire is detected on a second trip. During this condition, the ECM monitors the CKP sensor signal every 1,000 engine revolutions.
   A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0300 0300	Multiple cylinder misfire detected	Multiple cylinder misfire.	● Improper spark plug ● Insufficient compression ● Incorrect fuel pressure ● The injector circuit is open or shorted ● Fuel injectors ● Intake air leak ● The ignition signal circuit is open or shorted ● Lack of fuel ● Drive plate or flywheel ● Heated oxygen sensor 1 ● Incorrect PCV hose connection
P0301 0301	No.1 cylinder misfire detected	No. 1 cylinder misfires.	
P0302 0302	No. 2 cylinder misfire detected	No. 2 cylinder misfires.	
P0303 0303	No. 3 cylinder misfire detected	No. 3 cylinder misfires.	
P0304 0304	No. 4 cylinder misfire detected	No. 4 cylinder misfires.	

DTC Confirmation Procedure

EBS00O7R

CAUTION:
Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws when driving.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON, and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Restart engine and let it idle for about 15 minutes.
5. If 1st trip DTC is detected, go to EC-252, "Diagnostic Procedure" .

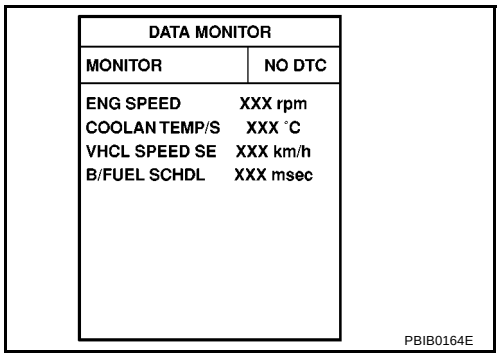

NOTE:
If 1st trip DTC is not detected during above procedure, performing the following procedure is advised.

1. Turn ignition switch OFF and wait at least 10 seconds.
2. Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for a certain time. Refer to table below.
   Hold the accelerator pedal as steady as possible.

   Similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time:

Engine speed	Engine speed in the freeze frame data ± 400 rpm
Vehicle speed	Vehicle speed in the freeze frame data ± 10 km/h (5 MPH)
Engine coolant temperature (T) condition	When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).
	When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).

   The time to drive varies according to the engine speed in the freeze frame data.
   Refer to the following table.

Engine speed	Time
Around 1,000 rpm	Approximately 10 minutes
Around 2,000 rpm	Approximately 5 minutes
More than 3,000 rpm	Approximately 3.5 minutes

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Diagnostic Procedure

EBS00O7S

1. CHECK FOR INTAKE AIR LEAK AND PCV HOSE

1. Start engine and run it at idle speed.
2. Listen for the sound of the intake air leak.
3. Check PCV hose connection.

OK or NG

OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK FOR EXHAUST SYSTEM CLOGGING

Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. PERFORM POWER BALANCE TEST

With CONSULT-II

1. Perform “POWER BALANCE” in “ACTIVE TEST” mode.
2. Is there any cylinder which does not produce a momentary engine speed drop?

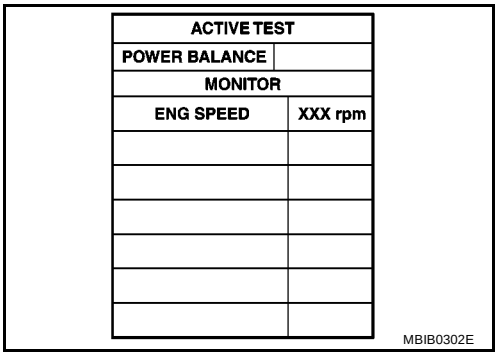

Without CONSULT-II

When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?

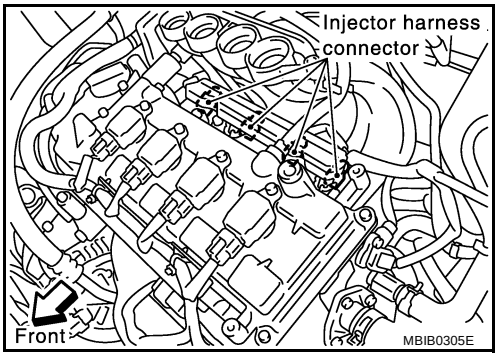

Yes or No

Yes >> GO TO 4.
No >> GO TO 7.

4. CHECK INJECTOR

Does each injector make an operating sound at idle?

Yes or No

Yes >> GO TO 5.
No >> Check injector(s) and circuit(s). Refer to EC-444, "INJECTOR CIRCUIT" .

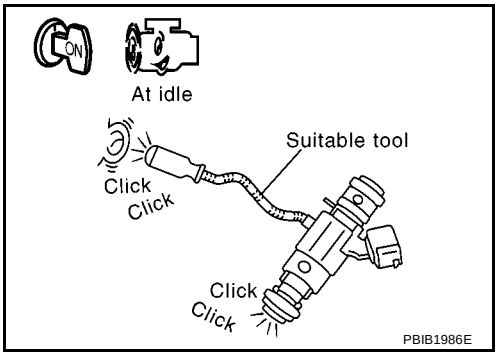

5. CHECK IGNITION SPARK

1. Disconnect ignition coil assembly from rocker cover.
2. Connect a known-good spark plug to the ignition coil assembly.
3. Disconnect all injector harness connectors.
4. Place end of spark plug against a suitable ground and crank engine.
5. Check for spark.

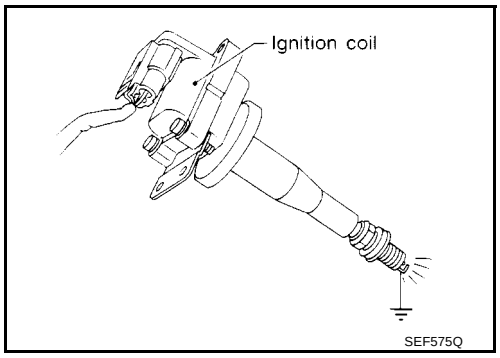

OK or NG

OK >> GO TO 6.
NG >> Check ignition coil, power transistor and their circuits. Refer to EC-435, "IGNITION SIGNAL" .

6. CHECK SPARK PLUGS

Remove the spark plugs and check for fouling, etc.

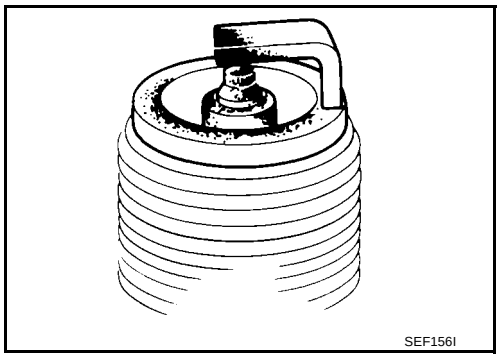

OK or NG

OK >> GO TO 7.
NG >> Repair or replace spark plug(s) with standard type one(s). For spark plug type, refer to MA-28, "Changing Spark Plugs" .

7. CHECK COMPRESSION PRESSURE

Check compression pressure. Refer to EM-59, "COMPRESSION PRESSURE INSPECTION" .

[kPa (bar, kg/cm^2 , psi)/350rpm]

Engine type	CR10DE	CR12DE, CR14DE
Standard	1,432 (14.32, 14.6, 208)	1,383 (13.83, 14.1, 201)
minimum	1,236 (12.36, 12.6, 179)	1,187 (11.87, 12.1, 172)
Difference limit among cylinders	98 (0.98, 1.0, 14)	98 (0.98, 1.0, 14)

OK or NG

OK >> GO TO 8.
NG >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

8. CHECK FUEL PRESSURE

1. Install all removed parts.
2. Release fuel pressure to zero. Refer to EC-44, "FUEL PRESSURE RELEASE" .
3. Install fuel pressure gauge and check fuel pressure. Refer to EC-45, "FUEL PRESSURE CHECK" .

At idle: Approx. 350 kPa (3.5 bar, 3.57 kg/cm^2 , 51 psi)

OK or NG

OK >> GO TO 9.
NG >> Follow the construction of FUEL PRESSURE CHECK.

9. CHECK IGNITION TIMING

Check the following items. Refer to EC-77, "Basic Inspection" .

Items		Specifications
Target idle speed	A/T	700 ± 50 rpm (in P or N position)
	M/T	650 ± 50 rpm
Ignition timing	A/T	5 ± 2° BTDC (in P or N position)
	M/T	5 ± 2° BTDC

OK or NG

OK >> GO TO 10.
NG >> Follow the Basic Inspection.

10. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-173, "Component Inspection" .

OK or NG

OK >> GO TO 11.
NG >> Replace heated oxygen sensor 1.

11. CHECK MANIFOLD ABSOLUTE PRESSUR SENSOR

With CONSULT-II
Check manifold absolute pressure sensor signal in “DATA MONITOR” mode with CONSULT-II.

Approximately 1.5V: at idling
Approximately 1.2V: at 2,500 rpm

With GST
Check manifold absolute pressure sensor signal in MODE 1 with GST.

Approximately 1.5V: at idling
Approximately 1.2V: at 2,500 rpm

OK or NG

OK >> GO TO 12.
NG >> Check connectors for rusted terminals or loose connections in the manifold absolute pressure sensor circuit or engine grounds. Refer to EC-148, "DTC P0107, P0108 MANIFOLD ABSOLUTE PRESSURE SENSOR" .

12. CHECK SYMPTOM MATRIX CHART

Check items on the rough idle symptom in EC-82, "Symptom Matrix Chart" .

OK or NG

OK >> GO TO 13.
NG >> Repair or replace.

13. ERASE THE 1ST TRIP DTC

Some tests may cause a 1st trip DTC to be set.
Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .

>> GO TO 14.

14. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P0327, P0328 KS

PFP:22060

Component Description

EBS00O7T

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

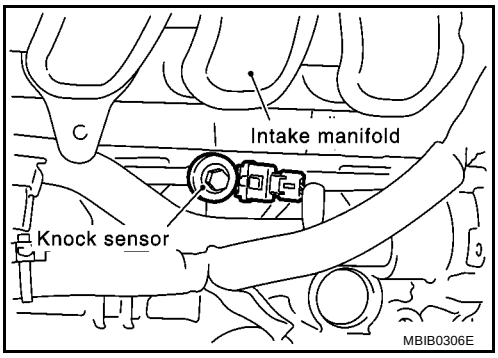

On Board Diagnosis Logic

EBS00O7U

The MI will not light up for these self-diagnoses.

DTC No.	Trouble Diagnosis Name	DTC Detected Condition	Possible Cause
P0327 0327	Knock sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Knock sensor
P0328 0328	Knock sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

DTC Confirmation Procedure

EBS00O7V

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and run it for at least 5 seconds at idle speed.
3. If 1st trip DTC is detected, go to EC-259, "Diagnostic Procedure"
.

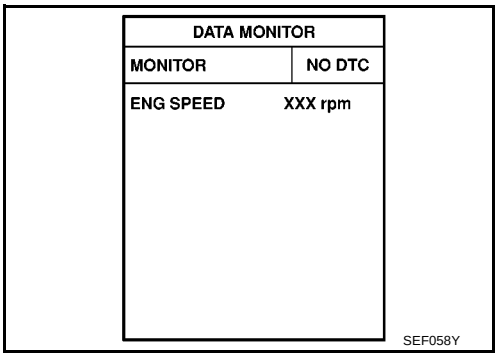

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O7W

EC-KS-01

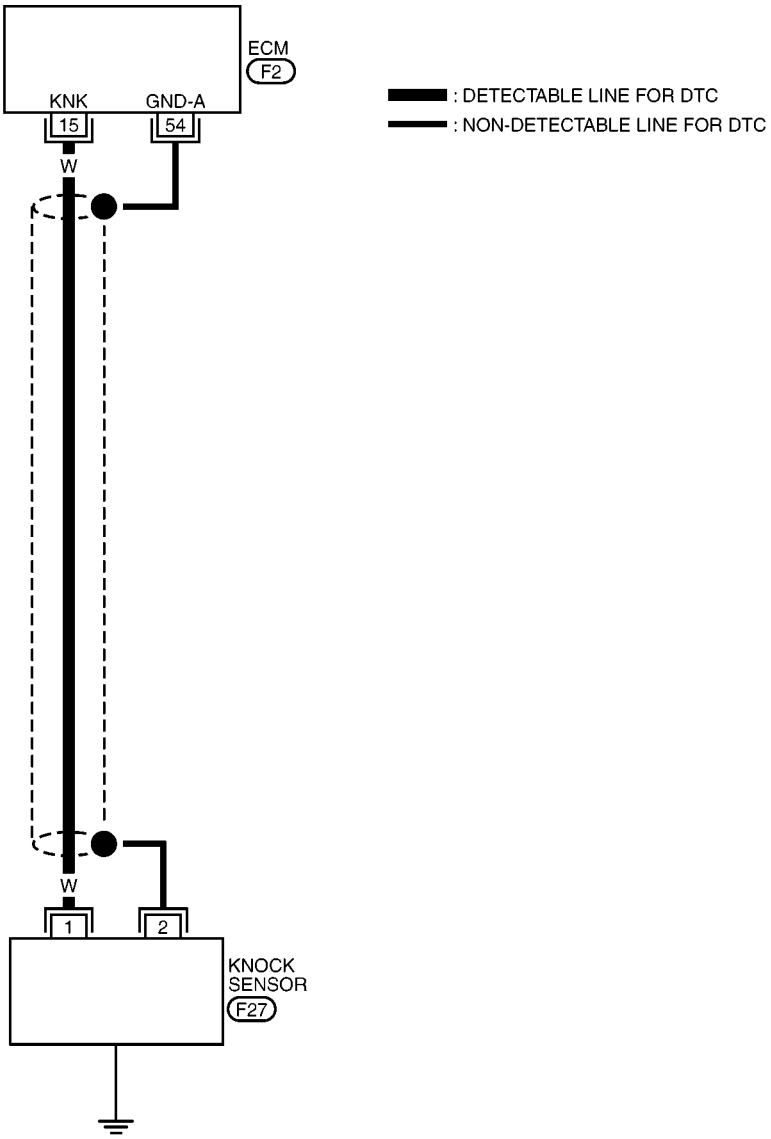

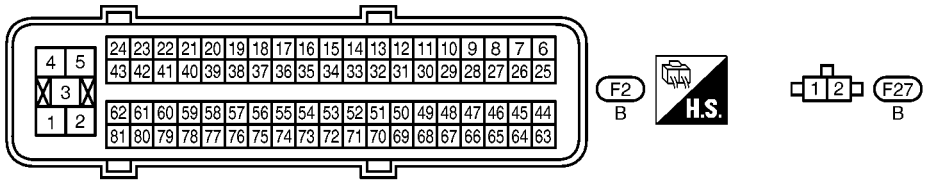

MBWA1173E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
15	W	Knock sensor	**[Engine is running]** ● Idle speed	Approximately 2.5V
54	—	Sensor ground (Knock sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00O7X

1. CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT-I

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check resistance between ECM terminal 15 and engine ground. Refer to Wiring Diagram.

   NOTE:
   It is necessary to use an ohmmeter which can measure more than 10 MΩ.

   Resistance: Approximately 530 - 590kΩ [at 20°C (68°F)]

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT-II

1. Disconnect knock sensor harness connector.
2. Check harness continuity between ECM terminal 15 and knock sensor terminal 1.
   Refer to Wiring Diagram.

   Continuity should exist.

3. Also check harness for short to ground and short to power.

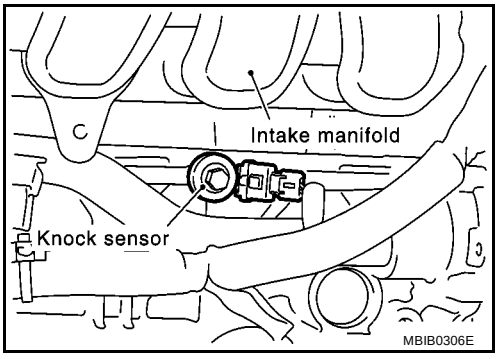

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK KNOCK SENSOR

Refer to EC-260, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace knock sensor.

4. CHECK KNOCK SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 54 and engine ground.

Continuity should exist

2. Also check harness for short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O7Y

KNOCK SENSOR

Check resistance between knock sensor terminal 1 and ground.

NOTE:
It is necessary to use an ohmmeter which can measure more than 10 MΩ.

Resistance: Approximately 530 - 590kΩ [at 20°C (68°F)]

CAUTION:
Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.

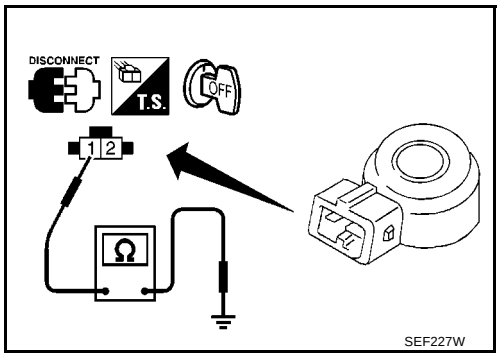

Removal and Installation

EBS00O7Z

KNOCK SENSOR

Refer to EM-73, "CYLINDER BLOCK" .

DTC P0335 CKP SENSOR (POS)

PFP:23731

Component Description

EBS00O80

The crankshaft position sensor (POS) is located on the cylinder block rear housing facing the gear teeth (cogs) of the signal plate at the end of the crankshaft. It detects the fluctuation of the engine revolution.
The sensor consists of a permanent magnet and Hall IC.
When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.
The changing gap causes the magnetic field near the sensor to change.
Due to the changing magnetic field, the voltage from the sensor changes.
The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

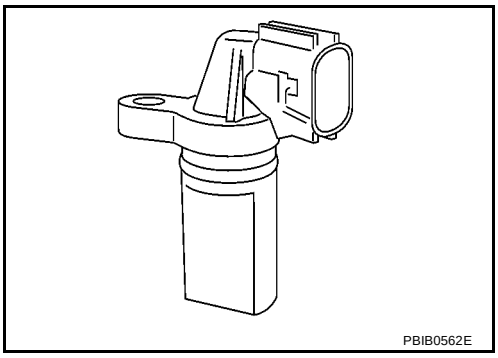
PBIB0562E

CONSULT-II Reference Value in Data Monitor Mode

EBS00O81

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
ENG SPEED	● Tachometer: Connect ● Run engine and compare CONSULT-II value with the tachometer indication.	Almost the same speed as the tachometer indication.

On Board Diagnosis Logic

EBS00O82

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0335 0335	Crankshaft position sensor (POS) circuit	● The crankshaft position sensor (POS) signal is not detected by the ECM during the first few seconds of engine cranking. ● The proper pulse signal from the crankshaft position sensor (POS) is not sent to ECM while the engine is running. ● The crankshaft position sensor (POS) signal is not in the normal pattern during engine running.	● Harness or connectors (The sensor circuit is open or shorted.) ● Crankshaft position sensor (POS) ● Signal plate

DTC Confirmation Procedure

EBS00O83

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch ON.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
3. If 1st trip DTC is detected, go to EC-263, "Diagnostic Procedure" .

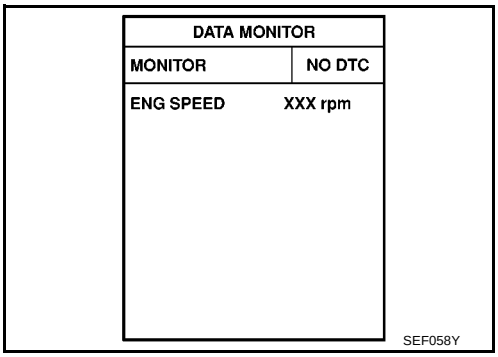

SEF058Y

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O84

EC-POS-01

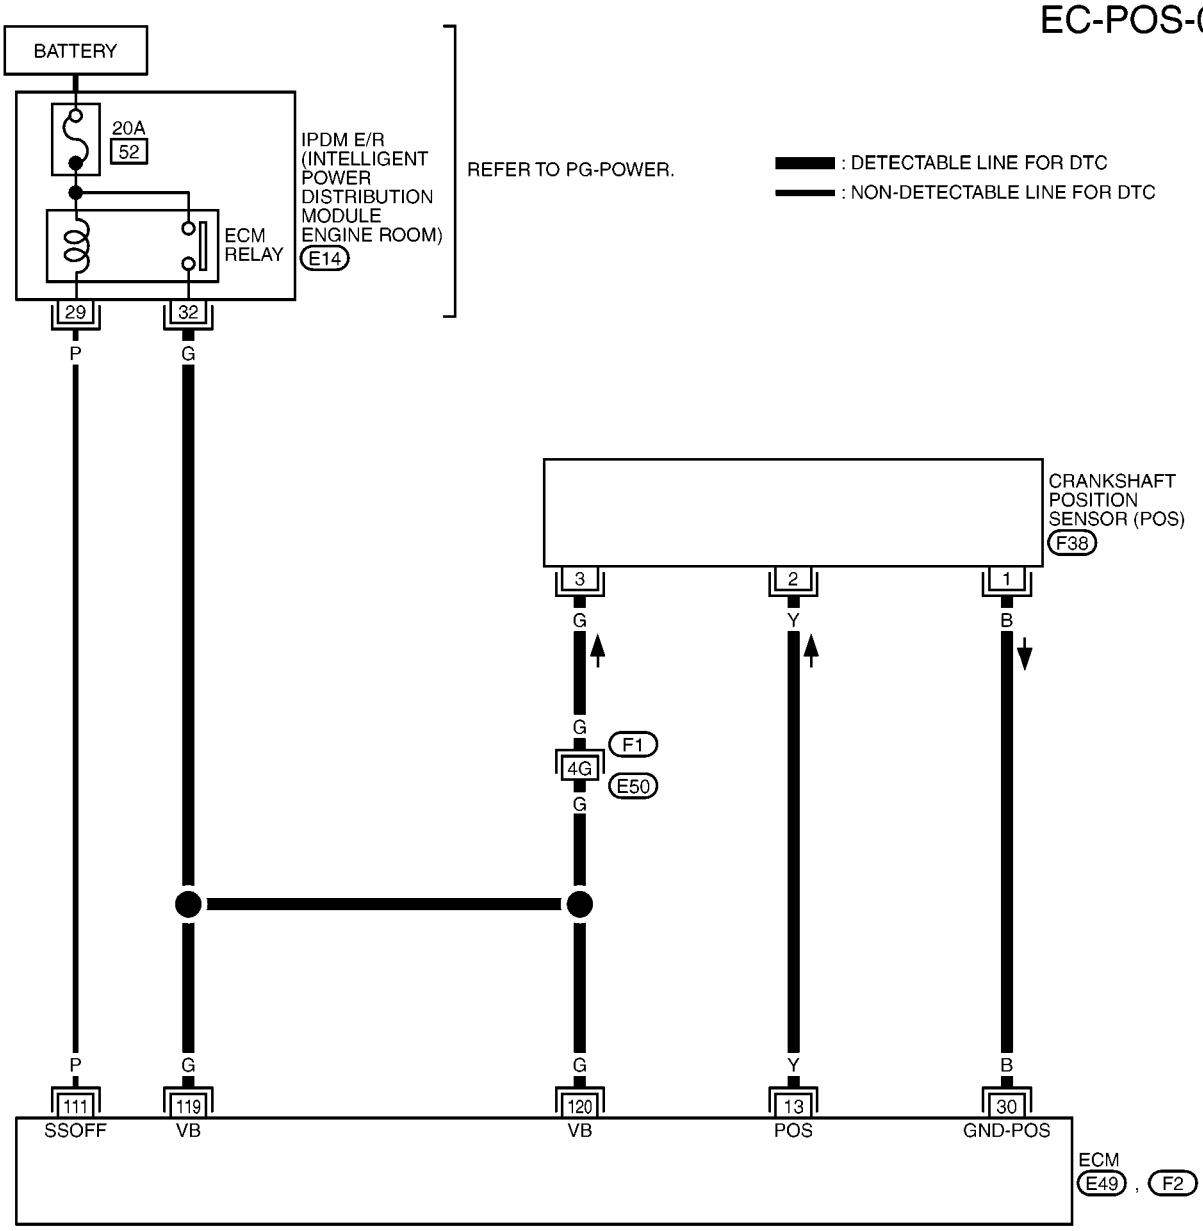



REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

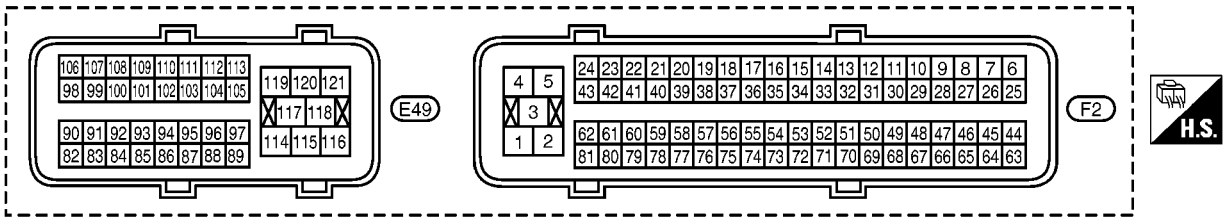

MBWA0282E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
13	Y	Crankshaft position sensor (POS)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	Approximately 3.0V★ 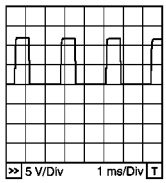 PBIB0527E
			[Engine is running] ● Engine speed is 2,000 rpm	Approximately 3.0V★ 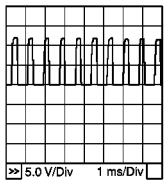 PBIB0528E
30	B	Sensor ground (Crankshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00O85

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

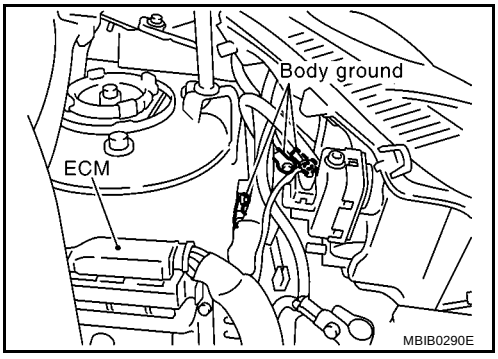

MBIB0290E

2. CHECK CRANKSHAFT POSITION (CKP) SENSOR (POS) POWER SUPPLY CIRCUIT

1. Disconnect crankshaft position (CKP) sensor (POS) harness connector.
2. Turn ignition switch ON.

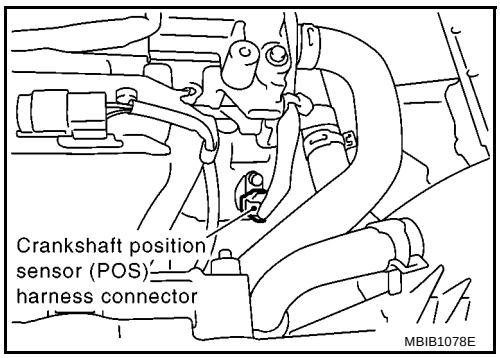

3. Check voltage between CKP sensor (POS) terminal 3 and ground with CONSULT-II or tester.

Voltage: Battery voltage

4. Also check harness for short to ground and short to power.

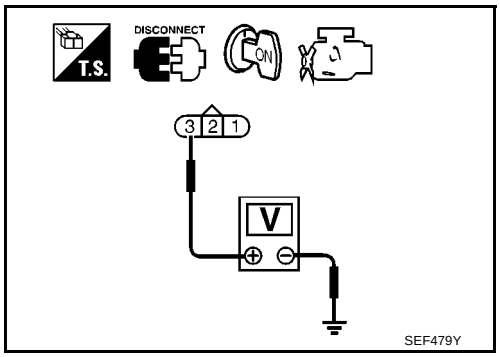

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- Harness for open or short between crankshaft position sensor (POS) and ECM
- Harness for open or short between crankshaft position sensor (POS) and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 30 and CKP sensor (POS) terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 13 and CKP sensor (POS) terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-265, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace crankshaft position sensor (POS).

7. CHECK GEAR TOOTH

Visually check for chipping signal plate gear tooth.

OK or NG

OK >> GO TO 8.
NG >> Replace the signal plate.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O86

CRANKSHAFT POSITION SENSOR (POS)

1. Loosen the fixing bolt of the sensor.
2. Disconnect crankshaft position sensor (POS) harness connector.
3. Remove the sensor.
4. Visually check the sensor for chipping.

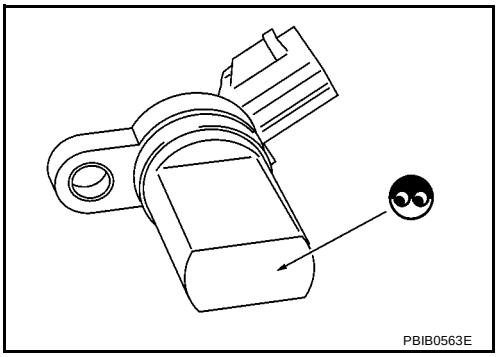

5. Check resistance as shown in the figure.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 1 (-)	Except 0 or ∞
3 (+) - 2 (-)	
2 (+) - 1 (-)	

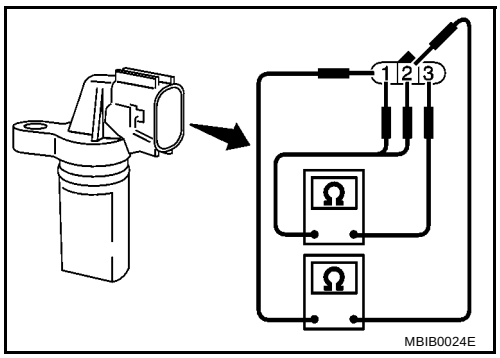

6. If NG, replace crankshaft position sensor (POS).

Removal and Installation

EBS00O87

CRANKSHAFT POSITION SENSOR (POS)

Refer to EM-73, "CYLINDER BLOCK" .

DTC P0340 CMP SENSOR (PHASE)

PFP:23731

Component Description

EBS00O88

The camshaft position sensor (PHASE) senses the retraction of intake valve camshaft to identify a particular cylinder. The camshaft position sensor (PHASE) senses the piston position.
When the crankshaft position sensor (POS) system becomes inoperative, the camshaft position sensor (PHASE) provides various controls of engine parts instead, utilizing timing of cylinder identification signals.
The sensor consists of a permanent magnet and Hall IC.
When engine is running, the high and low parts of the teeth cause the gap with the sensor to change.
The changing gap causes the magnetic field near the sensor to change.
Due to the changing magnetic field, the voltage from the sensor changes.

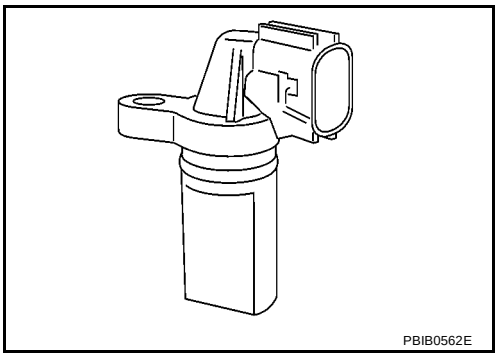
PBIB0562E

On Board Diagnosis Logic

EBS00O89

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0340 0340	Camshaft position sensor (PHASE) circuit	● The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking. ● The cylinder No. signal is not set to ECM during engine running. ● The cylinder No. signal is not in the normal pattern during engine running.	● Harness or connectors (The sensor circuit is open or shorted.) ● Camshaft position sensor (PHASE) ● Camshaft (Intake) ● Starter motor (Refer to SC-39 .) ● Starting system circuit (Refer to SC-39 .) ● Dead (Weak) battery

DTC Confirmation Procedure

EBS00O8A

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch ON.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
4. If 1st trip DTC is detected, go to EC-269, "Diagnostic Procedure" .
   If 1st trip DTC is not detected, go to next step.
5. Maintain engine speed at more than 800 rpm for at least 5 seconds.
6. If 1st trip DTC is detected, go to EC-269, "Diagnostic Procedure" .

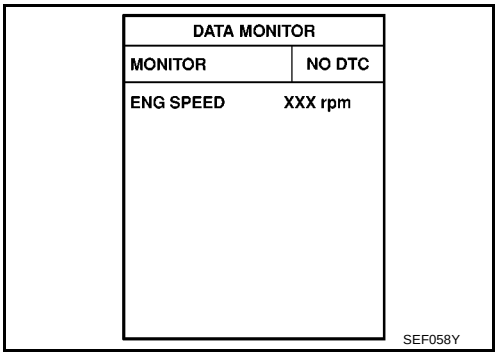

SEF058Y

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O8B

EC-PHASE-01

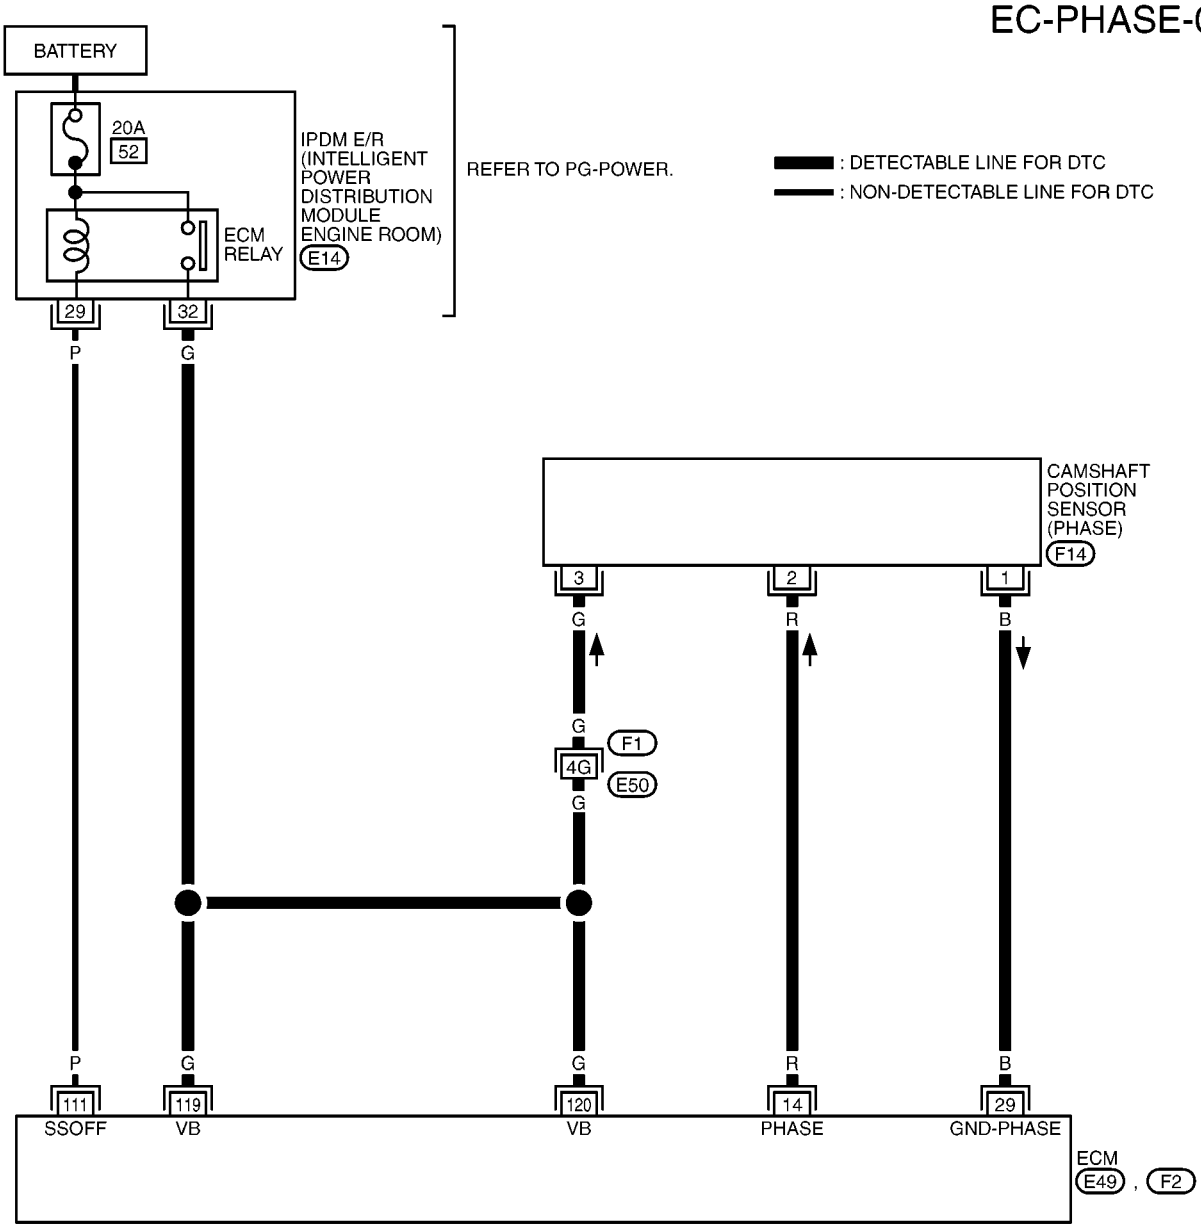

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

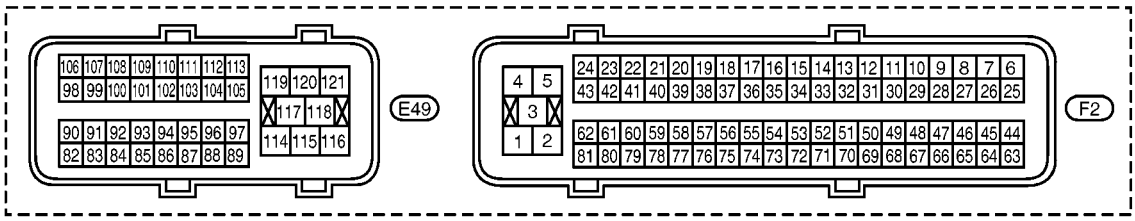

MBWA0283E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
14	R	Camshaft position sensor (PHASE)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	1.0 - 4.0V★ 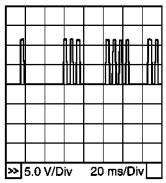 PBIB0525E
			[Engine is running] ● Engine speed is 2,000 rpm.	1.0 - 4.0V★ 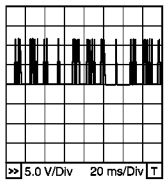 PBIB0526E
29	B	Sensor ground (Camshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00O8C

1. CHECK STARTING SYSTEM

Turn ignition switch to START position.

Does the engine turn over?

Does the starter motor operate?

Yes or No

Yes >> GO TO 2.
No >> Check starting system. (Refer to SC-39, "STARTING SYSTEM" .)

2. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 3.

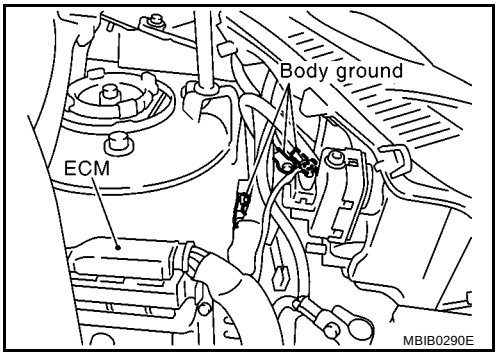

MBIB0290E

3. CHECK CAMSHAFT POSITION (CMP) SENSOR (PHASE) POWER SUPPLY CIRCUIT

1. Disconnect camshaft position (CMP) sensor (PHASE) harness connector.
2. Turn ignition switch ON.

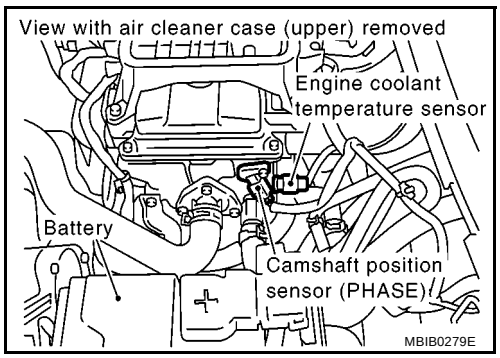

3. Check voltage between CMP sensor (PHASE) terminal 3 and ground with CONSULT-II or tester.

Voltage: Battery voltage

4. Also check harness for short to ground and short to power.

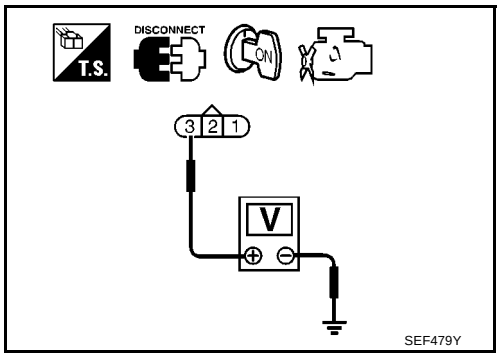

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- Harness for open or short between camshaft position sensor (PHASE) and ECM
- Harness for open or short between camshaft position sensor (PHASE) and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK CMP SENSOR (PHASE) GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 29 and CMP sensor (PHASE) terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK CMP SENSOR (PHASE) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 14 and CMP sensor (PHASE) terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground or short to power.

OK or NG

OK >> GO TO 7.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-271, "Component Inspection" .

OK or NG

OK >> GO TO 8.
NG >> Replace camshaft position sensor (PHASE).

8. CHECK CAMSHAFT (INTAKE)

Check the following.

- Accumulation of debris to the signal plate of camshaft rear end
- Chipping signal plate of camshaft rear end

OK or NG

OK >> GO TO 9.
NG >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

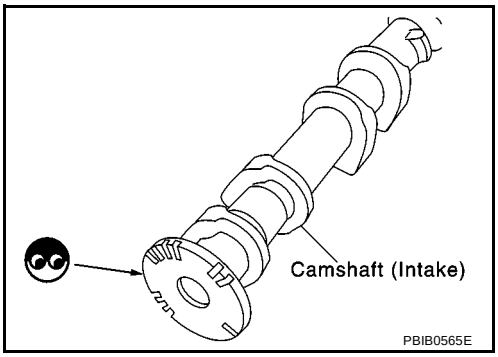

9. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O8D

CAMSHAFT POSITION SENSOR (PHASE)

1. Loosen the fixing bolt of the sensor.
2. Disconnect camshaft position sensor (PHASE) harness connector.
3. Remove the sensor.
4. Visually check the sensor for chipping.

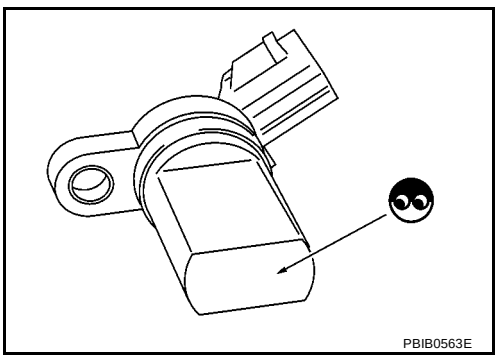

5. Check resistance as shown in the figure.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 1 (-)	Except 0 or ∞
3 (+) - 2 (-)	
2 (+) - 1 (-)	

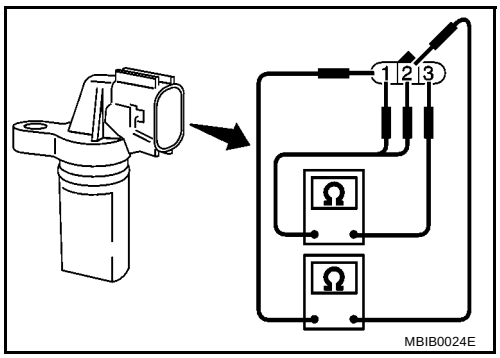

Removal and Installation

EBS00O8E

CAMSHAFT POSITION SENSOR (PHASE)

Refer to EM-36, "CAMSHAFT" .

DTC P0420 THREE WAY CATALYST FUNCTION

PFP:20905

On Board Diagnosis Logic

EBS00O8F

The ECM monitors the switching frequency ratio of heated oxygen sensors 1 and 2.
A three way catalyst (Manifold) with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2. As oxygen storage capacity decreases, the heated oxygen sensor 2 switching frequency will increase.
When the frequency ratio of heated oxygen sensors 1 and 2 approaches a specified limit value, the three way catalyst (Manifold) malfunction is diagnosed.

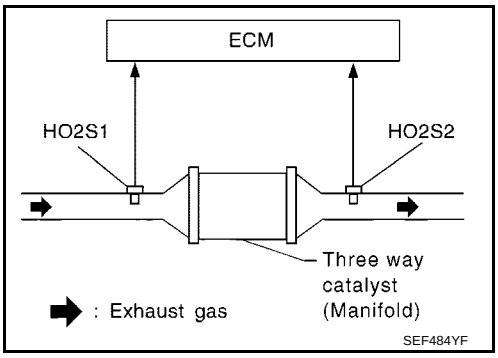

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0420 0420	Catalyst system efficiency below threshold	● Three way catalyst (Manifold) does not operate properly. ● Three way catalyst (Manifold) does not have enough oxygen storage capacity.	● Three way catalyst (Manifold) ● Exhaust tube ● Intake air leaks ● Fuel injectors ● Fuel injector leaks ● Spark plug ● Improper ignition timing

DTC Confirmation Procedure

EBS00O8G

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

TESTING CONDITION:

- **Open engine hood before conducting the following procedure.**
- **Do not hold engine speed for more than the specified minutes below.**

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Select “DTC & SRT CONFIRMATION” then “SRT WORK SUPPORT” mode with CONSULT-II.
6. Rev engine up to 2,000 to 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely.
   If “INCMP” of “CATALYST” changed to “COMPLT”, go to step 10
7. Wait 5 seconds at idle.

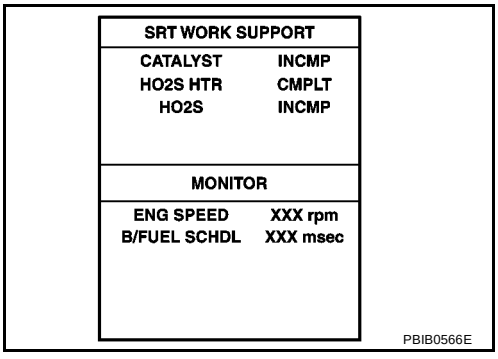

8. Rev engine up to 2,000 to 3,000 rpm and maintain it until “INCMP” of “CATALYST” changes to “CMPLT” (It will take approximately 5 minutes).
   If not “CMPLT”, stop engine and cool it down to less than 70°C (158 °F) and then retest from step 1.

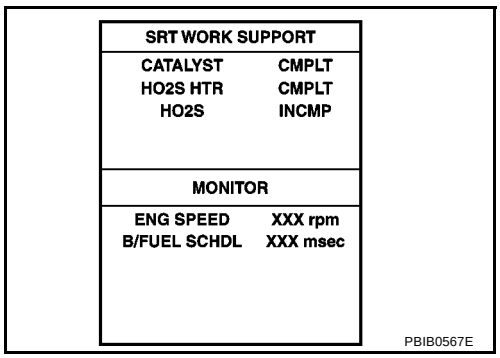

a. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle)
b. Turn ignition switch ON and select “COOLAN TEMP/S” in “DATA MONITOR” mode with CONSULT-II.
c. Start engine and warm it up while monitoring “COOLAN TEMP/S” indication on CONSULT-II.
d. When “COOLANTEMP/S” indication reaches to 70°(158°F), go to step 3.

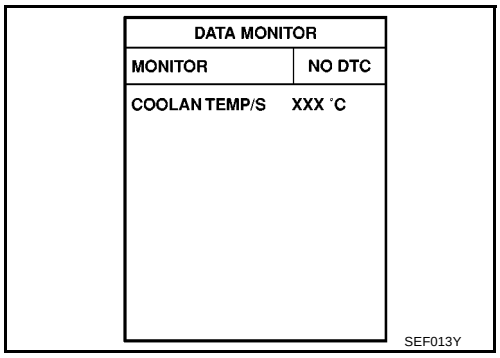

9. Select “SELF-DIAG RESULTS” mode with CONSULT-II.
10. Confirm that the 1st trip DTC is not detected.
    If the 1st trip DTC is detected, go to EC-275, "Diagnostic Procedure" .

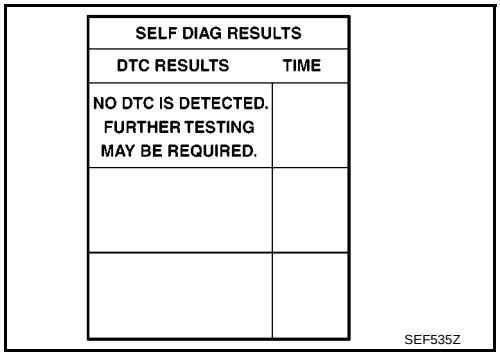

Overall Function Check

EBS00O8H

Use this procedure to check the overall function of the three way catalyst (Manifold). During this check, a 1st trip DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,00 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Open engine hood.
6. Set voltmeters probes between ECM terminal 35 (HO2S1 signal) and engine ground, and ECM terminal 16 (HO2S2 signal) and engine ground.
7. Keep engine speed at 2,000 rpm constant under no load.

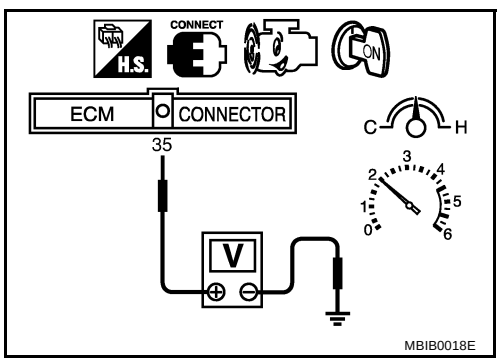

8. Make sure that the voltage switching frequency (high & low) between ECM terminal 16 and engine ground is very less than that of ECM terminal 35 and engine ground.
Switching frequency ratio = A/B
A: Heated oxygen sensor 2 voltage switching frequency
B: Heated oxygen sensor 1 voltage switching frequency
This ratio should be less than 0.75.
If the ratio is greater than above, it means three way catalyst (manifold) does not operate properly. Go to EC-275, "Diagnostic Procedure" .

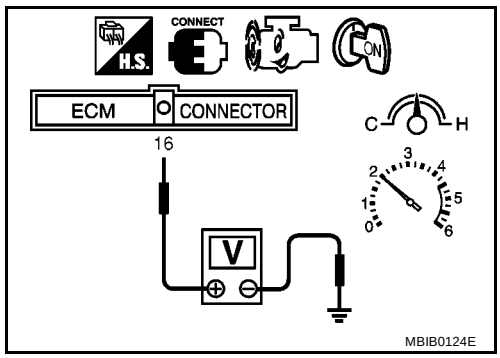

NOTE:
If the voltage at terminal 35 does not switch periodically more than 5 times within 10 seconds at step 8, perform trouble diagnosis for DTC P0133 first. (See EC-179 .)

Diagnostic Procedure

EBS00O8I

1. CHECK EXHAUST SYSTEM

Visually check exhaust tubes and muffler for dent.

OK or NG

OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before the three way catalyst (Manifold).

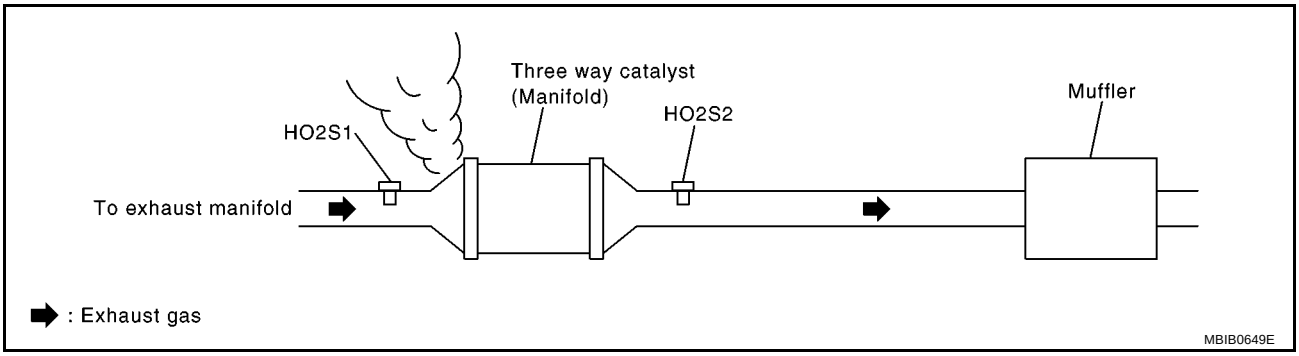

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. CHECK INTAKE AIR LEAK

Listen for an intake air leak after the manifold absolute pressure sensor.

OK or NG

OK >> GO TO 4.
NG >> Repair or replace.

4. CHECK IGNITION TIMING

Check the following items. Refer to EC-77, "Basic Inspection" .

Items		Specifications
Ignition timing	A/T	5° ± 2° BTDC (in P or N position)
	M/T	5° ± 2° BTDC
Target idle speed	A/T	700 ± 50 rpm (in P or N position)
	M/T	650 ± 50 rpm

OK or NG

OK >> GO TO 5.
NG >> Follow the EC-77, "Basic Inspection" .

5. CHECK INJECTORS

1. Stop engine and then turn ignition switch ON.
2. Refer to Wiring Diagram for Injectors, EC-445 .
3. Check voltage between ECM terminals 22, 23, 41, 42 and ground with CONSULT-II or tester.

Battery voltage should exist.

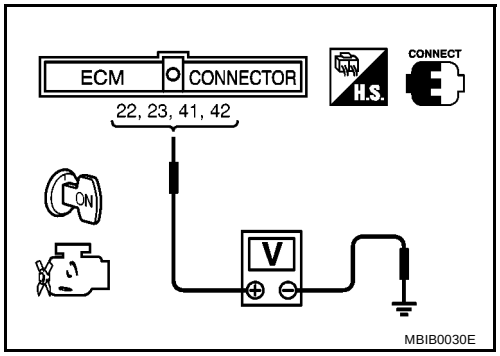

OK or NG

OK >> GO TO 6.
NG >> Perform EC-446, "Diagnostic Procedure" .

6. CHECK IGNITION SPARK

1. Turn ignition switch OFF.
2. Disconnect ignition coil assembly from rocker cover.
3. Connect a known-good spark plug to the ignition coil assembly.
4. Disconnect all injector harness connectors.
5. Place end of spark plug against a suitable ground and crank engine.
6. Check for spark.

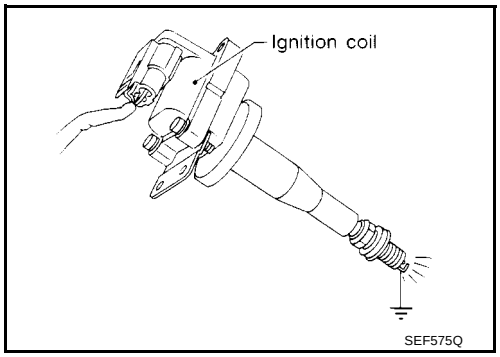

OK or NG

OK >> GO TO 7.
NG >> Check ignition coil with power transistor and their circuit. Refer to EC-435, "IGNITION SIGNAL" .

7. CHECK INJECTOR

1. Turn ignition switch OFF.
2. Remove injector assembly.
   Refer to EM-30, "FUEL INJECTOR AND FUEL TUBE" .
   Keep fuel hose and all injectors connected to injector gallery.
3. Reconnect all injector harness connectors.
4. Disconnect all ignition coil harness connectors.
5. Turn ignition switch ON.
   Make sure fuel does not drip from injector.

OK or NG

OK (Does not drip.)>>GO TO 8.
NG (Drips.)>>Replace the injector(s) from which fuel is dripping.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

Trouble is fixed.>>**INSPECTION END**
Trouble is not fixed.>>Replace three way catalyst (Manifold).

DTC P0444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

PFP:14920

Description

EBS00O8J

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Manifold absolute pressure sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Battery	Battery voltage*1		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Heated oxygen sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Vehicle speed signal*2	Vehicle speed		

*1: ECM determines the start signal status by the signals of engine speed and battery voltage.

*2: This signal is sent to the ECM through CAN communication line.

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

COMPONENT DESCRIPTION

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

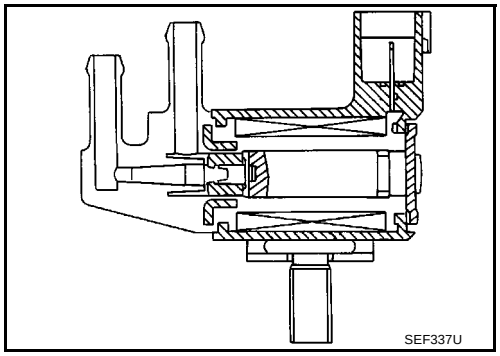

CONSULT-II Reference Value in Data Monitor Mode

EBS00O8K

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
PURG VOL C/V	● Engine: After warming up ● Shift lever: N (A/T), Neutral (M/T) ● Air conditioner switch: OFF ● No load	Idle	0%
		2,000 rpm	20 - 30%

On Board Diagnosis Logic

EBS00O8L

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0444 0444	EVAP canister purge volume control solenoid valve circuit open	An excessively low voltage signal is sent to ECM through the valve	● Harness or connectors (The solenoid valve circuit is open or shorted.) ● EVAP canister purge volume control solenoid valve

DTC Confirmation Procedure

EBS00O8M

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm battery voltage is more than 11V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for at least 13 seconds.
4. If 1st trip DTC is detected, go to EC-281, "Diagnostic Procedure"
.

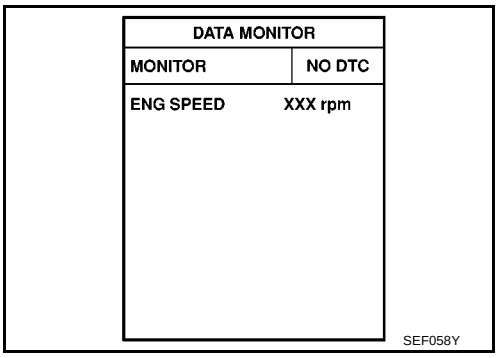

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O8N

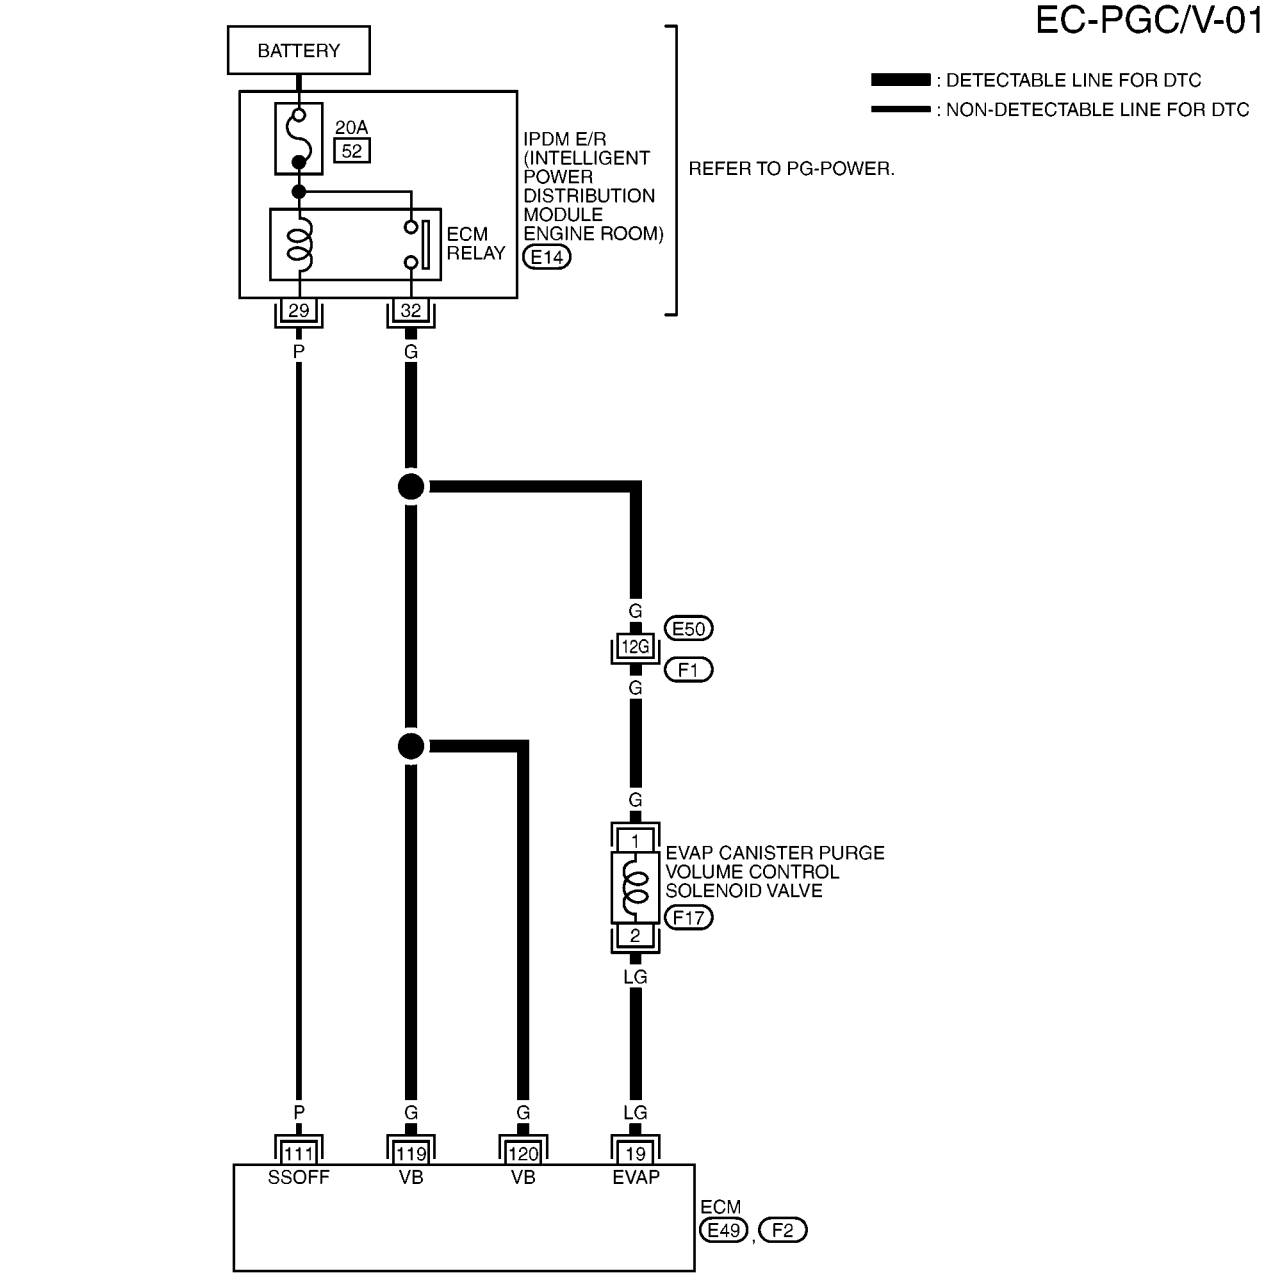

MBWA0572E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
19	LG	EVAP canister purge volume control solenoid valve	**[Engine is running]** ● Idle speed	BATTERY VOLTAGE (11 - 14V)★ 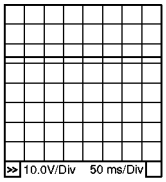 PBIB0050E
			[Engine is running] ● Engine speed is about 2,000 rpm (More than 100 seconds after starting engine)	Approximately 10V★ 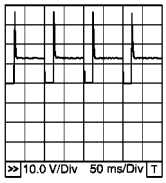 PBIB0520E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00O8O

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
3. Turn ignition switch ON.

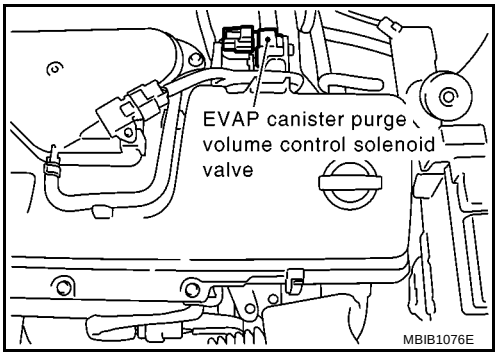

MBIB1076E

4. Check voltage between EVAP canister purge volume control solenoid valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

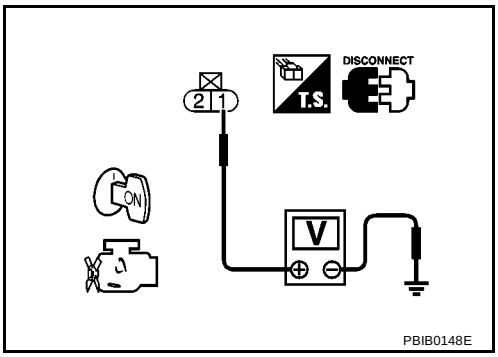

PBIB0148E

2. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between EVAP canister purge volume control solenoid valve and E/R
- Harness for open or short between EVAP canister purge volume control solenoid valve and ECM

>> Repair harness or connectors.

3. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 19 and EVAP canister purge volume control solenoid valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK (With CONSULT-II)>>GO TO 4.
OK (Without CONSULT-II)>>GO TO 5.
NG >> Repair open circuit or short to ground and short to power in harness or connectors.

4. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

With CONSULT-II

1. Reconnect all harness connectors disconnected.
2. Start engine.
3. Perform “PURG VOL CONT/V” in “ACTIVE TEST” mode with CONSULT-II. Check that engine speed varies according to the valve opening.

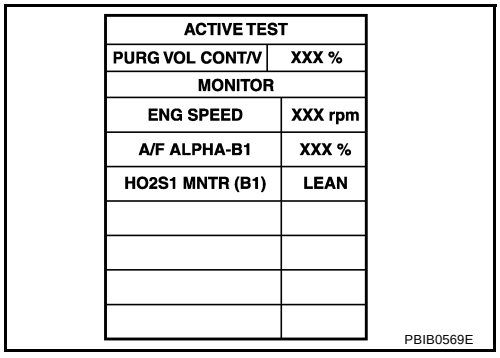

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-283, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace EVAP canister purge volume control solenoid valve.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O8P

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition (PURG VOL CONT/V value)	Air passage continuity between A and B
100%	Yes
0%	No

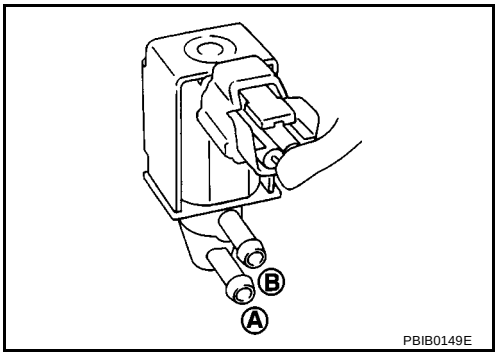

Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

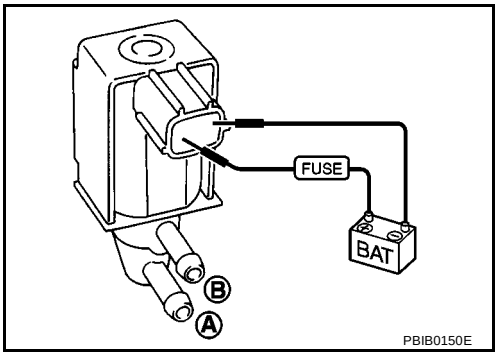

Removal and Installation

EBS00O8Q

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0500 VSS

PFP:32702

Description

EBS00O8R

NOTE:
If DTC P0500 is displayed with DTC U1000 or U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-130, "DTC U1000, U1001 CAN COMMUNICATION LINE" .
The vehicle speed signal is sent to the combination meter from the “ABS actuator and electric unit (control unit)” through CAN communication line. The combination meter then sends a signal to the ECM through CAN communication line.

On Board Diagnosis Logic

EBS00O8S

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0500 0500	Vehicle speed sensor	The almost 0 km/h (0 MPH) signal from vehicle speed sensor is sent to ECM even when vehicle is being driven.	● Harness or connectors (The CAN communication line is open or shorted.) ● ABS control unit ● ABS actuator and electric unit (control unit) ● Wheel sensor ● Combination meter

DTC Confirmation Procedure

EBS00O8T

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Steps 1 and 2 may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

WITH CONSULT-II

1. Start engine.
2. Read “VHCL SPEED SE” in “DATA MONITOR” mode with CONSULT-II. The vehicle speed on CONSULT-II should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
   If NG, go to EC-285, "Diagnostic Procedure" .
   If OK, go to following step.
3. Select “DATA MONITOR” mode with CONSULT-II.
4. Warm engine up to normal operating temperature.
5. Maintain the following conditions for at least 60 consecutive seconds.

ENG SPEED	More than 1,900 rpm (A/T models) More than 2,300 rpm (M/T models)
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	4.5 - 31.8 msec
Selector lever	Suitable position
PW/ST SIGNAL	OFF

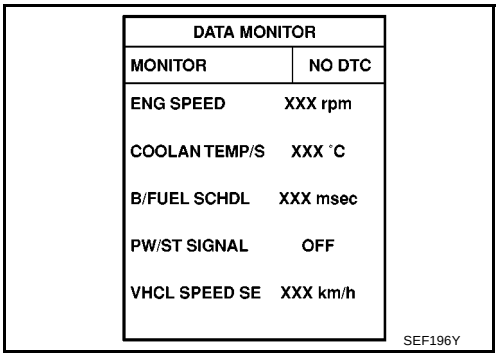

6. If 1st trip DTC is detected, go to EC-285, "Diagnostic Procedure" .

Overall Function Check

EBS00O8U

Use this procedure to check the overall function of the vehicle speed signal circuit. During this check, a 1st trip DTC might not be confirmed.

WITH GST

1. Lift up drive wheels.
2. Start engine.
3. Read vehicle speed signal in “MODE 1” with GST.
   The vehicle speed signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
4. If NG, go to EC-285, "Diagnostic Procedure" .

Diagnostic Procedure

EBS00O8V

1. CHECK DTC

Refer to BRC-8, "TROUBLE DIAGNOSIS" (models without ESP) or BRC-61, "TROUBLE DIAGNOSIS" (models with ESP).

OK or NG

OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK COMBINATION METER

Check combination meter function.
Refer to DI-5, "COMBINATION METERS" .

>> **INSPECTION END**

DTC P0605 ECM

PFP:23710

Component Description

EBS00O8W

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The ECM controls the engine.

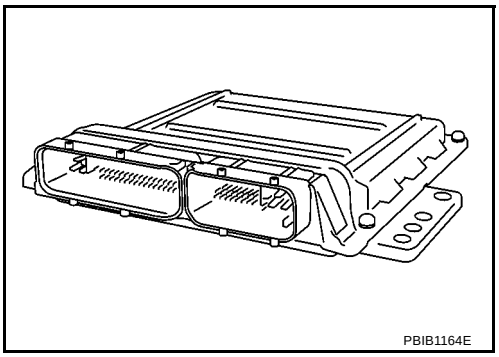
PBIB1164E

On Board Diagnosis Logic

EBS00O8X

This self-diagnosis has one or two trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
P0605 0605	Engine control module	A)	ECM calculation function is malfunctioning.	● ECM
		B)	ECM EEP-ROM system is malfunctioning.	
		C)	ECM self shut-off function is malfunctioning.	

FAIL-SAFE MODE

ECM enters fail-safe mode when malfunction A is detected.

Detected items	Engine operation condition in fail-safe mode
Malfunction A	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00O8Y

Perform PROCEDURE FOR MALFUNCTION A first. If the DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION B. If there is no malfunction on PROCEDURE FOR MALFUNCTION B, perform PROCEDURE FOR MALFUNCTION C.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A

With CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. If DTC is detected, go to EC-287, "Diagnostic Procedure" .

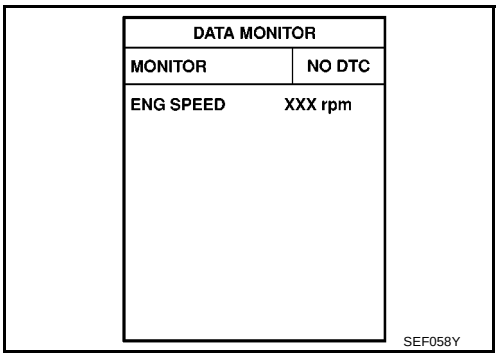

SEF058Y

With GST

Follow the procedure “With CONSULT-II” above.

PROCEDURE FOR MALFUNCTION B

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
4. If 1st trip DTC is detected, go to EC-287, "Diagnostic Procedure" .

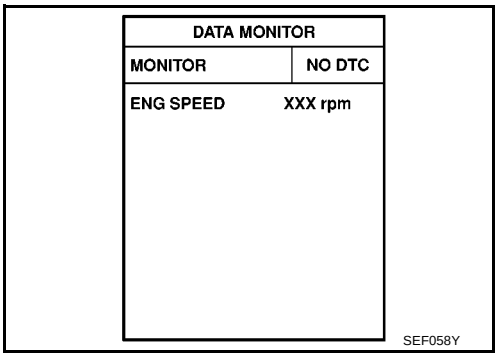

With GST

Follow the procedure “With CONSULT-II” above.

PROCEDURE FOR MALFUNCTION C

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
4. Repeat step 3 for 32 times.
5. If 1st trip DTC is detected, go to EC-287, "Diagnostic Procedure" .

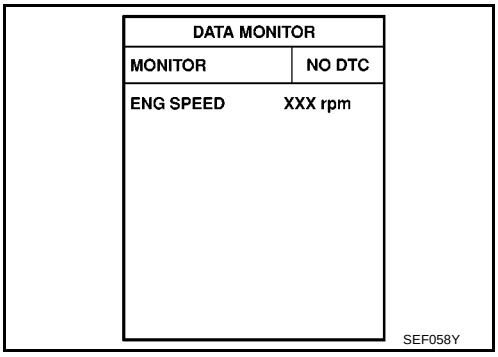

With GST

Follow the procedure “With CONSULT-II” above.

Diagnostic Procedure

EBS00O8Z

1. INSPECTION START

With CONSULT-II

1. Turn ignition switch ON.
2. Select “SELF DIAG RESULTS” mode with CONSULT-II.
3. Touch “ERASE”.
4. **Perform DTC Confirmation Procedure.**
   See EC-286 .
5. Is the 1st trip DTC P0605 displayed again?

With GST

1. Turn ignition switch ON.
2. Select MODE 4 with GST.
3. Touch “ERASE”.
4. **Perform DTC Confirmation Procedure.**
   See EC-286 .
5. Is the 1st trip DTC P0605 displayed again?

Yes or No

Yes >> GO TO 2.
No >> **INSPECTION END**

2. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NATS system and registration of all NATS ignition key IDs. Refer to EC-60, "NATS (Nissan Anti-theft System)" .
3. Perform EC-42, "Accelerator Pedal Released Position Learning" .
4. Perform EC-42, "Throttle Valve Closed Position Learning" .
5. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

DTC P1065 ECM POWER SUPPLY

PFP:23710

Component Description

EBS00O90

Battery voltage is supplied to the ECM even when the ignition switch is turned OFF for the ECM memory function of the DTC memory, the air-fuel ratio feedback compensation value memory, the idle air volume learning value memory, etc.

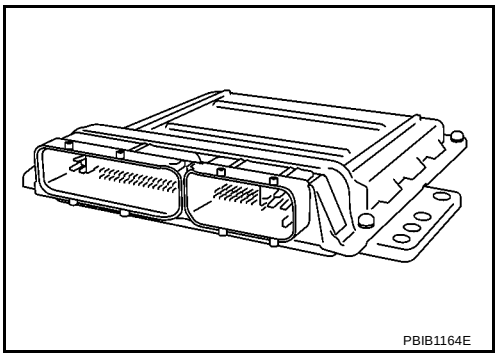
PBIB1164E

On Board Diagnosis Logic

EBS00O91

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1065 1065	ECM power supply circuit	ECM back-up RAM system does not function properly.	● Harness or connectors [ECM power supply (back-up) circuit is open or shorted.] ● ECM

DTC Confirmation Procedure

EBS00O92

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
5. Repeat steps 3 and 4 for 4 times.
6. If 1st trip DTC is detected, go to EC-291, "Diagnostic Procedure".

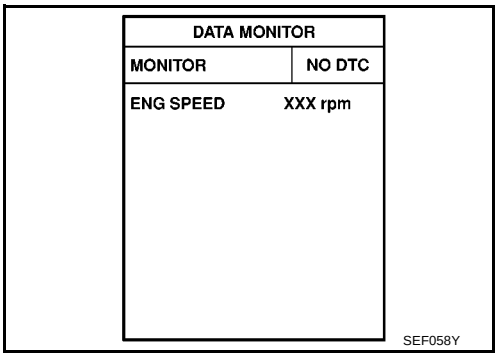

SEF058Y

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O93

EC-ECM/PW-01

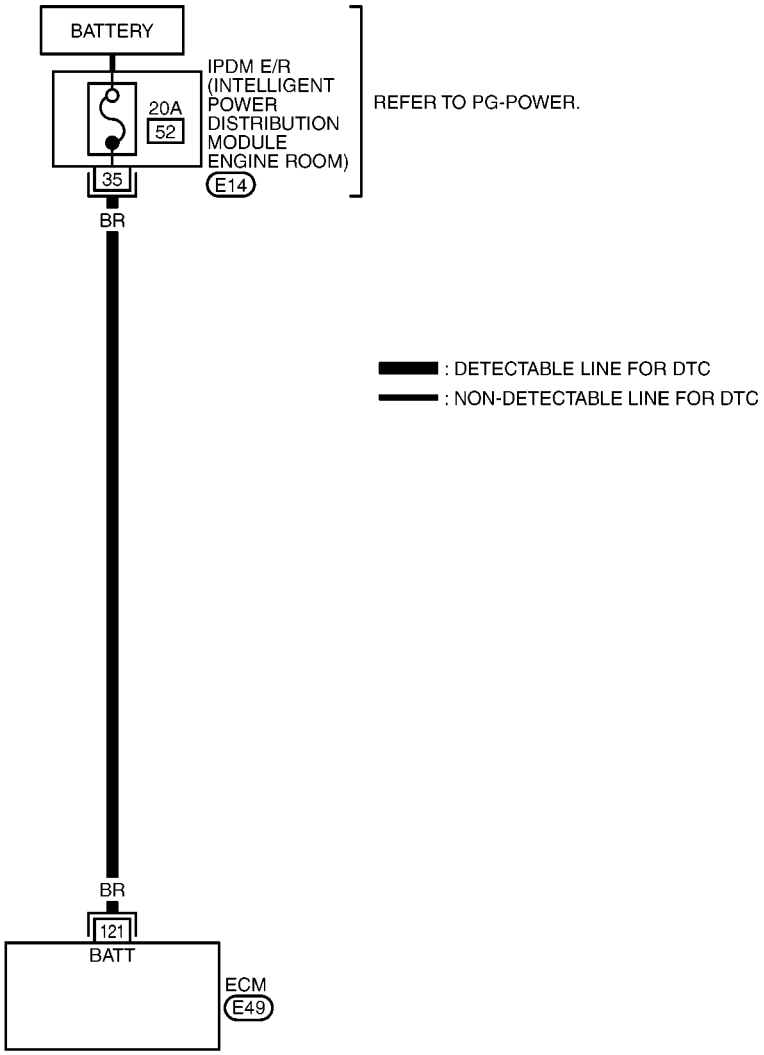



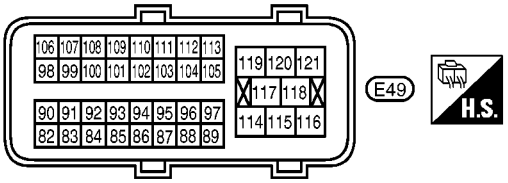

MBWA0285E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
121	BR	Power supply for ECM (Buck-up)	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00O94

1. CHECK ECM POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check voltage between ECM terminal 121 and ground with CONSULT-II or tester.

Voltage: Battery voltage

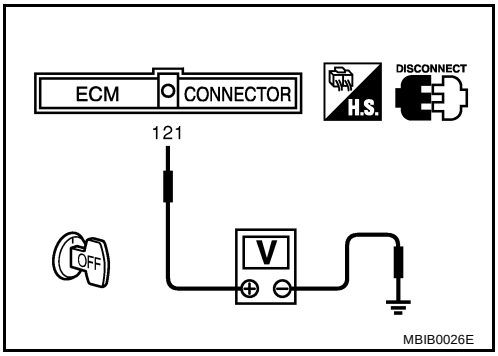

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

2. DETECT MALFUNCTIONING PART

Check the following.

- 20A fuse
- IPDM E/R harness connector E14
- Harness for open or short between ECM and IPDM E/R

>> Repair or replace harness or connectors.

3. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> GO TO 4.
NG >> Repair or replace harness or connectors.

4. PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT-II

1. Turn ignition switch ON.
2. Select “SELF DIAG RESULTS” mode with CONSULT-II.
3. Touch “ERASE”.
4. **Perform DTC Confirmation Procedure.**
   See EC-289 .
5. Is the 1st trip DTC P1065 displayed again?

With GST

1. Turn ignition switch ON.
2. Select MODE 4 with GST.
3. Touch “ERASE”.
4. **Perform DTC Confirmation Procedure.**
   See EC-289 .
5. Is the 1st trip DTC P1065 displayed again?

Yes or No

Yes >> GO TO 5.
No >> **INSPECTION END**

5. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NATS system and registration of all NATS ignition key IDs. Refer to EC-60, "NATS (Nissan Anti-theft System)" .
3. Perform EC-42, "Accelerator Pedal Released Position Learning" .
4. Perform EC-42, "Throttle Valve Closed Position Learning" .
5. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

DTC P1111 IVT CONTROL SOLENOID VALVE

PFP:23796

Component Description

EBS00O95

Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.
The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.
The longer pulse width advances valve angle.
The shorter pulse width retards valve angle.
When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

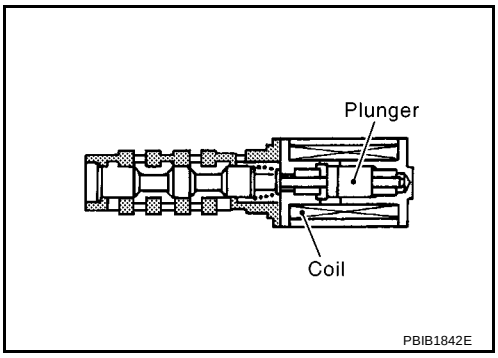

CONSULT-II Reference Value in Data Monitor Mode

EBS00O96

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
INT/V SOL (B1)	● Engine: After warming up ● Shift lever: N (A/T), Neutral (M/T) ● Air conditioner switch: OFF ● No load	Idle	0% - 2%
		When revving engine up to 2,000 rpm quickly	Approx. 0% - 50%

On Board Diagnosis Logic

EBS00O97

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1111 1111	Intake valve timing control solenoid valve circuit	An improper voltage is sent to the ECM through intake valve timing control solenoid valve.	● Harness or connectors (Intake valve timing control solenoid valve circuit is open or shorted.) ● Intake valve timing control solenoid valve

DTC Confirmation Procedure

EBS00O98

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If 1st trip DTC is detected, go to EC-295, "Diagnostic Procedure" .

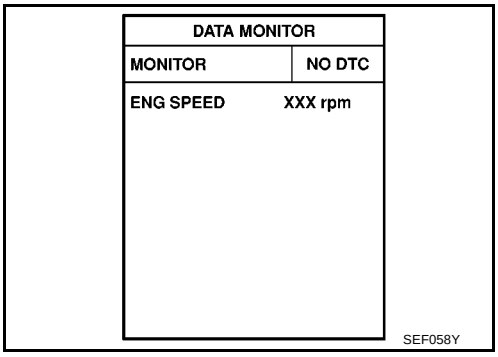

WITH GST

Following the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O99

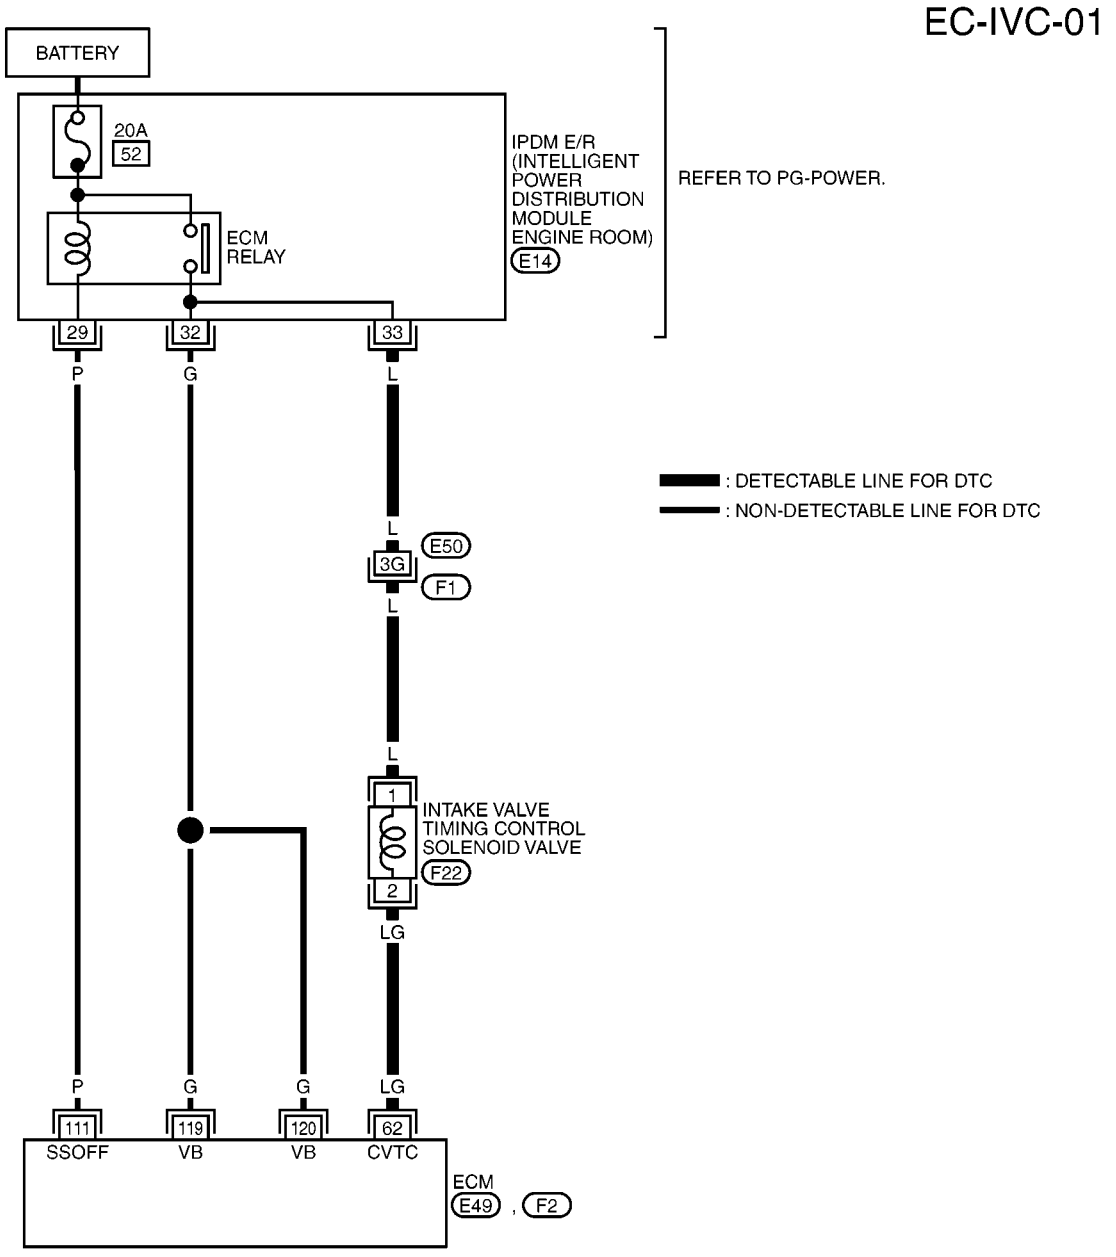

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

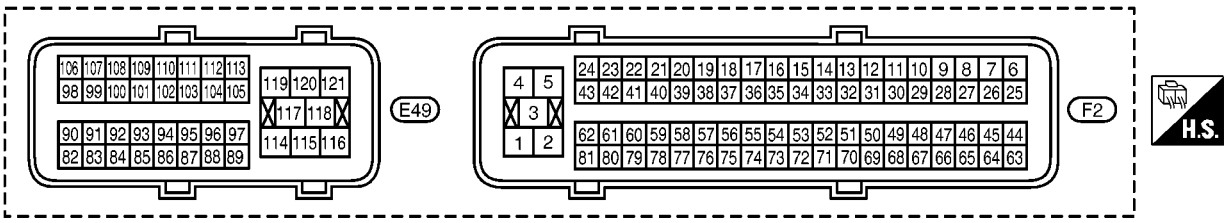

MBWA0303E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	LG	Intake valve timing control solenoid valve	**[Engine is running]** ● **Warm-up condition** ● Idle speed	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● **Warm-up condition** ● When revving engine up to 2,000 rpm quickly	Approximately 4V - BATTERY VOLTAGE (11 - 14V)★ 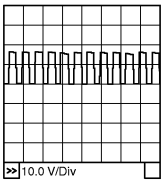 PBIB1790E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00O9A

1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect intake valve timing control solenoid valve harness connector.
3. Turn ignition switch ON.

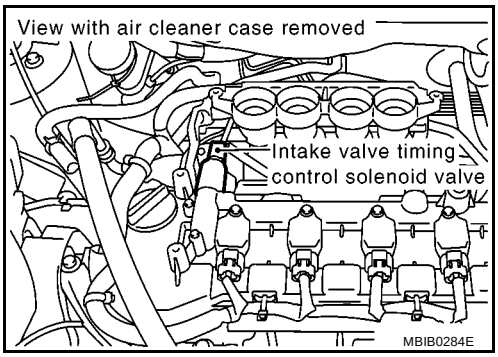

4. Check voltage between intake valve timing control solenoid valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

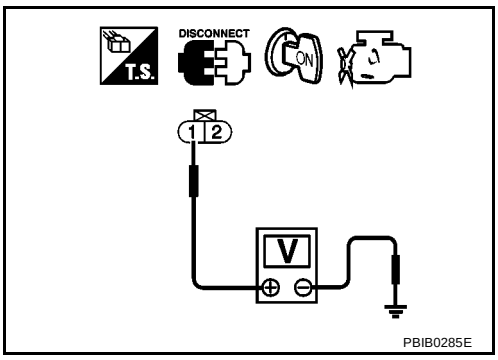

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

2. DETECT MALFUNCTION PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between intake valve timing control solenoid valve and IPDM E/R

>> Repair or replace harness or connectors.

3. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 62 and intake valve timing control solenoid valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EC-296, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace intake valve timing control solenoid valve.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00O9B

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

1. Disconnect intake valve timing control solenoid valve harness connector.
2. Check resistance between intake valve timing control solenoid valve terminals 1 and 2 under the following conditions.

Terminals	Resistance
1 and 2	Approximately 7.2Ω at 20°C (68°F)
1 or 2 and ground	∞Ω (Continuity should not exist)

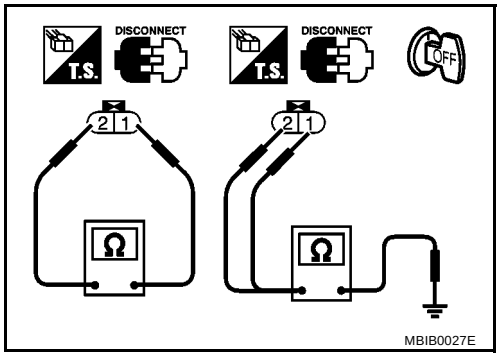

Removal and Installation

EBS00O9C

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EM-33, "ROCKER COVER" .

DTC P1121 ELECTRIC THROTTLE CONTROL ACTUATOR

PFP:16119

Component Description

EBS00O9D

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.
The throttle control motor is operated by the ECM and it opens and closes the throttle valve.
The throttle position sensor detects the throttle valve position, and the opening and closing speed of the throttle valve and feeds the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

EBS00O9E

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
P1121 1121	Electric throttle control actuator	A)	Electric throttle control actuator does not function properly due to the return spring malfunction.	● Electric throttle control actuator
		B)	Throttle valve opening angle in fail-safe mode is not in specified range.	
		C)	ECM detect the throttle valve is stuck open.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode
Malfunction A	The ECM controls the electric throttle actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm.
Malfunction B	ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.
Malfunction C	While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P position, and engine speed will not exceed 1,000 rpm or more.

DTC Confirmation Procedure

EBS00O9F

NOTE:

- **Perform PROCEDURE FOR MALFUNCTION A AND B first. If the DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION C.**
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A AND B

With CONSULT-II

1. Turn ignition witch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Shift selector lever to D position (A/T), 1st position (M/T) and wait at least 2 seconds.
4. Shift selector lever to P position (A/T), Neutral position (M/T).
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Turn ignition switch ON and wait at least 1 second.
7. Shift selector lever to D position (A/T), 1st position (M/T) and wait at least 2 seconds.
8. Shift selector lever to P position (A/T), Neutral position (M/T).
9. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
10. If 1st trip DTC is detected, go to EC-298, "Diagnostic Procedure" .

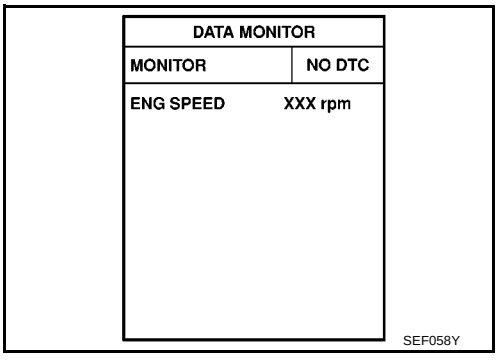

With GST

Follow the procedure “With CONSULT-II” above.

PROCEDURE FOR MALFUNCTION C

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Shift selector lever to D position (A/T), 1st position (M/T) and wait at least 2 seconds.
4. Shift selector lever to N or P position (A/T) or Neutral position (M/T).
5. Start engine and let it idle for 3 seconds.
6. If DTC is detected, go to EC-298, "Diagnostic Procedure" .

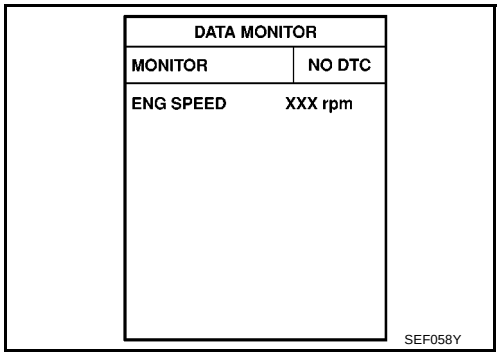

With GST

Follow the procedure “With CONSULT-II” above.

Diagnostic Procedure

EBS00O9G

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Remove the intake air duct.
2. Check if a foreign matter is caught between the throttle valve and the housing.

OK or NG

OK >> GO TO 2.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

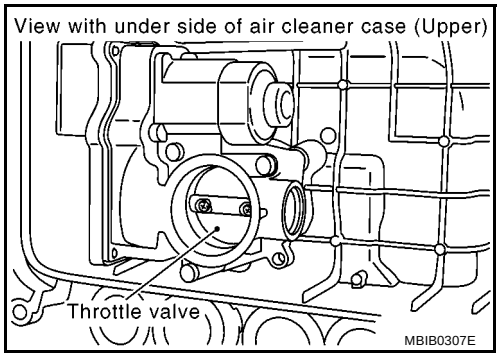

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

DTC P1122 ELECTRIC THROTTLE CONTROL FUNCTION

PFP:16119

Description

EBS00O9I

NOTE:
If DTC P1122 is displayed with DTC P1121 or 1126, first perform the trouble diagnosis for DTC P1121 or P1126. Refer to EC-297 or EC-305 .
Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.
The throttle control motor is operated by the ECM and it opens and closes the throttle valve.
The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM to control the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

EBS00O9J

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1122 1122	Electric throttle control performance problem	Electric throttle control function does not operate properly.	● Harness or connectors (Throttle control motor circuit is open or shorted.) ● Electric throttle control actuator

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00O9K

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 11V when engine is running.

WITH CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to EC-301, "Diagnostic Procedure" .

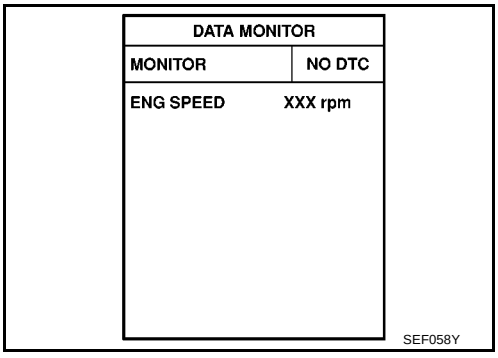

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O9L

EC-ETC1-01

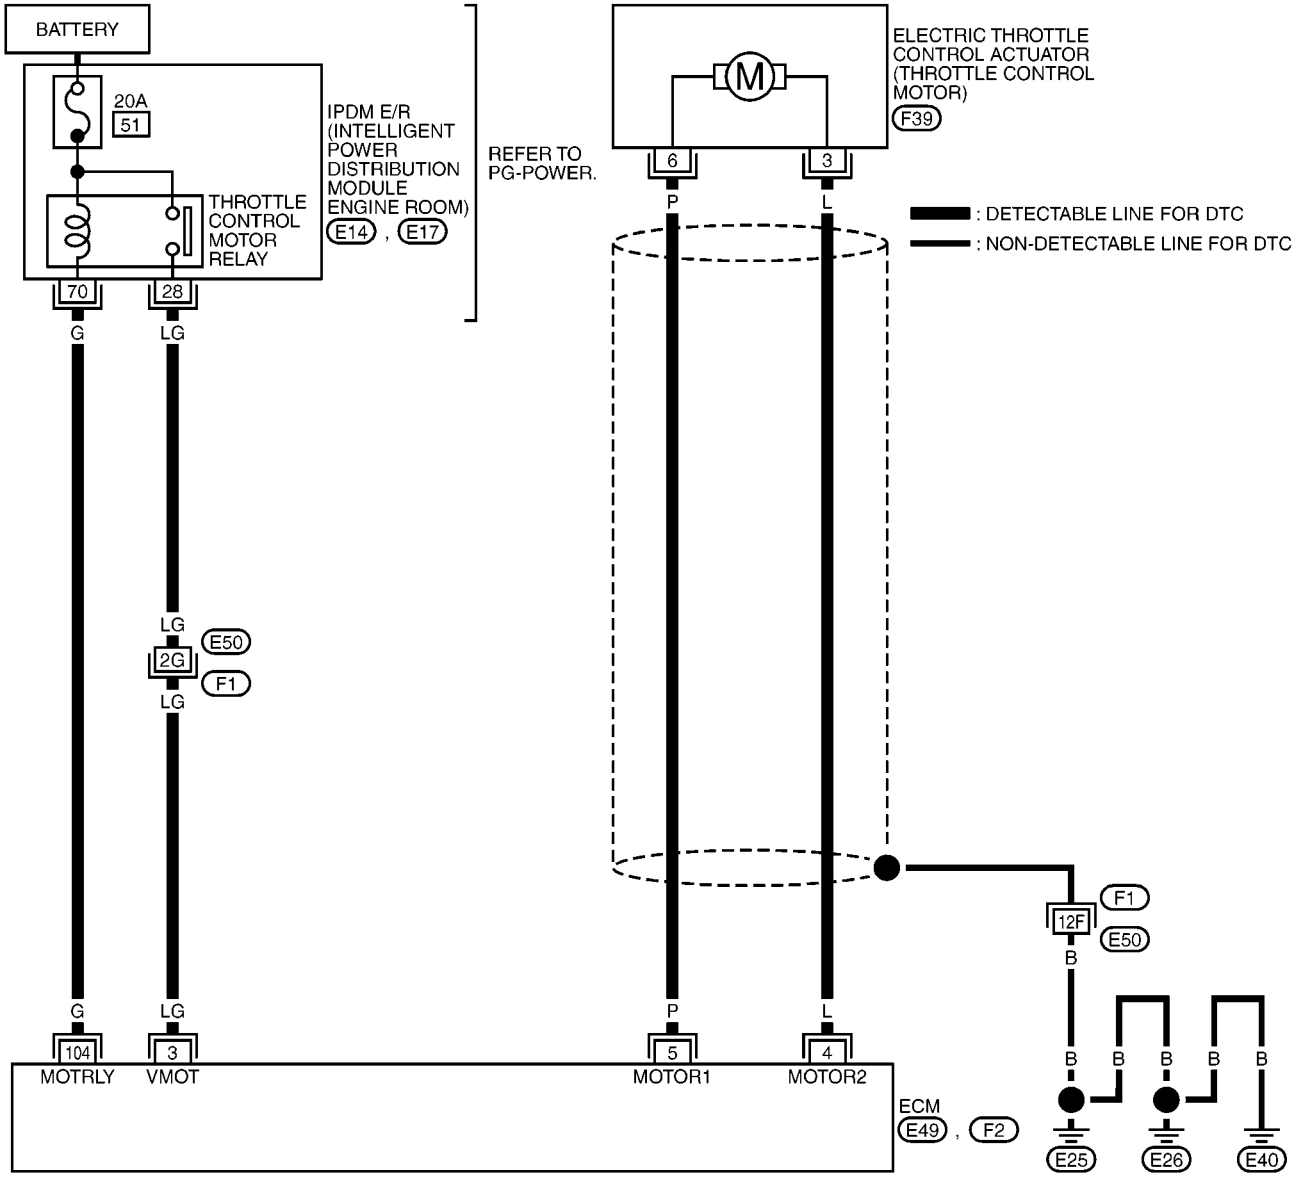

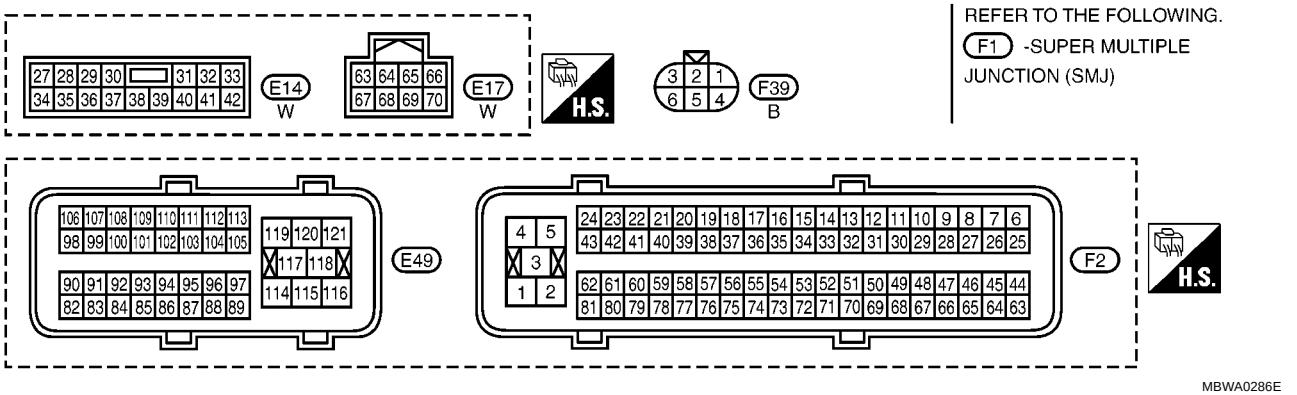

MBWA0286E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	LG	Throttle control motor relay power supply	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
4	L	Throttle control motor (Close)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Released	0 - 14V★ 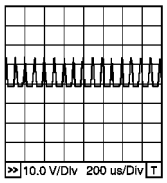 PBIB0534E
5	P	Throttle control motor (Open)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	0 - 14V★ 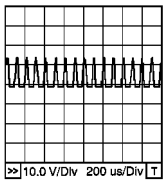 PBIB0533E
104	G	Throttle control motor relay	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON]	0 - 1.0V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00O9M

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

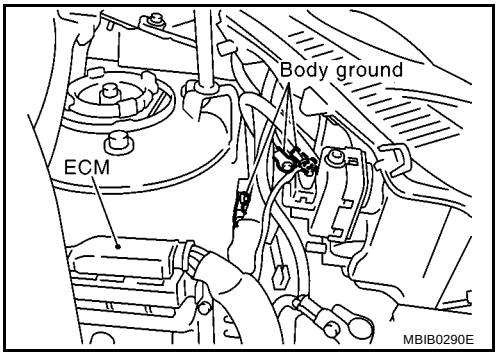

MBIB0290E

2. CHECK THROTTLE CONTROL MOTOR RELAY SIGNAL CIRCUIT-I

Check voltage between ECM terminal 3 and ground under the following conditions with CONSULT-II or tester.

Ignition switch	Voltage
OFF	Approximately 0V
ON	Battery voltage (11 - 14V)

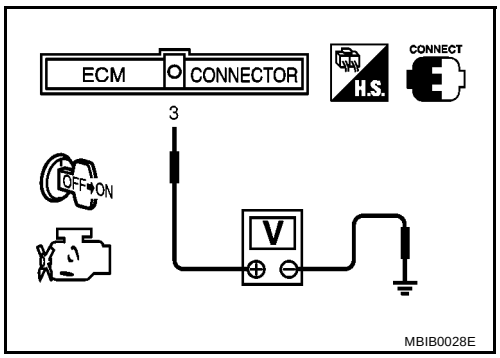

OK or NG

OK >> GO TO 10.
NG >> GO TO 3.

3. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect IPDM E/R harness connector E14.
4. Check harness continuity between ECM terminal 3 and IPDM E/R terminal 28. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch OFF.
3. Check voltage between ECM terminal 104 and ground with CONSULT-II or tester.

Voltage: Battery voltage

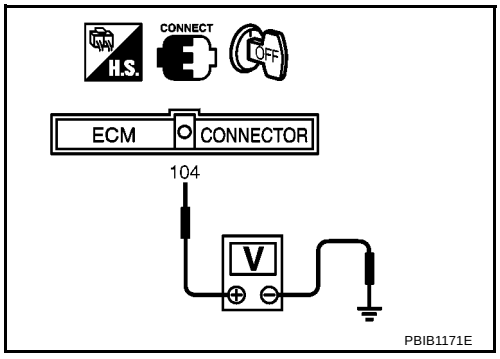

OK or NG

OK >> GO TO 9.
NG >> GO TO 6.

6. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-II

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector E17.
3. Check continuity between ECM terminal 104 and IPDM E/R terminal 70. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector E17
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK FUSE

1. Disconnect 20A fuse.
2. Check 20A fuse for blown.

OK or NG

OK >> GO TO 9.
NG >> Replace 20A fuse.

9. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R. Refer to PG-18, "IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)" .
NG >> Repair or replace harness or connectors.

10. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

1. Turn ignition switch OFF.
2. Disconnect electric throttle control actuator harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals. Refer to Wiring Diagram.

Electric throttle control actuator terminal	ECM terminal	Continuity
3	5	Should not exist
	4	Should exist
6	5	Should exist
	4	Should not exist

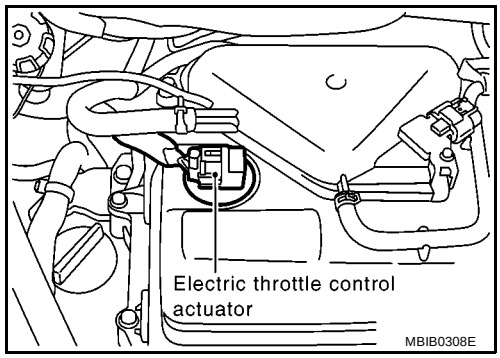

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 11.
NG >> Repair or replace.

11. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Remove the intake air duct.
2. Check if foreign matter is caught between the throttle valve and the housing.

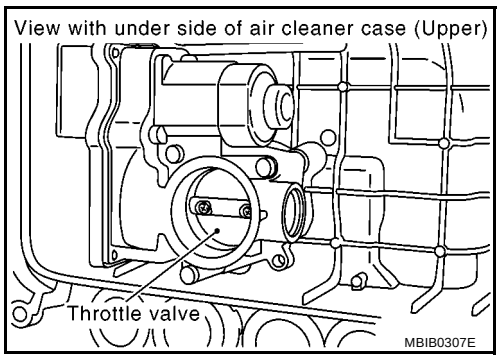

OK or NG

OK >> GO TO 12.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

12. CHECK THROTTLE CONTROL MOTOR

Refer to EC-304, "Component Inspection" .

OK or NG

OK >> GO TO 13.
NG >> GO TO 14.

13. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> GO TO 14.
NG >> Repair or replace harness or connectors.

14. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

Component Inspection

EBS00O9N

THROTTLE CONTROL MOTOR

1. Disconnect electric throttle control actuator harness connector.
2. Check resistance between terminals 3 and 6.

Resistance: Approximately 1 - 15 Ω [at 25 °C (77°F)]

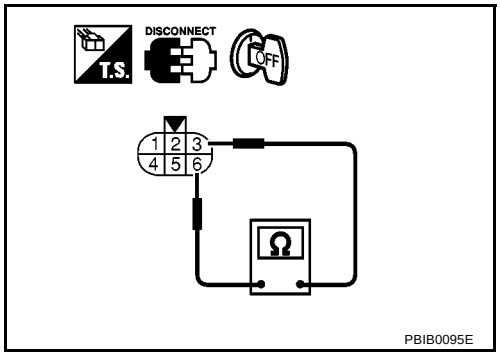

3. If NG, replace electric throttle control actuator and go to next step.
4. Perform EC-42, "Throttle Valve Closed Position Learning" .
5. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00O9O

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1124, P1126 THROTTLE CONTROL MOTOR RELAY

PFP:16119

Component Description

EBS00O9P

Power supply for the Throttle control motor is provided to the ECM via throttle control motor relay. The throttle control motor relay is ON/OFF controlled by the ECM. When the ignition switch is turned ON, the ECM sends an ON signal to throttle control motor relay and battery voltage is provided to the ECM. When the ignition switch is turned OFF, the ECM sends an OFF signal to throttle control motor relay and battery voltage is not provided to the ECM.

CONSULT-II Reference Value in Data Monitor Mode

EBS00O9Q

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
THRTL RELAY	● Ignition switch: ON	ON

On Board Diagnosis Logic

EBS00O9R

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1124 1124	Throttle control motor relay circuit short	ECM detects the throttle control motor relay is stuck ON.	● Harness or connectors (Throttle control motor relay circuit is shorted.) ● Throttle control motor relay
P1126 1126	Throttle control motor relay circuit open	ECM detects a voltage of power source for throttle control motor is excessively low.	● Harness or connectors (Throttle control motor relay circuit is open.) ● Throttle control motor relay

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00O9S

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR DTC P1124

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 8V.

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. If DTC is detected, go to EC-308, "Diagnostic Procedure" .

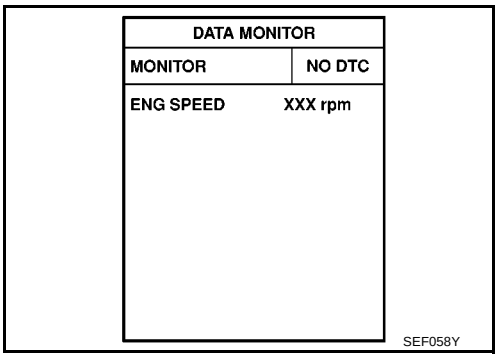

With GST

Follow the procedure “With CONSULT-II” above.

PROCEDURE FOR DTC P1126

With CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to EC-308, "Diagnostic Procedure" .

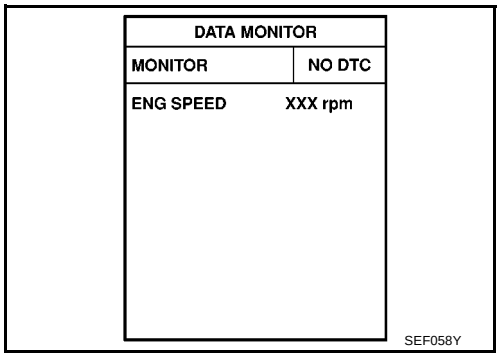

With GST

Follow the procedure “With CONSULT-II” above.

Wiring Diagram

EBS00O9T

EC-ETC2-01

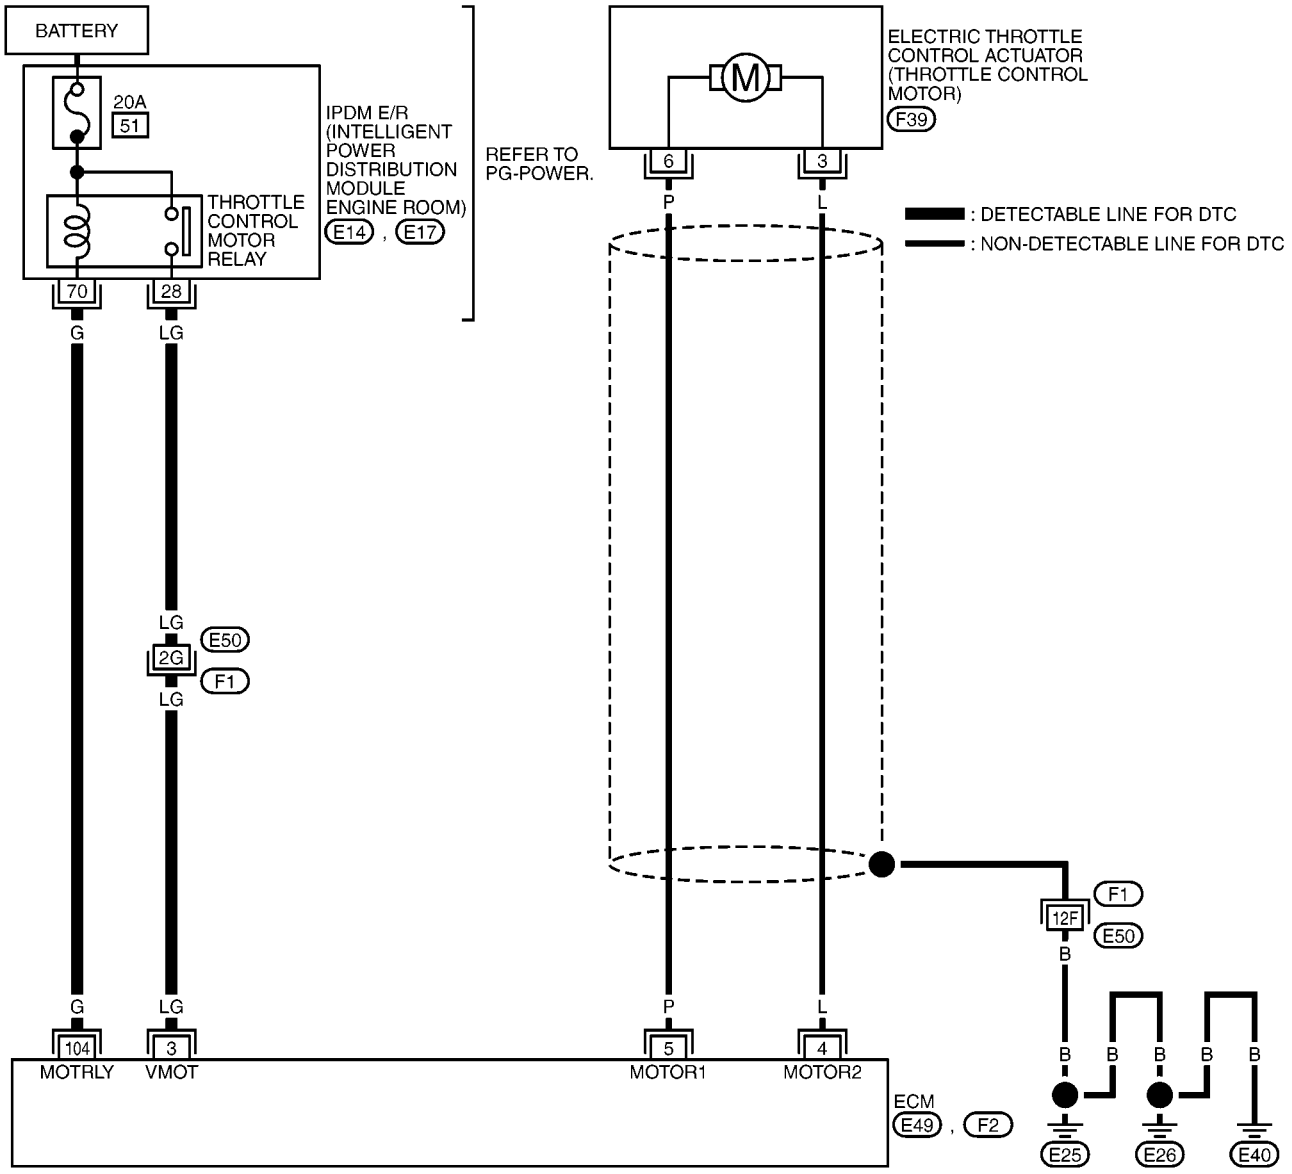

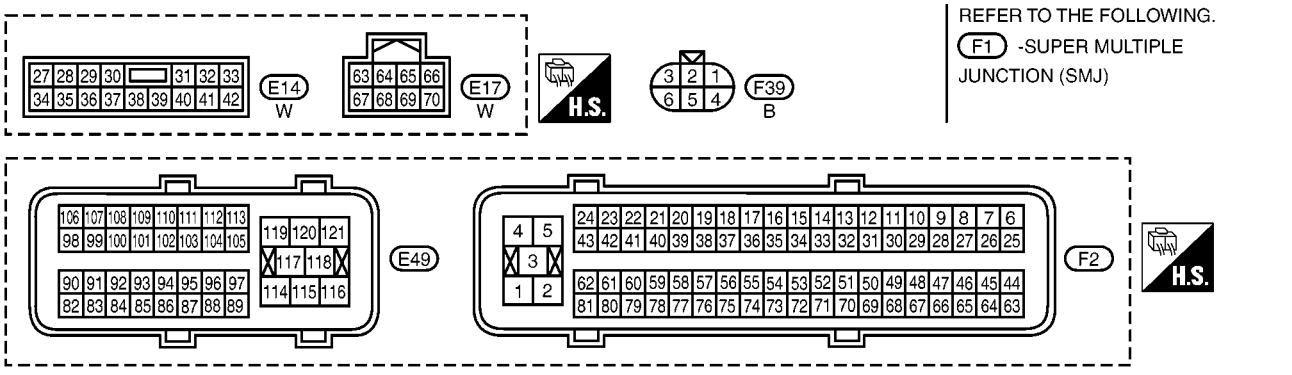

MBWA0287E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	LG	Throttle control motor relay power supply	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
104	G	Throttle control motor relay	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON]	0 - 1.0V

Diagnostic Procedure

EBS00O9U

1. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF.
2. Check voltage between ECM terminal 104 and ground with CONSULT-II or tester.

Voltage: Battery voltage.

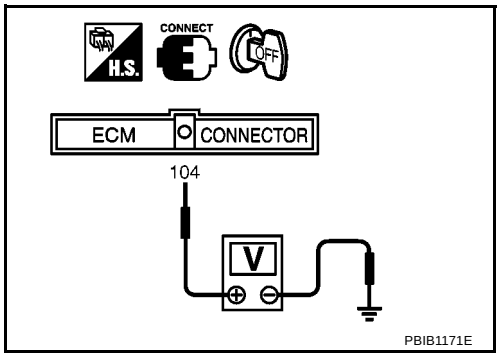

OK or NG

OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector E17.
3. Check continuity between ECM terminal 104 and IPDM E/R terminal 70.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector E17
- Harness for open or shot between ECM and IPDM E/R

>> Repair open circuit of short to ground or short to power in harness or connectors.

4. CHECK FUSE

1. Disconnect 20A fuse.
2. Check 20A fuse for blown.

OK or NG

OK >> GO TO 8.
NG >> Replace 20A fuse.

5. CHECK THROTTLE CONTROL MOTOR RELAY SIGNAL CIRCUIT-I

1. Reconnect all disconnected connectors.
2. Check voltage between ECM terminal 3 and ground under the following conditions with CONSULT-II or tester.

Ignition switch	Voltage
OFF	Approximately 0V
ON	Battery voltage (11 - 14V)

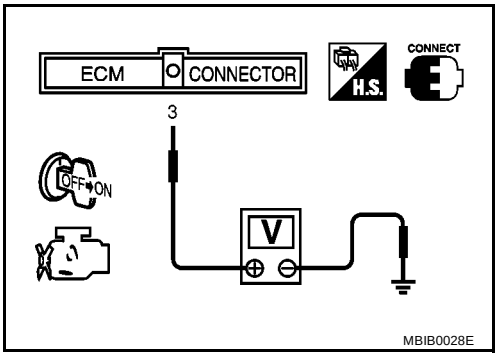

OK or NG

OK >> GO TO 8.
NG >> GO TO 6.

6. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect IPDM E/R harness connector E14.
4. Check continuity between ECM terminal 3 and IPDM E/R terminal 28. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R. Refer to PG-18, "IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)" .
NG >> Repair or replace harness or connectors.

DTC P1128 THROTTLE CONTROL MOTOR

PFP:16119

Component Description

EBS00O9W

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.
The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM to control the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

EBS00O9X

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1128 1128	Throttle control motor circuit short	ECM detects short in both circuits between ECM and throttle control motor.	● Harness or connectors (Throttle control motor circuit is shorted.) ● Electric throttle control actuator (Throttle control motor)

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00O9Y

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to EC-312, "Diagnostic Procedure" .

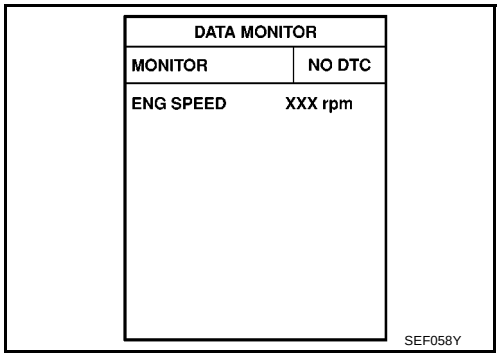

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00O9Z

EC-ETC3-01

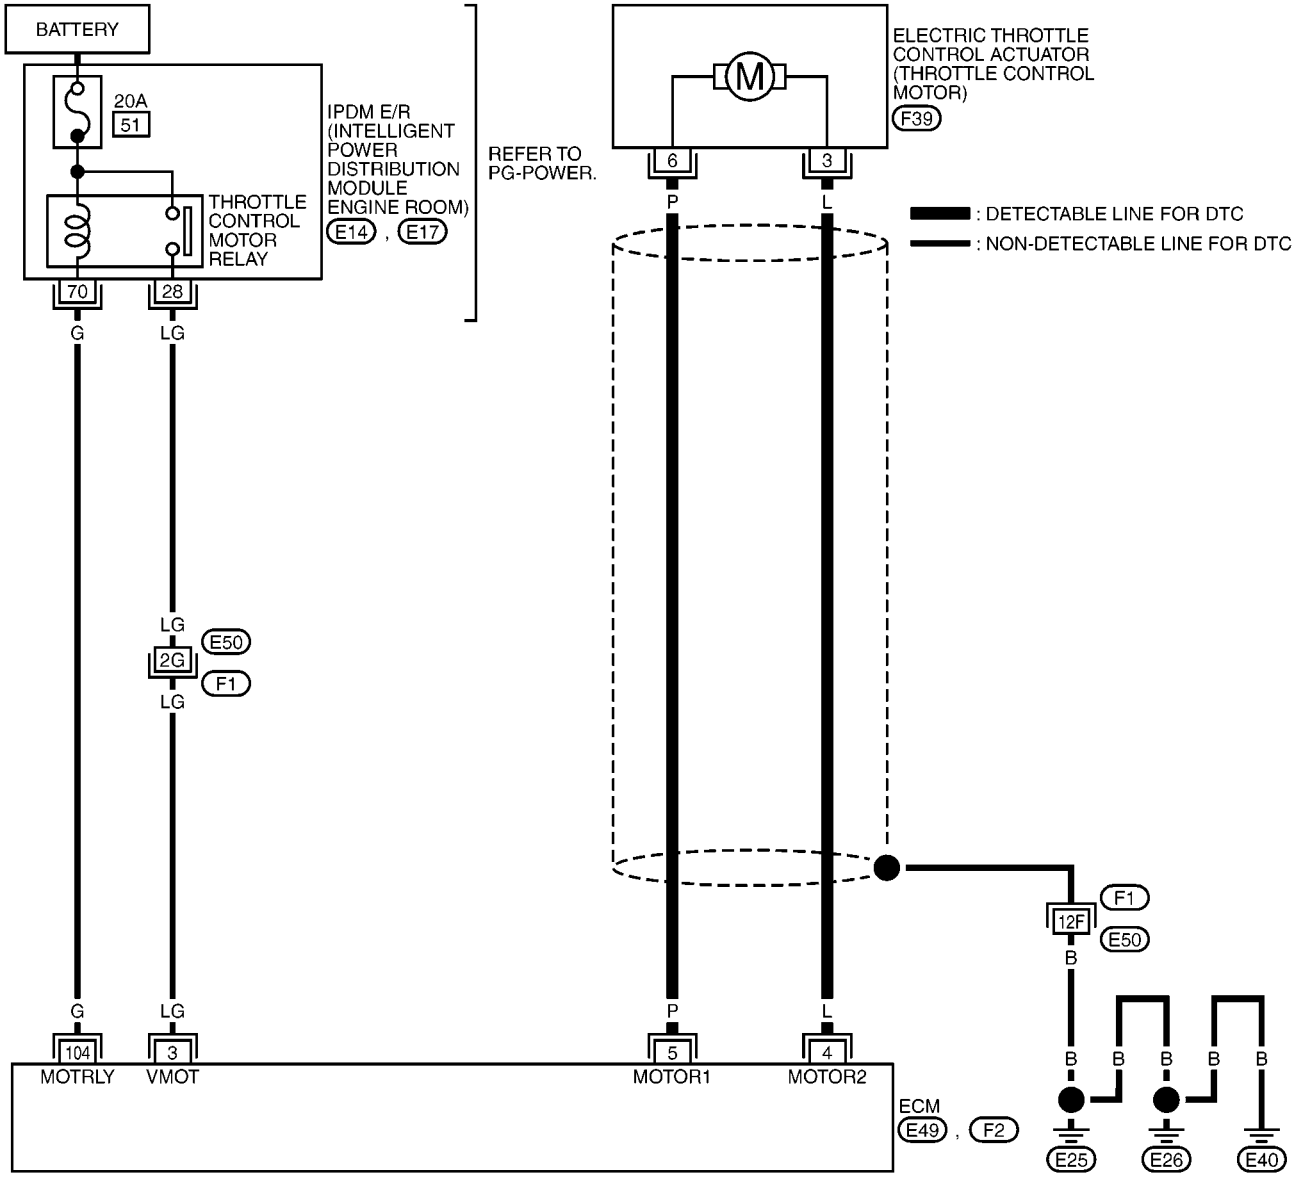

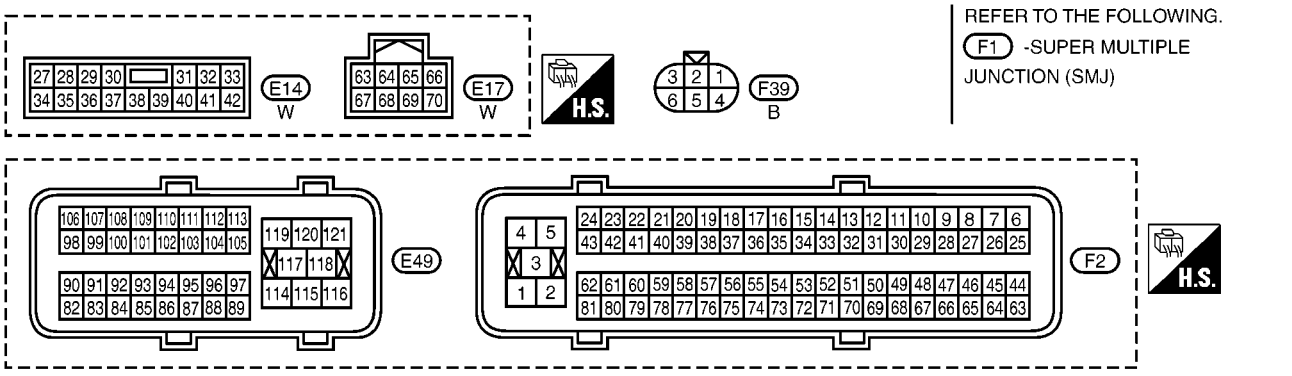

MBWA0288E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	L	Throttle control motor (Close)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Released	0 - 14V★ 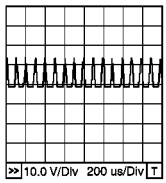 PBIB0534E
5	P	Throttle control motor (Open)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	0 - 14V★ 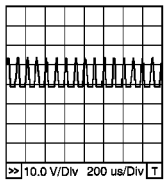 PBIB0533E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OA0

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

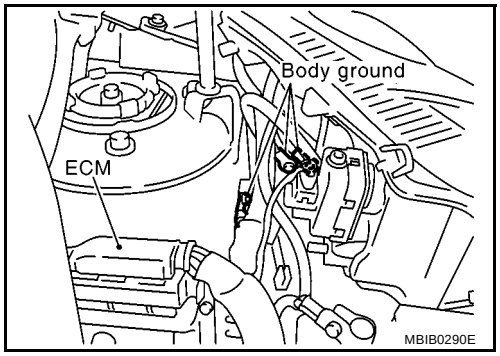

MBIB0290E

2. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

1. Turn ignition switch OFF.
2. Disconnect electric throttle control actuator harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals. Refer to Wiring Diagram.

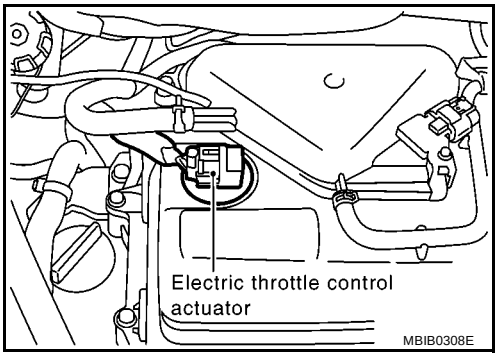

Electric throttle control actuator terminal	ECM terminal	Continuity
3	4	Should exist
	5	Should not exist
6	4	Should not exist
	5	Should exist

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. CHECK THROTTLE CONTROL MOTOR

Refer to EC-313, "Component Inspection" .

OK or NG

OK >> GO TO 4.
NG >> GO TO 5.

4. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> GO TO 5.
NG >> Repair or replace harness or connectors.

5. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

Component Inspection

EBS00OA1

THROTTLE CONTROL MOTOR

1. Disconnect electric throttle control actuator harness connector.
2. Check resistance between terminals 3 and 6.

Resistance: Approximately 1 - 15 Ω [at 25 °C (77°F)]

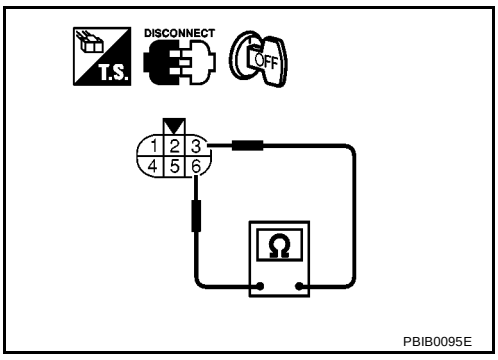

3. If NG, replace electric throttle control actuator and go to next step.
4. Perform EC-42, "Throttle Valve Closed Position Learning" .
5. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00OA2

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1143 HO2S1

PFP:22690

Component Description

EBS00OA3

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

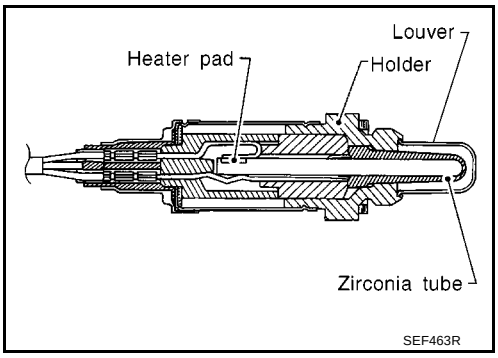

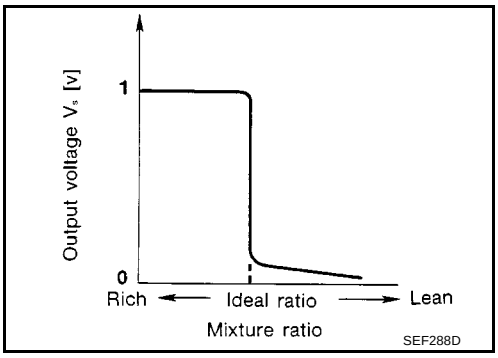

CONSULT-II Reference Value in Data Monitor Mode

EBS00OA4

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

On Board Diagnosis Logic

EBS00OA5

To judge the malfunction, the output from the heated oxygen sensor 1 is monitored to determine whether the “rich” output is sufficiently high and whether the “lean” output is sufficiently low. When both the outputs are shifting to the lean side, the malfunction will be detected.

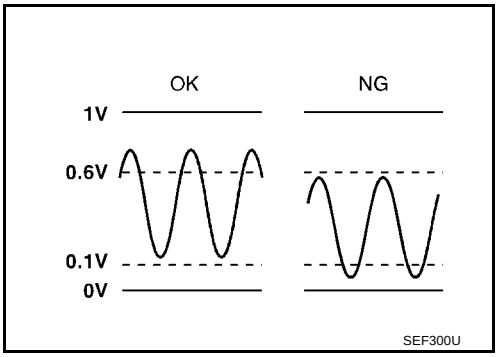

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1143 1143	Heated oxygen sensor 1 lean shift monitoring	The maximum and minimum voltage from the sensor are not reached to the specified voltages.	● Heated oxygen sensor 1 ● Heated oxygen sensor 1 heater ● Fuel pressure ● Injectors ● Intake air leaks

DTC Confirmation Procedure

EBS00OA6

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- **Always perform at a temperature above −10°C (14°F).**
- **Before performing following procedure, confirm that battery voltage is more than 11V at idle.**

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine and wait at least 10 seconds.
3. Turn ignition switch ON and select “HO2S1 (B1) P1143” of “HO2S1” in “DTC WORK SUPPORT” mode with CONSULT-II.
4. Touch “START”.
5. Start engine and let it idle for at least 3 minutes.

   NOTE:
   Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 5.

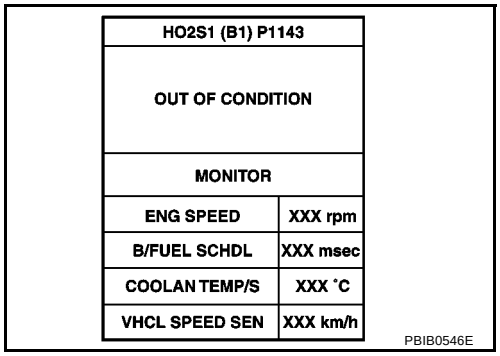

6. When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 50 seconds or more.)

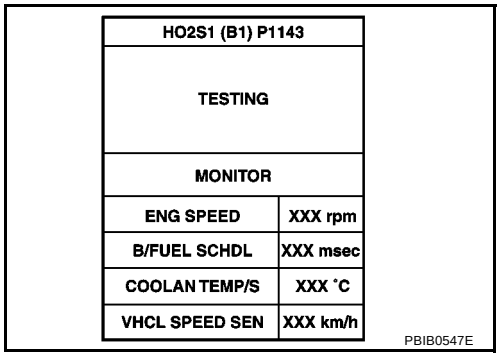

ENG SPEED	1,700 - 3,700 rpm (M/T models with CR10 engine) 1,500 - 3,350 rpm (M/T models with CR12 engine) 1,600 - 3,450 rpm (M/T models with CR14 engine) 1,300 - 2,850 rpm (A/T models)
Vehicle speed	50 - 100 km/h (31 - 62 MPH)
B/FUEL SCHDL	1.8 - 5.1 msec (M/T models) 2.4 - 6.1 msec (A/T models)
Selector lever	Suitable position

If “TESTING” is not displayed after 5 minutes, retry from step 2.

7. Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”. If “NG” is displayed, refer to EC-317, "Diagnostic Procedure" .

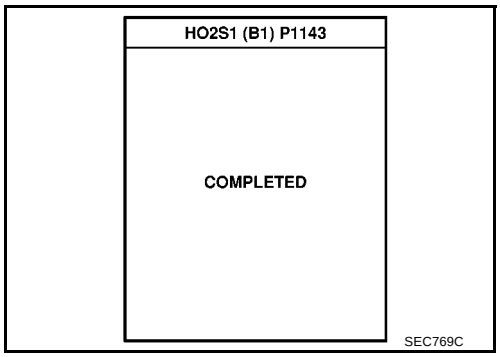

Overall Function Check

EBS00OA7

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check one of the following with engine speed held at 2,000 rpm constant under no load.

- The maximum voltage is over 0.6V at least one time.
- The minimum voltage is over 0.1V at least one time.

4. If NG, go to EC-317, "Diagnostic Procedure" .

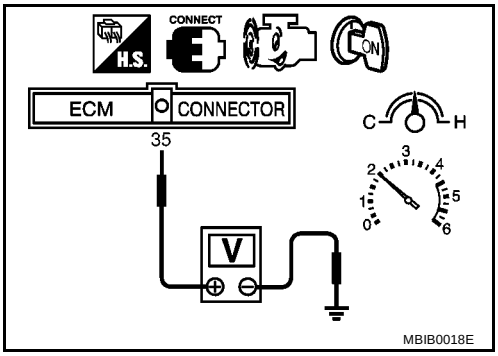

Diagnostic Procedure

EBS00OA8

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

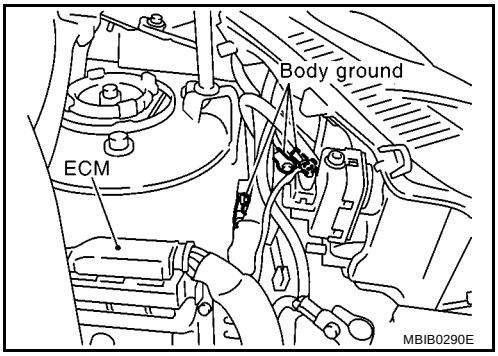

2. RETIGHTEN HEATED OXYGEN SENSOR 1

Loosen and retighten heated oxygen sensor 1.

Tightening torque: 40 - 60 N·m (4.1 - 6.2 kg-m, 30 - 44 ft-lb)

>> GO TO 3.

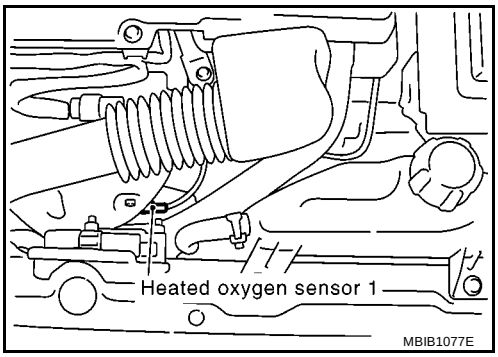

3. CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching “CLEAR”.
4. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 detected?
   Is it difficult to start engine?

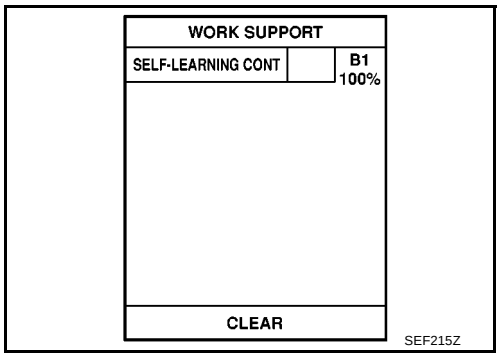

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect manifold absolute pressure sensor harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Make sure that DTC P0107 is displayed.
6. Erase the DTC memory. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 detected?
   Is it difficult to start engine?

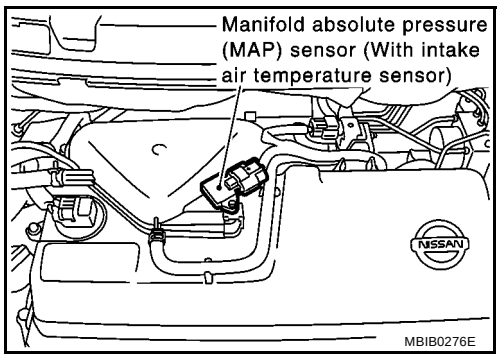

Yes or No

Yes >> Perform trouble diagnosis for DTC P0171. Refer to EC-208 .
No >> GO TO 4.

4. CHECK HEATED OXYGEN SENSOR 1 HEATER

Refer to EC-141, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace heated oxygen sensor 1.

5. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-319, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 1.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .
For circuit, refer to EC-171, "Wiring Diagram" .

>> **INSPECTION END**

Component Inspection

EBS00OA9

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.
3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S1 MNTR (B1)	LEAN

MBIB0301E

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown in the figure.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

cycle	1	2	3	4	5
HO2S1 MNTR (B1)	R-L	R-L	R-L	R-L	R-L-R

R means HO2S1 MNTR (B1) indicates RICH
L means HO2S1 MNTR (B1) indicates LEAN

SEF217YA

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

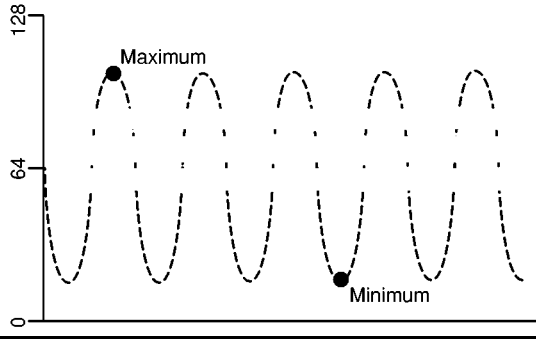

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

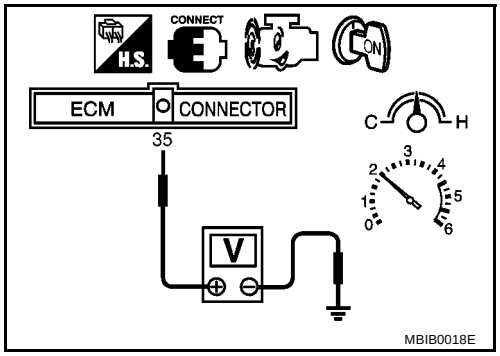

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OAA

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P1144 HO2S1

PFP:22690

Component Description

EBS00OAB

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

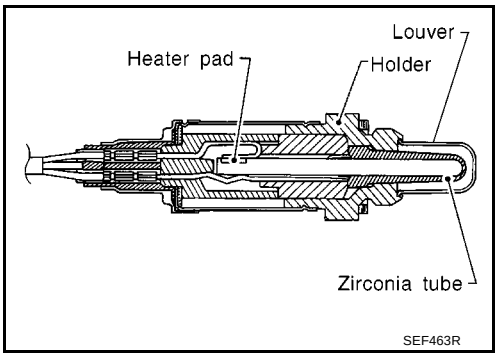

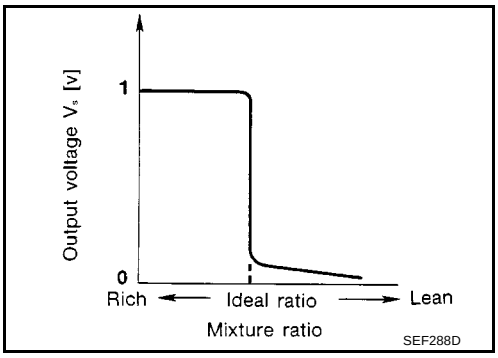

CONSULT-II Reference Value in Data Monitor Mode

EBS00OAC

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

On Board Diagnosis Logic

EBS00OAD

To judge the malfunction, the output from the heated oxygen sensor 1 is monitored to determine whether the “rich” output is sufficiently high and whether the “lean” output is sufficiently low. When both the outputs are shifting to the rich side, the malfunction will be detected.

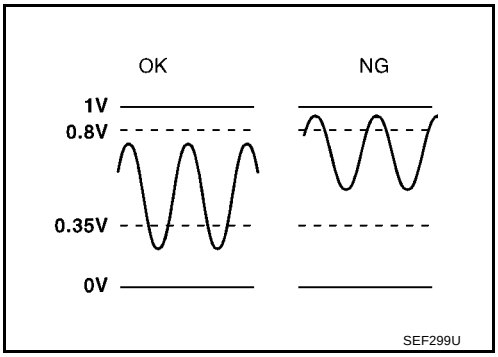

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1144 1144	Heated oxygen sensor 1 rich shift monitoring	The maximum and minimum voltages from the sensor are beyond the specified voltages.	● Heated oxygen sensor 1 ● Heated oxygen sensor 1 heater ● Fuel pressure ● Injectors

DTC Confirmation Procedure

EBS00OAE

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- **Always perform at a temperature above −10°C (14°F).**
- **Before performing the following procedure, confirm that battery voltage is more than 11V at idle.**

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine and wait at least 5 seconds.
3. Turn ignition switch ON and select “HO2S1 (B1) P1144” of “HO2S1” in “DTC WORK SUPPORT” mode with CONSULT-II.
4. Touch “START”.
5. Start engine and let it idle for at least 3 minutes.

   NOTE:
   Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 5.

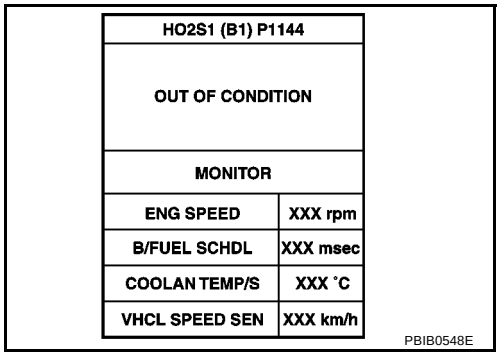

6. When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 50 seconds or more.)

ENG SPEED	1,700 - 3,700 rpm (M/T models with CR10 engine) 1,500 - 3,350 rpm (M/T models with CR12 engine) 1,600 - 3,450 rpm (M/T models with CR14 engine) 1,300 - 2,850 rpm (A/T models)
Vehicle speed	50 - 100 km/h (31 - 62 MPH)
B/FUEL SCHDL	1.8 - 5.1 msec (M/T models) 2.4 - 6.1 msec (A/T models)
Selector lever	Suitable position

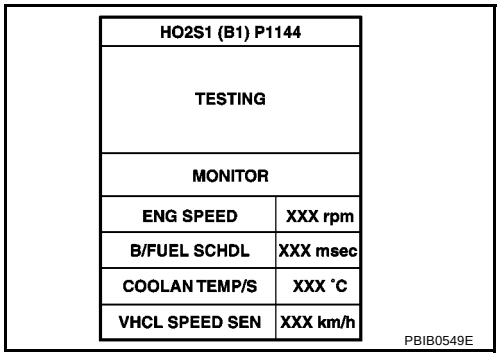

If “TESTING” is not displayed after 5 minutes, retry from step 2.

7. Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”. If “NG” is displayed, refer to EC-323, "Diagnostic Procedure" .

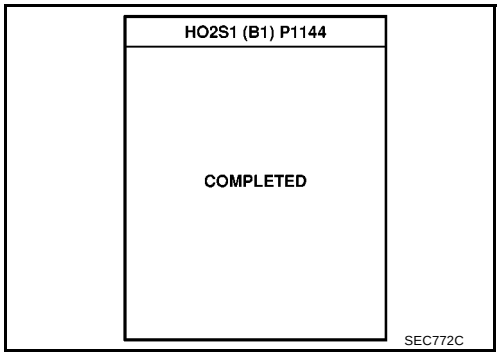

Overall Function Check

EBS00OAF

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check one of the following with engine speed held at 2,000 rpm constant under no load.

- The maximum voltage is below 0.8V at least one time.
- The minimum voltage is below 0.35V at least one time.

4. If NG, go to EC-323, "Diagnostic Procedure" .

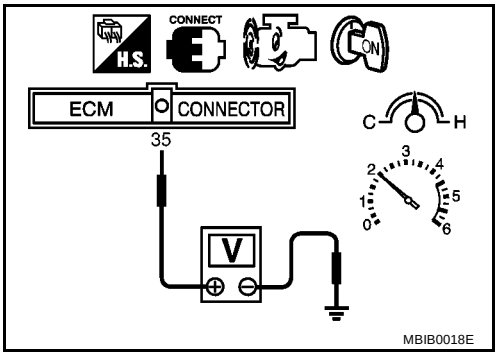

Diagnostic Procedure

EBS00OAG

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

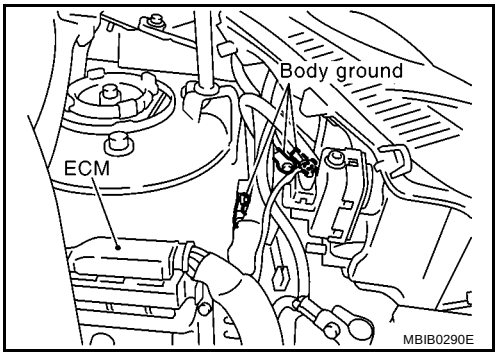

2. RETIGHTEN HEATED OXYGEN SENSOR 1

Loosen and retighten heated oxygen sensor 1.

Tightening torque: 40 - 60 N·m (4.1 - 6.2 kg-m, 30 - 44 ft-lb)

>> GO TO 3.

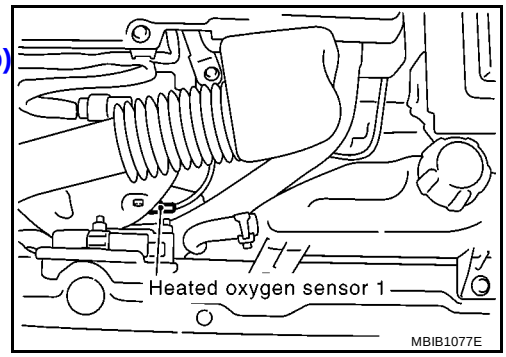

3. CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching “CLEAR”.
4. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0172 detected?
   Is it difficult to start engine?

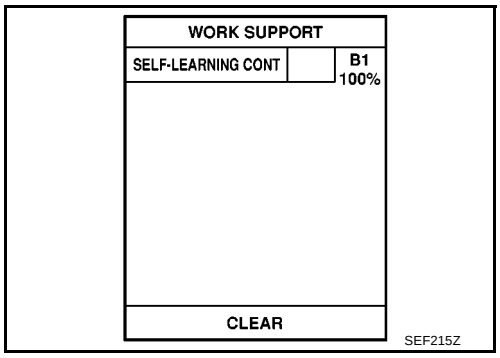

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect manifold absolute pressure sensor harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Make sure that DTC P0107 is displayed.
6. Erase the DTC memory. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0172 detected?
   Is it difficult to start engine?

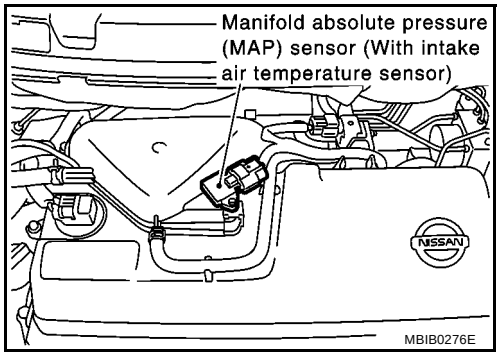

Yes or No

Yes >> Perform trouble diagnosis for DTC P0172. Refer to EC-215 .
No >> GO TO 4.

4. CHECK HO2S1 CONNECTOR FOR WATER

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 harness connector.
3. Check connectors for water.

Water should not exist.

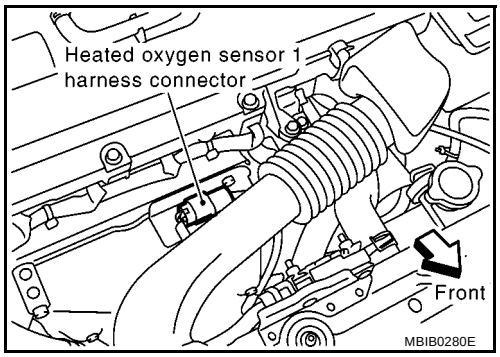

OK or NG

OK >> GO TO 5.
NG >> Repair or replace harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 1 HEATER

Refer to EC-141, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 1.

6. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-325, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace heated oxygen sensor 1.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .
For circuit, refer to EC-171, "Wiring Diagram" .

>> **INSPECTION END**

Component Inspection

EBS00OAH

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.
3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

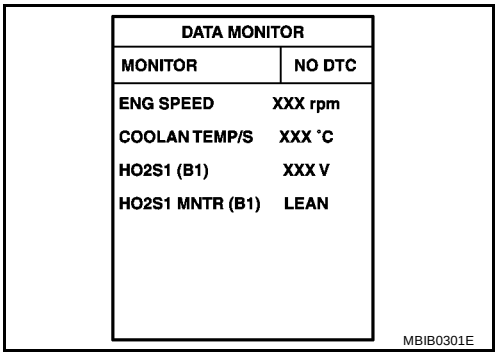

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown in the figure.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

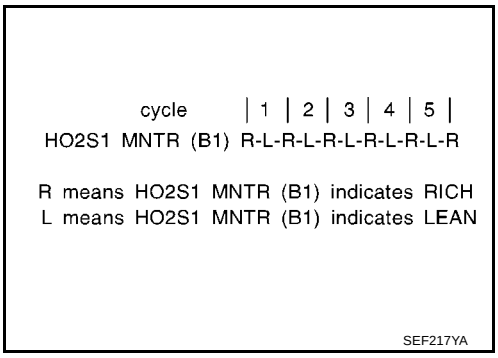

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

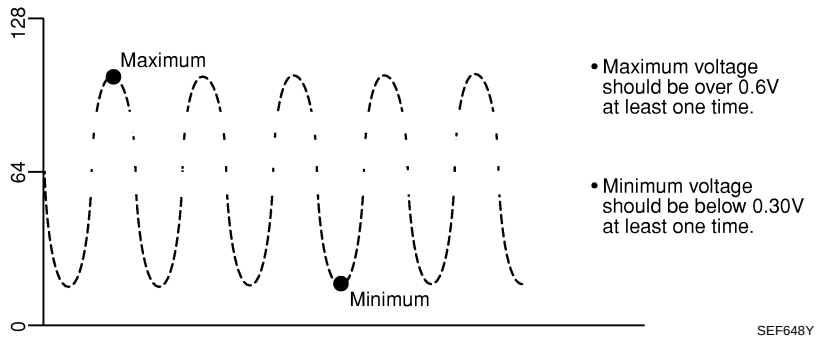

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

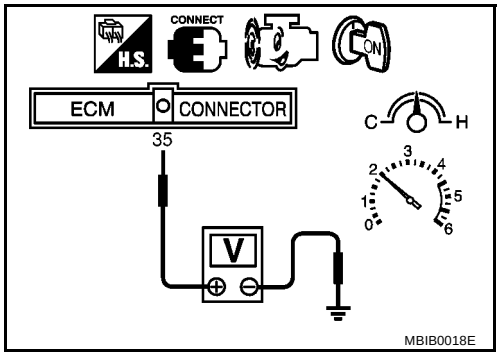

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OAI

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P1146 HO2S2

PFP:226A0

Component Description

EBS00OAJ

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.
Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.
This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.
Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

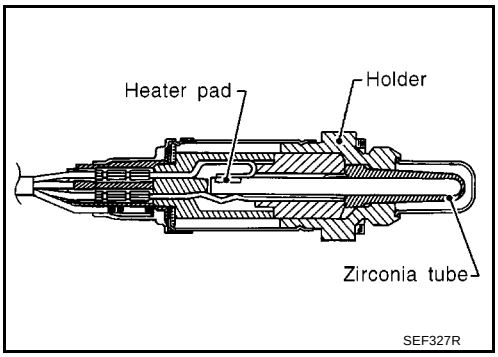

CONSULT-II Reference Value in Data Monitor Mode

EBS00OAK

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ←→ RICH

On Board Diagnosis Logic

EBS00OAL

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the minimum voltage of sensor is sufficiently low during the various driving condition such as fuel-cut.

CR10 engine models

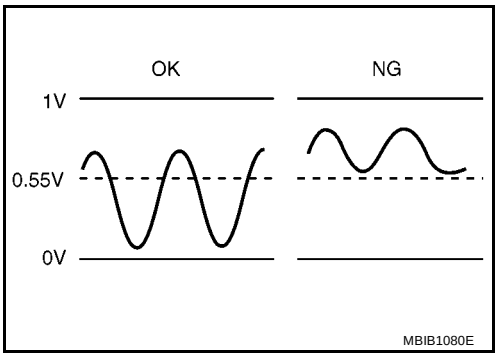

A/T models with CR14 engine without ESP

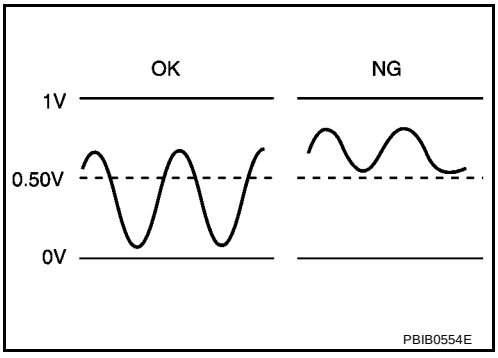

Except above models

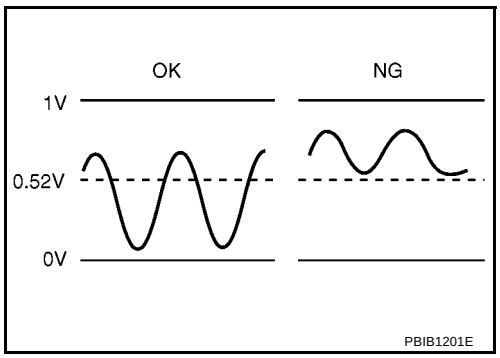

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1146 1146	Heated oxygen sensor 2 minimum voltage monitoring	The minimum voltage from the sensor is not reached to the specified voltage.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 2 ● Fuel pressure ● Injectors

DTC Confirmation Procedure

EBS00OAM

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
- **"COMPLETED" will appear on CONSULT-II screen when all tests "COND1", "COND2" and "COND3" are completed.**
- If DTC confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Never stop engine during this procedure. If the engine is stopped, retry procedure from step 2 in Procedure for COND1.

WITH CONSULT-II

Procedure for COND1

For the Best results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C(32 to 86°F).

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle 1 minute.
5. Select "HO2S2 (B1) P1146" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
6. Touch "START".
7. Start engine and let it idle for at least 30 seconds.
8. Rev engine up to 2,000 rpm 2 or 3 times quickly under no load.
   If "COMPLETED" appears on CONSULT-II screen, go to step 2 in Procedure for COND3".
   If "COMPLETED" does not appear on CONSULT-II screen, go to the following step.
9. When the following conditions are met, "TESTING" will be displayed at "COND1" on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 60 seconds.)

ENG SPEED	More than 1,500 rpm
B/FUEL SCHDL	More than 1.0 msec
COOLANT TEMP/S	70 - 105°C
Selector lever	Suitable position

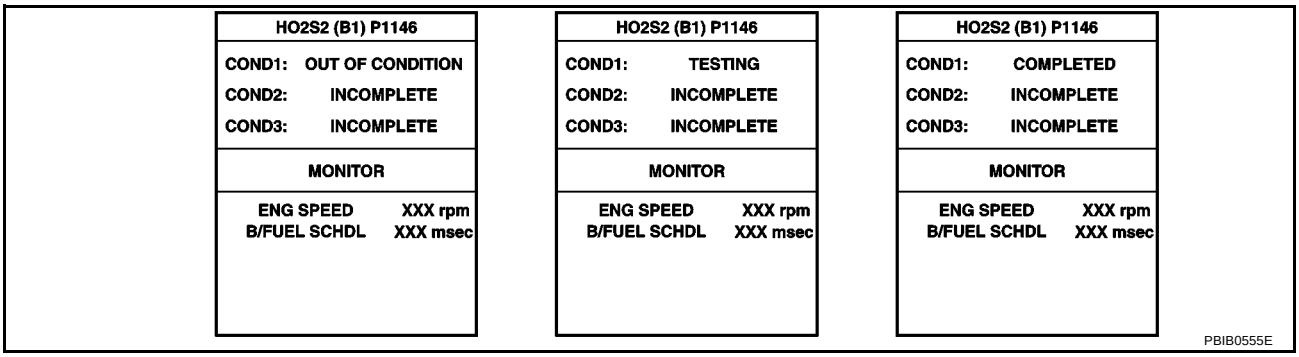

NOTE:
- **If "TESTING" is not displayed after 5 minutes, retry from step 2 in Procedure for COND1.**
- **If "COMPLETED" already appears at "COND2" on CONSULT-II screen before Procedure for COND2 is conducted, it is unnecessary to conduct step 1 in Procedure for COND2.**

Procedure for COND2

1. While driving, release accelerator pedal completed from the above condition [step 9] until “INCOMPLETE” at “COND2” on CONSULT-II screen has turned to “COMPLETED” (It will take approximately 4 seconds.)

   NOTE:
   If “COMPLETE” already appears at “COND3” on CONSULT-II screen before Procedure for COND3 is conducted, it is unnecessary to conduct step 1 in Procedure for COND3.

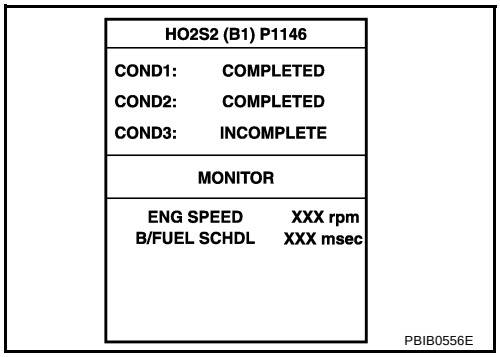

Procedure for COND3

1. Stop vehicle and let it idle until “INCOMPLETE” of “COND3” on CONSULT-II screen has turned to “COMPLETED”. (It will take a maximum of approximately 6 minutes.)
2. Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”.
   If “NG” is displayed, refer to EC-332, "Diagnostic Procedure" .
   If “CAN NOT BE DIAGNOSED” is displayed, performed the following.

a. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).

b. Turn ignition switch ON and select “COOLANTEMP/S” in “DATA MONITOR” mode with CONSULT-II.

c. Start engine and warm it up while monitoring “COOLANTEMP/S” indication on CONSULT-II.

d. When “COOLANTEMP/S” indication reaches to 70°C(158°F), go to procedure for COND1 step 3.

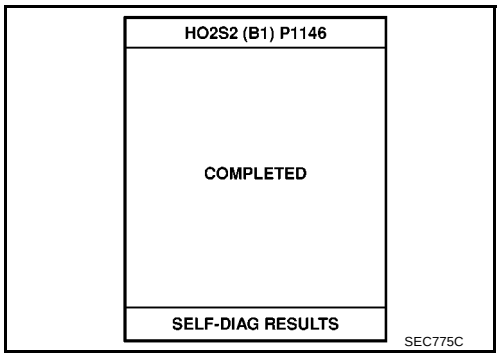

Overall Function Check

EBS00OAN

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to the operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.
6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
   (Depress and release accelerator pedal as soon as possible.)
   The voltage should be below 0.52V at least once during this procedure.
   If the voltage can be confirmed in step 6, step 7 is not necessary.
7. Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
   The voltage should be below 0.52V at least once during this procedure.
8. If NG, go to EC-332, "Diagnostic Procedure" .

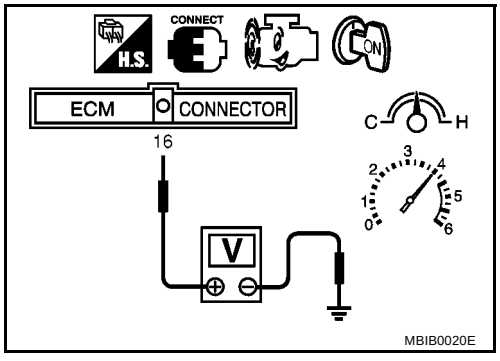

Wiring Diagram

EBS00OAO

EC-HO2S2-01

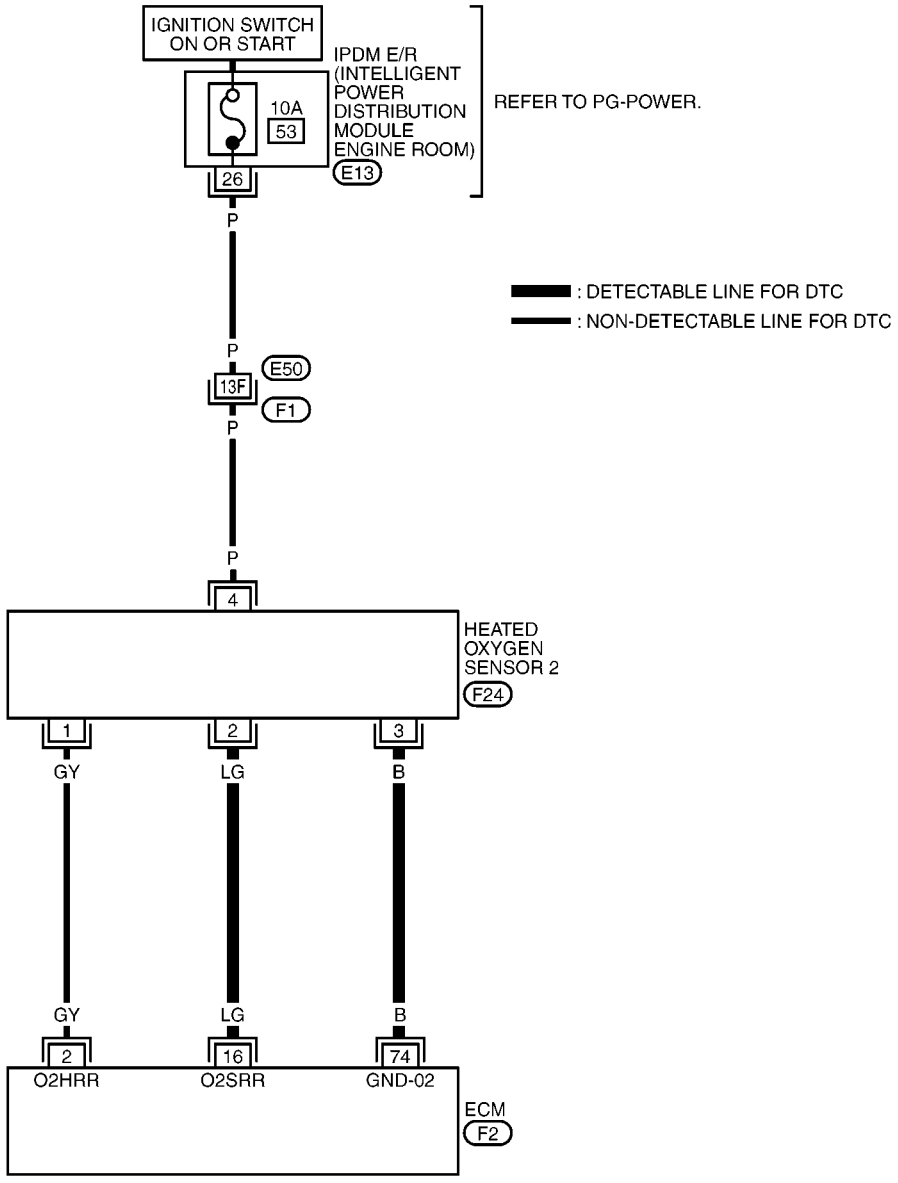

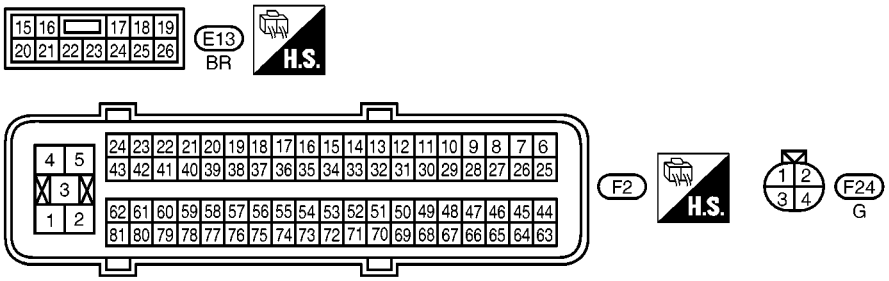

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0273E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● Revving engine from idle to 3,000 rpm quickly after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - Approximately 1.0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OAP

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

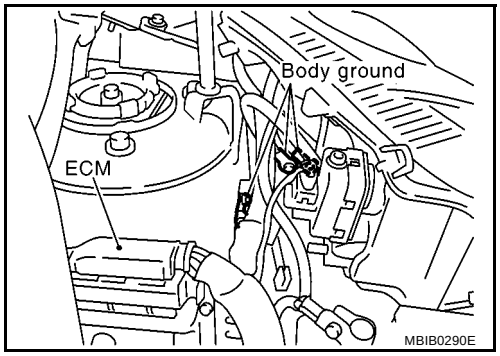

2. CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching “CLEAR”.
4. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0172 detected?
   Is it difficult to start engine?

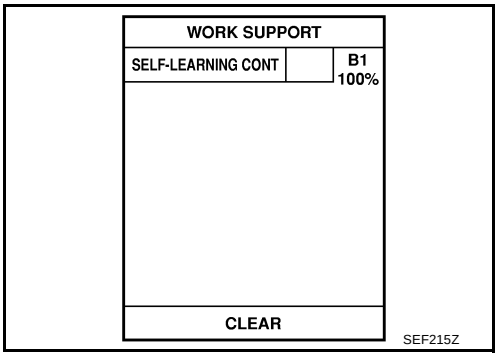

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect manifold absolute pressure sensor harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Make sure that DTC P0107 is displayed.
6. Erase the DTC memory. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0172 detected?
   Is it difficult to start engine?

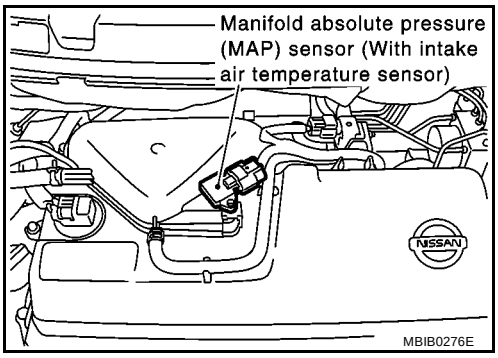

Yes or No

Yes >> Perform trouble diagnosis for DTC P0172. Refer to EC-215 .
No >> GO TO 3.

3. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S2 terminal 3.
   Refer to Wiring Diagram.

   Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

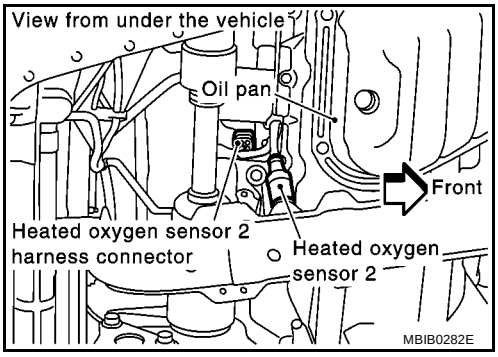

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 16 and HO2S2 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 16 or HO2S2 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-334, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OAQ

HEATED OXYGEN SENSOR 2

With CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.

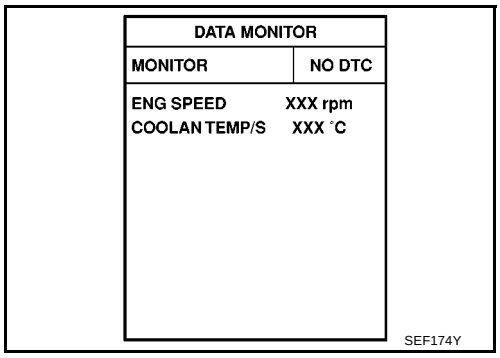

6. Select “FUEL INJECTION” in “ACTIVE TEST” mode, and select “HO2S2 (B1)” as the monitor item with CONSULT-II.

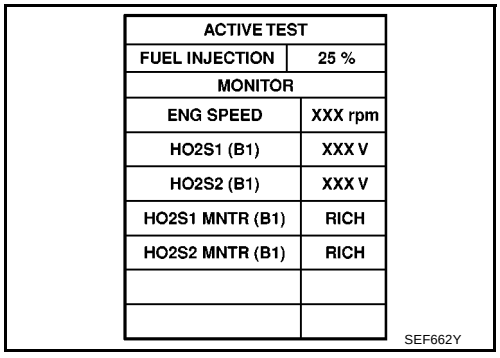

7. Check “HO2S2 (B1)” at idle speed when adjusting “FUEL INJECTION” to ±25%.

[CR10 engine models]

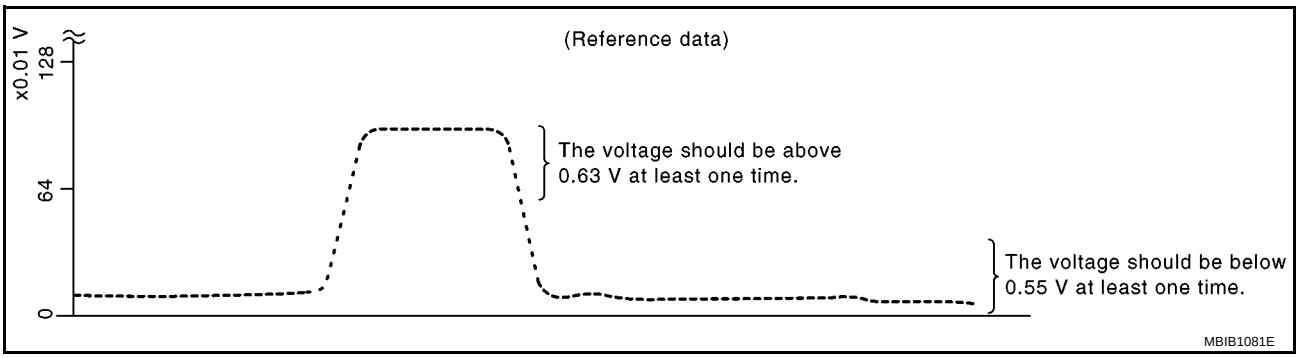

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.55V at least once when the "FUEL INJECTION" is −25%.

[A/T models with CR14 engine without ESP]

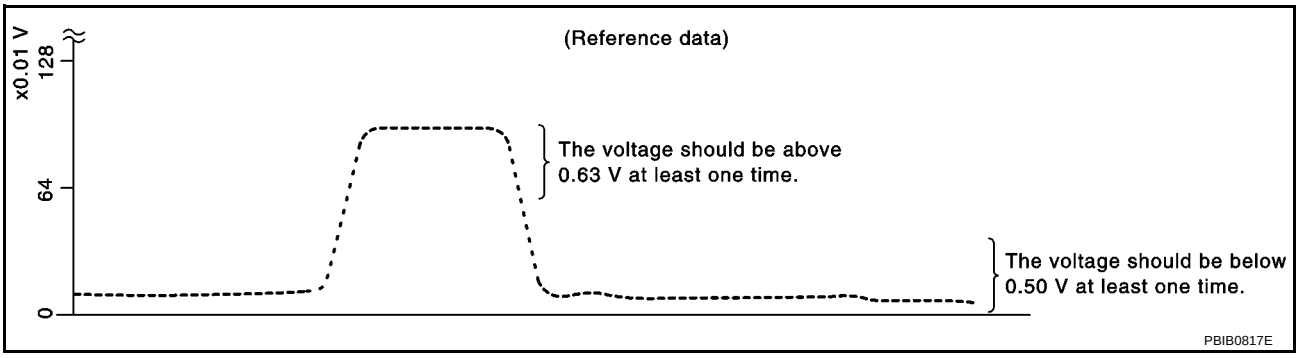

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.50V at least once when the "FUEL INJECTION" is −25%.

[Except above models]

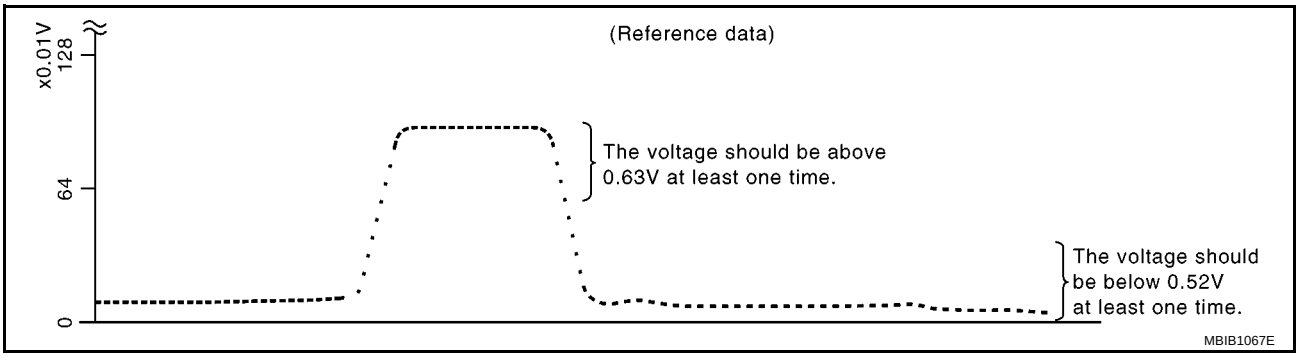

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.52V at least once when the "FUEL INJECTION" is −25%.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

⊗ Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.

6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.63V at least once during this procedure.
If the voltage is above 0.63V at step 6, step 7 is not necessary.
7. Keep vehicle at idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
The voltage should be below 0.55V (CR10 engine models), 0.50V (A/T models with CR14 engine without ESP), 0.52V (Other models) at least once during this procedure.
8. If NG, replace heated oxygen sensor 2.

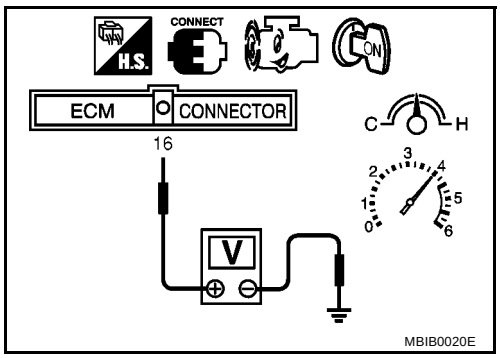

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OAR

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

DTC P1147 HO2S2

PFP:226A0

Component Description

EBS00OAS

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.
Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.
This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.
Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

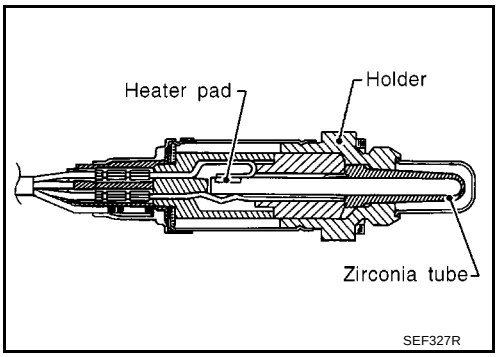

CONSULT-II Reference Value in Data Monitor Mode

EBS00OAT

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ←→ RICH

On Board Diagnosis Logic

EBS00OAU

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuel-cut.

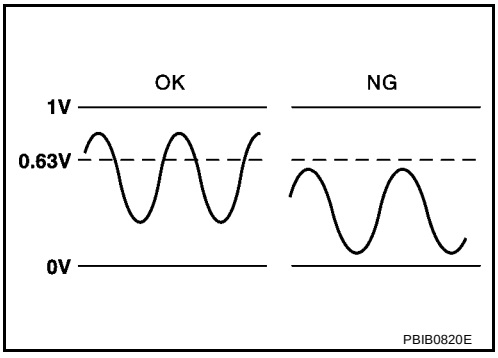

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1147 1147	Heated oxygen sensor 2 maximum voltage monitoring	The maximum voltage from the sensor is not reached to the specified voltage.	● Harness or connectors (The sensor circuit open or shorted.) ● Heated oxygen sensor 2 ● Fuel pressure ● Injectors ● Intake air leaks

DTC Confirmation Procedure

EBS00OAV

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
- **"COMPLETED" will appear on CONSULT-II screen when all tests "COND1", "COND2" and "COND3" are completed.**
- If DTC confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Never stop engine during this procedure. If the engine is stopped, retry procedure from step 2 in Procedure for COND1.

WITH CONSULT-II

Procedure for COND1

For the best results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C(32 to 86°F).

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle 1 minute.
5. Select "HO2S2 (B1) P1147" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
6. Touch "START".
7. Start engine and let it idle for at least 30 seconds.
8. Rev engine up to 2,000 rpm 2 or 3 times quickly under no load.
   If "COMPLETED" appears on CONSULT-II screen, go to step 2 in Procedure for COND3.
   If "COMPLETED" does not appear on CONSULT-II screen, go to the following step.
9. When the following conditions are met, "TESTING" will be displayed at "COND1" on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 60 seconds.)

ENG SPEED	More than 1,500 rpm
B/FUEL SCHDL	More than 1.0 msec
COOLANT TEMP/S	70 - 105°C
Selector lever	Suitable position

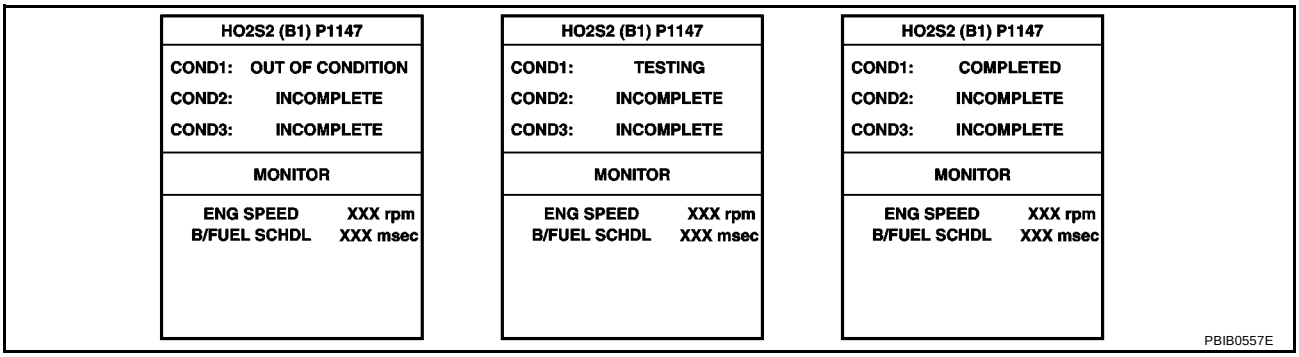

NOTE:
- **If "TESTING" is not displayed after 5 minutes, retry from step 2 in Procedure for COND1.**
- **If "COMPLETED" already appears at "COND2" on CONSULT-II screen before Procedure for COND2 is conducted, it is unnecessary to conduct step 1 in Procedure for COND2.**

Procedure for COND2

1. While driving, release accelerator pedal completed from the above condition [step 9] until “INCOMPLETE” at “COND2” on CONSULT-II screen has turned to “COMPLETED” (It will take approximately 4 seconds.)

   NOTE:
   If “COMPLETE” already appears at “COND3” on CONSULT-II screen before Procedure for COND3 is conducted, it is unnecessary to conduct step 1 in Procedure for COND3.

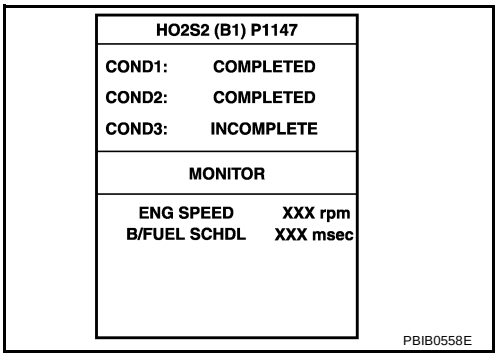

Procedure for COND3

1. Stop vehicle and let it idle until “INCOMPLETE” of “COND3” on CONSULT-II screen has turned to “COMPLETED”. (It will take a maximum of approximately 6 minutes.)
2. Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”.
   If “NG” is displayed, refer to EC-341, "Diagnostic Procedure" .
   If “CAN NOT BE DIAGNOSED” is displayed, perform the following.

a. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
b. Turn ignition switch ON and select “COOLAN TEMP/S” in “DATA MONITOR” mode with CONSULT-II.
c. Start engine and warm it up while monitoring “COOLAN TEMP/S” indication on CONSULT-II.
d. When “COOLANTEMP/S” indication reaches to 70°C(158°F), go to procedure for COND1 step 3.

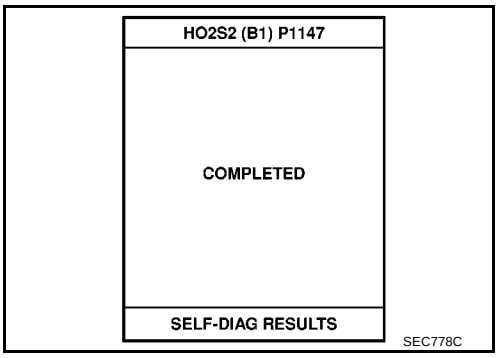

Overall Function Check

EBS00OAW

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.
6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
   (Depress and release accelerator pedal as soon as possible.)
   The voltage should be above 0.63V at least once during this procedure.
   If the voltage can be confirmed in step 6, step 7 is not necessary.
7. Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
   The voltage should be above 0.63V at least once during this procedure.
8. If NG, go to EC-341, "Diagnostic Procedure" .

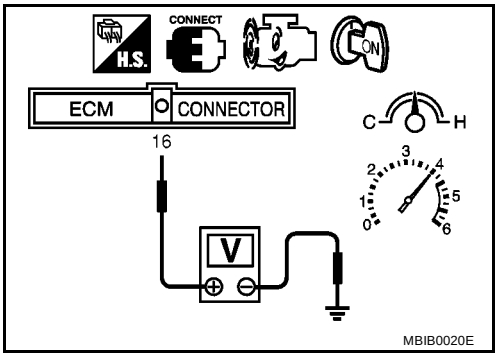

Wiring Diagram

EBS00OAX

EC-HO2S2-01

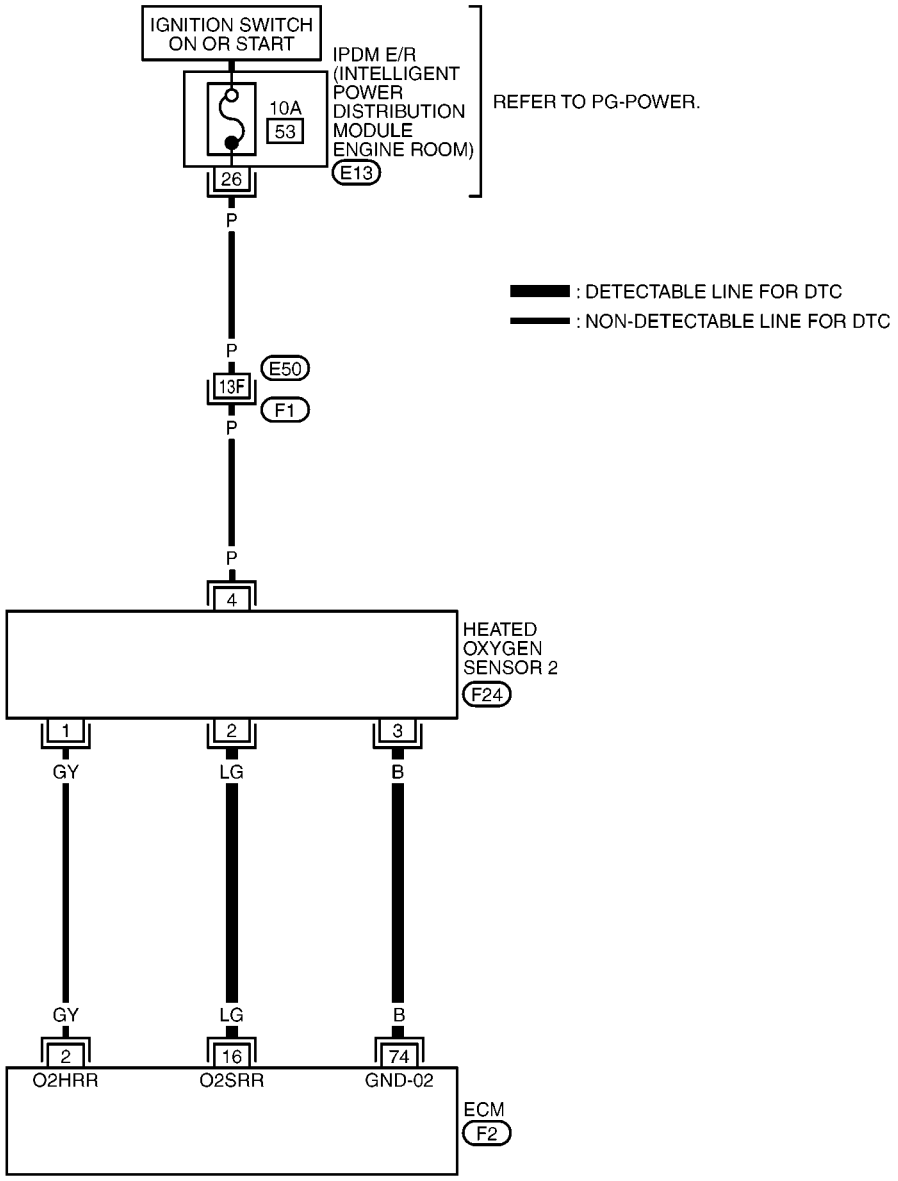

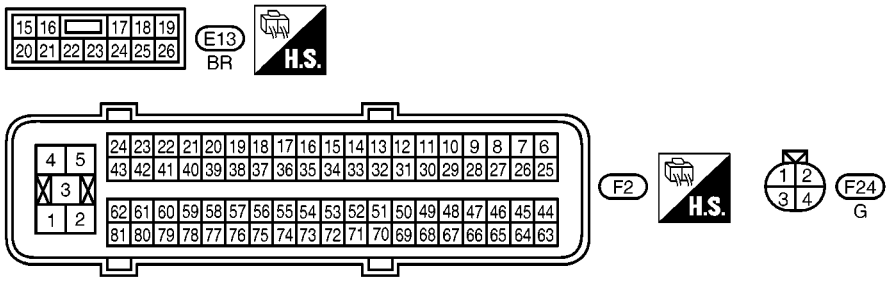

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0273E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● Revving engine from idle to 3,000 rpm quickly after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - Approximately 1.0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OAY

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

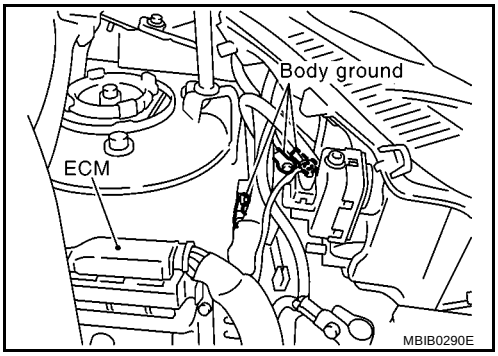

2. CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “SELF-LEARNING CONT” in “WORK SUPPORT” mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching “CLEAR”.
4. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 detected?
   Is it difficult to start engine?

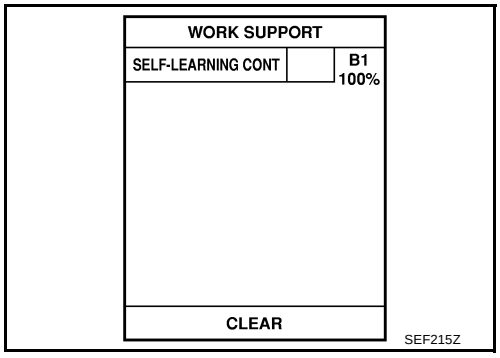

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect manifold absolute pressure sensor harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect manifold absolute pressure sensor harness connector.
5. Make sure that DTC P0107 is displayed.
6. Erase the DTC memory. Refer to EC-59, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
   Is the 1st trip DTC P0171 detected?
   Is it difficult to start engine?

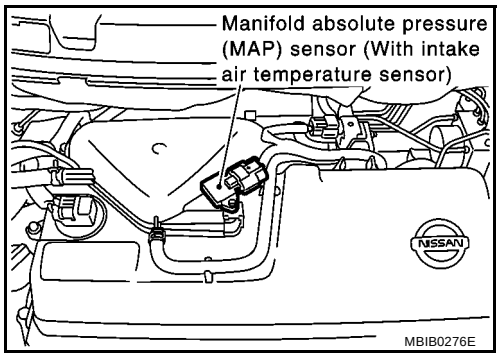

Yes or No

Yes >> Perform trouble diagnosis for DTC P0171. Refer to EC-208 .
No >> GO TO 3.

3. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S2 terminal 3.
   Refer to Wiring Diagram.

   Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

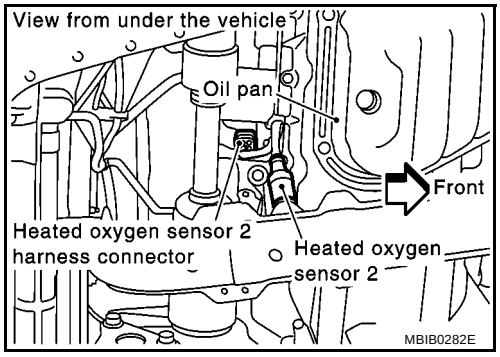

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 16 and HO2S2 terminal 2. Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 16 or HO2S2 terminal 2 and ground. Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-343, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OAZ

HEATED OXYGEN SENSOR 2

With CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.

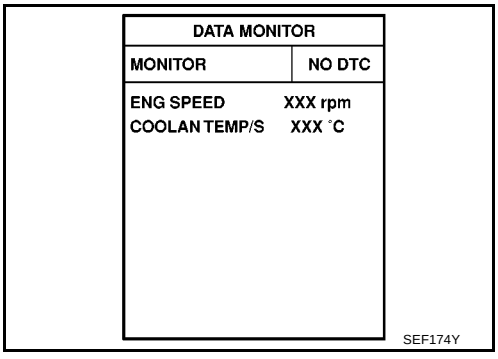

6. Select “FUEL INJECTION” in “ACTIVE TEST” mode, and select “HO2S2 (B1)” as the monitor item with CONSULT-II.

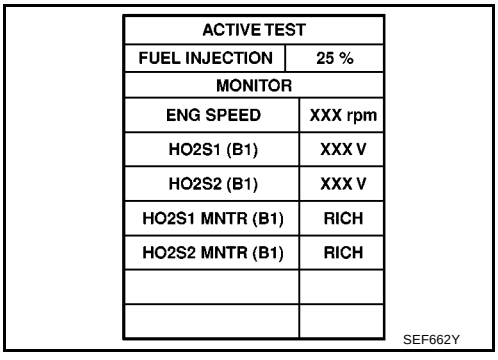

7. Check “HO2S2 (B1)” at idle speed when adjusting “FUEL INJECTION” to ±25%.

[CR10 engine models]

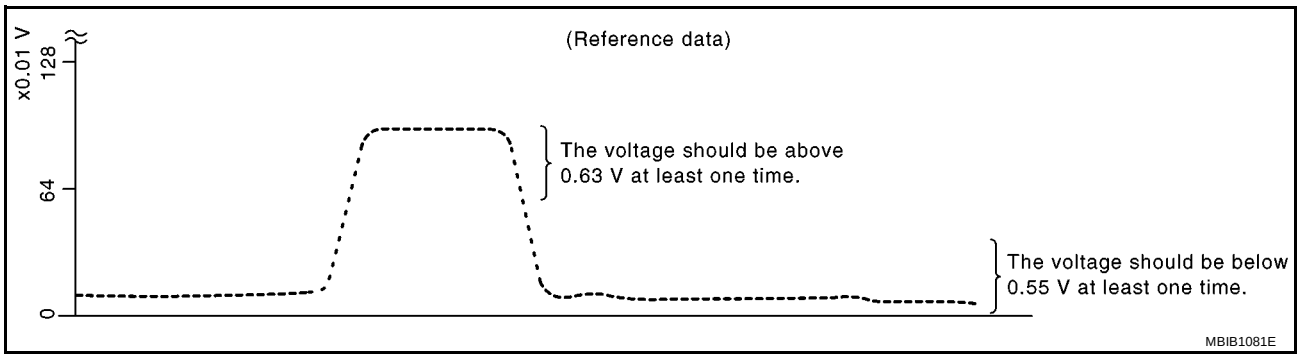

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.55V at least once when the "FUEL INJECTION" is −25%.

[A/T models with CR14 engine without ESP]

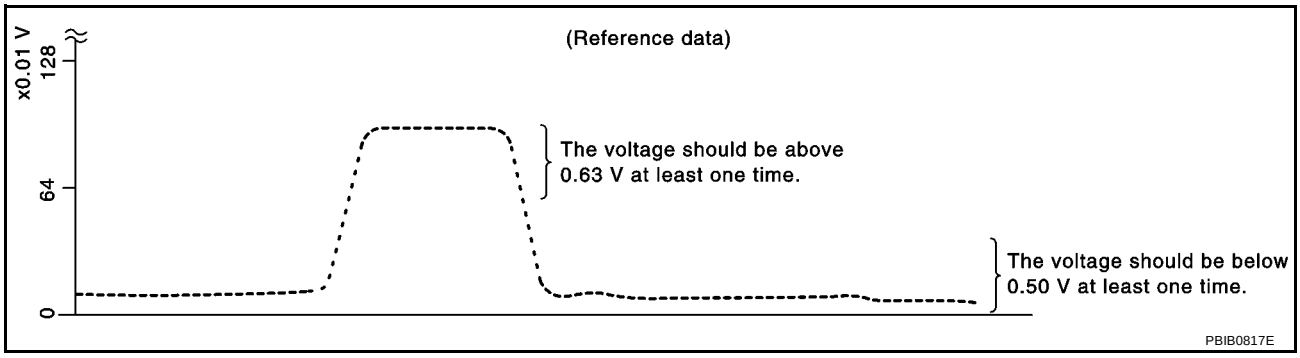

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.50V at least once when the "FUEL INJECTION" is −25%.

[Except above models]

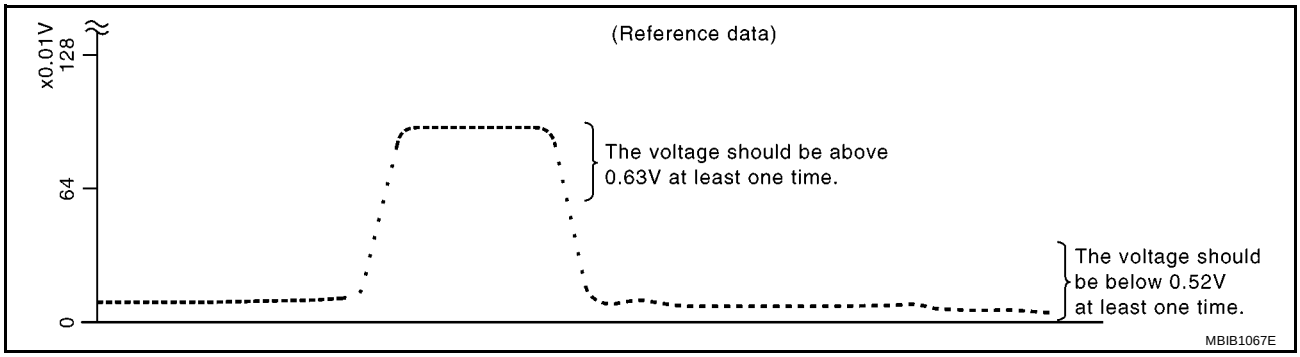

"HO2S2 (B1)" should be above 0.63V at least once when the "FUEL INJECTION" is +25%.
"HO2S2 (B1)" should be below 0.52V at least once when the "FUEL INJECTION" is −25%.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

⊗ Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.

6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.63V at least once during this procedure.
If the voltage is above 0.63V at step 6, step 7 is not necessary.

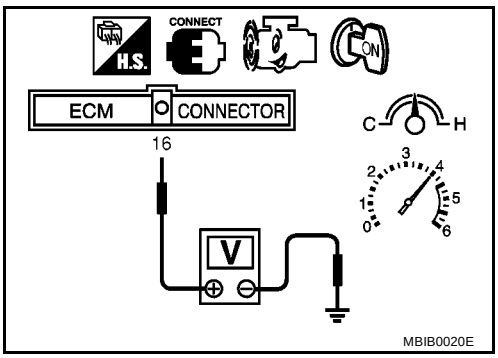

7. Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
The voltage should be below 0.55V (CR10 engine models), 0.50V (A/T models with CR14 engine without ESP), 0.52V (Other models) at least once during this procedure.

8. If NG, replace heated oxygen sensor 2.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OB0

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

DTC P1171 INTAKE ERROR

PFP:22365

On Board Diagnosis Logic

EBS00OSO

NOTE:
If DTC 1171 is displayed with DTC P0108, first perform the trouble diagnosis for DTC P0108.
Refer to EC-148, "DTC P0107, P0108 MANIFOLD ABSOLUTE PRESSURE SENSOR"
ECM computes two intake air volume values.
1: Computed from manifold absolute pressure signal and intake air temperature signal.
2: Computed from engine revolution signal and throttle position signal.

In normal condition, value 1 is used for engine control.
If intake air leak occurred between throttle valve and intake air port, manifold absolute pressure sensor signal might increase, and then ECM increases amount of fuel injected. In this case, ECM uses value 2 for engine control instead of value1.
ECM monitors the difference between value 1 and value 2. If the difference is extremely large, ECM judges intake air leak occurs and light up the MI

This diagnosis has one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1171 1171	Intake error	An excessively high voltage from manifold absolute pressure sensor is sent to ECM.	● Harness or connectors (The manifold absolute pressure sensor circuit is open or shorted.) ● Manifold absolute pressure ● Intake air leaks ● Vacuum hoses

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and MI lights up.

Detected items	Engine operating condition in fail-safe mode
Intake air system problem	When accelerator pedal is depressed, engine speed will not rise more than 2,500 rpm due to fuel cut.

DTC Confirmation Procedure

EBS00OSP

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and wait at least 5 seconds.
4. If DTC is detected, go to EC-348, "Diagnostic Procedure" .

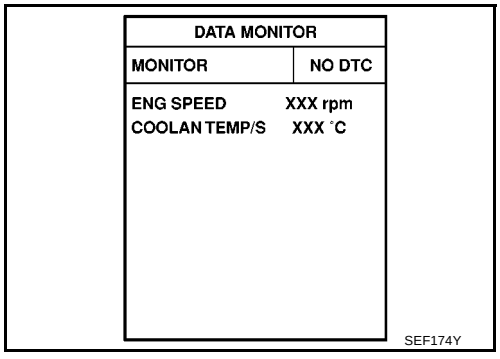

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00OSQ

EC-AP/SEN-01

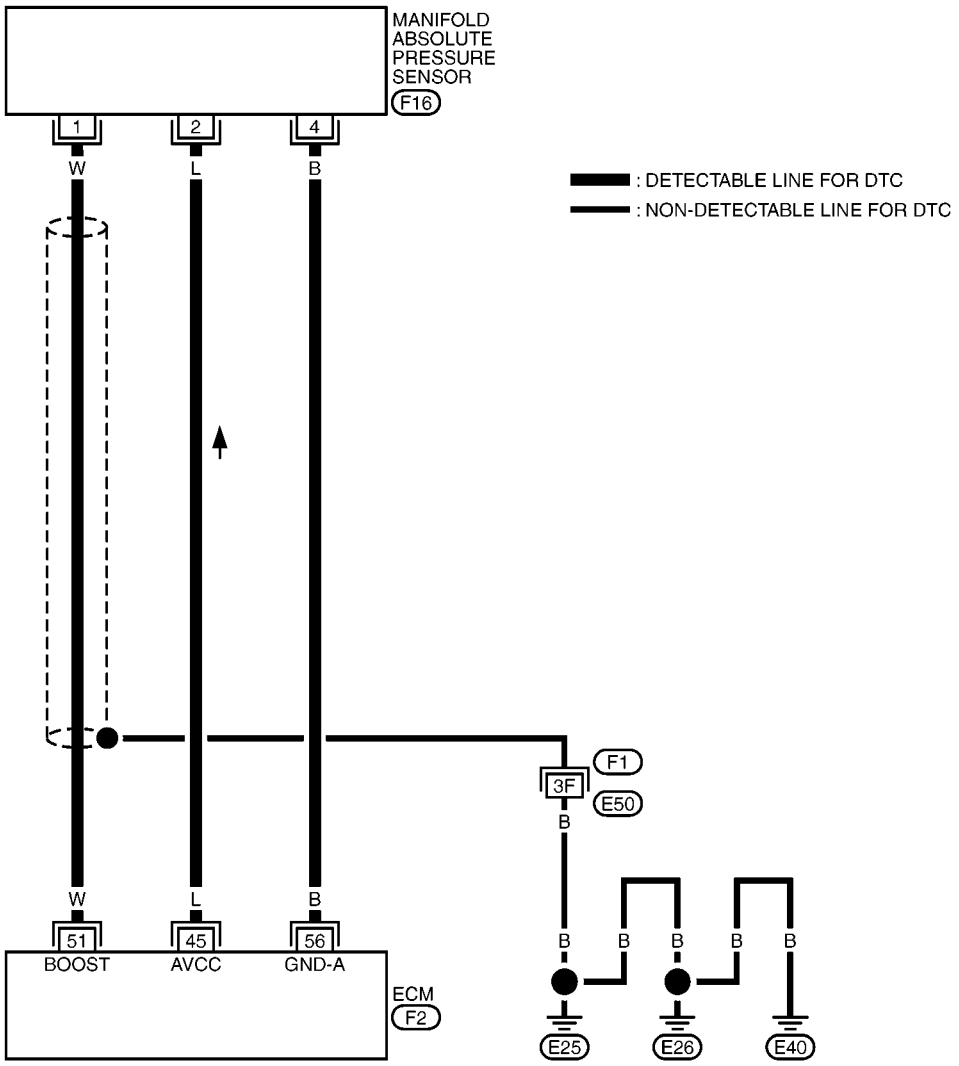

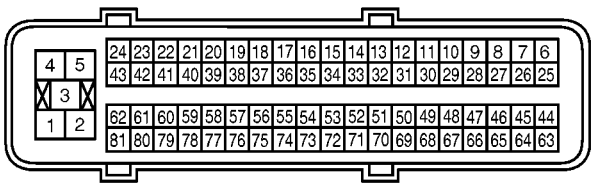

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0304E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
51	W	Manifold absolute pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 1.5V
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	Approximately 1.2V

Diagnostic Procedure

EBS00OSR

1. CHECK INTAKE AIR LEAK

Listen for an intake air leak after the air cleaner element.

OK or NG

OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK VACUUM HOSE

1. Check intake manifold vacuum hoses for clogging or disconnection. Refer to EC-23, "Vacuum Hose Drawing" .

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. CHECK MAP SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect manifold absolute pressure sensor harness connector.
3. Turn ignition switch ON.

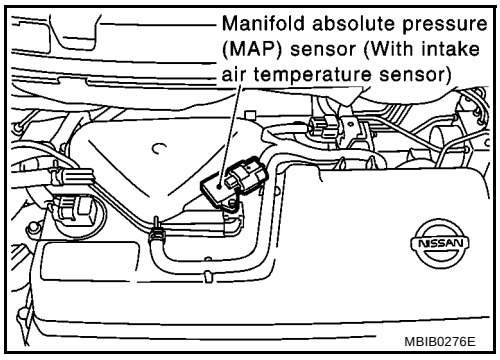

4. Check voltage between manifold absolute pressure sensor terminal 2 and ground.

Voltage: Approximately 5V

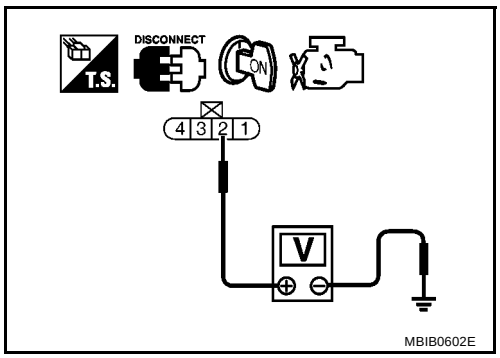

OK or NG

OK >> GO TO 4.
NG >> Repair harness or connectors.

4. CHECK MAP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between manifold absolute pressure sensor terminal 4 and ECM terminal 56. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK MAP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between manifold absolute pressure sensor terminal 1 and ECM terminal 51.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK MAP SENSOR

Refer to EC-151, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Repair or replace sensor.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P1211 TCS CONTROL UNIT

PFP:47850

Description

EBS010C1

The malfunction information related to TCS is transferred through the CAN communication line from “ABS actuator and electric unit (control unit)” to ECM.
Be sure to erase the malfunction information such as DTC not only for “ABS actuator and electric unit (control unit)” but also for ECM after TCS related repair.

On Board Diagnosis Logic

EBS010C2

Freeze frame data is not stored in the ECM for this self-diagnosis.
The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1211 1211	TCS control unit	ECM receives a malfunction information from “ABS actuator and electric unit (control unit)”.	● ABS actuator and electric unit (control unit) ● TCS related parts

DTC Confirmation Procedure

EBS010C3

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for at least 60 seconds.
4. If 1st trip DTC is detected, go to EC-350, "Diagnostic Procedure" .

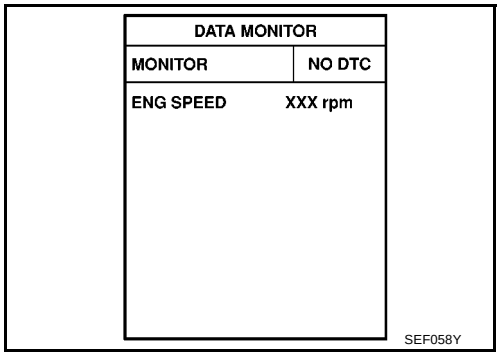

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Diagnostic Procedure

EBS010C4

Go to BRC-8, "TROUBLE DIAGNOSIS" (models without ESP) or BRC-61, "TROUBLE DIAGNOSIS" (models with ESP).

DTC P1212 TCS COMMUNICATION LINE

PFP:47850

Description

EBS010C5

NOTE:
If DTC P1212 is displayed with DTC U1000 or U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-130, "DTC U1000, U1001 CAN COMMUNICATION LINE" .
This CAN communication line is used to control the smooth engine operation during the TCS operation. Pulse signals are exchanged between ECM and “ABS actuator and electric unit (control unit)”.
Be sure to erase the malfunction information such as DTC not only for “ABS actuator and electric unit (control unit)” but also for ECM after TCS related repair.

On Board Diagnosis Logic

EBS010C6

The MI will not light up for this self-diagnosis.
Freeze frame data is not stored in the ECM for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1212 1212	TCS communication line	ECM can not receive the information from “ABS actuator and electric unit (control unit)” continuously.	● Harness or connectors (The CAN communication line is open or shorted.) ● ABS actuator and electric unit (control unit). ● Dead (Weak) battery

DTC Confirmation Procedure

EBS010C7

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for at least 10 seconds.
4. If a 1st trip DTC is detected, go to EC-351, "Diagnostic Procedure" .

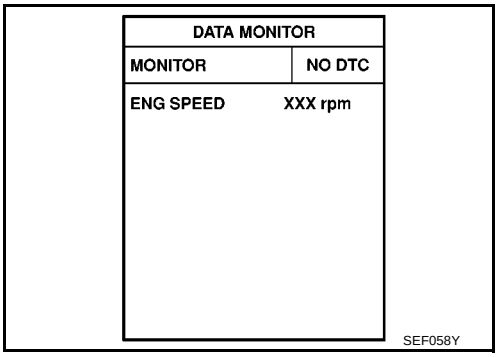

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Diagnostic Procedure

EBS010C8

1. CHECK “ABS ACTUATTOR AND ELECTRIC UNIT (CONTROL UNIT)” FUNCTION

Refer to BRC-8, "TROUBLE DIAGNOSIS" (models without ESP) or BRC-61, "TROUBLE DIAGNOSIS" (models with ESP).

>> **INSPECTION END**

DTC P1217 ENGINE OVER TEMPERATURE

PFP:00000

System Description

EBS00OB1

NOTE:
If DTC P1217 is displayed with DTC U1000, U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-130, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

COOLING FAN CONTROL

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1	Cooling fan control	IPDM E/R (Cooling fan relay)
Battery	Battery voltage*1		
Vehicle speed signal	Vehicle speed*2		
Engine coolant temperature sensor	Engine coolant temperature		
Air conditioner switch*3	Air conditioner ON signal*2		
Refrigerant pressure sensor*3	Refrigerant pressure		

*1: ECM determines the start signal status by the signals of engine speed and battery voltage.
*2: This signal is sent to ECM through CAN communication line.
*3: Models with air conditioner.

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has 3-step control [HIGH/LOW/OFF] (models with A/C) or 2 step control [ON/OFF] (models without A/C).
The ECM controls cooling fan relays through CAN communication line.

OPERATION
(Models with A/C)

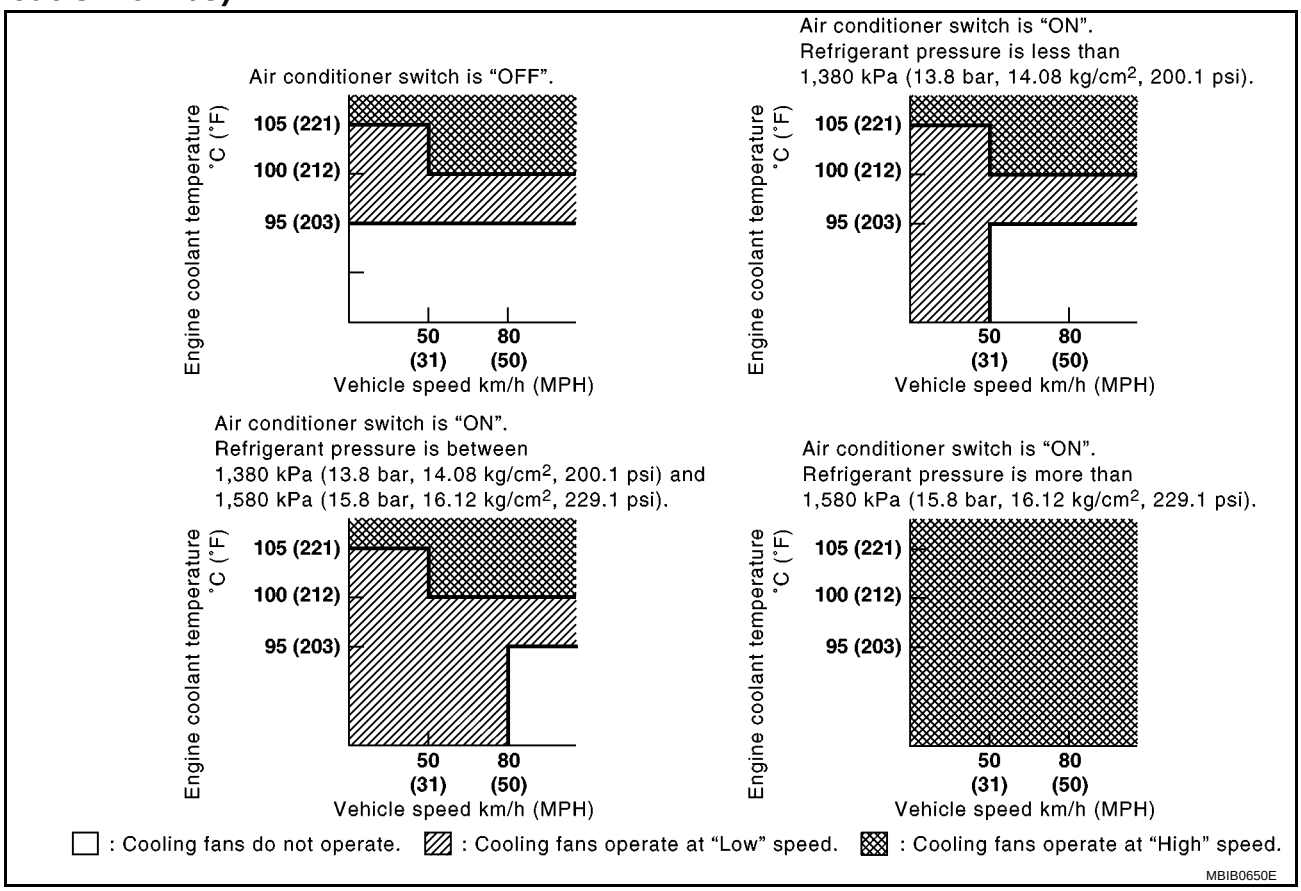

(Models without A/C)

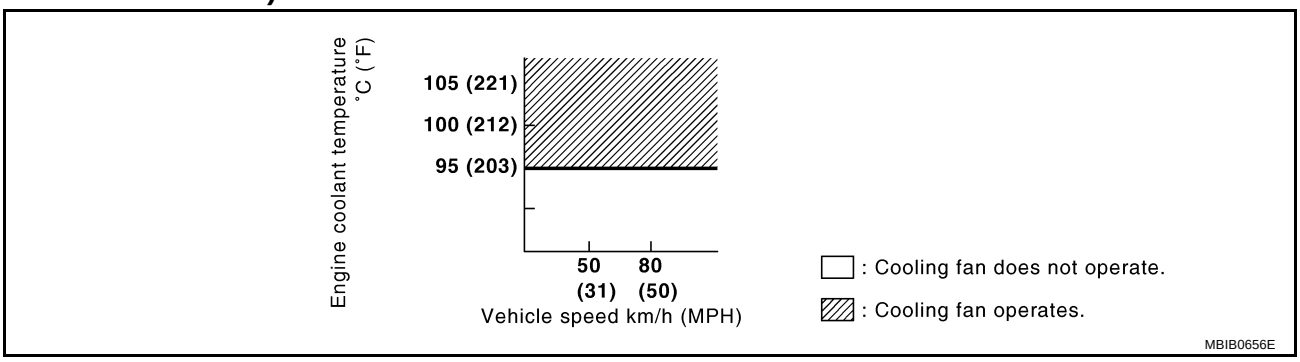

CONSULT-II Reference Value in Data Monitor Mode

EBS00OB2

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
AIR COND SIG	● Engine: After warming up, idle the engine	Air conditioner switch: OFF	OFF
		Air conditioner switch: ON (Compressor operates.)	ON
COOLING FAN	(Models with A/C) ● Engine: After warming up, idle the engine ● Air conditioner switch: OFF	Engine coolant temperature is 94°C (201°F) or less	OFF
		Engine coolant temperature is between 95°C (203°F) and 104°C (210°F)	LOW*
		Engine coolant temperature is 105°C (212°F) or more	HI*

*:Models without air conditioner, cooling fan operates only ON and OFF operation, but CONSULT-II display will change OFF, LOW and HI depends on engine coolant temperature.

On Board Diagnosis Logic

EBS00OB3

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise. When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1217 1217	Engine over temperature (Overheat)	● Cooling fan does not operate properly (Overheat). ● Cooling fan system does not operate properly (Overheat). ● Engine coolant was not added to the system using the proper filling method. ● Engine coolant is not within the specified range.	● Harness or connectors (The cooling fan circuit is open or shorted.) ● Cooling fan ● Radiator hose ● Radiator ● Radiator cap ● Water pump ● Thermostat For more information, refer to EC-365, "Main 12 Causes of Overheating" .

CAUTION:

When a malfunction is indicated, be sure to replace the coolant. Refer to CO-8, "Changing Engine coolant" . Also, replace the engine oil. Refer to LU-5, "Changing Engine Oil" .

1. **Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA-20, "Engine Coolant Mixture Ratio" .**
2. **After refilling coolant, run engine to ensure that no water-flow noise is emitted.**

Overall Function Check

EBS00OB4

Use this procedure to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.
Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

WITH CONSULT-II

1. Check the coolant level in the reservoir tank and radiator.
   Allow engine to cool before checking coolant level.
   If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to EC-358, "Diagnostic Procedure" .
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to EC-358, "Diagnostic Procedure" .
3. Turn ignition switch ON.

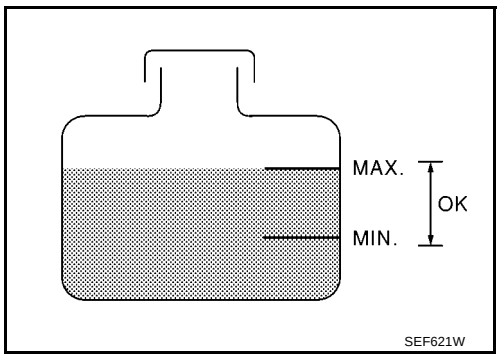

4. Perform “COOLING FAN” in “ACTIVE TEST” mode with CONSULT-II.
5. If the results are NG, go to EC-358, "Diagnostic Procedure" .

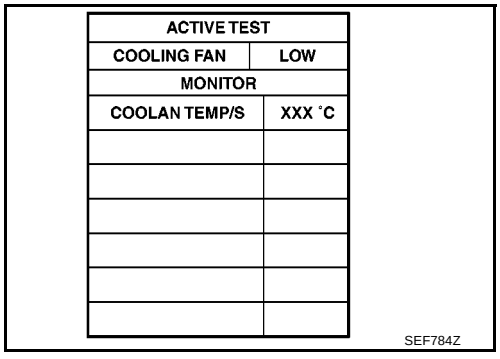

WITH GST

(Models with air conditioner)

1. Check the coolant level in the reservoir tank and radiator.
   Allow engine to cool before checking coolant level.
   If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to EC-358, "Diagnostic Procedure" .
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to EC-358, "Diagnostic Procedure" .
3. Start engine.
   Be careful not to overheat engine.
4. Set temperature control lever to full cold position.
5. Turn air conditioner switch ON.
6. Turn blower fan switch ON.
7. Run engine at idle for a few minutes with air conditioner operating.
   Be careful not to overheat engine.

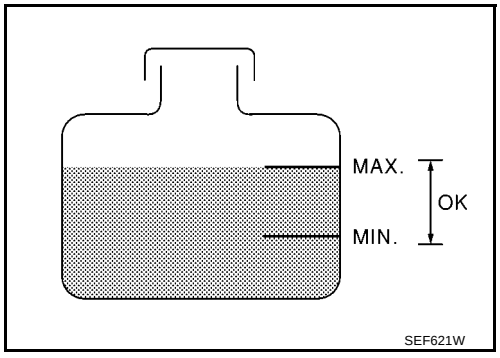

8. Make sure that cooling fans operates at low speed.
   If NG, go to EC-358, "Diagnostic Procedure" .
   If OK, go to the following step.
9. Turn ignition switch OFF.
10. Turn air conditioner switch and blower fan switch OFF.
11. Disconnect engine coolant temperature sensor harness connector.
12. Connect 150Ω resistor to engine coolant temperature sensor harness connector.

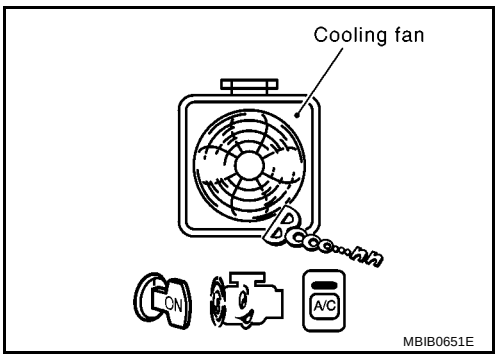

13. Restart engine and make sure that cooling fan operates at higher speed than low speed.
    Be careful not to overheat engine.
14. If NG, go to EC-358, "Diagnostic Procedure" .

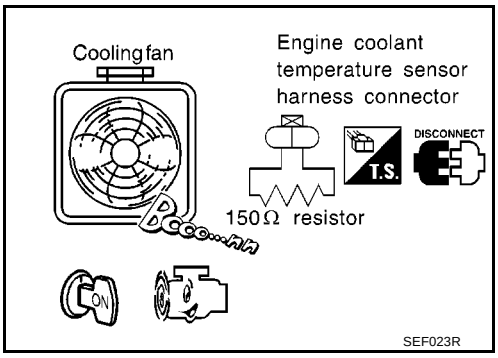

(Models without air conditioner)

1. Check the coolant level in the reservoir tank and radiator.
   Allow engine to cool before checking coolant level.
   If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to EC-358, "Diagnostic Procedure" .
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to EC-358, "Diagnostic Procedure" .
3. Disconnect engine coolant temperature sensor harness connector.
4. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
5. Start engine and make that cooling fan operates. Be careful not to overheat engine.
6. If NG, go to EC-358, "Diagnostic Procedure" .

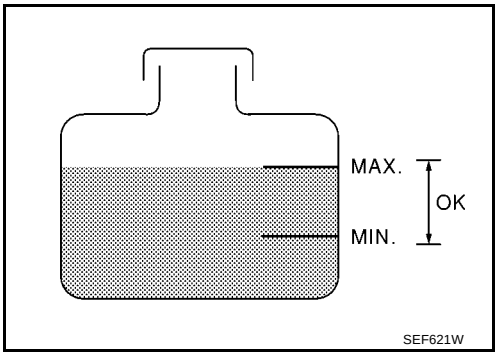

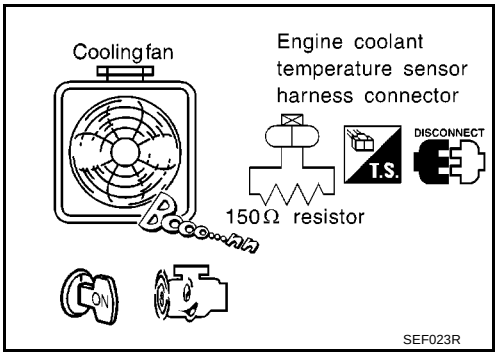

Wiring Diagram
WITH AIR CONDITIONER

EBS00OB5

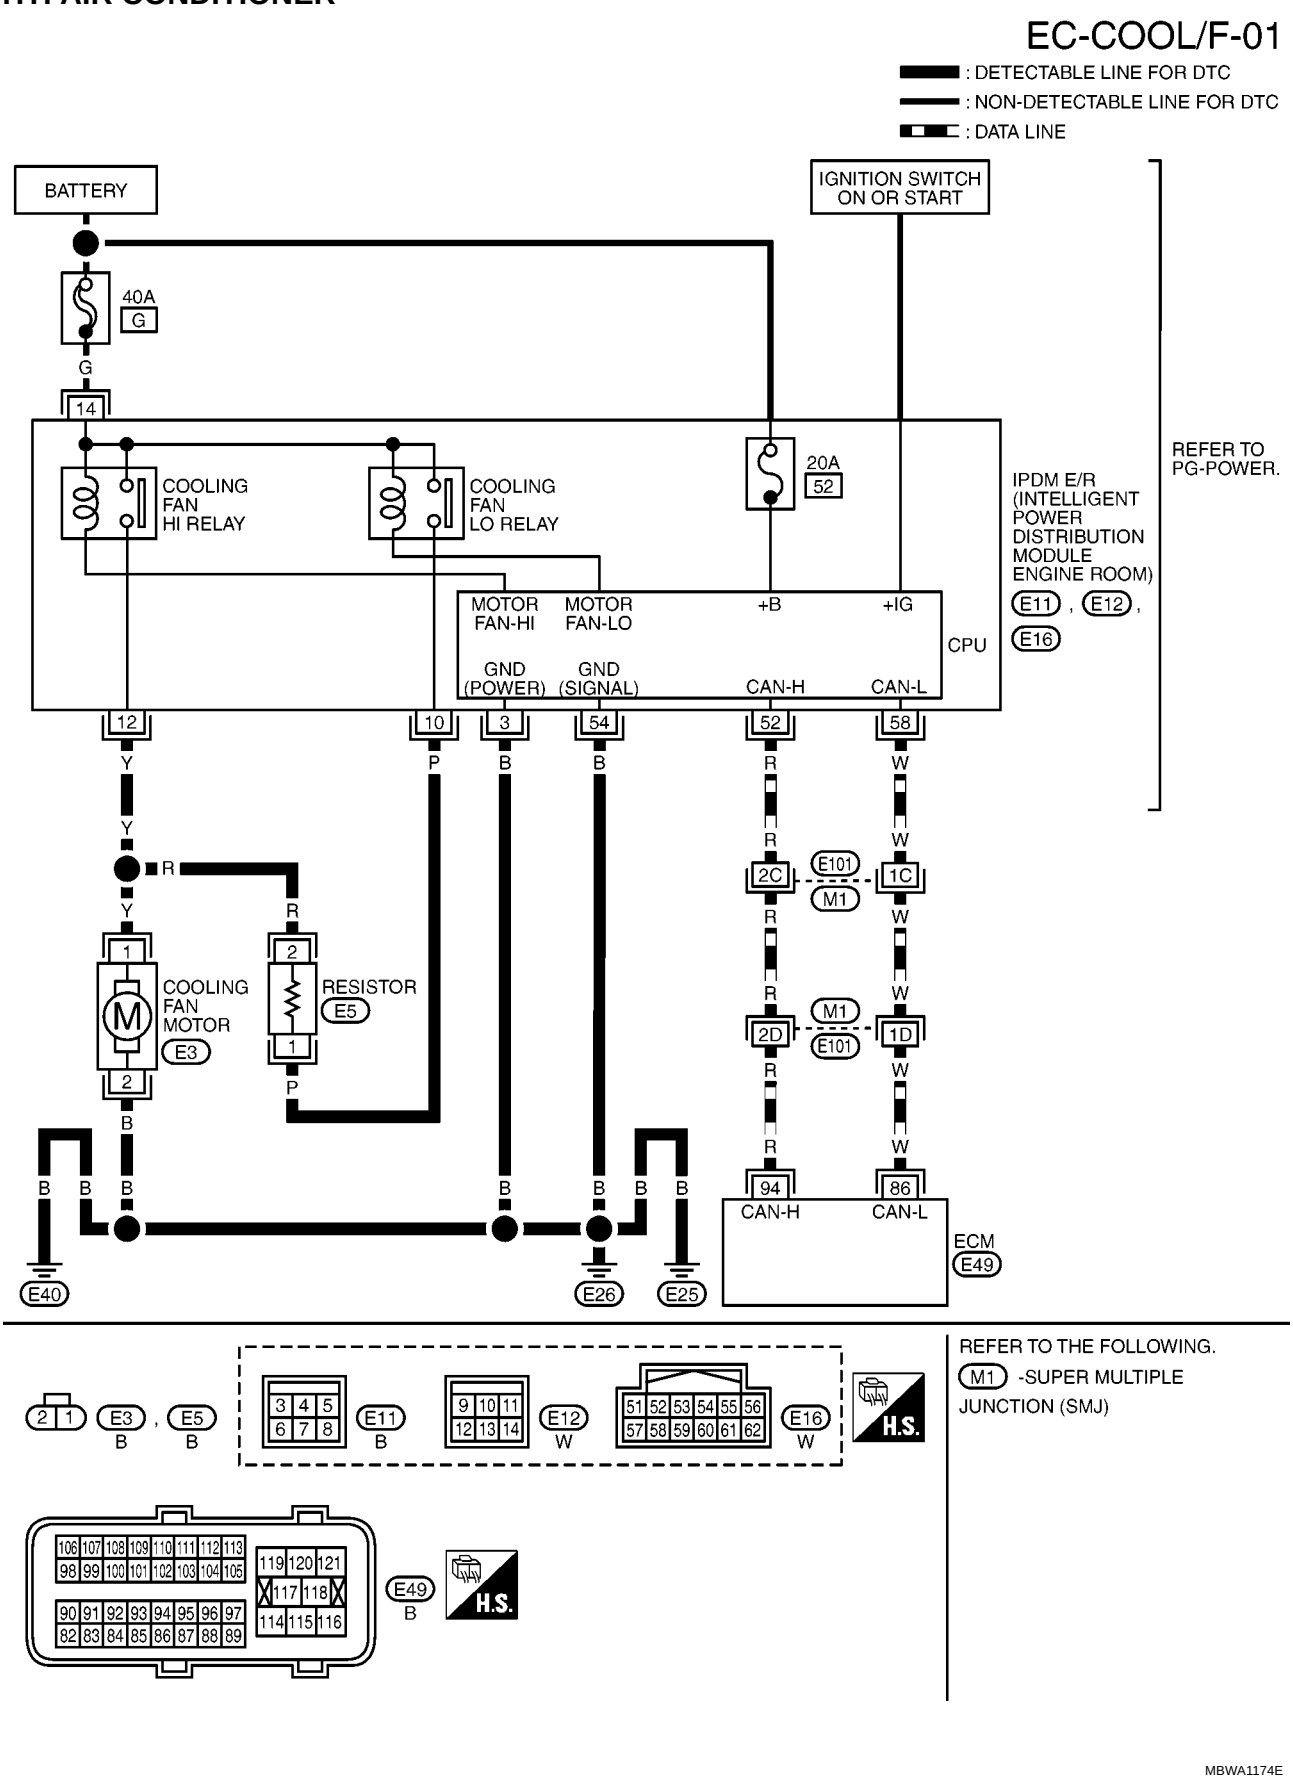

WITHOUT AIR CONDITIONER

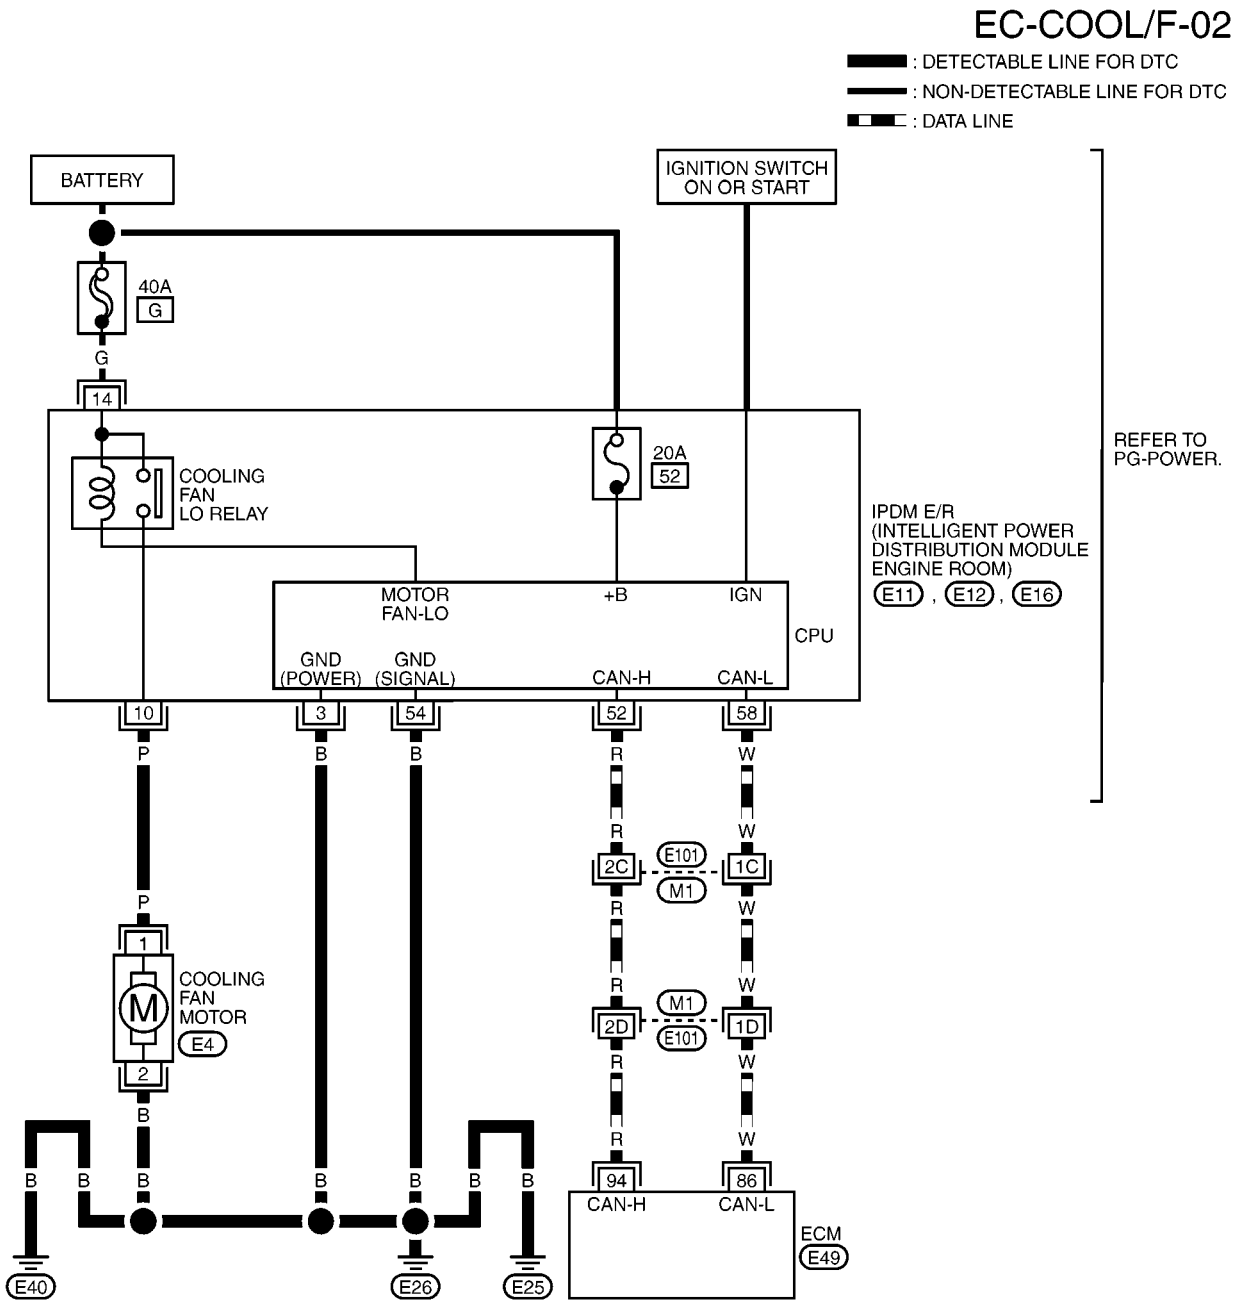

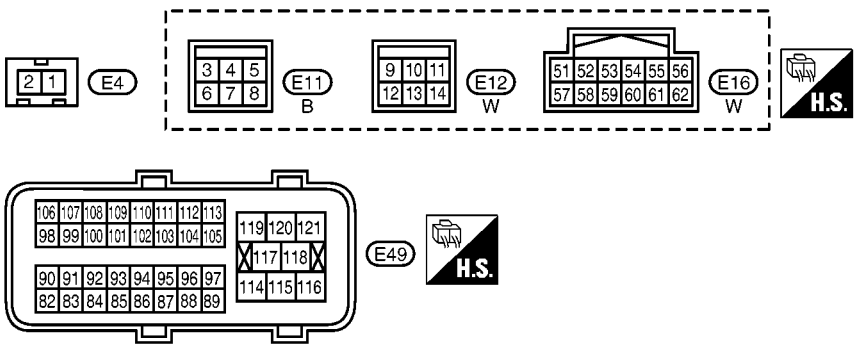

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0290E

Diagnostic Procedure

EBS00OB6

PROCEDURE FOR MODELS WITH AIR CONDITIONER

1. INSPECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.
No >> GO TO 4.

2. CHECK COOLING FAN LOW SPEED OPERATION

With CONSULT-II

1. Turn ignition switch ON.
2. Perform “COOLING FAN” in “ACTIVE TEST” mode with CONSULT-II and touch “LOW” on the CONSULT-II screen.
3. Make sure that cooling fan operates at low speed.

OK or NG

OK >> GO TO 3.
NG >> Check cooling fan low speed control circuit. (Go to EC-363, "PROCEDURE A" .)

ACTIVE TEST	
COOLING FAN	LOW
MONITOR	
COOLAN TEMP/S	XXX °C

SEF784Z

3. CHECK COOLING FAN HIGH SPEED OPERATION

With CONSULT-II

1. Touch “HIGH” on the CONSULT-II screen.
2. Make sure that cooling fan operates at higher speed than low speed.

OK or NG

OK >> GO TO 6.
NG >> Check cooling fan high speed control circuit. (Go to EC-363, "PROCEDURE A" .)

ACTIVE TEST	
COOLING FAN	HIGH
MONITOR	
COOLAN TEMP/S	XXX °C

SEF785Z

4. CHECK COOLING FAN LOW SPEED OPERATION

Without CONSULT-II

1. Start engine and let it idle.
2. Turn air conditioner switch ON.
3. Turn blower fan switch ON.
4. Make sure that cooling fan operates at low speed.

OK or NG

OK >> GO TO 5.
NG >> Check cooling fan low speed control circuit. (Go to EC-363, "PROCEDURE A" .)

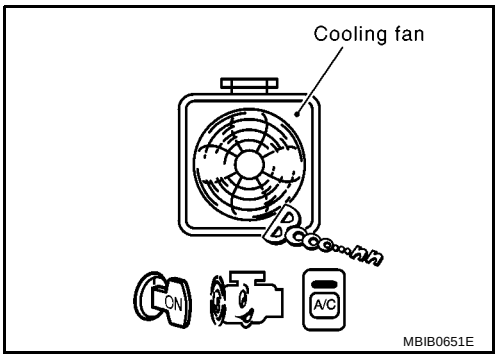

5. CHECK COOLING FAN HIGH SPEED OPERATION

Without CONSULT-II

1. Turn ignition switch OFF.
2. Turn air conditioner switch and blower fan switch OFF.
3. Disconnect engine coolant temperature sensor harness connector.
4. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
5. Restart engine and make sure that cooling fan operates at higher speed than low speed.

OK or NG

OK >> GO TO 6.
NG >> Check cooling fan high speed control circuit. (Go to EC-363, "PROCEDURE A" .)

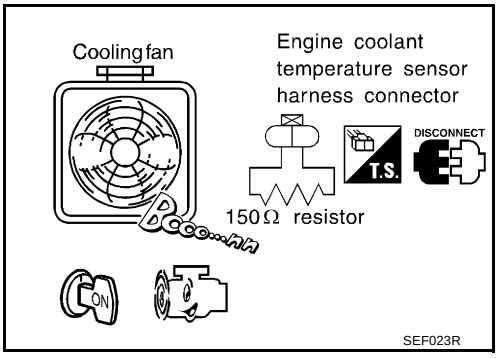

6. CHECK COOLING SYSTEM FOR LEAK

Apply pressure to the cooling system with a tester, and check if the pressure drops.

Testing pressure: 157 kPa (1.57 bar, 1.6 kg/cm^2 , 23psi)

CAUTION:
Higher than the specified pressure may cause radiator damage.

Pressure should not drop.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

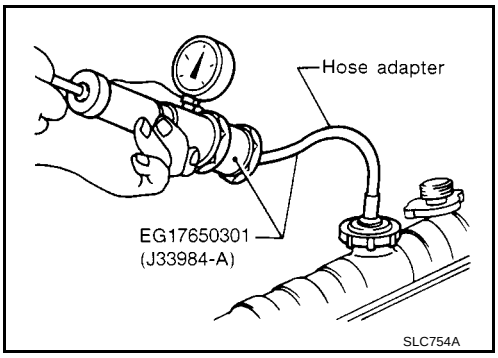

7. DETECT MALFUNCTIONING PART

Check the following for leak.

- Hose
- Radiator
- Water pump (Refer to CO-21, "WATER PUMP" .)

>> Repair or replace.

8. CHECK RADIATOR CAP

Apply pressure to cap with a tester and check radiator cap relief pressure.

Radiator cap relief pressure:

59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm^2 , 9 - 14 psi)

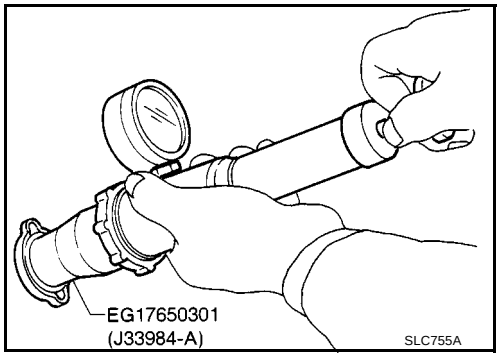

OK or NG

OK >> GO TO 9.
NG >> Replace radiator cap.

9. CHECK THERMOSTAT

1. Remove thermostat.
2. Check valve seating condition at normal room temperatures.
   It should seat tightly.
3. Check valve opening temperature and valve lift.

Valve opening temperature:

80.5 - 83.5 °C (177 - 182 °F)

Valve lift:

More than 8 mm/95 °C (0.31 in/203 °F)

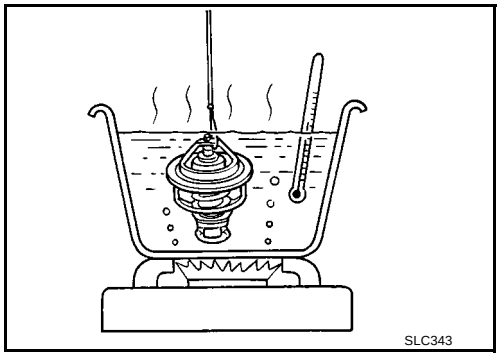

4. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to CO-23, "THERMOSTAT" .

OK or NG

OK >> GO TO 10.
NG >> Replace thermostat.

10. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-162, "Component Inspection" .

OK or NG

OK >> GO TO 11.
NG >> Replace engine coolant temperature sensor.

11. CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to EC-365, "Main 12 Causes of Overheating" .

>> **INSPECTION END**

PROCEDURE FOR MODELS WITHOUT AIR CONDITIONER

1. INSPECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.
No >> GO TO 3.

2. CHECK COOLING FAN OPERATION

With CONSULT-II

1. Turn ignition switch ON.
2. Perform “COOLING FAN” in “ACTIVE TEST” mode with CONSULT-II and touch “ON” on the CONSULT-II screen.
3. Make sure that cooling fan operates.

OK or NG

OK >> GO TO4.
NG >> Check cooling fan low speed control circuit. (Go to EC-363, "PROCEDURE A" .)

ACTIVE TEST	
COOLING FAN	LOW
MONITOR	
COOLAN TEMP/S	XXX °C

SEF784Z

3. CHECK COOLING FAN OPERATION

Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect engine coolant temperature sensor harness connector.
3. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
4. Restart engine and make sure that cooling fan operates.

OK or NG

OK >> GO TO 4.
NG >> Check cooling fan high speed control circuit-1. (Go to EC-363, "PROCEDURE A" .)

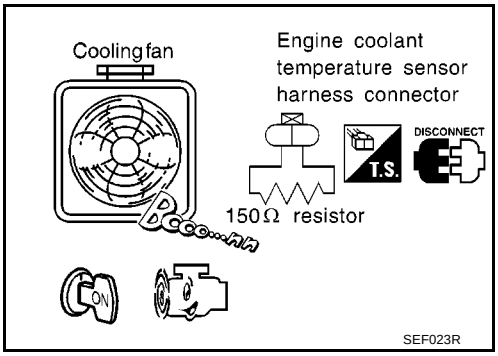

SEF023R

4. CHECK COOLING SYSTEM FOR LEAK

Apply pressure to the cooling system with a tester, and check if the pressure drops.

Testing pressure: 157 kPa (1.57 bar, 1.6 kg/cm^2 , 23psi)

CAUTION:
Higher than the specified pressure may cause radiator damage.

Pressure should not drop.

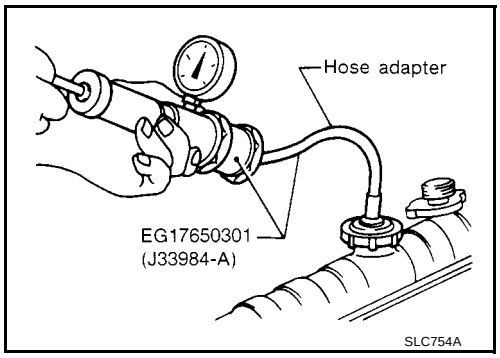

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following for leak.

- Hose
- Radiator
- Water pump (Refer to CO-21, "WATER PUMP" .)

>> Repair or replace.

6. CHECK RADIATOR CAP

Apply pressure to cap with a tester and check radiator cap relief pressure.

Radiator cap relief pressure:

59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm^2 , 9 - 14 psi)

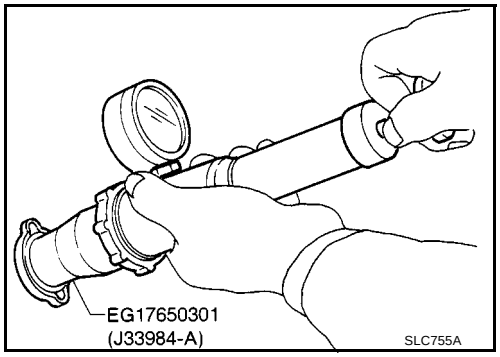

OK or NG

OK >> GO TO 7.
NG >> Replace radiator cap.

7. CHECK THERMOSTAT

1. Remove thermostat.
2. Check valve seating condition at normal room temperatures.
   It should seat tightly.
3. Check valve opening temperature and valve lift.

   Valve opening temperature:

   80.5 - 83.5 °C (177 - 182 °F)

   Valve lift:

   More than 8 mm/95 °C (0.31 in/203 °F)

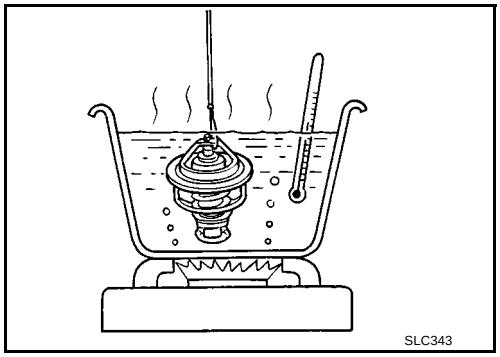

4. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to CO-23, "THERMOSTAT" .

OK or NG

OK >> GO TO 8.
NG >> Replace thermostat.

8. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-162, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace engine coolant temperature sensor.

9. CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to EC-365, "Main 12 Causes of Overheating" .

>> **INSPECTION END**

PROCEDURE A

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E12.
3. Check voltage between IPDM E/R terminal 14 and ground with CONSULT-II or tester.

Voltage: Battery voltage

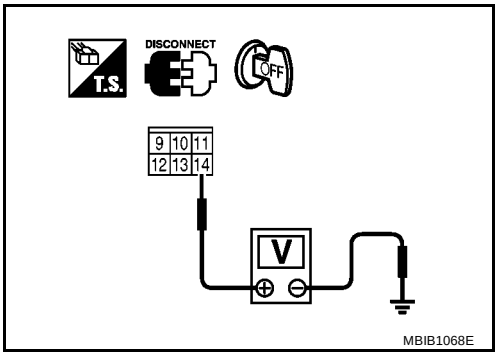

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

2. DETECT MALFUNCTIONING PART

Check the following.

- 40A fusible links
- Harness for open or short between IPDM E/R and battery

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK COOLING FAN MOTORS CIRCUIT

1. Disconnect cooling fan motor harness connector.
2. Check harness continuity between cooling fan motor terminal 1 and IPDM E/R terminal 12 (with A/C) or 10 (without A/C), cooling fan motor terminal 2 and ground.
Refer to wiring diagram.

Continuity should exist.

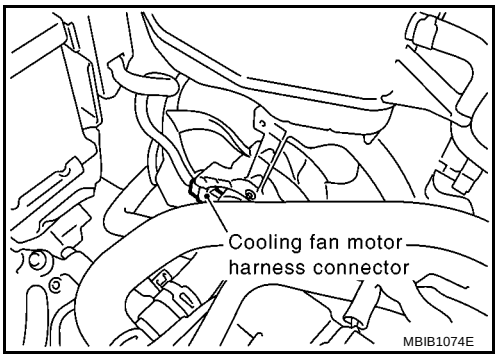

3. Also check harness for short to ground and short to power.
4. For models with air conditioner, check harness continuity between IPDM E/R terminal 10 and cooling fan motor terminal 1.
Refer to wiring diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness for open or short between cooling fan motor and IPDM E/R
- Harness for open or short between cooling fan motor and ground
- Harness for open or short between resistor and IPDM E/R (models with A/C)
- Harness for open or short between resistor and cooling fan motor (models with A/C)
- Resistor E5 (models with A/C)

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK COOLING FAN MOTORS

Refer to EC-365, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace cooling fan motors.

6. CHECK INTERMITTENT INCIDENT

Perform EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R. Refer to PG-18, "IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)" .
NG >> Repair or replace harness or connector.

Main 12 Causes of Overheating

EBS00OB7

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	● Blocked radiator ● Blocked condenser ● Blocked radiator grille ● Blocked bumper	● Visual	No blocking	—
	2	● Coolant mixture	● Coolant tester	50 - 50% coolant mixture	See MA-20, "Engine Coolant Mixture Ratio" .
	3	● Coolant level	● Visual	Coolant up to MAX level in reservoir tank and radiator filler neck	See CO-8, "LEVEL CHECK" .
	4	● Radiator cap	● Pressure tester	59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm^2 , 9 - 14 psi) (Limit)	See CO-15, "Checking Radiator Cap" .
ON*2	5	● Coolant leaks	● Visual	No leaks	See CO-8, "LEAK CHECK" .
ON*2	6	● Thermostat	● Touch the upper and lower radiator hoses	Both hoses should be hot	See CO-23, "THERMOSTAT" , and CO-11, "RADIATOR" .
ON*1	7	● Cooling fan	● CONSULT-II	Operating	See trouble diagnosis for DTC P1217 (EC-358).
OFF	8	● Combustion gas leak	● Color checker chemical tester 4 Gas analyzer	Negative	—
ON*3	9	● Coolant temperature gauge	● Visual	Gauge less than 3/4 when driving	—
		● Coolant overflow to reservoir tank	● Visual	No overflow during driving and idling	See CO-8, "Changing Engine coolant" .
OFF*4	10	● Coolant return from reservoir tank to radiator	● Visual	Should be initial level in reservoir tank	See CO-8, "LEVEL CHECK" .
OFF	11	● Cylinder head	● Straight gauge feeler gauge	0.1 mm (0.004 in) Maximum distortion (warping)	See EM-59, "CYLINDER HEAD" .
	12	● Cylinder block and pistons	● Visual	No scuffing on cylinder walls or piston	See EM-73, "CYLINDER BLOCK" .

*1: Turn the ignition switch ON.
*2: Engine running at 3,000 rpm for 10 minutes.
*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.
*4: After 60 minutes of cool down time.
For more information, refer to CO-5, "OVERHEATING CAUSE ANALYSIS" .

Component Inspection

EBS00OB8

COOLING FAN MOTOR

1. Disconnect cooling fan motor harness connectors.
2. Supply cooling fan motor terminals with battery voltage and check operation.

	Terminals	
	(+)	(-)
Cooling fan motor	1	2

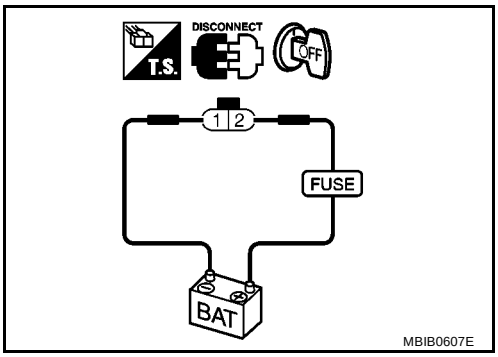

DTC P1223, P1224 TP SENSOR

PFP:16119

Component Description

EBS00OB9

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

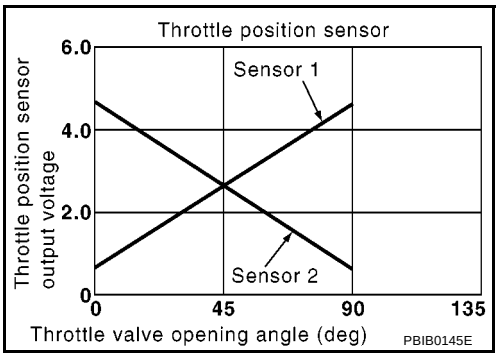

CONSULT-II Reference Value in Data Monitor Mode

EBS00OBA

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T model) 1st (M/T model)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00OBB

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1223 1223	Throttle position sensor 2 circuit low input	An excessively low voltage from the TP sensor 2 is sent to ECM.	● Harness or connectors (The TP sensor 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 2)
P1224 1224	Throttle position sensor 2 circuit high input	An excessively high voltage from the TP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00OBC

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-369, "Diagnostic Procedure" .

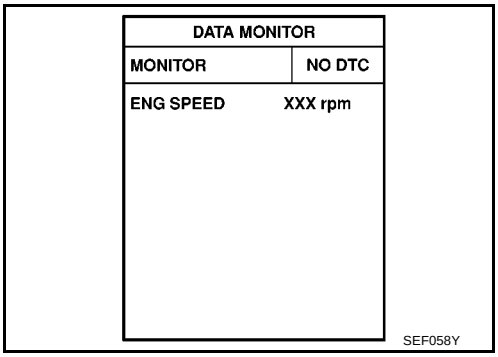

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00OBD

EC-TPS2-01

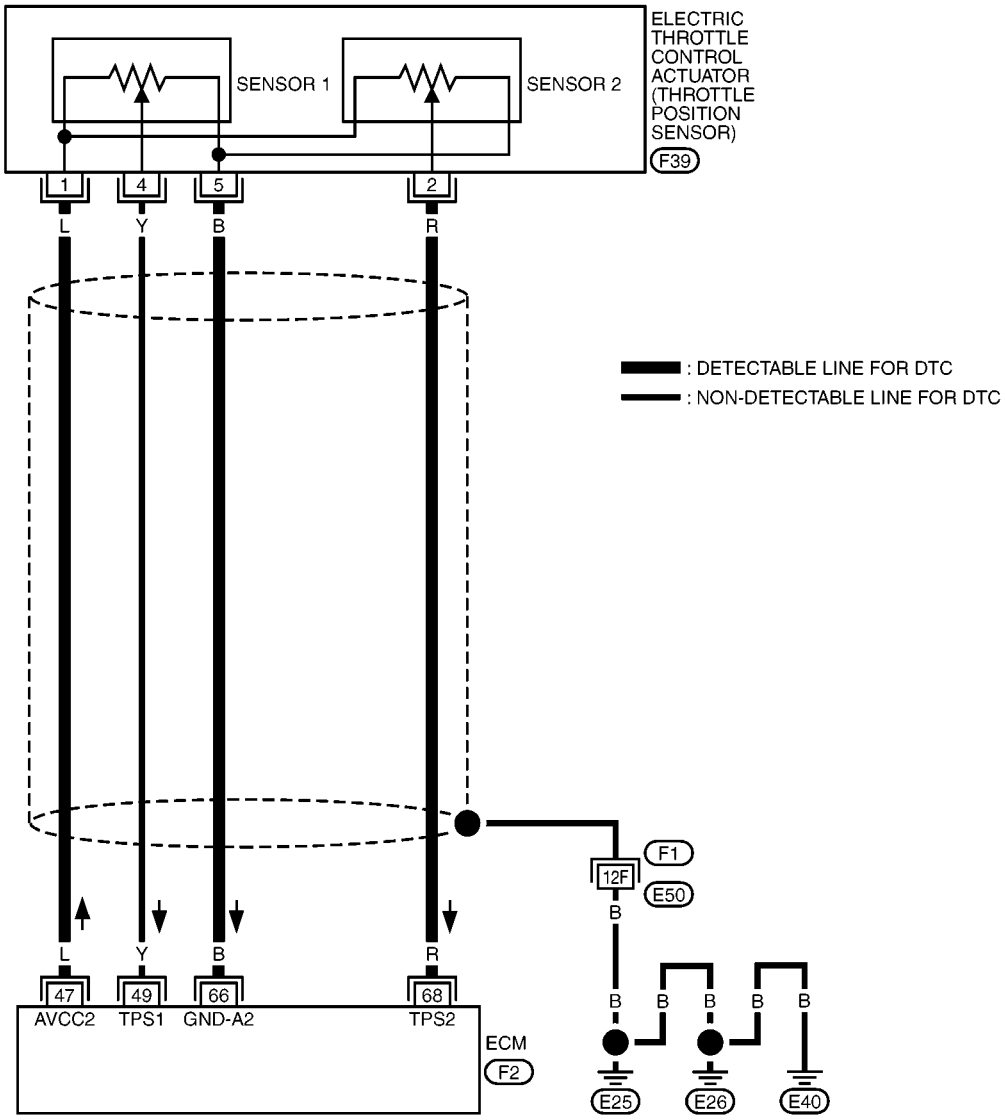

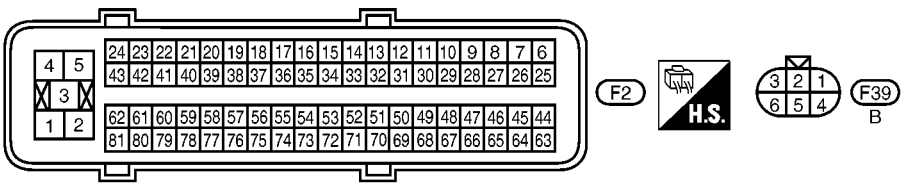

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0291E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS00OBE

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

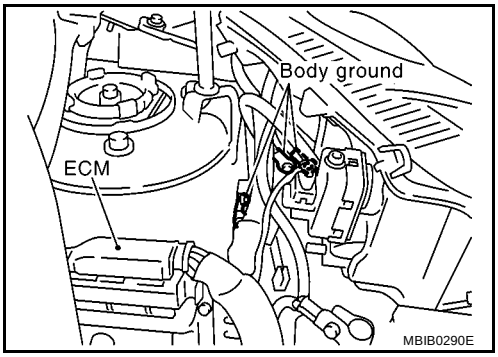

2. CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

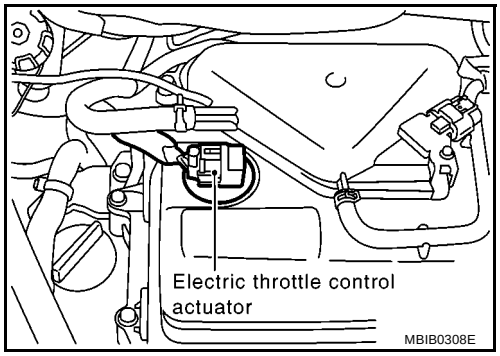

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

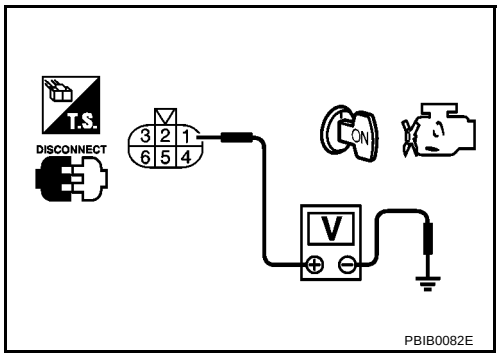

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-371, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OBF

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

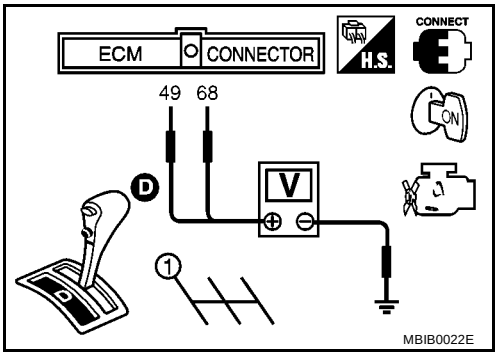

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-42, "Throttle Valve Closed Position Learning" .
8. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00OBG

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1225 TP SENSOR

PFP:16119

Component Description

EBS00OBH

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

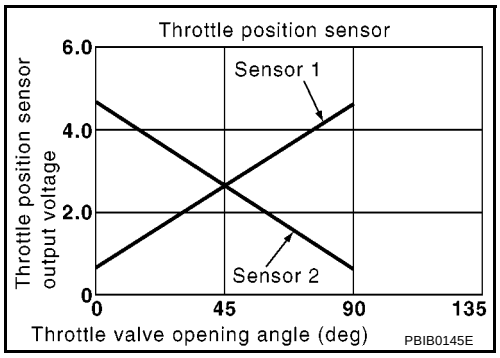

On Board Diagnosis Logic

EBS00OBI

The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1225 1225	Closed throttle position learning performance problem	Closed throttle position learning value is excessively low.	● Electric throttle control actuator (TP sensor 1 and 2)

DTC Confirmation Procedure

EBS00OBJ

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds.
4. Turn ignition switch ON.
5. If 1st trip DTC is detected, go to EC-373, "Diagnostic Procedure"
.

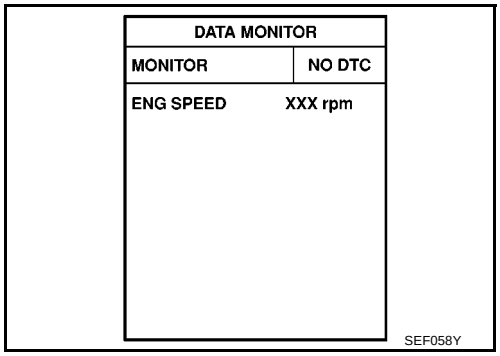

WITH GST

Follow the procedure “With CONSULT-II” above.

Diagnostic Procedure

EBS00OBK

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Turn ignition switch OFF.
2. Remove the intake air duct.
3. Check if foreign matter is caught between the throttle valve and the housing.

OK or NG

OK >> GO TO 2.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

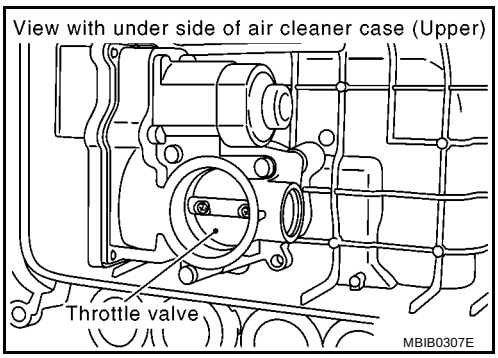

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

Remove and Installation

EBS00OBL

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1226 TP SENSOR

PFP:16119

Component Description

EBS00OBM

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

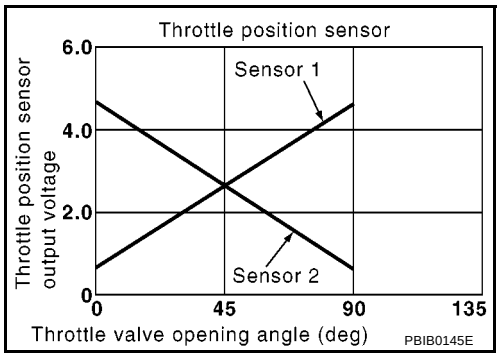

On Board Diagnosis Logic

EBS00OBN

The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1226 1226	Closed throttle position learning performance problem	Closed throttle position learning is not performed successfully, repeatedly.	● Electric throttle control actuator (TP sensor 1 and 2)

DTC Confirmation Procedure

EBS00OBO

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds.
4. Turn ignition switch ON.
5. Repeat steps 3 and 4 for 32 times.
6. If 1st trip DTC is detected, go to EC-375, "Diagnostic Procedure"
.

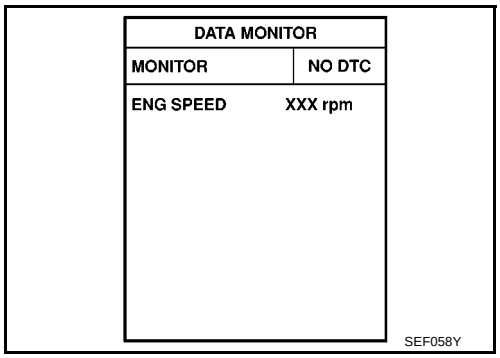

WITH GST

Follow the procedure “With CONSULT-II” above.

Diagnostic Procedure

EBS00OBP

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Turn ignition switch OFF.
2. Remove the intake air duct.
3. Check if foreign matter is caught between the throttle valve and the housing.

OK or NG

OK >> GO TO 2.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

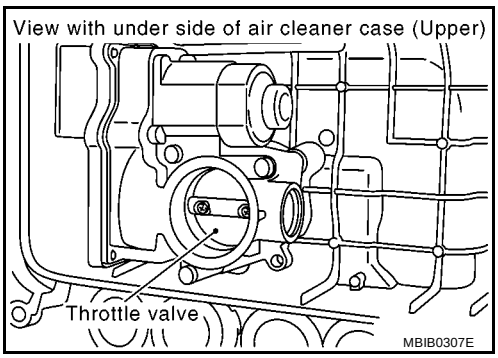

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

Remove and Installation

EBS00OBQ

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1227, P1228 APP SENSOR

PFP:18002

Component Description

EBS00OBR

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

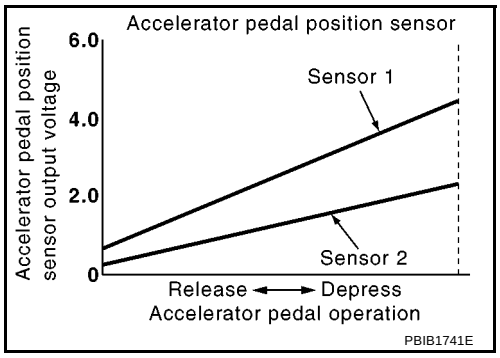

CONSULT-II Reference Value in Data Monitor Mode

EBS00OBS

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differ from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00OBT

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1227 1227	Accelerator pedal position sensor 2 circuit low input	An excessively low voltage from the APP sensor 2 is sent to ECM.	● Harness or connectors (The APP sensor 2 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 2)
P1228 1228	Accelerator pedal position sensor 2 circuit high input	An excessively high voltage from the APP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00OBU

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-381, "Diagnostic Procedure" .

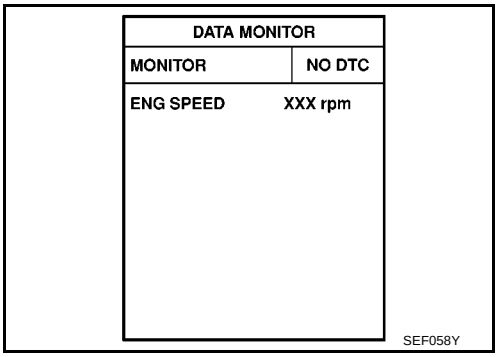

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram
LHD MODELS

EBS00OBV

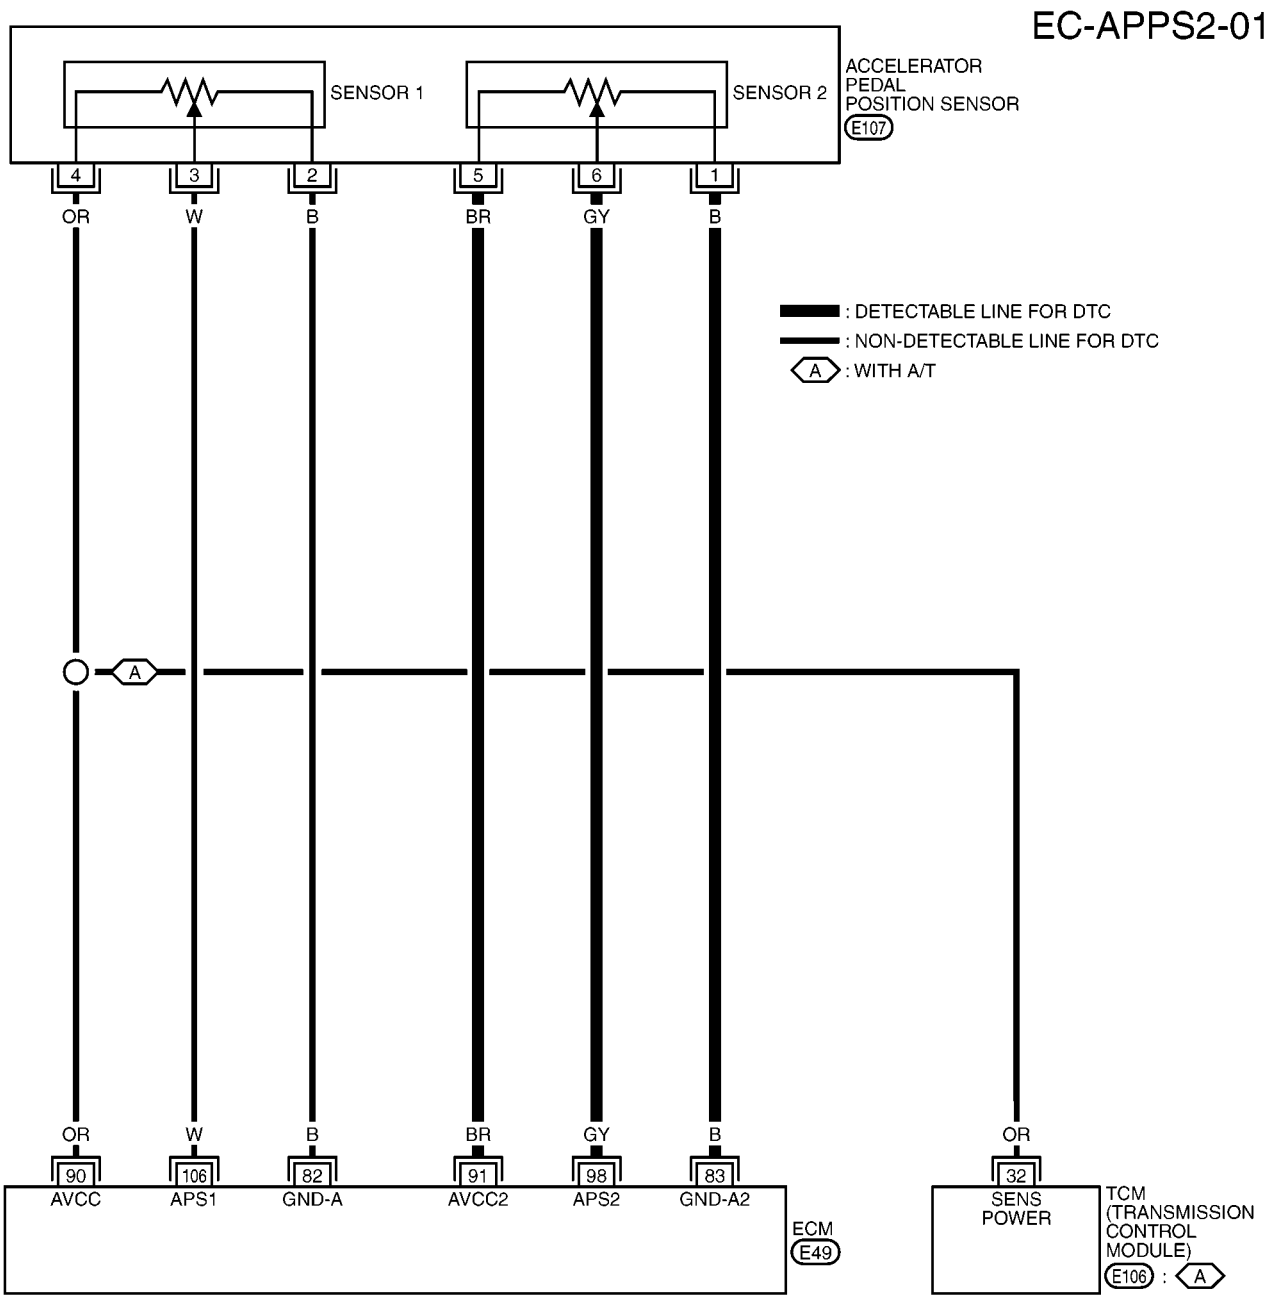

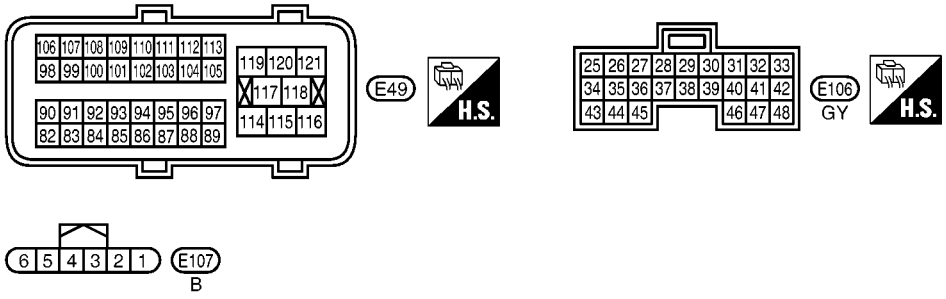

MBWA0292E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS2-02

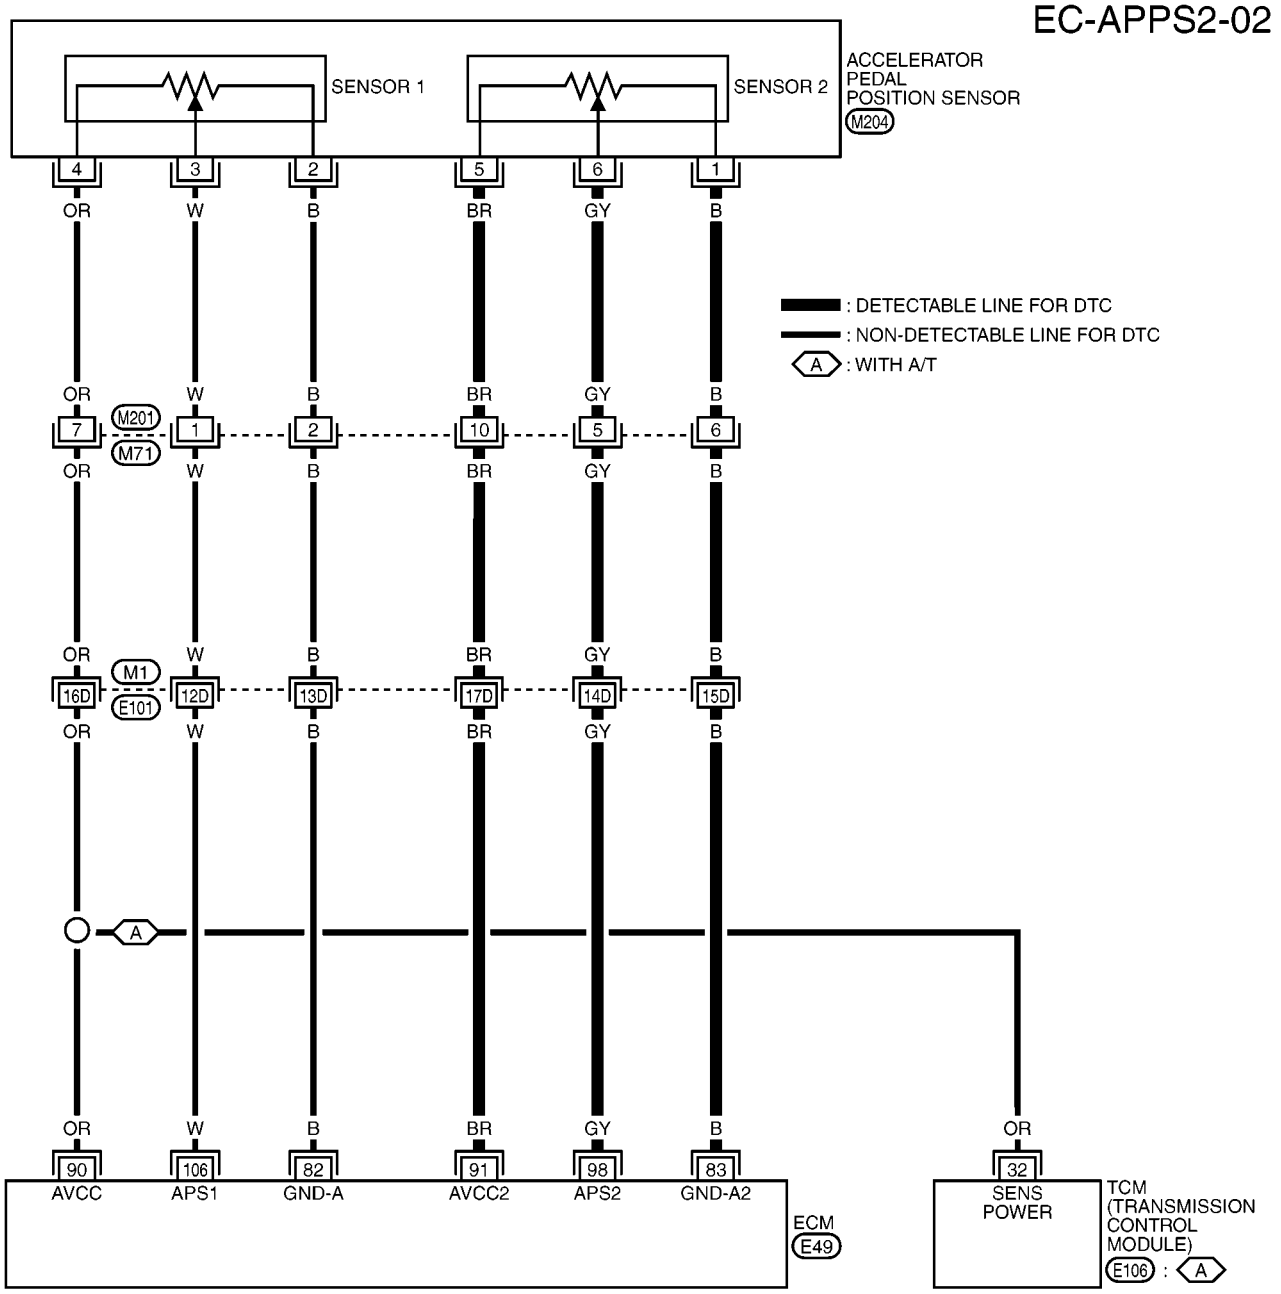



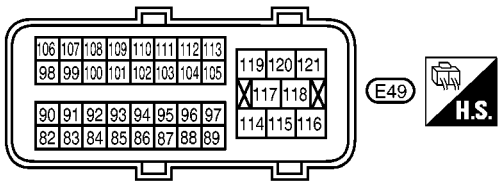

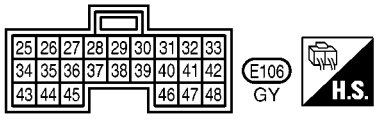

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0293E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS00OBW

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

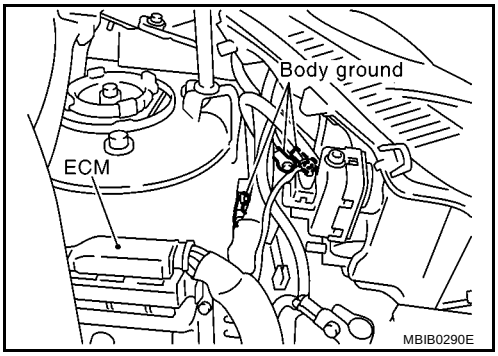

2. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

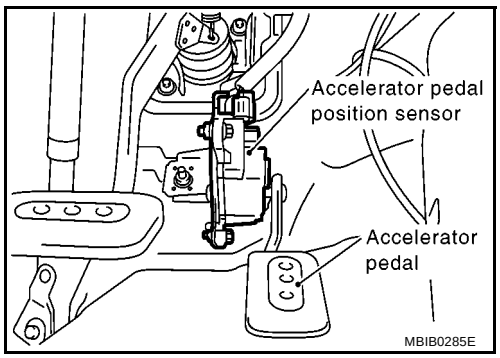

3. Check voltage between APP sensor terminal 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

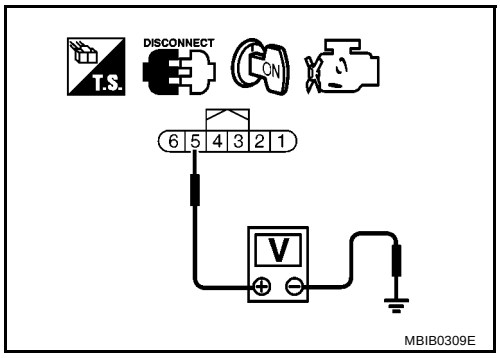

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 83 and APP sensor terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 98 and APP sensor terminal 6. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-383, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .
3. Perform EC-42, "Throttle Valve Closed Position Learning" .
4. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OBX

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

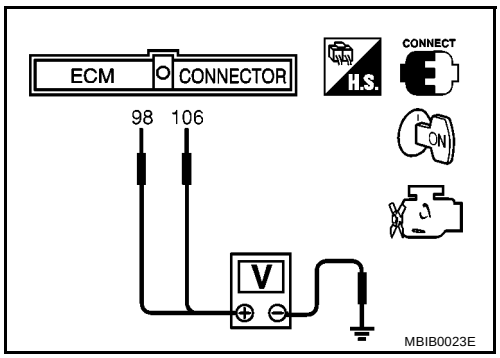

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-42, "Accelerator Pedal Released Position Learning" .
6. Perform EC-42, "Throttle Valve Closed Position Learning" .
7. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS00OBY

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P1229 SENSOR POWER SUPPLY

PFP:16119

On Board Diagnosis Logic

EBS00OBZ

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1229 1229	Sensor power supply circuit short	ECM detects a voltage of power source for sensor is excessively low or high.	● Harness or connectors (The TP sensor 1 and 2 circuit is shorted.) ● Electric throttle control actuator (TP sensor 1 and 2) ● ECM pin terminal

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00OC0

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-387, "Diagnostic Procedure" .

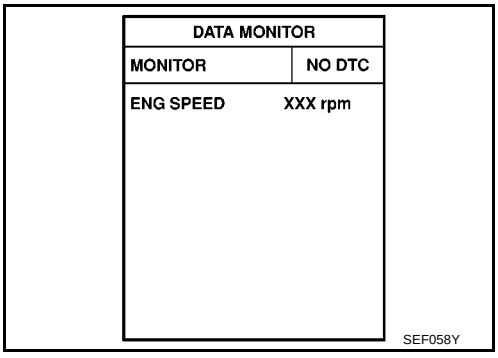

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00OC1

EC-SEN/PW-01

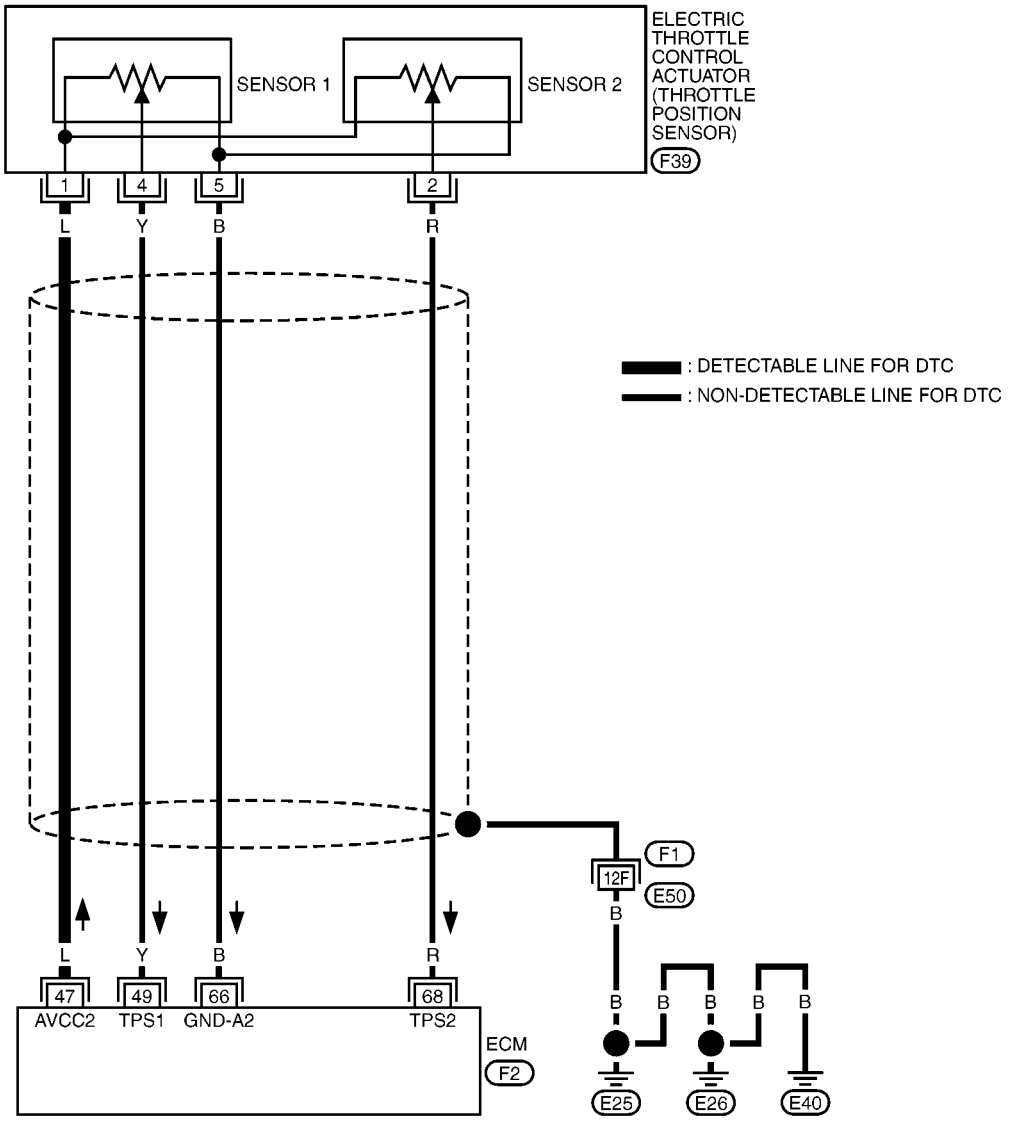

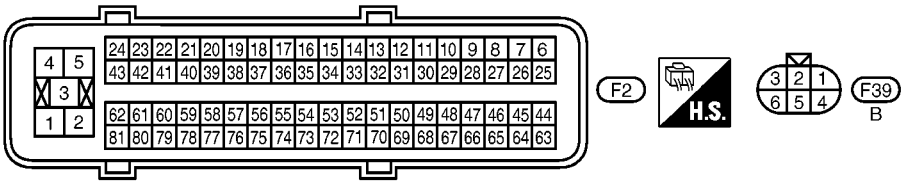

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0463E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V

Diagnostic Procedure

EBS00OC2

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

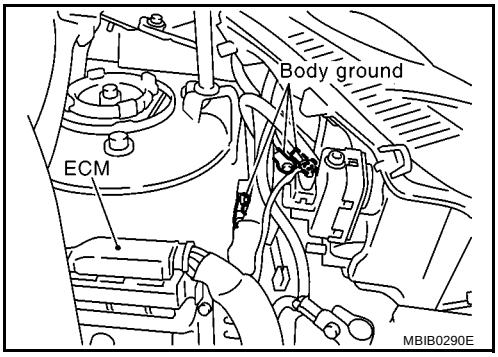

2. CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

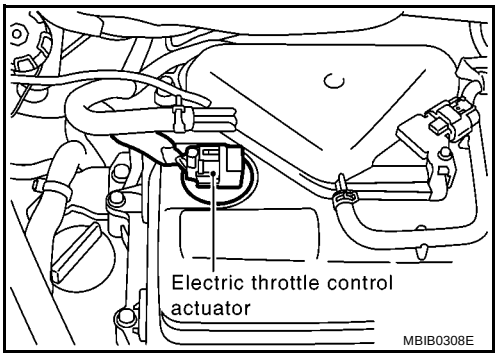

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

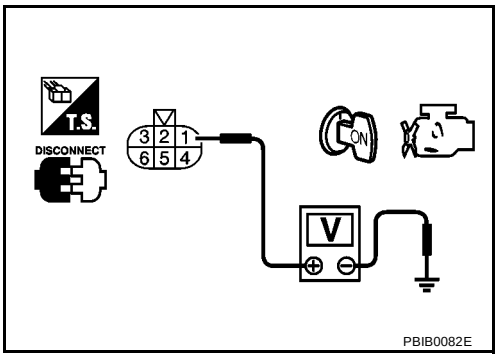

3. CHECK SENSOR POWER SUPPLY CIRCUITS FOR SHORT

Check the following.

- Harness for short to power and short to ground between ECM terminal 47 and electric throttle control actuator terminal 1.
- ECM pin terminal.

OK or NG

OK >> GO TO 4.
NG >> Repair short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR

Refer to EC-232, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

6. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P1706 PNP SWITCH

PFP:32006

Component Description

EBS00OC3

When the shift lever position is P or N (A/T models), Neutral (M/T models), park/neutral position (PNP) switch is ON.
ECM detects the position because the continuity of the line (the ON signal) exists.

CONSULT-II Reference Value in Data Monitor Mode

EBS00OC4

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
P/N POSI SW	● Ignition switch: ON	Shift lever: P or N (A/T models), Neutral (M/T models)	ON
		Shift lever: Except above	OFF

On Board Diagnosis Logic

EBS00OC5

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1706 1706	Park/neutral position switch	The signal of the park/neutral position (PNP) switch is not changed in the process of engine starting and driving.	● Harness or connectors [The park/neutral position (PNP) switch circuit is open or shorted.] ● Park/neutral position (PNP) switch

DTC Confirmation Procedure

EBS00OC6

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “P/N POSI SW” in “DATA MONITOR” mode with CONSULT-II. Then check the “P/N POSI SW” signal under the following conditions.

Position (Selector lever)	Known-good signal
N and P position (A/T) Neutral position (M/T)	ON
Except the above position	OFF

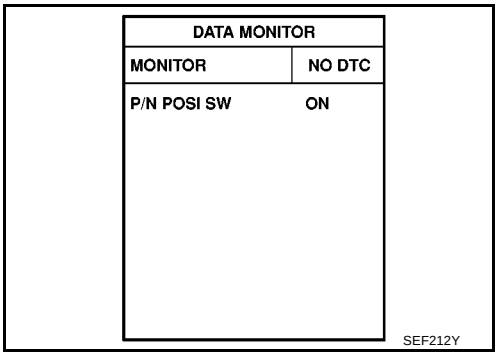

If NG, go to EC-392, "Diagnostic Procedure" .
If OK, go to following step.

3. Select “DATA MONITOR” mode with CONSULT-II.
4. Start engine and warm it up to normal operating temperature.
5. Maintain the following conditions for at least 60 consecutive seconds.

ENG SPEED	1,700 - 4,700 rpm (M/T models with CR10 engine) 1,500 - 4,200 rpm (M/T models with CR12 engine) 1,600 - 4,400 rpm (M/T models with CR14 engine) 1,250 - 3,600 rpm (A/T models)
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	1.8 - 6.2 msec (M/T models) 2.3 - 7.5 msec (A/T models)
VHCL SPEED SE	More than 46 km/h (29 MPH)
Selector lever	Suitable position

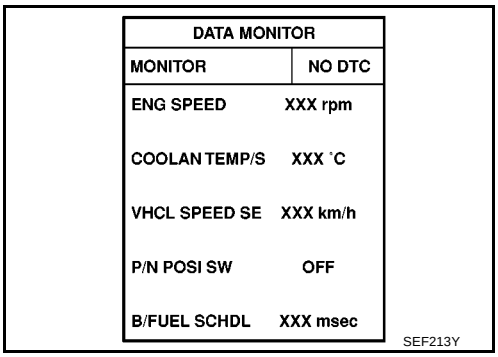

6. If 1st trip DTC is detected, go to EC-392, "Diagnostic Procedure" .

Overall Function Check

EBS00OC7

Use this procedure to check the overall function of the park/neutral position (PNP) switch circuit. During this check, a 1st trip DTC might not be confirmed.

WITH GST

1. Turn ignition switch ON.
2. Check voltage between ECM terminal 102 (PNP switch signal) and body ground under the following conditions.

Condition (Gear position)	Voltage V (Known-good data)
N and P position (A/T) Neutral position (M/T)	Approx. 0
Except the above position	BATTERY VOLTAGE (11 - 14V)

3. If NG, go to EC-392, "Diagnostic Procedure" .

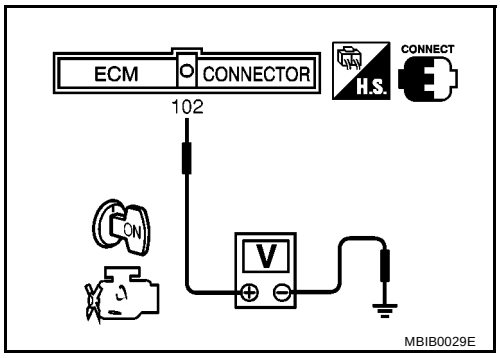

Wiring Diagram

EBS00OC8

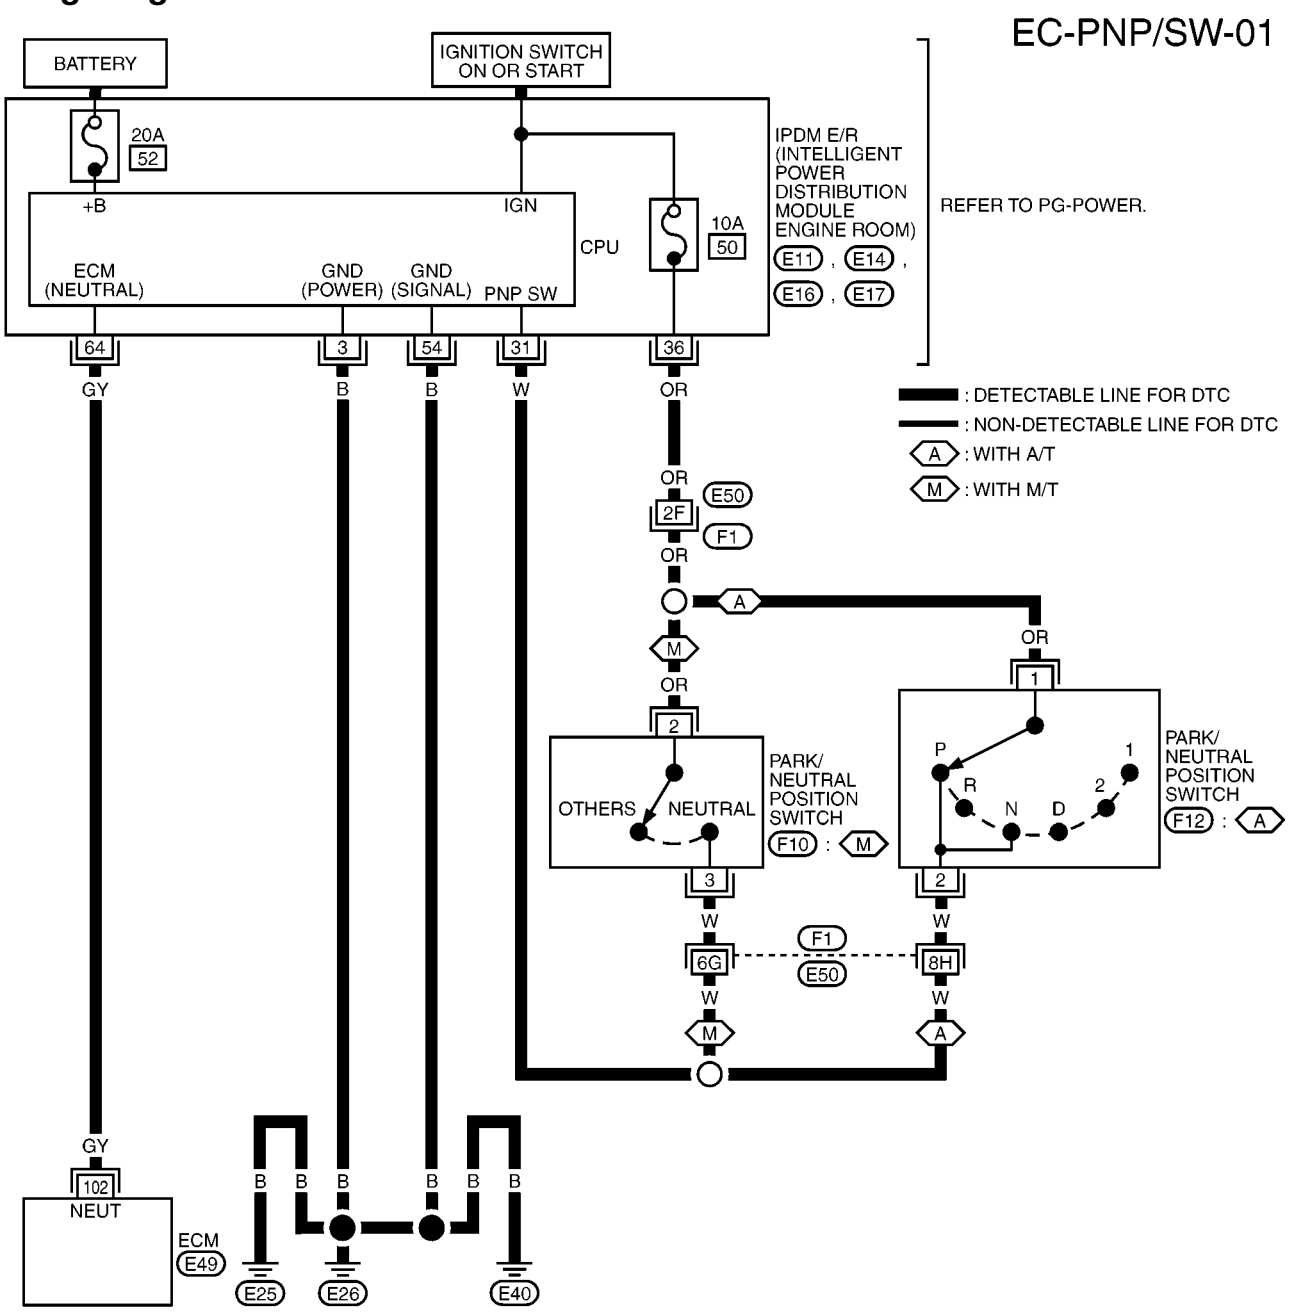

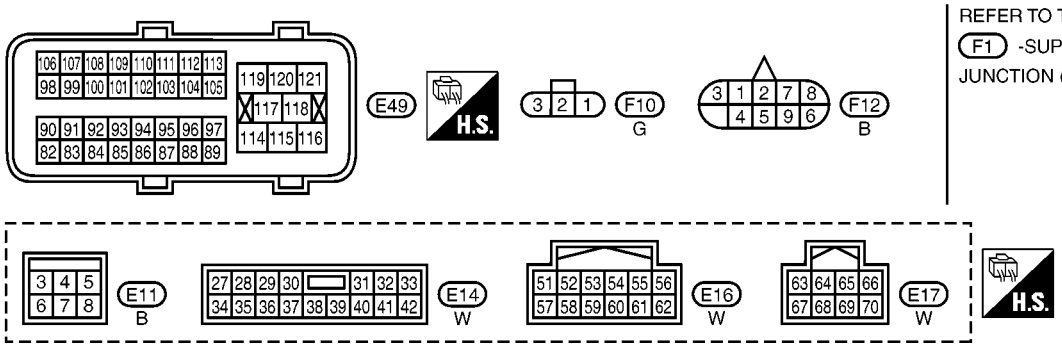

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0294E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
102	GY	PNP switch	**[Ignition switch ON]** ● Shift lever position: P or N (A/T models), Neutral (M/T models).	Approximately 0V
			[Ignition switch ON] ● Except the above gear position	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00OC9

1. CHECK PNP SWITCH CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between IPDM E/R terminal 31 and ground under following condition.

Shift lever position	Voltage
P or N (A/T models) Neutral (M/T models)	Battery voltage (11- 14V)
Except above position	Approximately 0V

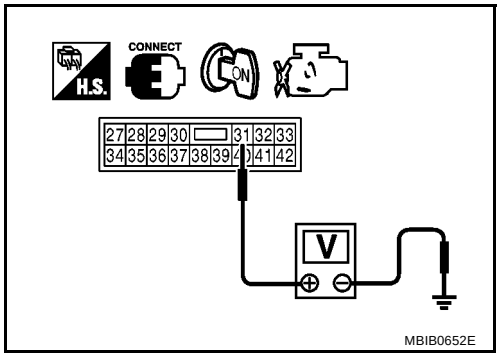

OK or NG

OK >> GO TO 7.
NG >> GO TO 2.

2. CHECK PNP SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect PNP switch harness connector.
3. Turn ignition switch ON.
4. Check voltage between PNP switch terminal 1 (A/T models), 2 (M/T models) and ground with CONSULT-II or tester.

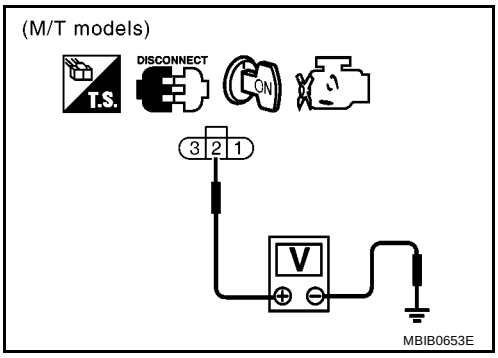

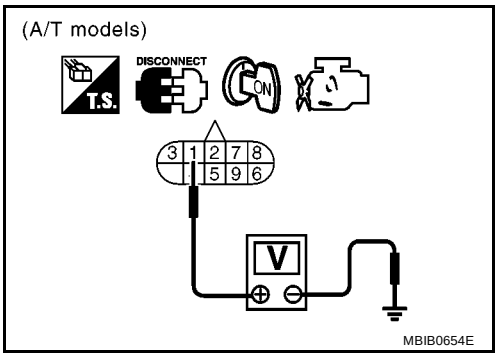

Voltage: Battery voltage

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PARTS

Check the following.

- 10A fuse
- Harness connectors E50, F1
- IPDM E/R connector E14
- Harness for short or open between PNP switch and fuse

>> Repair or replace harness or connectors.

4. CHECK HARNESS CONTINUTY BETWEEN PNP SWITCH AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E14.
3. Check harness continuity between IPDM E/R terminal 31 and PNP switch terminal 2 (A/T models), 3 (M/T models).

Continuity should exist.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PARTS

Check the following.

- Harness connectors E50, F1
- Harness for short or open between PNP switch and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK PNP SWITCH

Refer to AT-119, "Component Inspection" (A/T models).

OK or NG

OK >> GO TO 8.
NG >> Replace PNP switch.

7. CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E17
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 102 and IPDM E/R terminal 64.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO OT 8.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P1805 BRAKE SWITCH

PFP:25320

Description

EBS00OCA

Brake switch signal is applied to the ECM through the stop lamp switch when the brake pedal is depressed. This signal is used mainly to decrease the engine speed when the vehicle is driving.

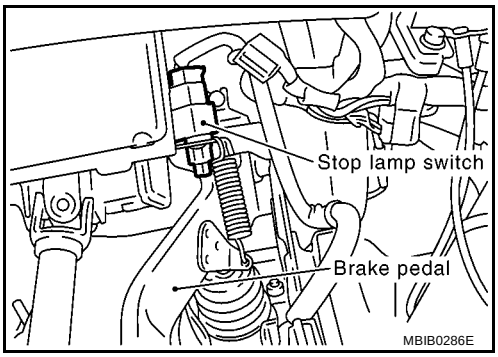

CONSULT-II Reference Value in Data Monitor Mode

EBS00OCB

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
BRAKE SW	● Ignition switch: ON	Brake pedal: Fully released	OFF
		Brake pedal: Slightly depressed	ON

On Board Diagnosis Logic

EBS00OCC

The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1805 1805	Brake switch	A brake switch signal is not sent to ECM for an extremely long time while the vehicle is driving.	● Harness or connectors (Stop lamp switch circuit is open or shorted.) ● Stop lamp switch

FAIL-SAFE MODE

EBS00OCD

When the malfunction is detected, the ECM enters fail-safe mode.

Engine operation condition in fail-fail safe mode	
ECM controls the electric throttle control actuator by regulating the throttle opening to a small range.Therefore,acceleration will be poor.	
Vehicle condition	Driving condition
When engine is idling	Normal
When accelerating	Poor acceleration

DTC Confirmation Procedure

EBS00OCE

WITH CONSULT-II

1. Turn ignition switch ON.
2. Fully depress the brake pedal for at least 5 seconds.
3. Erase the DTC with CONSULT-II.
4. Select “DATA MONITOR” mode with CONSULT-II.
5. If 1st trip DTC is detected, go to EC-398, "Diagnostic Procedure"
.

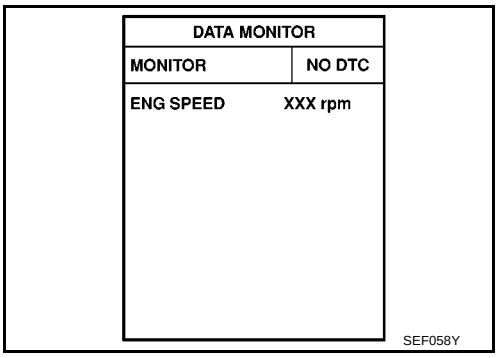

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS00OCF

EC-BRK/SW-01

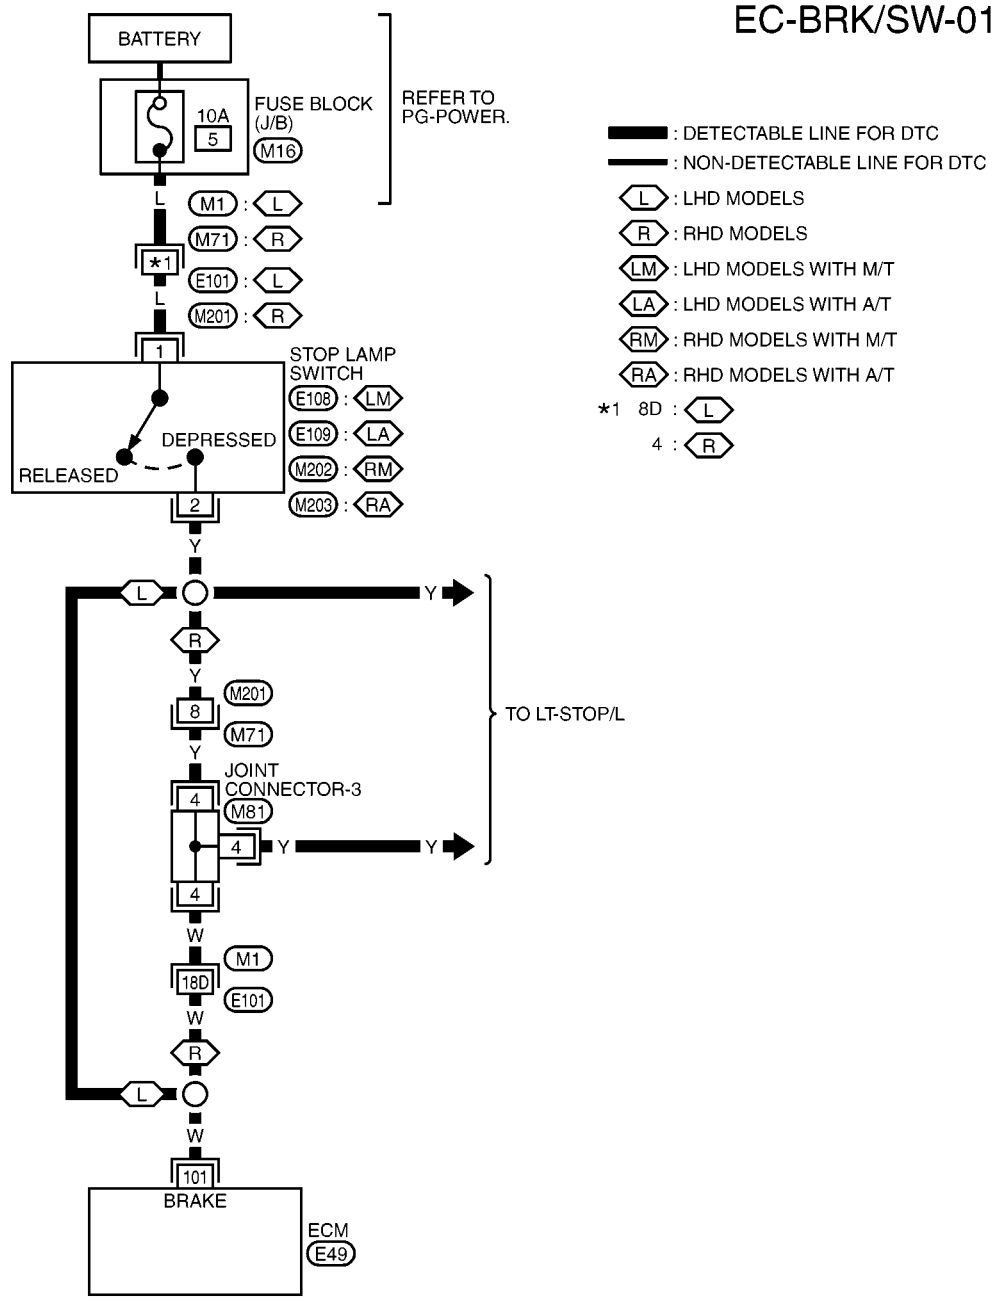



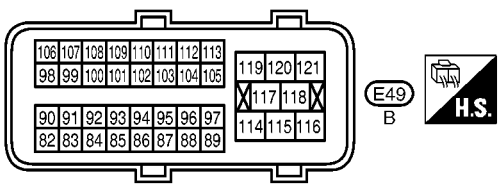

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)

MBWA0574E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
101	W	Stop lamp switch	**[Engine is running]** ● Brake pedal: Fully released	Approximately 0V
			[Engine is running] ● Brake pedal: Depressed	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00OCG

1. CHECK STOP LAMP SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Check the stop lamp when depressing and releasing the brake pedal.

Brake pedal	Stop lamp
Fully released	Not illuminated
Depressed	Illuminated

OK or NG

OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

1. Disconnect stop lamp switch harness connector.

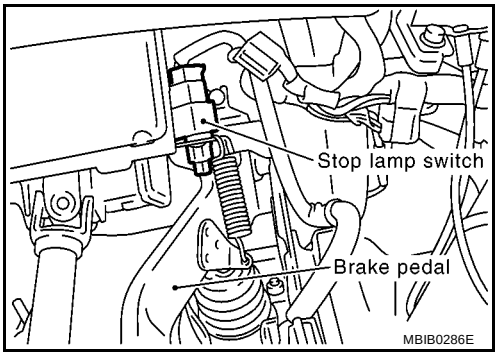

2. Check voltage between stop lamp switch terminal 1 and ground with CONSULT-II or tester.

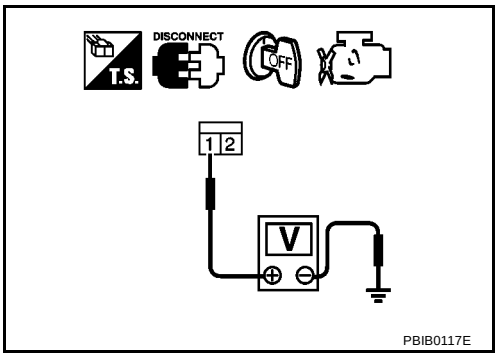

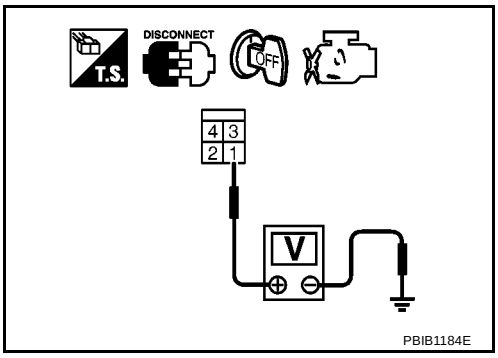

Voltage: Battery voltage

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- 10A fuse
- Fuse block (J/B) connector M16
- Harness connectors M1, E101 (LHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open and short between stop lamp switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 101 and stop lamp switch terminal 2.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Joint connector-3 (RHD models)
- Harness for open or short between ECM and stop lamp switch

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK STOP LAMP SWITCH

Refer to EC-401, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace stop lamp switch.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OCH

STOP LAMP SWITCH

1. Disconnect stop lamp switch harness connector.

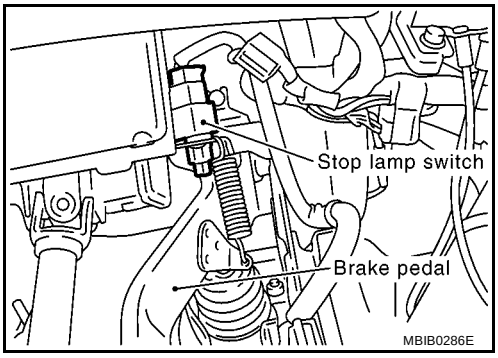

2. Check continuity between stop lamp switch terminals 1 and 2 under the following conditions.

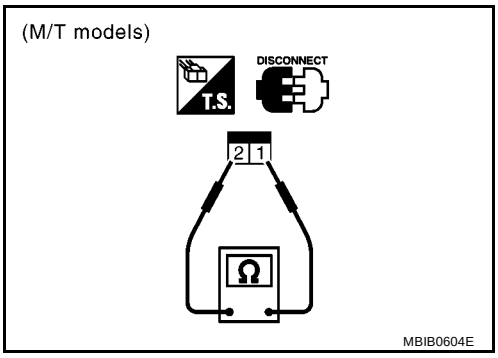

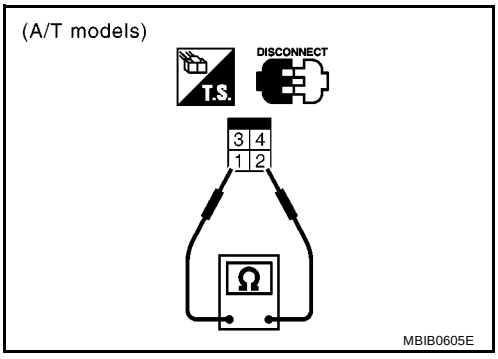

Conditions	Continuity
Brake pedal fully released	Should not exist.
Brake pedal depressed	Should exist.

If NG, adjust brake pedal installation, refer to BR-6, "BRAKE PEDAL" , and perform step 2 again.

DTC P2122, P2123 APP SENSOR

PFP:18002

Component Description

EBS010C9

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

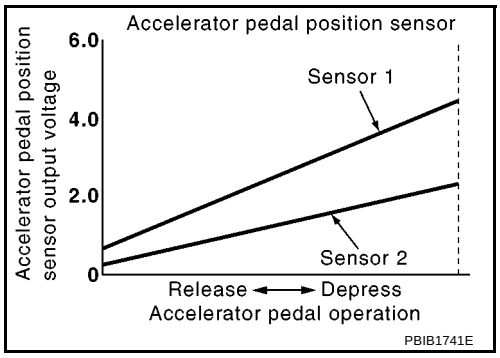

CONSULT-II Reference Value in Data Monitor Mode

EBS010CA

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS010CB

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2122 2122	Accelerator pedal position sensor 1 circuit low input	An excessively low voltage from the APP sensor 1 is sent to ECM.	● Harness or connectors (The APP sensor 1 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 1)
P2123 2123	Accelerator pedal position sensor 1 circuit high input	An excessively high voltage from the APP sensor 1 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010CC

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-407, "Diagnostic Procedure" .

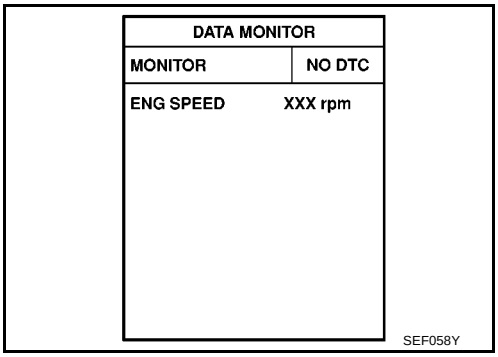

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram
LHD MODELS

EBS010CD

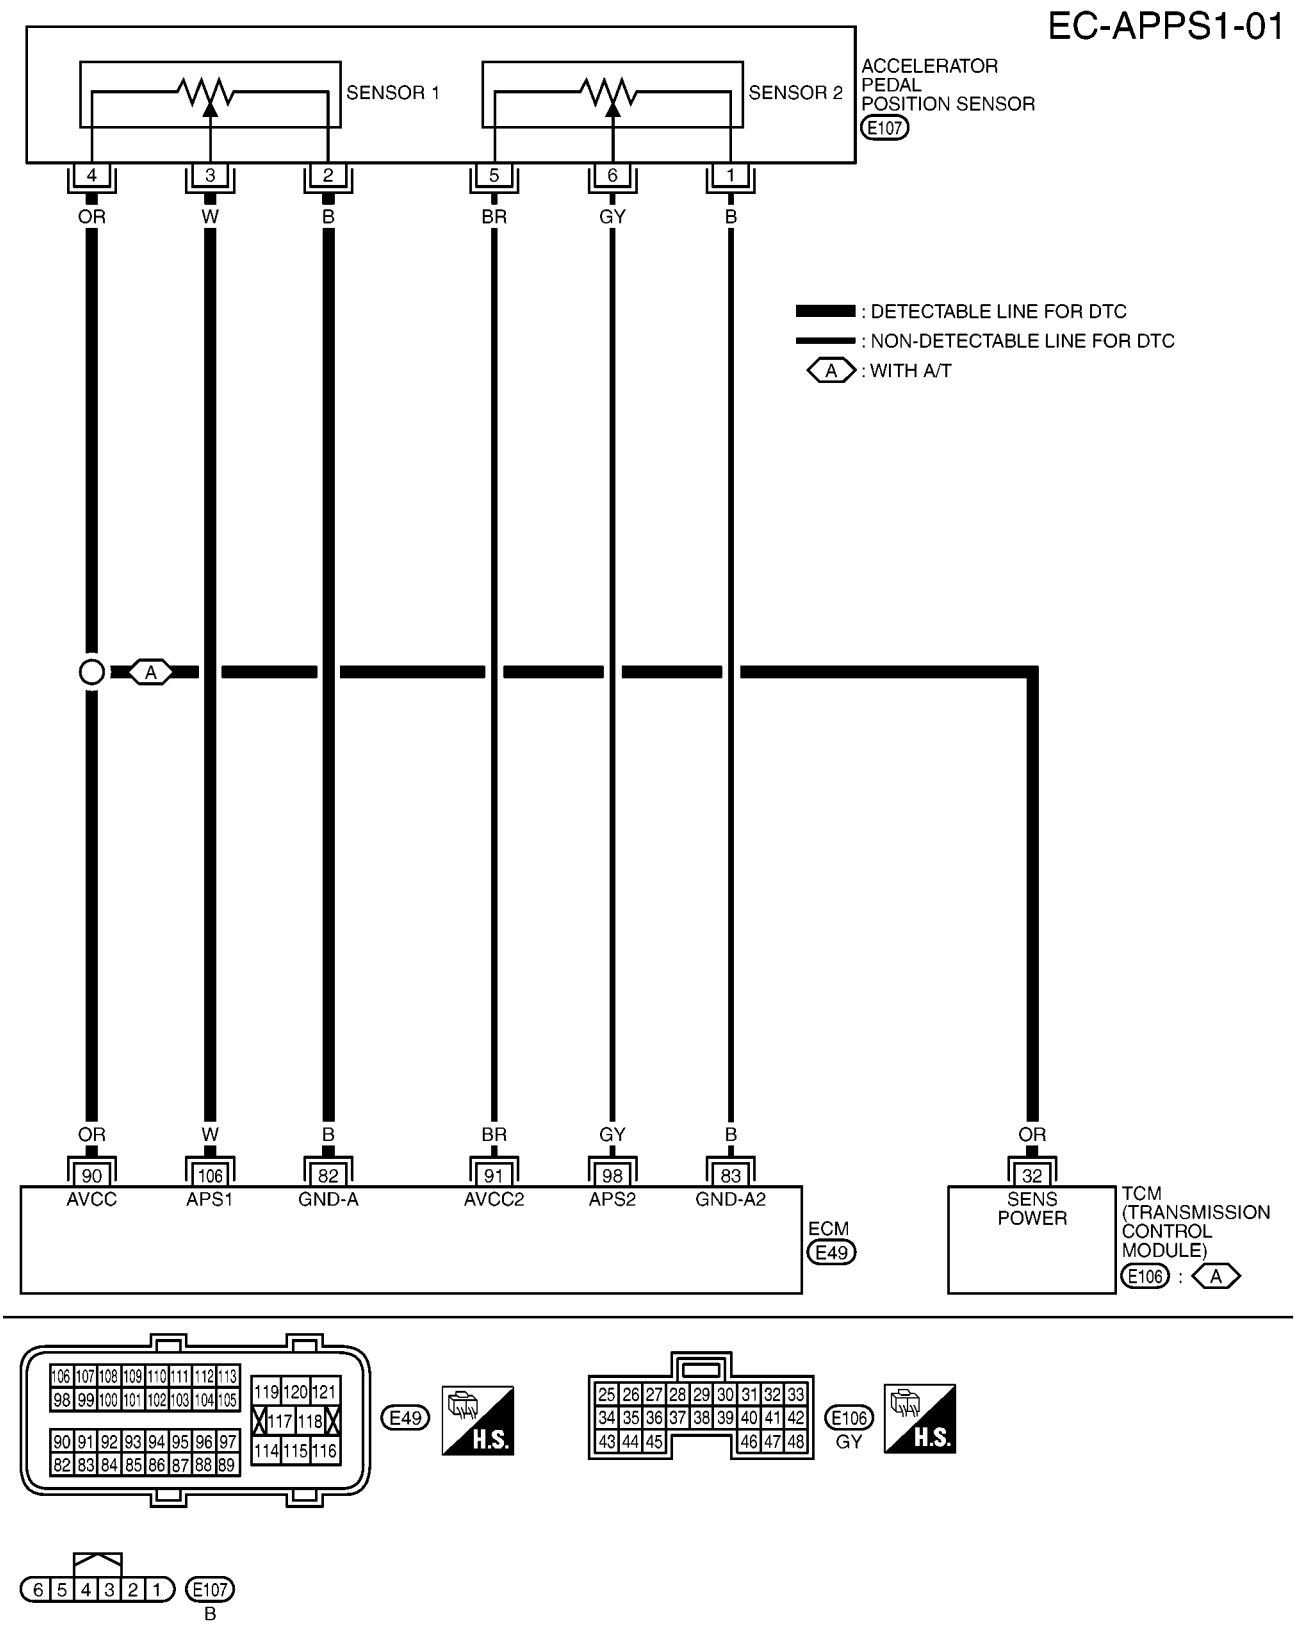

MBWA0279E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS1-02

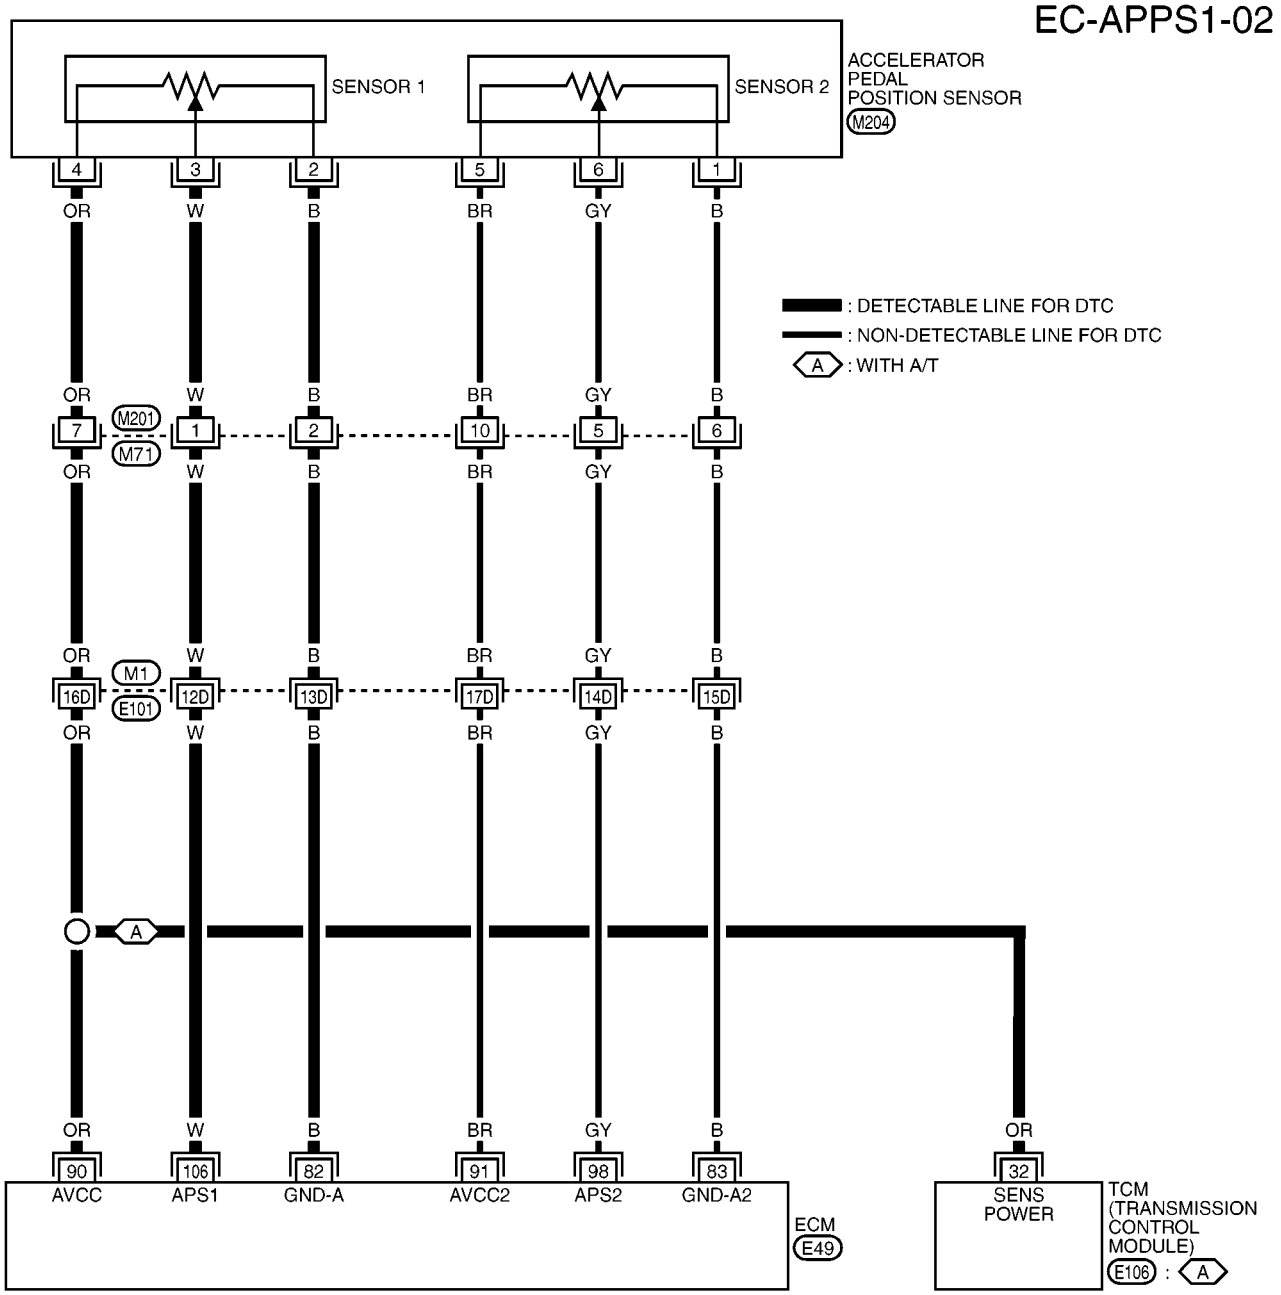

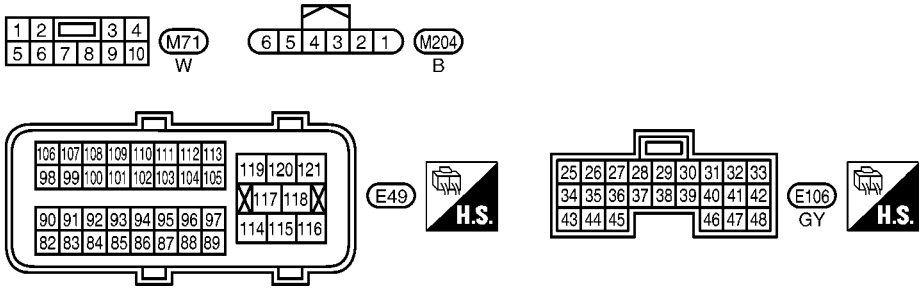

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0280E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS010CE

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

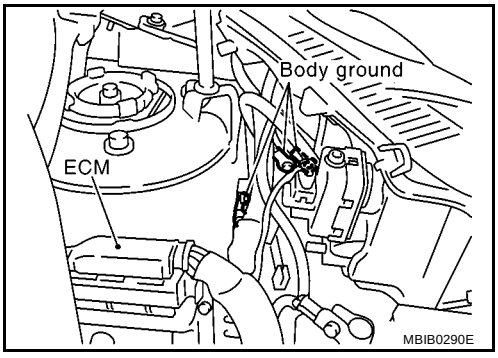

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

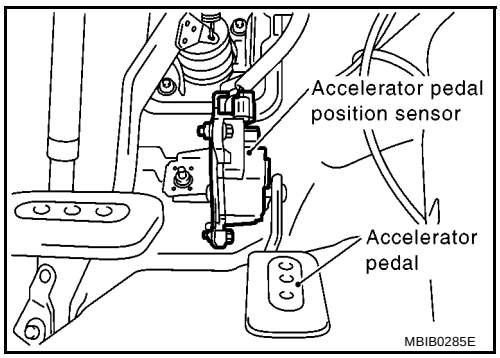

3. Check voltage between APP sensor terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

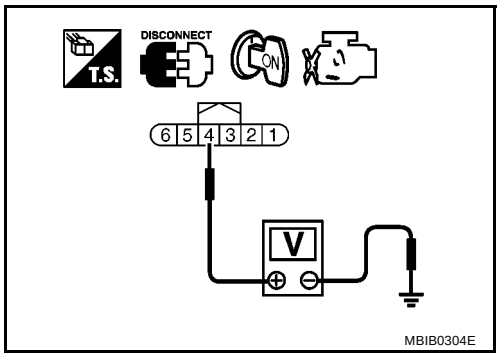

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-409, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .
3. Perform EC-42, "Throttle Valve Closed Position Learning" .
4. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010CF

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

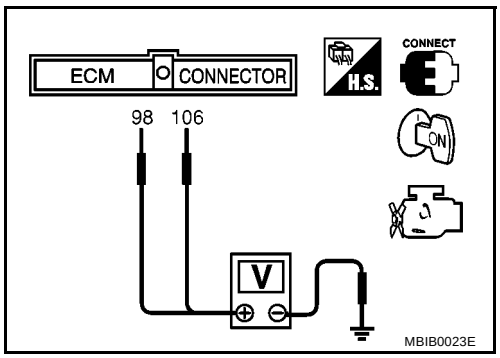

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-42, "Accelerator Pedal Released Position Learning" .
6. Perform EC-42, "Throttle Valve Closed Position Learning" .
7. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS010CG

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P2127, P2128 APP SENSOR

PFP:18002

Component Description

EBS010CH

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

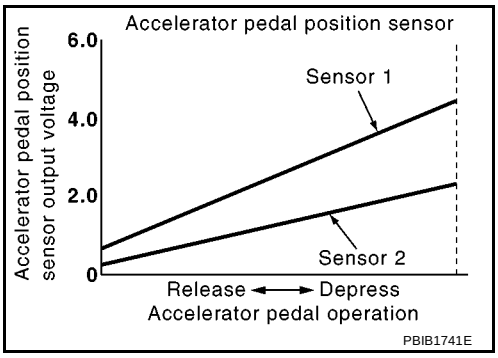

CONSULT-II Reference Value in Data Monitor Mode

EBS010CI

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differ from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS010CJ

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2127 2127	Accelerator pedal position sensor 2 circuit low input	An excessively low voltage from the APP sensor 2 is sent to ECM.	● Harness or connectors (The APP sensor 2 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 2)
P2128 2128	Accelerator pedal position sensor 2 circuit high input	An excessively high voltage from the APP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010CK

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-416, "Diagnostic Procedure" .

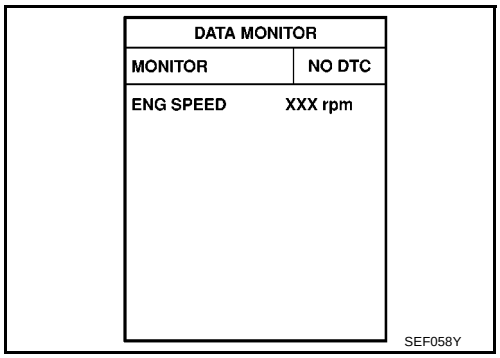

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram
LHD MODELS

EBS010CL

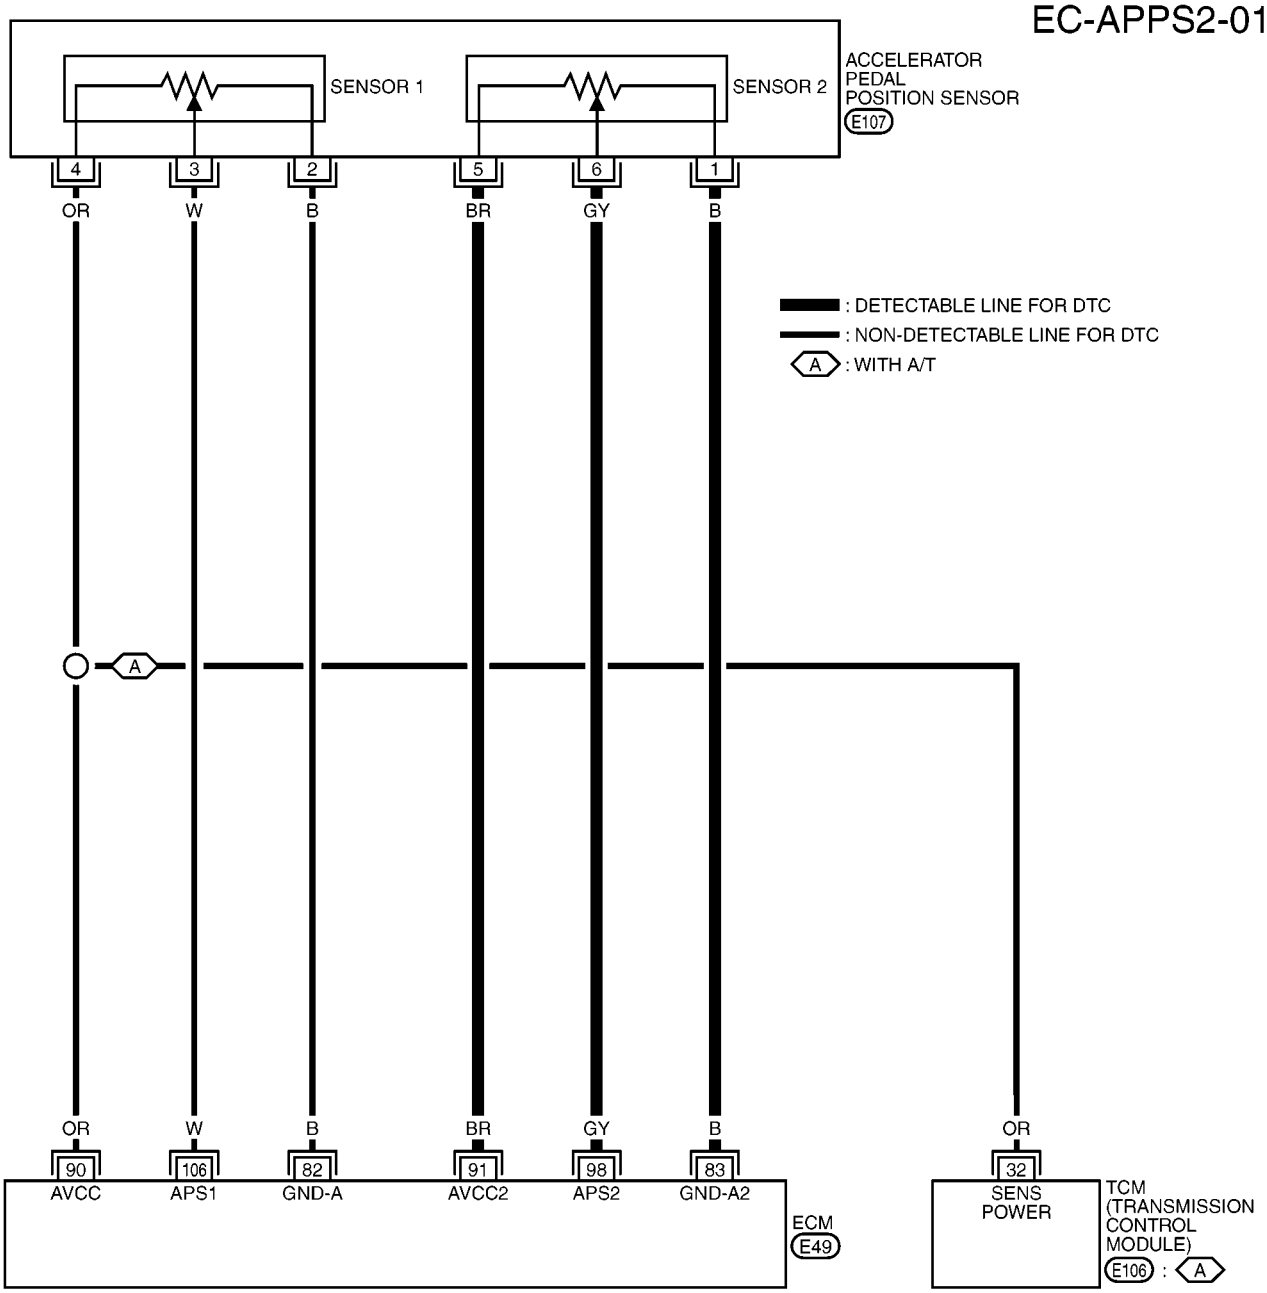

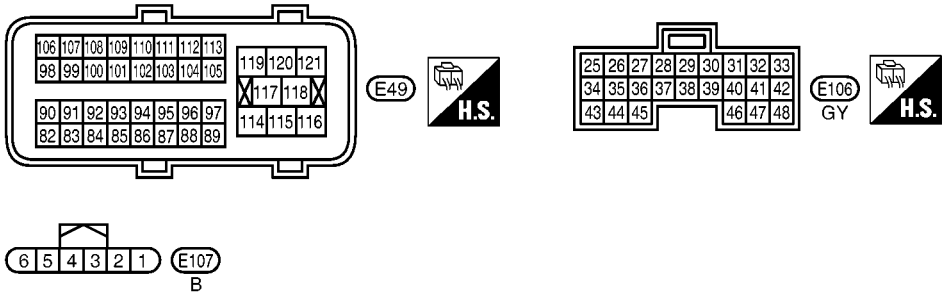

MBWA0292E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS2-02

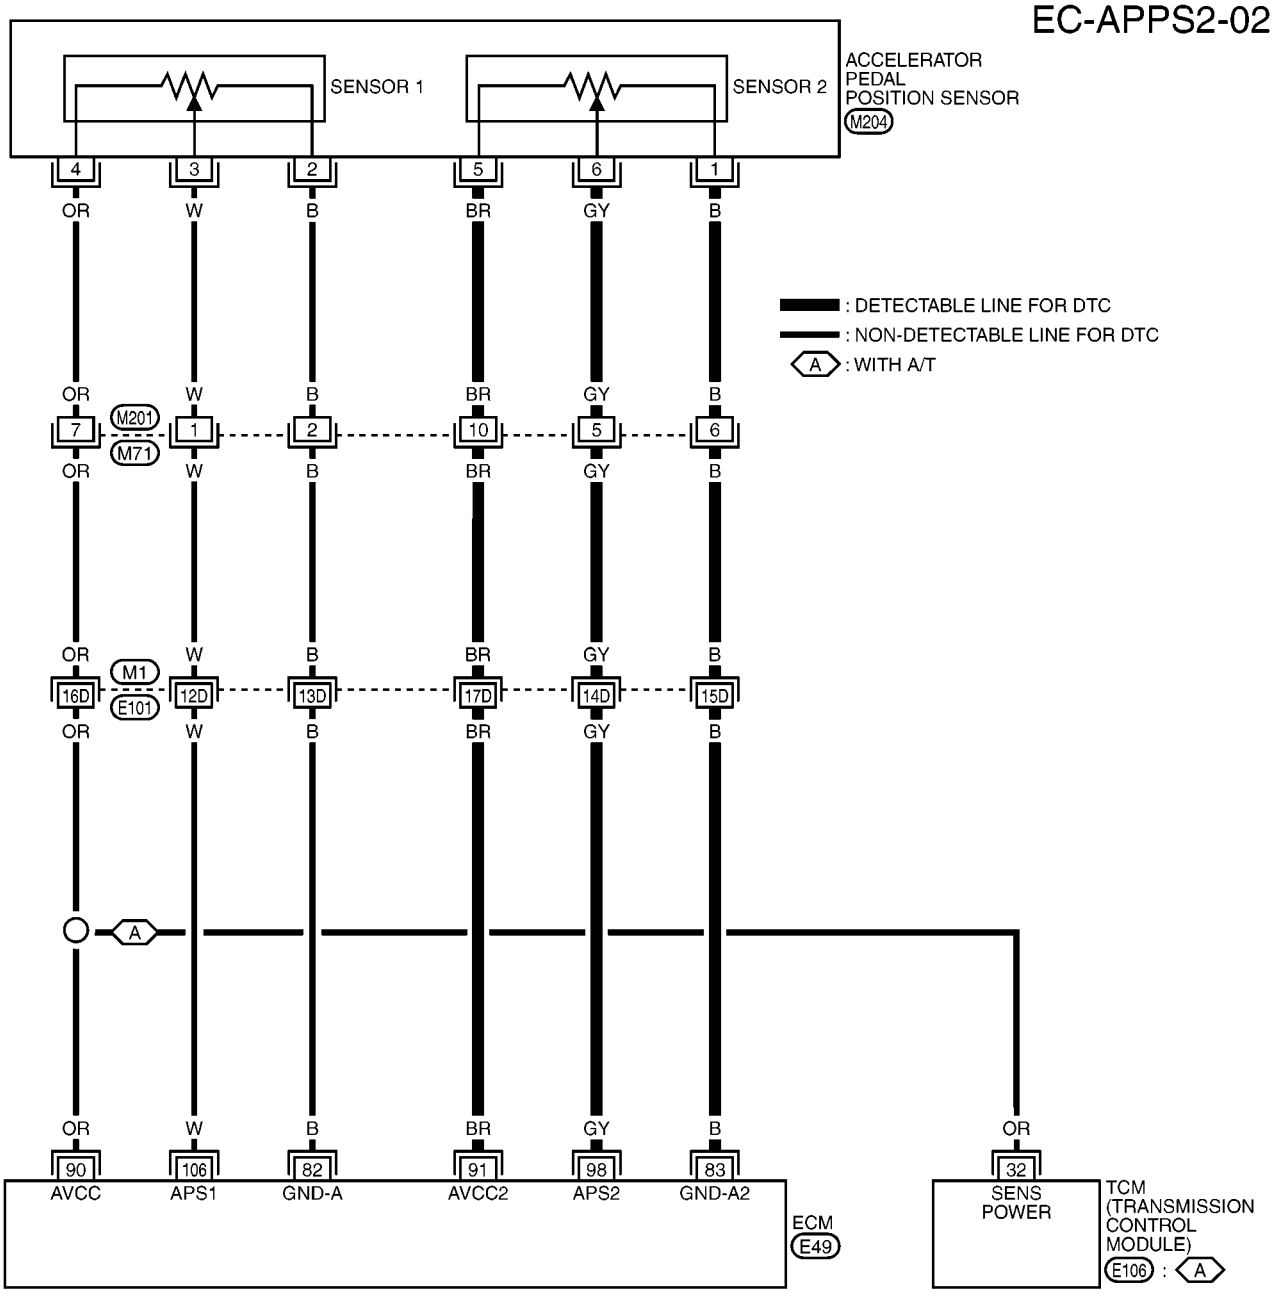



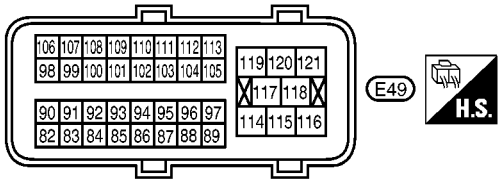

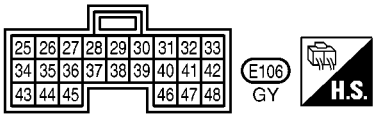

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0293E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS010CM

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

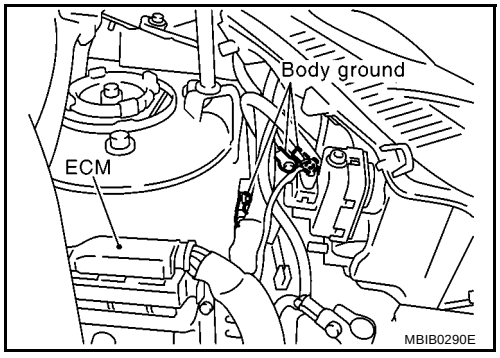

2. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

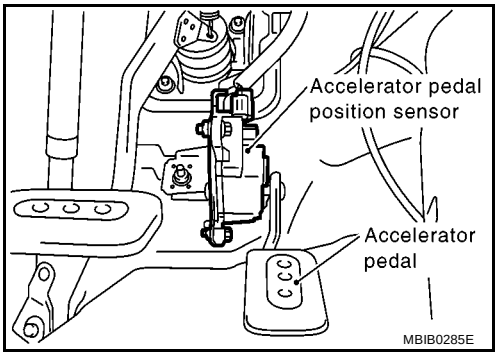

3. Check voltage between APP sensor terminal 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

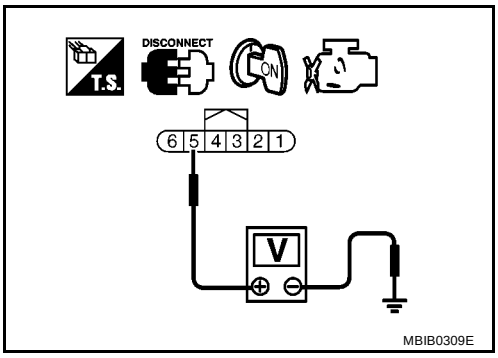

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 83 and APP sensor terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 98 and APP sensor terminal 6.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-418, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .
3. Perform EC-42, "Throttle Valve Closed Position Learning" .
4. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010CN

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

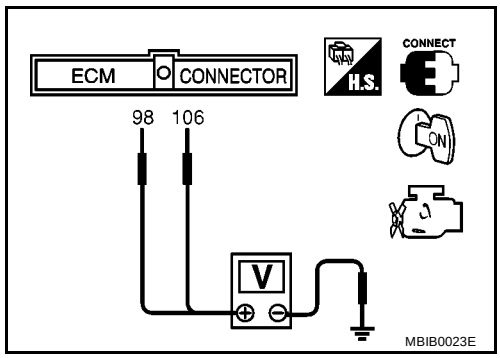

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-42, "Accelerator Pedal Released Position Learning" .
6. Perform EC-42, "Throttle Valve Closed Position Learning" .
7. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS010CO

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P2135 TP SENSOR

PFP:16119

Component Description

EBS010CP

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

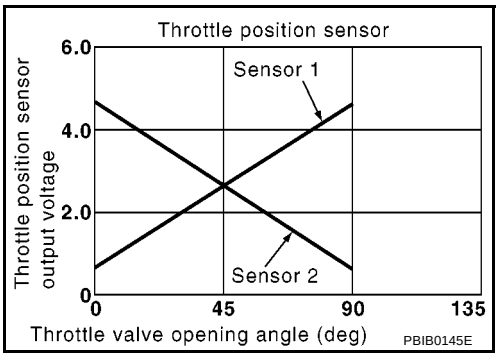

CONSULT-II Reference Value in Data Monitor Mode

EBS010CQ

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T model) 1st (M/T model)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS010CR

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2135 2135	Throttle position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	● Harness or connector (The TP sensor 1 and 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 1 and 2)

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010CS

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-423, "Diagnostic Procedure" .

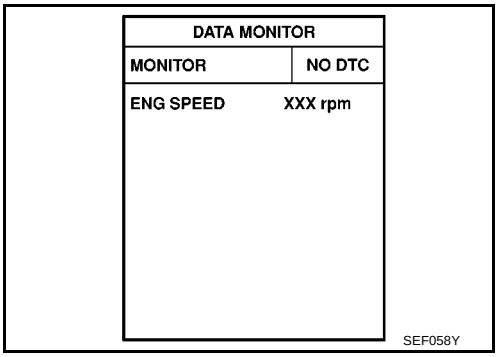

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram

EBS010CT

EC-TPS3-01

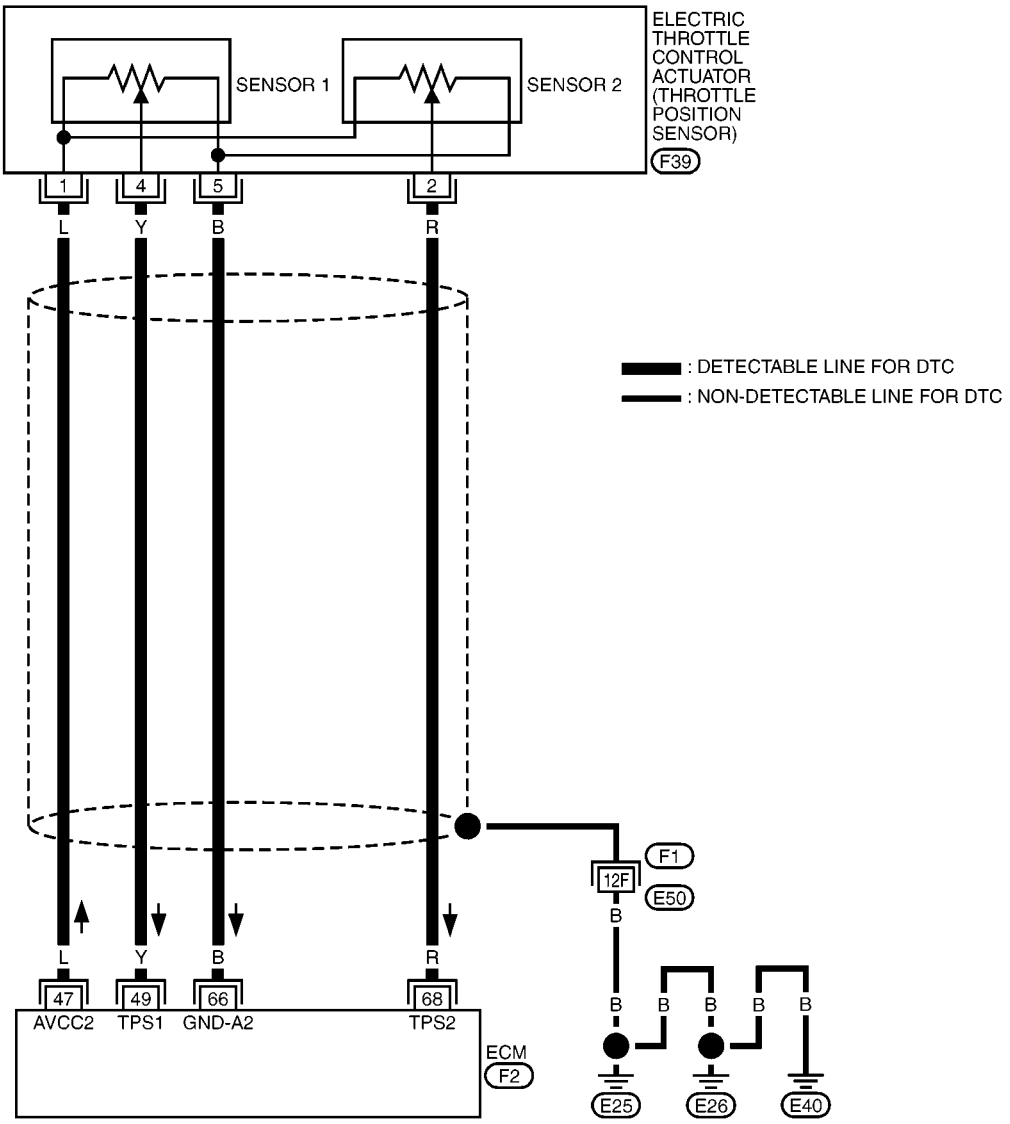

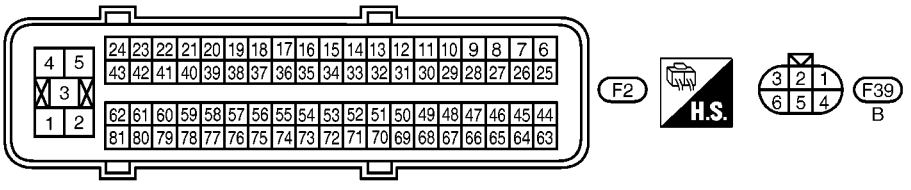

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0275E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS010CU

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

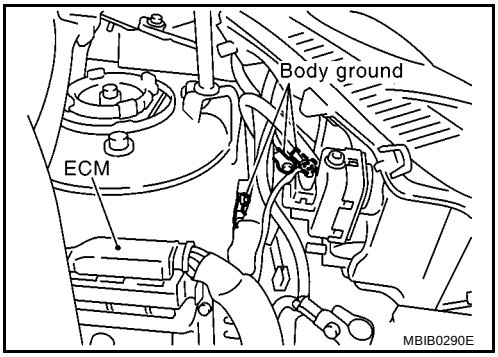

2. CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

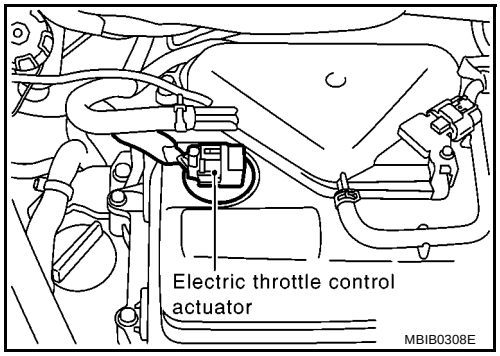

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

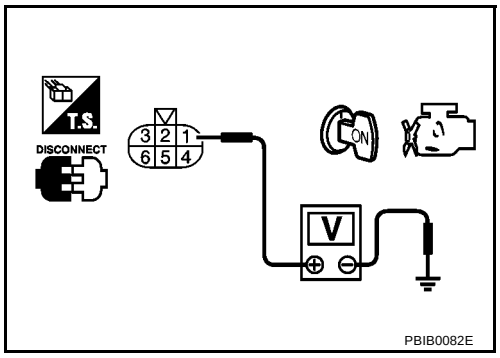

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 49 and electric throttle control actuator terminal 4, ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-425, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010CV

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-42, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

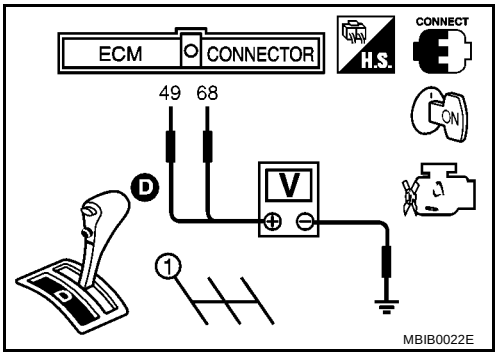

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-42, "Throttle Valve Closed Position Learning" .
8. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS010CW

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P2138 APP SENSOR

PFP:18002

Component Description

EBS010CX

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

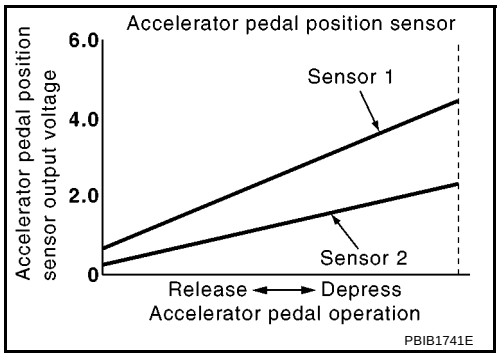

CONSULT-II Reference Value in Data Monitor Mode

EBS010CY

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS010CZ

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2138 2138	Accelerator pedal position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	● Harness or connector (The APP sensor 1 and 2 circuit is open or shorted.) ● Accelerator pedal position sensor 1 and 2

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010D0

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-431, "Diagnostic Procedure" .

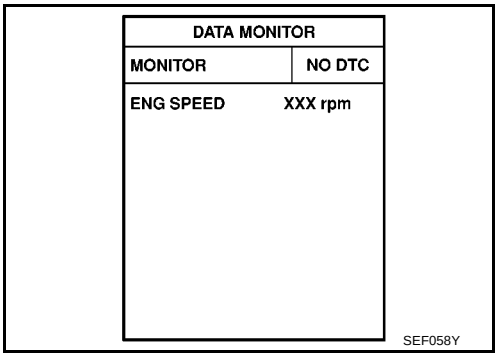

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Wiring Diagram
LHD MODELS

EBS010D1

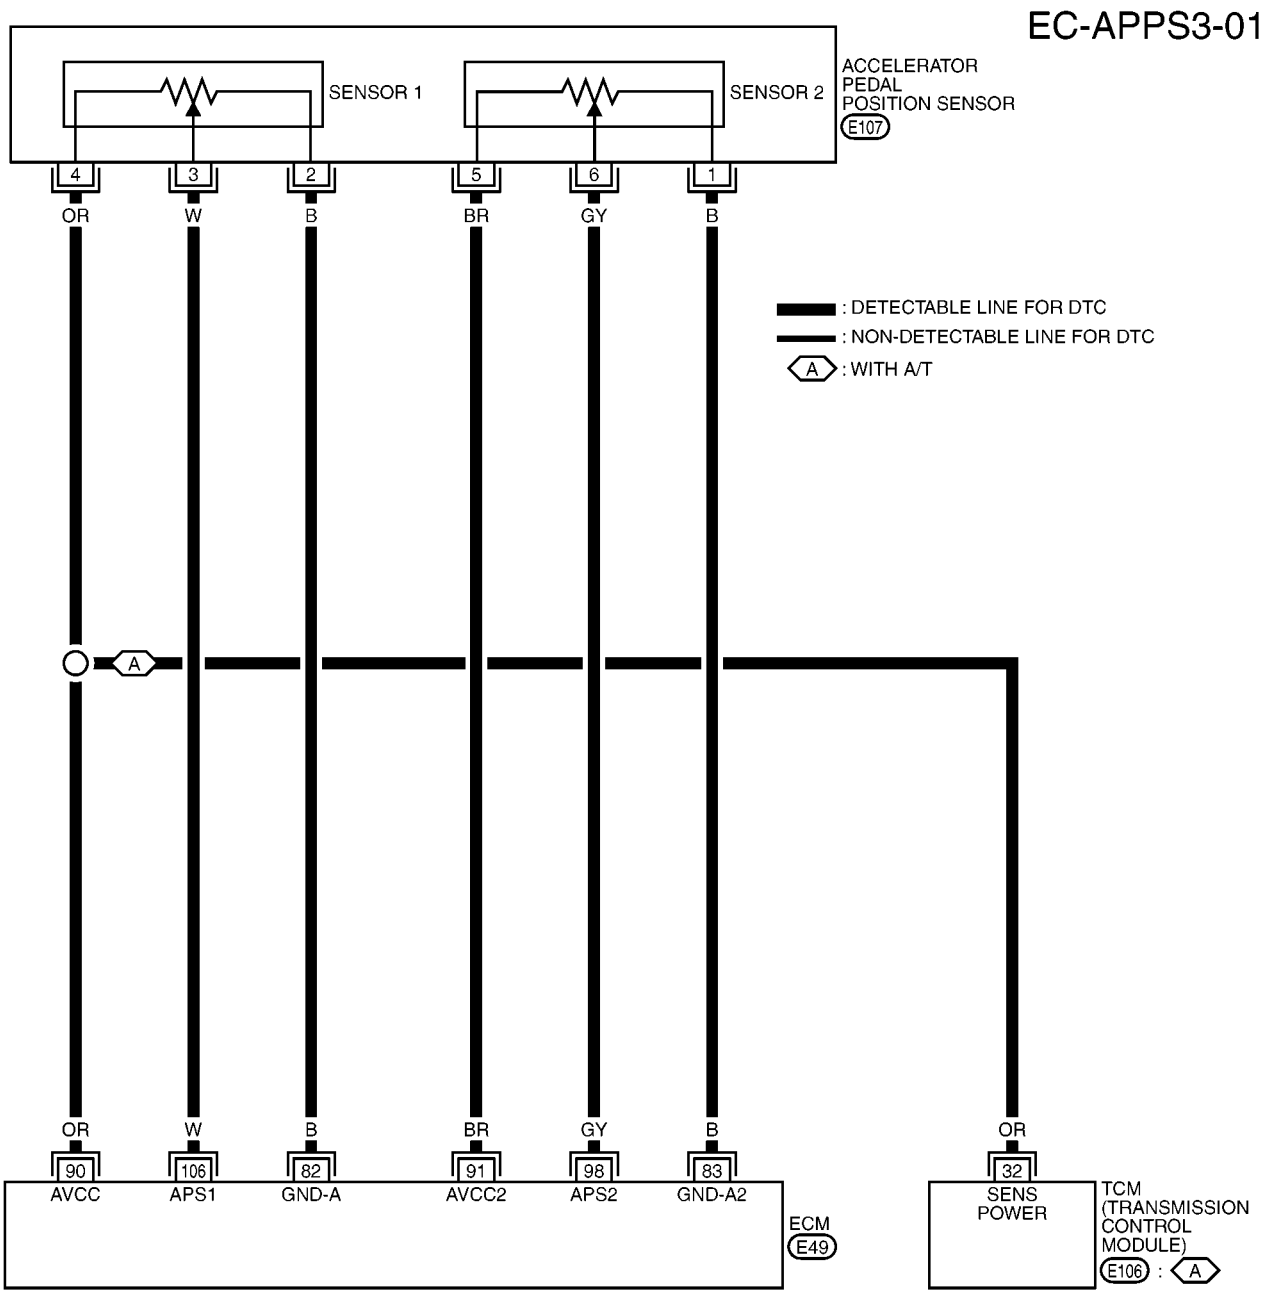

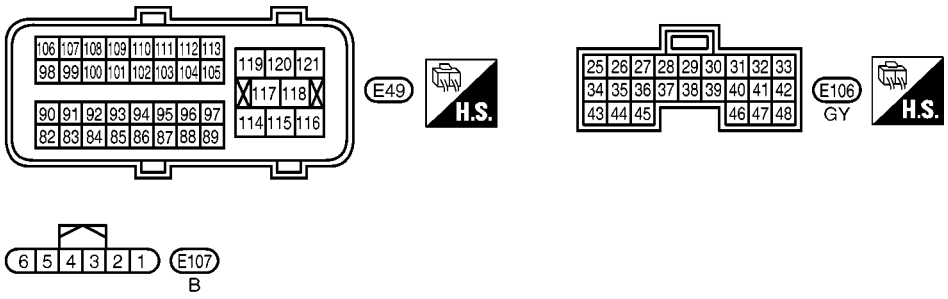

MBWA0277E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS3-02

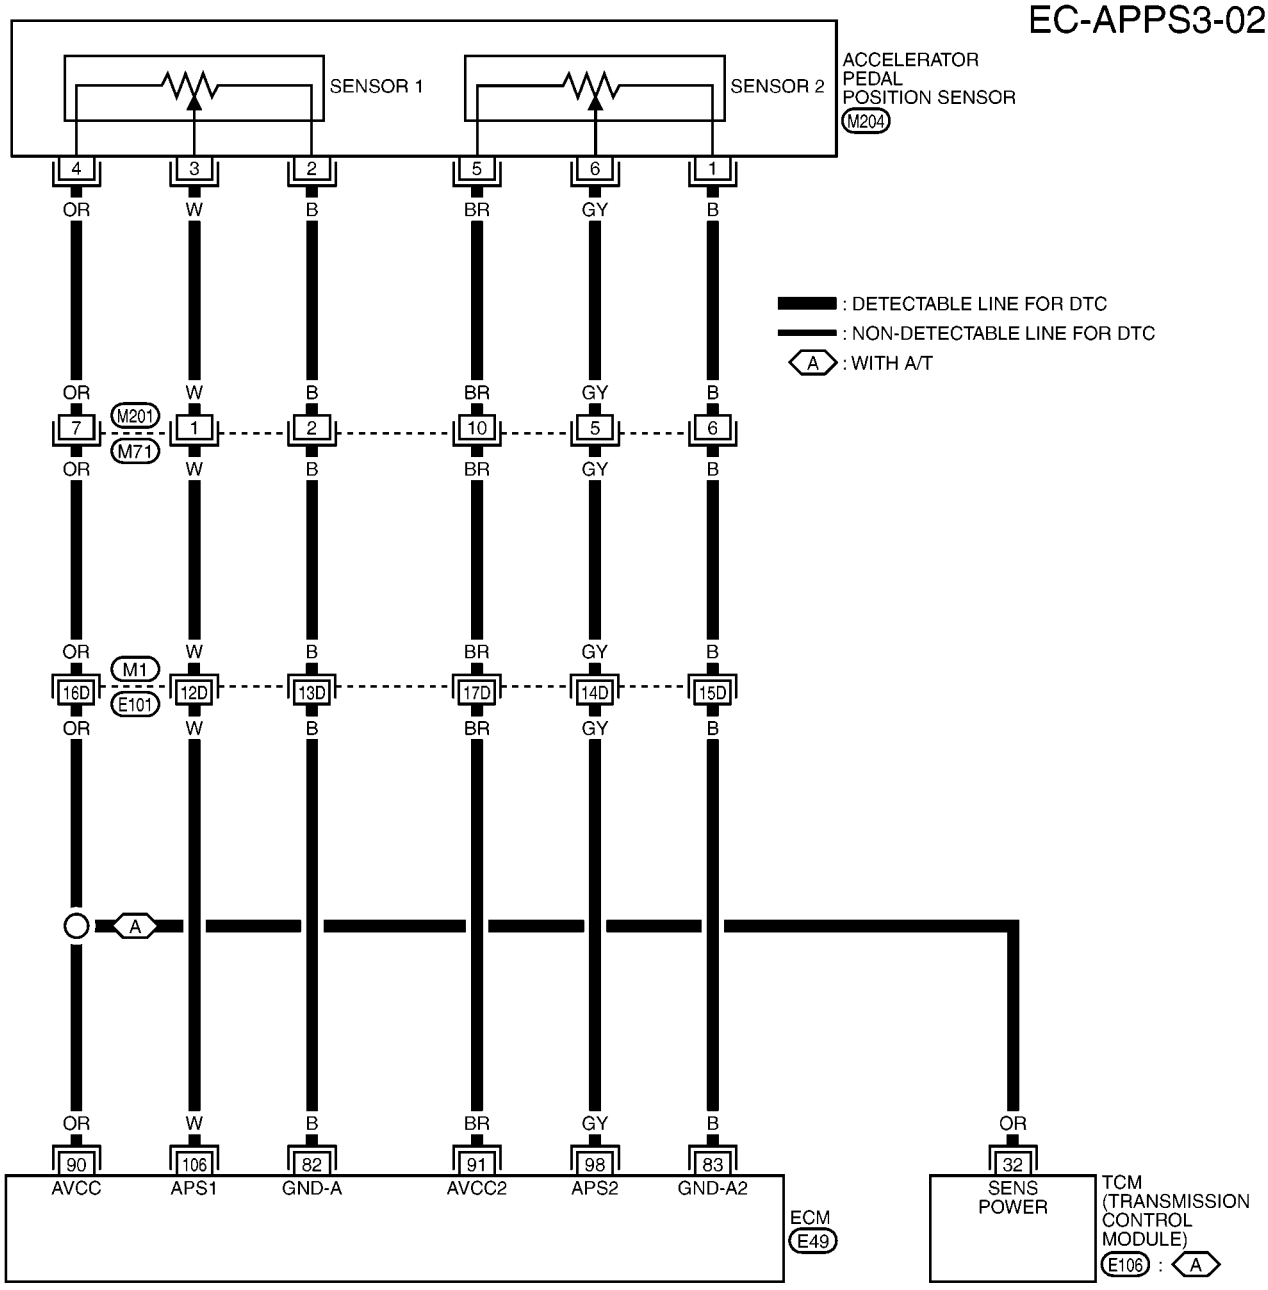

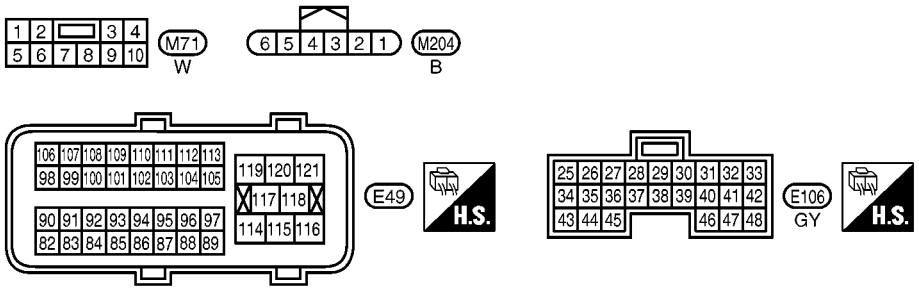

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0278E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS010D2

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

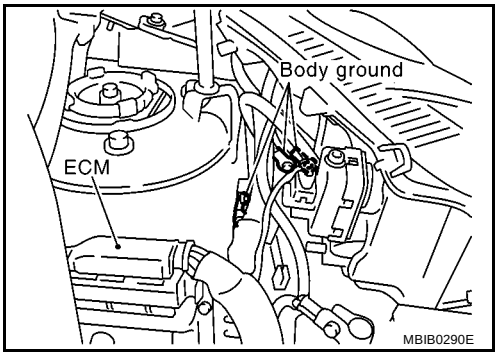

2. CHECK APP SENSOR POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

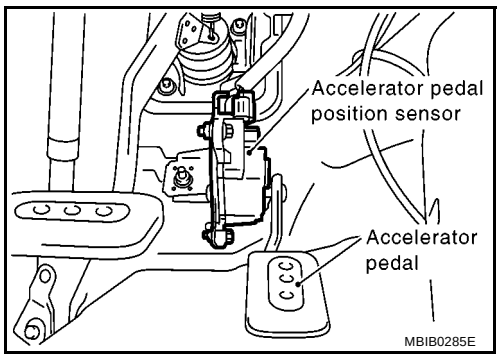

3. Check voltage between APP sensor terminals 4, 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

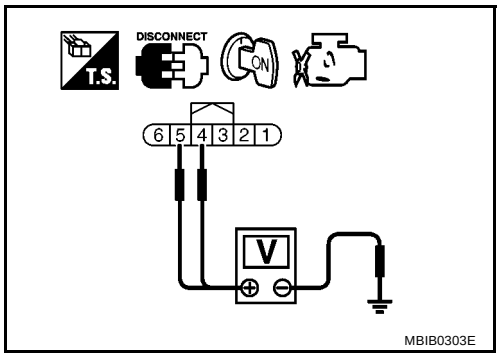

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2, ECM terminal 83 and APP sensor terminal 1.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3, ECM terminal 98 and APP sensor terminal 6.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-434, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-42, "Accelerator Pedal Released Position Learning" .
3. Perform EC-42, "Throttle Valve Closed Position Learning" .
4. Perform EC-42, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010D3

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.
3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

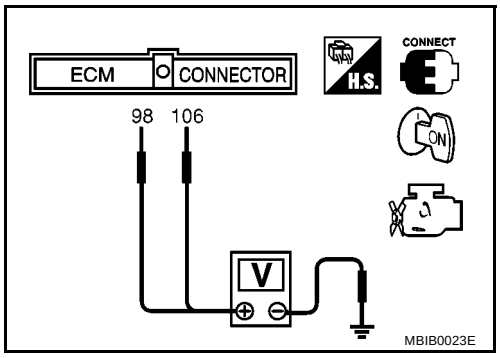

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-42, "Accelerator Pedal Released Position Learning" .
6. Perform EC-42, "Throttle Valve Closed Position Learning" .
7. Perform EC-42, "Idle Air Volume Learning" .

Remove and Installation

EBS010D4

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

IGNITION SIGNAL

PFP:22448

Component Description

EBS00OCI

IGNITION COIL & POWER TRANSISTOR

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns on and off the ignition coil primary circuit. This on-off operation induces the proper high voltage in the coil secondary circuit.

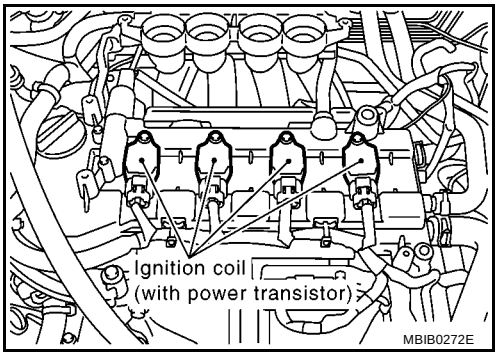

Wiring Diagram

EBS00OCJ

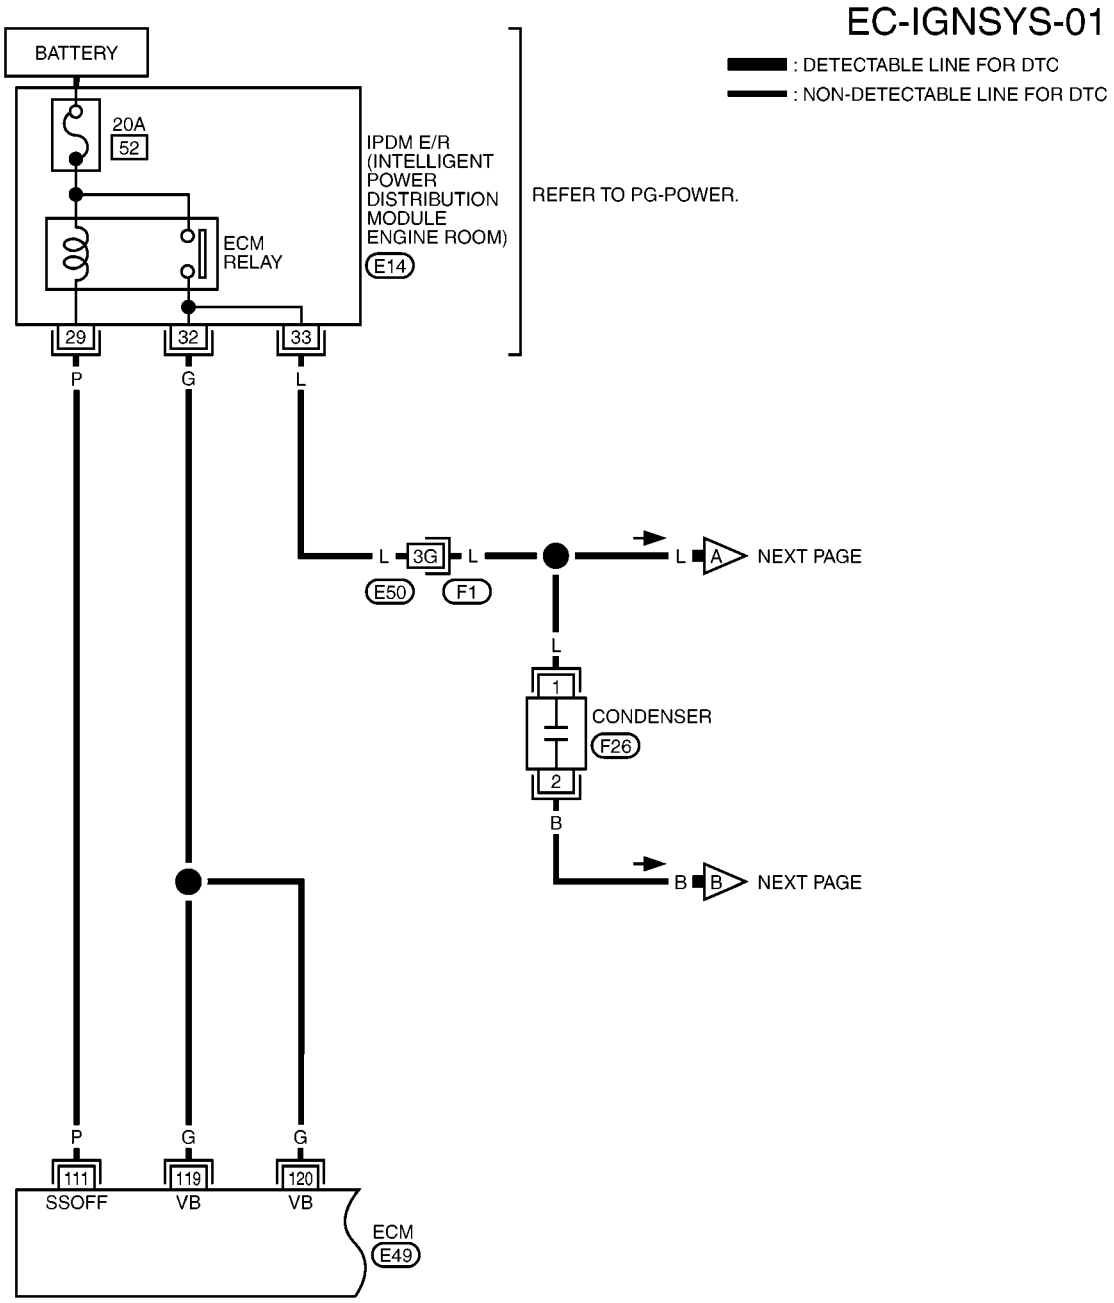



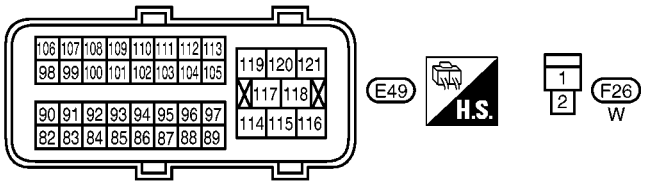

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0296E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
111	P	ECM relay (Self shut-off)	**[Engine is running]** **[Ignition switch OFF]** ● For a few seconds after turning ignition switch OFF	0 - 1.0V
			[Ignition switch OFF] ● More than a few seconds passed after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
119 120	G	Power supply for ECM	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)

EC-IGNSYS-02

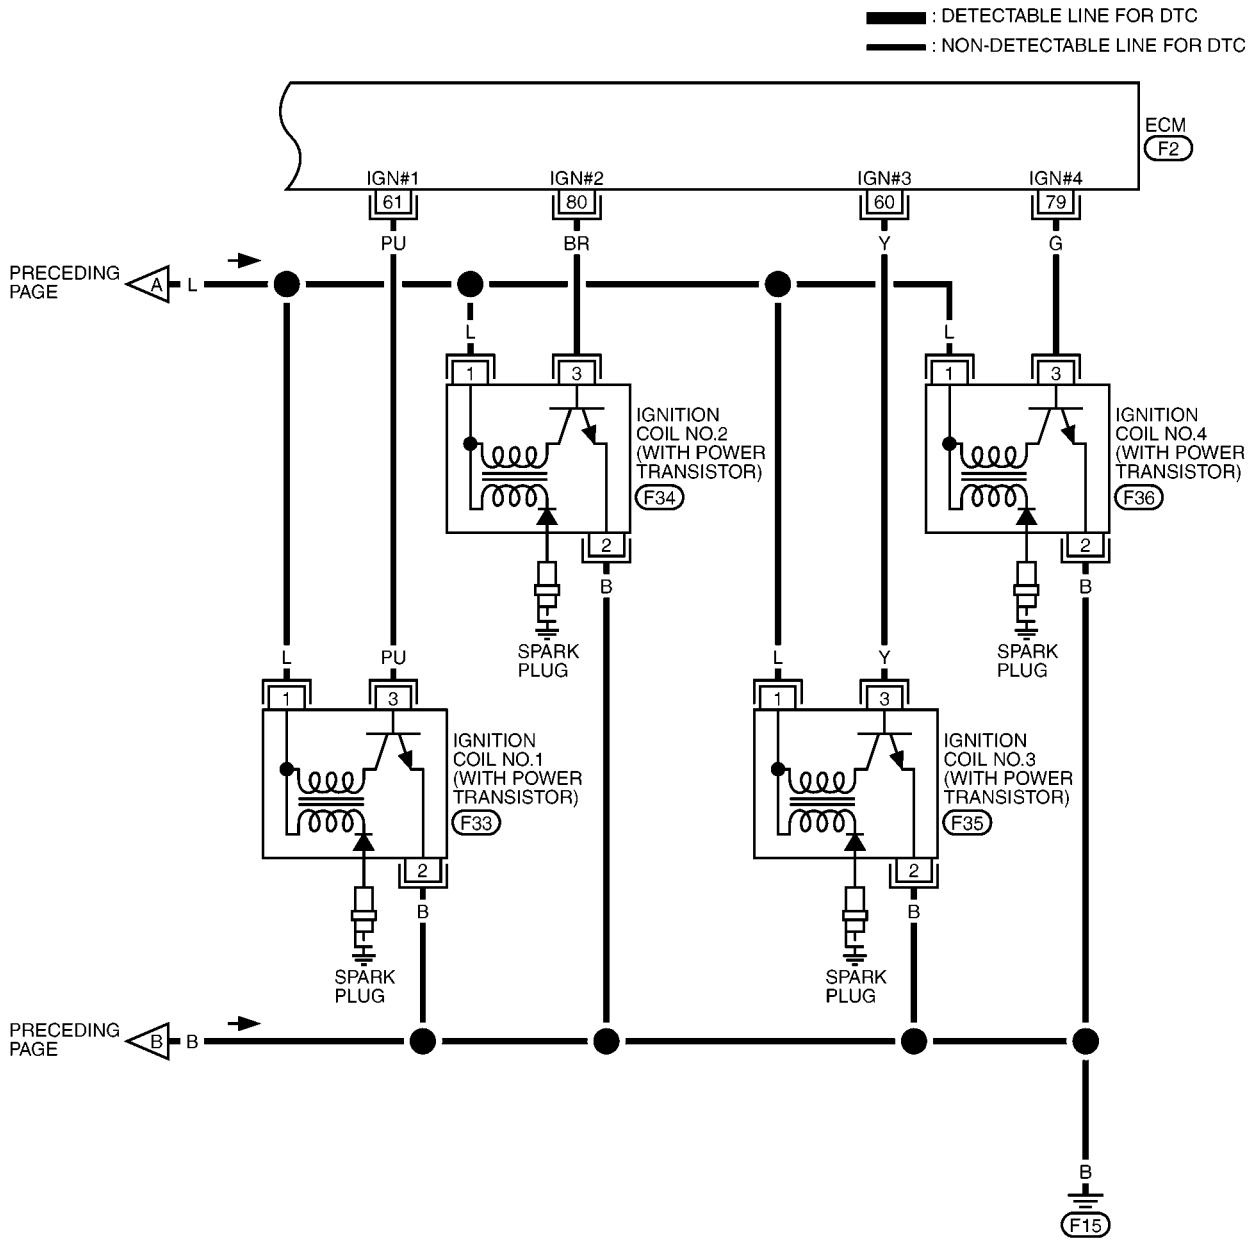

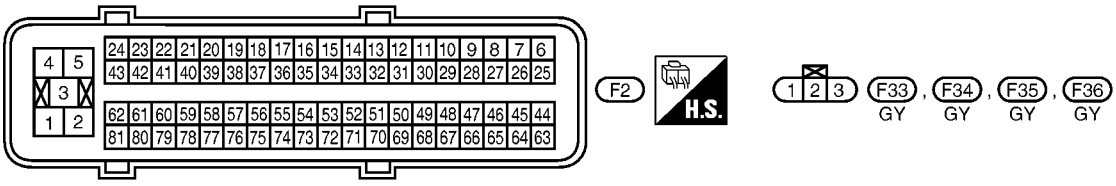

MBWA0297E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
60 61 79 80	Y PU G BR	Ignition signal No. 3 Ignition signal No. 1 Ignition signal No. 4 Ignition signal No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	0 - 0.1V★ 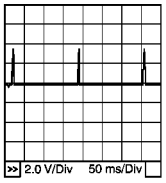 PBIB0521E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - 0.2V★ 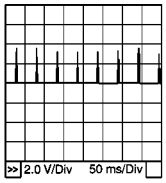 PBIB0522E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OCK

1. CHECK ENGINE START

Turn ignition switch OFF, and restart engine.
Is engine running?

Yes or No

Yes (With CONSULT-II)>>GO TO 2.
Yes (Without CONSULT-II)>>GO TO 3.
No >> GO TO 4.

2. CHECK OVERALL FUNCTION

With CONSULT-II

1. Perform “POWER BALANCE” in “ACTIVE TEST” mode with CONSULT-II.
2. Make sure that each circuit produces a momentary engine speed drop.

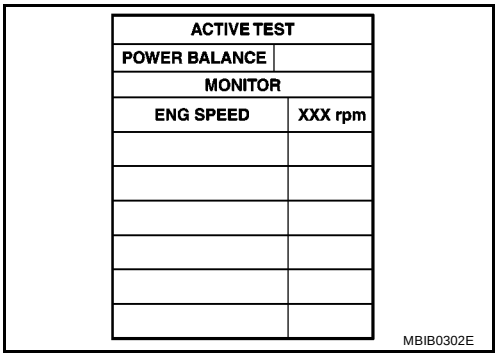

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 9.

3. CHECK OVERALL FUNCTION

Without CONSULT-II

1. Let engine idle.
2. Read the voltage signal between ECM terminals 60, 61, 79, 80 and ground with an oscilloscope.
3. Verify that the oscilloscope screen shows the signal wave as shown in the figure.

NOTE:
The pulse cycle changes depending on rpm at idle.

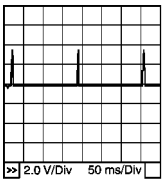

PBIB0521E

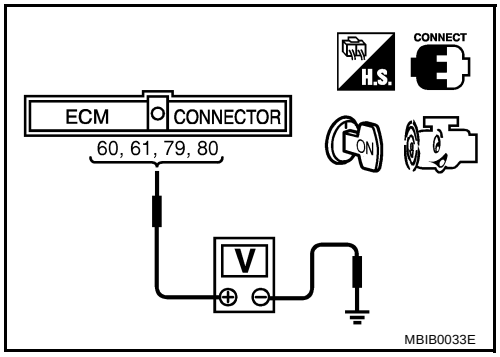

MBIB0033E

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 9.

4. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
2. Check voltage between ECM terminals 119, 120 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 5.
NG >> Go to EC-125, "POWER SUPPLY CIRCUIT FOR ECM"
.

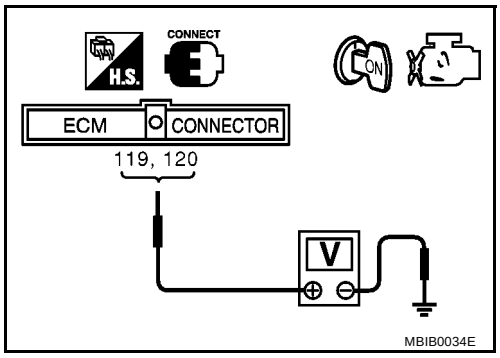

MBIB0034E

5. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect condenser harness connector.
3. Turn ignition switch ON.
4. Check voltage between condenser terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

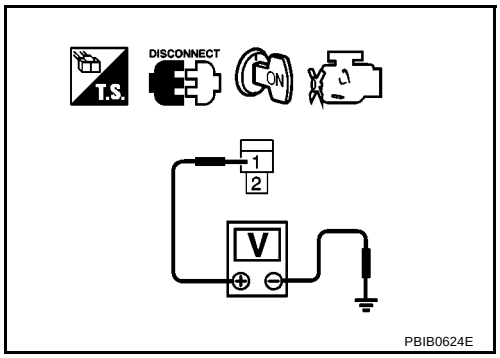

PBIB0624E

6. DETECT MALFUNCTION PART

Check the following.

- IPDM E/R harness connector E14
- Harness connectors E50, F1
- Harness for open or short between IPDM E/R and condenser

>> Repair or replace

7. CHECK CONDENSER GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between condenser terminal 2 and ground. Refer to Wiring diagram.

Continuity should exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 8.
NG >> Repair open circuit or short to power in harness or connector.

8. CHECK CONDENSER

Refer to EC-442, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace condenser.

9. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-V

1. Turn ignition switch OFF.
2. Reconnect all harness connectors disconnected.
3. Disconnect ignition coil harness connector.
4. Turn ignition switch ON.

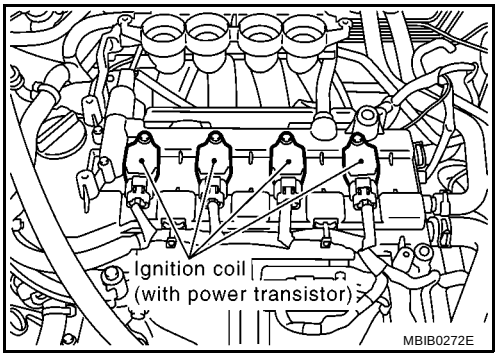

5. Check voltage between ignition coil terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 11.
NG >> GO TO 10.

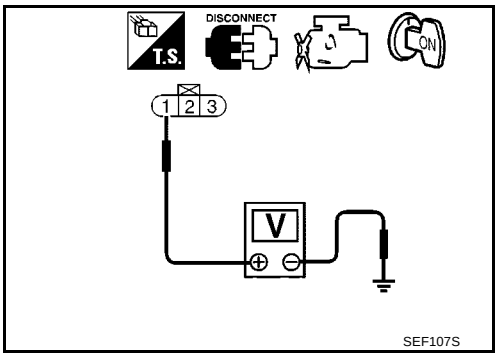

10. DETECT MALFUNCTIONING PART

Check harness for open or short between ignition coil and IPDM E/R.

>> Repair or replace harness or connectors.

11. CHECK IGNITION COIL GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between ignition coil terminal 2 and engine ground.
   Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 12.
NG >> Repair open circuit or short to power in harness or connectors.

12. CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminals 60, 61, 79, 80 and ignition coil terminal 3.
   Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 13.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

13. CHECK IGNITION COIL WITH POWER TRANSISTOR

Refer to EC-442, "Component Inspection" .

OK or NG

OK >> GO TO 14.
NG >> Replace ignition coil with power transistor.

14. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OCL

CONDENSER

1. Turn ignition switch OFF.
2. Disconnect condenser harness connector.

3. Check resistance between condenser terminals 1 and 2.

Resistance: Above 1 MΩ at 25°C (77°F)

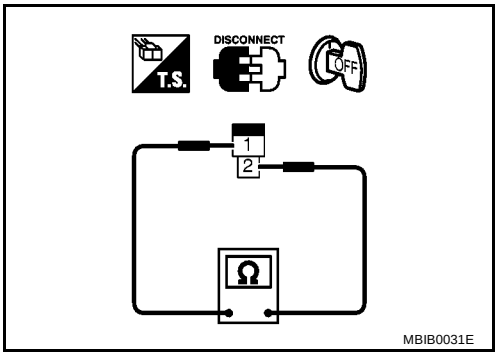

IGNITION COIL WITH POWER TRANSISTOR

1. Turn ignition switch OFF.
2. Disconnect ignition coil harness connector.
3. Check resistance between ignition coil terminals as follows.

Terminal No.	Resistance Ω [at 25°C (77°F)]
2 and 3	Except 0 or ∞
1 and 2	Except 0
1 and 3	

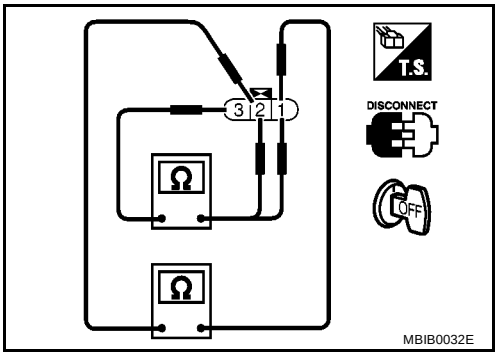

Removal and Installation

EBS00OCM

IGNITION COIL WITH POWER TRANSISTOR

Refer to EM-27, "IGNITION COIL" .

INJECTOR CIRCUIT

PFP:16600

Component Description

EBS00OCN

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

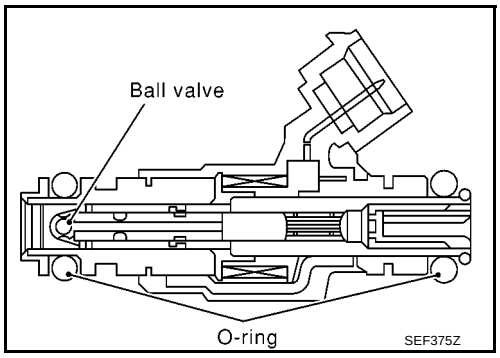

CONSULT-II Reference Value in Data Monitor Mode

EBS00OCO

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
B/FUEL SCHDL	● Engine: After warming up ● Shift lever: N (A/T), Neutral (M/T) ● Air conditioner switch: OFF ● No load	Idle	2.5 - 3.5 msec
		2,000 rpm	2.5 - 3.5 msec
INJ PULSE-B1	● Engine: After warming up ● Shift lever: N (A/T), Neutral (M/T) ● Air conditioner switch: OFF ● No load	Idle	2.0 - 3.0 msec
		2,000 rpm	1.9 - 2.9 msec

Wiring Diagram

EBS00OCP

EC-INJECT-01

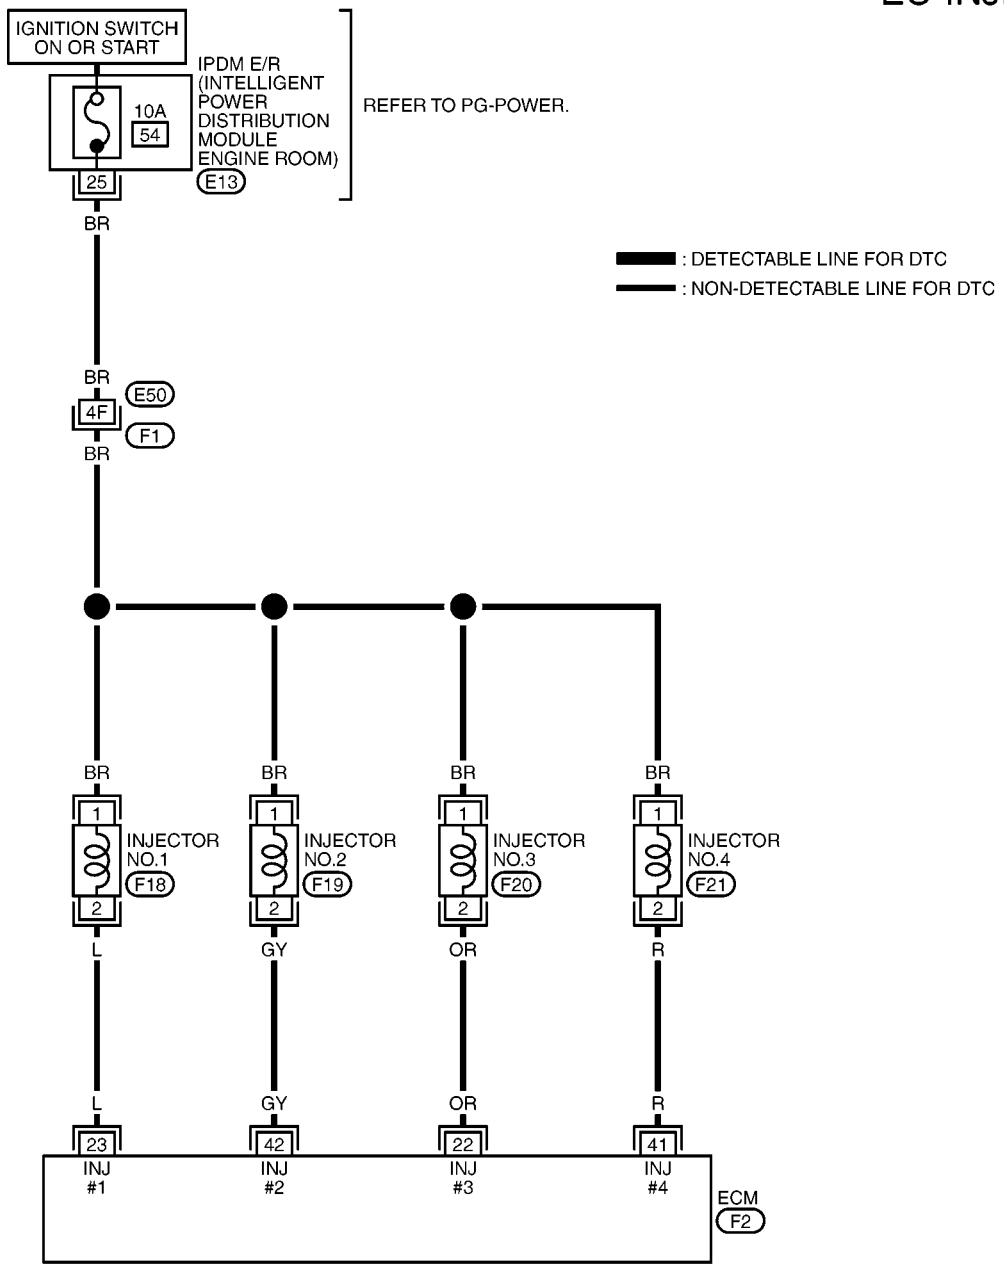

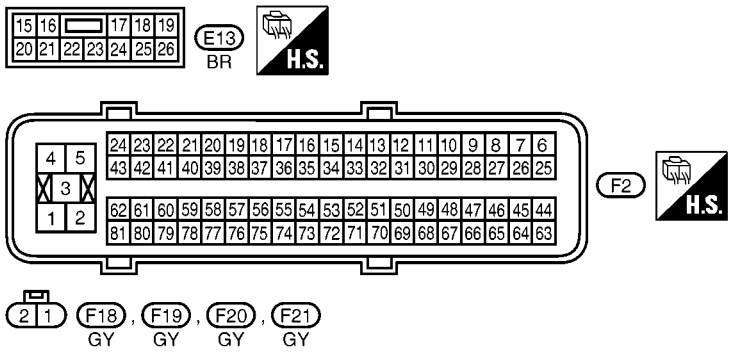

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0298E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22 23 41 42	OR L R GY	Injector No. 3 Injector No. 1 Injector No. 4 Injector No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	BATTERY VOLTAGE (11 - 14V)★ 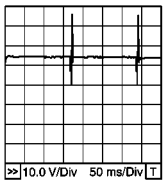 PBIB0529E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14V)★ 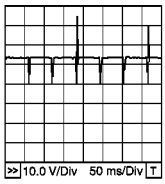 PBIB0530E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OCQ

1. INSPECTION START

Turn ignition switch to START.
Is any cylinder ignited?

Yes or No

Yes >> GO TO 2.
No >> GO TO 3.

2. CHECK OVERALL FUNCTION

With CONSULT-II

1. Start engine.
2. Perform “POWER BALANCE” in “ACTIVE TEST” mode with CONSULT-II.
3. Make sure that each circuit produces a momentary engine speed drop.

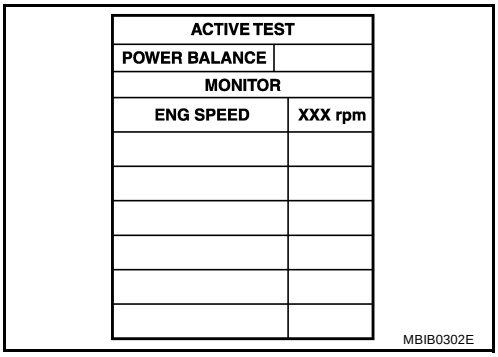

Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.
   Clicking noise should be heard.

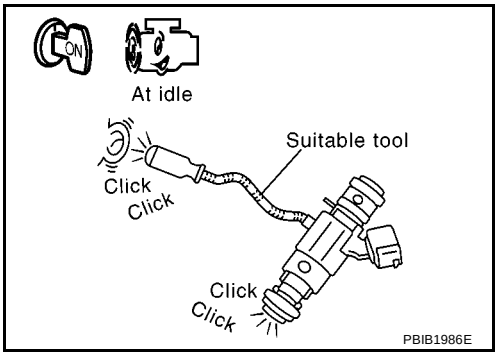

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 3.

3. CHECK INJECTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect injector harness connector.
3. Turn ignition switch ON.

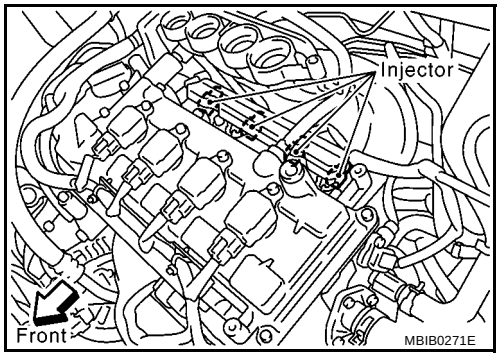

4. Check voltage between injector terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

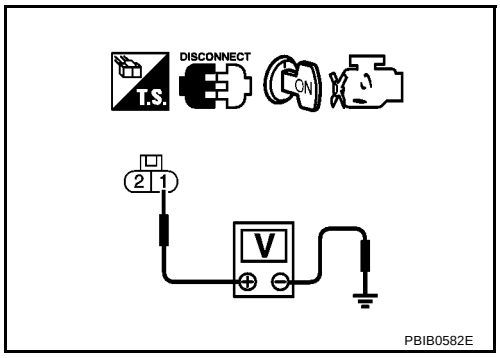

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- IPDM E/R connector E13
- 10A fuse
- Harness for open or short between injector and fuse

>> Repair harness or connectors.

5. CHECK INJECTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between injector terminal 2 and ECM terminals 22, 23, 41, 42. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK INJECTOR

Refer to EC-449, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace injector.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OCR

INJECTOR

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.

Resistance: 12.1 - 12.9Ω [at 20°C (68°F)]

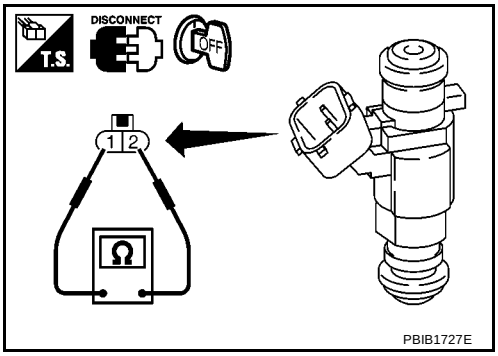

Removal and Installation

EBS00OCS

INJECTOR

Refer to EM-30, "FUEL INJECTOR AND FUEL TUBE" .

FUEL PUMP CIRCUIT

PFP:17042

Description

EBS00OCT

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*	Fuel pump control	Fuel pump relay
Battery	Battery voltage*		

*: ECM determines the start signal status by the signals of engine speed and battery voltage.

The ECM activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the ECM receives a engine speed signal from the crankshaft position sensor (POS) and camshaft position sensor (PHASE), it knows that the engine is rotating, and causes the pump to operate. If the engine speed signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 1 second.
Engine running and cranking	Operates.
When engine is stopped	Stops in 1.5 seconds.
Except as shown above	Stops.

COMPONENT DESCRIPTION

A turbine type design fuel pump is used in the fuel tank.

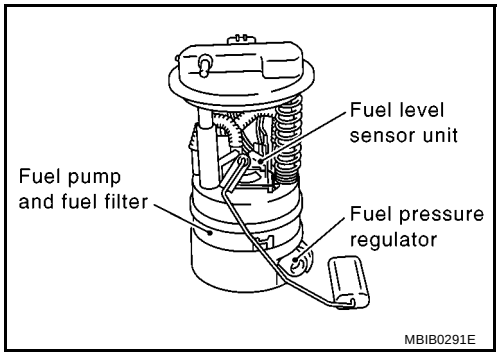

CONSULT-II Reference Value in Data Monitor Mode

EBS00OCU

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	● For 1 second after turning ignition switch ON ● Engine running or cranking	ON
	● Except above conditions	OFF

Wiring Diagram

SMA for VIN >SJN**AK12U1309269

EBS00OCV

EC-F/PUMP-01

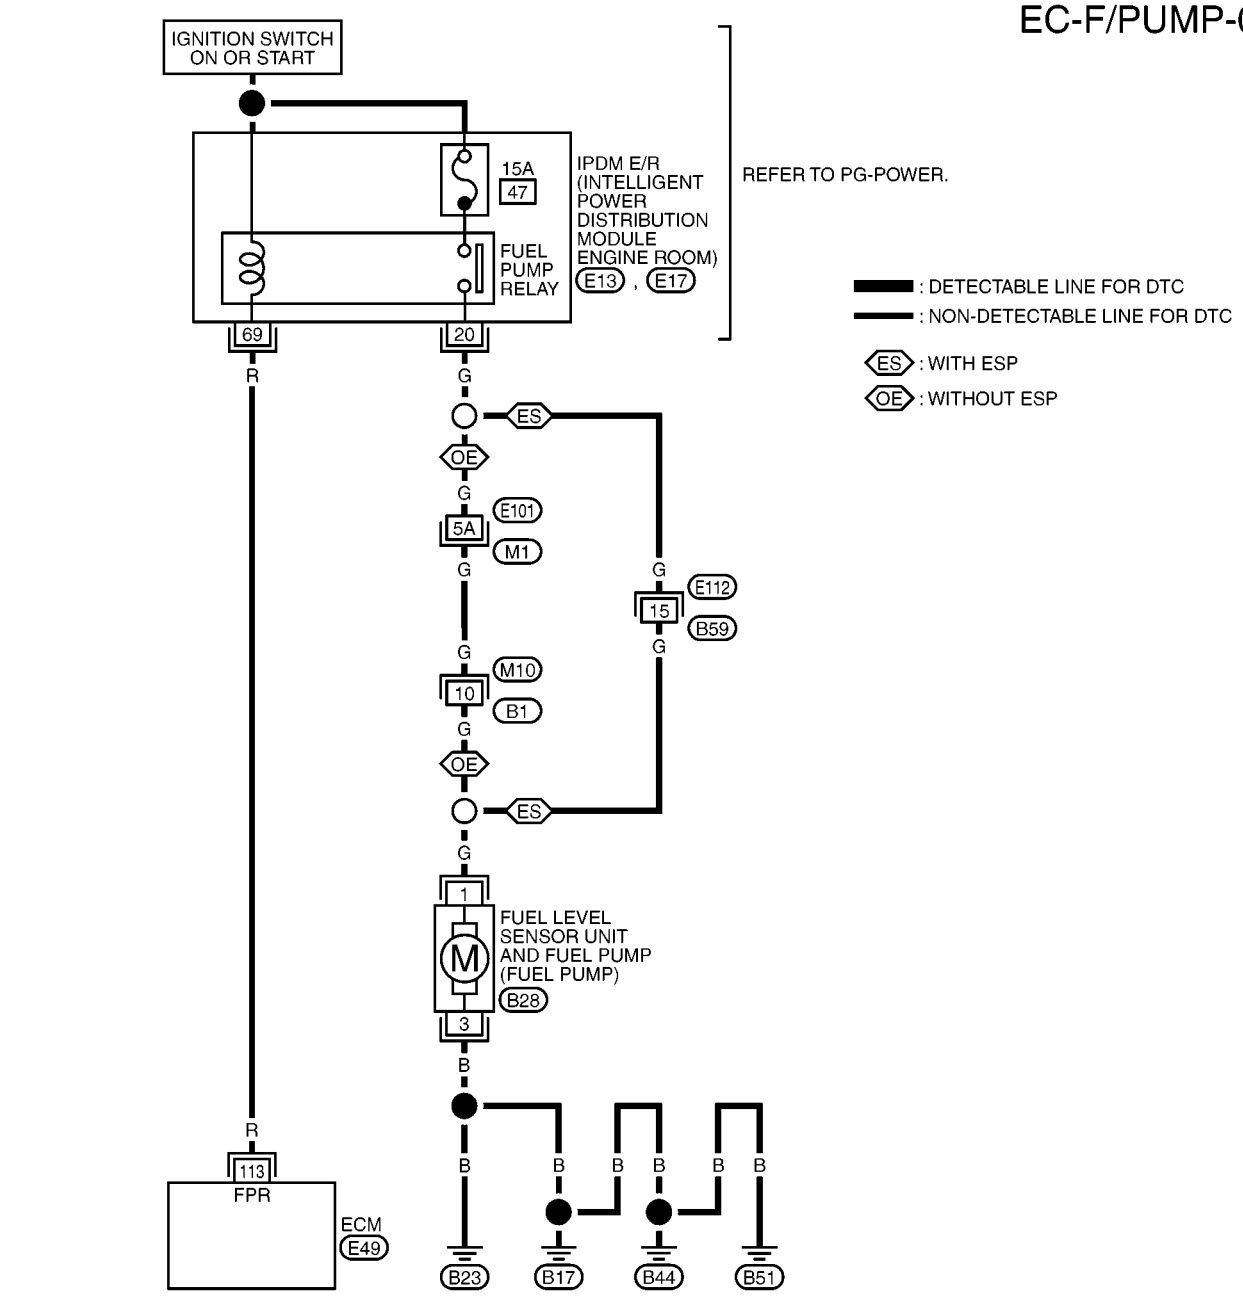

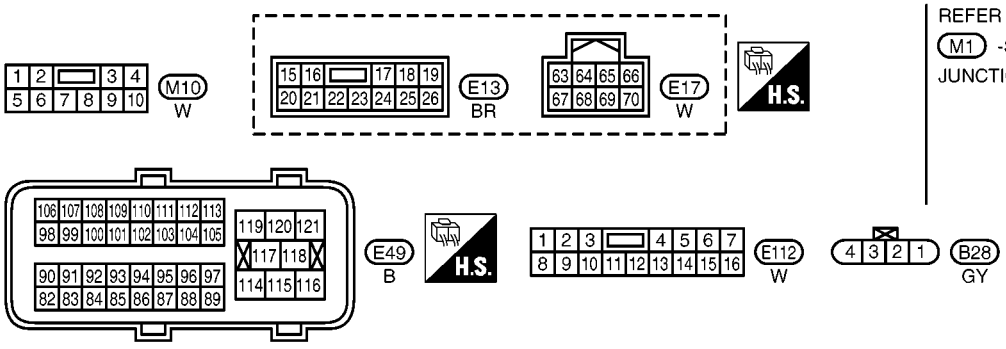

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0575E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
113	R	Fuel pump relay	**[Ignition switch ON]** ● For 1 second after turning ignition switch ON **[Engine is running]**	0 - 1.0V
			[Ignition switch ON] ● More than 1 second after turning ignition switch ON	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

SMA for VIN >SJN**AK12U1309269 EBS00OCW

1. CHECK OVERALL FUNCTION

1. Turn ignition switch ON.
2. Pinch fuel feed hose with two fingers.
   Fuel pressure pulsation should be felt on the fuel hose for 1 second after ignition switch is turned ON.

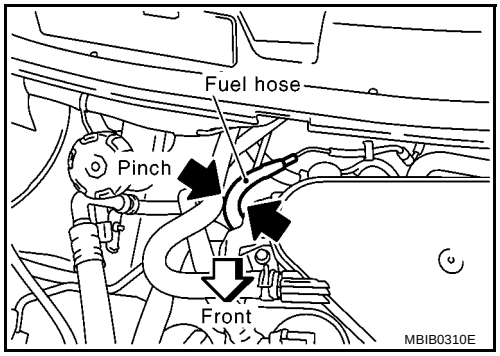

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK FUEL PUMP RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Turn ignition switch ON.
4. Check voltage between ECM terminals 113 and ground with CONSULT-II or tester.

Voltage: Battery voltage

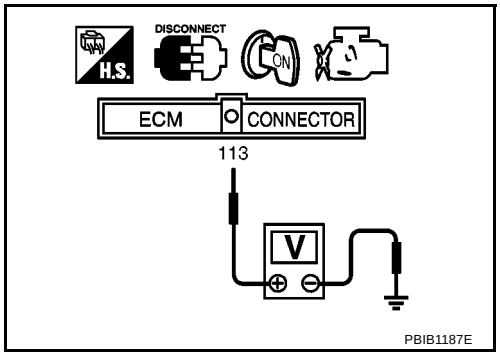

OK or NG

OK >> GO TO 5.
NG >> GO TO 3.

3. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E17.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R terminal 69 and ground with CONSULT-II or tester.

Voltage: Battery voltage

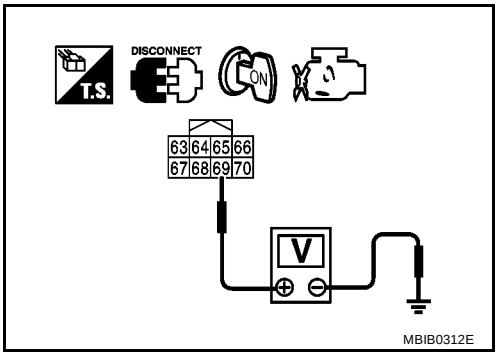

OK or NG

OK >> GO TO 4.
NG >> GO TO 9.

4. DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R connector E17
- Harness for open or short between IPDM E/R and ECM

>> Repair harness or connectors.

5. CHECK FUEL PUMP POWER SUPPLY AND GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect “fuel level sensor unit and fuel pump” harness connector.
3. Check harness continuity between PDM E/R connector E13 terminal 20 and “fuel level sensor unit and fuel pump” terminal 1, “fuel level sensor unit and fuel pump” terminal 3 and body ground.
   Refer to Wiring Diagram.

Continuity should exist.

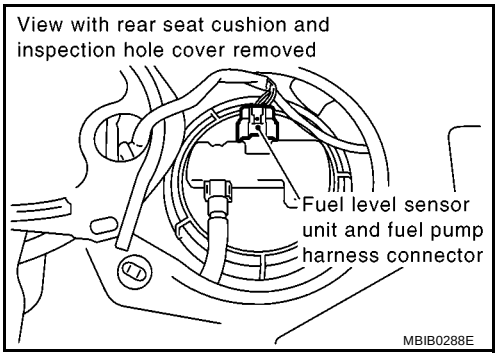

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B59, E112 (Models with ESP)
- Harness connectors M1, E101 (Models without ESP)
- Harness connectors B1, M10 (Models without ESP)
- Harness for open or short between “fuel level sensor unit and fuel pump” and IPDM E/R
- Harness for open or short between “fuel level sensor unit and fuel pump” and body ground

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK FUEL PUMP RELAY OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal 113 and IPDM E/R connector E1 terminal 69. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> Repair open or short between ECM and IPDM E/R.

8. CHECK FUEL PUMP

Refer to EC-454, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace fuel pump.

9. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R
NG >> Repair or replace harness or connector
>> **INSPECTION END**

Component Inspection

EBS00OCX

FUEL PUMP

1. Disconnect “fuel level sensor unit and fuel pump” harness connector.
2. Check resistance between “fuel level sensor unit and fuel pump” terminals 1 and 3.

Resistance: Approximately 1.0Ω [at 25°C (77°F)]

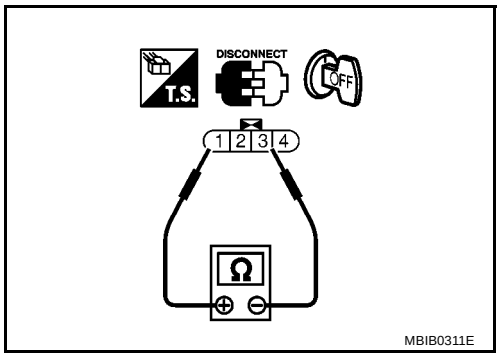

Removal and Installation

EBS00OCY

FUEL PUMP

Refer to FL-4, "FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY" .

REFRIGERANT PRESSURE SENSOR

PFP:92136

Component Description

EBS00OCZ

The refrigerant pressure sensor is installed at the liquid tank of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

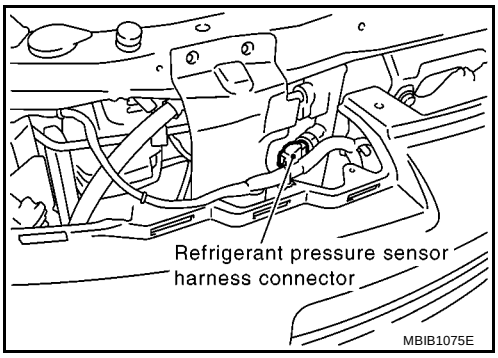

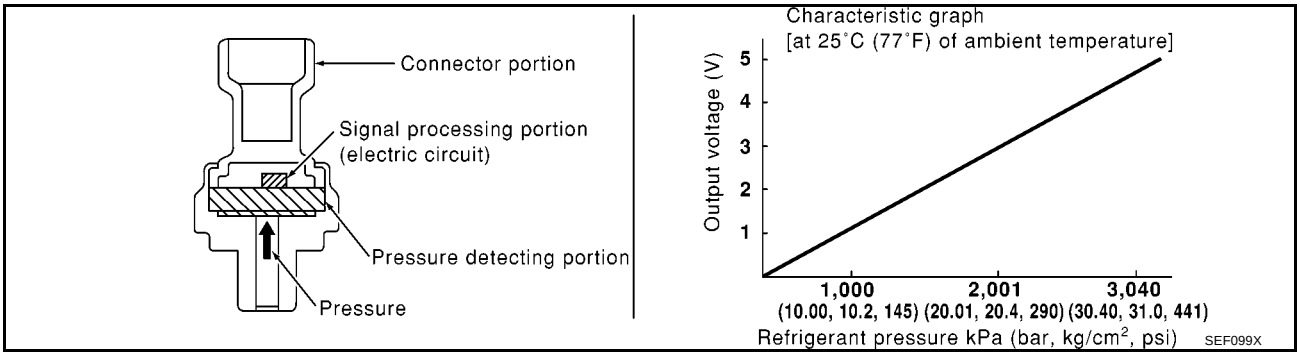

Wiring Diagram

EBS00OD0

EC-RP/SEN-01

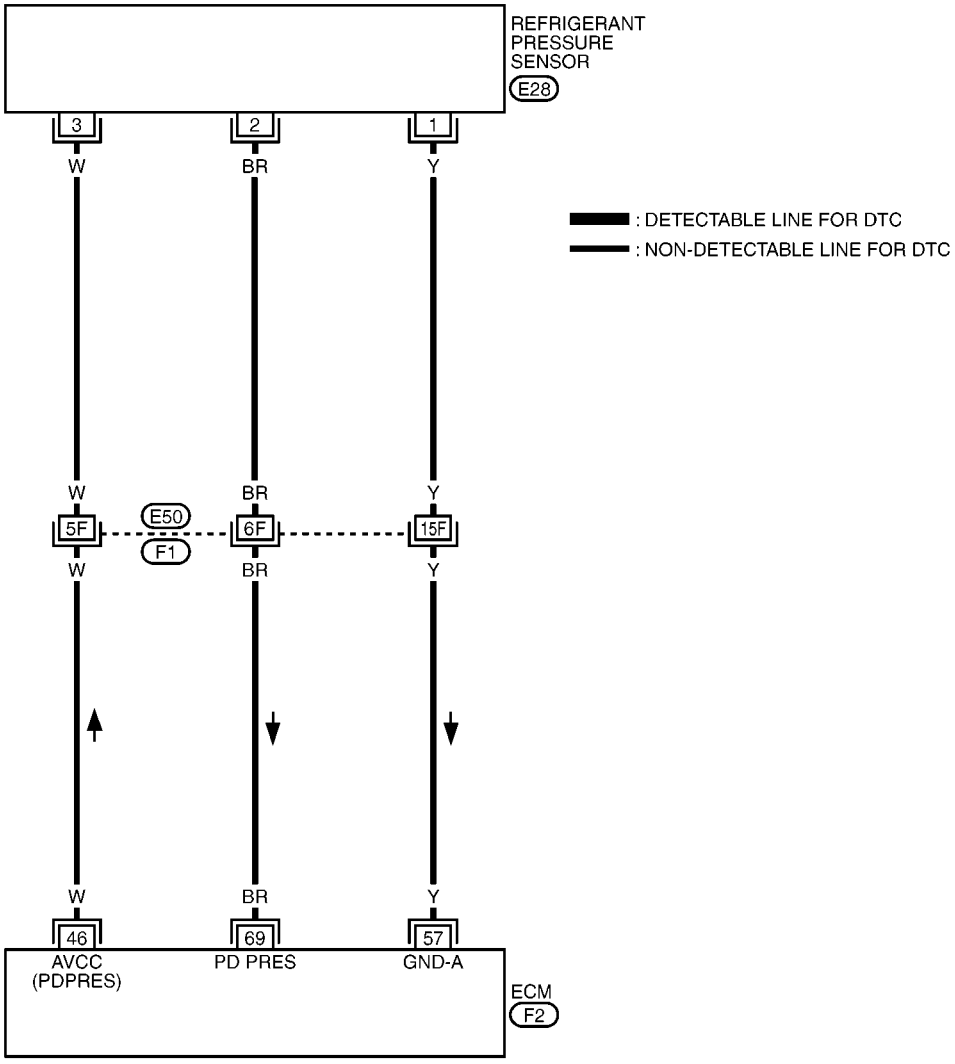



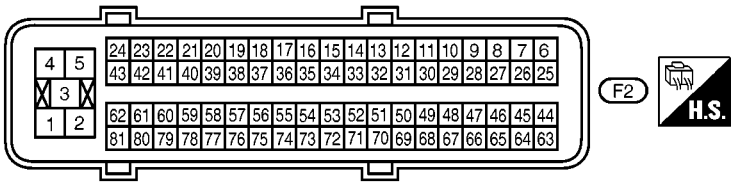

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0300E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
46	W	Sensor power supply (Refrigerant pressure sensor)	**[Ignition switch ON]**	Approximately 5V
57	Y	Sensor ground (Refrigerant pressure sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
69	BR	Refrigerant pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Both A/C switch and blower switch are ON. (Compressor operates.)	1.0 - 4.0V

Diagnostic Procedure

EBS00OD1

1. CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION

1. Start engine and warm it up to normal operating temperature.
2. Turn A/C switch and blower switch ON.
3. Check voltage between ECM terminal 69 and ground with CONSULT-II or tester.

Voltage: 1.0 - 4.0V

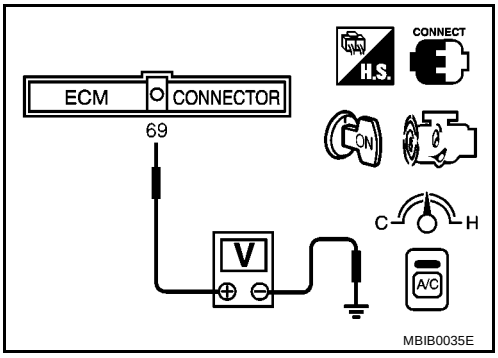

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT

1. Turn A/C switch and blower switch OFF.
2. Stop engine.
3. Disconnect refrigerant pressure sensor harness connector.
4. Turn ignition switch ON.

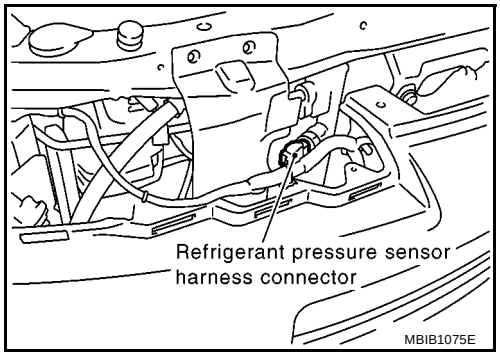

5. Check voltage between refrigerant pressure sensor terminal 3 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

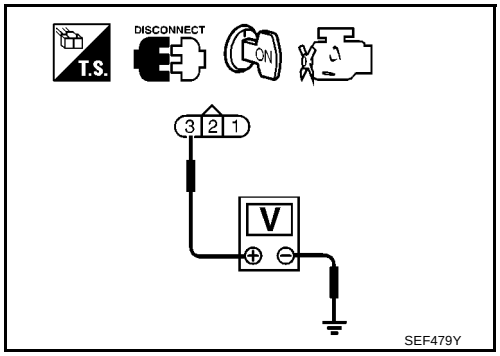

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair harness or connectors.

4. CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 57 and refrigerant pressure sensor terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 69 and refrigerant pressure sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-124, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace refrigerant pressure sensor.
NG >> Repair or replace.

Removal and Installation

EBS00OD2

REFRIGERANT PRESSURE SENSOR

Refer to ATC-84, "REFRIGERANT LINES" (Automatic air conditioner models) or MTC-61, "REFRIGERANT LINES" (Manual air conditioner models).

ELECTRICAL LOAD SIGNAL

PFP:25350

Description

EBS00OD3

The electrical load signal (Headlamp switch signal, rear window defogger switch signal, etc.) is transferred through the CAN communication line from IPDM E/R to ECM.

CONSULT-II Reference Value in Data Monitor Mode

EBS00OD4

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
LOAD SIGNAL	● Ignition switch: ON	Rear window defogger switch is ON and/or lighting switch is 2nd.	ON
		Rear window defogger switch is OFF and lighting switch is OFF.	OFF

Diagnostic Procedure

EBS00OD5

1. INSECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.
No >> GO TO 6.

2. CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-I

1. Turn ignition switch ON.
2. Connect CONSULT-II and select “DATA MONITOR” mode.
3. Select “LOAD SIGNAL” and check indication under the following conditions.

Condition	Indication
Rear window defogger switch ON	ON
Rear window defogger switch OFF	OFF

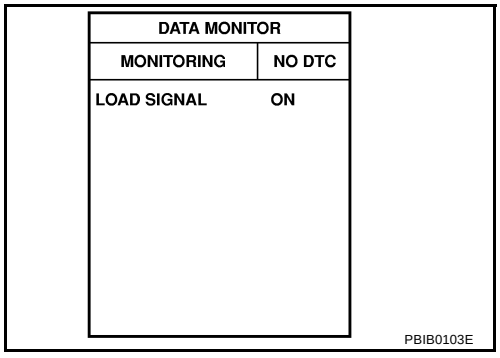

OK or NG

OK >> GO TO 3.
NG >> GO TO 4.

3. CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-II

Check “LOAD SIGNAL” indication under the following conditions.

Condition	Indication
Lighting switch ON at 2nd position	ON
Lighting switch OFF	OFF

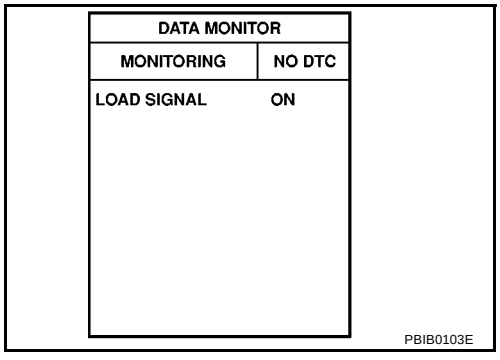

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 5.

4. CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to GW-14, "REAR WINDOW DEFOGGER" .

>> **INSPECTION END**

5. CHECK HEADLAMP SYSTEM

Refer to LT-6, "HEADLAMP -CONVENTIONAL TYPE-" or LT-42, "HEADLAMP - DAYTIME LIGHT SYSTEM - " .

>> **INSPECTION END**

6. CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to GW-14, "REAR WINDOW DEFOGGER" .

OK or NG

OK >> GO TO 7.
NG >> Repair or replace

7. CHECK HEADLAMP SYSTEM

Refer to LT-6, "HEADLAMP -CONVENTIONAL TYPE-" or LT-42, "HEADLAMP - DAYTIME LIGHT SYSTEM - " .

>> **INSPECTION END**

MI & DATA LINK CONNECTORS

PFP:24814

Wiring Diagram (LHD Models)

EBS00OD6

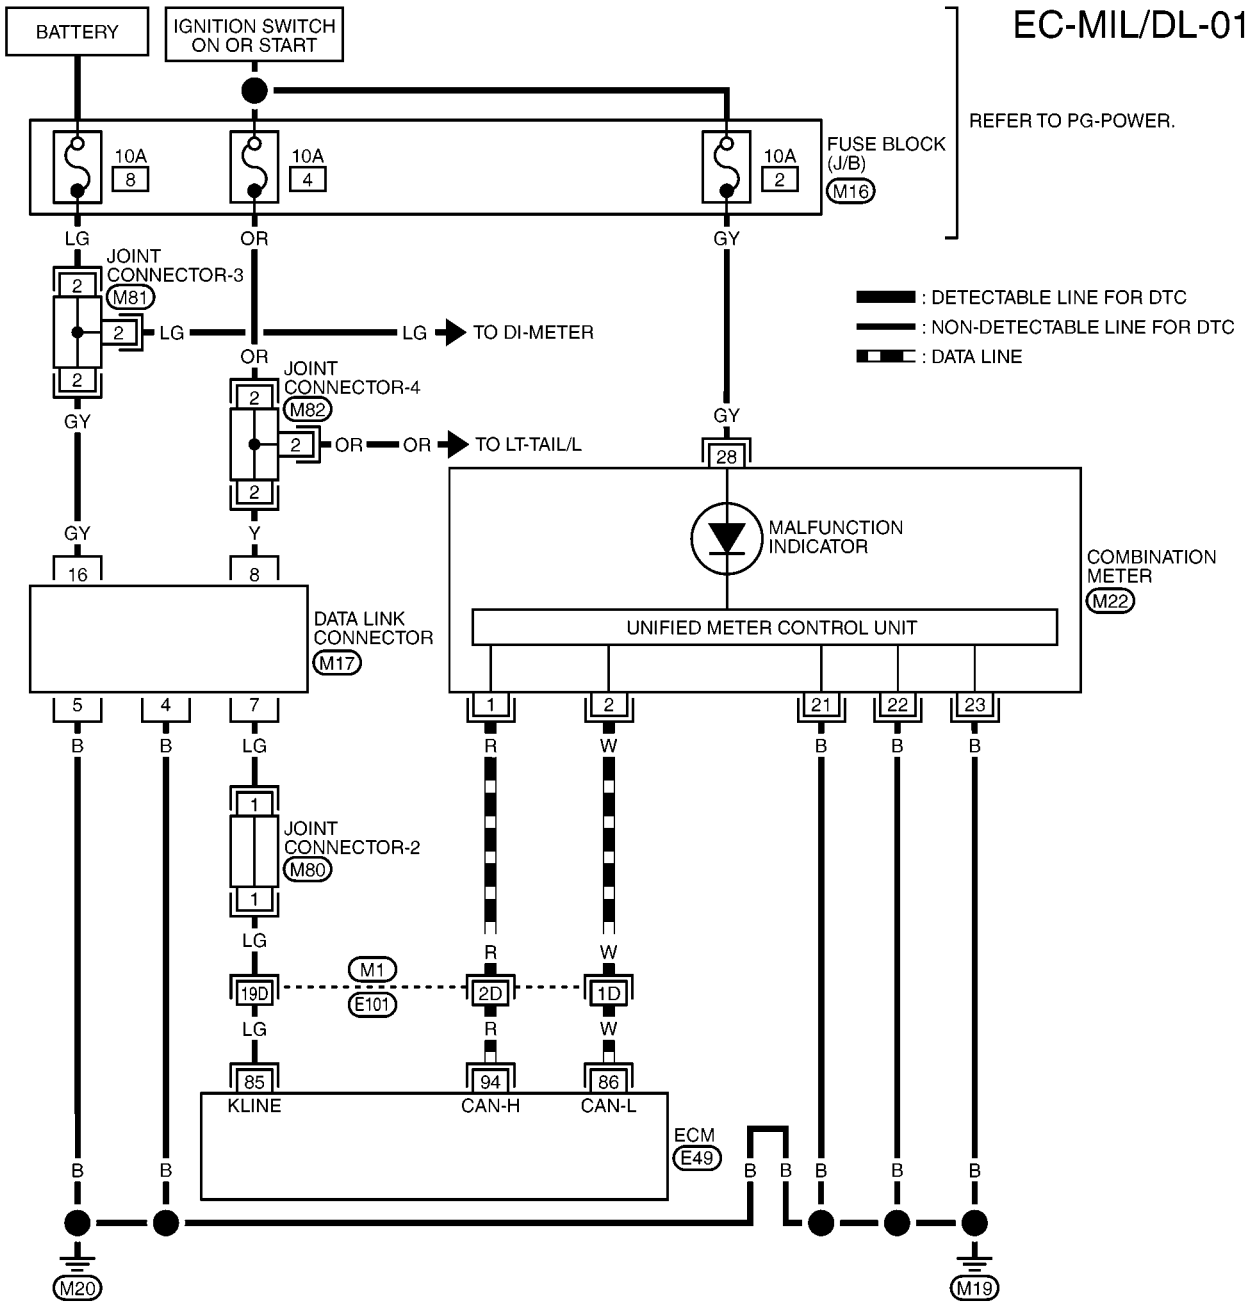

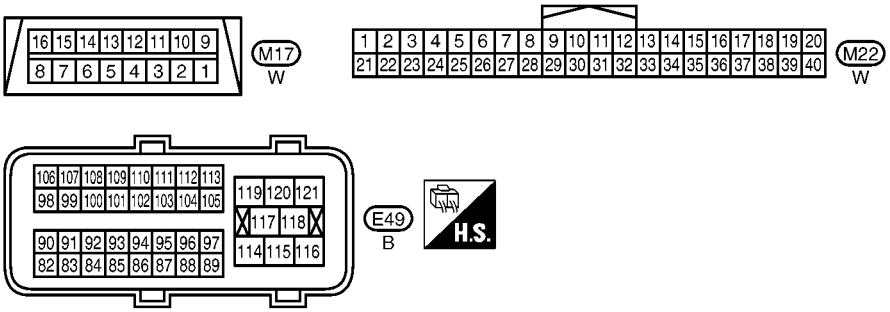

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)
M80 , M81 , M82 -JOINT CONNECTOR (J/C)

MBWA0576E

Wiring Diagram (RHD Models)

EBS00OD7

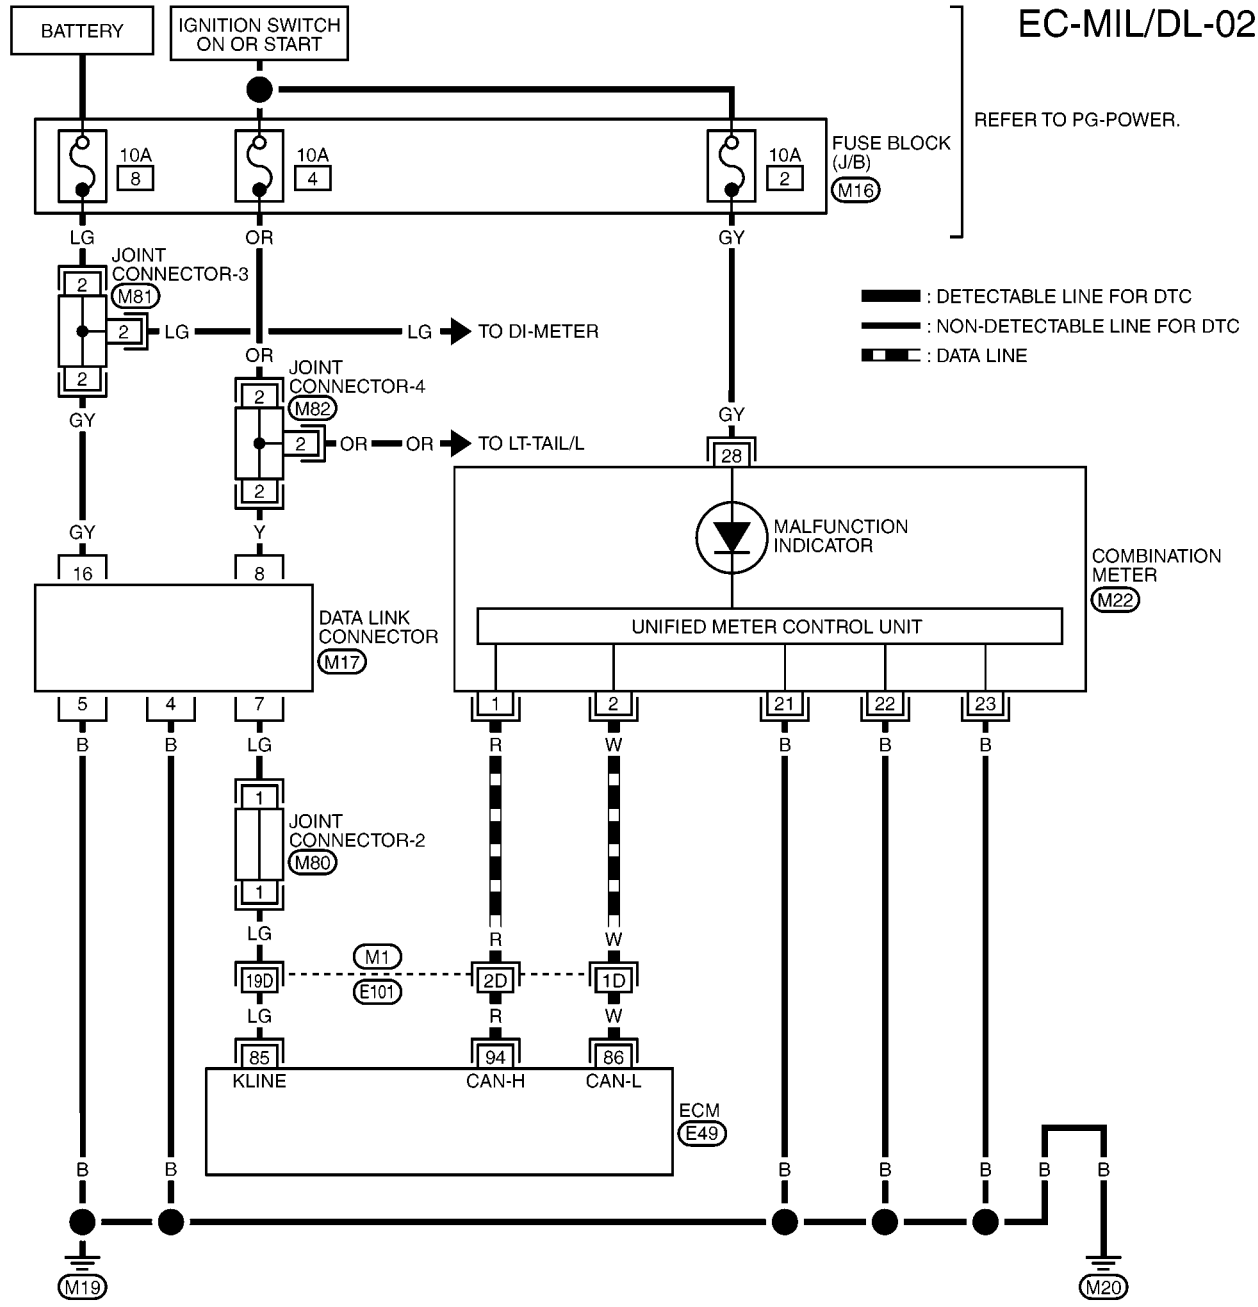



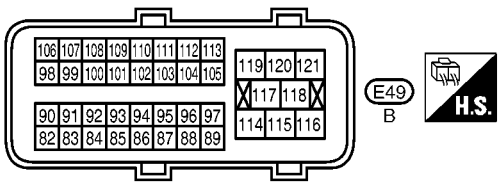

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)
M80, M81, M82 -JOINT CONNECTOR (J/C)

MBWA0577E

EVAPORATIVE EMISSION SYSTEM

PFP:14950

Description

EBS00OD8

SYSTEM DESCRIPTION

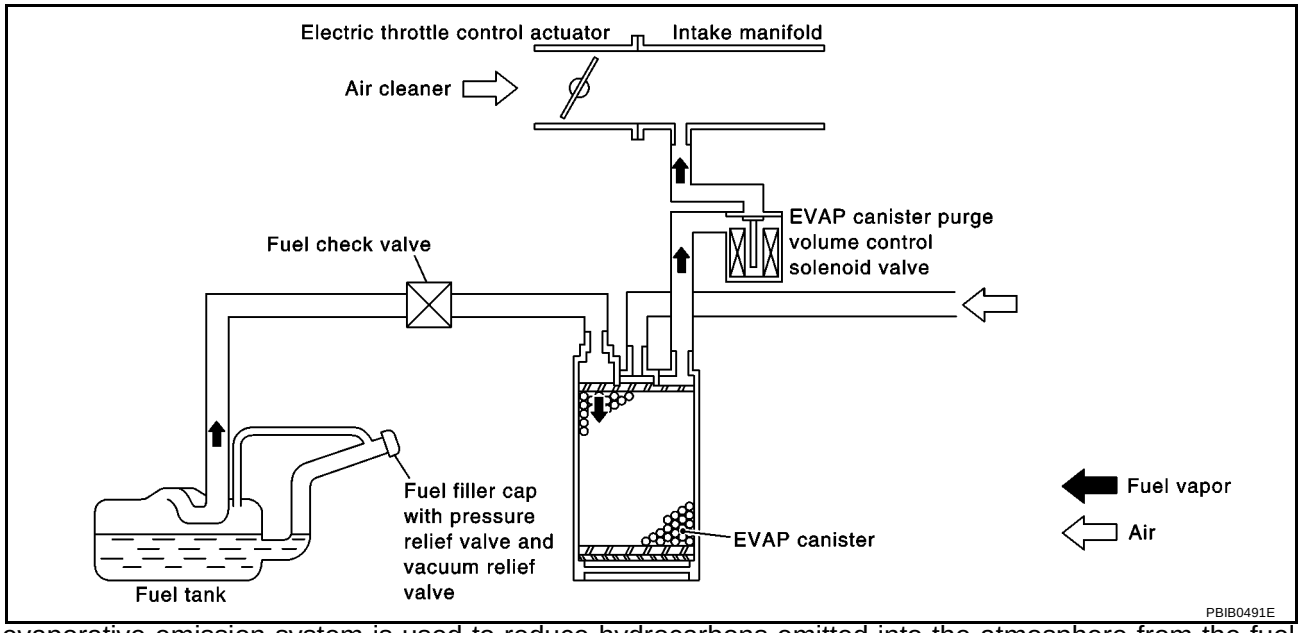

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.
The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank.
The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.
EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

EVAPORATIVE EMISSION LINE DRAWING

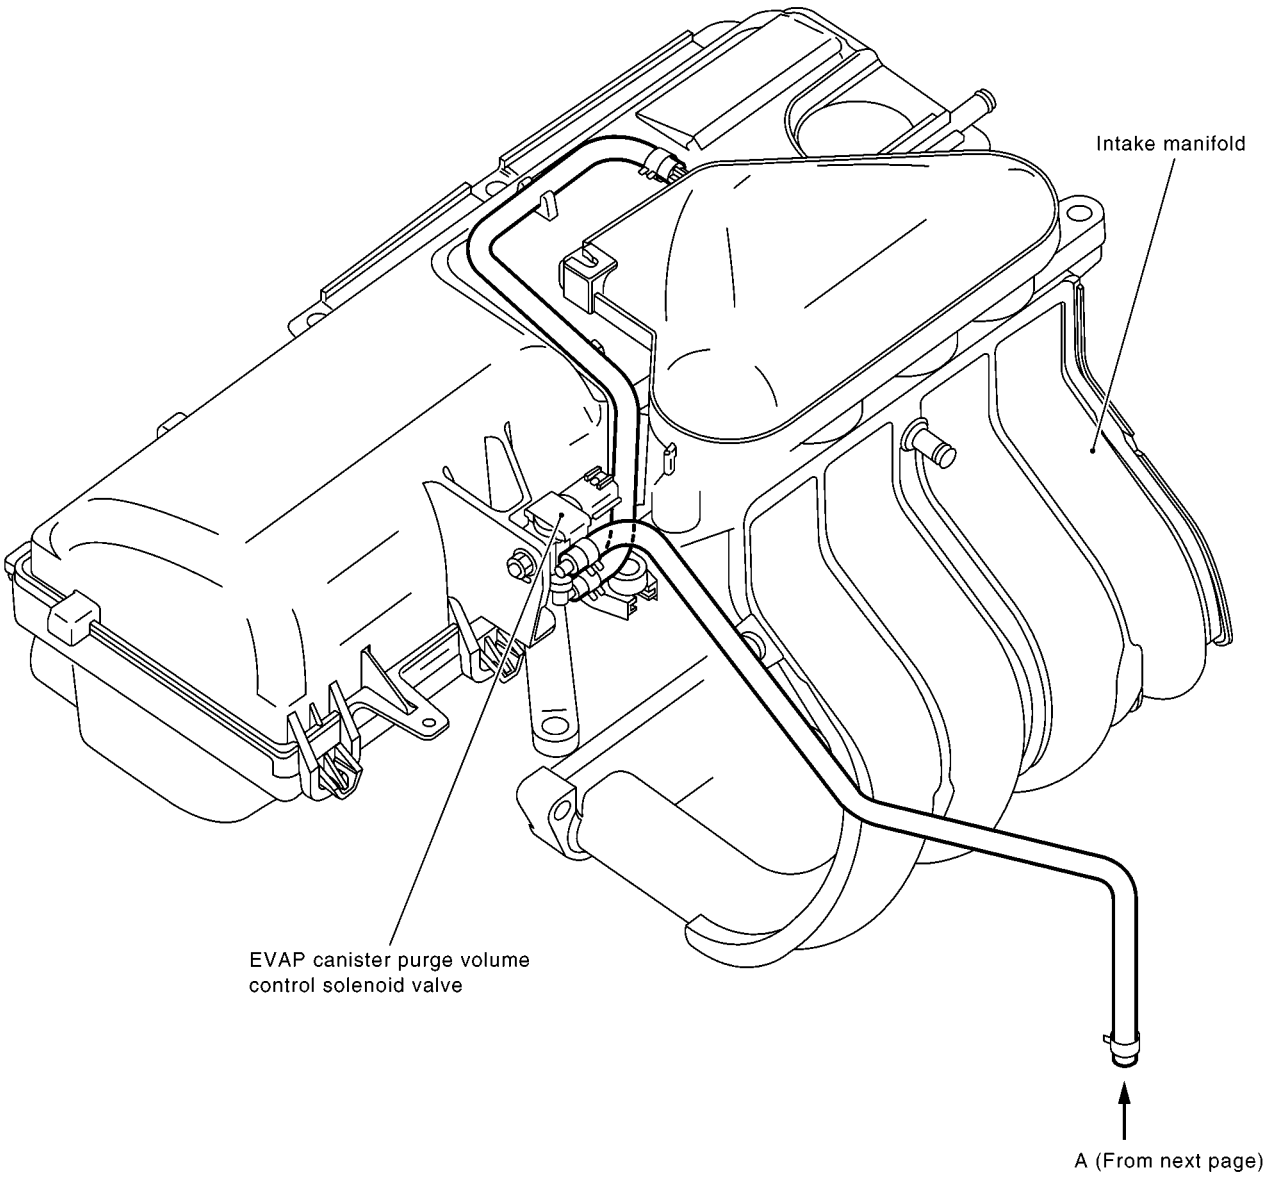

NOTE: Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

MBIB0544E

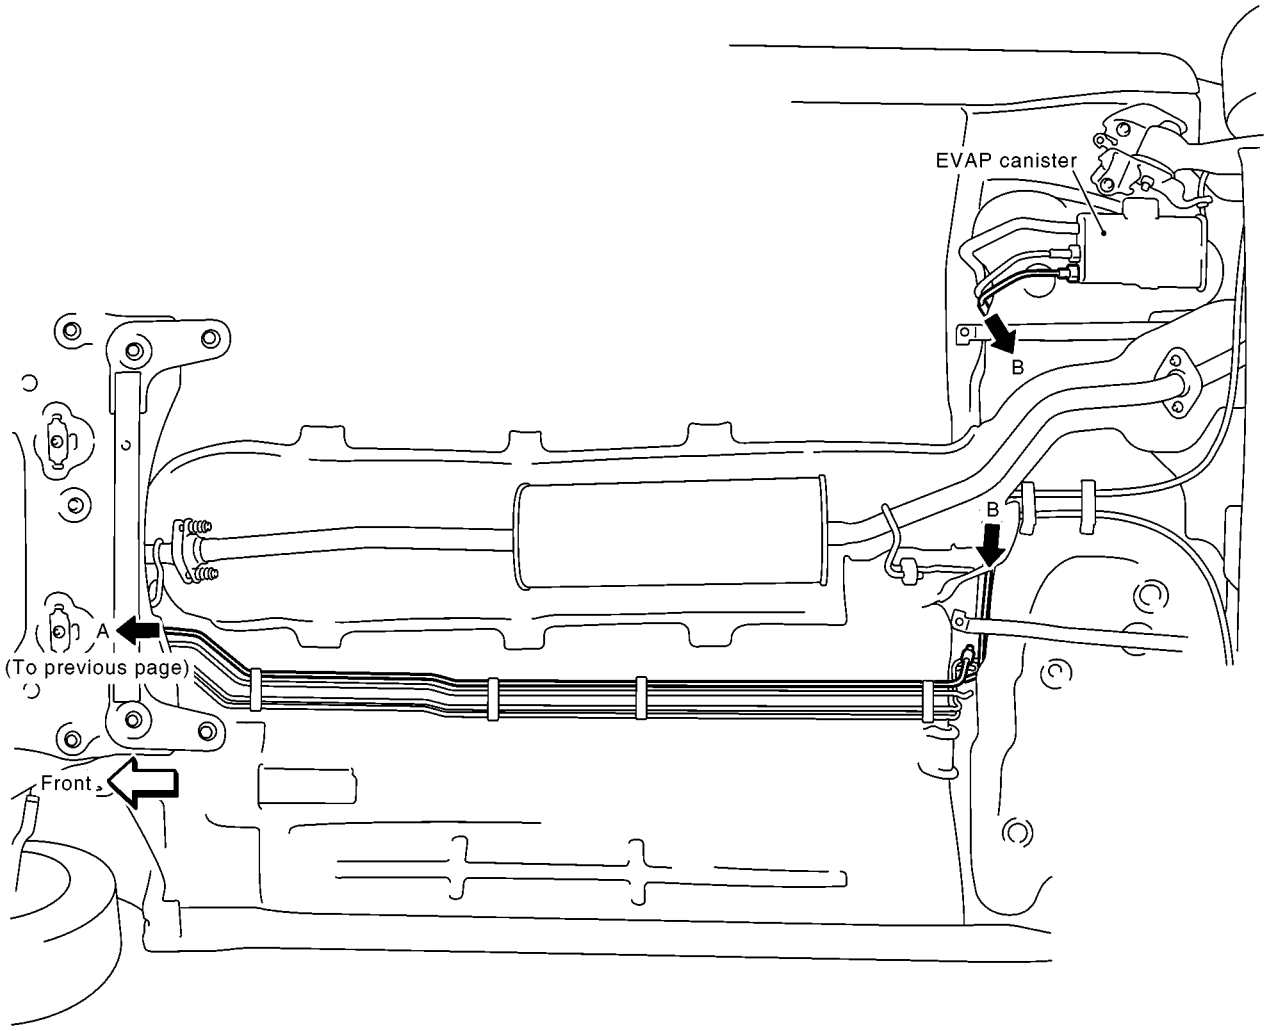

MBIB0541E

Component Inspection

EBS00OD9

EVAP CANISTER

Check EVAP canister as follows:

1. Block port **B** . Orally blow air through port **A** . Check that air flows freely through port **C** .
2. Block port **A** . Orally blow air through port **B** . Check that air flows freely through port **C** .

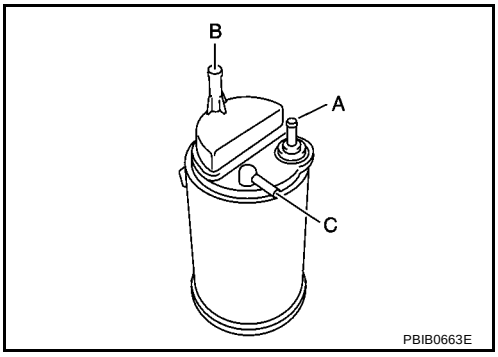

FUEL CHECK VALVE

1. Blow air through connector on fuel tank side.
   A considerable resistance should be felt and a portion of air flow should be directed toward the EVAP canister side.
2. Blow air through connector on EVAP canister side.
   Air flow should be smoothly directed toward fuel tank side.
3. If fuel check valve is suspected of not properly functioning in steps 1 and 2 above, replace it.

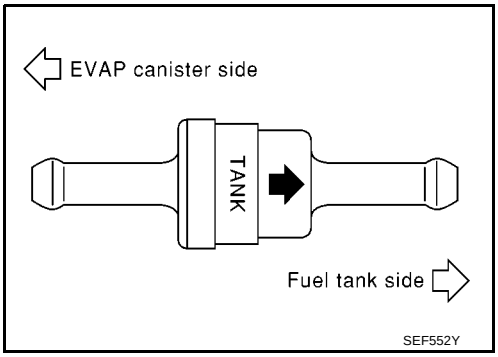

FUEL TANK VACUUM RELIEF VALVE (BUILT INTO FUEL FILLER CAP)

1. Wipe clean valve housing.

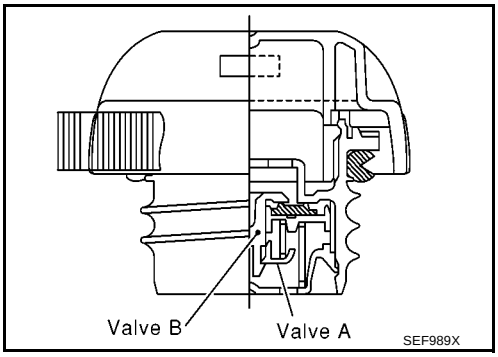

2. Check valve opening pressure and vacuum.

Pressure:	**15.3 - 20.0 kPa (0.153 - 0.200 bar, 0.156 - 0.204 kg/cm^2 , 2.22 - 2.90 psi)**
Vacuum:	**–6.0 to –3.4 kPa (–0.060 to –0.034 bar, –0.061 to –0.035 kg/cm^2 , –0.87 to –0.49 psi)**

3. If out of specification, replace fuel filler cap as an assembly.

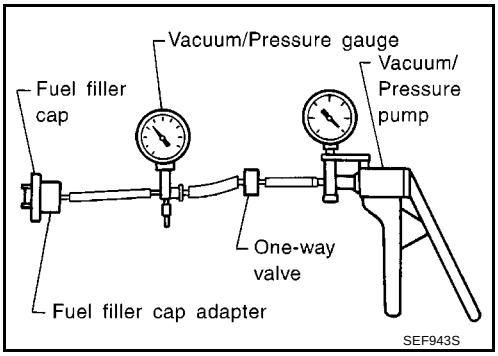

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-283, "Component Inspection" .

POSITIVE CRANKCASE VENTILATION

PFP:11810

Description

EBS00ODA

SYSTEM DESCRIPTION

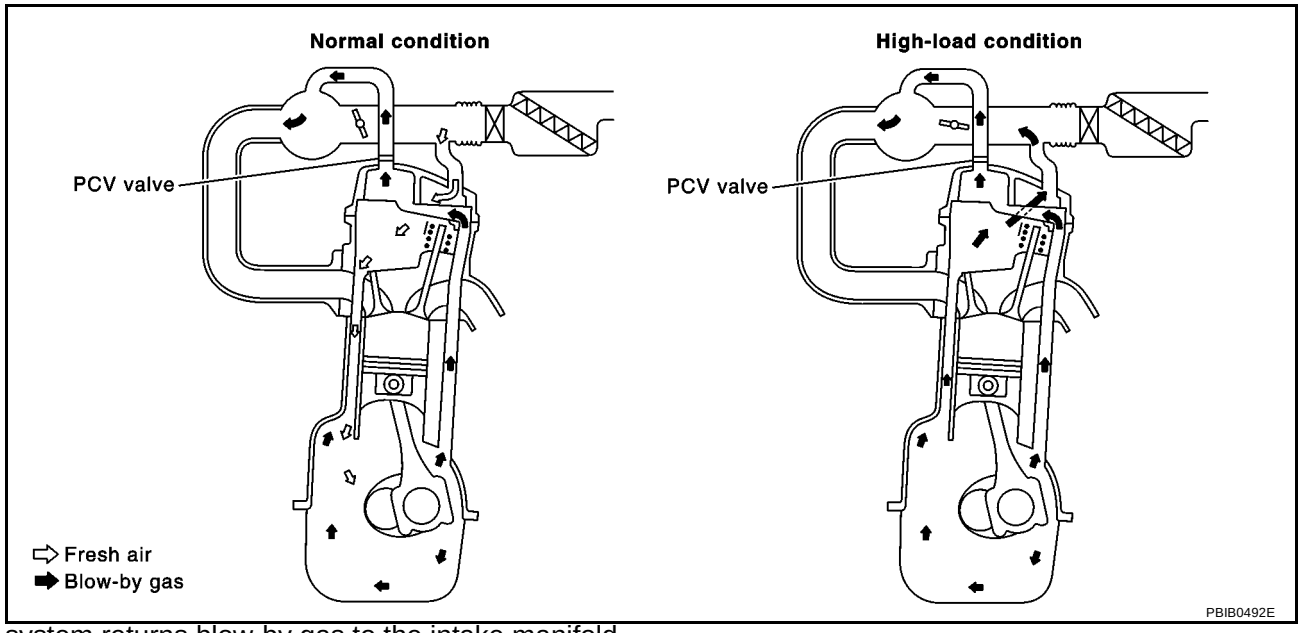

This system returns blow-by gas to the intake manifold.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold. During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve. Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is then drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover. Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

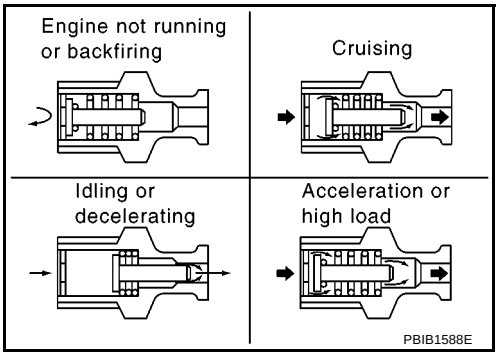

Component Inspection

EBS00ODB

PCV (POSITIVE CRANKCASE VENTILATION) VALVE

With engine running at idle, remove PCV valve from rocker cover. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over valve inlet.

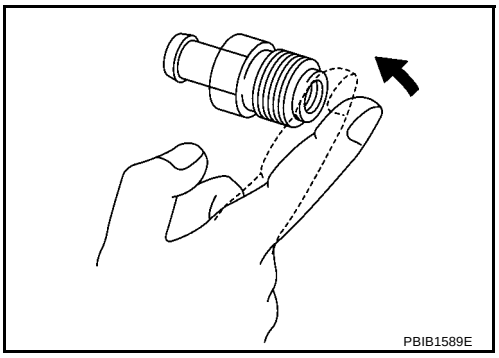

PCV VALVE VENTILATION HOSE

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

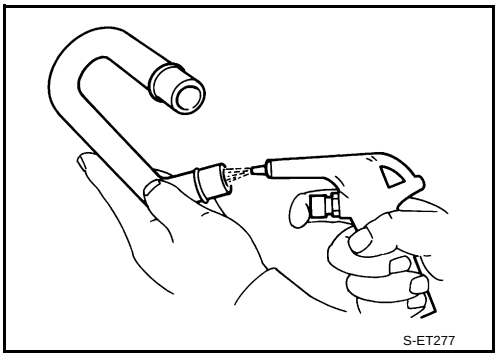

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

Fuel Pressure

EBS00ODC

Fuel pressure at idle	Approximately 350 kPa (3.5bar, 3.57kg/cm^2 , 51psi)

Idle Speed and Ignition Timing

EBS00ODD

Target idle speed	No load*1 (in P or N position)	M/T: 650±50 rpm A/T: 700±50 rpm
Ignition timing	In P or N position	5°±2° BTDC

*1: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

Calculated Load Value

EBS00ODE

Condition	Calculated load value% (Using CONSULT-II or GST)
At idle	10 - 35
At 2,500 rpm	10 - 35

Manifold absolute pressure sensor

EBS00ODF

Supply voltage	Approximately 5.0V
Output voltage at idle	1.4 - 1.5 V*

*: Engine is warmed up to normal operating temperature and running under no-load.

Intake Air Temperature Sensor

EBS00ODG

Temperature °C (°F)	Resistance kΩ
25 (77)	1.9 - 2.1
80 (176)	0.31 - 0.37

Engine Coolant Temperature Sensor

EBS00ODH

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

Heated Oxygen Sensor 1 Heater

EBS00ODI

Resistance [at 25°C (77°F)]	3.3 - 4.0Ω

Heated Oxygen sensor 2 Heater

EBS00ODJ

Resistance [at 25°C (77°F)]	3.3 - 4.0Ω

Crankshaft Position Sensor (POS)

EBS00ODK

Refer to EC-265, "Component Inspection" .

Camshaft Position Sensor (PHASE)

EBS00ODL

Refer to EC-271, "Component Inspection" .

Throttle Control Motor

EBS00ODM

Resistance [at 25°C (77°F)]	Approximately 1 - 15Ω

Injector

EBS00ODN

Resistance [at 20°C (68°F)]	12.1 - 12.9Ω

Fuel Pump

EBS00ODO

Resistance [at 25°C (77°F)]	Approximately 1.0Ω

INDEX FOR DTC

PFP:00024

Alphabetical Index

EBS00OJR

Check if the vehicle is a model with Euro-OBD (E-OBD) system or not by the “Type approval number” on the identification plate. Refer to GI-44, "IDENTIFICATION INFORMATION" .

NOTE:
If DTC U1000 or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-572, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

Items (CONSULT-II screen terms)	DTC*1		Trip	MI lighting up	Reference page
	CONSULT-II*2	ECM*3			
ABSL PRES SEN/CIRC	P0107	0107	2	×	EC-575
ABSL PRES SEN/CIRC	P0108	0108	2	×	EC-575
APP SEN 1/CIRC	P0227	0227	1	×	EC-630
APP SEN 1/CIRC	P0228	0228	1	×	EC-630
APP SEN 1/CIRC	P2122	2122	1	×	EC-733
APP SEN 1/CIRC	P2123	2123	1	×	EC-733
APP SEN 2/CIRC	P1227	1227	1	×	EC-713
APP SEN 2/CIRC	P1228	1228	1	×	EC-713
APP SEN 2/CIRC	P2127	2127	1	×	EC-742
APP SEN 2/CIRC	P2128	2128	1	×	EC-742
APP SENSOR	P0226	0226	1	×	EC-621
APP SENSOR	P2138	2138	1	×	EC-757
BRAKE SW/CIRCUIT	P1805	1805	1	×	EC-726
CAN COMM CIRCUIT	U1000	1000*5	2	—	EC-572
CAN COMM CIRCUIT	U1001	1001*5	2	—	EC-572
CKP SEN/CIRCUIT	P0335	0335	2	×	EC-643
CMP SEN/CIRC-B1	P0340	0340	2	×	EC-650
CTP LEARNING	P1225	1225	2	—	EC-709
CTP LEARNING	P1226	1226	2	—	EC-711
ECM	P0605	0605	1 or 2	× or —	EC-657
ECM BACK UP/CIRC	P1065	1065	2	×	EC-660
ECT SEN/CIRCUIT	P0117	0117	2	×	EC-580
ECT SEN/CIRCUIT	P0118	0118	2	×	EC-580
ENG OVER TEMP	P1217	1217	1	×	EC-689
ETC ACTR	P1121	1121	1	×	EC-664
ETC FUNCTION/CIRC	P1122	1122	1	×	EC-667
ETC MOT	P1128	1128	1	×	EC-678
ETC MOT PWR	P1124	1124	1	×	EC-673
ETC MOT PWR	P1126	1126	1	×	EC-673
HO2S1 (B1)	P0132	0132	2	×	EC-591
HO2S1 (B1)	P0134	0134	2	×	EC-597
HO2S2 (B1)	P0138	0138	2	×	EC-603
INTAKE ERROR	P1171	1171	1	×	EC-683
KNOCK SEN/CIRC-B1	P0327	0327	2	—	EC-639
KNOCK SEN/CIRC-B1	P0328	0328	2	—	EC-639
NATS MALFUNCTION	P1610 - P1615	1610 - 1615	2	—	EC-511

Items (CONSULT-II screen terms)	DTC*1		Trip	MI lighting up	Reference page
	CONSULT-II*2	ECM*3			
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	No DTC	Flashing*4	—	Flashing*4	EC-512
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	**P0000**	**0000**	—	—	—
SENSOR POWER/CIRC	P1229	1229	1	×	EC-722
TCS C/U FUNCTN	P1211	1211	2	—	EC-687
TCS/CIRC	P1212	1212	2	—	EC-688
TP SEN 1/CIRC	P0222	0222	1	×	EC-615
TP SEN 1/CIRC	P0223	0223	1	×	EC-615
TP SEN 2/CIRC	P0122	0122	1	×	EC-585
TP SEN 2/CIRC	P0123	0123	1	×	EC-585
TP SEN 2/CIRC	P1223	1223	1	×	EC-703
TP SEN 2/CIRC	P1224	1224	1	×	EC-703
TP SENSOR	P0221	0221	1	×	EC-609
TP SENSOR	P2135	2135	1	×	EC-751

*1: 1st trip DTC No. is the same as DTC No.
*2: This number is prescribed by ISO 15031-5.
*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.
*4: When engine is running.
*5: The troubleshooting for this DTC needs CONSULT-II.

DTC No. Index

EBS00OJS

NOTE:
If DTC U1000 or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-572, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

DTC*1		Items (CONSULT-II screen terms)	Trip	MI lighting up	Reference page
CONSULT-II*2	ECM*3				
No DTC	Flashing*4	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—	Flashing*4	EC-512
U1000	1000*5	CAN COMM CIRCUIT	2	—	EC-572
U1001	1001*5	CAN COMM CIRCUIT	2	—	EC-572
P0000	**0000**	**NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.**	—	—	—
P0107	0107	ABSL PRES SEN/CIRC	2	×	EC-575
P0108	0108	ABSL PRES SEN/CIRC	2	×	EC-575
P0117	0117	ECT SEN/CIRCUIT	2	×	EC-580
P0118	0118	ECT SEN/CIRCUIT	2	×	EC-580
P0122	0122	TP SEN 2/CIRC	1	×	EC-585
P0123	0123	TP SEN 2/CIRC	1	×	EC-585
P0132	0132	HO2S1 (B1)	2	×	EC-591
P0134	0134	HO2S1 (B1)	2	×	EC-597
P0138	0138	HO2S2 (B1)	2	×	EC-603
P0221	0221	TP SENSOR	1	×	EC-609
P0222	0222	TP SEN 1/CIRC	1	×	EC-615
P0223	0223	TP SEN 1/CIRC	1	×	EC-615
P0226	0226	APP SENSOR	1	×	EC-621
P0227	0227	APP SEN 1/CIRC	1	×	EC-630
P0228	0228	APP SEN 1/CIRC	1	×	EC-630
P0327	0327	KNOCK SEN/CIRC-B1	2	—	EC-639
P0328	0328	KNOCK SEN/CIRC-B1	2	—	EC-639
P0335	0335	CKP SEN/CIRCUIT	2	×	EC-643
P0340	0340	CMP SEN/CIRC-B1	2	×	EC-650
P0605	0605	ECM	1 or 2	× or —	EC-657
P1065	1065	ECM BACK UP/CIRC	2	×	EC-660
P1121	1121	ETC ACTR	1	×	EC-664
P1122	1122	ETC FUNCTION/CIRC	1	×	EC-667
P1124	1124	ETC MOT PWR	1	×	EC-673
P1126	1126	ETC MOT PWR	1	×	EC-673
P1128	1128	ETC MOT	1	×	EC-678
P1171	1171	INTAKE ERROR	1	×	EC-683
P1211	1211	TCS C/U FUNCTN	2	—	EC-687
P1212	1212	TCS/CIRC	2	—	EC-688
P1217	1217	ENG OVER TEMP	1	×	EC-689
P1223	1223	TP SEN 2/CIRC	1	×	EC-703
P1224	1224	TP SEN 2/CIRC	1	×	EC-703

DTC*1		Items (CONSULT-II screen terms)	Trip	MI lighting up	Reference page
CONSULT-II*2	ECM*3				
P1225	1225	CTP LEARNING	2	—	EC-709
P1226	1226	CTP LEARNING	2	—	EC-711
P1227	1227	APP SEN 2/CIRC	1	×	EC-713
P1228	1228	APP SEN 2/CIRC	1	×	EC-713
P1229	1229	SENSOR POWER/CIRC	1	×	EC-722
P1610 - P1615	1610 - 1615	NATS MALFUNCTION	2	—	EC-511
P1805	1805	BRAKE SW/CIRCUIT	1	×	EC-726
P2122	2122	APP SEN 1/CIRC	1	×	EC-733
P2123	2123	APP SEN 1/CIRC	1	×	EC-733
P2127	2127	APP SEN 2/CIRC	1	×	EC-742
P2128	2128	APP SEN 2/CIRC	1	×	EC-742
P2135	2135	TP SENSOR	1	×	EC-751
P2138	2138	APP SENSOR	1	×	EC-757

*1: 1st trip DTC No. is the same as DTC No.
*2: This number is prescribed by ISO 15031-5.
*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.
*4: When engine is running.
*5: The troubleshooting for this DTC needs CONSULT-II.

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EBS00OS4

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

Maintenance Information

EBS011UT

If any of following part is replaced, always replace with new* one.
If it's not (or fail to do so), the electrical system may not be operated properly.
*: New one means a virgin control unit that has never been energized on-board.

RHD MODELS

- BCM (Models without Intelligent Key system)
- Intelligent Key unit (Models with Intelligent Key system)
- ECM
- IPDM E/R
- Combination meter
- EPS control unit

LHD MODELS

- BCM (Models without Intelligent Key system)
- Intelligent Key unit (Models with Intelligent Key system)
- ECM

On Board Diagnostic (OBD) System of Engine and A/T

EBS00OJU

The ECM has an on board diagnostic system. It will light up the malfunction indicator (MI) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- **Be sure to turn the ignition switch OFF and disconnect the battery ground cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MI to light up.**
- **Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MI to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)**
- **Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG-99, "HARNESS CONNECTOR" .**
- **Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MI to light up due to the short circuit.**
- **Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MI to light up due to the malfunction of the fuel injection system, etc.**
- **Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM.**

Precaution

EBS00OJV

- **Always use a 12 volt battery as power source.**
- **Do not attempt to disconnect battery cables while engine is running.**
- **Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect battery ground cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned off.**
- **Before removing parts, turn ignition switch OFF and then disconnect battery ground cable.**

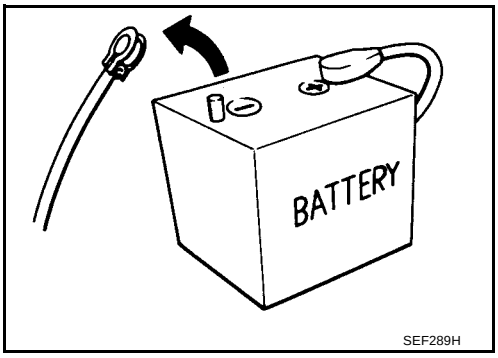

SEF289H

- **Do not disassemble ECM.**
- **If battery cable is disconnected, the memory will return to the initial ECM values.**
  The ECM will now start to self-control at its initial values. Engine operation can vary slightly when the cable is disconnected. However, this is not an indication of a malfunction. Do not replace parts because of a slight variation.

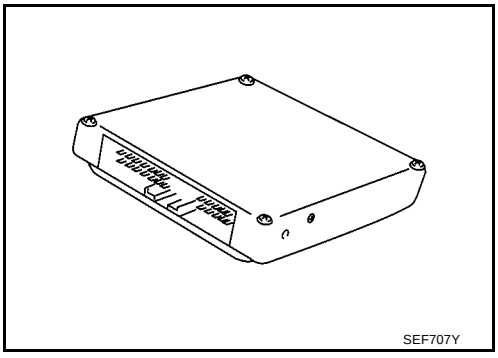
SEF707Y

- **When connecting ECM harness connector, fasten it securely with levers as far as they will go as shown in the figure.**

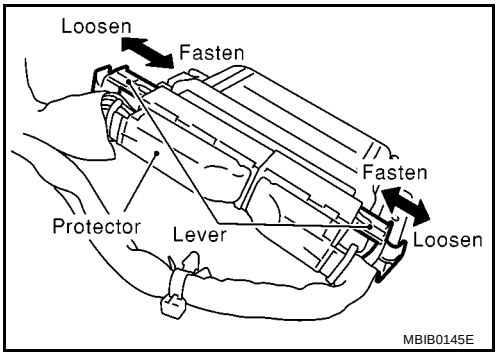

MBIB0145E

- **When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).**
  Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- **Securely connect ECM harness connectors.**
  A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- **Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.**
- **Keep engine control system parts and harness dry.**

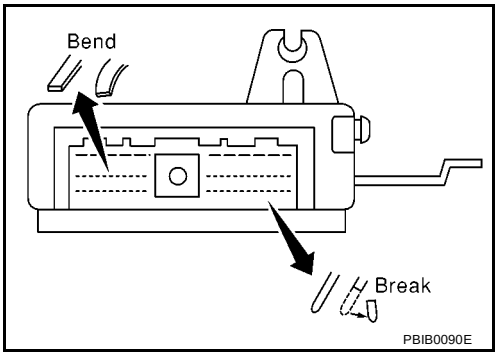

PBIB0090E

- **Before replacing ECM, perform ECM Terminals and Reference Value inspection and make sure ECM functions properly. Refer to EC-539, "ECM Terminals and Reference Value" .**
- **Handle manifold absolute pressure sensor carefully to avoid damage.**
- **Do not clean air clear element with any type of detergent.**
- **Do not disassemble electric throttle control actuator.**
- **Even a slight leak in the air intake system can cause serious incidents.**
- **Do not shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).**
- **After performing each TROUBLE DIAGNOSIS, perform DTC Confirmation Procedure or Overall Function Check.**
  The DTC should not be displayed in the DTC Confirmation Procedure if the repair is completed. The Overall Function Check should be a good result if the repair is completed.

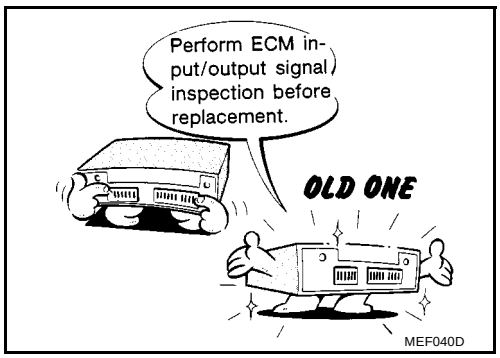

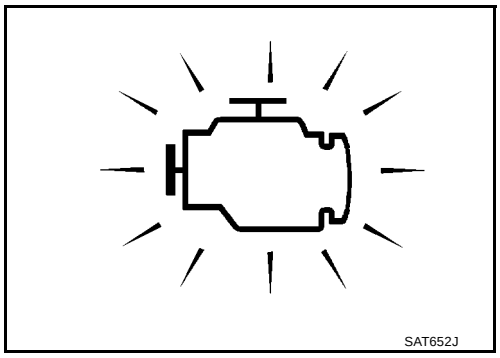

- **When measuring ECM signals with a circuit tester, connect a break-out box (SST) and Y-cable adapter (SST) between the ECM and ECM harness connector.**
- **When measuring ECM signals with a circuit tester, never allow the two tester probes to contact.**
  Accidental contact of probes will cause a short circuit and damage the ECM power transistor.
- **Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.**

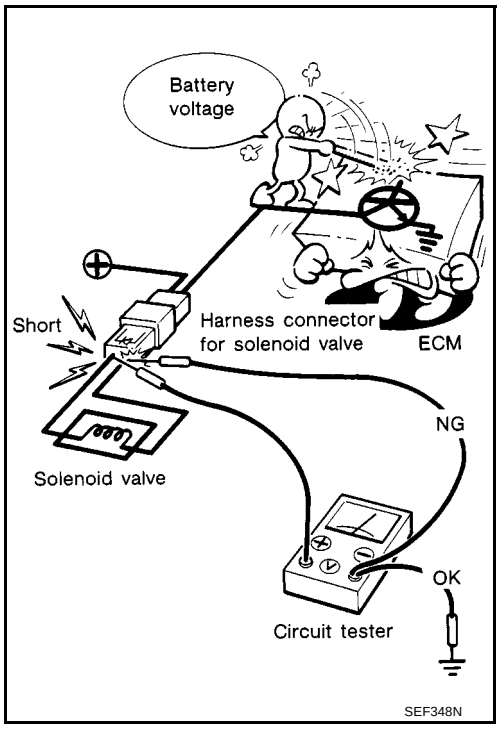

- **Do not operate fuel pump when there is no fuel in lines.**
- **Tighten fuel hose clamps to the specified torque.**

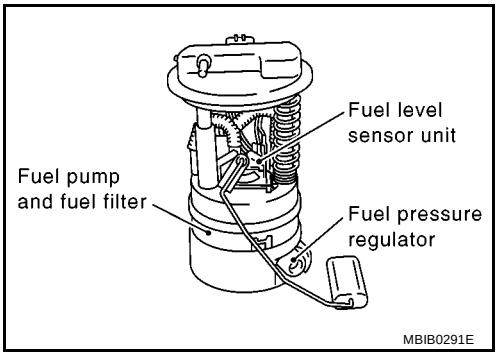

- **Do not depress accelerator pedal when starting.**
- **Immediately after starting, do not rev up engine unnecessarily.**
- **Do not rev up engine just prior to shutdown.**

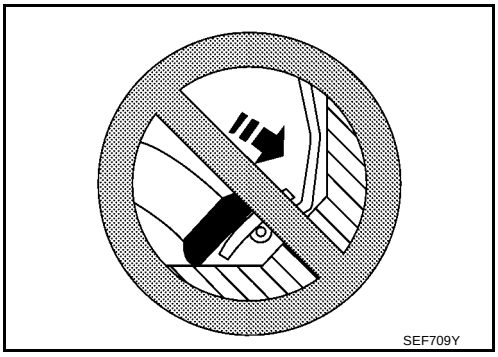

- **When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.**
  - **Keep the antenna as far as possible from the electronic control units.**
  - **Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls.**
    Do not let them run parallel for a long distance.
  - **Adjust the antenna and feeder line so that the standing-wave radio can be kept smaller.**
  - **Be sure to ground the radio to vehicle body.**

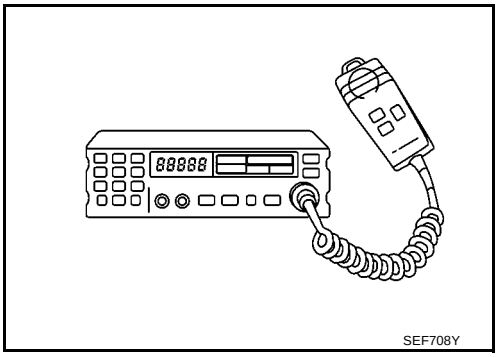

Wiring Diagrams and Trouble Diagnosis

EBS00OJW

When you read wiring diagrams, refer to the following:

- GI-14, "How to Read Wiring Diagrams"
- PG-4, "POWER SUPPLY ROUTING" for power distribution circuit

When you perform trouble diagnosis, refer to the following:

- GI-11, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"
- GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident"

PREPARATION

PFP:00002

Special Service Tools

EBS00OJX

Tool number Tool name	Description	
KV10117100 Heated oxygen sensor wrench	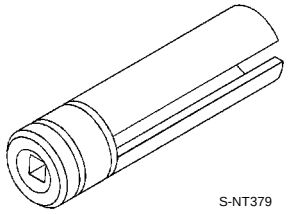 S-NT379	Loosening or tightening heated oxygen sensors with 22 mm (0.87 in) hexagon nut
KV10114400 Heated oxygen sensor wrench	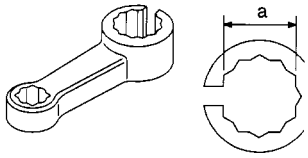 S-NT636	Loosening or tightening heated oxygen sensors **a: 22 mm (0.87 in)**
KV109E0010 Break-out box	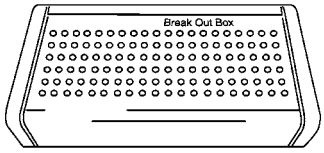 NT825	Measuring ECM signals with a circuit tester
KV109E0080 Y-cable adapter	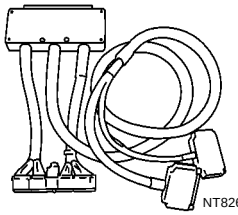 NT826	Measuring ECM signals with a circuit tester

Commercial Service Tools

EBS00OJY

Tool name	Description	
Quick connector release	 PBIC0198E	Removing fuel tube quick connectors in engine room (Available in SEC. 164 of PARTS CATALOG: Part No. 16441 6N210)
Fuel filler cap adapter	 S-NT653	Checking fuel tank vacuum relief valve opening pressure

Tool name	Description	
Socket wrench	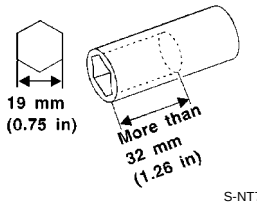 S-NT705	Removing and installing engine coolant temperature sensor
Oxygen sensor thread cleaner ie: (J-43897-18) (J-43897-12)	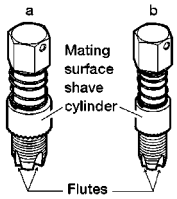 AEM488	Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown below. **a: 18 mm diameter with pitch 1.5 mm for Zirconia Oxygen Sensor** **b: 12 mm diameter with pitch 1.25 mm for Titania Oxygen Sensor**
Anti-seize lubricant i.e.: (Permatex™ 133AR or equivalent meeting MIL specification MIL-A-907)	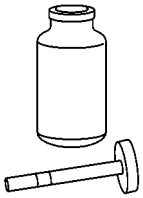 S-NT779	Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads.

ENGINE CONTROL SYSTEM

PFP:23710

System Diagram

EBS00OJZ

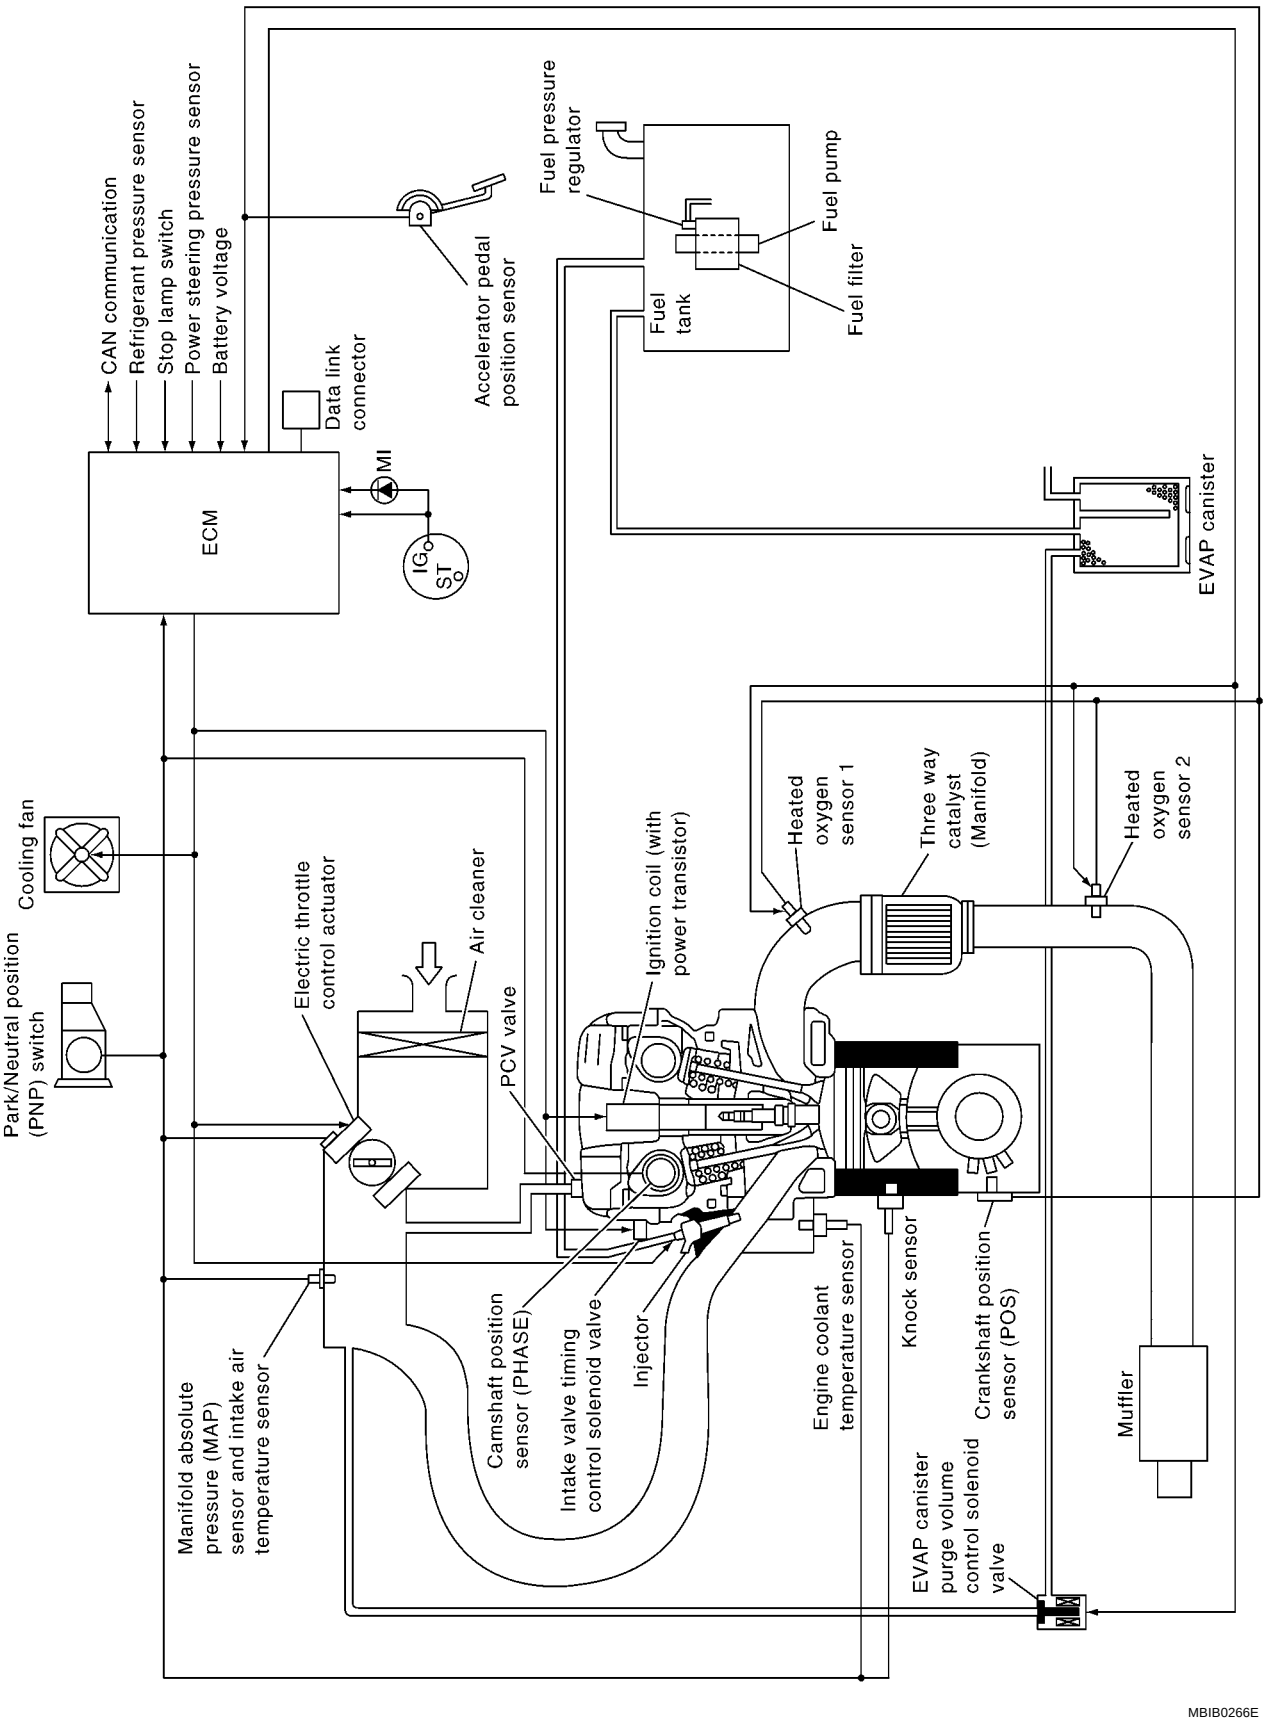

MBIB0266E

Vacuum Hose Drawing

EBS00OK0

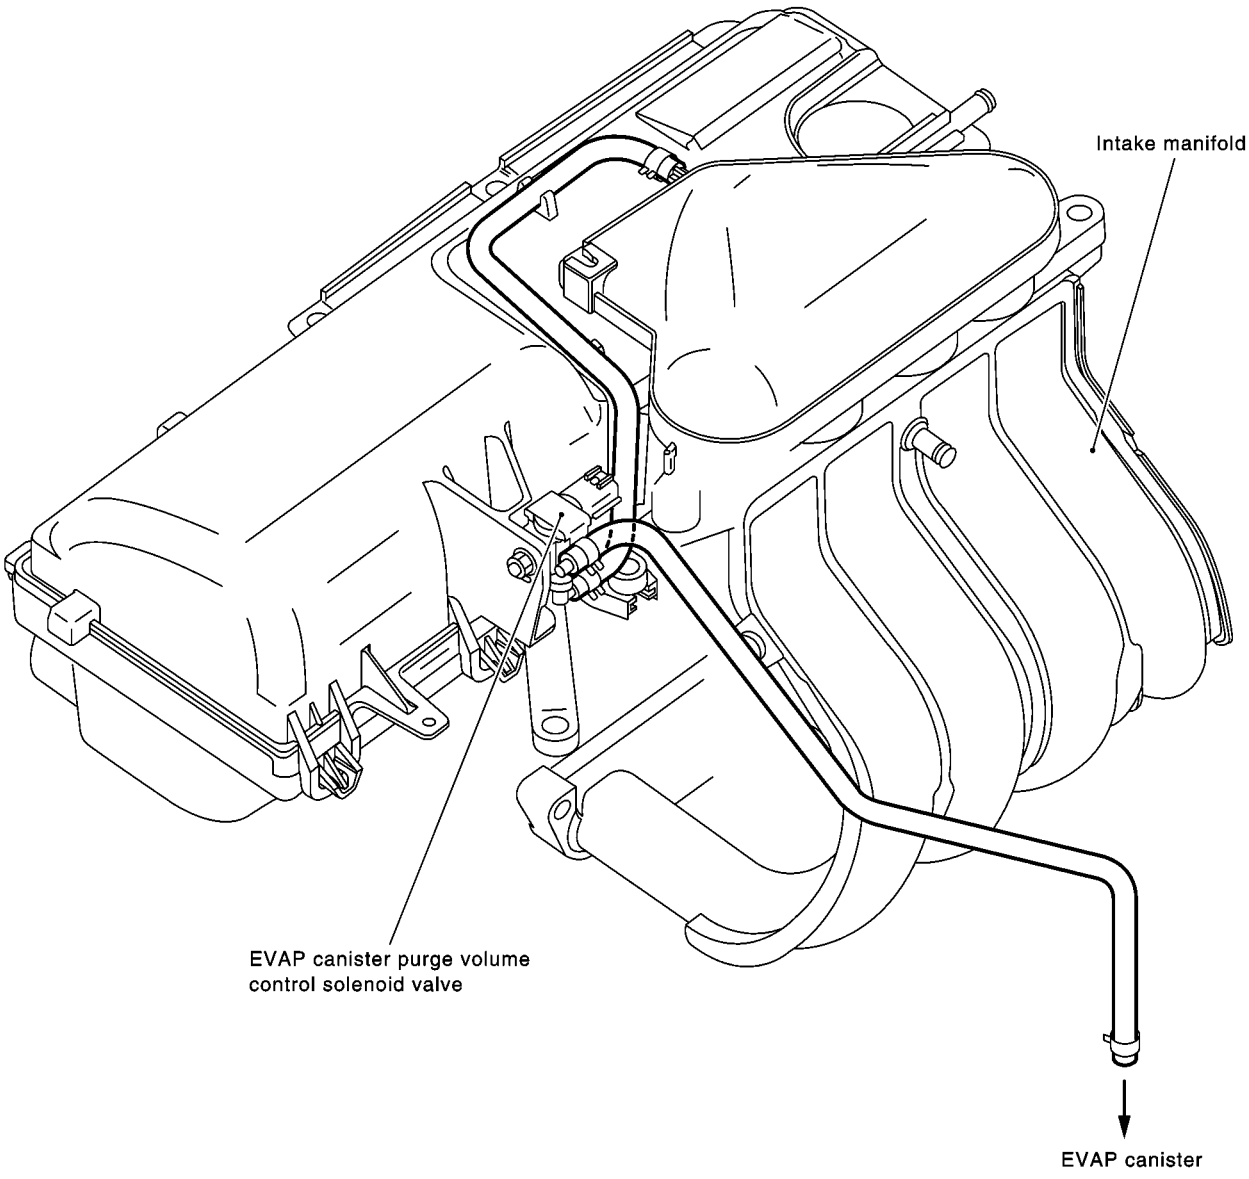

NOTE: Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

MBIB0265E

Refer to EC-482, "System Diagram" for Vacuum Control System.

System Chart

EBS00OK1

Input (Sensor)	ECM Function	Output (Actuator)
● Camshaft position sensor (PHASE) ● Crankshaft position sensor (POS) ● Manifold absolute pressure sensor ● Engine coolant temperature sensor ● Heated oxygen sensor 1 ● Throttle position sensor ● Accelerator pedal position sensor ● Park/neutral position (PNP) switch ● Intake air temperature sensor ● Ignition switch ● Battery voltage ● Knock sensor ● Refrigerant pressure sensor ● Stop lamp switch ● Heated oxygen sensor 2*1 ● TCM (Transmission control module) ● ABS actuator and electric unit (control unit)*2 ● Air conditioner switch*2 ● Vehicle speed signal*2 ● Electrical load signal*2	Fuel injection & mixture ratio control	Fuel injectors
	Electronic ignition system	Power transistor
	Fuel pump control	Fuel pump relay
	Idle speed control	Electric throttle control actuator
	On board diagnostic system	MI (On the instrument panel)
	Heated oxygen sensor 1 heater control	Heated oxygen sensor 1 heater
	Heated oxygen sensor 2 heater control	Heated oxygen sensor 2 heater
	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
	Air conditioning cut control	Air conditioner relay*3
	Cooling fan control	Cooling fan relays*3

*1: This sensor is not used to control the engine system under normal conditions.
*2: This input signal is sent to the ECM through CAN communication line.
*3: This output signal is sent from the ECM through CAN communication line.

Multiport Fuel Injection (MFI) System

EBS00OK2

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*3 and piston position	Fuel injection & mixture ratio control	Fuel injectors
Manifold absolute pressure sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Heated oxygen sensor 1	Density of oxygen in exhaust gas		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Park/neutral position (PNP) switch	Gear position		
Knock sensor	Engine knocking condition		
Battery	Battery voltage*3		
Heated oxygen sensor 2*1	Density of oxygen in exhaust gas		
Vehicle speed signal*2	Vehicle speed		
Air conditioner switch*2	Air conditioner operation		

*1: This sensor is not used to control the engine system under normal conditions.
*2: This signal is sent to the ECM through CAN communication line.
*3: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined

by input signals (for engine speed and intake air volume) from the crankshaft position sensor, the manifold absolute pressure sensor and intake air temperature sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.

<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from N to D (A/T models)
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation

MIXTURE RATIO FEEDBACK CONTROL (CLOSED LOOP CONTROL)

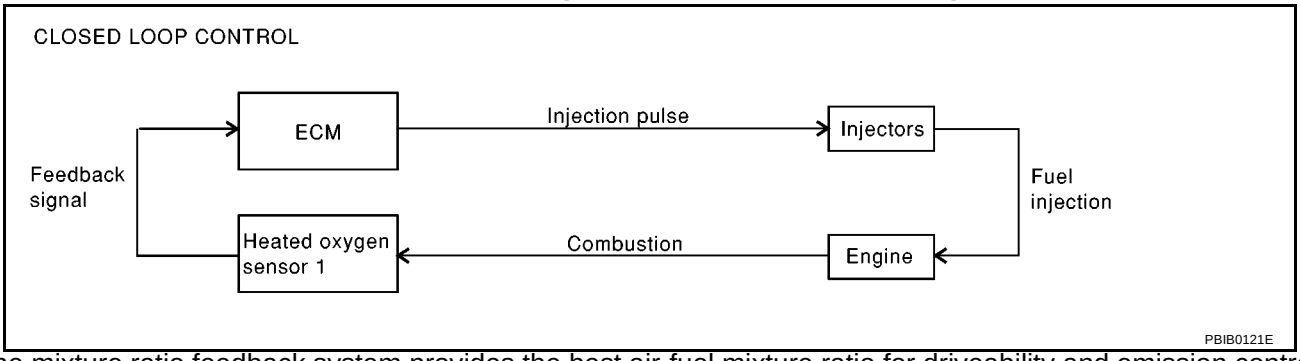

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst (manifold) can then better reduce CO, HC and NOx emissions. This system uses heated oxygen sensor 1 in the exhaust manifold to monitor whether the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about heated oxygen sensor 1, refer to EC-591 . This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of heated oxygen sensor 1 shift, the air-fuel ratio is controlled to stoichiometric by the signal from heated oxygen sensor 2.

Open Loop Control

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of heated oxygen sensor 1 or its circuit
- Insufficient activation of heated oxygen sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from N to D (A/T models)
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from heated oxygen sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as orig-

inally designed. Both manufacturing differences (i.e., manifold absolute pressure sensor silicon diaphragm) and characteristic changes during operation (i.e., injector clogging) directly affect mixture ratio.
Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of “injection pulse duration” to automatically compensate for the difference between the two ratios.
“Fuel trim” refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.
“Short term fuel trim” is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from heated oxygen sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.
“Long term fuel trim” is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

FUEL INJECTION TIMING

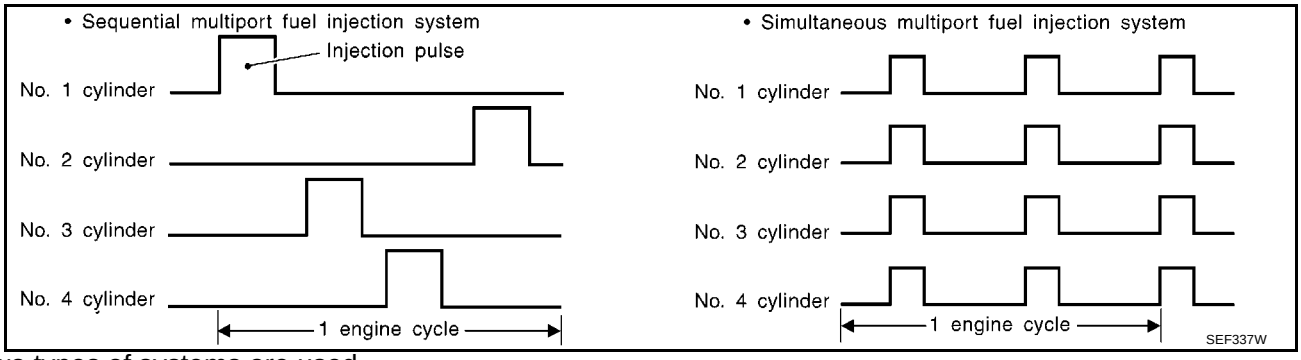

Two types of systems are used.

Sequential Multiport Fuel Injection System

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Simultaneous Multiport Fuel Injection System

Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.
The four injectors will then receive the signals two times for each engine cycle.
This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

Electronic Ignition (EI) System

EBS00OK3

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*2 and piston position	Ignition timing control	Power transistor
manifold absolute pressure sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Knock sensor	Engine knocking		
Park/neutral position (PNP) switch	Gear position		
Battery	Battery voltage*2		
Vehicle speed signal*1	Vehicle speed		

*1: This signal is sent to the ECM through CAN communication line.
*2: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM. This data forms the map shown.
The ECM receives information such as the injection pulse width and camshaft position sensor signal. Computing this information, ignition signals are transmitted to the power transistor.
e.g., N: 1,800 rpm, Tp: 1.50 msec
A °BTDC
During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

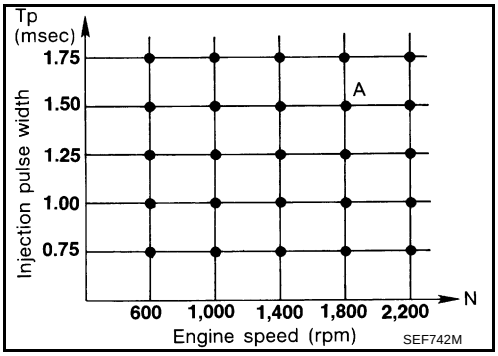

- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Air Conditioning Cut Control

EBS00OK4

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Air conditioner switch*1	Air conditioner ON signal	Air conditioner cut control	Air conditioner relay
Throttle position sensor	Throttle valve opening angle		
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*2		
Engine coolant temperature sensor	Engine coolant temperature		
Refrigerant pressure sensor	Refrigerant pressure		
Vehicle speed signal*1	Vehicle speed		
Battery	Battery voltage*2		

*1: This signal is sent to the ECM through CAN communication line.
*2: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

This system improves engine operation when the air conditioner is used.
Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When engine speed is excessively low.
- When refrigerant pressure is excessively low or high.

Fuel Cut Control (at No Load and High Engine Speed)

EBS00OK5

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM Function	Actuator
Park/neutral position (PNP) switch	Neutral position	Fuel cut control	Fuel injectors
Accelerator pedal position sensor	Accelerator pedal position		
Engine coolant temperature sensor	Engine coolant temperature		
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed		
Vehicle speed signal*1	Vehicle speed		

*1: This signal is sent to the ECM through CAN communication line.

SYSTEM DESCRIPTION

If the engine speed is above 2,500 rpm with no load (for example, the shift position is neutral and engine speed is over 2,500 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.
Fuel cut will operate until the engine speed reaches 2,000 rpm, then fuel cut is cancelled.

NOTE:
This function is different from deceleration control listed under EC-484, "Multiport Fuel Injection (MFI) System"
.

CAN Communication

EBS01CDB

SYSTEM DESCRIPTION

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN COMMUNICATION UNIT

Body type	3door/5door															
Axle	2WD															
Engine	CR10DE/CR12DE/CR14DE								CR12DE/CR14DE							
Handle	LHD/RHD															
Brake control	ABS system								ESP system							
Transmission	A/T				M/T				A/T				M/T			
Intelligent Key system	Applicable		Not applicable		Applicable		Not applicable		Applicable		Not applicable		Applicable		Not applicable	
CAN communication unit																
ECM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Data link connector	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Combination meter	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Intelligent Key unit	×	×			×	×			×	×			×	×		
Drive computer	×		×		×		×		×		×		×		×	
EPS control unit	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
TCM	×	×	×	×					×	×	×	×				
IPDM E/R	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
CAN communication type	EC-490, "TYPE 1/ TYPE 2"				EC-494, "TYPE 3/ TYPE 4"				EC-496, "TYPE 5/ TYPE 6"				EC-499, "TYPE 7/ TYPE 8"			

×: Applicable

TYPE 1/TYPE 2

System diagram

- Type 1

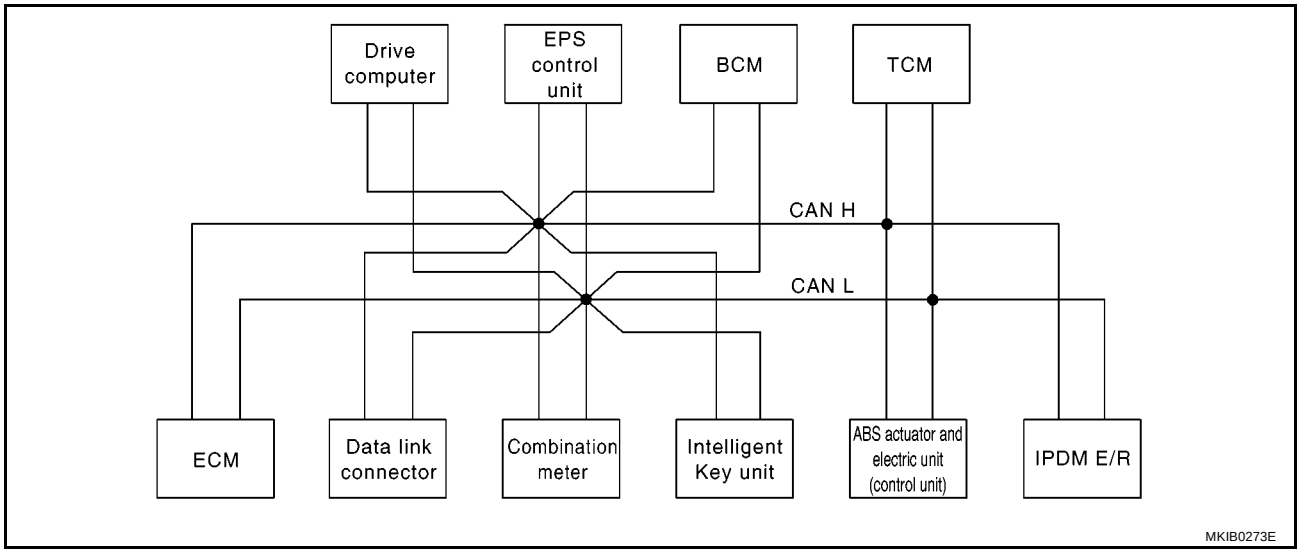

- Type 2

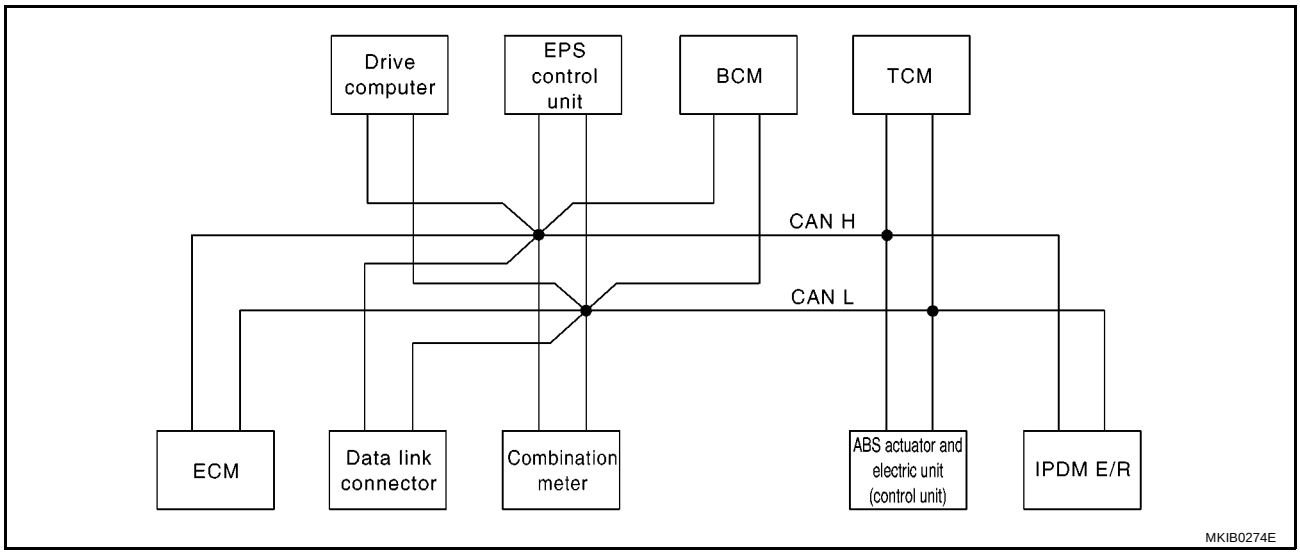

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
Engine speed signal	T	R		R	R				
Engine coolant temperature sig-nal	T	R							
A/T self-diagnosis signal	R							T	
Output shaft revolution signal	R							T	
Accelerator pedal position signal	T							R	
Closed throttle position signal	T							R	
Wide open throttle position sig-nal	T							R	

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
A/T shift position signal		R						T	
Stop lamp switch signal		T						R	
O/D OFF indicator lamp signal		R						T	
Engine and A/T integrated control signal	T							R	
	R							T	
Fuel consumption monitor signal	T	R							
Oil pressure switch signal		R		R					T
A/C compressor request signal	T								R
Heater fan switch signal	R					T			
Cooling fan speed request signal	T								R
Cooling fan speed status signal	R								T
Position lights request signal		R		R		T			R
Position light status signal	R								T
Low beam request signal						T			R
Low beam status signal	R								T
High beam request signal		R				T			R
High beam status signal	R								T
Day time light request signal						T			R
Vehicle speed signal	R	R			R		T		
	R	T	R	R	R	R			
Sleep/wake up signal		R	R			T			R
Door switch signal		R	R	R		T			R
Turn indicator signal		R				T			
Buzzer output signal		R				T			
		R	T						
MI signal	T	R		R					
Front wiper request signal						T			R
Front wiper stop position signal						R			T
Rear window defogger switch signal						T			R
Rear window defogger control signal	R								T
Drive computer signal		T		R					
EPS warning lamp signal		R		R	T				
ABS warning lamp signal		R		R			T		
ABS operation signal	R						T		
Brake warning lamp signal		R		R			T		
Buck-up lamp signal					R	T			
Fuel low warning signal		T		R					
Battery charge malfunction signal		T		R					

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
A/T shift position signal		R						T	
Stop lamp switch signal		T						R	
O/D OFF indicator lamp signal		R						T	
Engine and A/T integrated control signal	T							R	
	R							T	
Fuel consumption monitor signal	T	R							
Oil pressure switch signal		R		R					T
A/C compressor request signal	T								R
Heater fan switch signal	R					T			
Cooling fan speed request signal	T								R
Cooling fan speed status signal	R								T
Position lights request signal		R		R		T			R
Position light status signal	R								T
Low beam request signal						T			R
Low beam status signal	R								T
High beam request signal		R				T			R
High beam status signal	R								T
Day time light request signal						T			R
Vehicle speed signal	R	R			R		T		
	R	T	R	R	R	R			
Sleep/wake up signal		R	R			T			R
Door switch signal		R	R	R		T			R
Turn indicator signal		R				T			
Buzzer output signal		R				T			
		R	T						
MI signal	T	R		R					
Front wiper request signal						T			R
Front wiper stop position signal						R			T
Rear window defogger switch signal						T			R
Rear window defogger control signal	R								T
Drive computer signal		T		R					
EPS warning lamp signal		R		R	T				
ABS warning lamp signal		R		R			T		
ABS operation signal	R						T		
Brake warning lamp signal		R		R			T		
Buck-up lamp signal					R	T			
Fuel low warning signal		T		R					
Battery charge malfunction signal		T		R					

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
Air bag system warning signal		T		R					
Brake fluid level warning signal		T		R					
Engine coolant temperature warning signal		T		R					
Front fog lamp request signal		R				T			R
Rear fog lamp status signal		R				T			
Headlamp washer request signal						T			R
Door lock/unlock request signal			R			T			
Door lock/unlock status signal			R			T			
KEY indicator signal		R	T						
LOCK indicator signal		R	T						

TYPE 3/TYPE 4

System diagram

- Type 3

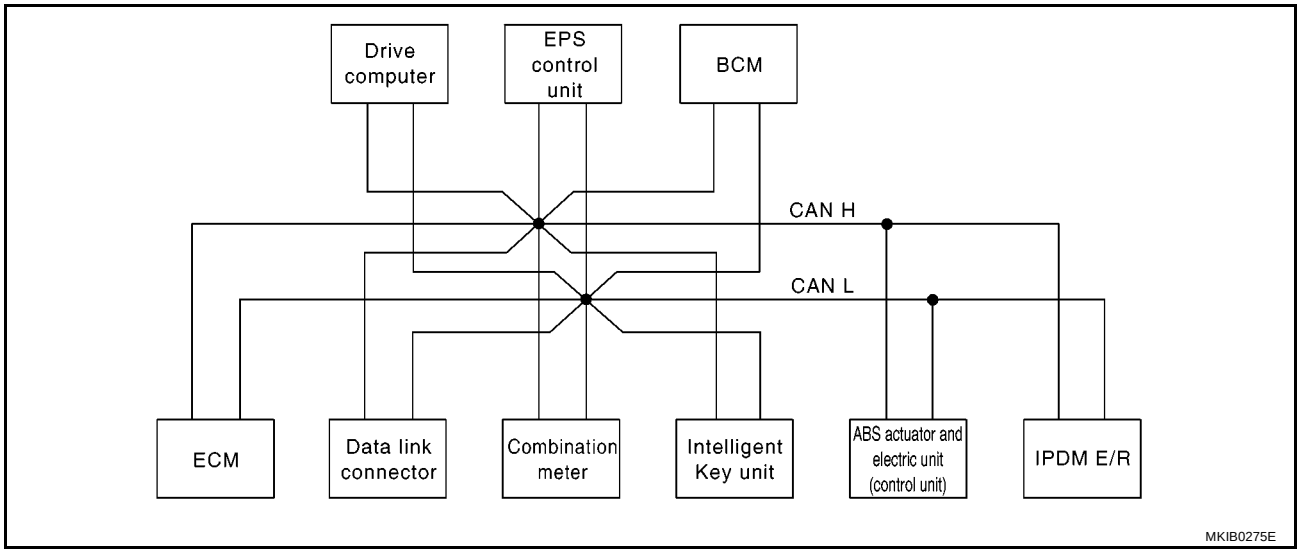

- Type 4

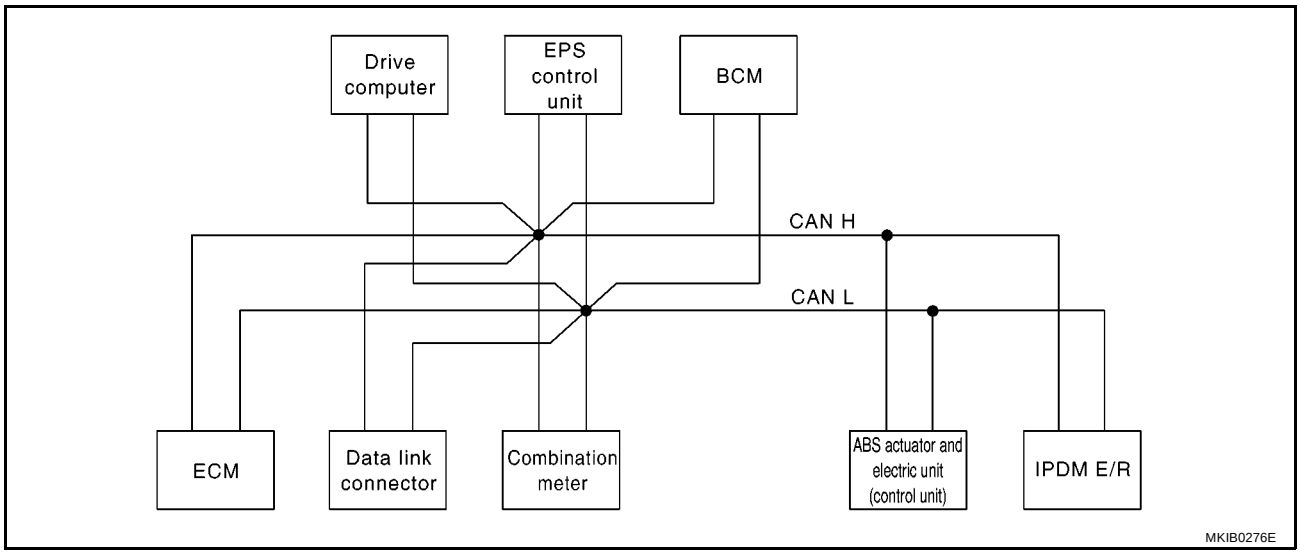

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R	R			
Engine coolant temperature signal	T	R						
Fuel consumption monitor signal	T	R						
Oil pressure switch signal		R		R				T
A/C compressor request signal	T							R
Heater fan switch signal	R					T		
Cooling fan speed request signal	T							R
Cooling fan speed status signal	R							T
Position lights request signal		R		R		T		R

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Position light status signal	R							T
Low beam request signal						T		R
Low beam status signal	R							T
High beam request signal		R				T		R
High beam status signal	R							T
Day time light request signal						T		R
Vehicle speed signal	R	R			R		T	
	R	T	R	R	R	R		
Sleep/wake up signal		R	R			T		R
Door switch signal		R	R	R		T		R
Turn indicator signal		R				T		
Buzzer output signal		R				T		
		R	T					
MI signal	T	R		R				
Front wiper request signal						T		R
Front wiper stop position signal						R		T
Rear window defogger switch signal						T		R
Rear window defogger control signal	R							T
Drive computer signal		T		R				
EPS warning indicator signal		R		R	T			
ABS warning lamp signal		R		R			T	
ABS operation signal	R			R			T	
Brake warning lamp signal		R					T	
Buck-up lamp signal					R	T		
Fuel low warning signal		T		R				
Battery charge malfunction signal		T		R				
Air bag system warning signal		T		R				
Brake fluid level warning signal		T		R				
Engine coolant temperature warning signal		T		R				
Front fog lamp request signal		R				T		R
Rear fog lamp status signal		R				T		
Headlamp washer request signal						T		R
Door lock/unlock request signal			R			T		
Door lock/unlock status signal			R			T		
KEY indicator signal		R	T					
LOCK indicator signal		R	T					

TYPE 5/TYPE 6

System diagram

- Type 5

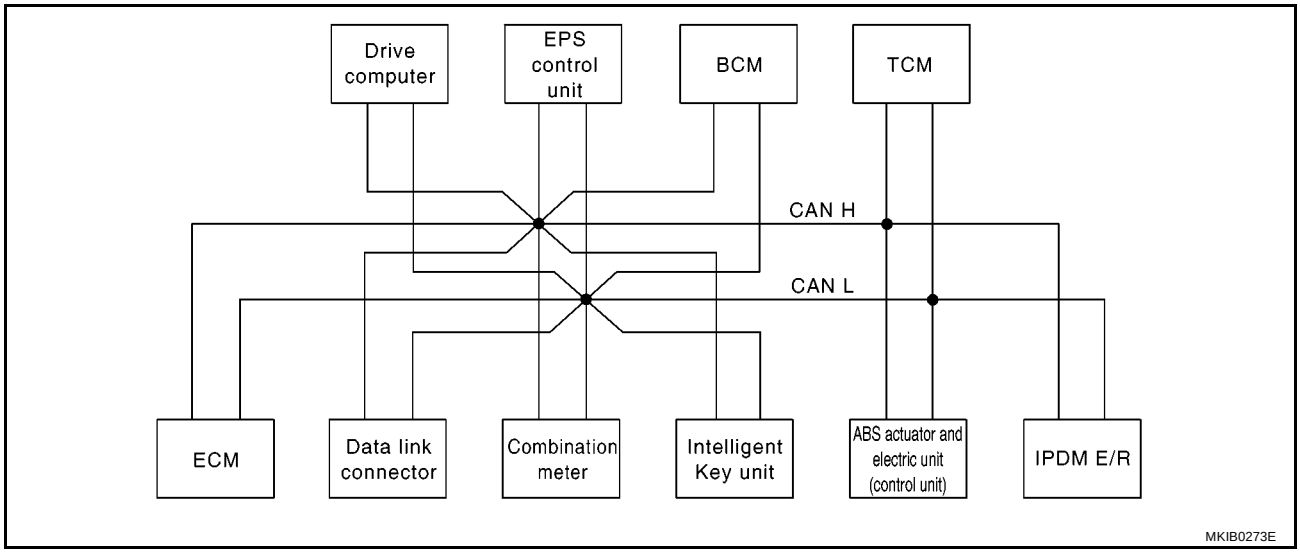

- Type 6

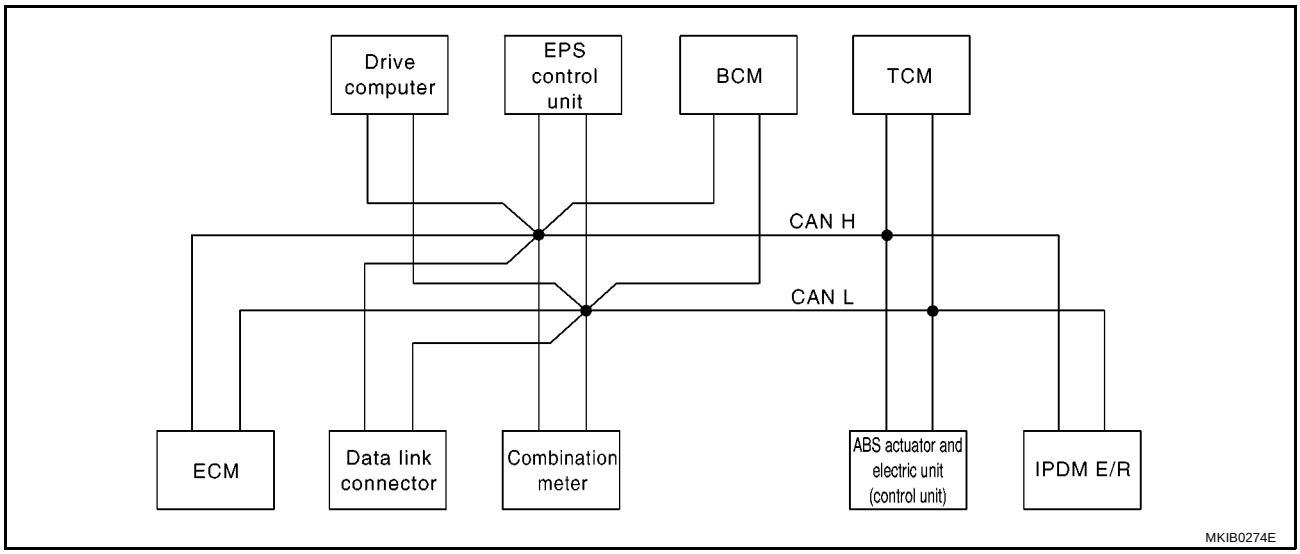

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
Engine speed signal	T	R		R	R		R		
Engine coolant temperature sig-nal	T	R							
A/T self-diagnosis signal	R							T	
Output shaft revolution signal	R							T	
Accelerator pedal position signal	T						R	R	
Closed throttle position signal	T							R	
Wide open throttle position sig-nal	T						R	R	

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
A/T shift position signal		R						T	
A/T shift schedule change demand signal							T	R	
Stop lamp switch signal		T						R	
O/D OFF indicator lamp signal		R						T	
Engine and A/T integrated control signal	T							R	
	R							T	
Fuel consumption monitor signal	T	R							
Oil pressure switch signal		R		R					T
A/C compressor request signal	T								R
A/C switch signal	R								T
Heater fan switch signal	R					T			
Cooling fan speed request signal	T								R
Cooling fan speed status signal	R								T
Position lights request signal		R		R		T			R
Position light status signal	R								T
Low beam request signal						T			R
Low beam status signal	R								T
High beam request signal		R				T			R
High beam status signal	R								T
Day time light request signal						T			R
Vehicle speed signal	R	R			R		T		
	R	T	R	R	R	R			
Sleep/wake up signal		R	R			T			R
Door switch signal		R	R	R		T			R
Turn indicator signal		R				T			
Buzzer output signal		R				T			
		R	T						
MI signal	T	R		R					
Front wiper request signal						T			R
Front wiper stop position signal						R			T
Rear window defogger switch signal						T			R
Rear window defogger control signal	R								T
Drive computer signal		T		R					
EPS warning lamp signal		R		R	T				
ABS warning lamp signal		R		R			T		
ESP warning lamp signal		R		R			T		
ESP OFF indicator signal		R					T		
SLIP indicator lamp signal		R					T		

Signals	ECM	Combi-nation meter.	Intelli-gent Key unit	Drive com-puter	EPS control unit	BCM	ABS actuator and electric unit (control unit)	TCM	IPDM E/R
ESP operation signal	R						T		
TCS operation signal	R						T		
ABS operation signal	R						T		
Steering angle signal					T		R		
Brake warning lamp signal		R					T		
Buck-up lamp signal					R	T			
Fuel low warning signal		T		R					
Battery charge malfunction signal		T		R					
Air bag system warning signal		T		R					
Brake fluid level warning signal		T		R					
Engine coolant temperature warning signal		T		R					
Front fog lamp request signal		R				T			R
Rear fog lamp status signal		R				T			
Headlamp washer request signal						T			R
Door lock/unlock request signal			R			T			
Door lock/unlock status signal			R			T			
KEY indicator signal		R	T						
LOCK indicator signal		R	T						

TYPE 7/TYPE 8

System diagram

- Type 7

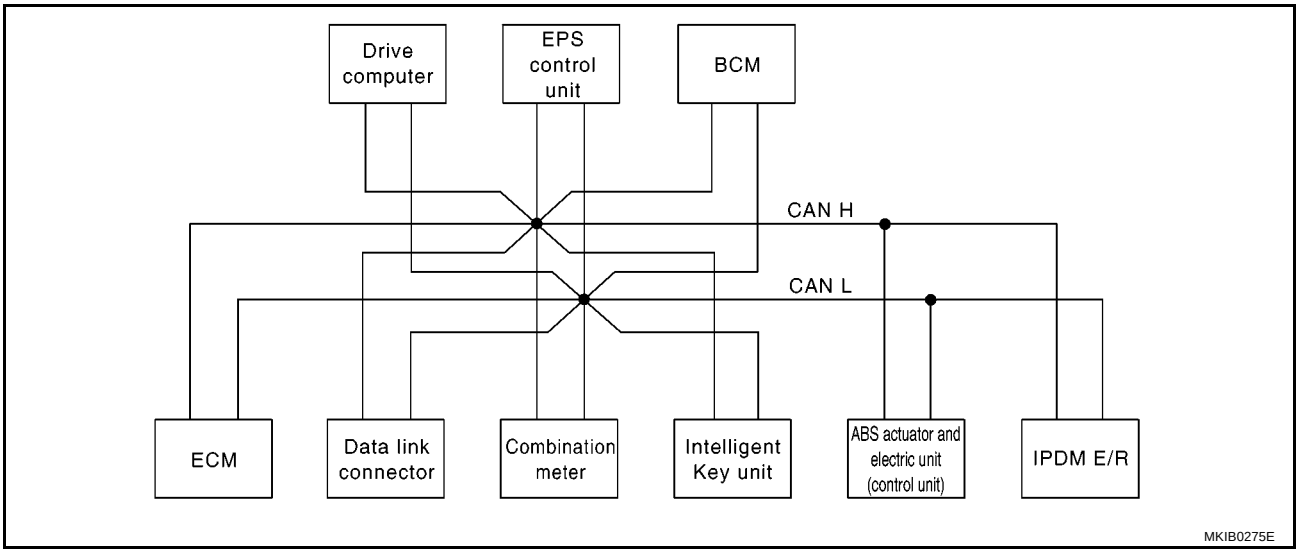

- Type 8

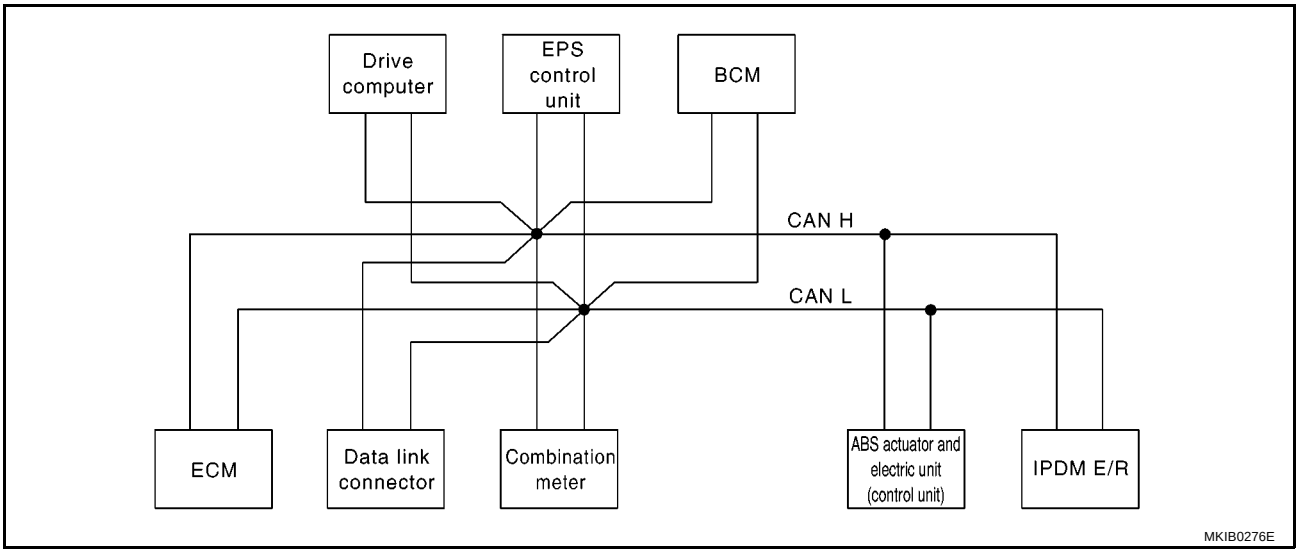

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R	R		R	
Engine coolant temperature signal	T	R						
Fuel consumption monitor signal	T	R						
Accelerator pedal position signal	T						R	
Oil pressure switch signal		R		R				T
A/C compressor request signal	T							R
A/C switch signal	R							T
Heater fan switch signal	R					T		
Cooling fan speed request signal	T							R

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Cooling fan speed status signal	R							T
Position lights request signal		R		R		T		R
Position light status signal	R							T
Low beam request signal						T		R
Low beam status signal	R							T
High beam request signal		R				T		R
High beam status signal	R							T
Day time light request signal						T		R
Vehicle speed signal	R	R			R		T	
	R	T	R	R	R	R		
Sleep/wake up signal		R	R			T		R
Door switch signal		R	R	R		T		R
Turn indicator signal		R				T		
Buzzer output signal		R				T		
		R	T					
MI signal	T	R		R				
Front wiper request signal						T		R
Front wiper stop position signal						R		T
Rear window defogger switch signal						T		R
Rear window defogger control signal	R							T
Drive computer signal		T		R				
EPS warning indicator signal		R		R	T			
ABS warning lamp signal		R		R			T	
ESP warning lamp signal		R		R			T	
ESP OFF indicator signal		R					T	
SLIP indicator lamp signal		R					T	
ESP operation signal	R						T	
TCS operation signal	R						T	
ABS operation signal	R						T	
Steering angle signal					T		R	
Brake warning lamp signal		R					T	
Buck-up lamp signal					R	T		
Fuel low warning signal		T		R				
Battery charge malfunction signal		T		R				
Air bag system warning signal		T		R				
Brake fluid level warning signal		T		R				
Engine coolant temperature warning signal		T		R				
Front fog lamp request signal		R				T		R
Rear fog lamp status signal		R				T		
Headlamp washer request signal						T		R

Signals	ECM	Combination meter.	Intelligent Key unit	Drive computer	EPS control unit	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Door lock/unlock request signal			R			T		
Door lock/unlock status signal			R			T		
KEY indicator signal		R	T					
LOCK indicator signal		R	T					

BASIC SERVICE PROCEDURE

PFP:00018

Idle Speed and Ignition Timing Check

EBS00OK7

IDLE SPEED

With CONSULT-II

Check idle speed in “DATA MONITOR” mode with CONSULT-II.

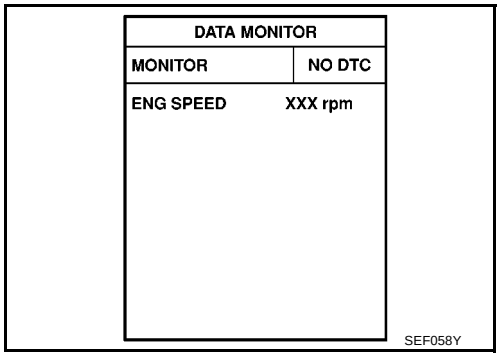

Without CONSULT-II

Check idle speed by installing the pulse type tachometer clamp on the loop wire or on suitable high-tension wire which installed between No. 1 ignition coil and No. 1 spark plug.

NOTE:
For the method of installing the tachometer, refer to EC-502, "IGNITION TIMING" .

IGNITION TIMING

1. Slide the harness protector of ignition coil No.1 to clear the wires.
2. Attach timing light to the wires as shown in the figure.

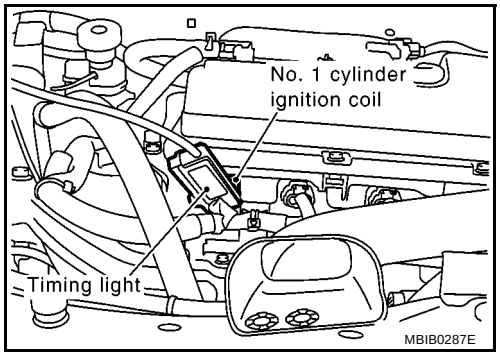

3. Check ignition timing.

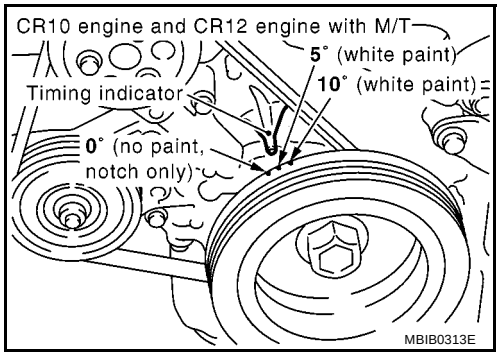

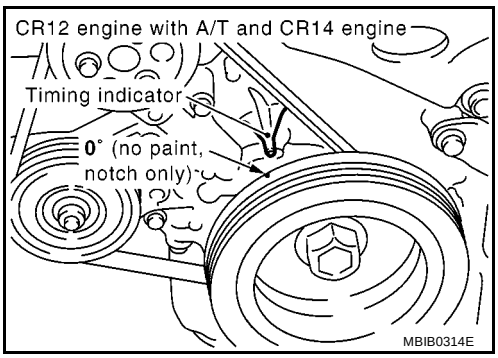

Accelerator Pedal Released Position Learning

EBS00OK8

DESCRIPTION

Accelerator Pedal Released Position Learning is an operation to learn the fully released position of the accelerator pedal by monitoring the accelerator pedal position sensor output signal. It must be performed each time harness connector of accelerator pedal position sensor or ECM is disconnected.

OPERATION PROCEDURE

1. Make sure that accelerator pedal is fully released.
2. Turn ignition switch ON and wait at least 2 seconds.
3. Turn ignition switch OFF wait at least 10 seconds.
4. Turn ignition switch ON and wait at least 2 seconds.
5. Turn ignition switch OFF wait at least 10 seconds.

Throttle Valve Closed Position Learning

EBS00OK9

DESCRIPTION

Throttle Valve Closed Position Learning is an operation to learn the fully closed position of the throttle valve by monitoring the throttle position sensor output signal. It must be performed each time harness connector of electric throttle control actuator or ECM is disconnected.

OPERATION PROCEDURE

1. Make sure that accelerator pedal is fully released.
2. Turn ignition switch ON.
3. Turn ignition switch OFF and wait at least 10 seconds.
   Make sure that throttle valve moves during above 10 seconds by confirming the operating sound.

Idle Air Volume Learning

EBS00OKA

DESCRIPTION

Idle Air Volume Learning is an operation to learn the idle air volume that keeps each engine within the specific range. It must be performed under any of the following conditions:

- Each time electric throttle control actuator or ECM is replaced.
- Idle speed or ignition timing is out of specification.

PREPARATION

Before performing Idle Air Volume Learning, make sure that all of the following conditions are satisfied.
Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9V (At idle)
- Engine coolant temperature: 70 - 95°C (158 - 203°F)
- PNP switch: ON
- Electric load switch: OFF
  (Air conditioner, headlamp, rear window defogger)
  On vehicles equipped with daytime light systems, set lighting switch to the 1st position to light only small lamps.
- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up

For A/T models with CONSULT-II, drive vehicle until “FLUID TEMP SE” in “DATA MONITOR” mode of “A/T” system indicates less than 0.9V.
For A/T models without CONSULT-II and M/T models, drive vehicle for 10 minutes.

OPERATION PROCEDURE

With CONSULT-II

1. Perform EC-503, "Accelerator Pedal Released Position Learning" .
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic PREPARATION (previously mentioned) are in good order.
5. Select “IDLE AIR VOL LEARN” in “WORK SUPPORT” mode.

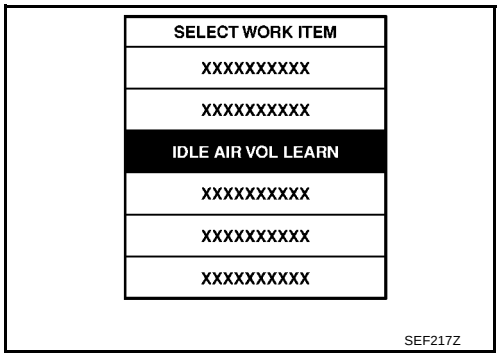

6. Touch “START” and wait 20 seconds.

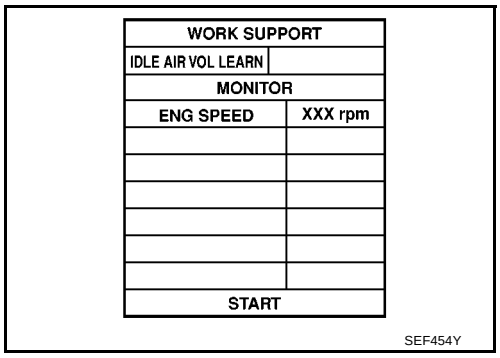

7. Make sure that “CMPLT” is displayed on CONSULT-II screen. If “CMPLT” is not displayed, Idle Air Volume Learning will not be carried out successfully. In this case, find the cause of the incident by referring to the Diagnostic Procedure below.
8. Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications.

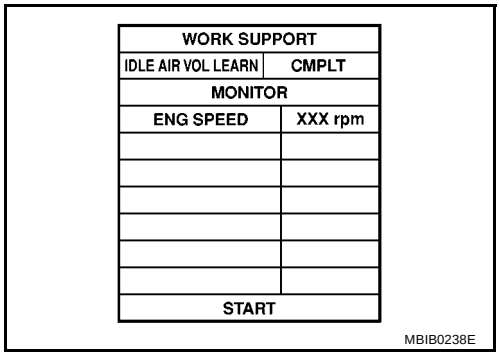

ITEM	SPECIFICATION
Idle speed	M/T: 650±50 rpm A/T: 700±50 rpm (in P or N position)
Ignition timing	M/T: 5±2° BTDC A/T: 5±2° BTDC (in P or N position)

Without CONSULT-II

NOTE:

- **It is better to count the time accurately with a clock.**
- **It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.**

1. Perform EC-503, "Accelerator Pedal Released Position Learning" .
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic PREPARATION (previously mentioned) are in good order.

5. Turn ignition switch OFF and wait at least 10 seconds.
6. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
7. Repeat the following procedure quickly five times within 5 seconds.

a. Fully depress the accelerator pedal.
b. Fully release the accelerator pedal.

8. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 20 seconds until the MI stops blinking and turned ON.
9. Fully release the accelerator pedal within 3 seconds after the MI turned ON.
10. Start engine and let it idle.
11. Wait 20 seconds.

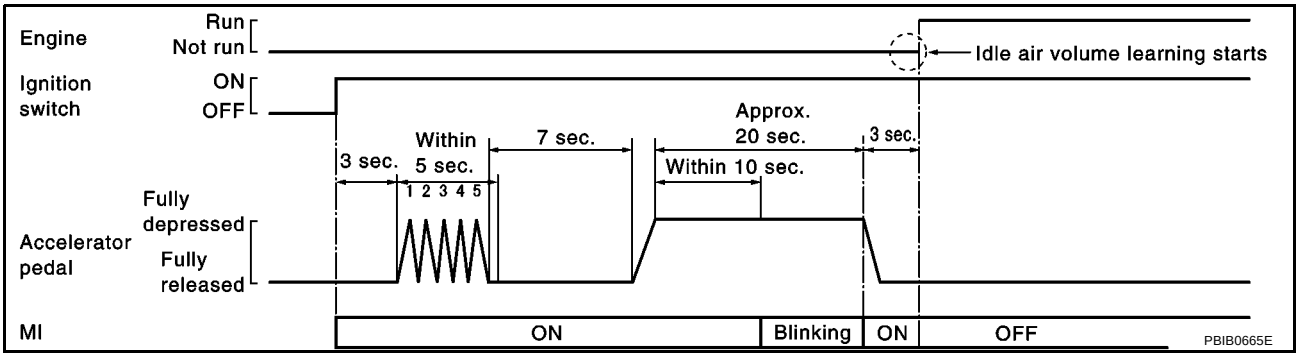

12. Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications.

ITEM	SPECIFICATION
Idle speed	M/T: 650±50 rpm A/T: 700±50 rpm (in P or N position)
Ignition timing	M/T: 5±2° BTDC A/T: 5±2° BTDC (in P or N position)

13. If idle speed and ignition timing are not within the specification, Idle Air Volume Learning will not be carried out successfully. In this case, find the cause of the incident by referring to the Diagnostic Procedure below.

DIAGNOSTIC PROCEDURE

If idle air volume learning cannot be performed successfully, proceed as follows:

1. **Check that throttle valve is fully closed.**
2. **Check PCV valve operation.**
3. **Check that downstream of throttle valve is free from air leakage.**
4. **When the above three items check out OK, engine component parts and their installation condition are questionable. Check and eliminate the cause of the incident.**
   It is useful to perform EC-561, "TROUBLE DIAGNOSIS - SPECIFICATION VALUE" .
5. **If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform Idle air volume learning all over again:**
   - **Engine stalls.**
   - **Erroneous idle.**

Fuel Pressure Check

EBS00OKB

FUEL PRESSURE RELEASE

With CONSULT-II

1. Turn ignition switch ON.

2. Perform “FUEL PRESSURE RELEASE” in “WORK SUPPORT” mode with CONSULT-II.
3. Start engine.
4. After engine stalls, crank it two or three times to release all fuel pressure.
5. Turn ignition switch OFF.

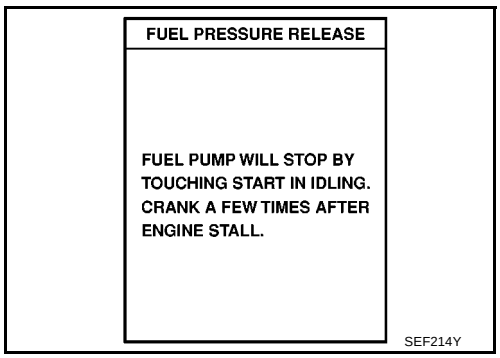

Without CONSULT-II

1. Remove fuel pump fuse located in IPDM E/R.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch OFF.
5. Reinstall fuel pump fuse after servicing fuel system.

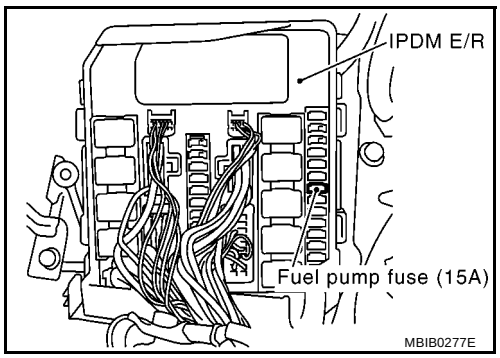

FUEL PRESSURE CHECK

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

NOTE:
Prepare pans or saucers under the disconnected fuel line because the fuel may spill out. The fuel pressure cannot be completely released because QR engine models do not have fuel return system.

CAUTION:

- **The fuel hose connection method used when taking fuel pressure check must not be used for other purposes.**
- **Be careful not to scratch or put debris around connection area when servicing, so that the quick connector maintains sealability with O-rings inside.**
- **When installing fuel hose quick connector, refer to EM-16, "AIR CLEANER AND AIR DUCT" .**

1. Release fuel pressure to zero. Refer to EC-505, "FUEL PRESSURE RELEASE" .
2. Prepare fuel hose and fuel hose clamp for fuel pressure check, and connect fuel pressure gauge.
   - Use suitable fuel hose for fuel pressure check (genuine NISSAN fuel hose without quick connector).
   - To avoid unnecessary force or tension to hose, use moderately long fuel hose for fuel pressure check.
   - Do not use the fuel hose for checking fuel pressure with damage or cracks on it.
   - Use Pressure Gauge to check fuel pressure.
3. Remove fuel hose. Refer to EM-16, "AIR CLEANER AND AIR DUCT" .
   - Do not twist or kink fuel hose because it is plastic hose.
   - Do not remove fuel hose from quick connector.
   - Keep the original fuel hose to be free from intrusion of dust or foreign substances with a suitable cover.

4. Install the fuel pressure gauge as shown in the figure.
   - Wipe off oil or dirt from hose insertion part using cloth moistened with gasoline.
   - Apply proper amount of gasoline between top of the fuel tube and No.1 spool.
   - Insert fuel hose for fuel pressure check until it touches the No.1 spool on fuel tube.
   - Use NISSAN genuine hose clamp (part number: 16439 N4710 or 16439 40U00).
   - When reconnecting fuel line, always use new clamps.
   - When reconnecting fuel hose, check the original fuel hose for damage and abnormality.
   - Use a torque driver to tighten clamps.
   - Install hose clamp to the position within 1 - 2 mm (0.04 - 0.08 in).

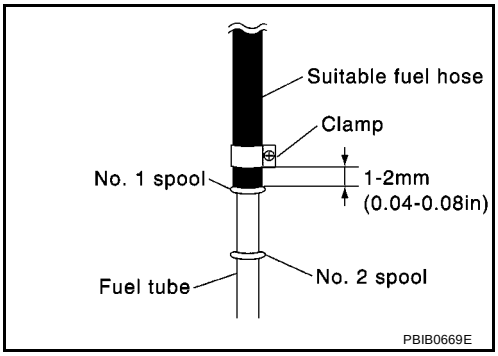

   Tightening torque:

   1 - 1.5 N·m (0.1 - 0.15 kg-m, 9 - 13 in-lb)

   - Make sure that clamp screw does not contact adjacent parts.

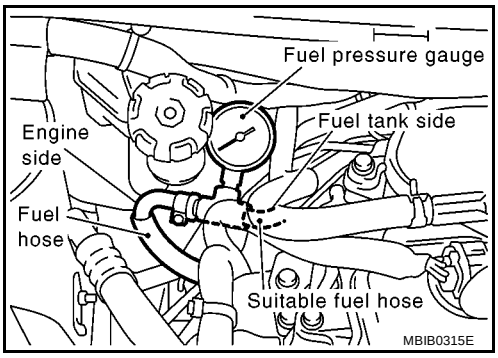

5. After connecting fuel hose for fuel pressure check, pull the hose with a force of approximately 98 N (10 kg, 22 lb) to confirm fuel tube does not come off.
6. Turn ignition switch ON, and check for fuel leakage.
7. Start engine and check for fuel leakage.
8. Read the indication of fuel pressure gauge.
   - Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.
   - During fuel pressure check, confirm for fuel leakage from fuel connection every 3 minutes.

   At idling: Approximately 350 kPa (3.5 bar, 3.57 kg/cm^2 , 51 psi)
9. If result is unsatisfactory, go to next step.
10. Check the following.
    - Fuel hoses and fuel tubes for clogging
    - Fuel filter for clogging
    - Fuel pump
    - Fuel pressure regulator for clogging

    If OK, replace fuel pressure regulator.
    If NG, repair or replace.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

Introduction

EBS00OKC

The ECM has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Emission-related diagnostic information
Diagnostic Trouble Code (DTC)
Freeze Frame data
1st Trip Diagnostic Trouble Code (1st Trip DTC)
1st Trip Freeze Frame data

The above information can be checked using procedures listed in the table below.

×: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data
CONSULT-II	×	×	×	×
ECM	×	×*	—	—

*: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

The malfunction indicator (MI) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode. (Refer to EC-520 .)

Two Trip Detection Logic

EBS00OKD

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MI will not light up at this stage. <1st trip>
If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MI lights up. The MI lights up at the same time when the DTC is stored. <2nd trip>
The “trip” in the “Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation.
When there is an open circuit on MI circuit, the ECM can not warn the driver by lighting MI up when there is a malfunction on engine control system.
Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system has malfunction and MI circuit is open by means of operating fail-safe function.
The fail-safe function also operate when above diagnoses except MI circuit are detected, and demands the driver to repair the malfunction.

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,500 rpm due to the fuel cut

Emission-related Diagnostic Information

EBS00OKE

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed.
If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MI will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MI lights up. In other words, the DTC is stored in the ECM memory and the MI lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored.
For fail-safe items, DTC is stored in the ECM memory even in the 1st trip.
Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in EC-510, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION"
When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in Work Flow procedure Step II, refer to EC-516, "WORK FLOW" . Then perform DTC Confirmation Procedure or Overall Function Check to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

How to Read DTC and 1st Trip DTC

DTC and 1st trip DTC can be read by the following methods.

With CONSULT-II

CONSULT-II displays the DTC in “SEFL-DIAG RESULTS” mode. Examples: P0117, P0340, P1065, etc. (CONSULT-II also displays the malfunctioning component or system.)

Without CONSULT-II

The number of blinks of the MI in the Diagnostic Test Mode II (Self-Diagnostic Results) indicates the DTC. Example: 0107, 0340 etc.

- **1st trip DTC No. is the same as DTC No.**
- **Output of a DTC indicates a malfunction. However, the Diagnostic Test Mode II do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-II can identify malfunction status as shown below. Therefore, using CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.
If the DTC is being detected currently, the time data will be [0].
If a 1st trip DTC is stored in the ECM, the time data will be [1t].

DTC display

SELF DIAG RESULTS	
DTC RESULTS	TIME
CKP SEN/CIRCUIT [P0335]	0

1st trip DTC display

SELF DIAG RESULTS	
DTC RESULTS	TIME
CKP SEN/CIRCUIT [P0335]	1t

PBIB0911E

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, base fuel schedule and intake air temperature at the moment a malfunction is detected.
Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II. For details, see EC-549, "Freeze Frame Data and 1st Trip Freeze Frame Data" .
Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MI on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in EC-510, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .

HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION

How to Erase DTC

With CONSULT-II

The emission related diagnostic information in the ECM can be erased by selecting “ERASE” in the “SELF-DIAG RESULTS” mode with CONSULT-II.

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Touch “ENGINE”.
3. Touch “SELF-DIAG RESULTS”.
4. Touch “ERASE”. (The DTC in the ECM will be erased.)

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays “ON” after repair work, be sure to turn ignition switch “OFF” once. Wait at least 10 seconds and then turn it “ON” again.

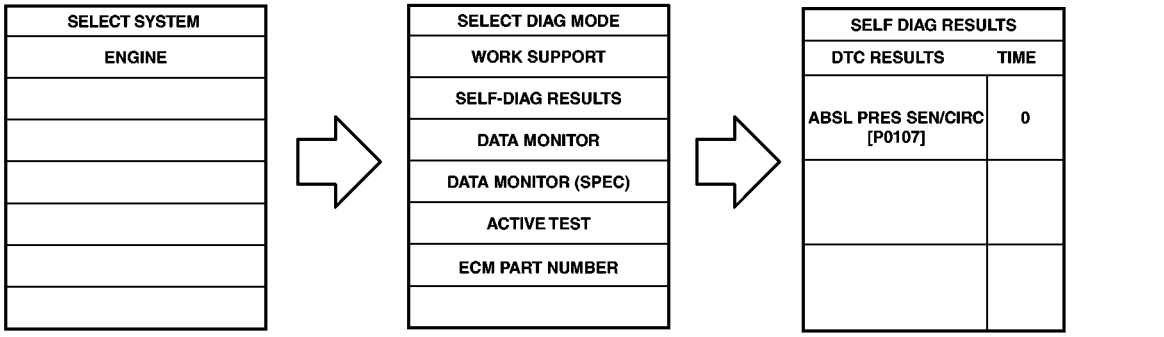

2. Turn **CONSULT-II** “ON” and touch “ENGINE”.
3. Touch “SELF-DIAG RESULTS”.
4. Touch “ERASE”. (The DTC in the ECM will be erased.)

MBIB0657E

Without CONSULT-II

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once.
2. Wait at least 10 seconds and then turn it ON (engine stopped) again.
3. Change the diagnostic test mode from Mode II to Mode I by depressing the accelerator pedal. Refer to EC-512, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .

- **If the battery is disconnected, the emission-related diagnostic information will be lost within 24 hours.**
- **The following data are cleared when the ECM memory is erased.**

– Diagnostic trouble codes
– 1st trip diagnostic trouble codes
– Freeze frame data
– 1st trip freeze frame data
– Others

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

NATS (Nissan Anti-theft System)

EBS00OKF

- **If the security indicator lights up with the ignition switch in the ON position or "NATS MALFUNCTION" is displayed on "SELF-DIAG RESULTS" screen, perform self-diagnostic results mode with CONSULT-II using NATS program card. Refer to BL-223, "NATS(Nissan Anti-Theft System)" .**
- **Confirm no self-diagnostic results of NATS is displayed before touching "ERASE" in "SELF-DIAG RESULTS" mode with CONSULT-II.**
- **When replacing ECM, initialization of NATS system and registration of all NATS ignition key IDs must be carried out with CONSULT-II using NATS program card.**
  Therefore, be sure to receive all keys from vehicle owner.
  Regarding the procedures of NATS initialization and NATS ignition key ID registration, refer to CONSULT-II operation manual, NATS.

SELF DIAG RESULTS	
DTC RESULTS	TIME
NATS MALFUNCTION [P1610]	0

SEF515Y

Malfunction Indicator (MI)

EBS00OKG

DESCRIPTION

The MI is located on the instrument panel.

1. The MI will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
   - If the MI does not light up, refer to DI-65, "WARNING LAMPS" or see EC-838 .
2. When the engine is started, the MI should go off.
   If the MI remains on, the on board diagnostic system has detected an engine system malfunction.

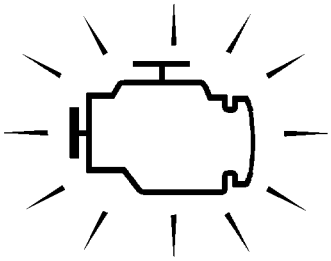

SAT652J

ON BOARD DIAGNOSTIC SYSTEM FUNCTION

The on board diagnostic system has the following four functions.

Diagnostic Test Mode	KEY and ENG. Status	Function	Explanation of Function
Mode I	Ignition switch in ON position  Engine stopped 	BULB CHECK	This function checks the MI bulb for damage (blown, open circuit, etc.). If the MI does not come on, check MI circuit.
	Engine running 	MALFUNCTION WARNING	This is a usual driving condition. When a malfunction is detected twice in two consecutive driving cycles (two trip detection logic), the MI will light up to inform the driver that a malfunction has been detected. The following malfunctions will light up or blink the MI in the 1st trip. ● One trip detection diagnoses

Diagnostic Test Mode	KEY and ENG. Status	Function	Explanation of Function
Mode II	Ignition switch in ON position  Engine stopped 	SELF-DIAGNOSTIC RESULTS	This function allows DTCs and 1st trip DTCs to be read.
	Engine running 	HEATED OXYGEN SENSOR 1 MONITOR	This function allows the fuel mixture condition (lean or rich), monitored by heated oxygen sensor 1, to be read.

When there is an open circuit on MI circuit, the ECM can not warn the driver by lighting MI up when there is malfunction on engine control system.
Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system has a malfunction and MI circuit is open by means of operating fail-safe function.
The fail-safe function also operate when above diagnoses except MI circuit are detected, and demands the driver to repair the a malfunction.

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,500 rpm due to the fuel cut

MI Flashing without DTC

If the ECM is in Diagnostic Test Mode II, MI may flash when engine is running. In this case, check ECM diagnostic test mode. EC-512, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .
How to switch the diagnostic test (function) modes, and details of the above functions are described later, EC-512, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .
The following emission-related diagnostic information is cleared when the ECM memory is erased.

- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- Others

HOW TO SWITCH DIAGNOSTIC TEST MODE

NOTE:

- **It is better to count the time accurately with a clock.**
- **It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.**
- **Always ECM returns to Diagnostic Test Mode I after ignition switch is turned OFF.**

How to Set Diagnostic Test Mode II (Self-diagnostic Results)

1. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
2. Repeat the following procedure quickly five times within 5 seconds.

a. Fully depress the accelerator pedal.
b. Fully release the accelerator pedal.

3. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 10 seconds until the MI starts blinking.
4. Fully release the accelerator pedal.

ECM has entered to Diagnostic Test Mode II (Self-diagnostic results).

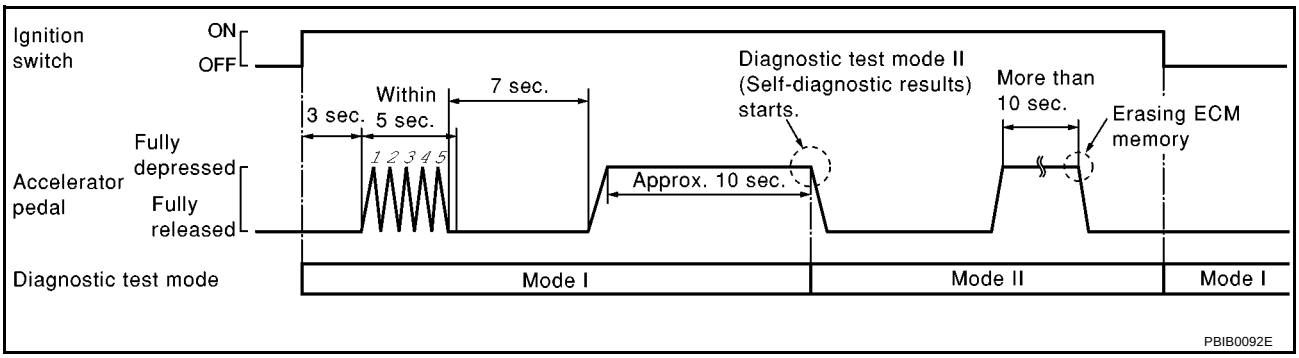

How to Set Diagnostic Test Mode II (Heated Oxygen Sensor 1 Monitor)

1. Set the ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to EC-512, "How to Set Diagnostic Test Mode II (Self-diagnostic Results)" .
2. Start Engine.
   ECM has entered to Diagnostic Test Mode II (Heated oxygen sensor 1 monitor).

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

1. Set ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to EC-512, "How to Set Diagnostic Test Mode II (Self-diagnostic Results)" .
2. Fully depress the accelerator pedal and keep it for more than 10 seconds.
   The emission-related diagnostic information has been erased from the backup memory in the ECM.
3. Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.

DIAGNOSTIC TEST MODE I — BULB CHECK

In this mode, the MI on the instrument panel should stay ON. If it remains OFF, check the bulb. Refer to DI-65, "WARNING LAMPS" or see EC-838 .

DIAGNOSTIC TEST MODE I — MALFUNCTION WARNING

MI	Condition
ON	When the malfunction is detected.
OFF	No malfunction.

- These DTC numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS)

DIAGNOSTIC TEST MODE II — SELF-DIAGNOSTIC RESULTS

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MI as shown below.
The DTC and 1st trip DTC are displayed at the same time. If the MI does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MI illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT-II. A DTC will be used as an example for how to read a code.

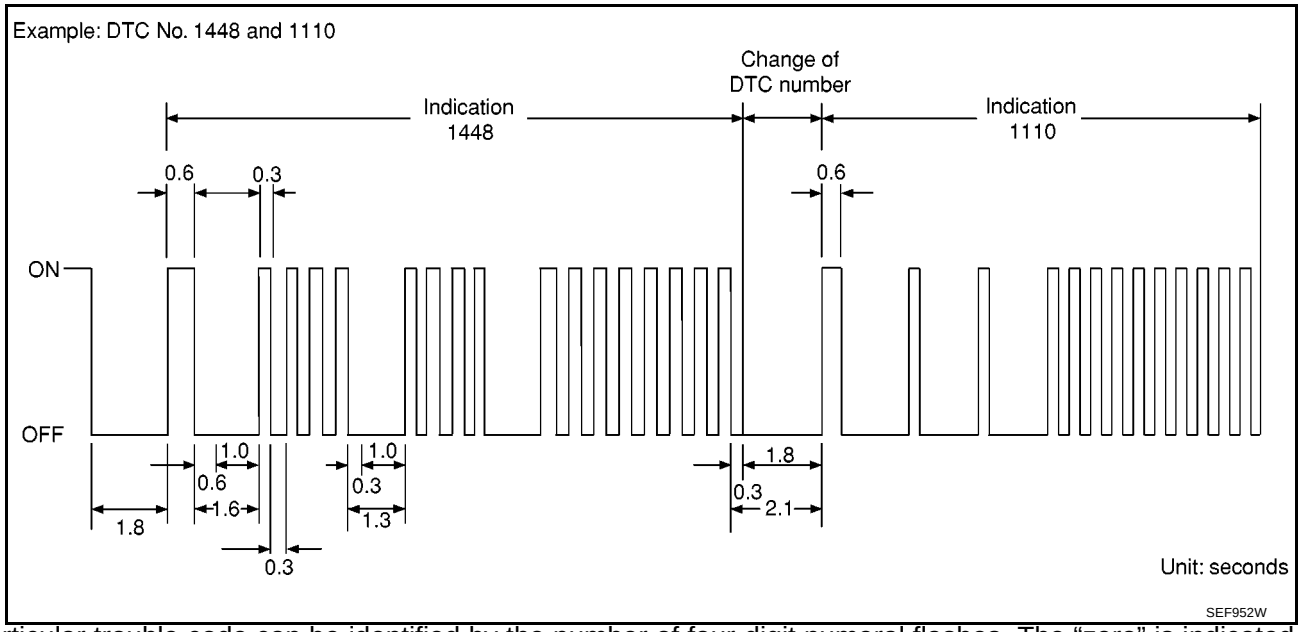

A particular trouble code can be identified by the number of four-digit numeral flashes. The “zero” is indicated by the number of ten flashes. The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-second) - OFF (0.6-second) cycle.
The 100th-digit numeral and lower digit numerals consist of a 0.3-second ON and 0.3-second OFF cycle.
A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.
A change from one trouble code to another occurs at an interval of 1.8-second OFF.
In this way, all the detected malfunctions are classified by their DTC numbers. The DTC 0000 refers to no malfunction. (See EC-472, "INDEX FOR DTC")

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

The DTC can be erased from the back up memory in the ECM by depressing accelerator pedal. Refer to EC-512, "HOW TO SWITCH DIAGNOSTIC TEST MODE" .

- **If the battery is disconnected, the DTC will be lost from the backup memory within 24 hours.**
- **Be careful not to erase the stored memory before starting trouble diagnoses.**

DIAGNOSTIC TEST MODE II — HEATED OXYGEN SENSOR 1 MONITOR

In this mode, the MI displays the condition of the fuel mixture (lean or rich) which is monitored by the heated oxygen sensor 1.

MI	Fuel mixture condition in the exhaust gas	Air-fuel ratio feedback control condition
ON	Lean	Closed loop system
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop system

*: Maintains conditions just before switching to open loop.

To check the heated oxygen sensor 1 function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.
Next run engine at about 2,000 rpm for about 2 minutes under no load conditions. Then make sure that the MI comes ON more than 5 times within 10 seconds with engine running at 2,000 rpm under no load.

TROUBLE DIAGNOSIS

PFP:00004

Trouble Diagnosis Introduction

EBS00OKI

INTRODUCTION

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no malfunctions such as vacuum leaks, fouled spark plugs, or other malfunctions with the engine.
It is much more difficult to diagnose an incident that occurs intermittently rather than continuously. Most intermittent incidents are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.
A visual check only may not find the cause of the incidents. A road test with CONSULT-II or a circuit tester connected should be performed. Follow the Work Flow on EC-516 .
Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such incidents, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A Diagnostic Worksheet like the example on EC-518 should be used.
Start your diagnosis by looking for conventional malfunctions first. This will help troubleshoot driveability malfunctions on an electronically controlled engine vehicle.

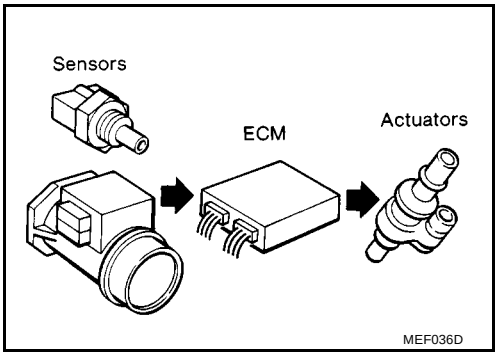

MEF036D

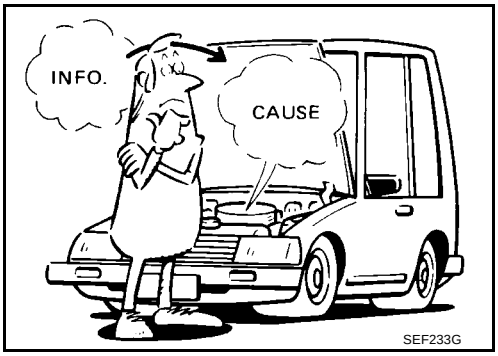

SEF233G

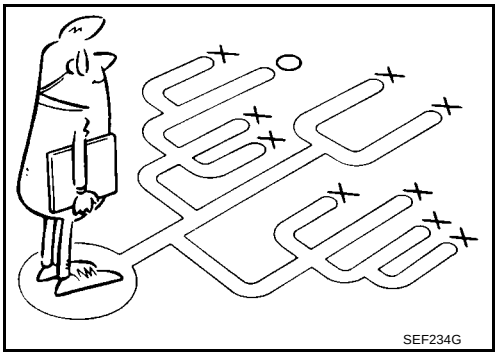
SEF234G

WORK FLOW

Flow Chart

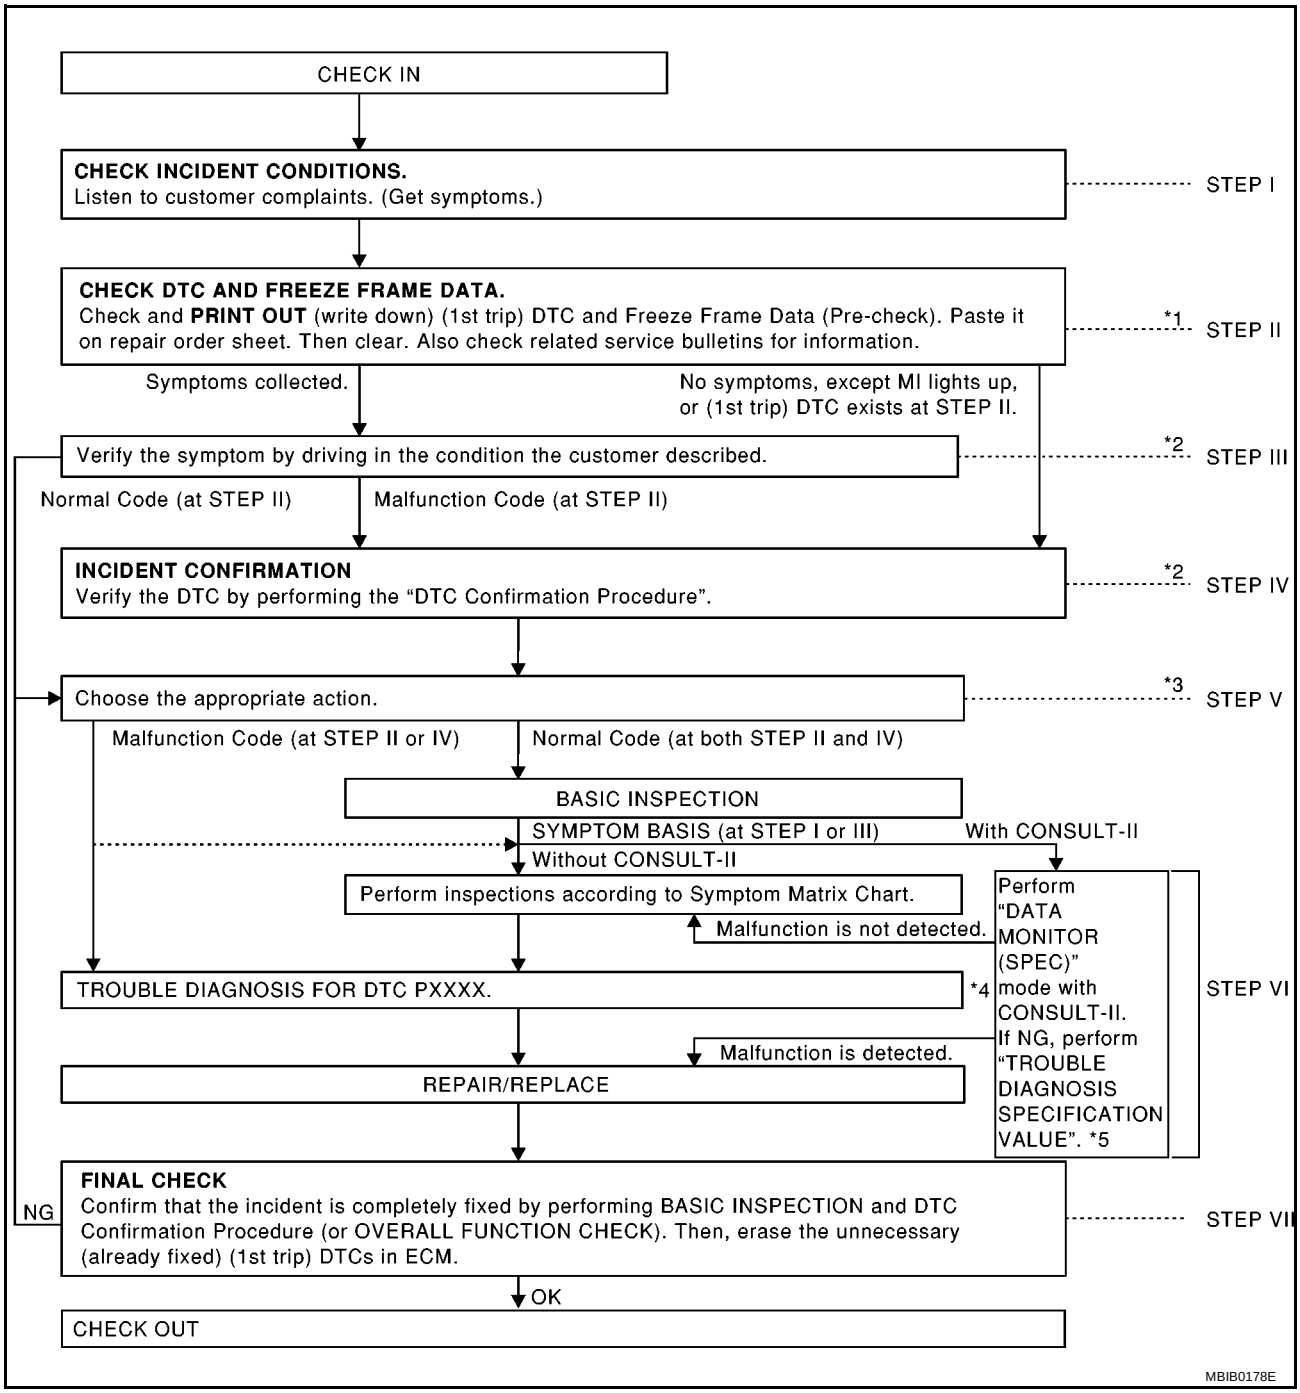

*1 If time data of “SELF-DIAG RESULTS” is other than [0] or [1t], perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

*2 If the incident cannot be verified, perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

*3 If the on board diagnostic system cannot be performed, check main power supply and ground circuit. Refer to EC-567, "POWER SUPPLY CIRCUIT FOR ECM" .

*4 If malfunctioning part cannot be detected, perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

*5 EC-561, "TROUBLE DIAGNOSIS - SPECIFICATION VALUE"

Description for Work Flow

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the DIAGNOSTIC WORK SHEET, EC-518 .
STEP II	Before confirming the concern, check and write down (print out using CONSULT-II) the (1st trip) DTC and the (1st trip) freeze frame data, then erase the DTC and the data. (Refer to EC-510 .) The (1st trip) DTC and the (1st trip) freeze frame data can be used when duplicating the incident at STEP III & IV. If the incident cannot be verified, perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" . Study the relationship between the cause, specified by (1st trip) DTC, and the symptom described by the customer. (The Symptom Matrix Chart will be useful. See EC-527 .) Also check related service bulletins for information.
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The DIAGNOSTIC WORK SHEET and the freeze frame data are useful to verify the incident. Connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" . If the malfunction code is detected, skip STEP IV and perform STEP V.
STEP IV	Try to detect the (1st trip) DTC by driving in (or performing) the DTC Confirmation Procedure. Check and read the (1st trip) DTC and (1st trip) freeze frame data by using CONSULT-II. During the (1st trip) DTC verification, be sure to connect CONSULT-II to the vehicle in “DATA MONITOR (AUTO TRIG)” mode and check real time diagnosis results. If the incident cannot be verified, perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" . In case the DTC Confirmation Procedure is not available, perform the Overall Function Check instead. The (1st trip) DTC cannot be displayed by this check, however, this simplified check is an effective alternative. The NG result of the Overall Function Check is the same as the (1st trip) DTC detection.
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed to the BASIC INSPECTION. (Refer to EC-522 .) If COSULT-II is available, perform “DATA MONITOR (SPEC)” mode with CONSULT-II and proceed to the TOROUBLE DIAGNOSIS – SPECIFICATION VALUE. (Refer to EC-561 .) (If malfunction is detected, proceed to PERAIR/REPLACE.) Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-527 .)
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) Harness Layouts. Gently shake the related connectors, components or wiring harness with CONSULT-II set in “DATA MONITOR (AUTO TRIG)” mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT-II. Refer to EC-539 , EC-555 . The Diagnostic Procedure in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to Circuit Inspection in GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" . Repair or replace the malfunction parts. If malfunctioning part cannot be detected, perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the DTC Confirmation Procedure and confirm the normal code [DTC No. P0000] is detected. If the incident is still detected in the final check, perform STEP VI by using a method different from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) (1st trip) DTC in ECM and TCM (Transmission control module). (Refer to EC-510, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION")

DIAGNOSTIC WORKSHEET

Description

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.
In general, each customer feels differently about an incident. It is important to fully understand the symptoms or conditions for a customer complaint.
Utilize a diagnostic worksheet like the one on the next page in order to organize all the information for troubleshooting.

KEY POINTS

WHAT ..... Vehicle & engine model
WHEN ..... Date, Frequencies
WHERE..... Road conditions
HOW ..... Operating conditions, Weather conditions, Symptoms

SEF907L

Worksheet Sample

Customer name MR/MS		Model & Year	VIN
Engine #		Trans.	Mileage
Incident Date		Manuf. Date	In Service Date
Fuel and fuel filler cap		☐ Vehicle ran out of fuel causing misfire ☐ Fuel filler cap was left off or incorrectly screwed on.	
Symptoms	☐ Startability	☐ Impossible to start ☐ No combustion ☐ Partial combustion ☐ Partial combustion affected by throttle position ☐ Partial combustion NOT affected by throttle position ☐ Possible but hard to start ☐ Others [ ]	
	☐ Idling	☐ No fast idle ☐ Unstable ☐ High idle ☐ Low idle ☐ Others [ ]	
	☐ Driveability	☐ Stumble ☐ Surge ☐ Knock ☐ Lack of power ☐ Intake backfire ☐ Exhaust backfire ☐ Others [ ]	
	☐ Engine stall	☐ At the time of start ☐ While idling ☐ While accelerating ☐ While decelerating ☐ Just after stopping ☐ While loading	
Incident occurrence		☐ Just after delivery ☐ Recently ☐ In the morning ☐ At night ☐ In the daytime	
Frequency		☐ All the time ☐ Under certain conditions ☐ Sometimes	
Weather conditions		☐ Not affected	
	Weather	☐ Fine ☐ Raining ☐ Snowing ☐ Others [ ]	
	Temperature	☐ Hot ☐ Warm ☐ Cool ☐ Cold ☐ Humid °F	
Engine conditions		☐ Cold ☐ During warm-up ☐ After warm-up Engine speed 0 2,000 4,000 6,000 8,000 rpm	
Road conditions		☐ In town ☐ In suburbs ☐ Highway ☐ Off road (up/down)	
Driving conditions		☐ Not affected ☐ At starting ☐ While idling ☐ At racing ☐ While accelerating ☐ While cruising ☐ While decelerating ☐ While turning (RH/LH) Vehicle speed 0 10 20 30 40 50 60 MPH	
Malfunction indicator lamp		☐ Turned on ☐ Not turned on	

MTBL0017

DTC Inspection Priority Chart

EBS00OKJ

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:
If DTC U1000 and/or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000 and U1001. Refer to EC-572, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

Priority	Detected items (DTC)
1	● U1000 U1001 CAN communication line ● P0107 P0108 Manifold absolute pressure sensor ● P0117 P0118 Engine coolant temperature sensor ● P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor ● P0221 P0222 P0223 P1223 P1224 P1225 P1226 Throttle position sensor ● P0226 P0227 P0228 P1227 P1228 Accelerator pedal position sensor ● P0327 P0328 Knock sensor ● P0335 Crankshaft position sensor (POS) ● P0340 Camshaft position sensor (PHASE) ● P0605 ECM ● P1171 Intake error ● P1229 Sensor power supply ● P1610-P1615 NATS ● P2122 P2123 P2127 P2128 P2138 Accelerator pedal position sensor
2	● P0132 P0134 Heated oxygen sensor 1 ● P0138 Heated oxygen sensor 2 ● P1065 ECM power supply ● P1122 Electric throttle control function ● P1124 P1126 Throttle control motor relay ● P1128 Throttle control mother ● P1805 Brake switch
3	● P1121 Electric throttle control actuator ● P1211 ESP control unit ● P1212 ESP communication line ● P1217 Engine over temperature (OVERHEAT)

Fail-safe Chart

EBS00OKK

- When the DTC listed bellow is detected, the ECM enters fail-safe mode and the MI lights up.

DTC No.	Detected items	Engine operating condition in fail-safe mode
P0107 P0108	Manifold absolute pressure sensor circuit	Engine speed will not rise more than 2,500 rpm due to the fuel cut.
P0117 P0118	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch ON or START. CONSULT-II displays the engine coolant temperature decided by ECM.
		Condition: Just as ignition switch is turned ON or Start — Engine coolant temperature decided (CONSULT-II display): 40°C (104°F)
		Condition: More than approx. 4 minutes after ignition ON or Start — Engine coolant temperature decided (CONSULT-II display): 80°C (176°F)
		Condition: Except as shown above — Engine coolant temperature decided (CONSULT-II display): 40 - 80°C (104 - 176°F) (Depends on the time)
		When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running.
P0122 P0123 P0222 P0223 P2135	Throttle position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.
P0221 P0222 P0223 P1223 P1224	Throttle position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.
P0226 P0227 P0228 P1227 P1228	Accelerator pedal position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.
P1121	Electric throttle control actuator	(When electric throttle control actuator does not function properly due to the return spring malfunction:) ECM controls the electric throttle control actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm.
		(When throttle valve opening angle in fail-safe mode is not in specified range:) ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.
		(When ECM detects the throttle valve is stuck open:) While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P position, and engine speed will not exceed 1,000 rpm or more.
P1122	Electric throttle control function	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P1124 P1126	Throttle control motor relay	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P1128	Throttle control motor	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P1171	Intake air	When accelerator pedal is depressed, engine speed will not rise more than 2,500 rpm due to fuel cut.

DTC No.	Detected items	Engine operating condition in fail-safe mode
P1229	Sensor power supply	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P2122 P2123 P2127 P2128 P2138	Accelerator pedal position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

- When there is an open circuit on MI circuit, the ECM can not warn the driver by lighting MI up when there is a malfunction on engine control system.
  Therefore, when electrical controlled throttle and part of ECM related diagnoses is continuously detected as NG for 5 trips, ECM warns the driver that engine control system has a malfunction and MI circuit is open by means of operating fail-safe function.
  The fail-safe function also operate when above diagnoses except MI circuit are detected, and demands the driver to repair the malfunction.

Engine operating condition in fail-safe mode	Engine speed will not rise more than 2,500 rpm due to the fuel cut

Basic Inspection

EBS00OKL

1. INSPECTION START

1. Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.
2. Open engine hood and check the following:
- Harness connectors for improper connections
- Wiring harness for improper connections, pinches and cut
- Vacuum hoses for splits, kinks and improper connections
- Hoses and ducts for leaks
- Air cleaner clogging
- Gasket

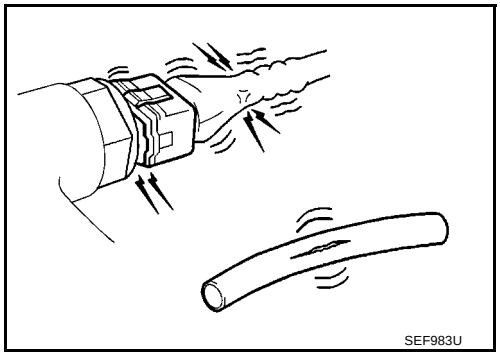
SEF983U

3. Confirm that electrical or mechanical loads are not applied.
- Headlamp switch is OFF.
- Air conditioner switch is OFF.
- Rear window defogger switch is OFF.
- Steering wheel is in the straight-ahead position, etc.

4. Start engine and warm it up until engine coolant temperature indicator points the middle of gauge.
Ensure engine stays below 1,000 rpm.

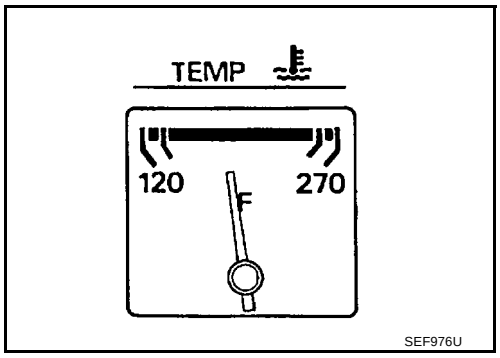

SEF976U

5. Run engine at about 2,000 rpm for about 2 minutes under no load.
6. Make sure that no DTC is displayed with CONSULT-II.

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

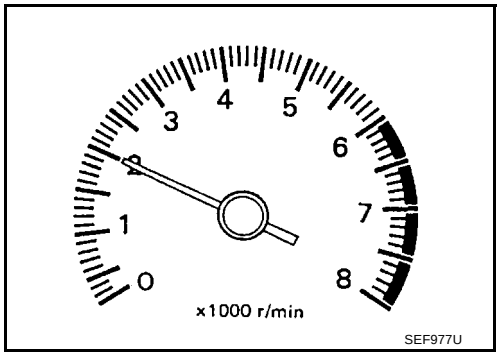

SEF977U

2. REPAIR OR REPLACE

Repair or replace components as necessary according to corresponding Diagnostic Procedure.

>> GO TO 3

3. CHECK TARGET IDLE SPEED

With CONSULT-II

1. Run engine at about 2,000 rpm for about 2 minutes under no load.
2. Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.

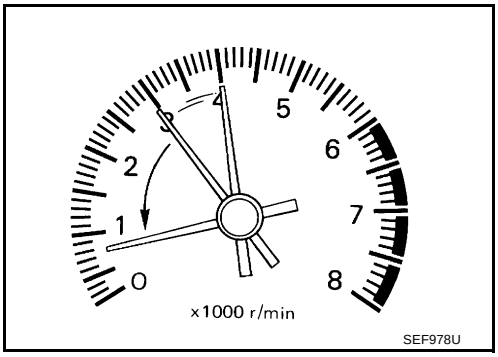

3. Read idle speed in “DATA MONITOR” mode with CONSULT-II.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

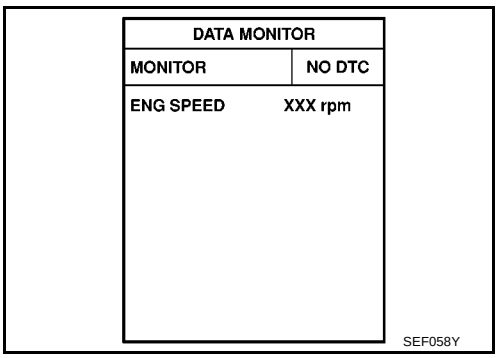

Without CONSULT-II

1. Run engine at about 2,000 rpm for about 2 minutes under no load.
2. Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.
3. Check idle speed.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

OK or NG

OK >> GO TO 10.
NG >> GO TO 4.

4. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

1. Stop engine.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .

>> GO TO 5.

5. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-503, "Throttle Valve Closed Position Learning" .

>> GO TO 6.

6. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-503, "Idle Air Volume Learning" .
Is Idle Air Volume Learning carried out successfully?

Yes or No

Yes >> GO TO 7.
No >> 1. Follow the instruction of Idle Air Volume Learning.
2. GO TO 4.

7. CHECK TARGET IDLE SPEED AGAIN

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Read idle speed in “DATA MONITOR” mode with CONSULT-II.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Check idle speed.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

OK or NG

OK >> GO TO 10.
NG >> GO TO 8.

8. DETECT MALFUNCTIONING PART

Check the following.

- Check camshaft position sensor (PHASE) and circuit. Refer to EC-650 .
- Check crankshaft position sensor (POS) and circuit. Refer to EC-643 .

OK or NG

OK >> GO TO 9.
NG >> 1. Repair or replace.
2. GO TO 4.

9. CHECK ECM FUNCTION

1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to EC-511, "NATS (Nissan Anti-theft System)" .

>> GO TO 4.

10. CHECK IGNITION TIMING

1. Run engine at idle.
2. Check ignition timing with a timing light.

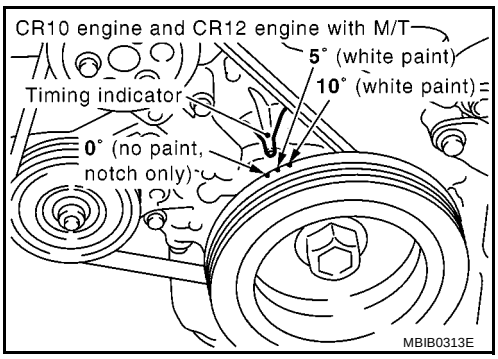

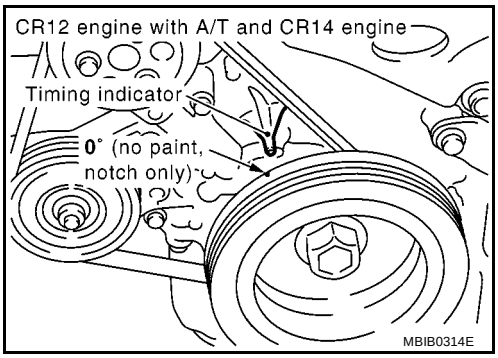

M/T: 5 ± 2° BTDC
A/T: 5 ± 2° BTDC (in P or N position)

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 11.

11. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

1. Stop engine.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .

>> GO TO 12.

12. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-503, "Throttle Valve Closed Position Learning" .

>> GO TO 13.

13. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-503, "Idle Air Volume Learning" .
Is Idle Air Volume Learning carried out successfully?

Yes or No

Yes >> GO TO 14.
No >> 1. Follow the instruction of Idle Air Volume Learning.
2. GO TO 4.

14. CHECK TARGET IDLE SPEED AGAIN

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Read idle speed in “DATA MONITOR” mode with CONSULT-II.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Check idle speed.

M/T: 650 ± 50 rpm
A/T: 700 ± 50 rpm (in P or N position)

OK or NG

OK >> GO TO 15.
NG >> GO TO 17.

15. CHECK IGNITION TIMING AGAIN

1. Run engine at idle.
2. Check ignition timing with a timing light.

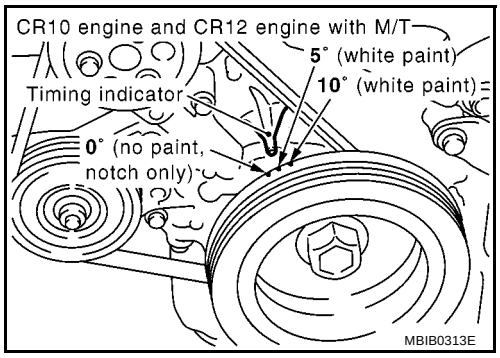

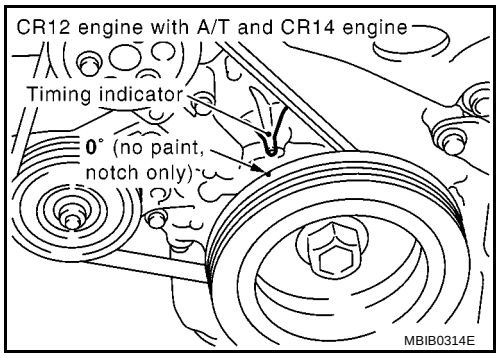

M/T: 5 ± 2° BTDC
A/T: 5 ± 2° BTDC (in P or N position)

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 16.

16. CHECK TIMING CHAIN INSTALLATION

Check timing chain installation. Refer to EM-48, "TIMING CHAIN" .

OK or NG

OK >> GO TO 17.
NG >> 1. Repair the timing chain installation.
2. GO TO 4.

17. DETECT MALFUNCTIONING PART

Check the following.

- Check camshaft position sensor (PHASE) and circuit. Refer to EC-650 .
- Check crankshaft position sensor (POS) and circuit. Refer to EC-643 .

OK or NG

OK >> GO TO 18.
NG >> 1. Repair or replace.
2. GO TO 4.

18. CHECK ECM FUNCTION

1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
2. Perform initialization of NATS system and registration of NATS ignition key IDs. Refer to EC-511, "NATS (Nissan Anti-theft System)" .

>> GO TO 4.

Symptom Matrix Chart

EBS00OKM

SYSTEM — BASIC ENGINE CONTROL SYSTEM

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-826
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-505
	Injector circuit	1	1	2	3	2		2	2			2			EC-820
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-840

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-844
	Incorrect idle speed adjustment	3	3				1	1	1	1		1			EC-522
	Electric throttle control actuator	1	1	2	3	3	2	2	2	2		2		2	EC-664, EC-667, EC-673, EC-678
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-522
	Ignition circuit	1	1	2	2	2		2	2			2			EC-792
Main power supply and ground circuit		2	2	3	3	3		3	3		2	3			EC-567
Manifold absolute pressure sensor circuit		1	1	2	2	2		2	2			2			EC-575
Engine coolant temperature sensor circuit		1	1	2	2	2	3	2	2	3	1	2			EC-580
Throttle position sensor circuit			1	2		2	2	2	2	2		2			EC-585, EC-609, EC-615, EC-703, EC-709, EC-711, EC-722, EC-751
Accelerator pedal position sensor circuit				3	2	1	2			2					EC-621, EC-630, EC-713, EC-733, EC-742, EC-757
Heated oxygen sensor 1 circuit			1	2	3	2		2	2			2			EC-591, EC-597, EC-780
Knock sensor circuit				2	2							3			EC-639
Crankshaft position sensor (POS) circuit		2	2												EC-643
Camshaft position sensor (PHASE) circuit		2	2												EC-650
Vehicle speed signal circuit			2	3		3						3			EC-808
ECM		2	2	3	3	3	3	3	3	3	3	3			EC-657, EC-660
Intake valve timing control solenoid valve circuit		3	3	2		1	3	2	2	3		3			EC-809
PNP switch circuit				3		3	3	3	3	3		3			EC-815

	SYMPTOM													Reference page
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Refrigerant pressure sensor circuit		2				3	3	3	3		4			EC-831
Electrical load signal circuit						3	3	3	3					EC-836
Air conditioner circuit	2	2	3	3	3	3	3	3	3		3		2	ATC-17 or MTC-17
ABS actuator and electric unit (control unit)			4											BRC-8 or BRC-61

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

SYSTEM — ENGINE MECHANICAL & OTHER

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel tank	5	5												FL-8
	Fuel piping			5	5	5		5	5			5			FL-3, EM-30
	Vapor lock														—
	Valve deposit	5		5	5	5		5	5			5			—
	Poor fuel (Heavy weight gasoline, Low octane)														—

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Air	Air duct		5	5		5		5	5			5			EM-16
	Air cleaner														
	Air leakage from air duct (Manifold absolute pressure sensor —electric throttle control actuator)	5			5		5			5					
	Electric throttle control actuator														
	Air leakage from intake manifold/ Collector/Gasket														EM-20
Cranking	Battery	1	1	1		1		1	1			1		1	SC-5
	Alternator circuit														SC-15
	Starter circuit	3													SC-39
	Signal plate/Flywheel/Drive plate	6													EM-73
	PNP switch	4													AT-361
Engine	Cylinder head	5	5	5	5	5		5	5			5			EM-59
	Cylinder head gasket										4		3		
	Cylinder block	6	6	6	6	6		6	6			6	4		EM-73
	Piston														
	Piston ring														
	Connecting rod														
	Bearing														
	Crankshaft														
Valve mechanism	Timing chain	5	5	5	5	5		5	5			5			EM-48
	Camshaft														EM-36
	Intake valve timing control														EM-48
	Intake valve												3		EM-59
	Exhaust valve														
Exhaust	Exhaust manifold/Tube/Muffler/ Gasket	5	5	5	5	5		5	5			5			EM-22, EX-3
	Three way catalyst														
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	5	5	5	5	5		5	5			5	2		EM-24, LU-6 , LU-7 , LU-3
	Oil level (Low)/Filthy oil														LU-4

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Cooling	Radiator/Hose/Radiator filler cap	5	5	5	5	5		5	5		2	5			CO-11
	Thermostat									5					CO-23
	Water pump														CO-21
	Water gallery														CO-7
	Cooling fan									5					CO-11
	Coolant level (low)/Contaminated coolant														CO-8
NATS (Nissan Anti-theft System)		1	1												EC-511 or BL-223

1 - 6: The numbers refer to the order of inspection.

Engine Control Component Parts Location

EBS00OKN

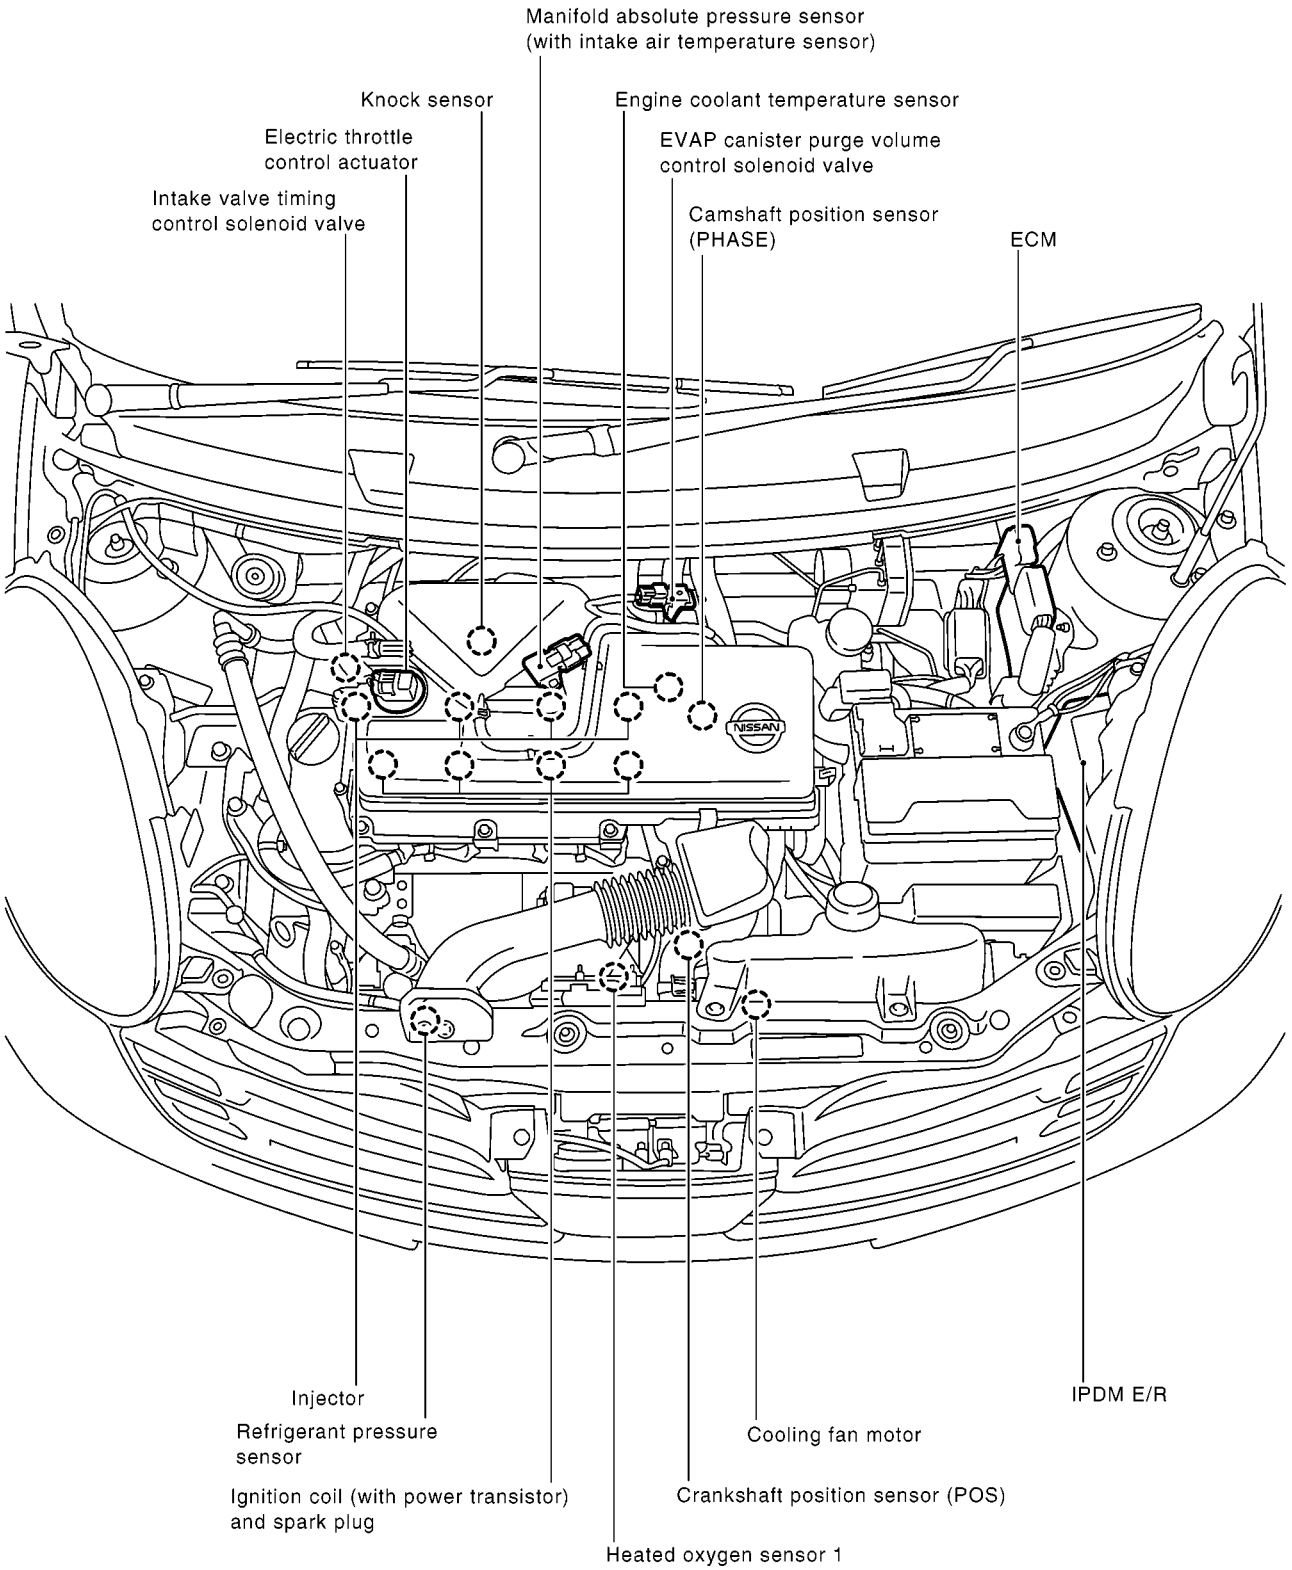

MBIB1069E

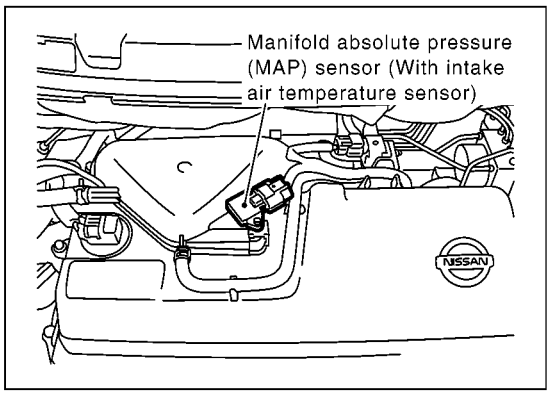
Manifold absolute pressure (MAP) sensor (With intake air temperature sensor)
NISSAN

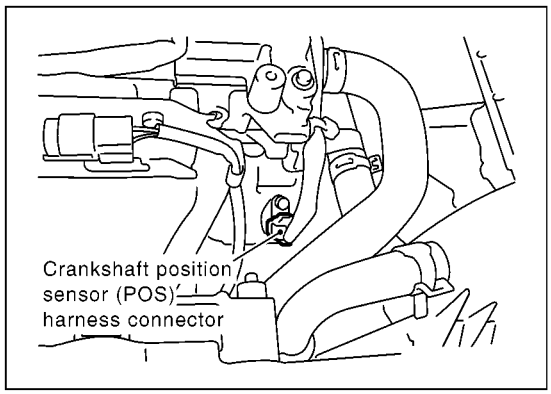
Crankshaft position sensor (POS) harness connector

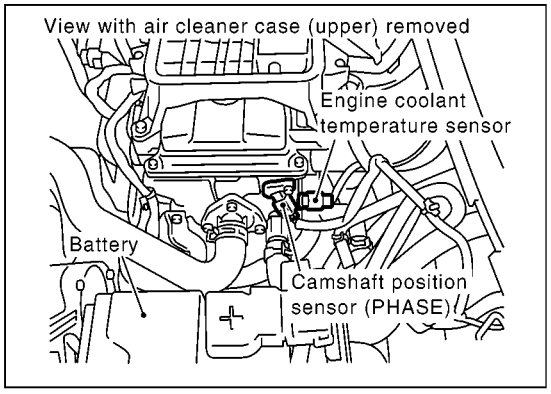
View with air cleaner case (upper) removed
Engine coolant temperature sensor
Battery
Camshaft position sensor (PHASE)

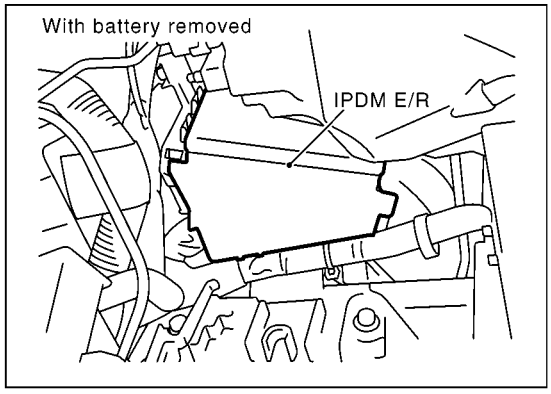
With battery removed
IPDM E/R

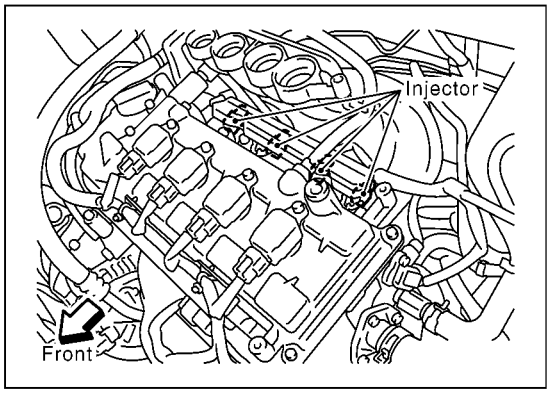
Injector
Front

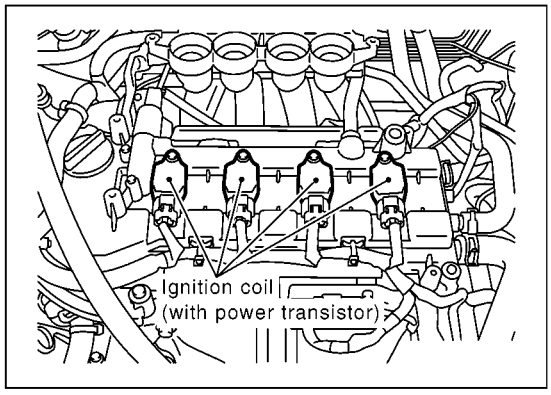
Ignition coil (with power transistor)

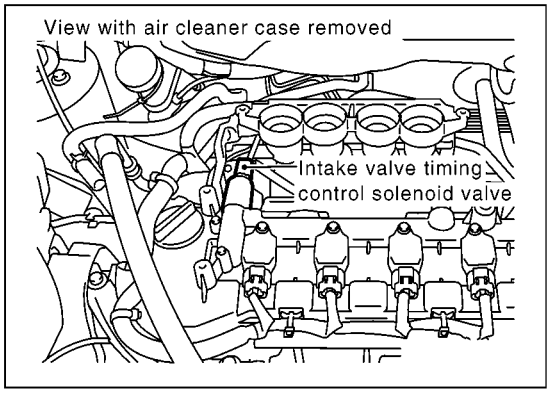
View with air cleaner case removed
Intake valve timing control solenoid valve

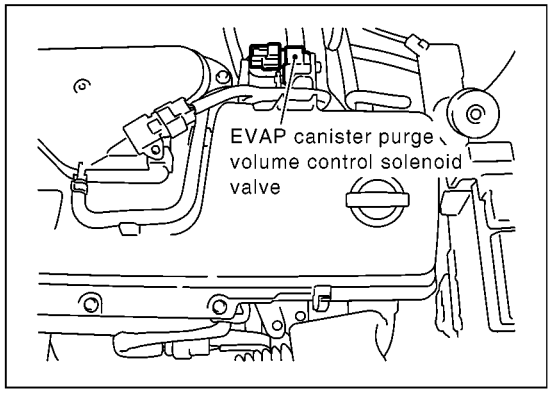
EVAP canister purge volume control solenoid valve

MBIB1070E

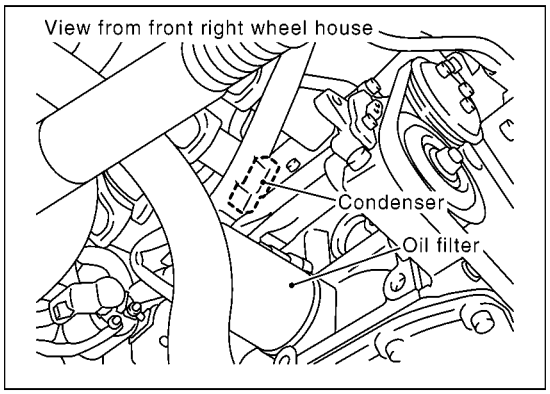
View from front right wheel house
Condenser
Oil filter

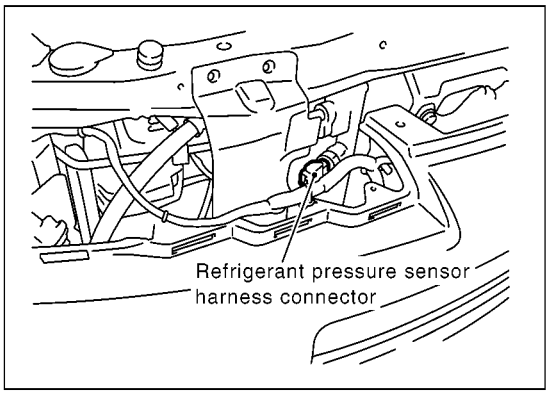
Refrigerant pressure sensor
harness connector

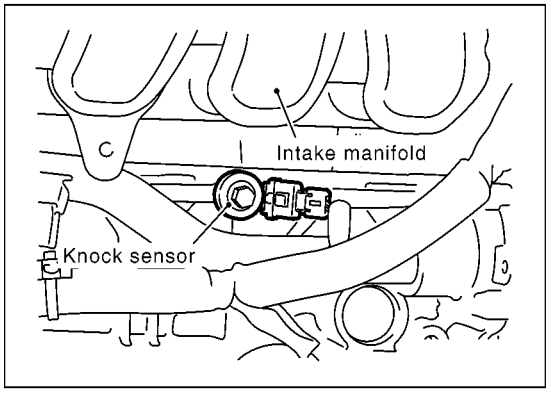
Intake manifold
Knock sensor

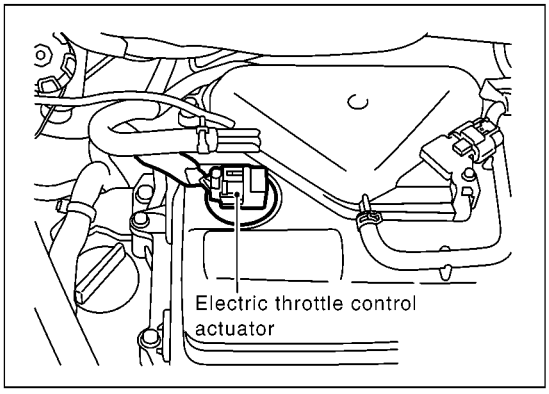
Electric throttle control
actuator

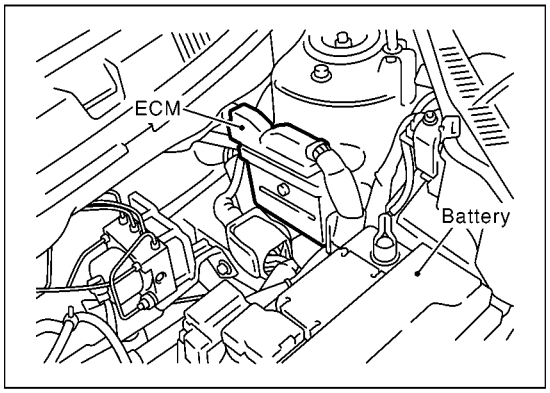
ECM
Battery

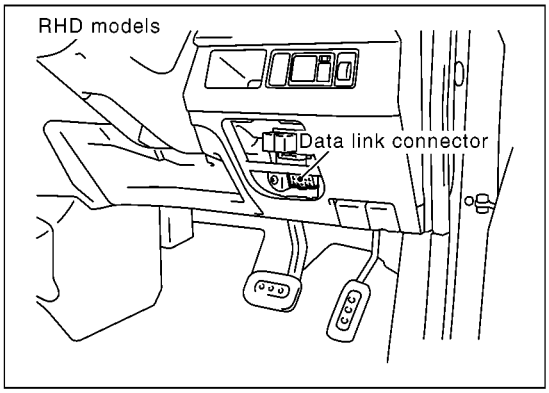
RHD models
Data link connector

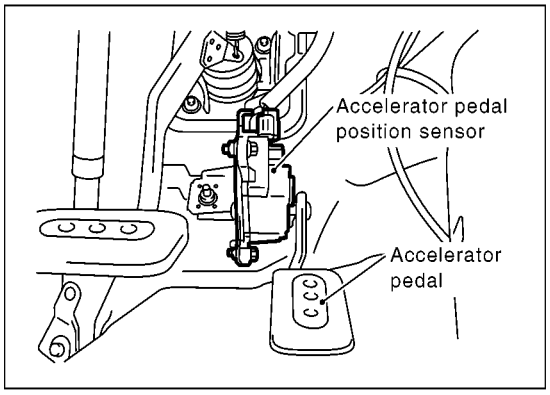
Accelerator pedal
position sensor
Accelerator
pedal

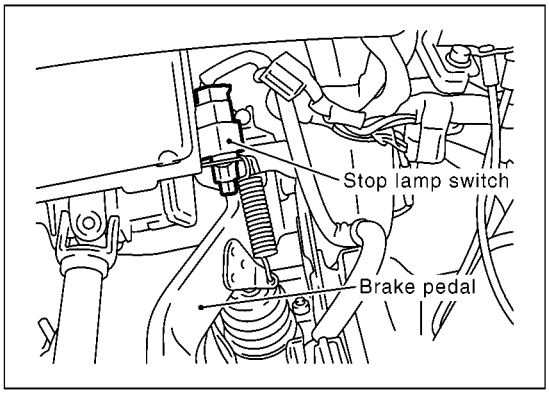
Stop lamp switch
Brake pedal

MBIB1071E

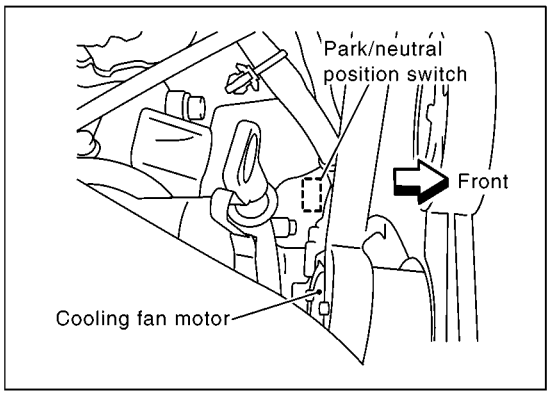
Park/neutral
position switch
Front
Cooling fan motor

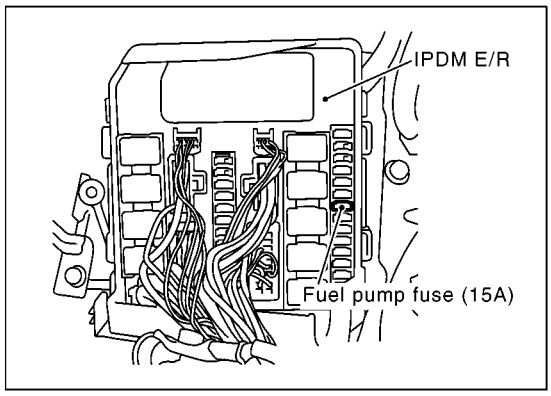
IPDM E/R
Fuel pump fuse (15A)

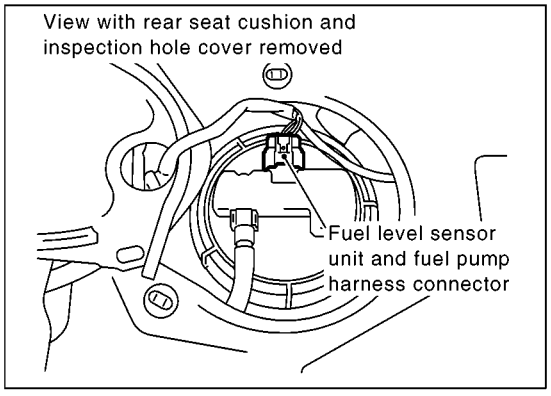
View with rear seat cushion and
inspection hole cover removed
Fuel level sensor
unit and fuel pump
harness connector

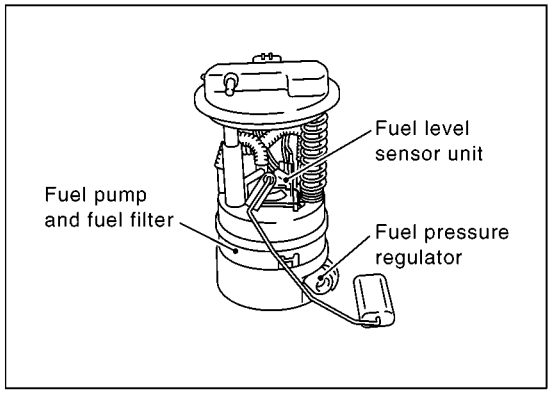
Fuel level
sensor unit
Fuel pump
and fuel filter
Fuel pressure
regulator

MBIB0318E

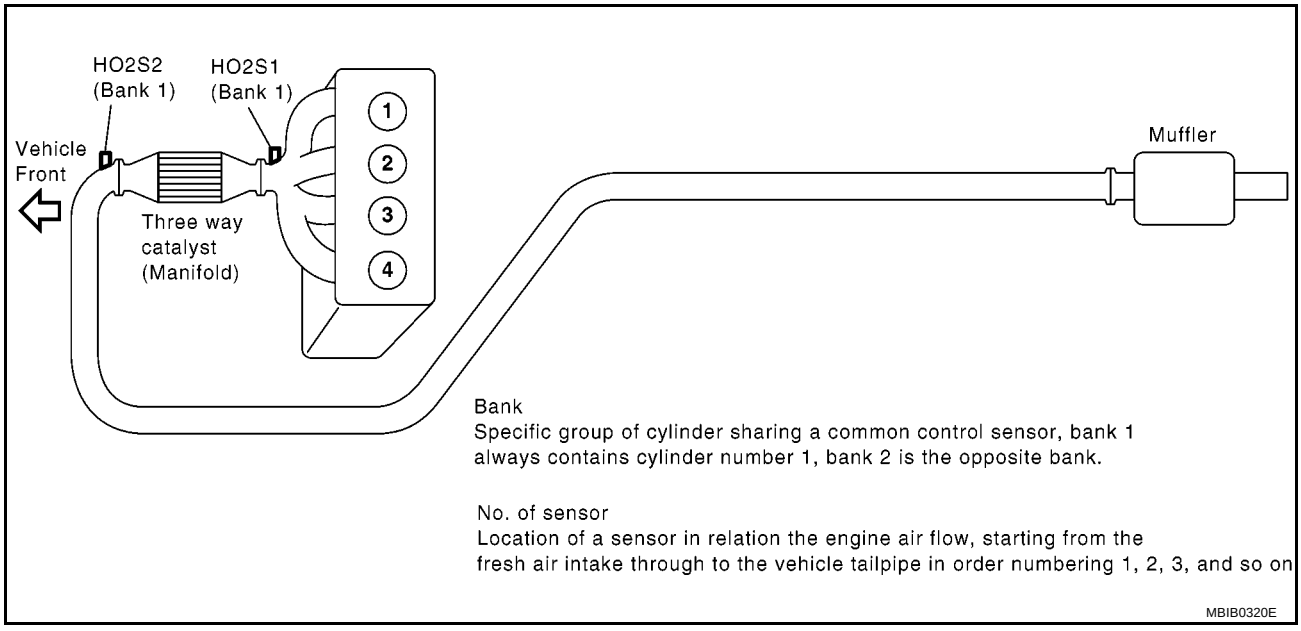
HO2S2
(Bank 1)
HO2S1
(Bank 1)
Vehicle
Front
Three way
catalyst
(Manifold)
1
2
3
4
Muffler
Bank
Specific group of cylinder sharing a common control sensor, bank 1
always contains cylinder number 1, bank 2 is the opposite bank.
No. of sensor
Location of a sensor in relation the engine air flow, starting from the
fresh air intake through to the vehicle tailpipe in order numbering 1, 2, 3, and so on
MBIB0320E

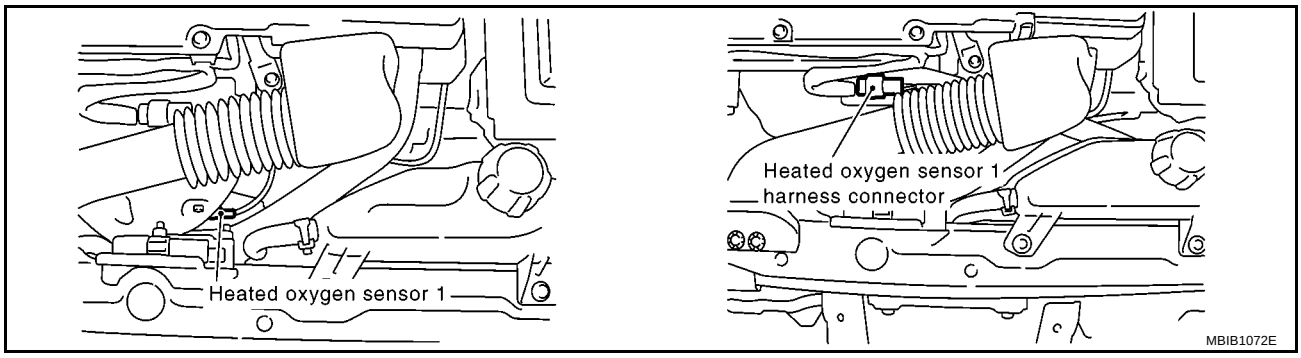
Heated oxygen sensor 1
Heated oxygen sensor 1
harness connector
MBIB1072E

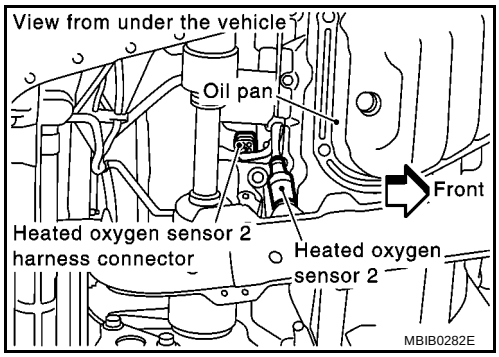
View from under the vehicle
Oil pan
Front
Heated oxygen sensor 2
harness connector
Heated oxygen
sensor 2
MBIB0282E

Circuit Diagram

EBS00OKO

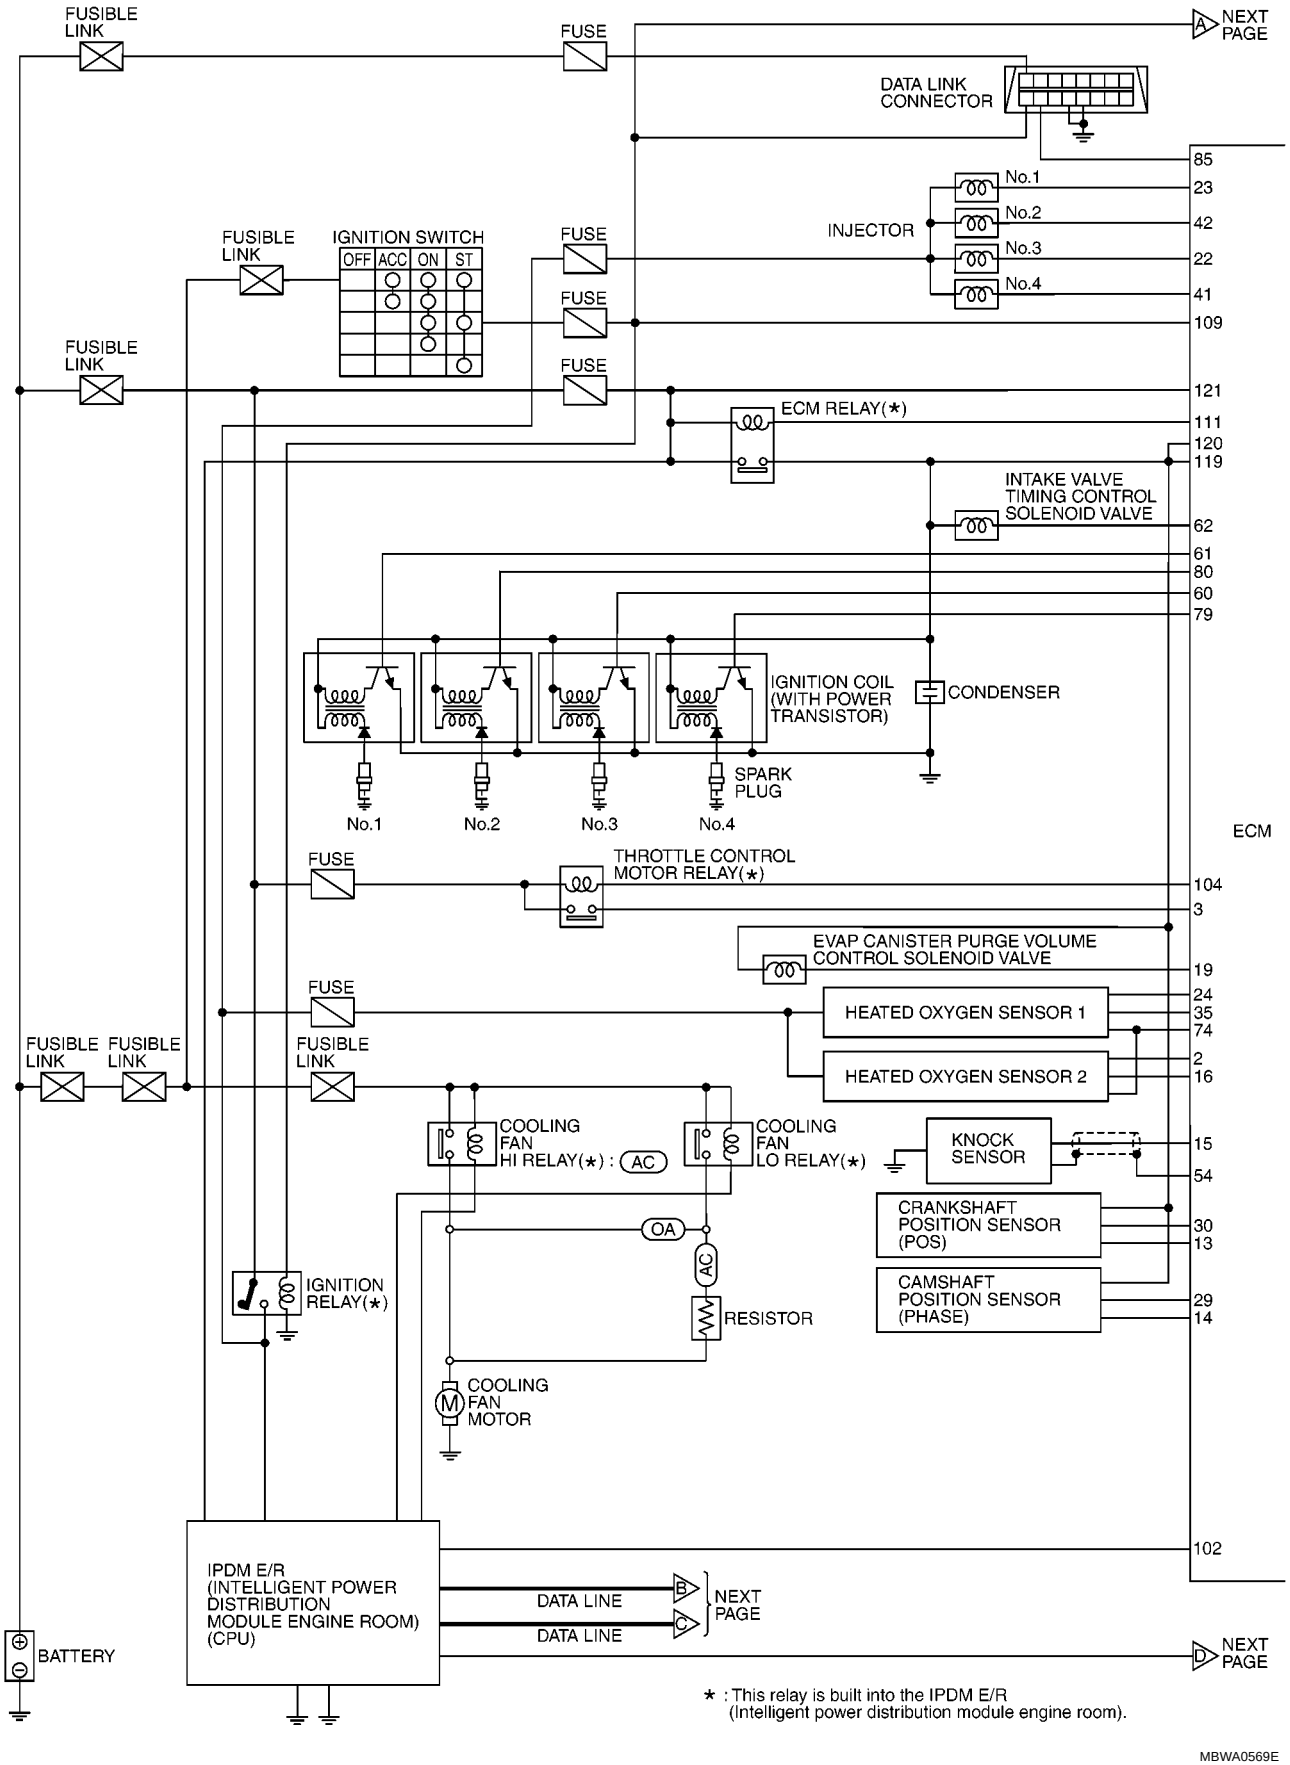

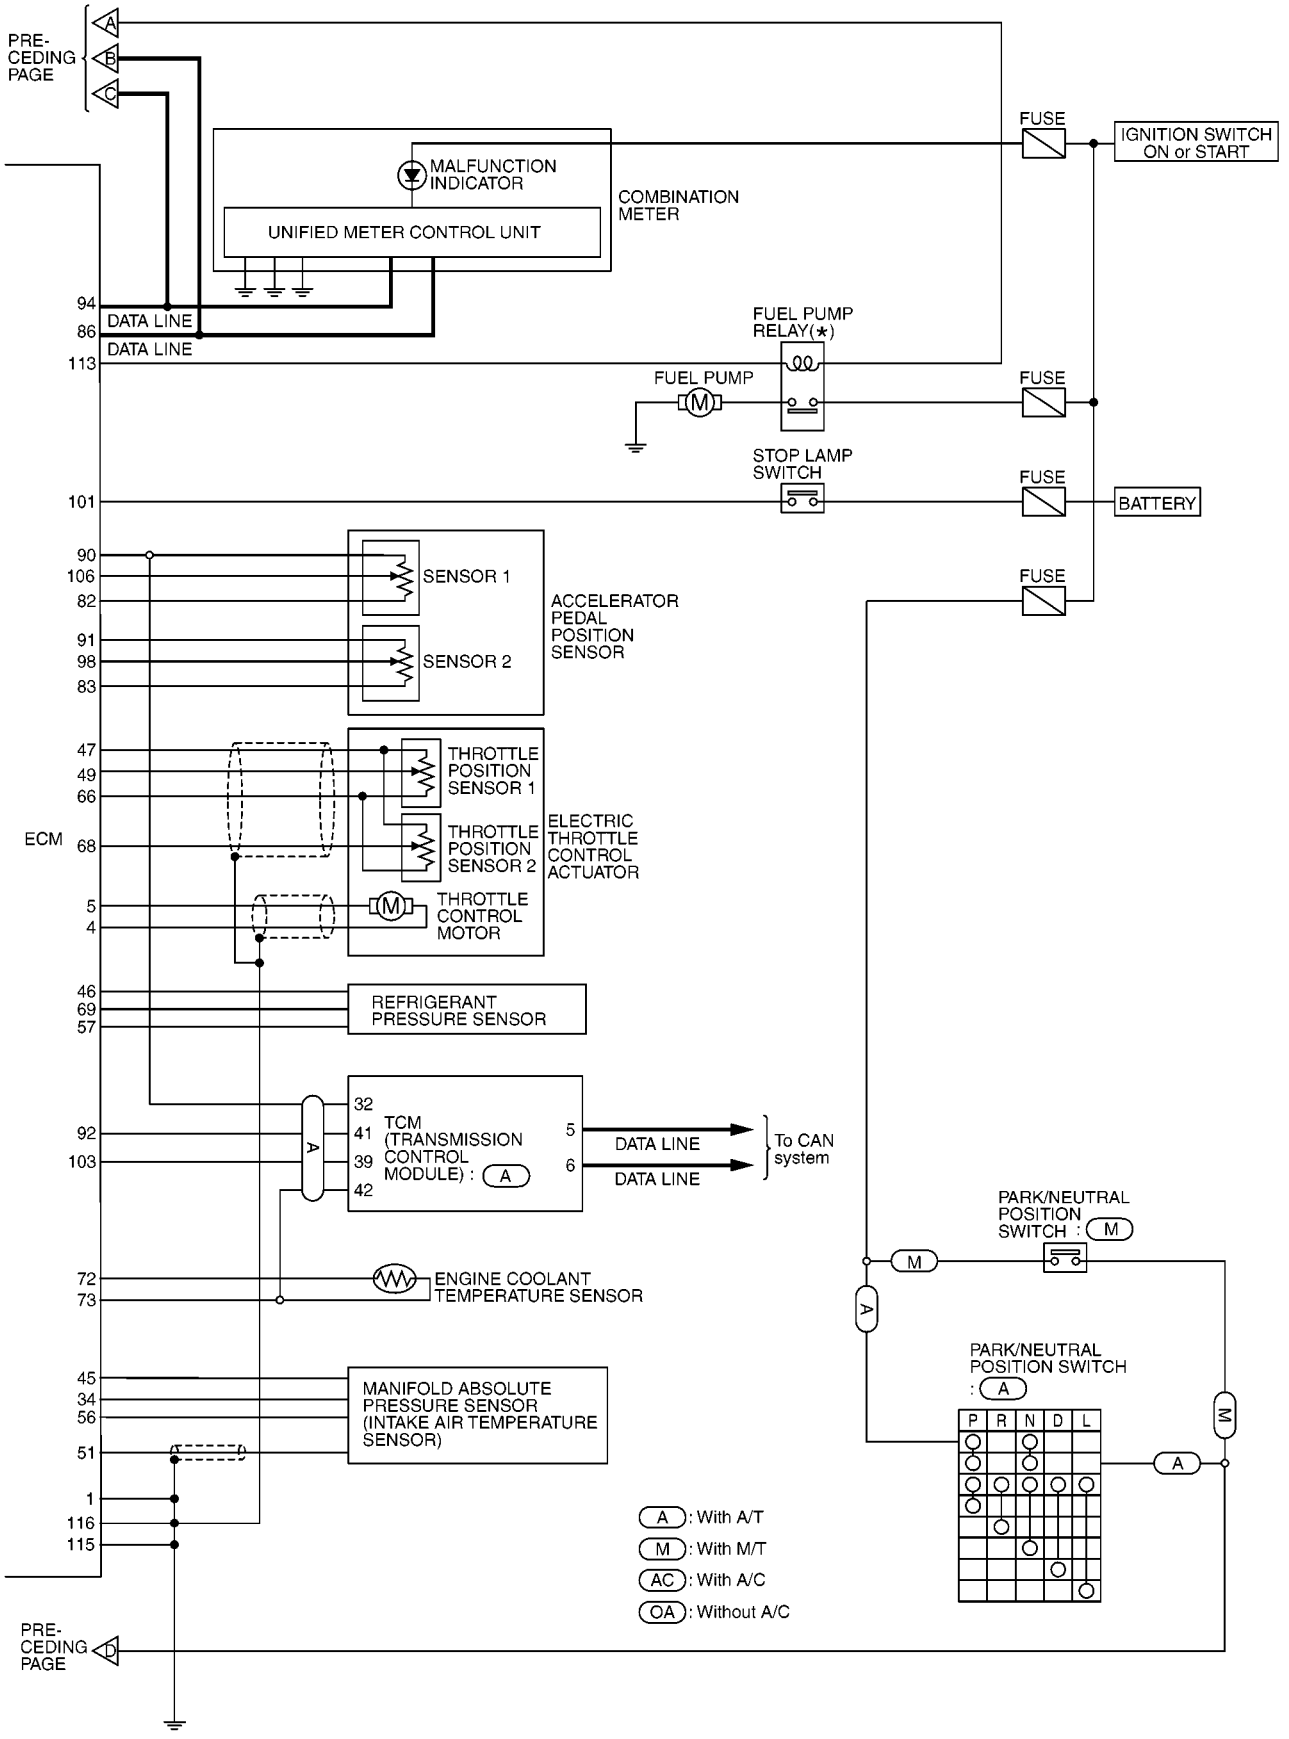
PRE-CEDING PAGE
A
B
C
MALFUNCTION INDICATOR
UNIFIED METER CONTROL UNIT
COMBINATION METER
FUSE
IGNITION SWITCH ON or START
94
DATA LINE
86
DATA LINE
113
FUEL PUMP RELAY(★)
FUEL PUMP
M
FUSE
STOP LAMP SWITCH
FUSE
101
BATTERY
90
106
82
SENSOR 1
ACCELERATOR PEDAL POSITION SENSOR
91
98
83
SENSOR 2
FUSE
47
49
66
THROTTLE POSITION SENSOR 1
ECM
68
THROTTLE POSITION SENSOR 2
ELECTRIC THROTTLE CONTROL ACTUATOR
5
4
M
THROTTLE CONTROL MOTOR
46
69
57
REFRIGERANT PRESSURE SENSOR
32
92
41
TCM (TRANSMISSION CONTROL MODULE) : A
103
39
42
A
5
DATA LINE
6
DATA LINE
To CAN system
PARK/NEUTRAL POSITION SWITCH : M
M
A
72
73
ENGINE COOLANT TEMPERATURE SENSOR
PARK/NEUTRAL POSITION SWITCH : A
45
34
56
MANIFOLD ABSOLUTE PRESSURE SENSOR (INTAKE AIR TEMPERATURE SENSOR)
51
P R N D L
M
A
1
116
115
A : With A/T
M : With M/T
AC : With A/C
OA : Without A/C
PRE-CEDING PAGE
D

MBWA0266E

ECM Harness Connector Terminal Layout

EBS00OKP

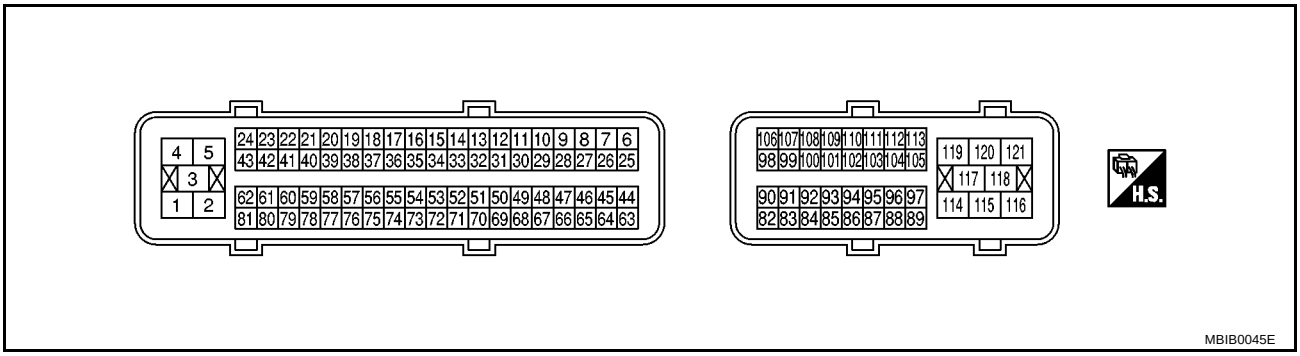

ECM Terminals and Reference Value

EBS00OKQ

PREPARATION

1. ECM is located left hand side of the engine room.
2. Remove ECM harness protector.

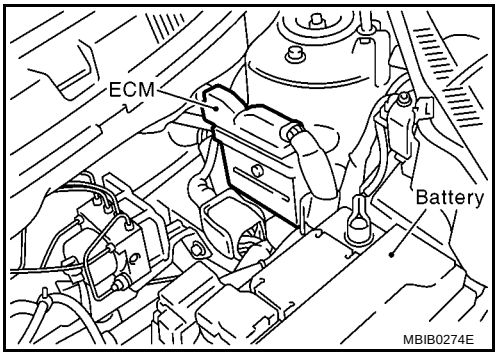

3. When disconnecting ECM harness connector, loosen it with levers as far as they will go as shown in the figure.
4. Connect a break-out box (SST) and Y-cable adapter (SST) between the ECM and ECM harness connector.
   - Use extreme care not to touch 2 pins at one time.
   - Data is for comparison and may not be exact.

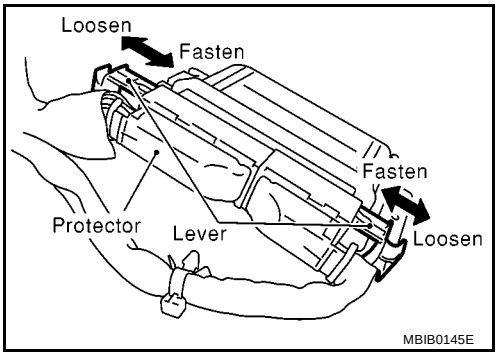

ECM INSPECTION TABLE

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	B	ECM ground	**[Engine is running]** ● Idle speed	Engine ground

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
2	GY	Heated oxygen sensor 2 heater	**[Engine is running]** ● Engine speed is below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - 1.0V
			[Ignition switch ON] ● Engine stopped **[Engine is running]** ● Engine speed is above 3,600 rpm (A/T models), 3,800 rpm (M/T models).	BATTERY VOLTAGE (11 - 14V)
3	LG	Throttle control motor relay power supply	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
4	L	Throttle control motor (Close)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Released	0 - 14V★ 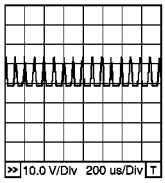 PBIB0534E
5	P	Throttle control motor (Open)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	0 - 14V★ 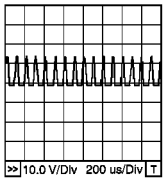 PBIB0533E
13	Y	Crankshaft position sensor (POS)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	Approximately 3.0V★ 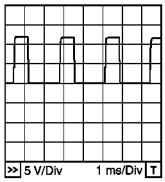 PBIB0527E
			[Engine is running] ● Engine speed is 2,000 rpm	Approximately 3.0V★ 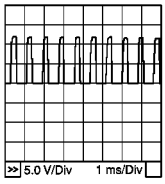 PBIB0528E

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
14	R	Camshaft position sensor (PHASE)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	1.0 - 4.0V★ 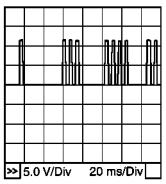 PBIB0525E
			[Engine is running] ● Engine speed is 2,000 rpm.	1.0 - 4.0V★ 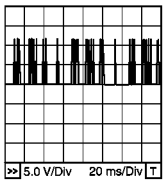 PBIB0526E
15	W	Knock sensor	**[Engine is running]** ● Idle speed	Approximately 2.5V
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● **Warm-up condition** ● Engine speed is below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - Approximately 1.0V
19	LG	EVAP canister purge volume control solenoid valve	**[Engine is running]** ● Idle speed	BATTERY VOLTAGE (11 - 14V)★ 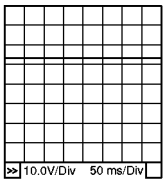 PBIB0050E
			[Engine is running] ● Engine speed is about 2,000 rpm (More than 100 seconds after starting engine)	Approximately 10V★ 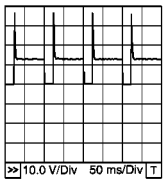 PBIB0520E

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22 23 41 42	OR L R GY	Injector No. 3 Injector No. 1 Injector No. 4 Injector No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	BATTERY VOLTAGE (11 - 14V)★ 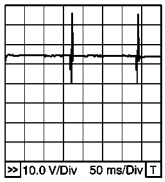 PBIB0529E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14V)★ 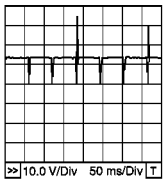 PBIB0530E
24	Y	Heated oxygen sensor 1 heater	**[Engine is running]** ● **Warm-up condition** ● Engine speed is below 3,600 rpm.	Approximately 7.0V★ 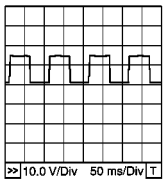 PBIB0519E
			[Engine is running] ● Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)
29	B	Sensor ground (Camshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
30	B	Sensor ground (Crankshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
34	OR	Intake air temperature sensor	**[Engine is running]**	Approximately 0 - 4.8V Output voltage varies with intake air temperature.
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
45	L	Sensor power supply	**[Ignition switch ON]**	Approximately 5V
46	W	Sensor power supply (Refrigerant pressure sensor)	**[Ignition switch ON]**	Approximately 5V
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
51	W	Manifold absolute pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 1.5V
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	Approximately 1.2V
54	—	Sensor ground (Knock sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
56	B	Sensor ground (Manifold absolute pressure sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
57	Y	Sensor ground (Refrigerant pressure sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
60 61 79 80	Y PU G BR	Ignition signal No. 3 Ignition signal No. 1 Ignition signal No. 4 Ignition signal No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	0 - 0.1V★ 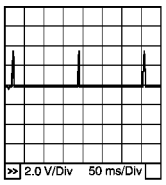 PBIB0521E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - 0.2V★ 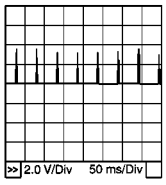 PBIB0522E

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	LG	Intake valve timing control solenoid valve	**[Engine is running]** ● **Warm-up condition** ● Idle speed	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● **Warm-up condition** ● When revving engine up to 2,000 rpm quickly	Approximately 4V - BATTERY VOLTAGE (11 - 14V)★ 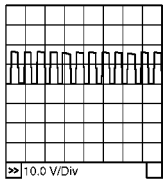 PBIB1790E
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V
69	BR	Refrigerant pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Both A/C switch and blower switch are ON (Compressor operates.)	1.0 - 4.0V
72	P	Engine coolant temperature sensor	**[Engine is running]**	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature.
73	B	Sensor ground (Engine coolant temperature sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
85	LG	DATA link connector	**[Ignition switch ON]** ● CONSULT-II is disconnected.	BATTERY VOLTAGE (11 - 14V)
86	W	CAN communication line	**[Ignition switch ON]**	1.0 - 2.5V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
92	GY	Throttle position sensor signal output (A/T models)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Accelerator pedal: Fully released	Approximately 0.8V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Accelerator pedal: Fully depressed	Approximately 4.6V
94	R	CAN communication line	**[Ignition switch ON]**	2.5 - 4.0V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
101	W	Stop lamp switch	**[Ignition switch ON]** ● Brake pedal: Fully released	Approximately 0V
			[Ignition switch ON] ● Brake pedal: Depressed	BATTERY VOLTAGE (11 - 14V)
102	GY	PNP switch	**[Ignition switch ON]** ● Gear position: P or N (A/T models) Neutral (M/T models)	Approximately 0V
			[Ignition switch ON] ● Except the above gear position	BATTERY VOLTAGE (11 - 14V)
103	L/OR	Tachometer signal output (A/T models)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	10 - 11V★ 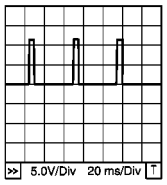 MBIB0053E
			[Engine is running] ● Engine speed is 2,000 rpm	10 - 11V★ 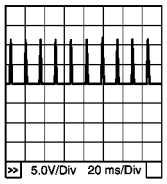 MBIB0054E
104	G	Throttle control motor relay	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON]	0 - 1.0V

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V
109	PU	Ignition switch	**[Ignition switch OFF]**	0V
			[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
111	P	ECM relay (Self shut-off)	**[Engine is running]** **[Ignition switch OFF]** ● For a few seconds after turning ignition switch OFF	0 - 1.0V
			[Ignition switch OFF] ● More than a few seconds passed after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
113	R	Fuel pump relay	**[Ignition switch ON]** ● For 1 second after turning ignition switch ON **[Engine is running]**	0 - 1.0V
			[Ignition switch ON] ● More than 1 second after turning ignition switch ON	BATTERY VOLTAGE (11 - 14V)
115 116	B B	ECM ground	**[Engine is running]** ● Idle speed	Engine ground
119 120	G G	Power supply for ECM	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
121	BR	Power supply for ECM (Back-up)	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

CONSULT-II Function (ENGINE)

EBS00OKR

FUNCTION

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-II unit.
Self-diagnostic results	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*
Data monitor	Input/Output data in the ECM can be read.
Data monitor (SPEC)	Input/Output of the specification for Basic fuel schedule, A/F feedback control value and the other data monitor items can be read.
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.
Active test	Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
Function test	This mode is used to inform customers when their vehicle condition requires periodic maintenance.
ECM part number	ECM part number can be read.

*: The following emission-related diagnostic information is cleared when the ECM memory is erased.

- Diagnostic trouble codes
- 1st trip diagnostic trouble codes

- Freeze frame data
- 1st trip freeze frame data
- Others

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

Item			DIAGNOSTIC TEST MODE					
			WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONITOR	DATA MONITOR (SPEC)	ACTIVE TEST
				DTC*1	FREEZE FRAME DATA*2			
ENGINE CONTROL COMPONENT PARTS	INPUT	Crankshaft position sensor (POS)		×	×	×	×	
		Camshaft position sensor (PHASE)		×		×	×	
		Manifold absolute pressure sensor		×		×	×	
		Engine coolant temperature sensor		×	×	×	×	×
		Heated oxygen sensor 1		×		×	×	
		Heated oxygen sensor 2		×		×	×	
		Vehicle speed signal			×	×	×	
		Accelerator pedal position sensor		×		×	×	
		Throttle position sensor		×		×	×	
		Intake air temperature sensor				×	×	
		Knock sensor		×				
		Refrigerant pressure sensor				×	×	
		Closed throttle position switch (accelerator pedal position sensor signal)				×	×	
		Air conditioner switch				×	×	
		Park/neutral position (PNP) switch				×	×	
		Stop lamp switch		×		×	×	
		Battery voltage				×	×	
		Electrical load signal				×	×	
ENGINE CONTROL COMPONENT PARTS	OUTPUT	Injectors				×	×	×
		Power transistor (Ignition timing)				×	×	×
		Throttle control motor relay		×		×	×	
		Throttle control motor		×				
		EVAP canister purge volume control solenoid valve				×	×	×
		Air conditioner relay				×	×	
		Fuel pump relay	×			×	×	×
		Cooling fan relay		×		×	×	×
		Heated oxygen sensor 1 heater				×	×	
		Heated oxygen sensor 2 heater				×	×	
		Intake valve timing control solenoid valve				×	×	×
		Calculated load value			×	×	×	

X: Applicable
*1: This item includes 1st trip DTCs.
*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT-II screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to EC-509 .

INSPECTION PROCEDURE

CAUTION:

If CONSULT-II is used with no connection to CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. Turn ignition switch OFF.
2. Connect “CONSULT-II” and “CONSULT-II CONVERTER” to data link connector, which is located under drivers side dash panel.
3. Turn ignition switch ON.

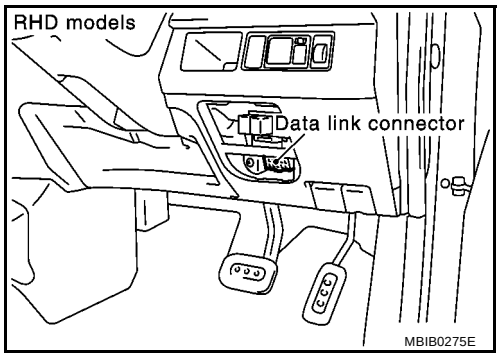

4. Touch “START(NISSAN BASED VHCL)”.

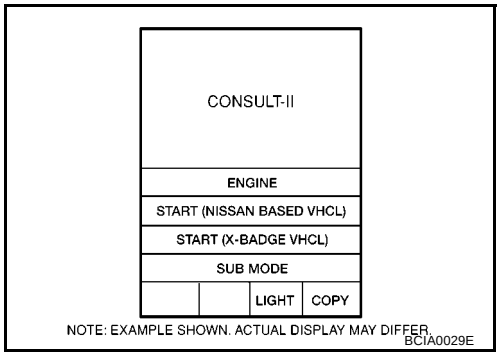

5. Touch “ENGINE”.
   If “ENGINE” is not indicated, go to GI-36, "CONSULT-II Data Link Connector (DLC) Circuit" .

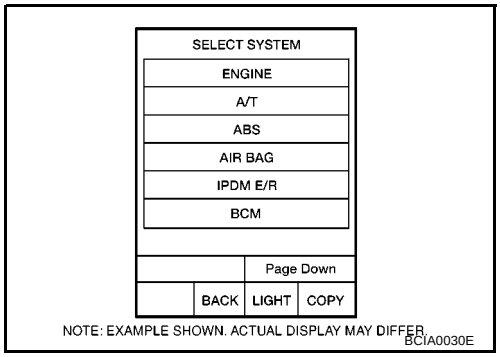

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual.

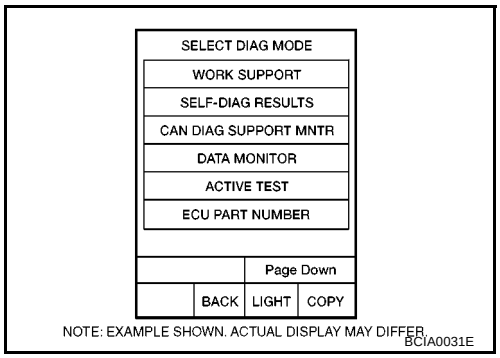

WORK SUPPORT MODE

Work Item

WORK ITEM	CONDITION	USAGE
FUEL PRESSURE RELEASE	● FUEL PUMP WILL STOP BY TOUCHING START DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS.	When releasing fuel pressure from fuel line
IDLE AIR VOL LEARN	● THE IDLE AIR VOLUME THAT KEEPS THE ENGINE WITHIN THE SPECIFIED RANGE IS MEMORIZED IN ECM.	When learning the idle air volume
SELF-LEARNING CONT	● THE COEFFICIENT OF SELF-LEARNING CONTROL MIXTURE RATIO RETURNS TO THE ORIGINAL COEFFICIENT.	When clearing the coefficient of self-learning control value
TARGET IGN TIM ADJ*	● IDLE CONDITION	When adjusting target ignition timing
TARGET IDLE RPM ADJ*	● IDLE CONDITION	When setting target idle speed

*: This function is not necessary in the usual service procedure.

SELF-DIAG RESULTS MODE

Self Diagnostic Item

Regarding items of DTC and 1st trip DTC, refer to EC-472, "INDEX FOR DTC" .

Freeze Frame Data and 1st Trip Freeze Frame Data

Freeze frame data item*	Description
DIAG TROUBLE CODE [PXXXX]	● The engine control component part/control system has a trouble code, it is displayed as “PXXXX”. (Refer to EC-472, "INDEX FOR DTC" .)
FUEL SYS-B1	● Fuel injection system status at the moment a malfunction is detected is displayed. ● One mode in the following is displayed. Mode2: Open loop due to detected system malfunction Mode3: Open loop due to driving conditions (power enrichment, deceleration enleanment) Mode4: Closed loop - using oxygen sensor(s) as feedback for fuel control Mode5: Open loop - has not yet satisfied condition to go to closed loop
CAL/LD VALUE [%]	● The calculated load value at the moment a malfunction is detected is displayed.
COOLANT TEMP [°C] or [°F]	● The engine coolant temperature at the moment a malfunction is detected is displayed.
L-FUEL TRM-B1 [%]	● “Long-term fuel trim” at the moment a malfunction is detected is displayed. ● The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.
S-FUEL TRM-B1 [%]	● “Short-term fuel trim” at the moment a malfunction is detected is displayed. ● The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.
ENGINE SPEED [rpm]	● The engine speed at the moment a malfunction is detected is displayed.
VEHICL SPEED [km/h] or [mph]	● The vehicle speed at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [msec]	● The base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	● The intake air temperature at the moment a malfunction is detected is displayed.

*: The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE
Monitored Item

×: Applicable

Monitored item [Unit]	ECM INPUT SIG-NALS	MAIN SIG-NALS	Description	Remarks
ENG SPEED [rpm]	×	×	● Indicates the engine speed computed from the signals of the crankshaft position sensor (POS) and camshaft position sensor (PHASE).	● Accuracy becomes poor if engine speed drops below the idle rpm. ● If the signal is interrupted while the engine is running, an abnormal value may be indicated.
COOLAN TEMP/S [°C] or [°F]	×	×	● The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed.	● When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
HO2S1 (B1) [V]	×	×	● The signal voltage of the heated oxygen sensor 1 is displayed.	
HO2S2 (B1) [V]	×		● The signal voltage of the heated oxygen sensor 2 is displayed.	
HO2S1 MNTR (B1) [RICH/LEAN]	×	×	● Display of heated oxygen sensor 1 signal during air-fuel ratio feedback control: RICH ... means the mixture became “rich”, and control is being affected toward a leaner mixture. LEAN ... means the mixture became “lean”, and control is being affected toward a rich mixture.	● After turning ON the ignition switch, “RICH” is displayed until air-fuel mixture ratio feedback control begins. ● When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.
HO2S2 MNTR (B1) [RICH/LEAN]	×		● Display of heated oxygen sensor 2 signal: RICH ... means the amount of oxygen after three way catalyst is relatively small. LEAN ... means the amount of oxygen after three way catalyst is relatively large.	● When the engine is stopped, a certain value is indicated.
A/F ALPHA-B1 [%]		×	● The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.	● When the engine is stopped, a certain value is indicated. ● This data also includes the data for the air-fuel ratio learning control.
VHCL SPEED SE [km/h] or [mph]	×	×	● The vehicle speed computed from the vehicle speed signal is displayed.	
BATTERY VOLT [V]	×	×	● The power supply voltage of ECM is displayed.	
B/FUEL SCHDL [msec]		×	● “Base fuel schedule” indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	
ACCEL SEN 1 [V]	×	×	● The accelerator pedal position sensor signal voltage is displayed.	
ACCEL SEN 2 [V]	×			
THRTL SEN 1 [V]	×	×	● The throttle position sensor signal voltage is displayed.	
THRTL SEN 2 [V]	×			
INT/A TEMP SE [°C] or [°F]	×	×	● The intake air temperature (determined by the signal voltage of the intake air temperature sensor) is indicated.	
TURBO BST SEN [V]	×		● The signal voltage of the manifold absolute pressure sensor is displayed.	

Monitored item [Unit]	ECM INPUT SIGNALS	MAIN SIGNALS	Description	Remarks
START SIGNAL [ON/OFF]	×	×	● Indicates start signal status [ON/OFF] computed by the ECM according to the signals of engine speed and battery voltage.	● After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL POS [ON/OFF]	×	×	● Indicates idle position [ON/OFF] computed by the ECM according to the accelerator pedal position sensor signal.	
AIR COND SIG [ON/OFF]	×	×	● Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal.	
P/N POSI SW [ON/OFF]	×	×	● Indicates [ON/OFF] condition from the park/neutral position (PNP) switch signal.	
PW/ST SIGNAL [ON/OFF]	×	×	● [ON/OFF] condition of the power steering oil pressure switch as determined by the power steering oil pressure signal is indicated.	
LOAD SIGNAL [ON/OFF]	×	×	● Indicates [ON/OFF] condition from the electrical load signal. ON ... Rear window defogger switch is ON and/or lighting switch is in 2nd position. OFF ... Both rear window defogger switch and lighting switch are OFF.	
IGNITION SW [ON/OFF]	×		● Indicates [ON/OFF] condition from ignition switch.	
HEATER FAN SW [ON/OFF]	×		● Indicates [ON/OFF] condition from the heater fan switch signal.	
BRAKE SW [ON/OFF]	×		● Indicates [ON/OFF] condition from the stop lamp switch signal.	
INJ PULSE-B1 [msec]		×	● Indicates the actual fuel injection pulse width compensated by ECM according to the input signals.	● When the engine is stopped, a certain computed value is indicated.
IGN TIMING [BTDC]		×	● Indicates the ignition timing computed by ECM according to the input signals.	● When the engine is stopped, a certain value is indicated.
CAL/LD VALUE [%]			● “Calculated load value” indicates the value of the current airflow divided by peak airflow.	
MASS AIRFLOW [g·m/s]			● Indicates the mass air flow computed by ECM according to the signal voltage of manifold absolute pressure sensor.	
PURG VOL C/V [%]			● Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. ● The opening becomes larger as the value increases.	
INT/V TIM (B1) [°CA]			● Indicates [°CA] of intake camshaft advanced angle.	
INT/V SOL (B1) [%]			● The control value of the intake valve timing control solenoid valve (determined by ECM according to the input signals) is indicated. ● The advance angle becomes larger as the value increases.	

Monitored item [Unit]	ECM INPUT SIG-NALS	MAIN SIG-NALS	Description	Remarks
AIR COND RLY [ON/OFF]		×	● The air conditioner relay control condition (determined by ECM according to the input signals) is indicated.	
FUEL PUMP RLY [ON/OFF]		×	● Indicates the fuel pump relay control condition determined by ECM according to the input signals.	
THRTL RELAY [ON/OFF]		×	● Indicates the throttle control motor relay control condition determined by the ECM according to the input signals.	
COOLING FAN [HI/LOW/OFF]		×	● Indicates the condition of the cooling fan (determined by ECM according to the input signals). HI ... High speed operation LOW ... Low speed operation OFF ... Stop	
HO2S1 HTR (B1) [ON/OFF]			● Indicates [ON/OFF] condition of heated oxygen sensor 1 heater determined by ECM according to the input signals.	
HO2S2 HTR (B1) [ON/OFF]			● Indicates [ON/OFF] condition of heated oxygen sensor 2 heater determined by ECM according to the input signals.	
IDL A/V LEARN [YET/CMPLT]			● Display the condition of idle air volume learning YET ... Idle air volume learning has not been performed yet. CMPLT ... Idle air volume learning has already been performed successfully.	
TRVL AFTER MIL [km] or [mile]			● Distance traveled while MI is activated.	
O2 SEN HTR DTY [%]			● Indicates the heated oxygen sensor 1 heater control valve computed by the ECM according to the input signals.	
AC PRESS SEN [V]	×		● The signal voltage from the refrigerant pressure sensor is displayed.	
Voltage [V]			● Voltage, frequency, duty cycle or pulse width measured by the probe.	● Only “#” is displayed if item is unable to be measured. ● Figures with “#”s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.
Frequency [msec], [Hz] or [%]				
DUTY-HI				
DUTY-LOW				
PLS WIDTH-HI				
PLS WIDTH-LOW				

NOTE:

- Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

DATA MONITOR (SPEC) MODE

Monitored Item

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
ENG SPEED [rpm]	×		● Indicates the engine speed computed from the signal of the crankshaft position sensor (POS).	
B/FUEL SCHDL [msec]			● "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	● When engine is running specification range is indicated.
A/F ALPHA-B1 [%]		×	● The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.	● When engine is running specification range is indicated. ● This data also includes the data for the air-fuel ratio learning control.

NOTE:
- Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

Test Item

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	● Engine: Return to the original trouble condition ● Change the amount of fuel injection using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Harness and connectors ● Fuel injectors ● Heated oxygen sensor 1
IGNITION TIMING	● Engine: Return to the original trouble condition ● Timing light: Set ● Retard the ignition timing using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Perform Idle Air Volume Learning.
POWER BALANCE	● Engine: After warming up, idle the engine. ● A/C switch: OFF ● Shift lever: N ● Cut off each injector signal one at a time using CONSULT-II.	Engine runs rough or dies.	● Harness and connectors ● Compression ● Fuel injectors ● Power transistor ● Spark plugs ● Ignition coils
COOLING FAN*1	● Ignition switch: ON ● Turn the cooling fan ON and OFF with CONSULT-II.	Cooling fan moves and stops.	● Harness and connectors ● Cooling fan relay ● Cooling fan motor
ENG COOLANT TEMP	● Engine: Return to the original trouble condition ● Change the engine coolant temperature using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Harness and connectors ● Engine coolant temperature sensor ● Fuel injectors
FUEL PUMP RELAY	● Ignition switch: ON (Engine stopped) ● Turn the fuel pump relay ON and OFF using CONSULT-II and listen to operating sound.	Fuel pump relay makes the operating sound.	● Harness and connectors ● Fuel pump relay

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
PURG VOL CONT/V	● Engine: After warming up, run engine at 1,500 rpm. ● Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT-II.	Engine speed changes according to the opening percent.	● Harness and connectors ● Solenoid valve
V/T ASSIGN ANGLE	● Engine: Return to the original trouble condition ● Change intake valve timing using CONSULT-II.	If trouble symptom disappears, see CHECK ITEM.	● Harness and connectors ● Intake valve timing control solenoid valve

*1:Leaving cooling fan OFF with CONSULT-II while engine is running may cause the engine to overheat.

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (RECORDING VEHICLE DATA)

Description

CONSULT-II has two kinds of triggers and they can be selected by touching “SETTING” in “DATA MONITOR” mode.

1. “AUTO TRIG” (Automatic trigger):
   - The malfunction will be identified on the CONSULT-II screen in real time.
     In other words, DTC/1st trip DTC and malfunction item will be displayed if the malfunction is detected by ECM.
     At the moment a malfunction is detected by ECM, “MONITOR” in “DATA MONITOR” screen is changed to “Recording Data ... xx%” as shown in the figure, and the data after the malfunction detection is recorded. Then when the percentage reached 100%, “REAL-TIME DIAG” screen is displayed. If “STOP” is touched on the screen during “Recording Data ... xx%”, “REAL-TIME DIAG” screen is also displayed.
     The recording time after the malfunction detection and the recording speed can be changed by “TRIGGER POINT” and “Recording Speed”. Refer to CONSULT-II OPERATION MANUAL.
2. “MANU TRIG” (Manual trigger):
   - DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.
     DATA MONITOR can be performed continuously even though a malfunction is detected.

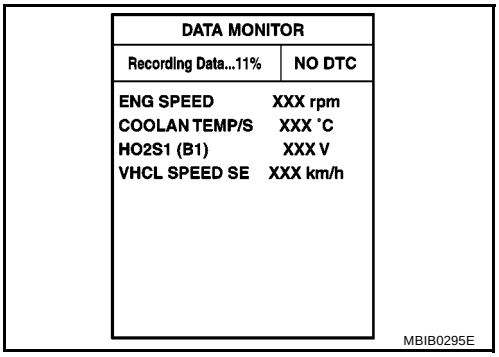

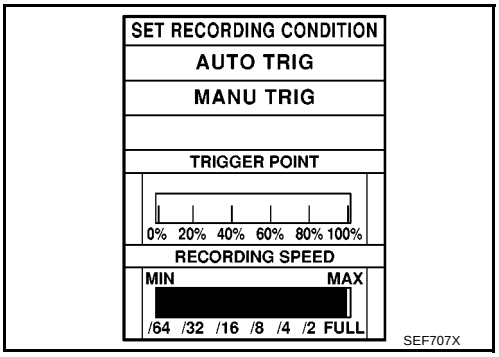

Operation

1. “AUTO TRIG”
   - While trying to detect the DTC/1st trip DTC by performing the DTC Confirmation Procedure, be sure to select to “DATA MONITOR (AUTO TRIG)” mode. You can confirm the malfunction at the moment it is detected.
   - While narrowing down the possible causes, CONSULT-II should be set in “DATA MONITOR (AUTO TRIG)” mode, especially in case the incident is intermittent.
     When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the DTC Confirmation Procedure, the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to Incident Simulation Tests in GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" .)
2. “MANU TRIG”
   - If the malfunction is displayed as soon as “DATA MONITOR” is selected, reset CONSULT-II to “MANU TRIG”. By selecting “MANU TRIG” you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

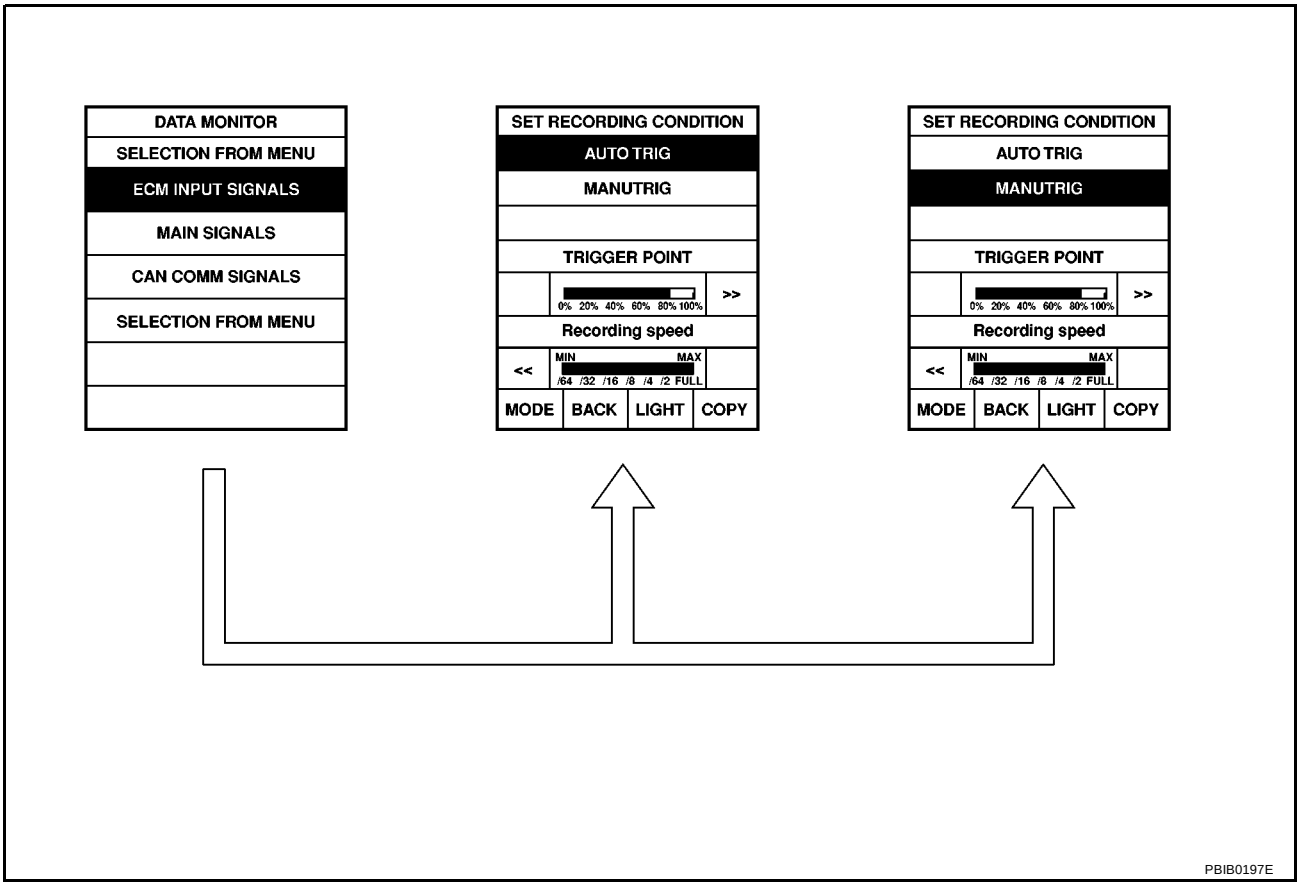

CONSULT-II Reference Value in Data Monitor Mode

EBS00OKT

Remarks:
- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
  * Specification data may not be directly related to their components signals/values/operations.
  i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.

MONITOR ITEM	CONDITION		SPECIFICATION
ENG SPEED	● Tachometer: Connect ● Run engine and compare CONSULT-II value with the tachometer indication.		Almost the same speed as the tachometer indication.
B/FUEL SCHDL	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T modes) ● Air conditioner switch: OFF ● No load	Idle	2.5 - 3.5 msec
		2,000 rpm	2.5 - 3.5 msec
A/F ALPHA-B1	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	54% - 155%
COOLAN TEMP/S	● Engine: After warming up		More than 70°C (158°F)
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.
HO2S2 MNTR (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	LEAN ←→ RICH
VEH SPEED SE	● Turn drive wheels and compare CONSULT-II value with the speedometer indication.		Almost the same speed as the speedometer indication.
BATTERY VOLT	● Ignition switch: ON (Engine stopped)		11 - 14V
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*2	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
THRTL SEN1 THRTL SEN2*1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	More than 0.36V
	● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully depressed	Less than 4.75V
TURBO BST SEN	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	At idle	Approximately 1.5V
		At 2,500 rpm	Approximately 1.2V
START SIGNAL	● Ignition switch: ON → START → ON		OFF → ON → OFF
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF
AIR COND SIG	● Engine: After warming up, idle the engine	Air conditioner switch: OFF	OFF
		Air conditioner switch: ON (Compressor operates.)	ON
P/N POSI SW	● Ignition switch: ON	Shift lever: P or N (A/T models) Neutral (M/T models)	ON
		Shift lever: Except above	OFF
PW/ST SIGNAL	● Engine: After warming up, idle the engine	Steering wheel is in neutral position. (Forward direction)	OFF
		Steering wheel is turned.	ON
LOAD SIGNAL	● Ignition switch: ON	Rear window defogger switch is ON and/or lighting switch is in 2nd.	ON
		Rear window defogger switch is OFF and lighting switch is OFF.	OFF
IGNITION SW	● Ignition switch: ON → OFF → ON		ON → OFF → ON
HEATER FAN SW	● Engine: After warming up, idle the engine	Heater fan is operating.	ON
		Heater fan is not operating	OFF
BRAKE SW	● Ignition switch: ON	Brake pedal: Fully released	OFF
		Brake pedal: Slightly depressed	ON

MONITOR ITEM	CONDITION		SPECIFICATION
INJ PULSE-B1	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	Idle	2.0 - 3.0 msec
		2,000 rpm	1.9 - 2.9 msec
IGN TIMING	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	Idle	0° - 10° BTDC
		2,000 rpm	25° - 45° BTDC
CAL/LD VALUE	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	Idle	10% - 35%
		2,500 rpm	10% - 35%
MASS AIRFLOW	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	Idle	1.0 - 4.0 g·m/s
		2,500 rpm	4.0 - 10.0 g·m/s
PURG VOL C/V	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	0%
		2,000 rpm	20 - 30%
INT/V TIM (B1)	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	Idle	–5° - 5°CA
		When revving up to 2,000 rpm quickly	Approx. 0° - 20°CA
INT/V SOL (B1)	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: N (A/T models) Neutral (M/T models) ● No load	Idle	0% - 2%
		When revving up to 2,000 rpm quickly	Approx. 0% - 50%
AIR COND RLY	● Engine: After warming up, idle the engine	Air conditioner switch: OFF	OFF
		Air conditioner switch: ON (Compressor operates)	ON
FUEL PUMP RLY	● For 1 second after turning ignition switch ON ● Engine running or cranking		ON
	● Except above conditions		OFF
THRTL RELAY	● Ignition switch: ON		ON

MONITOR ITEM	CONDITION		SPECIFICATION
COOLING FAN	● Engine: After warming up, idle the engine ● Air conditioner switch: OFF	Engine coolant temperature is 94°C (201°F) or less	OFF
		Engine coolant temperature is between 95°C (203°F) and 104°C (210°F)	LOW*2
		Engine coolant temperature is 105°C (212°F) or more	HIGH*2
HO2S1 HTR (B1)	● Engine: After warming up ● Engine speed: Below 3,600 rpm		ON
	● Engine speed: Above 3,600 rpm		OFF
HO2S2 HTR (B1)	● Engine speed is below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.		ON
	● Engine speed: Above 3,600 rpm (A/T models), 3,800 rpm (M/T models)		OFF
TRVL AFTER MIL	● Ignition switch: ON	Vehicle has traveled after MI has turned ON.	0 - 65,535 km (0 - 40,723 mile)
O2SEN HTR DTY	● Engine coolant temperature when engine started: More than 80°C (176°F) ● Engine speed: below 3,600 rpm		Approx. 50%
AC PRESS SEN	● Ignition switch: ON (Engine stopped)		Approx. 0V
	● Engine: Idle ● Air conditioner switch: OFF		1.0 - 4.0V

*1 : Accelerator pedal position sensor 2 signal and throttle position sensor 2 signal are converted by ECM internally. Thus, they differ from ECM terminals voltage signal.

*2 : Models without air conditioner, cooling fan operates only ON and OFF operation, but CONSULT-II display will change OFF, LOW and HI depends on engine coolant temperature.

Major Sensor Reference Graph in Data Monitor Mode

EBS00OKU

The following are the major sensor reference graphs in “DATA MONITOR” mode.

CLSD THL POS, ACCEL SEN 1, THRTL SEN 1

Below is the data for “CLSD THL POS”, “ACCEL SEN 1” and “THRTL SEN 1” when depressing the accelerator pedal with the ignition switch ON and with selector lever in D position (A/T models) or with shift lever in 1st position (M/T models).
The signal of “ACCEL SEN 1” and “THRTL SEN 1” should rise gradually without any intermittent drop or rise after “CLSD THL POS” is changed from “ON” to “OFF”.

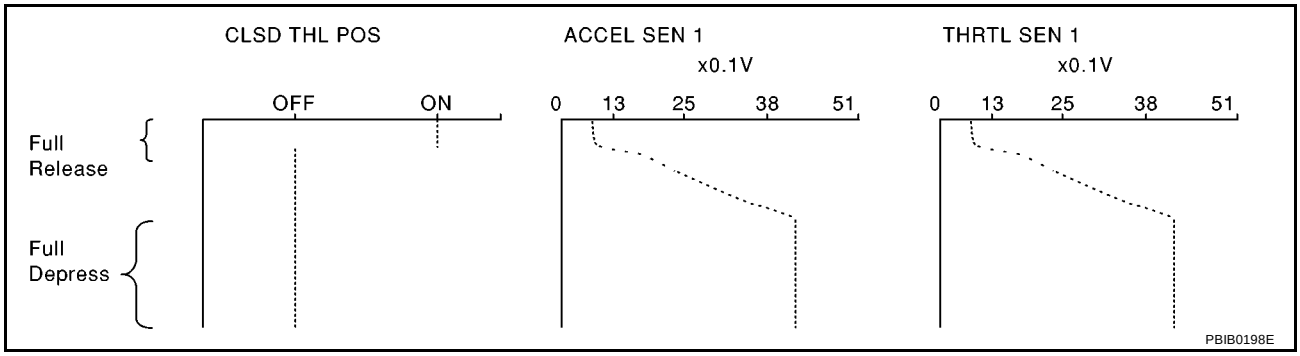

ENG SPEED, THRTL SEN 1, HO2S2 (B1), HO2S1 (B1), INJ PULSE-B1

Below is the data for “ENG SPEED”, “THRTL SEN 1”, “HO2S2 (B1)”, “HO2S1 (B1)” and “INJ PULSE-B1” when revving engine quickly up to 4,800 rpm under no load after warming up engine sufficiently.

Each value is for reference, the exact value may vary.

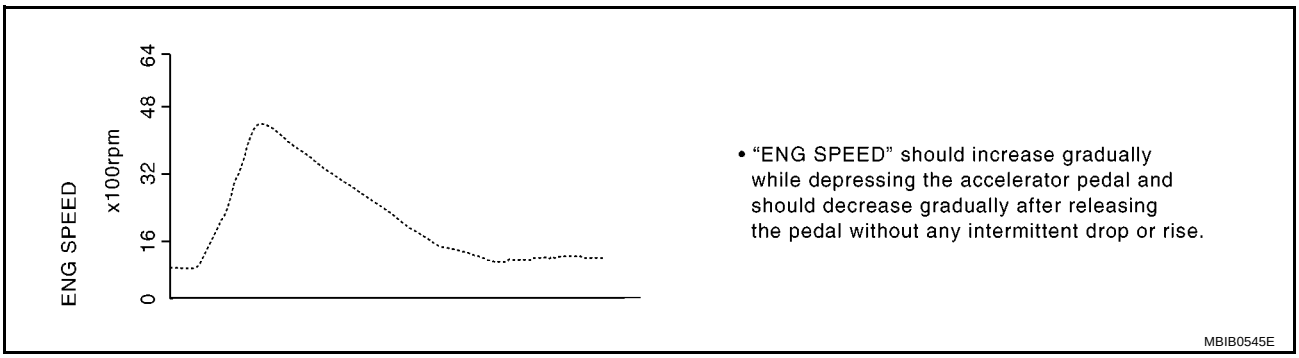

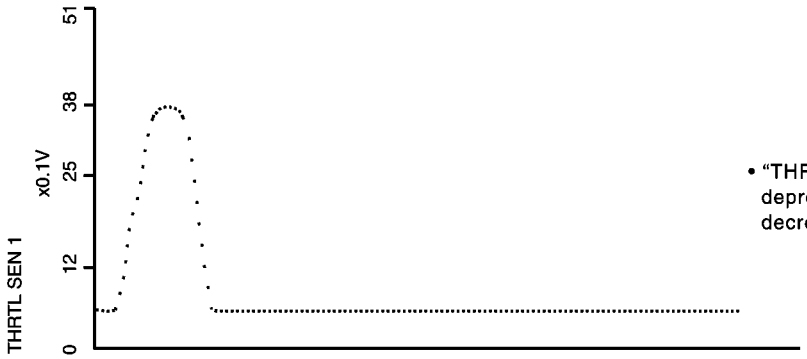

• "THRTL SEN 1" should increase while depressing the accelerator pedal and should decrease while releasing it.

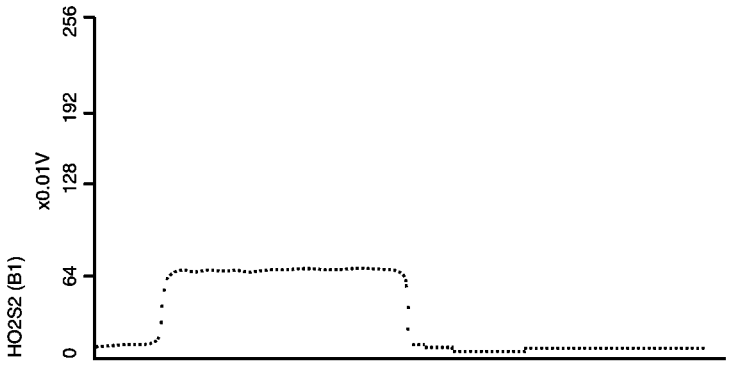

• "HO2S2 (B1)" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

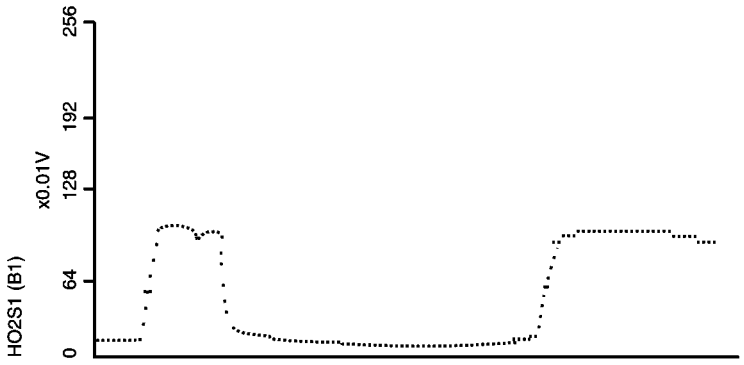

• "HO2S1 (B1)" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

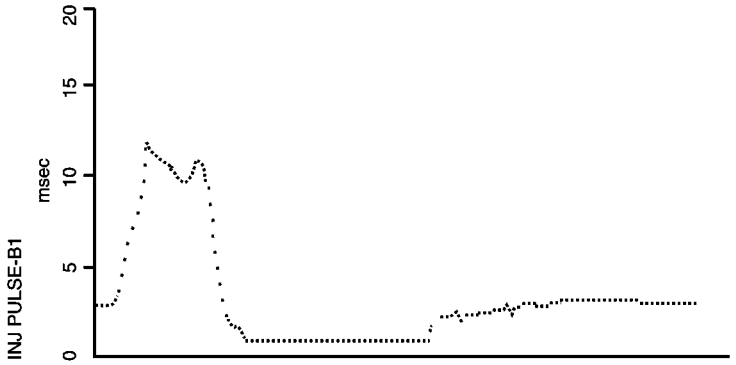

• "INJ PULSE-B1" should increase when depressing the accelerator pedal and should decrease when the pedal is released.

PBIB0668E

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

PFP:00031

Description

EBS00OKV

The specification (SP) value indicates the tolerance of the value that is displayed in “DATA MONITOR (SPEC)” mode of CONSULT-II during normal operation of the Engine Control System. When the value in “DATA MONITOR (SPEC)” mode is within the SP value, the Engine Control System is confirmed OK. When the value in “DATA MONITOR (SPEC)” mode is NOT within the SP value, the Engine Control System may have one or more malfunctions.
The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MI.
The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1 (The mean value of air-fuel ratio feedback correction factor per cycle)

Testing Condition

EBS00OKW

- Vehicle driven distance: More than 5,000 km (3,017 miles)
- Barometric pressure: 98.3 - 104.3 kPa (0.983 - 1.043 bar, 1.003 - 1.064 kg/cm^2 , 14.25 - 15.12 psi)
- Atmospheric temperature: 20 - 30°C (68 - 86°F)
- Engine coolant temperature: 75 - 95°C (167 - 203°F)
- Transmission: Warmed-up*1
- Electrical load: Not applied*2
- Engine speed: Idle

*1: For A/T models, after the engine is warmed up to normal operating temperature, drive vehicle until “FLUID TEMP SE” (A/T fluid temperature sensor signal) indicates more than 60°C (140°F).
For M/T models, after the engine is warmed up to normal operating temperature, drive vehicle for 5 minutes.
*2: Rear window defogger switch, air conditioner switch, lighting switch are “OFF”. Steering wheel is straight ahead.

Inspection Procedure

EBS00OKX

NOTE:
Perform “DATA MONITOR (SPEC)” mode in maximum scale display.

1. Perform EC-522, "Basic Inspection" .
2. Confirm that the testing conditions indicated above are met.
3. Select “B/FUEL SCHDL” and “A/F ALPHA-B1” in “DATA MONITOR (SPEC)” mode with CONSULT-II.
4. Make sure that monitor items are within the SP value.
5. If NG, go to EC-562, "Diagnostic Procedure" .

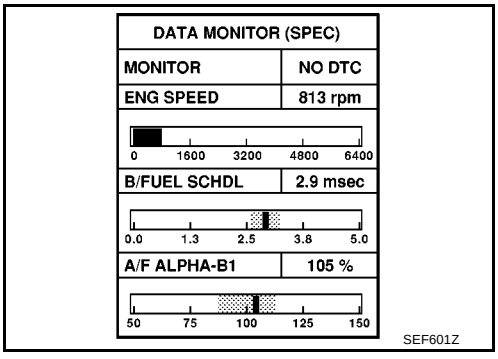

Diagnostic Procedure

EBS00OKY

CHECK A/F ALPHA–B1

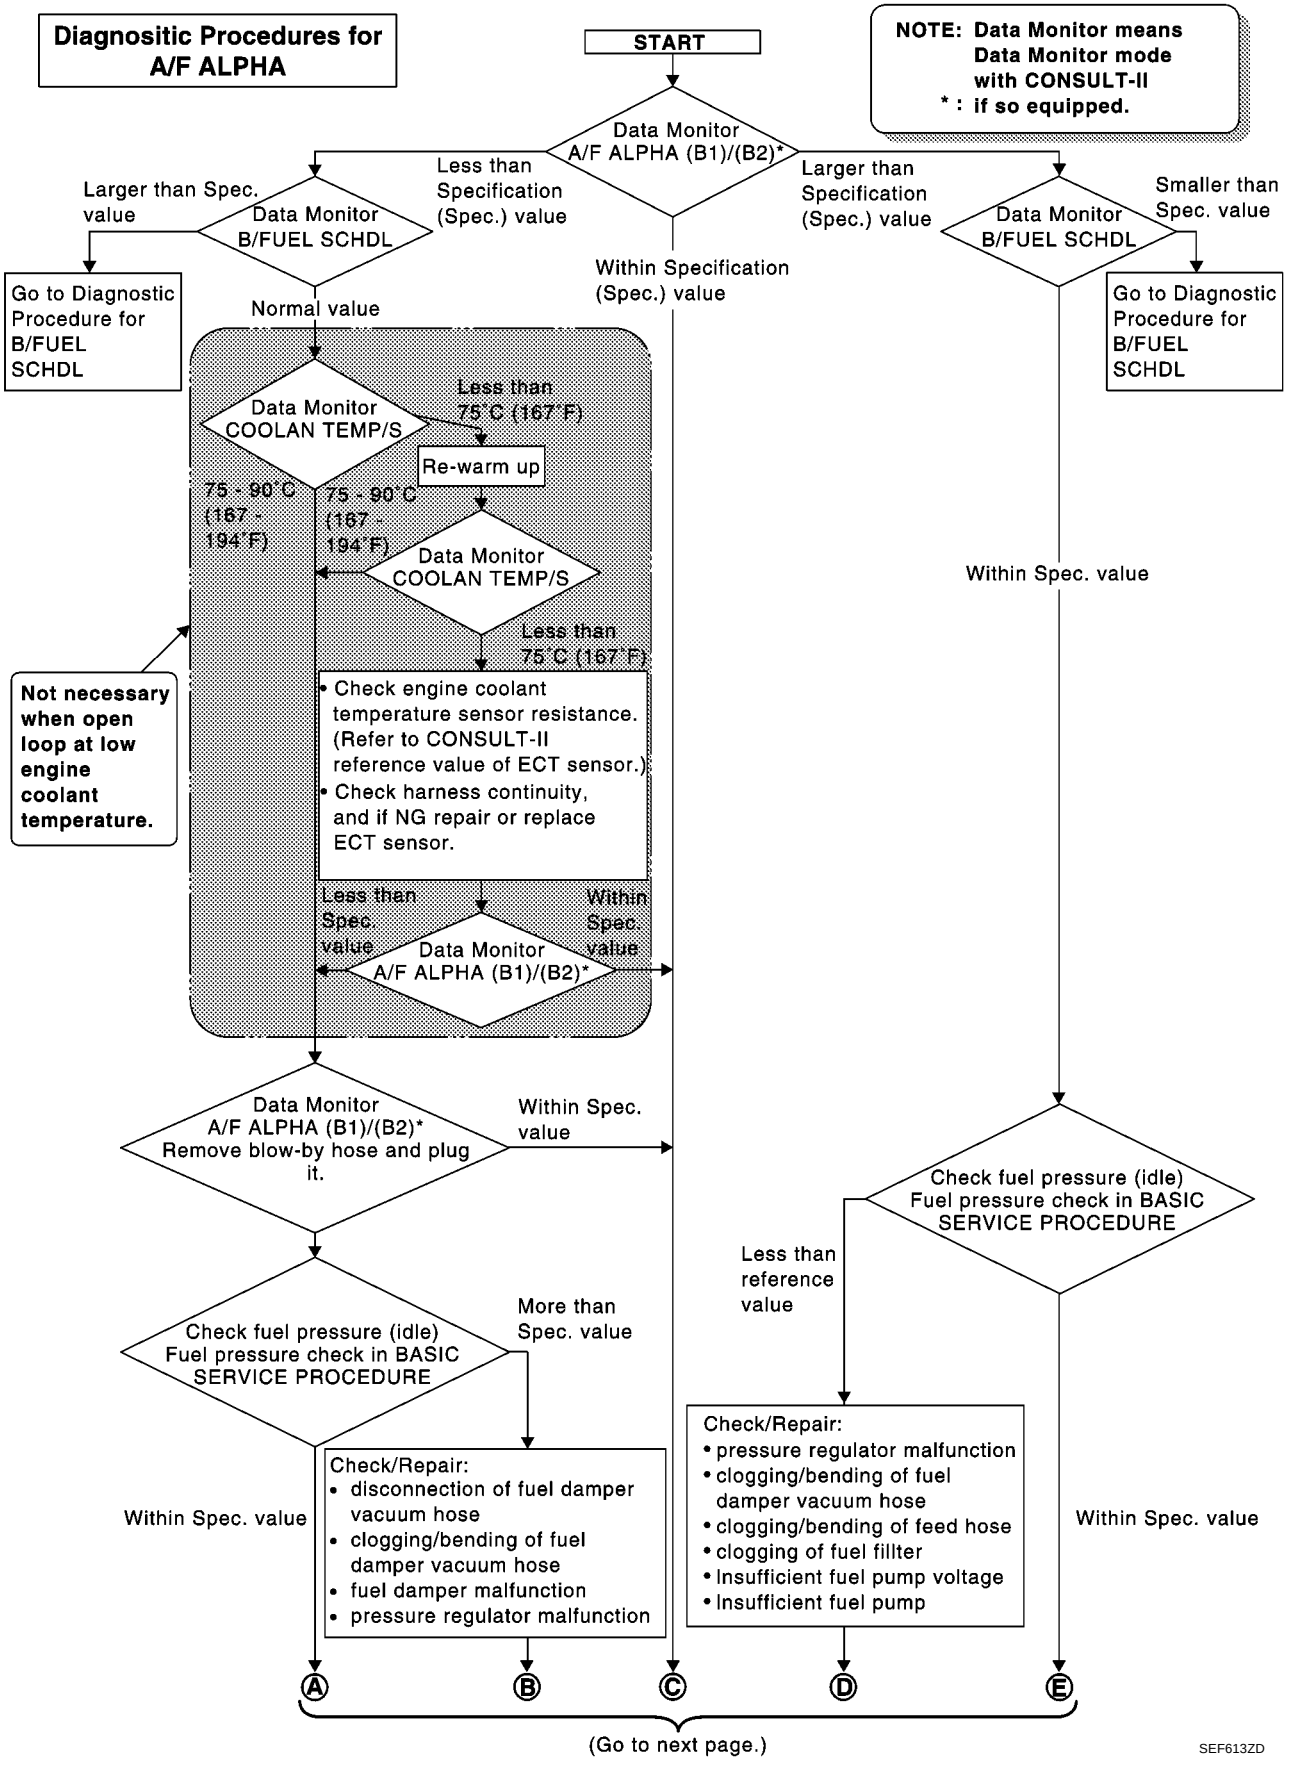

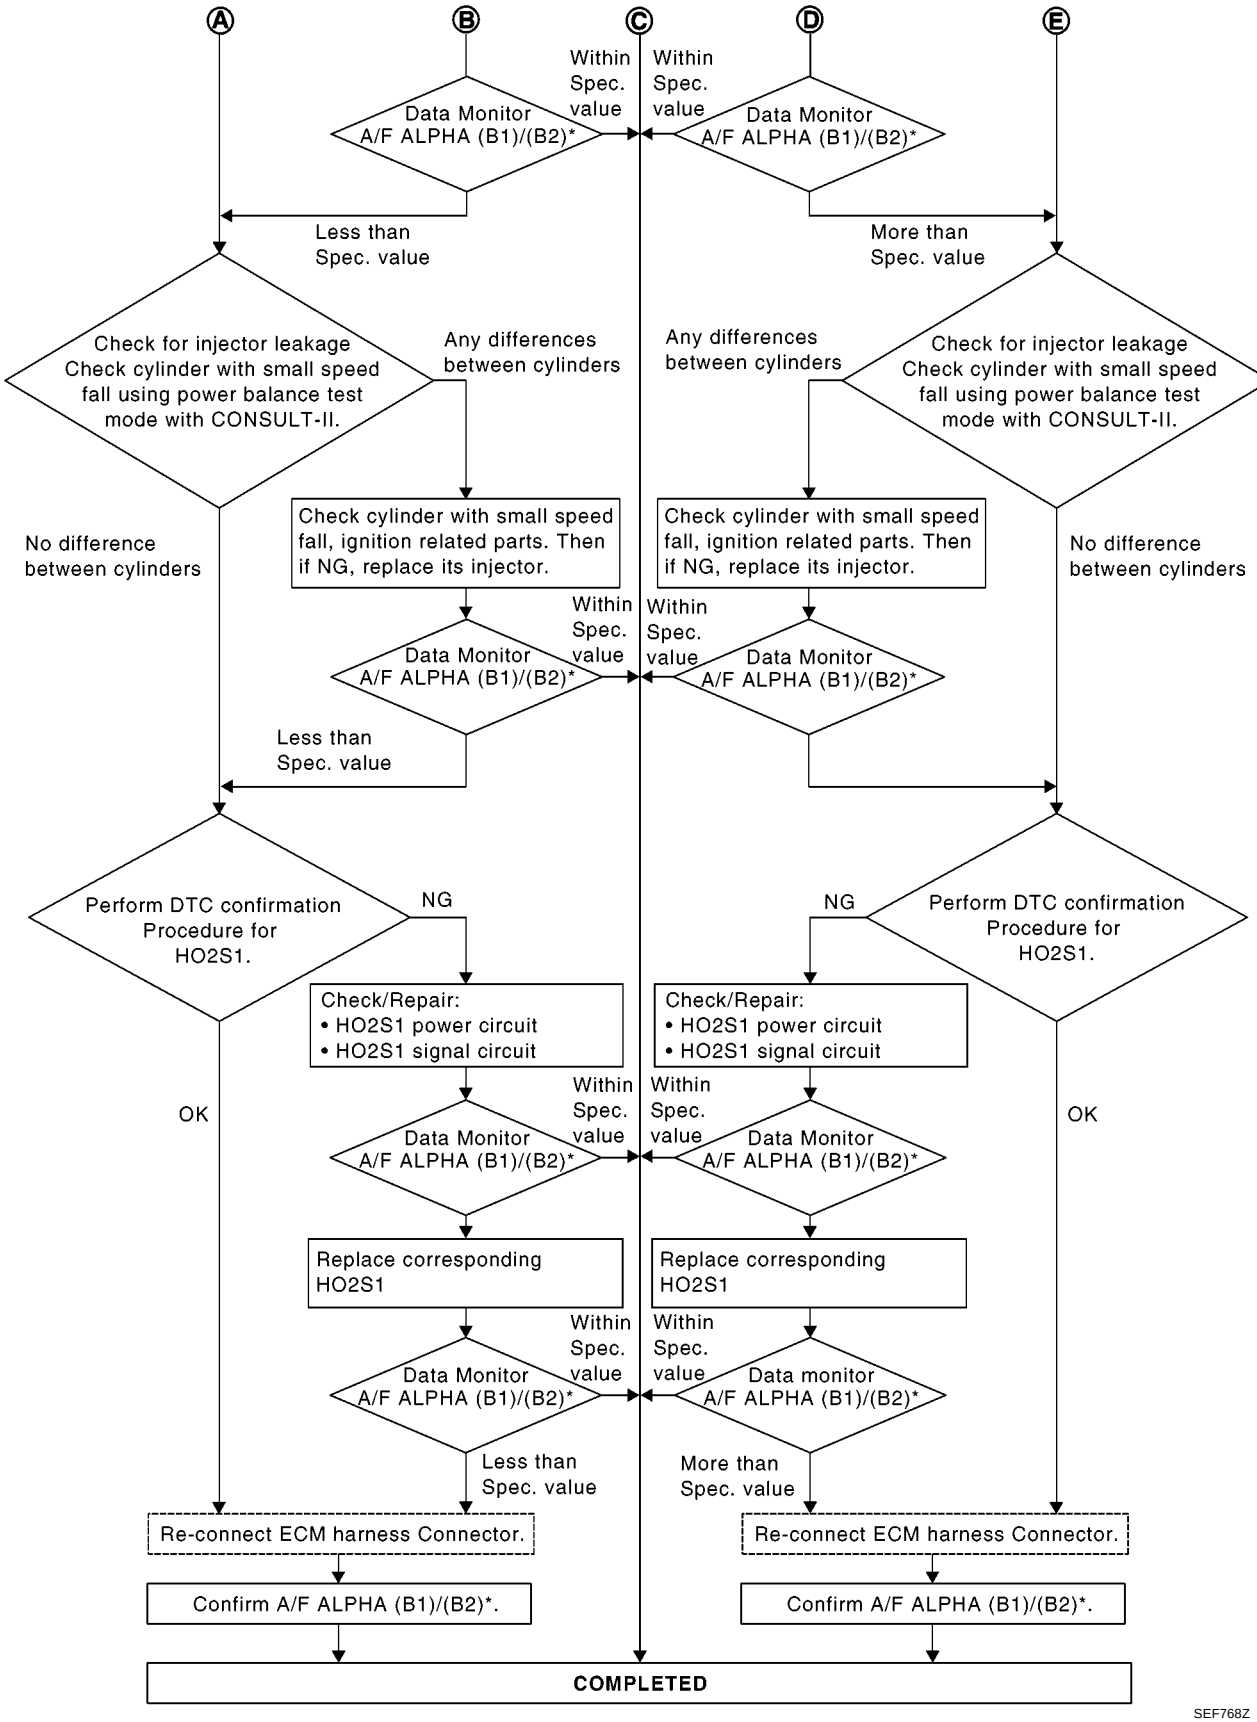
Ⓐ
Ⓑ
Ⓒ
Ⓓ
Ⓔ
Within Spec. value
Data Monitor A/F ALPHA (B1)/(B2)*
Less than Spec. value
More than Spec. value
Check for injector leakage Check cylinder with small speed fall using power balance test mode with CONSULT-II.
Any differences between cylinders
No difference between cylinders
Check cylinder with small speed fall, ignition related parts. Then if NG, replace its injector.
Perform DTC confirmation Procedure for HO2S1.
NG
OK
Check/Repair:
• HO2S1 power circuit
• HO2S1 signal circuit
Replace corresponding HO2S1
Data monitor A/F ALPHA (B1)/(B2)*
Re-connect ECM harness Connector.
Confirm A/F ALPHA (B1)/(B2)*.
COMPLETED
SEF768Z

CHECK B/FUEL SCHDL

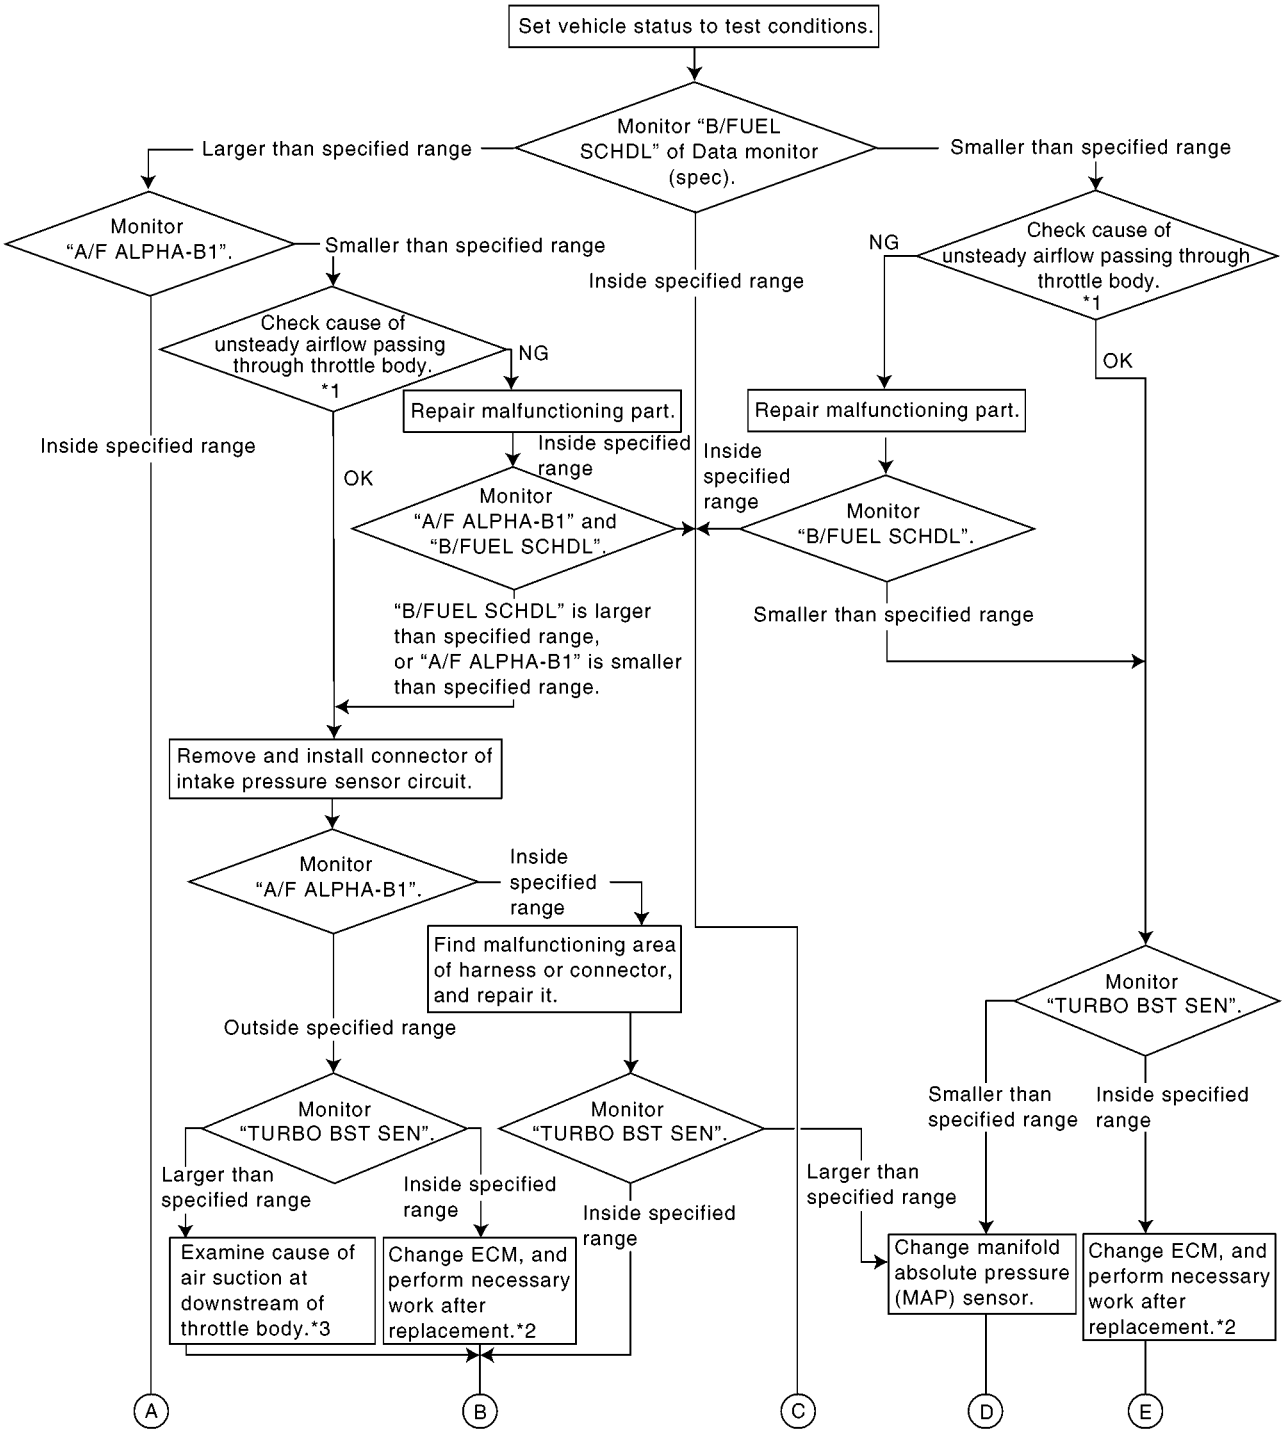

*1
Inspection Location
- Crushed air duct
- Improper sealing of air cleaner element
- Unevenly dirty air cleaner element
- Different specification of intake air system part

etc.

*2
Refer to ECM Removal and Installation procedure in Service Manual.

*3
Inspection Location
- Disconnection, looseness, or cracks of air duct
- Looseness of oil filler cap
- Disconnection of oil level gauge
- Open sticking, breakage, hose disconnection, or cracks of blow-by gas control valve
- Disconnection or cracks of EVAP canister purge hose, open sticking of EVAP canister purge volume control valve
- Improper sealing of rocker cover gasket
- Disconnection, looseness, or cracks of hoses, such as vacuum hose, connecting to intake air system parts.
- Improper sealing of intake air system part gasket

etc.

PBIA1516E

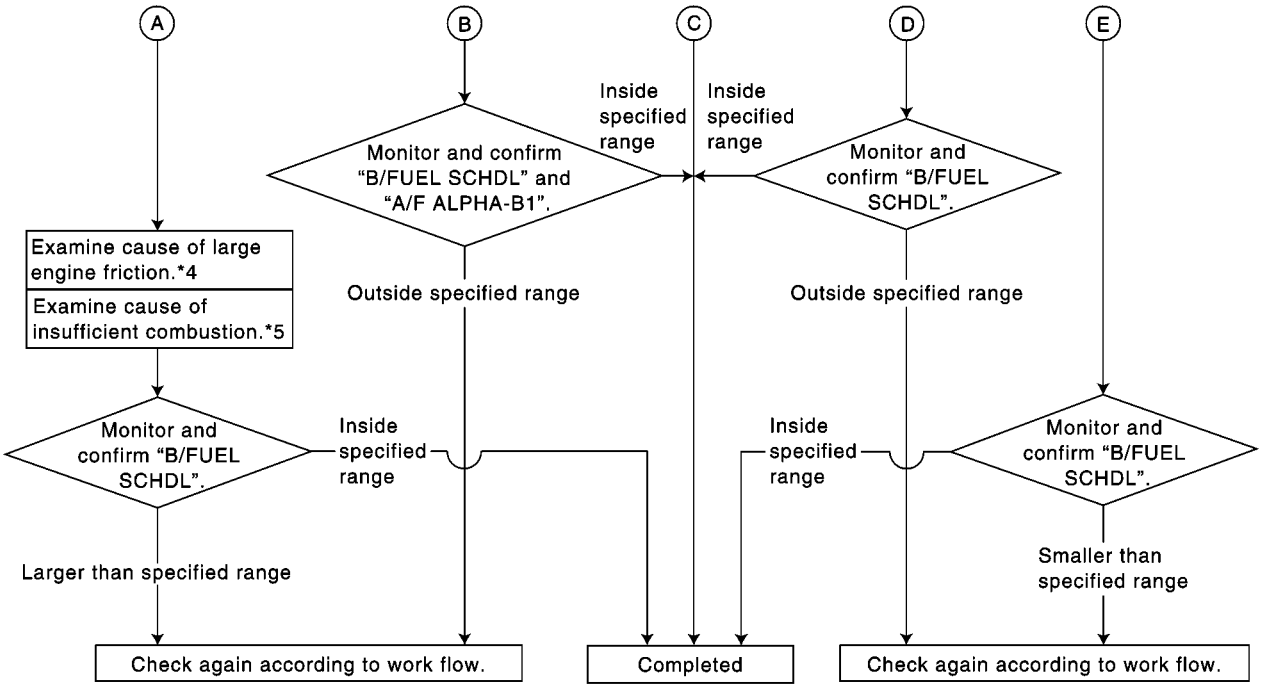

*4
Inspection Location
- Overhigh engine oil level
- Engine oil viscosity
- Over-tensioned belt of power steering, alternator, and air conditioner compressor, unusual noise, or binding of pulley
- Unusual noise of engine
- Unusual noise of gear change

etc.

*5
Inspection Location
- EGR valve sticking
- Improper valve clearance
- Malfunction of intake valve timing control function
- Improper installation of camshaft sprocket

etc.

MBIB0658E

TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT

PFP:00006

Description

EBS00OKZ

Intermittent incidents (I/I) may occur. In many cases, the malfunction resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on (1st trip) DTC visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific malfunctioning area.

Common I/I Report Situations

STEP in Work Flow	Situation
II	The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than 0 or [1t].
III	The symptom described by the customer does not recur.
IV	(1st trip) DTC does not appear during the DTC Confirmation Procedure.
VI	The Diagnostic Procedure for PXXXX does not indicate the malfunctioning area.

Diagnostic Procedure

EBS00OL0

1. INSPECTION START

Erase (1st trip) DTCs. Refer to EC-510, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .

>> GO TO 2.

2. CHECK GROUND TERMINALS

Check ground terminals for corroding or loose connection.
Refer to GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" , “Incident Simulation Tests”, “Ground Inspection”.

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. SEARCH FOR ELECTRICAL INCIDENT

Perform GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident" , “Incident Simulation Tests”.

OK or NG

OK >> **INSPECTION END**
NG >> Repair or replace.

POWER SUPPLY CIRCUIT FOR ECM

PFP:24110

Wiring Diagram

EBS00OL1

EC-MAIN-01

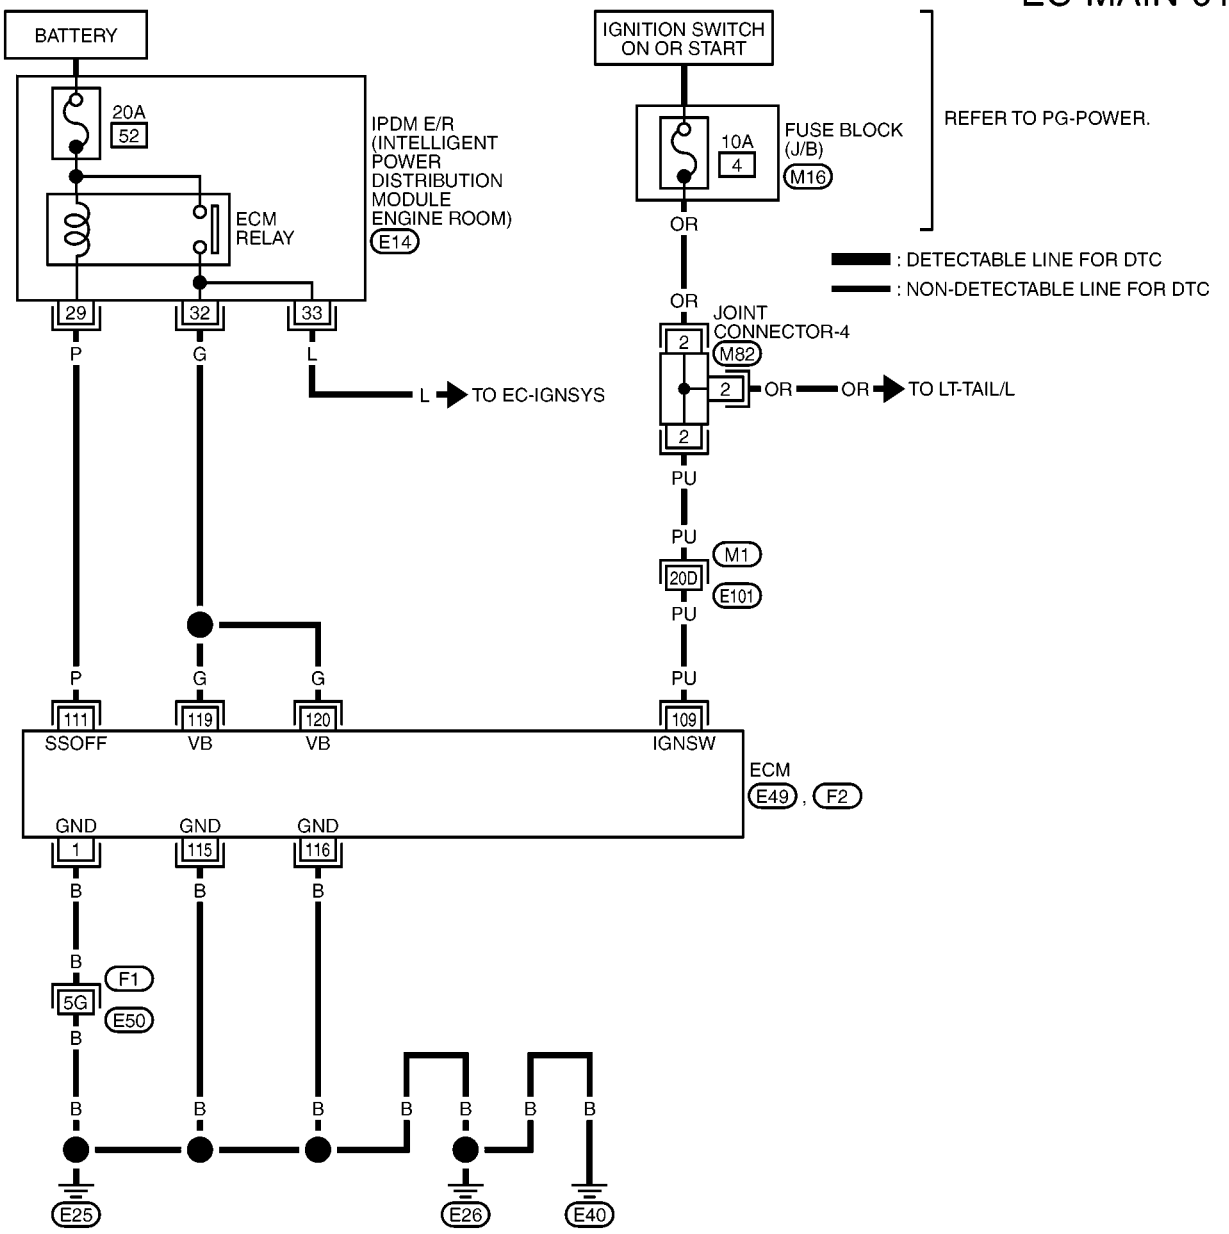

REFER TO THE FOLLOWING.
M1 , F1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)

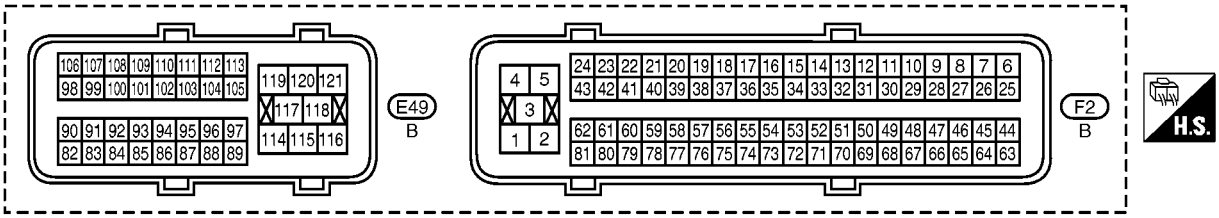

MBWA0570E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1 115 116	B B B	ECM ground	**[Engine is running]** ● Idle speed	Engine ground
109	PU	Ignition switch	**[Ignition switch OFF]**	0V
			[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
111	P	ECM relay (Self shut-off)	**[Engine is running]** **[Ignition switch OFF]** ● For a few seconds after turning ignition switch OFF	0 - 1.0V
			[Ignition switch OFF] ● More than a few seconds passed after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
119 120	G G	Power supply for ECM	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00OL2

1. INSPECTION START

Start engine.

Is engine running?

Yes or No

Yes >> GO TO 8.
No >> GO TO 2.

2. CHECK ECM POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF and then ON.
2. Check voltage between ECM terminal 109 and ground with CONSULT-II or tester.

Voltage: Battery voltage

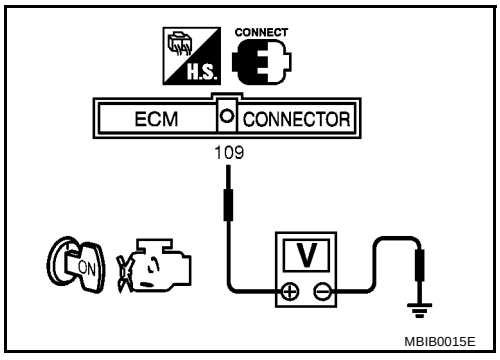

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101
- Fuse block (J/B) connector M16
- Joint connector-4
- 10A fuse
- Harness for open or short between ECM and fuse

>> Repair harness or connectors.

4. CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-I

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminals 1, 115, 116 and engine ground. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- Harness for open or short between ECM and engine ground

>> Repair open circuit or short to power in harness or connectors.

6. CHECK ECM POWER SUPPLY CIRCUIT-II

1. Reconnect ECM harness connector.
2. Turn ignition switch ON.
3. Check voltage between IPDE E/R harness connector E14 terminal 33 and ground with CONSULT-II or tester.

Voltage: Battery voltage

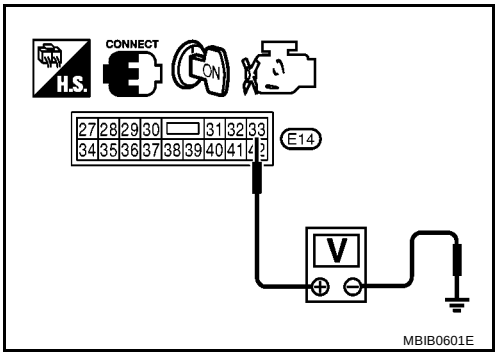

OK or NG

OK >> Go to EC-792, "IGNITION SIGNAL" .
NG >> GO TO 7.

7. CHECK ECM POWER SUPPLY CIRCUIT-III

1. Turn ignition switch ON and then OFF.
2. Check voltage between ECM terminals 119, 120 and ground with CONSULT-II or tester.

Voltage: After turning ignition switch "OFF", battery voltage will exist for a few seconds, then drop approximately 0V.

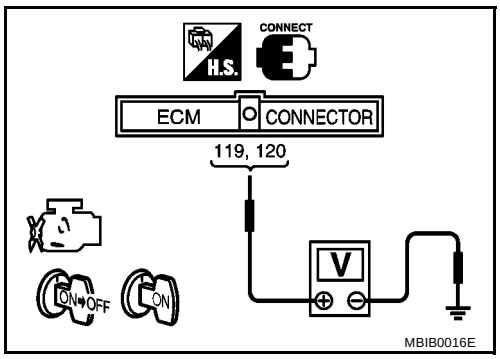

OK or NG

OK >> GO TO 13.
NG (Battery voltage does not exist.)>>GO TO 8.
NG (Battery voltage exists for more than a few seconds.)>>GO TO 13.

8. CHECK ECM POWER SUPPLY CIRCUIT-IV

1. Turn ignition switch OFF.
2. Check voltage between ECM terminal 111 and ground with CONSULT-II or tester.

Voltage: Battery voltage

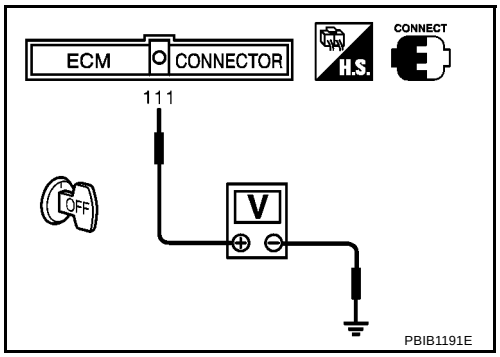

OK or NG

OK >> GO TO 11.
NG >> GO TO 9.

9. CHECK ECM POWER SUPPLY CIRCUIT-V

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector.
3. Check harness continuity between ECM terminal 111 and IPDM E/R terminal 29. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 10.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK 20A FUSE

1. Disconnect 20A fuse from IPDM E/R.
2. Check 20A fuse.

OK or NG

OK >> GO TO 13.
NG >> Replace 20A fuse.

11. CHECK ECM POWER SUPPLY CIRCUIT-VI

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector.
3. Check harness continuity between ECM terminals 119, 120 and IPDM E/R terminal 32. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 12.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

12. CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminals 1, 115, 116 and engine ground. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to power.

OK or NG

OK >> GO TO 13.
NG >> Repair open circuit or short to power in harness or connectors.

13. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R.
NG >> Repair open circuit or short to power in harness or connectors.

DTC U1000, U1001 CAN COMMUNICATION LINE

PFP:23710

Description

EBS00OL3

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

EBS00OL4

The MI will not light up for these self-diagnoses.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U1000 1000	CAN communication line	● ECM cannot communicate to other control units. ● ECM cannot communicate for more than the specified time.	● Harness or connectors (CAN communication line is open or shorted.)
U1001 1001			

DTC Confirmation Procedure

EBS00OL5

1. Turn ignition switch ON and wait at least 3 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. If 1st trip DTC or DTC is detected, go to EC-574, "Diagnostic Procedure" .

Wiring Diagram

EBS00OL6

EC-CAN-01

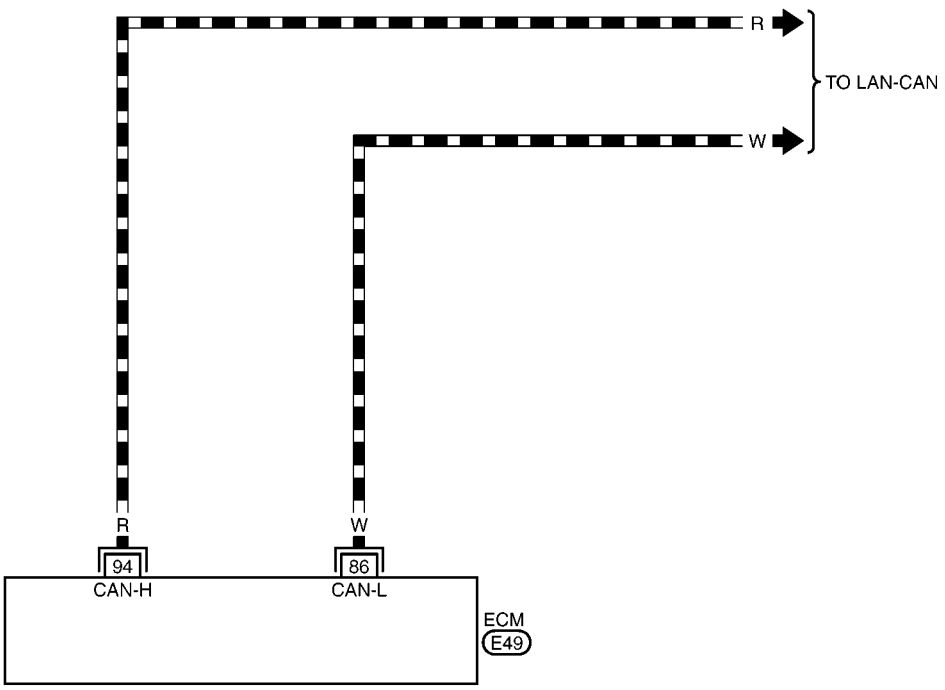

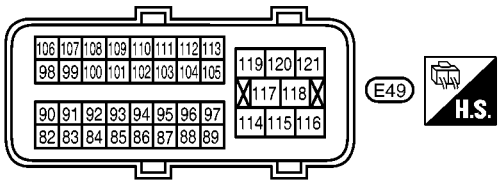

MBWA0268E

Diagnostic Procedure

EBS00OL7

Go to LAN-4, "Precautions When Using CONSULT-II" .

DTC P0107, P0108 MANIFOLD ABSOLUTE PRESSURE SENSOR

PFP:22365

Component Description

EBS00OL8

The manifold absolute pressure (MAP) sensor is placed intake manifold corrector. It detects intake manifold pressure and sends the voltage signal to the ECM, ECM uses the signal to compute intake air volume value.
The sensor uses a silicon diaphragm which is sensitive to the change in pressure. As the pressure increase, the voltage rises.

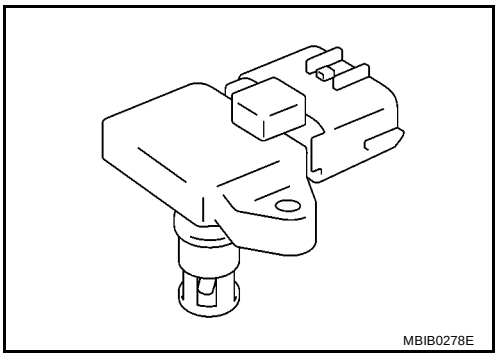
MBIB0278E

On Board Diagnosis Logic

EBS00OL9

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0107 0107	Manifold absolute pressure sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Manifold absolute pressure sensor
P0108 0108	Manifold absolute pressure sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted) ● Manifold absolute pressure sensor ● Intake air leaks

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and MI lights up.

Detected items	Engine operating condition in fail-safe mode
Manifold absolute pressure sensor circuit	Engine speed will not rise more than 2,500 rpm due to the fuel cut.

DTC Confirmation Procedure

EBS00OLA

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If the 1st trip DTC is detected, go to EC-577, "Diagnostic Procedure" .

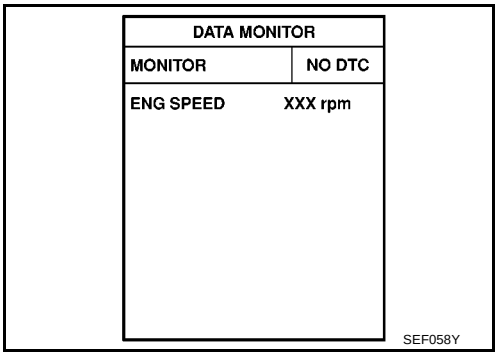

SEF058Y

WITHOUT CONSULT-II

1. Turn ignition switch ON and wait at least 5 seconds.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If 1st trip DTC is detected, go to EC-577, "Diagnostic Procedure" .

Wiring Diagram

EBS00OLB

EC-AP/SEN-01

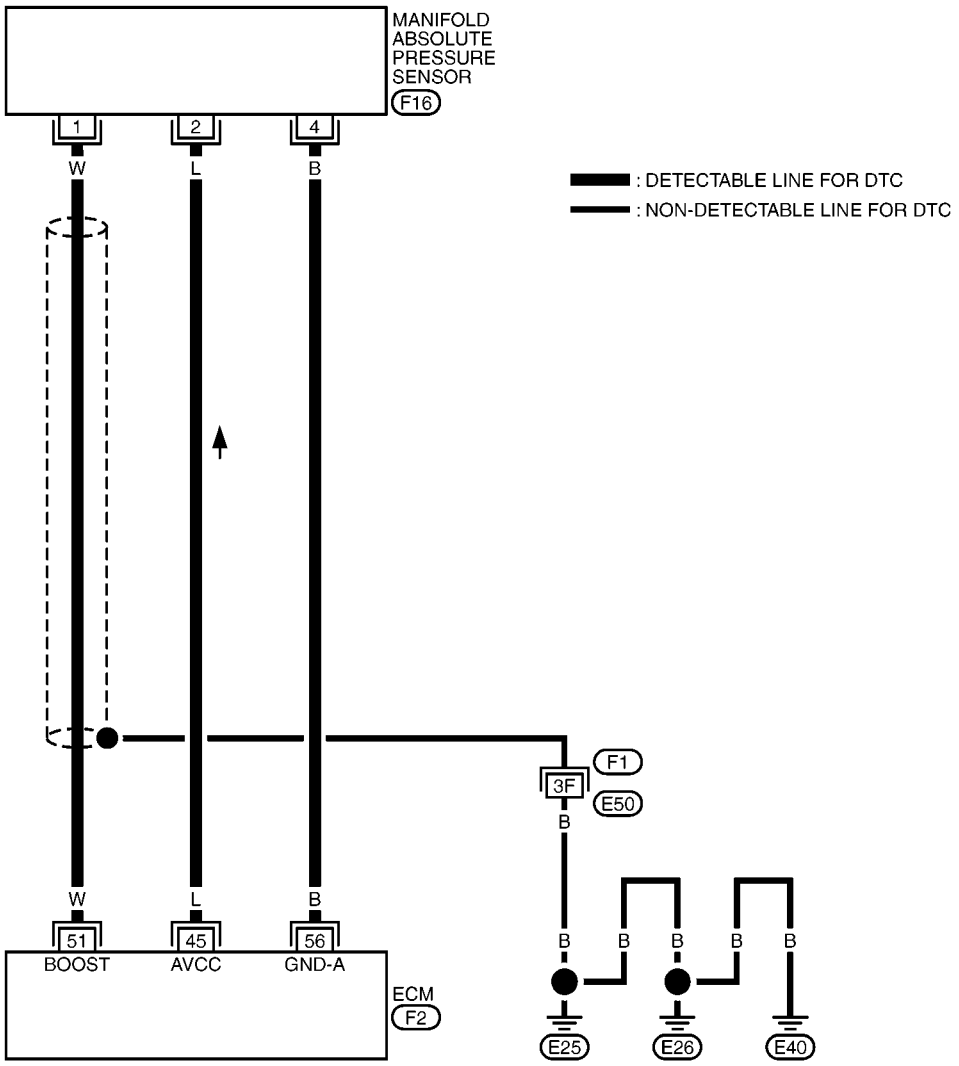

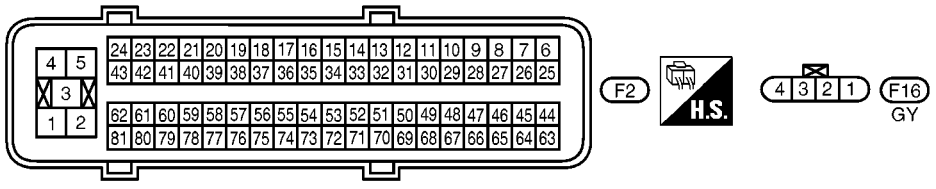

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0304E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
51	W	Manifold absolute pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 1.5V
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	Approximately 1.2V

Diagnostic Procedure

EBS00OLC

1. CHECK MAP SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect manifold absolute pressure sensor harness connector.
3. Turn ignition switch ON.

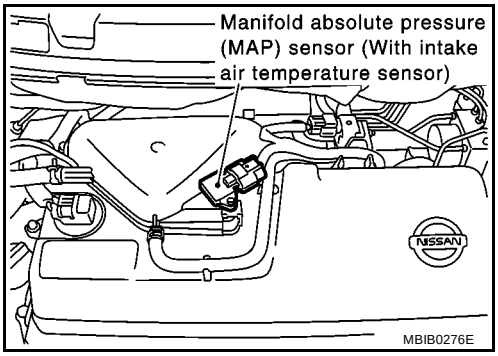

4. Check voltage between MAP sensor terminal 2 and ground.

Voltage: Approximately 5V

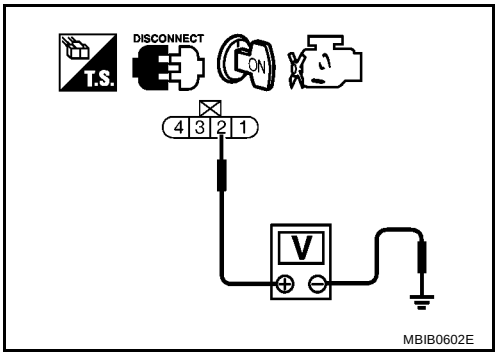

OK or NG

OK >> GO TO 2.
NG >> Repair harness or connectors.

2. CHECK MAP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between MAP sensor terminal 4 and ECM terminal 56
   Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK MAP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between MAP sensor terminal 1 and ECM terminal 51.
   Refer to Wiring Diagram

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK MAP SENSOR

Refer to EC-578, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace manifold absolute pressure sensor.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OLD

MANIFOLD ABSOLUTE PRESSURE SENSOR

1. Reconnect all harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Turn ignition switch OFF, wait at least 5 seconds and then turn ON.
4. Check voltage between ECM terminal 51 (manifold absolute pressure sensor signal) and ground.

   NOTE:
   - To avoid the affection of intake manifold vacuum, check the voltage 1 or more minutes past after engine is stopped.
   - Because the sensor is absolute pressure sensor, output value may differ depends on atmospheric pressure and altitude.

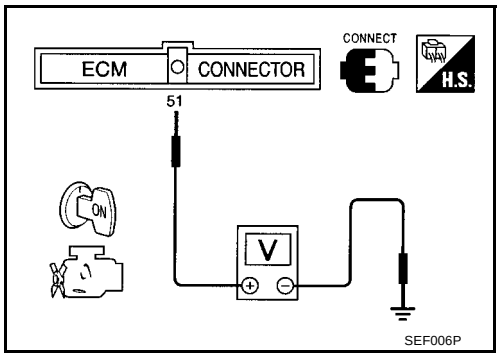

5. Measure the atmospheric pressure.

   NOTE:
   As atmospheric pressure describe on synoptic chart is value at sea level, please compensate the actual pressure with the following chart.

Altitude	Compensated pressure
0m	0hPa
200m	-24hPa
400m	-47hPa
600m	-70hPa
800m	-92hPa
1,000m	-114hPa
1,500m	-168hPa
2,000m	-218hPa

6. Check the manifold absolute pressure sensor value corresponds to the atmospheric pressure.

Atmospheric pressure	Voltage
800hPa	3.2 - 3.6v
850hPa	3.4 - 3.8v
900hPa	3.7 - 4.1v
960hPa	3.9 - 4.3v
1,000hPa	4.1 - 4.5v
1,050hPa	4.3 - 4.7v

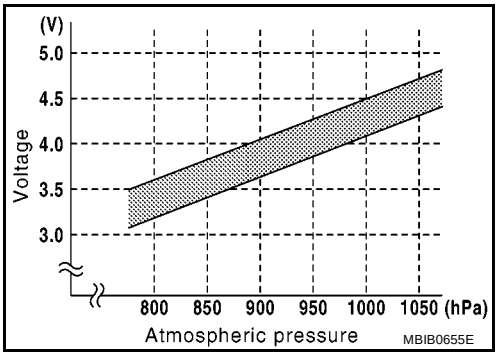

7. Start engine and let it idle.
8. Check the voltage between ECM terminal 51 and ground at idling and confirm the voltage difference between engine is stopped and at idling is within following chart.

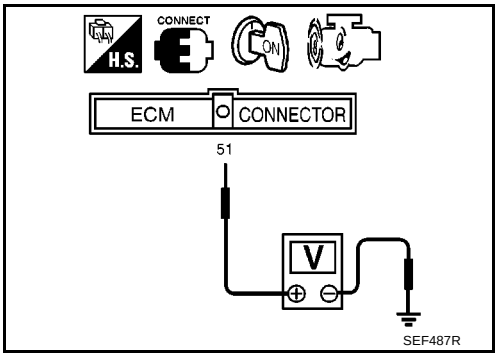

Intake manifold vacuum	Voltage difference
-40kPa (-300mmHg)	1.6 - 2.0v
-53.3kPa (-400mmHg)	2.2 - 2.6v
-66.7kPa (-500mm)	2.8 - 3.2v
-80kPa (-600mmHg)	3.4 - 3.8v

EBS00OLE

Removal and Installation

MANIFOLD ABSOLUTE PRESSURE SENSOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0117, P0118 ECT SENSOR

PFP:22630

Component Description

EBS00OLF

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

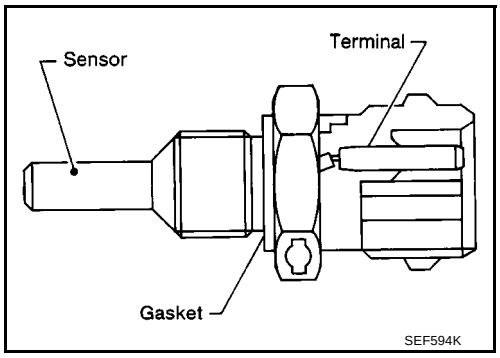

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
–10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 72 (Engine coolant temperature sensor) and ground.

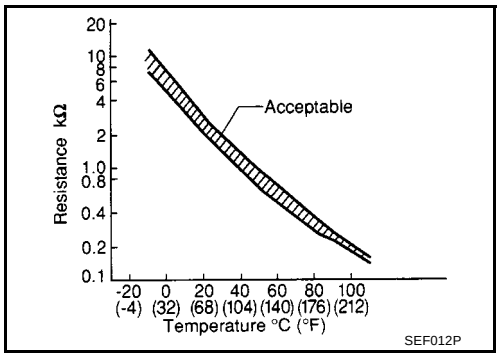

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

EBS00OLG

DTC No.	Trouble Diagnosis Name	DTC Detecting Condition	Possible Cause
P0117 0117	Engine coolant temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Engine coolant temperature sensor
P0118 0118	Engine coolant temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

FAIL-SAFE MODE

When this malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Detected items	Engine operating condition in fail-safe mode	
Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch ON or START. CONSULT-II displays the engine coolant temperature decided by ECM.	
	Condition	Engine coolant temperature decided (CONSULT-II display)
	Just as ignition switch is turned ON or Start	40°C (104°F)
	More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
	When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running.	

DTC Confirmation Procedure

EBS00OLH

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If 1st trip DTC is detected, go to EC-583, "Diagnostic Procedure" .

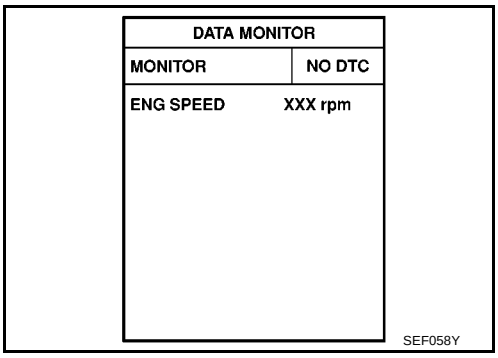

WITHOUT CONSULT-II

1. Turn ignition switch ON and wait at least 5 seconds.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If 1st trip DTC is detected, go to EC-583, "Diagnostic Procedure" .

Wiring Diagram

EBS00OLI

EC-ECTS-01

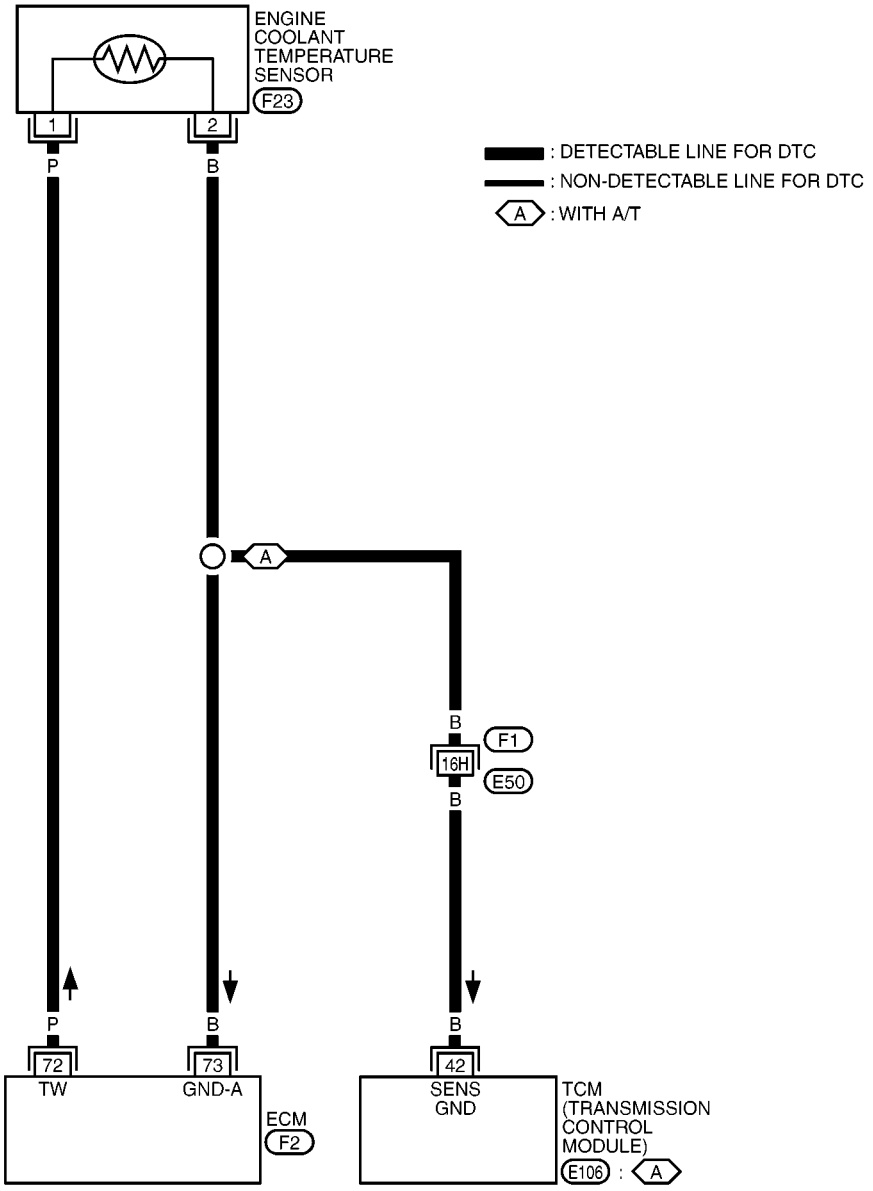

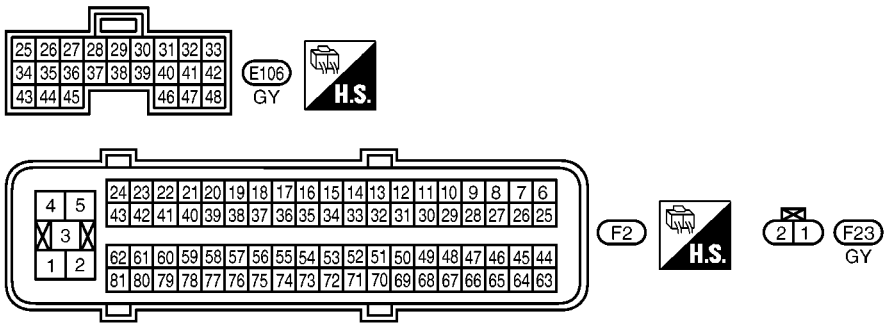

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0271E

Diagnostic Procedure

EBS00OLJ

1. CHECK ECT SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect engine coolant temperature (ECT) sensor harness connector.
3. Turn ignition switch ON.

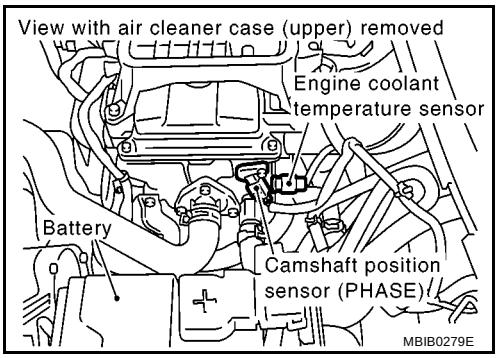

4. Check voltage between ECT sensor terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

OK >> GO TO 2.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

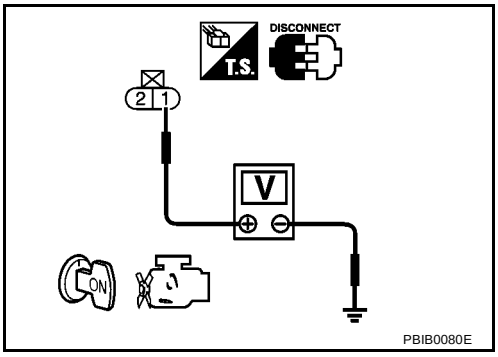

2. CHECK ECT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect TCM harness connector.
4. Check harness continuity between ECT sensor terminal 2 and ECM terminal 73, TCM terminal 42. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between engine coolant temperature sensor and ECM
- Harness for open or short between engine coolant temperature sensor and TCM

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-584, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace engine coolant temperature sensor.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OLK

ENGINE COOLANT TEMPERATURE SENSOR

1. Check resistance between engine coolant temperature sensor terminals 1 and 2 as shown in the figure.

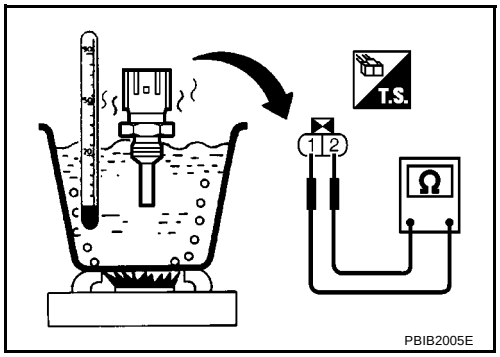

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 72 (Engine coolant temperature sensor) and ground.

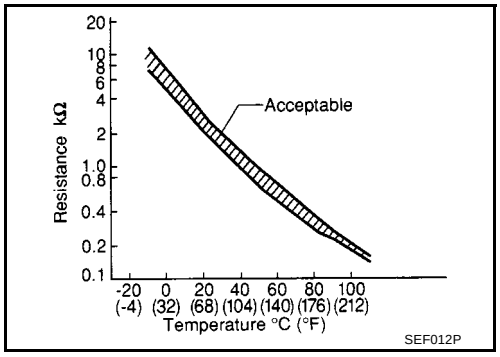

2. If NG, replace engine coolant temperature sensor.

Removal and Installation

EBS00OLL

ENGINE COOLANT TEMPERATURE SENSOR

Refer to CO-23, "THERMOSTAT" .

DTC P0122, P0123 TP SENSOR

PFP:16119

Component Description

EBS010D5

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

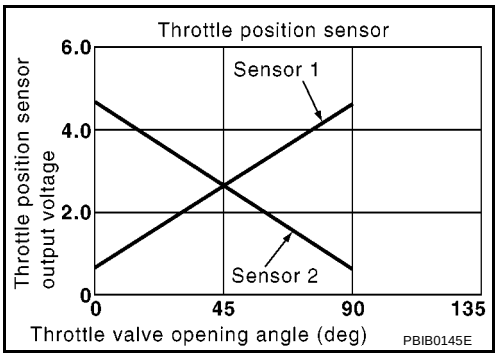

CONSULT-II Reference Value in Data Monitor Mode

EBS010D6

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS010D7

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0122 0122	Throttle position sensor 2 circuit low input	An excessively low voltage from the TP sensor 2 is sent to ECM.	● Harness or connectors (The TP sensor 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 2)
P0123 0123	Throttle position sensor 2 circuit high input	An excessively high voltage from the TP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010D8

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-588, "Diagnostic Procedure" .

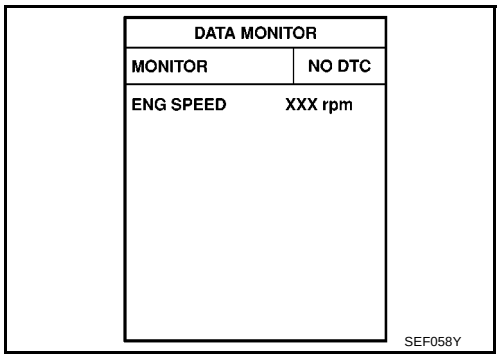

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-588, "Diagnostic Procedure" .

Wiring Diagram

EBS010D9

EC-TPS2-01

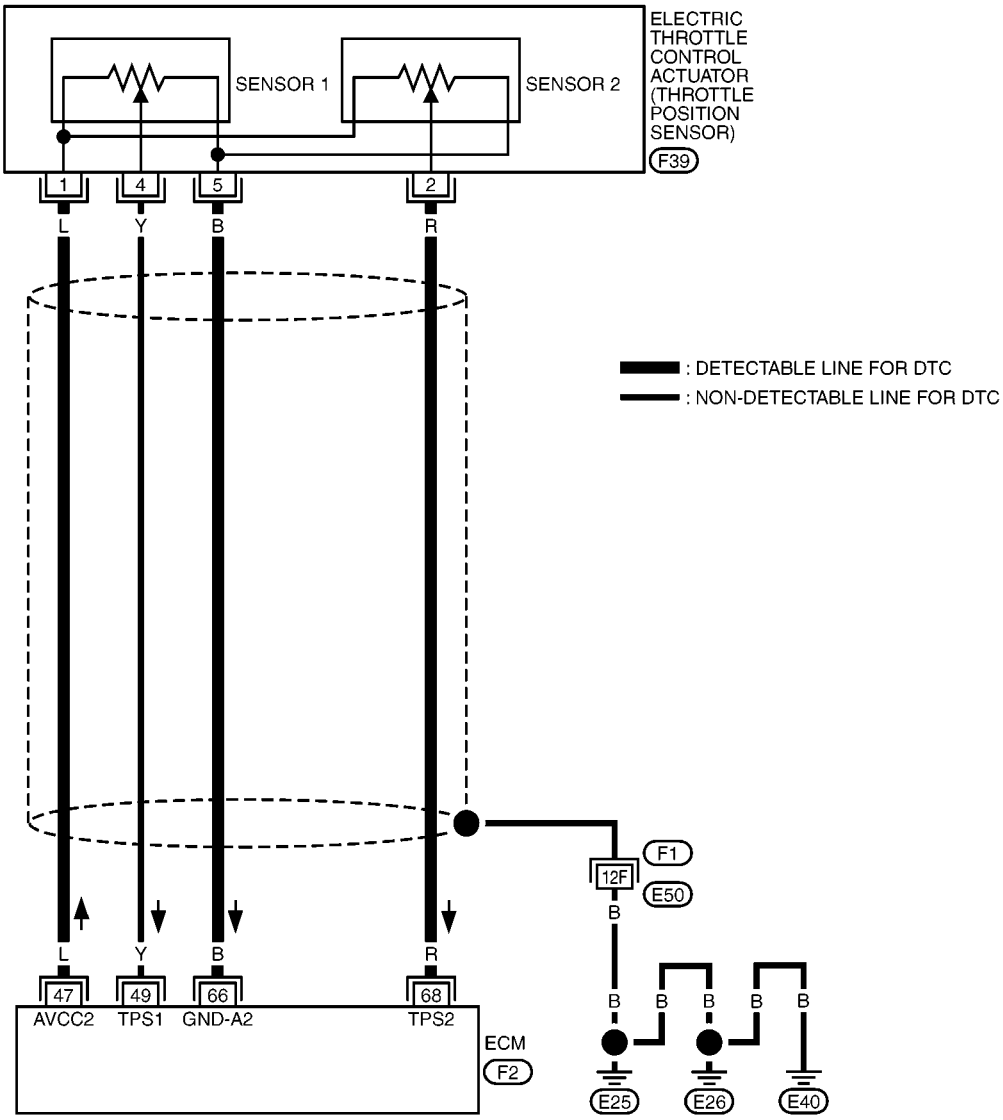

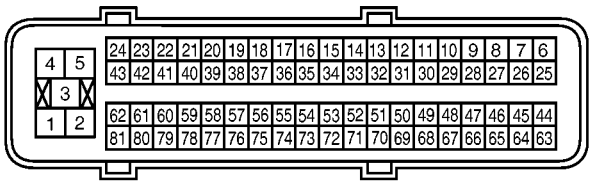

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0291E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS010DA

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

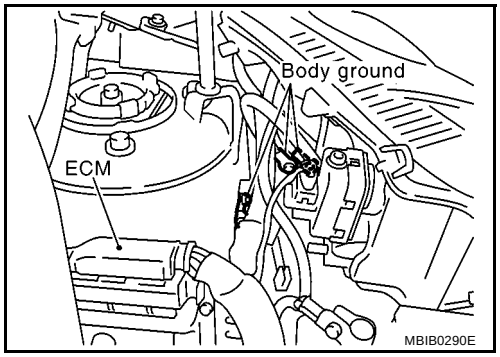

2. CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

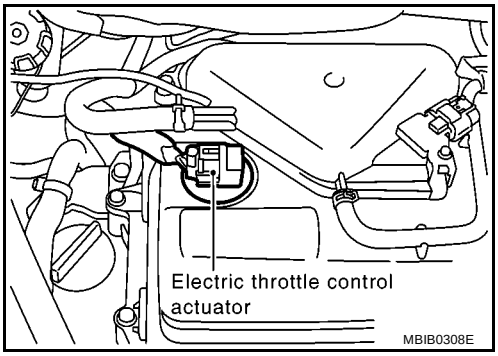

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

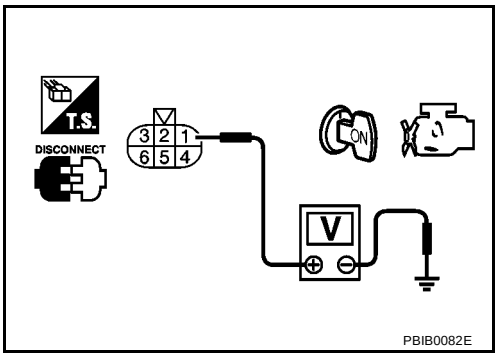

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-590, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010DB

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

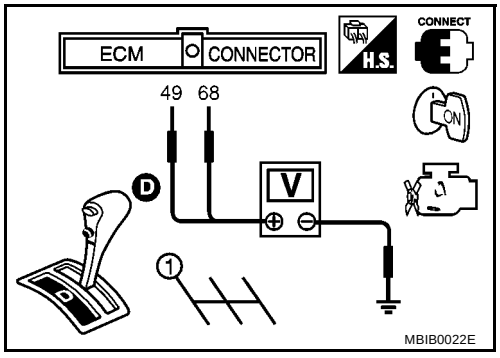

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-503, "Throttle Valve Closed Position Learning" .
8. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS010DC

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0132 HO2S1

PFP:22690

Component Description

EBS00OLM

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

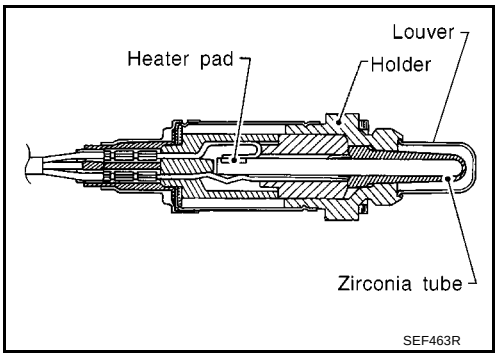

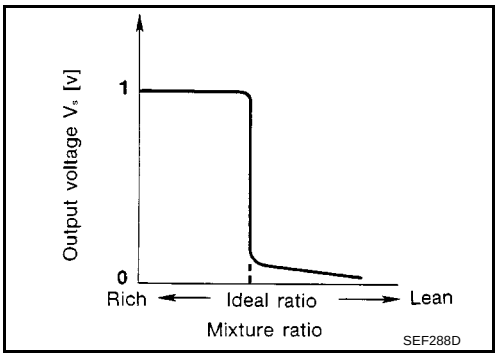

CONSULT-II Reference Value in Data Monitor Mode

EBS00OLN

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

On Board Diagnosis Logic

EBS00OLO

To judge the malfunction, the diagnosis checks that the heated oxygen sensor 1 output is not inordinately high.

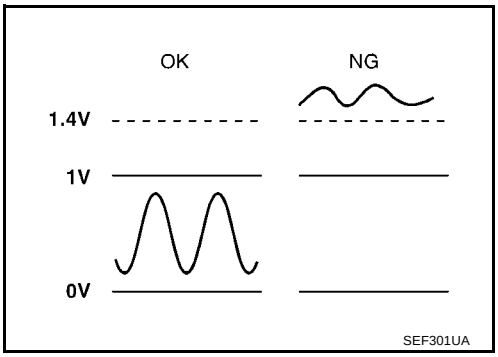

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0132 0132	Heated oxygen sensor 1 circuit high voltage	An excessively high voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1

DTC Confirmation Procedure

EBS00OLP

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON.
4. Select “DATA MONITOR” mode with CONSULT-II.
5. Restart engine and let it idle for 2 minutes.
6. If 1st trip DTC is detected, go to EC-594, "Diagnostic Procedure" .

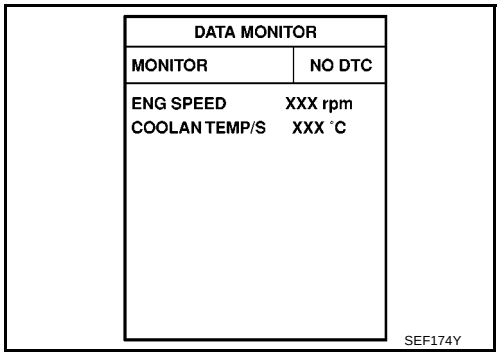

WITHOUT CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Restart engine and let it idle for 2 minutes.
4. Turn ignition switch OFF and wait at least 10 seconds.
5. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
6. If 1st trip DTC is detected, go to EC-594, "Diagnostic Procedure" .

Wiring Diagram

EBS00OLQ

EC-HO2S1-01

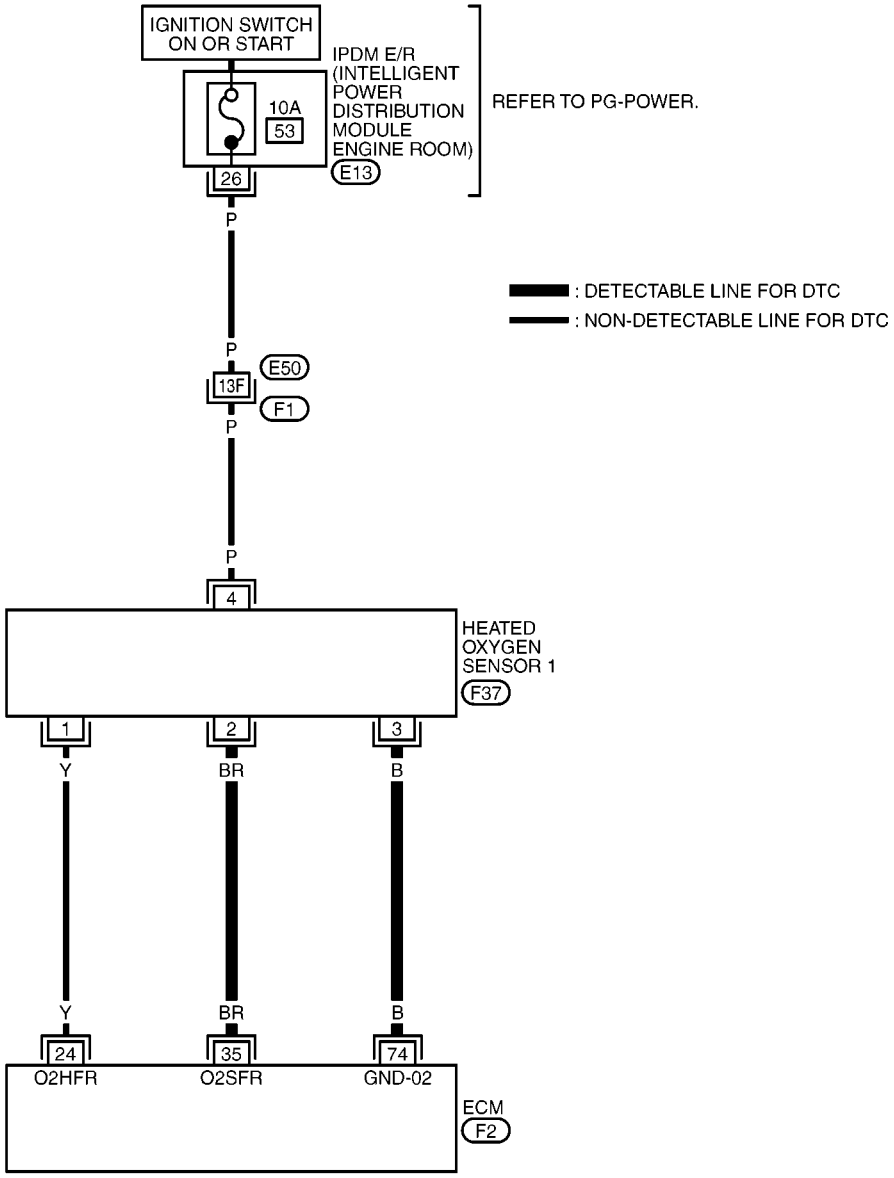

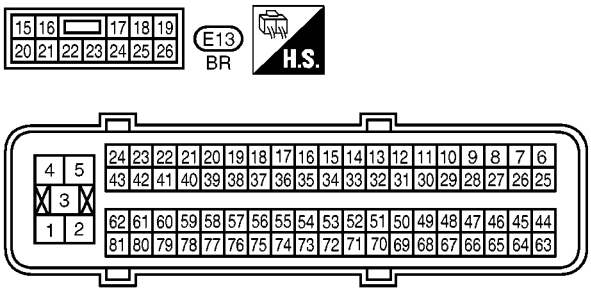

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0272E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OLR

1. RETIGHTEN HEATED OXYGEN SENSOR 1

1. Turn ignition switch OFF.
2. Loosen and retighten heated oxygen sensor 1.

Tightening torque: 40 - 60 N·m (4.1 - 6.2 kg-m, 30 - 44 ft-lb)

>> GO TO 2.

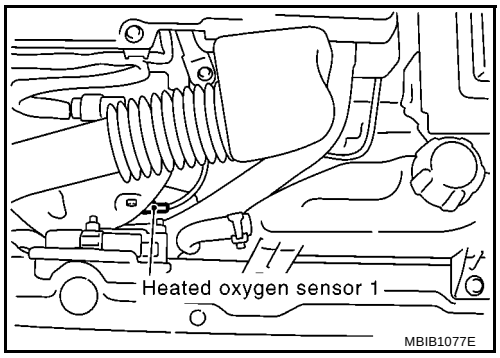

2. CHECK HO2S1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Disconnect heated oxygen sensor 1 harness connector.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 74 and HO2S1 terminal 3.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

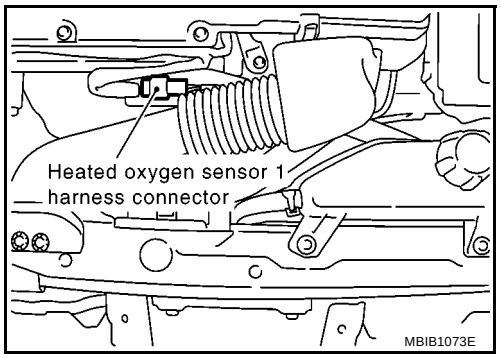

3. CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2. Refer to Wiring Diagram.

Continuity should exist.

3. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

4. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S1 CONNECTOR FOR WATER

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 harness connector
3. Check connectors for water

Water should not exist.

OK or NG

OK >> GO TO 5.
NG >> Repair or replace harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-595, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace malfunctioning heated oxygen sensor 1.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OLS

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.
3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

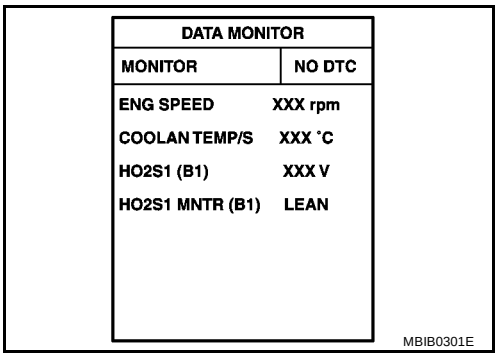

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown in the figure.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

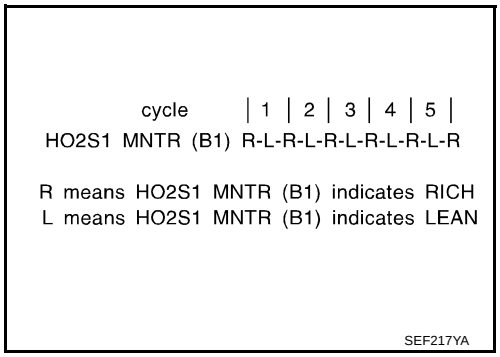

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

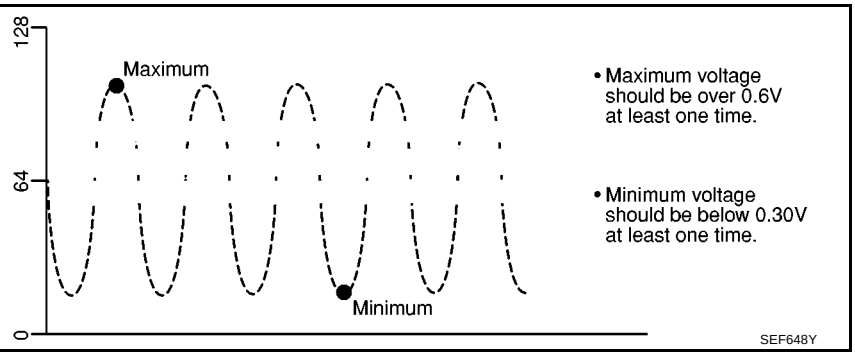

CAUTION:
- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

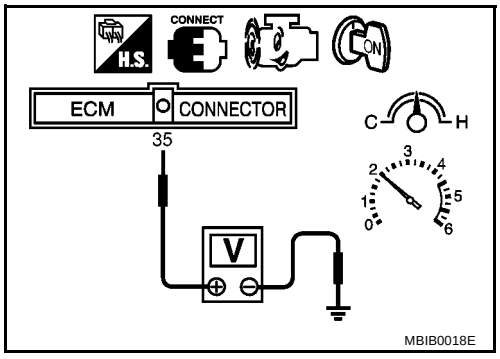

CAUTION:
- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OLT

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P0134 HO2S1

PFP:22690

Component Description

EBS00OLU

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

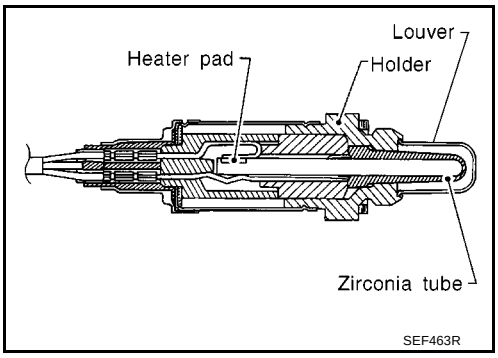

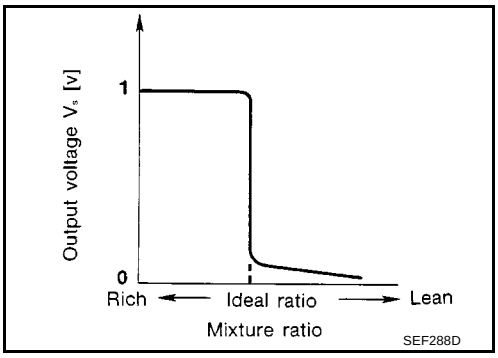

CONSULT-II Reference Value in Data Monitor Mode

EBS00OLV

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ⟷ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ⟷ RICH Changes more than 5 times during 10 seconds.

On Board Diagnosis Logic

EBS00OLW

Under the condition in which the heated oxygen sensor 1 signal is not input, the ECM circuits will read a continuous approximately 0.3V. Therefore, for this diagnosis, the time that output voltage is within 200 to 400 mV range is monitored, and the diagnosis checks that this time is not inordinately long.

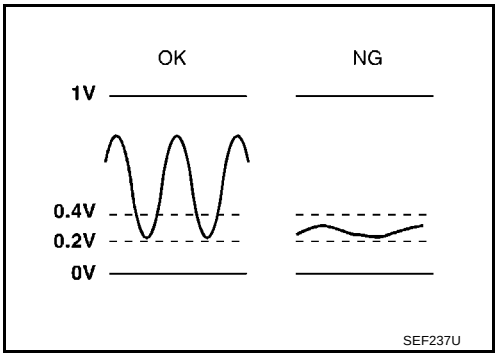

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0134 0134	Heated oxygen sensor 1 circuit no activity detected	The voltage from the sensor is constantly approx. 0.3V.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1

Overall Function Check

EBS00OLY

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” in “DATA MONITOR” mode with CONSULT-II, and select “H02S1 (B1)”.
3. Hold engine speed at 2,000 rpm under no load.
4. Make sure that the indications do not remain in the range between 0.2V to 0.4V.
5. If NG, go to EC-600, "Diagnostic Procedure" .

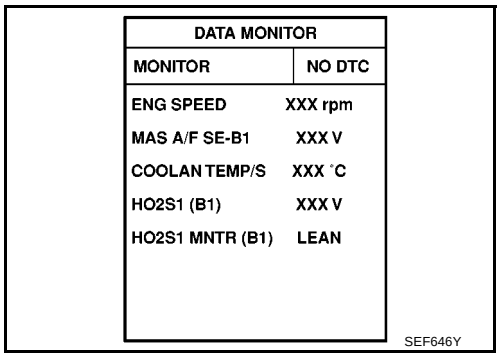

WITHOUT CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.

- The voltage does not remain in the range of 0.2 - 0.4V.

4. If NG, go to EC-600, "Diagnostic Procedure" .

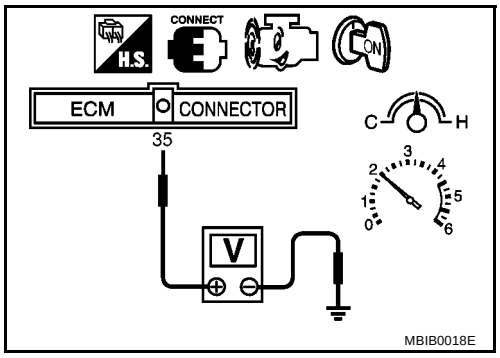

Wiring Diagram

EBS00OLZ

EC-HO2S1-01

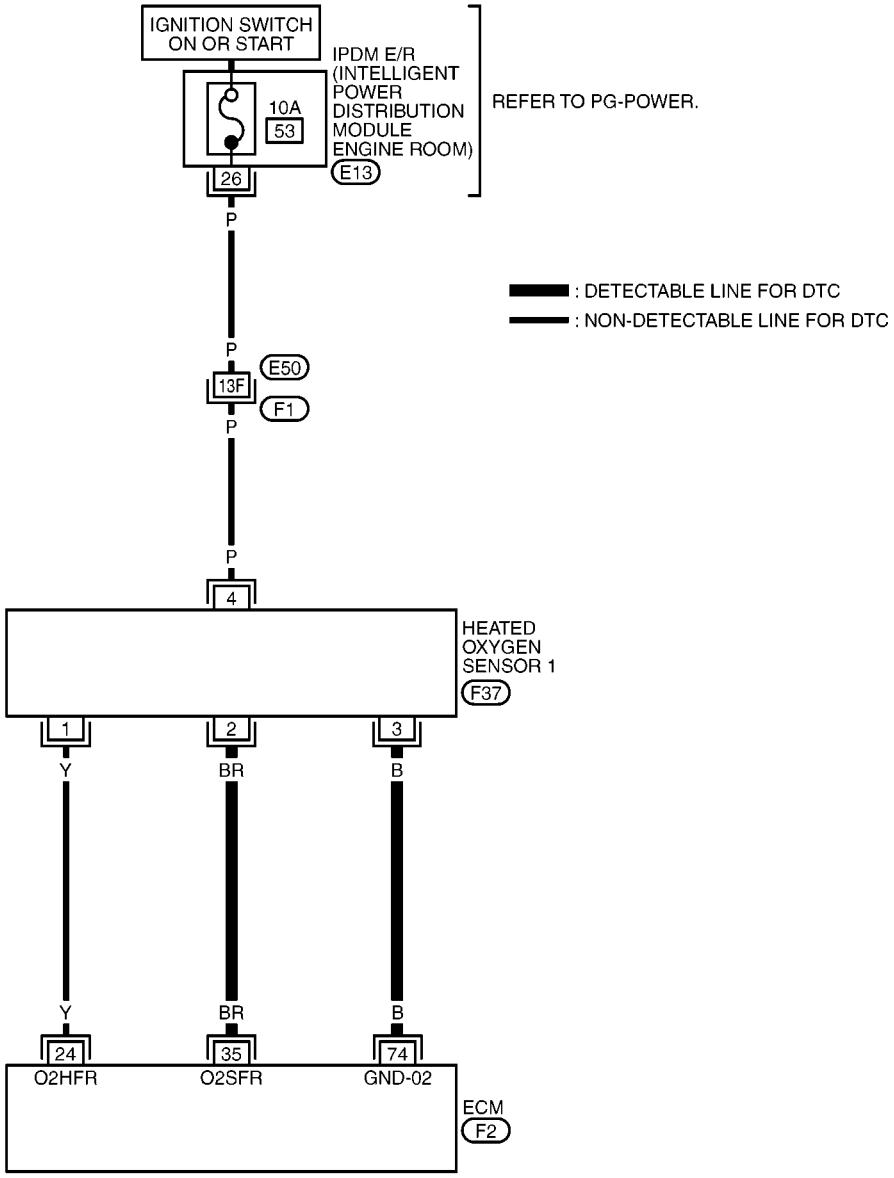

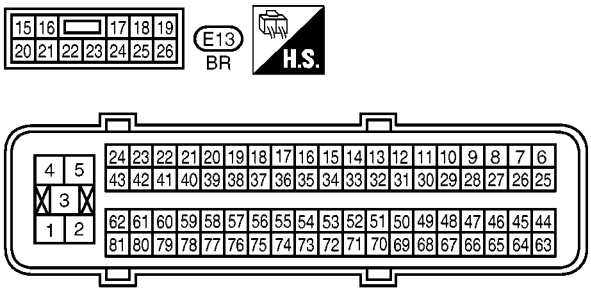

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0272E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OM0

1. INSPECTION START

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

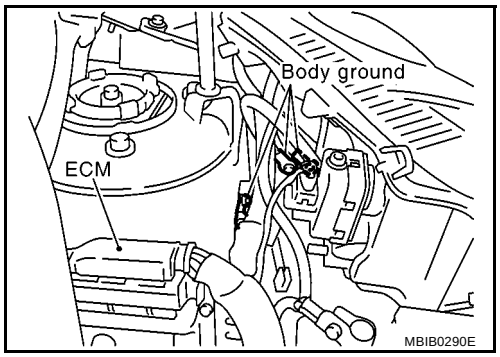

2. CHECK HO2S1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Disconnect heated oxygen sensor 1 harness connector.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 74 and HO2S1 terminal 3. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

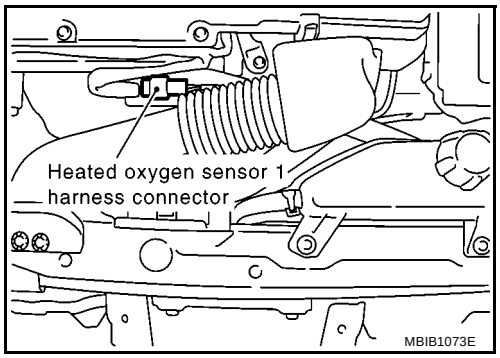

3. CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-601, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace heated oxygen sensor 1.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OM1

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.
3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

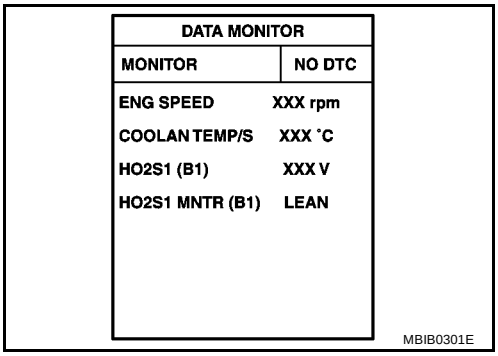

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown in the figure.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

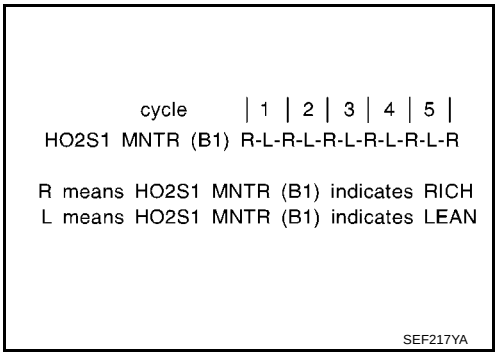

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

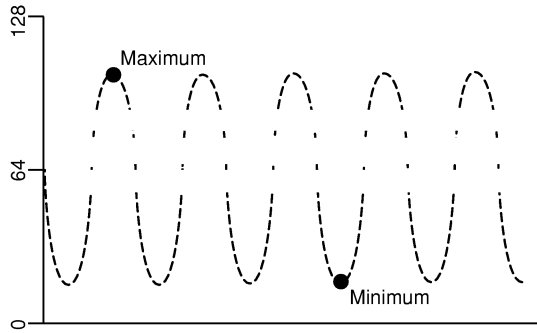

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 (HO2S1 signal) and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

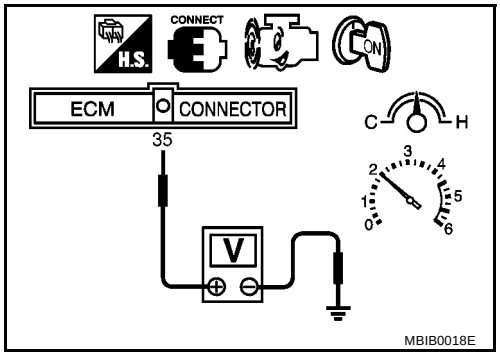

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OM2

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

DTC P0138 HO2S2

PFP:226A0

Component Description

EBS00OM3

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas.
Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.
This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.
Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

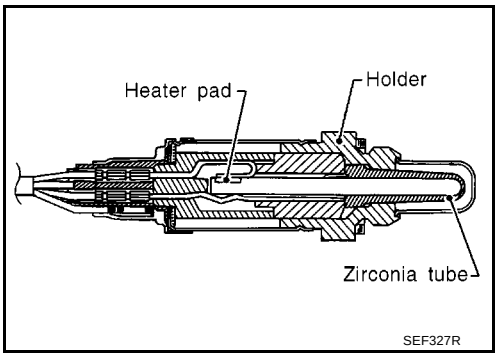

CONSULT-II Reference Value in Data Monitor Mode

EBS00OM4

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ←→ RICH

On Board Diagnosis Logic

EBS00OM5

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

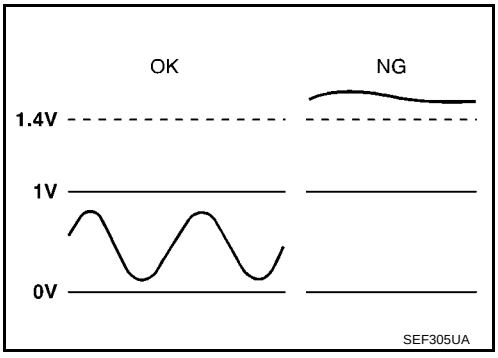

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0138 0138	Heated oxygen sensor 2 circuit high voltage	An excessively high voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 2

DTC Confirmation Procedure

EBS00OM6

CAUTION:
Always drive vehicle at a safe speed.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 2 minutes.
6. If 1st trip DTC is detected, go to EC-606, "Diagnostic Procedure" .

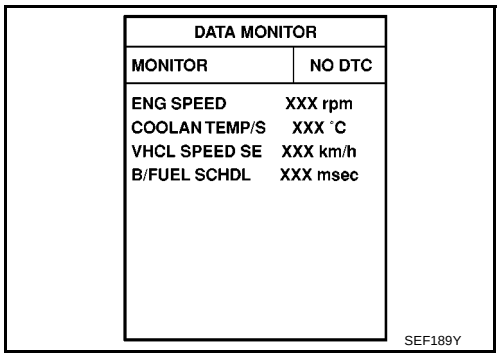

WITHOUT CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 2 minutes.
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
7. Let engine idle for 2 minutes.
8. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
9. If DTC is detected, go to EC-606, "Diagnostic Procedure" .

Wiring Diagram

EBS00OM7

EC-HO2S2-01

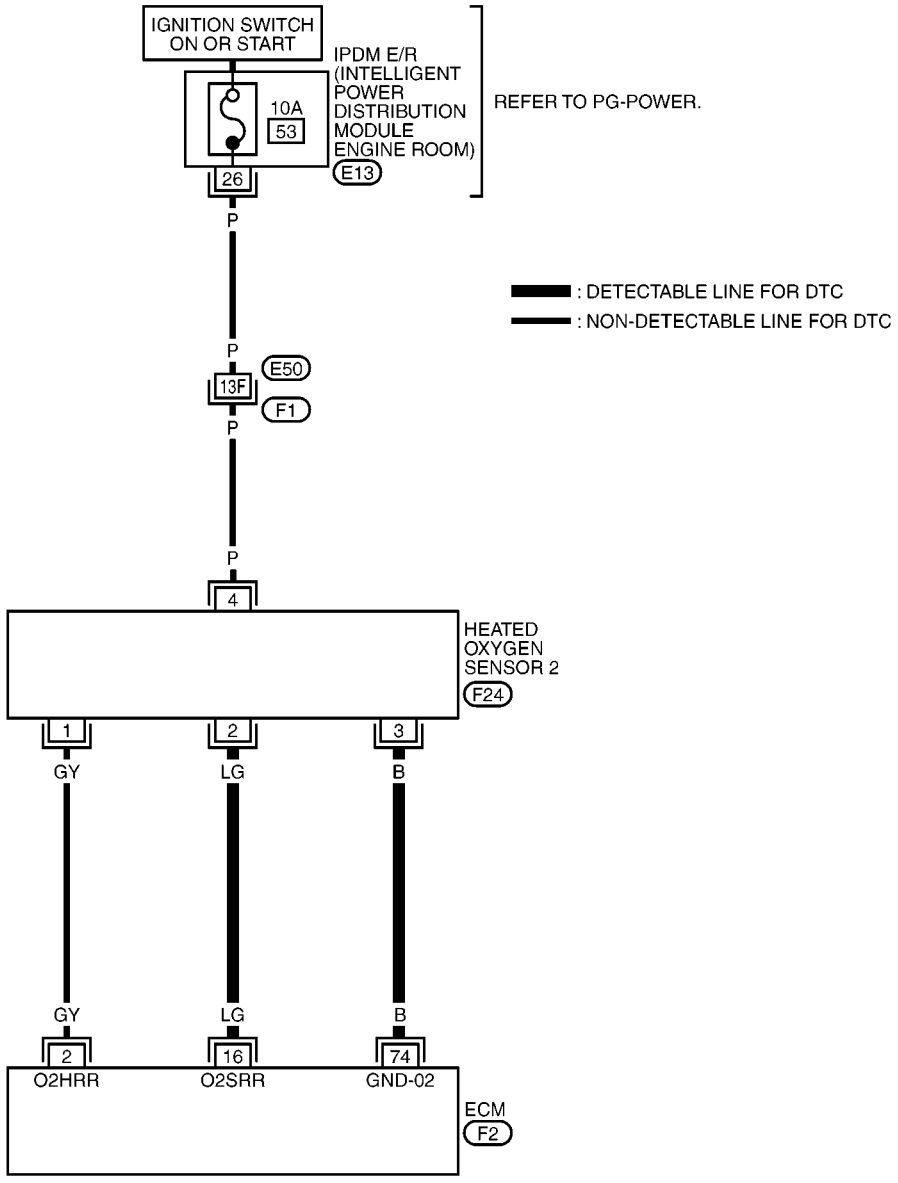

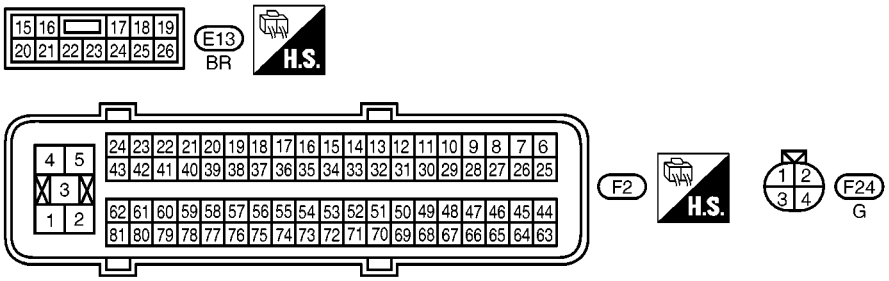

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0273E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● **Warm-up condition** ● Revving engine from idle to 3,000 rpm quickly after the following conditions are met. ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	0 - Approximately 1.0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OM8

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

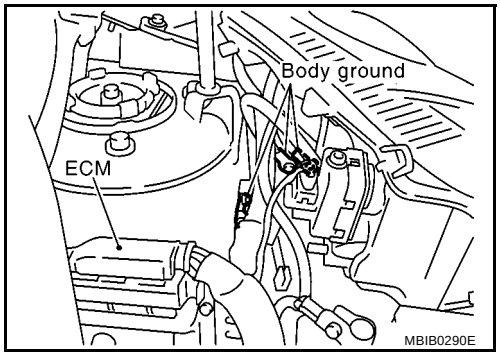

2. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S2 terminal 3.
   Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

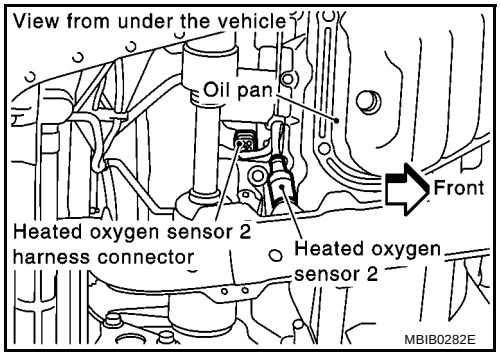

3. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 16 and HO2S2 terminal 2. Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 16 or HO2S2 terminal 2 and ground. Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-607, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace heated oxygen sensor 2.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OM9

HEATED OXYGEN SENSOR 2

With CONSULT-II

1. Turn ignition switch ON and select ″DATA MONITOR″ mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.

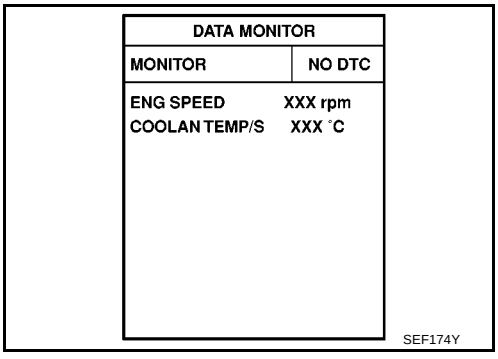

6. Select “FUEL INJECTION” in “ACTIVE TEST” mode, and select “HO2S2(B1)” as the monitor item with CONSULT-II.

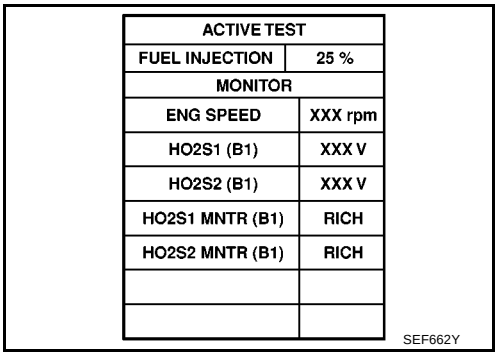

7. Check “HO2S2 (B1)” at idle speed when adjusting “FUEL INJECTION” to ±25%.

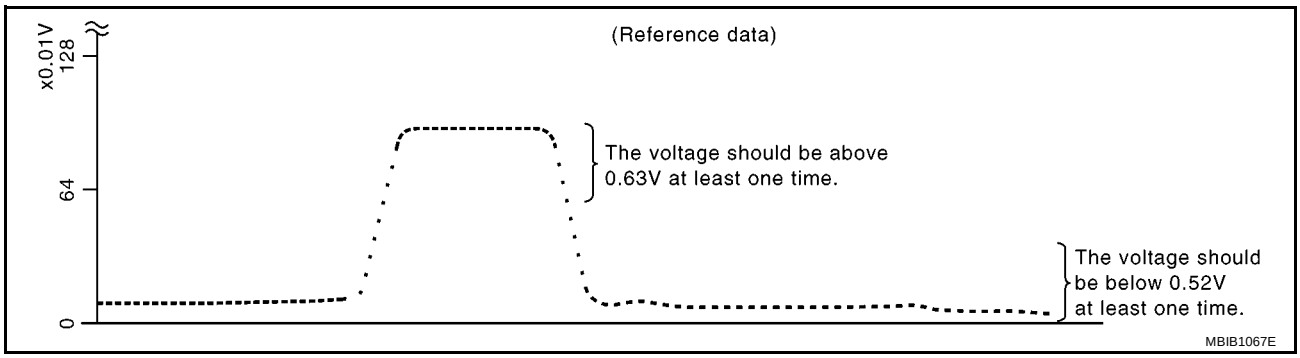

“HO2S2 (B1)” should be above 0.63V at least once when the “FUEL INJECTION” is +25%.
“HO2S2 (B1)” should be below 0.52V at least once when the “FUEL INJECTION” is −25%.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and engine ground.
6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
   (Depress and release accelerator pedal as soon as possible.)
   The voltage should be above 0.63V at least once during this procedure.
   If the voltage is above 0.63V at step 6, step 7 is not necessary.

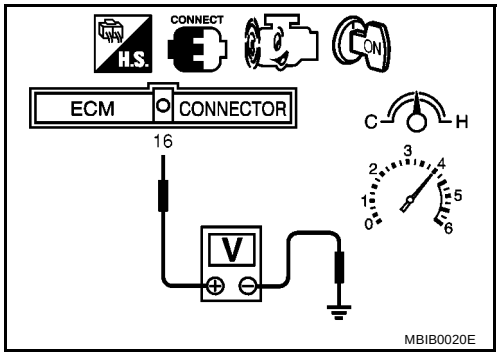

7. Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
   The voltage should be below 0.52V at least once during this procedure.
8. If NG, replace heated oxygen sensor 2.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OMA

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

DTC P0221 TP SENSOR

PFP:16119

Component Description

EBS00OMB

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

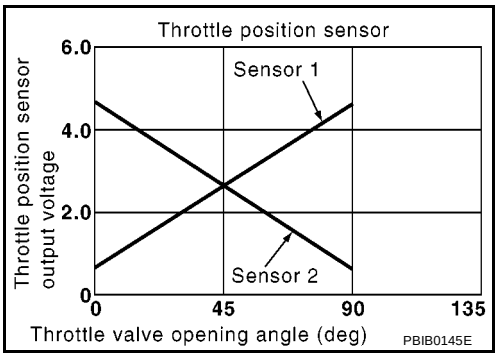

CONSULT-II Reference Value in Data Monitor Mode

EBS00OMC

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T model) 1st (M/T model)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00OMD

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0221 0221	Throttle position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	● Harness or connector (The TP sensor 1 and 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 1 and 2)

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00OME

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-612, "Diagnostic Procedure" .

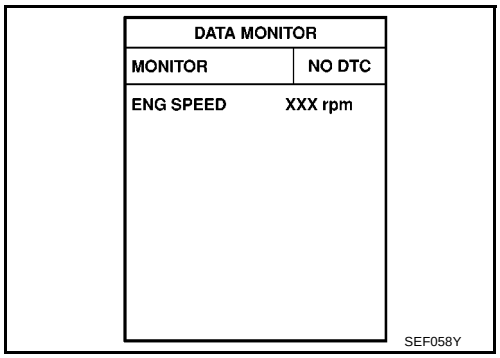

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-612, "Diagnostic Procedure" .

Wiring Diagram

EBS00OMF

EC-TPS3-01

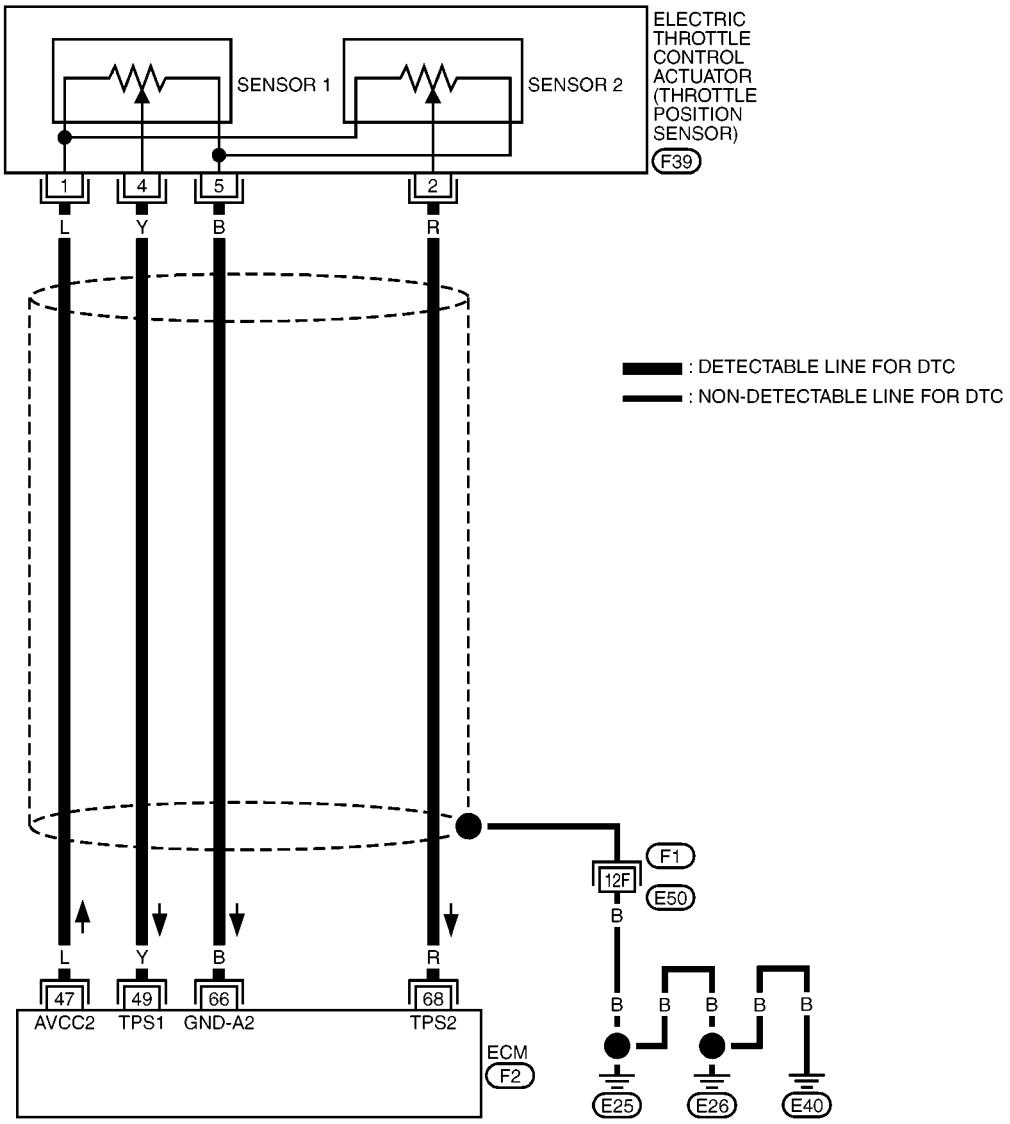

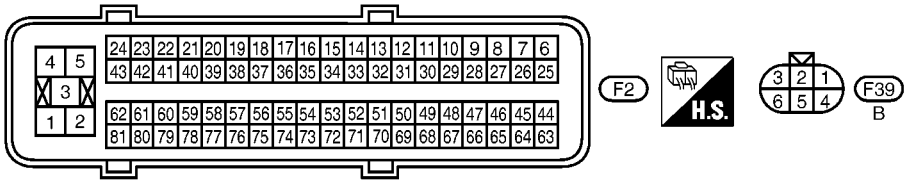

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0275E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS00OMG

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

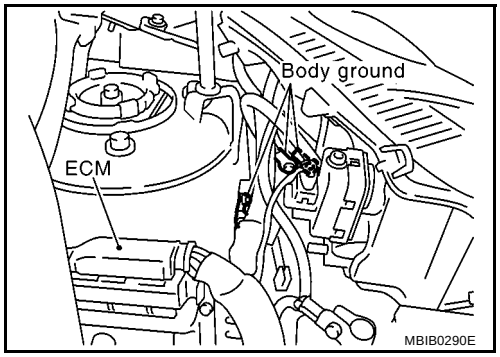

2. CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

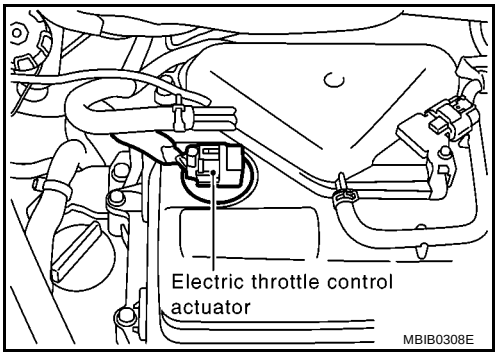

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

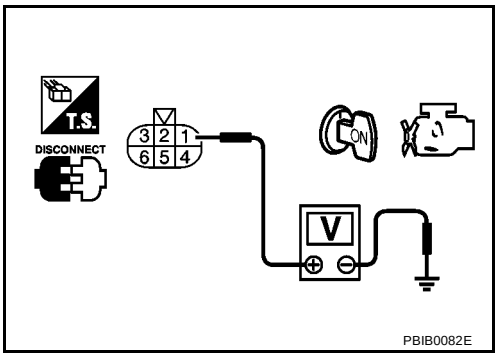

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 49 and electric throttle control actuator terminal 4, ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-614, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OMH

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

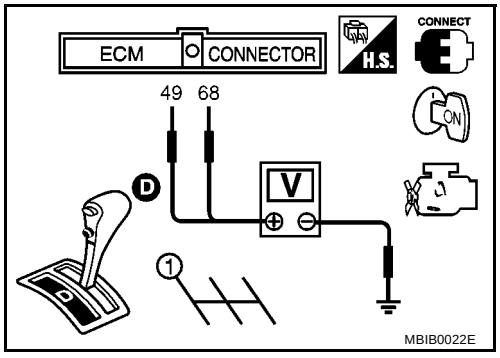

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-503, "Throttle Valve Closed Position Learning" .
8. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00OMI

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0222, P0223 TP SENSOR

PFP:16119

Component Description

EBS00OMJ

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. the throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

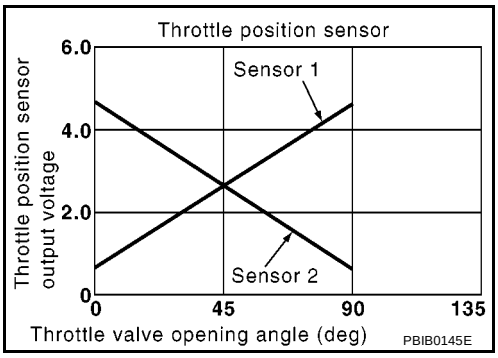

CONSULT-II Reference Value in Data Monitor Mode

EBS00OMK

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00OML

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0222 0222	Throttle position sensor 1 circuit low input	An excessively low voltage from the TP sensor 1 is sent to ECM.	● Harness or connectors (The TP sensor 1 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 1)
P0223 0223	Throttle position sensor 1 circuit high input	An excessively high voltage from the TP sensor 1 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00OMM

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-618, "Diagnostic Procedure" .

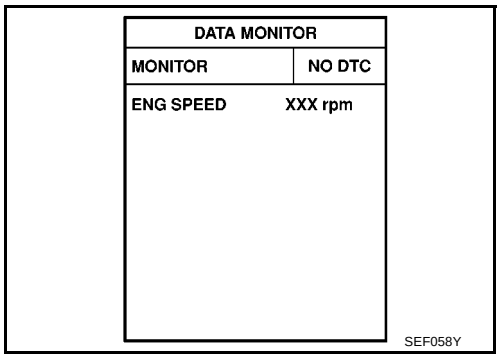

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-618, "Diagnostic Procedure" .

Wiring Diagram

EBS00OMN

EC-TPS1-01

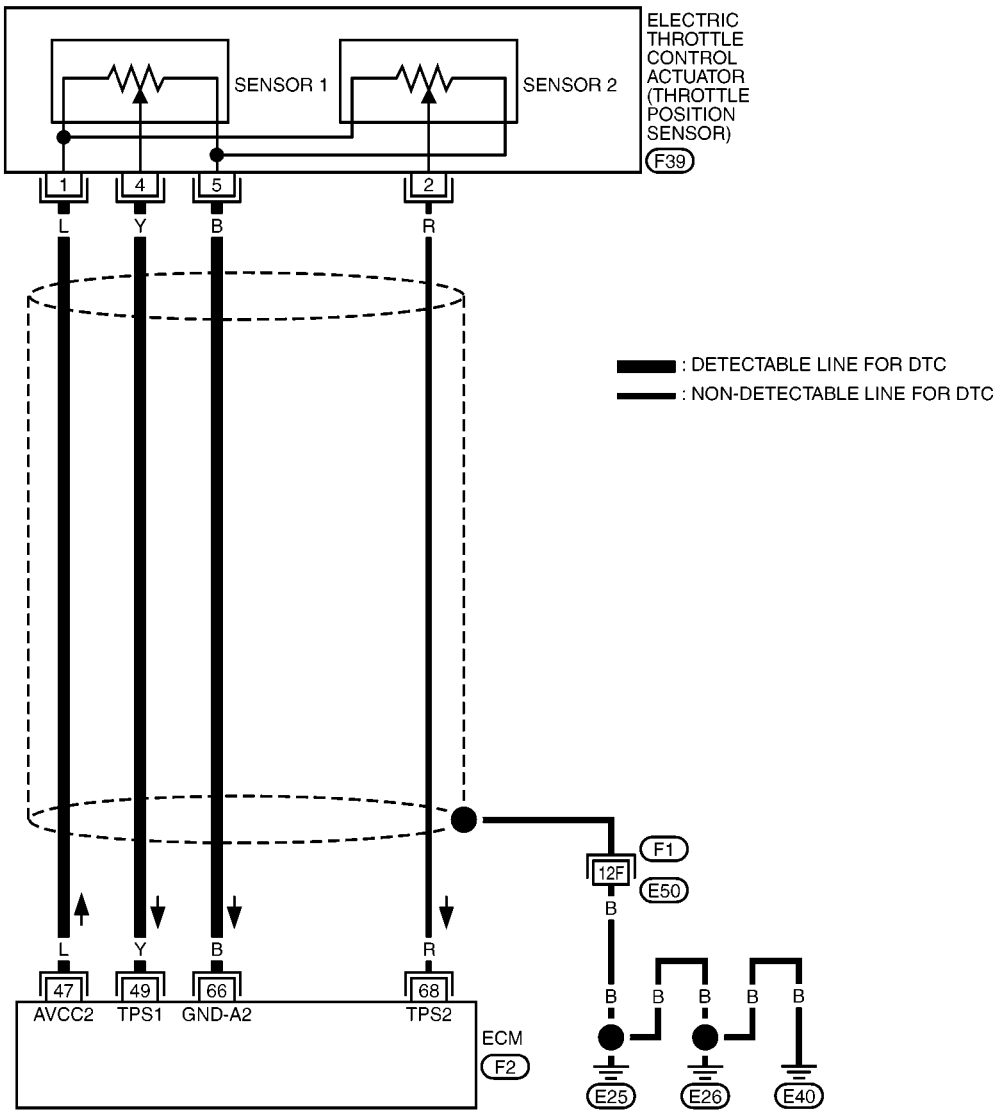

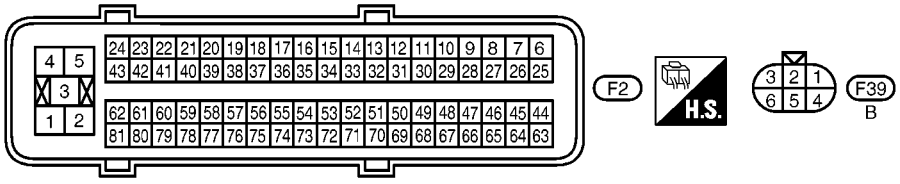

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0276E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS00OMO

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

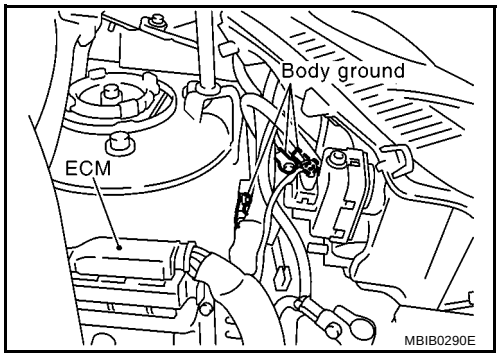

2. CHECK THROTTLE POSITION SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

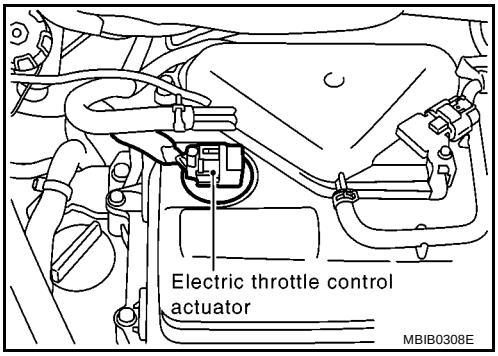

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

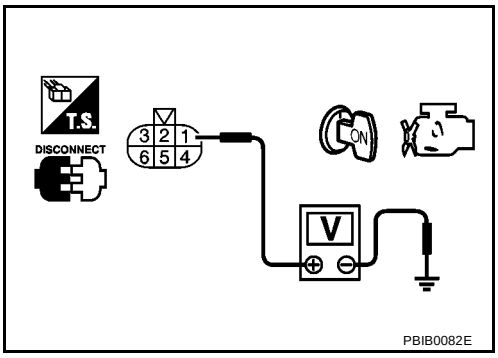

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 49 and electric throttle control actuator terminal 4. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-620, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OMP

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

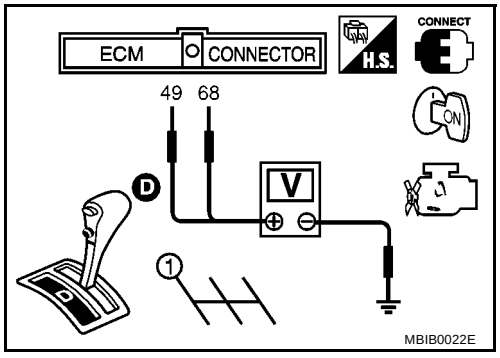

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-503, "Throttle Valve Closed Position Learning" .
8. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00OMQ

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P0226 APP SENSOR

PFP:18002

Component Description

EBS00OMR

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

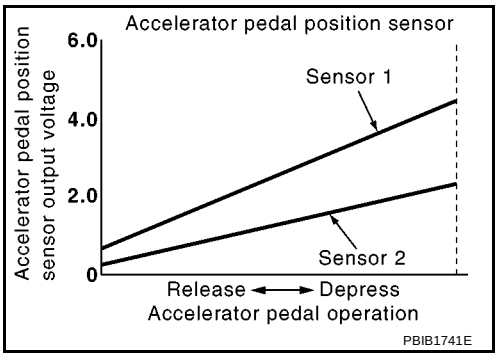

CONSULT-II Reference Value in Data Monitor Mode

EBS00OMS

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS00OMT

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0226 0226	Accelerator pedal position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	● Harness or connector (The APP sensor 1 and 2 circuit is open or shorted.) ● Accelerator pedal position sensor 1 and 2

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00OMU

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-626, "Diagnostic Procedure" .

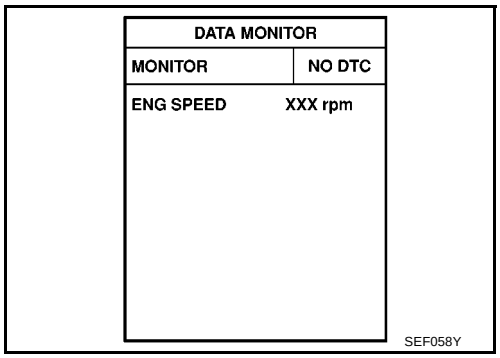

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-626, "Diagnostic Procedure" .

Wiring Diagram
LHD MODELS

EBS00OMV

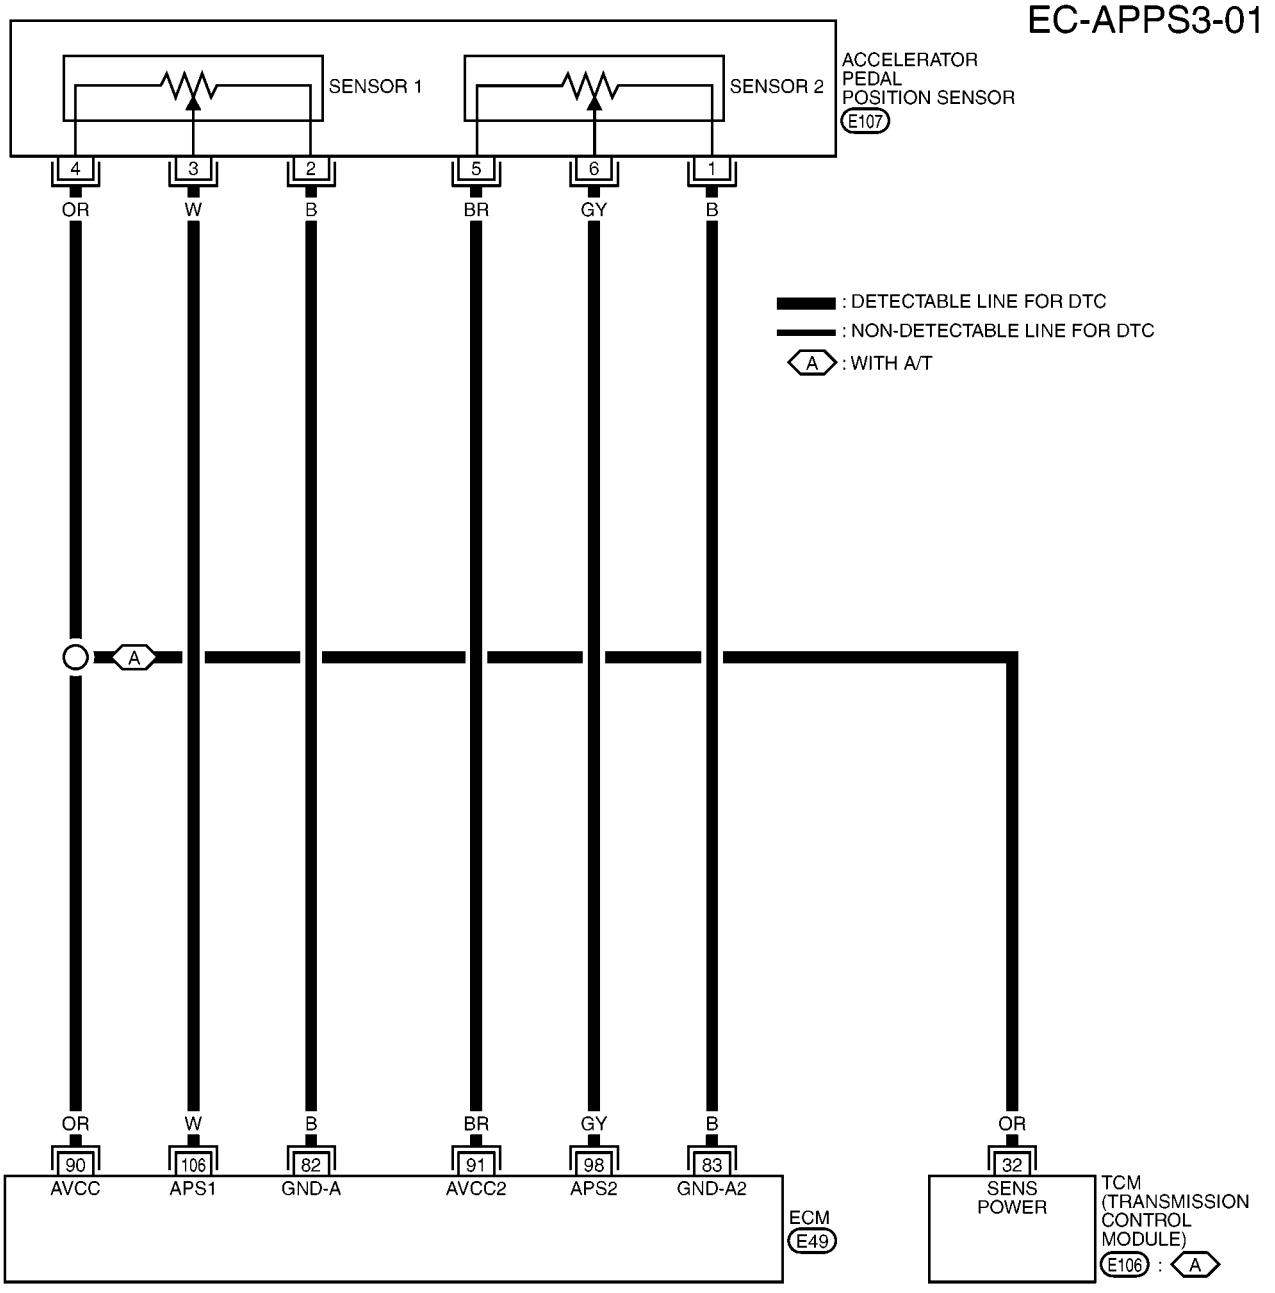

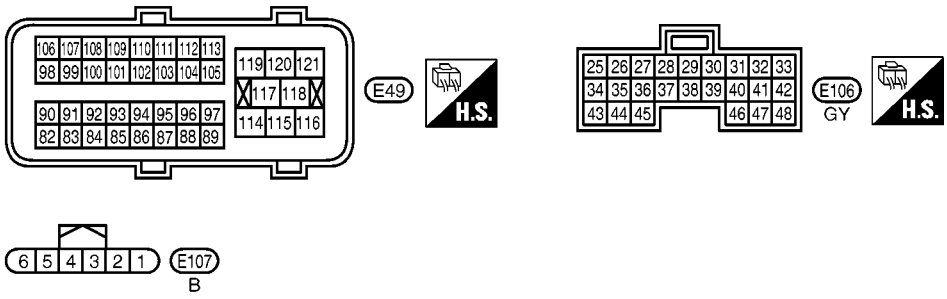

MBWA0277E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS3-02

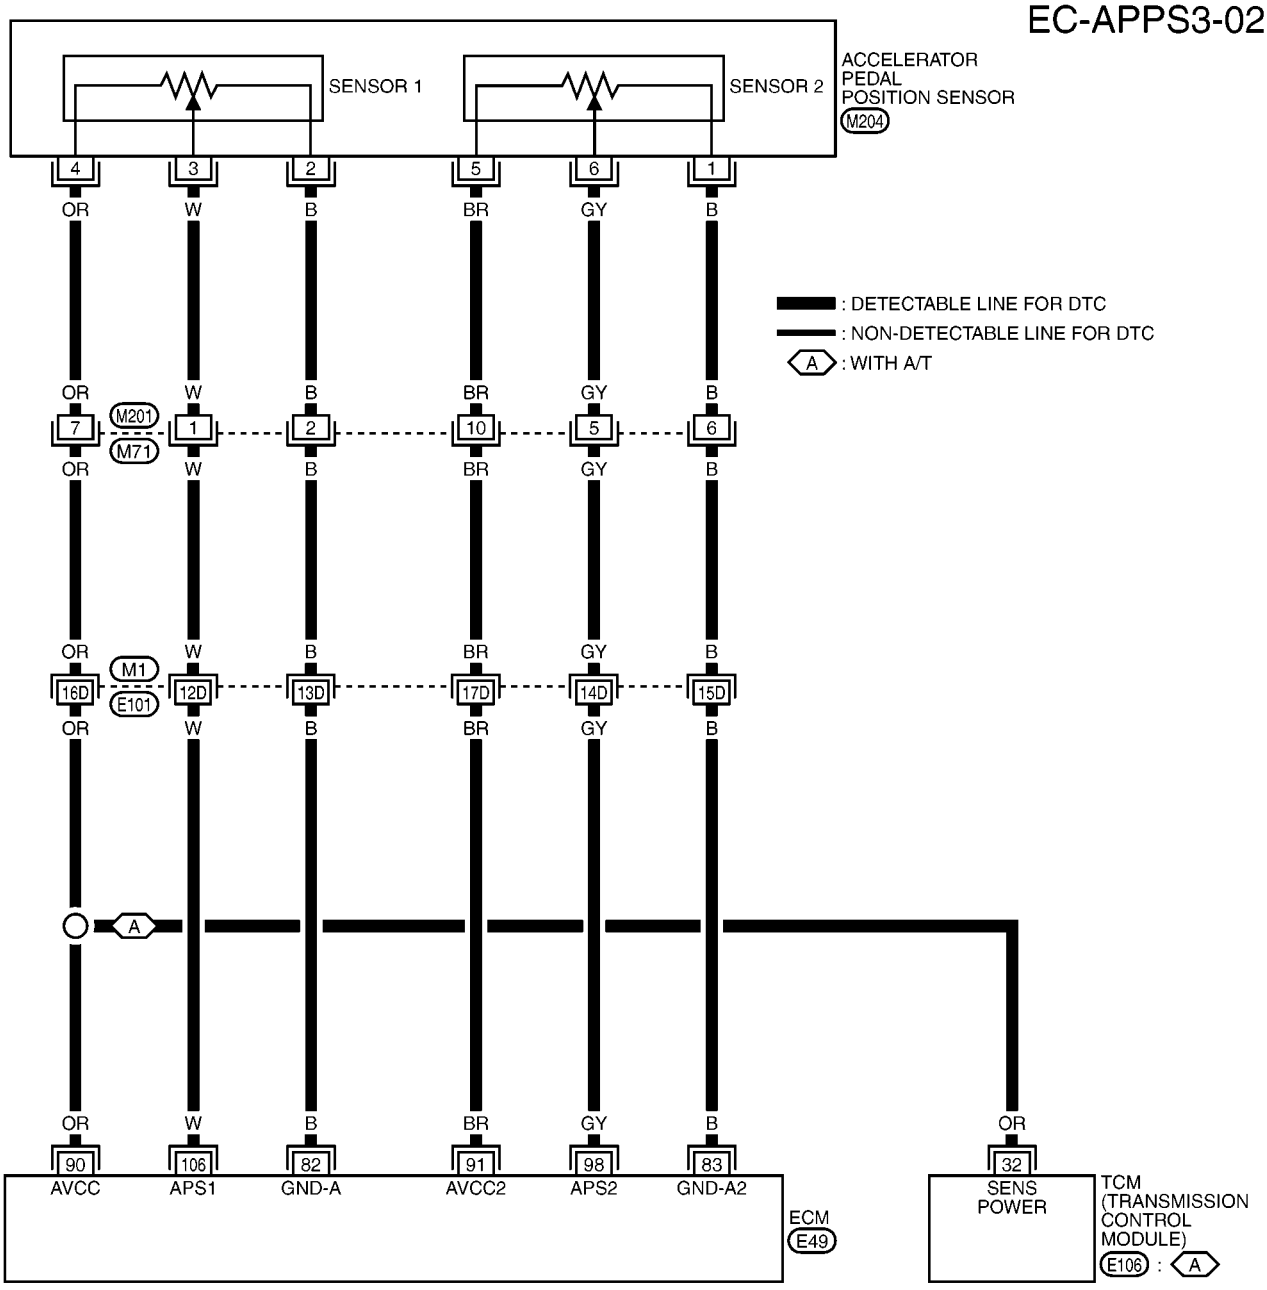

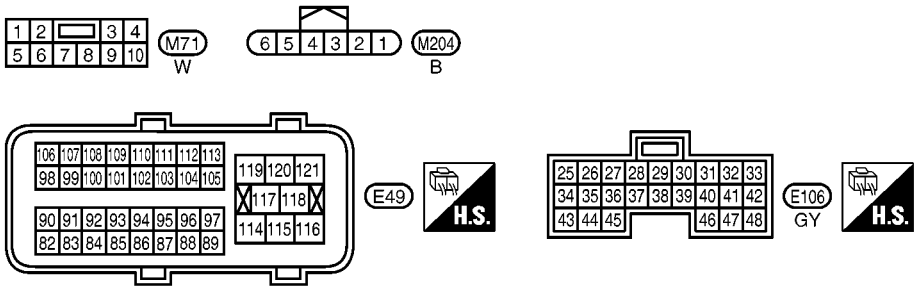

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0278E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS00OMW

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

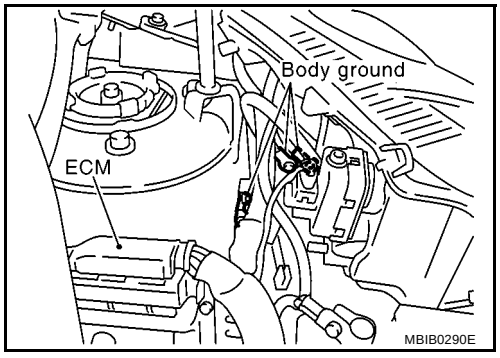

2. CHECK APP SENSOR POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

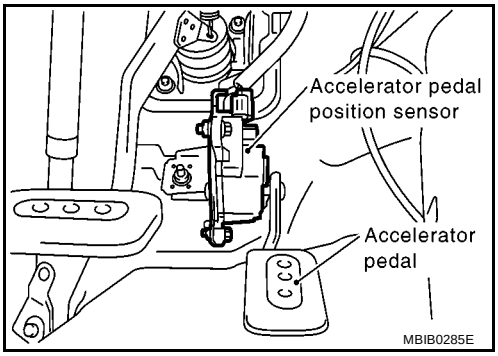

3. Check voltage between APP sensor terminals 4, 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

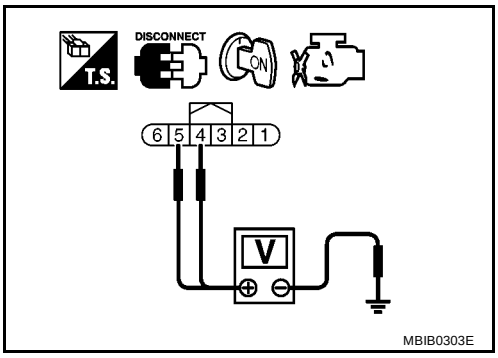

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2, ECM terminal 83 and APP sensor terminal 1.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3, ECM terminal 98 and APP sensor terminal 6.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-629, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .
3. Perform EC-503, "Throttle Valve Closed Position Learning" .
4. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OMX

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.
3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

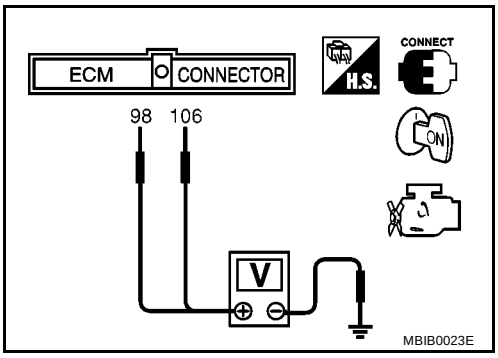

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-503, "Accelerator Pedal Released Position Learning" .
6. Perform EC-503, "Throttle Valve Closed Position Learning" .
7. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00OMY

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P0227, P0228 APP SENSOR

PFP:18002

Component Description

EBS00OMZ

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

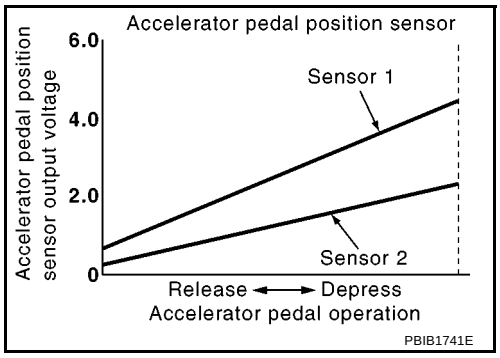

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

CONSULT-II Reference Value in Data Monitor Mode

EBS00ON0

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS00ON1

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0227 0227	Accelerator pedal position sensor 1 circuit low input	An excessively low voltage from the APP sensor 1 is sent to ECM.	● Harness or connectors (The APP sensor 1 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 1)
P0228 0228	Accelerator pedal position sensor 1 circuit high input	An excessively high voltage from the APP sensor 1 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00ON2

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-635, "Diagnostic Procedure" .

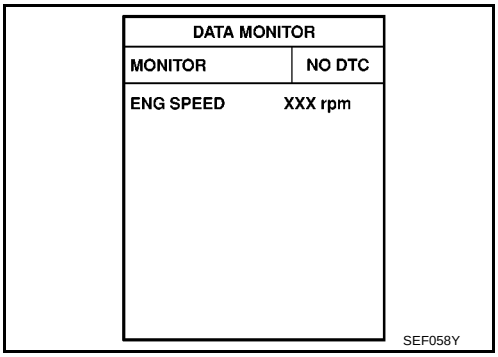

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-635, "Diagnostic Procedure" .

Wiring Diagram
LHD MODELS

EBS00ON3

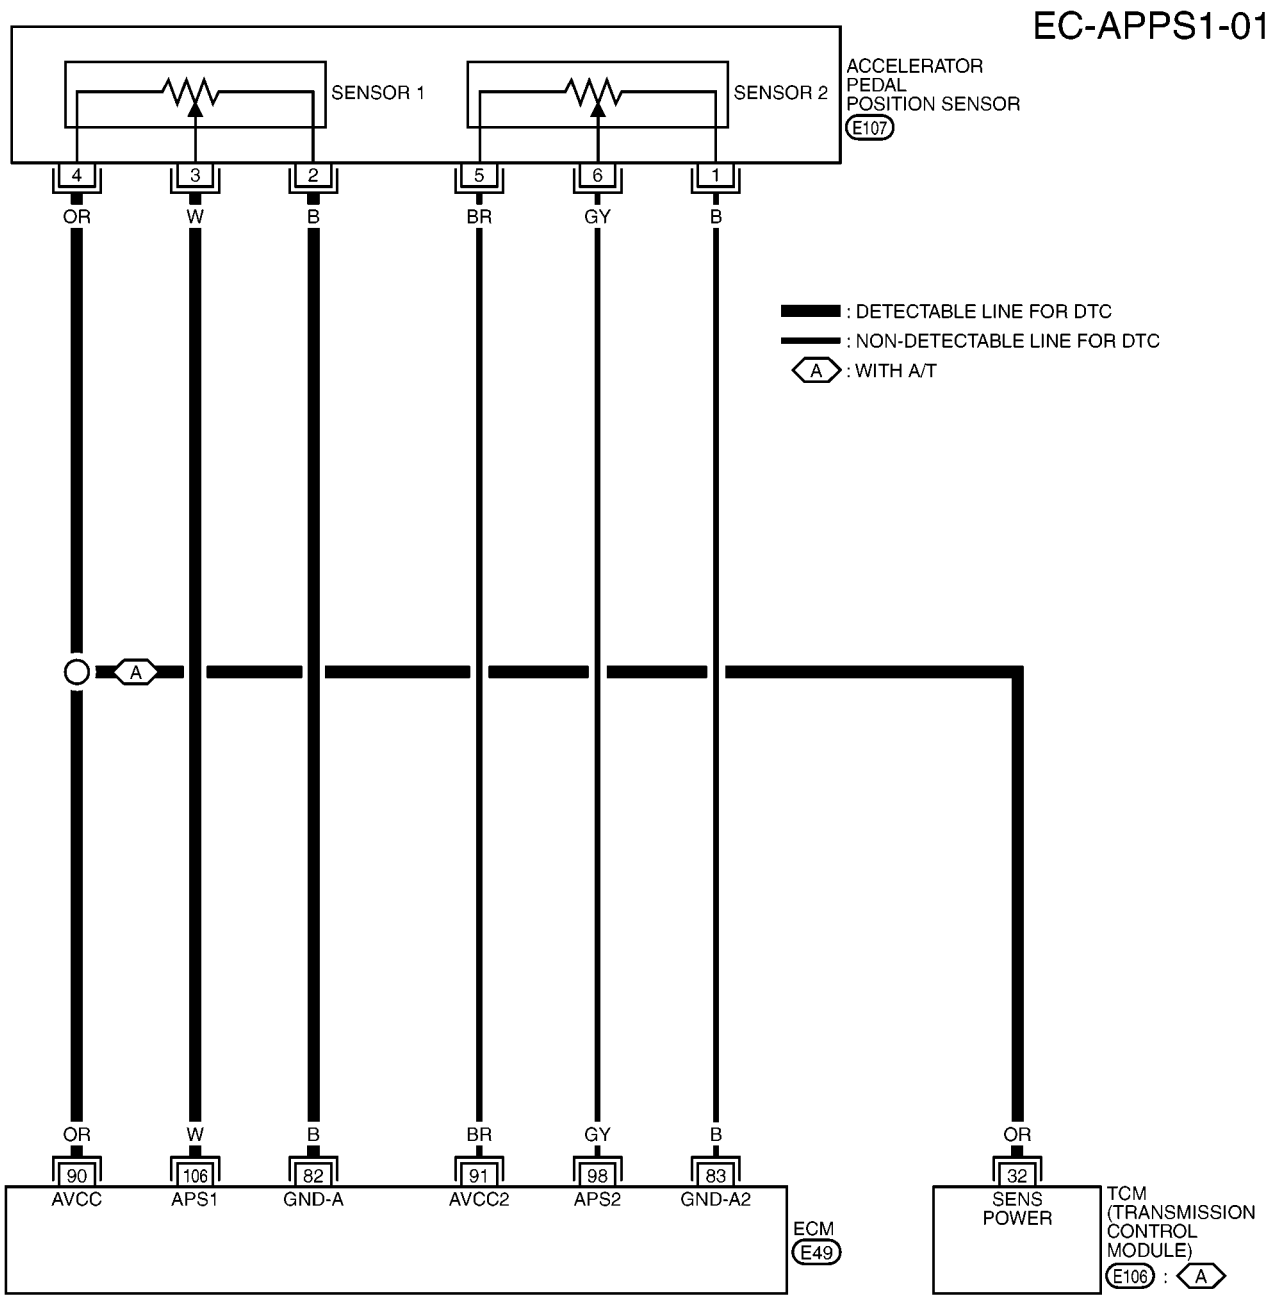

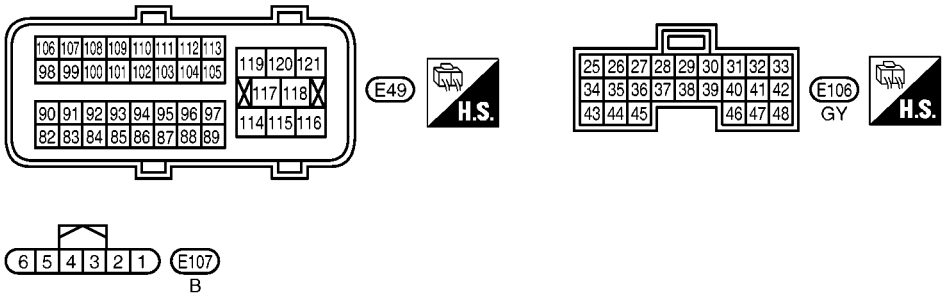

MBWA0279E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS1-02

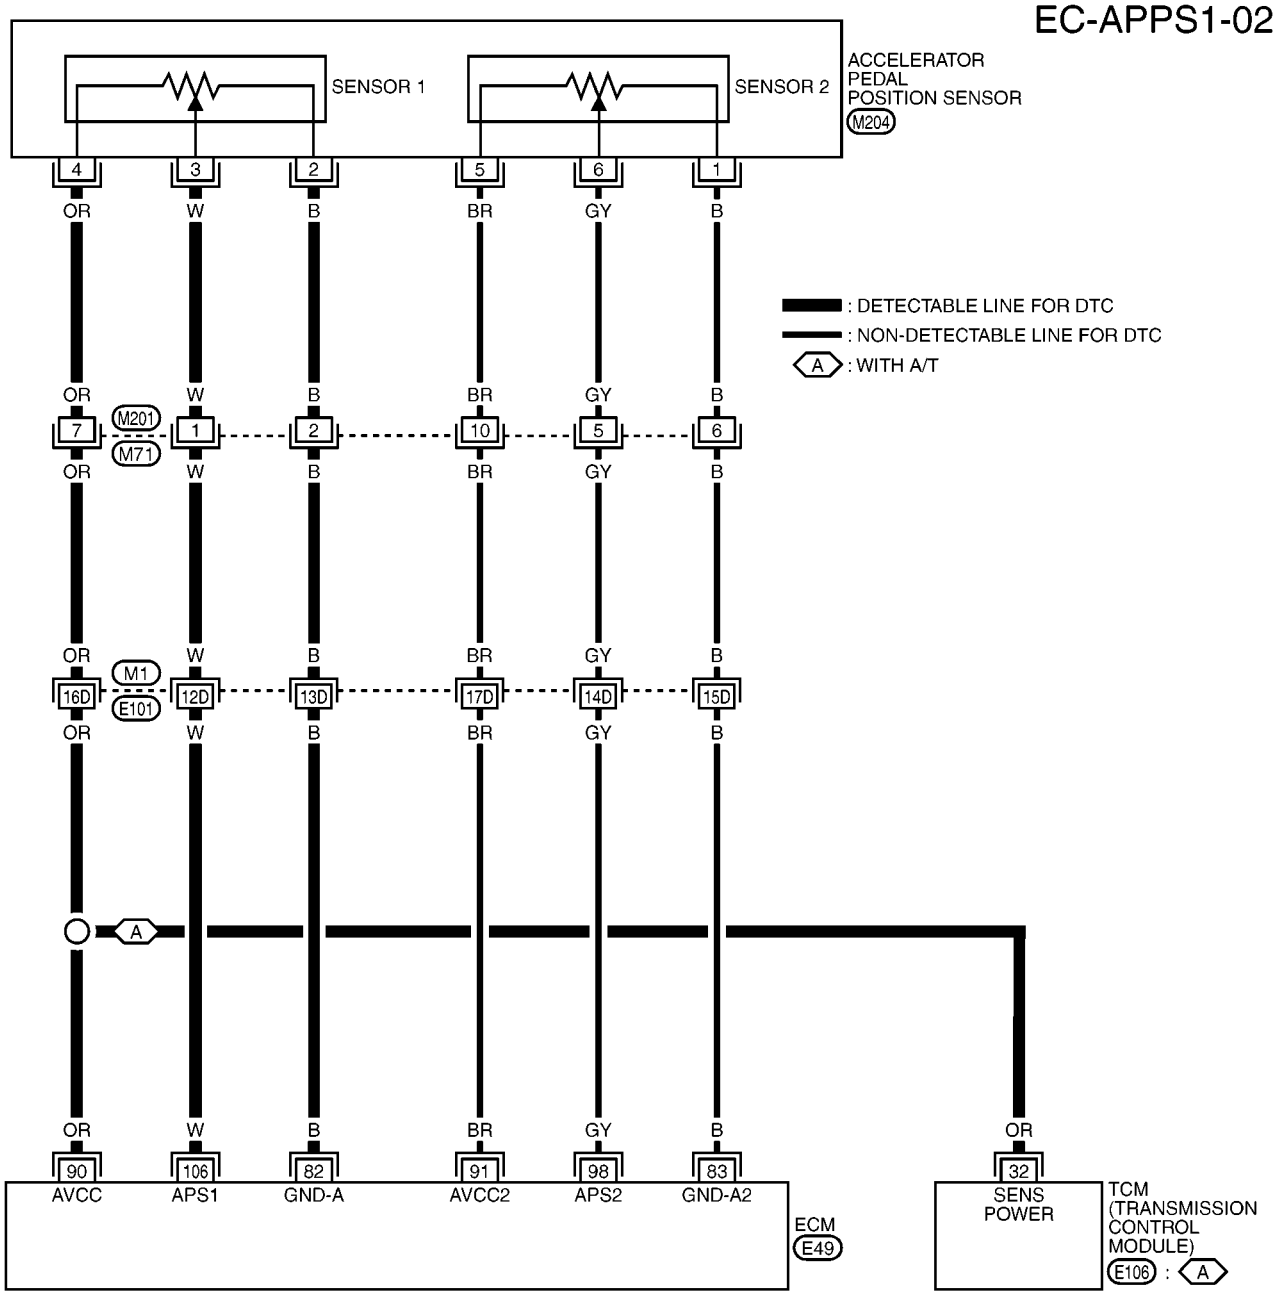

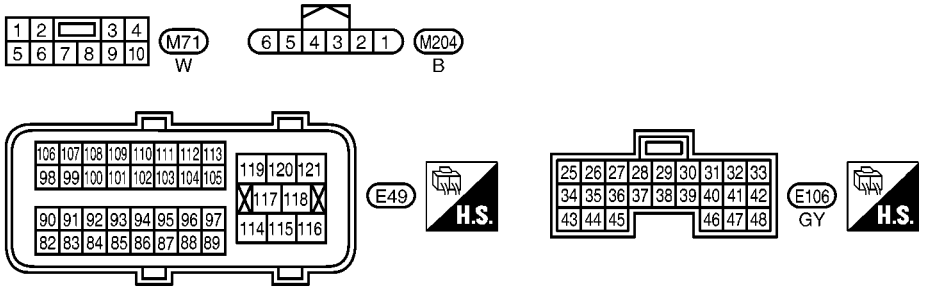

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0280E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS00ON4

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

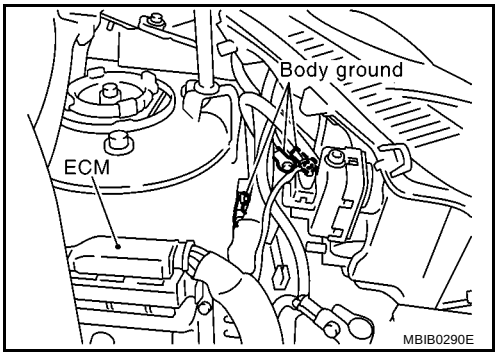

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

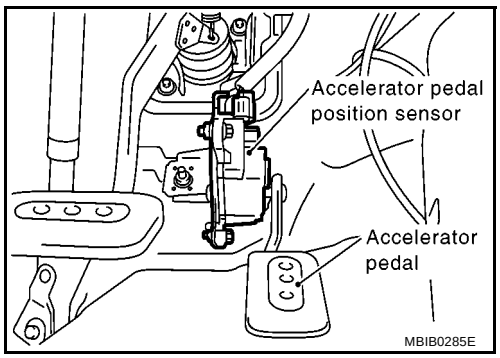

3. Check voltage between APP sensor terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

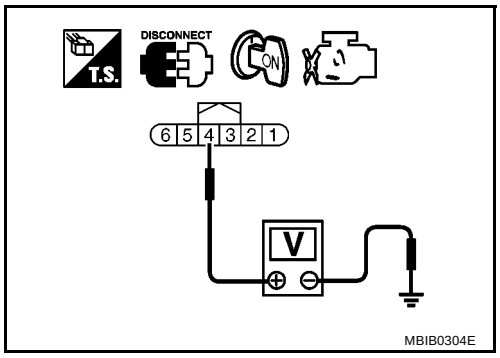

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-637, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .
3. Perform EC-503, "Throttle Valve Closed Position Learning" .
4. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00ON5

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

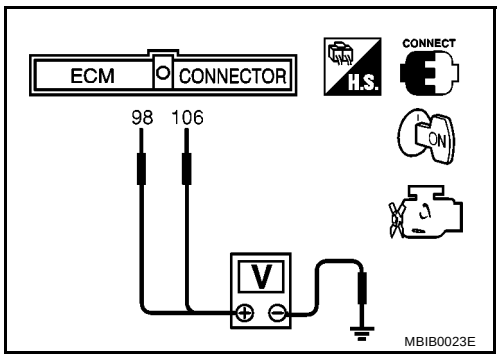

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-503, "Accelerator Pedal Released Position Learning" .
6. Perform EC-503, "Throttle Valve Closed Position Learning" .
7. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00ON6

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P0327, P0328 KS

PFP:22060

Component Description

EBS00OS6

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

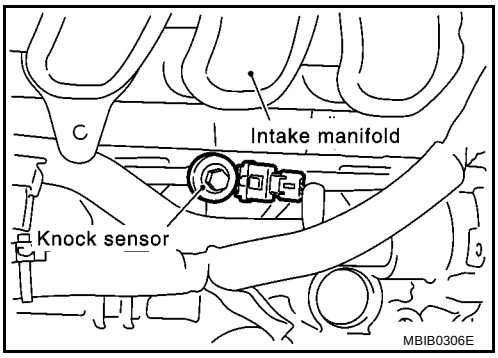

On Board Diagnosis Logic

EBS00OS7

The MI will not light up for these self-diagnoses.

DTC No.	Trouble Diagnosis Name	DTC Detected Condition	Possible Cause
P0327 0327	Knock sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	● Harness or connectors (The sensor circuit is open or shorted.) ● Knock sensor
P0328 0328	Knock sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

DTC Confirmation Procedure

EBS00OS8

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and run it for at least 5 seconds at idle speed.
3. If 1st trip DTC is detected, go to EC-641, "Diagnostic Procedure" .

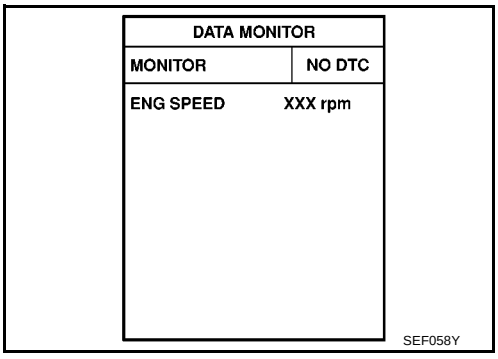

WITHOUT CONSULT-II

1. Start engine and run it for at least 5 seconds at idle speed.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If 1st trip DTC is detected, go to EC-641, "Diagnostic Procedure" .

Wiring Diagram

EBS00OS9

EC-KS-01

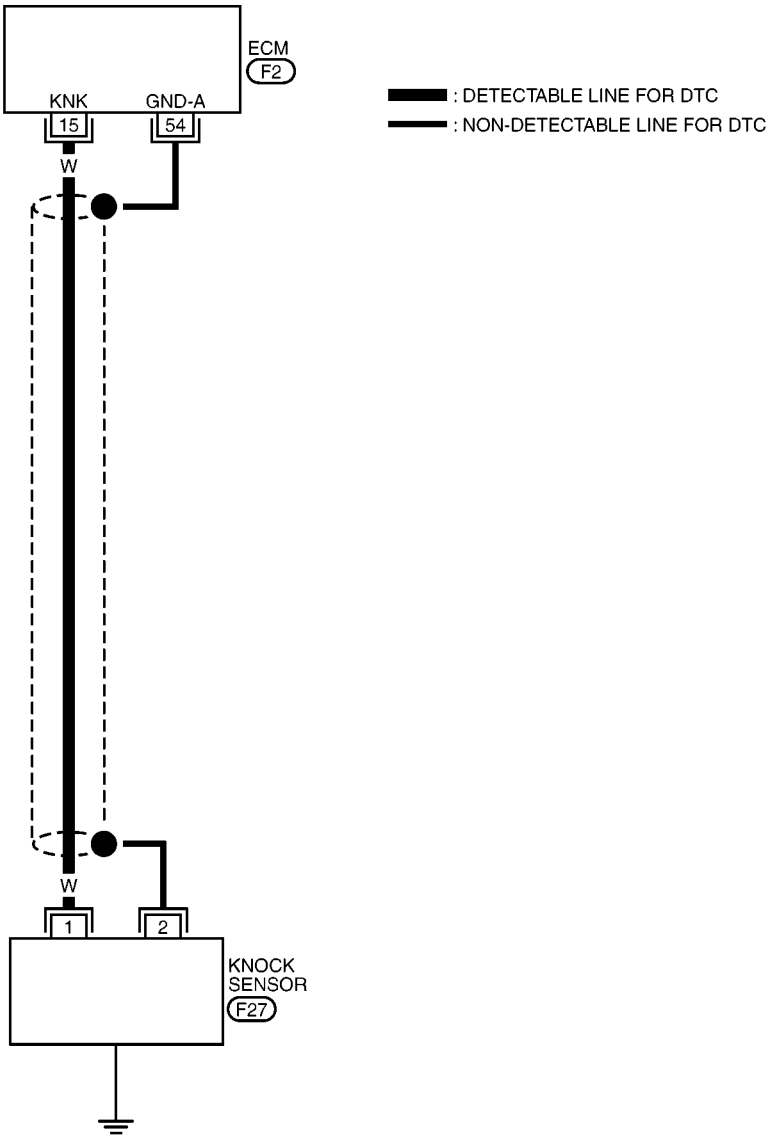

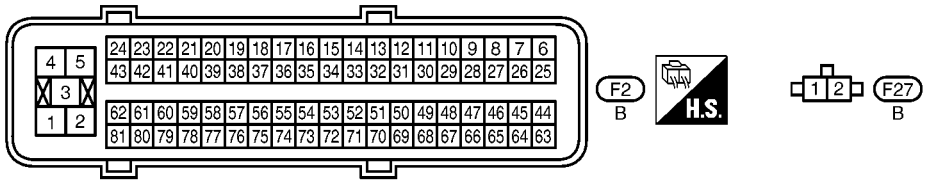

MBWA1173E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
15	W	Knock sensor	**[Engine is running]** ● Idle speed	Approximately 2.5V
54	—	Sensor ground (Knock sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OSA

1. CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT-I

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check resistance between ECM terminal 15 and engine ground. Refer to Wiring Diagram.

   NOTE:
   It is necessary to use an ohmmeter which can measure more than 10 MΩ.

   Resistance: Approximately 530 - 590kΩ [at 20°C (68°F)]

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT-II

1. Disconnect knock sensor harness connector.
2. Check harness continuity between ECM terminal 15 and knock sensor terminal 1.
   Refer to Wiring Diagram.

   Continuity should exist.

3. Also check harness for short to ground and short to power.

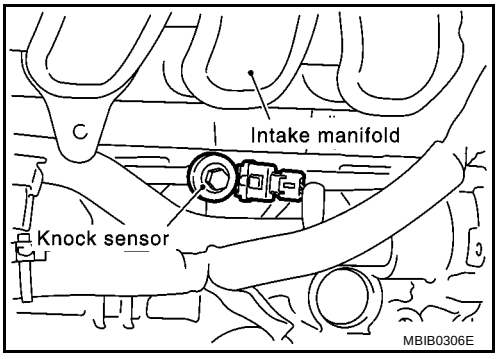

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK KNOCK SENSOR

Refer to EC-642, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace knock sensor.

4. CHECK KNOCK SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 54 and engine ground.

Continuity should exist

2. Also check harness for short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OSB

KNOCK SENSOR

Check resistance between knock sensor terminal 1 and ground.

NOTE:
It is necessary to use an ohmmeter which can measure more than 10 MΩ.

Resistance: Approximately 530 - 590kΩ [at 20°C (68°F)]

CAUTION:
Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.

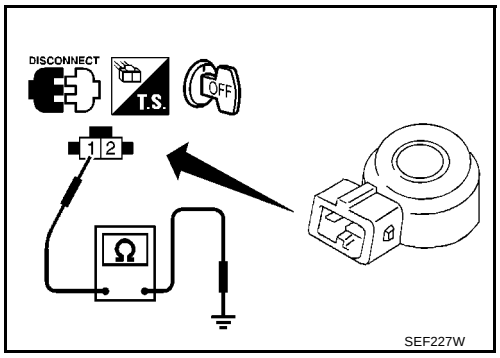

Removal and Installation

EBS00OSC

KNOCK SENSOR

Refer to EM-73, "CYLINDER BLOCK" .

DTC P0335 CKP SENSOR (POS)

PFP:23731

Component Description

EBS00ONA

The crankshaft position sensor (POS) is located on the cylinder block rear housing facing the gear teeth (cogs) of the signal plate at the end of the crankshaft. It detects the fluctuation of the engine revolution.
The sensor consists of a permanent magnet and Hall IC.
When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.
The changing gap causes the magnetic field near the sensor to change.
Due to the changing magnetic field, the voltage from the sensor changes.
The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

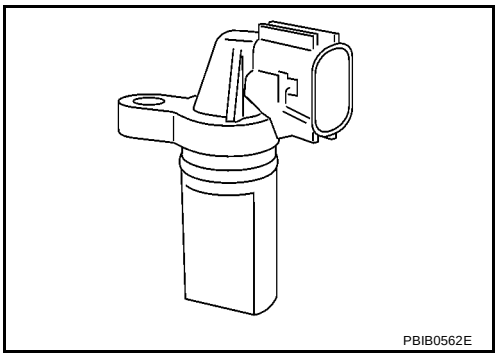
PBIB0562E

CONSULT-II Reference Value in Data Monitor Mode

EBS00ONB

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
ENG SPEED	● Tachometer: Connect ● Run engine and compare CONSULT-II value with the tachometer indication.	Almost the same speed as the tachometer indication.

On Board Diagnosis Logic

EBS00ONC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0335 0335	Crankshaft position sensor (POS) circuit	● The crankshaft position sensor (POS) signal is not detected by the ECM during the first few seconds of engine cranking. ● The proper pulse signal from the crankshaft position sensor (POS) is not sent to ECM while the engine is running. ● The crankshaft position sensor (POS) signal is not in the normal pattern during engine running.	● Harness or connectors (The sensor circuit is open or shorted.) ● Crankshaft position sensor (POS) ● Signal plate

DTC Confirmation Procedure

EBS00OND

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch ON.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
3. If 1st trip DTC is detected, go to EC-646, "Diagnostic Procedure" .

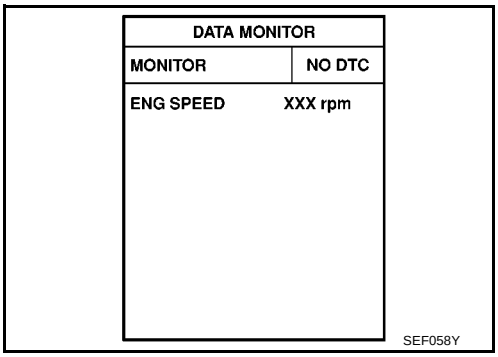

SEF058Y

WITHOUT CONSULT-II

1. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If 1st trip DTC is detected, go to EC-646, "Diagnostic Procedure" .

Wiring Diagram

EBS00ONE

EC-POS-01

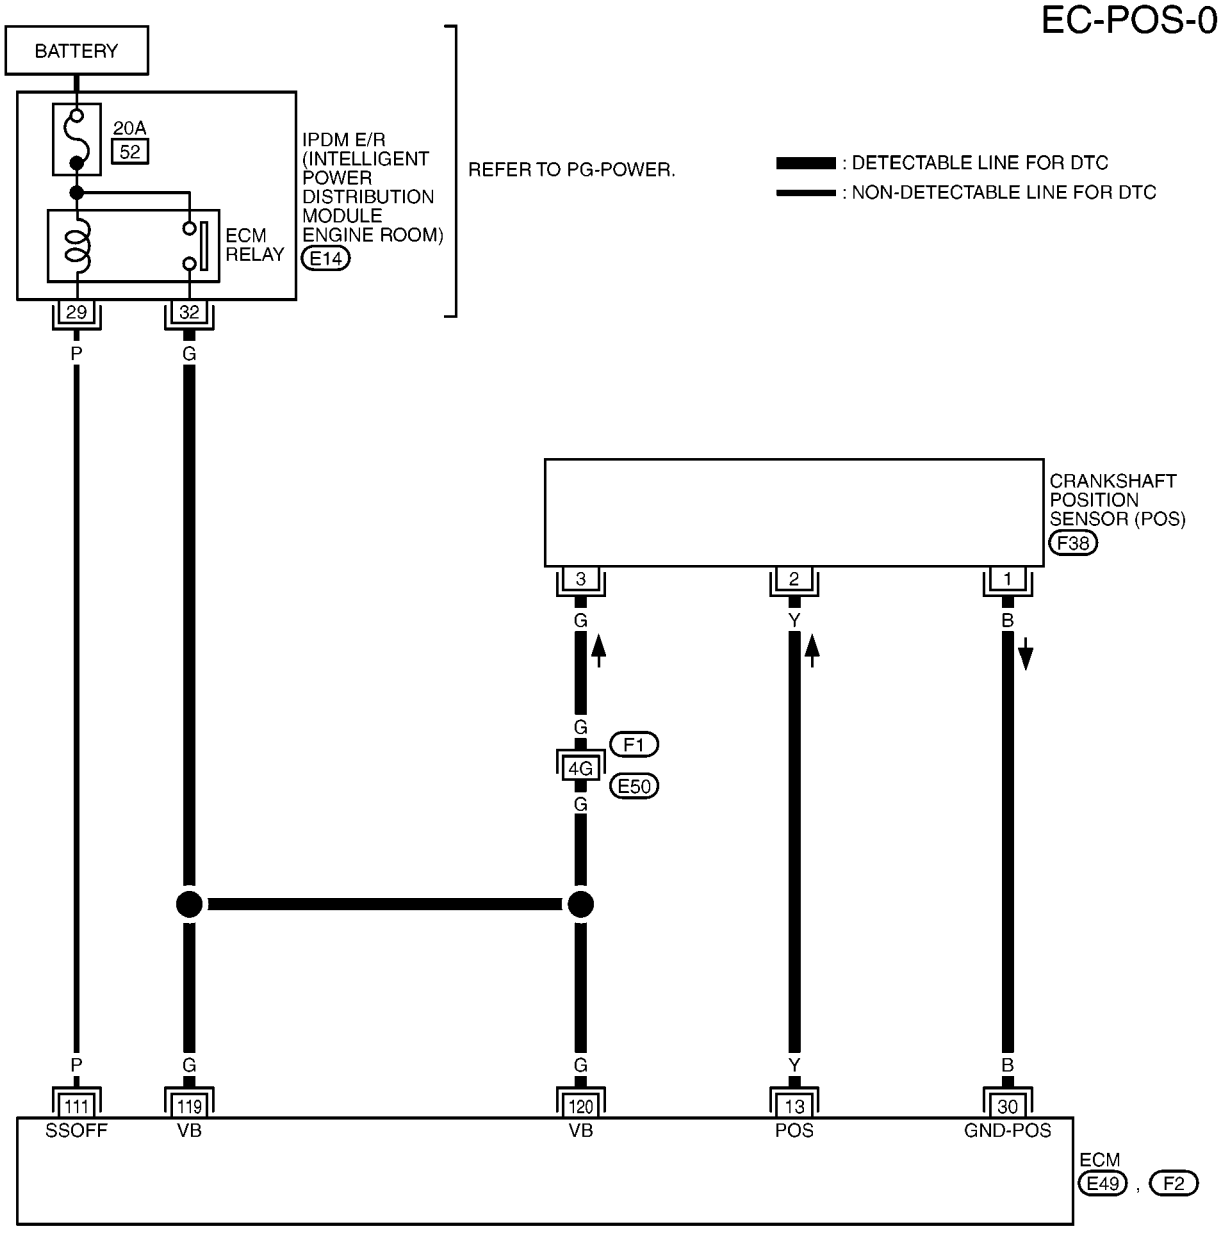



REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

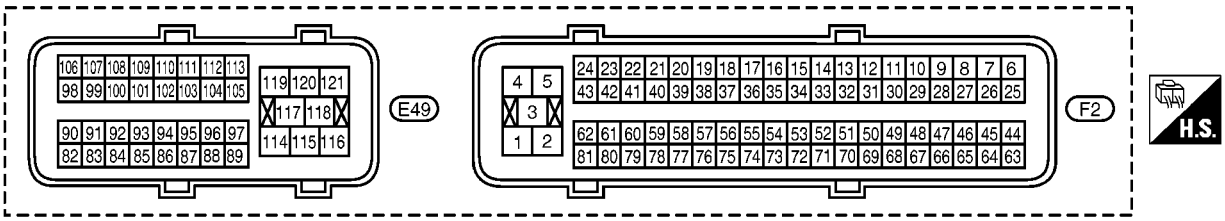

MBWA0282E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
13	Y	Crankshaft position sensor (POS)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	Approximately 3.0V★ 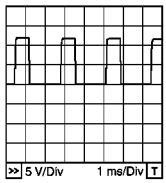 PBIB0527E
			[Engine is running] ● Engine speed is 2,000 rpm	Approximately 3.0V★ 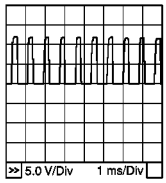 PBIB0528E
30	B	Sensor ground (Crankshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00ONF

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

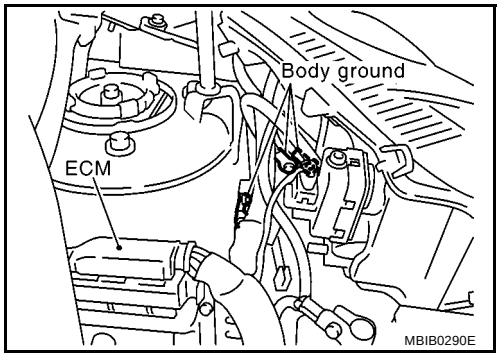

MBIB0290E

2. CHECK CRANKSHAFT POSITION (CKP) SENSOR (POS) POWER SUPPLY CIRCUIT

1. Disconnect crankshaft position (CKP) sensor (POS) harness connector.
2. Turn ignition switch ON.

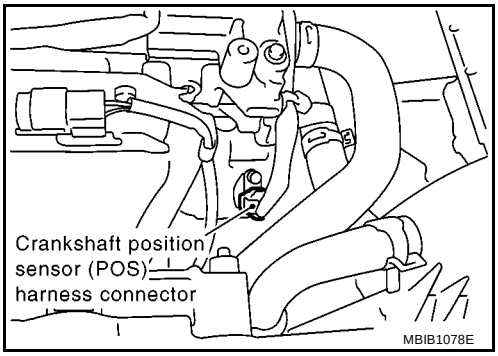

3. Check voltage between CKP sensor (POS) terminal 3 and ground with CONSULT-II or tester.

Voltage: Battery voltage

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

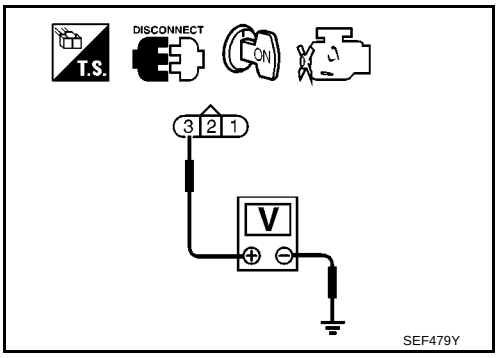

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- Harness for open or short between crankshaft position sensor (POS) and ECM
- Harness for open or short between crankshaft position sensor (POS) and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 30 and CKP sensor (POS) terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 13 and CKP sensor (POS) terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-648, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace crankshaft position sensor (POS).

7. CHECK GEAR TOOTH

Visually check for chipping signal plate gear tooth.

OK or NG

OK >> GO TO 8.
NG >> Replace the signal plate.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00ONG

CRANKSHAFT POSITION SENSOR (POS)

1. Loosen the fixing bolt of the sensor.
2. Disconnect crankshaft position sensor (POS) harness connector.
3. Remove the sensor.
4. Visually check the sensor for chipping.

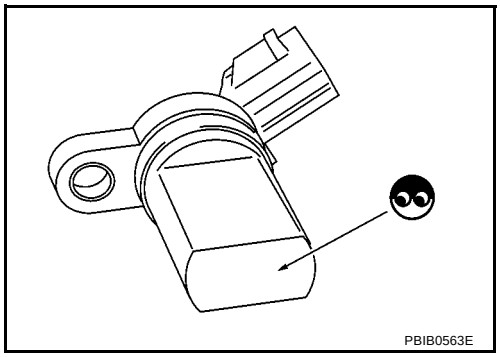

5. Check resistance as shown in the figure.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 1 (-)	Except 0 or ∞
3 (+) - 2 (-)	
2 (+) - 1 (-)	

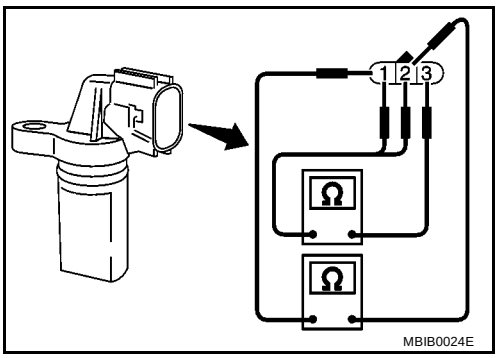

6. If NG, replace crankshaft position sensor (POS).

Removal and Installation

CRANKSHAFT POSITION SENSOR (POS)

EBS00ONH

Refer to EM-73, "CYLINDER BLOCK" .

DTC P0340 CMP SENSOR (PHASE)

PFP:23731

Component Description

EBS00ONI

The camshaft position sensor (PHASE) senses the retraction with intake valve camshaft to identify a particular cylinder. The camshaft position sensor (PHASE) senses the piston position.
When the crankshaft position sensor (POS) system becomes inoperative, the camshaft position sensor (PHASE) provides various controls of engine parts instead, utilizing timing of cylinder identification signals.
The sensor consists of a permanent magnet and Hall IC.
When engine is running, the high and low parts of the teeth cause the gap with the sensor to change.
The changing gap causes the magnetic field near the sensor to change.
Due to the changing magnetic field, the voltage from the sensor changes.

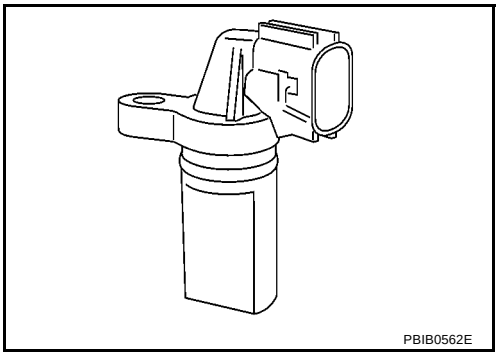
PBIB0562E

On Board Diagnosis Logic

EBS00ONJ

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0340 0340	Camshaft position sensor (PHASE) circuit	● The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking. ● The cylinder No. signal is not set to ECM during engine running. ● The cylinder No. signal is not in the normal pattern during engine running.	● Harness or connectors (The sensor circuit is open or shorted.) ● Camshaft position sensor (PHASE) ● Camshaft (Intake) ● Starter motor (Refer to SC-39 .) ● Starting system circuit (Refer to SC-39 .) ● Dead (Weak) battery

DTC Confirmation Procedure

EBS00ONK

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch ON.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
4. If 1st trip DTC is detected, go to EC-653, "Diagnostic Procedure" .
   If 1st trip DTC is not detected, go to next step.
5. Maintain engine speed at more than 800 rpm for at least 5 seconds.
6. If 1st trip DTC is detected, go to EC-653, "Diagnostic Procedure" .

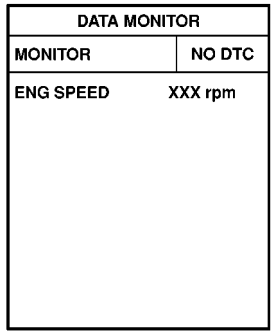

SEF058Y

WITHOUT CONSULT-II

1. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If 1st trip DTC is detected, go to EC-653, "Diagnostic Procedure" .
   If 1st trip DTC is not detected, go to next step.
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Start engine and maintain engine speed at more than 800 rpm for at least 5 seconds.

7. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
8. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
9. If DTC is detected, go to EC-653, "Diagnostic Procedure" .

Wiring Diagram

EBS00ONL

EC-PHASE-01

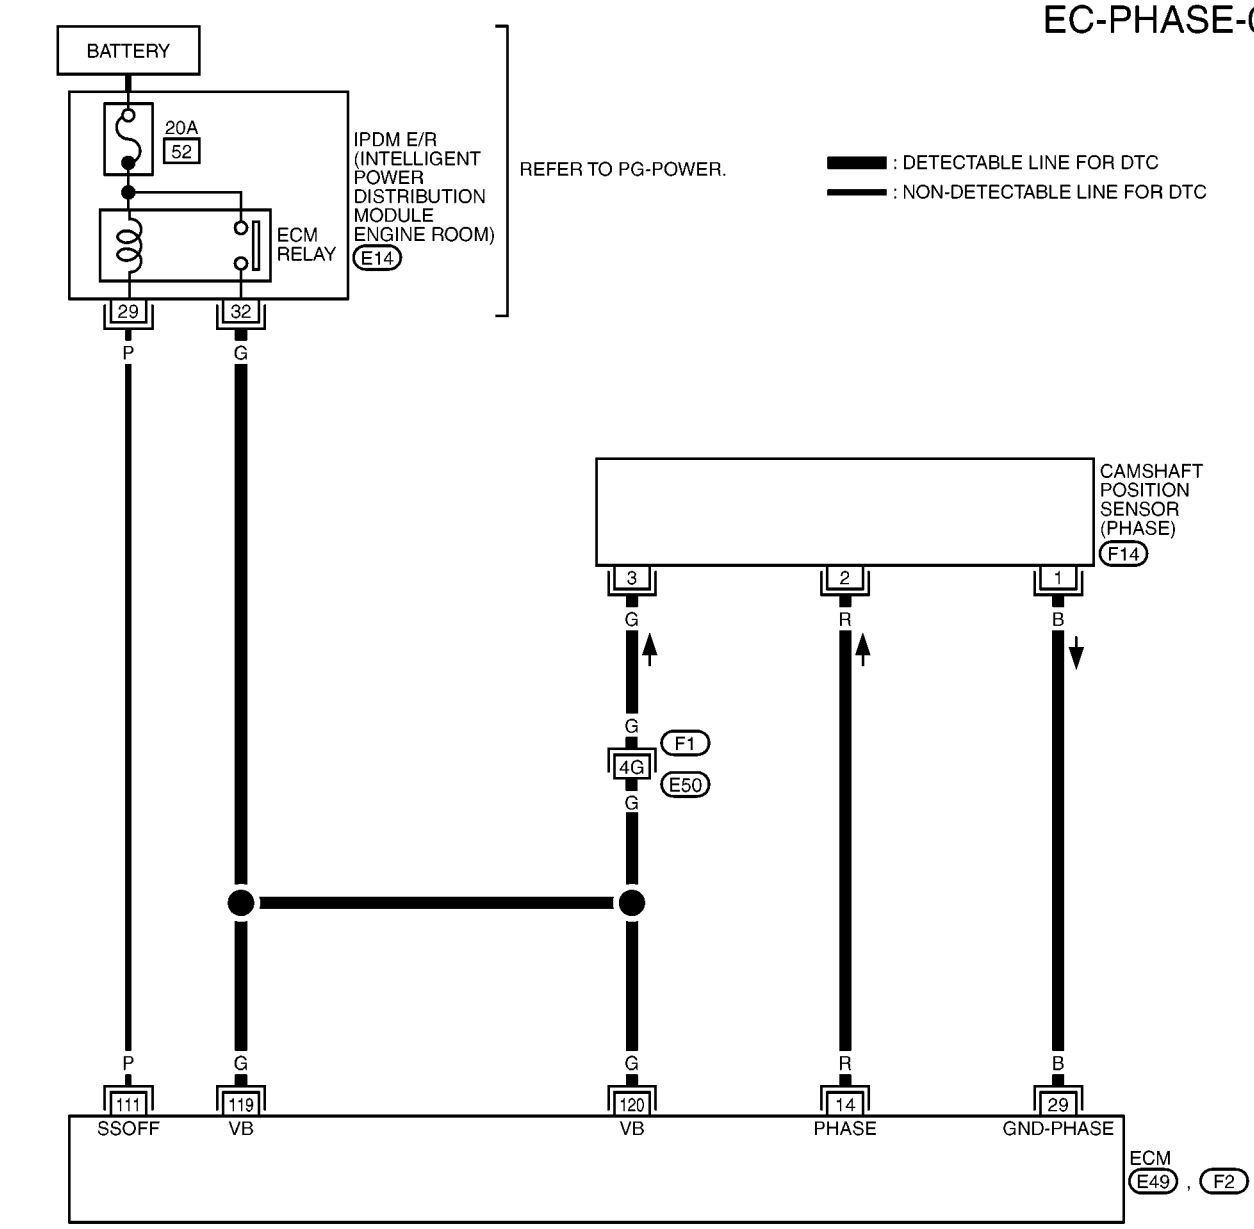

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

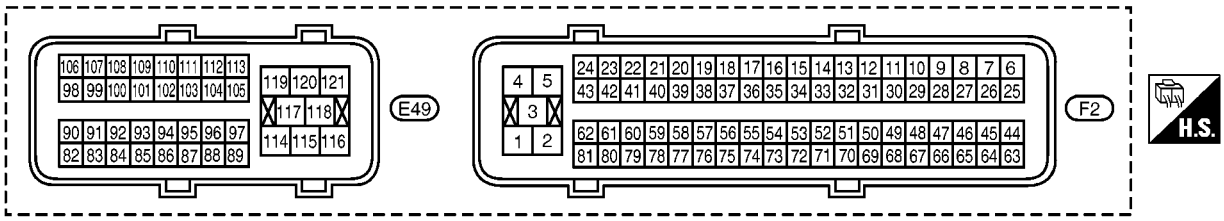

MBWA0283E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
14	R	Camshaft position sensor (PHASE)	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	1.0 - 4.0V★ 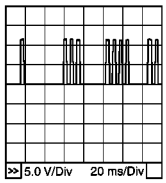 PBIB0525E
			[Engine is running] ● Engine speed is 2,000 rpm.	1.0 - 4.0V★ 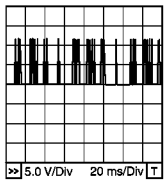 PBIB0526E
29	B	Sensor ground (Camshaft position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00ONM

1. CHECK STARTING SYSTEM

Turn ignition switch to START position.

Does the engine turn over?

Does the starter motor operate?

Yes or No

Yes >> GO TO 2.
No >> Check starting system. (Refer to SC-39, "STARTING SYSTEM" .)

2. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 3.

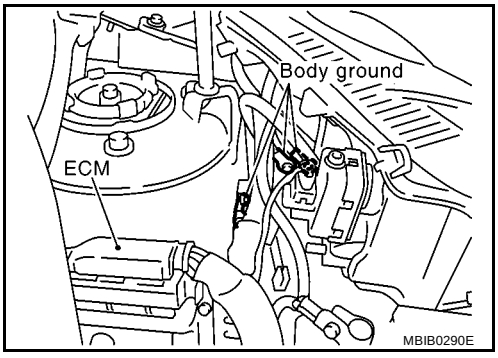

MBIB0290E

3. CHECK CAMSHAFT POSITION (CMP) SENSOR (PHASE) POWER SUPPLY CIRCUIT

1. Disconnect camshaft position (CMP) sensor (PHASE) harness connector.
2. Turn ignition switch ON.

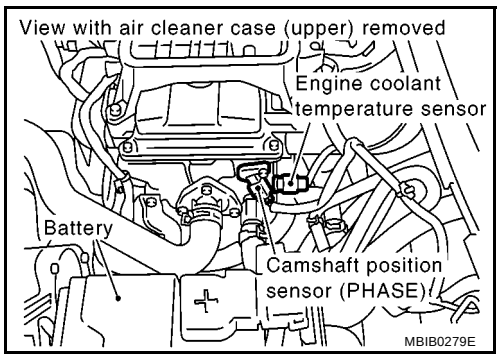

3. Check voltage between CMP sensor (PHASE) terminal 3 and ground with CONSULT-II or tester.

Voltage: Battery voltage

4. Also check harness for short to ground and short to power.

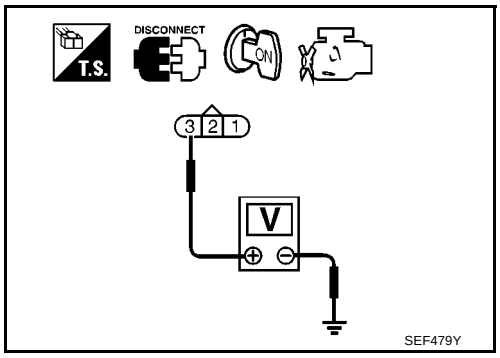

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- Harness for open or short between camshaft position sensor (PHASE) and ECM
- Harness for open or short between camshaft position sensor (PHASE) and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK CMP SENSOR (PHASE) GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 29 and CMP sensor (PHASE) terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK CMP SENSOR (PHASE) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 14 and CMP sensor (PHASE) terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground or short to power.

OK or NG

OK >> GO TO 7.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-655, "Component Inspection" .

OK or NG

OK >> GO TO 8.
NG >> Replace camshaft position sensor (PHASE).

8. CHECK CAMSHAFT (INTAKE)

Check the following.

- Accumulation of debris to the signal plate of camshaft rear end
- Chipping signal plate of camshaft rear end

OK or NG

OK >> GO TO 9.
NG >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

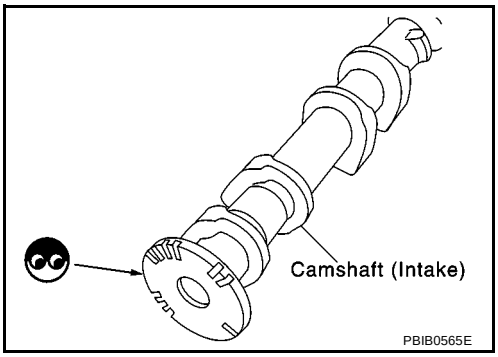

9. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00ONN

CAMSHAFT POSITION SENSOR (PHASE)

1. Loosen the fixing bolt of the sensor.
2. Disconnect camshaft position sensor (PHASE) harness connector.
3. Remove the sensor.
4. Visually check the sensor for chipping.

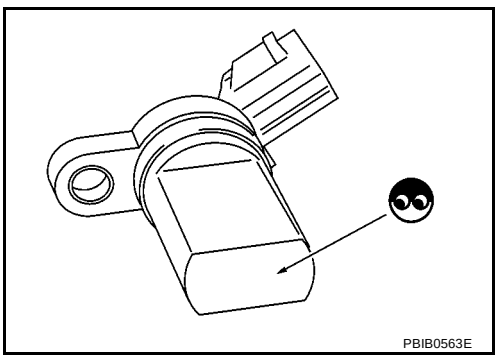

5. Check resistance as shown in the figure.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]
3 (+) - 1 (-)	Except 0 or ∞
3 (+) - 2 (-)	
2 (+) - 1 (-)	

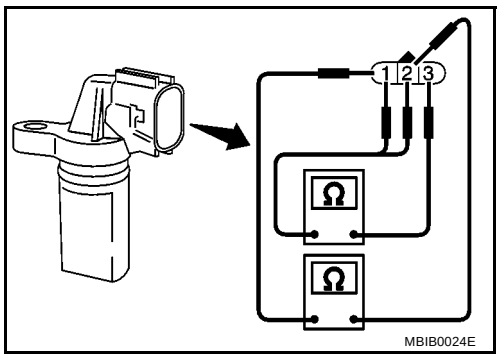

Removal and Installation

EBS00ONO

CAMSHAFT POSITION SENSOR (PHASE)

Refer to EM-36, "CAMSHAFT" .

DTC P0605 ECM

PFP:23710

Component Description

EBS00ONP

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The ECM controls the engine.

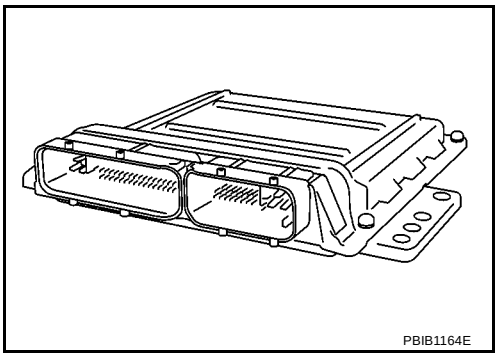
PBIB1164E

On Board Diagnosis Logic

EBS00ONQ

This self-diagnosis has one or two trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
P0605 0605	Engine control module	A)	ECM calculation function is malfunctioning.	● ECM
		B)	ECM EEP-ROM system is malfunctioning.	
		C)	ECM self shut-off function is malfunctioning.	

FAIL-SAFE MODE

ECM enters fail-safe mode when malfunction A is detected.

Detected items	Engine operation condition in fail-safe mode
Malfunction A	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00ONR

Perform PROCEDURE FOR MALFUNCTION A first. If the DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION B. If there is no malfunction on PROCEDURE FOR MALFUNCTION B, perform PROCEDURE FOR MALFUNCTION C.

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A

With CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. If DTC is detected, go to EC-659, "Diagnostic Procedure" .

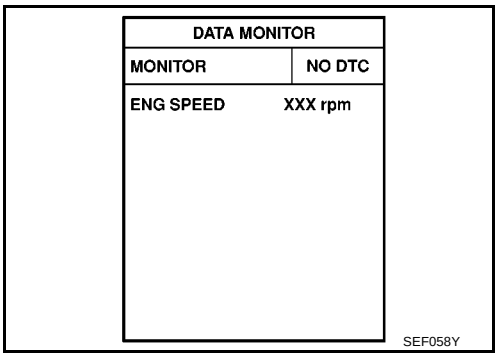

SEF058Y

Without CONSULT-II

1. Turn ignition switch ON.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.

4. If DTC is detected, go to EC-659, "Diagnostic Procedure" .

PROCEDURE FOR MALFUNCTION B

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
4. If 1st trip DTC is detected, go to EC-659, "Diagnostic Procedure" .

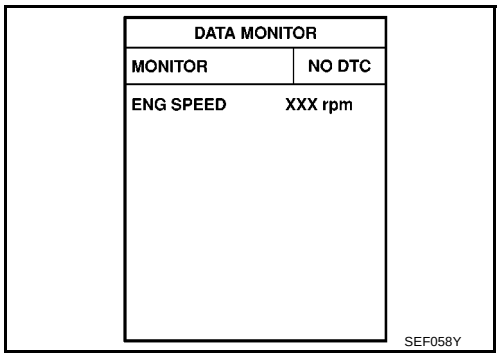

Without CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If 1st trip DTC is detected, go to EC-659, "Diagnostic Procedure" .

PROCEDURE FOR MALFUNCTION C

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
4. Repeat step 3 for 32 times.
5. If 1st trip DTC is detected, go to EC-659, "Diagnostic Procedure" .

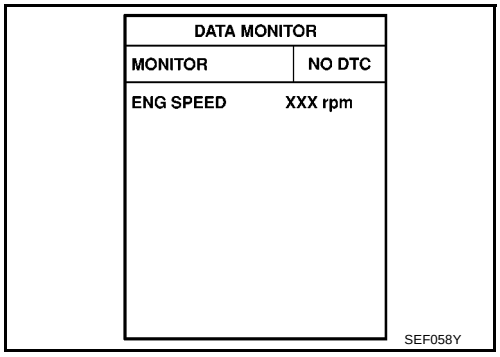

Without CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Repeat step 2 for 32 times.
4. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
5. If 1st trip DTC is detected, go to EC-659, "Diagnostic Procedure" .

Diagnostic Procedure

EBS00ONS

1. INSPECTION START

With CONSULT-II

1. Turn ignition switch ON.
2. Select “SELF DIAG RESULTS” mode with CONSULT-II.
3. Touch “ERASE”.
4. **Perform DTC Confirmation Procedure.**
   See EC-657 .
5. Is the 1st trip DTC P0605 displayed again?

Without CONSULT-II

1. Turn ignition switch ON.
2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. Refer to EC-510, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
3. **Perform DTC Confirmation Procedure.**
   See EC-657 .
4. Is the 1st trip DTC P0605 displayed again?

Yes or No

Yes >> GO TO 2.
No >> **INSPECTION END**

2. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NATS system and registration of all NATS ignition key IDs. Refer to EC-511, "NATS (Nissan Anti-theft System)" .
3. Perform EC-503, "Accelerator Pedal Released Position Learning" .
4. Perform EC-503, "Throttle Valve Closed Position Learning" .
5. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

DTC P1065 ECM POWER SUPPLY

PFP:23710

Component Description

EBS00ONT

Battery voltage is supplied to the ECM even when the ignition switch is turned OFF for the ECM memory function of the DTC memory, the air-fuel ratio feedback compensation value memory, the idle air volume learning value memory, etc.

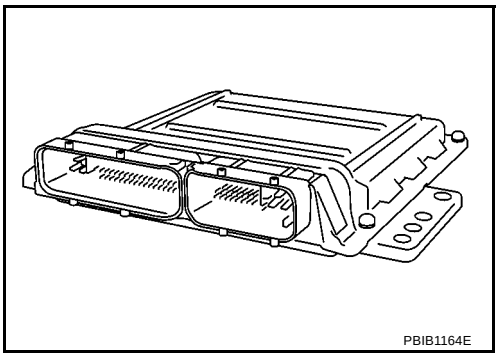
PBIB1164E

On Board Diagnosis Logic

EBS00ONU

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1065 1065	ECM power supply circuit	ECM back-up RAM system does not function properly.	● Harness or connectors [ECM power supply (back-up) circuit is open or shorted.] ● ECM

DTC Confirmation Procedure

EBS00ONV

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
5. Repeat steps 3 and 4 for 4 times.
6. If 1st trip DTC is detected, go to EC-662, "Diagnostic Procedure" .

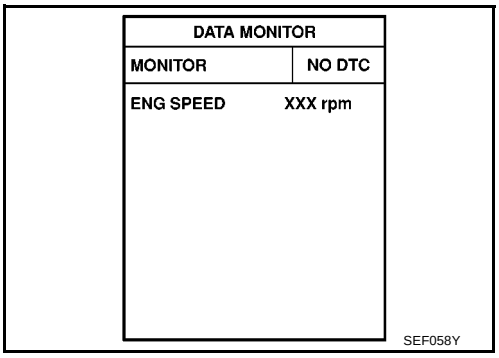

SEF058Y

WITHOUT CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Start engine and let it idle for 1 second.
3. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
4. Repeat steps 2 and 3 for 4 times.
5. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
6. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
7. If DTC is detected, go to EC-662, "Diagnostic Procedure" .

Wiring Diagram

EBS00ONW

EC-ECM/PW-01

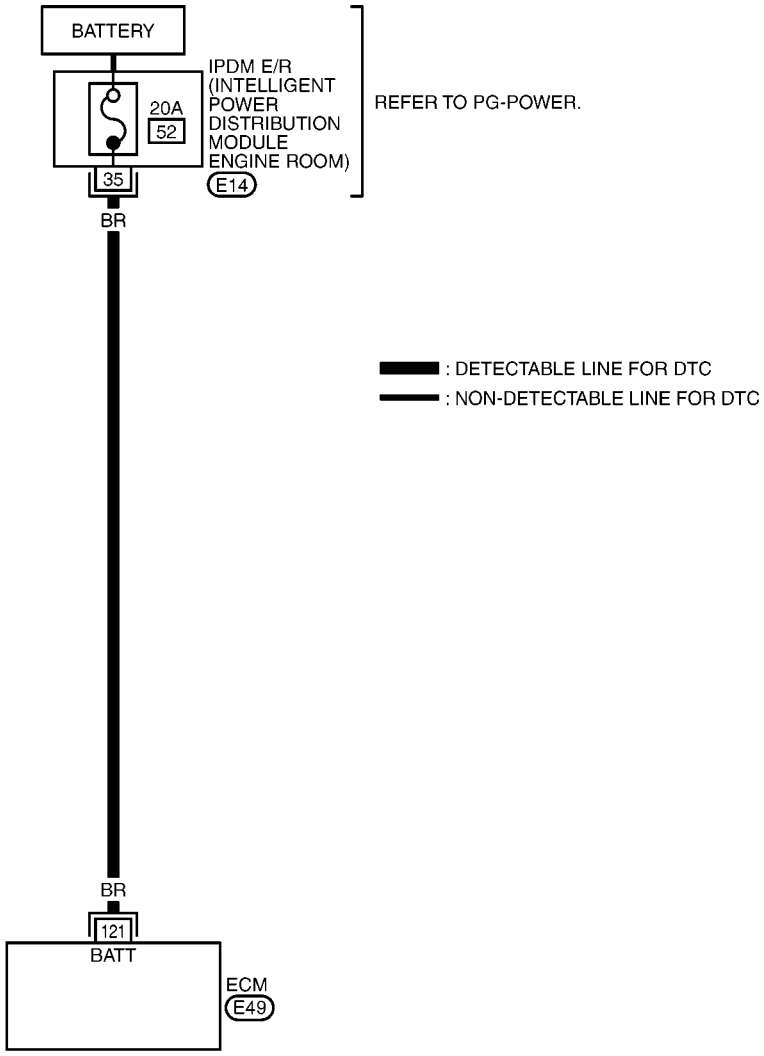



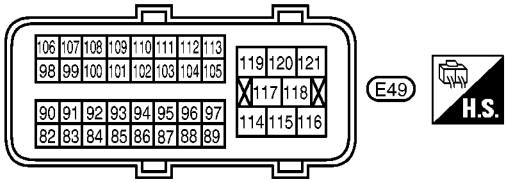

MBWA0285E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
121	BR	Power supply for ECM (Buck-up)	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00ONX

1. CHECK ECM POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check voltage between ECM terminal 121 and ground with CONSULT-II or tester.

Voltage: Battery voltage

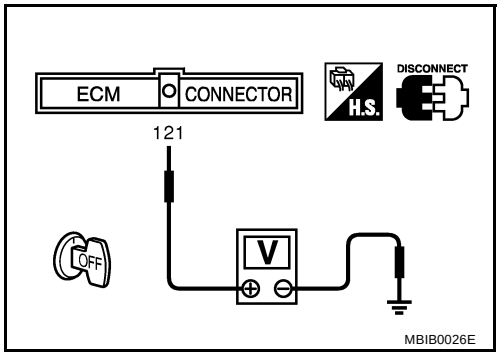

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

2. DETECT MALFUNCTIONING PART

Check the following.

- 20A fuse
- IPDM E/R harness connector E14
- Harness for open or short between ECM and IPDM E/R

>> Repair or replace harness or connectors.

3. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> GO TO 4.
NG >> Repair or replace harness or connectors.

4. PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT-II

1. Turn ignition switch ON.
2. Select “SELF DIAG RESULTS” mode with CONSULT-II.
3. Touch “ERASE”.
4. **Perform DTC Confirmation Procedure.**
   See EC-660 .
5. Is the 1st trip DTC P1065 displayed again?

Without CONSULT-II

1. Turn ignition switch ON.
2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. Refer to EC-510, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
3. **Perform DTC Confirmation Procedure.**
   See EC-660 .
4. Is the 1st trip DTC P1065 displayed again?

Yes or No

Yes >> GO TO 5.
No >> **INSPECTION END**

5. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NATS system and registration of all NATS ignition key IDs. Refer to EC-511, "NATS (Nissan Anti-theft System)" .
3. Perform EC-503, "Accelerator Pedal Released Position Learning" .
4. Perform EC-503, "Throttle Valve Closed Position Learning" .
5. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

DTC P1121 ELECTRIC THROTTLE CONTROL ACTUATOR

PFP:16119

Component Description

EBS00ONY

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.
The throttle control motor is operated by the ECM and it opens and closes the throttle valve.
The throttle position sensor detects the throttle valve position, and the opening and closing speed of the throttle valve and feeds the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

EBS00ONZ

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
P1121 1121	Electric throttle control actuator	A)	Electric throttle control actuator does not function properly due to the return spring malfunction.	● Electric throttle control actuator
		B)	Throttle valve opening angle in fail-safe mode is not in specified range.	
		C)	ECM detect the throttle valve is stuck open.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode
Malfunction A	The ECM controls the electric throttle actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm.
Malfunction B	ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.
Malfunction C	While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P position, and engine speed will not exceed 1,000 rpm or more.

DTC Confirmation Procedure

EBS00OO0

NOTE:

- **Perform PROCEDURE FOR MALFUNCTION A AND B first. If the DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION C.**
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A AND B

With CONSULT-II

1. Turn ignition witch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Shift selector lever to D position (A/T models), 1st position (M/T models) and wait at least 2 seconds.
4. Shift selector lever to P position (A/T models), Neutral position (M/T models).
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Turn ignition witch ON and wait at least 1 second.
7. Shift selector lever to D position (A/T models), 1st position (M/T models) and wait at least 2 seconds.
8. Shift selector lever to P position (A/T models), Neutral position (M/T models).

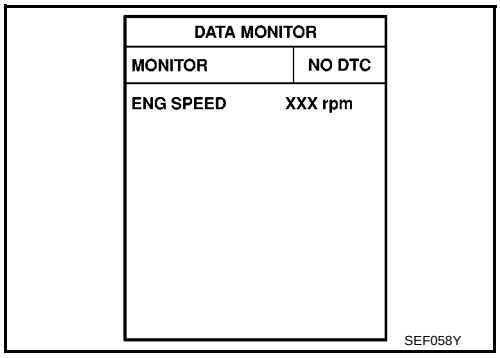

9. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
10. If 1st trip DTC is detected, go to EC-665, "Diagnostic Procedure" .

Without CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.

2. Shift selector lever to D position (A/T models), 1st position (M/T models) and wait at least 2 seconds.
3. Shift selector lever to P position (A/T models), Neutral position (M/T models).
4. Turn ignition switch OFF and wait at least 10 seconds.
5. Turn ignition witch ON and wait at least 1 second.
6. Shift selector lever to D position (A/T models), 1st position (M/T models) and wait at least 2 seconds.
7. Shift selector lever to P position (A/T models), Neutral position (M/T models).
8. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
9. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
10. If DTC is detected, go to EC-665, "Diagnostic Procedure" .

PROCEDURE FOR MALFUNCTION C

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Shift selector lever to D position (A/T models), 1st position (M/T models) and wait at least 2 seconds.
4. Shift selector lever to N or P position (A/T models), Neutral position (M/T models).
5. Start engine and let it idle for 3 seconds.
6. If DTC is detected, go to EC-665, "Diagnostic Procedure" .

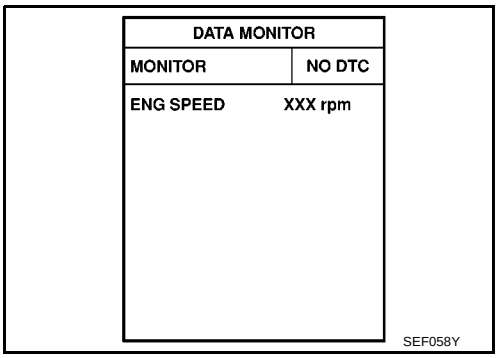

Without CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Shift selector lever to D position (A/T models), 1st position (M/T models) and wait at least 2 seconds.
3. Shift selector lever to N or P position (A/T models), Neutral position (M/T models).
4. Start engine and let it idle for the 3 seconds.
5. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
6. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
7. If DTC is detected, go to EC-665, "Diagnostic Procedure" .

Diagnostic Procedure

EBS00OO1

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Remove the intake air duct.
2. Check if a foreign matter is caught between the throttle valve and the housing.

OK or NG

OK >> GO TO 2.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

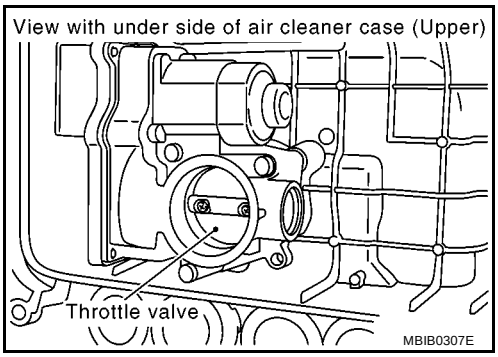

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

DTC P1122 ELECTRIC THROTTLE CONTROL FUNCTION

PFP:16119

Description

EBS00OO2

NOTE:
If DTC P1122 is displayed with DTC P1121 or 1126, first perform the trouble diagnosis for DTC P1121 or P1126. Refer to EC-664 or EC-673 .
Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.
The throttle control motor is operated by the ECM and it opens and closes the throttle valve.
The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM to control the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

EBS00OO3

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1122 1122	Electric throttle control performance problem	Electric throttle control function does not operate properly.	● Harness or connectors (Throttle control motor circuit is open or shorted.) ● Electric throttle control actuator

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00OO4

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 11V when engine is running.

WITH CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to EC-669, "Diagnostic Procedure" .

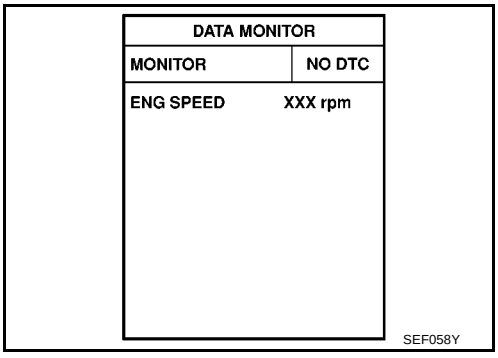

WITHOUT CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Start engine and let it idle for 5 seconds.
3. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
4. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
5. If DTC is detected, go to EC-669, "Diagnostic Procedure" .

Wiring Diagram

EBS00OO5

EC-ETC1-01

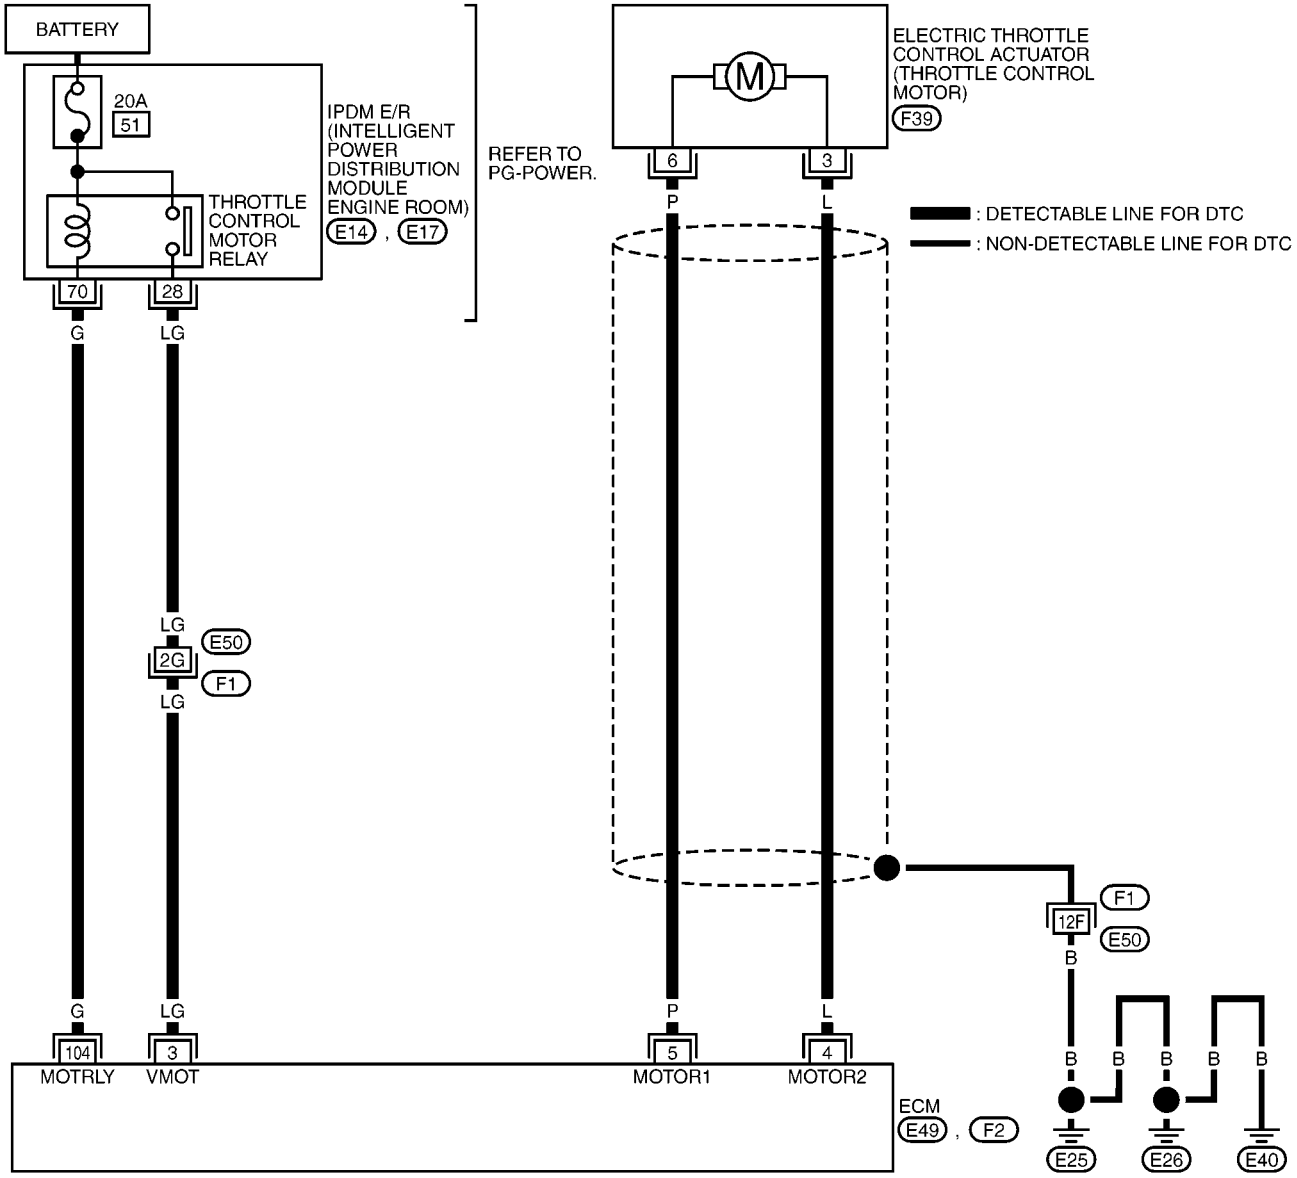

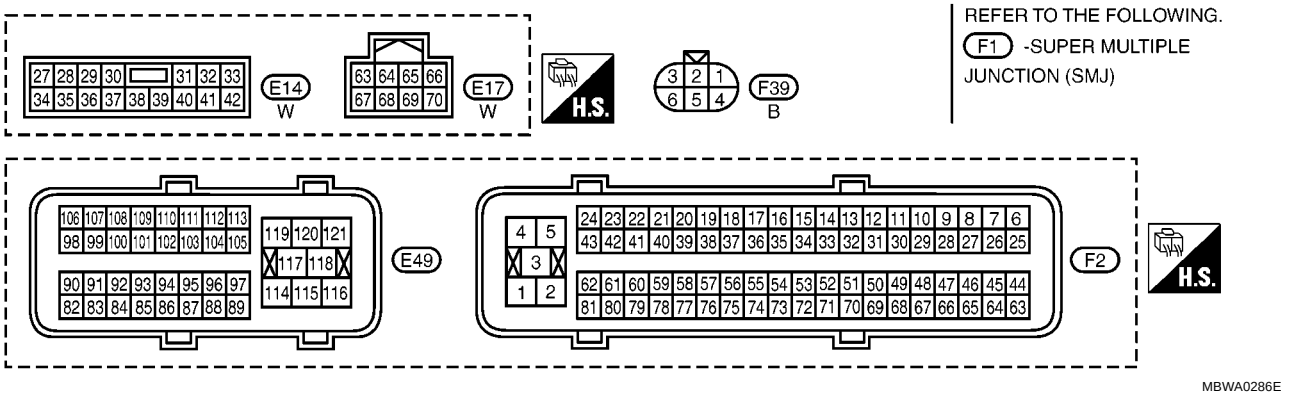

MBWA0286E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	LG	Throttle control motor relay power supply	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
4	L	Throttle control motor (Close)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Released	0 - 14V★ 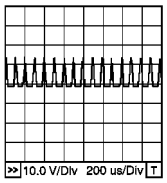 PBIB0534E
5	P	Throttle control motor (Open)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	0 - 14V★ 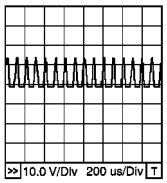 PBIB0533E
104	G	Throttle control motor relay	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON]	0 - 1.0V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OO6

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

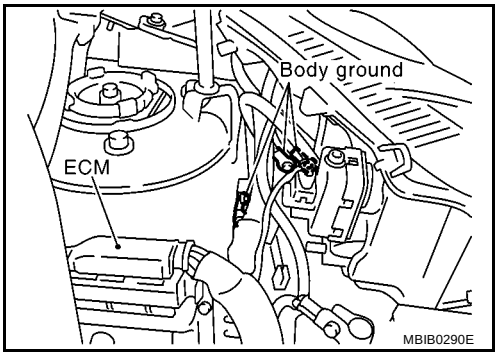

MBIB0290E

2. CHECK THROTTLE CONTROL MOTOR RELAY SIGNAL CIRCUIT-I

Check voltage between ECM terminal 3 and ground under the following conditions with CONSULT-II or tester.

Ignition switch	Voltage
OFF	Approximately 0V
ON	Battery voltage (11 - 14V)

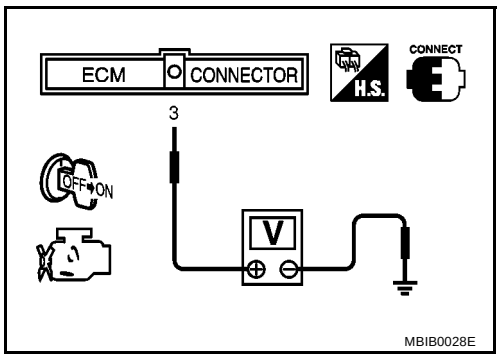

OK or NG

OK >> GO TO 10.
NG >> GO TO 3.

3. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect IPDM E/R harness connector E14.
4. Check harness continuity between ECM terminal 3 and IPDM E/R terminal 28. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch OFF.
3. Check voltage between ECM terminal 104 and ground with CONSULT-II or tester.

Voltage: Battery voltage

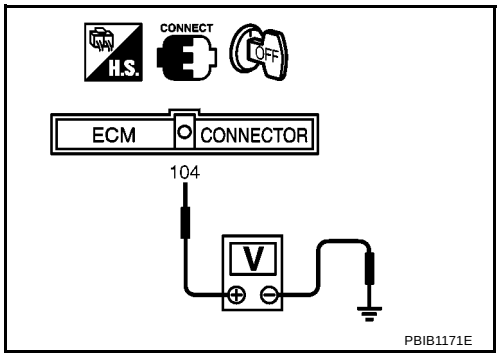

OK or NG

OK >> GO TO 9.
NG >> GO TO 6.

6. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-II

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector E17.
3. Check continuity between ECM terminal 104 and IPDM E/R terminal 70. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector E17
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK FUSE

1. Disconnect 20A fuse.
2. Check 20A fuse for blown.

OK or NG

OK >> GO TO 9.
NG >> Replace 20A fuse.

9. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R. Refer to PG-18, "IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)" .
NG >> Repair or replace harness or connectors.

10. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

1. Turn ignition switch OFF.
2. Disconnect electric throttle control actuator harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals. Refer to Wiring Diagram.

Electric throttle control actuator terminal	ECM terminal	Continuity
3	5	Should not exist
	4	Should exist
6	5	Should exist
	4	Should not exist

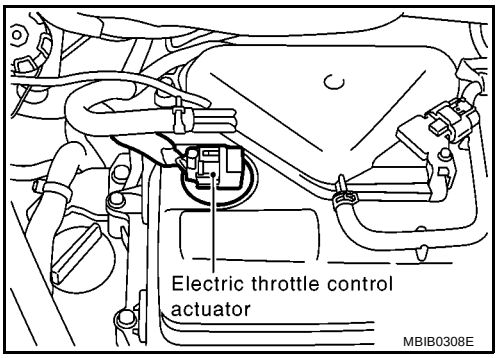

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 11.
NG >> Repair or replace.

11. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Remove the intake air duct.
2. Check if foreign matter is caught between the throttle valve and the housing.

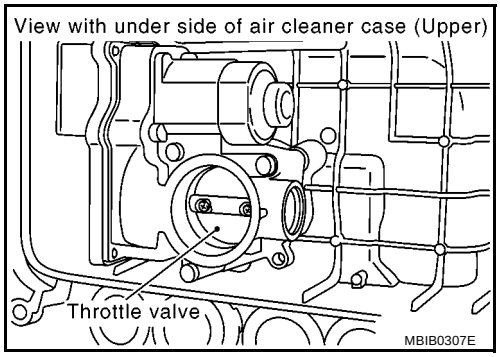

OK or NG

OK >> GO TO 12.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

12. CHECK THROTTLE CONTROL MOTOR

Refer to EC-672, "Component Inspection" .

OK or NG

OK >> GO TO 13.
NG >> GO TO 14.

13. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> GO TO 14.
NG >> Repair or replace harness or connectors.

14. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

Component Inspection

EBS00OO7

THROTTLE CONTROL MOTOR

1. Disconnect electric throttle control actuator harness connector.
2. Check resistance between terminals 3 and 6.

Resistance: Approximately 1 - 15 Ω [at 25 °C (77°F)]

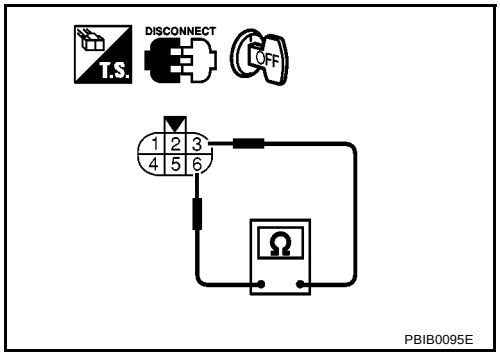

3. If NG, replace electric throttle control actuator and go to next step.
4. Perform EC-503, "Throttle Valve Closed Position Learning" .
5. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00OO8

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1124, P1126 THROTTLE CONTROL MOTOR RELAY

PFP:16119

Component Description

EBS00OO9

Power supply for the Throttle control motor is provided to the ECM via throttle control motor relay. The throttle control motor relay is ON/OFF controlled by the ECM. When the ignition switch is turned ON, the ECM sends an ON signal to throttle control motor relay and battery voltage is provided to the ECM. When the ignition switch is turned OFF, the ECM sends an OFF signal to throttle control motor relay and battery voltage is not provided to the ECM.

CONSULT-II Reference Value in Data Monitor Mode

EBS00OOA

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
THRTL RELAY	● Ignition switch: ON	ON

On Board Diagnosis Logic

EBS00OOB

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1124 1124	Throttle control motor relay circuit short	ECM detects the throttle control motor relay is stuck ON.	● Harness or connectors (Throttle control motor relay circuit is shorted.) ● Throttle control motor relay
P1126 1126	Throttle control motor relay circuit open	ECM detects a voltage of power source for throttle control motor is excessively low.	● Harness or connectors (Throttle control motor relay circuit is open.) ● Throttle control motor relay

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00OOC

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR DTC P1124

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 8V.

With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. If DTC is detected, go to EC-676, "Diagnostic Procedure" .

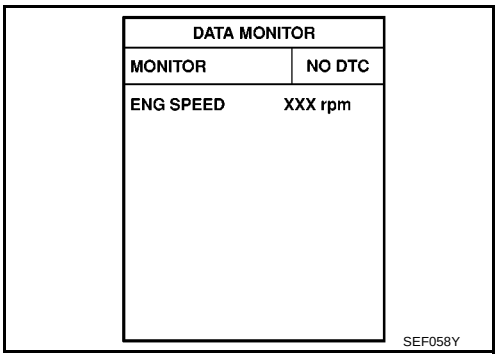

Without CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. If DTC is detected, go to EC-676, "Diagnostic Procedure" .

PROCEDURE FOR DTC P1126

With CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to EC-676, "Diagnostic Procedure" .

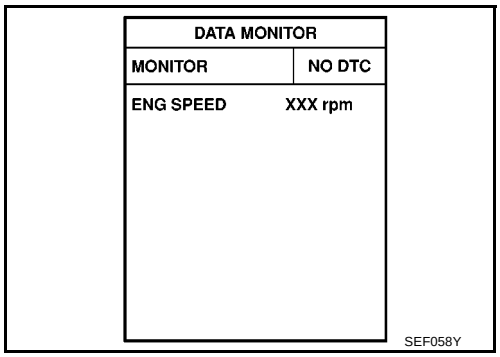

Without CONSULT-II

1. Turn ignition switch ON and wait at least 2 second.
2. Start engine and let it idle for 5 seconds.
3. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
4. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
5. If DTC is detected, go to EC-676, "Diagnostic Procedure" .

Wiring Diagram

EBS00OOD

EC-ETC2-01

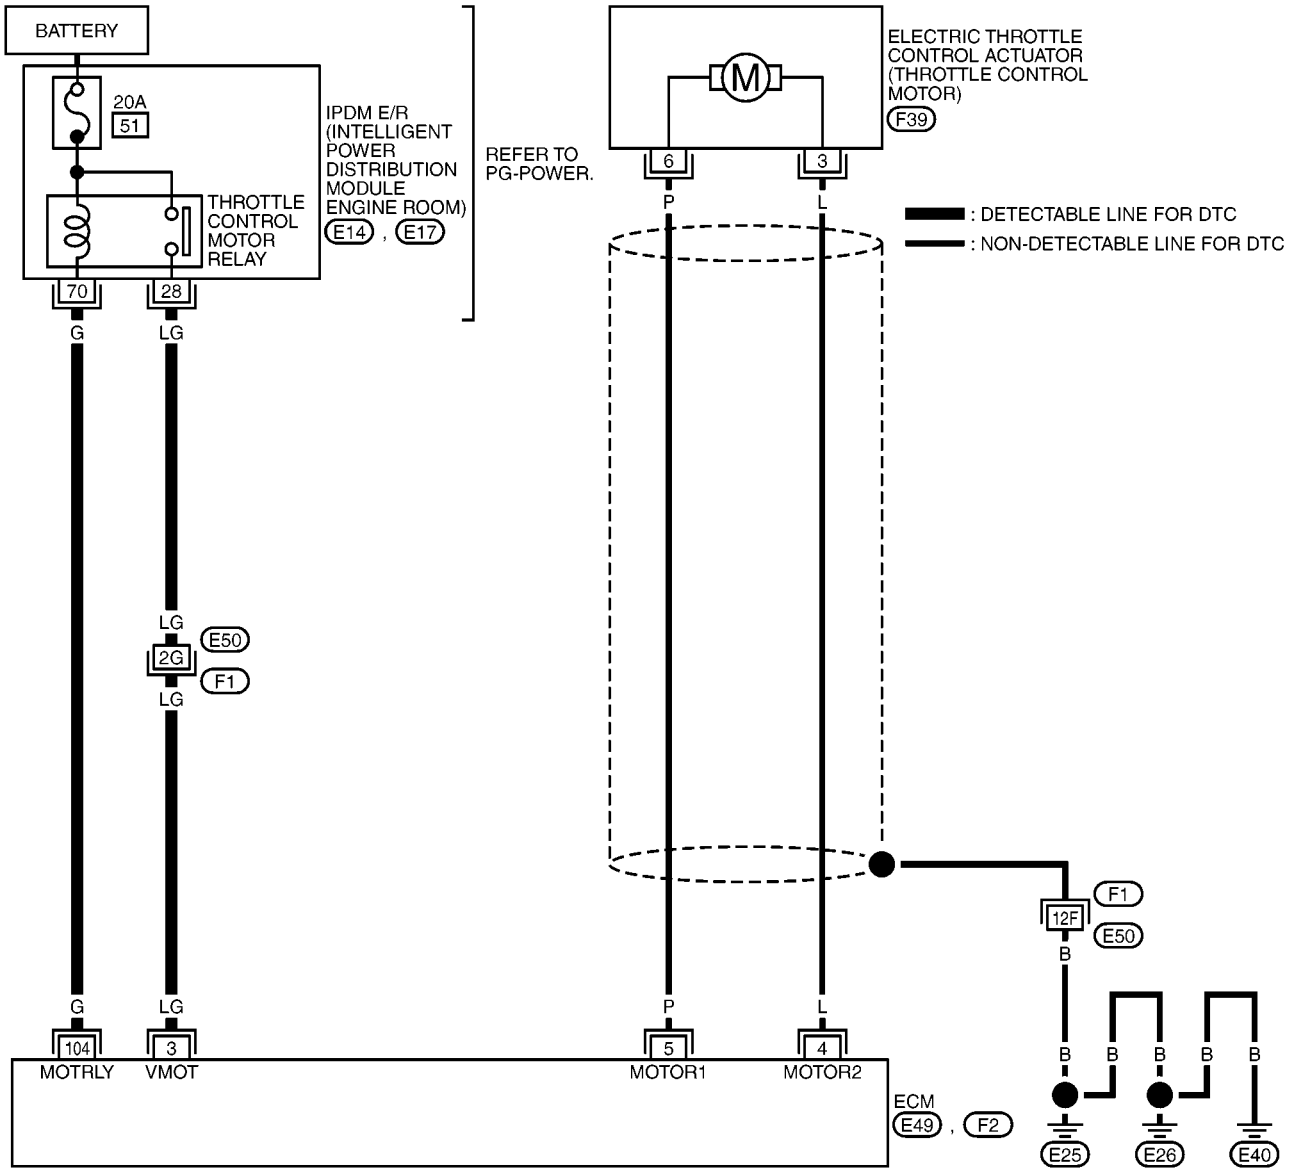

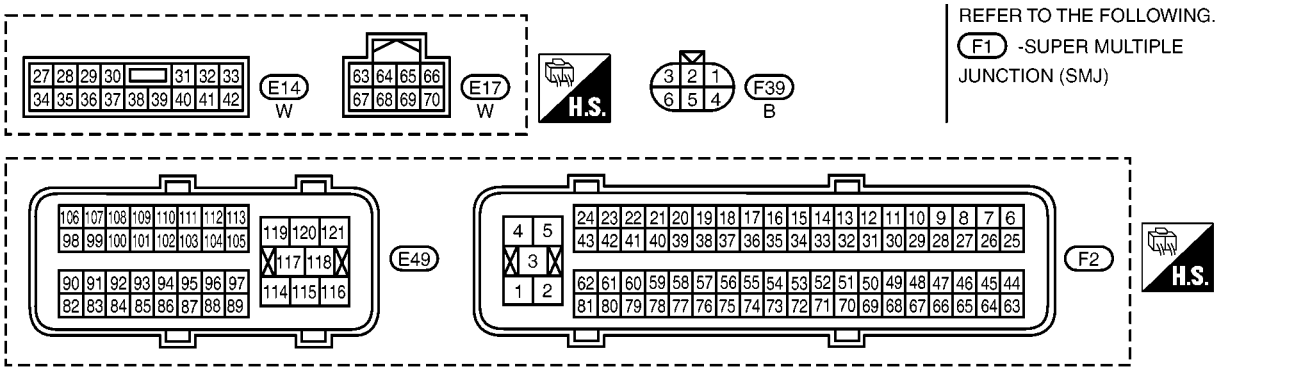

MBWA0287E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	LG	Throttle control motor relay power supply	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)
104	G	Throttle control motor relay	**[Ignition switch OFF]**	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON]	0 - 1.0V

Diagnostic Procedure

EBS00OOE

1. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF.
2. Check voltage between ECM terminal 104 and ground with CONSULT-II or tester.

Voltage: Battery voltage.

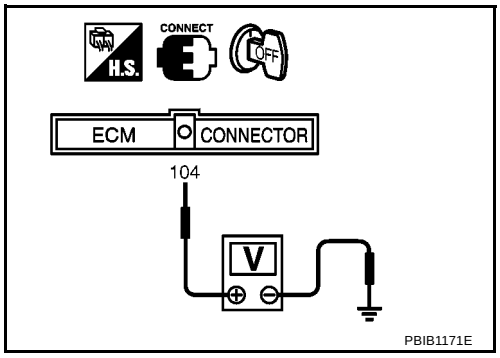

OK or NG

OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector E17.
3. Check continuity between ECM terminal 104 and IPDM E/R terminal 70.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector E17
- Harness for open or shot between ECM and IPDM E/R

>> Repair open circuit of short to ground or short to power in harness or connectors.

4. CHECK FUSE

1. Disconnect 20A fuse.
2. Check 20A fuse for blown.

OK or NG

OK >> GO TO 8.
NG >> Replace 20A fuse.

5. CHECK THROTTLE CONTROL MOTOR RELAY SIGNAL CIRCUIT-I

1. Reconnect all disconnected connectors.
2. Check voltage between ECM terminal 3 and ground under the following conditions with CONSULT-II or tester.

Ignition switch	Voltage
OFF	Approximately 0V
ON	Battery voltage (11 - 14V)

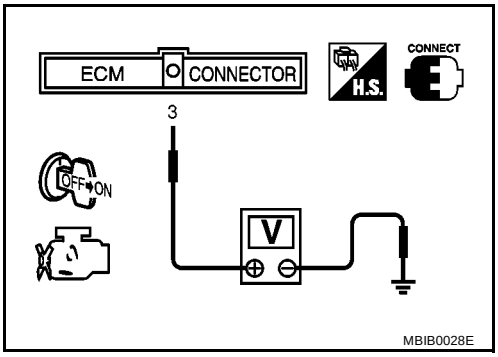

OK or NG

OK >> GO TO 8.
NG >> GO TO 6.

6. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect IPDM E/R harness connector E14.
4. Check continuity between ECM terminal 3 and IPDM E/R terminal 28. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R. Refer to PG-18, "IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)" .
NG >> Repair or replace harness or connectors.

DTC P1128 THROTTLE CONTROL MOTOR

PFP:16119

Component Description

EBS00OOF

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.
The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM to control the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

EBS00OOG

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1128 1128	Throttle control motor circuit short	ECM detects short in both circuits between ECM and throttle control motor.	● Harness or connectors (Throttle control motor circuit is shorted.) ● Electric throttle control actuator (Throttle control motor)

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00OOH

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to EC-680, "Diagnostic Procedure" .

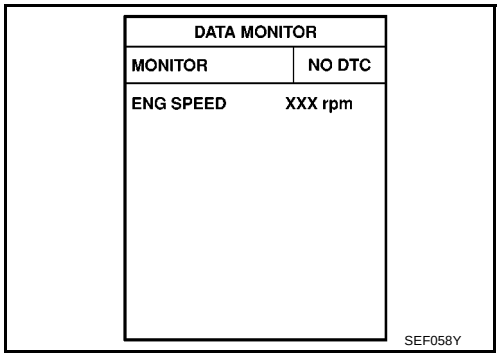

WITHOUT CONSULT-II

1. Turn ignition switch ON and wait at least 2 second.
2. Start engine and let it idle for 5 seconds.
3. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
4. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
5. If DTC is detected, go to EC-680, "Diagnostic Procedure" .

Wiring Diagram

EBS00OOI

EC-ETC3-01

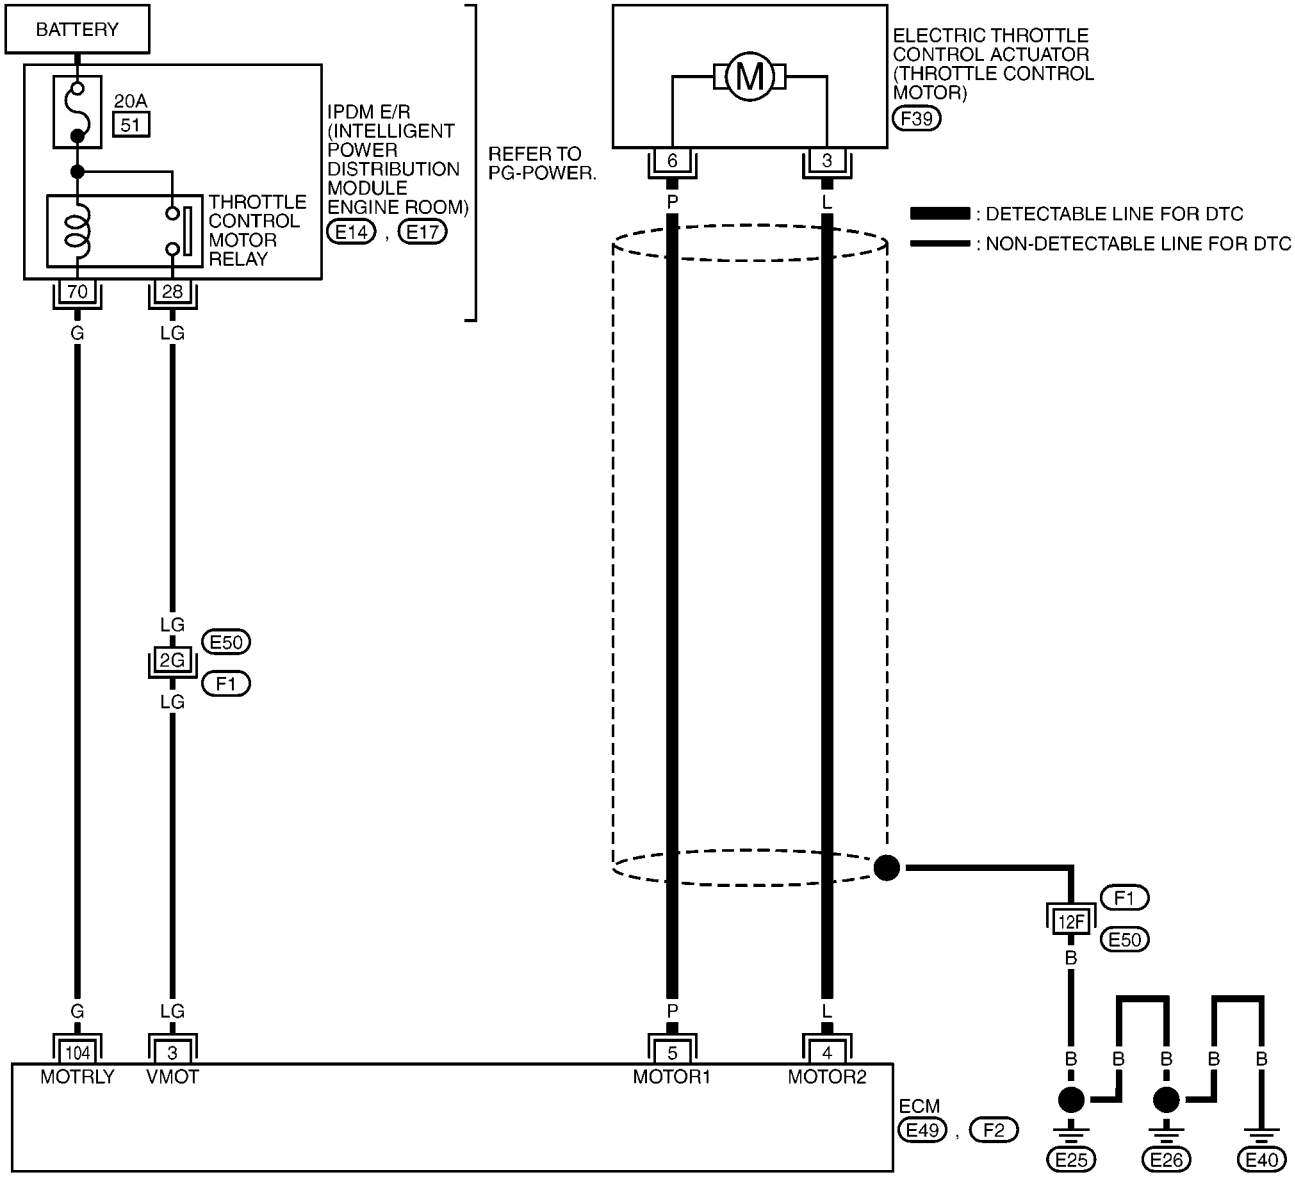

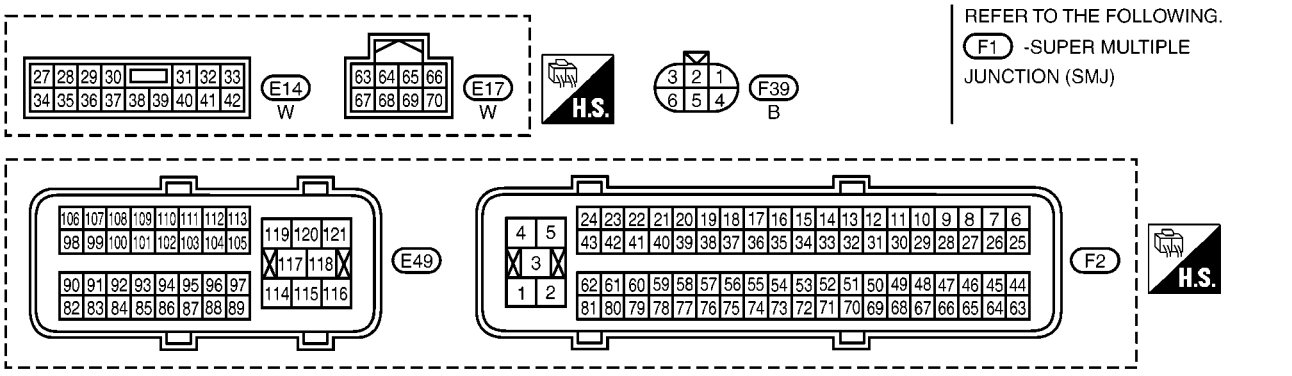

MBWA0288E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	L	Throttle control motor (Close)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Released	0 - 14V★ 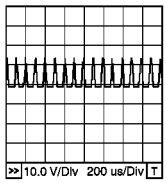 PBIB0534E
5	P	Throttle control motor (Open)	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	0 - 14V★ 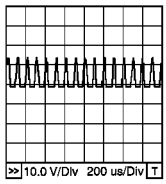 PBIB0533E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OOJ

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

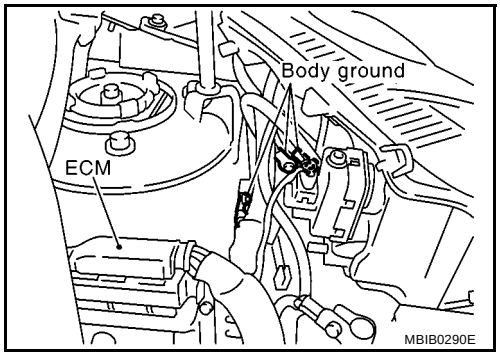

MBIB0290E

2. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

1. Turn ignition switch OFF.
2. Disconnect electric throttle control actuator harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals. Refer to Wiring Diagram.

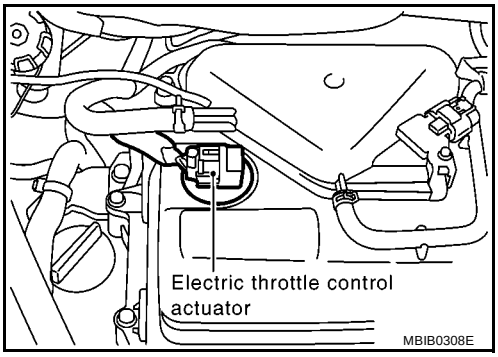

Electric throttle control actuator terminal	ECM terminal	Continuity
3	4	Should exist
	5	Should not exist
6	4	Should not exist
	5	Should exist

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. CHECK THROTTLE CONTROL MOTOR

Refer to EC-681, "Component Inspection" .

OK or NG

OK >> GO TO 4.
NG >> GO TO 5.

4. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> GO TO 5.
NG >> Repair or replace harness or connectors.

5. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

Component Inspection

EBS00OOK

THROTTLE CONTROL MOTOR

1. Disconnect electric throttle control actuator harness connector.
2. Check resistance between terminals 3 and 6.

Resistance: Approximately 1 - 15 Ω [at 25 °C (77°F)]

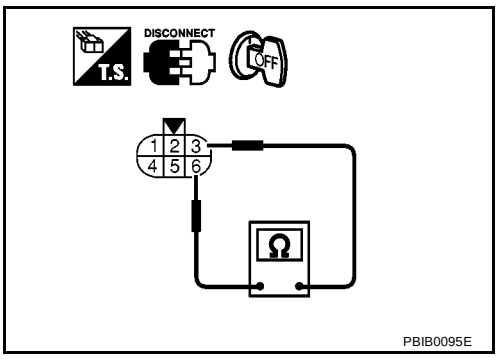

3. If NG, replace electric throttle control actuator and go to next step.
4. Perform EC-503, "Throttle Valve Closed Position Learning" .
5. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00OOL

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1171 INTAKE ERROR

PFP:22365

On Board Diagnosis Logic

EBS00OSS

NOTE:
If DTC 1171 is displayed with DTC P0108, first perform the trouble diagnosis for DTC P0108.
Refer to EC-575, "DTC P0107, P0108 MANIFOLD ABSOLUTE PRESSURE SENSOR" .
ECM computes two intake air volume values.
1: Computed from manifold absolute pressure signal and intake air temperature signal.
2: Computed from engine revolution signal and throttle position signal.

In normal condition, value 1 is used for engine control.
If intake air leak occurred between throttle valve and intake air port, manifold absolute pressure sensor signal might increase, and then ECM increases amount of fuel injected. In this case, ECM uses value 2 for engine control instead of value1.
ECM monitors the difference between value 1 and value 2. If the difference is extremely large, ECM judges intake air leak occurs and light up the MI

This diagnosis has one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1171 1171	Intake error	An excessively high voltage from manifold absolute pressure sensor is sent to ECM.	● Harness or connectors (The manifold absolute pressure sensor circuit is open or shorted.) ● Manifold absolute pressure ● Intake air leaks ● Vacuum hoses

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and MI lights up.

Detected items	Engine operating condition in fail-safe mode
Intake air system problem	When accelerator pedal is depressed, engine speed will not rise more than 2,500 rpm due to fuel cut.

DTC Confirmation Procedure

EBS00OST

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and wait at least 5 seconds.
4. If DTC is detected, go to EC-685, "Diagnostic Procedure" .

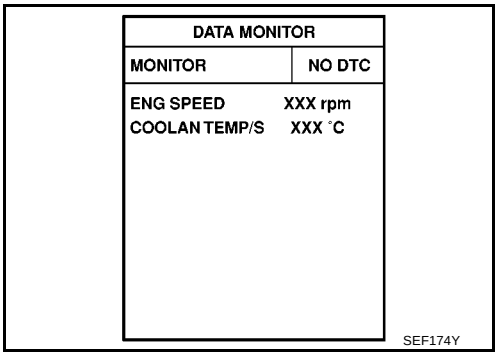

WITHOUT CONSULT-II

1. Turn ignition switch ON and wait at least 5 seconds.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If trip DTC is detected, go to EC-685, "Diagnostic Procedure" .

Wiring Diagram

EBS00OSU

EC-AP/SEN-01

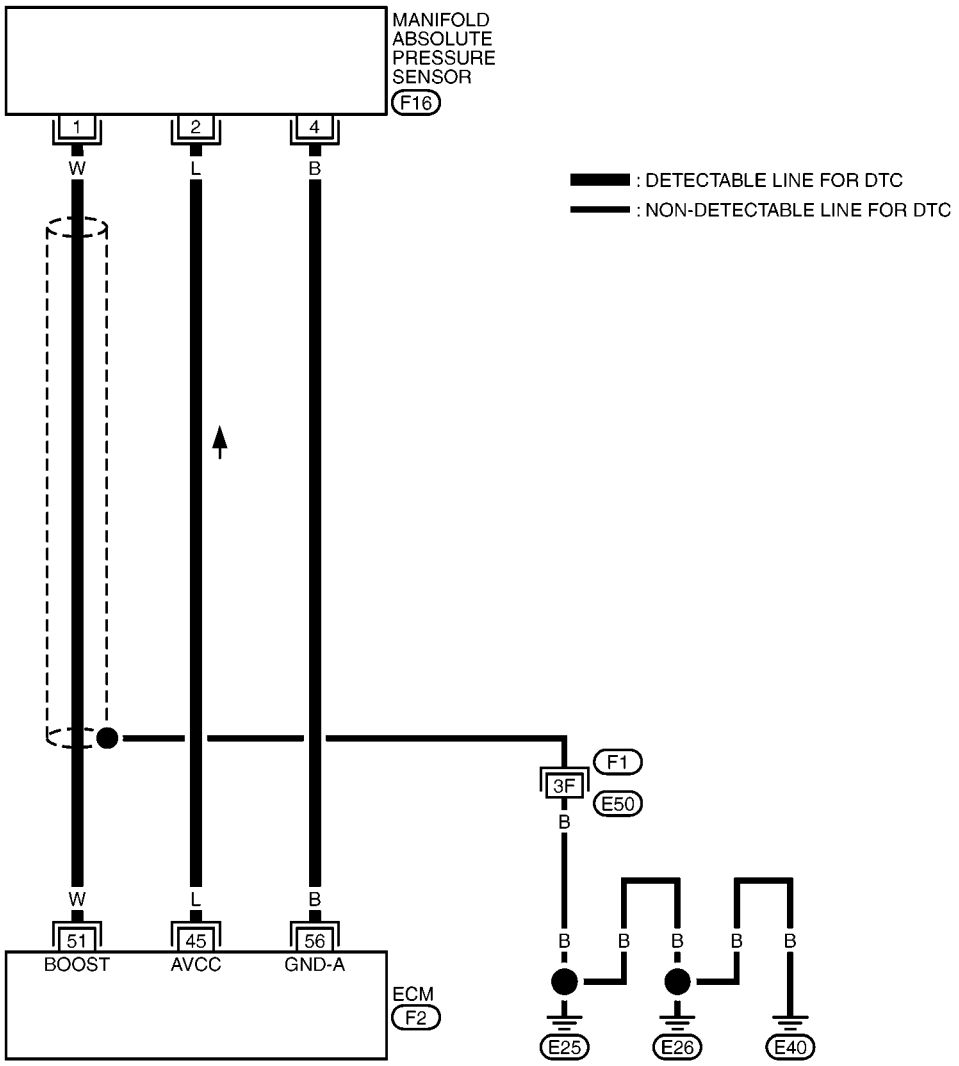

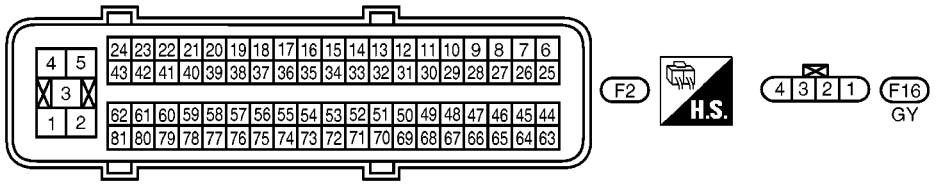

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0304E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
51	W	Manifold absolute pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 1.5V
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	Approximately 1.2V

Diagnostic Procedure

EBS00OSV

1. CHECK INTAKE AIR LEAK

Listen for an intake air leak after the air cleaner element.

OK or NG

OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK VACUUM HOSE

1. Check intake manifold vacuum hoses for clogging or disconnection. Refer to EC-483, "Vacuum Hose Drawing" .

OK or NG

OK >> GO TO 3.
NG >> Repair or replace.

3. CHECK MAP SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect manifold absolute pressure sensor harness connector.
3. Turn ignition switch ON.

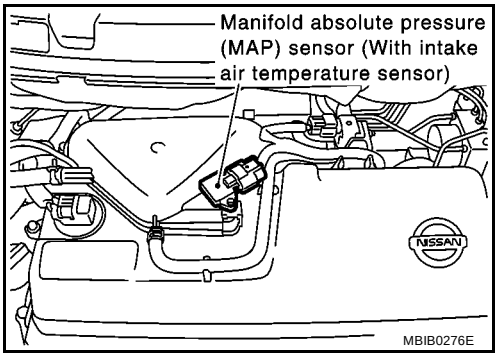

4. Check voltage between manifold absolute pressure sensor terminal 2 and ground.

Voltage: Approximately 5V

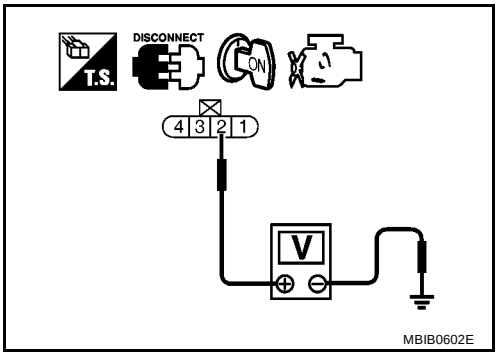

OK or NG

OK >> GO TO 4.
NG >> Repair harness or connectors.

4. CHECK MAP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between manifold absolute pressure sensor terminal 4 and ECM terminal 56. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK MAP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between manifold absolute pressure sensor terminal 1 and ECM terminal 51.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK MAP SENSOR

Refer to EC-578, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Repair or replace sensor.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P1211 TCS CONTROL UNIT

PFP:47850

Description

EBS010DD

The malfunction information related to TCS is transferred through the CAN communication line from “ABS actuator and electric unit (control unit)” to ECM.
Be sure to erase the malfunction information such as DTC not only for “ABS actuator and electric unit (control unit)” but also for ECM after TCS related repair.

On Board Diagnosis Logic

EBS010DE

Freeze frame data is not stored in the ECM for this self-diagnosis.
The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1211 1211	TCS control unit	ECM receives a malfunction information from “ABS actuator and electric unit (control unit)”.	● ABS actuator and electric unit (control unit) ● TCS related parts

DTC Confirmation Procedure

EBS010DF

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for at least 60 seconds.
4. If 1st trip DTC is detected, go to EC-687, "Diagnostic Procedure"
.

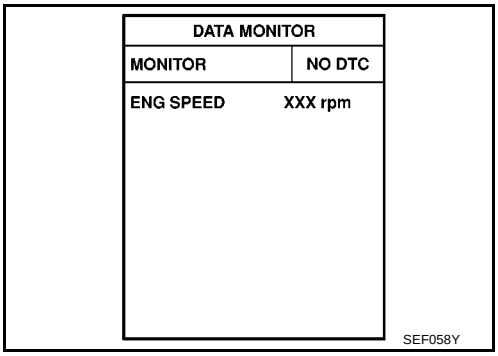

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Diagnostic Procedure

EBS010DG

Go to BRC-8, "TROUBLE DIAGNOSIS" (models without ESP) or BRC-61, "TROUBLE DIAGNOSIS" (models with ESP).

DTC P1212 TCS COMMUNICATION LINE

PFP:47850

Description

EBS010DH

NOTE:
If DTC P1212 is displayed with DTC U1000 or U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-572, "DTC U1000, U1001 CAN COMMUNICATION LINE" .
This CAN communication line is used to control the smooth engine operation during the TCS operation. Pulse signals are exchanged between ECM and “ABS actuator and electric unit (control unit)”.
Be sure to erase the malfunction information such as DTC not only for “ABS actuator and electric unit (control unit)” but also for ECM after TCS related repair.

On Board Diagnosis Logic

EBS010DI

The MI will not light up for this self-diagnosis.
Freeze frame data is not stored in the ECM for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1212 1212	TCS communication line	ECM can not receive the information from “ABS actuator and electric unit (control unit)” continuously.	● Harness or connectors (The CAN communication line is open or shorted.) ● ABS actuator and electric unit (control unit). ● Dead (Weak) battery

DTC Confirmation Procedure

EBS010DJ

TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for at least 10 seconds.
4. If a 1st trip DTC is detected, go to EC-688, "Diagnostic Procedure" .

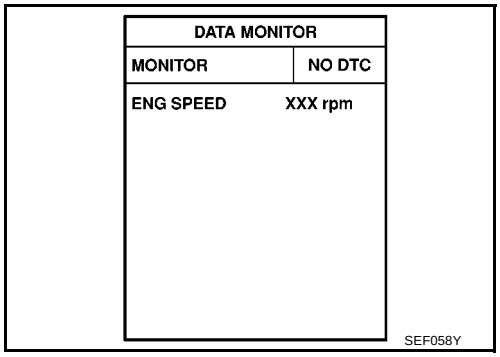

WITH GST

Follow the procedure “WITH CONSULT-II” above.

Diagnostic Procedure

EBS010DK

1. CHECK “ABS ACTUATTOR AND ELECTRIC UNIT (CONTROL UNIT)” FUNCTION

Refer to BRC-8, "TROUBLE DIAGNOSIS" (models without ESP) or BRC-61, "TROUBLE DIAGNOSIS" (models with ESP).

>> **INSPECTION END**

DTC P1217 ENGINE OVER TEMPERATURE

PFP:00000

System Description

EBS00OOM

NOTE:
If DTC P1217 is displayed with DTC U1000, U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to EC-572, "DTC U1000, U1001 CAN COMMUNICATION LINE" .

COOLING FAN CONTROL

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1	Cooling fan control	IPDM E/R (Cooling fan relay)
Battery	Battery voltage*1		
Vehicle speed signal	Vehicle speed*2		
Engine coolant temperature sensor	Engine coolant temperature		
Air conditioner switch*3	Air conditioner ON signal*2		
Refrigerant pressure sensor*3	Refrigerant pressure		

*1: ECM determines the start signal status by the signals of engine speed and battery voltage.
*2: This signal is sent to ECM through CAN communication line.
*3: Models with air conditioner.

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has 3-step control [HIGH/LOW/OFF] (models with A/C) or 2 step control [ON/OFF] (models without A/C).
The ECM controls cooling fan relays through CAN communication line.

OPERATION
(Models with A/C)

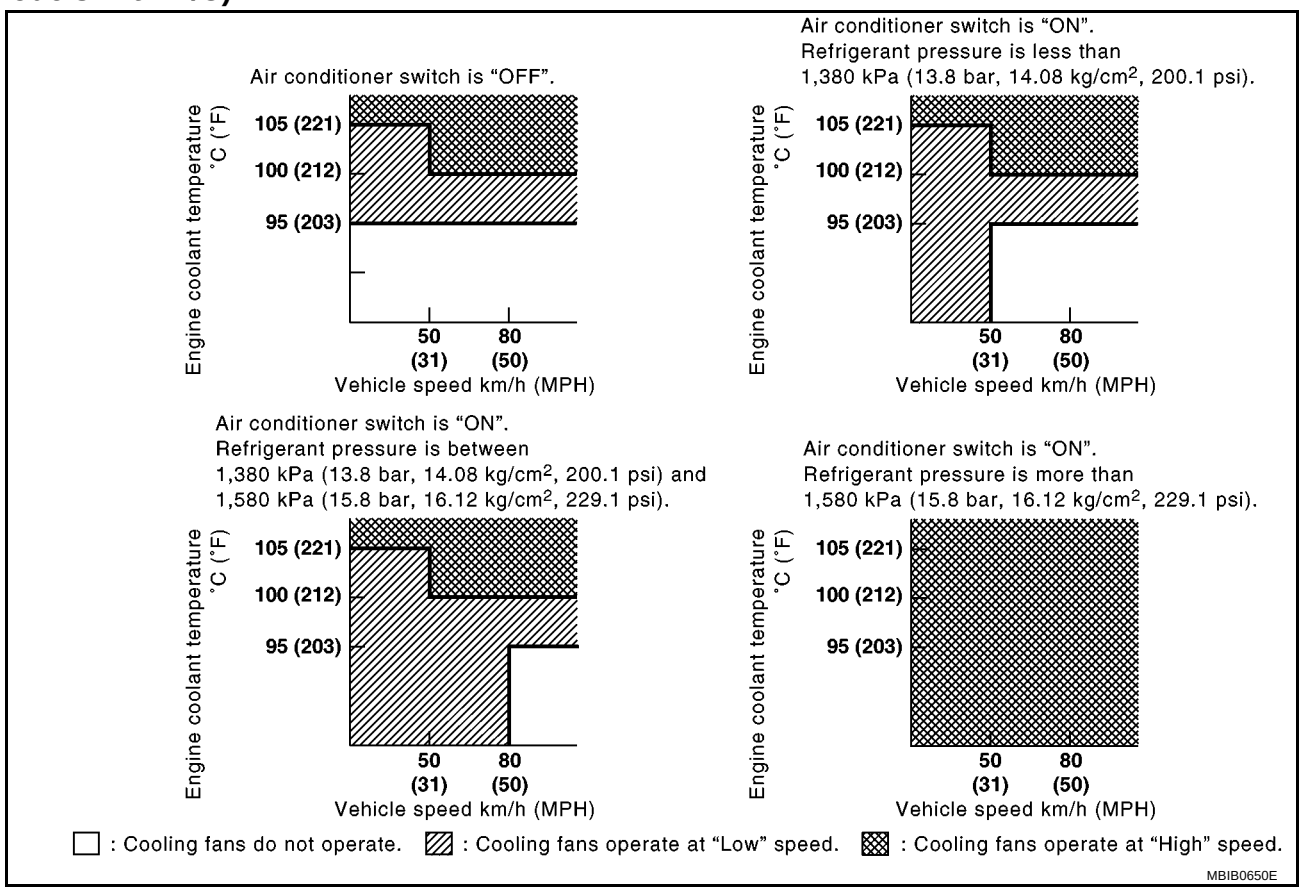

(Models without A/C)

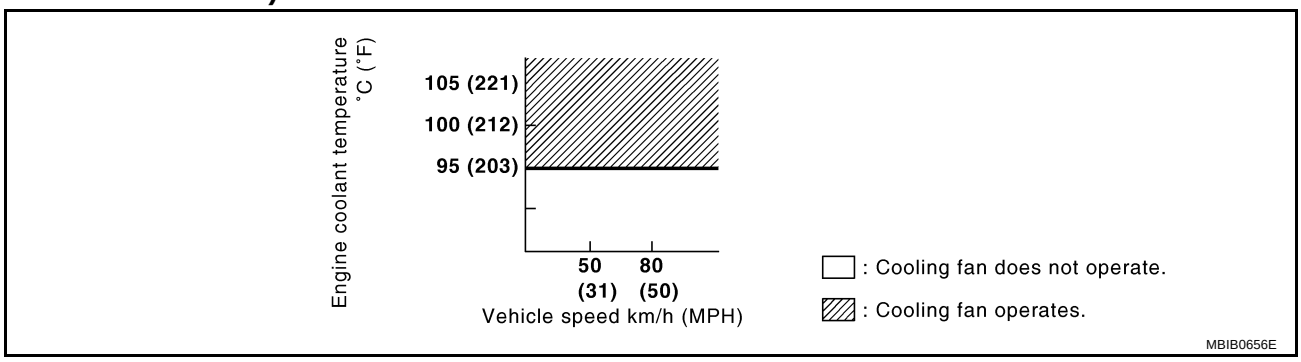

CONSULT-II Reference Value in Data Monitor Mode

EBS00OON

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
AIR COND SIG	● Engine: After warming up, idle the engine	Air conditioner switch: OFF	OFF
		Air conditioner switch: ON (Compressor operates.)	ON
COOLING FAN	(Models with A/C) ● Engine: After warming up, idle the engine ● Air conditioner switch: OFF	Engine coolant temperature is 94°C (201°F) or less	OFF
		Engine coolant temperature is between 95°C (203°F) and 104°C (210°F)	LOW*
		Engine coolant temperature is 105°C (212°F) or more	HI*

*:Models without air conditioner, cooling fan operates only ON and OFF operation, but CONSULT-II display will change OFF, LOW and HI depends on engine coolant temperature.

On Board Diagnosis Logic

EBS00OOO

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise. When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1217 1217	Engine over temperature (Overheat)	● Cooling fan does not operate properly (Overheat). ● Cooling fan system does not operate properly (Overheat). ● Engine coolant was not added to the system using the proper filling method. ● Engine coolant is not within the specified range.	● Harness or connectors (The cooling fan circuit is open or shorted.) ● Cooling fan ● Radiator hose ● Radiator ● Radiator cap ● Water pump ● Thermostat For more information, refer to EC-702, "Main 12 Causes of Overheating" .

CAUTION:

When a malfunction is indicated, be sure to replace the coolant. Refer to CO-8, "Changing Engine coolant" . Also, replace the engine oil. Refer to LU-5, "Changing Engine Oil" .

1. **Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA-20, "Engine Coolant Mixture Ratio" .**
2. **After refilling coolant, run engine to ensure that no water-flow noise is emitted.**

Overall Function Check

EBS00OOP

Use this procedure to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

WITH CONSULT-II

1. Check the coolant level in the reservoir tank and radiator.
   Allow engine to cool before checking coolant level.
   If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to EC-695, "Diagnostic Procedure" .
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to EC-695, "Diagnostic Procedure" .
3. Turn ignition switch ON.

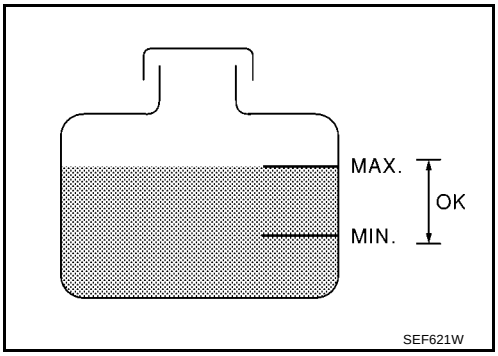

4. Perform “COOLING FAN” in “ACTIVE TEST” mode with CONSULT-II.
5. If the results are NG, go to EC-695, "Diagnostic Procedure" .

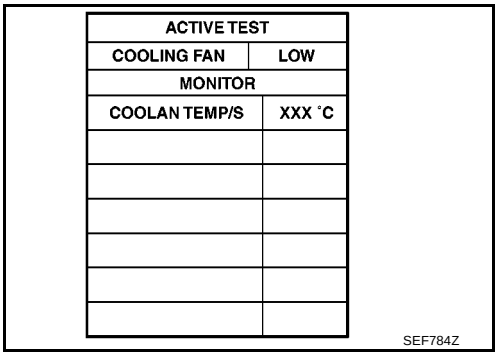

WITHOUT CONSULT-II

(Models with air conditioner)

1. Check the coolant level in the reservoir tank and radiator.
   Allow engine to cool before checking coolant level.
   If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to EC-695, "Diagnostic Procedure" .
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to EC-695, "Diagnostic Procedure" .
3. Start engine.
   Be careful not to overheat engine.
4. Set temperature control lever to full cold position.
5. Turn air conditioner switch ON.
6. Turn blower fan switch ON.
7. Run engine at idle for a few minutes with air conditioner operating.
   Be careful not to overheat engine.

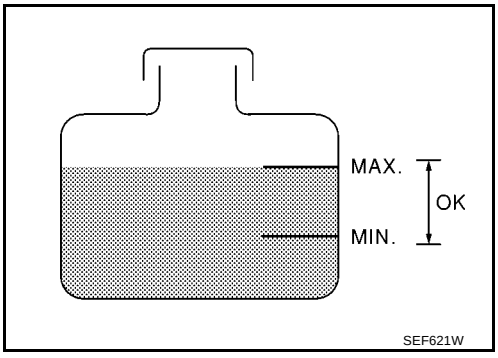

8. Make sure that cooling fans operates at low speed.
   If NG, go to EC-695, "Diagnostic Procedure" .
   If OK, go to the following step.
9. Turn ignition switch OFF.
10. Turn air conditioner switch and blower fan switch OFF.
11. Disconnect engine coolant temperature sensor harness connector.
12. Connect 150Ω resistor to engine coolant temperature sensor harness connector.

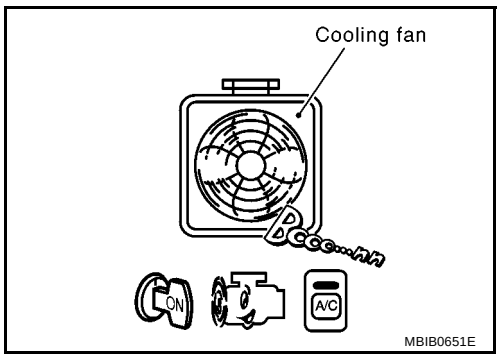

13. Restart engine and make sure that cooling fan operates at higher speed than low speed.
    Be careful not to overheat engine.
14. If NG, go to EC-695, "Diagnostic Procedure" .

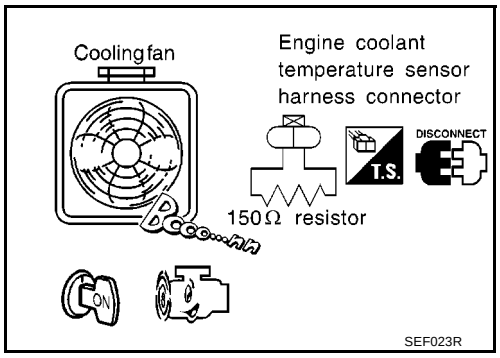

(Models without air conditioner)

1. Check the coolant level in the reservoir tank and radiator.
   Allow engine to cool before checking coolant level.
   If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to EC-695, "Diagnostic Procedure" .
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to EC-695, "Diagnostic Procedure" .
3. Disconnect engine coolant temperature sensor harness connector.
4. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
5. Start engine and make that cooling fan operates. Be careful not to overheat engine.
6. If NG, go to EC-695, "Diagnostic Procedure" .

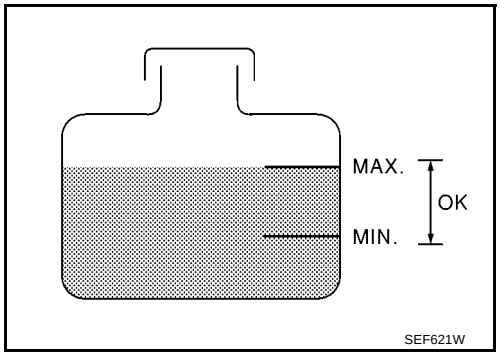

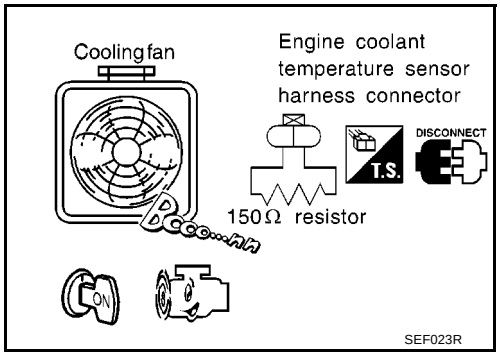

Wiring Diagram
WITH AIR CONDITIONER

EBS00OOQ

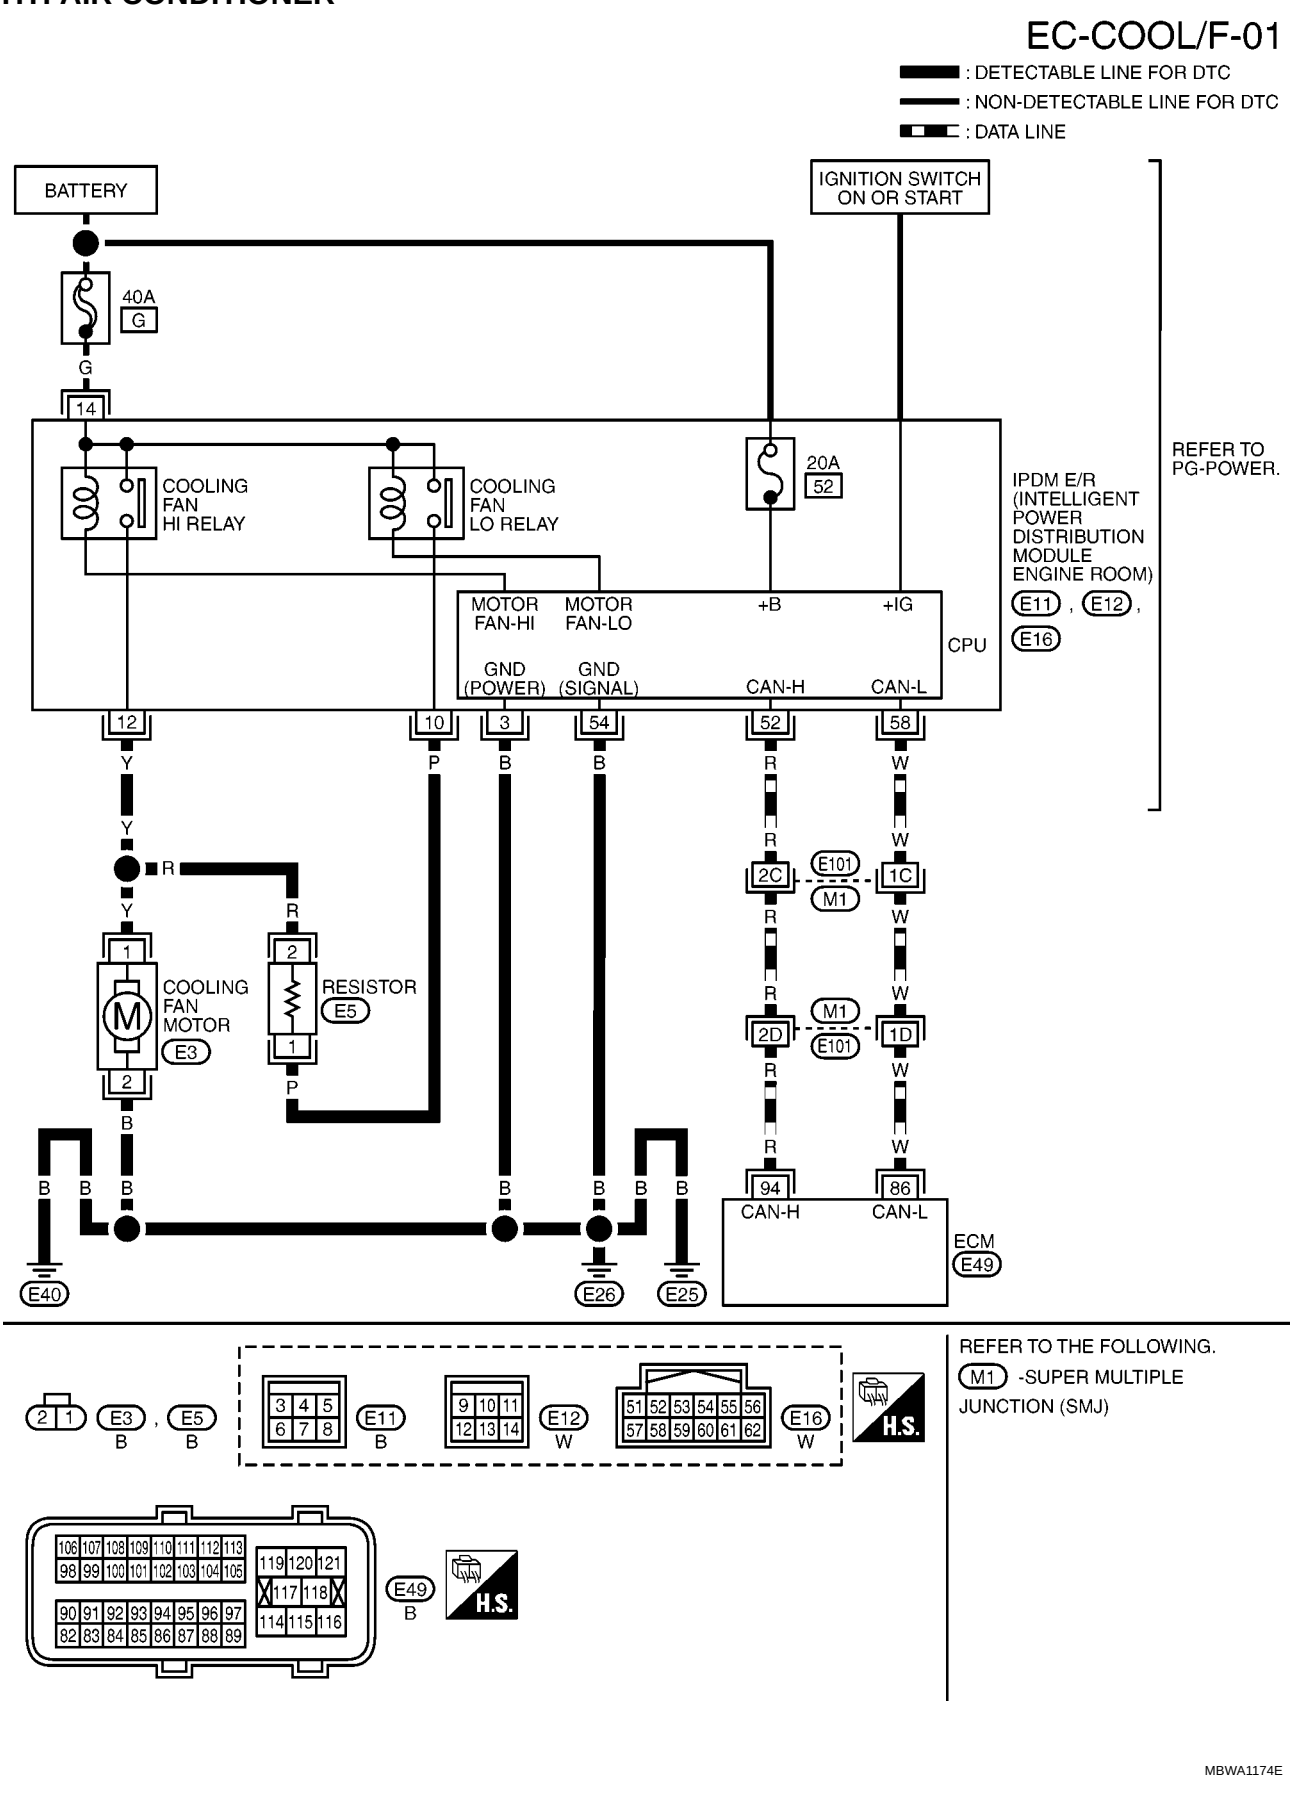

MBWA1174E

WITHOUT AIR CONDITIONER

EC-COOL/F-02

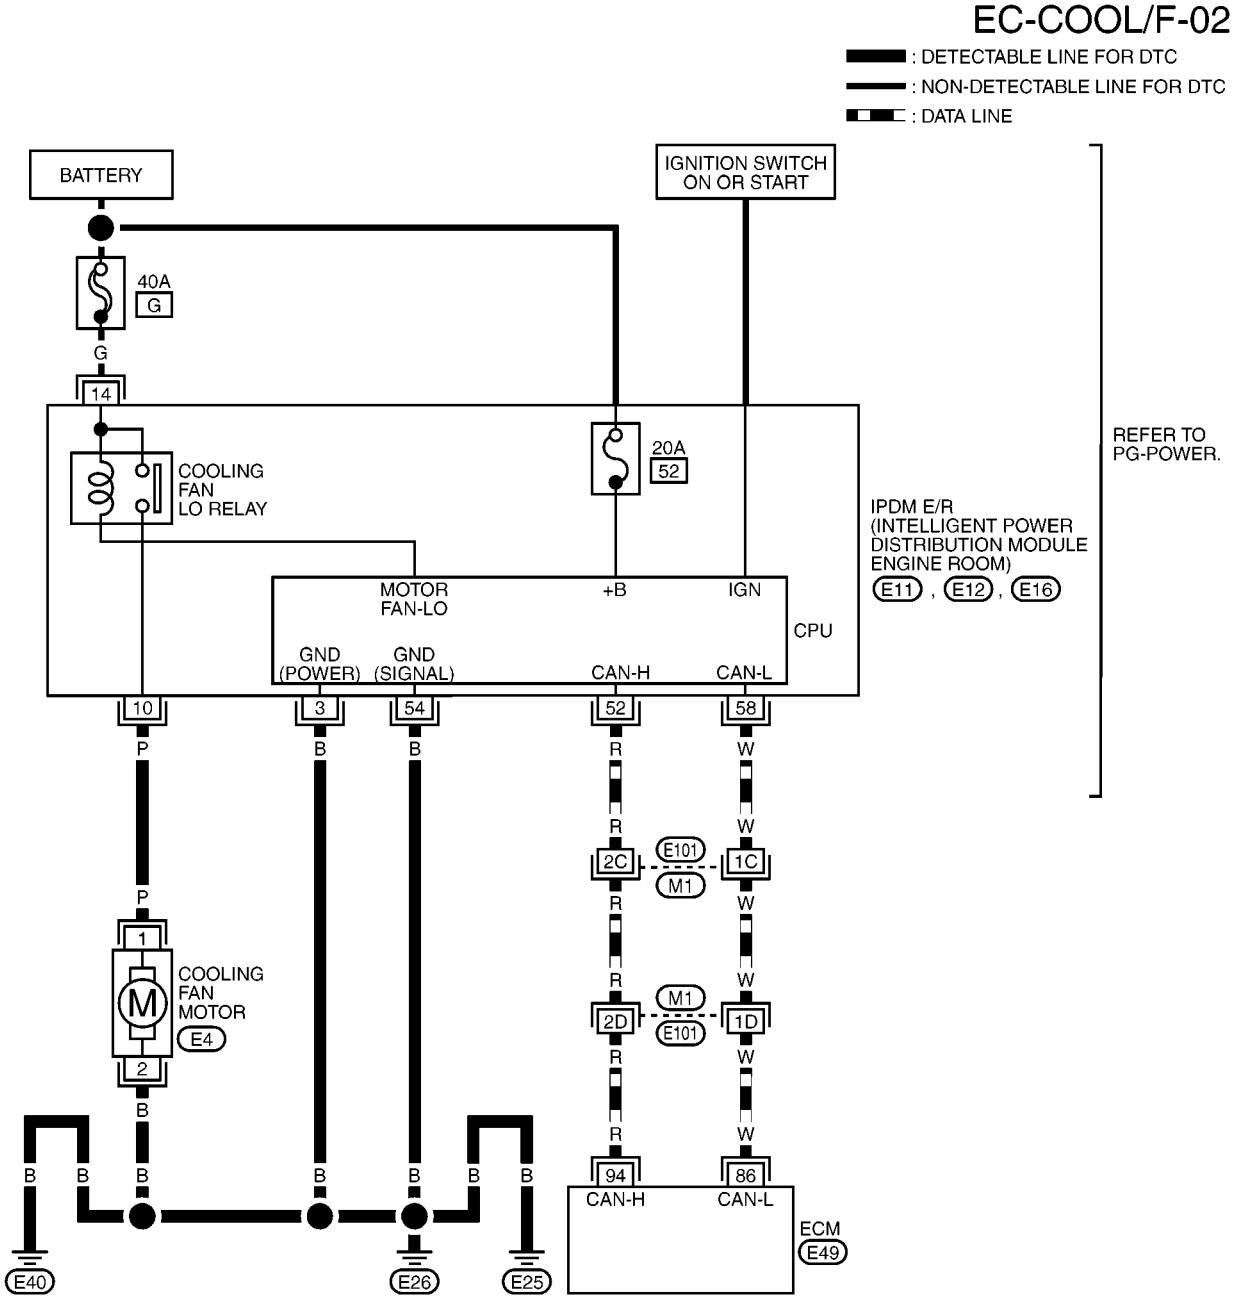

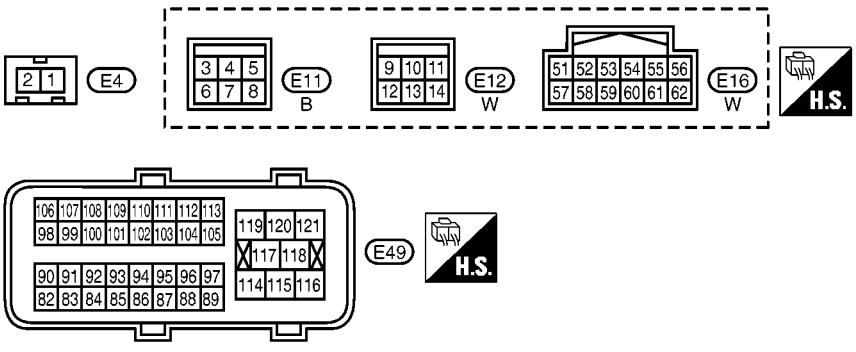

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0290E

Diagnostic Procedure

EBS00OOR

PROCEDURE FOR MODELS WITH AIR CONDITIONER

1. INSPECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.
No >> GO TO 4.

2. CHECK COOLING FAN LOW SPEED OPERATION

With CONSULT-II

1. Turn ignition switch ON.
2. Perform “COOLING FAN” in “ACTIVE TEST” mode with CONSULT-II and touch “LOW” on the CONSULT-II screen.
3. Make sure that cooling fan operates at low speed.

OK or NG

OK >> GO TO 3.
NG >> Check cooling fan low speed control circuit. (Go to EC-700, "PROCEDURE A" .)

ACTIVE TEST	
COOLING FAN	LOW
MONITOR	
COOLAN TEMP/S	XXX °C

SEF784Z

3. CHECK COOLING FAN HIGH SPEED OPERATION

With CONSULT-II

1. Touch “HIGH”on the CONSULT-II screen.
2. Make sure that cooling fan operates at higher speed than low speed.

OK or NG

OK >> GO TO 6.
NG >> Check cooling fan high speed control circuit. (Go to EC-700, "PROCEDURE A" .)

ACTIVE TEST	
COOLING FAN	HIGH
MONITOR	
COOLAN TEMP/S	XXX °C

SEF785Z

4. CHECK COOLING FAN LOW SPEED OPERATION

Without CONSULT-II

1. Start engine and let it idle.
2. Turn air conditioner switch ON.
3. Turn blower fan switch ON.
4. Make sure that cooling fan operates at low speed.

OK or NG

OK >> GO TO 5.
NG >> Check cooling fan low speed control circuit. (Go to EC-700, "PROCEDURE A" .)

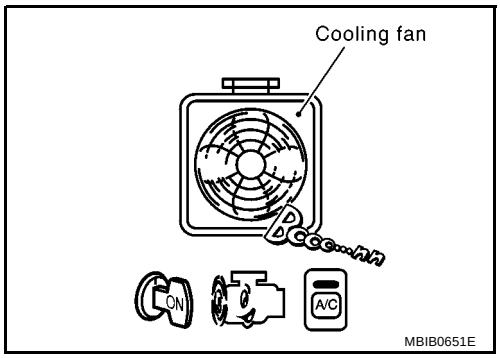

5. CHECK COOLING FAN HIGH SPEED OPERATION

Without CONSULT-II

1. Turn ignition switch OFF.
2. Turn air conditioner switch and blower fan switch OFF.
3. Disconnect engine coolant temperature sensor harness connector.
4. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
5. Restart engine and make sure that cooling fan operates at higher speed than low speed.

OK or NG

OK >> GO TO 6.
NG >> Check cooling fan high speed control circuit. (Go to EC-700, "PROCEDURE A" .)

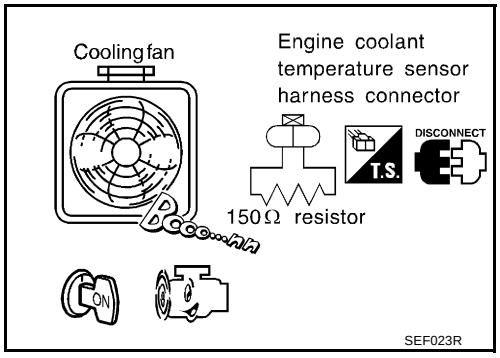

6. CHECK COOLING SYSTEM FOR LEAK

Apply pressure to the cooling system with a tester, and check if the pressure drops.

Testing pressure: 157 kPa (1.57 bar, 1.6 kg/cm^2 , 23psi)

CAUTION:
Higher than the specified pressure may cause radiator damage.

Pressure should not drop.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

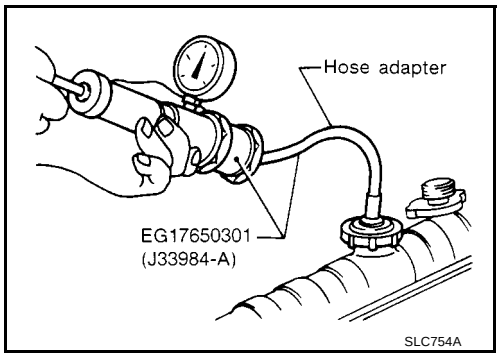

7. DETECT MALFUNCTIONING PART

Check the following for leak.

- Hose
- Radiator
- Water pump (Refer to CO-21, "WATER PUMP" .)

>> Repair or replace.

8. CHECK RADIATOR CAP

Apply pressure to cap with a tester and check radiator cap relief pressure.

Radiator cap relief pressure:

59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm^2 , 9 - 14 psi)

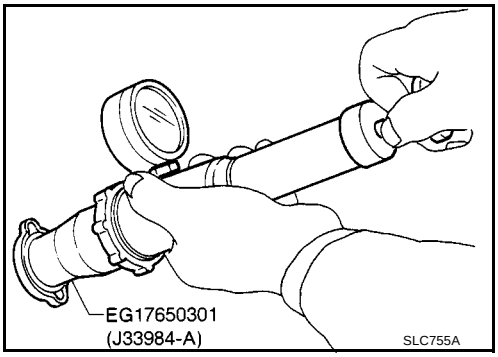

OK or NG

OK >> GO TO 9.
NG >> Replace radiator cap.

9. CHECK THERMOSTAT

1. Remove thermostat.
2. Check valve seating condition at normal room temperatures.
   It should seat tightly.
3. Check valve opening temperature and valve lift.

Valve opening temperature:

80.5 - 83.5 °C (177 - 182 °F)

Valve lift:

More than 8 mm/95 °C (0.31 in/203 °F)

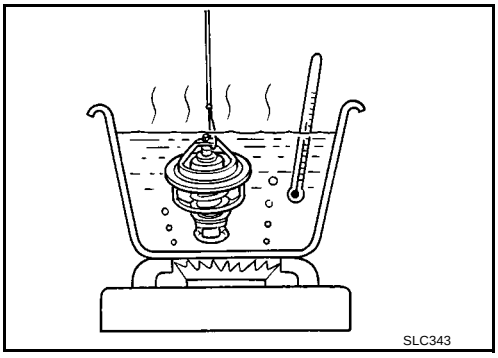

4. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to CO-23, "THERMOSTAT" .

OK or NG

OK >> GO TO 10.
NG >> Replace thermostat.

10. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-584, "Component Inspection" .

OK or NG

OK >> GO TO 11.
NG >> Replace engine coolant temperature sensor.

11. CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to EC-702, "Main 12 Causes of Overheating" .

>> **INSPECTION END**

PROCEDURE FOR MODELS WITHOUT AIR CONDITIONER

1. INSPECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.
No >> GO TO 3.

2. CHECK COOLING FAN OPERATION

With CONSULT-II

1. Turn ignition switch ON.
2. Perform “COOLING FAN” in “ACTIVE TEST” mode with CONSULT-II and touch “ON” on the CONSULT-II screen.
3. Make sure that cooling fan operates.

OK or NG

OK >> GO TO4.
NG >> Check cooling fan low speed control circuit. (Go to EC-700, "PROCEDURE A" .)

ACTIVE TEST	
COOLING FAN	LOW
MONITOR	
COOLAN TEMP/S	XXX °C

SEF784Z

3. CHECK COOLING FAN OPERATION

Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect engine coolant temperature sensor harness connector.
3. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
4. Restart engine and make sure that cooling fan operates.

OK or NG

OK >> GO TO 4.
NG >> Check cooling fan high speed control circuit-1. (Go to EC-700, "PROCEDURE A" .)

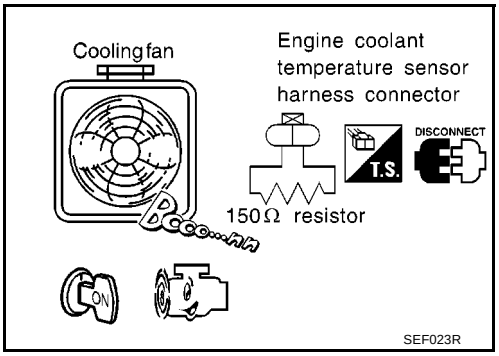

SEF023R

4. CHECK COOLING SYSTEM FOR LEAK

Apply pressure to the cooling system with a tester, and check if the pressure drops.

Testing pressure: 157 kPa (1.57 bar, 1.6 kg/cm^2 , 23psi)

CAUTION:
Higher than the specified pressure may cause radiator damage.

Pressure should not drop.

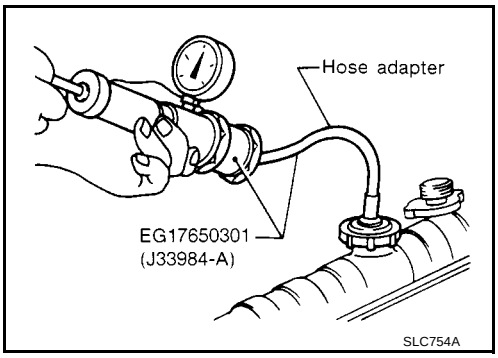

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following for leak.

- Hose
- Radiator
- Water pump (Refer to CO-21, "WATER PUMP" .)

>> Repair or replace.

6. CHECK RADIATOR CAP

Apply pressure to cap with a tester and check radiator cap relief pressure.

Radiator cap relief pressure:

59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm^2 , 9 - 14 psi)

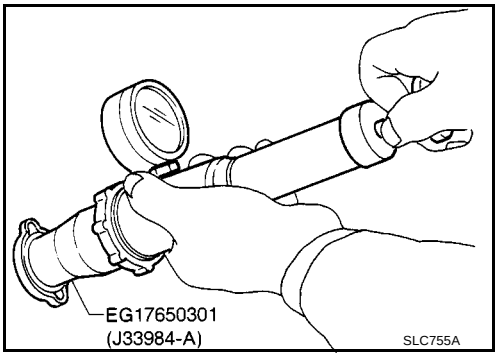

OK or NG

OK >> GO TO 7.
NG >> Replace radiator cap.

7. CHECK THERMOSTAT

1. Remove thermostat.
2. Check valve seating condition at normal room temperatures.
   It should seat tightly.
3. Check valve opening temperature and valve lift.

   Valve opening temperature:

   80.5 - 83.5 °C (177 - 182 °F)

   Valve lift:

   More than 8 mm/95 °C (0.31 in/203 °F)

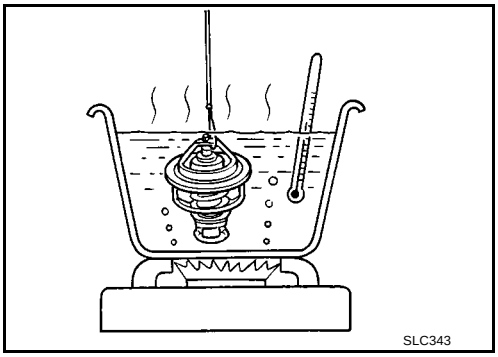

4. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to CO-23, "THERMOSTAT" .

OK or NG

OK >> GO TO 8.
NG >> Replace thermostat.

8. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-584, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace engine coolant temperature sensor.

9. CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to EC-702, "Main 12 Causes of Overheating" .

>> **INSPECTION END**

PROCEDURE A

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E12.
3. Check voltage between IPDM E/R terminal 14 and ground with CONSULT-II or tester.

Voltage: Battery voltage

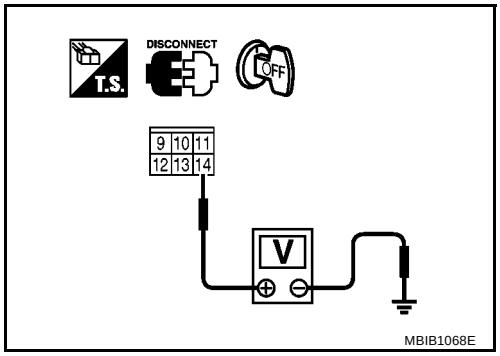

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

2. DETECT MALFUNCTIONING PART

Check the following.

- 40A fusible links
- Harness for open or short between IPDM E/R and battery

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK COOLING FAN MOTORS CIRCUIT

1. Disconnect cooling fan motor harness connector.
2. Check harness continuity between cooling fan motor terminal 1 and IPDM E/R terminal 12 (models with A/C) or 10 (models without A/C), cooling fan motor terminal 2 and ground.
   Refer to wiring diagram.

Continuity should exist.

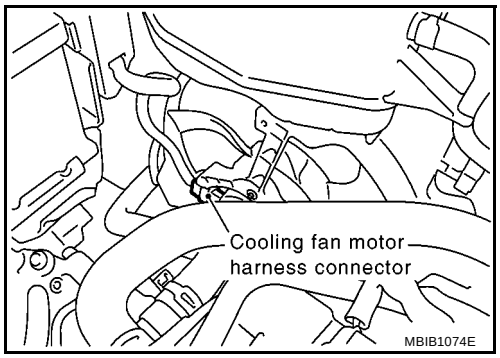

3. Also check harness for short to ground and short to power.
4. For models with air conditioner, check harness continuity between IPDM E/R terminal 10 and cooling fan motor terminal 1.
   Refer to wiring diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness for open or short between cooling fan motor and IPDM E/R
- Harness for open or short between cooling fan motor and ground
- Harness for open or short between resistor and IPDM E/R (models with A/C)
- Harness for open or short between resistor and cooling fan motor (models with A/C)
- Resistor E5 (models with A/C)

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK COOLING FAN MOTORS

Refer to EC-702, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace cooling fan motors.

6. CHECK INTERMITTENT INCIDENT

Perform EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R. Refer to PG-18, "IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)" .
NG >> Repair or replace harness or connector.

Main 12 Causes of Overheating

EBS00OOS

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	● Blocked radiator ● Blocked condenser ● Blocked radiator grille ● Blocked bumper	● Visual	No blocking	—
	2	● Coolant mixture	● Coolant tester	50 - 50% coolant mixture	See MA-20, "Engine Coolant Mixture Ratio" .
	3	● Coolant level	● Visual	Coolant up to MAX level in reservoir tank and radiator filler neck	See CO-8, "LEVEL CHECK" .
	4	● Radiator cap	● Pressure tester	59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm^2 , 9 - 14 psi) (Limit)	See CO-15, "Checking Radiator Cap" .
ON*2	5	● Coolant leaks	● Visual	No leaks	See CO-8, "LEAK CHECK" .
ON*2	6	● Thermostat	● Touch the upper and lower radiator hoses	Both hoses should be hot	See CO-23, "THERMOSTAT" , and CO-11, "RADIATOR" .
ON*1	7	● Cooling fan	● CONSULT-II	Operating	See trouble diagnosis for DTC P1217 (EC-695).
OFF	8	● Combustion gas leak	● Color checker chemical tester 4 Gas analyzer	Negative	—
ON*3	9	● Coolant temperature gauge	● Visual	Gauge less than 3/4 when driving	—
		● Coolant overflow to reservoir tank	● Visual	No overflow during driving and idling	See CO-8, "Changing Engine coolant" .
OFF*4	10	● Coolant return from reservoir tank to radiator	● Visual	Should be initial level in reservoir tank	See CO-8, "LEVEL CHECK" .
OFF	11	● Cylinder head	● Straight gauge feeler gauge	0.1 mm (0.004 in) Maximum distortion (warping)	See EM-59, "CYLINDER HEAD" .
	12	● Cylinder block and pistons	● Visual	No scuffing on cylinder walls or piston	See EM-73, "CYLINDER BLOCK" .

*1: Turn the ignition switch ON.
*2: Engine running at 3,000 rpm for 10 minutes.
*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.
*4: After 60 minutes of cool down time.
For more information, refer to CO-5, "OVERHEATING CAUSE ANALYSIS" .

Component Inspection

EBS00OOT

COOLING FAN MOTOR

1. Disconnect cooling fan motor harness connectors.
2. Supply cooling fan motor terminals with battery voltage and check operation.

	Terminals	
	(+)	(-)
Cooling fan motor	1	2

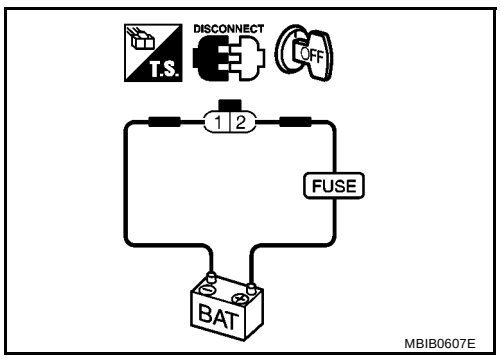

DTC P1223, P1224 TP SENSOR

PFP:16119

Component Description

EBS00OSG

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

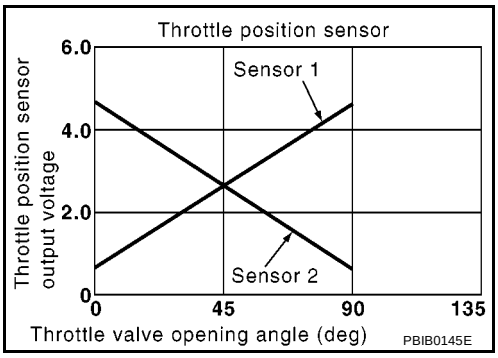

CONSULT-II Reference Value in Data Monitor Mode

EBS00OSH

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T models) 1st (M/T models)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00OSI

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1223 1223	Throttle position sensor 2 circuit low input	An excessively low voltage from the TP sensor 2 is sent to ECM.	● Harness or connectors (The TP sensor 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 2)
P1224 1224	Throttle position sensor 2 circuit high input	An excessively high voltage from the TP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00OSJ

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-706, "Diagnostic Procedure" .

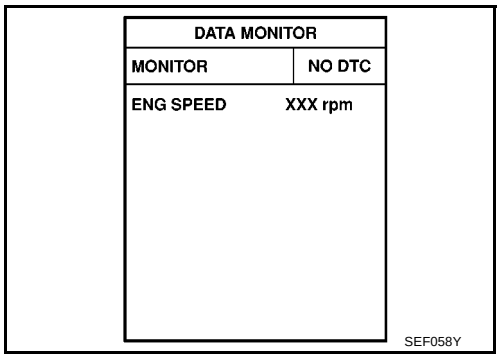

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-706, "Diagnostic Procedure" .

Wiring Diagram

EBS00OSK

EC-TPS2-01

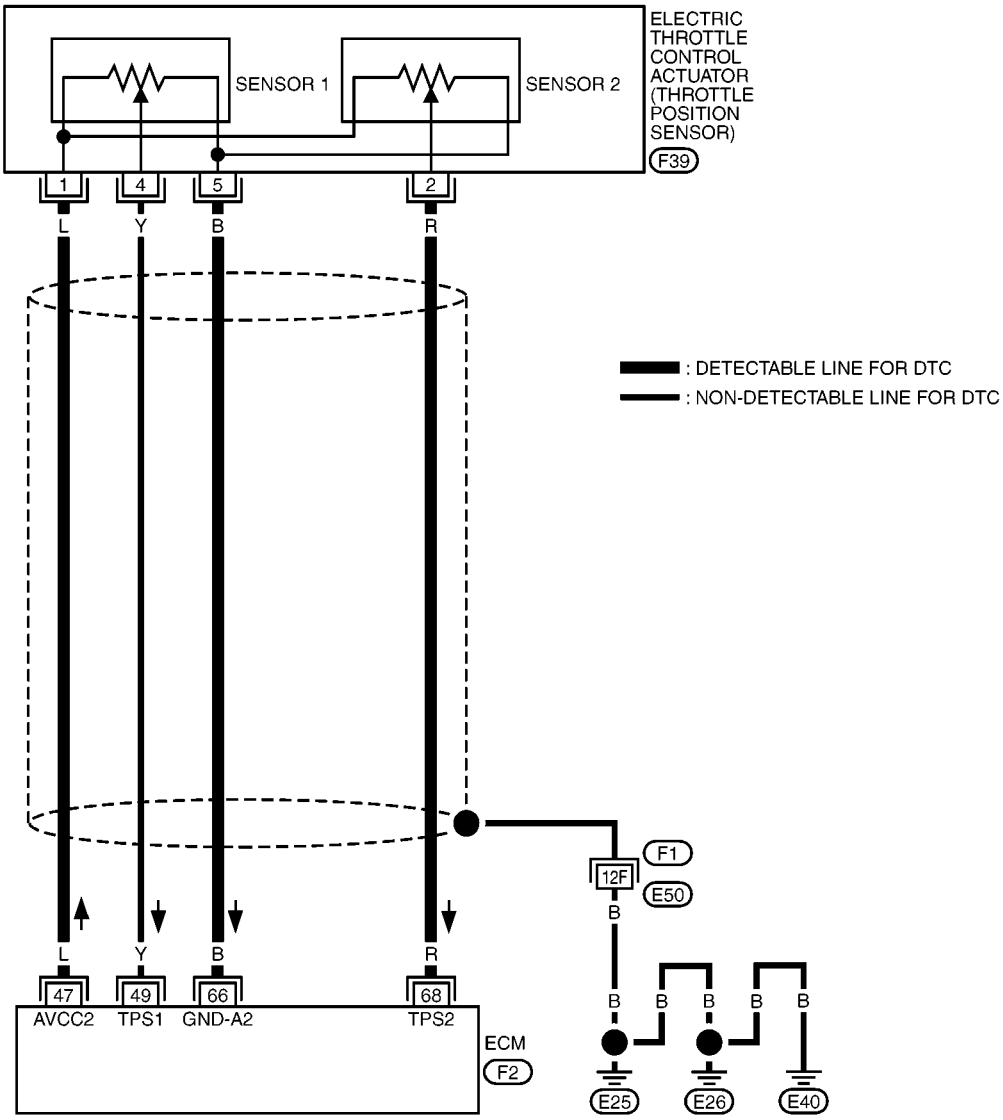

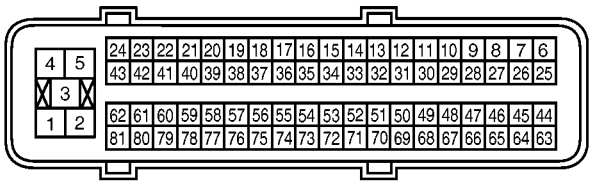

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0291E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS00OSL

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

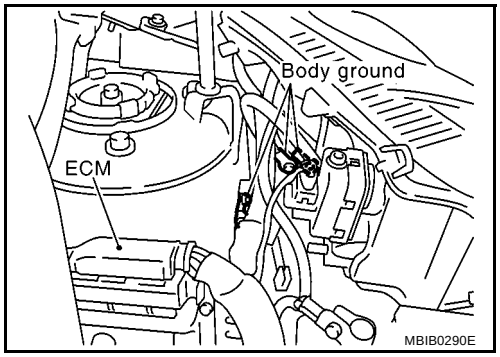

2. CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

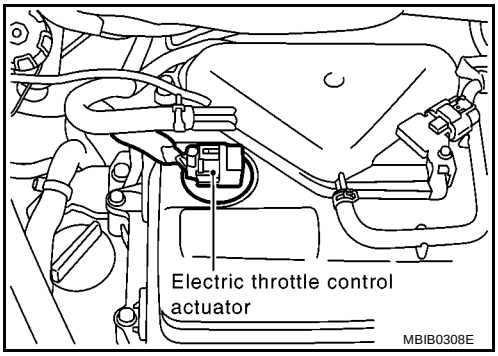

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

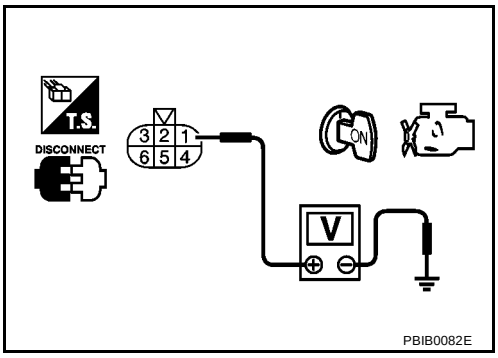

OK or NG

OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-708, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OSM

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

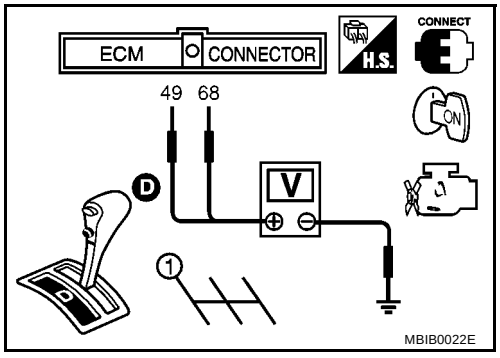

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-503, "Throttle Valve Closed Position Learning" .
8. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00OSN

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1225 TP SENSOR

PFP:16119

Component Description

EBS00OOU

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

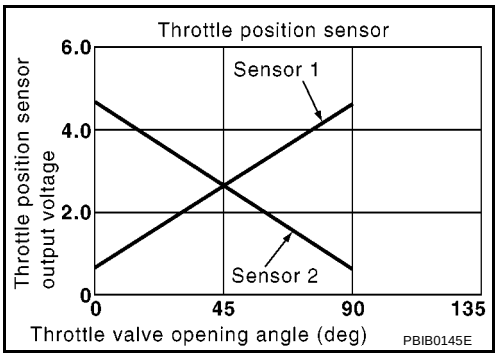

On Board Diagnosis Logic

EBS00OOV

The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1225 1225	Closed throttle position learning performance problem	Closed throttle position learning value is excessively low.	● Electric throttle control actuator (TP sensor 1 and 2)

DTC Confirmation Procedure

EBS00OOW

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds.
4. Turn ignition switch ON.
5. If 1st trip DTC is detected, go to EC-710, "Diagnostic Procedure" .

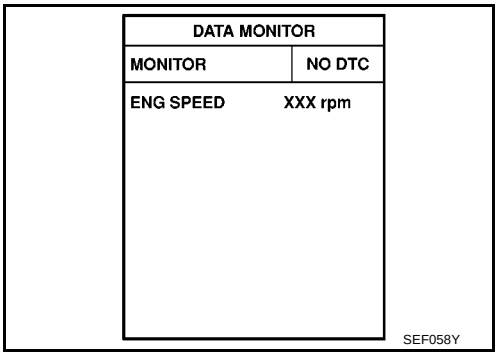

WITHOUT CONSULT-II

1. Turn ignition switch ON.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If 1st trip DTC is detected, go to EC-710, "Diagnostic Procedure" .

Diagnostic Procedure

EBS00OOX

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Turn ignition switch OFF.
2. Remove the intake air duct.
3. Check if foreign matter is caught between the throttle valve and the housing.

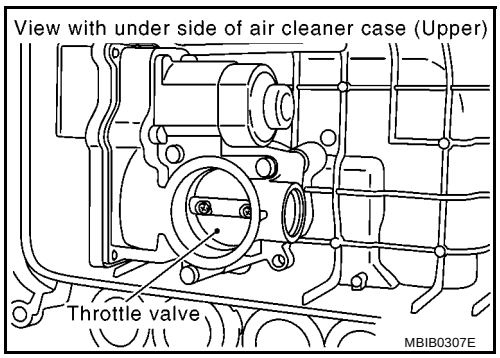

OK or NG

OK >> GO TO 2.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

Remove and Installation

EBS00OOY

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1226 TP SENSOR

PFP:16119

Component Description

EBS00OOZ

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

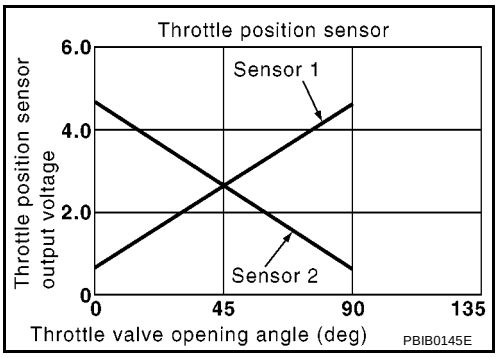

On Board Diagnosis Logic

EBS00OP0

The MI will not light up for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1226 1226	Closed throttle position learning performance problem	Closed throttle position learning is not performed successfully, repeatedly.	● Electric throttle control actuator (TP sensor 1 and 2)

DTC Confirmation Procedure

EBS00OP1

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds.
4. Turn ignition switch ON.
5. Repeat steps 3 and 4 for 32 times.
6. If 1st trip DTC is detected, go to EC-712, "Diagnostic Procedure" .

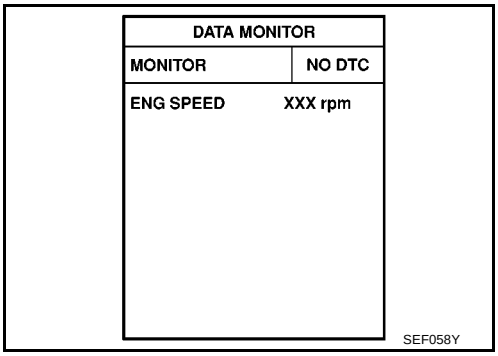

WITHOUT CONSULT-II

1. Turn ignition switch ON.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Repeat step 2 for 32 times.
4. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
5. If 1st trip DTC is detected, go to EC-712, "Diagnostic Procedure" .

Diagnostic Procedure

EBS00OP2

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Turn ignition switch OFF.
2. Remove the intake air duct.
3. Check if foreign matter is caught between the throttle valve and the housing.

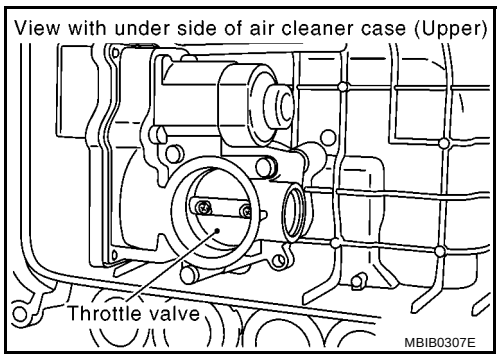

OK or NG

OK >> GO TO 2.
NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

Remove and Installation

EBS00OP3

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P1227, P1228 APP SENSOR

PFP:18002

Component Description

EBS00OP4

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

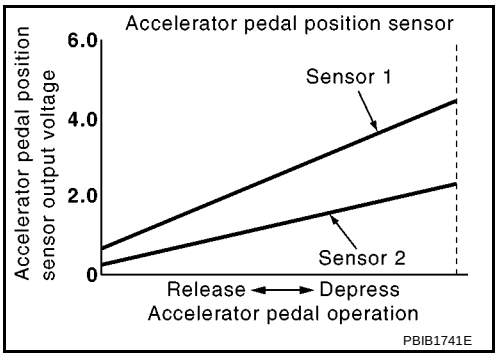

CONSULT-II Reference Value in Data Monitor Mode

EBS00OP5

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differ from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS00OP6

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1227 1227	Accelerator pedal position sensor 2 circuit low input	An excessively low voltage from the APP sensor 2 is sent to ECM.	● Harness or connectors (The APP sensor 2 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 2)
P1228 1228	Accelerator pedal position sensor 2 circuit high input	An excessively high voltage from the APP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS00OP7

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-718, "Diagnostic Procedure" .

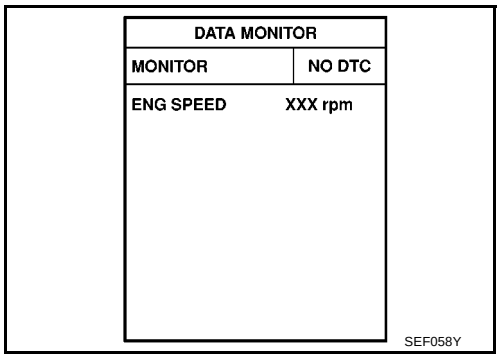

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 seconds.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-718, "Diagnostic Procedure" .

Wiring Diagram
LHD MODELS

EBS00OP8

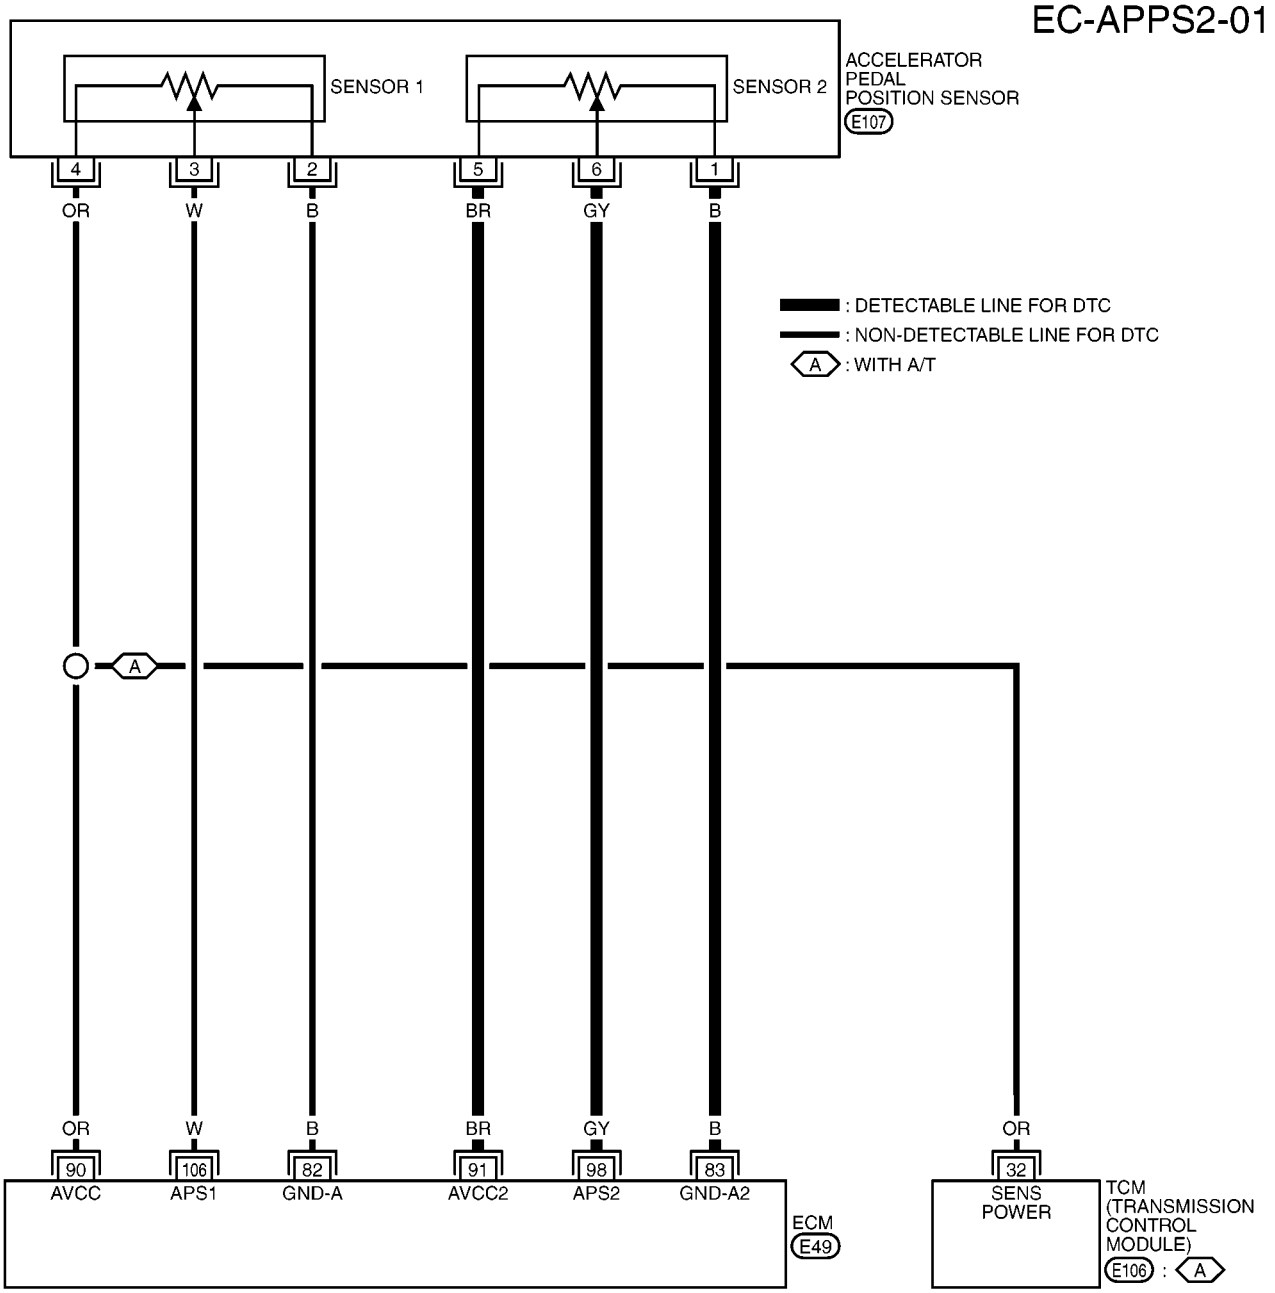

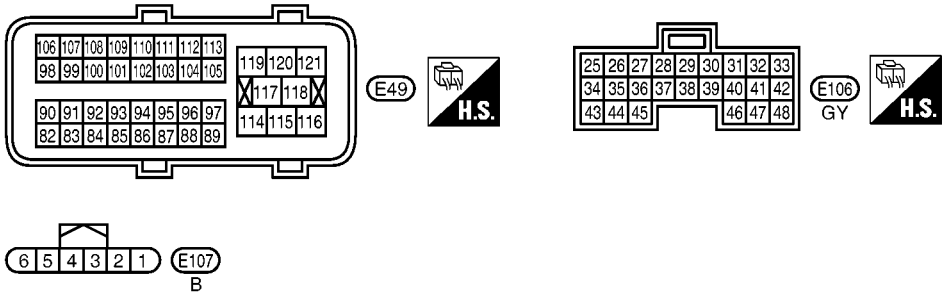

MBWA0292E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS2-02

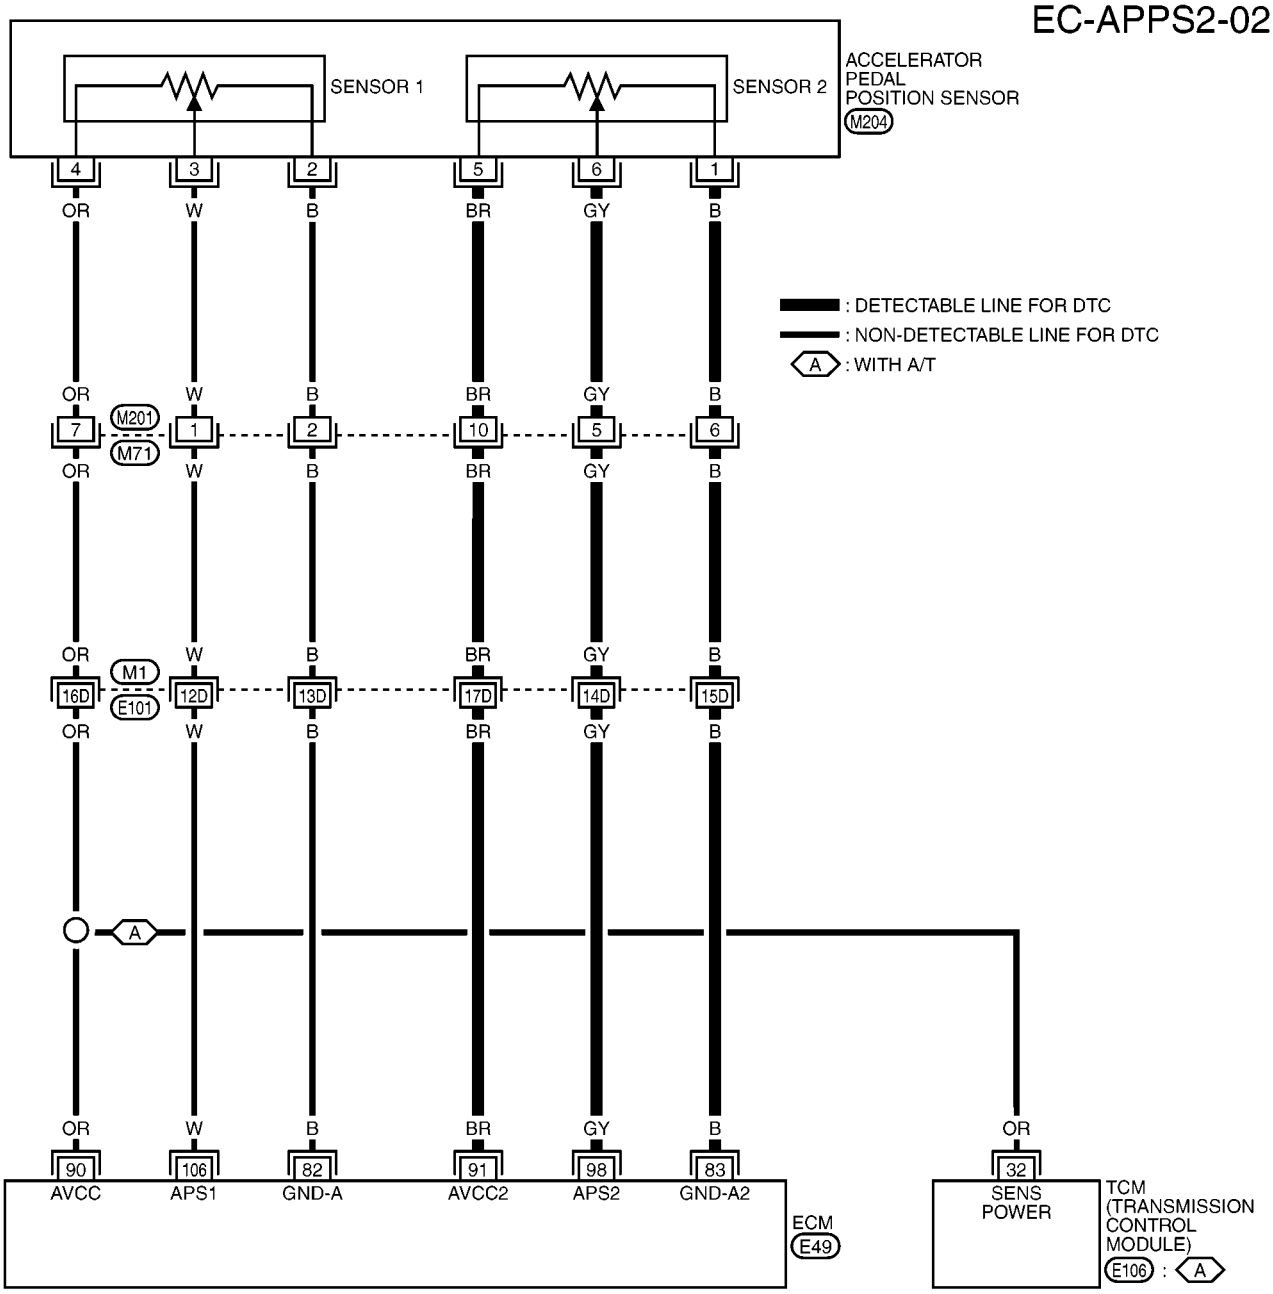

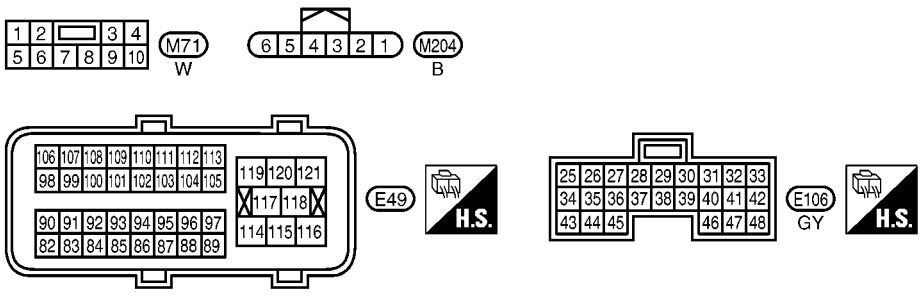

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0293E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS00OP9

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

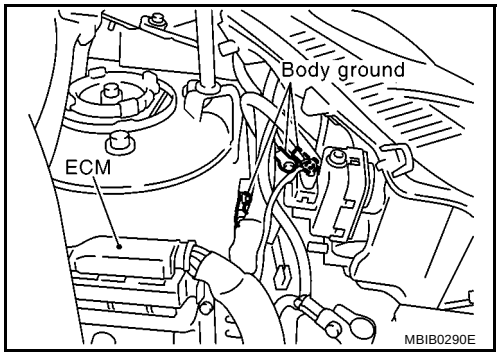

2. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

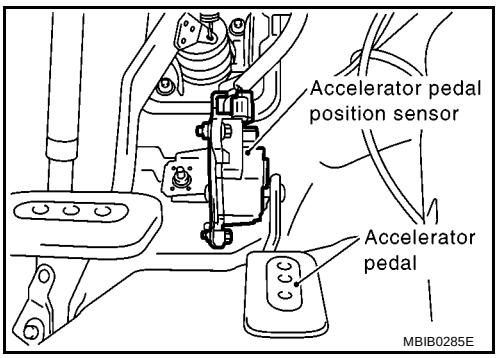

3. Check voltage between APP sensor terminal 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

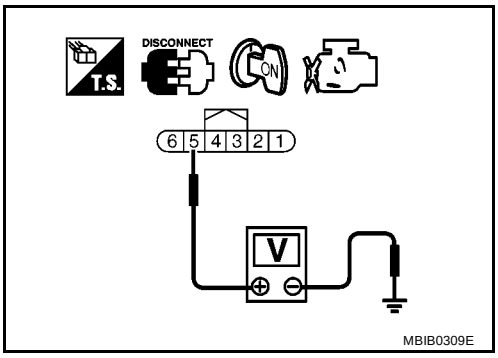

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 83 and APP sensor terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 98 and APP sensor terminal 6.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-720, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .
3. Perform EC-503, "Throttle Valve Closed Position Learning" .
4. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OPA

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

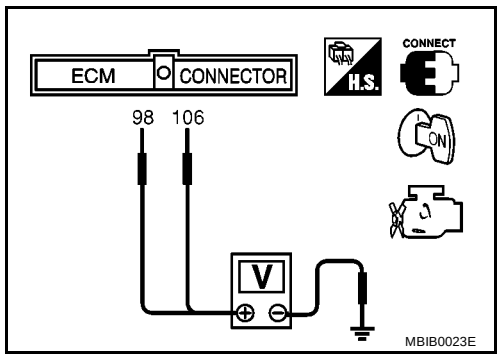

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-503, "Accelerator Pedal Released Position Learning" .
6. Perform EC-503, "Throttle Valve Closed Position Learning" .
7. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS00OPB

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P1229 SENSOR POWER SUPPLY

PFP:16119

On Board Diagnosis Logic

EBS00OPC

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1229 1229	Sensor power supply circuit short	ECM detects a voltage of power source for sensor is excessively low or high.	● Harness or connectors (The TP sensor 1 and 2 circuit is shorted.) ● Electric throttle control actuator (TP sensor 1 and 2) ● ECM pin terminal

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

EBS00OPD

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-724, "Diagnostic Procedure" .

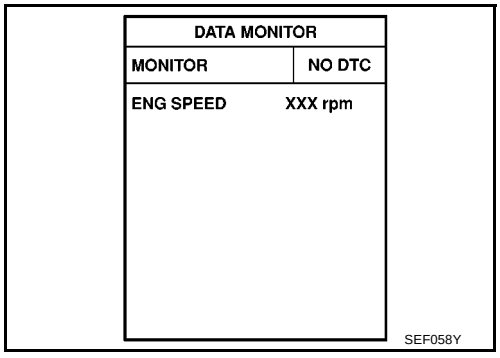

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 seconds.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-724, "Diagnostic Procedure" .

Wiring Diagram

EBS00OPE

EC-SEN/PW-01

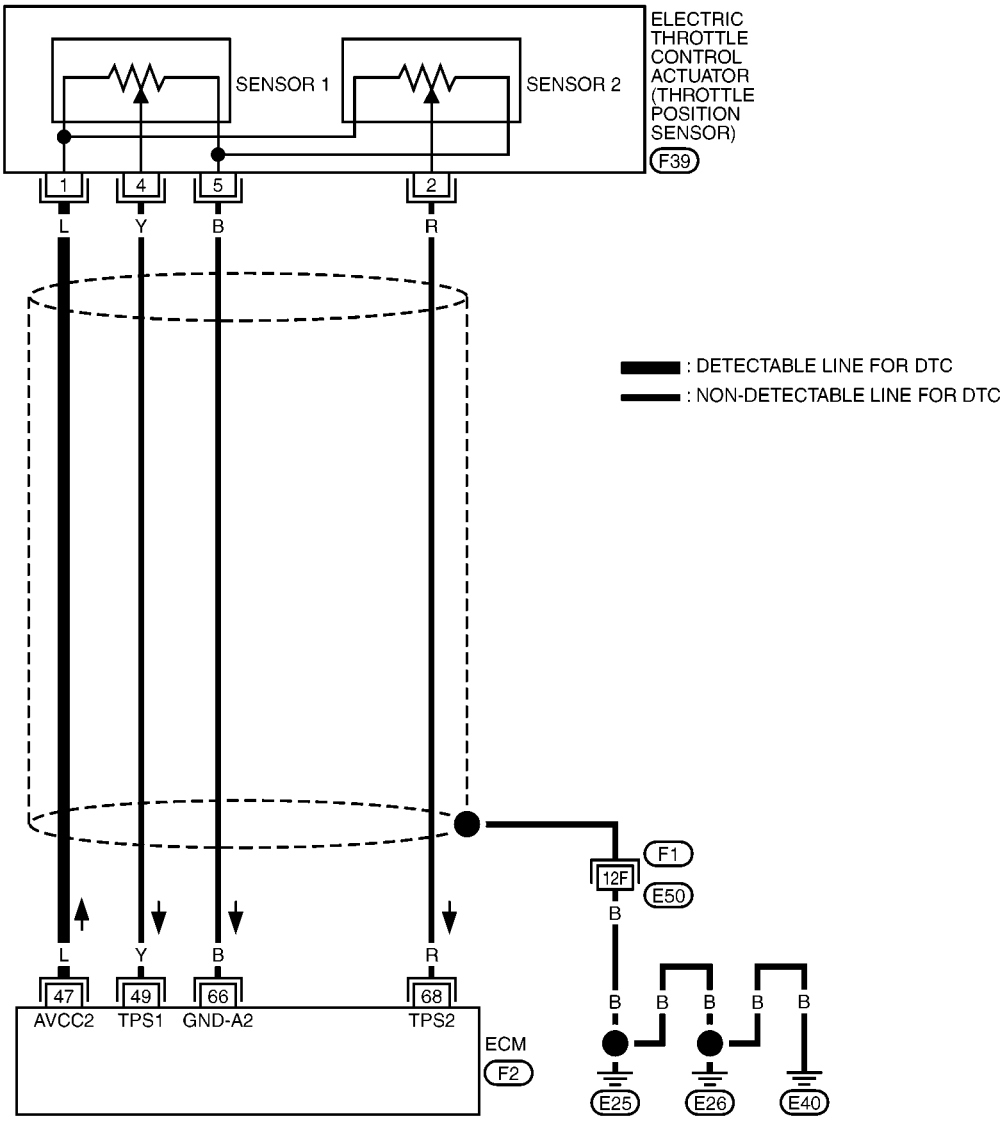

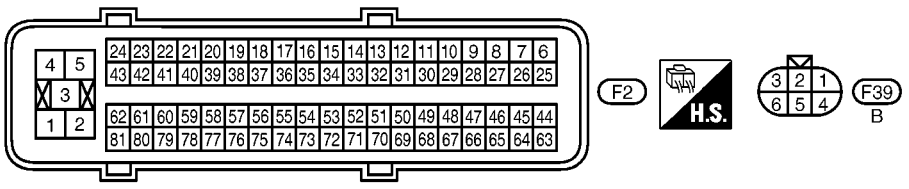

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0463E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V

Diagnostic Procedure

EBS00OPF

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

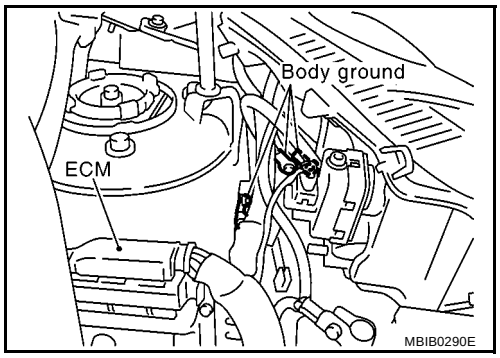

2. CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

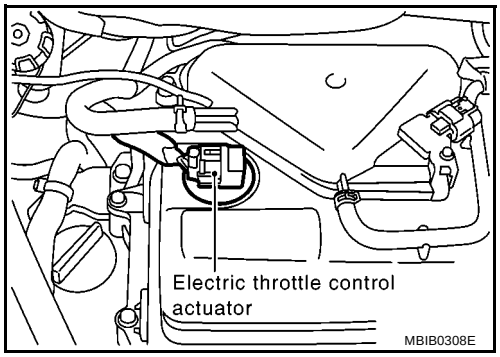

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

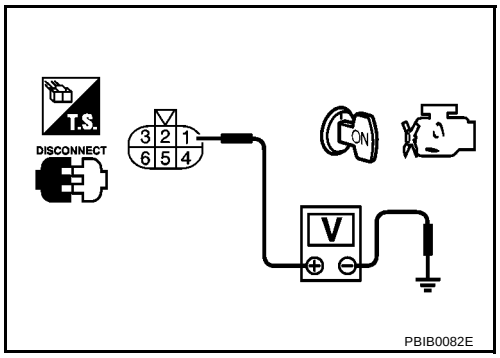

3. CHECK SENSOR POWER SUPPLY CIRCUITS FOR SHORT

Check the following.

- Harness for short to power and short to ground between ECM terminal 47 and electric throttle control actuator terminal 1
- ECM pin terminal

OK or NG

OK >> GO TO 4.
NG >> Repair short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR

Refer to EC-620, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

6. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

DTC P1805 BRAKE SWITCH

PFP:25320

Description

EBS00OPG

Brake switch signal is applied to the ECM through the stop lamp switch when the brake pedal is depressed. This signal is used mainly to decrease the engine speed when the vehicle is driving.

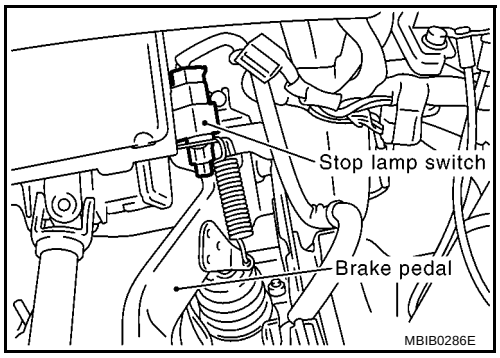

CONSULT-II Reference Value in Data Monitor Mode

EBS00OPH

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
BRAKE SW	● Ignition switch: ON	Brake pedal: Fully released	OFF
		Brake pedal: Slightly depressed	ON

On Board Diagnosis Logic

EBS00OPI

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1805 1805	Brake switch	A brake switch signal is not sent to ECM for an extremely long time while the vehicle is driving.	● Harness or connectors (Stop lamp switch circuit is open or shorted.) ● Stop lamp switch

FAIL-SAFE MODE

EBS00OPJ

When the malfunction is detected, the ECM enters fail-safe mode.

Engine operation condition in fail-fail safe mode	
ECM controls the electric throttle control actuator by regulating the throttle opening to a small range.Therefore,acceleration will be poor.	
Vehicle condition	Driving condition
When engine is idling	Normal
When accelerating	Poor acceleration

DTC Confirmation Procedure

EBS00OPK

WITH CONSULT-II

1. Turn ignition switch ON.
2. Fully depress the brake pedal for at least 5 seconds.
3. Erase the DTC with CONSULT-II.
4. Select “DATA MONITOR” mode with CONSULT-II.
5. If DTC is detected, go to EC-729, "Diagnostic Procedure" .

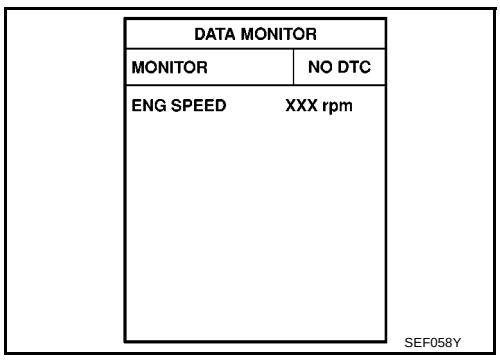

WITHOUT CONSULT-II

1. Turn ignition switch ON.
2. Fully depress the brake pedal at least 5 seconds.
3. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. Refer to EC-510 .
4. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
5. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
6. If DTC is detected, go to EC-729, "Diagnostic Procedure" .

Wiring Diagram

EBS00OPL

EC-BRK/SW-01

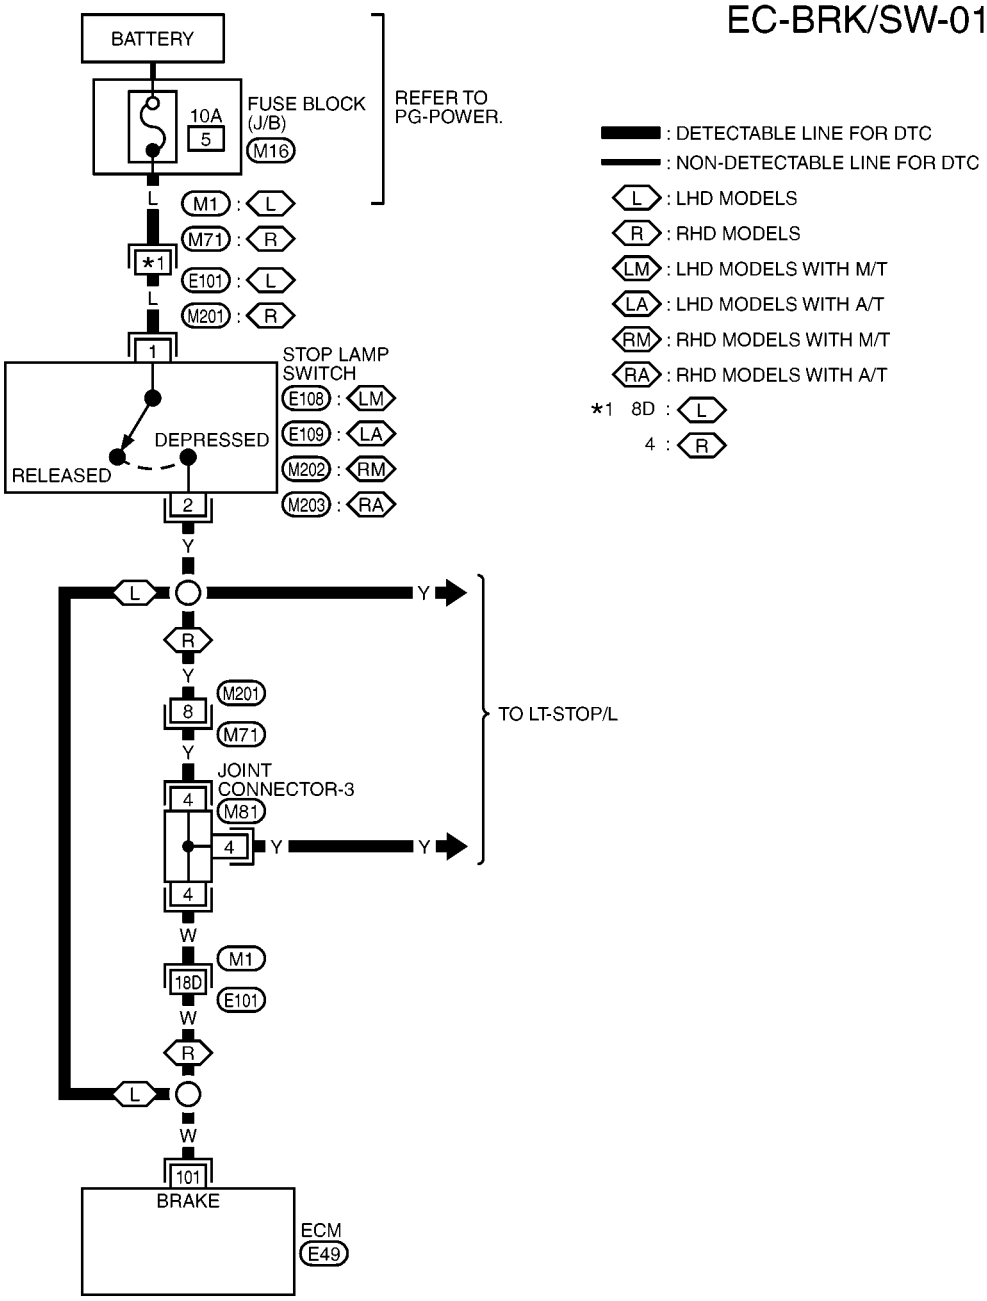



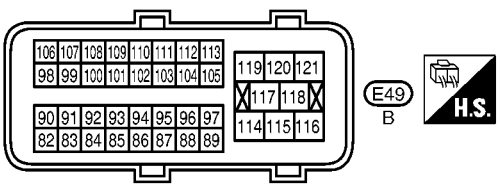

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)

MBWA0574E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
101	W	Stop lamp switch	**[Engine is running]** ● Brake pedal: Fully released	Approximately 0V
			[Engine is running] ● Brake pedal: Depressed	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00OPM

1. CHECK STOP LAMP SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Check the stop lamp when depressing and releasing the brake pedal.

Brake pedal	Stop lamp
Fully released	Not illuminated
Depressed	Illuminated

OK or NG

OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

1. Disconnect stop lamp switch harness connector.

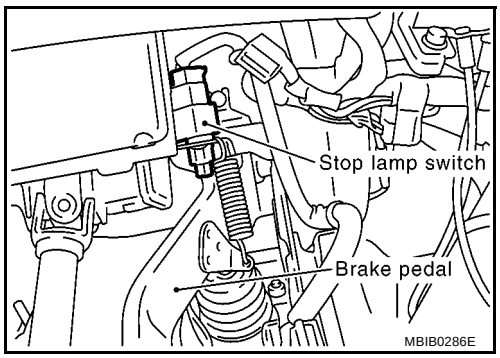

2. Check voltage between stop lamp switch terminal 1 and ground with CONSULT-II or tester.

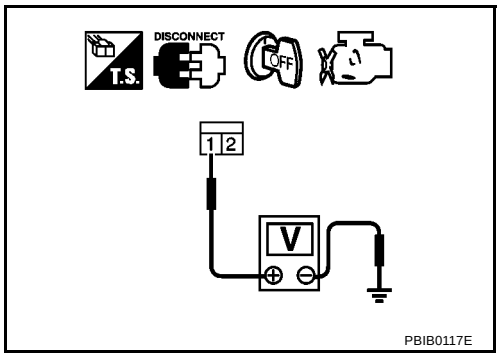

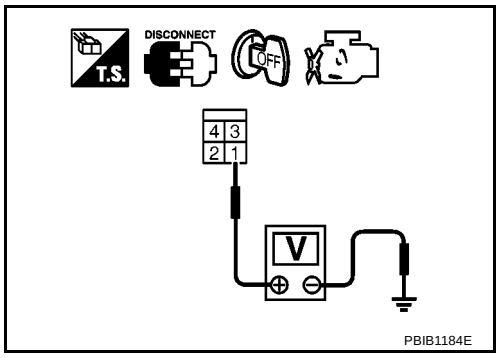

Voltage: Battery voltage

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- 10A fuse
- Fuse block (J/B) connector M16
- Harness connectors M1, E101 (LHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open and short between stop lamp switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 101 and stop lamp switch terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Joint connector-3 (RHD models)
- Harness for open or short between ECM and stop lamp switch

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK STOP LAMP SWITCH

Refer to EC-732, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace stop lamp switch.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OPN

STOP LAMP SWITCH

1. Disconnect stop lamp switch harness connector.

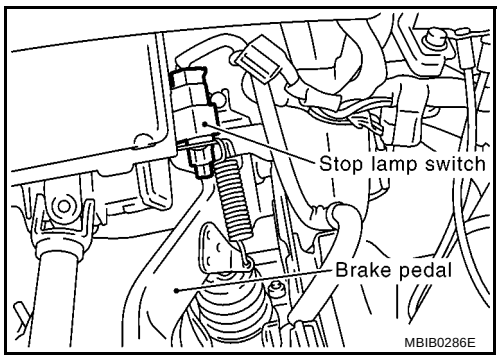

2. Check continuity between stop lamp switch terminals 1 and 2 under the following conditions.

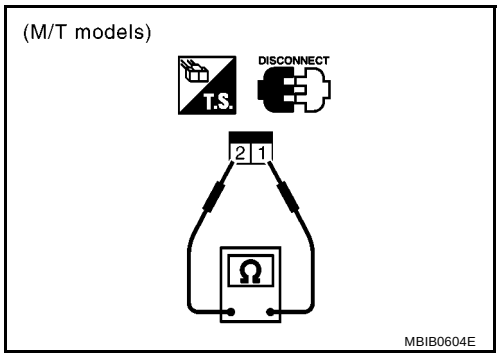

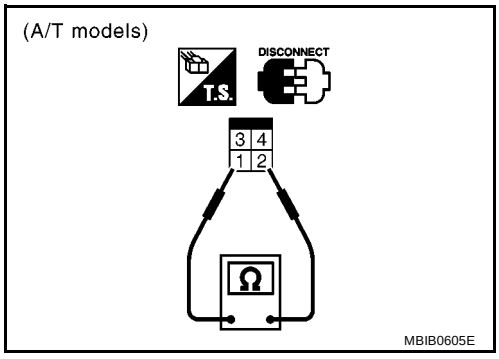

Conditions	Continuity
Brake pedal fully released	Should not exist.
Brake pedal depressed	Should exist.

If NG, adjust brake pedal installation, refer to BR-6, "BRAKE PEDAL" , and perform step 2 again.

DTC P2122, P2123 APP SENSOR

PFP:18002

Component Description

EBS010DL

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

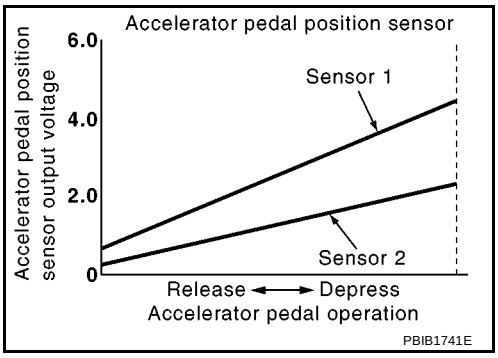

CONSULT-II Reference Value in Data Monitor Mode

EBS010DM

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS010DN

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2122 2122	Accelerator pedal position sensor 1 circuit low input	An excessively low voltage from the APP sensor 1 is sent to ECM.	● Harness or connectors (The APP sensor 1 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 1)
P2123 2123	Accelerator pedal position sensor 1 circuit high input	An excessively high voltage from the APP sensor 1 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010DO

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-738, "Diagnostic Procedure" .

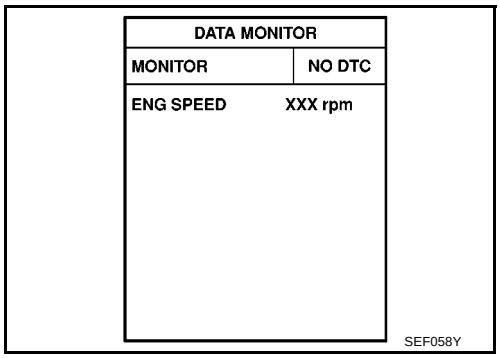

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-738, "Diagnostic Procedure" .

Wiring Diagram
LHD MODELS

EBS010DP

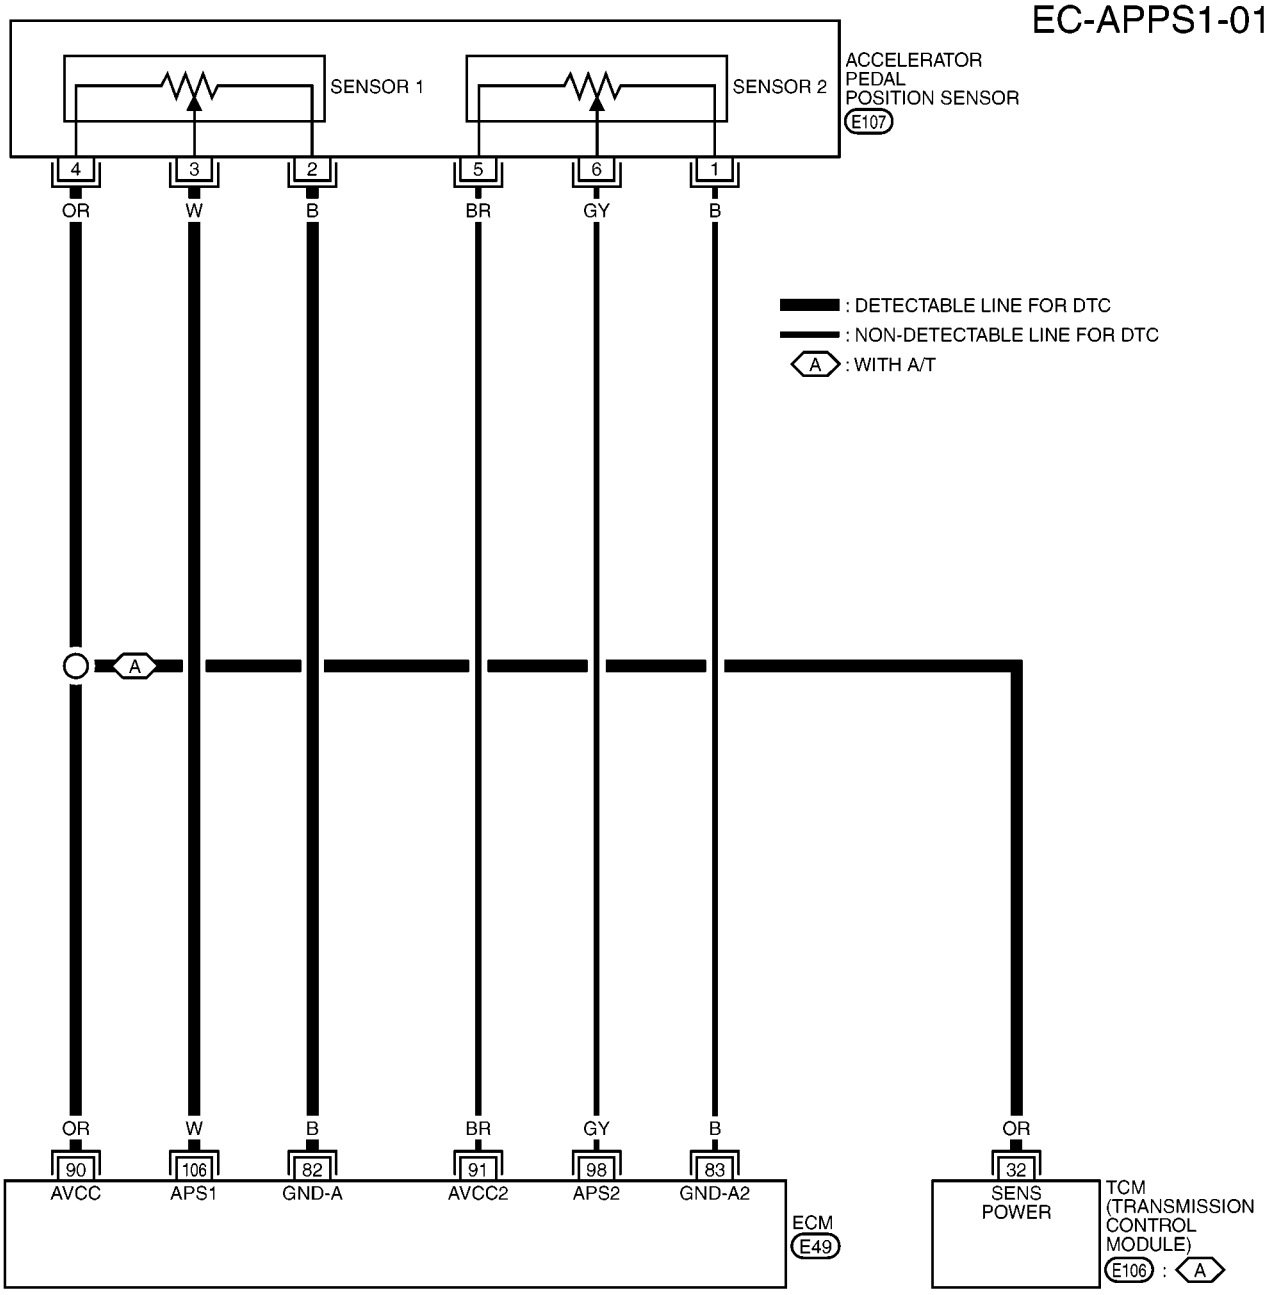

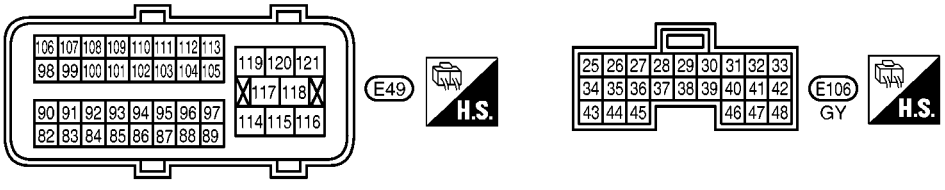



MBWA0279E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS1-02

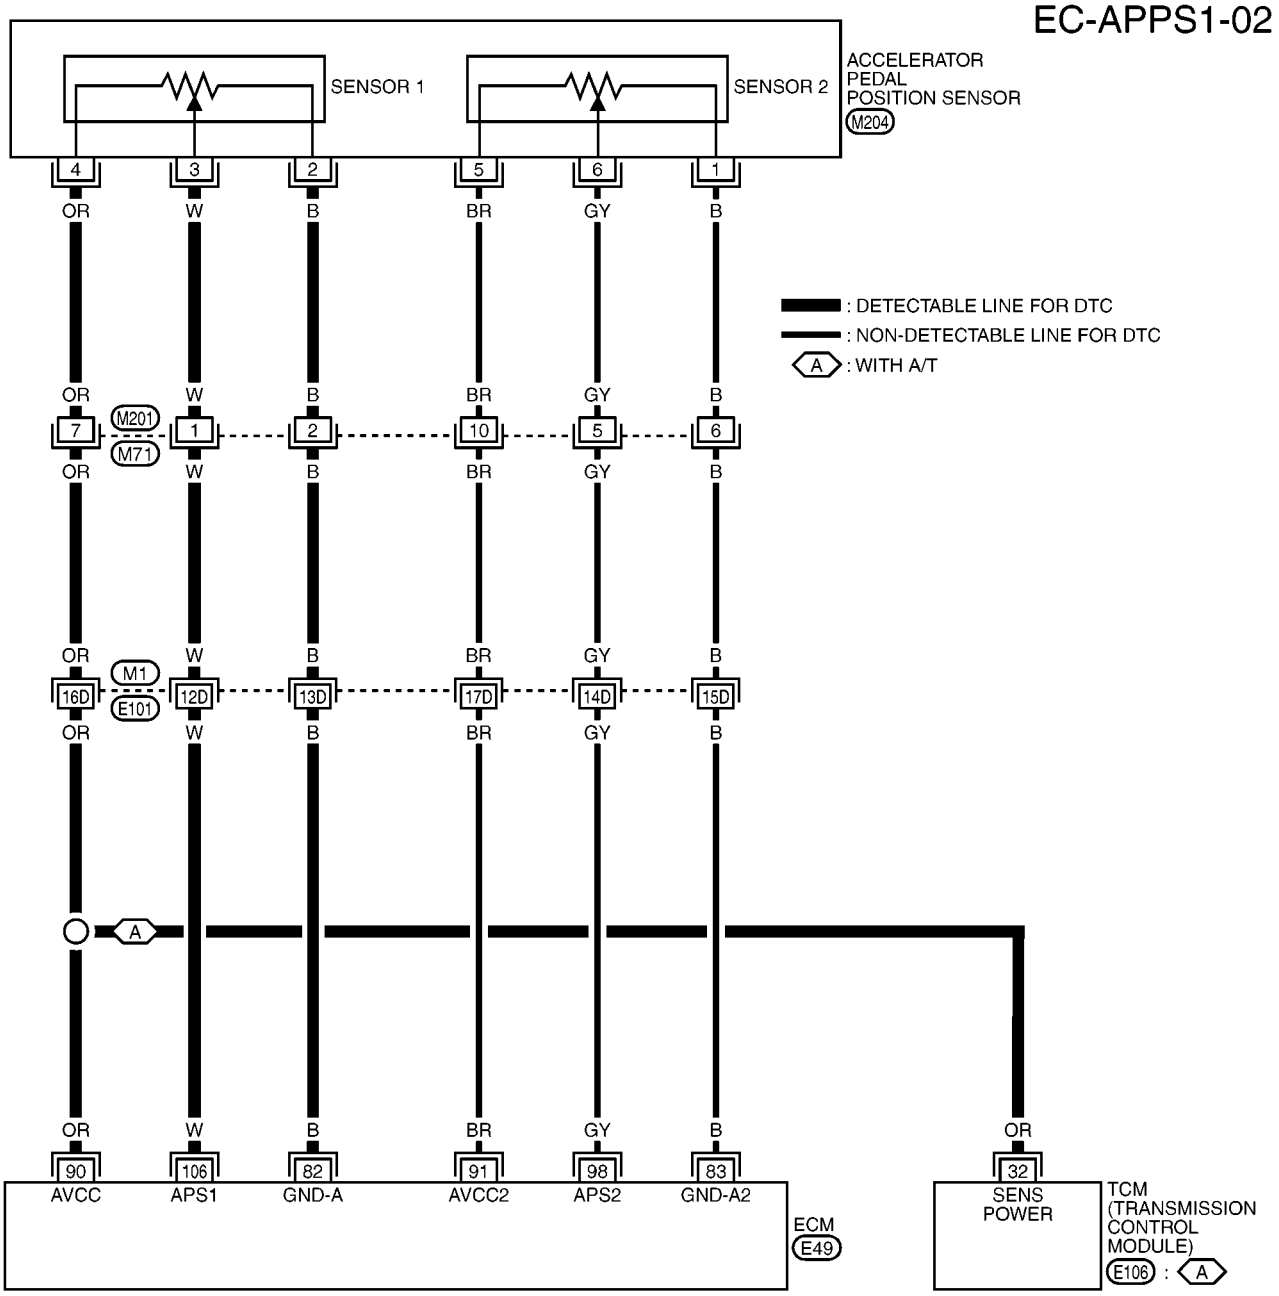

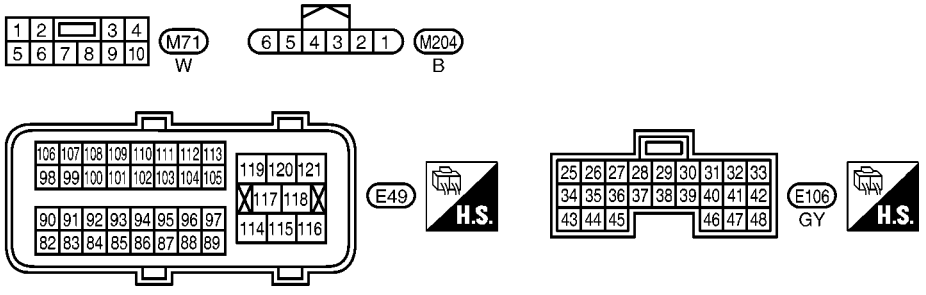

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0280E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS010DQ

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

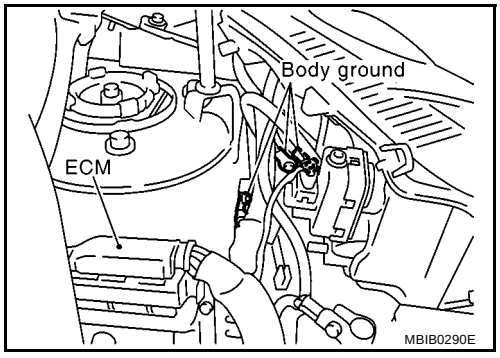

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

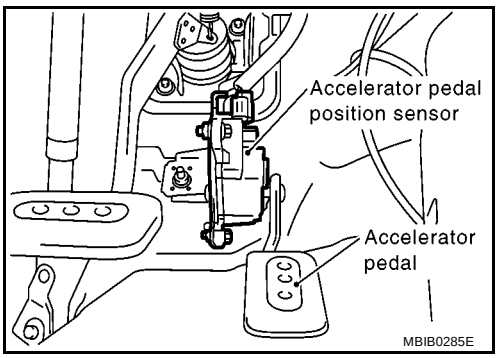

3. Check voltage between APP sensor terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

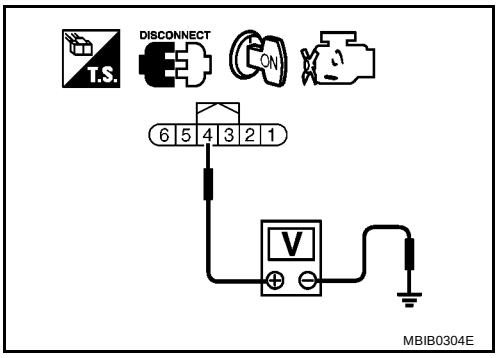

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-740, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .
3. Perform EC-503, "Throttle Valve Closed Position Learning" .
4. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010DR

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

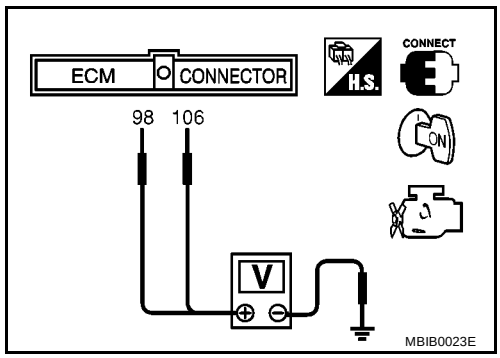

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-503, "Accelerator Pedal Released Position Learning" .
6. Perform EC-503, "Throttle Valve Closed Position Learning" .
7. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS010DS

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P2127, P2128 APP SENSOR

PFP:18002

Component Description

EBS010DT

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

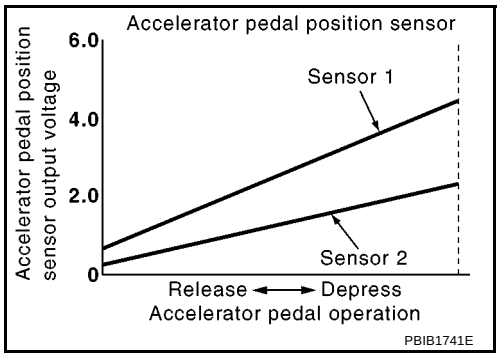

CONSULT-II Reference Value in Data Monitor Mode

EBS010DU

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differ from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS010DV

These self-diagnoses have the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2127 2127	Accelerator pedal position sensor 2 circuit low input	An excessively low voltage from the APP sensor 2 is sent to ECM.	● Harness or connectors (The APP sensor 2 circuit is open or shorted.) ● Accelerator pedal position sensor (Accelerator pedal position sensor 2)
P2128 2128	Accelerator pedal position sensor 2 circuit high input	An excessively high voltage from the APP sensor 2 is sent to ECM.	

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010DW

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-747, "Diagnostic Procedure" .

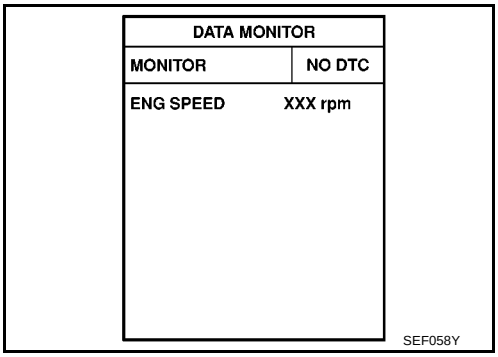

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 seconds.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-747, "Diagnostic Procedure" .

Wiring Diagram
LHD MODELS

EBS010DX

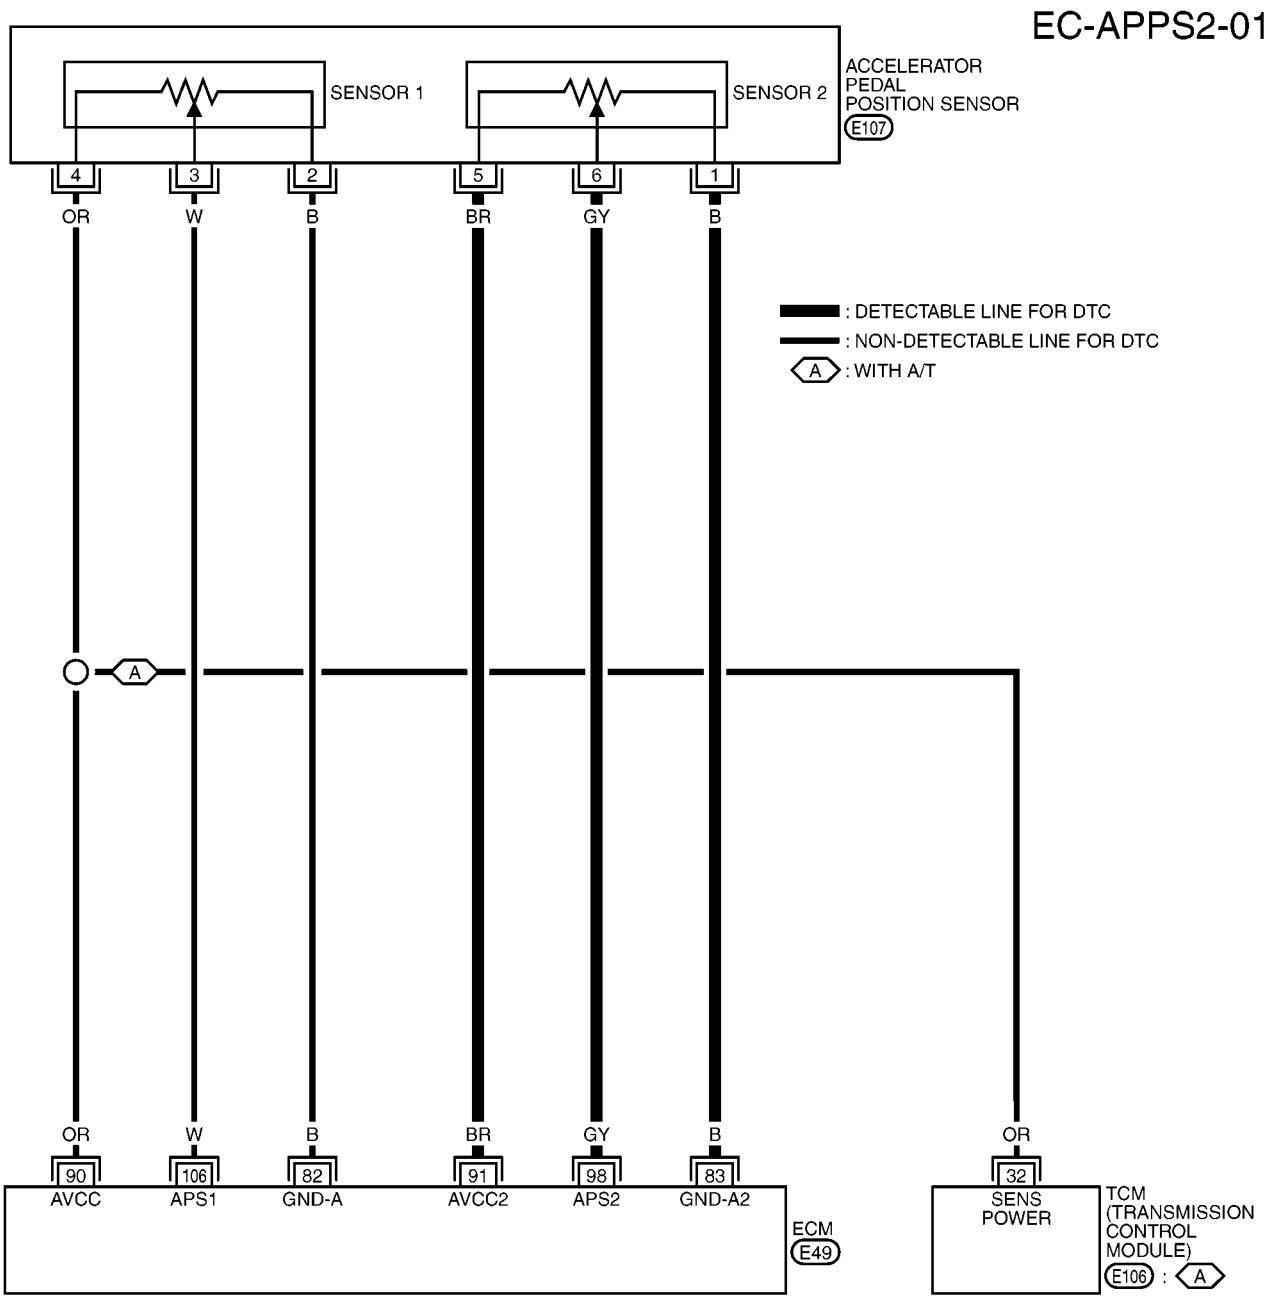

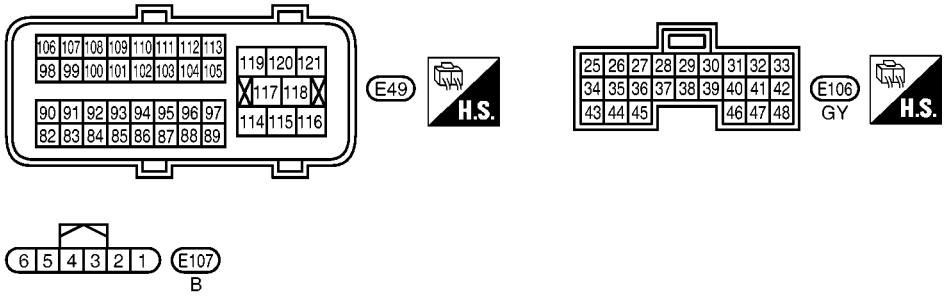

MBWA0292E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS2-02

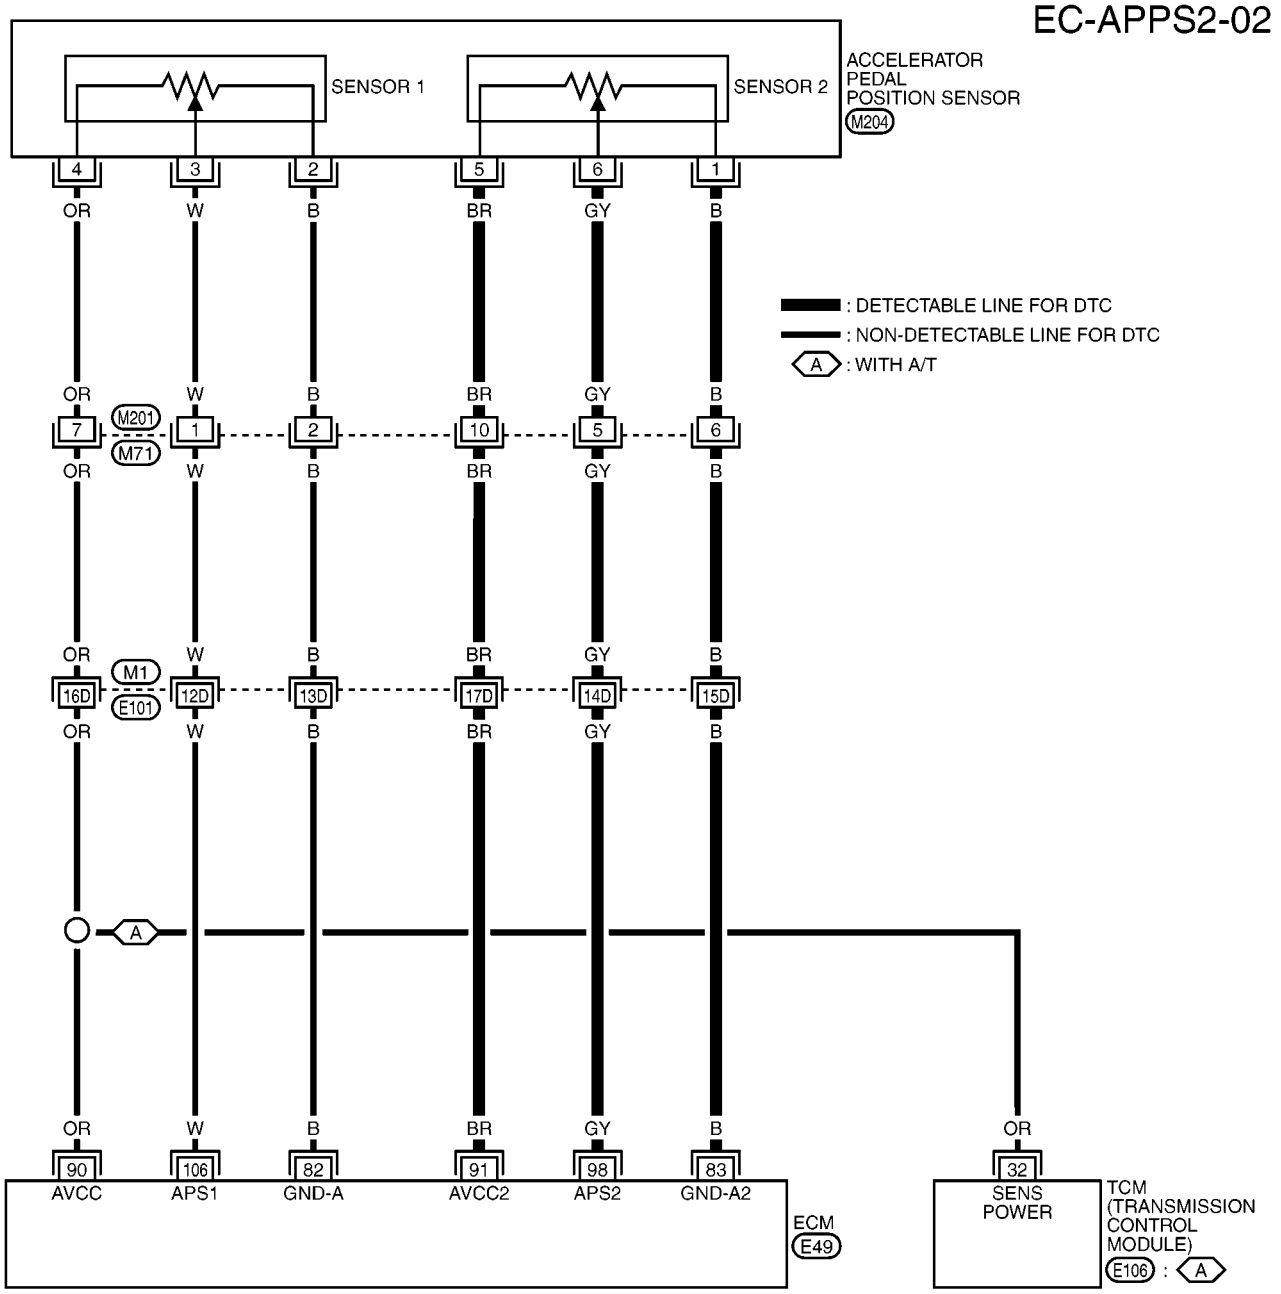



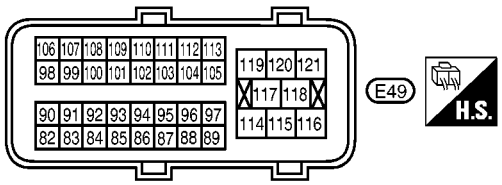

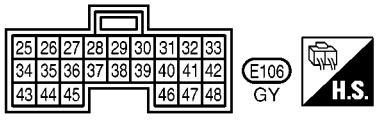

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0293E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS010DY

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

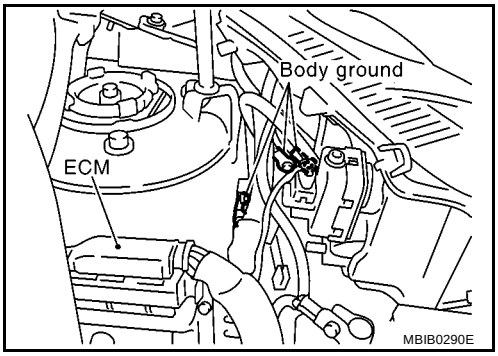

2. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

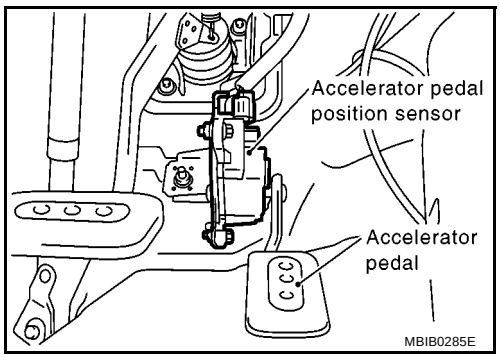

3. Check voltage between APP sensor terminal 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

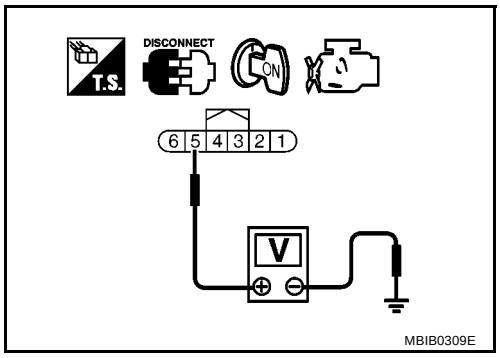

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 83 and APP sensor terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 98 and APP sensor terminal 6. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M71, M201 (RHD models)
- Harness connectors M1, E101 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-749, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .
3. Perform EC-503, "Throttle Valve Closed Position Learning" .
4. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010DZ

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

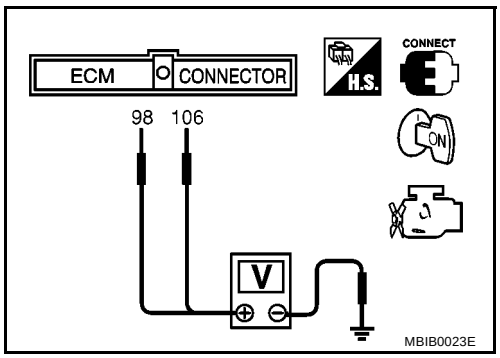

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-503, "Accelerator Pedal Released Position Learning" .
6. Perform EC-503, "Throttle Valve Closed Position Learning" .
7. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS010E0

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

DTC P2135 TP SENSOR

PFP:16119

Component Description

EBS010E1

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.
The throttle position sensor has the two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

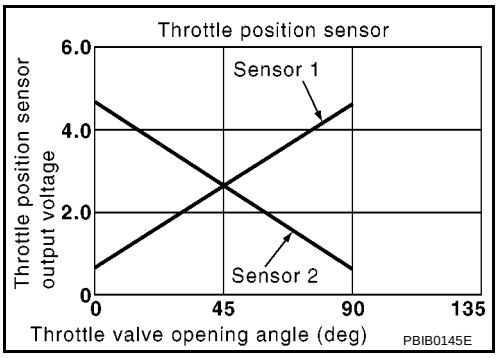

CONSULT-II Reference Value in Data Monitor Mode

EBS010E2

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL SEN1 THRTL SEN2*	● Ignition switch: ON (Engine stopped) ● Shift lever: D (A/T model) 1st (M/T model)	Accelerator pedal: Fully released	More than 0.36V
		Accelerator pedal: Fully depressed	Less than 4.75V

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

EBS010E3

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2135 2135	Throttle position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	● Harness or connector (The TP sensor 1 and 2 circuit is open or shorted.) ● Electric throttle control actuator (TP sensor 1 and 2)

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operation condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010E4

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-754, "Diagnostic Procedure" .

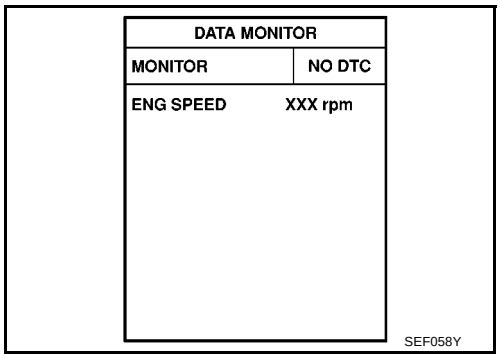

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-754, "Diagnostic Procedure" .

Wiring Diagram

EBS010E5

EC-TPS3-01

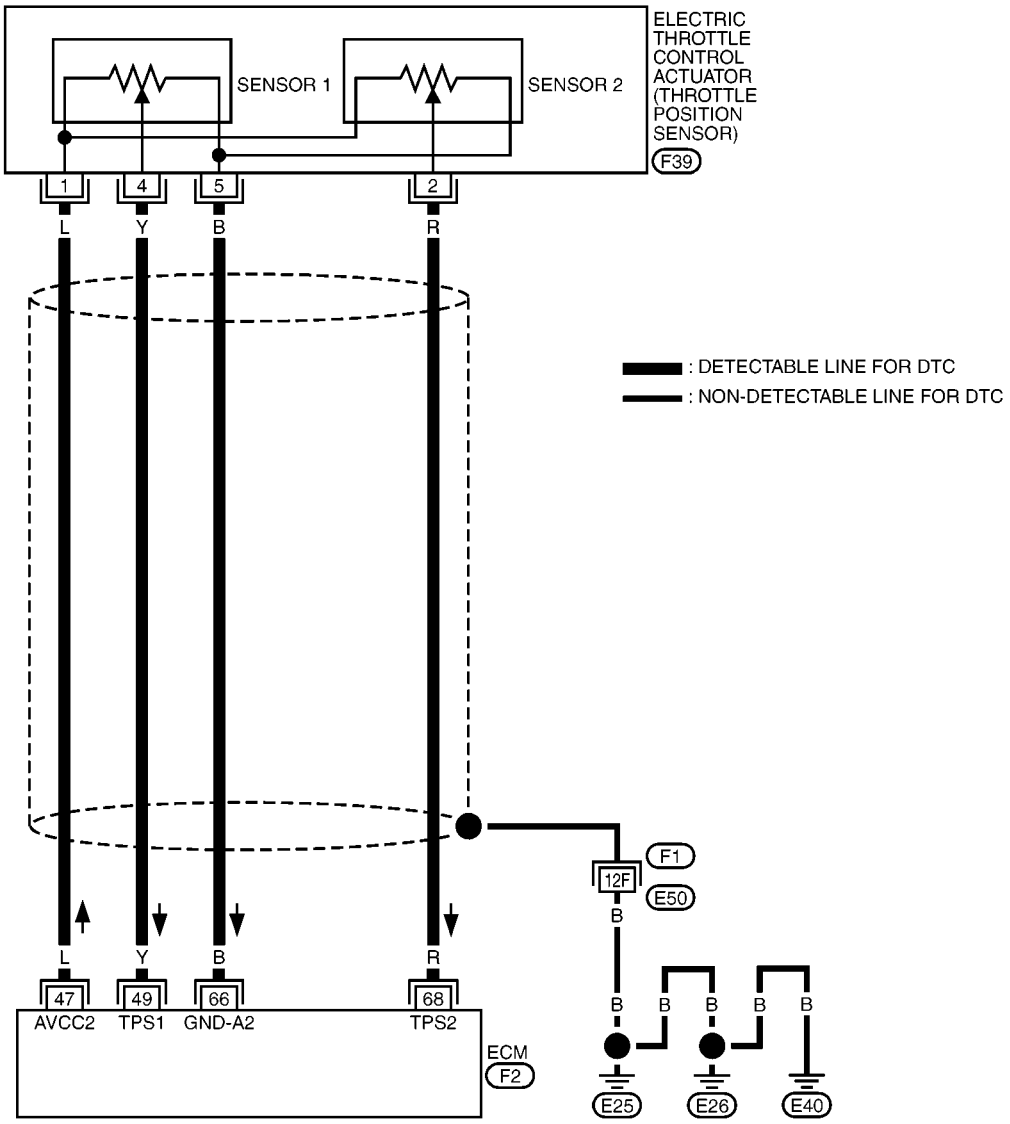

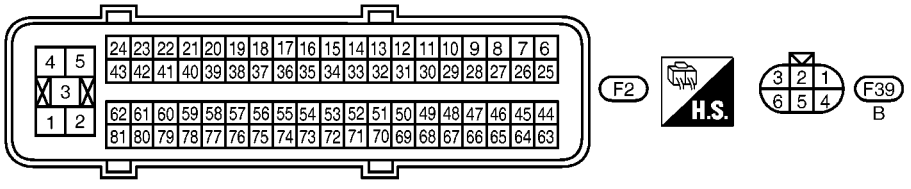

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0275E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	L	Sensor power supply (Throttle position sensor)	**[Ignition switch ON]**	Approximately 5V
49	Y	Throttle position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	More than 0.36V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	Less than 4.75V
66	B	Sensor ground (Throttle position sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
68	R	Throttle position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully released	Less than 4.75V
			[Ignition switch ON] ● **Engine stopped** ● Shift lever position: D (A/T models) ● Shift lever position: 1st (M/T models) ● Accelerator pedal: Fully depressed	More than 0.36V

Diagnostic Procedure

EBS010E6

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

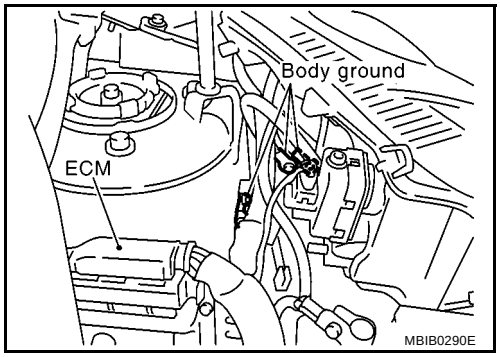

2. CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

1. Disconnect electric throttle control actuator harness connector.
2. Turn ignition switch ON.

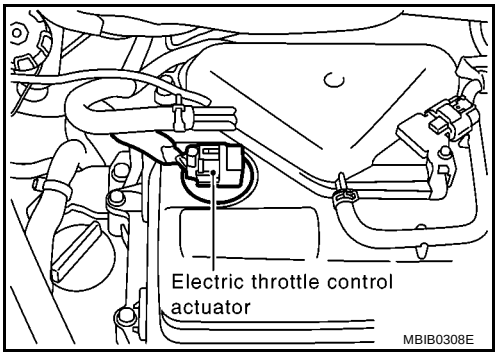

3. Check voltage between electric throttle control actuator terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

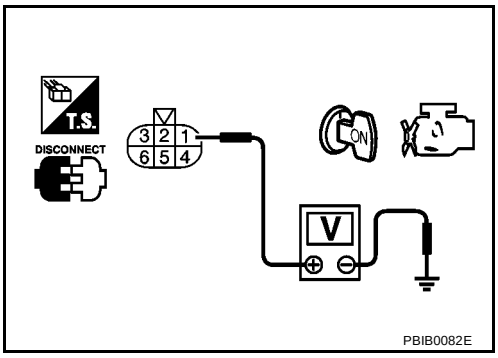

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 66 and electric throttle control actuator terminal 5. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 49 and electric throttle control actuator terminal 4, ECM terminal 68 and electric throttle control actuator terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-756, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010E7

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform EC-503, "Throttle Valve Closed Position Learning" .
3. Turn ignition switch ON.
4. Set selector lever to D position (A/T models) or 1st position (M/T models).
5. Check voltage between ECM terminals 49 (TP sensor 1 signal), 68 (TP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
49 (Throttle position sensor 1)	Fully released	More than 0.36V
	Fully depressed	Less than 4.75V
68 (Throttle position sensor 2)	Fully released	Less than 4.75V
	Fully depressed	More than 0.36V

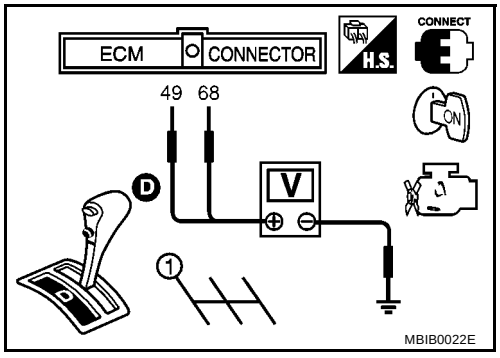

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform EC-503, "Throttle Valve Closed Position Learning" .
8. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS010E8

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

DTC P2138 APP SENSOR

PFP:18002

Component Description

EBS010E9

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.
Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.
Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

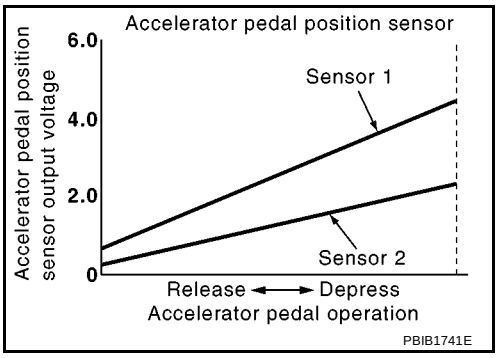

CONSULT-II Reference Value in Data Monitor Mode

EBS010EA

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
ACCEL SEN1	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	4.0 - 4.8V
ACCEL SEN2*	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9V
		Accelerator pedal: Fully depressed	3.9 - 4.8V
CLSD THL POS	● Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

EBS010EB

This self-diagnosis has the one trip detection logic.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2138 2138	Accelerator pedal position sensor circuit range/performance problem	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	● Harness or connector (The APP sensor 1 and 2 circuit is open or shorted.) ● Accelerator pedal position sensor 1 and 2

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MI lights up.

Engine operating condition in fail-safe mode
The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

EBS010EC

NOTE:
If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
TESTING CONDITION:
Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select “DATA MONITOR” mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to EC-762, "Diagnostic Procedure" .

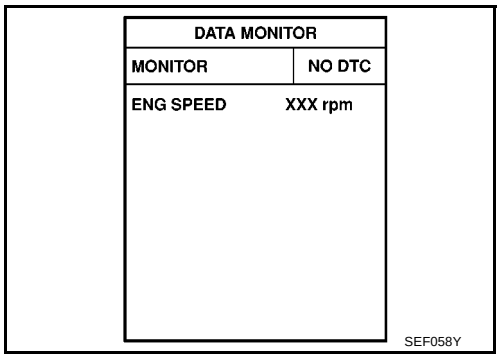

WITHOUT CONSULT-II

1. Start engine and let it idle for 1 second.
2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
3. Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM.
4. If DTC is detected, go to EC-762, "Diagnostic Procedure" .

Wiring Diagram
LHD MODELS

EBS010ED

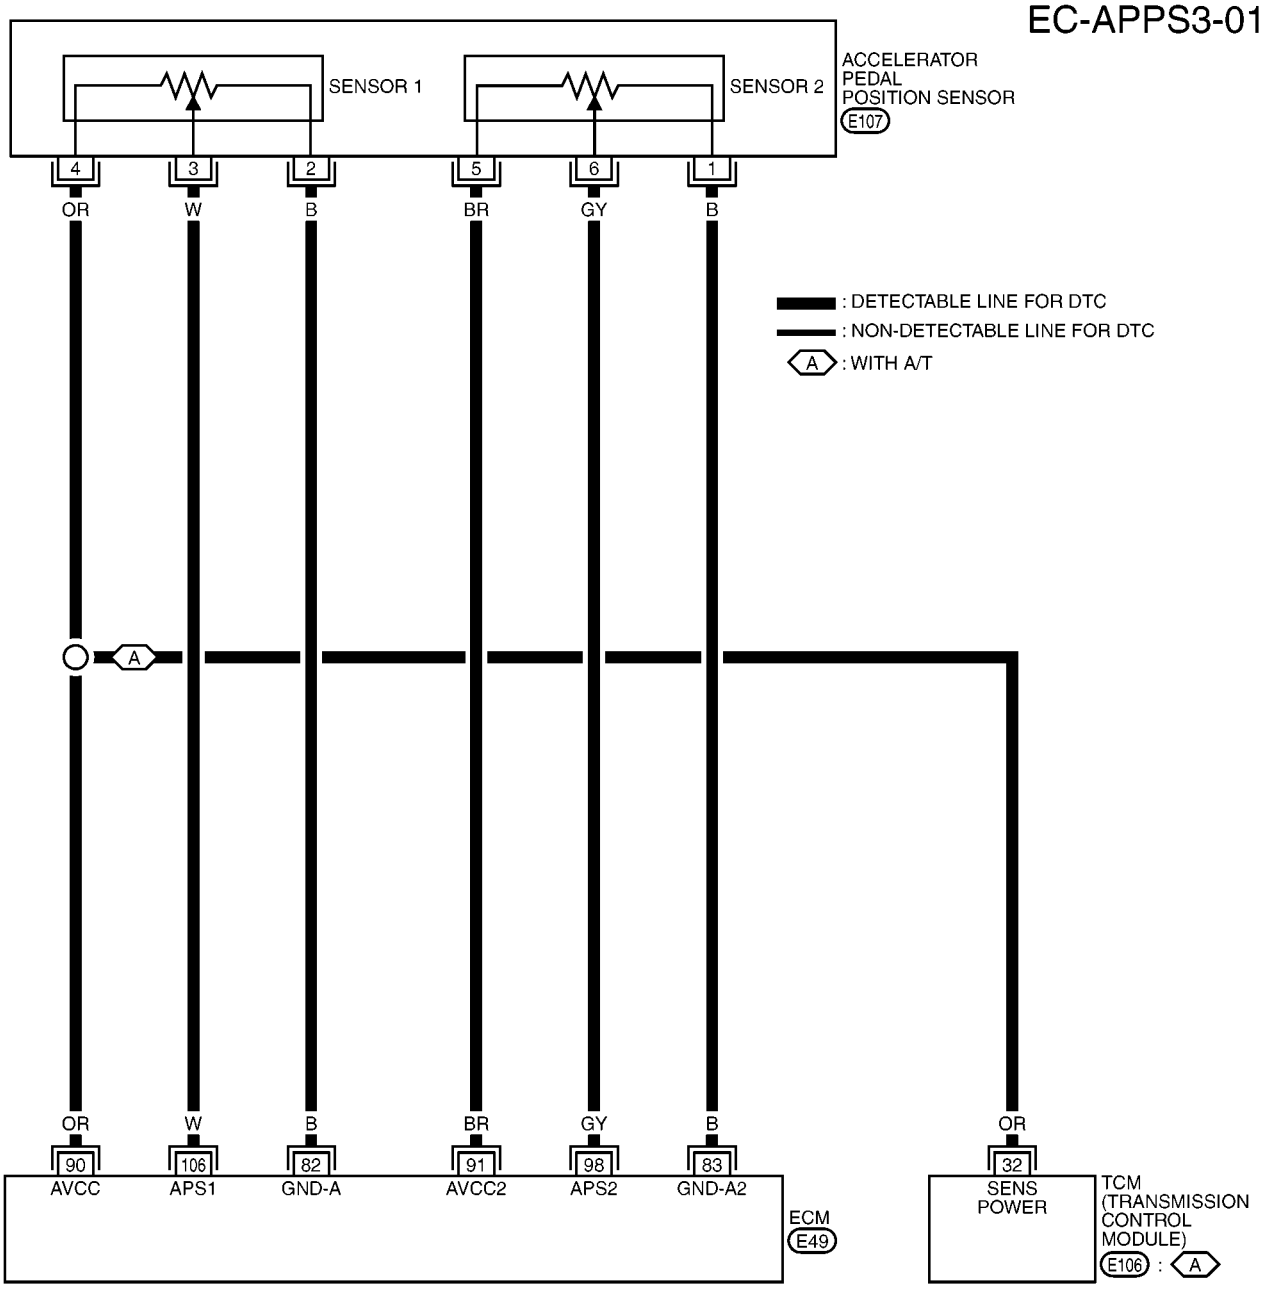

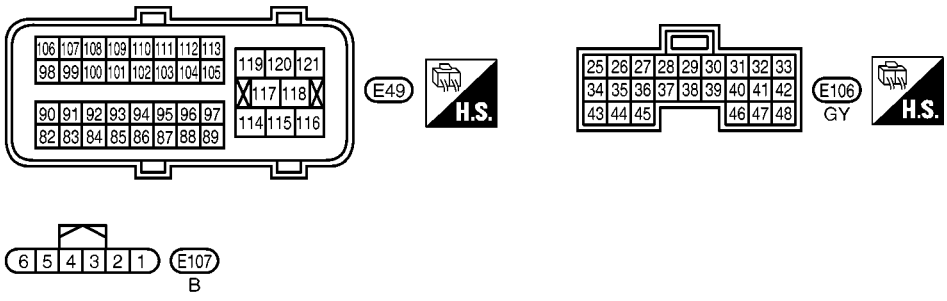

MBWA0277E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

RHD MODELS

EC-APPS3-02

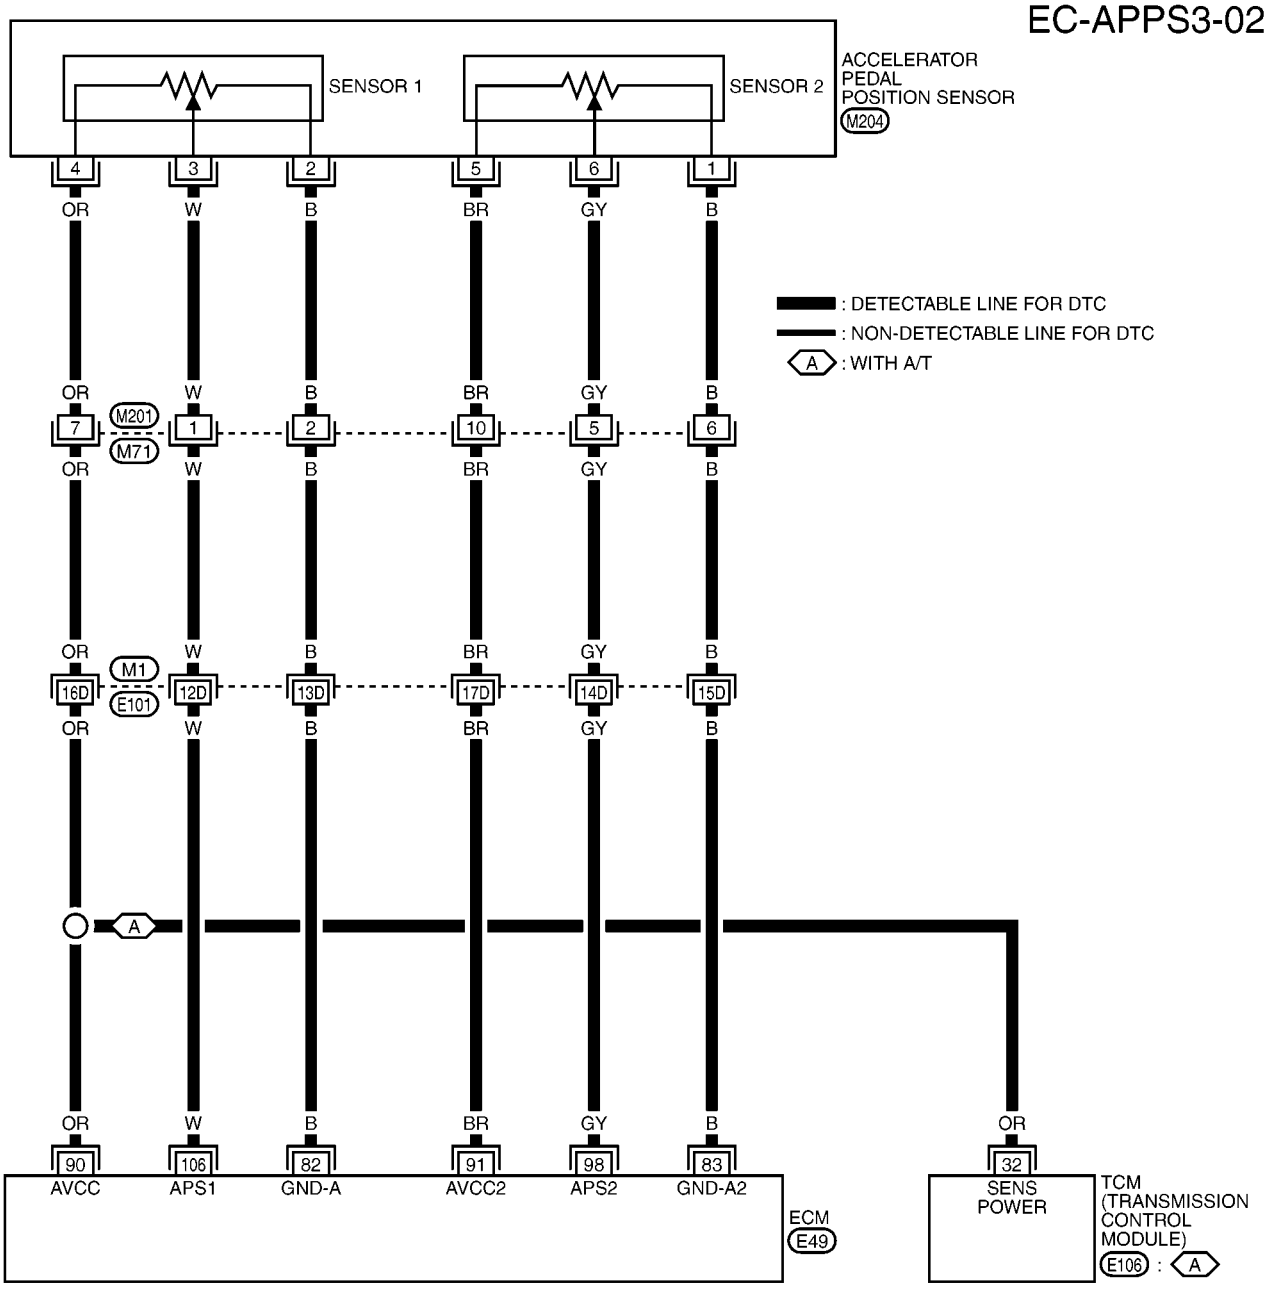

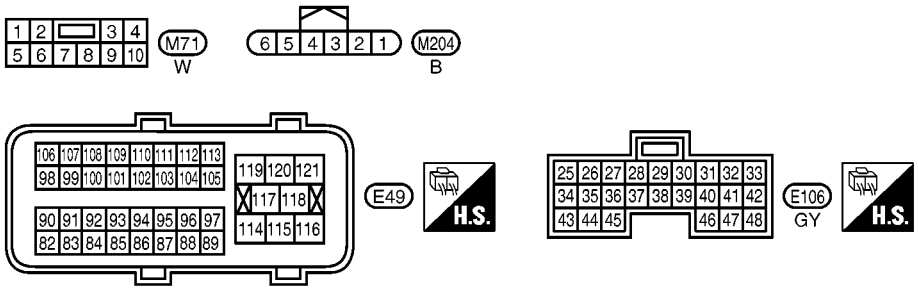

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0278E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
82	B	Sensor ground (APP sensor 1)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
83	B	Sensor ground (APP sensor 2)	**[Ignition switch ON]** ● **Warm-up condition** ● Idle speed	Approximately 0V
90	OR	Sensor power supply (APP sensor 1)	**[Ignition switch ON]**	Approximately 5V
91	BR	Sensor power supply (APP sensor 2)	**[Ignition switch ON]**	Approximately 5V
98	GY	Accelerator pedal position sensor 2	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.3 - 0.6V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	1.95 - 2.4V
106	W	Accelerator pedal position sensor 1	**[Ignition switch ON]** ● **Engine stopped** ● Accelerator pedal: Fully released	0.6 - 0.9V
			[Ignition switch ON] ● **Engine stopped** ● Accelerator pedal: Fully depressed	3.9 - 4.7V

Diagnostic Procedure

EBS010EE

1. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 2.

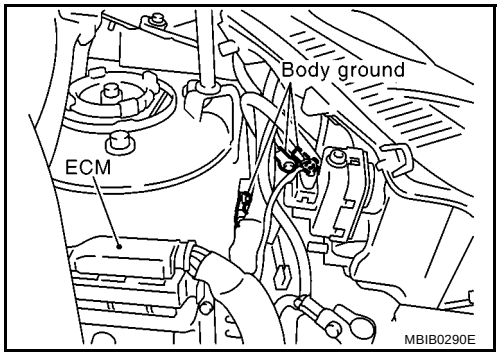

2. CHECK APP SENSOR POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.
2. Turn ignition switch ON.

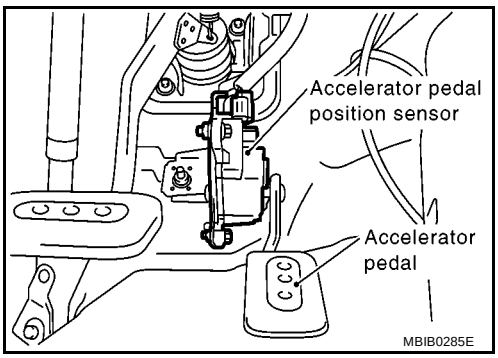

3. Check voltage between APP sensor terminals 4, 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

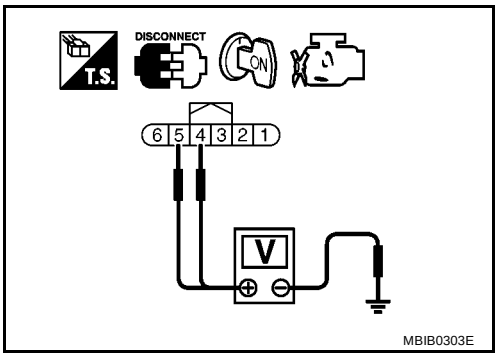

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 82 and APP sensor terminal 2, ECM terminal 83 and APP sensor terminal 1.
   Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 106 and APP sensor terminal 3, ECM terminal 98 and APP sensor terminal 6.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M1, E101 (RHD models)
- Harness connectors M71, M201 (RHD models)
- Harness for open or short between ECM and accelerator pedal position sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to EC-765, "Component Inspection" .

OK or NG

OK >> GO TO 10.
NG >> GO TO 9.

9. REPLACE APP SENSOR

1. Replace the accelerator pedal position sensor.
2. Perform EC-503, "Accelerator Pedal Released Position Learning" .
3. Perform EC-503, "Throttle Valve Closed Position Learning" .
4. Perform EC-503, "Idle Air Volume Learning" .

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS010EF

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.
3. Check voltage between ECM terminals 106 (APP sensor 1 signal), 98 (APP sensor 2 signal) and engine ground under the following conditions.

Terminal	Accelerator pedal	Voltage
106 (Accelerator pedal position sensor 1)	Fully released	0.6 - 0.9V
	Fully depressed	3.9 - 4.7V
98 (Accelerator pedal position sensor 2)	Fully released	0.3 - 0.6V
	Fully depressed	1.95 - 2.4V

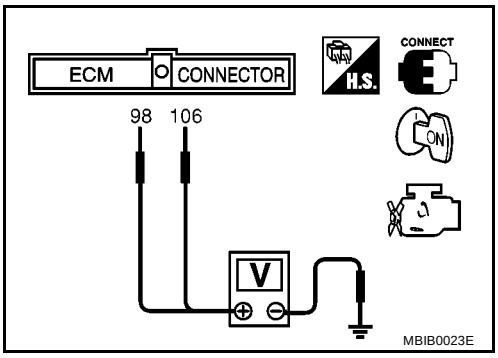

4. If NG, replace accelerator pedal assembly and go to the next step.
5. Perform EC-503, "Accelerator Pedal Released Position Learning" .
6. Perform EC-503, "Throttle Valve Closed Position Learning" .
7. Perform EC-503, "Idle Air Volume Learning" .

Remove and Installation

EBS010EG

ACCELERATOR PEDAL

Refer to ACC-2, "ACCELERATOR CONTROL SYSTEM" .

HO2S1 HEATER

PFP:22690

Description

EBS00OPO

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 1 heater control	Heated oxygen sensor 1 heater
Engine coolant temperature sensor	Engine coolant temperature		

The ECM performs ON/OFF duty control of the heated oxygen sensor 1 heater corresponding to the engine speed and engine coolant temperature. The duty percent varies with engine coolant temperature when engine is started.

OPERATION

Engine speed rpm	Heated oxygen sensor 1 heater
Above 3,600	OFF
Below 3,600 after warming up	ON

CONSULT-II Reference Value in Data Monitor Mode

EBS00OPP

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 HTR (B1)	● Engine: After warming up ● Engine speed: Below 3,600 rpm	ON
	● Engine speed: Above 3,600 rpm	OFF

Wiring Diagram

EBS00OPQ

EC-FRO2-01

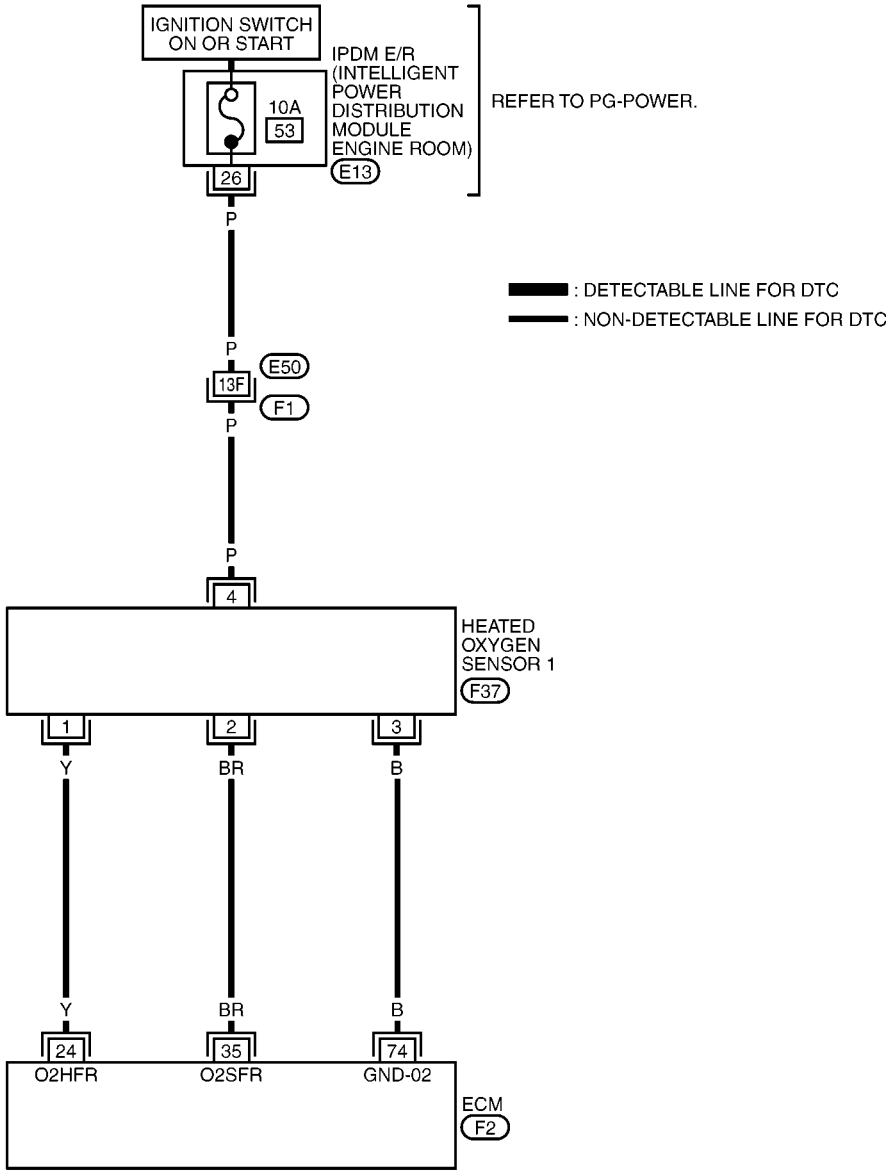

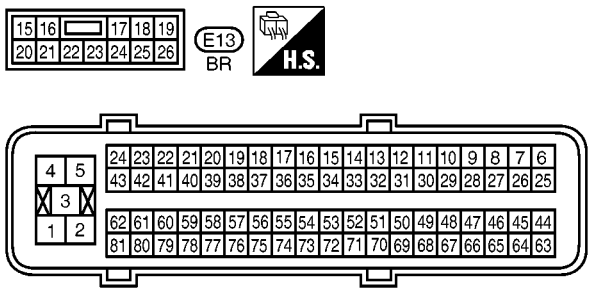

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0464E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
24	Y	Heated oxygen sensor 1 heater	**[Engine is running]** ● **Warm-up condition.** ● Engine speed is below 3,600 rpm.	Approximately 7.0V★ 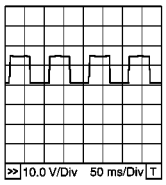 PBIB0519E
			[Engine is running] ● Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OPR

1. CHECK OVERALL FUNCTION

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON.
4. Set tester prove between ECM terminal 24 (HO2S1 heater signal) and ground.
5. Start engine and let it idle.
6. Check the voltage under the following conditions.
   Verify that the oscilloscope screen shows the signal waves as shown below.

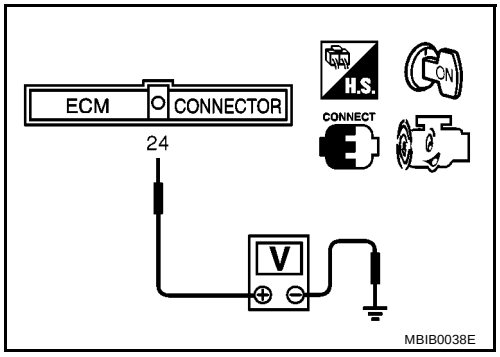

MBIB0038E

Conditions	Voltage
At idle	Approximately 7.0V★ 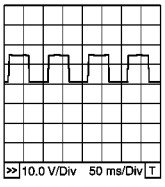 PBIB0519E
Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK HO2S1 POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 harness connector.
3. Turn ignition switch ON.

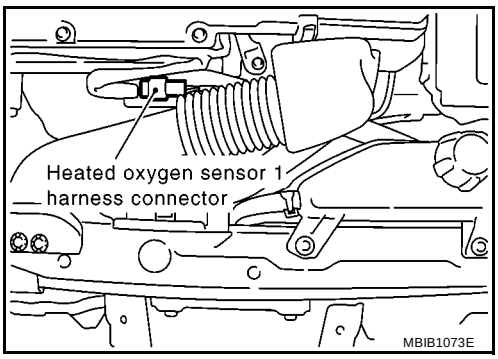

4. Check voltage between HO2S1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

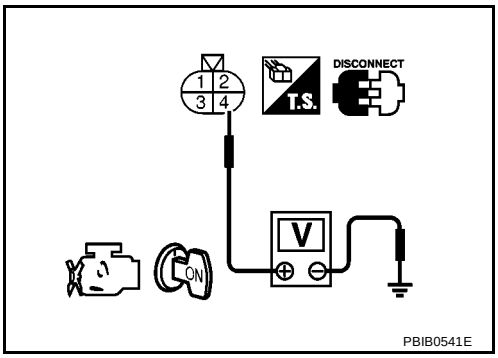

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R connector E13
- 10A fuse
- Harness for open or short between heated oxygen sensor 1 and fuse

>> Repair harness or connectors.

4. CHECK HO2S1 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 24 and HO2S1 terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 1 HEATER

Refer to EC-770, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 1.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OPS

HEATED OXYGEN SENSOR 1 HEATER

1. Check resistance between HO2S1 terminals as follows.

Terminal No.	Resistance
1 and 4	3.3 - 4.0 Ω at 25°C (77°F)
2 and 1, 3, 4	∞ Ω (Continuity should not exist)
3 and 1, 2, 4	

2. If NG, replace heated oxygen sensor 1.

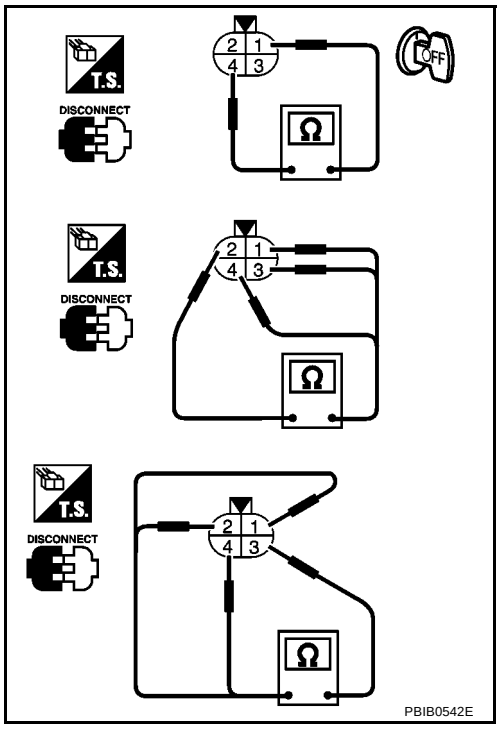

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OPT

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

HO2S2 HEATER

PFP:226A0

Description

EBS00OPU

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Camshaft position sensor (PHASE)	Engine speed	Heated oxygen sensor 2 heater control	Heated oxygen sensor 2 heater
Crankshaft position sensor (POS)			
Engine coolant temperature sensor	Engine coolant temperature		
Manifold absolute pressure (MAP) sensor	Amount of intake air		

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater corresponding to the engine speed, amount of intake air and engine coolant temperature.

OPERATION

Engine speed rpm	Heated oxygen sensor 2 heater
Above 3,600 (A/T models) Above 3,800 (M/T models)	OFF
● Below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. ● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	ON

CONSULT-II Reference Value in Data Monitor Mode

EBS00OPV

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S2 HTR (B1)	● Engine speed is below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load.	ON
	● Engine speed: Above 3,600 rpm (A/T models), 3,800 rpm (M/T models)	OFF

Wiring Diagram

EBS00OPW

EC-RRO2-01

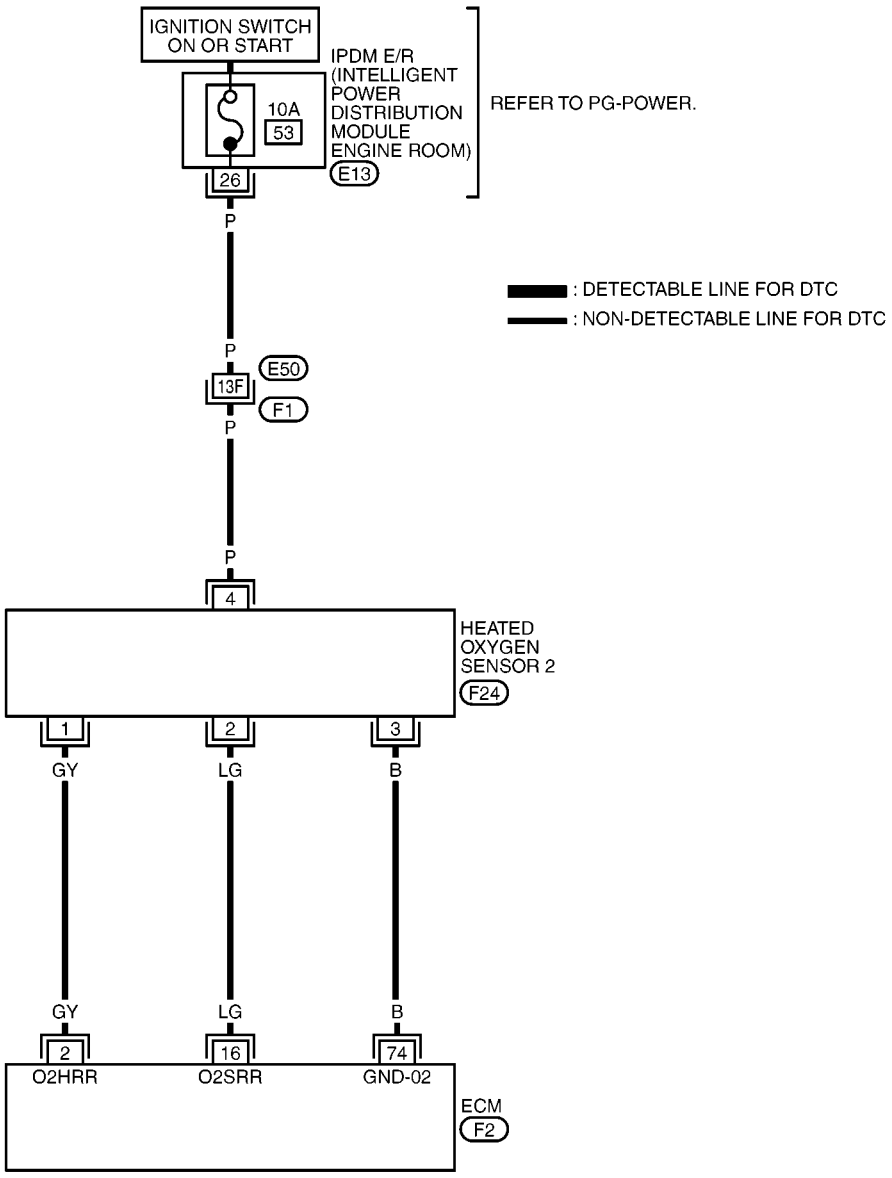

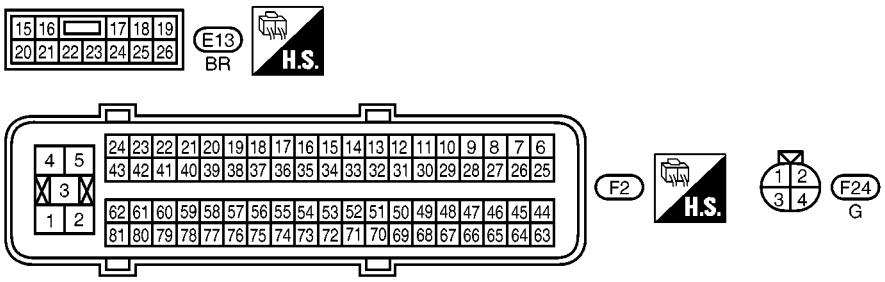

REFER TO THE FOLLOWING.
(F1) -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0465E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
2	GY	Heated oxygen sensor 2 heater	**[Engine is running]** ● Engine speed: Below 3,600 rpm (A/T models), 3,800 rpm (M/T models) after the following conditions are met. – Engine: After warming up – Keeping the engine speed at between 3,500 to 4,000 rpm for 1 minute and at idle for 1 minute under no load	0 - 1.0V
			[Ignition switch ON] ● Engine stopped **[Engine is running]** ● Engine speed is above 3,600 rpm (A/T models), 3,800 rpm (M/T models).	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

EBS00OPX

1. CHECK OVERALL FUNCTION

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter proves between ECM terminal 2 (HO2S2 heater signal) and ground.
6. Check the voltage under the following conditions.

Conditions	Voltage
At idle	0 - 1V
Engine speed is above 3,600 rpm (A/T models), 3,800 rpm (M/T models).	Battery voltage

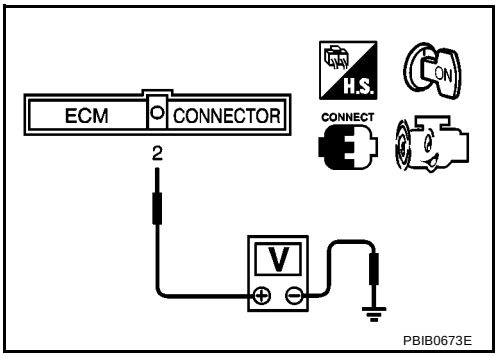

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

2. CHECK HO2S2 POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Turn ignition switch ON.

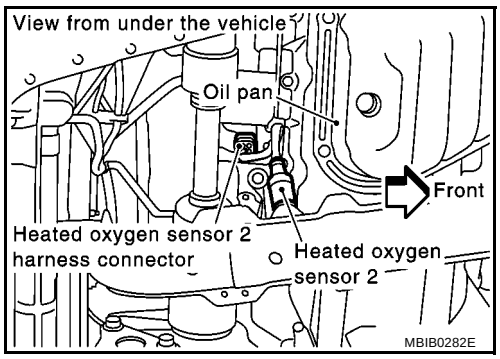

4. Check voltage between HO2S2 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

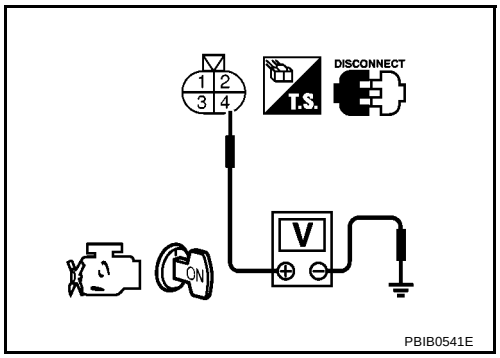

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R connector E13
- 10A fuse
- Harness for open or short between heated oxygen sensor 2 and fuse

>> Repair harness or connectors.

4. CHECK HO2S2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 2 and HO2S2 terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2 HEATER

Refer to EC-775, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OPY

HEATED OXYGEN SENSOR 2 HEATER

1. Check resistance between HO2S2 terminals as follows.

Terminal No.	Resistance
1 and 4	3.3 - 4.0 Ω at 25°C (77°F)
2 and 1, 3, 4	∞ Ω (Continuity should not exist)
3 and 1, 2, 4	

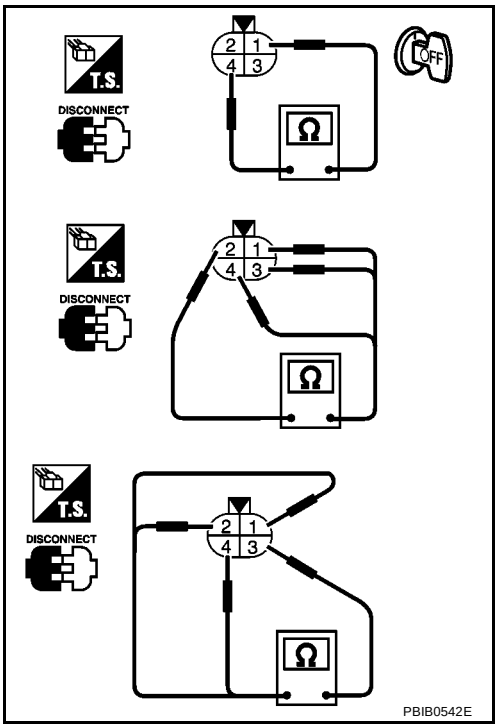

2. If NG, replace heated oxygen sensor 2.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OPZ

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

IAT SENSOR

PFP:22630

Component Description

EBS00OQ0

The intake air temperature sensor is built into manifold absolute pressure sensor. The sensor detects intake air temperature and transmits a signal to the ECM.
The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

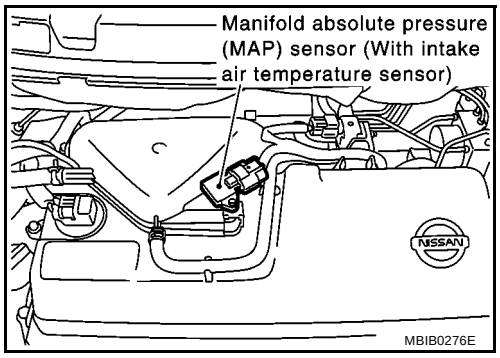

<Reference data>

Intake air temperature °C (°F)	Voltage* V	Resistance kΩ
–10 (14)	4.43	7.9 - 9.3
25 (77)	3.32	1.9 - 2.1
80 (176)	1.23	0.31 - 0.37

*: These data are reference values and are measured between ECM terminal 34 (Intake air temperature sensor) and ground.

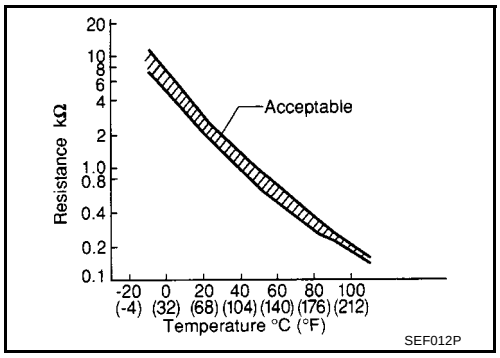

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

Wiring Diagram

EBS00OQ1

EC-IATSEN-01

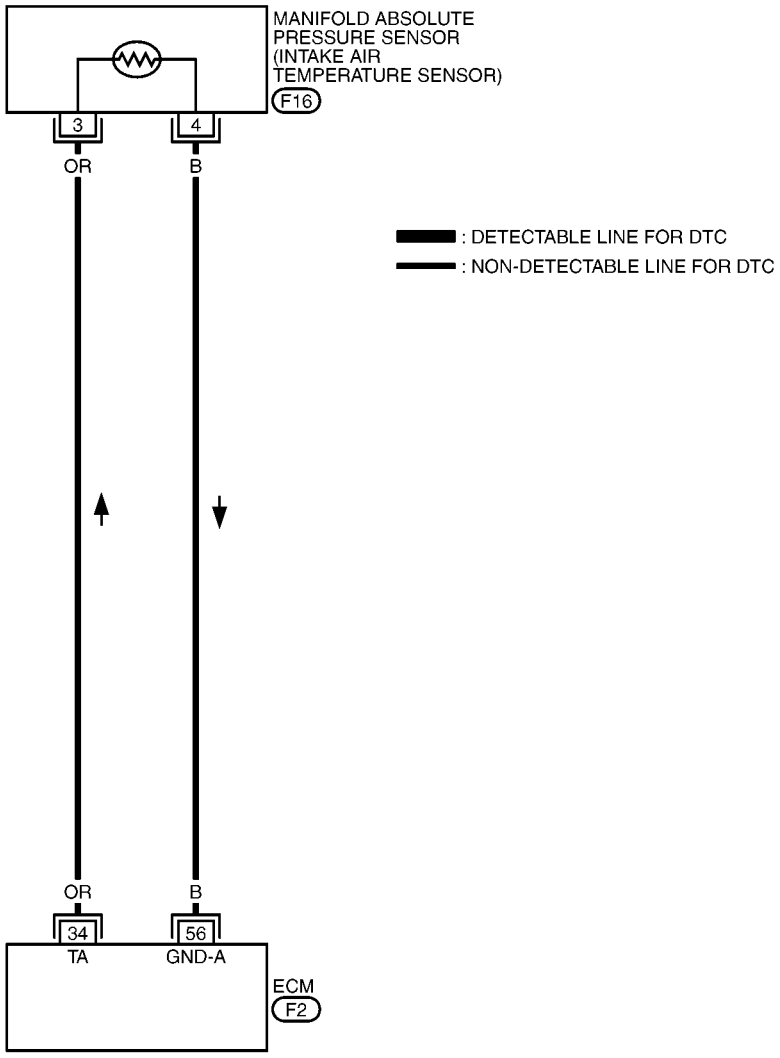

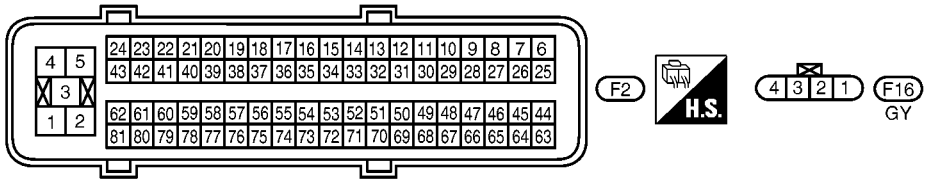

MBWA0466E

Diagnostic Procedure

EBS00OQ2

1. CHECK OVERALL FUNCTION

1. Turn ignition switch ON.
2. Check voltage between ECM terminal 34 and ground with CONSULT-II or tester.

Voltage: 0.04 - 4.84V

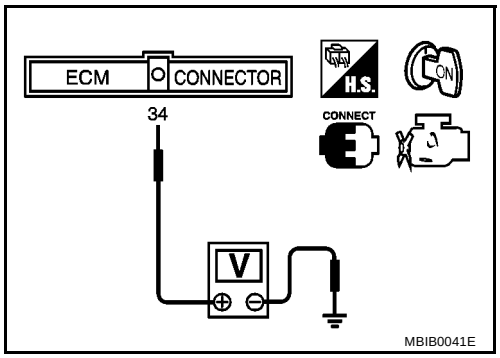

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect manifold absolute pressure sensor (intake air temperature sensor is built-into) harness connector.
3. Turn ignition switch ON.

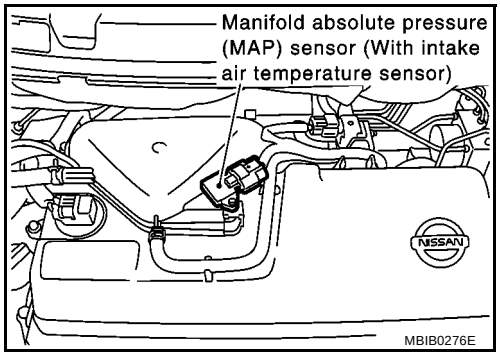

4. Check voltage between MAP sensor terminal 3 and ground.

Voltage: Approximately 5V

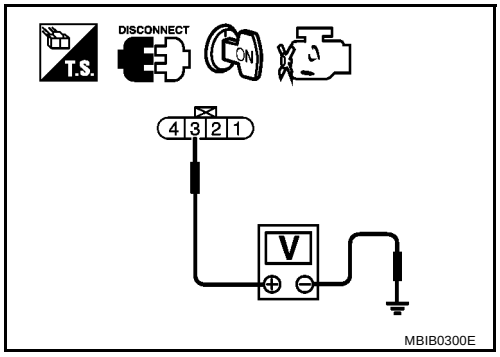

OK or NG

OK >> GO TO 3.
NG >> Repair harness or connectors.

3. CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between MAP sensor terminal 4 and ECM terminal 56.
   Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-779, "Component Inspection" .

OK or NG

OK >> GO TO 5.
NG >> Replace manifold absolute pressure sensor (with intake air temperature sensor).

5. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OQ3

INTAKE AIR TEMPERATURE SENSOR

1. Check resistance between manifold absolute pressure sensor terminals 3 and 5 under the following conditions.

Intake air temperature °C (°F)	Resistance kΩ
25 (77)	1.9 - 2.1

2. If NG, replace manifold absolute pressure sensor (with intake air temperature sensor).

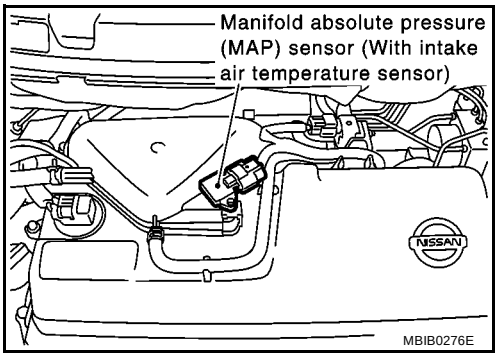

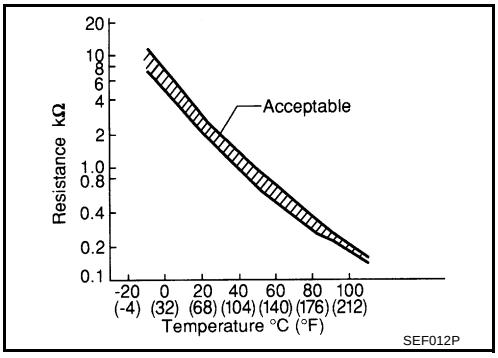

Removal and Installation

EBS00OQ4

MANIFOLD ABSOLUTE PRESSURE SENSOR

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

HO2S1

PFP:22690

Component Description

EBS00OQ5

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

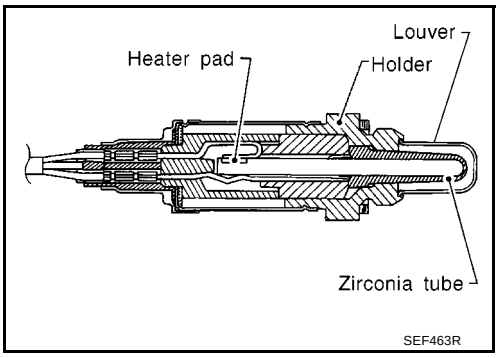

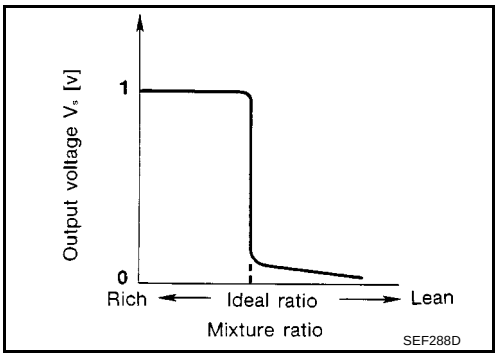

CONSULT-II Reference Value in Data Monitor Mode

EBS00OQ6

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ←→ RICH Changes more than 5 times during 10 seconds.

Wiring Diagram

EBS00OQ7

EC-FRO2-01

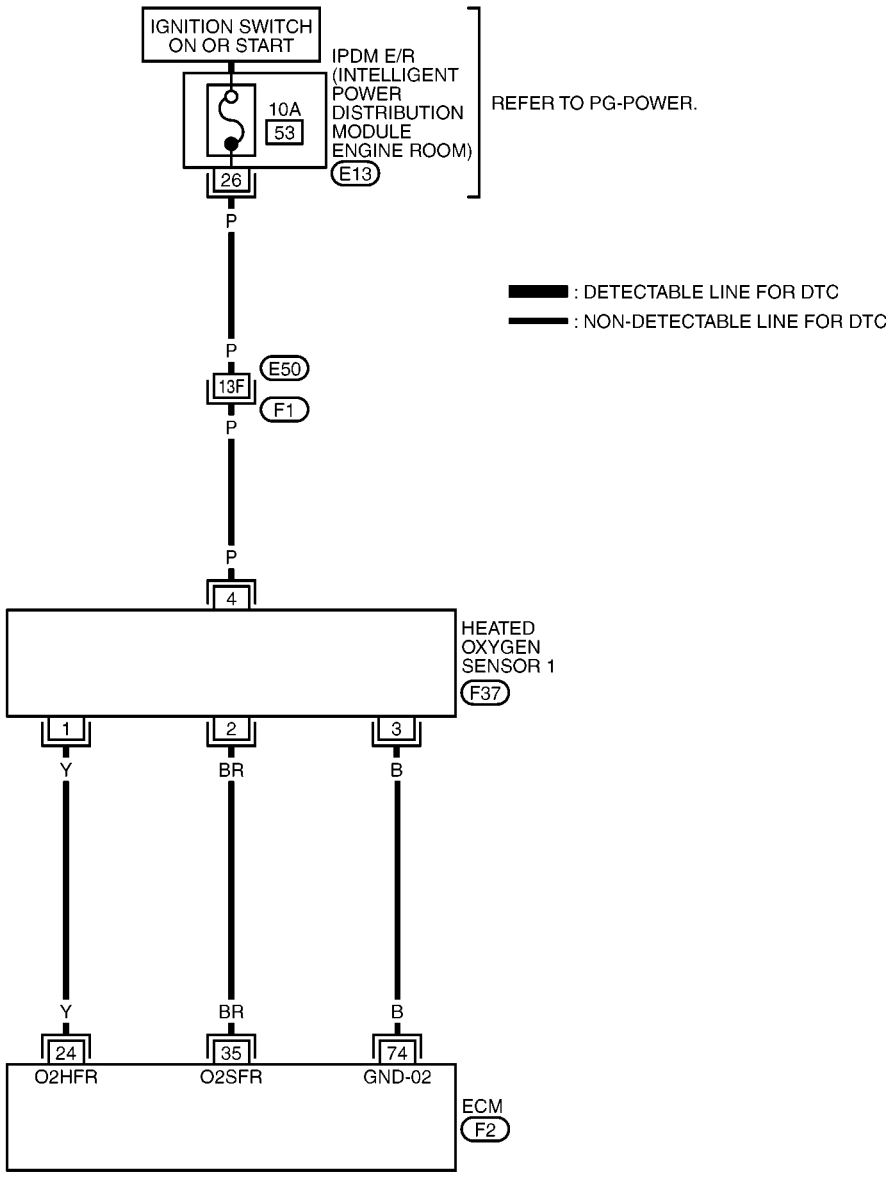



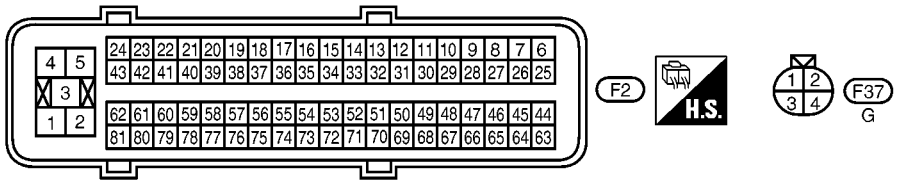

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0464E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
35	BR	Heated oxygen sensor 1	**[Engine is running]** ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - Approximately 1.0V (Periodically change)
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OQ8

1. INSPECTION START

1. Turn ignition switch OFF.
2. Loosen and retighten engine ground screws.

>> GO TO 2.

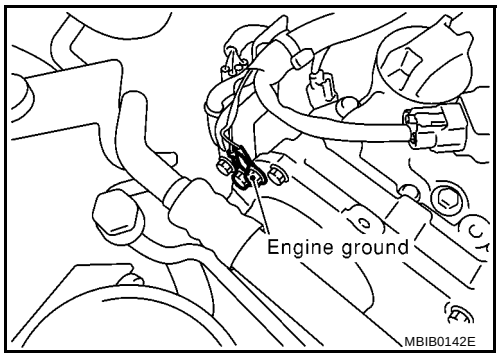

2. CHECK OVERALL FUNCTION

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “HO2S1 MNTR (B1)” in “DATA MONITOR” mode with CONSULT-II.
3. Keep the engine speed at 2,000 rpm under no load, and make sure that the monitors fluctuates between LEAN and RICH more than 5 times in 10 seconds.

   1 time: RICH → LEAN → RICH

   2 times: RICH → LEAN → RICH → LEAN →RICH

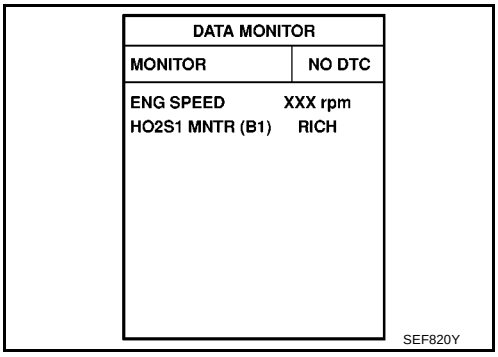

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine and wait at least 10 seconds.
3. Set ECM in Diagnostic test mode - II (Heated oxygen sensor 1 monitor).
   Refer to EC-510, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" .
4. Keep the engine speed at 2,000 rpm under no load, and make sure that the MI comes ON more than 5 times in 10 seconds.

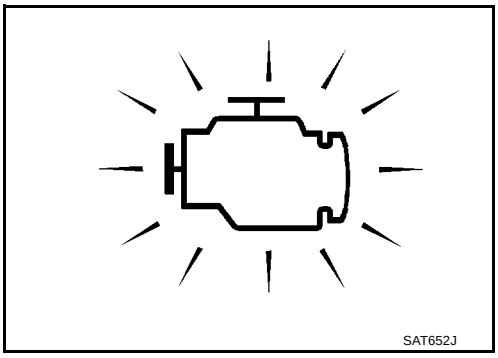

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 3.

3. CHECK HO2S1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 1 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S1 terminal 3.
   Refer to Wiring Diagram.

   Continuity should exist.

5. Also check harness for short to ground and short to power.

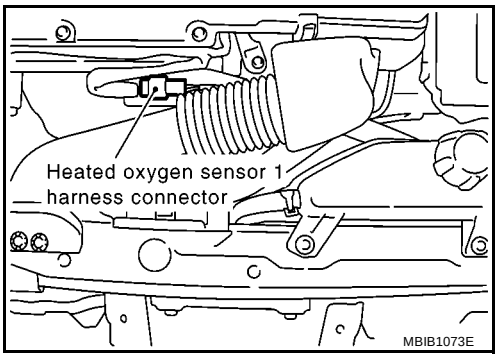

OK or NG

OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 35 and HO2S1 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 35 or HO2S1 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 1

Refer to EC-784, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace heated oxygen sensor 1.

6. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OQ9

HEATED OXYGEN SENSOR 1

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select “MANU TRIG” and adjust “TRIGGER POINT” to 100% in “DATA MONITOR” mode with CONSULT-II.
3. Select “HO2S1 (B1)” and “HO2S1 MNTR (B1)”.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch “RECORD” on CONSULT-II screen.

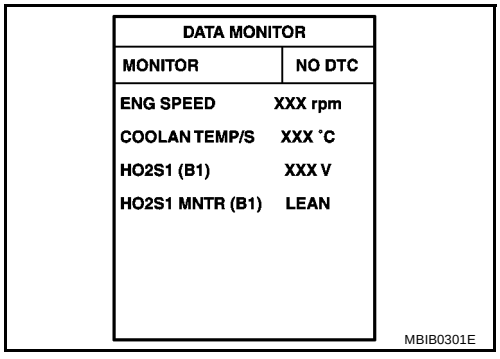

6. Check the following.
   - “HO2S1 MNTR (B1)” in “DATA MONITOR” mode changes from “RICH” to “LEAN” to “RICH” more than 5 times in 10 seconds.
     5 times (cycles) are counted as shown at right.
   - “HO2S1 (B1)” voltage goes above 0.6V at least once.
   - “HO2S1 (B1)” voltage goes below 0.3V at least once.
   - “HO2S1 (B1)” voltage never exceeds 1.0V.

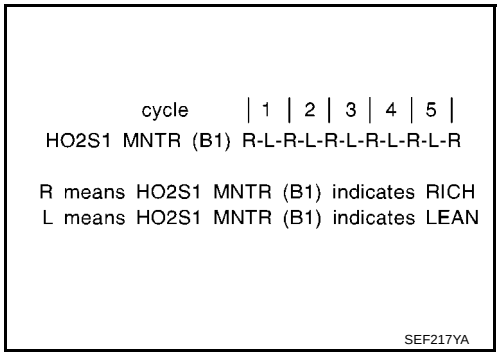

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

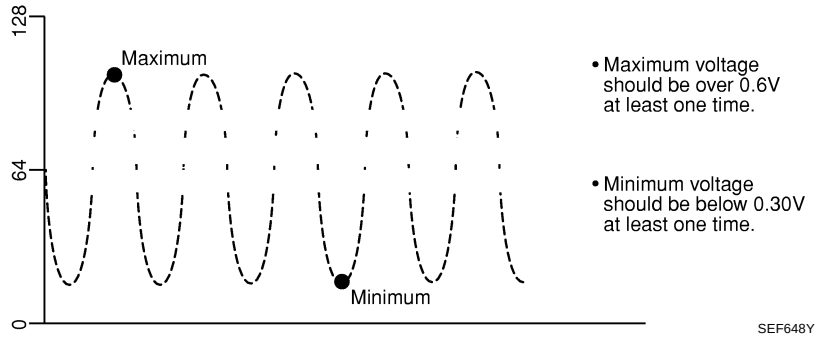

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Set voltmeter probes between ECM terminal 35 [HO2S1 (B1) signal] and engine ground.
3. Check the following with engine speed held at 2,000 rpm constant under no load.
   - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
   - The maximum voltage is over 0.6V at least one time.
   - The minimum voltage is below 0.3V at least one time.
   - The voltage never exceeds 1.0V.

   1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
   2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V

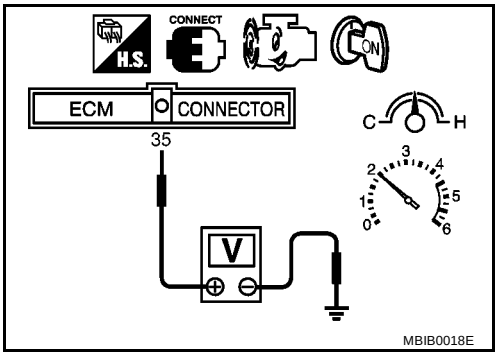

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OQA

HEATED OXYGEN SENSOR 1

Refer to EM-22, "EXHAUST MANIFOLD AND THREE WAY CATALYST" .

HO2S2

PFP:226A0

Component Description

EBS00OQB

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.
Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.
This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.
Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

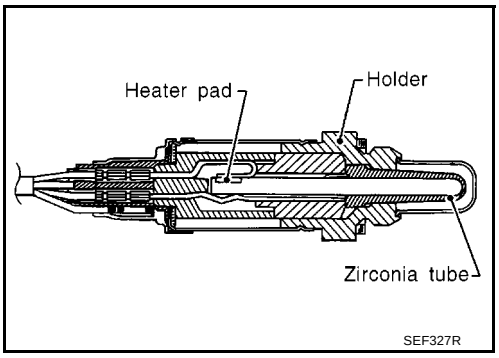

CONSULT-II Reference Value in Data Monitor Mode

EBS00OQC

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1)	● Engine: After warming up ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	Revving engine from idle to 3,000 rpm quickly.	0 - 0.3V ←→ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1)			LEAN ←→ RICH

Wiring Diagram

EBS00OQD

EC-RRO2-01

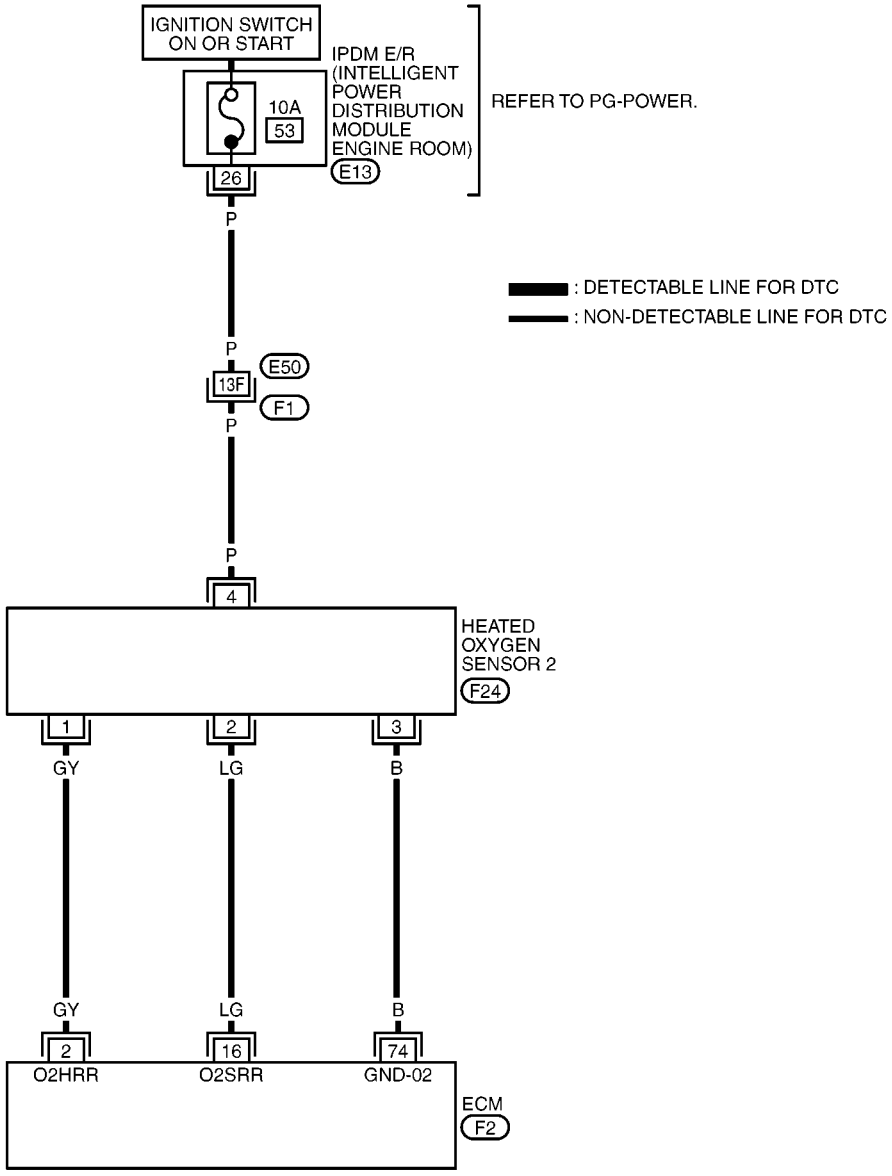

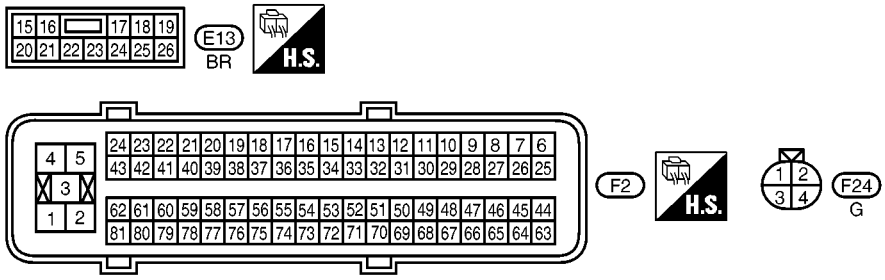

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0465E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
16	LG	Heated oxygen sensor 2	**[Engine is running]** ● **Warm-up condition** ● Revving engine from idle to 3,000 rpm quickly after the following conditions are met. ● Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	0 - Approximately 1.0V
74	B	Sensor ground (Heated oxygen sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V

Diagnostic Procedure

EBS00OQE

1. CHECK OVERALL FUNCTION-I

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 (HO2S2 signal) and ground.
6. Check the voltage while revving up to 4,000 rpm under no load at least 10 times. (Depress and release the accelerator pedal as quickly as possible.)

The voltage does not remain in the range of 0.2 - 0.4V

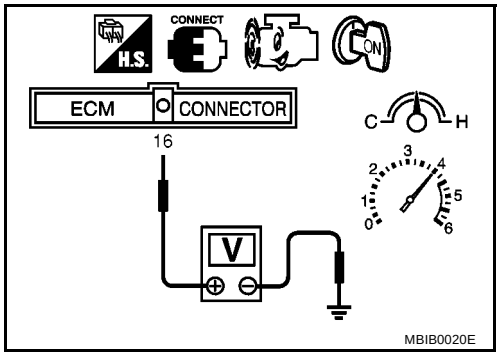

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK OVERALL FUNCTION-II

Keep engine at idle for 10 minutes, then check the voltage between ECM terminal 16 and ground, or check voltage when coasting 80 km/h (50 MPH) in 3rd gear (M/T) or D position (A/T).

The voltage does not remain in the range of 0.2 - 0.4V

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 3.

3. RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten body ground screws.

>> GO TO 4.

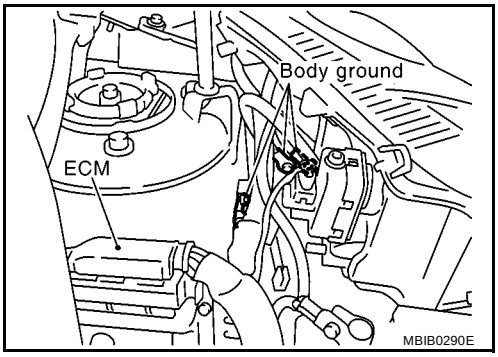

4. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector.
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 74 and HO2S2 terminal 3.
   Refer to Wiring Diagram.

   Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

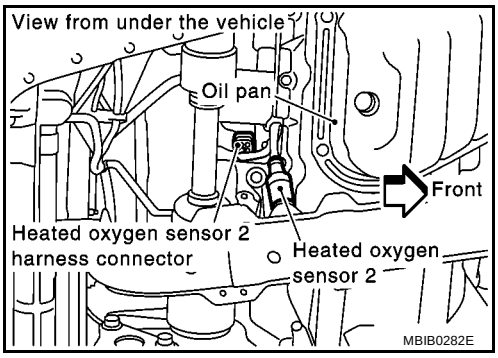

5. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 16 and HO2S2 terminal 2.
   Refer to Wiring Diagram.

   Continuity should exist.

2. Check harness continuity between ECM terminal 16 or HO2S2 terminal 2 and ground.
   Refer to Wiring Diagram.

   Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-790, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace heated oxygen sensor 2.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OQF

HEATED OXYGEN SENSOR 2

With CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y

6. Select “FUEL INJECTION” in “ACTIVE TEST” mode, and select “HO2S2 (B1)” as the monitor item with CONSULT-II.

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

7. Check “HO2S2 (B1)” at idle speed when adjusting “FUEL INJECTION” to ±25%.

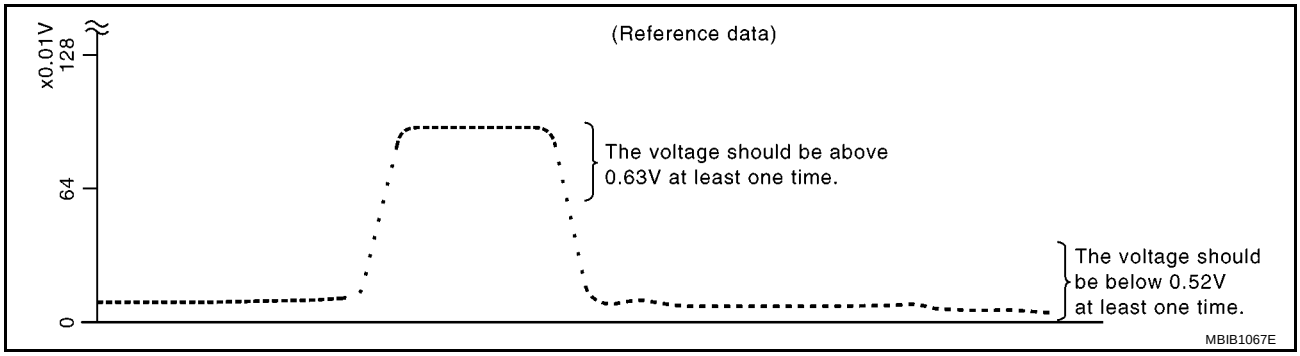

“HO2S2 (B1)” should be above 0.63V at least once when the “FUEL INJECTION” is +25%.
“HO2S2 (B1)” should be below 0.52V at least once when the “FUEL INJECTION” is −25%.

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 16 [HO2S2 (B1) signal] and engine ground.
6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
   (Depress and release accelerator pedal as soon as possible.)
   The voltage should be above 0.63V at least once during this procedure.
   If the voltage is above 0.63V at step 6, step 7 is not necessary.
7. Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position (A/T), 3rd gear position (M/T).
   The voltage should be below 0.52V at least once during this procedure.
8. If NG, replace heated oxygen sensor 2.

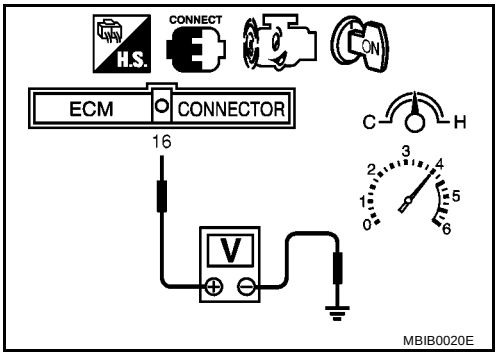

CAUTION:

- **Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.**
- **Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.**

Removal and Installation

EBS00OQG

HEATED OXYGEN SENSOR 2

Refer to EX-3, "EXHAUST SYSTEM" .

IGNITION SIGNAL

PFP:22448

Component Description

EBS00OQH

IGNITION COIL & POWER TRANSISTOR

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns on and off the ignition coil primary circuit. This on-off operation induces the proper high voltage in the coil secondary circuit.

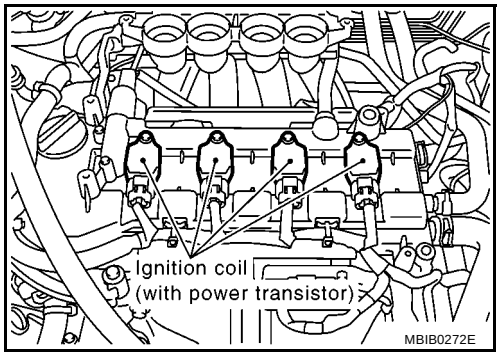

Wiring Diagram

EBS00OQI

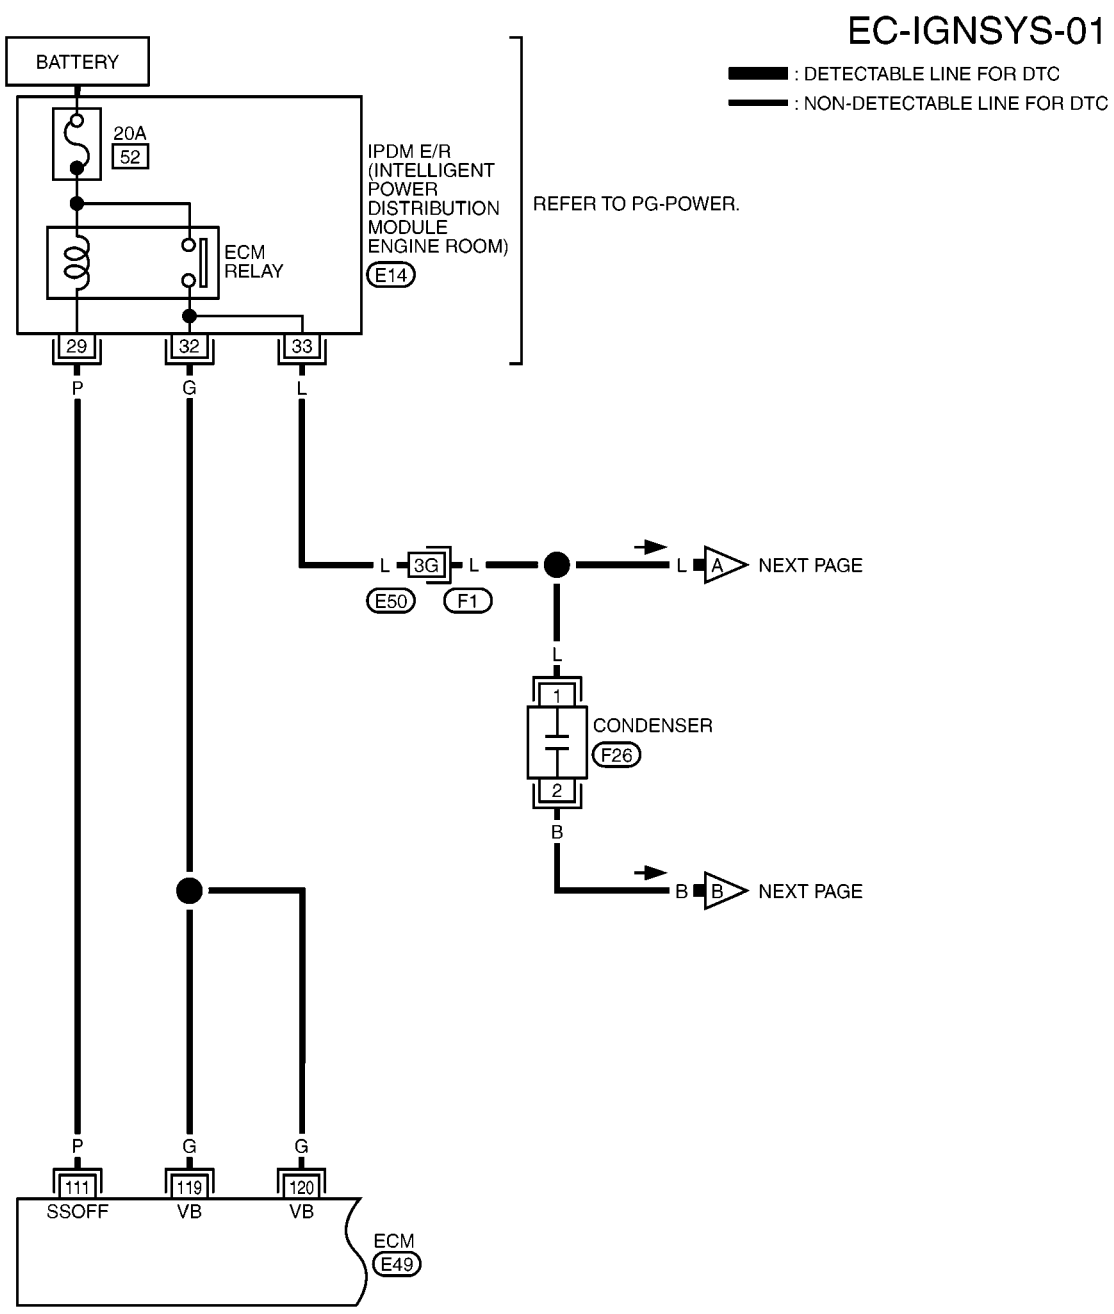



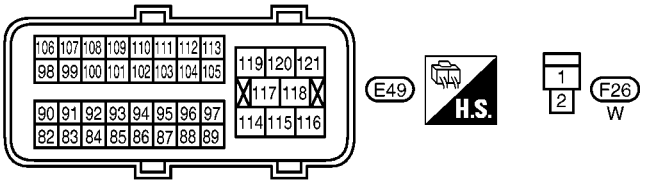

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0296E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
111	P	ECM relay (Self shut-off)	**[Engine is running]** **[Ignition switch OFF]** ● For a few seconds after turning ignition switch OFF	0 - 1.0V
			[Ignition switch OFF] ● More than a few seconds passed after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
119 120	G	Power supply for ECM	**[Ignition switch ON]**	BATTERY VOLTAGE (11 - 14V)

EC-IGNSYS-02

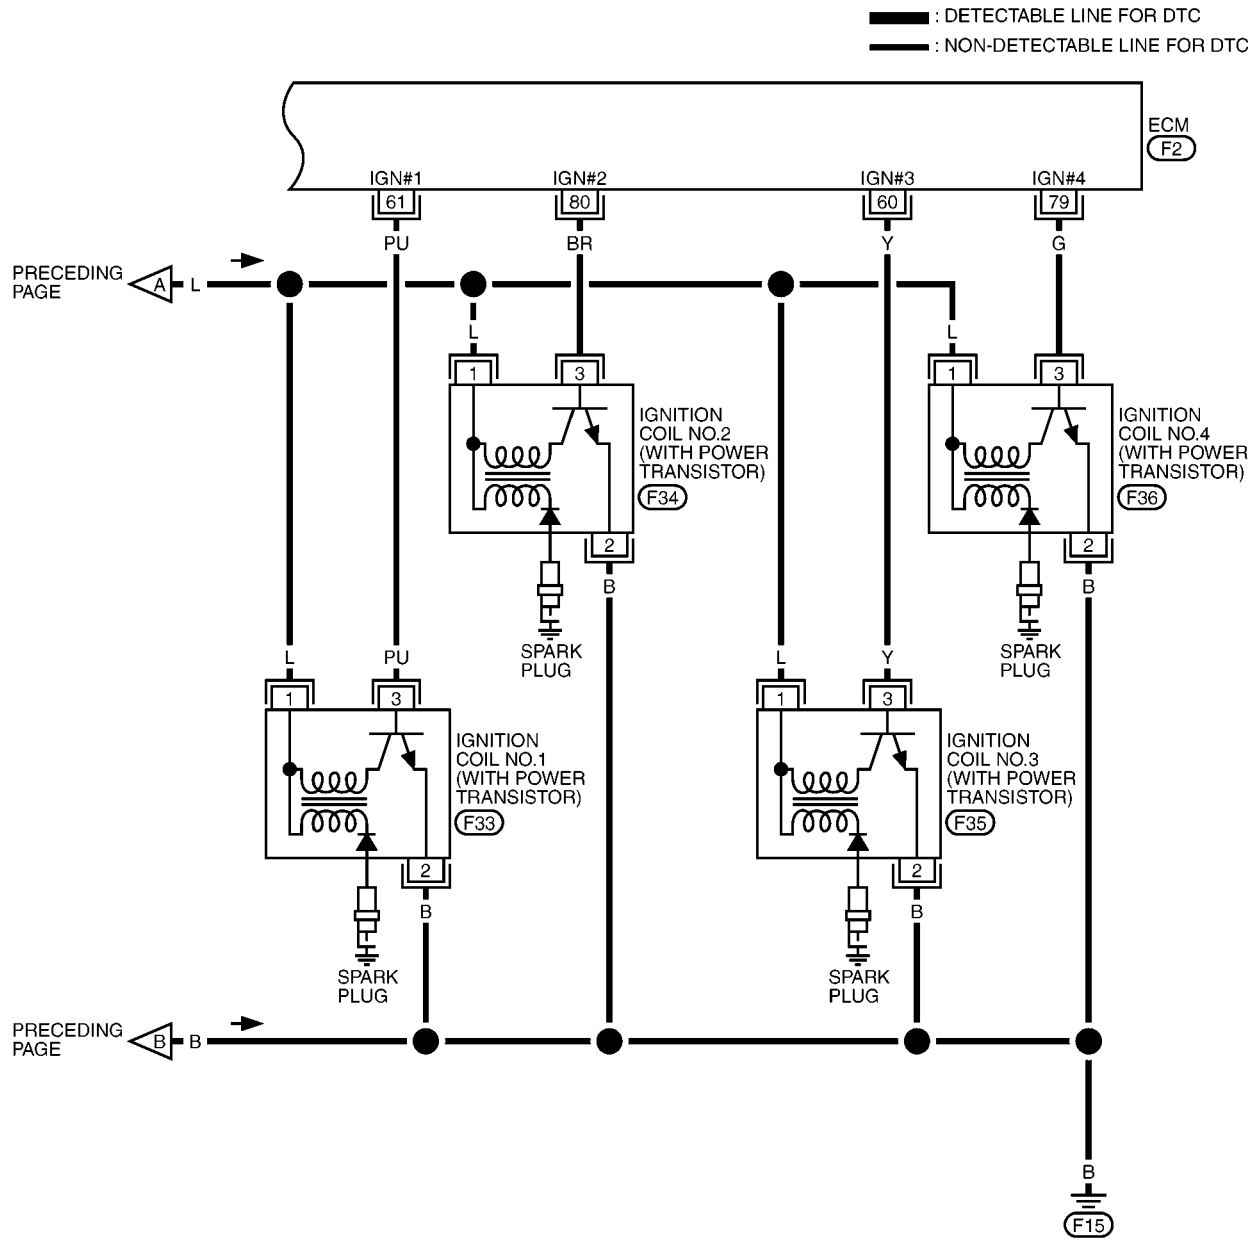

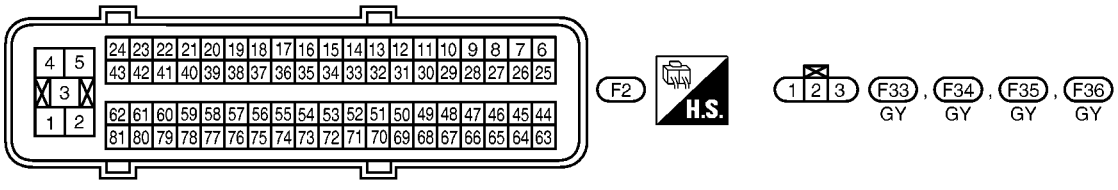

MBWA0297E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
60 61 79 80	Y PU G BR	Ignition signal No. 3 Ignition signal No. 1 Ignition signal No. 4 Ignition signal No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	0 - 0.1V★ 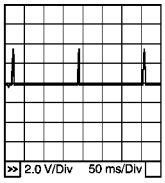 PBIB0521E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm.	0 - 0.2V★ 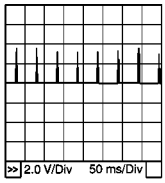 PBIB0522E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OQJ

1. CHECK ENGINE START

Turn ignition switch OFF, and restart engine.
Is engine running?

Yes or No

Yes (With CONSULT-II)>>GO TO 2.
Yes (Without CONSULT-II)>>GO TO 3.
No >> GO TO 4.

2. CHECK OVERALL FUNCTION

With CONSULT-II

1. Perform “POWER BALANCE” in “ACTIVE TEST” mode with CONSULT-II.
2. Make sure that each circuit produces a momentary engine speed drop.

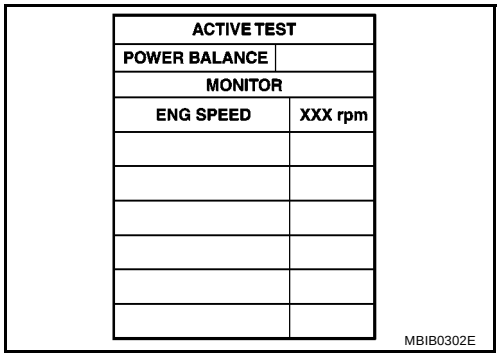

MBIB0302E

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 9.

3. CHECK OVERALL FUNCTION

Without CONSULT-II

1. Let engine idle.
2. Read the voltage signal between ECM terminals 60, 61, 79, 80 and ground with an oscilloscope.
3. Verify that the oscilloscope screen shows the signal wave as shown below.

NOTE:
The pulse cycle changes depending on rpm at idle.

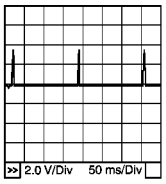

PBIB0521E

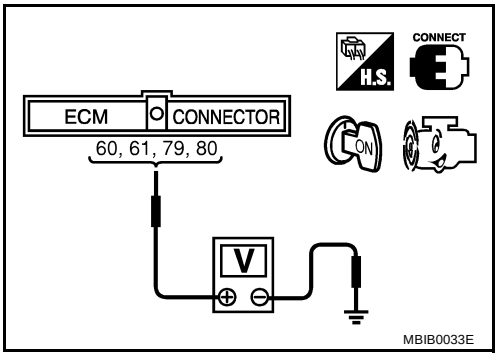

MBIB0033E

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 9.

4. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
2. Check voltage between ECM terminals 119, 120 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 5.
NG >> Go to EC-567, "POWER SUPPLY CIRCUIT FOR ECM"
.

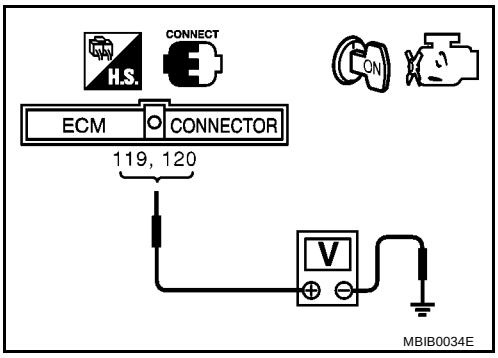

MBIB0034E

5. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect condenser harness connector.
3. Turn ignition switch ON.
4. Check voltage between condenser terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

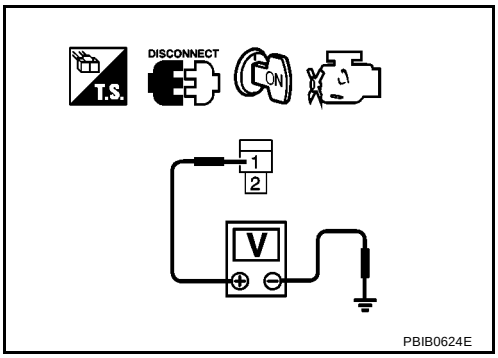

PBIB0624E

6. DETECT MALFUNCTION PART

Check the following.

- IPDM E/R harness connector E14
- Harness connectors E50, F1
- Harness for open or short between condenser and IPDM E/R

>> Repair or replace

7. CHECK CONDENSER GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between condenser terminal 2 and ground.
   Refer to Wiring diagram.

Continuity should exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 8.
NG >> Repair open circuit or short to power in harness or connector.

8. CHECK CONDENSER

Refer to EC-799, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace condenser.

9. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-V

1. Turn ignition switch OFF.
2. Reconnect all harness connectors disconnected.
3. Disconnect ignition coil harness connector.
4. Turn ignition switch ON.

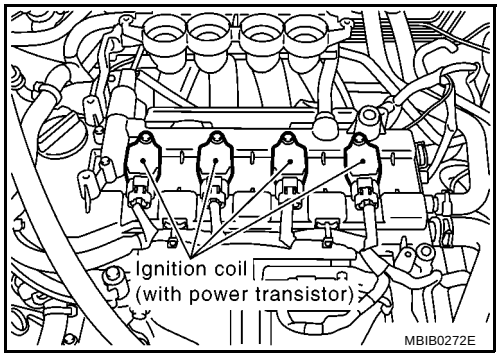

5. Check voltage between ignition coil terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 11.
NG >> GO TO 10.

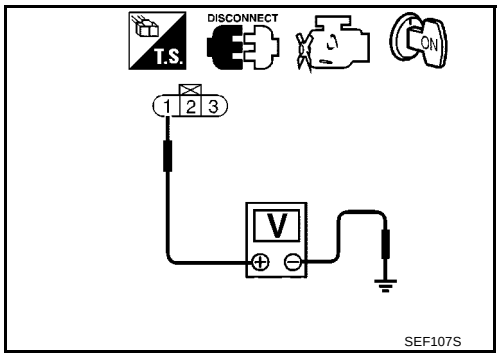

10. DETECT MALFUNCTIONING PART

Check harness for open or short between ignition coil and IPDM E/R.

>> Repair or replace harness or connectors.

11. CHECK IGNITION COIL GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between ignition coil terminal 2 and engine ground.
   Refer to Wiring Diagram.

   Continuity should exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 12.
NG >> Repair open circuit or short to power in harness or connectors.

12. CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminals 60, 61, 79, 80 and ignition coil terminal 3.
   Refer to Wiring Diagram.

   Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 13.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

13. CHECK IGNITION COIL WITH POWER TRANSISTOR

Refer to EC-799, "Component Inspection" .

OK or NG

OK >> GO TO 14.
NG >> Replace ignition coil with power transistor.

14. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OQK

CONDENSER

1. Turn ignition switch OFF.
2. Disconnect condenser harness connector.

3. Check resistance between condenser terminals 1 and 2.

Resistance: Above 1 MΩ at 25°C (77°F)

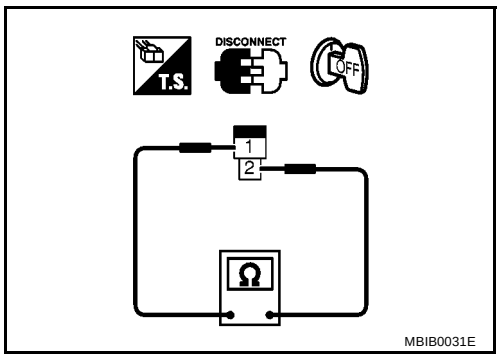

IGNITION COIL WITH POWER TRANSISTOR

1. Turn ignition switch OFF.
2. Disconnect ignition coil harness connector.
3. Check resistance between ignition coil terminals as follows.

Terminal No.	Resistance Ω [at 25°C (77°F)]
2 and 3	Except 0 or ∞
1 and 2	Except 0
1 and 3	

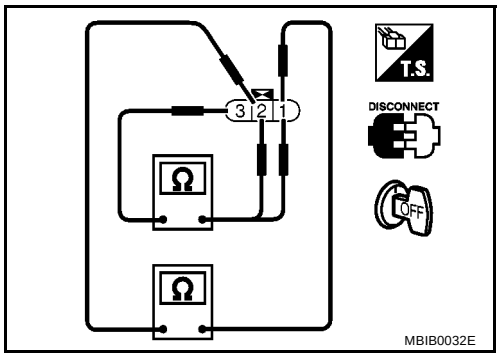

Removal and Installation

EBS00OQL

IGNITION COIL WITH POWER TRANSISTOR

Refer to EM-27, "IGNITION COIL" .

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

PFP:14920

Description

EBS00OQM

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Manifold absolute pressure sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Battery	Battery voltage*1		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Heated oxygen sensors 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Vehicle speed signal*2	Vehicle speed		

*1: ECM determines the start signal status by the signals of engine speed and battery voltage.
*2: This signal is sent to the ECM through CAN communication line.

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

COMPONENT DESCRIPTION

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

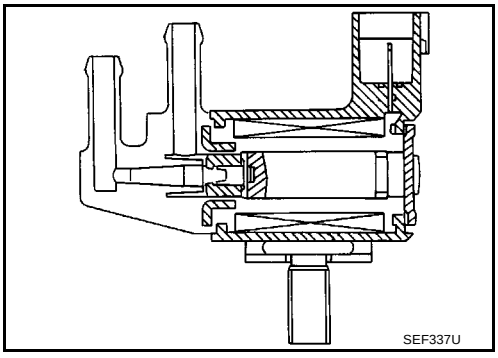

CONSULT-II Reference Value in Data Monitor Mode

EBS00OQN

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
PURG VOL C/V	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	0%
		2,000 rpm	20 - 30%

Wiring Diagram

EBS00OQO

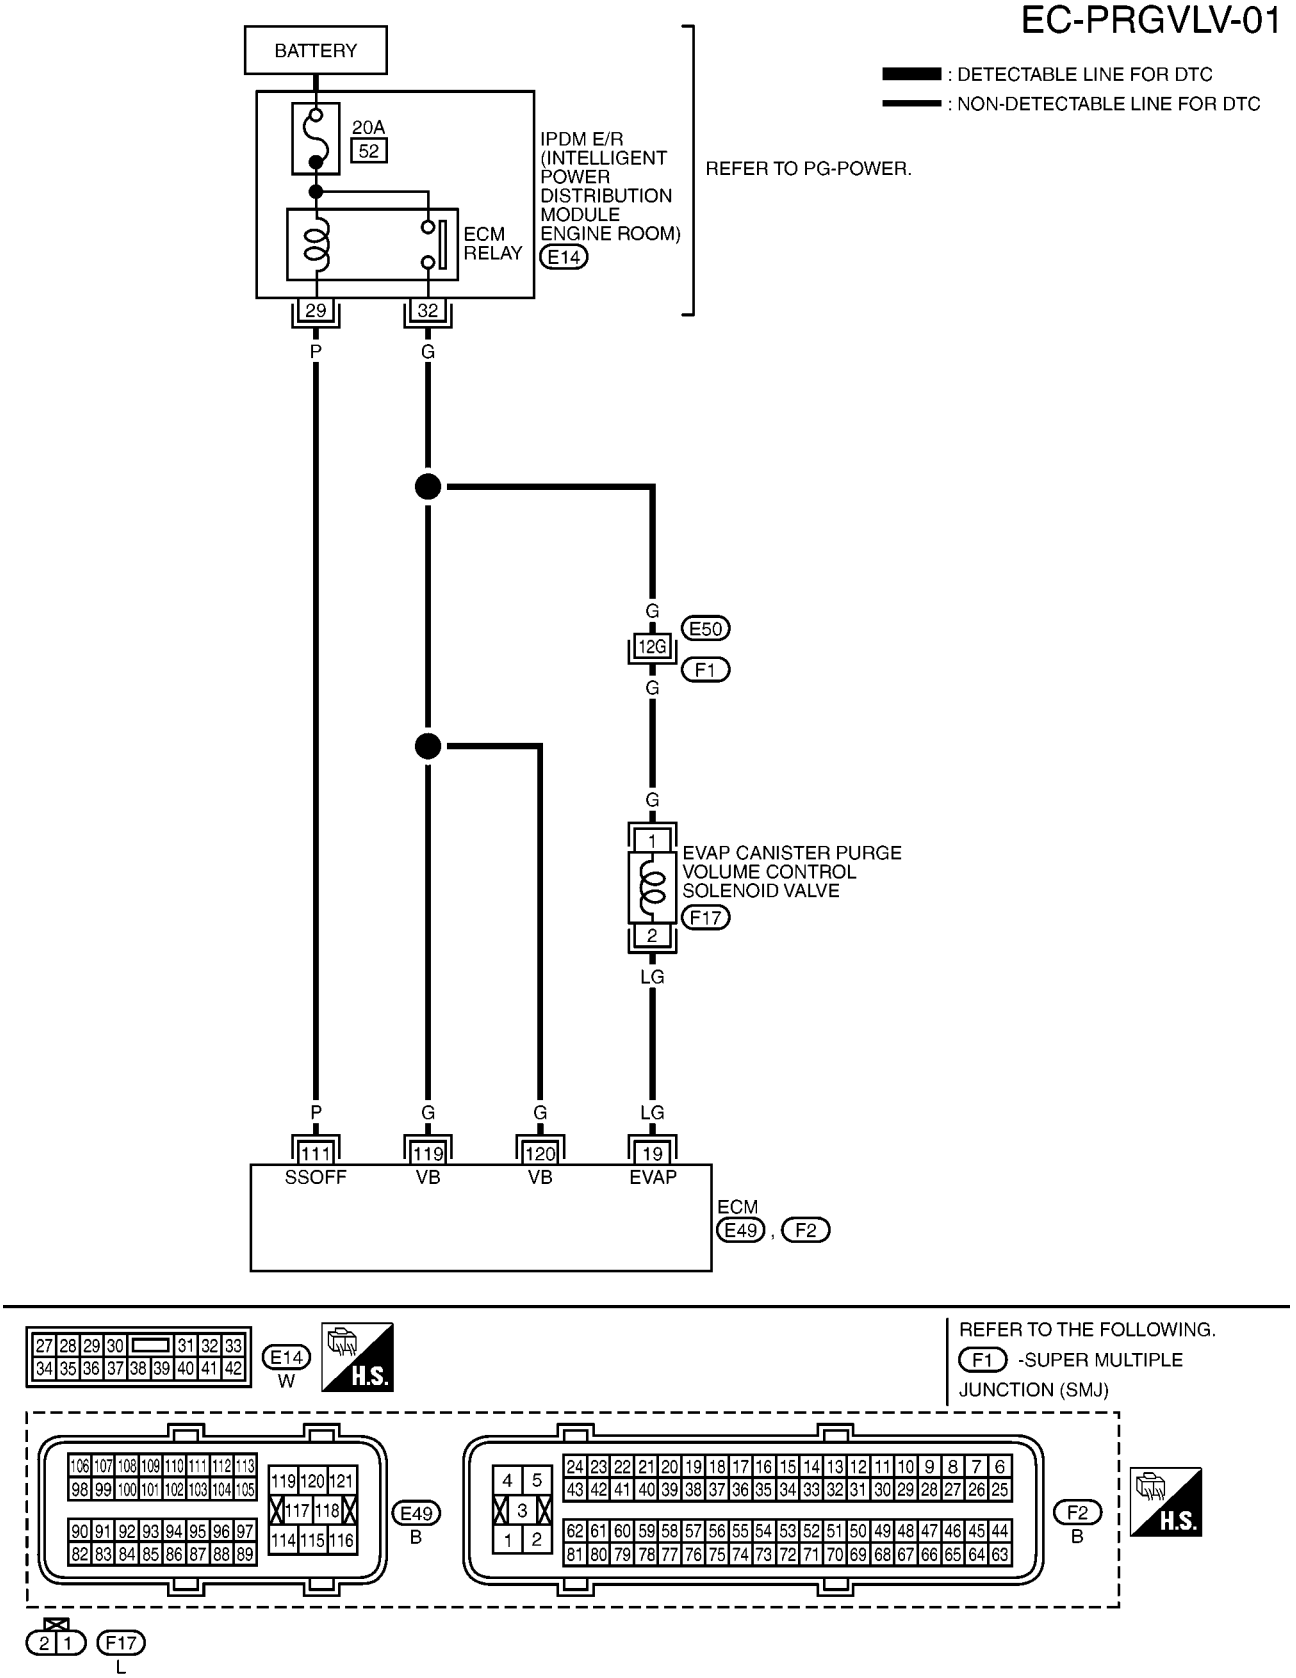

MBWA0578E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
19	LG	EVAP canister purge volume control solenoid valve	**[Engine is running]** ● Idle speed	BATTERY VOLTAGE (11 - 14V)★ 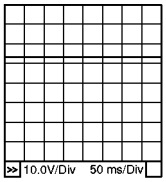 PBIB0050E
			[Engine is running] ● Engine speed is about 2,000 rpm (More than 100 seconds after starting engine)	Approximately 10V★ 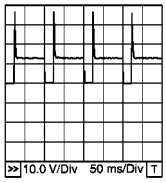 PBIB0520E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OQP

1. CHECK OVERALL FUNCTION

With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect the EVAP purge hose connected to the EVAP canister.
3. Turn ignition switch ON, and select “PURG VOL CONT/V” in “ACTIVE TEST” mode with CONSULT-II.
4. Start engine and let it idle.

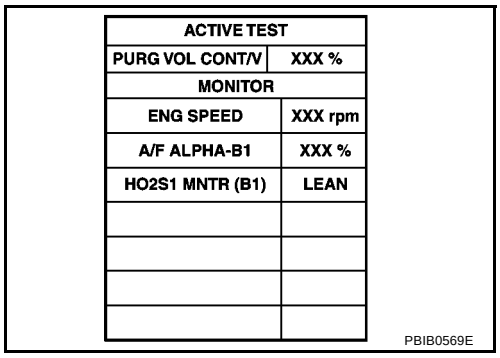

5. Change the valve opening percentage with touching “Qu” or “Qd” on CONSULT-II screen, and check for vacuum existence at the EVAP purge hose under the following conditions.

Conditions (PURG VOL CONT/V value)	Vacuum
0%	Should not exist.
100%	Should exist.

Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect the EVAP purge hose connected to the EVAP canister.
3. Start engine and let it idle for at least 80 seconds.
4. Check for vacuum existence at the EVAP purge hose under the following conditions.

Conditions	Vacuum
At idle	Should not exist.
Engine speed is about 2,000 rpm.	Should exist.

OK or NG

OK >> GO TO 2.
NG >> GO TO 3.

2. CHECK EVAP CANISTER

Refer to EC-843, "Component Inspection" .

OK or NG

OK >> **INSPECTION END**
NG >> Replace EVAP canister.

3. CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection.
Refer to EC-840, "EVAPORATIVE EMISSION SYSTEM" .

OK or NG

OK >> GO TO 4.
NG >> Repair or reconnect the hose.

4. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
3. Turn ignition switch ON.

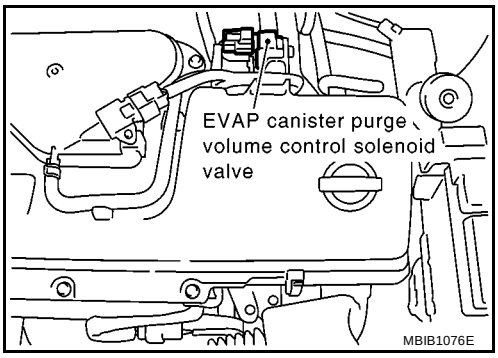

4. Check voltage between EVAP canister purge volume control solenoid valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

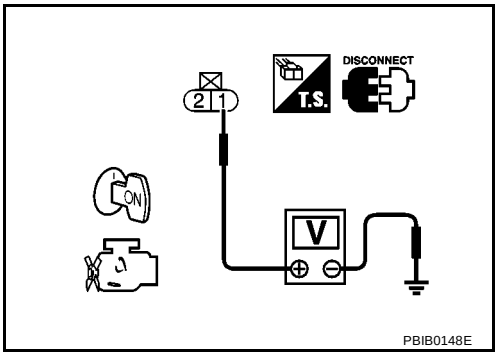

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between EVAP canister purge volume control solenoid valve and IPDM E/R
- Harness for open or short between EVAP canister purge volume control solenoid valve and ECM

>> Repair harness or connectors.

6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 19 and EVAP canister purge volume control solenoid valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK (With CONSULT-II)>>GO TO 7.
OK (Without CONSULT-II)>>GO TO 8.
NG >> Repair open circuit or short to ground and short to power in harness or connectors.

7. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

With CONSULT-II

1. Reconnect all harness connectors disconnected.
2. Start engine.
3. Perform “PURG VOL CONT/V” in “ACTIVE TEST” mode with CONSULT-II. Check that engine speed varies according to the valve opening.

ACTIVE TEST	
PURG VOL CONT/V	XXX %
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XXX %
HO2S1 MNTR (B1)	LEAN

PBIB0569E

OK or NG

OK >> GO TO 9.
NG >> GO TO 8.

8. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-806, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace EVAP canister purge volume control solenoid valve.

9. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OQQ

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition (PURG VOL CONT/V value)	Air passage continuity between A and B
100%	Yes
0%	No

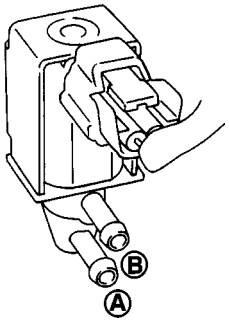

PBIB0149E

Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

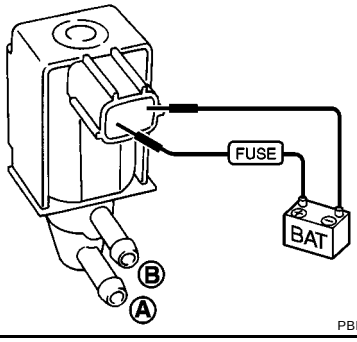

PBIB0150E

Removal and Installation

EBS00OQR

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EM-16, "AIR CLEANER AND AIR DUCT" .

VSS

PFP:32702

Description

EBS00OSW

The vehicle speed signal is sent to the combination meter from the “ABS actuator and electric unit (control unit)” through CAN communication line. The combination meter then sends a signal to the ECM through CAN communication line.

Diagnostic Procedure

EBS00OSX

1. INSPECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.
No >> GO TO 3.

2. CHECK OVERRALL FUNCTION

1. Turn ignition switch OFF.
2. Lift up the vehicle.
3. Start engine and let it idle
4. Select “VHCL SPEED SE” in“DATA MONITOR” mode with CONSULT-II.
5. Select “VHCL SPEED SE” indication when rotating wheels with suitable gear position.

“VHCL SPEED SE” indication should exceed 10km/h (6MPH).

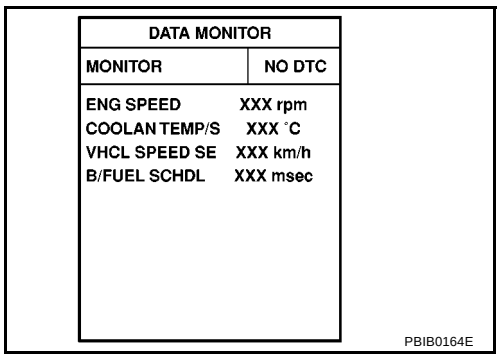

OK or NG

OK >> **INSPECTION END**.
NG >> GO TO 3.

3. CHECK DTC

Refer to BRC-8, "TROUBLE DIAGNOSIS" (models without ESP) or BRC-61, "TROUBLE DIAGNOSIS" (models with ESP).

OK or NG

OK >> GO TO 4.
NG >> Repair or replace.

4. CHECK COMBINATION METER

Check combination meter function.
Refer to DI-5, "COMBINATION METERS" .

>> **INSPECTION END**

IVT CONTROL SOLENOID VALVE

PFP:23796

Description

EBS00OQS

SYSTEM DESCRIPTION

Sensor	Input signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS)	Engine speed	Intake valve timing control	Intake valve timing control solenoid valve
Camshaft position sensor (PHASE)			
Engine coolant temperature sensor	Engine coolant temperature		
Vehicle speed signal*	Vehicle speed		

*: This signal is sent to the ECM through CAN communication line.

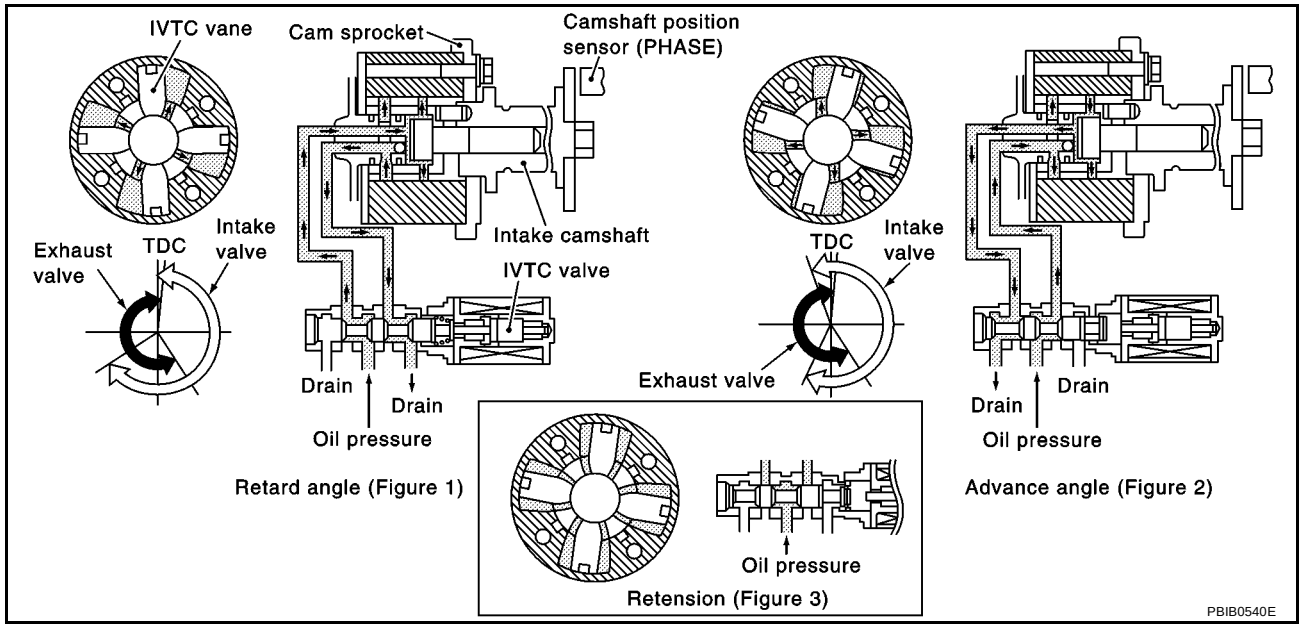

This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intake valve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolant temperature. Then, the ECM sends ON/OFF pulse duty signals to the intake valve timing control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

COMPONENT DESCRIPTION

Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.

The longer pulse width advances valve angle.

The shorter pulse width retards valve angle.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

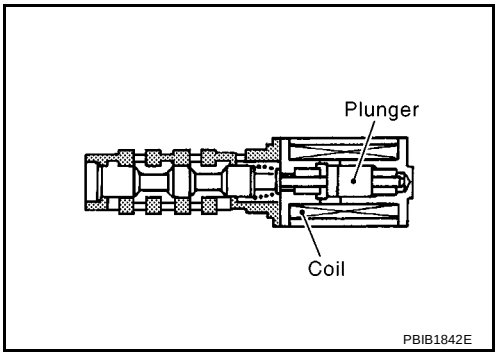

CONSULT-II Reference Value in Data Monitor Mode

EBS00OQT

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
INT/V TIM (B1)	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	–5° - 5°CA
		When revving up to 2,000 rpm quickly	Approx. 0° - 20°CA
INT/V SOL (B1)	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	0% - 2%
		When revving up to 2,000 rpm quickly	Approx. 0% - 50%

Wiring Diagram

EBS00OQU

EC-IVC/V-01

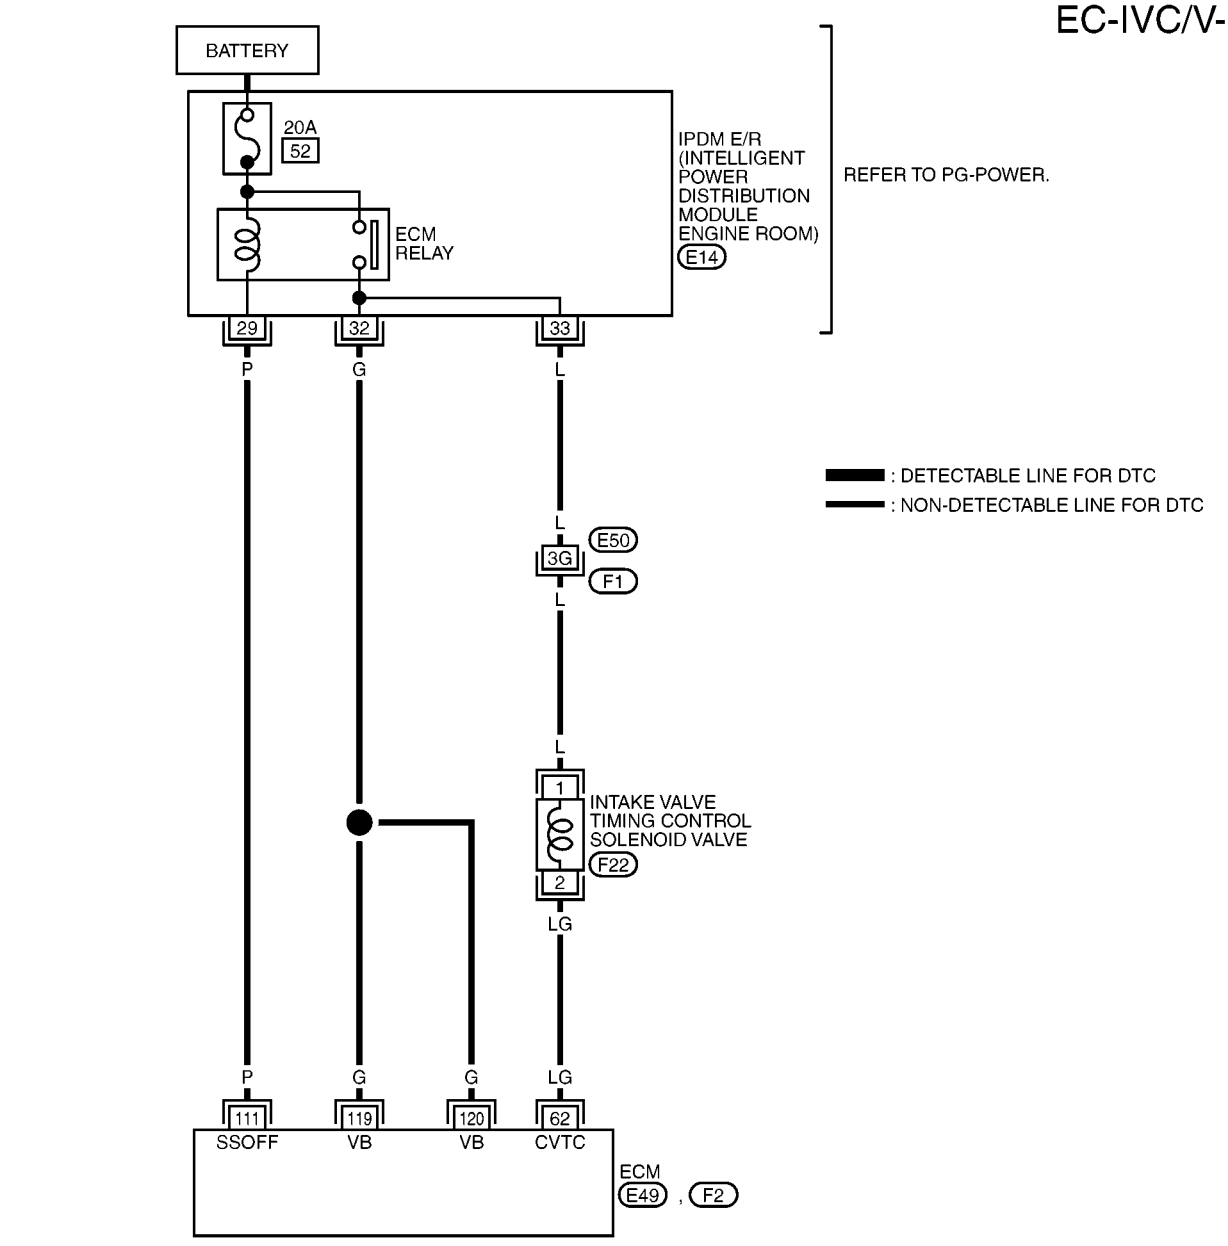

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

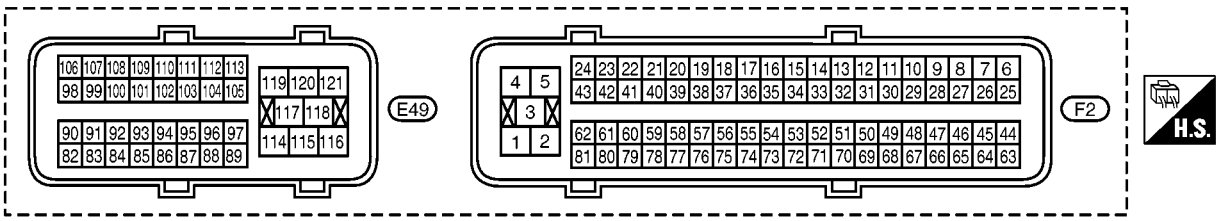

MBWA0468E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	LG	Intake valve timing control solenoid valve	**[Engine is running]** ● **Warm-up condition** ● Idle speed	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● **Warm-up condition** ● When revving engine up to 2,000 rpm quickly	Approximately 4V - BATTERY VOLTAGE (11 - 14V)★ 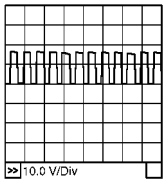 PBIB1790E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OQV

1. CHECK OVERALL FUNCTION CHECK

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON.
4. Set the tester probe between ECM terminals 62 (IVT control solenoid valve signal) and ground.
5. Start engine and let it idle.
6. Check the voltage under the following conditions.
   Verify that the oscilloscope screen shows the signal wave as shown below.

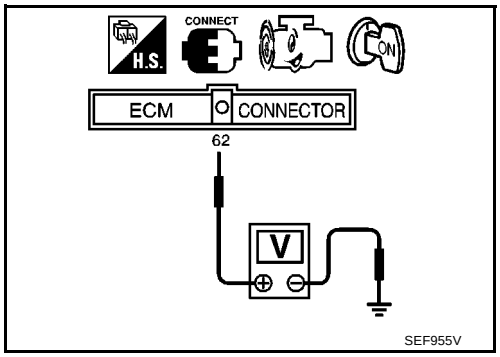

SEF955V

Conditions	Voltage
At idle	BATTERY VOLTAGE (11 - 14V)
When revving engine up to 2,000 rpm quickly	Approximately 4V - BATTERY VOLTAGE (11 - 14V)★ 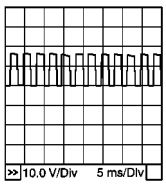 PBIB0532E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect intake valve timing control solenoid valve harness connector.
3. Turn ignition switch ON.

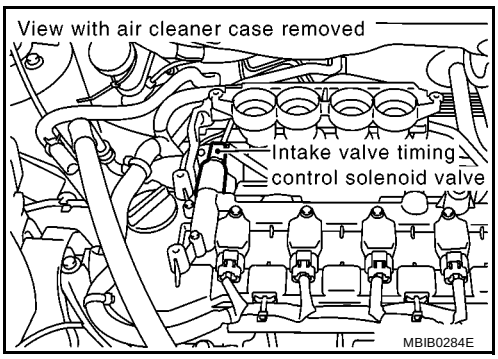

4. Check voltage between intake valve timing control solenoid valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

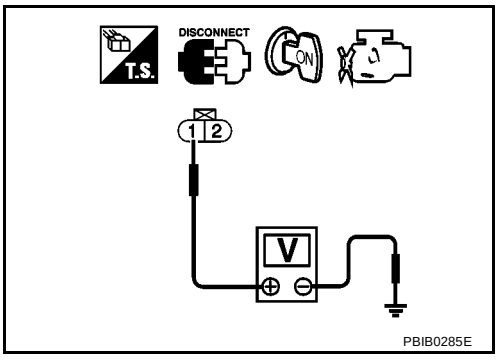

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- IPDM E/R harness connector E14
- Harness for open or short between intake valve timing control solenoid valve and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 62 and intake valve timing control solenoid valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EC-814, "Component Inspection" .

OK or NG

OK >> GO TO 6.
NG >> Replace intake valve timing control solenoid valve.

6. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-648, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace crankshaft position sensor (POS).

7. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-655, "Component Inspection" .

OK or NG

OK >> GO TO 8.
NG >> Replace camshaft position sensor (PHASE).

8. CHECK CAMSHAFT (INTAKE)

Check the following.

- Accumulation of debris to the signal plate of camshaft rear end
- Chipping signal plate of camshaft rear end

OK or NG

OK >> GO TO 9.
NG >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

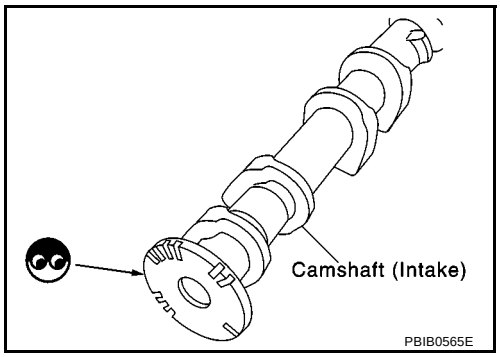

9. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OQW

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

1. Disconnect intake valve timing control solenoid valve harness connector.
2. Check resistance between intake valve timing control solenoid valve terminals 1 and 2 under the following conditions.

Terminals	Resistance
1 and 2	Approximately 7.2Ω at 20°C (68°F)
1 or 2 and ground	∞Ω (Continuity should not exist)

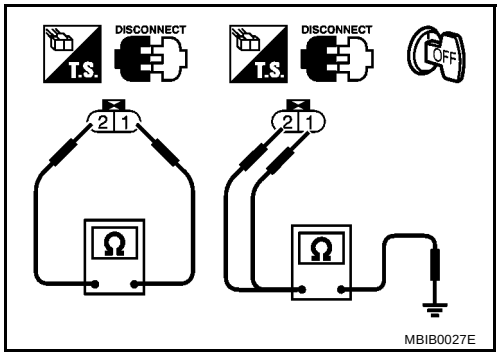

Removal and Installation

EBS00OQX

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EM-33, "ROCKER COVER" .

PNP SWITCH

PFP:32006

Component Description

EBS00OQY

When the shift lever position is P or N (A/T models) or Neutral (M/T models), park/neutral position (PNP) switch is ON.
ECM detects the position because the continuity of the line (the ON signal) exists.

CONSULT-II Reference Value in Data Monitor Mode

EBS00OQZ

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
P/N POSI SW	● Ignition switch: ON	Shift lever: P or N (A/T models) Neutral (M/T models)	ON
		Shift lever: Except above	OFF

Wiring Diagram

EBS00OR0

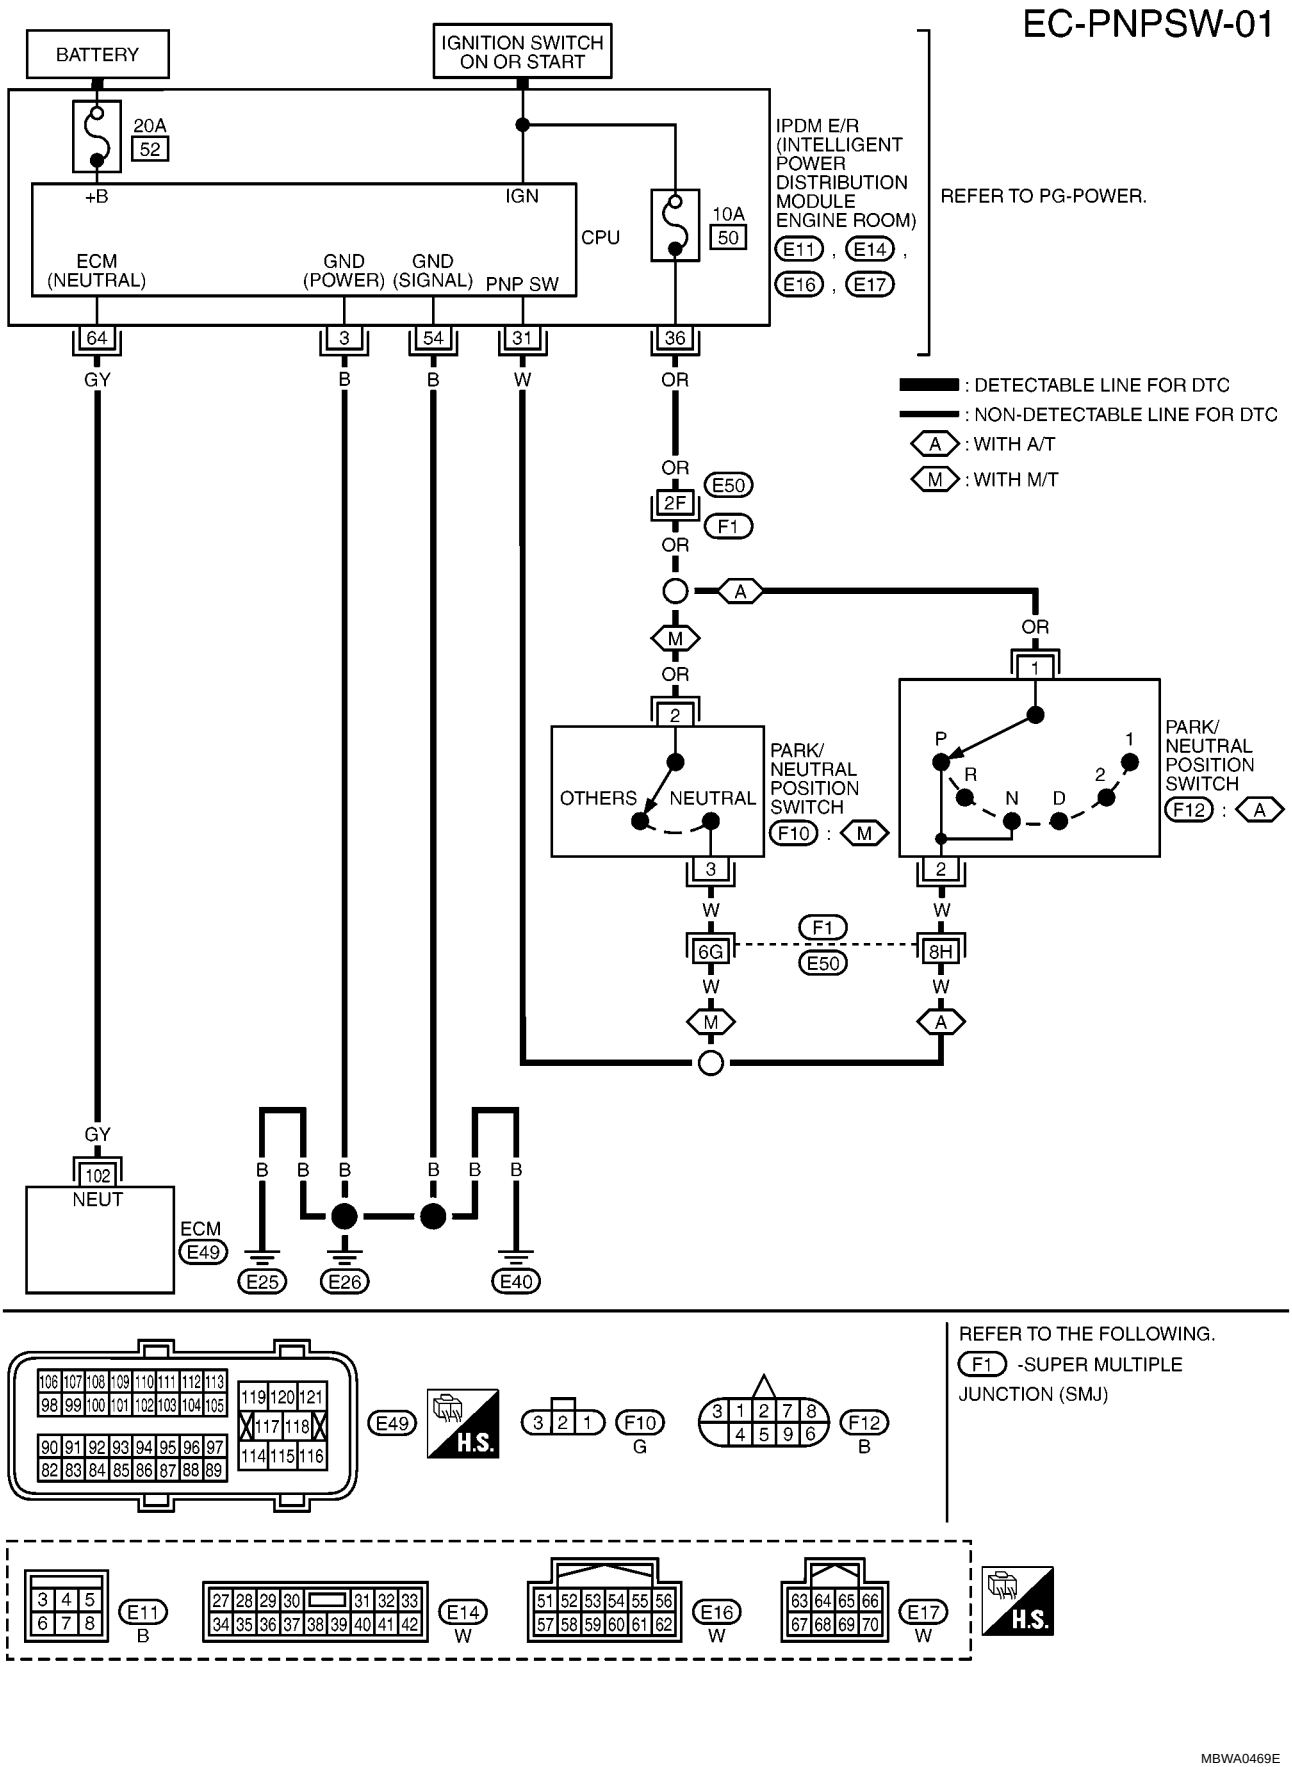

MBWA0469E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
102	GY	PNP switch	**[Ignition switch ON]** ● Shift lever position: P or N (A/T models) Neutral (M/T models).	Approximately 0V
			[Ignition switch ON] ● Except the above gear position	BATTERY VOLTAGE

Diagnostic Procedure

EBS00OR1

1. CHECK OVERALL FUNCTION

With CONSULT-II

1. Turn ignition switch ON.
2. Select “P/N POSI SW” in “DATA MONITOR” mode with CONSULT-II.
3. Check the “P/N POSI SW” signal under the following conditions.

Selector lever position	P/N POSI SW signal
P and N (A/T models), Neutral (M/T models) position	ON
Except the above position	OFF

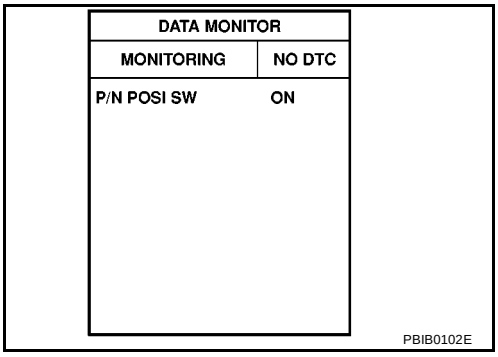

Without CONSULT-II

1. Turn ignition switch ON.
2. Check voltage between ECM terminal 102 and ground under the following conditions.

Selector lever position	Voltage
P and N (A/T models), Neutral (M/T models) position	Approximately 0V
Except the above position	Battery voltage

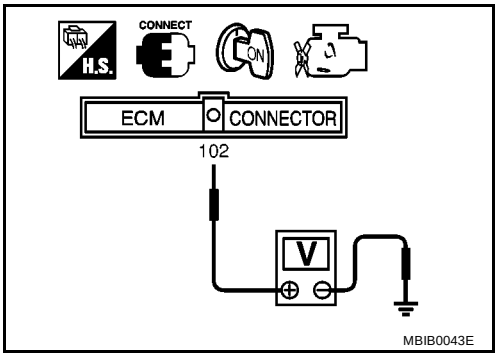

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK PNP SWITCH CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between IPDM E/R terminal 31 and ground under following condition.

Shift lever position	Voltage
P or N (A/T models) Neutral (M/T models)	Battery voltage (11- 14V)
Except above position	Approximately 0V

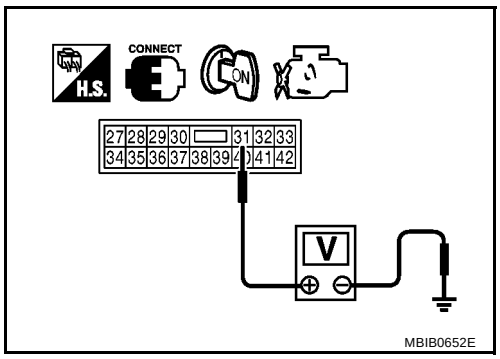

OK or NG

OK >> GO TO 8.
NG >> GO TO 3.

3. CHECK PNP SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Connect IPDM E/R harness connector.
3. Disconnect PNP switch harness connector.
4. Turn ignition switch ON.
5. Check voltage between PNP switch terminal 1 (A/T models) or 2 (M/T models) and ground with CONSULT-II or tester.

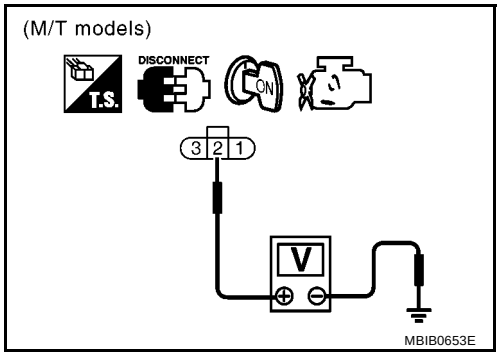

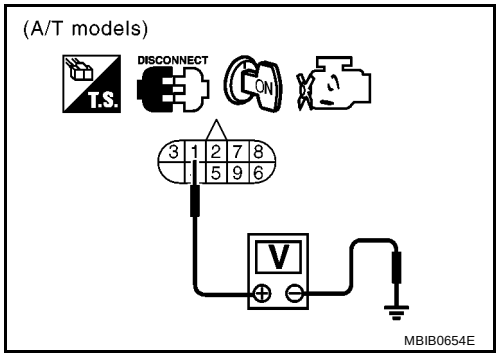

Voltage: Battery voltage

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PARTS

Check the following.

- 10A fuse
- Harness connectors E50, F1
- IPDM E/R connector E14
- Harness for short or open between PNP switch and fuse

>> Repair or replace harness or connectors.

5. CHECK HARNESS CONTINUTY BETWEEN PNP SWITCH AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E14.
3. Check harness continuity between IPDM E/R terminal 31 and PNP switch terminal 2 (A/T models), 3 (M/T models).

Continuity should exist.

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. DETECT MALFUNCTIONING PARTS

Check the following.

- Harness connectors E50, F1
- Harness for short or open between PNP switch and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK PNP SWITCH

Refer to AT-361, "COMPONENT INSPECTION" (A/T models).

OK or NG

OK >> GO TO 9.
NG >> Replace PNP switch.

8. CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E17
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 102 and IPDM E/R terminal 64.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO OT 9.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

9. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

INJECTOR CIRCUIT

PFP:16600

Component Description

EBS00OR2

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

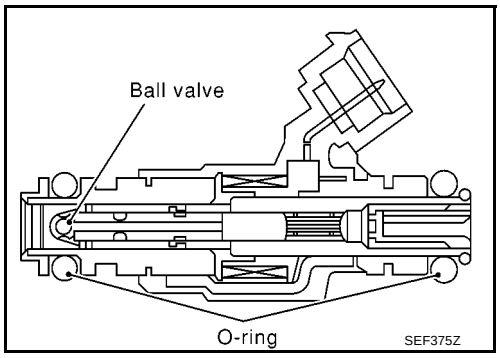

CONSULT-II Reference Value in Data Monitor Mode

EBS00OR3

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
B/FUEL SCHDL	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	2.5 - 3.5 msec
		2,000 rpm	2.5 - 3.5 msec
INJ PULSE-B1	● Engine: After warming up ● Shift lever: N (A/T models) Neutral (M/T models) ● Air conditioner switch: OFF ● No load	Idle	2.0 - 3.0 msec
		2,000 rpm	1.9 - 2.9 msec

Wiring Diagram

EBS00OR4

EC-INJECT-01

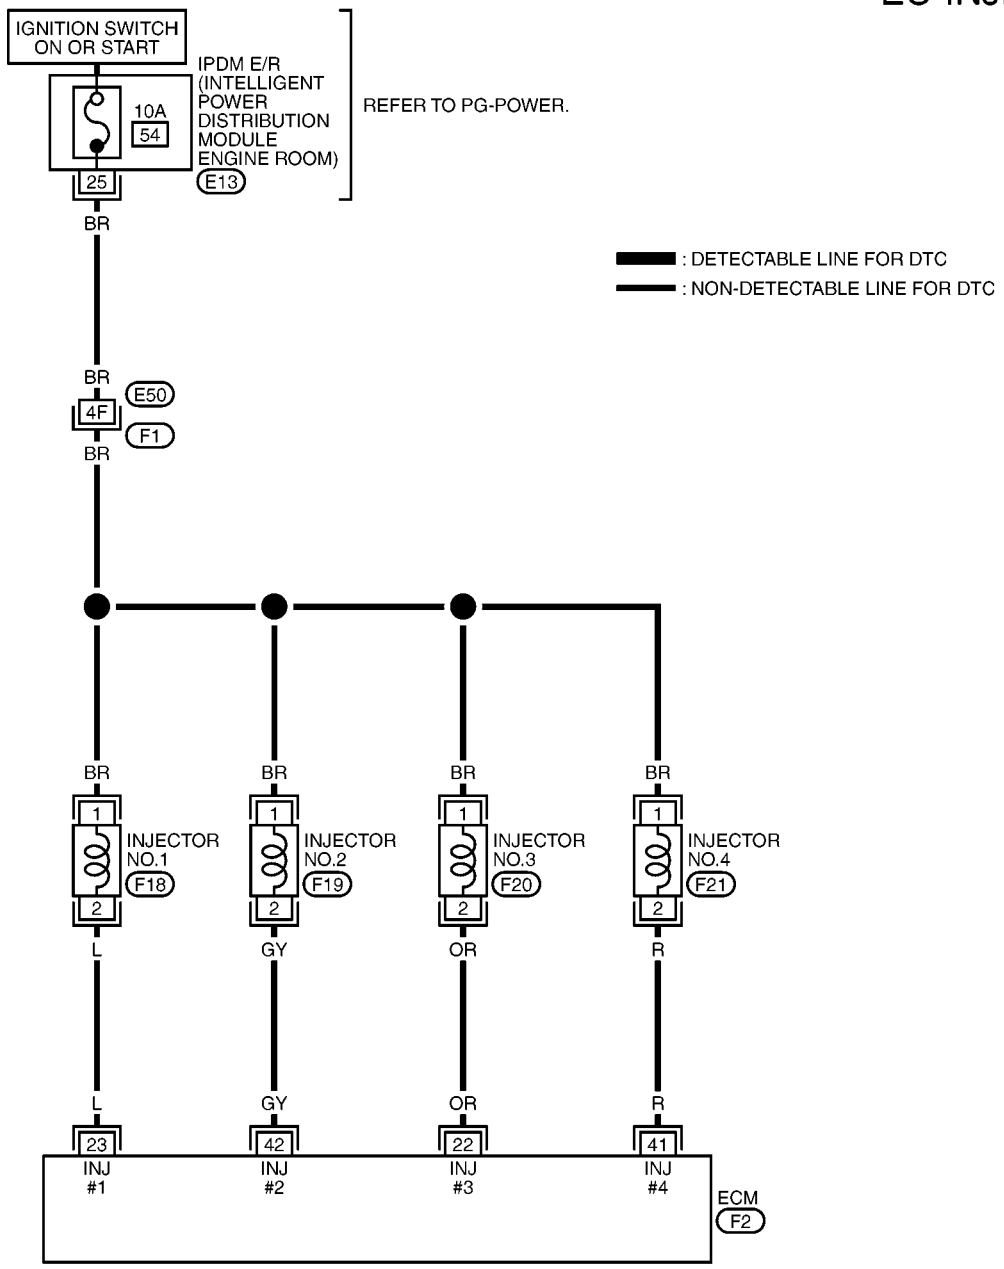

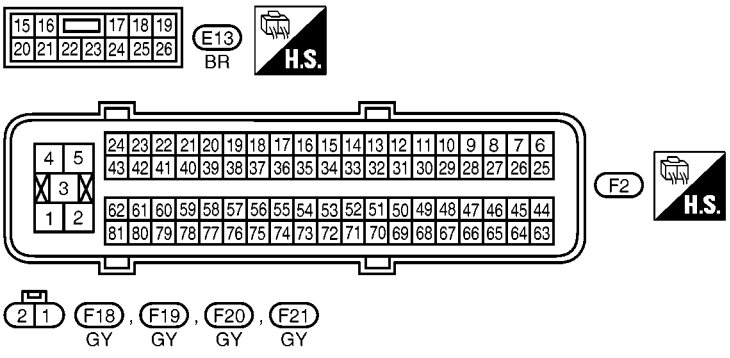

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0298E

Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:
Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22 23 41 42	OR L R GY	Injector No. 3 Injector No. 1 Injector No. 4 Injector No. 2	**[Engine is running]** ● **Warm-up condition** ● Idle speed **NOTE:** The pulse cycle changes depending on rpm at idle.	BATTERY VOLTAGE (11 - 14V)★ 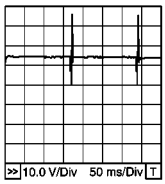 PBIB0529E
			[Engine is running] ● **Warm-up condition** ● Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14V)★ 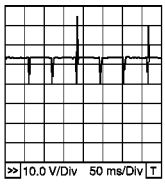 PBIB0530E

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnostic Procedure

EBS00OR5

1. INSPECTION START

Turn ignition switch to START.
Is any cylinder ignited?

Yes or No

Yes >> GO TO 2.
No >> GO TO 3.

2. CHECK OVERALL FUNCTION

With CONSULT-II

1. Start engine.
2. Perform “POWER BALANCE” in “ACTIVE TEST” mode with CONSULT-II.
3. Make sure that each circuit produces a momentary engine speed drop.

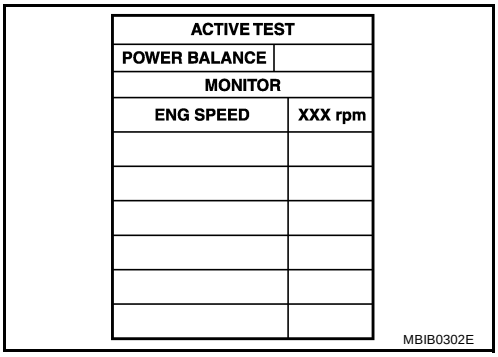

Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.
   Clicking noise should be heard.

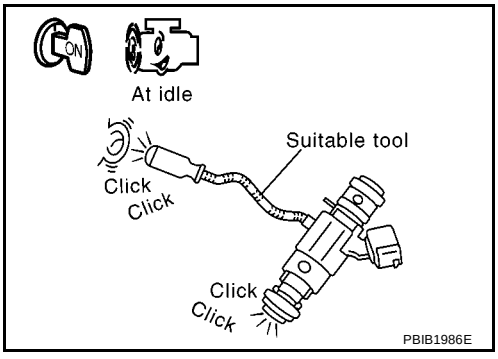

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 3.

3. CHECK INJECTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect injector harness connector.
3. Turn ignition switch ON.

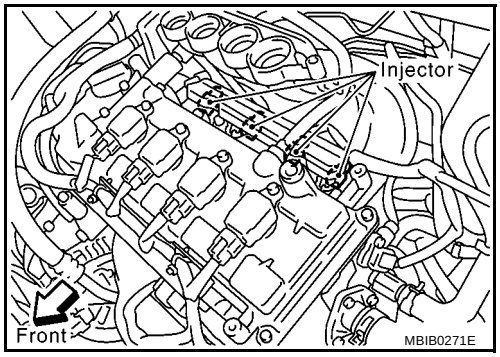

4. Check voltage between injector terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 5.
NG >> GO TO 4.

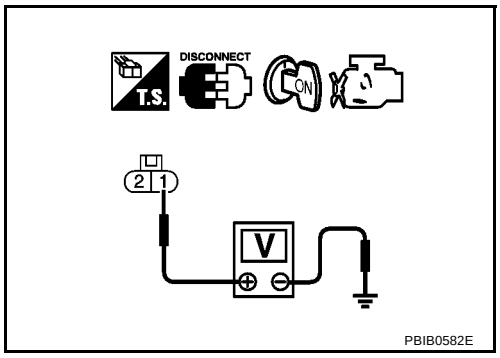

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E50
- IPDM E/R connector E13
- 10A fuse
- Harness for open or short between injector and fuse

>> Repair harness or connectors.

5. CHECK INJECTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between injector terminal 2 and ECM terminals 22, 23, 41, 42. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK INJECTOR

Refer to EC-825, "Component Inspection" .

OK or NG

OK >> GO TO 7.
NG >> Replace injector.

7. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

>> **INSPECTION END**

Component Inspection

EBS00OR6

INJECTOR

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.

Resistance: 12.1 - 12.9Ω [at 20°C (68°F)]

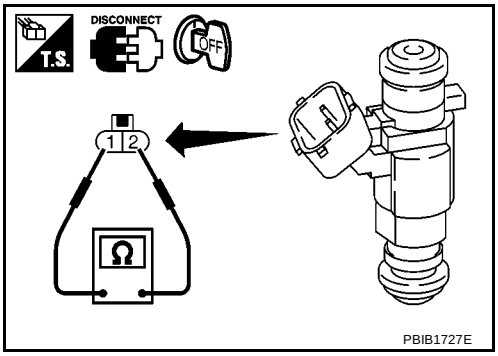

Removal and Installation

EBS00OR7

INJECTOR

Refer to EM-30, "FUEL INJECTOR AND FUEL TUBE" .

FUEL PUMP CIRCUIT

PFP:17042

Description

EBS00OR8

SYSTEM DESCRIPTION

Sensor	Input Signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*	Fuel pump control	Fuel pump relay
Battery	Battery voltage*		

*: ECM determines the start signal status by the signals of engine speed and battery voltage.

The ECM activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the ECM receives a engine speed signal from the crankshaft position sensor (POS) and camshaft position sensor (PHASE), it knows that the engine is rotating, and causes the pump to operate. If the engine speed signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 1 second.
Engine running and cranking	Operates.
When engine is stopped	Stops in 1.5 seconds.
Except as shown above	Stops.

COMPONENT DESCRIPTION

A turbine type design fuel pump is used in the fuel tank.

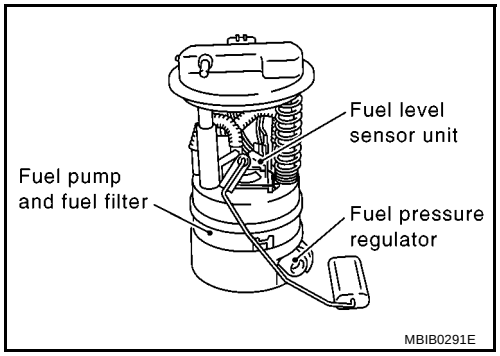

CONSULT-II Reference Value in Data Monitor Mode

EBS00OR9

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	● For 1 second after turning ignition switch ON ● Engine running or cranking	ON
	● Except above conditions	OFF

Wiring Diagram

SMA for VIN >SJN**AK12U1309269

EBS00ORA

EC-F/PUMP-01

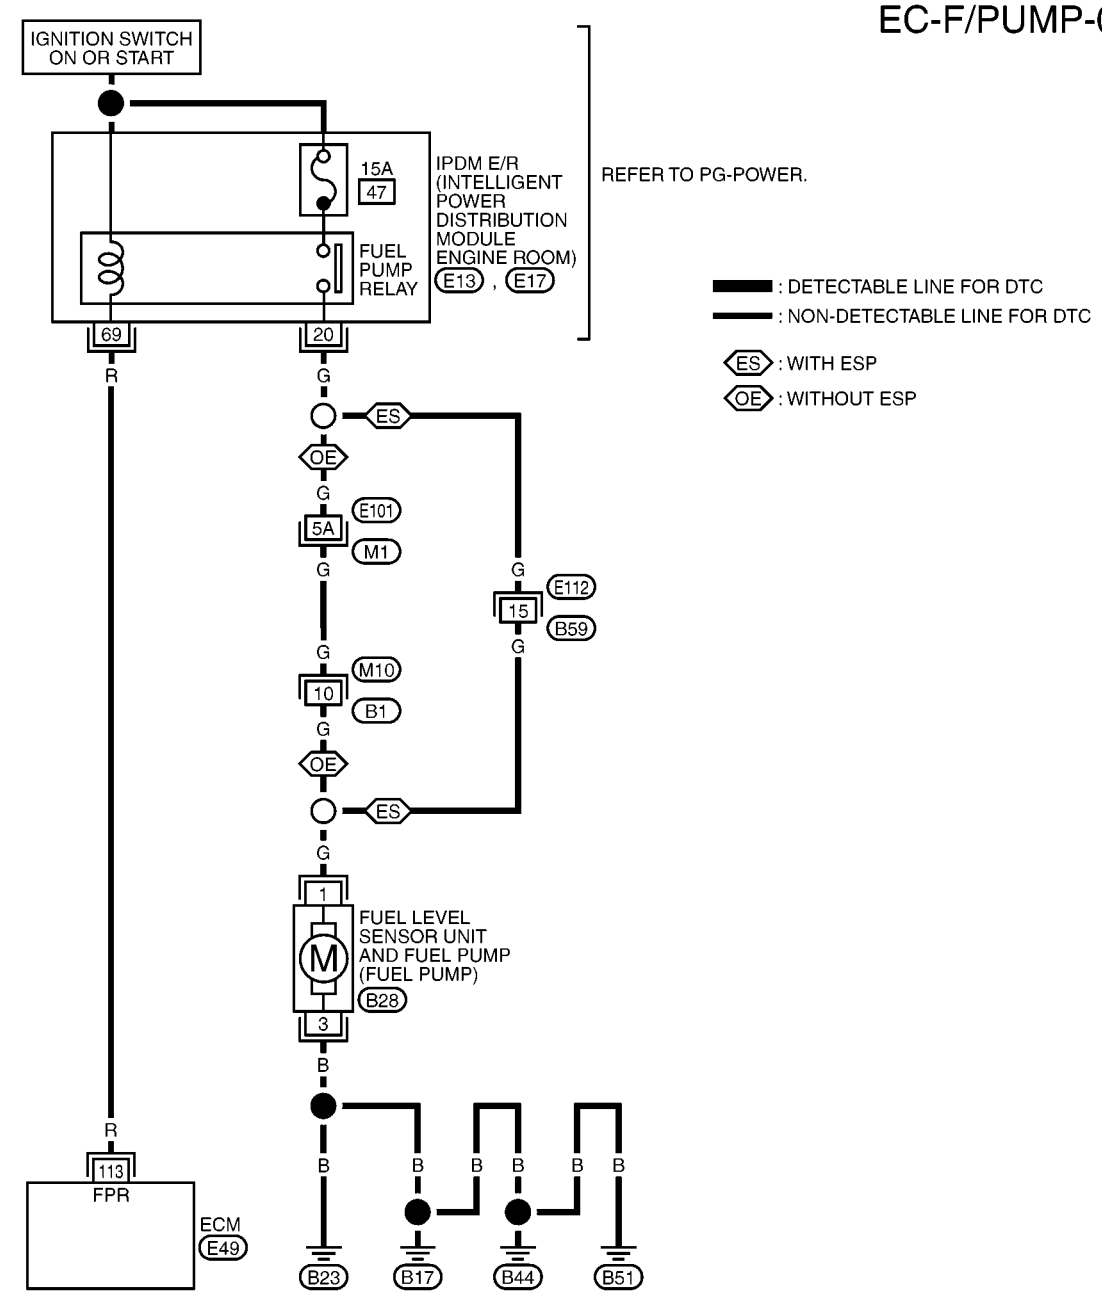

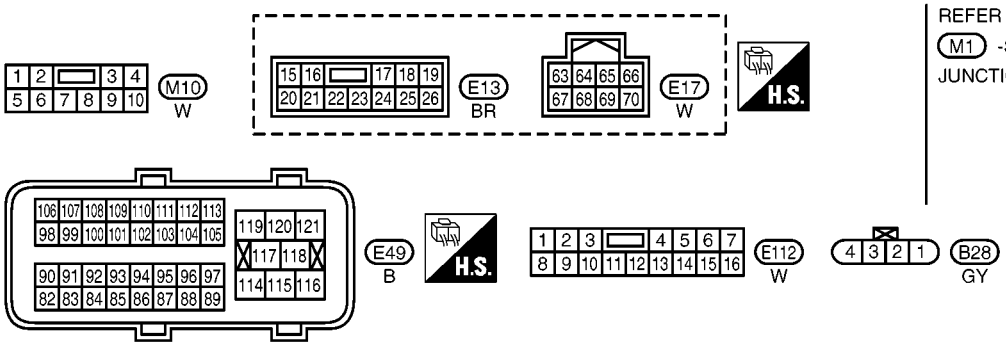

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0575E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
113	R	Fuel pump relay	**[Ignition switch ON]** ● For 1 second after turning ignition switch ON **[Engine is running]**	0 - 1.0V
			[Ignition switch ON] ● More than 1 second after turning ignition switch ON	BATTERY VOLTAGE (11 - 14V)

Diagnostic Procedure

SMA for VIN >SJN**AK12U1309296

EBS00ORB

1. CHECK OVERALL FUNCTION

1. Turn ignition switch ON.
2. Pinch fuel feed hose with two fingers.
   Fuel pressure pulsation should be felt on the fuel hose for 1 second after ignition switch is turned ON.

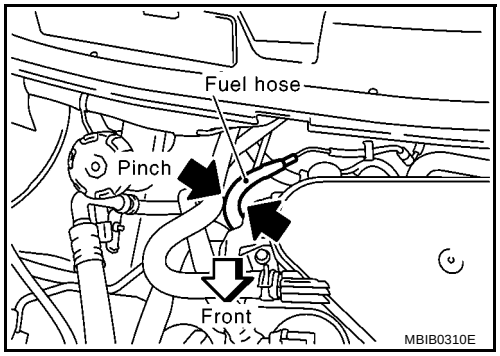

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK FUEL PUMP RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Turn ignition switch ON.
4. Check voltage between ECM terminals 113 and ground with CONSULT-II or tester.

Voltage: Battery voltage

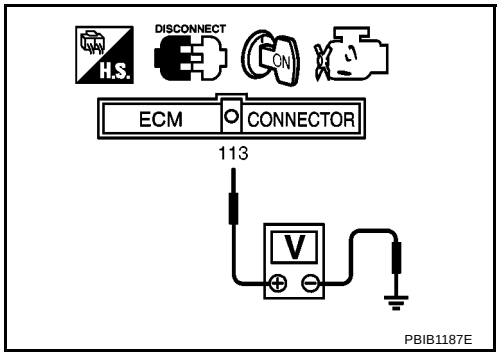

OK or NG

OK >> GO TO 5.
NG >> GO TO 3.

3. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E17.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R terminal 69 and ground with CONSULT-II or tester.

Voltage: Battery voltage

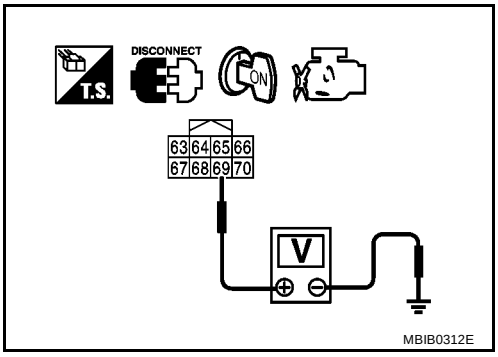

OK or NG

OK >> GO TO 4.
NG >> GO TO 9.

4. DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R connector E17
- Harness for open or short between IPDM E/R and ECM

>> Repair harness or connectors.

5. CHECK FUEL PUMP POWER SUPPLY AND GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect “fuel level sensor unit and fuel pump” harness connector.
3. Check harness continuity between IPDM E/R connector E13 terminal 20 and “fuel level sensor unit and fuel pump” terminal 1, “fuel level sensor unit and fuel pump” terminal 3 and body ground.
   Refer to Wiring Diagram.

Continuity should exist.

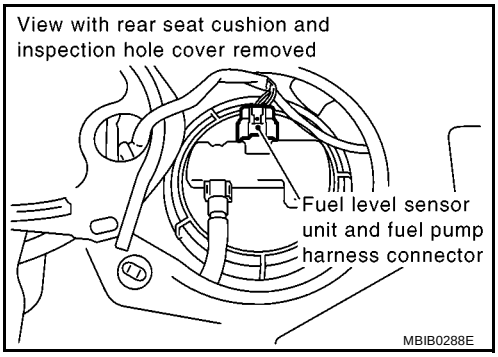

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 7.
NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E112, B59 (Models with ESP)
- Harness connectors M1, E101 (Models without ESP)
- Harness connectors B1, M10 (Models without ESP)
- Harness for open or short between “fuel level sensor unit and fuel pump” and IPDM E/R
- Harness for open or short between “fuel level sensor unit and fuel pump” and body ground

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK FUEL PUMP RELAY OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal 113 and IPDM E/R connector E17 terminal 69. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> Repair open or short between ECM and IPDM E/R.

8. CHECK FUEL PUMP

Refer to EC-830, "Component Inspection" .

OK or NG

OK >> GO TO 9.
NG >> Replace fuel pump.

9. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace IPDM E/R
NG >> Repair or replace harness or connector
>> **INSPECTION END**

Component Inspection

EBS00ORC

FUEL PUMP

1. Disconnect “fuel level sensor unit and fuel pump” harness connector.
2. Check resistance between “fuel level sensor unit and fuel pump” terminals 1 and 3.

Resistance: Approximately 1.0Ω [at 25°C (77°F)]

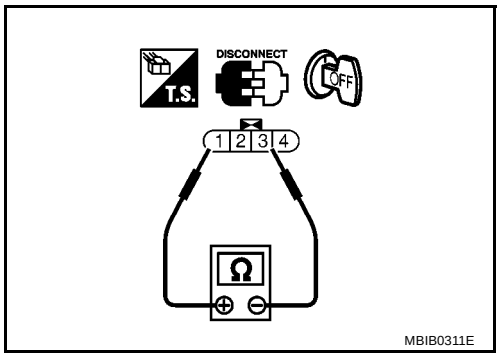

Removal and Installation

EBS00ORD

FUEL PUMP

Refer to FL-4, "FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY" .

REFRIGERANT PRESSURE SENSOR

PFP:92136

Component Description

EBS00ORE

The refrigerant pressure sensor is installed at the liquid tank of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

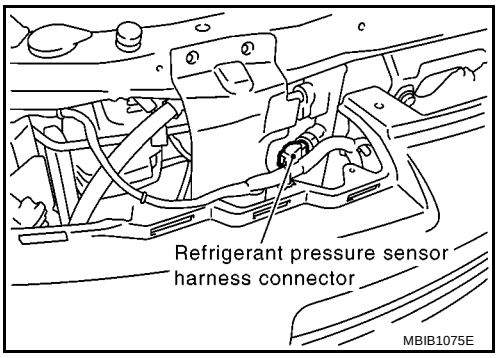

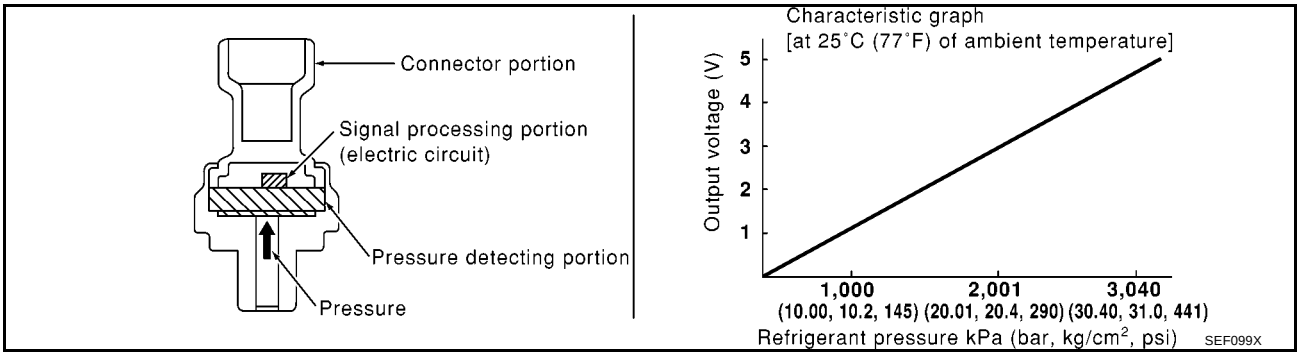

Wiring Diagram

EBS00ORF

EC-RP/SEN-01

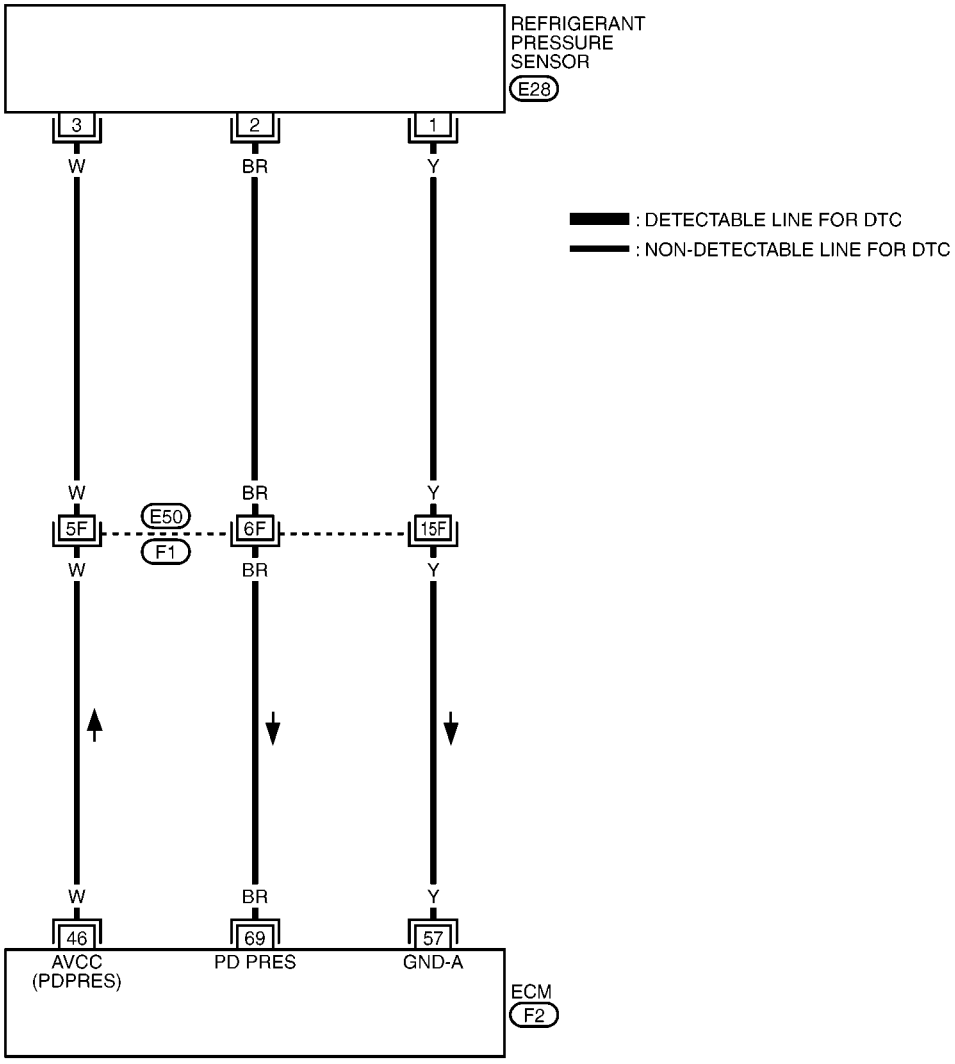



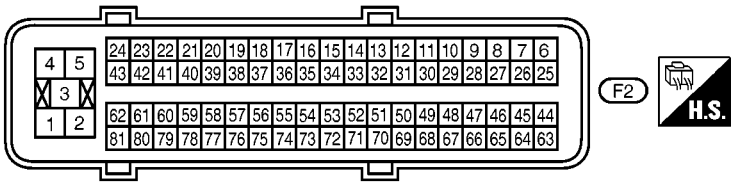

REFER TO THE FOLLOWING.
F1 -SUPER MULTIPLE JUNCTION (SMJ)

MBWA0300E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
57	Y	Sensor ground (Refrigerant pressure sensor)	**[Engine is running]** ● **Warm-up condition** ● Idle speed	Approximately 0V
46	W	Sensor power supply (Refrigerant pressure sensor)	**[Ignition switch ON]**	Approximately 5V
69	BR	Refrigerant pressure sensor	**[Engine is running]** ● **Warm-up condition** ● Both A/C switch and blower switch are ON. (Compressor operates.)	1.0 - 4.0V

Diagnostic Procedure

EBS00ORG

1. CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION

1. Start engine and warm it up to normal operating temperature.
2. Turn A/C switch and blower switch ON.
3. Check voltage between ECM terminal 69 and ground with CONSULT-II or tester.

Voltage: 1.0 - 4.0V

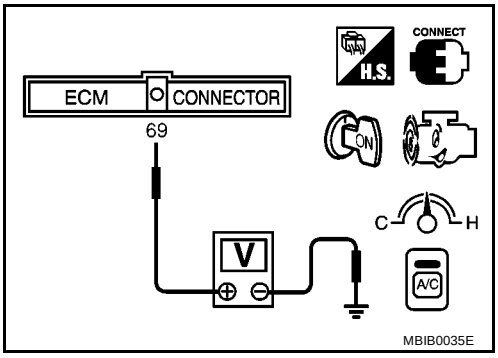

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 2.

2. CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT

1. Turn A/C switch and blower switch OFF.
2. Stop engine.
3. Disconnect refrigerant pressure sensor harness connector.
4. Turn ignition switch ON.

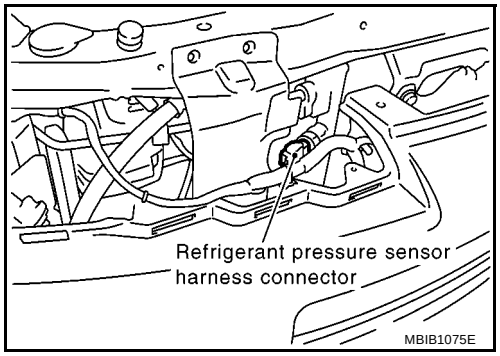

5. Check voltage between refrigerant pressure sensor terminal 3 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

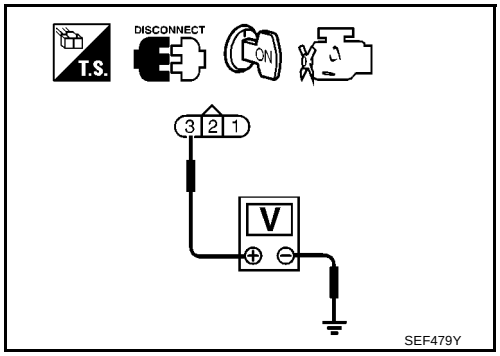

OK or NG

OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair harness or connectors.

4. CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 57 and refrigerant pressure sensor terminal 1. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.
NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 69 and refrigerant pressure sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E50, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to EC-566, "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT" .

OK or NG

OK >> Replace refrigerant pressure sensor.
NG >> Repair or replace.

Removal and Installation

EBS00ORH

REFRIGERANT PRESSURE SENSOR

Refer to ATC-84, "REFRIGERANT LINES" (Automatic air conditioner models) or MTC-61, "REFRIGERANT LINES" (Manual air conditioner models).

ELECTRICAL LOAD SIGNAL

PFP:25350

Description

EBS00ORI

The electrical load signal (Headlamp switch signal, rear window defogger switch signal, etc.) is transferred through the CAN communication line from IPDM E/R to ECM.

CONSULT-II Reference Value in Data Monitor Mode

EBS00ORJ

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
LOAD SIGNAL	● Ignition switch: ON	Rear window defogger switch is ON and/or lighting switch is 2nd.	ON
		Rear window defogger switch is OFF and lighting switch is OFF.	OFF

Diagnostic Procedure

EBS00ORK

1. INSECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.
No >> GO TO 6.

2. CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-I

1. Turn ignition switch ON.
2. Connect CONSULT-II and select “DATA MONITOR” mode.
3. Select “LOAD SIGNAL” and check indication under the following conditions.

Condition	Indication
Rear window defogger switch ON	ON
Rear window defogger switch OFF	OFF

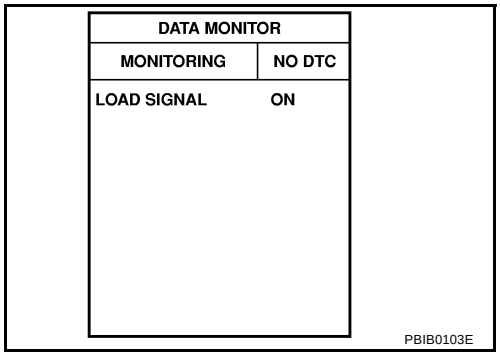

OK or NG

OK >> GO TO 3.
NG >> GO TO 4.

3. CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-II

Check “LOAD SIGNAL” indication under the following conditions.

Condition	Indication
Lighting switch ON at 2nd position	ON
Lighting switch OFF	OFF

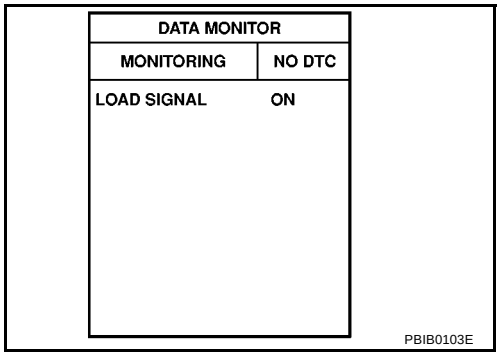

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 5.

4. CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to GW-14, "REAR WINDOW DEFOGGER" .

>> **INSPECTION END**

5. CHECK HEADLAMP SYSTEM

Refer to LT-6, "HEADLAMP -CONVENTIONAL TYPE-" or LT-42, "HEADLAMP - DAYTIME LIGHT SYSTEM - " .

>> **INSPECTION END**

6. CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to GW-14, "REAR WINDOW DEFOGGER" .

OK or NG

OK >> GO TO 7.
NG >> Repair or replace

7. CHECK HEADLAMP SYSTEM

Refer to LT-6, "HEADLAMP -CONVENTIONAL TYPE-" or LT-42, "HEADLAMP - DAYTIME LIGHT SYSTEM - " .

>> **INSPECTION END**

MI & DATA LINK CONNECTORS

PFP:24814

Wiring Diagram (LHD Models)

EBS00ORL

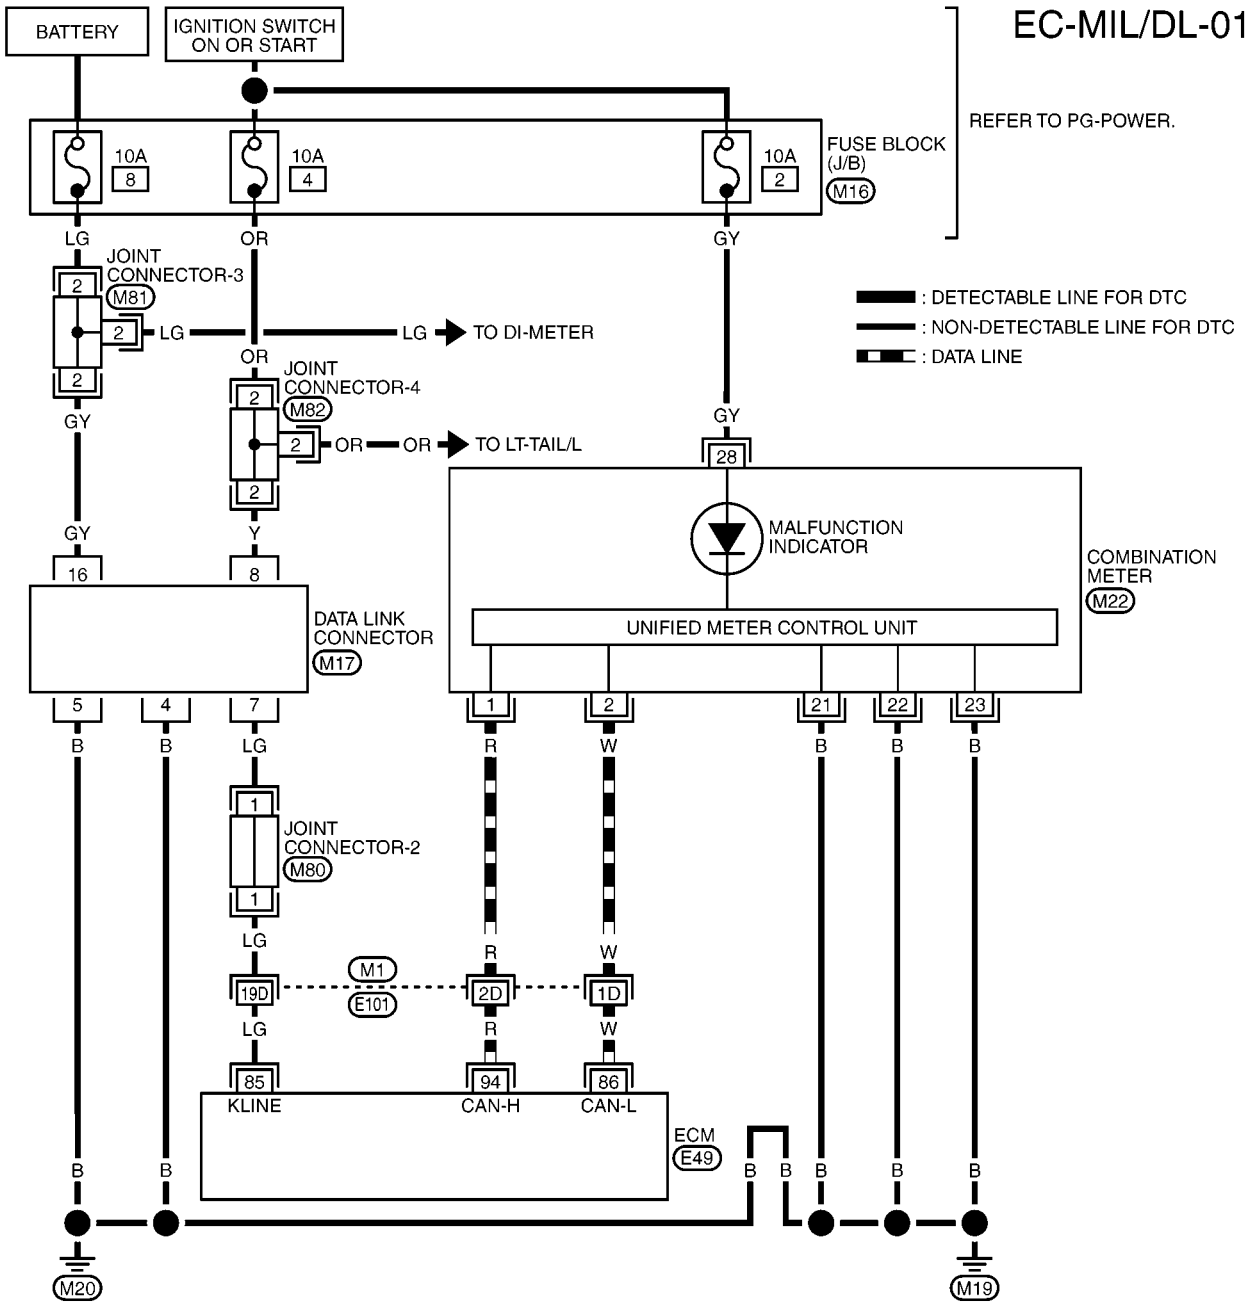

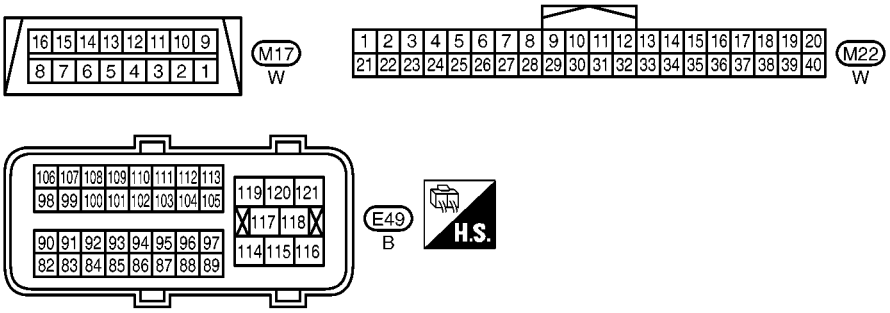

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)
M80 , M81 , M82 -JOINT CONNECTOR (J/C)

MBWA0576E

Wiring Diagram (RHD Models)

EBS00ORM

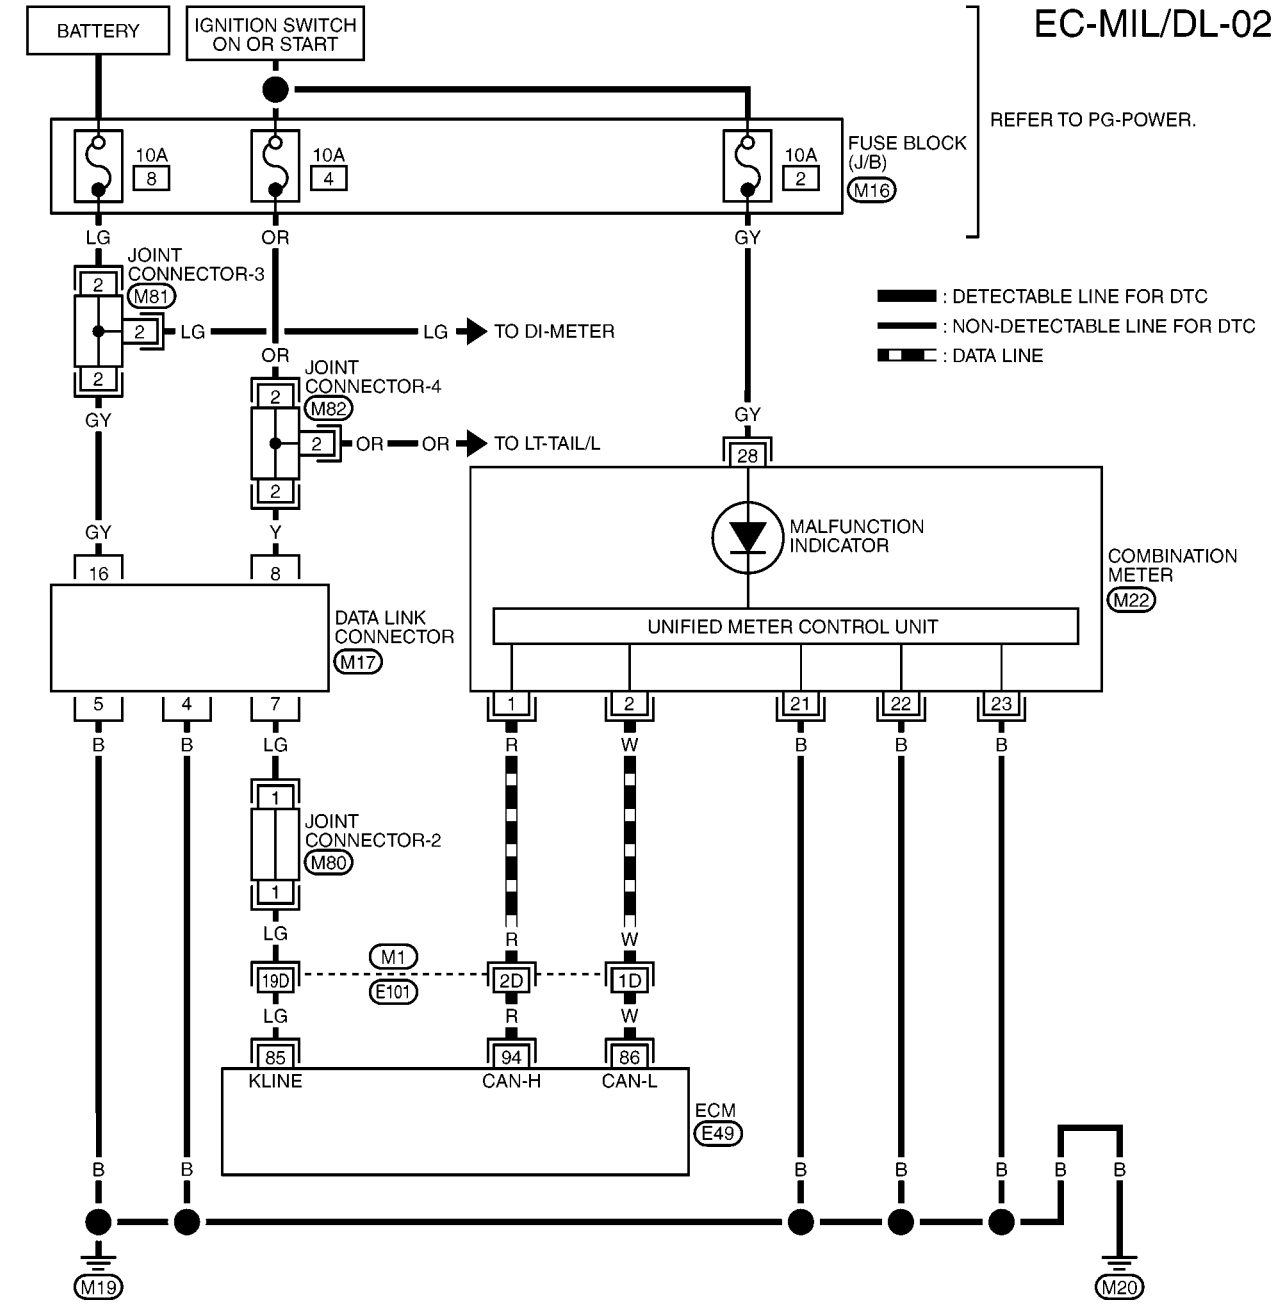



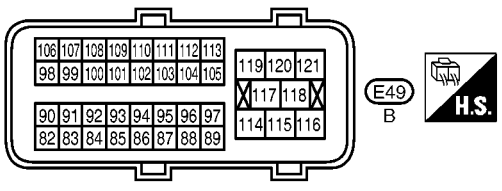

REFER TO THE FOLLOWING.
M1 -SUPER MULTIPLE JUNCTION (SMJ)
M16 -FUSE BLOCK-JUNCTION BOX (J/B)
M80, M81, M82 -JOINT CONNECTOR (J/C)

MBWA0577E

EVAPORATIVE EMISSION SYSTEM

PFP:14950

Description

EBS00ORN

SYSTEM DESCRIPTION

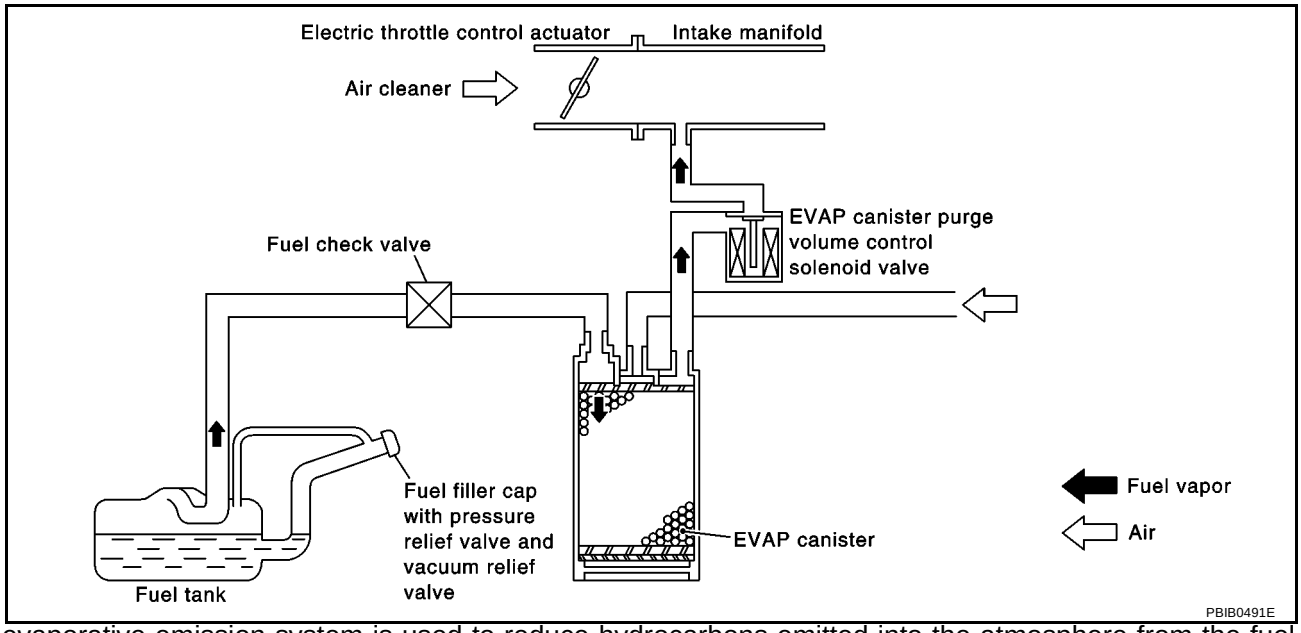

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.
The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank.
The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.
EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

EVAPORATIVE EMISSION LINE DRAWING

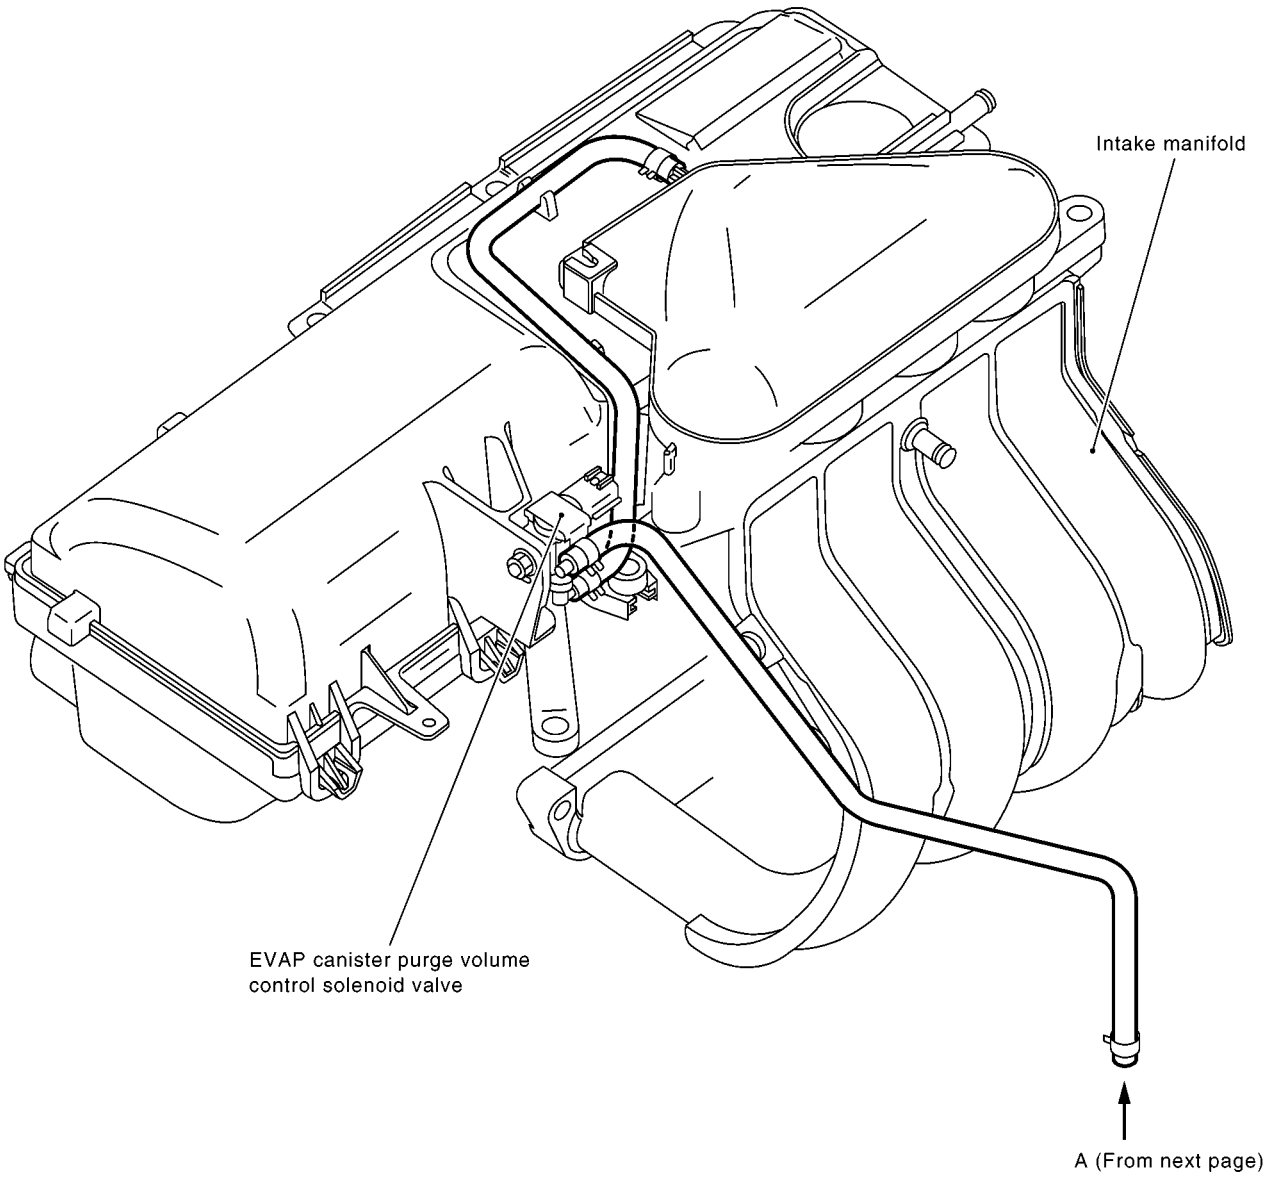

NOTE: Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

MBIB0544E

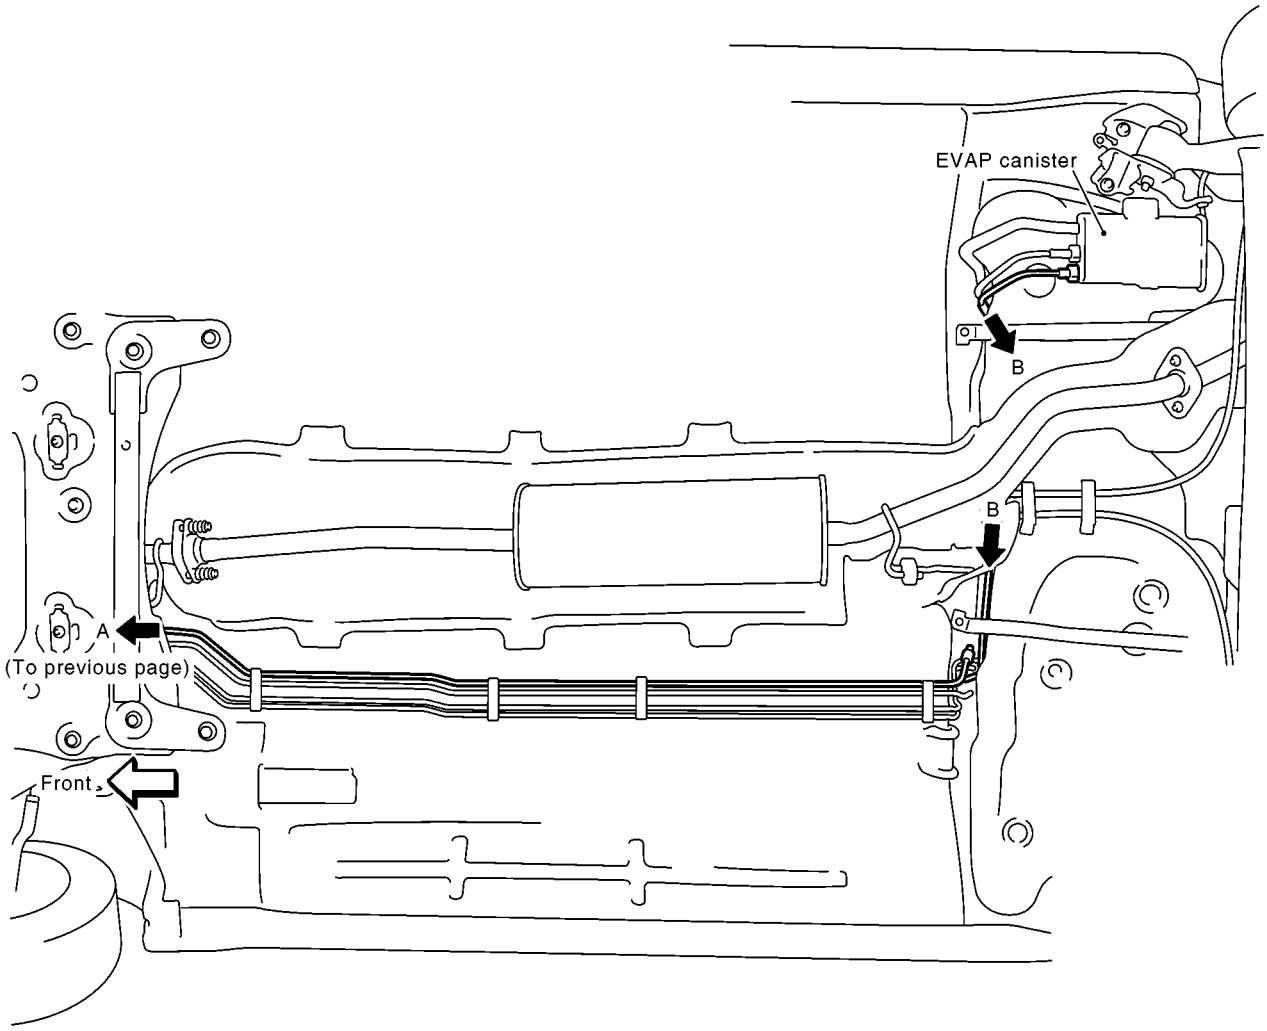

MBIB0541E

Component Inspection

EBS00ORO

EVAP CANISTER

Check EVAP canister as follows:

1. Block port **B** . Orally blow air through port **A** . Check that air flows freely through port **C** .
2. Block port **A** . Orally blow air through port **B** . Check that air flows freely through port **C** .

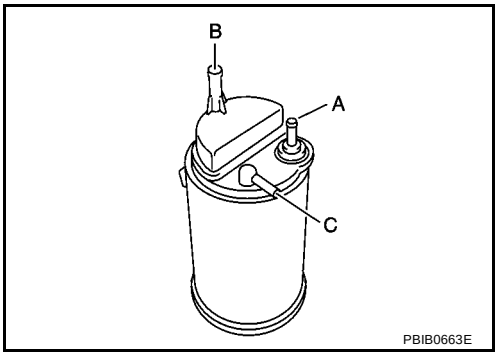

FUEL CHECK VALVE

1. Blow air through connector on fuel tank side.
   A considerable resistance should be felt and a portion of air flow should be directed toward the EVAP canister side.
2. Blow air through connector on EVAP canister side.
   Air flow should be smoothly directed toward fuel tank side.
3. If fuel check valve is suspected of not properly functioning in steps 1 and 2 above, replace it.

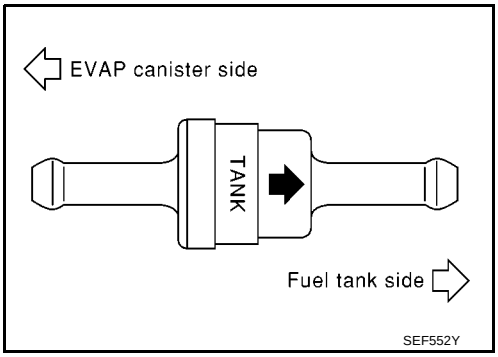

FUEL TANK VACUUM RELIEF VALVE (BUILT INTO FUEL FILLER CAP)

1. Wipe clean valve housing.

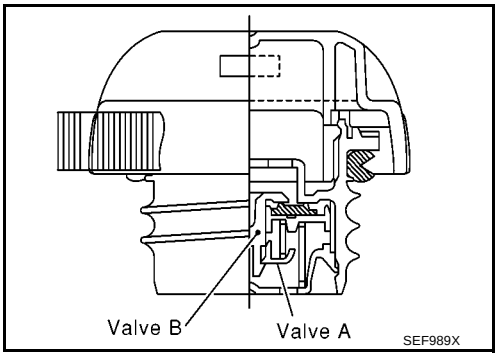

2. Check valve opening pressure and vacuum.

Pressure:	**15.3 - 20.0 kPa (0.153 - 0.200 bar, 0.156 - 0.204 kg/cm^2 , 2.22 - 2.90 psi)**
Vacuum:	**–6.0 to –3.4 kPa (–0.060 to –0.034 bar, –0.061 to –0.035 kg/cm^2 , –0.87 to –0.49 psi)**

3. If out of specification, replace fuel filler cap as an assembly.

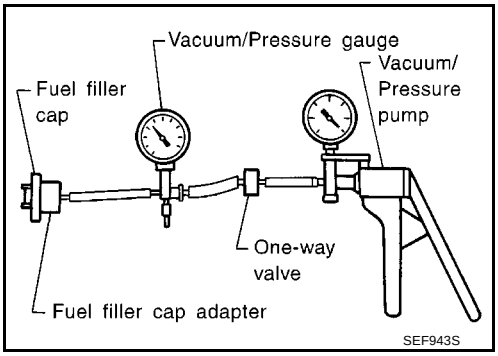

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-806, "Component Inspection" .

POSITIVE CRANKCASE VENTILATION

PFP:11810

Description

EBS00ORP

SYSTEM DESCRIPTION

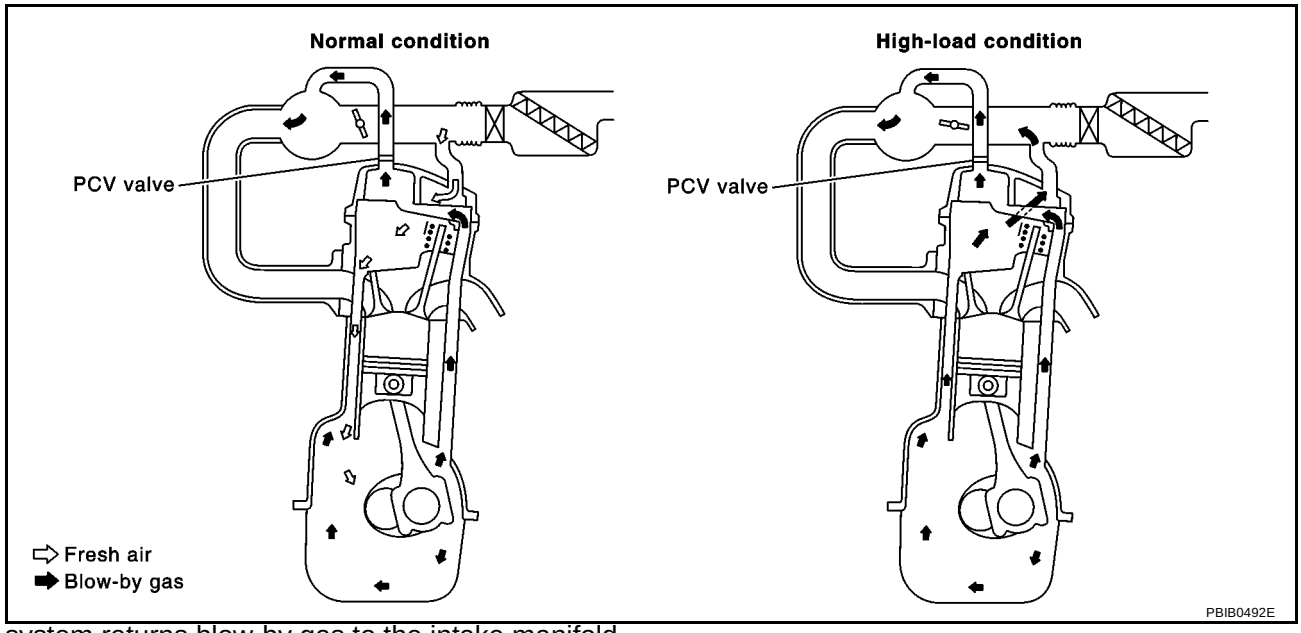

This system returns blow-by gas to the intake manifold.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold. During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve. Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is then drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover. Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

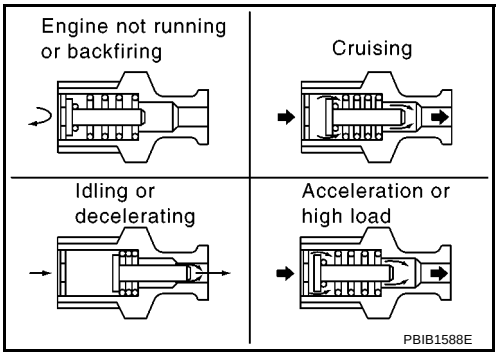

Component Inspection

EBS00ORQ

PCV (POSITIVE CRANKCASE VENTILATION) VALVE

With engine running at idle, remove PCV valve from rocker cover. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over valve inlet.

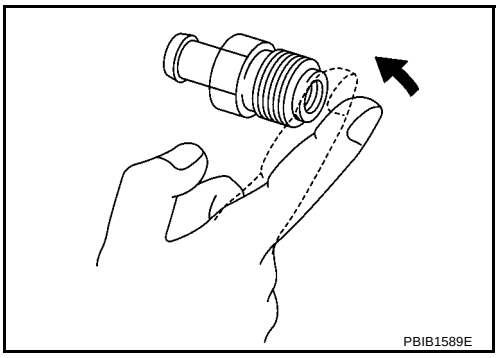

PCV VALVE VENTILATION HOSE

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

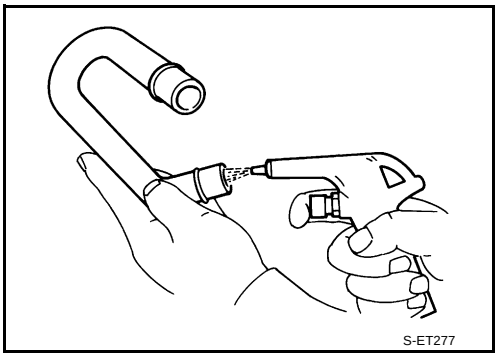

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

Fuel Pressure

EBS00ORR

Fuel pressure at idle	Approximately 350 kPa (3.5bar, 3.57kg/cm^2 , 51psi)

Idle Speed and Ignition Timing

EBS00ORS

Target idle speed	No load*1 (in P or N position)	M/T: 650±50 rpm A/T: 700±50 rpm
Ignition timing	In P or N position	5°±2° BTDC

*1: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

Calculated Load Value

EBS00ORT

Condition	Calculated load value% (Using CONSULT-II)
At idle	10 - 35
At 2,500 rpm	10 - 35

Manifold absolute pressure sensor

EBS00ORU

Supply voltage	Approximately 5.0V
Output voltage at idle	1.4 - 1.5V*

*: Engine is warmed up to normal operating temperature and running under no-load.

Intake Air Temperature Sensor

EBS00ORV

Temperature °C (°F)	Resistance kΩ
25 (77)	1.9 - 2.1
80 (176)	0.31 - 0.37

Engine Coolant Temperature Sensor

EBS00ORW

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

Heated Oxygen Sensor 1 Heater

EBS00ORX

Resistance [at 25°C (77°F)]	3.3 - 4.0Ω

Heated Oxygen sensor 2 Heater

EBS00ORY

Resistance [at 25°C (77°F)]	3.3 - 4.0Ω

Crankshaft Position Sensor (POS)

EBS00ORZ

Refer to EC-648, "Component Inspection" .

Camshaft Position Sensor (PHASE)

EBS00OS0

Refer to EC-655, "Component Inspection" .

Throttle Control Motor

EBS00OS1

Resistance [at 25°C (77°F)]	Approximately 1 - 15Ω

Injector

EBS00OS2

Resistance [at 20°C (68°F)]	12.1 - 12.9Ω

Fuel Pump

EBS00OS3

Resistance [at 25°C (77°F)]	Approximately 1.0Ω