

General Description

MECHANICAL

1. General Description

A: SPECIFICATION

Engine	Model	2.5 L	
	Cylinder arrangement	Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine	
	Valve system mechanism	Belt driven Single overhead camshaft 4-valve/cylinder	
	Bore x Stroke	mm (in)	99.5 x 79.0 (3.917 x 3.110)
	Displacement	cm ³ (cu in)	2,457 (150)
	Compression ratio	10.0	
	Compression pressure (at 200 — 300 rpm)	kPa (kg/cm ² , psi)	1,020 — 1,275 (10.4 — 13.0, 148 — 185)
	Number of piston rings	Pressure ring: 2, Oil ring: 1	
	Intake valve timing	Constant	Open
			BTDC 0°
		Close	ABDC 58°
		Low speed	Open
			BTDC 0°
		High speed	Close (U5 model)
			ABDC -10°
	Exhaust valve timing	Close (U6 model)	ABDC -50°
			Open
		High speed	BTDC 14°
			Close
	Valve clearance	mm (in)	ABDC 62°
			Open (U5 model)
		BBDC 30°	
	Idling speed [at neutral position on MT, or "P" or "N" position on AT]	rpm	Open (U6 model)
			BBDC 58°
			Close
	Ignition order	BTDC/rpm	ATDC 14°
			1 → 3 → 2 → 4
			MT (U5 model)
	Ignition timing		10°±8°/700
			MT (U6 model)
			10°±8°/650
			AT
			15°±8°/700

NOTE:

US: Undersize OS: Oversize

General Description

MECHANICAL

Belt tension adjuster	Protrusion of adjuster rod			mm (in)	5.2 — 6.2 (0.205 — 0.244)		
Belt tensioner	Spacer O.D.			mm (in)	17.955 — 17.975 (0.7069 — 0.7077)		
	Tensioner bushing I.D.			mm (in)	18.00 — 18.08 (0.7087 — 0.7118)		
	Clearance between spacer and bushing		mm (in)	Standard	0.025 — 0.125 (0.0010 — 0.0049)		
			Limit		0.175 (0.0069)		
Valve rocker arm	Side clearance of spacer		mm (in)	Standard	0.20 — 0.55 (0.0079 — 0.0217)		
			Limit		0.81 (0.0319)		
Camshaft	Clearance between shaft and arm			mm (in)	Standard 0.020 — 0.054 (0.0008 — 0.0021)		
				Limit	0.10 (0.0039)		
	Bending limit			mm (in)	0.025 (0.00098)		
	Thrust clearance			mm (in)	Standard 0.030 — 0.090 (0.0012 — 0.0035)		
	Limit		0.10 (0.0039)				
	Cam lobe height	Intake	Constant	Standard	40.075 — 40.175 (1.5778 — 1.5817)		
				Service limit	39.975 (1.5738)		
			Low speed (U5 model)	Standard	35.496 — 35.596 (1.3975 — 1.4014)		
				Service limit	35.396 (1.3935)		
		High speed	Low speed (U6 model)	Standard	35.182 — 35.282 (1.3851 — 1.3891)		
				Service limit	35.082 (1.3812)		
			U5 model	Standard	40.315 — 40.415 (1.5872 — 1.5911)		
				Service limit	40.215 (1.5833)		
		Exhaust	U6 model	Standard	39.289 — 39.389 (1.5468 — 1.5507)		
				Service limit	39.189 (1.5429)		
			Standard	40.149 — 40.249 (1.5807 — 1.5846)			
				Limit	40.049 (1.5767)		
	Camshaft journal O.D.			mm (in)	31.928 — 31.945 (1.2570 — 1.2577)		
	Camshaft journal hole I.D.			mm (in)	32.000 — 32.018 (1.2598 — 1.2605)		
	Oil clearance			mm (in)	Standard 0.055 — 0.090 (0.0022 — 0.0035)		
	Limit			0.10 (0.0039)			
Cylinder head	Surface warpage limit (Mating surface with cylinder block)			mm (in)	0.035 (0.0012)		
	Grinding limit			mm (in)	0.1 (0.004)		
	Standard height			mm (in)	97.5 (3.84)		
Valve seat	Seating angle				90°		
	Contacting width	Intake	Standard		0.8 — 1.4 (0.03 — 0.055)		
			Limit		1.7 (0.067)		
		Exhaust	Standard		1.2 — 1.8 (0.047 — 0.071)		
			Limit		2.2 (0.087)		
Valve guide	Inside diameter			mm (in)	6.000 — 6.012 (0.2362 — 0.2367)		
	Protrusion above head			Intake	20.0 — 21.0 (0.787 — 0.827)		
	Exhaust			16.5 — 17.5 (0.650 — 0.689)			

General Description

MECHANICAL

Valve	Head edge thickness	mm (in)	Intake	Standard	0.8 — 1.2 (0.03 — 0.047)		
				Limit	0.6 (0.024)		
	Exhaust		Standard	1.0 — 1.4 (0.039 — 0.055)			
			Limit	0.6 (0.024)			
	Stem outer diameter		mm (in)	Intake	5.950 — 5.965 (0.2343 — 0.2348)		
				Exhaust	5.945 — 5.960 (0.2341 — 0.2346)		
	Valve stem gap	mm (in)	Standard	Intake	0.035 — 0.062 (0.0014 — 0.0024)		
				Exhaust	0.040 — 0.067 (0.0016 — 0.0026)		
	Overall length	mm (in)	Limit	—	0.15 (0.0059)		
				Intake	120.6 (4.75)		
				Exhaust	121.7 (4.79)		
Valve spring	Free length			mm (in)	55.2 (2.173)		
	Squareness				2.5°, 2.4 mm (0.094 in) or less		
	Tension/ spring height	N (kgf, lb)/mm (in)	Set		235.3 — 270.7 (24 — 27.6, 52.9 — 60.8)/45.0 (1.772)		
			Lift		578.9 — 639.9 (59.1 — 65.3, 130.3 — 143.9)/34.7 (1.366)		
Cylinder block	Surface warpage limit (mating with cylinder head)			mm (in)	0.025 (0.00098)		
	Grinding limit			mm (in)	0.1 (0.004)		
	Standard height			mm (in)	201.0 (7.91)		
	Cylinder inner diameter	mm (in)	Standard	A	99.505 — 99.515 (3.9175 — 3.9179)		
				B	99.495 — 99.505 (3.9171 — 3.9175)		
	Taper		mm (in)	Standard	0.015 (0.0006)		
				Limit	0.050 (0.0020)		
	Out-of-roundness		mm (in)	Standard	0.010 (0.0004)		
				Limit	0.050 (0.0020)		
	Piston clearance		mm (in)	Standard	-0.010 — 0.010 (-0.00039 — 0.00039)		
				Limit	0.030 (0.0012)		
	Cylinder inner boring limit (diameter)			mm (in)	To 100.005 (3.9372)		
Piston	Outer diameter	mm (in)	Standard	A	99.505 — 99.515 (3.9175 — 3.9179)		
				B	99.495 — 99.505 (3.9171 — 3.9175)		
		0.25 (0.0098) OS			99.745 — 99.765 (3.9270 — 3.9278)		
		0.50 (0.0197) OS			99.995 — 100.015 (3.9368 — 3.9376)		
Piston pin	Clearance between piston and piston pin	mm (in)	Standard	0.004 — 0.008 (0.0002 — 0.0003)			
			Limit	0.020 (0.0008)			
	Degree of fit				Piston pin must be fitted into position with thumb at 20°C (68°F).		
Piston ring	Ring closed gap	mm (in)	Top ring	Standard	0.20 — 0.35 (0.0079 — 0.0138)		
				Limit	1.0 (0.039)		
		Second ring	Standard	0.37 — 0.52 (0.0144 — 0.0203)			
			Limit	1.0 (0.039)			
		Oil ring	Standard	0.20 — 0.50 (0.0079 — 0.0197)			
			Limit	1.5 (0.059)			
	Ring groove gap	mm (in)	Top ring	Standard	0.040 — 0.080 (0.0016 — 0.0031)		
				Limit	0.15 (0.0059)		
		Second ring	Standard	0.030 — 0.070 (0.0012 — 0.0028)			
			Limit	0.15 (0.0059)			
Connecting rod	Bend or twist per 100 mm (3.94 in) in length	mm (in)	Limit	0.10 (0.0039)			
			Standard	0.070 — 0.330 (0.0028 — 0.0130)			
	Side clearance of large end	mm (in)	Limit	0.4 (0.016)			

General Description

MECHANICAL

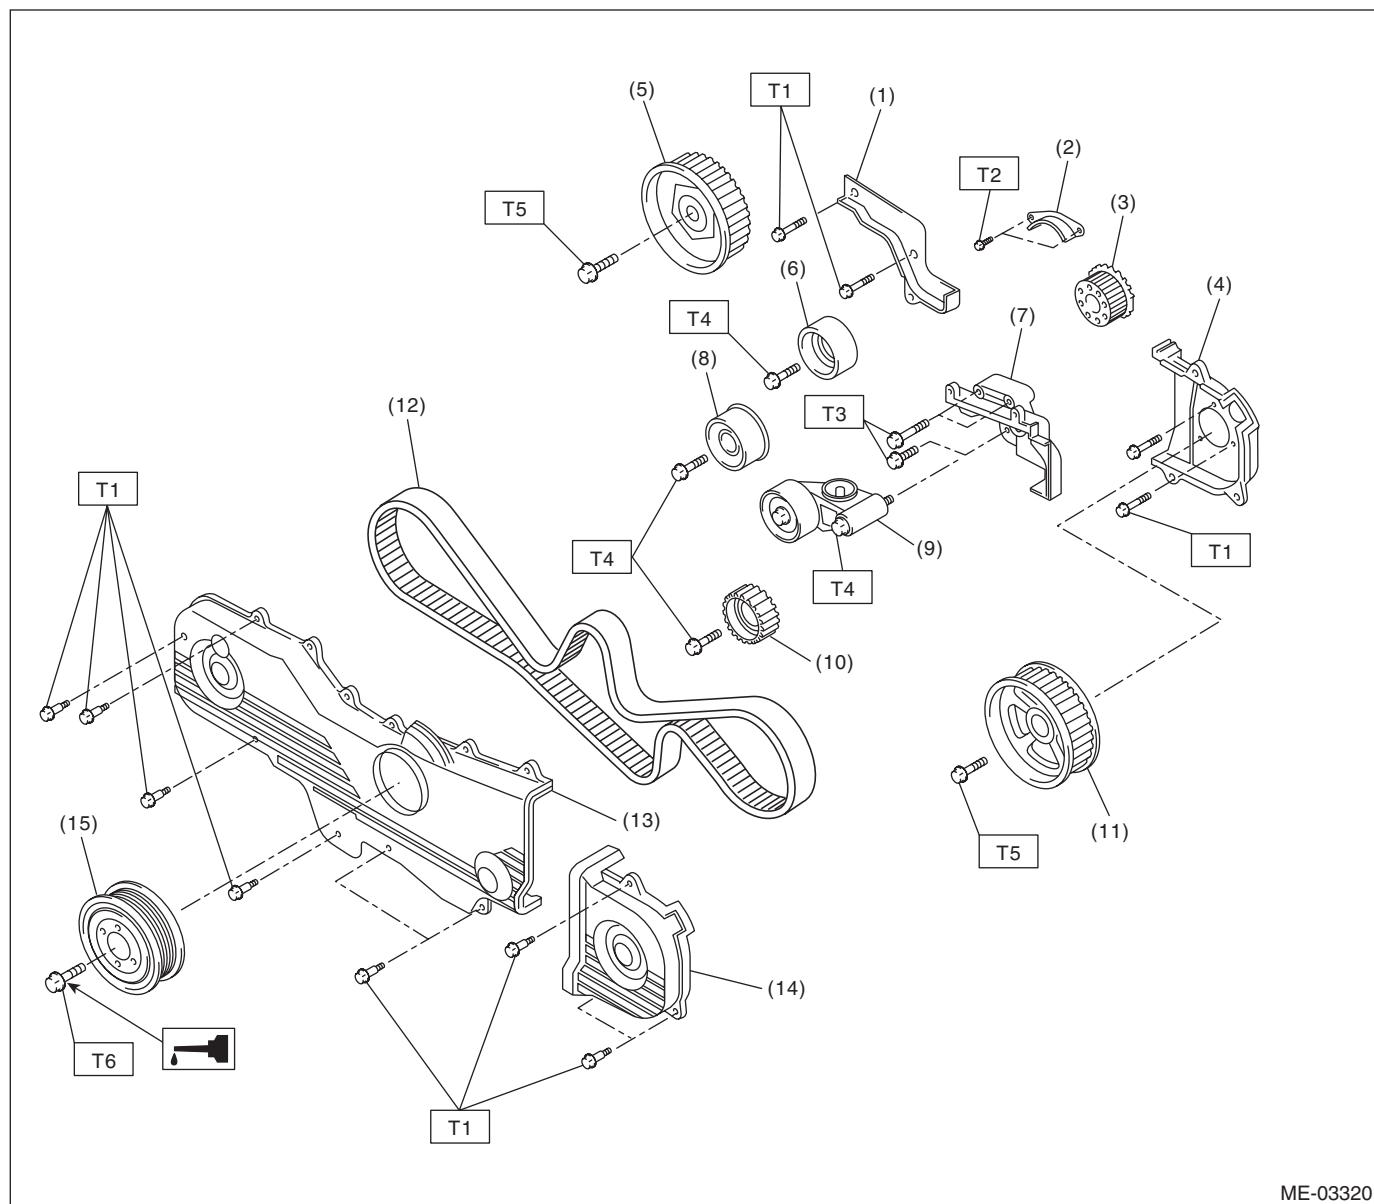
Bearing of large end	Oil clearance	mm (in)	Standard	0.016 — 0.044 (0.00063 — 0.0017)
			Limit	0.05 (0.0020)
Bearing of large end	Bearing size (Thickness at center)	mm (in)	Standard	1.492 — 1.501 (0.0587 — 0.0591)
			0.03 (0.0012) US	1.510 — 1.513 (0.0594 — 0.0596)
			0.05 (0.0020) US	1.520 — 1.523 (0.0598 — 0.0600)
			0.25 (0.0098) US	1.620 — 1.623 (0.0638 — 0.0639)
Bushing of small end	Clearance between piston pin and bushing	mm (in)	Standard	0 — 0.022 (0 — 0.0009)
			Limit	0.030 (0.0012)
Crankshaft	Bend limit	mm (in)		0.035 (0.0014)
	Crank pin	Out-of-roundness	mm (in)	0.003 (0.0001)
		Cylindricality	mm (in)	0.004 (0.0002)
		Grinding limit (dia.)	mm (in)	To 51.750 (2.0374)
	Crank journal	Out-of-roundness	mm (in)	0.005 (0.0002)
		Cylindricality	mm (in)	0.006 (0.0002)
		Grinding limit (dia.)	mm (in)	To 59.758 (2.3527)
	Crank pin outer diameter	Standard		51.984 — 52.000 (2.0466 — 2.0472)
		0.03 (0.0012) US		51.954 — 51.970 (2.0454 — 2.0461)
		0.05 (0.0020) US		51.934 — 51.950 (2.0446 — 2.0453)
		0.25 (0.0098) US		51.734 — 51.750 (2.0368 — 2.0374)
	Crank journal outer diameter	Standard		59.992 — 60.008 (2.3619 — 2.3625)
		0.03 (0.0012) US		59.962 — 59.978 (2.3607 — 2.3613)
		0.05 (0.0020) US		59.942 — 59.958 (2.3599 — 2.3605)
		0.25 (0.0098) US		59.742 — 59.758 (2.3520 — 2.3527)
	Thrust clearance	Standard		0.030 — 0.115 (0.0012 — 0.0045)
		Limit		0.25 (0.0098)
	Oil clearance	Standard		0.010 — 0.030 (0.0001 — 0.0012)
		Limit		0.40 (0.016)
Main bearing	Main bearing	mm (in)	Standard	1.998 — 2.011 (0.0787 — 0.0792)
			0.03 (0.0012) US	2.017 — 2.020 (0.0794 — 0.0795)
			0.05 (0.0020) US	2.027 — 2.030 (0.0798 — 0.0799)
			0.25 (0.0098) US	2.127 — 2.130 (0.0837 — 0.0839)
		#1, #3	Standard	2.000 — 2.013 (0.0787 — 0.0793)
			0.03 (0.0012) US	2.019 — 2.022 (0.0795 — 0.0796)
			0.05 (0.0020) US	2.029 — 2.032 (0.0799 — 0.0800)
			0.25 (0.0098) US	2.129 — 2.132 (0.0838 — 0.0839)

General Description

MECHANICAL

B: COMPONENT

1. TIMING BELT



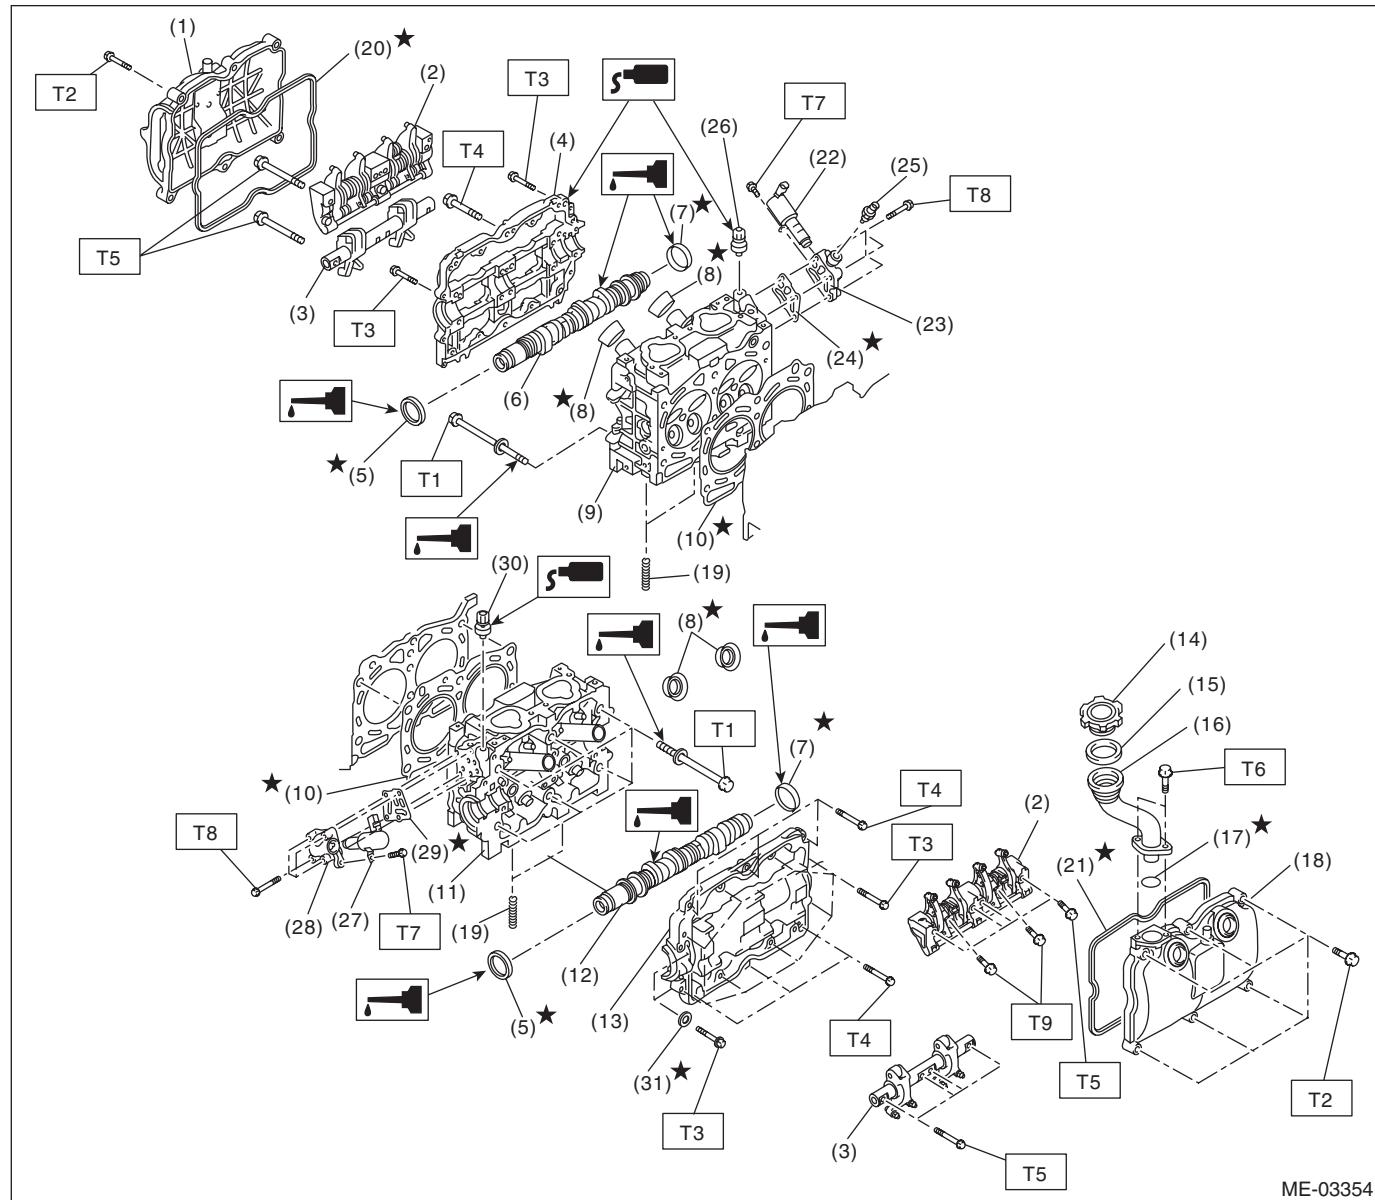
ME-03320

(1) Timing belt cover No. 2 (RH)	(9) Automatic belt tension adjuster ASSY
(2) Timing belt guide (MT model)	(10) Belt idler No. 2
(3) Crank sprocket	(11) Cam sprocket No. 2
(4) Timing belt cover No. 2 (LH)	(12) Timing belt
(5) Cam sprocket No. 1	(13) Front timing belt cover
(6) Belt idler (No. 1)	(14) Timing belt cover (LH)
(7) Tensioner bracket	(15) Crank pulley
(8) Belt idler (No. 2)	

Tightening torque: N·m (kgf·m, ft·lb)

T1: 5 (0.5, 3.7)
T2: 9.75 (1.0, 7.2)
T3: 24.5 (2.5, 18.1)
T4: 39 (4.0, 28.8)
T5: 78 (8.0, 57.5)
T6: <Ref. to ME(H4SO)-43, INSTALLATION, Crank Pulley.>

2. CYLINDER HEAD AND CAMSHAFT



General Description

MECHANICAL

(1) Rocker cover (RH)	(18) Rocker cover (LH)	(31) Seal washer
(2) Intake valve rocker ASSY	(19) Stud bolt	
(3) Exhaust valve rocker ASSY	(20) Rocker cover gasket (RH)	
(4) Camshaft cap (RH)	(21) Rocker cover gasket (LH)	
(5) Oil seal	(22) Oil switching solenoid valve (RH)	
(6) Camshaft (RH)	(23) Oil switching solenoid valve holder (RH)	
(7) Plug	(24) Gasket	
(8) Spark plug pipe gasket	(25) Oil temperature sensor	
(9) Cylinder head (RH)	(26) Variable valve lift diagnosis oil pressure switch (RH)	
(10) Cylinder head gasket	(27) Oil switching solenoid valve (LH)	
(11) Cylinder head (LH)	(28) Oil switching solenoid valve holder (LH)	
(12) Camshaft (LH)	(29) Gasket	
(13) Camshaft cap (LH)	(30) Variable valve lift diagnosis oil pressure switch (LH)	
(14) Oil filler cap		
(15) Gasket		
(16) Oil filler duct		
(17) O-ring		

Tightening torque:N·m (kgf·m, ft·lb)

T1: <Ref. to ME(H4SO)-62, INSTALLATION, Cylinder Head.>

T2: <Ref. to ME(H4SO)-54, INSTALLATION, Valve Rocker Assembly.>

T3: 9.75 (1.0, 7.2)

T4: 18 (1.8, 13.3)

T5: 25 (2.5, 18.4)

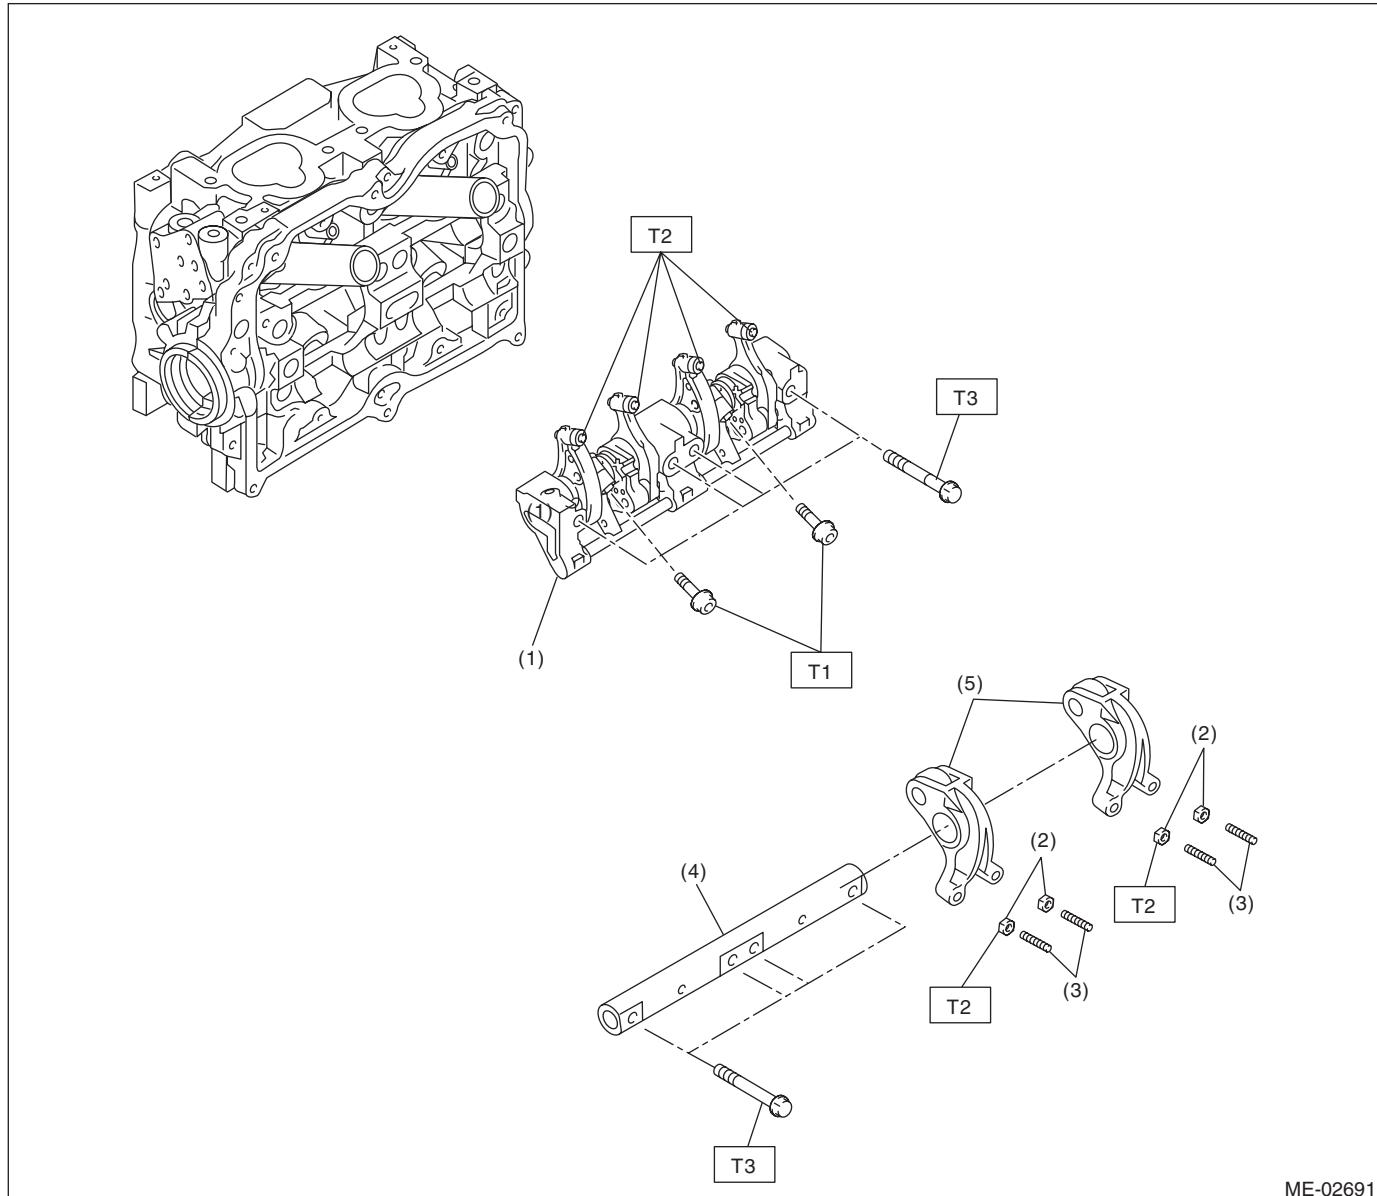
T6: 6.4 (0.65, 4.7)

T7: 8 (0.8, 5.9)

T8: 10 (1.0, 7.4)

T9: 6 (0.6, 4.4)

3. VALVE ROCKER ASSEMBLY



ME-02691

(1)	Intake valve rocker arm ASSY	(4)	Exhaust rocker shaft
(2)	Valve rocker nut	(5)	Exhaust valve rocker arm
(3)	Valve rocker adjusting screw		

Tightening torque:N·m (kgf·m, ft·lb)

T1: 6 (0.6, 4.3)

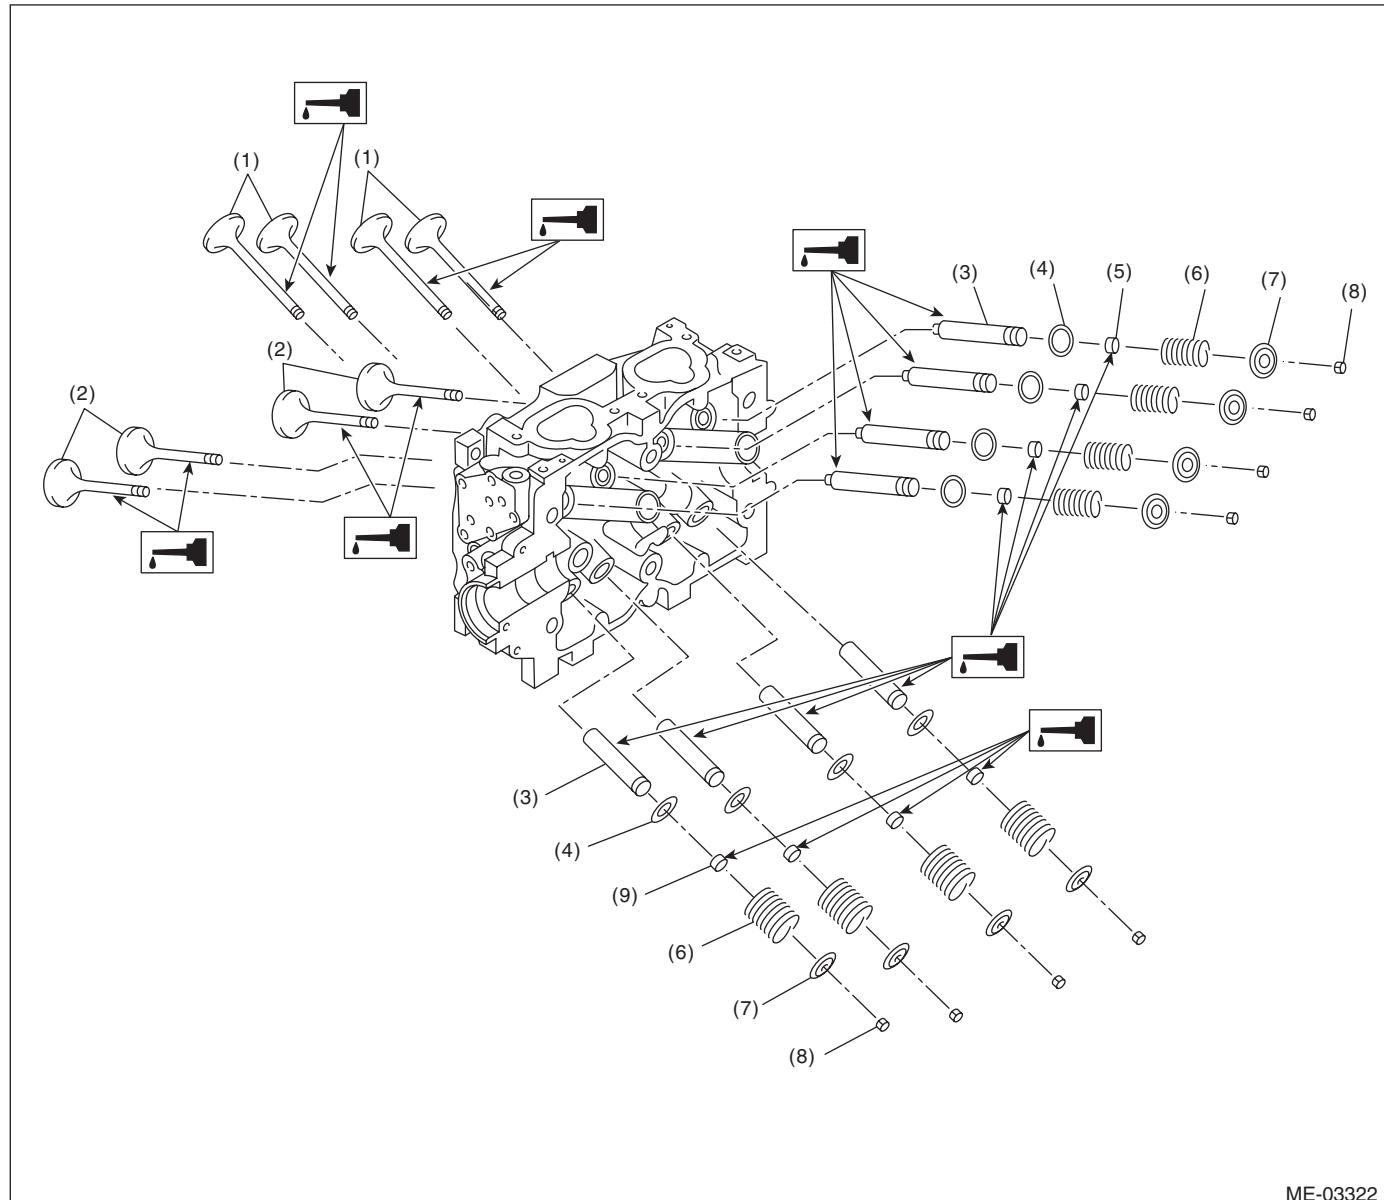
T2: 9.75 (1.0, 7.2)

T3: 25 (2.5, 18.4)

General Description

MECHANICAL

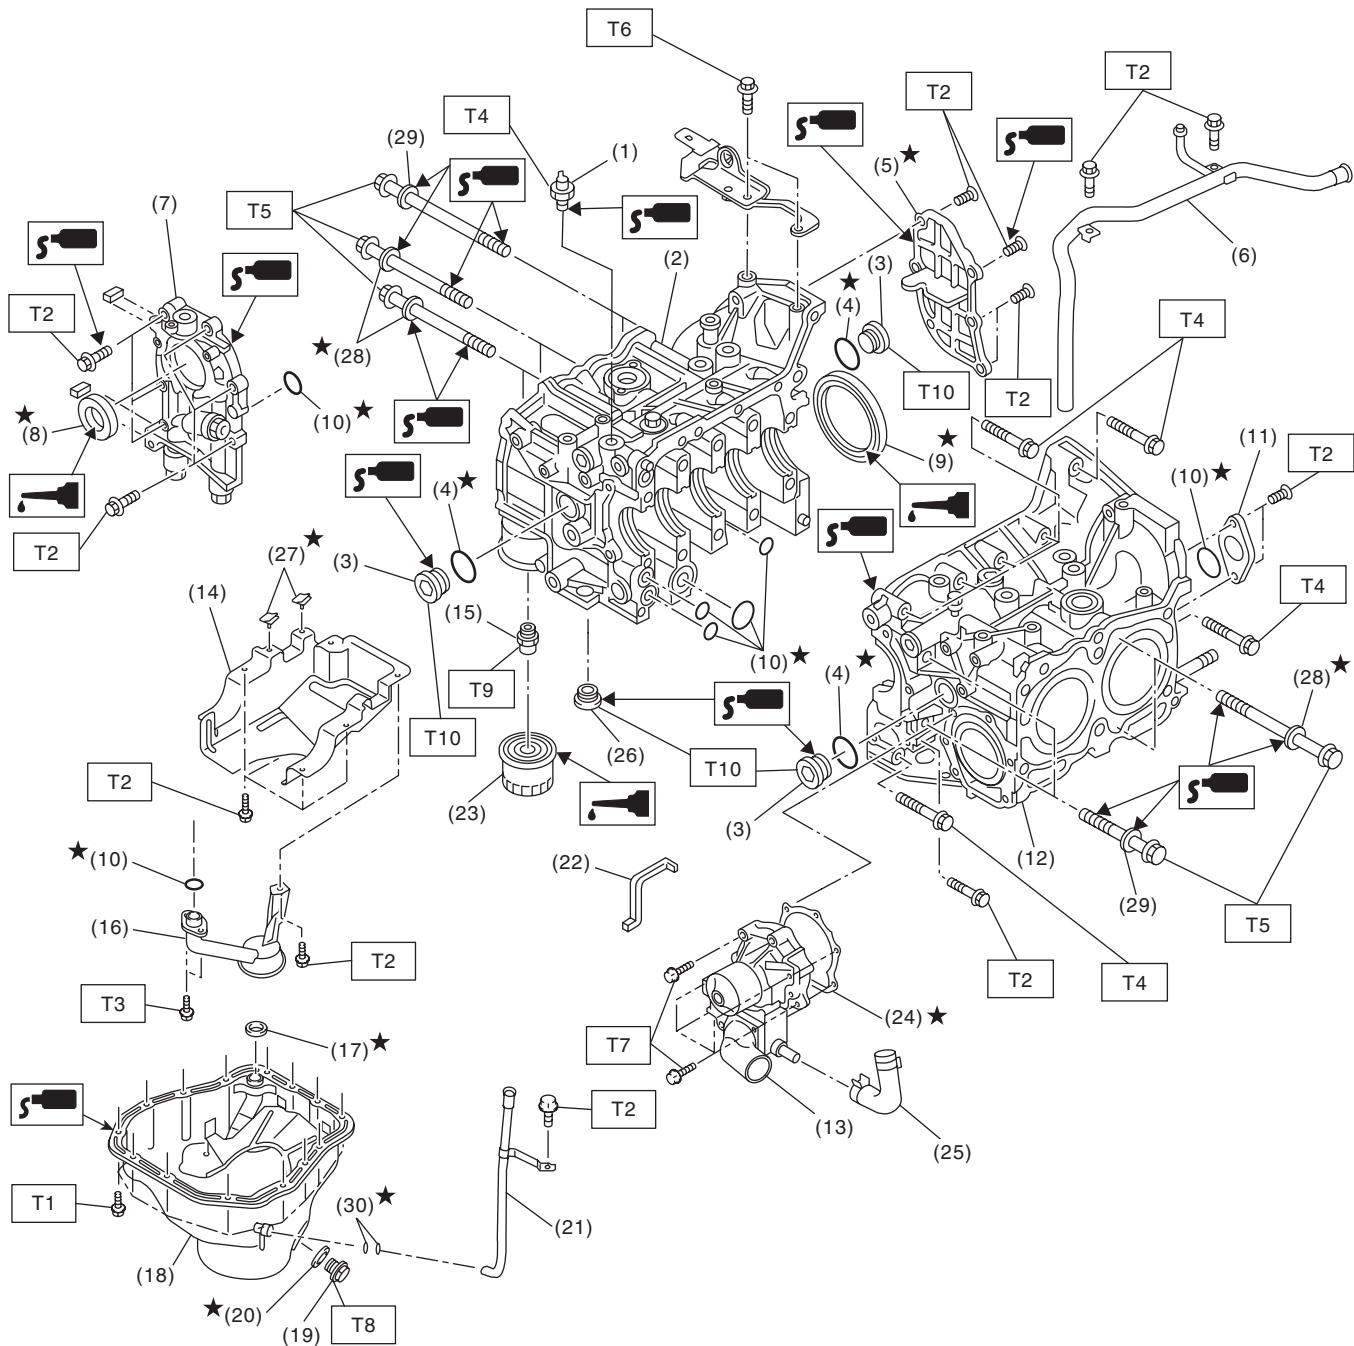
4. CYLINDER HEAD AND VALVE ASSEMBLY



ME-03322

(1) Exhaust valve	(4) Valve spring seat	(7) Retainer
(2) Intake valve	(5) Intake valve oil seal	(8) Retainer key
(3) Valve guide	(6) Valve spring	(9) Exhaust valve oil seal

5. CYLINDER BLOCK



General Description

MECHANICAL

(1) Oil pressure switch	(16) Oil strainer
(2) Cylinder block (RH)	(17) Gasket
(3) Service hole plug	(18) Oil pan
(4) Gasket	(19) Drain plug
(5) Oil separator cover	(20) Drain plug gasket
(6) Water by-pass pipe	(21) Oil level gauge guide
(7) Oil pump	(22) Water pump sealing
(8) Front oil seal	(23) Oil filter
(9) Rear oil seal	(24) Gasket
(10) O-ring	(25) Water pump hose
(11) Service hole cover	(26) Plug
(12) Cylinder block (LH)	(27) Seal
(13) Water pump	(28) Seal washer
(14) Baffle plate	(29) Washer
(15) Oil filter connector	(30) O-ring

Tightening torque:N·m (kgf·m, ft-lb)

T1: 5 (0.5, 3.7)

T2: 6.4 (0.65, 4.7)

T3: 10 (1.0, 7.4)

T4: 25 (2.5, 18.4)

T5: <Ref. to ME(H4SO)-74, INSTALLATION, Cylinder Block.>

T6: 16 (1.6, 11.8)

T7: First 12 (1.2, 8.9)

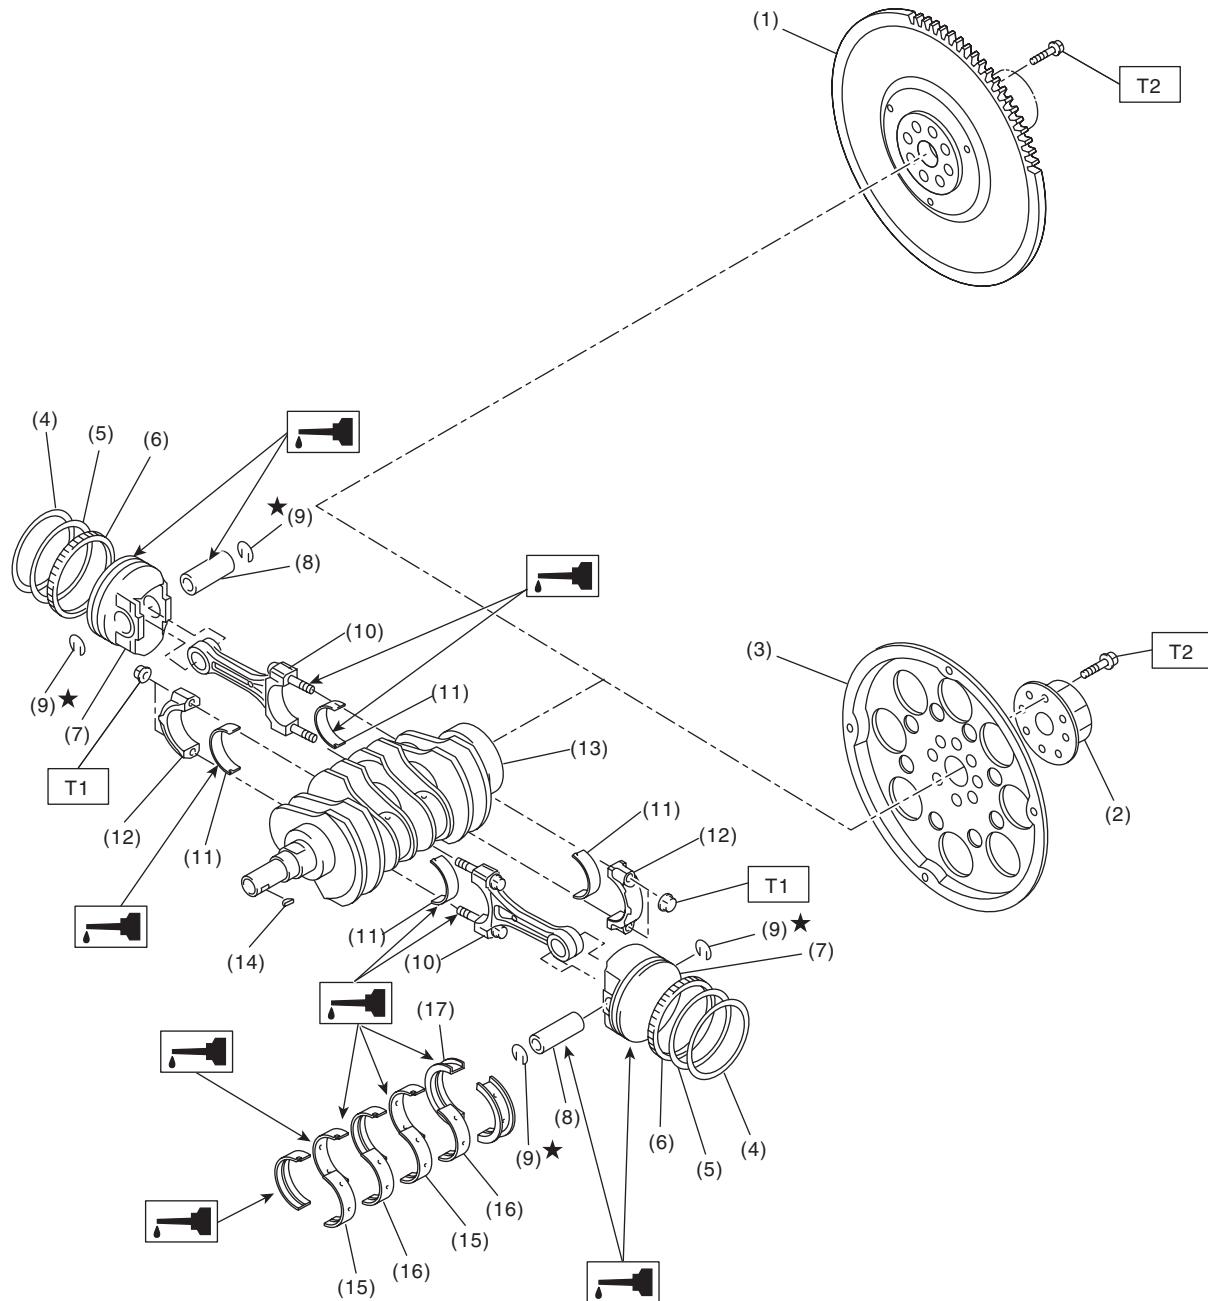
Second 12 (1.2, 8.9)

T8: 44 (4.5, 32.5)

T9: 45 (4.6, 33.2)

T10: 70 (7.1, 51.6)

6. CRANKSHAFT AND PISTON



ME-03292

(1) Flywheel (MT model)	(8) Piston pin	(15) Crankshaft bearing #1, #3
(2) Reinforcement (AT model)	(9) Snap ring	(16) Crankshaft bearing #2, #4
(3) Drive plate (AT model)	(10) Connecting rod	(17) Crankshaft bearing #5
(4) Top ring	(11) Connecting rod bearing	
(5) Second ring	(12) Connecting rod cap	
(6) Oil ring	(13) Crankshaft	
(7) Piston	(14) Woodruff key	

Tightening torque:N·m (kgf·m, ft·lb)

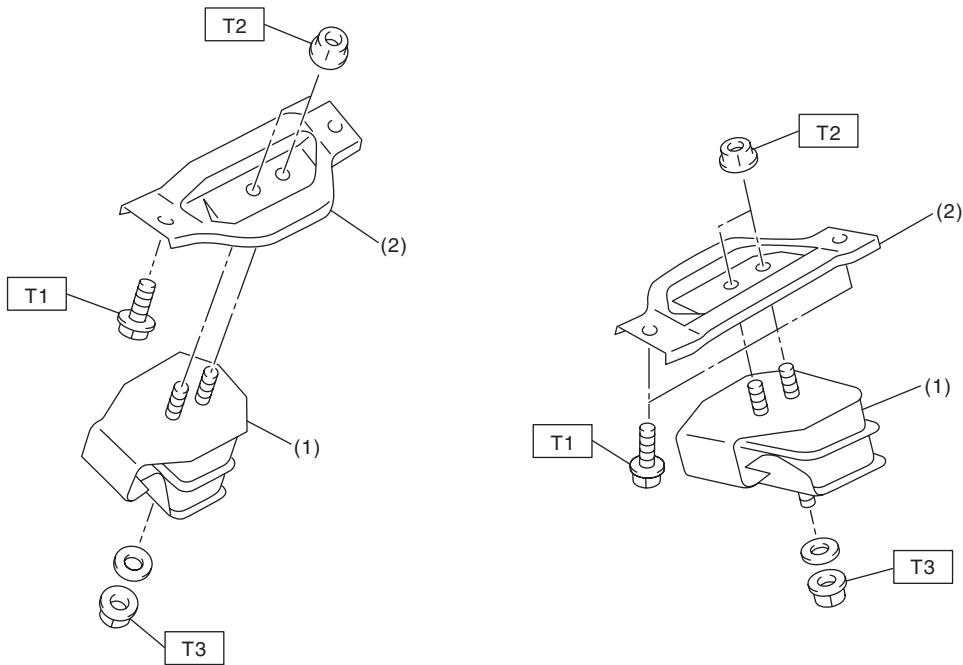
T1: 45 (4.6, 33.2)

T2: 72 (7.3, 53.1)

General Description

MECHANICAL

7. ENGINE MOUNTING



ME-00413

- (1) Front cushion rubber
- (2) Front engine mounting bracket

Tightening torque: N·m (kgf·m, ft·lb)
T1: 35 (3.6, 25.8)
T2: 42 (4.3, 31.0)
T3: 85 (8.7, 62.7)

C: CAUTION

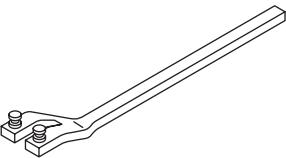
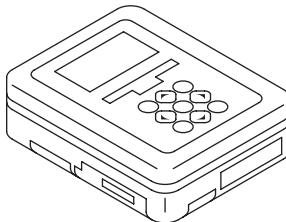
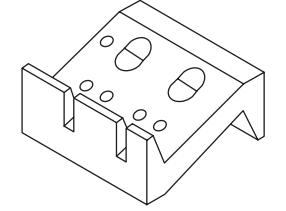
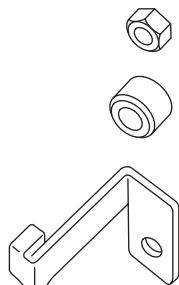
- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- All parts should be thoroughly cleaned, paying special attention to engine oil passages, pistons and bearings.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
- Be careful not to let oil, grease or coolant contact the timing belt, clutch disc and flywheel.
- All removed parts, if to be reused, should be re-installed in the original positions and directions.
- Bolts, nuts and washers should be replaced with new parts as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools, or not to stain seats and windows with coolant or oil. Place a cover over fender, as required, for protection.
- Prior to starting work, prepare the following: Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift up or lower the vehicle when necessary. Make sure to support the correct positions.

General Description

MECHANICAL

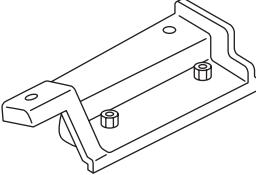
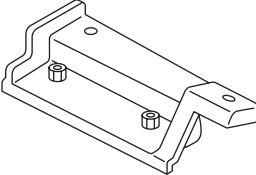
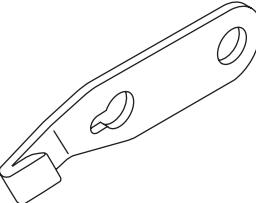
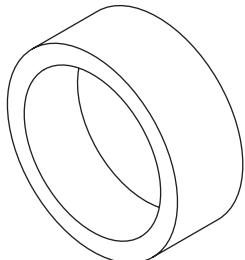
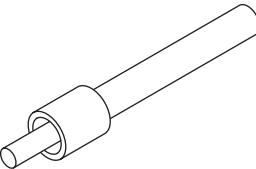
D: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18231AA010	18231AA010	CAM SPROCKET WRENCH	<ul style="list-style-type: none">Used for removing and installing cam sprocket. (LH side)CAM SPROCKET WRENCH (499207100) can also be used.
 ST1B021XU0	1B021XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.
 ST-498267800	498267800	CYLINDER HEAD TABLE	<ul style="list-style-type: none">Used for replacing valve guides.Used for removing and installing valve spring.
 ST-498277200	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.

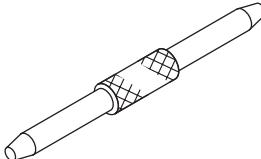
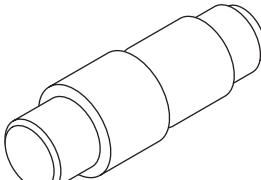
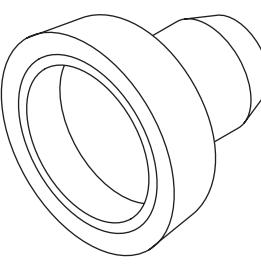
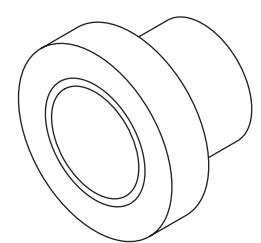
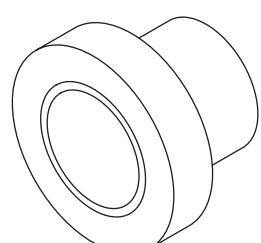
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-498457000	498457000	ENGINE STAND ADAPTER RH	Used with ENGINE STAND (499817100).
 ST-498457100	498457100	ENGINE STAND ADAPTER LH	Used with ENGINE STAND (499817100).
 ST-498497100	498497100	CRANKSHAFT STOPPER	Used for removing and installing the flywheel and the drive plate.
 ST-498747300	498747300	PISTON GUIDE	Used for installing piston in cylinder for 2.5 L model.
 ST-498857100	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.

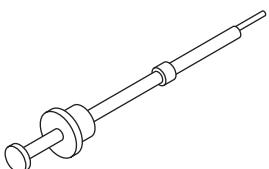
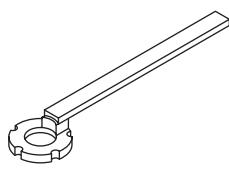
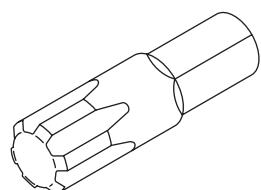
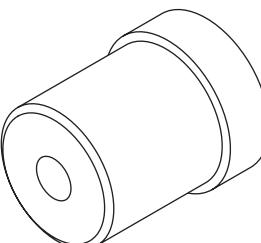
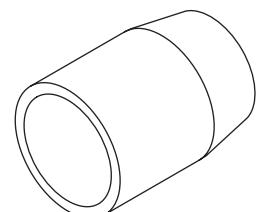
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499017100	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
 ST-499037100	499037100	CONNECTING ROD BUSHING REMOVER AND INSTALLER	Used for removing and installing connecting rod bushing.
 ST-499587200	499587200	CRANKSHAFT OIL SEAL INSTALLER	<ul style="list-style-type: none"> Used for installing crankshaft oil seal. Used with CRANKSHAFT OIL SEAL GUIDE (499597100).
 ST-499587500	499587500	OIL SEAL INSTALLER	<ul style="list-style-type: none"> Used for installing camshaft oil seal. Used with OIL SEAL GUIDE (499597000).
 ST-499587700	499587700	CAMSHAFT OIL SEAL INSTALLER	Used for installing cylinder head plug.

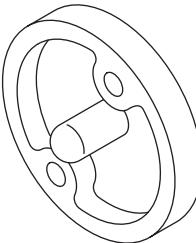
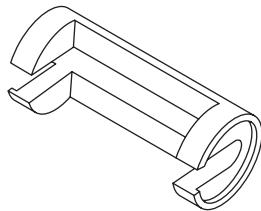
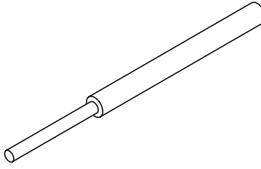
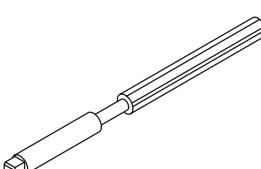
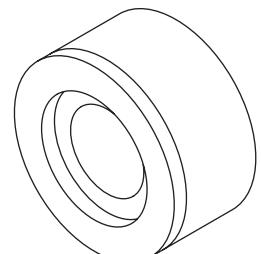
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499097700	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.
 ST-499207400	499207400	CAM SPROCKET WRENCH	Used for removing and installing cam sprocket. (RH side)
 ST-499497000	499497000	TORX® PLUS	Used for removing and installing camshaft cap.
 ST-499587100	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.
 ST-499597000	499597000	OIL SEAL GUIDE	<ul style="list-style-type: none"> Used for installing camshaft oil seal. Used with CAMSHAFT OIL SEAL INSTALLER (499587500).

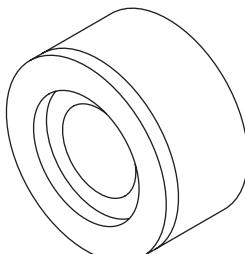
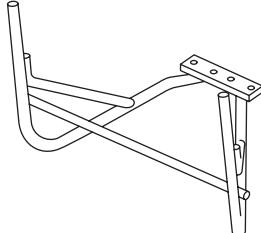
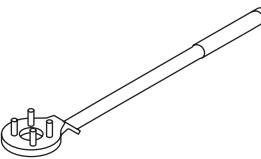
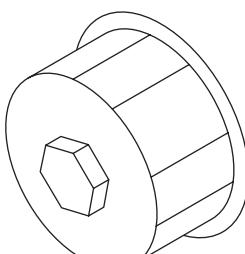
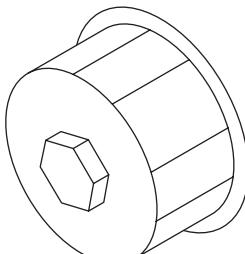
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499597100	499597100	CRANKSHAFT OIL SEAL GUIDE	<ul style="list-style-type: none"> Used for installing crankshaft oil seal. Used with CRANKSHAFT OIL SEAL INSTALLER (499587200).
 ST-499718000	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.
 ST-499767200	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
 ST-499767400	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
 ST-499767700	499767700	VALVE GUIDE ADJUSTER	Used for installing valve guides. (Intake side)

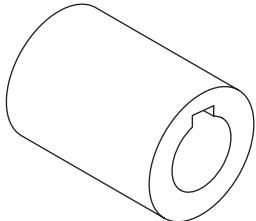

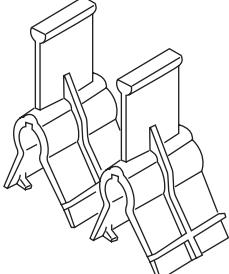
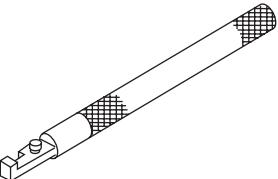
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499767800	499767800	VALVE GUIDE ADJUSTER	Used for installing valve guides. (Exhaust side)
 ST-499817100	499817100	ENGINE STAND	<ul style="list-style-type: none"> • Stand used for engine disassembly and assembly. • Used with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).
 ST-499977100	499977100	CRANK PULLEY WRENCH	Used to stop rotation of the crank pulley when loosening or tightening crank pulley bolts.
 ST18332AA000	18332AA000	OIL FILTER WRENCH	Used for removing and installing oil filter. (Outer diameter: 68 mm (2.68 in))
 ST18332AA010	18332AA010	OIL FILTER WRENCH	Used for removing and installing oil filter. (Outer diameter: 65 mm (2.56 in))

General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499987500	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 ST42099AE000	42099AE000	CONNECTOR REMOVER	Used for removing the quick connector.
 ST18354AA000	18354AA000	VALVE ROCKER HOLDER	Used for installing the valve rocker assembly (intake). (2 sets)
 ST18258AA000	18258AA000	SPRING INSTALLER	Used for installing the valve rocker assembly (intake).

2. GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Vacuum gauge	Used for measuring negative pressure.
Oil pressure gauge	Used for measuring oil pressure.
Fuel pressure gauge	Used for measuring fuel pressure.
Timing light	Used for measuring ignition timing.

E: PROCEDURE

It is possible to conduct the following service procedures with engine on vehicle, however, the procedures described in this section are based on the condition that the engine is removed from vehicle.

- V-belt
- Timing belt
- Valve rocker assembly
- Camshaft
- Cylinder head