


5. Engine Control Module (ECM) I/O Signal

A: ELECTRICAL SPECIFICATION

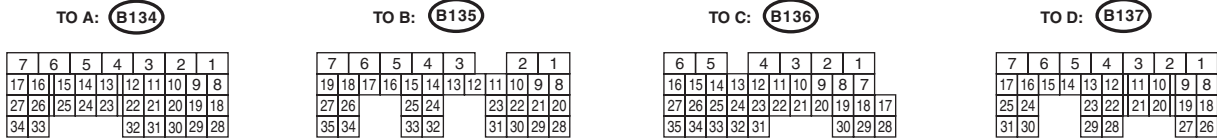

Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

Description		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (engine OFF)	Engine ON (idling)	
Accessory cut request		B135	32	10 — 13	12 — 14	Model with push button start Cranking: 0
Starter switch 2		B137	14	0	0	Model with push button start Cranking: 8 — 14
Starter cut relay		B135	34	0	0	Model with push button start Cranking: 8 — 14
Ignition switch		B137	27	10 — 13	12 — 14	—
Neutral position switch		B137	16	ON: 0 OFF: 10 — 13	ON: 0 OFF: 12 — 14	—
Delivery mode switch		B137	13	10 — 13	12 — 14	When fuse is installed: 0
Knock sensor	Signal	B136	28	2.5	2.5	—
	Shield	B136	29	0	0	—
Back-up power supply		B137	2	10 — 13	12 — 14	Ignition switch "OFF": 10 — 13
Control module power supply		B136	6	10 — 13	12 — 14	—
		B137	1	10 — 13	12 — 14	—
Sensor power supply		B134	19	5	5	—
		B135	22	5	5	—
Ignition control	#1	B134	21	0	0 or 5	Waveform
	#2	B134	10	0	0 or 5	Waveform
	#3	B134	31	0	0 or 5	Waveform
	#4	B134	8	0	0 or 5	Waveform
Fuel injector	#1	B134	12	10 — 13	1 — 14	Waveform
	#2	B134	22	10 — 13	1 — 14	Waveform
	#3	B134	32	10 — 13	1 — 14	Waveform
	#4	B134	13	10 — 13	1 — 14	Waveform
Fuel pump relay control		B135	19	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 12 — 14	—
A/C relay control		B135	35	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 12 — 14	—
A/C switch		B137	26	ON: 10 — 13 OFF: 0	ON: 12 — 14 OFF: 0	Manual A/C model
Blower fan switch		B137	20	ON: 0 OFF: 10 — 13	ON: 0 OFF: 12 — 14	Manual A/C model
A/C middle pressure switch		B137	8	ON: 0 OFF: 10 — 13	ON: 0 OFF: 12 — 14	—
Main fan relay control		B135	12	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 12 — 14	—
Sub fan relay control		B135	11	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 12 — 14	—
Engine speed output		B135	15	—	0 — 13 or more	Model with push button start Waveform
Purge control solenoid valve		B134	11	ON: 1 or less OFF: 10 — 13	ON: 1 or less OFF: 12 — 14	Waveform

Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

Description		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (engine OFF)	Engine ON (idling)	
EGR control valve	Signal 1	B136	11	0 or 10 — 13	0 or 12 — 14	—
	Signal 2	B136	13	0 or 10 — 13	0 or 12 — 14	—
	Signal 3	B136	31	0 or 10 — 13	0 or 12 — 14	—
	Signal 4	B136	32	0 or 10 — 13	0 or 12 — 14	—
Manifold absolute pressure sensor signal		B136	20	3.4 — 3.8	1.1 — 1.6	—
Electronic throttle control	Main	B134	18	Approx. 0.7	Approx. 0.6 — 0.7 (After engine is warmed up.)	Fully closed: Approx. 0.6 Fully open: Approx. 4.0
	Sub	B134	28	Approx. 1.6	Approx. 1.5 — 1.6 (After engine is warmed up.)	Fully closed: Approx. 1.5 Fully open: Approx. 4.2
Electronic throttle control motor (+)		B134	2	Duty waveform	Duty waveform	Drive frequency: 500 Hz
Electronic throttle control motor (−)		B134	1	Duty waveform	Duty waveform	Drive frequency: 500 Hz
Electronic throttle control motor power supply		B135	7	10 — 13	12 — 14	—
Electronic throttle control motor relay		B135	17	ON: 0 OFF: 10 — 13	ON: 0 OFF: 12 — 14	When ignition switch is turned to ON: ON
Intake oil control solenoid (LH)		B134	16	ON: 0 OFF: 10 — 13	ON: 0 OFF: 10 — 13	—
Intake oil control solenoid (RH)		B134	17	ON: 0 OFF: 10 — 13	ON: 0 OFF: 10 — 13	—
Intake camshaft position sensor (LH)		B136	15	0 or 5	0 or 5	Waveform
Intake camshaft position sensor (RH)		B136	26	0 or 5	0 or 5	Waveform
Camshaft position sensor ground		B136	34	0	0	—
Accelerator pedal position sensor	Main sensor signal	B135	23	Fully closed: 0.4 — 1.0 Fully opened: 2.4 — 3.7	Fully closed: 0.4 — 1.0 Fully opened: 2.4 — 3.7	—
	Main power supply	B135	21	5	5	—
	Ground (main sensor)	B135	29	0	0	—
	Sub signal sensor	B135	31	Fully closed: 0.3 — 1.1 Fully opened: 2.3 — 3.8	Fully closed: 0.3 — 1.1 Fully opened: 2.3 — 3.8	—
Starter relay		B135	26	ON: 0 OFF: 10 — 13	ON: 0 OFF: 12 — 14	ON: cranking
Clutch switch		B137	15	When clutch pedal is depressed: 0 When clutch pedal is released: 10 — 13	When clutch pedal is depressed: 0 When clutch pedal is released: 12 — 14	MT model

Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

Description	Connector No.	Terminal No.	Signal (V)		Note
			Ignition SW ON (engine OFF)	Engine ON (idling)	
Brake switch 1 (brake switch)	B137	7	When brake pedal is depressed: 0 When brake pedal is released: 10 — 13	When brake pedal is depressed: 0 When brake pedal is released: 12 — 14	—
Brake switch 2 (stop light switch)	B137	3	When brake pedal is depressed: 10 — 13 When brake pedal is released: 0	When brake pedal is depressed: 12 — 14 When brake pedal is released: 0	—
Cruise control command switch	B137	30	When operating nothing: 3.5 — 4.5 When operating RES/ACC: 2.5 — 3.5 When operating following distance setting: 1.5 — 2.5 When operating SET/COAST: 0.5 — 1.5 When operating CANCEL: 0 — 0.5	When operating nothing: 3.5 — 4.5 When operating RES/ACC: 2.5 — 3.5 When operating following distance setting: 1.5 — 2.5 When operating SET/COAST: 0.5 — 1.5 When operating CANCEL: 0 — 0.5	—
Cruise control main switch	B137	23	ON: 0 OFF: 5	ON: 0 OFF: 5	—
CAN communication	(Hi)	B137	19	—	—
	(Lo)	B137	18	—	—
Self-shutoff control	B135	13	0	0	—
Oil level switch	B136	24	0	0	Oil level LOW: 10 — 14
Generator control	B135	18	0 — 6.5	0 — 6.5	—
Battery current sensor	B137	11	2.6 — 2.8	2.4 — 2.6	After engine is warmed up. (New battery)
Battery temperature sensor	B137	24	1.1 — 2.4	1.1 — 2.4	When battery temperature is 20 — 50°C (68 — 122°F)
Tumble generator valve opening angle switch signal (LH)	B136	9	Fully closed: 0.5 or less Fully opened: 9.5 or more	Fully closed: 0.5 or less Fully opened: 9.5 or more	—
Tumble generator valve (LH open)	B134	23	0 or 10 — 13	0 or 12 — 14	—
Tumble generator valve (LH closed)	B134	24	0 or 10 — 13	0 or 12 — 14	—
Tumble generator valve opening angle switch signal (RH)	B136	23	Fully closed: 0.5 or less Fully opened: 9.5 or more	Fully closed: 0.5 or less Fully opened: 9.5 or more	—
Tumble generator valve (RH open)	B134	25	0 or 10 — 13	0 or 12 — 14	—
Tumble generator valve (RH closed)	B134	14	0 or 10 — 13	0 or 12 — 14	—
Immobilizer communication	B135	25	—	—	—

Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

Description		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (engine OFF)	Engine ON (idling)	
ELCM	Switching valve	B135	1	10 — 13	12 — 14	Operating: 0
	Pressure sensor	B135	20	1 — 4	1 — 4	When ignition switch is turned to ON: atmospheric pressure
	Vacuum pump	B135	8	10 — 13	12 — 14	Operating: 0
Ground	Sensor	B134	29	0	0	—
		B135	30	0	0	—
	Engine 1	B134	4	0	0	—
	Engine 2	B134	3	0	0	—
	Engine 3	B136	1	0	0	—
	Engine 4	B136	2	0	0	—
	Engine 5	B136	3	0	0	—
	Body	B137	4	0	0	—

Engine Control Module (ECM) I/O Signal


ENGINE (DIAGNOSTICS)

Input/output name:

- Crankshaft position sensor
- Intake camshaft position sensor RH
- Intake camshaft position sensor LH

Measuring condition:


- After warming-up
- At idling

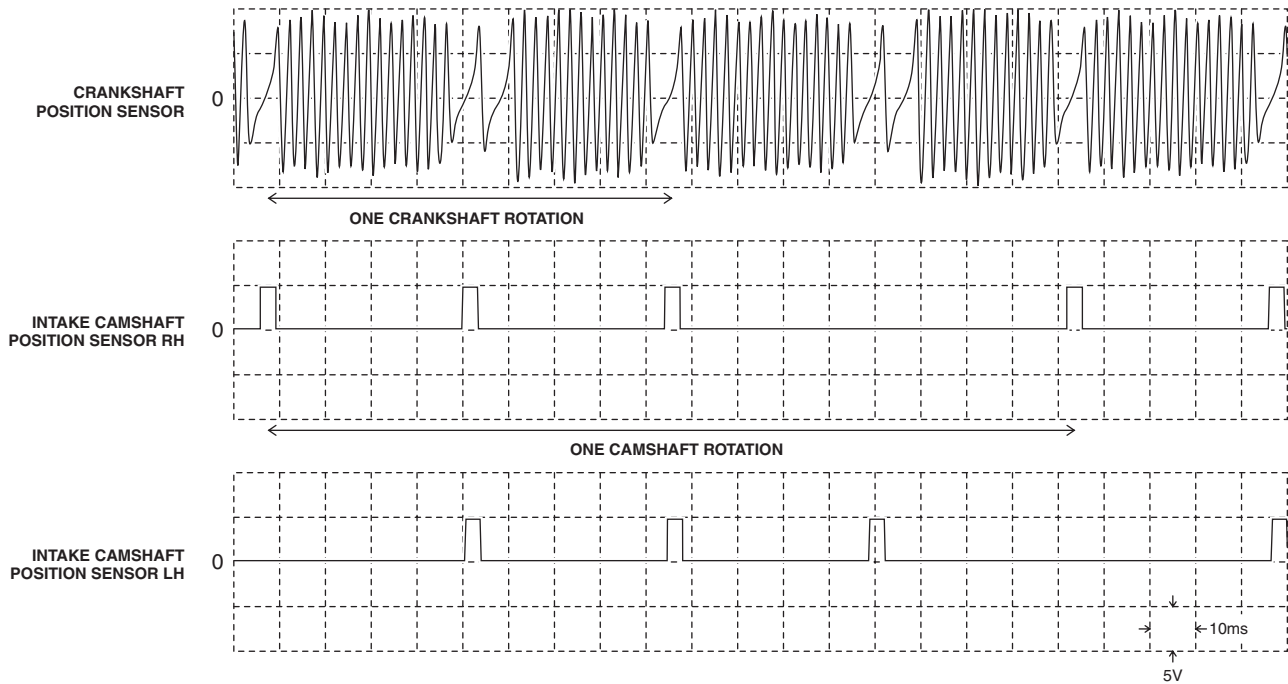

EN-08773

Engine Control Module (ECM) I/O Signal


ENGINE (DIAGNOSTICS)

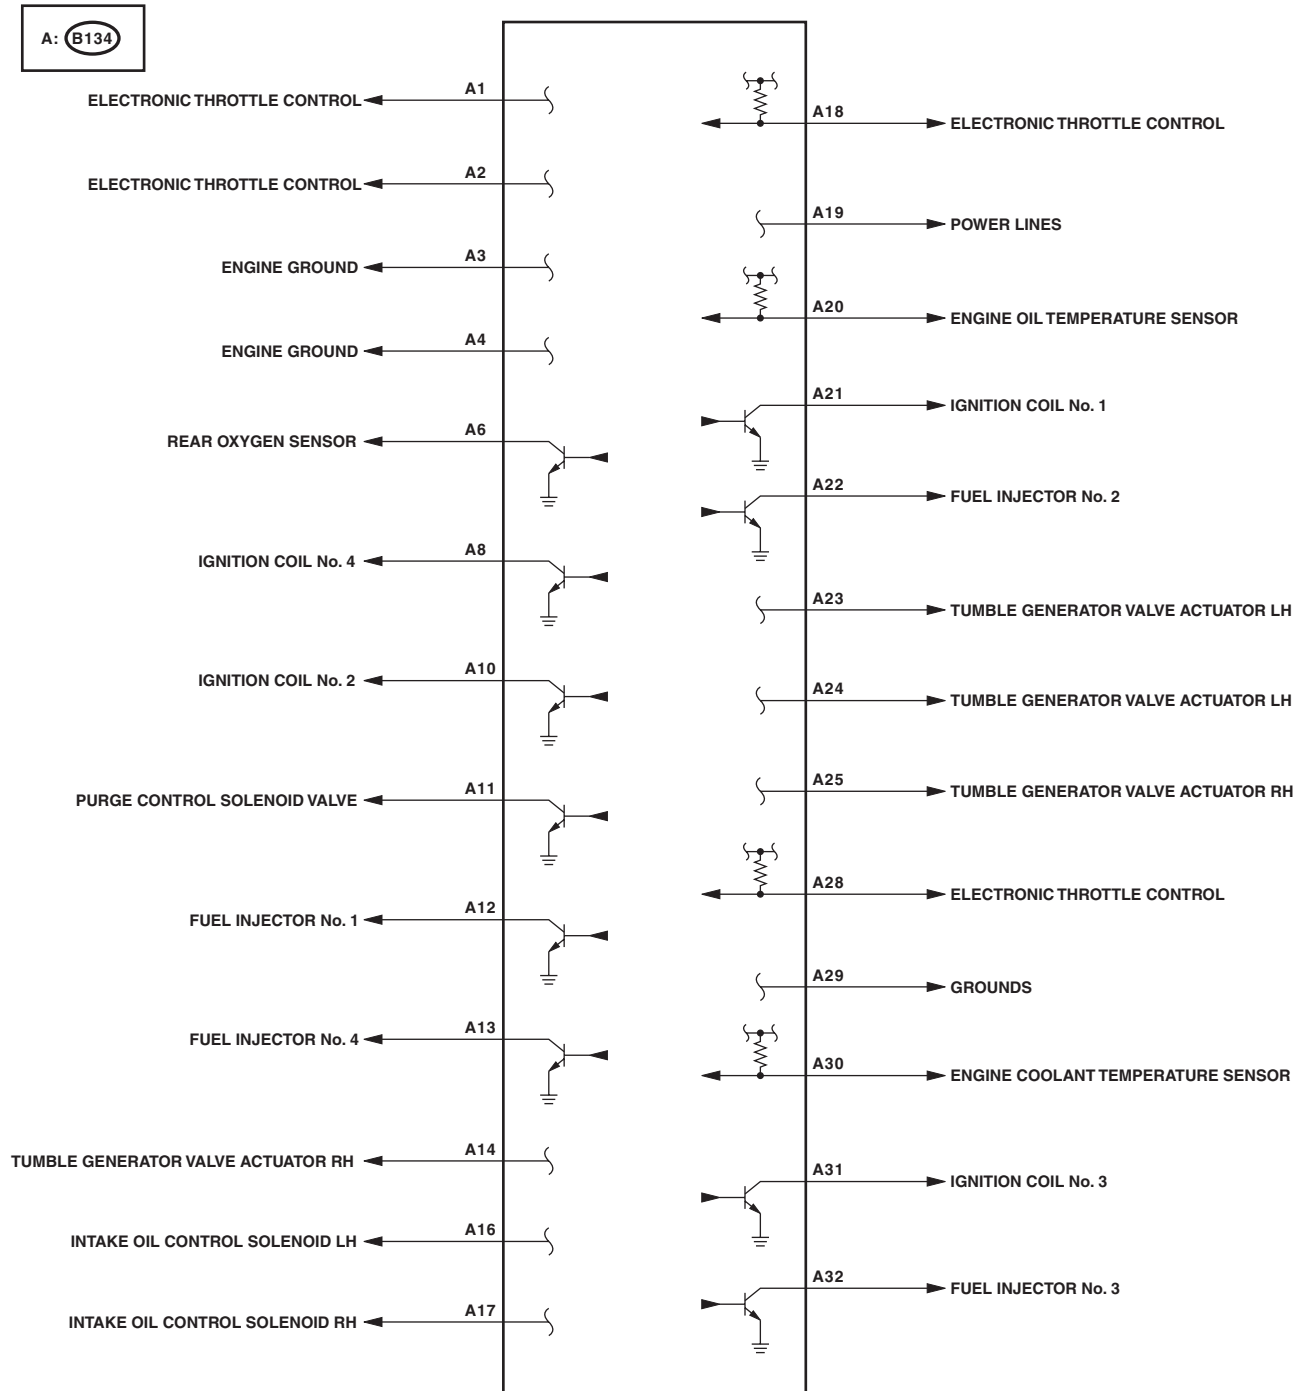

EN-09847

Engine Control Module (ECM) I/O Signal


ENGINE (DIAGNOSTICS)

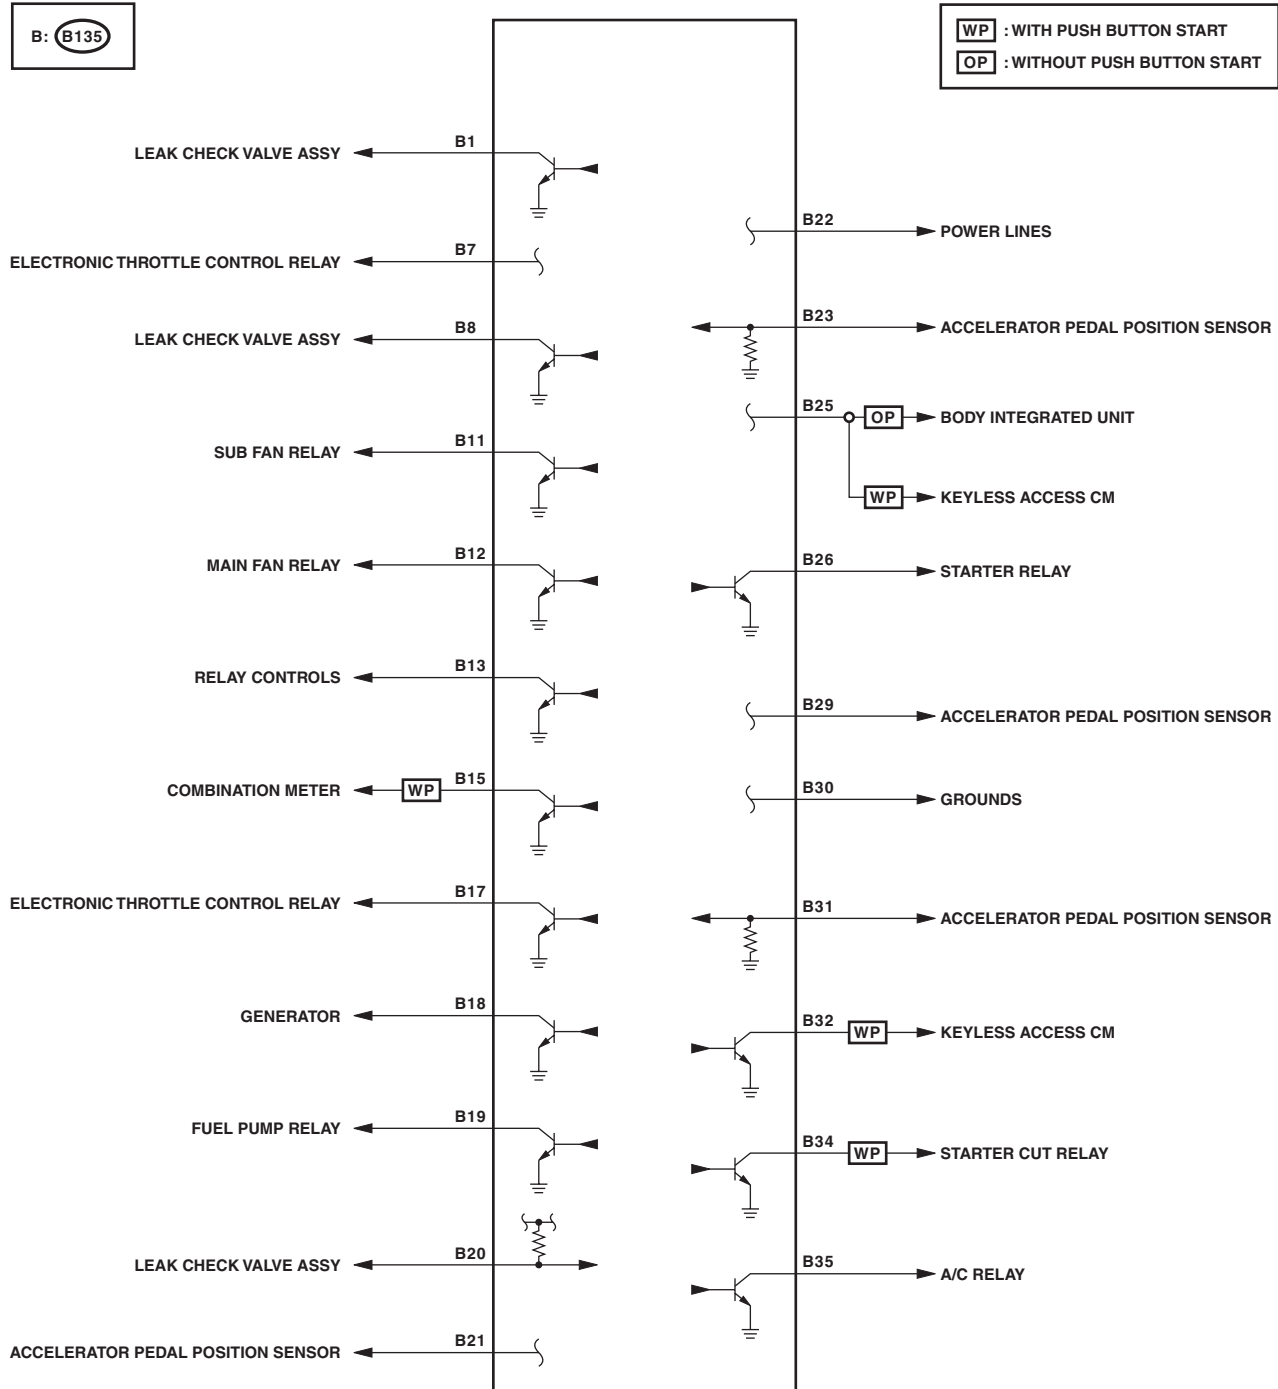

EN-10480

Engine Control Module (ECM) I/O Signal


ENGINE (DIAGNOSTICS)

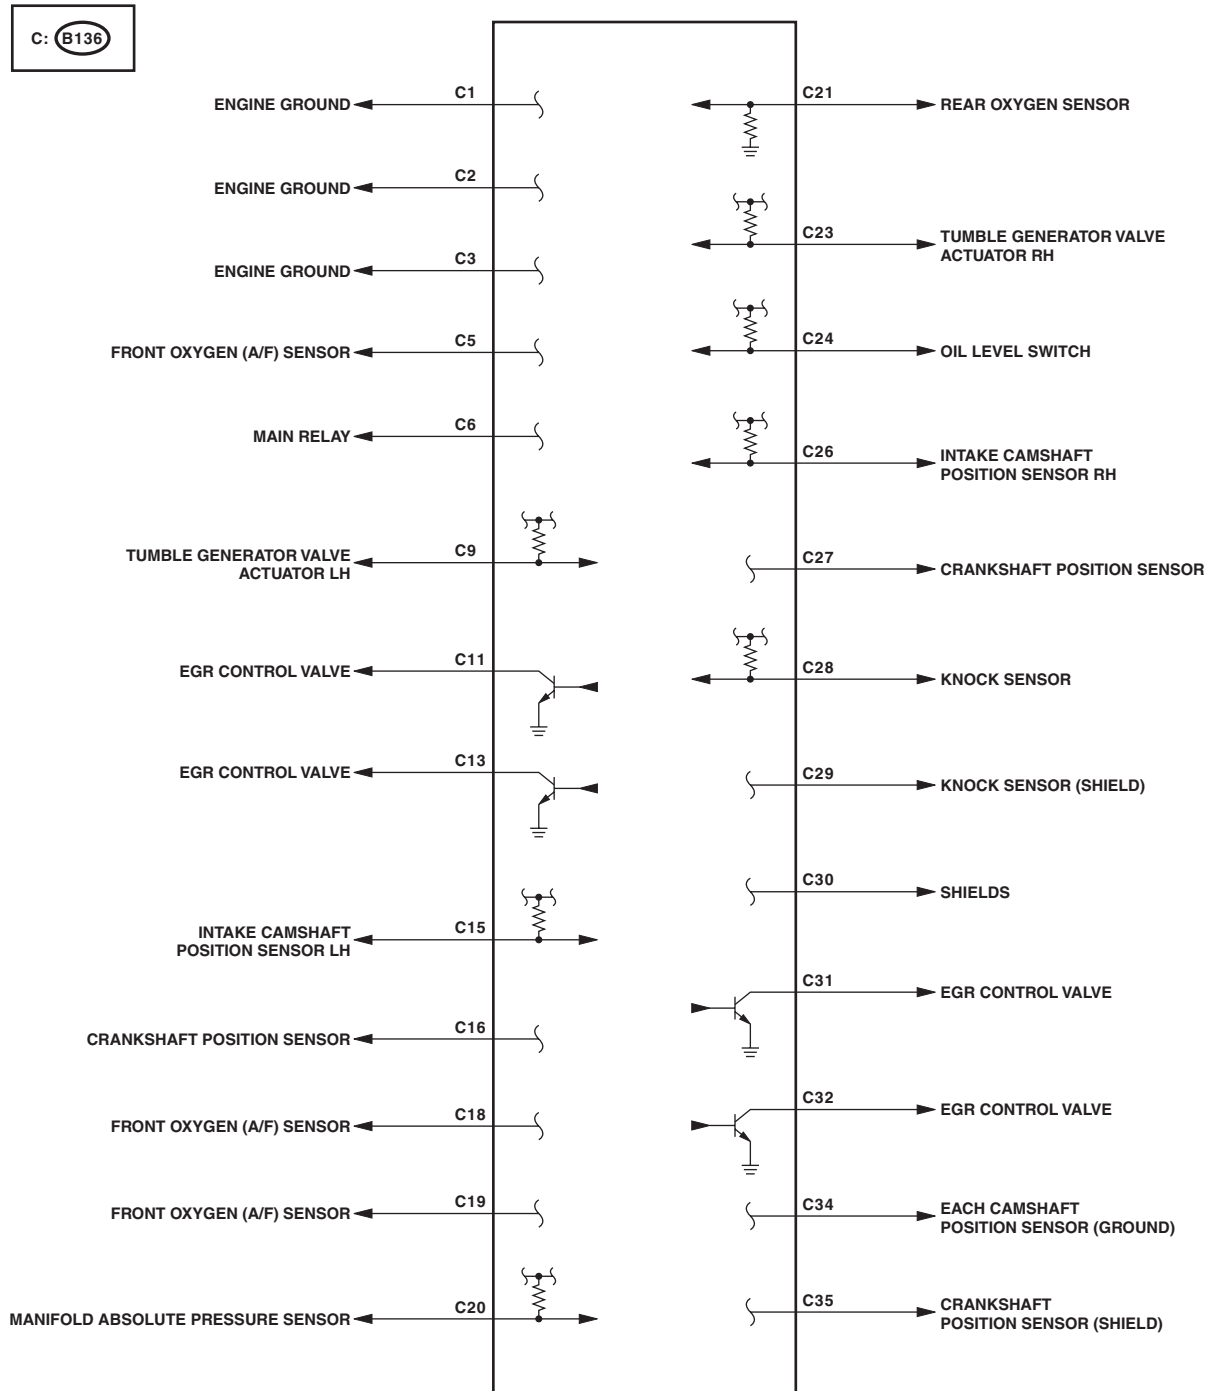

EN-10481

Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

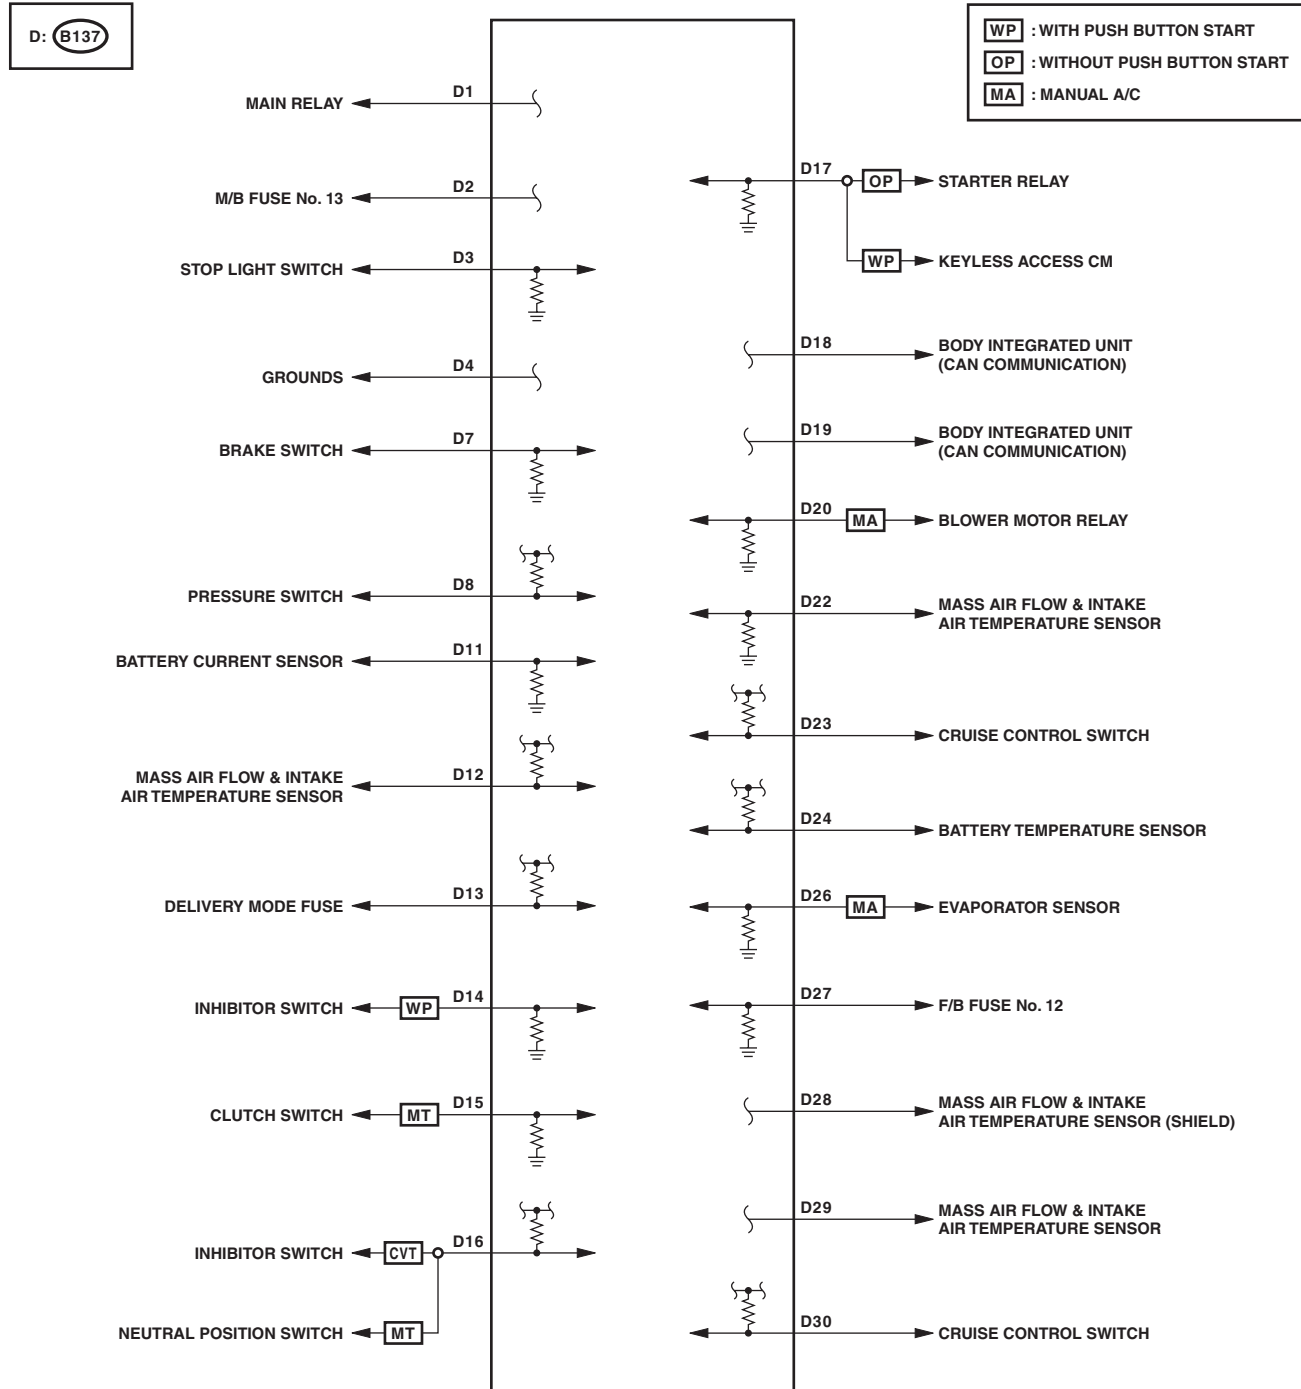

EN-10482