

# General Description

## MECHANICAL

### 1. General Description

#### A: SPECIFICATION

Engine	Model	2.0 L			
	Cylinder arrangement	Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine			
	Valve system mechanism	Chain driven, double overhead camshaft, 4-valve/cylinder			
	Bore x Stroke	mm (in)		86.0 x 86.0 (3.39 x 3.39)	
	Displacement	cm <sup>3</sup> (cu in)		1,998 (121.92)	
	Compression ratio	10.6			
	Compression pressure (at 200 — 300 rpm)	kPa (kg/cm <sup>2</sup> , psi)	Standard	1,350 — 1,750 (14 — 18, 196 — 254)	
	Number of piston rings	Compression ring: 2 Oil ring: 1			
	Intake valve timing	Open	Max. retard	ATDC 26°	
			Min. advance	BTDC 42°	
		Close	Max. retard	ABDC 82°	
			Min. advance	ABDC 14°	
	Exhaust valve timing	Open	Max. retard	BBDC 11°	
			Min. advance	BBDC 66°	
		Close	Max. retard	ATDC 55°	
			Min. advance	ATDC 0°	
	Cam clearance mm (in)	Intake	Standard	0.13 <sup>+0.02</sup> <sub>-0.03</sub> (0.0051 <sup>+0.0008</sup> <sub>-0.0012</sub> )	
		Exhaust	Standard	0.22 <sup>+0.02</sup> (0.0087 <sup>+0.0008</sup> <sub>-0.0008</sub> )	
	Idle rpm (select lever in "P" or "N" range)	rpm	No load	Standard	
			A/C ON	Standard	
	Ignition order			1 → 3 → 2 → 4	
	Ignition timing		BTDC/rpm	Standard	
	10° <sup>±</sup> 10°/700				

# General Description

MECHANICAL

NOTE:

OS: Oversize US: Undersize

Camshaft	Bending mm (in)			Limit	0.020 (0.00079)		
	Camlobe height mm (in)	Intake	Valve drive section	Standard	40.34 — 40.44 (1.588 — 1.592)		
			Fuel pump drive section	Standard	41.95 — 42.05 (1.652 — 1.656)		
		Exhaust		Standard	40.20 — 40.30 (1.583 — 1.587)		
	Cam base circle diameter mm (in)			Standard	34.0 (1.339)		
	Journal outer diameter mm (in)			Standard	25.946 — 25.963 (1.0215 — 1.0222)		
	Thrust clearance mm (in)			Standard	0.068 — 0.116 (0.0027 — 0.0047)		
	Oil clearance mm (in)			Standard	0.037 — 0.072 (0.0015 — 0.0028)		
Cylinder head	Warpage (mating surface with cylinder block) mm (in)			Limit	0.035 (0.0014)		
	Grinding limit mm (in)				To 98.4 (3.874)		
	Height mm (in)			Standard	98.5 (3.878)		
Valve & valve guide	Valve overall length mm (in)	Intake			104.95 (4.132)		
		Exhaust			97.9 (3.854)		
	Valve head edge thickness mm (in)	Intake		Standard	0.8 — 1.2 (0.031 — 0.047)		
		Exhaust		Standard	1.0 — 1.4 (0.039 — 0.055)		
	Valve stem outer diameter mm (in)	Intake		Standard	5.455 — 5.470 (0.2148 — 0.2154)		
		Exhaust		Standard	5.445 — 5.460 (0.2144 — 0.2150)		
	Valve guide inner diameter mm (in)			Standard	5.500 — 5.512 (0.2165 — 0.2170)		
	Clearance between valve and valve guide mm (in)	Intake		Standard	0.030 — 0.057 (0.0012 — 0.0022)		
		Exhaust		Standard	0.040 — 0.067 (0.0016 — 0.0026)		
	Valve guide protrusion amount mm (in)			Standard	11.4 — 11.8 (0.449 — 0.465)		
Valve & valve shim	Valve stem end outer diameter mm (in)	Intake		Standard	5.455 — 5.470 (0.2148 — 0.2154)		
		Exhaust		Standard	5.445 — 5.460 (0.2144 — 0.2150)		
	Valve shim inner diameter mm (in)			Standard	5.500 — 5.560 (0.2165 — 0.2189)		
	Clearance between valve and valve shim mm (in)	Intake		Standard	0.030 — 0.105 (0.0012 — 0.0041)		
		Exhaust		Standard	0.040 — 0.115 (0.0016 — 0.0045)		
Valve seat	Seating width between valve and valve seat mm (in)	Intake		Standard	0.8 — 1.6 (0.031 — 0.063)		
		Exhaust		Standard	1.1 — 1.7 (0.043 — 0.067)		
	Seating angle between valve and valve seat				45°		
	Seating position between valve and valve seat				Valve face center		
Valve spring	Free length mm (in)			Standard	44.03 (1.733)		
	Tension/spring height N (kgf, lb)/mm (in)	Set		Standard	(18.56 — 21.41, 40.92 — 47.22)/ 33.0 (1.299)		
		Lift	Standard	440 — 486 (44.87 — 49.56, 98.93 — 109.27)/ 22.0 (0.866)			
	Squareness			Standard	2.5°, 1.9 mm (0.075 in) or less		

# General Description

## MECHANICAL

Cylinder block & piston	Cylinder block warpage (Mating surface with cylinder head)			mm (in)	Limit	0.025 (0.00098)	
	Grinding limit of cylinder block			mm (in)	To 204.9 (8.067)		
	Height of cylinder block			mm (in)	Standard	205.0 (8.071)	
	Inner diameter of cylinder liner	mm (in)	Cylinder bore size mark A	Standard	86.005 — 86.015 (3.3860 — 3.3864)		
			Cylinder bore size mark B	Standard	85.995 — 86.005 (3.3856 — 3.3860)		
	Cylindricality of cylinder liner			mm (in)	Limit	0.03 (0.0012)	
	Out-of-roundness of cylinder liner			mm (in)	Limit	0.010 (0.0004)	
	Piston grade point			mm (in)	40.0 (1.57)		
	Piston outer diameter	mm (in)	Standard	Grade A	85.985 — 85.995 (3.3852 — 3.3856)		
			Grade B	Standard	85.975 — 85.985 (3.3848 — 3.3852)		
			0.25 (0.0098) OS	Standard	86.225 — 86.245 (3.3947 — 3.3955)		
			0.50 (0.0197) OS	Standard	86.475 — 86.495 (3.4045 — 3.4053)		
Piston and piston pin	Clearance between cylinder liner and piston			mm (in)	Standard	0.010 — 0.030 (0.00039 — 0.00118)	
	Inner diameter of cylinder liner boring limit (diameter)			mm (in)	To 86.505 (3.4057)		
Piston ring	Degree of fit				Piston pin must be fitted into position with thumb at 20°C (68°F).		
	Clearance between piston and piston pin				mm (in)	Standard 0.004 — 0.008 (0.0002 — 0.0003)	
Connecting rod and connecting rod bearing	Closed gap	mm (in)	Compression ring	Top ring	Standard	0.20 — 0.25 (0.0079 — 0.0098)	
				Second ring	Standard	0.40 — 0.50 (0.0157 — 0.0197)	
	Oil ring (Upper rail and lower rail)				Standard	0.10 — 0.35 (0.0039 — 0.0138)	
	Clearance between compression ring and piston	mm (in)	Top ring	Standard	0.040 — 0.080 (0.0016 — 0.0031)		
			Second ring	Standard	0.045 — 0.085 (0.0018 — 0.0033)		
	Bend or twist per 100 mm (3.94 in) in length			mm (in)	Limit	0.10 (0.0039)	
Piston pin & connecting rod bushing	Thrust clearance			mm (in)	Standard	0.070 — 0.330 (0.0028 — 0.0130)	
	Connecting rod bearing thickness (at center)	mm (in)	Standard size	Standard	1.492 — 1.508 (0.0587 — 0.0594)		
			0.03 (0.0012) US	Standard	1.511 — 1.515 (0.0595 — 0.0596)		
			0.05 (0.0020) US	Standard	1.521 — 1.525 (0.0599 — 0.0600)		
			0.25 (0.0098) US	Standard	1.621 — 1.625 (0.0638 — 0.0640)		
	Oil clearance			mm (in)	Standard	0.025 — 0.055 (0.0010 — 0.0022)	
	Clearance between piston pin and connecting rod bushing			mm (in)	Standard	0.004 — 0.026 (0.0002 — 0.0010)	

# General Description

MECHANICAL

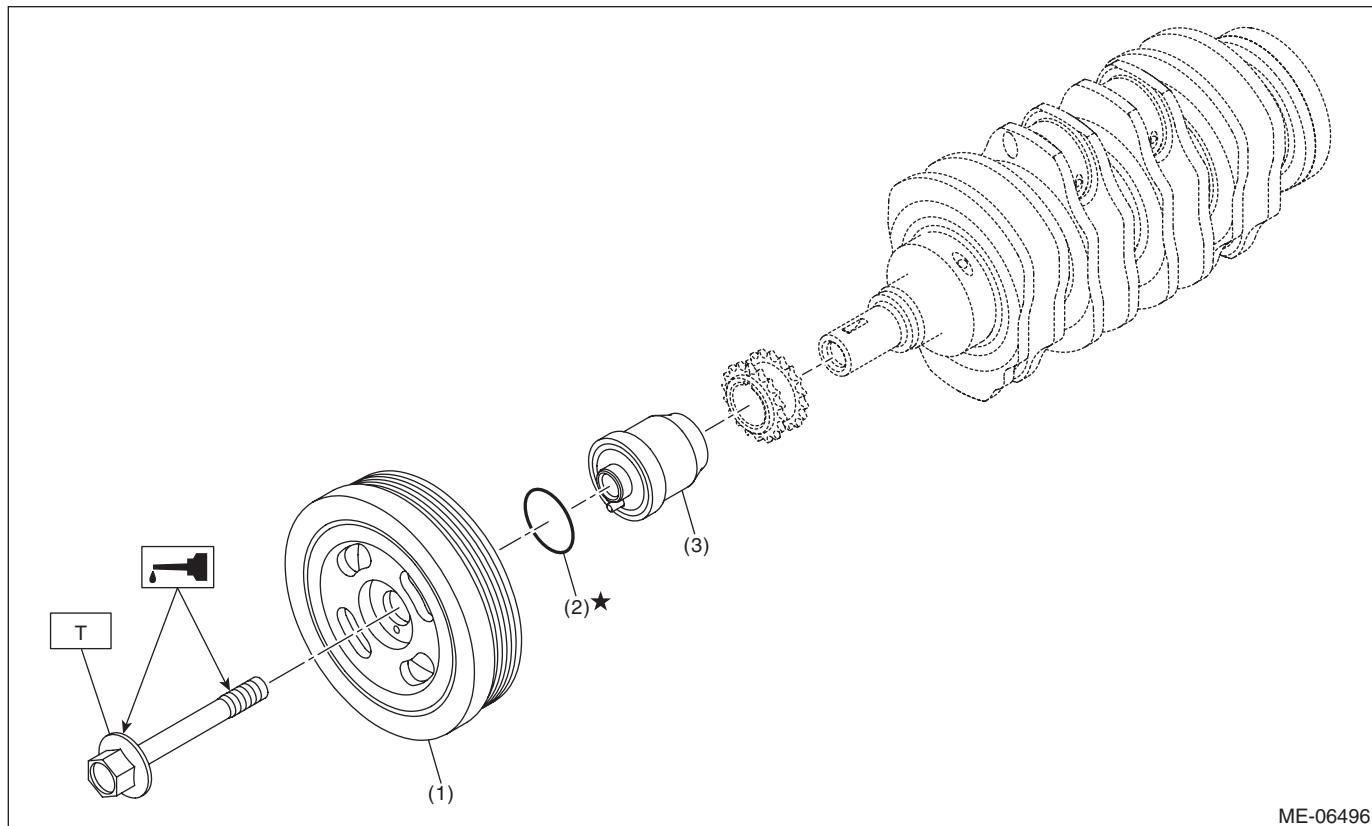
Crank- shaft and crank- shaft bearing	Bending		mm (in)	Limit	0.035 (0.0014)		
	Crankshaft pin	Cylindricality		mm (in)	Limit		
		Out-of-round- ness		mm (in)	Limit		
		Grinding limit (dia.)		mm (in)	To 49.726 (1.9577)		
	Crankshaft journal	Cylindricality		mm (in)	Limit		
		Out-of-round- ness		mm (in)	Limit		
		Grinding limit (dia.)		mm (in)	To 67.735 (2.6667)		
	Crankshaft pin outer diameter	mm (in)	Standard size	Standard	49.976 — 50.000 (1.9676 — 1.9685)		
			0.03 (0.0012) US	Standard	49.946 — 49.970 (1.9664 — 1.9673)		
			0.05 (0.0020) US	Standard	49.926 — 49.950 (1.9656 — 1.9665)		
			0.25 (0.0098) US	Standard	49.726 — 49.750 (1.9577 — 1.9587)		
	Crankshaft journal outer diameter	mm (in)	Standard size	Standard	67.985 — 68.009 (2.6766 — 2.6775)		
			0.03 (0.0012) US	Standard	67.955 — 67.979 (2.6754 — 2.6763)		
			0.05 (0.0020) US	Standard	67.935 — 67.959 (2.6746 — 2.6755)		
			0.25 (0.0098) US	Standard	67.735 — 67.759 (2.6667 — 2.6677)		
	Crankshaft bear- ing thickness (at center)	mm (in)	#1, #2, #3, #4	Standard size	2.495 — 2.513 (0.0982 — 0.0989)		
				0.03 (0.0012) US	Standard	2.519 — 2.522 (0.0992 — 0.0993)	
				0.05 (0.0020) US	Standard	2.529 — 2.532 (0.0996 — 0.0997)	
				0.25 (0.0098) US	Standard	2.629 — 2.632 (0.1035 — 0.1036)	
		#5		Standard size	2.493 — 2.511 (0.0981 — 0.0989)		
				0.03 (0.0012) US	Standard	2.517 — 2.520 (0.0991 — 0.0992)	
				0.05 (0.0020) US	Standard	2.527 — 2.530 (0.0995 — 0.0996)	
				0.25 (0.0098) US	Standard	2.627 — 2.630 (0.1034 — 0.1035)	
Thrust clearance			mm (in)	Standard	0.130 — 0.308 (0.00512 — 0.01213)		
Oil clearance			mm (in)	Standard	0.013 — 0.031 (0.00051 — 0.00122)		

# General Description

## MECHANICAL

### B: COMPONENT

#### 1. CRANK PULLEY



ME-06496


(1) Crank pulley  
(2) O-ring

(3) Crank pulley boss

***Tightening torque: N·m (kgf·m, ft-lb)***

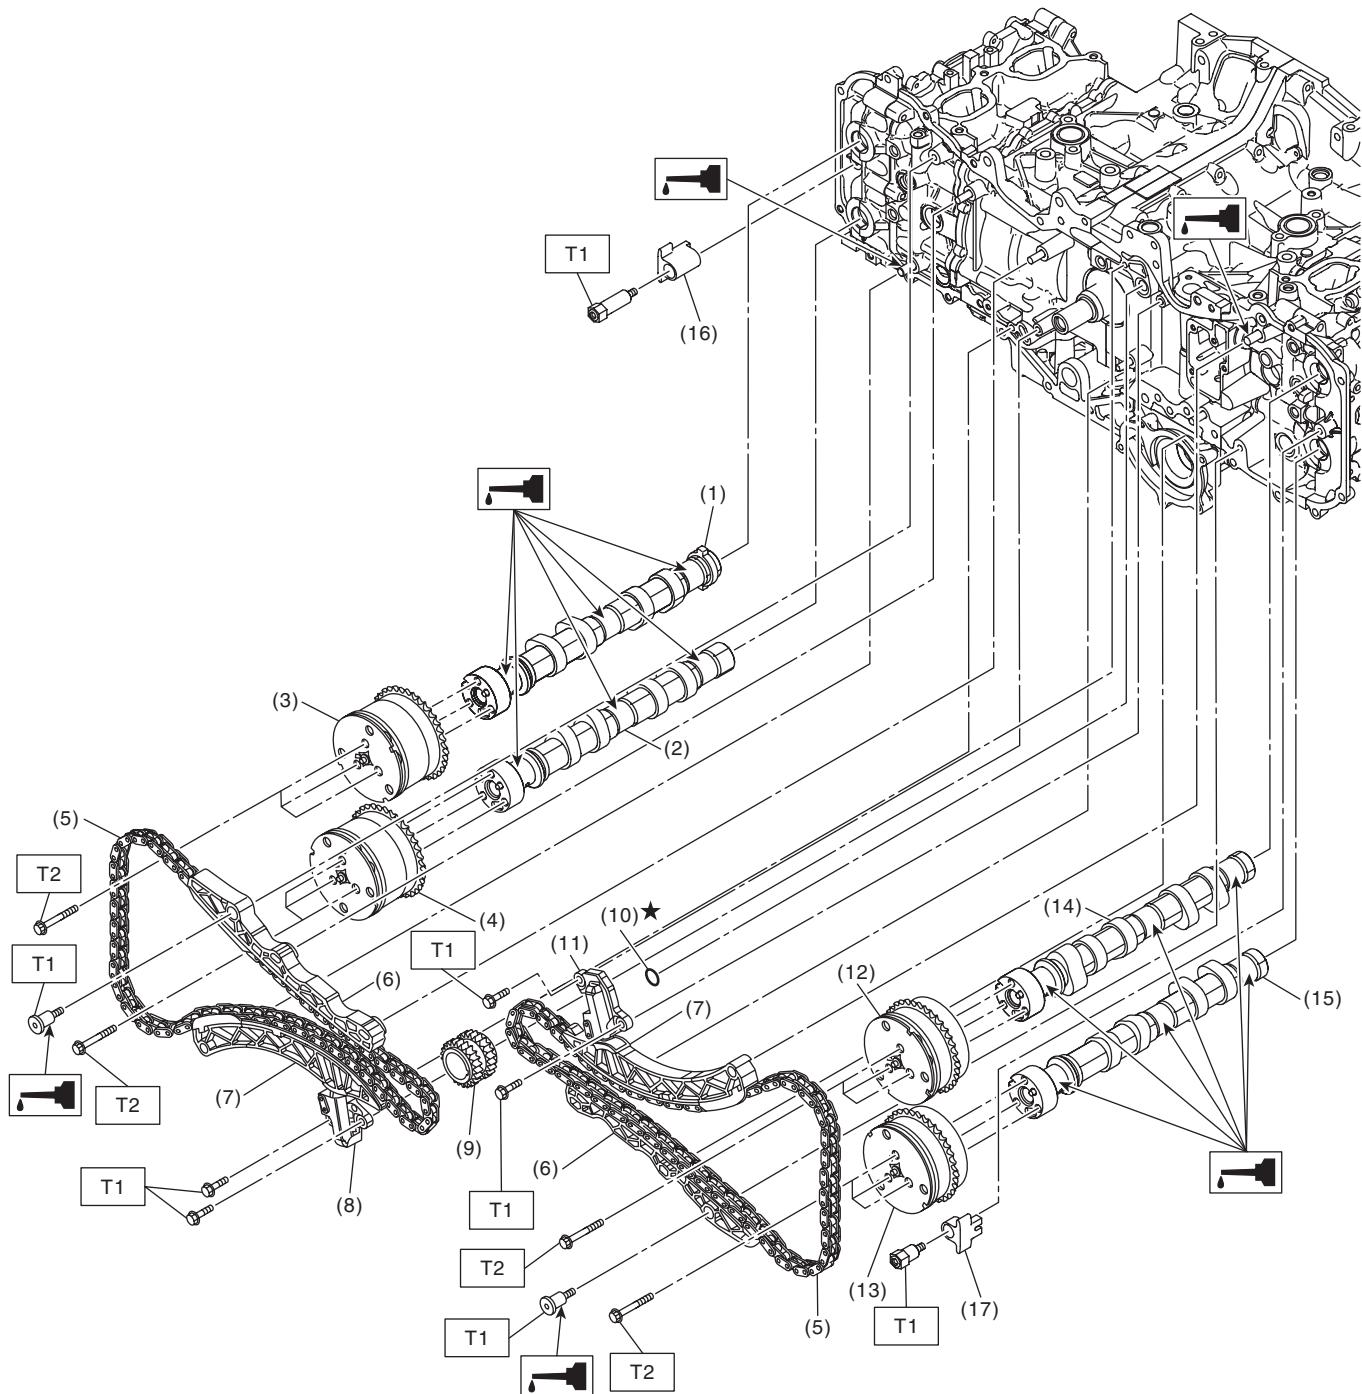***T: <Ref. to ME(H4DOTC)-86,  
INSTALLATION, Crank Pulley.>***

### 2. TIMING CHAIN & CAMSHAFT



ME-06622

(1) Intake camshaft RH	(8) Chain tensioner RH	(15) Exhaust camshaft LH
(2) Exhaust camshaft RH	(9) Crank sprocket	(16) Chain guide B
(3) Intake cam sprocket RH	(10) O-ring	(17) Chain guide C
(4) Exhaust cam sprocket RH	(11) Chain tensioner LH	
(5) Timing chain	(12) Intake cam sprocket LH	
(6) Chain guide A	(13) Exhaust cam sprocket LH	
(7) Chain tension lever	(14) Intake camshaft LH	

**Tightening torque: N·m (kgf·m, ft·lb)**

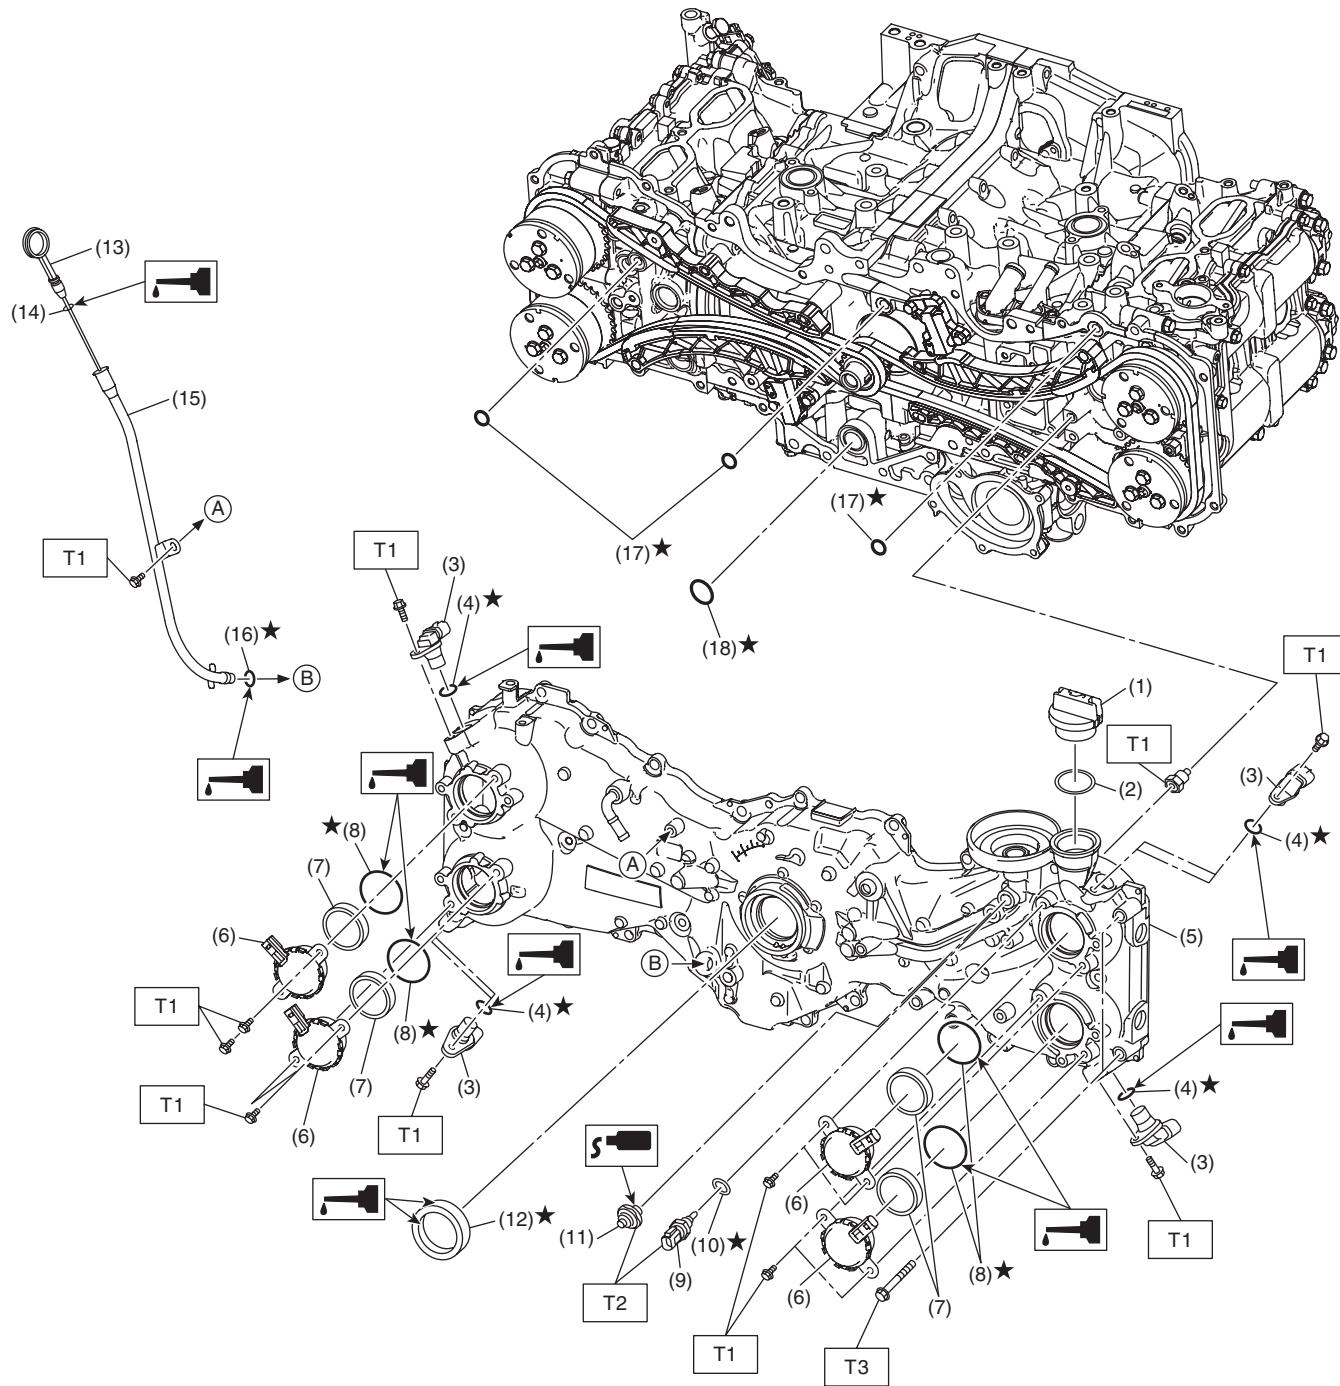
**T1: 6.4 (0.7, 4.7)**

**T2: 18 (1.8, 13.3)**

# General Description

## MECHANICAL

### 3. CHAIN COVER



ME-08088

# General Description

MECHANICAL

(1) Oil filler cap	(9) Engine oil temperature sensor	(17) O-ring
(2) Gasket	(10) Gasket	(18) O-ring
(3) Camshaft position sensor	(11) Oil pressure switch	
(4) O-ring	(12) Front oil seal	
(5) Chain cover	(13) Oil level gauge	
(6) Oil control solenoid	(14) O-ring	
(7) Back-up ring	(15) Oil level gauge guide	
(8) O-ring	(16) O-ring	

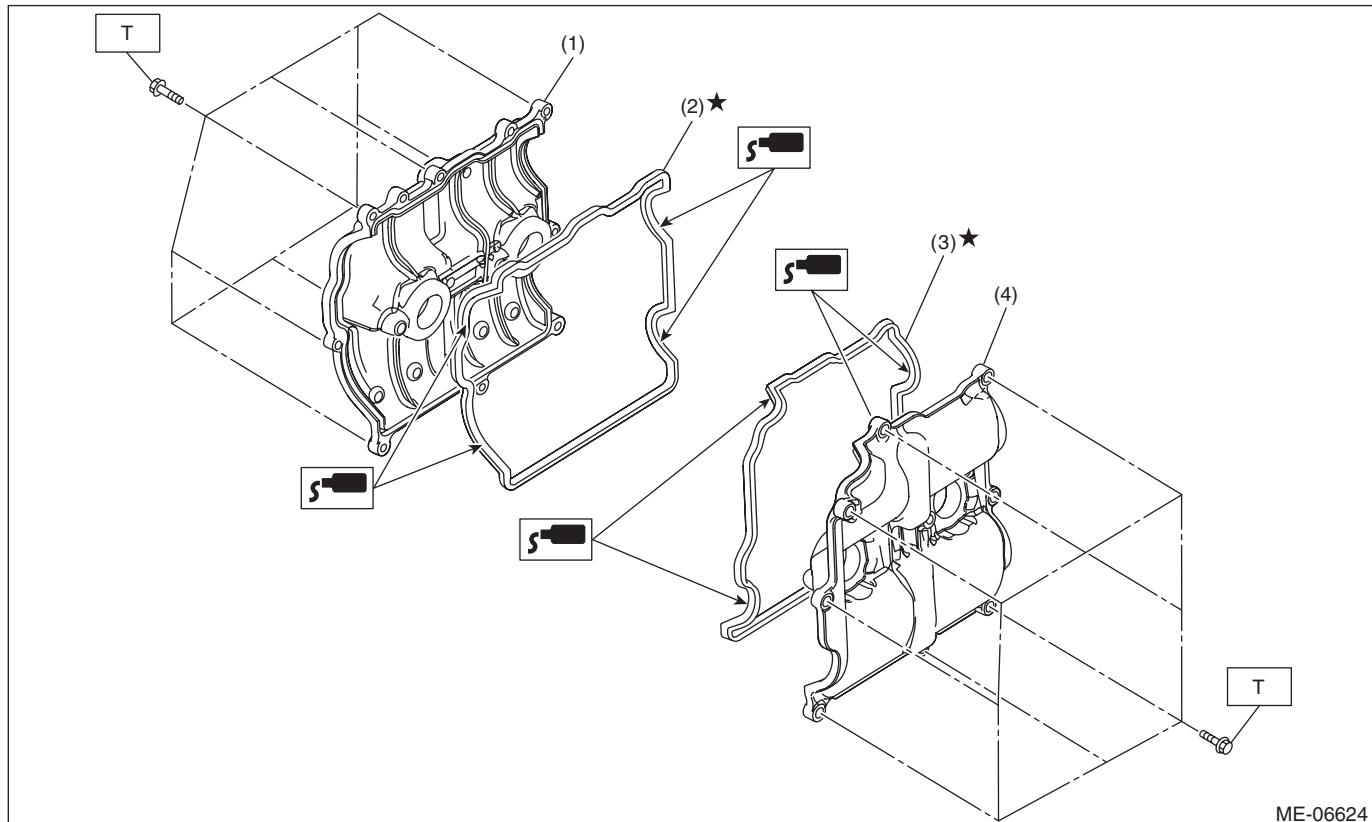
**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 6.4 (0.7, 4.7)**

**T2: 18 (1.8, 13.3)**

**T3: <Ref. to ME(H4DOTC)-99,  
INSTALLATION, Chain Cover.>**

## 4. ROCKER COVER



(1) Rocker cover RH	(3) Rocker cover gasket LH
(2) Rocker cover gasket RH	(4) Rocker cover LH


**Tightening torque: N·m (kgf·m, ft·lb)**

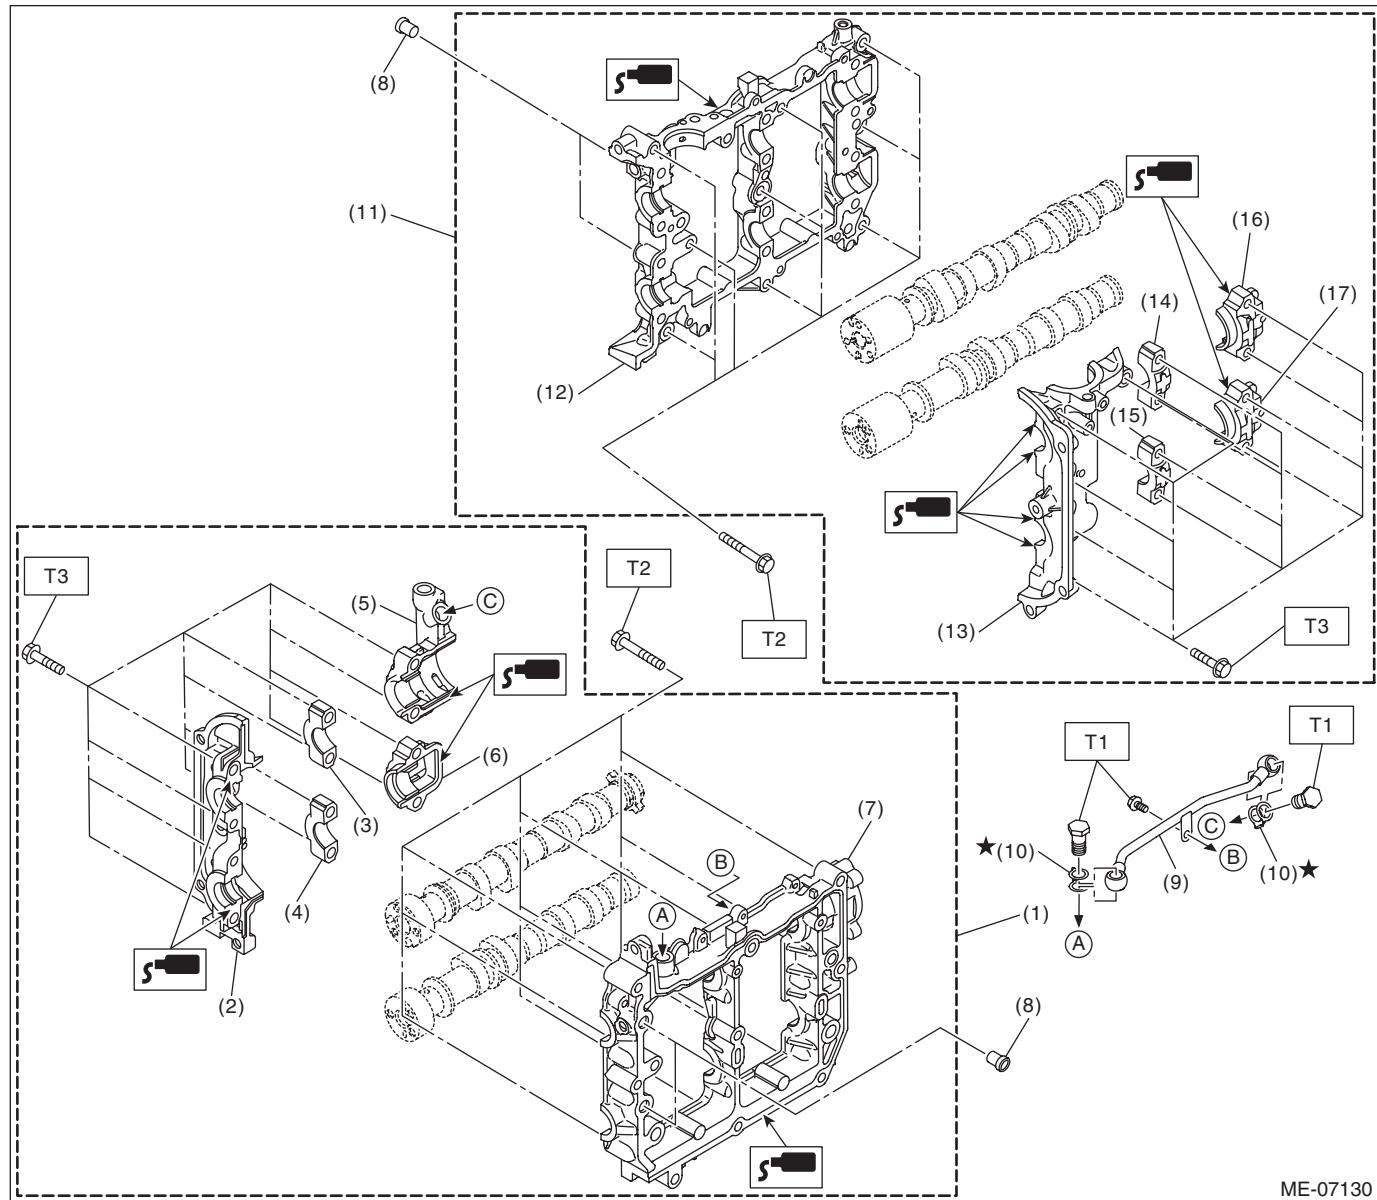**T: <Ref. to ME(H4DOTC)-161,  
INSTALLATION, Rocker  
Cover.>**

# General Description

## MECHANICAL

### 5. CAM CARRIER



# General Description

## MECHANICAL

(1) Cam carrier ASSY RH	(9) Oil pipe	(17) Exhaust rear camshaft cap LH
(2) Front camshaft cap RH	(10) Gasket	
(3) Intake center camshaft cap RH	(11) Cam carrier ASSY LH	
(4) Exhaust center camshaft cap RH	(12) Cam carrier LH	
(5) Intake rear camshaft cap RH	(13) Front camshaft cap LH	
(6) Exhaust rear camshaft cap RH	(14) Intake center camshaft cap LH	
(7) Cam carrier RH	(15) Exhaust center camshaft cap LH	
(8) Filter	(16) Intake rear camshaft cap LH	

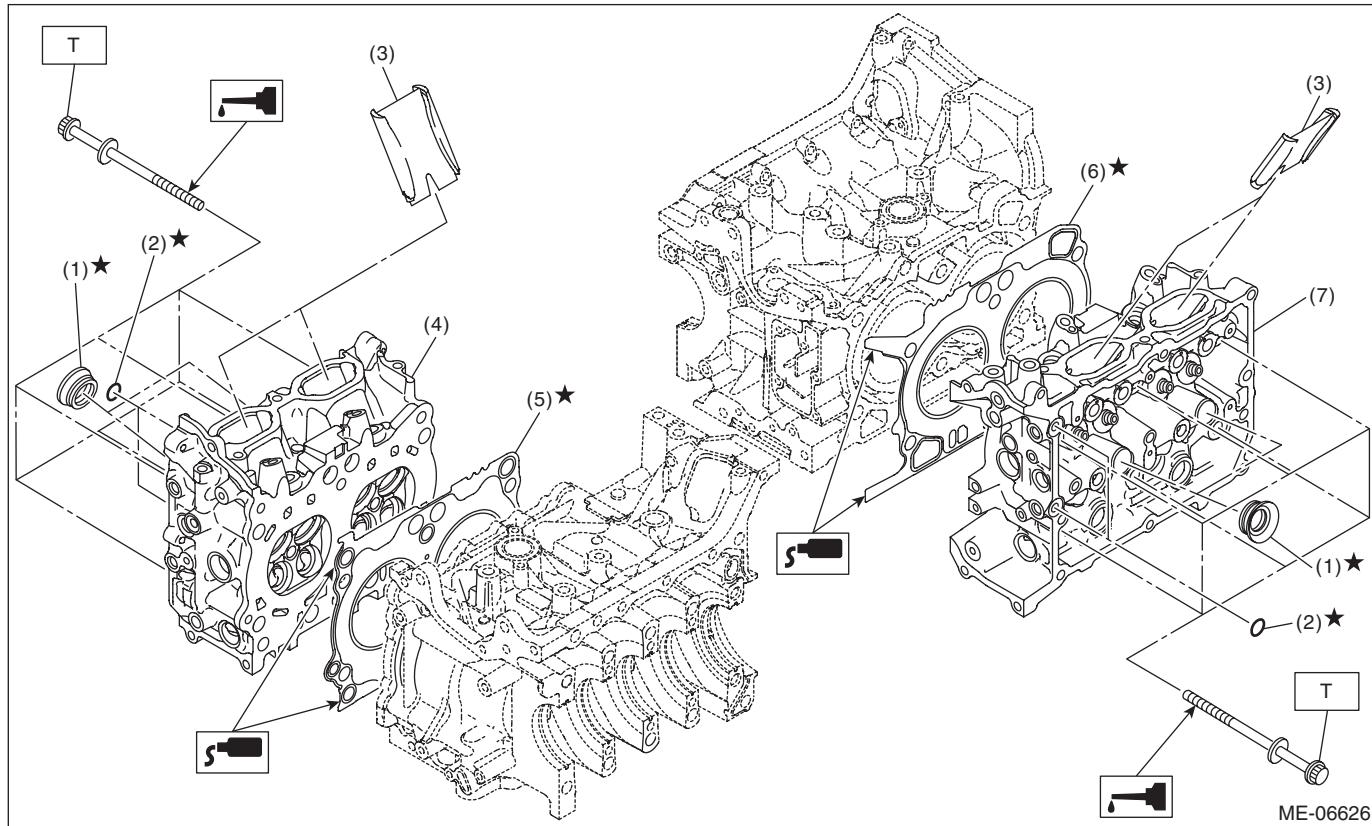
### Tightening torque: N·m (kgf·m, ft·lb)

T1: <Ref. to ME(H4DOTC)-205, CAM CARRIER RH, ASSEMBLY, Cam Carrier.>

T2: <Ref. to ME(H4DOTC)-205, ASSEMBLY, Cam Carrier.>

T3: <Ref. to ME(H4DOTC)-182, INSTALLATION, Cam Carrier.>

## 6. CYLINDER HEAD



(1) Spark plug pipe gasket	(5) Cylinder head gasket RH
(2) O-ring	(6) Cylinder head gasket LH
(3) Cylinder head plate	(7) Cylinder head LH
(4) Cylinder head RH	


### Tightening torque: N·m (kgf·m, ft·lb)

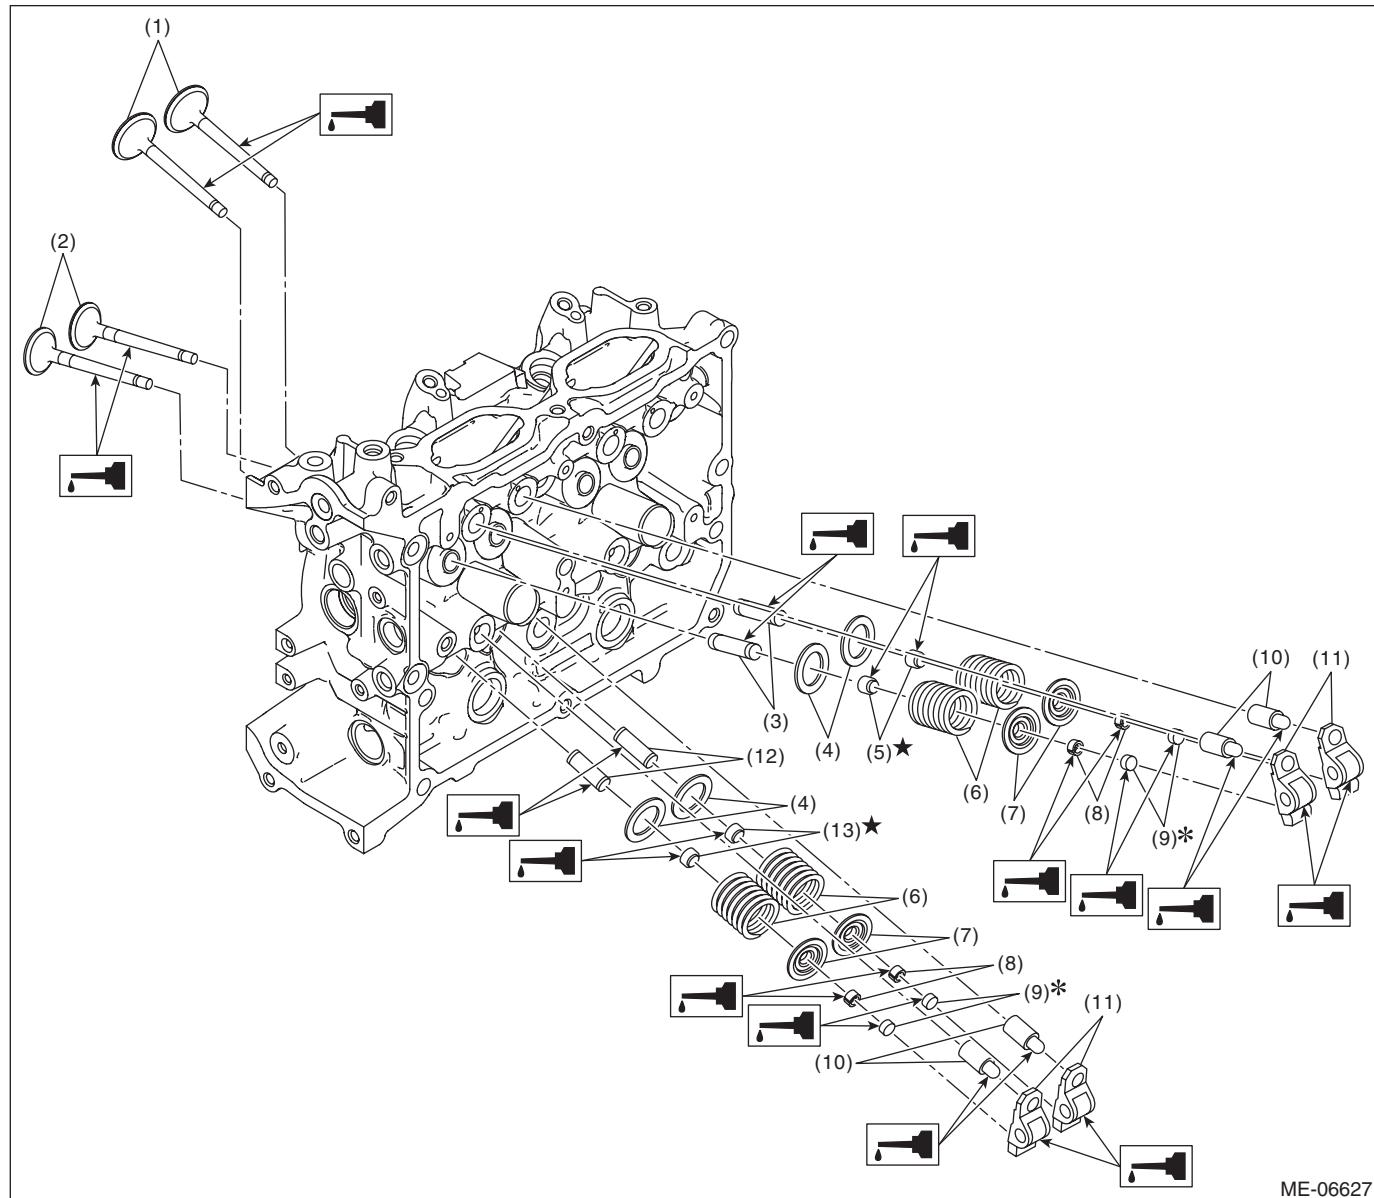T: <Ref. to ME(H4DOTC)-221, INSTALLATION, Cylinder Head.>

# General Description

## MECHANICAL

### 7. VALVE ASSEMBLY




(1) Exhaust valve	(6) Valve spring	(11) Roller rocker arm
(2) Intake valve	(7) Valve spring retainer	(12) Exhaust valve guide
(3) Intake valve guide	(8) Valve collet	(13) Exhaust valve oil seal
(4) Valve spring seat	(9) Valve shim	
(5) Intake valve oil seal	(10) Roller rocker arm pivot	

# General Description

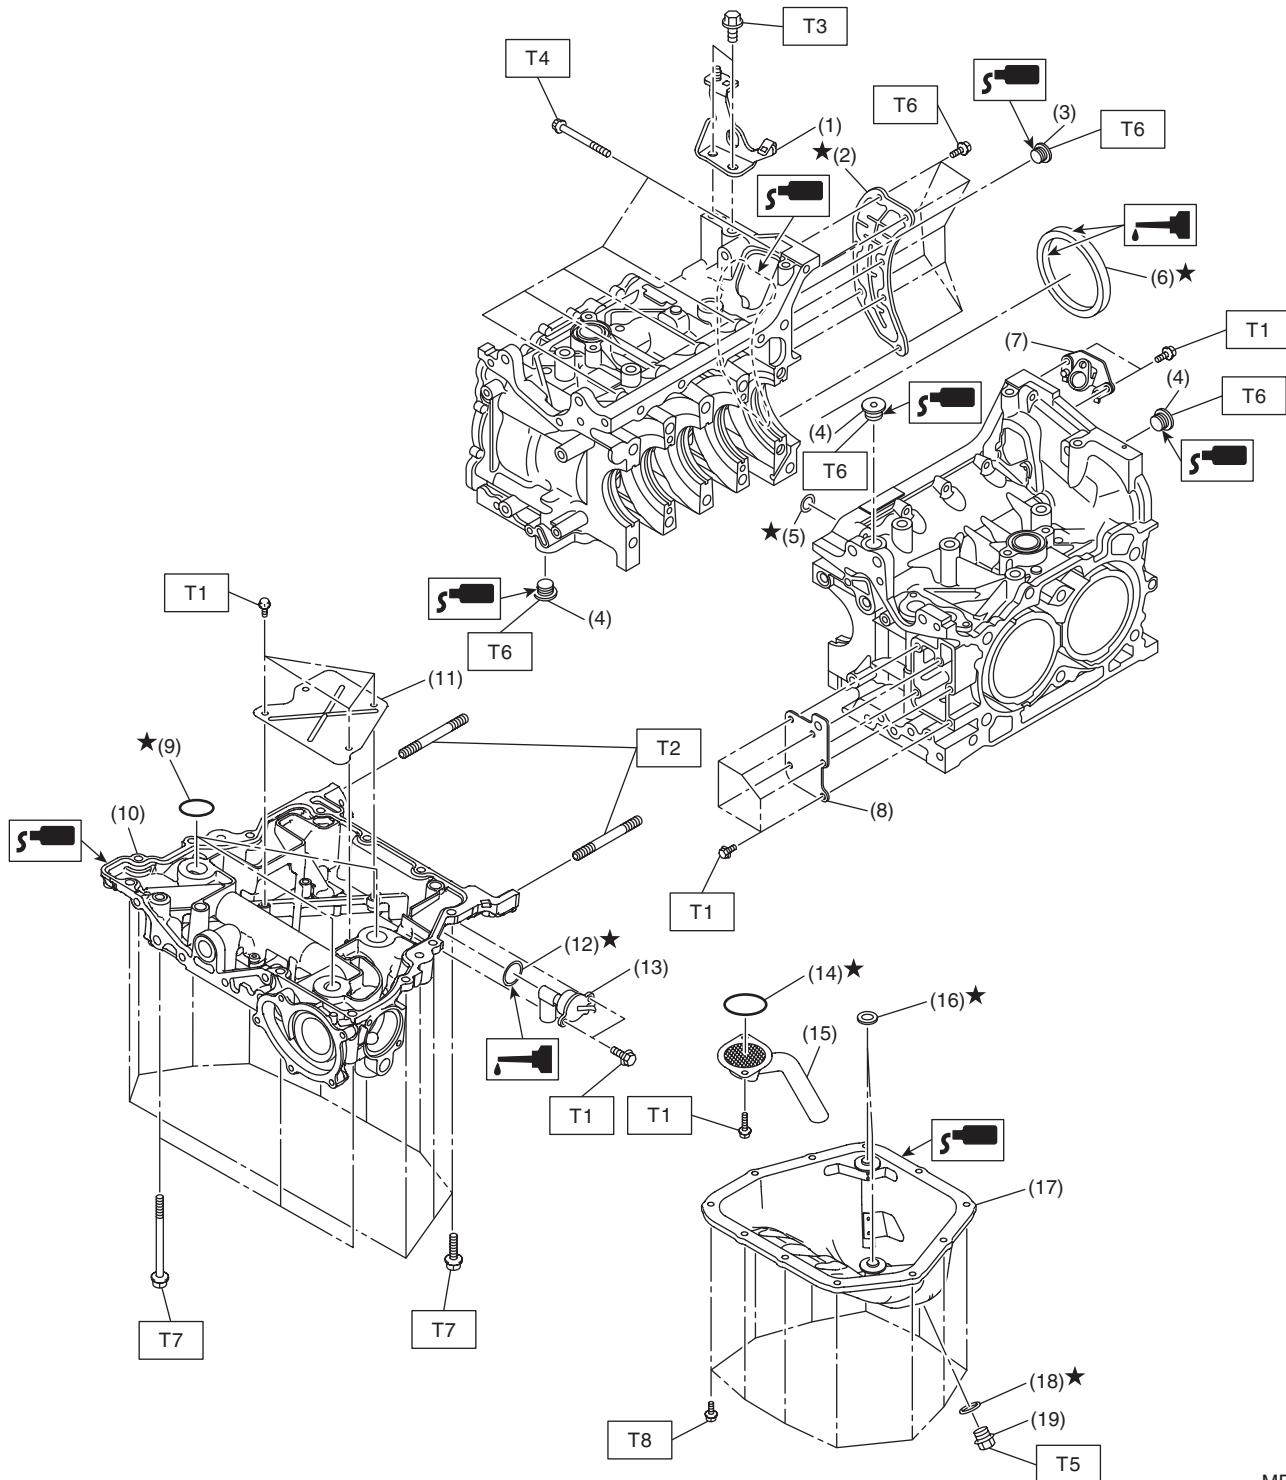MECHANICAL

## 8. CYLINDER BLOCK 1



ME-07381

# General Description

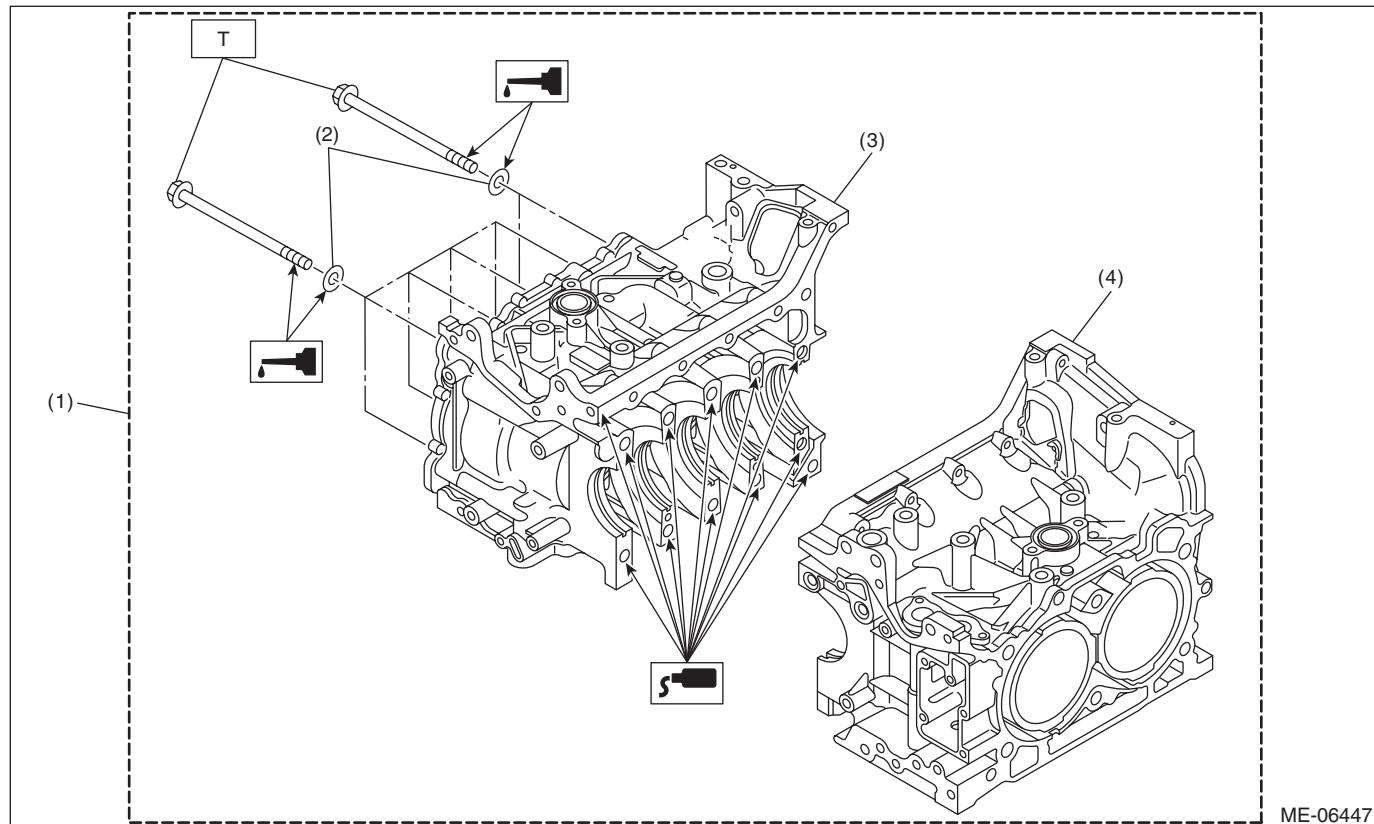
## MECHANICAL

(1) Engine rear hanger	(11) Baffle plate
(2) Oil separator cover	(12) O-ring
(3) Cylinder block plug	(13) Oil level switch
(4) Main gallery plug	(14) O-ring
(5) O-ring	(15) Oil strainer
(6) Rear oil seal	(16) Oil pan seal ring
(7) Crankshaft position sensor holder	(17) Oil pan
(8) Cylinder block plate	(18) Drain plug gasket
(9) O-ring	(19) Drain plug
(10) Oil pan upper	

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1:** 6.4 (0.7, 4.7)  
**T2:** 10 (1.0, 7.4)  
**T3:** 21 (2.1, 15.5)  
**T4:** 25 (2.5, 18.4)  
**T5:** 41.7 (4.3, 30.8)  
**T6:** <Ref. to ME(H4DOTC)-311, CYLINDER BLOCK, ASSEMBLY, Cylinder Block.>  
**T7:** <Ref. to ME(H4DOTC)-279, INSTALLATION, Cylinder Block.>  
**T8:** <Ref. to LU(H4DO)-28, OIL PAN, INSTALLATION, Oil Pan and Strainer.>

## 9. CYLINDER BLOCK 2




(1) Cylinder block ASSY  
(2) Washer

**Tightening torque: N·m (kgf·m, ft·lb)**

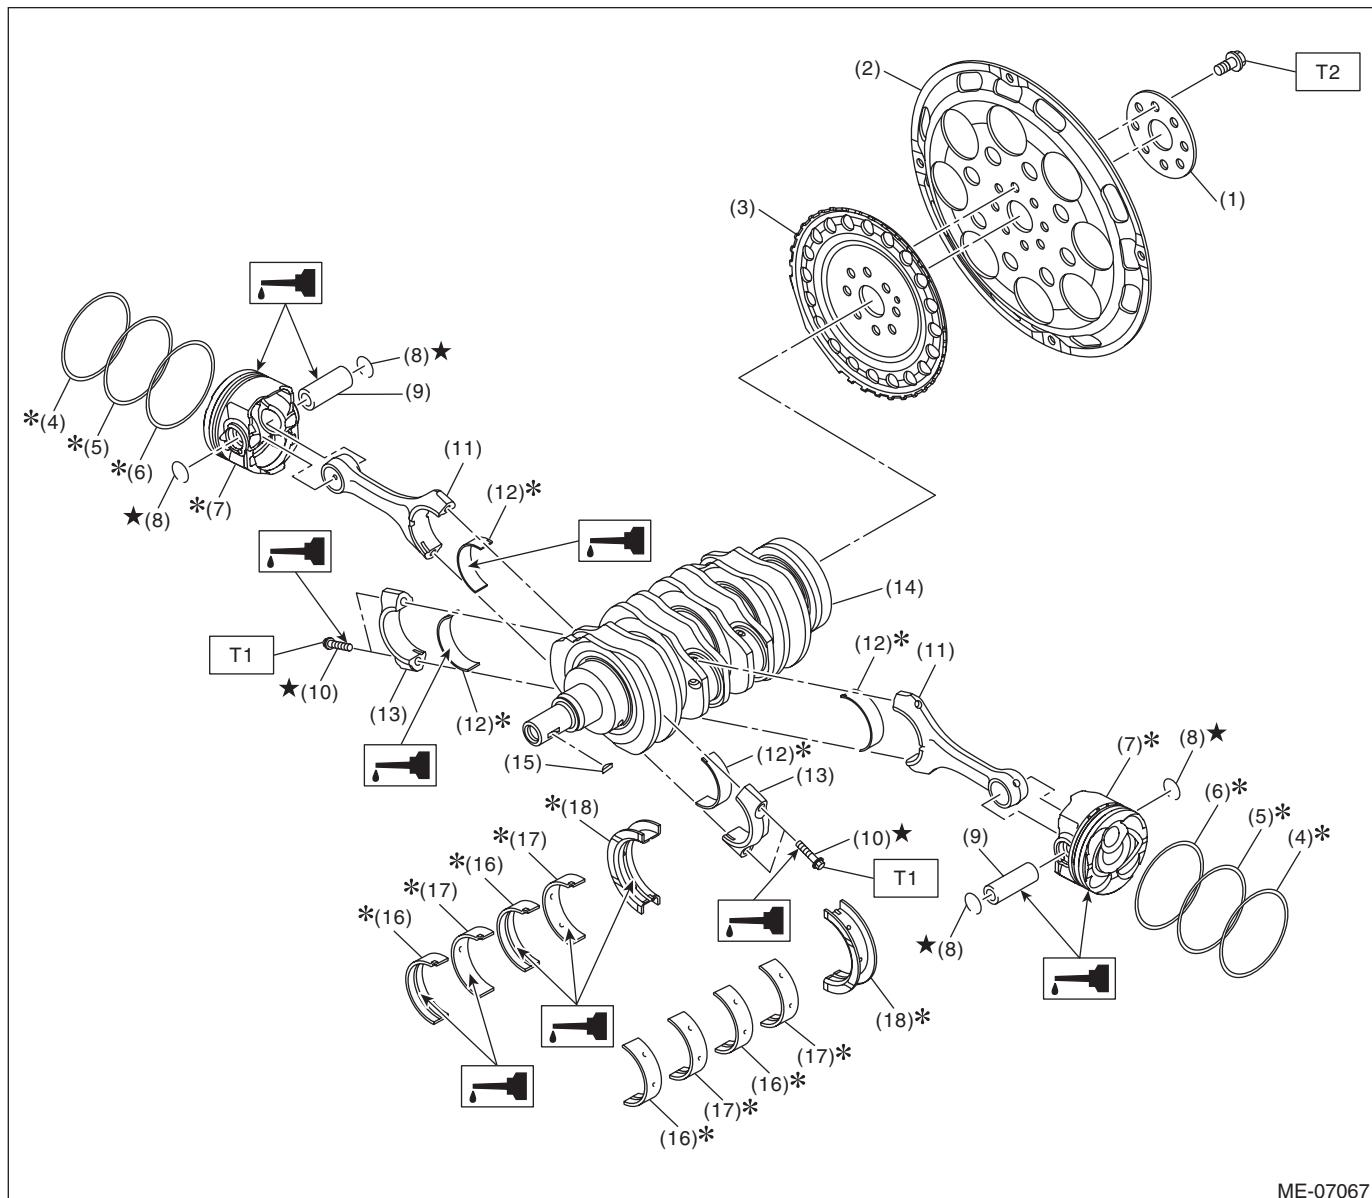**T:** <Ref. to ME(H4DOTC)-279, INSTALLATION, Cylinder Block.>

### 10.CRANKSHAFT AND PISTON



ME-07067

(1) Reinforcement drive plate	(9) Piston pin	(16) Crankshaft bearing #1, #3
(2) Drive plate	(10) Connecting rod cap bolt	(17) Crankshaft bearing #2, #4
(3) Crankshaft position sensor plate	(11) Connecting rod	(18) Crankshaft bearing #5
(4) Top ring	(12) Connecting rod bearing	
(5) Second ring	(13) Connecting rod cap	
(6) Oil ring	(14) Crankshaft	
(7) Piston	(15) Woodruff key	
(8) Circlip		

**Tightening torque:N·m (kgf·m, ft·lb)**

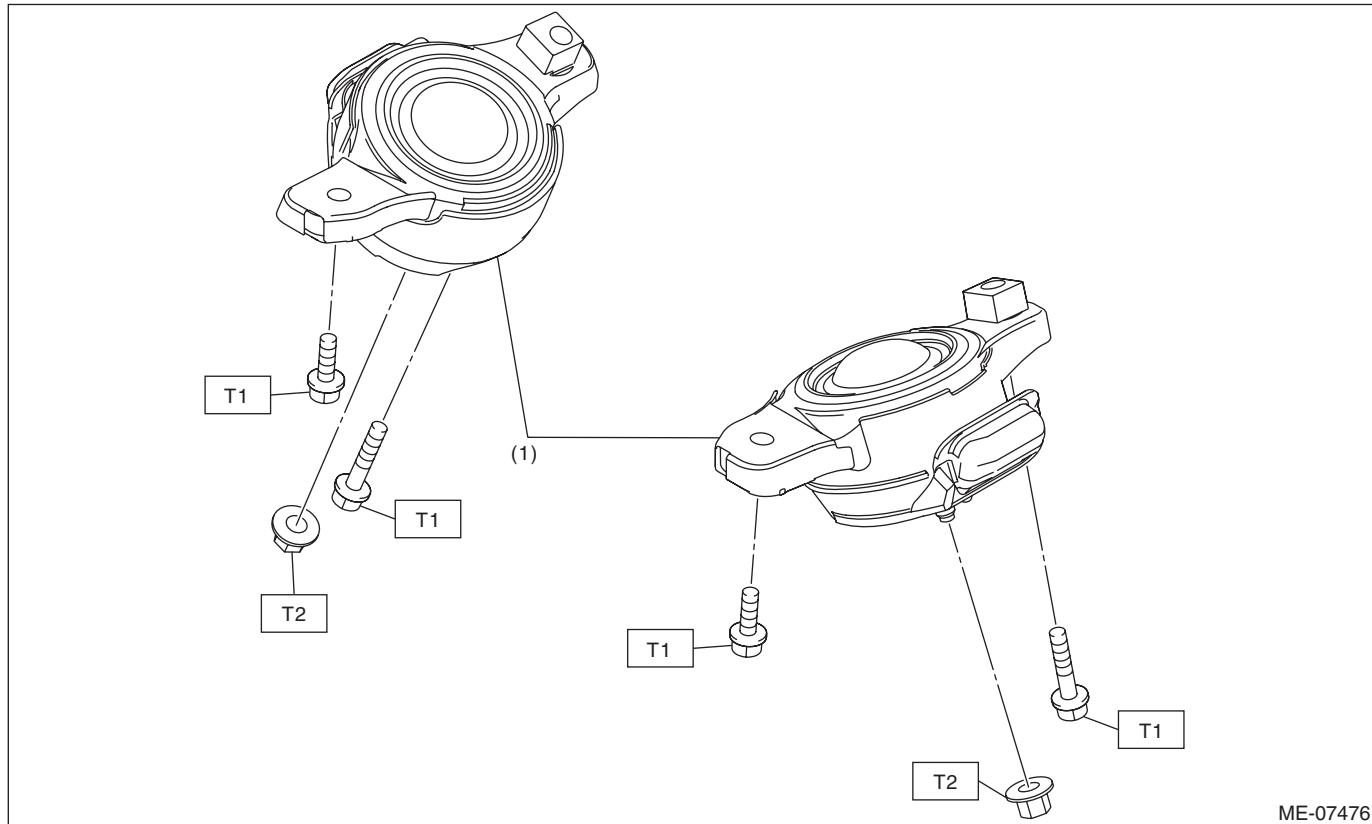
**T1:** <Ref. to ME(H4DOTC)-279,  
INSTALLATION, Cylinder  
Block.>

**T2:** <Ref. to CVT(TR690)-136,  
INSTALLATION, Drive Plate.>

# General Description

## MECHANICAL

### 11.ENGINE MOUNTING



(1) Front cushion rubber

**Tightening torque: N·m (kgf·m, ft-lb)**

**T1: 35 (3.6, 25.8)**





**T2: 45 (4.6, 33.2)**

### C: CAUTION

- Prior to starting work, pay special attention to the following:
  1. Always wear work clothes, a work cap, and protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
  2. Protect the vehicle using a seat cover, fender cover, etc.
  3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.
- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.
- When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use. When lifting up the vehicle, make sure to support the vehicle at the jack-up points.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil when being assembled.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.






## D: PREPARATION TOOL

### 1. SPECIAL TOOL

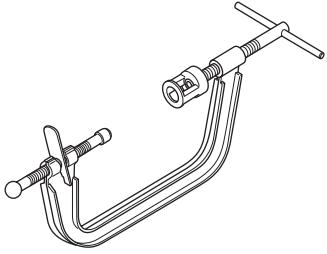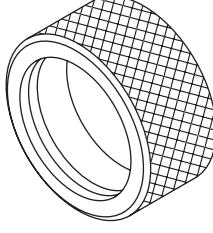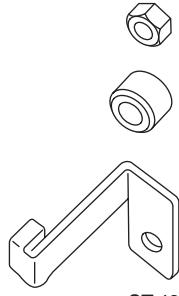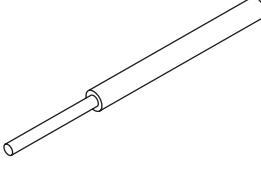ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST0920287002000	0920287002000	REMOVER AND REPLACER	Used for removing and installing valve spring.
 ST-398437700	398437700	OIL SEAL INSTALLER	Used for installing the front oil seal of engine.
 ST-498277200	498277200	STOPPER SET	Used for preventing the torque converter from falling when removing and installing the engine.
 ST-499765700	499765700	VALVE GUIDE REMOVER AND INSTALLER	Used for removing and installing valve guide.






## General Description

### MECHANICAL

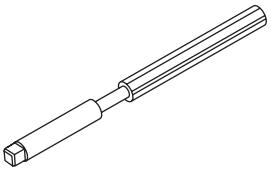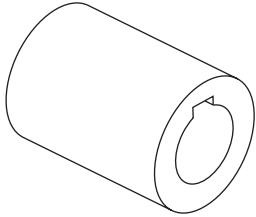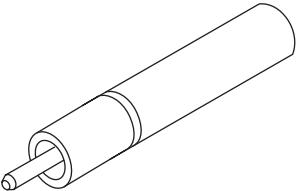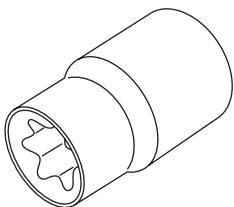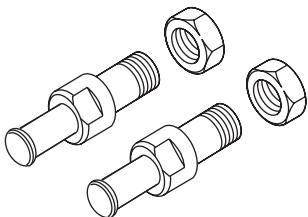ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499765900	499765900	VALVE GUIDE REAMER	Used for reaming valve guides.
 ST18252AA000	18252AA000	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 ST18261AA010	18261AA010	VALVE OIL SEAL GUIDE	Used for press-fitting of intake valve oil seals and exhaust valve oil seals.
 ST18270AA020	18270AA020	SOCKET	Used for removing and installing connecting rod.
 ST18334AA000	18334AA000	PULLEY WRENCH PIN SET	<ul style="list-style-type: none"> <li>Used for removing and installing the crank pulley.</li> <li>Used together with PULLEY WRENCH (18355AA000).</li> </ul>






## General Description

MECHANICAL

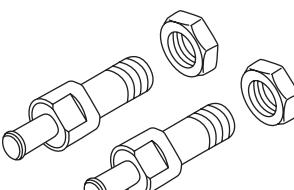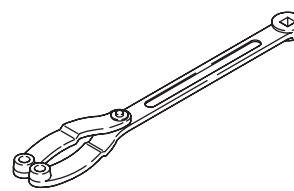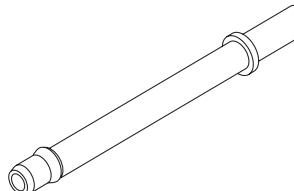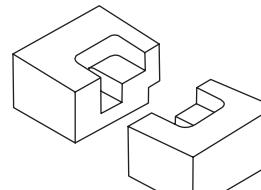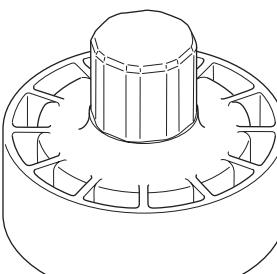ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18334AA030	18334AA030	PULLEY WRENCH PIN SET	<ul style="list-style-type: none"> <li>Used for removing and installing water pump pulley, intake cam sprocket and exhaust cam sprocket.</li> <li>Used together with PULLEY WRENCH (18355AA000).</li> </ul>
 ST18355AA000	18355AA000	PULLEY WRENCH	<ul style="list-style-type: none"> <li>Used for removing and installing the crank pulley.</li> <li>Used for installing and removing the water pump pulley.</li> <li>Used for removing and installing intake cam sprocket and exhaust cam sprocket.</li> <li>Used together with PULLEY WRENCH PIN SET (18334AA000) or PULLEY WRENCH PIN SET (18334AA030).</li> </ul>
 ST18471AA000	18471AA000	FUEL PIPE ADAPTER	Used for inspecting the fuel pressure.
 ST18632AA020	18632AA020	STAND ASSY	Used for removing and installing rocker cover.
 ST18657AA030	18657AA030	OIL SEAL INSTALLER	<ul style="list-style-type: none"> <li>Used for installing the rear oil seal of engine.</li> <li>Used together with OIL SEAL GUIDE (18671AA020).</li> </ul>


## General Description

### MECHANICAL

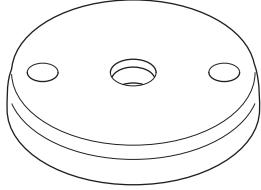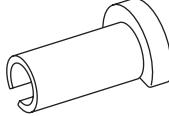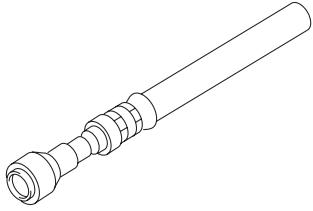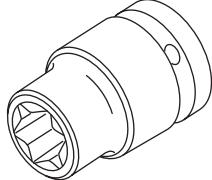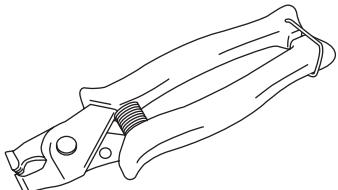ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18671AA020	18671AA020	OIL SEAL GUIDE	<ul style="list-style-type: none"> <li>Used for installing the rear oil seal of engine.</li> <li>Used together with OIL SEAL INSTALLER (18657AA030).</li> </ul>
 ST42099AE000	42099AE000	QUICK CONNECTOR RELEASE	Used for removing FUEL HOSE (42075AG690). NOTE: FUEL HOSE (42075AG690) is used for checking the fuel pressure.
 ST42075AG690	42075AG690	FUEL HOSE	Used for inspecting the fuel pressure. NOTE: This is the SUBARU genuine part.
 ST18270KA010	18270KA010	SOCKET	Used for installing and removing intake cam sprocket and exhaust cam sprocket.
 ST18353AA000	18353AA000	CLAMP PLIERS	<ul style="list-style-type: none"> <li>Used for removing and installing the PCV hose assembly.</li> <li>This tool is made by the French company CAILLAU. (code) 54.0.000.205</li> </ul> <p>To make it easier to obtain, it has been provided with a tool number.</p>

# General Description

MECHANICAL

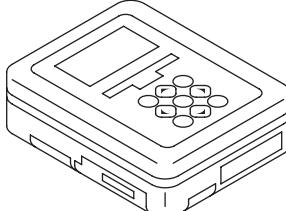ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for various inspections.

## 2. GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Vacuum gauge	Used for measuring intake manifold vacuum.
Oil pressure gauge	Used for measuring engine oil pressure.
Fuel pressure gauge	Used for measuring fuel pressure.
Piston ring compressor	Used for installing the piston into the cylinder block.
Thickness gauge	Used for various inspections.
Angle gauge	Used for angle tightening.