

General Description

COOLING

1. General Description

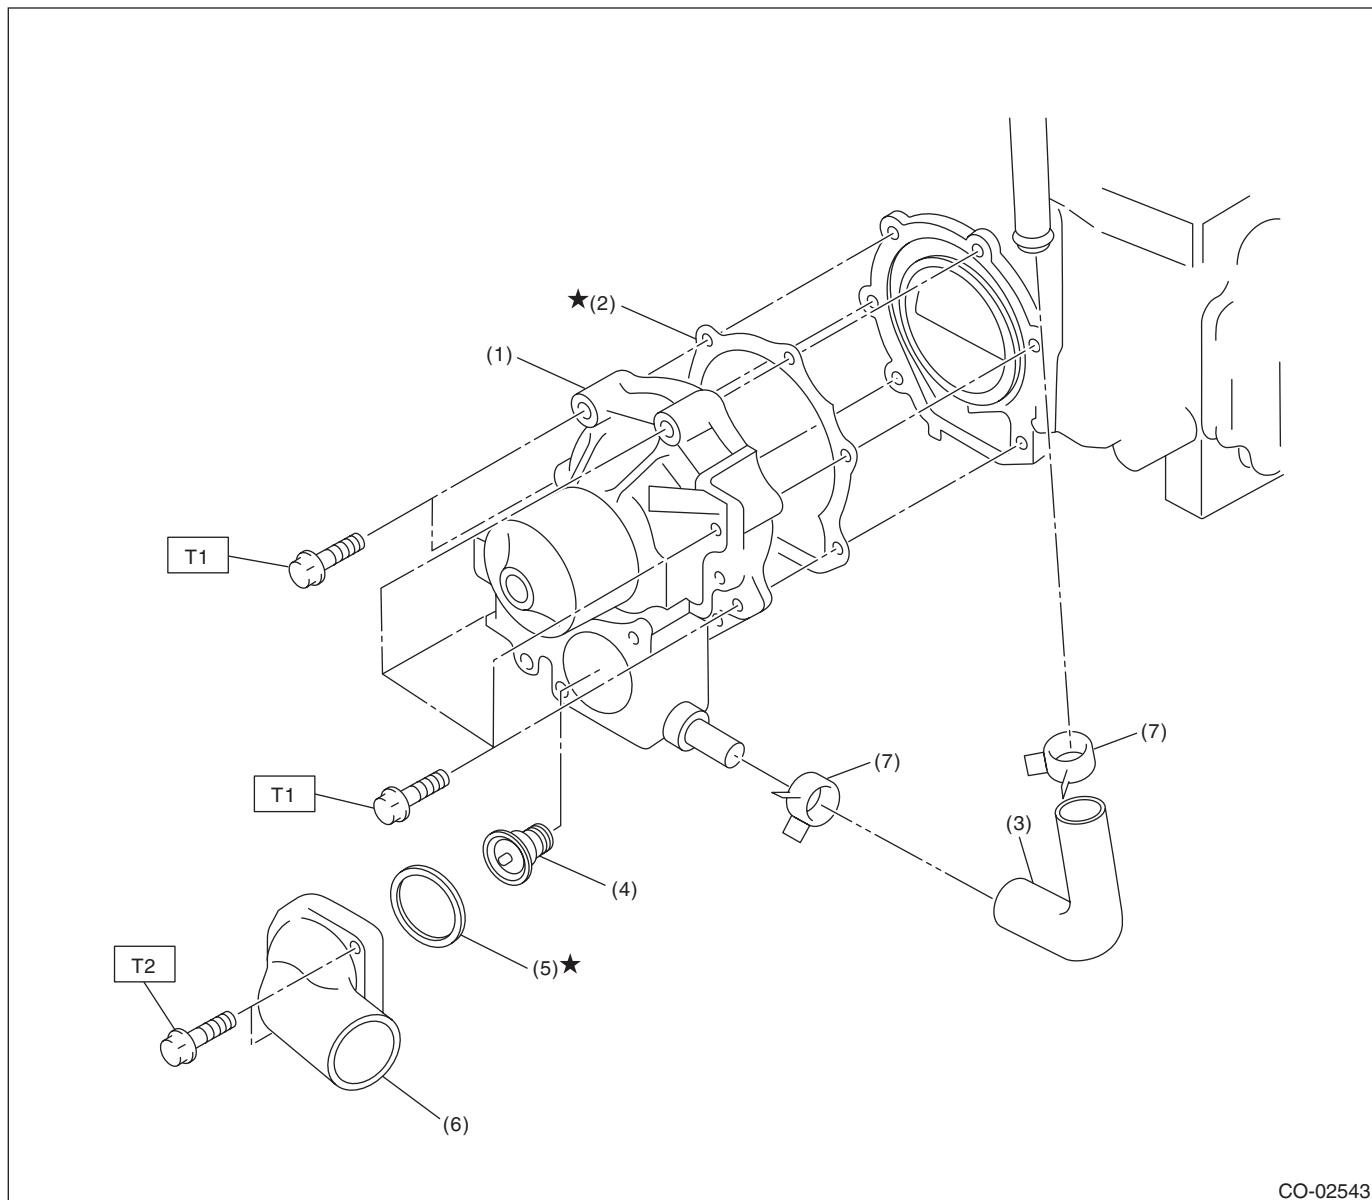
A: SPECIFICATION

Cooling system		Electric fan + Forced engine coolant circulation system		
Total engine coolant capacity		AT model: Approx. 6.7 (7.1, 5.9) MT model: Approx. 6.8 (7.2, 6.0)		
Water pump	Type	Centrifugal impeller type		
	Discharge performance I	Discharge ϱ (US gal, Imp gal) /min.	20 (5.3, 4.4)	
	Pump speed — Discharge pressure		760 rpm — 2.9 kPa (0.3 mAq)	
	Engine coolant temperature		80°C (176°F)	
	Discharge performance II	Discharge ϱ (US gal, Imp gal) /min.	100 (26.4, 22.0)	
	Pump speed — Discharge pressure		3,000 rpm — 49 kPa (5.0 mAq)	
	Engine coolant temperature		80°C (176°F)	
	Discharge performance III	Discharge ϱ (US gal, Imp gal) /min.	200 (52.8, 44.0)	
	Pump speed — Discharge pressure		6,000 rpm — 225.4 kPa (23 mAq)	
	Engine coolant temperature		80°C (176°F)	
Thermostat	Impeller diameter	mm (in)	76 (2.99)	
	Number of impeller vanes		8	
	Pump pulley diameter	mm (in)	60 (2.36)	
	Clearance between impeller and case	Standard	mm (in)	0.5 — 1.5 (0.020 — 0.060)
	Type	Wax pellet type		
Radiator fan	Starting temperature to open	80 — 84°C (176 — 183°F)		
	Fully opens	95°C (203°F)		
	Valve lift	mm (in)	9.0 (0.354) or more	
	Valve bore	mm (in)	35 (1.38)	
	Motor input	Main fan	90 W	
Radiator	Sub fan		90 W	
	Fan diameter/Blade	Main fan	300 mm (11.81 in)/4	
		Sub fan	300 mm (11.81 in)/5	
	Type	Down flow, pressure type		
	Core dimensions	Width x Height x Thickness mm (in)	687.4 x 340 x 16 (27.06 x 13.39 x 0.63)	
Reservoir tank	Pressure range in which cap valve is open	kPa (kg/cm ² , psi)	Above: 108±14.7 (1.1±0.15, 16±2.1) Below: -1.0 — -4.9 (-0.01 — -0.05, -0.1 — -0.7)	
	Fins	Corrugated fin type		
Capacity	ϱ (US qt, Imp qt)	0.45 (0.48, 0.40)		

	Recommended materials	Item number	Alternative
Coolant	SUBARU SUPER COOLANT (Concentrated type)	—	—
	SUBARU SUPER COOLANT (Diluted type)	K0670Y0001	
Water for dilution	Distilled water	—	Soft water or tap water
Cooling system protective agent	Cooling system conditioner	SOA345001	—

B: COMPONENT

1. WATER PUMP



CO-02543

(1)	Water pump ASSY	(5)	Gasket
(2)	Gasket	(6)	Thermostat cover
(3)	Heater by-pass hose	(7)	Clip
(4)	Thermostat		

Tightening torque: N·m (kgf·m, ft-lb)

T1: First 12 (1.2, 8.9)

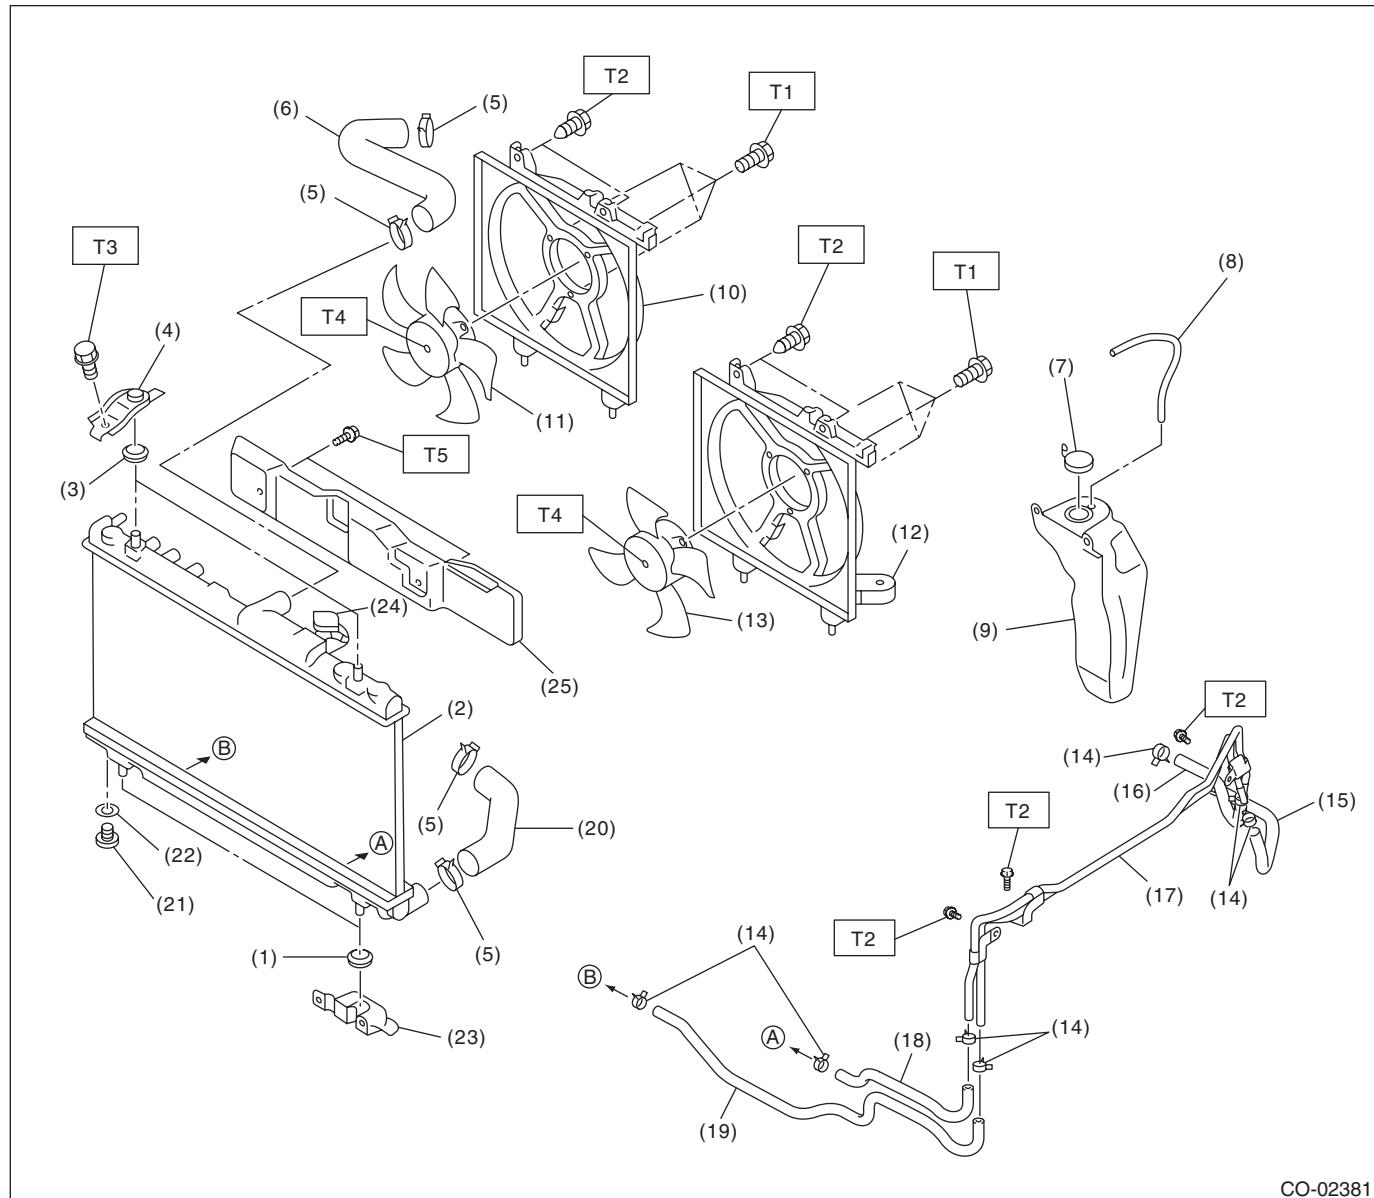
Second 12 (1.2, 8.9)

T2: 12 (1.2, 8.9)

General Description

COOLING

2. RADIATOR & RADIATOR FAN



CO-02381

(1) Radiator lower cushion	(12) Radiator main fan shroud	(23) Radiator lower bracket
(2) Radiator	(13) Radiator main fan, main fan motor ASSY	(24) Radiator cap
(3) Radiator upper cushion	(14) ATF hose clip (AT model)	(25) Heat shield cover (AT model)
(4) Radiator upper bracket	(15) ATF hose A (AT model)	
(5) Clip	(16) ATF hose B (AT model)	
(6) Radiator inlet hose	(17) ATF pipe (AT model)	
(7) Engine coolant reservoir tank cap	(18) ATF hose C (AT model)	
(8) Over flow hose	(19) ATF hose D (AT model)	
(9) Engine coolant reservoir tank	(20) Radiator outlet hose	
(10) Radiator sub fan shroud	(21) Radiator drain plug	
(11) Radiator sub fan, sub fan motor ASSY	(22) O-ring	

Tightening torque:N·m (kgf·m, ft·lb)

T1: 5 (0.5, 3.7)

T2: 7.5 (0.8, 5.5)

T3: 12 (1.2, 8.9)

T4: 3.4 (0.3, 2.5)

T5: 3 (0.3, 2.2)

C: CAUTION





- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Prepare a container and cloth to prevent scattering of engine coolant when performing work where engine coolant can be spilled. If the oil spills, wipe it off immediately to prevent from penetrating into floor or flowing out for environmental protection.
- Follow all government and local regulations concerning disposal of refuse when disposing engine coolant.

General Description

COOLING

D: PREPARATION TOOL

1. SPECIAL TOOL

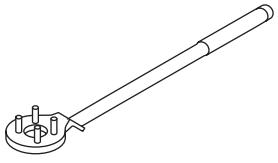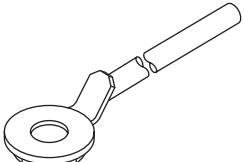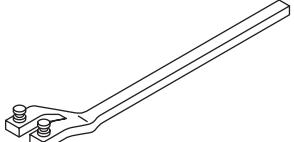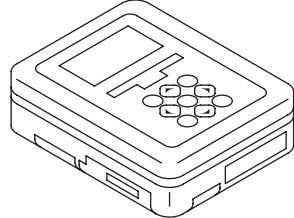ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	499977100	CRANK PULLEY WRENCH	Used to stop rotation of the crank pulley when loosening or tightening crank pulley bolts. (MT model)
	499977400	CRANK PULLEY WRENCH	Used to stop rotation of the crank pulley when loosening or tightening crank pulley bolts. (AT model)
	18231AA010	CAM SPROCKET WRENCH	<ul style="list-style-type: none"> Used for removing and installing cam sprocket. CAM SPROCKET WRENCH (499207100) can also be used.
	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Radiator cap tester	Used for checking radiator and radiator cap.