


2. Compression

A: INSPECTION

CAUTION:

After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.

- 1) After warming-up the engine, turn the ignition switch to OFF.
- 2) Make sure that the battery is fully charged.
- 3) Remove the fuse of fuel pump from main fuse box.

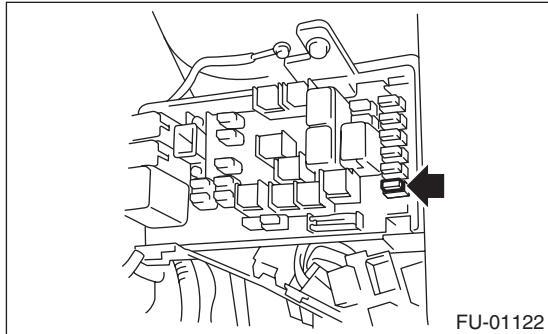


- 4) Start the engine and run it until it stalls.
- 5) After the engine stalls, crank it for five more seconds.
- 6) Turn the ignition switch to OFF.
- 7) Remove all spark plugs. <Ref. to IG(H4DOTC)-4, REMOVAL, Spark Plug.>
- 8) Fully open the throttle valve.
- 9) Check the starter motor for satisfactory performance and operation.
- 10) Secure the compression gauge tightly against the spark plug hole.

NOTE:

When using a screw-in type compression gauge, the screw should be less than 18 mm (0.71 in) long.

- 11) Crank the engine by the starter motor, and read the maximum value on the gauge when the needle of compression gauge is steady.

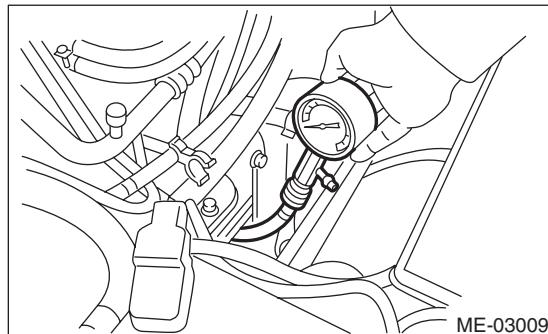

- 12) Perform at least two measurements per cylinder, and make sure that the values are correct.

Compression (fully open throttle):**Standard**

981 — 1,177 kPa (10 — 12 kgf/cm², 142 — 171 psi)

Difference between cylinders

49 kPa (0.5 kgf/cm², 7 psi) or less

- 13) After inspection, install the related parts in the reverse order of removal.