

PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

16.PCV Hose Assembly


A: REMOVAL

CAUTION:

Do not remove unless the PCV hose, diagnostics connector and PCV valve are damaged.

- 1) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 2) Fit the depression in the ST with the protrusion on the clamp to unlock.
- 3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

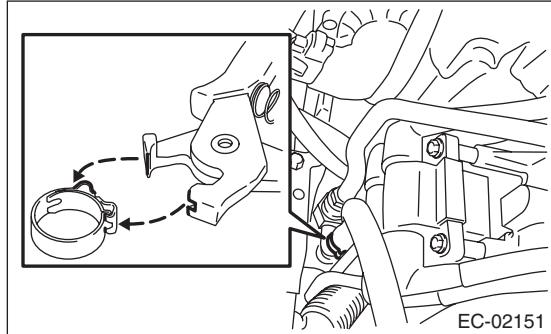

EC-02151


B: INSTALLATION

NOTE:

Replace the clamp with a new part.

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

ST 18353AA000 CLAMP PLIERS

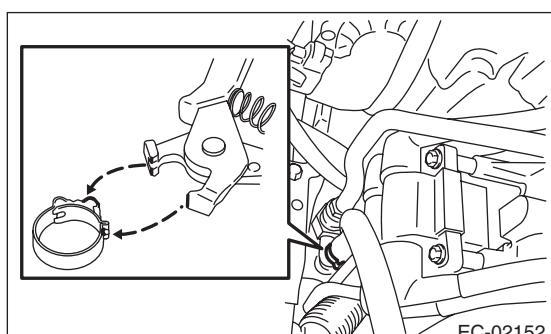


EC-02152

- 2) Install the air intake chamber. <Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

C: INSPECTION

1. DIAGNOSIS CONNECTOR

- 1) Check that the diagnosis connector has no deformation, cracks and any other damage.
- 2) Check the resistance between the diagnosis connector terminals.

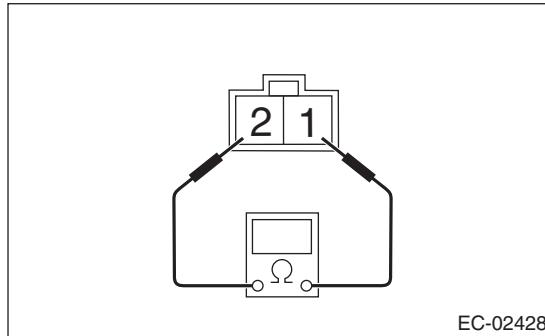

Terminal No.	Standard
1 and 2	Less than 1 Ω

2. OTHER INSPECTIONS

- 1) Check that the PCV connector has no deformation, cracks or other damages.
- 2) Check that the hose has no cracks, damage or loose part.

INTAKE (INDUCTION)

IN(H4SO)

	Page
1. General Description	2
2. Air Cleaner Element	4
3. Air Cleaner Case	5
4. Air Intake Chamber	7
5. Air Intake Duct	8
6. Resonator Chamber	9